

OPERATING INSTRUCTION MANUAL



MODELS HP22 & HP22A
HP25 & HP25A

PHOENIX ARMS

PHOENIX ARMS® DELUXE RANGE KIT


AT HOME ON THE RANGE

HP DELUXE RANGE KIT INCLUDES

- HP22A Sport/Target Pistol — in satin nickel or polished blue, with black checkered grips.
- Standard 3-inch barrel and extended 5-inch vent-rib target barrel.
- Standard 10-round magazine and extended magazine with integrated grip.
- Exclusive HP pistol lock keyed to match the locking transport case.
- Cleaning rod, tips, and patches.
- Bottle of Break Free® CLP gun oil.
- Firearms safety pamphlet.
- Warranty card & HP Instruction Manual.
- High-impact locking transport case.
- Official Phoenix Arms embroidered patch.

HP RANGE KIT INCLUDES

- You get everything listed above except the standard 3" barrel and standard magazine.

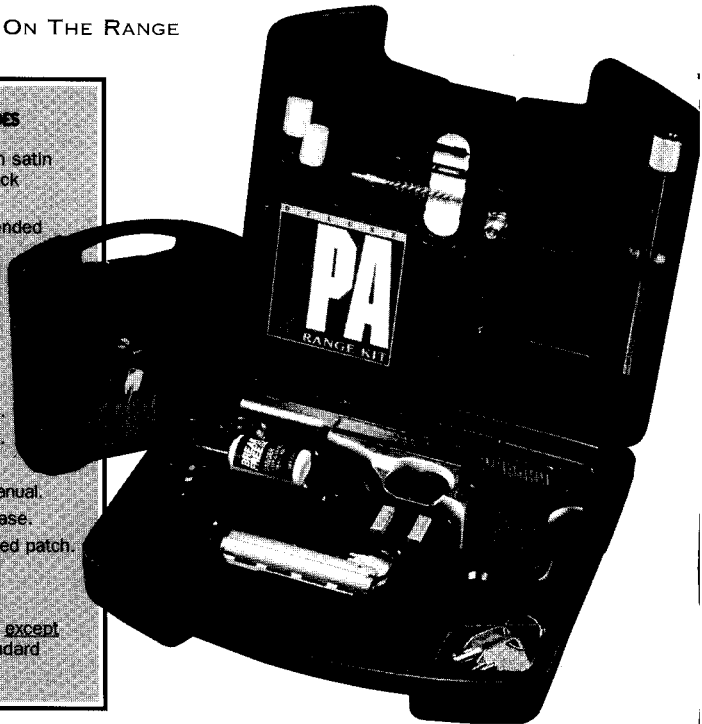

PURSUANT TO STATE OF CALIFORNIA

P.C. 12088.6



CHILDREN ARE ATTRACTED TO AND CAN OPERATE FIREARMS THAT CAN CAUSE SEVERE INJURIES OR DEATH. PREVENT CHILD ACCESS BY ALWAYS KEEPING GUNS LOCKED AWAY AND UNLOADED WHEN NOT IN USE. IF YOU KEEP A LOADED FIREARM WHERE A CHILD OBTAINS AND IMPROPERLY USES IT, YOU MAY BE FINED OR SENT TO PRISON.



A LOS NIÑOS LOS ATRAEN LAS ARMAS DE FUEGO Y LAS PUEDEN HACER FUNCIONAR. ELLOS PUEDEN CAUSARSE LESIONES GRAVES Y LA MUERTE. EVITE QUE LOS NIÑOS TENGAN ACCESO A LAS ARMAS DE FUEGO GUARDÀNDOLAS SIEMPRE CON LLAVE Y DESCARGADAS CUANDO NO LAS ESTÈ UTILIZANDO. SI USTED TIENE UN ARMA DE FUEGO CARGADA EN UN LUGAR EN QUE UN NIÑO TIENE ACCESO A ELLA Y LA USA INDEBIDAMENTE, LE PUEDEN DAR UNA MULTA O ENVIARLO A LA CARCEL.



DANGER

DO NOT STORE, CARRY, DROP, DRIVE A VEHICLE, BICYCLE, WALK OR RUN WITH A LIVE ROUND IN THE CHAMBER. A GUN THAT IS DROPPED, BUMPED OR JARRED WITH A LIVE ROUND IN THE CHAMBER MIGHT ACCIDENTALLY DISCHARGE, EVEN WITH THE SAFETY ON, CAUSING INJURY TO YOU OR SOMEONE ELSE.

ALWAYS WEAR PROPER SHOOTING GLASSES TO PREVENT EYE INJURY FROM FLYING PARTICLES.

ALWAYS USE HEARING PROTECTION TO PREVENT EAR DAMAGE DUE TO REPEATED EXPOSURE TO GUN FIRE NOISE.

DO NOT HANDLE THIS PISTOL WITH OUT FIRST CHECKING CHAMBER FOR LIVE CARTRIDGES, PISTOL SHOULD BE CLEANED FOLLOWING EACH USE. REFER TO CLEANING INSTRUCTIONS IN THIS BOOKLET.

NEVER SHOOT AT A HARD, FLAT SURFACE OR AT THE SURFACE OF WATER. BULLETS CAN RICOCHET CAUSING SERIOUS INJURY TO YOU OR OTHERS.



WARNING

NEVER DEPEND ON ANY FIREARMS SAFETY DEVICE, USE CAUTION.

DO NOT ALTER ANY OF COMPONENTS OF THIS PISTOL.

IF THE TRIGGER IS PULLED WHILE THE SAFETY IS IN THE "FIRE" POSITION, THIS PISTOL WILL FIRE ANY CARTRIDGE LEFT IN THE BARREL!

AMMUNITION USED IN THIS FIREARM CONTAINS LEAD. THE USE OF THIS AMMUNITION MAY EXPOSE YOU TO LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND REPRODUCTIVE HARM. SHOOTING FULL METAL JACKET AMMUNITION WILL GREATLY REDUCE YOUR EXPOSURE TO LEAD. ALWAYS WASH YOUR HANDS THOROUGHLY AFTER CLEANING FIREARMS OR HANDLING AMMUNITION.

NEVER POINT PISTOL AT ANYTHING YOU DO NOT INTEND TO SHOOT, DAMAGE, INJURE OR KILL.

NEVER PLACE YOUR FINGER ON THE TRIGGER UNLESS THE PISTOL IS POINTED IN A SAFE DIRECTION AND YOU ARE READY TO SHOOT IT.



CAUTION

DO NOT PUT AMMUNITION INTO THIS PISTOL, OR MAGAZINE, UNTIL YOU HAVE READ THESE INSTRUCTIONS AND FULLY UNDERSTAND ALL FUNCTIONS AND SAFE HANDLING OF THIS PISTOL.

DO NOT ATTEMPT TO USE THIS FIREARM UNTIL YOU HAVE COMPLETELY READ THIS MANUAL. A THOROUGH UNDERSTANDING OF THIS PISTOL AND ITS SAFETY SYSTEM IS ABSOLUTELY NECESSARY. NEVER PLACE YOUR FINGER ON THE TRIGGER UNLESS THE PISTOL IS POINTED IN A SAFE DIRECTION AND YOU ARE READY TO SHOOT IT. AFTER REMOVING MAGAZINE (CLIP) FROM PISTOL, ALWAYS LOOK INTO THE CHAMBER END OF THE BARREL FOR ANY REMAINING AMMUNITION. DO NOT STORE FIREARM WITH A CARTRIDGE IN THE BARREL. KEEP OUT OF REACH OF CHILDREN AND THOSE NOT FAMILIAR WITH THE SAFE HANDLING AND OPERATION OF THIS PISTOL.


FIREARMS SAFETY IS UP TO YOU. MAKE NO MISTAKE ABOUT IT. ALCOHOL, DRUGS AND GUNS DON'T MIX.

KEEP THIS MANUAL WITH PISTOL WHEN NOT IN USE AND WHEN TRANSFERRING OWNERSHIP.

TABLE OF CONTENTS


DANGER NOTICE	1
WARNINGS	2
CAUTION NOTICE	3
TABLE OF CONTENTS	4
PISTOL DESCRIPTION	5
MAGAZINE INTERLOCK SAFETY SYSTEM	6
FIRING PIN BLOCK	7
CHECKING THE CHAMBER	8
LOADING & UNLOADING THE MAGAZINE	9
UNLOADING THE PISTOL	10
FIRING OPERATION	11
ADJUSTING SIGHT	12
DISASSEMBLY	13
CLEANING	14
ASSEMBLY	15-16
LOCKING STORAGE & TRANSPORT CASE	17
BARREL & MAGAZINE COMPONENTS	18
FRAME COMPONENTS	19-20
SLIDE COMPONENTS	21
ACCESSORIES/ORDERING INFORMATION	22
LIFETIME WARRANTY	23

PISTOL DESCRIPTION

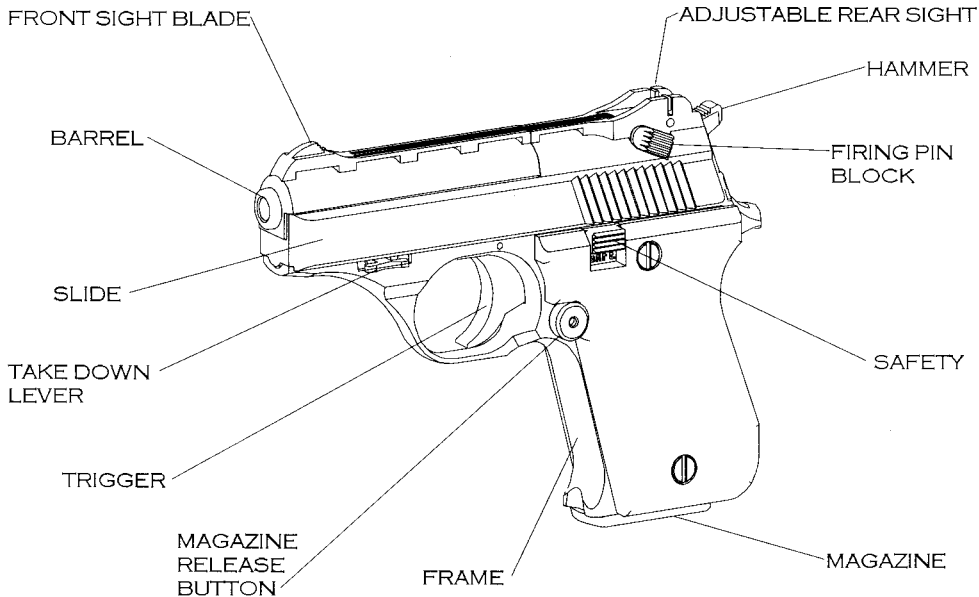


MAGAZINE INTERLOCK SAFETY

THIS SAFETY IS LOCATED AT THE TOP OF THE LEFT HAND GRIP AND CAN ONLY BE MOVED WHILE THE MAGAZINE IS FULLY INSERTED INTO THE PISTOL.

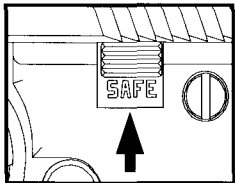

BY MOVING THE SAFETY UP TO THE TOP OF THE GRIP, THE WORD "SAFE" WILL BE EXPOSED INDICATING THE PISTOL IS IN THE SAFE POSITION. WHILE IN THE "SAFE" POSITION, THE HAMMER CANNOT BE COCKED OR UN-COCKED. ONLY WHEN THE SAFETY IS IN THE "SAFE" POSITION CAN THE MAGAZINE RELEASE BUTTON BE DEPRESSED AND THE MAGAZINE REMOVED. DO NOT MOVE SAFETY WHILE REMOVING MAGAZINE. ONCE THE MAGAZINE IS COMPLETELY REMOVED THE SAFETY IS LOCKED IN


THE "SAFE" POSITION UNTIL THE MAGAZINE IS FULLY REINSERTED INTO THE PISTOL. WHILE THE SAFETY IS IN THIS POSITION THE SLIDE WILL ONLY BE ABLE TO MOVE REARWARD 3/16 OF AN INCH, ENOUGH TO CHECK THE CHAMBER FOR ANY REMAINING AMMUNITION.

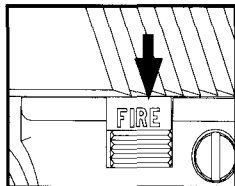

BY MOVING THE SAFETY DOWN THE WORD "FIRE" WILL BE EXPOSED, INDICATING THE PISTOL IS IN THE FIRING POSITION. THE MAGAZINE CANNOT BE REMOVED WITH THE SAFETY IN THIS POSITION. WHILE IN THE "FIRE" POSITION THE TRIGGER CAN BE PULLED, THE HAMMER CAN BE COCKED AND UN-COCKED AND THE SLIDE CAN BE CYCLED BACK AND FORTH.


FIRING PIN BLOCK

THE FIRING PIN BLOCK LEVER IS LOCATED ON THE LEFT SIDE OF THE SLIDE JUST ABOVE THE SERRATED FINGER GRIP.

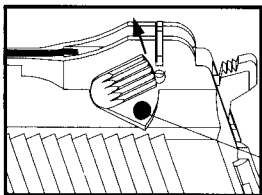

BY ROTATING THE LEVER UP (COUNTERCLOCKWISE), A RED DOT WILL BE EXPOSED INDICATING THE FIRING PIN IS NOT BLOCKED AND A PULL OF THE TRIGGER AND FORCE OF THE HAMMER STRIKING THE FIRING PIN WILL CAUSE ANY CARTRIDGE IN THE BARREL TO BE FIRED.

RED DOT



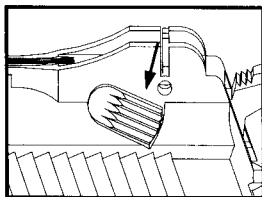


BY ROTATING THE FIRING PIN BLOCK LEVER DOWN (CLOCKWISE) AND COVERING THE RED DOT, THE FIRING PIN IS BLOCKED AND RESTRICTED FROM STRIKING A CARTRIDGE IN THE CHAMBER. ONLY WHILE IN THIS POSITION SHOULD ANY ATTEMPT BE MADE TO RELEASE HAMMER FROM FIRING POSITION. ALWAYS POINT PISTOL IN A SAFE DIRECTION, WITH THUMB FIRMLY ON HAMMER SPUR, PULL TRIGGER AND SLOWLY MOVE HAMMER TO ITS FORWARD POSITION. DO NOT DRY FIRE THIS PISTOL.

WARNING: IF HAMMER IS CONTINUALLY FIRED AGAINST PIN BLOCK IN THE BLOCKED POSITION, PIN BLOCK MAY BECOME DAMAGED AND **NOT PREVENT** CARTRIDGE IN CHAMBER FROM FIRING.




CHECKING THE CHAMBER

WHENEVER PICKING UP ANY FIREARM, OR BEFORE STORING ANY FIREARM IT IS IMPORTANT TO CHECK THE CHAMBER FOR ANY LIVE ROUNDS. NEVER PLACE YOUR FINGER ON THE TRIGGER WHEN CHECKING THE CHAMBER. PLACE FIRING PIN BLOCK IN THE DOWNWARD POSITION COVERING THE RED DOT. PLACE THE MAGAZINE INTERLOCK SAFETY IN THE "SAFE" POSITION AND REMOVE MAGAZINE BY DEPRESSING MAGAZINE RELEASE BUTTON AND COMPLETELY REMOVE MAGAZINE. PULL SLIDE REWARD, 3/16 OF AN INCH IS AS FAR AS IT WILL BE ALLOWED TO GO WITH THE SAFETY IN THE "SAFE" POSITION. VISUALLY CHECK CHAMBER FOR ANY LIVE ROUNDS. REFER TO UNLOADING INSTRUCTIONS IN THIS MANUAL TO UNLOAD PISTOL WITHOUT FIRING.

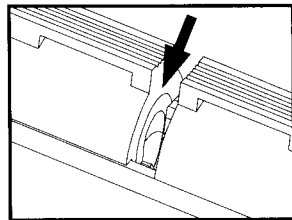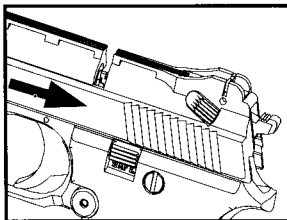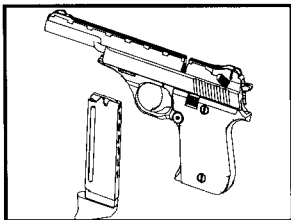

LOADING & UNLOADING THE MAGAZINE

BEFORE ATTEMPTING TO LOAD MAGAZINE IT IS IMPORTANT THAT YOU READ AND FULLY UNDERSTAND ALL FUNCTIONS AND SAFE HANDLING OF THIS PISTOL. THE MAGAZINE, BARREL AND SLIDE ARE MARKED WITH PROPER CALIBER OF CARTRIDGE TO BE USED AND ALL MUST BE OF THE SAME CALIBER. PLACE ONE ROUND IN AT A TIME. WITH THE REAR OF THE ROUND AT MIDWAY IN THE TOP OF THE MAGAZINE PUSH DOWNWARD AGAINST THE MAGAZINE FOLLOWER AND THEN REARWARD. THE FOLLOWING ROUNDS ARE LOADED INTO THE MAGAZINE IN THE SAME MANNER. THE HP22 AND HP25 HOLD A MAXIMUM OF TEN ROUNDS IN BOTH THE STANDARD MAGAZINE AND THE EXTENDED MAGAZINE. THERE ARE HOWEVER, OLDER HP22 MAGAZINES THAT HOLD ELEVEN ROUNDS, SO BE SURE TO ALWAYS CHECK CHAMBER AND MAGAZINE FOR REMAINING AMMO WHEN YOU ARE DONE SHOOTING. DO NOT DEPEND ON COUNTING ROUNDS AS YOU SHOOT. TO UNLOAD MAGAZINE OF AMMUNITION PUSH THE TOP ROUND FORWARD AND OUT, OPPOSITE THE DIRECTION USED TO LOAD. REPEAT UNTIL ALL CARTRIDGES ARE REMOVED. CAUTION DO NOT FORCE WITH ANYTHING THAT MAY DAMAGE OR RUPTURE CARTRIDGE PRIMER. ALWAYS STORE AMMUNITION SEPARATELY FROM PISTOL.

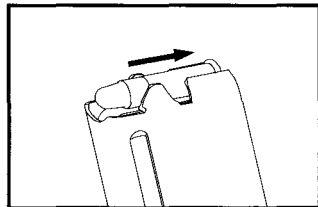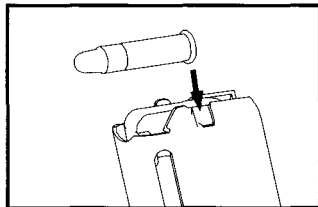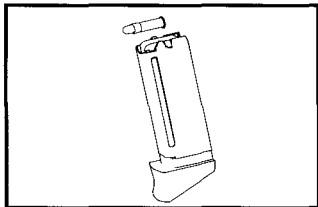

THE HP22 MAGAZINE IS ILLUSTRATED HERE. STANDARD VELOCITY, FACTORY LOADED AMMUNITION IS RECOMMENDED FOR USE IN ALL ROYAL CANADIAN MOUNTED POLICE PISTOLS





UNLOADING PISTOL

WHILE REMOVING CARTRIDGE FROM BARREL CHAMBER, KEEP THE PISTOL POINTED IN A SAFE DIRECTION. ROTATE FIRING PIN BLOCK LEVER DOWN (CLOCKWISE) COMPLETELY COVERING THE RED DOT. TAKE THE PISTOL IN YOUR RIGHT HAND WITH A FIRM GRIP, MAKING SURE YOUR FINGERS ARE NOT TOUCHING THE TRIGGER.


WITH YOUR OTHER HAND FIRMLY GRASP THE SERRATED PORTION OF THE SLIDE AND PULL IT REARWARD AS FAR AS IT WILL GO.

WITH THE SLIDE HELD AT ITS REARMOST POSITION, MOVE THE SAFETY UPWARD TO THE "SAFE" POSITION-LOCKING THE SLIDE IN THE OPEN POSITION. THIS SHOULD EXTRACT ANY CARTRIDGE FROM THE BARREL CHAMBER.


THE MAGAZINE IS REMOVED BY DEPRESSING THE MAGAZINE RELEASE BUTTON. REMOVE ALL CARTRIDGES FROM THE MAGAZINE, CHECK MAGAZINE CAVITY AND BARREL CHAMBER FOR ANY REMAINING CARTRIDGES. UNLOAD MAGAZINE BEFORE REINSERTING. CAUTION: IF A LOADED MAGAZINE IS REINSERTED INTO PISTOL A ROUND WILL BE CHAMBERED WHEN CLOSING SLIDE.

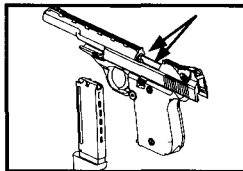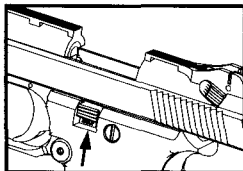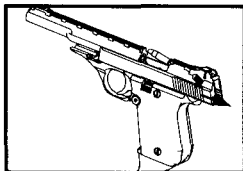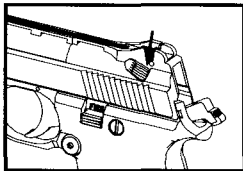


FIRING OPERATION

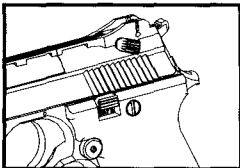

PLACE FIRING PIN BLOCK LEVER IN THE DOWNWARD POSITION COVERING THE RED DOT, PLACE SAFETY IN THE "SAFE" POSITION AND REMOVE MAGAZINE. LOAD MAGAZINE FOLLOWING THE INSTRUCTIONS ON PAGE 9. REINSERT LOADED MAGAZINE INTO PISTOL.

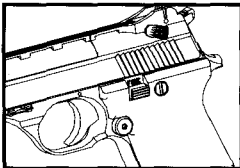

TAKE THE PISTOL IN ONE HAND WITH A FIRM GRIP. WHILE KEEPING YOUR FINGERS OFF OF TRIGGER AND WITH PISTOL POINTED IN A SAFE DIRECTION, MOVE SAFETY INTO "FIRE" POSITION (KEEP FIRING PIN BLOCK LEVER IN THE DOWNWARD POSITION).

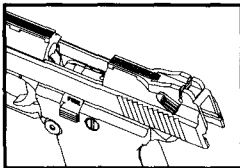


WITH YOUR OTHER HAND FIRMLY GRASP THE SERRATED PORTION OF THE SLIDE AND PULL IT AS FAR REARWARD AS IT WILL GO. RELEASE THE SLIDE FROM ITS REARMOST POSITION ALLOWING IT TO GO FORWARD ON ITS OWN ACCORD. THIS PROCEDURE PLACES THE FIRST CARTRIDGE INTO THE CHAMBER AND COCKS THE HAMMER. THE GUN IS READY FOR FIRING WHEN THE PIN BLOCK LEVER IS ROTATED UPWARD EXPOSING THE RED DOT. SUBSEQUENT FEEDING, FIRING AND EJECTION

OPERATIONS ARE PERFORMED AUTOMATICALLY EACH TIME THE TRIGGER IS PULLED UNTIL THE PISTOL IS EMPTY. CAUTION: UNLOAD PISTOL IF YOU DO NOT INTEND TO SHOOT IT IMMEDIATELY.

ADJUSTING SIGHT


THIS PISTOL IS EQUIPPED WITH A FIXED FRONT BLADE SIGHT AND A WINDAGE ADJUSTABLE REAR SIGHT. THE REAR SIGHT IS ADJUSTED BY THE ADJUSTMENT SCREW LOCATED AT THE RIGHT REAR OF THE SLIDE. PISTOL SHOULD BE IN THE UNLOADED CONDITION BEFORE ANY ATTEMPT TO ADJUST SIGHT.

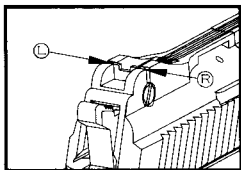

IF BULLET IS HITTING TO THE RIGHT OF TARGET CENTER, TURN SCREW TO THE RIGHT (CLOCKWISE).

IF BULLET IS HITTING TO THE LEFT OF TARGET CENTER, TURN SCREW TO THE LEFT (COUNTERCLOCKWISE).

ALWAYS BE SURE OF BACKSTOP, BULLETS CAN TRAVEL UP TO FIVE MILES. NEVER SHOOT AT SUCH HARD SURFACES SUCH AS ROCKS, WATER, ETC.-BULLETS CAN RICOCHET AND DAMAGE, INJURE OR KILL SOMETHING YOU DID NOT INTEND TO SHOOT.

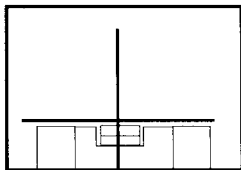

IF YOU ARE HITTING LOW OF TARGET CENTER, RAISE YOUR SIGHT OF FRONT SIGHT BLADE UP BY ONE MARK ON FRONT SIGHT BLADE TO TOP LEVEL OF REAR SIGHT.


IF YOU ARE HITTING HIGH OF TARGET CENTER, LOWER YOUR SIGHT OF FRONT SIGHT BLADE BY ONE MARK TO THE LOWER LEVEL OF SIGHT BLADE NOTCH.

DISASSEMBLY


THIS PISTOL MUST BE IN THE UNLOADED CONDITION BEFORE DISASSEMBLY IS PERFORMED (SEE UNLOADING PISTOL PAGE 10).



PLACE FIRING PIN BLOCK LEVER IN THE DOWNWARD POSITION COVERING THE RED DOT. PLACE SAFETY IN THE "SAFE" POSITION. DEPRESS MAGAZINE RELEASE BUTTON AND REMOVE MAGAZINE.

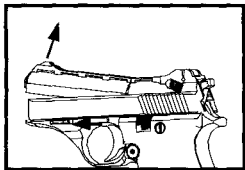


PUSH ON REAR OF TAKEDOWN LEVER FORWARD TOWARDS THE END OF THE BARREL AND LIFT BARREL END UP AND OUT OF SLIDE AND FRAME.

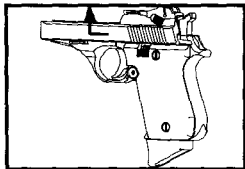

TO REMOVE SLIDE, INSERT EMPTY MAGAZINE INTO PISTOL AND MOVE SAFETY TO THE "FIRE" POSITION. MOVE SLIDE FORWARD AND UP OFF OF FRAME. THIS PROCEDURE IS SUFFICIENT FOR NORMAL CLEANING AND OILING OF THE BARREL. SEE CLEANING INSTRUCTIONS.

CLEANING

PISTOL SHOULD BE CLEANED AS SOON AS POSSIBLE AFTER FIRING. BEFORE ATTEMPTING TO CLEAN PISTOL, EMPTY CHAMBER AND MAGAZINE OF ANY AMMUNITION AND REMOVE ALL AMMUNITION FROM CLEANING AREA. COVER WORK AREA WITH OLD NEWSPAPER. IT IS BEST TO REMOVE BARREL FOR CLEANING. ASSEMBLE KNOB ROD AND BRUSH. PLACE A FEW DROPS OF "BREAKFREE CLP" TO ROD AND BRUSH. INSTALL BRUSH INTO BORE FROM CHAMBER END AND WORK BACK AND FORTH 5 TIMES. ALLOW OIL TO PENETRATE FOR ABOUT FIVE MINUTES. WORK BRUSH BACK AND FORTH 10 TIMES TO LOOSEN STREAKS OF LEAD AND FOULING. ATTACH OIL SOAKED PATCH TO SLOTTED END AND WORK BACK AND FORTH 10 TIMES. PLACE DRY PATCH ON JAG END AND PUSH THROUGH BORE. REPEAT UNTIL PATCH COMES OUT CLEAN. USING A LIGHTLY OILED PATCH AND SLOTTED END, OIL BARREL BORE AND ALLOW TO CURE FOR AT LEAST TWO HOURS. OTHER AREAS OF PISTOL SHOULD BE CLEANED FROM FOULING WITH A SOFT CLOTH, AND OILED LIGHTLY.

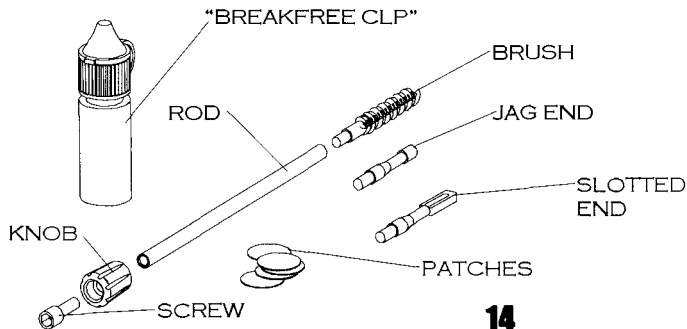





ASSEMBLY

REMOVE ALL AMMUNITION FROM WORK AREA. PLACE EMPTY MAGAZINE INTO FRAME. MOVE SAFETY TO "FIRE" POSITION. MOVE HAMMER TO COCKED POSITION.

INSTALL TAKEDOWN LEVER INTO FRAME UNDER CROSS BAR.

PLACE SLIDE DOWN ON FRAME OVER EJECTOR AND MOVE IT TO ITS MOST FORWARD POSITION. ABOUT 1/4 INCH FARTHER FORWARD THAN THE FRAME.

PLACE RECOIL SPRING OVER STOP POST AND DOWN INSIDE SLIDE. WHEN PLACING SPRING ROTATE SPRING OVER POST UNTIL SPRING WIRE END AT FRONT END OF SLIDE IS AT THE TOP.

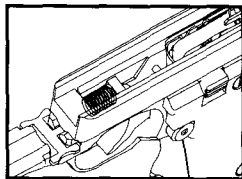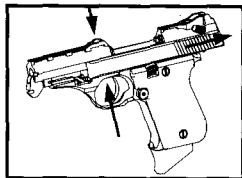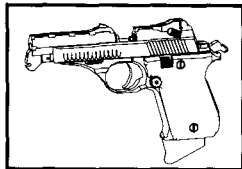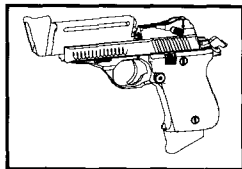


IF YOUR PISTOL DID NOT COME WITH A THREE INCH BARREL USE YOUR OTHER EMPTY MAGAZINE AS SHOWN TO KEEP SPRING IN PLACE WHILE RECOILING SPRING.


IF YOUR PISTOL CAME WITH A THREE INCH BARREL USE IT AS SHOWN WHILE RECOILING SPRING

WHILE HOLDING FRAME AND COMPONENT USED TO RECOIL SPRING IN ONE GRIP, USE YOUR OTHER HAND TO PULL SLIDE COMPLETELY TO THE REAR OF ITS STROKE AND ONCE THERE MOVE SAFETY TO "SAFE".


REMOVE BARREL, RECOIL SPRING SHOULD BE COMPRESSED AND COILED ON STOP POST. WITH THE SLIDE LOCKED IN THE REARWARD POSITION.

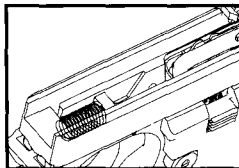


WHILE HOLDING THE SLIDE REARWARD ON THE FRAME, MOVE SAFETY TO "FIRE". ONLY ALLOW THE SLIDE TO MOVE FORWARD ABOUT 1/8 OF AN INCH.

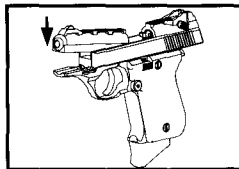

PLACE BARREL HOOK IN FRAME OVER PIN AND ROTATE DOWNWARD UNTIL IT LOCKS INTO PLACE.

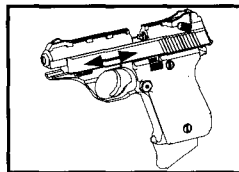




CYCLE SLIDE BACK AND FORTH TO PROPERLY SEAT SPRING, IT IS NOT NECESSARY TO PULL TRIGGER OR UN-COCK HAMMER WHILE ATTEMPTING THIS.

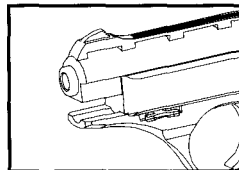


SLIDE SHOULD MOVE BACK AND FORTH WITH OUT BINDING. YOU SHOULD NOT BE ABLE TO LIFT BARREL END UP IF BARREL IS SEATED PROPERLY.

LOCKING TRANSPORT CASE

FOR TEMPORARY LIMITED ACCESS AND TRANSPORT ONLY. THIS IS NOT A SUBSTITUTE FOR A SAFE. ALL FIREARMS SHOULD BE KEPT IN A LOCKED SAFE WHEN NOT UNDER YOUR CONTROL. AMMUNITION SHOULD ALWAYS BE STORED SEPARATELY FROM PISTOL. ALWAYS CHECK FOR AN EMPTY CHAMBER BEFORE STORING OR TRANSPORTING.

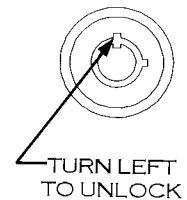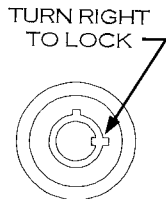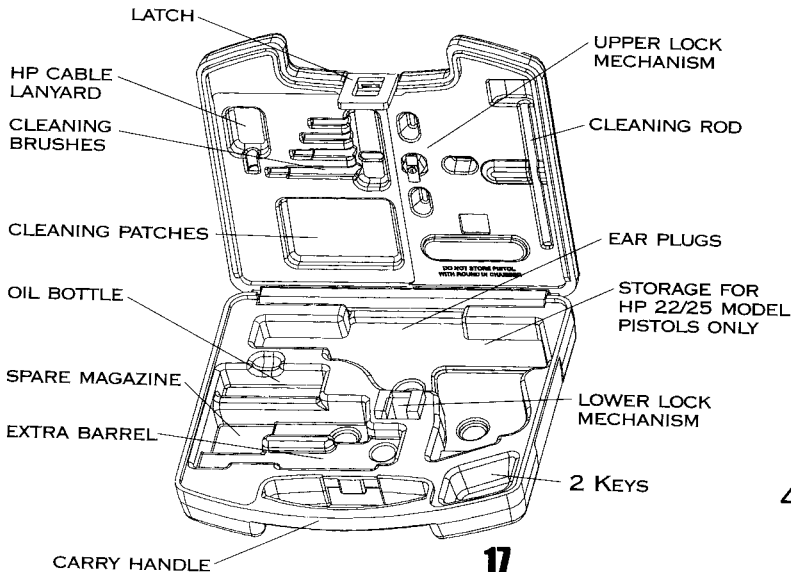

BARRELS AND MAGAZINES

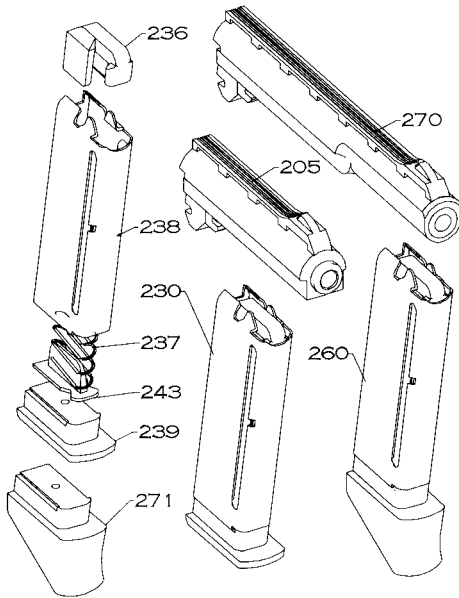


#	NAME	PRICE
205	.22 LR 3 INCH BARREL	19.50
230	.22 LR STD. MAGAZINE	11.50
236	.22 LR FOLLOWER	2.50
237	.22 LR MAG SPRING	3.50
238	.22 LR MAG BODY	5.00
239	.22 LR STD. MAG BASE	2.50
243	BASE LOCK	2.50
270	.22 LR 5 INCH BARREL	28.50
271	.22 LR EXT. MAG BASE	7.50
260	.22 LR EXT. MAGAZINE	16.00
305	.25 ACP 3 INCH BARREL	19.50
330	.25 ACP STD. MAGAZINE	11.50
336	.25 ACP FOLLOWER	2.50
337	.25 ACP MAG SPRING	3.50
338	.25 ACP MAG BODY	5.00
339	.25 ACP STD. MAG BASE	2.50
370	.25 ACP 5 INCH BARREL	28.50
371	.25 ACP EXT. MAG BASE	7.50
360	.25 ACP EXT. MAGAZINE	16.00

#	NAME	PRICE
201	FRAME NOT AVAILABLE	
207	MAGAZINE BUTTON	2.50
208	SAFETY	4.50
209	LEFT GRIP (PLASTIC)	5.00
210	RIGHT GRIP (PLASTIC)	5.00
211	MAG CATCH	2.50
212	BARREL PIVOT PIN	.75
213	TRIGGER PIVOT PIN	.75
214	DISCONNECTOR PIN	.75
216	SEAR PIN	.75
217	TRIGGER	4.00
218	HAMMER PIN	1.00
219	DISCONNECTOR	2.90
220	RECOIL SPRING	1.80
222	SEAR SPRING	.75
223	CATCH SPRING	.75
224	TRIGGER SPRING	.75
227	STRUT SPRING	1.00
228	GRIP SCREW (1)	.50
240	TRIGGER BAR PIN	.75
241	TRIGGER BAR	2.90
242	BLOCK SPRING	**
244	STOP POST	1.00
247	EJECTOR	2.50
248	STRUT	2.50
249	CROSS PIN	1.00
250	SAFETY BLOCK	**
251	TAKE DOWN LEVER	4.50
252	HAMMER	3.50

**326- TRIGGER RETURN SPRING 1.00
(NOT SHOWN)**

SLIDE COMPONENTS

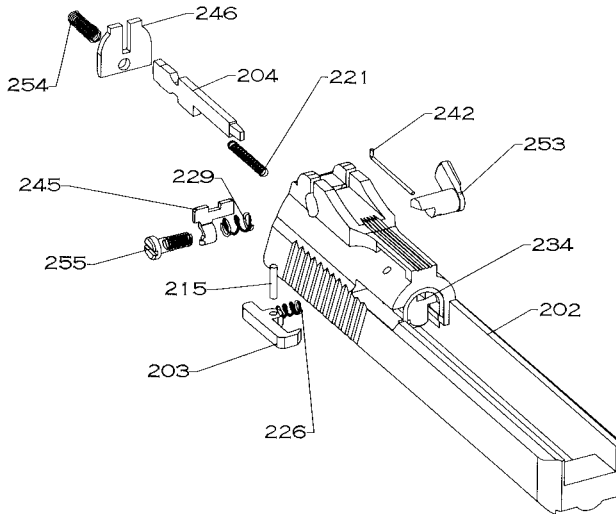

#	NAME	PRICE
202	SLIDE	24.95
203	EXTRACTOR	3.40
204	FIRING PIN	2.90
215	EXTRACTOR PIN	.75
221	FIRING PIN SPRING	.75
226	EXTRACTOR SPRING	.75
229	SIGHT SPRING	.75
234	FRONT PLATE .22LR	7.50
242	BLOCK SPRING	**
245	SIGHT	1.00
246	REAR PLATE	2.50
253	FIRING PIN BLOCK	**
254	REAR PLATE SCREW	.40
255	SIGHT SCREW	.50

NOTES

PHOENIX ARMS® MODEL HP ACCESSORIES

TAKE YOUR PHOENIX ARMS **HP PISTOLS** TO THE NEXT LEVEL WITH OUR NEW LINE OF AFFORDABLE, HIGH QUALITY ACCESSORIES. EACH IS DESIGNED TO IMPROVE AN ALREADY SUPERB HANDGUN AND ADD TO YOUR SHOOTING ENJOYMENT.



HP LOCKING GUN TRANSPORT CASE

\$14.00

LOCKED GUN TRANSPORT
CASE CAN BE KEYED THE
SAME AS THE PISTOL
MAGAZINE WELL LOCK.



EXTENDED MAGAZINE

\$16.00

FOR LARGER HAND GRIP.
10 RD. CAPACITY.

STANDARD MAGAZINE

\$11.50

10 RD. CAPACITY.
(NOT SHOWN)



HP "2-IN-1" CONVERSION KIT

EXTENDED 5" TARGET BARREL &
10 RD. EXTENDED MAGAZINE.


\$45.00



HP PISTOL LOCK

\$12.00


INCLUDED WITH ALL
PHOENIX ARMS MODELS.
INSTALLS IN MAGAZINE WELL.

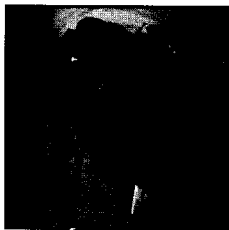

HP NYLON BELT HOLSTER

\$10.00

WITH ADJUSTABLE WEB
STRAP. FITS EITHER
LENGTH BARREL.

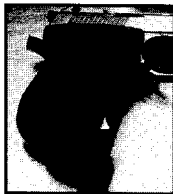

CUSTOM HP HARDWOOD RESINATED GRIPS

\$18.00



HP CLEANING KIT

\$8.00

COMES WITH ROD,
BREAKFREE "CLP" GUN OIL,
BRUSH, JAG END, SLOTTED
END, PATCHES, SCREW
AND KNOB.

DETACH & MAIL YOUR LIFETIME WARRANTY

TO ACTIVATE THIS WARRANTY YOU MUST COMPLETE THIS CARD AND MAIL, WITH PROPER POSTAGE, WITHIN 30 DAYS OF PURCHASE.

MODEL:

SERIAL #:

DATE PURCHASED:

1. WHERE DID YOU PURCHASE THIS PISTOL?

CITY:

STATE:

ZIP:

2. IS THIS YOUR FIRST PURCHASE OF A FIREARM?

YES

NO

3. DID YOU RECEIVE THIS PISTOL IN A PHOENIX ARMS BOX WITH THE OPERATING INSTRUCTIONS FOR THE PISTOL YOU PURCHASED?

YES

NO

4. DID YOU READ AND UNDERSTAND ALL OF THE OPERATING INSTRUCTIONS?

YES

NO

5. DID YOU RECEIVE ANY VERBAL INSTRUCTION FROM A COMPETENT FIREARMS INSTRUCTOR ON THE SAFE HANDLING OF THIS PISTOL?

YES

NO

IF YOU ANSWER NO TO 4. OR 5., IT IS OUR STRICT RECOMMENDATION FOR YOUR SAFETY, AND THE SAFETY OF OTHERS, THAT YOU DO NOT ATTEMPT TO LOAD, OR OPERATE THIS PISTOL UNTIL YOU HAVE OBTAINED SAFE HANDLING INSTRUCTIONS BY A QUALIFIED FIREARMS INSTRUCTOR!

NAME:

ADDRESS:

CITY:

STATE:

ZIP:

SIGNATURE:

LIFETIME WARRANTY

TERMS AND CONDITIONS:

FOR THE LIFE OF THE ORIGINAL OWNER WHOSE WARRANTY CARD IS ON FILE, PHOENIX ARMS WILL REPAIR OR REPLACE, AT ITS SOLE DISCRETION, ANY OR ALL ORIGINAL PARTS OF THIS PISTOL THAT ARE DEFECTIVE, OR THAT BECOME UNSERVICEABLE DUE TO NORMAL USAGE. ANY PHOENIX ARMS' PISTOL REQUIRING SERVICE MUST BE SENT VIA UNITED PARCEL SERVICE (U.P.S.) OR FEDERAL EXPRESS TO:

PHOENIX

1420 SOUTH ARCHIBALD AVE.
ONTARIO, CA 91761

NOTE:

WHEN SENDING IN A PISTOL FOR REPAIR, PLEASE PROVIDE THE RETURN STREET ADDRESS (NO P.O. BOXES), INDICATE THE NATURE OF THE PROBLEM IN WRITING AND BE SURE TO INCLUDE THE MAGAZINE WITH ALL PARTS OF THE PISTOL. **MAKE SURE PISTOL IS UNLOADED!** RETURN PISTOL WITH LOCK INSTALLED AND LOCKED (DO NOT SEND KEY) OR YOU MAY BE CHARGED \$12.00 FOR A NEW LOCK.

ORDERING INFORMATION

CALL WITH MASTERCARD/VISA **OR** SEND CHECK/MONEY ORDER WITH \$4.50 POSTAGE & HANDLING TO ADDRESS BELOW. **BE SURE TO INCLUDE THE MODEL, FINISH, CALIBER AND SERIAL NUMBER WITH YOUR ORDER.** DESIGNS AND PRICES SUBJECT TO CHANGE WITHOUT NOTICE.

PHOENIX

1420 SOUTH ARCHIBALD AVE.
ONTARIO, CA 91761

909/937-6900

PLACE
POSTAGE
HERE

PHOENIX

WARRANTY DEPARTMENT
1420 SOUTH ARCHIBALD AVENUE
ONTARIO, CA 91761