


Owner's Manual

Owner's Manual for:
Remington Model SPR 18
Single Shot Rifle

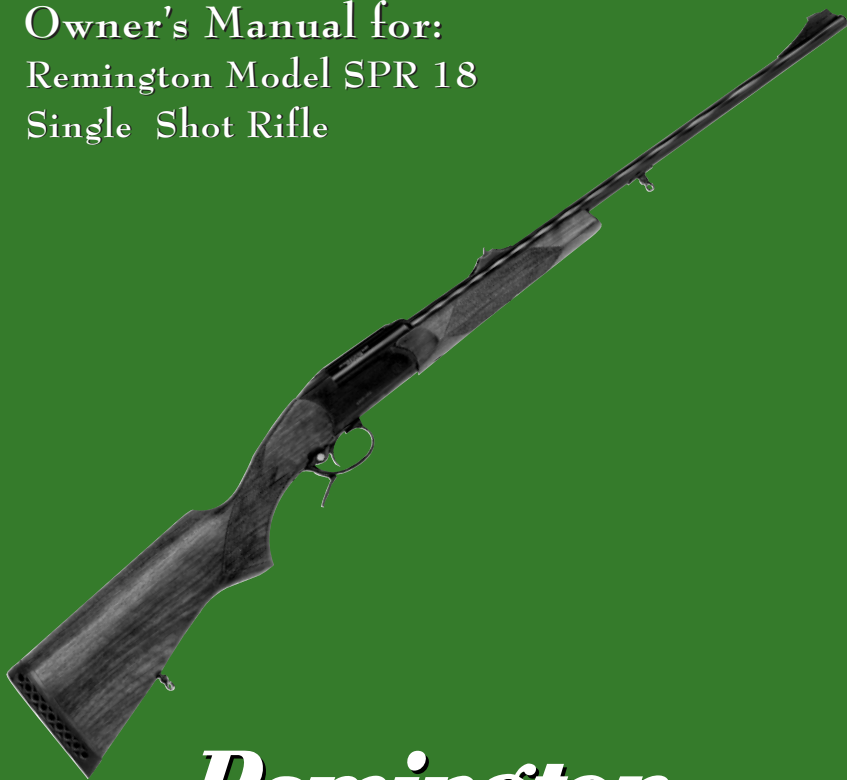

Remington®

IMPORTANT!

READ ALL WARNINGS AND
INSTRUCTIONS IN THIS
MANUAL BEFORE USING THIS RIFLE



PAGE 2THE TEN COMMANDMENTS OF FIREARM SAFETY

PAGE 7IMPORTANT PARTS OF THE FIREARM

PAGE 10.....ASSEMBLY INSTRUCTIONS

PAGE 12.....LOADING AND UNLOADING

PAGE 13FIRING

PAGE 15DISASSEMBLY INSTRUCTIONS

Safety is Critical to Performance.

A superbly crafted gun is only as good as the hands that hold it. You can never be too careful. Shooting accidents are often caused by careless oversights such as failing to control the direction of the muzzle, failing to fully engage the safety, leaving ammunition in the chamber or using improper loads. These oversights can result in the destruction of life, limb or property. There's no calling back a bullet once it's been fired, so it's critical that you know the principles of safe gun handling and storage before you ever take your new Remington firearm out of the box.

The proper use and performance of your firearm depends on correct assembly and maintenance, so it's critical that you familiarize yourself with the information in this instruction book. Even if you're a veteran shooter with a collection of Remington firearms, take the time to read this literature. Not all firearms are the same. That means the first step in safe handling is to learn the features and requirements of your new Remington.

THE TEN COMMANDMENTS OF FIREARM SAFETY

With the privilege of owning a firearm comes the responsibility to use it safely. You must understand and follow the Ten Commandments of Firearms Safety at all times. These time-honored safety rules apply to your ownership and handling of any firearm. They must govern your actions whenever and wherever you are involved with firearms . . . in the field, on the range, or in your home. Commit these Ten Commandments to your memory.

1st COMMANDMENT

Always Keep the Muzzle Pointed in a Safe Direction.

This is the most important gun safety rule. A safe direction is one in which an accidental discharge will not cause injury to yourself or others. Never allow your gun to point at anything you don't intend to shoot. Be especially careful when you're loading or unloading. Treat every gun as if it were loaded. And make it a habit to know where the muzzle is pointed at all times, even when your firearm is unloaded. No one will be injured by an accidental discharge if you keep your firearm pointed in a safe direction. It's as simple as that.

2nd COMMANDMENT

Firearms Should be Unloaded When Not in Use and Secured from Unauthorized Use.

Load your firearm only when you are in the field or on the range and ready to shoot. Unload your firearm as soon as you are finished shooting. Never bring a loaded firearm into your camp, home or vehicle. Unloading means unloading both the chamber and the magazine. Before handling a firearm or passing it on to someone else, visually check the chamber, receiver, and magazine to make sure there is no ammunition anywhere in the firearm. Never assume a firearm is unloaded, and never take someone's word for it - look for yourself. When you are finished shooting and have completely unloaded the firearm, leave its action open.

Whenever you are carrying a loaded firearm in the field, you must unload it before crossing a fence, climbing into a tree stand or blind or in any other situation where you may not be able to fully control the firearm. Never pull or push a loaded firearm toward yourself or another person.

Store your firearms unloaded in a secure place where unauthorized persons cannot gain access to them. Store firearms and ammunition separately. If you use an external security device such as a cable lock or trigger lock, you must still keep the firearm unloaded when locked. Whether you utilize a locked gun safe or external locking device, it is your responsibility to make sure that children and other unauthorized persons cannot gain access to your firearm and ammunition.

3rd COMMANDMENT

Never Rely on Your Firearm's Safety Mechanism to Justify Careless Handling.

If your firearm is equipped with a manual safety mechanism, do not rely on the safety as an excuse for improper or careless handling of the firearm. The safety mechanism is merely a supplement to your proper handling of the firearm. The safety mechanism may be broken or altered. Even if you think you have previously engaged the safety in the "safe" position, it may have been inadvertently disengaged without your knowledge while being carried. Never assume that the safety mechanism is engaged in the "safe" position. Your assumption may be wrong or mistaken. Treat your firearms safety mechanism like you would treat any other mechanical device - as something that could break or fail.

Not all safety mechanisms operate in the same manner. Before using any firearm, know and understand precisely how the safety mechanism on that particular firearm operates. Never pull the trigger when the safety mechanism is in the "safe" position, and keep your fingers away from the trigger while loading, unloading, and engaging or disengaging the safety mechanism.

4th COMMANDMENT

Know Your Target and What's Beyond It.

Never fire a shot unless you know exactly where the shot is going and what it will strike. Bullets and shot can travel great distances with deadly velocity. When hunting game, never fire at a sound, a movement or a patch of color - an impulsive shot can have tragic consequences. A fellow hunter in camouflage may be mistaken for game by an impulsive shooter.

In addition to being sure of your target, you must know what lies beyond the target. In other words, make sure of your backstop. Also, beware of ricochets - never shoot at water or a hard surface.

5th COMMANDMENT

Use Proper Ammunition.

Every firearm is designed to use only a specified caliber, gauge or length of ammunition. Use of the wrong ammunition can cause serious personal injury or death. It is your responsibility to make sure the ammunition exactly matches the specifications for your firearm.

Use of improperly reloaded ammunition can also be dangerous. Firearms are designed, manufactured, and proof-tested to specified industry standards. Hand-loaded or reloaded ammunition that deviates, either intentionally or accidentally, from specified loadings can be extremely hazardous. It is strongly recommended, therefore, that you use only factory ammunition from a reputable ammunition manufacturer. If you do reload, you have assumed the risks and responsibilities of an ammunition manufacturer.

6th COMMANDMENT

If Your Firearm Fails to Fire When You Pull the Trigger, Handle With Care.

If a chambered round of ammunition does not fire when you pull the trigger, stop and keep the muzzle pointed in a safe direction. Treat your firearm as if it could still discharge. Keep your face away from the breech. Slowly and carefully open the action, return the safety mechanism to the "safe" position, and unload the cartridge from the chamber. Dispose of the cartridge safely. If your firearm repeatedly fails to fire when you pull the trigger, take your firearm and ammunition to a competent gunsmith or return the firearm to the manufacturer for inspection.

7th COMMANDMENT

Always Wear Eye and Ear Protection.

Wear protective shooting glasses and hearing protection when shooting. Be sure to wear eye protection when disassembling or cleaning a firearm to protect your eyes from springs and other tensioned parts. Continued exposure to shooting noise can permanently damage your hearing.

8th COMMANDMENT

Be Sure the Barrel is Clear of Obstructions Before Shooting.

With your firearm completely unloaded, open the action and make sure there are no obstructions or debris in the barrel. Even a small obstruction such as snow or mud in the barrel can cause the barrel or receiver to burst when the next round is fired. Use a cleaning rod to remove obstructions and residues from the barrel. If the firing noise or recoil seems weak, stop and completely unload your firearm to check for obstructions before firing another shot. NEVER try to shoot out an obstruction by loading and firing another round of ammunition.

9th COMMANDMENT

Never Alter or Modify Your Firearm and Have it Cleaned and Serviced Regularly.

Your firearm has been carefully designed and manufactured to operate according to certain factory specifications. NEVER alter or modify your firearm, especially its trigger or safety mechanism, in any way. Such alterations or modifications can adversely affect the safe operation of your firearm, endangering you and those around you.

As with any mechanical device, the parts of a firearm are subject to wear or breakage. To assure optimum safety and performance, your firearm must be maintained and serviced on a regular basis. Only a competent gunsmith or a Remington Authorized Service Center should service or repair your firearm.

Proper cleaning and lubrication are also important to maintain the safe and proper functioning of your firearm. Follow the cleaning and lubrication instructions set forth in the owner's manual for your firearm. NEVER attempt to clean or lubricate a loaded firearm.

10th COMMANDMENT

Learn How Your Firearm Operates.

Not all firearms are alike. Before you use any firearm for the first time, you must become totally familiar with how that firearm operates. When you receive a new firearm, read and understand the owner's manual before assembling the firearm for the first time. If you acquire a used firearm, request an owner's manual and have the rifle inspected by a competent gunsmith to determine whether it is in good working order. If you do not have an owner's manual, contact the manufacturer to obtain one. If you are selling or trading your firearm to someone else, be sure to transfer the owner's manual to the new owner.

LEAD EXPOSURE WARNING

Discharging firearms in poorly ventilated areas, cleaning firearms or handling ammunition may result in exposure to lead, a substance known to cause birth defects, reproductive harm, cancer and other serious physical injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.

SHOOT SOBER!


Guns and alcohol or drugs don't mix. Never consume anything that would even mildly impair your judgement or physical coordination while handling a firearm.

WARNING

Failure to follow any of these safety rules may cause personal injury or death to the shooter or bystander and damage to property. Do not use a firearm until you fully understand and practice the Ten Commandments of Firearm Safety. If you have any questions about the safe use of a Remington firearm, write to us at Remington Arms Company, Inc., Consumer Service, P.O. Box 700, Madison, NC 27025-0700, or call us at 1-800-243-9700.

Use the Security Lock Provided with your Rifle

This rifle comes with a security lock to assist in protecting against unauthorized use. (See **Picture 1**). The rifle must be unloaded when the security lock is in place on the rifle. **WARNING:** Using the security lock cannot substitute for securing your firearm and ammunition in separate, locked locations.

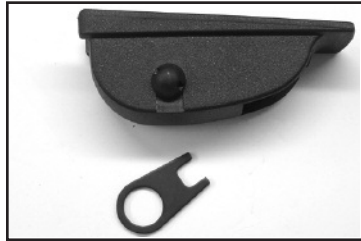

Picture 1

The security lock operates as follows:

1. To open the Trigger Lock put the Key into the notches of the Trigger Lock Nut and un-screw it counter-clockwise (See **Pictures 2, 3**). Remove the Trigger Lock Screw.




Picture 2



Picture 3

2. To install the Trigger Lock on a single shot rifle put the Trigger Lock over the trigger guard with the larger end of the Trigger Lock shroud pointing toward the muzzle. Then place the Trigger Lock Screw through the cross-slotted hole on the side of the Trigger Lock Shroud. (See **Picture 4**).

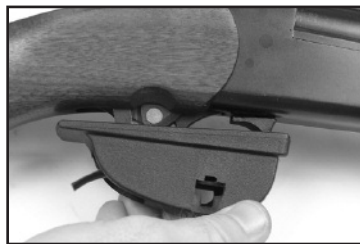

Picture 4

Use the Security Lock Provided with your Rifle (cont'd)

3. Screw the Trigger Lock Nut on the Trigger Lock Screw (clockwise) and tighten the nut with the key.

DO NOT TIGHTEN THE NUT TOO TIGHT OR YOU COULD DAMAGE THE LOCK SCREW

(See **Picture 5**).



Picture 5

4. To remove the Trigger Lock, unscrew the Trigger Lock Nut with the key and detach the Trigger Lock Screw (See **Picture 6**)



Picture 6




WARNING

Always store the key to the security lock: (1) in a separate location away from the rifle; (2) in a secure location unknown and not accessible to others, especially children. Whether you secure your firearms by using the supplied security lock, a gun lock or a safe or some other mechanism, it is **YOUR RESPONSIBILITY** to store your firearms in such a manner that children and other unauthorized persons cannot gain access to them.

Important Parts of Your Rifle

Congratulations on your choice of a Remington® Model SPR 18 single shot rifle. With proper care and if used in accordance with the Ten Commandments of Firearm's Safety and this owner's manual, your rifle should give you many years of dependable use and enjoyment. The following picture depicts the main parts of your rifle and will aid in understanding the instructions in this Owner's Manual.

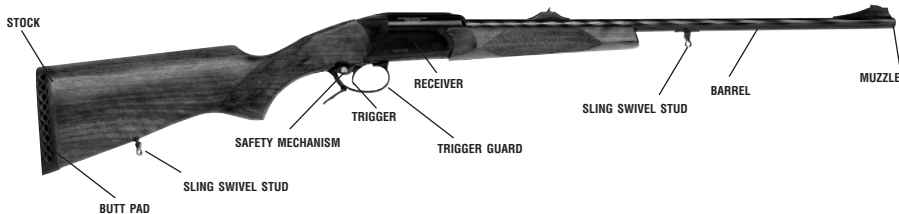

This picture shows the main parts of a Remington Model SPR 18 rifle. The picture will aid in understanding the instructions in this book.

External Control Parts

Trigger Block Safety: The trigger block safety of the Model SPR 18 rifle provides protection against accidental or unintentional discharge under normal usage when properly engaged and in good working order.

WARNING: Make sure you understand how the safety works before you load or use the rifle. The safety mechanism is not a substitute for following the rules of safe gun handling.

The safety mechanism is a cross-bolt style safety button located behind the trigger. To place the safety in the "on" or "safe" position, push the button all the way to the right. When in the "on" or "safe" position, the safety blocks the rearward motion of the trigger (See **Picture 7**). To place the safety in the "off" or "fire" position, push the button all the way to the left. When in the "off" or "fire" position, a red ring is exposed on the left side of the safety button. You have now disengaged the safety and the rifle is in the ready-to-fire position (See **Picture 8**).



Picture 7



Picture 8




WARNING

Do not touch the trigger while moving the safety button. When operating the safety button, make sure you push it to the full extent of its travel in the desired direction, either fully "on" or fully "off." Half-safe or partially safe is **UNSAFE**.


When the Red Ring is showing the rifle will fire when the trigger is pulled!! Do not disengage safety unless you are ready to fire the rifle. **MAKE SURE YOU UNDERSTAND HOW THE SAFETY WORKS BEFORE YOU LOAD OR USE THE RIFLE.**

External Control Parts (cont'd)

Locking Lever: The locking lever is a lever-like protrusion extending from the rear of the trigger guard. (See **Picture 9**.) The locking lever is used to break open the action to load and/or unload the rifle. To break open the action, fully depress or squeeze the locking lever toward the stock. (See **Picture 10**).

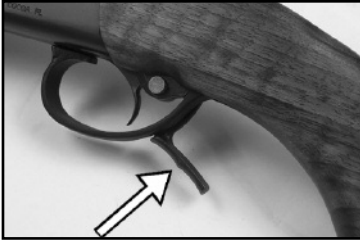

Picture 9

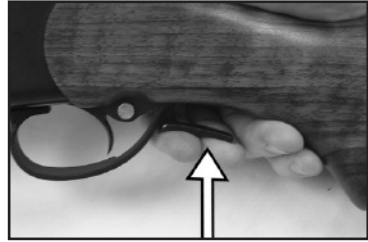


Picture 10


WARNING

When operating the locking lever, you must: (1) make sure the safety mechanism is in the "on" or "safe" position; (2) keep your fingers away from the trigger and outside of the trigger guard; and (3) control the direction of the muzzle of the rifle.

Cocking Indicator: The cocking indicator is a protrusion from the top back of the receiver. If the internal firing mechanism is cocked, the cocking indicator protrudes from the receiver. (See **Picture 11**). If the firing mechanism is not cocked, the cocking indicator retracts and does not protrude from the receiver. (See **Picture 12**).

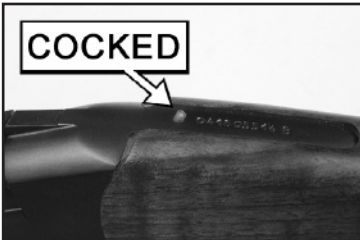

Picture 11

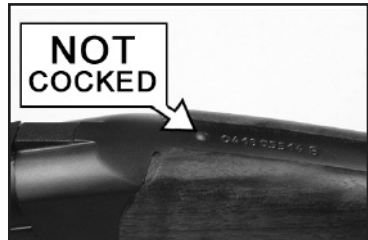


Picture 12

WARNING

The cocking indicator is merely an aid to help you confirm when hunting or shooting that your rifle is cocked and ready-to-fire. **NEVER** rely on the status of the cocking indicator to justify careless handling of your rifle. The cocking indicator may be broken or obscured. Always handle your rifle as if it were loaded, cocked and ready to fire.

External Control Parts (cont'd)

Trigger: The trigger is located inside the trigger guard. (See **Picture 13**). If you pull the trigger with the safety in the "off" or "fire" position, the rifle will fire.

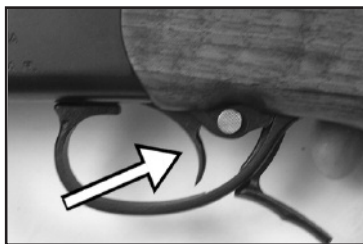


Picture 13


WARNING

NEVER pull the trigger until you are actually ready to fire. Keep your fingers off the trigger and outside of the trigger guard until you are ready to pull the trigger and fire the rifle. When opening and closing the action and when engaging or disengaging the safety mechanism, make sure your fingers are outside of the trigger guard and away from the trigger.

Fore End: The fore end is the wooden grip piece which attaches to the barrel and locks the barrel to the receiver. (See **Picture 14**). The fore end has a mechanical latch which is used to lock and unlock the fore end to the barrel. (See **Picture 15**). NEVER attempt to fire your rifle without having the fore end locked in its proper position on the barrel.

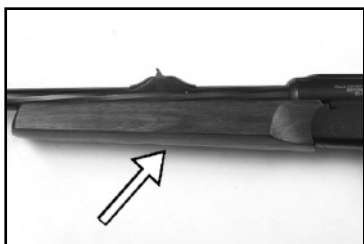

Picture 14

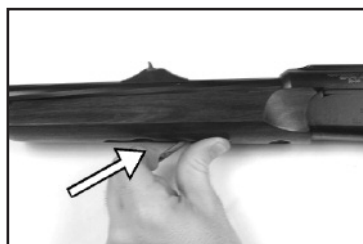


Picture 15


Front Sight: Screws up and down for elevation. (See **Picture 16**).

Rear Sight: Windage adjustable. (See **Picture 17**).

Scope Mount Rail: 11mm rail. (See **Picture 18**)

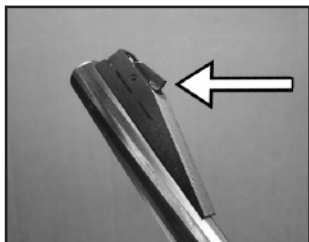

Picture 16

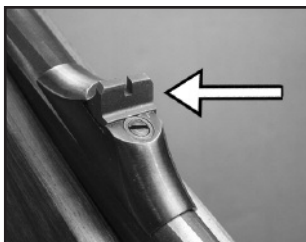

Picture 17



Picture 18

WARNING

Never adjust the sights or scope mounts on a loaded firearm. Make sure the rifle is unloaded before making any such adjustments.


Instructions For Assembly Of Rifle

WARNING

Before you begin to assemble the rifle, you **MUST** (1) look down the barrel from the breech end to make sure there is no ammunition in the chamber or obstruction in the barrel, and (2) make sure the safety is in the "safe" position.

Your rifle was shipped with the barrel assembly (barrel and fore end) detached from the receiver assembly. To assemble the rifle, follow these instructions:

1. Remove the plastic bags or wrapping covering the parts. Then remove the fore end from the barrel by pulling outward on the mechanical lever in the lower mid-section of the fore end and tipping the fore end out and away from the barrel while pulling the lever out. Never force the fore end off the barrel. (See **Picture 19, 20**).

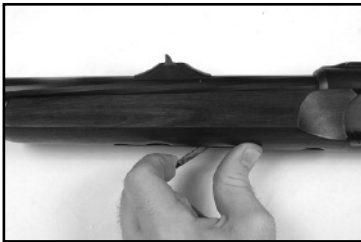

Picture 19



Picture 20

2. Now fully squeeze/depress the locking lever and hold with one hand. (See **Picture 21**).



Picture 21

3. Holding the barrel with one hand, engage the lower locking lug located on the lower portion of the barrel with the receiver. The half round cut out on the lower locking lug fits around the round bar in the forward lower portion of the slot in the receiver. With the barrel engaged into the receiver, swing the barrel up into the locked position, release the locking lever, which should move back to the fully locked position. (See **Pictures 22, 23**).

Instructions For Assembly Of Rifle (cont'd)



Picture 22



Picture 23

4. Now that the barrel has been locked into the receiver, you must reattach the fore end to the barrel. Pull the forearm latch out and place the fore end on receiver. With an upward swing motion lock the fore end onto the barrel. Do not force the fore end into its locked position. While it may be necessary to push the latch into its final flat position, never force the latch into position. (See **Picture 24**.)



Picture 24

Loading and Unloading Your Rifle

WARNING

Never load or fire the rifle unless the barrel is locked into position on the receiver, and the fore end is locked in to the receiver and barrel.

WARNING

Make sure the rifle is pointed in a safe direction and the trigger block safety is engaged at all times while loading and unloading. NEVER allow your fingers or other objects to contact the trigger while loading or unloading.

WARNING


Do not disengage the trigger block safety until you are ready to fire and have the gun pointed safely downrange

WARNING: DO NOT LOAD RIFLE UNTIL YOU ARE READY TO FIRE.

Loading and Unloading Your Rifle (cont'd)

TO LOAD:

1. Make sure the ammunition that you are using is the correct size and gauge. The barrel is marked with the caliber.
2. Visually inspect the chamber and barrel for obstructions by breaking open the rifle by depressing the locking lever and tipping the barrel down. The chamber and barrel should be free of oil or grease or obstructions. (See **Picture 25**).

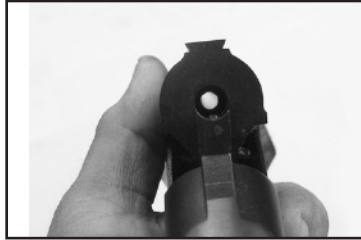

Picture 25

3. After inspection, load the correct type of shot shell into the chamber making sure that the shells are flush with the extractor (See **Pictures 26,27**). Then close the action by swinging the barrel up until it locks into the receiver and the locking latch should move to its fully locked position (See **Picture 28**). If the locking lever does not move to the fully locked position, break open the action again and check to see if the shot shell is fully seated in the chamber. If the shell is fully seated then re-close the action. If the cartridge is not fully seated, check the chamber for blockage and check the shell for deformation and retry closing the action once more. If the cartridge is the correct type and the chamber is not blocked and the cartridge is not deformed and the locking lever does not move to its fully locked position (See **Picture 29**), unload the gun (follow Unloading Instructions) and have a competent gunsmith look at the gun or return the gun to Remington I.S.P. for inspection. Do not force the rifle closed.



Picture 26



Picture 27



Picture 28



Picture 29

Loading and Unloading Your Rifle (cont'd)

TO UNLOAD:


1. Break open the rifle by depressing the locking lever and tipping the barrel down. (See **Picture 30**).
2. Remove the cartridge from the chamber by grabbing it by the rim of the cartridge and pulling it form the chamber. (See **Picture 31**).
3. Visually check the barrel to make sure that it is free from obstructions. (See **Picture 32**).



Picture 30



Picture 31

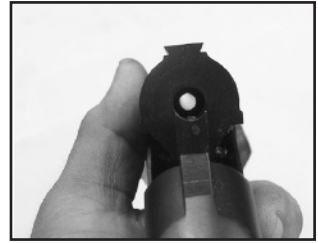

Picture 32

Firing Your Rifle

 **WARNING: NEVER LOAD A CARTRIDGE INTO THE CHAMBER UNTIL YOU ARE READY TO FIRE THE RIFLE.**

 **WARNING**

Do not disengage the trigger block safety until the rifle is pointed in a safe direction and you are ready to fire.

 **WARNING**

If a cartridge does not fire and the trigger has been pulled and the trigger block safety is disengaged...Stop! And do the following: a) Make sure the gun is pointed in a safe direction b) Engage the trigger block safety c) Wait 60 seconds d) Follow the instructions above for unloading the rifle.

If during firing the sound of any cartridge is noticeably softer or louder than the previous cartridge fired, Stop! Do not load another cartridge or fire another cartridge and do the following: a) Make sure the gun is pointed in a safe direction b) Engage the trigger block safety c) Follow the instruction above for unloading the rifle d) With the rifle unloaded visually inspect the rifle for barrel blockage or damage and inspect the mechanical operation and receiver of the rifle for damage before continuing.

READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE FIRING THE RIFLE.

Firing Your Rifle (cont'd)

TO FIRE THE RIFLE:

1. Make sure the rifle is pointed in a safe direction with the trigger block safety engaged. (See **Picture 33**).



Picture 33

2. Make sure you are wearing eye and ear protection.
3. Keep your fingers away from the trigger. (See **Picture 34**).
4. Push the trigger block safety to the "off" or "fire" position with the red ring showing. (See **Picture 35**).



Picture 34



Picture 35

5. With the butt stock held firmly against your shoulder and the barrel pointed towards your intended target, place your trigger finger on the trigger. The rifle will fire when you pull or squeeze the trigger with the requisite force. (See **Picture 36**)



Picture 36

WARNING

Once you have fired the rifle, immediately push the trigger block safety to the "on" or "safe" position. Then follow the unloading instructions above while keeping the muzzle pointed in a safe direction.


Directions For Disassembly Of The Rifle

1. Make sure the rifle is unloaded (**FOLLOW UNLOADING INSTRUCTIONS**) and pointed in a safe direction.
2. Make sure the trigger block safety is engaged in the "on" or "safe" position. (See **Picture 37**).



Picture 37

3. Remove the forend from the barrel by pulling out the mechanical lever in the lower center of the fore end and removing the fore end in a downward outward swinging motion. Never force the fore end off the barrel and receiver. (See **Picture 38**).

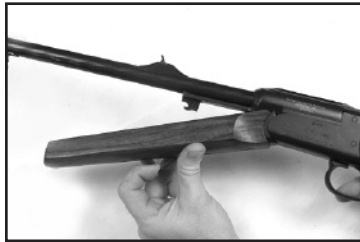

Picture 38

4. With the barrel and receiver supported with one hand, depress the locking lever fully and tip the barrel down until it disengages from the receiver. Check the barrel for obstructions, damage and blockage after removal. (See **Picture 39, 40**).



Picture 39



Picture 40

Manufacturer's Warning

This firearm was manufactured to properly perform with the original parts as designed. It is your duty to make sure any parts you buy are correctly installed and that neither replacements nor originals are altered or changed. Your rifle has many parts that must relate correctly to other parts for safe and accurate operation. Putting a gun together wrong or with modified parts can result in a damaged gun, or personal injury or death to you or others. Always let a qualified gunsmith work on your gun or at least, check any work not performed by a gunsmith. Firearms safety is your primary concern. **THE GUN OWNER MUST ACCEPT FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE FIREARM AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.**

To Clean and Maintain Your Rifle

- A. Follow procedures for unloading rifle as described previously.
- B. Follow procedures for disassembly of rifle as described previously.
- C. Materials needed to clean this rifle are: a cleaning rod, cotton bore patches, brass bore brush, powder solvent (such as Remington BriteBore™), a small soft brush and good quality gun oil (such as Rem® Oil).

WARNING

Lead or lead compounds are known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who clean firearms should take protective measures to avoid contact or exposure to such chemicals.

- D. Using the bore brush with powder solvent, scrub the interior of the barrel and chamber to remove any powder and lead residue in the bore. Always and lastly, swab the interior of the barrel with a cotton patch with gun oil to coat and protect the bore and chambers from rust and corrosion.
- E. Any powder fouling on the firing wall, barrel, etc. can be easily cleaned with a brush and powder solvent.
- F. All external surfaces should be wiped down with a light coat of rust preventative. Avoid using too much oil as powder, dust or other foreign material may get trapped in the oil. This could lead to congealed deposits which may interfere with the safe and reliable operation of this rifle.
- G. **USE CAUTION** while using solvents in gun bore cleaning. Prolonged or excess contact with solvents can damage the gun's bluing and finish. Be sure to wipe away all excess solvent and then lubricate with oil.
- H. A gun should be cleaned after firing. In addition, external parts should be wiped with an oiled cloth after handling. A light oil is ordinarily all that is necessary in cleaning if the gun has not been fired or fired very little. If a gun is used frequently, it must be cleaned after each firing and regularly serviced by a professional gunsmith. If the gun has been stored, remove all excess oil and/or grease before firing. Always check to be sure that no cleaning patch or other obstruction remains in the bore or chambers before firing.

DANGER – Ammunition Warning

Firearms may be damaged and serious personal injury or death to the shooter or bystanders may result from any condition which contributes to the generation of excessive pressure or uncontrolled release of gas within the firearm. Such adverse conditions can be caused by bore or chamber obstructions, propellant powder overloads or by defective, incorrect or improperly loaded and assembled cartridge components. Even the strongest firearm can be blown up as a result of excessive pressure. It is extremely dangerous to use a cartridge whose pressure is greater than that developed by cartridges loaded to industry standards.

Ammunition (Cartridges) Notice

We specifically disclaim responsibility for any damage, injury or death occurring in connection with or as the result of the use of the rifle with faulty, non-standard, remanufactured, hand loaded or reloaded ammunition or with cartridges other than factory cartridges for which the rifle was originally chambered.

Lubrication Warning

Firing a rifle with oil, grease or any other material even partially obstructing the bore may result in damage to the rifle and personal injury to the shooter and those nearby. Do not spray or apply lubricants directly on ammunition. If the powder charge of a cartridge is affected by the lubricant, they may not fully ignite yet the energy from the primer and/or powder may still be sufficient to push the projectile or wad into the bore where it may become lodged. Firing a subsequent cartridge into the obstructed bore will damage the rifle and may cause personal injury to the shooter and those nearby. Use lubricants properly. You are responsible for the proper care and maintenance of your firearm and ammunition.

PARTS AND SERVICE

To Order Parts

ALL PARTS ARE SUBJECT TO A \$10.00 CHARGE FOR SHIPPING AND HANDLING. Some parts are restricted and may only be installed by returning the rifle to us. When ordering parts, please state the Model, Gauge, Serial Number, and Finish Color. For parts information, call (321) 639-1432.

Service

To obtain information about returning your rifle for service or repairs, call (321) 639-1432.

One Year Limited Warranty

This rifle is warranted to the original retail customer for one year from the date of retail purchase against defects in material and workmanship. All parts and labor or replacement at our option are covered. The wood stock is not covered by the one year warranty. The warranty on the wood stock is 60 days and is limited to the original retail customer and extends 60 days from the date of retail purchase and covers only manufactured and material defects.

PARTS AND SERVICE (cont'd)

One Year Limited Warranty

Transportation to and from our repair facilities, government fees, damage caused by failure to perform normal maintenance, sales outside the United States, damage caused by use of high velocity, high pressure, reloaded or other nonstandard ammunition, or by any unauthorized repair, modification, misuse, abuse or alteration of the rifle is not covered by this Limited Warranty.

Implied Warranty

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law, which cannot be pre-empted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

To obtain warranty service, send your rifle with proof of retail purchase, freight prepaid to:

REMINGTON I.S.P.
c/o USSG
402 Richard Road
Rockledge, FL 32955


NOTICE: It is illegal to ship a firearm with ammunition in the firearm or in the same packaging. Firearms and ammunition must be shipped separately. For information about shipping ammunition, call (321) 639-1432.

Your Owner's Manual

Always keep this manual with your firearm. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the firearm, be sure this manual goes with it. You can get a copy of this manual from Remington upon request.


PARTS LIST

Model SPR18 Single Shot Rifle Exploded View

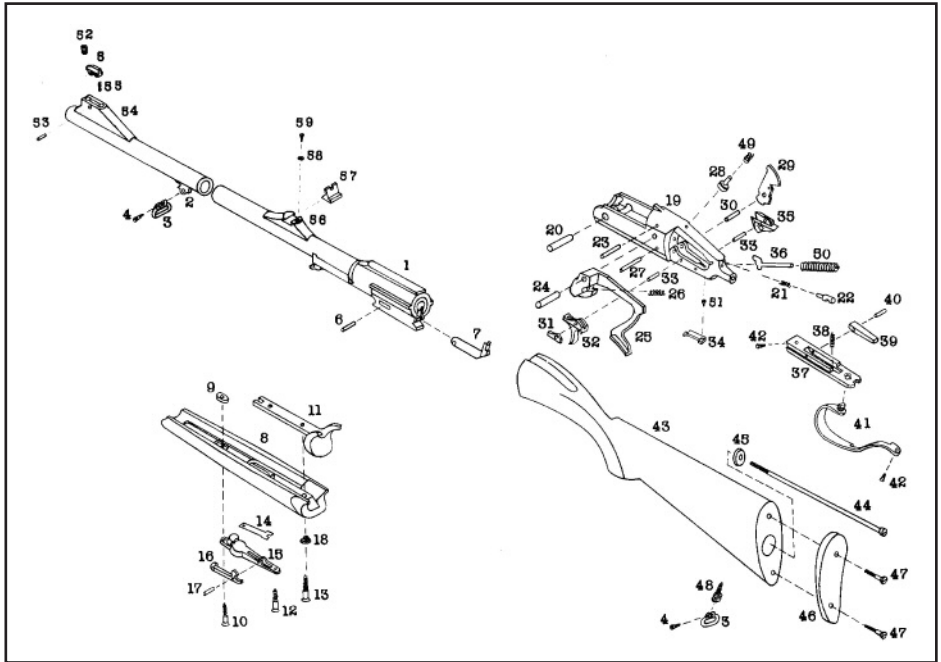

- | | | |
|-----------------------|------------------------------|------------------------------|
| 1. barrel | 22. firing pin | 44. stock screw |
| 2. sling swivel base | 23. firing pin retaining pin | 45. washer |
| 3. sling swivel ring | 24. locking lever pin | 46. buttplate |
| 4. pin | 25. locking lever | 47. woodscrew |
| 5. front sight | 26. locking lever spring | 48. stock sling swivel base |
| 6. extractor pin | 27. locking lever spring pin | 49. cocking indicator spring |
| 7. extractor | 28. cocking indicator | 50. mainspring |
| 8. forend | 29. hammer | 51. trigger spring screw |
| 9. forend nut | 30. hammer pin | 52. adjustment screw |
| 10. hinge screw | 31. sear | 53. front sight pin |
| 11. hinge | 32. trigger | 54. front sight base |
| 12. hinge screw | 33. trigger pin | 55. front sight spring |
| 13. hinge screw | 34. trigger spring | 56. rear sight base |
| 14. spring | 35. safety base | 57. rear sight |
| 15. catch housing | 37. trigger plate | 58. rear sight washer |
| 16. forend catch | 38. detent spring | 59. rear sight screw |
| 17. pin | 39. locking level detent | 60. extractor catch |
| 18. forend bushing | 40. detent pin | 61. extractor catch spring |
| 19. receiver | 41. trigger guard | 62. extractor catch pin |
| 20. hinge axis | 42. trigger guard screw | 63. safety button |
| 21. firing pin spring | 43. stock | 64. plunger |
| | | 65. plunger spring |

MODEL 18 EXPLODED VIEW ENLARGED

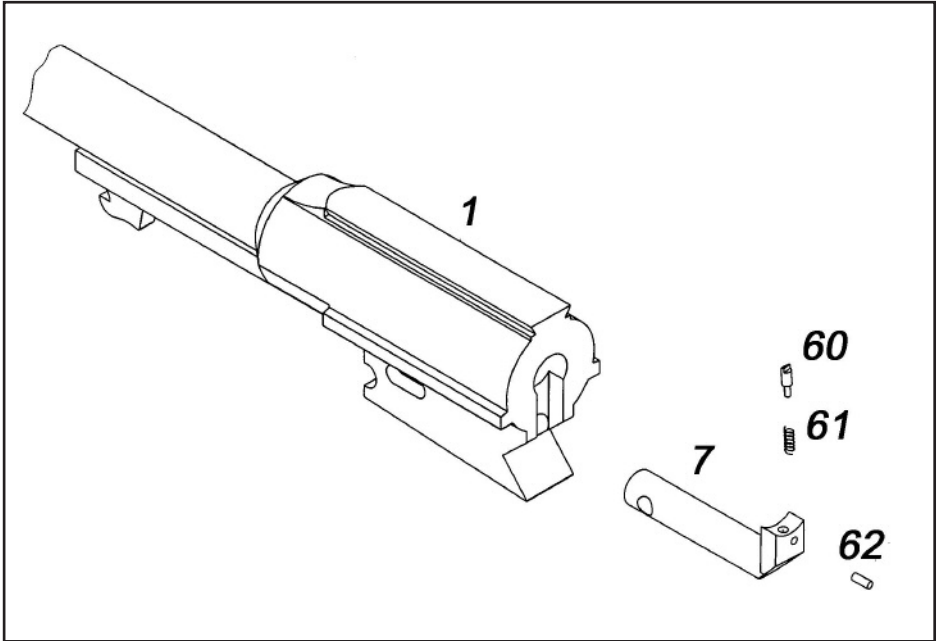

Model 18 Parts Lists

- 1. barrel
- 7. extractor
- 60. extractor catch
- 61. extractor catch spring
- 62. extractor catch pin



WARNING

Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.



ADVERTENCIA

A los niños les atraen las armas de fuego y los pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente. Le pueden dar una multa o enviarlo a la cárcel.

REMINGTON I.S.P.
c/o **USSG**
402 Richard Road
Rockledge, FL 32955

Manufacturer:

Izhevsky Mekhanichesky Zavod
8, Promyshlennaya str.,
426063 Izhevsk, Russia

Remington®

Remington is a trademark registered in the United States Patent and Trademark Office by Remington Arms Company, Inc.