 


TRI-SCREEN TIME & FUN

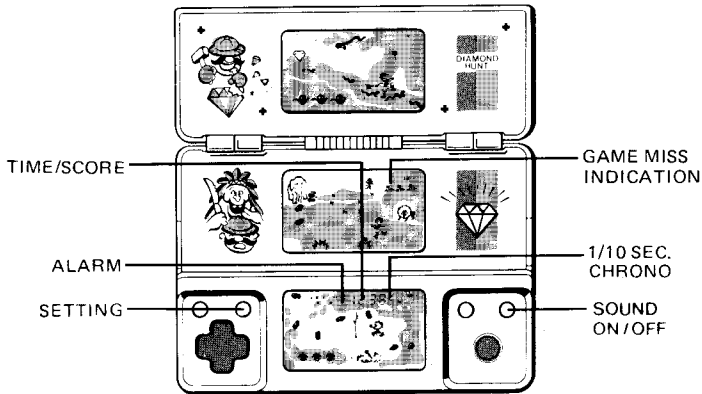

DIAMOND HUNT

 
 
Diamond Hunt

4 separate games to play!

Every Tri Screen Time & Fun offers you 4 exciting games to choose from. You can play a separate game on each of the three screens, or you can play one marathon game that lets you try to make your way through all three screens, one after another.

Get ready!

- 1) Insert 2 batteries (LR43 or SR43) with “+” sign up as illustrated in diagram.
- 2) Insert pen or paper clip in “ACL” opening.
- 3) Check to see that all patterns are displayed on screen.

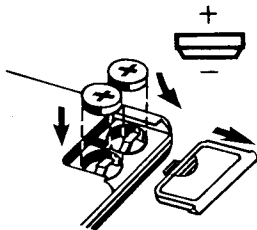

Get set!

Select game "A", game "B", game "C" or game "ABC" by pressing "GAME" button until desired game appears in screen. A high score will be displayed. Press "JUMP" button and you will hear a musical note. Then the game will start.

Go!

Move the Diamond Hunter by pressing the "DIRECTIONAL" button on the bottom left. Use the "JUMP" button to make the Diamond Hunter jump over threatening objects like rocks and poisonous snakes.

Game "A"

A crazed elephant in the middle screen throws rocks down to the lower screen. You must press the "JUMP" button to avoid the rocks, grab the vine, swing across the river. And avoid the falling rocks on the other side.

Scoring

Get 2 points for every rock you jump.

Game over

If the Diamond hunter either falls in the river or is hit by rocks 3 times, the game is over.

Game "B"

The elephant throws rocks. Angry witch doctors cast electric spells and a hungry lion wants to have you for lunch. You have to avoid all these dangers to survive.

Scoring

Get 50 points for every successful cross.

When the Diamond Hunter is hit or eaten three times the game is over.

Game "C"

Jump over the poisonous snakes. Find the Magic Axe and kill snakes on the ground and make your way to the Lost Diamond. Remember, you can't move forward while you have the Magic Axe, so you have to decide to get rid of it if you want to go on to the Lost Diamond. Beware of the giant snake on the tree, don't jump right under it or you might get bitten.

Scoring

Get 2 points for every snake you jump over. Get 5 points for every snake you kill with the Magic Axe. Get a 50 point bonus for reaching the Lost Diamond.

Game over

If the Diamond Hunter is bitten by a snake three times the game is over.

Game "ABC"

Plays all the above, combined.

Game over

Losing the Diamond Hunter three times in any of the three screens means the game is over.

The maximum score is 9999.

This unit will return to "TIME 1" mode in 30 seconds.

Silent Running


To play games without the giveaway musical tones and game noises, simply push the SOUND OFF (🎵 OFF) button after you select the desired game.

Time functions

Your Tri-screen Time & Fun has 5 time functions. Time 1, Time 2, Alarm, Date and stopwatch. To view a specific mode, push the TIME button until the appropriate function appears.

Time 1

 Quartz accurate timing, this mode can be used as a watch.




Setting

Display TIME 1 mode. Press "SET" button with the tip of a pen until "Time 1" sign flashes. Press jump button to set minutes. Press left directional button to set hour. Press SET button to end setting. Make sure "Time 1" sign ceases to flash.

Time 2

 Useful for keeping track of the exact time in another time zone.



Setting

Display TIME 2 mode.

Press SET button until "Time 2" sign flashes.

Set time in same manner as for "Time 1"

Alarm

Use as a wake-up system or as a reminder for important appointments.



Setting

Display ALARM mode. Press SET button until "ALM" sign flashes in screen. Set alarm time in same manner as for "Time 1" and "Time 2". Stop alarm sound by pressing any game key.

Cancel alarm

Press "Alarm Off" button (🔊 OFF) while the until is in Alarm setting mode.

Stopwatch

Measure time accurately to nearest 1/10 sec.

 


Operation

- Display Stopwatch mode (CHR) by pressing "TIME" button until CHR appear in screen.
- Start time by pressing "CHR START" button.
- Display Lap time by pressing "CHR LAP" button.
- Continue Lap time by pressing "CHR LAP" button again.
- Stop time by pressing "CHR STOP" button.
- Reset to zero by pressing "CHR RESET" button.

Date

Displays day and month.

**Date setting**

Display date mode. Press "SET" button until "Date" sign flashes. Set month with left directional button. Set day with jump button.

Specifications:

Power source: Button cell (2 x LR43 or 2 x SR43)

Battery life: Time display only: 4 months
One hour game per day: 3 months.

Operating Temperature: 10°C – 40°C

CAUTION

Avoid extreme temperatures such as freezing or direct sunlight.

Do not subject unit to heavy shock.

Do not use thinner to clean screen.

Do not press heavily on display screen.

www.handheldmuseum.com

©1982 VTL MADE IN HONG KONG

91-0124-00