Menu Shortcuts

PROJECT goes directly to the Settings screen of the currently loaded project

DISPLAY toggles through brightness & contrast adjust using the **DATA** wheel

MENU+SELECT goes directly to the Files screen of the currently loaded project

MENU+PROJECT goes directly to the Change/New Project screen

MENU+DISPLAY goes directly to the System Menu

MENU+TIMECODE goes directly to the Timecode Settings screen of the currently loaded project

MENU+RETAKE goes directly to the Trash screen of the currently loaded project

MENU+MARKER goes directly to the Markers screen of the currently loaded project

Transport Shortcuts

STOP+REW locates to the beginning of recorded audio STOP+F FWD locates to the end of recorded audio

Basic Menu Reference

Main Menu > Project Menu > Settings

Settings screen for currently loaded project

Main Menu > Project Menu > Settings > Timecode
Enable/Disable Timecode functionality

Main Menu > Project Menu > Settings > Timecode > Timecode Settings

Timecode settings for currently loaded project

Main Menu > System Menu

Audible Alerts

Immediate Record

Power Readings

Audio Clock Information

Media Management

Media Information

Media Speed Check

Reformat Media

Default Project Settings

Project Templates

Main Menu > Display Menu

Backlight Timeout

TEAC CORPORATION