Pad	Compatible / Zones	Suggested Settings
Alesis- Drum pad	Yes – Single Zone only	Standard settings work Ok
Alesis- Cymbal pad	Yes- Single zone only	Standard settings work Ok
RET Percussion- 10"	Yes- Dual zone	(Gain-12, Velocity curve-SP2, Threshold-12,)
and 13" drums		
Pintech Mesh Head	Yes- Dual zone	 Set gain knob on drum at ½. Set crosstalk for both triggers at 7 Set gain for center trigger to 10 and leave the rim trigger around 20 On BFD increase the trim level for the center trigger.
Pintech PC Series – Electronic Trigger Cymbal- 16" Crash bell and bow triggers	Yes- Dual zone	Must use Ride cymbal input for bell (switch trigger). No velocity information is registered on switch type triggers.
Pintech PC Series –	Yes- Dual zone- edge	 Set the trigger type to PS (Piezo-switch).
Electronic Trigger Cymbal- 14"	choke	 Make the switch note number the choke MIDI note number for example in BFD set the strike trigger to Cymbal 1 (MIDI note 54) and switch or choke function to cymbal choke (MIDI note 57.) No velocity information is sent on switch type triggers.
Roland Mesh Head	Yes- Dual zone	Adjust crosstalk and gain for triggering on both zones
Roland PD-8	Yes- Dual zone capable if using input jack 4 (Ride.) Otherwise single zone on other inputs	Use the Ride cymbal input (Jack 4) for rim triggering. Make sure trigger type is set to P/S. No velocity information is sent on switch type triggers.
Roland CY-12	Yes- Dual zone and choke	 Bow / Bell input works on the Ride cymbal input - jack 4. (PS setting) Make the switch note number the choke MIDI note number for example in BFD set the strike trigger to Cymbal 1 (MIDI note 54) and switch or choke function to cymbal choke (MIDI note 57.)
Pintech Hi Hat stand and controller	Yes- Using the continuous controller function- Single Zone	Make sure BFD "All Hi Hats Variable" is checked in the MIDI section. Hi Hat controller module to Hi Hat input jack on Trigger IO
Simmons Drum Pads*	Yes- Single zone	Standard settings work Ok
Yamaha TP120SD	Yes- Single zone only	Rim trigger switch doesn't transmit- Standard settings ok

^{*} Refers to Guitar Center Simmons Drum pads