

MANUAL PART NUMBER: 400-0371-001

MT107-203

8 INPUTS, CAT5, SINGLE CHANNEL FOR MULTI-TASKER™ MATRIX SWITCHER USER'S GUIDE





MULTI-TASKER™

TABLE OF CONTENTS

	Page
PRECAUTIONS / SAFETY WARNINGS	2
GENERAL	2
INSTALLATION	2
CLEANING	2
FCC / CE NOTICE	2
ABOUT YOUR MT107-203	3
TECHNICAL SPECIFICATIONS	3
PRODUCT DESCRIPTION	4
APPLICATION DIAGRAM	5
DIAGRAM 1: TYPICAL CONFIGURATION	5
DIAGRAM 2 INTERNAL VIEW	6
INSTALLING YOUR MT107-203	7
OPERATION	7
RS-232 CONTROL	7
DESCRIPTION OF COMMANDS	7
TROUBLESHOOTING GUIDE	7
NO DISPLAY	7
ALTINEX POLICY	8
LIMITED WARRANTY/RETURN POLICY.	8
CONTACT INFORMATION	8

PRECAUTIONS / SAFETY WARNINGS

Please read this manual carefully before using your MT107-203. Keep this manual handy for future reference. These safety instructions are to ensure the long life of your MT107-203 and to prevent fire and shock hazard. Please read them carefully and heed all warnings.

1.1 GENERAL

 Qualified ALTINEX service personnel, or their authorized representatives must perform all service.

1.2 INSTALLATION

- To prevent fire or shock, do not expose this unit to rain or moisture. Do not place the MT107-203 in direct sunlight, near heaters or heat radiating appliances, or near any liquid. Exposure to direct sunlight, smoke, or steam can harm internal components.
- Handle the MT107-203 carefully. Dropping or jarring can damage the card.
- Do not pull the cables that are attached to the MT107-203.
- Insert the card carefully into the slots of the Multi-Tasker™ without bending any edges.

1.3 CLEANING

 Clean only the connector area with a dry cloth. Never use strong detergents or solvents, such as alcohol or thinner. Do not use a wet cloth or water to clean the card. Do not clean or touch any component or PCB.

1.4 FCC / CE NOTICE

 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- Any changes or modifications to the unit not expressly approved by ALTINEX, Inc. could void the user's authority to operate the equipment.



ABOUT YOUR MT107-203

MT107-203 8 INPUTS, CAT-5, SINGLE CHANNEL

The MT107-203 is an 8 CAT-5 Input expansion card for use with the MT107-100 64X64 Matrix Engine. The MT107-203 is capable of receiving Altinex CAT-5/6 Twisted Pair Standard signals.

Each MT107-203 connects to the Input Connector on the MT107-100 Matrix Engine. Up to 7 MT107-203's may be connected to the Engine. Each card is connected with the Engine via specially provided, high bandwidth video cables.

As part of the **MT107-100** Matrix Engine, the **MT107-203** has built-in special features. Signal detection circuitry allows the user to determine the presence of an input signal on any channel.

Video Input signals are buffered to the matrix system through high bandwidth differential receivers.

Altinex's software and hardware allow for the switching of any input to output combination and prevents illegal switching combinations that may damage components.

TECHNICAL SPECIFICATIONS

2

117407 000	
MT107-203	
8	
8 RJ-45 Female	
Altinex CAT-5/6	
Twisted Pair Standard	
VGA through UXGA, C-Video,	
S-Video, Stereo Audio	

Table 1. MT107-203 General

MECHANICAL	MT107-203
Enclosure Slots Required	1 Slot per Card
Weight	0.4 lb (0.2 kg)
Connector Panel	Black Anodized
T° Operating	10°C-50°C
T° Maximum	75°C
Humidity	90% non-condensing
MTBF (calc.)	38,000 hrs

Table 2. MT107-203 Mechanical


ELECTRICAL	MT107-203
Input	
CAT-5/6 Twisted Pair	Video/Sync/Audio Signals Altinex Standard
Analog Signal Level	1.5V p-p max.
Output	
Bus output to Matrix Engine	0dB Gain
Bandwidth	
Bandwidth	300 MHz @ -3dB

Table 3. MT107-203 Electrical



PRODUCT DESCRIPTION

4

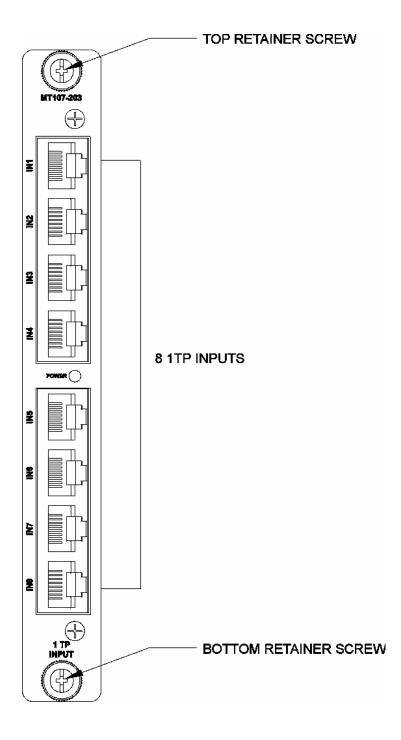

APPLICATION DIAGRAM

5

DIAGRAM 1: TYPICAL CONFIGURATION


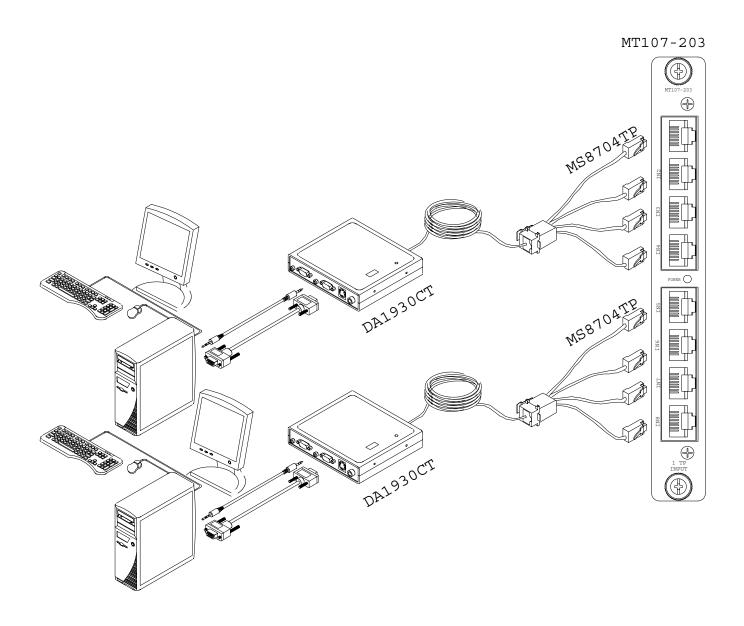




DIAGRAM 2 INTERNAL VIEW

MT107-203, 8 CAT-5/6 INPUTS, SINGLE CHANNEL



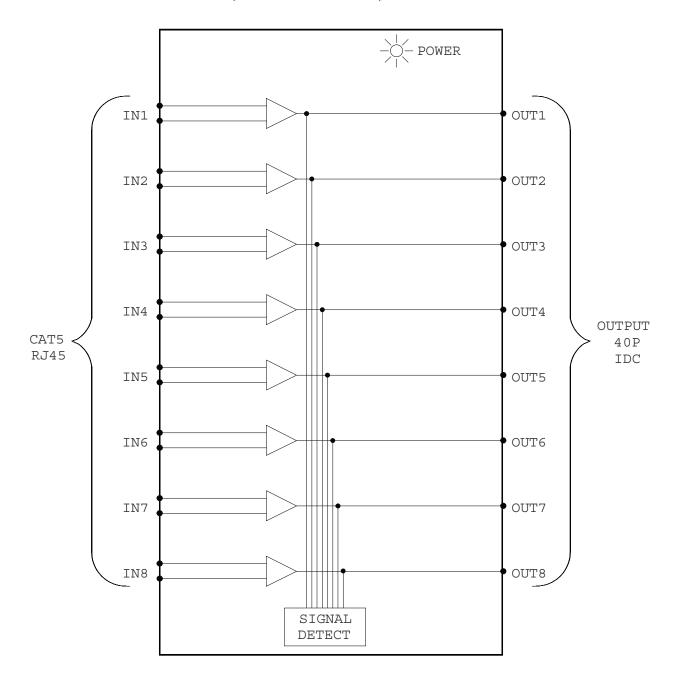

INSTALLING YOUR MT107-203

- Step 1. Locate the MT107-100 currently installed in the Multi-Tasker™. Ensure there are enough empty slots in the enclosure to allow for the one or more MT107-203's to be installed.
- **Step 2.** Route the ribbon cables through the notch in the add-on boards and connect to the MT107-100 base assembly using special high bandwidth cables provided with the Make sure that the cable connector is secured in the socket of the input connector card.
- Step 3. Carefully, slide the MT107-203 into a slot in the Multi-Tasker™ Enclosure.
- **Step 4.** Secure each card by tightening the retainer screws at the top and bottom of each card.

OPERATION

7.1 RS-232 CONTROL

The MT107-203 has many advanced remote when used control capabilities in Multi-Tasker™ Enclosure as part of an MT107-100 Matrix Switcher. These capabilities are accessible through standard RS-232 communication. The actual controlling can be accomplished through a computer control system or any other device capable of sending RS-232 commands.

7.2 DESCRIPTION OF COMMANDS

Please, see the MT107-100 User's Guide for a full listing of commands available for the MT107-203 as part of a Multi-Tasker™ Matrix Switcher.

TROUBLESHOOTING GUIDE

We have carefully tested and have found no problems in the supplied MT107-203. However, we would like to offer suggestions for the following:

8.1 NO DISPLAY

Cause 1: The source has a problem.

Solution:

Check the source and make sure that there is a signal present and all source connections are correct. If the source is working and there is still no display, see Cause 2.

Cause 2: The input signal is not detected.

Solution 1: In MTSetup™, or other control software, send the [SDI] command. This command is detailed in the MT107-100's User Guide. Verify a signal is detected for the input number in question. If a signal is not detected, see Solution 2.



Solution 2: Verify the MT107-203 is connected

to the MT107-100 and that the cable is in good condition. If a signal is detected, see Cause 3. If there is no signal detected, please, call Altinex

at (714) 990-2300.

Cause 3: The path is not selected.

Solution: Make sure the input to output path is

correctly selected.

For example, Input 17 is connected to Output 1 in the matrix engine. Physically, the source signal is connected to Input 17 and the display cable is connected to Output 1. See RS-232 accessible commands in Section 7 of the MT100-107's User Guide for

command details.

If no display is present, see

Cause 4.

Cause 4: Cable connections are incorrect.

Solution: Make sure that cables are properly

connected. Also, make sure that the continuity and wiring are good. If there is still no display present, see

Cause 5.

Cause 5: The display has a problem.

Solution: Make sure the display has power

and is turned ON. If there is still no display, please call Altinex at

(714) 990-2300.

ALTINEX POLICY

۵

9.1 LIMITED WARRANTY/RETURN POLICY

Please see the Altinex website at www.altinex.com for details on warranty and return policy.

9.2 CONTACT INFORMATION

ALTINEX, INC

592 Apollo street

Brea, CA 92821 USA

TEL: 714 990-2300

TOLL FREE: 1-800-ALTINEX

WEB: www.altinex.com

E-MAIL: <u>solutions@altinex.com</u>

