



Clever Features, Contractor Friendly

AMIS215EQ

Stereo 15 band 2/3 Octave Graphic Equalizer




AMIS31EQ

Mono 31 band 1/3 Octave Graphic Equalizer



Installation And Operation Manual

Introduction

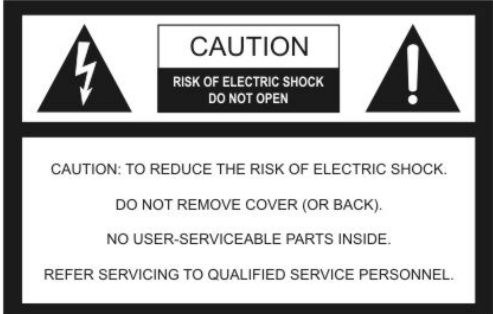The Australian Monitor Installation Series AMIS215EQ & AMIS31EQ are single rack unit graphic equalizers. Both equalizers feature constant Q circuitry, selectable 6dB or 12dB slider range, balanced XLR, 6.35mm TRS & unbalanced RCA inputs & outputs, EQ bypass switches, ground lift switches, output level controls & overload LED's. These features are usually associated with equalizers many times the price of these Australian Monitor Installation Series graphic EQ's. The AMIS215EQ & AMIS31EQ are extremely well featured graphic equalizers at a contractor friendly price.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>WARNING ! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.</p>	 <p>This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p> <p>Caution: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.</p> <p>To prevent electric shock, match wide blade of plug to wide slot, fully insert.</p>

Front Panel AMIS215EQ

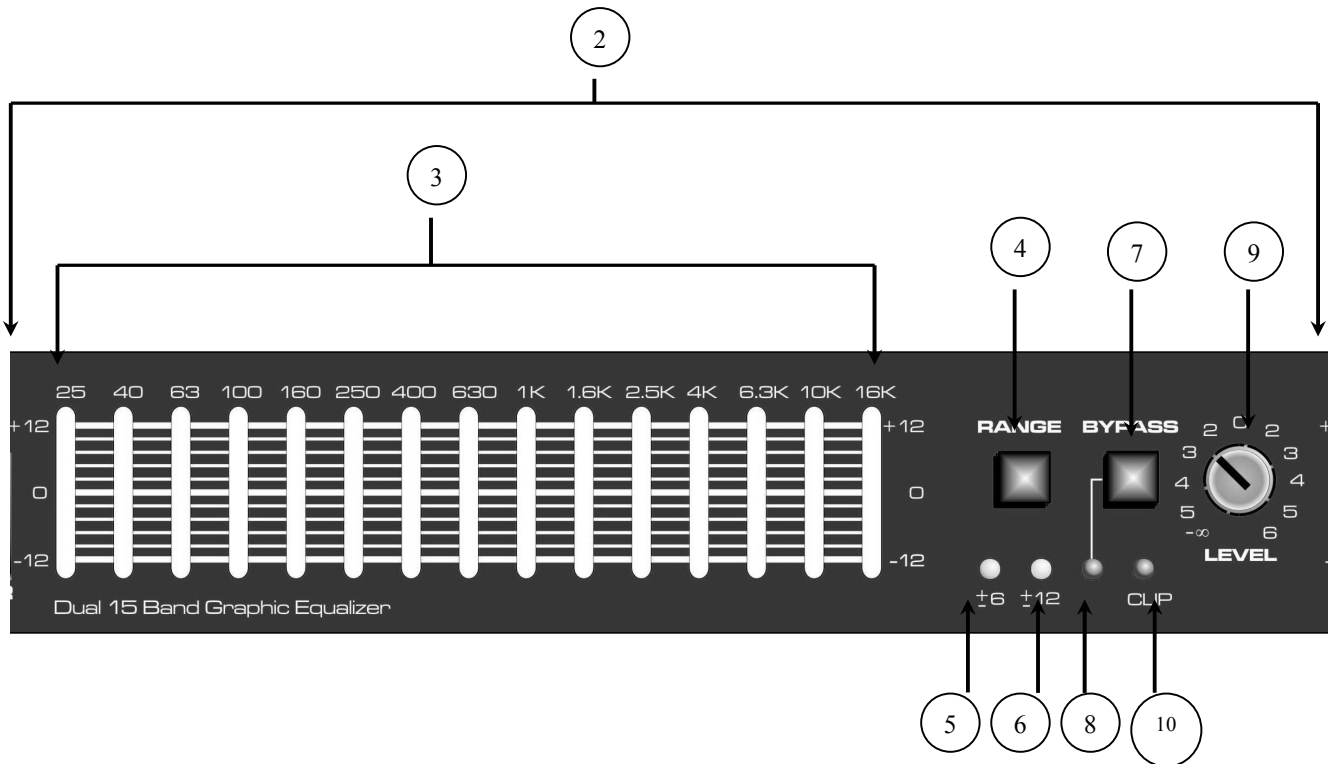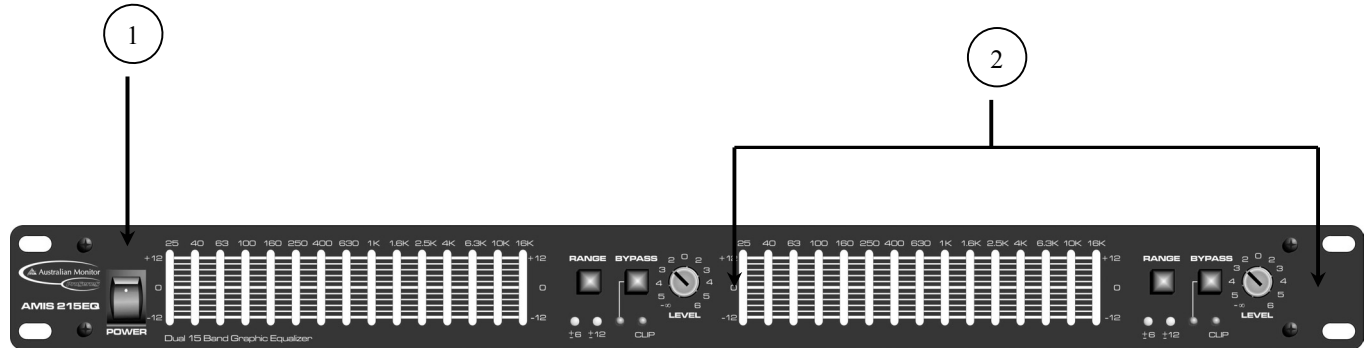

1. Power Switch

This switches the mains power "on" to the unit.

2. Channel 2 Equalizer Section

This section refers to the controls for channel 2. This section is duplicated for channel 1.

3. EQ Filter sliders

These sliders control the output level of the 15 band pass filters in each channel. The centre position will give a flat response.

4. Range Switch.

This switch will change the range of the filter sliders from +/-6db to +/-12dB maximum cut or boost. This switch affects all channel sliders.

5. +/-6dB LED.

This LED will illuminate green when the range switch is set to 6dB.

6. +/-12dB LED.

This LED will illuminate yellow when the range switch is set to 12dB.

7. Bypass Switch.

This switch routes the channels input signal directly to the outputs, bypassing all EQ circuitry. This switch is used to compare EQ'd signal with unequalized material.

8. Bypass LED.

This red LED indicates that the bypass switch is activated for this channel.


9. Channel Level Control

This level control can either cut or boost the output level for each channel. The centre position will give unity gain.

10. Clip LED.

This red LED indicates if any section of the equalizer is within 5dB of clipping. Occasional blinking of this LED is acceptable but a steadier illumination indicates either the EQ's level controls should be reduced or gain from the preceding audio component should be reduced to avoid distortion.

Front Panel AMIS31EQ

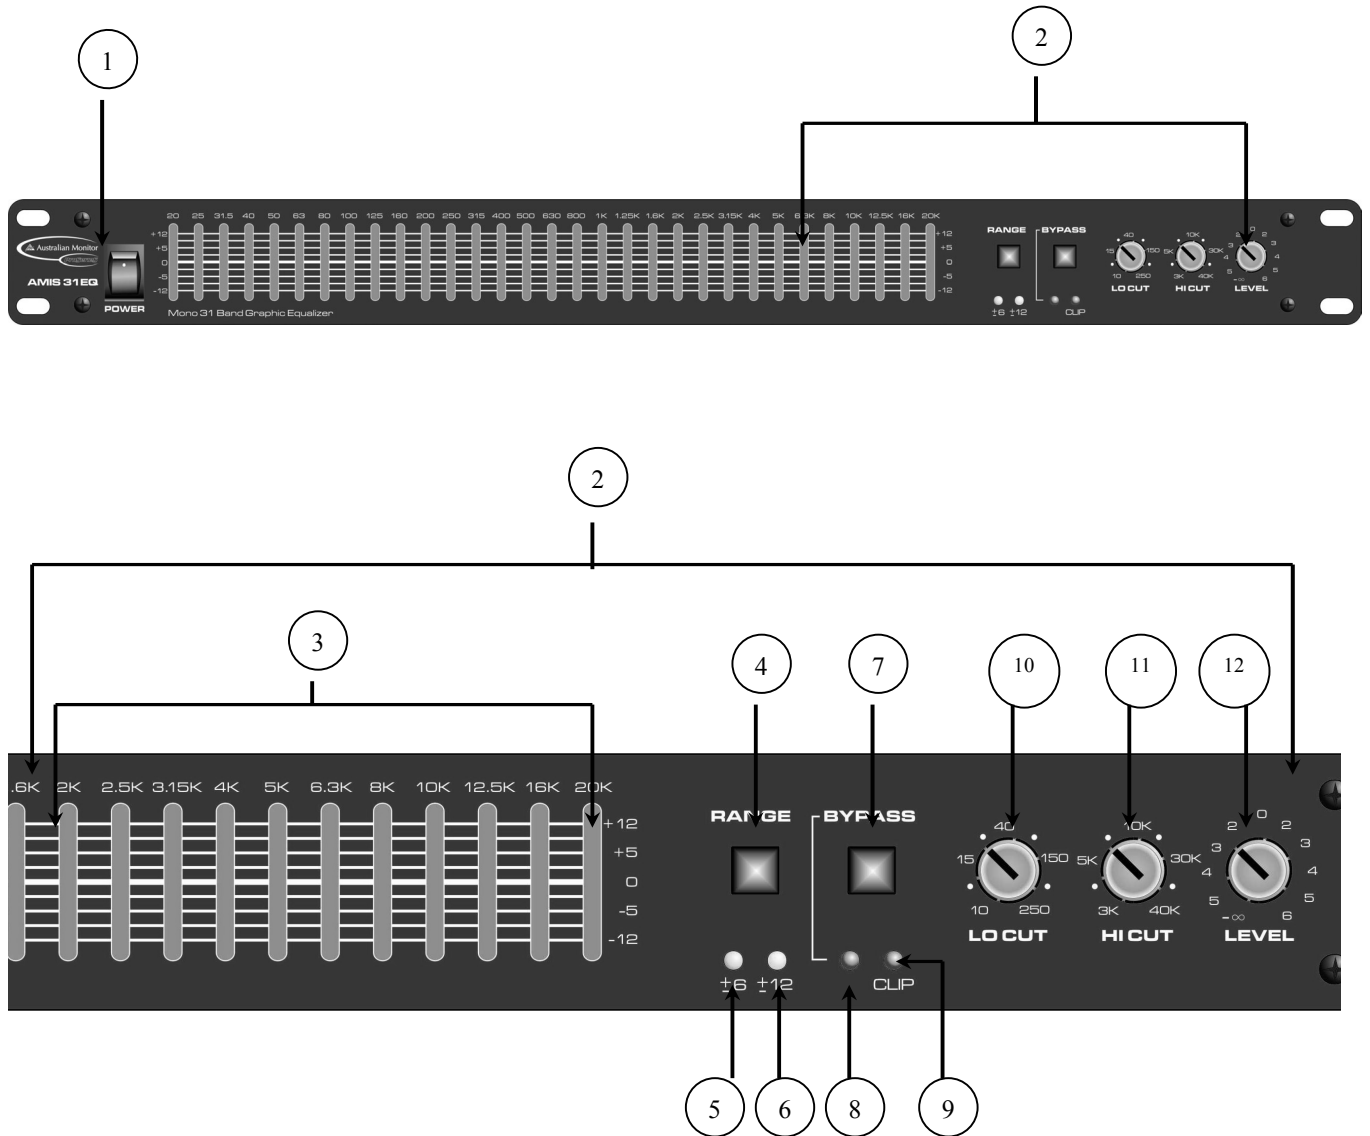

1. Power Switch

This switches the mains power “on” to the unit.

2. Enlarged Equalizer Section

This section refers to the controls for equalizer.

3. EQ Filter sliders

These sliders control the output level of the 31 band pass filters in each channel. The centre position will give a flat response.

4. Range Switch.

This switch will change the range of the filter sliders from +/-6db to +/-12dB maximum cut or boost. This switch affects all channel sliders.

5. +/-6dB LED.

This LED will illuminate green when the range switch is set to 6dB.

6. +/-12dB LED.

This LED will illuminate yellow when the range switch is set to 12dB.

7. Bypass Switch.

This switch routes the channels input signal directly to the outputs, bypassing all EQ circuitry. This switch is used to compare EQ'd signal with unequalized material.

8. Bypass LED.

This red LED indicates that the bypass switch is activated for this channel.

9. Clip LED.

This red LED indicates if any section of the equalizer is within 5dB of clipping. Occasional blinking of this LED is acceptable but a steadier illumination indicates either the EQ's level controls should be reduced or gain from the preceding audio component should be reduced to avoid distortion.

10. Low Cut Filter.

This control determines the roll off frequency of the AMIS31EQ's High Pass Filter (HPF). The roll off frequency can be adjusted from 10Hz to 250Hz. The HPF can be used to eliminate hum or to prevent low frequency resonance.


11. High Cut Filter.

This control determines the roll off frequency of the AMIS31EQ's Low Pass Filter (LPF). The roll off frequency can be adjusted from 3kHz to 40kHz. The LPF can be used to eliminate high frequency noise from the audio system.

12. Level Control.

This level control can either cut or boost the output level for each channel. The centre position will give unity gain.

Back Panel AMIS215EQ/AMIS31EQ

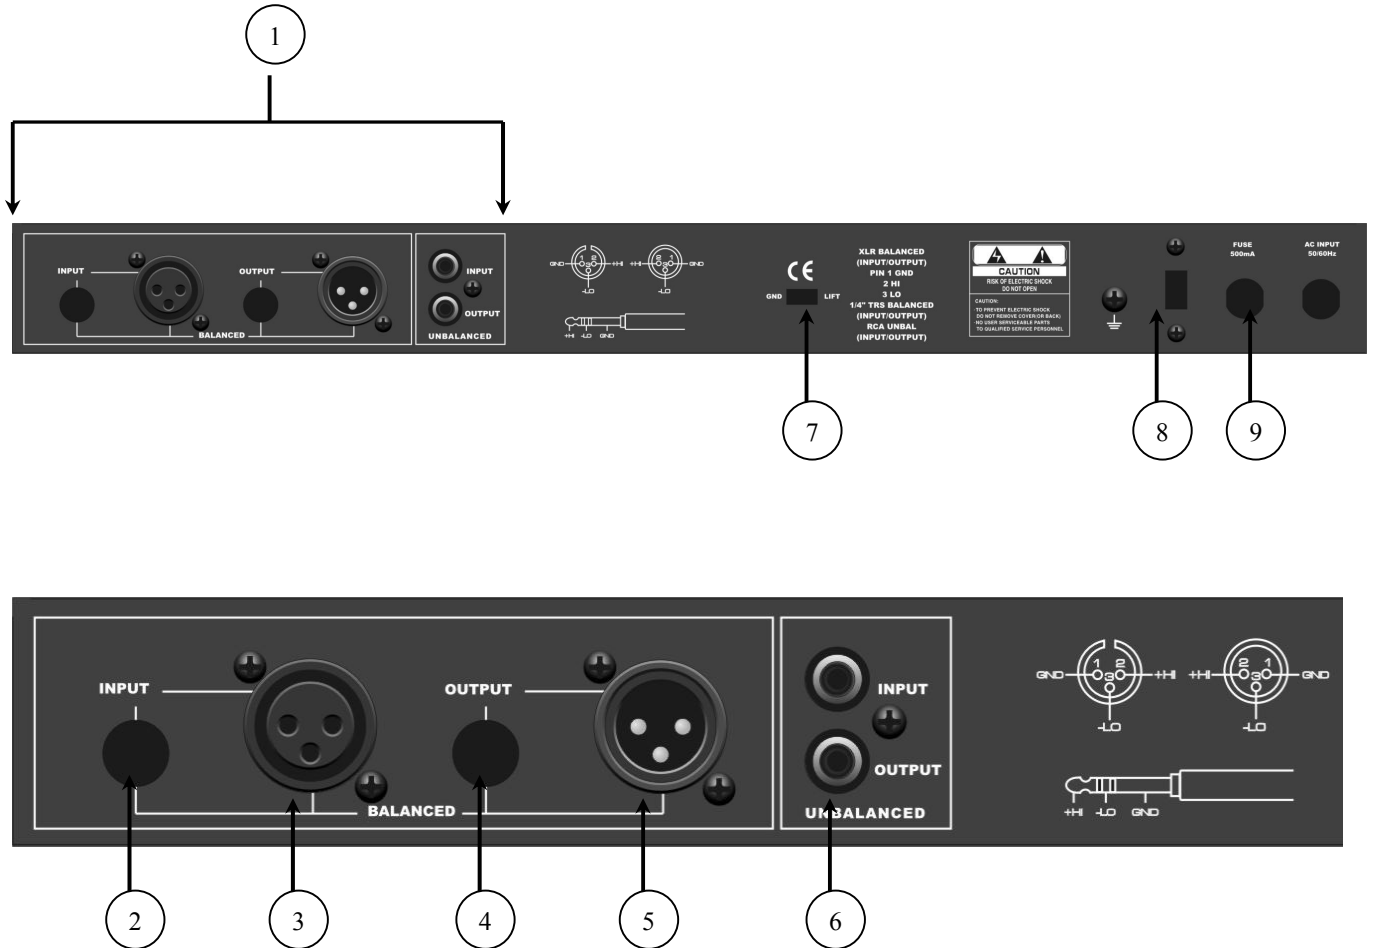

1. Back Panel Section.

This section refers to the back panel for the AMIS31EQ. This section is duplicated for channel 1 & channel 2 of the AMIS215EQ.

2. 6.35mm TRS Input Jack.

This line level input accepts a balanced 6.35mm TRS jack. The balanced connector should be wired tip=Positive, Ring=Negative & sleeve=Ground.

3. Balanced XLR Input.

This input again accepts a line level signal with the XLR wired Pin2=Positive, Pin3=Negative & Pin1=Ground.

4. 6.35mm TRS output Jack.

This is the line level output of this channel. The 6.35mm jack should be wired as point (2).

5. Balanced XLR output.

This is the balanced XLR line level output of this channel. The XLR should be wired as point (3).

6. Unbalanced RCA Input/Output.

These RCA Input/Outputs provide an unbalanced line level input & output. The RCA connectors should be wired Tip=Positive Sleeve=Ground.

Note: Only one style of connector should be used at one time.

7. Ground Lift Switch.

The ground lift switch is used to disconnect the signal earth from the mains & chassis earth. This is used to help eliminate hum caused by ground loops.

8. Mains Voltage Selector.

This switches mains voltage from 230VAC to 240VAC. Please ensure that this switch is set to the correct voltage for your part of the world.

9. Fuse Holder.

Both the AMIS215EQ & AMIS31EQ have a 500mA mains voltage fuse.

Set Up & Operation.

Graphic equalizers are used to modify the frequency contour of a sound system. The graphic equalizer provides a solution to a number of problems that can be posed by any acoustically challenging environment. The AMIS series of graphic equalizers are designed to accept a line level signal from a mixer, professional processor or insert point of an AMIS series amplifier. The following is a quick set up guide for the AMIS215EQ & AMIS31EQ.

1. Set the EQ level controls to the centre detent 0dB position.
2. Select the Bypass switch to the "on" position (red LED illuminated).

3. Set all slider controls to the centre detent 0dB position.
4. Set the range switch to the 6dB position (green LED illuminated).
5. Apply signal to the audio system.
6. Release the bypass switch (red LED off)
7. If the overload LED illuminates you may need to turn the level control down until the LED flashes occasionally or is off.
8. Equalize your audio system as desired.
9. If there is not enough adjustment available to achieve the equalization required, you may need to go back to step 2 & repeat the equalization process with the range switch in the 12dB position (yellow LED illuminated).

AMIS215EQ/AMIS31EQ Specifications

1. Equalizer

Bands;	AMIS215EQ; 2 x 15 2/3 Octave ISO Spacing from 20Hz – 20kHz
	AMIS31EQ; 31 1/3 Octave ISO Spacing from 20Hz - 20kHz
Type;	Constant Q
Accuracy;	3% Centre Frequency
Travel;	20mm Positive Centre Detent
Range;	+/- 6dB or +/- 12dB selectable

2. Inputs

Type;	Active balanced/unbalanced
Connectors;	3 pin XLR, 6.35mm TRS balanced, RCA unbalanced
Impedance;	20k Ohms balanced, 15k Ohms unbalanced
Max level;	+22dBm (level control at centre)

- 3. Outputs**
- Type;** Active balanced/unbalanced
 - Connectors;** 3 pin XLR, 6.35mm TRS balanced, RCA unbalanced
 - Impedance;** <150 Ohms Typical
 - Max Level;** +22dbm (2k ohms)
+18dBm (600 ohms)
- 4. Rfi Filters;** Yes
- 5. Passive Bypass Switches;** Yes
- 6. Overload LED Switches;** 5dB below clipping
- 7. Low Cut Filter;** 10-250Hz, 12dB per octave
- 8. High Cut Filter;** 3kHz-40kHz, 12dB per octave
- 9. Frequency Response;** 20Hz-20kHz
- 10. IM Distortion (SMPTE);** 0.005%
-
- 11. Signal to Noise Ratio;** -94dB (20kHz noise bandwidth)
- 12. Channel Separation;** 50dB
- 13. Common Mode Rejection;** 50:1
- 14. Voltage;** 190-250VAC, 50Hz
- 15. Dimensions;** 44.5mm (h) x 483mm (w) x 216mm (d)
- 16. Weight;** 2.5kg

Notes

AUSTRALIA and NEW ZEALAND

www.australianmonitor.com.au

Sydney

(NSW & ACT Sales)

Private Bag 149, Silverwater NSW 1811
149 Beaconsfield Street, Silverwater NSW 2128
Ph: (02) 9647 1411
Fax: (02) 9648 3698
E-mail: nsw@audiotelex.com.au

Brisbane

(Qld Sales)

P.O. Box 871, Fortitude Valley QLD 4006
42 Commercial Road, Fortitude Valley QLD 4006
Ph: (07) 3852 1312
Fax: (07) 3252 1237
E-mail: qld@audiotelex.com.au

Perth

(WA Sales)

P.O. Box 404, North Perth WA 6906
299 Fitzgerald Street, West Perth WA 6005
Ph: (08) 9228 4222
Fax: (08) 9228 4233
E-mail: wa@audiotelex.com.au

Melbourne

(Vic & Tas Sales)

P.O. Box 131, Blackburn South VIC 3130
22/277 Middleborough Road, Box Hill VIC 3128
Ph: (03) 9890 7477
Fax: (03) 9890 7977
E-mail: vic@audiotelex.com.au

Adelaide

(SA & NT Sales)

P.O. Box 157, Hindmarsh SA 5001
31 Walsh Street, Thebarton SA 5031
Ph: (08) 8352 4444
Fax: (08) 8352 4488
E-mail: sa@audiotelex.com.au

Auckland

(NZ Sales)

P.O. Box 512, Albany 1331
Unit B, 11 Piermark Drive, Albany 1331
Ph: (09) 415 9426
Fax: (09) 415 9894
E-mail: audiotlx@nznet.gen.nz

EUROPE/ASIA/MIDDLE EAST

www.australianmonitor.com.au

International Sales

Private Bag 149, Silverwater NSW 1811
149 Beaconsfield Street, Silverwater NSW 2128
Australia
Ph: 61-2- 9647 1411
Fax: 61-2-9748 2537
E-mail: international@audiotelex.com.au

USA/CANADA/SOUTH AMERICA

www.australianmonitor.com

Australian Monitor Audio Inc.

PO Box 3126, Lynnwood, WA 98046
Ph: 425 673 5175
Fax: 425 673 7825
E-mail: sales@australianmonitor.com