

Features:

- Two-way active speaker with one 8" woofer and one 1" driver.
- Cabinet is made tech from polypropylene and special high-tech material. It's durable, anti-shock and has good damping characters.
- Voice coil in the 8" woofer is made from Ø35mm copper cladding aluminium ribbon wire.
- Heavy duty protective grille.
- Rotatable 90° x 60° (HxV) dispersion horn makes it suitable for any performance purposes.
- Molded-in pole mount, easily suspended.
- Arrayable vertically in 4 layers or horizontally in more than 8 columns.



Model: XR8P

Technical Specifications

System:	Built-in crossover two way full range active speaker	
Driver Quantity:	8"x1(Bass)	1 xØ 34mm Driver
Frequency Response(-3dB):	65Hz-18KHz	
Frequency Response(-10dB):	55Hz-18KHz	
Max Sound Level(dB/1M):	110dB	
Level Adjust Range:	± 12dB(100Hz)- Bass ± 10dB(10KHz)- Treb	
Output Power:	100W(Bass)+50W(Treb)	
Distortion:	Line-0.02%, Microphone-0.04%	
Tweeter Dispersion(HxV):	90° X60°	
Load Impedance:	Treb - 8Ohm, Bass - 8 Ohm	
Input Impedance:	Line - 20KOhm, Microphone - 10KOhm	
Connectors:	XLR K3P	
Power Supply:	AC 115V/230V, 50/60Hz	
Dimensions(WxDxH mm/pcs):	277X265X407mm	
Packing Dimensions(WxDxH mm/pcs)	355X325X470mm	
Net Weight(Kg/pcs):	8.6Kg	
Gross Weight(Kg/pcs):	10.1Kg	

www.australianmonitor.com.au

Distributed by Audio Telex Communications Pty Ltd

EUROPE/ASIA/MIDDLE EAST

Phone: 61 2 9647 1411

Email: international@audiotelx.com.au

SYDNEY (NSW & ACT SALES)

Phone: (02) 9647 1411

Email: nsw@audiotelx.com.au

ADELAIDE (SA & NT SALES)

Phone: (08) 8352 4444

Email: sa@audiotelx.com.au

MELBOURNE (VIC & TAS SALES)

Phone: (03) 9890 7477

Email: vic@audiotelx.com.au

PERTH (WA SALES)

Phone: (08) 9228 4222

Email: wa@audiotelx.com.au

BRISBANE (QLD SALES)

Phone: (07) 3852 1312

Email: qld@audiotelx.com.au


AUCKLAND (NZ SALES)

Phone: (09) 415 9426

Email: sales@audiotelx.co.nz

www.audiotelx.com.au

ABN 78001345482 Incorporated in NSW

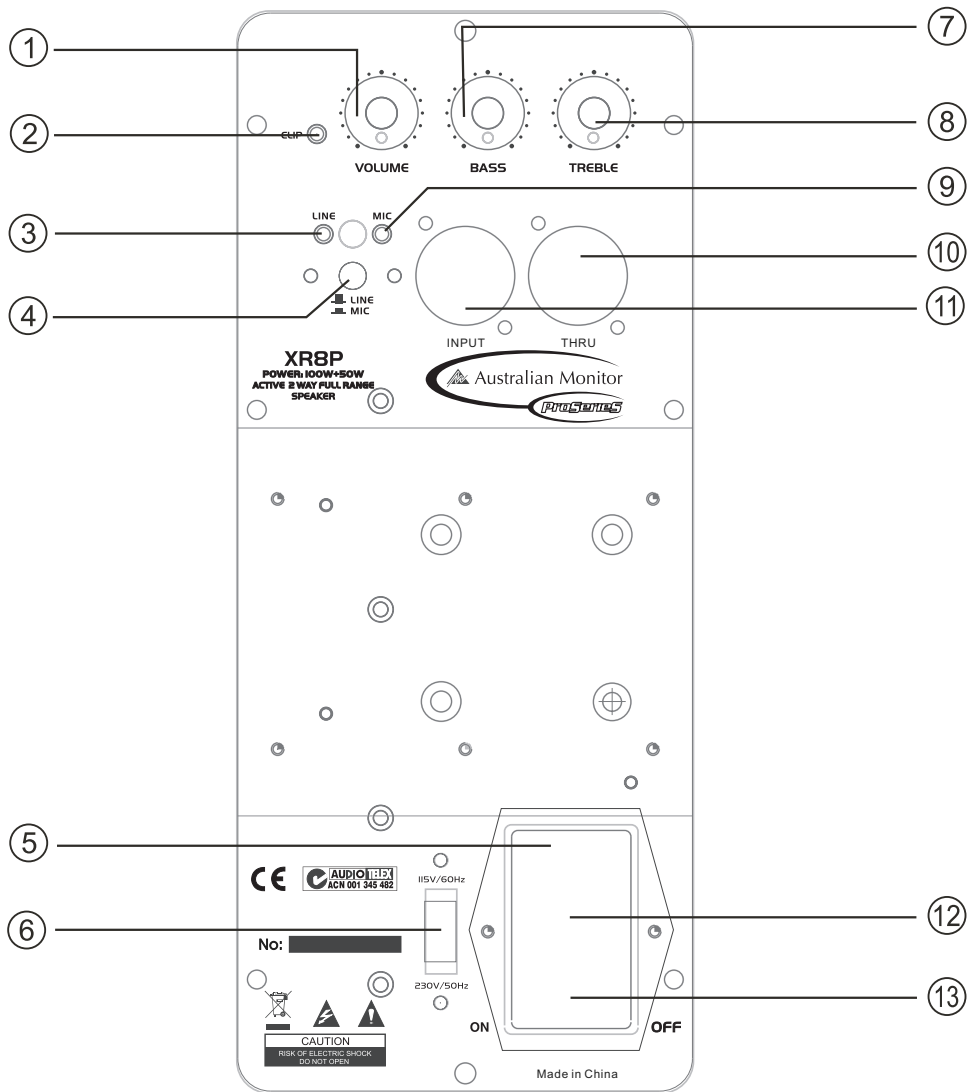

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Volume control. 2. Clip indicator. 3. Line input signal presence indicator. 4. Line/microphone selector. 5. Power supply input. Make sure that the voltage selector is set for your country's correct voltage. 6. 115V/230V voltage input selector. Make sure that the voltage selector is set for your country's correct voltage. | <ol style="list-style-type: none"> 7. Bass control. 8. Treble control. 9. Microphone input signal presence indicator. 10. Line/microphone output. (Direct connection to input) 11. Line/microphone input. 12. Protection fuse. Use only fuses of a 2.5 Amp rating. 13. Power ON/OFF switch. |
|--|--|