WLAN PC Card AWLI00

Quick Start Guide



Introducing AWL100 Wireless LAN PC Card

 
Thank you for purchasing a BenQ AWLI00 Wireless LAN PC Card. The AWLI00 Wireless LAN PC Card lets you connect to your network and the Internet without needing to be tethered to a fixed location by a physical cable, while still getting the same data transfer rates as with traditional Ethernet. In addition to allowing you to enjoy the wonders of wireless networking, the AWLI00 provides two operating modes: ad-hoc mode (peer-to-peer) and infrastructure mode (station-to-AP) to suit different purposes.

Quick Installation for the AWL100

Before installing the PC card, set up an Access Point device first, as one is needed for the infrastructure operating mode.

Follow the instructions below for installing your AWL100 Wireless LAN PC Card.

Insert your AWLI00 into the PCMCIA slot of your notebook PC. The operating system will detect this new hardware and display the "Add New Hardware Wizard" window.






Check the item "Search for the best driver for your device.

(Recommended)", and then click on the "Next" button.

Insert the Software CD into the CD-ROM drive and check the item "Specify a location" to display the path of the folder containing the driver. To determine this path, click on the "Browse" button. Then click on the "Next" button.



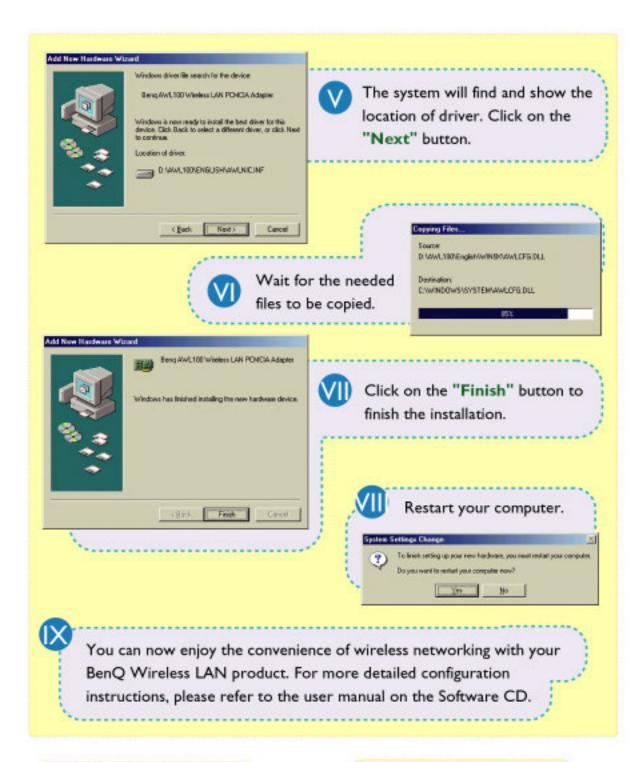

System Requirements

- Notebook PC with PCMCIA Type II slot and CD-ROM drive
- Microsoft Windows 98SE/ME/2000/XP operating system

Status Indicator on AWL100



Package Contents

- AWL100 Wireless LAN PC Card
- Software CD containing user manual, drivers and utility
- Quick Start Guide
- Warranty Card

Status Indicator (Green):

Blink twice: when put into

Notebook

Blinking: rescan with other station

or AP

Solid Green: link and activity mode