

Z-Group Command :

| Code | Function | Comment |
|------|-----------------------------|------------------------------------|
| Z000 | Reserved | 000 is special number for program. |
| Z011 | User brightness | User's picture settings |
| Z012 | User contrast | User's picture settings |
| Z013 | User intensity | User's picture settings |
| Z014 | User color | User's picture settings |
| Z015 | User tint | User's picture settings |
| Z016 | User sharpness | User's picture settings |
| Z017 | Color temperature | User's picture settings |
| Z018 | User ICC-R | User's picture settings |
| Z019 | User ICC-G | User's picture settings |
| Z020 | User ICC-B | User's picture settings |
| Z021 | User ICC-Y | User's picture settings |
| Z031 | Sleep timer | Timers |
| Z032 | OSD timer | Timers |
| Z033 | Burn-In timer | Timers |
| Z036 | OSD position - Horizontal | OSD position |
| Z037 | OSD position - Vertical | OSD position |
| Z041 | RGBHV input -- Red offset | Graphic signal adjustment |
| Z042 | RGBHV input -- Green offset | Graphic signal adjustment |
| Z043 | RGBHV input -- Blue offset | Graphic signal adjustment |
| Z044 | RGBHV input -- Red gain | Graphic signal adjustment |
| Z045 | RGBHV input -- Green gain | Graphic signal adjustment |
| Z046 | RGBHV input -- Blue gain | Graphic signal adjustment |
| Z047 | Graphic signal setup | Graphic signal adjustment |
| Z048 | YPbPr input -- Brightness | Graphic signal adjustment |
| Z049 | YPbPr input -- Contrast | Graphic signal adjustment |
| Z050 | YPbPr input -- Pb gain | Graphic signal adjustment |
| Z051 | YPbPr input -- Pr gain | Graphic signal adjustment |
| Z052 | YPbPr input -- Pb offset | Graphic signal adjustment |
| Z053 | YPbPr input -- Pr offset | Graphic signal adjustment |
| Z054 | Frequency | Graphic signal adjustment |
| Z055 | Phase | Graphic signal adjustment |
| Z056 | Horizontal position | Graphic signal adjustment |