



- 1. Remove Wall Mount Bracket
  - a. Loosen allen screws (1) holding Pivot Pin (2) in place.
  - b. Loosen Clamping Screw (3)
  - c. Remove Pivot Pin (2) from Wall Bracket (4)
  - d. Replace Pivot Pin in Wall bracket and retighten allen screws and save for future use.

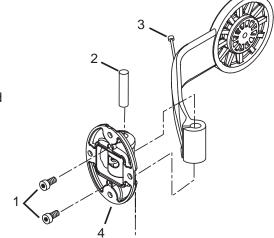

- 2. Attach EVID Speaker to VS Series Stand
  - a. Slide Speaker Bracket (1) onto Stand (3)
  - b. Tighten Clamping Screw (2)

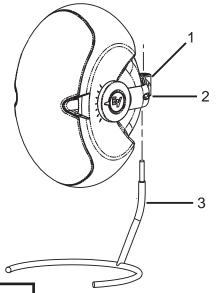

| VS Model | Use with EVID Model |
|----------|---------------------|
| VS-3     | 3.2                 |
| VS-4     | 4.2                 |
| VS-6     | 6.2                 |

## Electro-Voice®

12000 Portland Avenue South, Burnsville, MN 55337 Phone: 952/884-4051, Fax: 952/884-0043

www.electrovoice.com

© Telex Communications, Inc. 10/2001

U.S.A. and Canada only. For customer orders, contact the Customer Service department at 800/392-3497 Fax: 800/955-6831 Europe, Africa and Middle East only. For customer orders,

Europe, Africa and Middle East only. For customer orders, contact the Customer Service department at 49 9421-706 0 Fax: 49 9421-706 265

For warranty information, contact the Service Repair department at:

616/695-6831 or 800/685-2606

For technical assistance, contact Technical Support at:

866/78AUDIO

Specifications subject to change without notice.

© Telex Communications, Inc. 10/2001