


## Attachments!

ought the best video conferencing product available today.

by-step instruction brochure was developed to help make your  
eo calls run as smoothly as possible. We recommend keeping  
hure near the product for future reference.

heck that the following was received with your shipment:

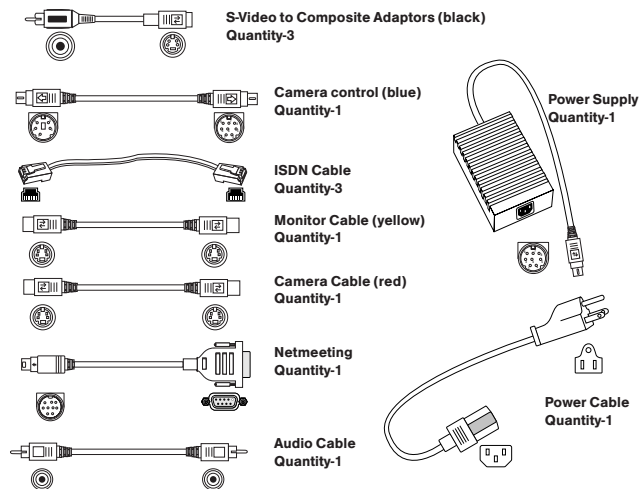

Perfect Communication through Technology, Service, and Education.™

**Gentner Communications Corporation**

**1825 Research Way**

**Salt Lake City, Utah 84119**

1.800.945.7730 USA

1.801.975.7200 International

1.801.975.7200

1.801.977.0087 FAX

[www.gentner.com](http://www.gentner.com)

Manual Part No. 800-160-101 Rev. 1.0

# APV 200



Audio Perfect™ Video 200



Perfect Communication through Technology, Service, and Education.™

## GENERAL INFORMATION

If the remote control does not appear to work, press the **RECALL** button.  
If you are on camera, TV, and the APV200 engine.

Use the **CH +** or **CH -** buttons to scroll about within the menus.

Use the **VOL +** button to select and change options in the menu.

## MAKING A VIDEO CALL

Press the **DIAL** button.  
Scroll to the desired option within the **DIAL** menu. Press the **VOL +** button to select the option:

### —Phonebook

Press the **DIAL** button.

Use the **VOL +** and **VOL -** buttons and the **CH +** and **CH -** buttons to navigate.

Select a preprogrammed phone book entry under the speed dial list. (To program a new phone book entry, see Owner's Manual.)

Press the **DIAL** button.

### —Manual dialing (for both 128K and 384K)

Press the **DIAL** button.

Scroll down and select either Manual 128K or 384K. Press the **VOL +** button. (To change default settings and options, refer to Owner's Manual.)

Scroll down to Channel and enter telephone number to dial.

Scroll down to Dial. Press the **DIAL** button.

To end the call, press the **HANG UP** button.

## VOLUME CONTROLS

Press the **VOL +** button to increase volume; press the **VOL -** button to decrease volume.

### MUTING MICROPHONE & SPEAKERS

Press the **MUTE** button to mute the audio that is being sent.

Press the **MUTE** button again to unmute the microphone.

Press the **SPEAKER** button to mute the audio that is being received.

Press the **SPEAKER** button again to unmute the speaker.

### PICTURE IN PICTURE (PIP) – SIX SELECTIONS

Pressing the **PIP** button moves the PIP to one of the following:

**Four corners of screen** (one at a time)

**Full screen** (showing local video)

**Off** (showing remote image full screen)

### SWITCHING BETWEEN CAMERA 1 AND 2

Two cameras must be connected.

Pressing the **CAM1/2** button toggles between the two cameras.

## CAMERA CONTROL MODE (Local and remote camera)

**Local camera control.** Press the **LOC/REM** button until Near (N) icon appears.  
Now see "Moving and Zooming the camera(s)" below.

**Remote camera control.** Press the **LOC/REM** button until Far icon appears.  
Now see "Moving and Zooming the camera(s)" below.

**Leave camera control.** Press the **LOC/REM** button until all icons are gone.

### MOVING AND ZOOMING THE CAMERA(S)

\*Need to be in a camera control mode to move or zoom camera(s)

Move **RIGHT** Press the **VOL +** button. Move **UP** Press the **CH +** button. Zoom **IN** Press the **▶▶** button.  
Move **LEFT** Press the **VOL -** button. Move **DOWN** Press the **CH -** button. Zoom **OUT** Press the **◀◀** button.

### STORING CAMERA PRESETS

**Local camera presets:** Press the **LOC/REM** button until Near "N" icon appears.  
Position the camera.

Press and hold a number key (1-9) for 5 seconds.

The local camera settings are lost when the system re-starts.

**Remote camera presets:** Press the **LOC/REM** button until "FAR" icon appears.  
Position the camera.

Press and hold a number key (1-9) for 5 seconds.

The remote camera preset positions are lost at end of call.

### SELECTING A STORED PRESET

Press and release the number key of a preset position.

### WORKING WITH STILL IMAGES\* (128k calls must be in H.261) \*ANNEX D STILLS

**To send a still image:** Press the **LOC/REM** button until Near "N" appears.

Press the **⏸** button. Status bar will say "sending still"

**To receive a still image:** (Must be set up to send and receive camera control)

Press the **LOC/REM** button until "FAR" icon appears.

Press the **⏸** button. Status bar will say "Receiving still"

To hide the still, press the **VIDEO** button.

**View hidden still image:** Press the **▶** button. Only last still received can be viewed.  
The still is lost when a menu is displayed.