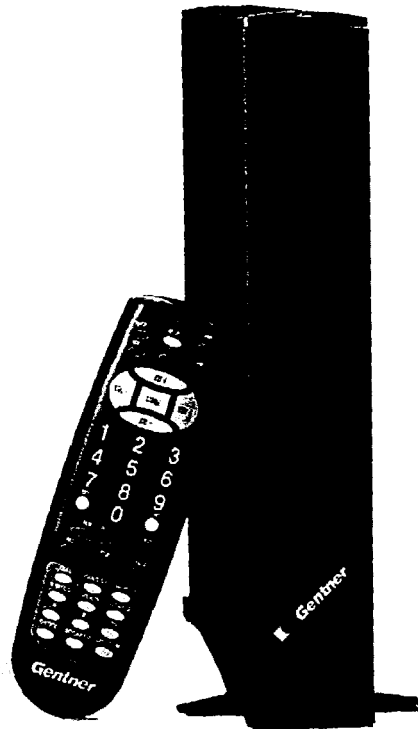 


MPV 200




Audio Perfect™ Video 200

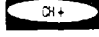
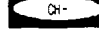


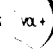
Perfect Communication through Technology, Service, and Education.™

## • GENERAL INFORMATION

If the remote control does not appear to work press the  button.

Turn on camera, TV, and the APV200 engine.

To scroll about within the menus press  or .

To select and change options in the menus press .

## • MAKING A VIDEO CALL



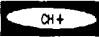

1. Press



2. Scroll to the desired option within the **DIAL** menu. Press  to select the option:

### —Phonebook

Press .


Use  and  and   to navigate.

Select a preprogrammed phone book entry under the speed dial list. (To program a phone book entry, see Owner's Manual.)


Press .

### —Manual dialing (for both 128K and 384K)

Press .

Scroll down and select either Manual 128K or 384K. Press . (To change default settings and options, refer to Owner's Manual.)

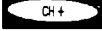
Scroll down to Channel and enter telephone number to dial.

Scroll down to Dial. Press .

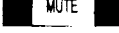
3. To end the call, press  .

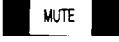
# REMOTE CONTROL FUNCTIONS


- **VOLUME CONTROLS**


Press  to increase volume;  to decrease volume.

- **MUTING MICROPHONE & SPEAKERS**


Press  button to mute the audio that is being sent.

Press  again to unmute the microphone.

Press  to mute the audio that is being received.

Press  again to unmute the speaker.

- **PICTURE IN PICTURE (PIP) – SIX SELECTIONS**

Pressing the  button moves the **PIP** to one of the following:

**Four corners of screen** (one at a time)

**Full screen** (showing local video)

**Off** (showing remote image full screen)

- **SWITCHING BETWEEN CAMERA 1 AND 2**

Two cameras must be connected

Pressing the  toggles between the two cameras.


● **CAMERA CONTROL MODE** (Local and remote camera)

**Local camera control.** Press  until Near (N) icon appears  
Now see "Moving and Zooming the camera(s)" below




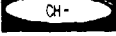
**Remote camera control.** Press  until Far icon appears.  
Now see "Moving and Zooming the camera(s)" below.




**Leave camera control.** Press  until all icons are gone.

● **MOVING AND ZOOMING THE CAMERA(S)**


\*Need to be in a camera control mode to move or zoom camera(s)

Move **RIGHT** Press  Move **UP** Press  Zoom **IN** Press   
Move **LEFT** Press  Move **DOWN** Press  Zoom **OUT** Press 

● **STORING CAMERA PRESETS**

**Local camera presets:** Press  until Near "N" icon appears.  
Position the camera.  
Press and hold a number key (1-9) for 5 seconds.  
The local camera settings are lost when the system re-starts.






**Remote camera presets:** Press  until "FAR" icon appears.  
Position the camera.  
Press and hold a number key (1-9) for 5 seconds.  
The remote camera preset positions are lost at end of call.








● **SELECTING A STORED PRESET**

Press and release the number key of a preset position.

● **WORKING WITH STILL IMAGES\*** (128k calls must be in H.261) \*ANNEX D STILLS

**To send a still image:** Press  until Near "N" appears.   
Press  button Status bar will say "sending still"

**To receive a still image:** (Must be set up to send and receive camera control)  
Press  until "FAR" icon appears.   
Press  button Status bar will say "Receiving still"  
To hide the still press the  button.

**View hidden still image:** Press  . Only last still received can be viewed.  
The still is lost when a menu is displayed.