Set-Top Codec Mounting Kit

Camera Accessories

Packing list

Be sure you received the following items:

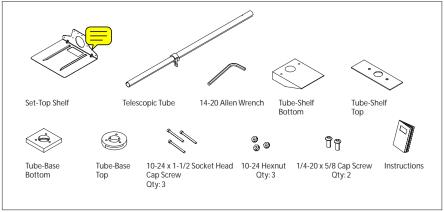


Figure 1.0 Unpacking

If you are missing any items, please contact the ClearOne Technical Services Group 1-800-283-5936 (USA) or 1-801-974-3760

To assemble the Set-Top Shelf kit

- Insert two Cap Screws into the positioning holes on the Tube-Shelf Top.
- Sandwich Set-Top Shelf between
 Tube-Shelf Top and Tube-Shelf Bottom
 making sure the Cap Screws pass
 through the positioning holes on the
 Tube-Shelf Bottom.
- Tighten Cap Screws using the Allen Wrench.


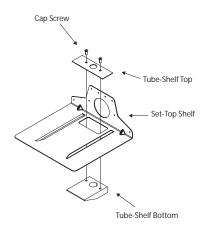


Figure 2.0 Tube-Shelf assembly

INSTRUCTION SHEET

- Place Tube-Base Top over the 2" hole in the top of the cart and insert three Socket Head Cap Screws into the positioning holes.
- Place Tube-Base Bottom under 2" hole in the top of the cart making sure the Socket Head Cap Screws pass through the positioning holes.

 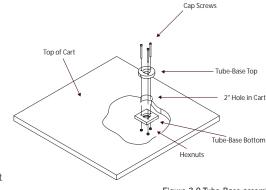


Note: Carts come with 2" precut hole in top.

Figure 3.0 Tube-Base assembly

Socket Head

- 6. Use the Allen Wrench to tighten Hexnuts onto the Socket Head Screws.
- 7. Insert Telescopic Tube into Tube-Base.
- 8. Insert Telescopic Tube into the Tube-Shelf.
- Note: Adjust Telescopic Tube height by turning the knob on the tube, raising or lowering tube to desired height and then tightening knob to secure height. Telescopic Tube can be adjusted to a height of approximately 45".



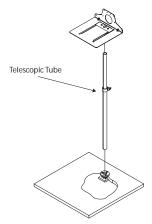


Figure 4.0 Complete assembly

