

## **Program time delays**

The pd11sp, pd11ss and pd11lvsp come from the factory set to a 1-second delay for each of the four outlets to turn on. The following instruction will enable you to change the amount of time between each outlet turn on.

- The main power switch must be on
- The sequenced outlets must not be active
- The switches to change the delay time are to the left of unit and they have green LED's in the switch
- The switches are labeled power down/up – off/on presets
- The power down/off is the left switch
- The power up/on is the switch to the right

### **Programming preset time delays**

- Depress and hold the down/off switch
- Depress and hold the up/on switch
- Red LED to the right of the switches will start to flash
- When flashing red LED goes out release both switches
- Both green LED's on the switches will start to flash rapidly
- You are in program mode at this time
- The red LED's to the right indicate what the time delay is set for

LED 1 = 1 sec delay

LED 2 = 5 sec delay

LED 3 = 10 sec delay

LED 4 = 30 sec delay

- Depress the up/on switch to the right to increase the time delay
- Depress the off/down switch to the left to decrease the time delay
- Depress both off and on switches to finish the delay programming

### **Programming manual time delays**

- Follow above instruction to activate LED 4
- Depress the up/on on switch one more time to activate manual programming time delay mode
- All 4 red LED's to the right will be lit to indicate manual mode
- The up/on switch green LED will be lit
- Depress the up/on switch to start manual delay programming – can program from 5 sec to 240 sec delay
- Depress the off/down to stop the manual delay timing
- Depress both off and on switches to finish programming mode