

# *Elite* SCREENS

Tension Electric Screen

Elite CineTension Series

 
USER'S GUIDE



**Matte White/High Contrast Grey/High Gain**

## IMPORTANT SAFETY INSTRUCTIONS

1. Carefully unpack the screen.
2. Position the power cord so it will not be tripped over, pulled, or near a hot area or surface.
3. To avoid an electric shock, do not attempt to disassemble this appliance yourself.
4. Do not attempt to use the screen if there are obvious damages or broken parts to avoid injury and/or an electric shock.
5. Please disconnect the power supply when screen is not in use for a long time.
6. Always handle the screen in a leveled position and a clean surface.
7. Contact Elite's Screens service department for help troubleshoot your screen.

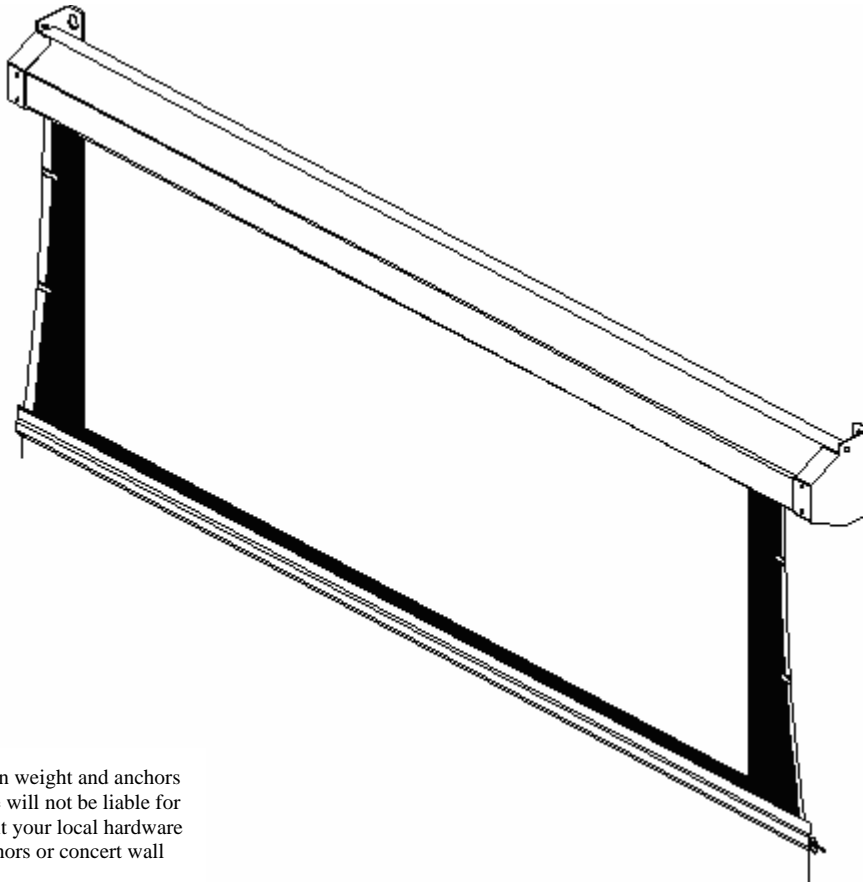


**Warning:** Models may vary in weight and anchors will not support all models. Elite will not be liable for improper installation. Please visit your local hardware store for additional dry wall anchors or concert wall anchors.

## INSTALLATION

 
1. Select the location for your screen projector and access to a good power source. For best results follow your users manual of your projectors recommended distance settings.
2. For the best support of your screen, it is ideal to secure the screen (**see example page**) into the studs of your house's internal framework. If you are installing the screen into a dry wall you will require dry wall anchor. For concrete mounting you will require concrete anchors.
3. Carefully measure the intervals that correspond with the anchor-mounts on the end-caps. Make sure that the screws/anchors are level and in perfect horizontal alignment with one another. (**See Installation" page**)

### FOR REFERENCE ONLY: Tension Screen Adjustment

(Attention: This adjustment is not required. The screen's tension has been set to achieve best performance. Always contact an Elite Screen Technician for assistance to avoid damaging the screen and voiding your warranty.)

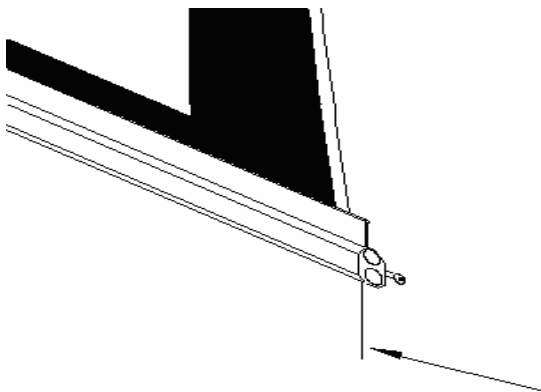


# Examples Of Installation & End Cap Dimensions Page

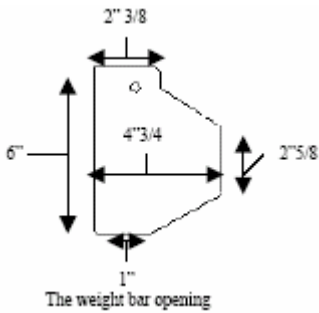 


1. Start by locating the studs on your wall. Make sure to measure the keyholes located on the back end of the screens end caps.
2. Mark the area where screw hole will be inserted for the L" bracket or screen. The L" bracket is sold separately.
3. Setup (a) is a well example for mounting the screen using the L: bracket.
4. Setup (b) is another example for mounting the Screen flushing it against the wall.
5. Setup (c) is a hard task to achieve and you may need to consult with a proper installer/contractor. Additional hardware may be required. If flush mounted as shown on example (c) it is wise to have about 2" of space away from the housing/case.
6. Setup (d) is an example of ceiling mount/chain hanging. By using a proper chain and hooks it can be sustained by the ceiling. Locate studs on the ceiling before mounting for proper support.

 
L" Bracket Mounting

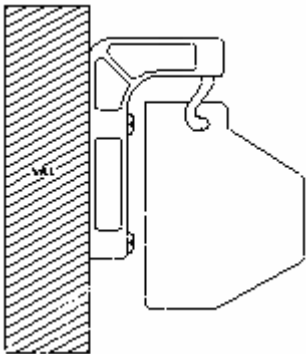


Flush wall Mounting

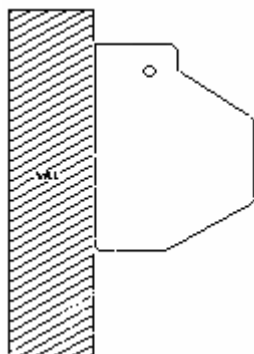 

Ceiling Flush Mounting

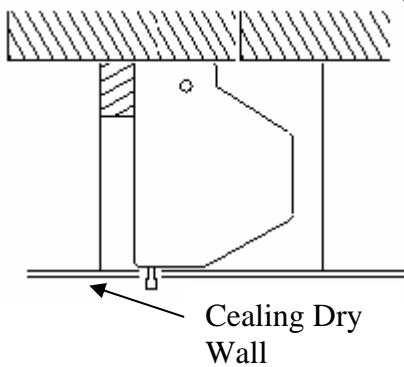 

Ceiling Chain Mounting

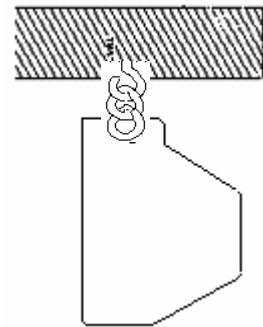 

**Note:**

 
**Regardless of mounting method, screen should be securely supported so that vibration on the viewing surface will not cause case to work loose or fall. Installer must insure that fasteners used are of adequate strength and suitable for the mounting surface chosen.**

# Remote control and 3 & 4 prong wire information

This is the **IR** (Infra-Red) remote with a range of 15 Ft.


This is the **RF** (Radio Frequency) remote with a range of 30 Ft.

The Battery Size is 23A 12V.

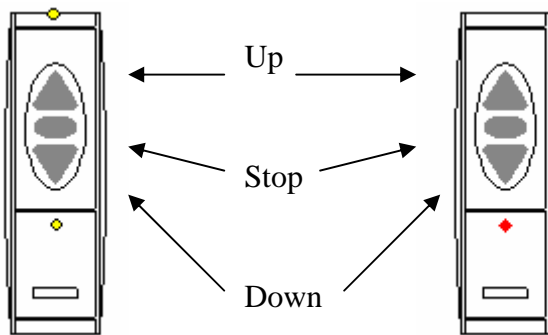


Control box

 
The 3 prong wire will come from the outlet and the 4 prong cable goes directly to the screen. The directional buttons are located on the side of the control box.

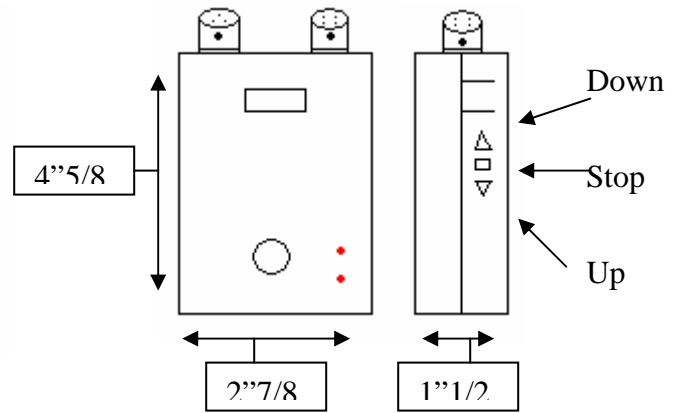

 The 3 and 4 prong wires are needle size and lock when properly inserted into the correct connection.

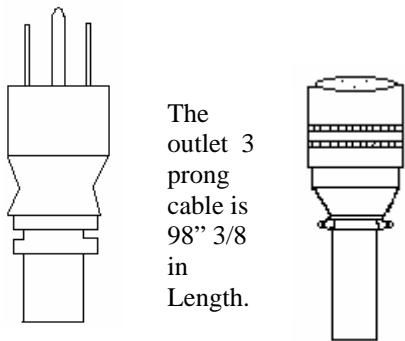

 The outlet 3 prong cable is 98" 3/8 in Length.

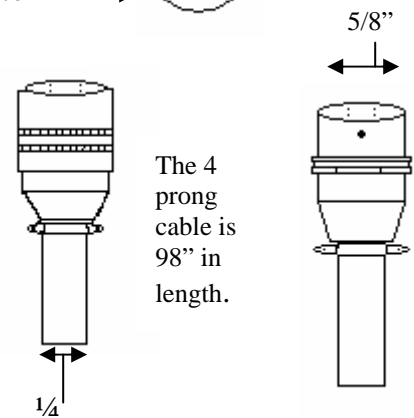

The 4 prong cable is 98" in length.

The 3 prong cable will be connected from the outlet to the control box.

The 4 prong cable will be connected from the control to the screen.


**\*\* Please remember to always point to the wall switch receiver when using the IR remote. The IR remote can also work with a Universal Learning Remote Control usually by programming the Screen's IR codes in your Universal Learning Remote.**
 
## OPERATION

### Remote Control System And Wiring:

**Line Switch:** Manual 3-way wall switch for your new Elite Screen with wireless IR and RF remote.

1. This is the control box connection to your new Elite Screen. First insert the 3-prong cable (**Pins**) to the proper input of the control box. Then connect the cord with the 4-prong cable (**Pins**) into the proper output of the control box. The other end of the 4-prong cable (**Pins**) will need to go to the screen's case. Please see example diagram.

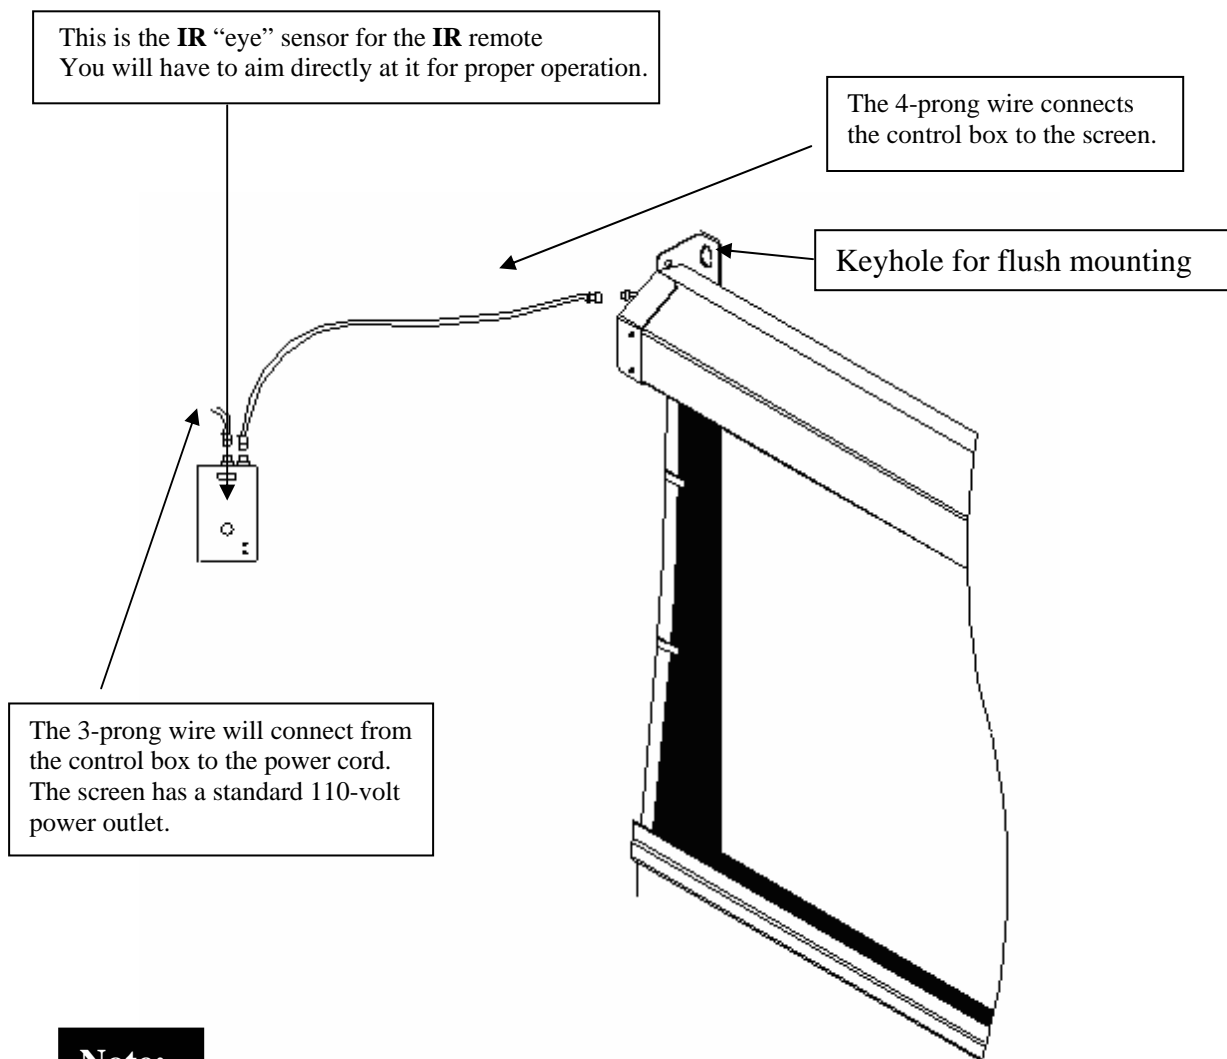


### Note:

*Always press the "stop" button first, then press "up" or "down" when raising or lowering the screen.*

## Vertical Limit Switch Adjustment

(Attention: This adjustment is not required. Always contact an Elite Screen Technician for assistance to avoid damaging the screen and voiding your warranty.

 **\*Important Note:** *It is strongly advised that the user not ever adjust the Vertical Limit Switch. All screens have already been pre-adjusted in the factory to meet the multitude of user needs. Description of this feature was included for those rare situations that require it.*

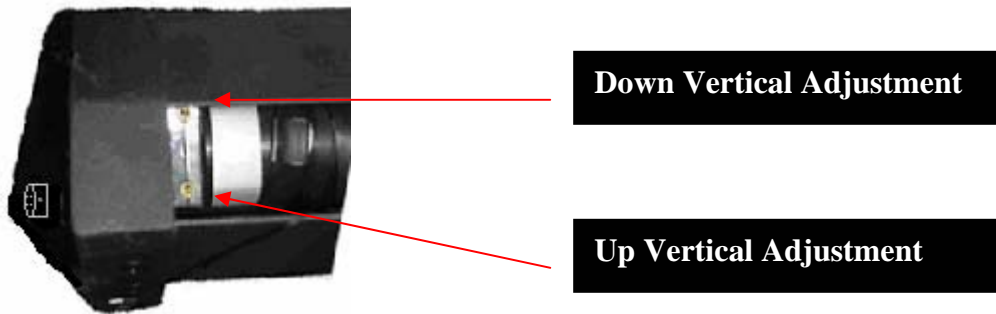

*Note: You will require a 5/32" allen-wrench to perform the adjustments below.*

### **IMPORTANT NOTES:**

*1. Do not wind up the vertical adjuster like a clock or wind-up toy. Doing so will damage internal mechanisms and ruin the screen's motor.*

#### **Up Vertical Adjustment**

**The screen is preset to flush into casing when raised, this adjustment does not need to be made unless screen does not retract to its original position.**

- 1. Insert the allen-wrench into the Up vertical keyhole, turning the allen-wrench clockwise in increments will allow the screen to drop. *To see this action take place you will require to drop your screen and raise it, by doing so you will see that the screen will not retract up to its original position.***
- 2. Insert the allen-wrench into the Up vertical keyhole, by turning allen-wrench counter-clockwise in increments will cause the screen to rise into the casing. To see this action take place you will need to raise the screen. By letting it stop on its own and inserting the allen-wrench into the keyhole turning it counter-clockwise will begin to rise the screen.**

#### **Down Vertical Adjustment**

**The screen is preset to drop with 6" of black masking on the top, there is an extra 10" of black masking rolled in the internal rolling system. This adjustment is only if you would like to hide or release the extra 10" of black masking**

- 1. Insert the allen-wrench into the Up vertical keyhole, turning the allen-wrench clockwise in increments will allow the screen to drop. *To see this action take place you will require to drop your screen and raise it, by doing so you will see that the screen will not retract up to its original position.***
- 2. Insert the allen-wrench into the Up vertical keyhole, by turning allen-wrench counter-clockwise in increments will cause the screen to rise into the casing. To see this action take place you will need to raise the screen. By letting it stop on its own and inserting the allen-wrench into the keyhole turning it counter-clockwise will begin to rise the screen.**

## TROUBLESHOOTING

If the electric screen does not move, please check the following:

1. Check the power supply and fuse first. The screen will not move without power.
2. Make sure the power cord is plugged to the power outlet.
3. Check all cable connections to see if any may be disconnected.
4. If the screen works well with the line switch but not with the remote control, please make sure the remote controls have batteries or replace them with new ones.

## FAQ's

1. **Q:** What are the differences between the IR and RF remotes?  
**A:** An Infra-Red remote is designed for short distance use, like your television remote. IR requires direct aim at the IR source located inside your 3-wall switch. RF remote control is designed for long distance use. The RF is a unique remote configured to only work with your 3-way wall switch included with this screen. If the RF remote control is lost or misplaced, the entire 3-wall switch will need to be replaced (Please keep in a safe place). Change the batteries every 6 months.
2. **Q:** How is the screen material cleaned?  
**A:** The screen material can be cleaned with mild soap and water only. Do not use cleaning substances with chemicals, as it will damage the screen material.
3. **Q:** Can you manually pull down this electric screen?  
**A:** Absolutely not, manually pulling down the screen will damage the electronic motor rolling system.
4. **Q:** Can the electric screen be used in a 220-volt outlet?  
**A:** No, the screen can only be used in 110-volt outlets.
5. **Q:** What is the recommended distance my first row should be?  
**A:** The recommended distance should equal the width x2 of your screen. However, this may vary depending on the projector type and environment light.
6. **Q:** How high should I hang the projector screen?  
**A:** The recommend lowest level of the projector screen should be at an eye level of the first row seat.
7. **Q:** Technical Support or Problem Report  
**A:** The best way to report a problem is to send an email to [techsupport@elitescreens.com](mailto:techsupport@elitescreens.com) or call 1-877-511-1211 and as for the Service Dept.



## Warranty Policy - Electric Screens

- One (1) year warranty parts and labor from purchase date as follows (except for refurbished units as specified below)
- **Refurbished units** carry a **90-day** parts and labor warranty.
- **Demo units or open box items** carry a **full 1-year** parts and labor warranty.
- Each party will be responsible for one way shipping during the warranty period.
- **A RMA (Return Merchandise Authorization) number** must be issued in order to process a replacement or to authorize a return for warranty repair. Elite Screens will, at its sole option, replace or repair the defective unit with a brand new replacement \*(see exceptions below) after the defective unit is received. Once the product is received, Elite Screens will send out a new \*unit to the customer by ground service (subject to inventory availability). **Please do not return** any unauthorized items to Elite Screens, as they will be refused. The RMA number must be included on the outside label of your shipping box and shipping documents. Our warehouse is not authorized to accept returns without an RMA number on the shipping label. RMA numbers are valid for 45 days from the date of issue.
- **Missing Parts** must be reported within 7-days of receipt. If reported after 7 days, customer will be responsible for shipping and handling fees. If reported after 30 days of receipt, customer is responsible for cost of the parts and shipping & handling fees.

## Warranty Policy – Damages

- **All shipping damages must be reported within 7 business days upon receipt of the product.** After 7 days, Customer is responsible for all incurred costs.
- Inspect all shipments upon arrival. If damage or loss is apparent upon delivery, do not accept the shipment until you make a notation of the damage on all copies of the carrier's delivery receipt and have the driver sign all copies to acknowledge the notation. Do not sign a clear receipt for damaged or missing cartons or there will be no basis for a claim. Ask the carrier to make a detailed inspection of the damage. File a claim with the carrier. Cooperate and follow up as necessary to secure final settlement.
- Immediately advise Elite Screens of all damages or problems. **Do not return merchandise to Elite Screens.** File your claim with the carrier, enclosing copies of the bill of lading (signed by the driver) and inspection report as support. Keep all packing materials and boxes with the damaged product. Do not throw anything away. Although Elite Screens will provide any assistance possible, we cannot be responsible for the actual filing of claims on the carrier or accept liability for non-collectable freight claims

**For Warranty and Service requests, please fill out a RMA/Service Form at:**

[www.elitescreens.com/help.html](http://www.elitescreens.com/help.html)

**Please visit this link for full warranty information:**

<http://www.elitescreens.com/services.html>

For Customer Service and Technical questions, please contact Elite Screens at:

**Telephone:** (562)-483-8198 **Fax:** (562)-483-8498

\*A new or refurbished replacement will be sent out to the customer depending on the type of purchase (new or refurbished) or based on stock availability.

**REGISTER YOUR ELITE PRODUCT**

**TWO WAYS TO REGISTER YOUR WARRANTY WITH ELITE SCREENS INC.**

**A. On Line (Faster and Easier)**

[www.elitescreens.com/register.html](http://www.elitescreens.com/register.html)

**B. Fill out & Fax to (562) 483-8498, Attn: Customer Service Dept.**

**\*Your Name:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**City/State/Zip** \_\_\_\_\_

**\*e Mail Address:** \_\_\_\_\_

**\*Phone:** \_\_\_\_\_

**\*Screen Model:** \_\_\_\_\_

**\*Serial Number:** \_\_\_\_\_

**\*Date of Purchase:** \_\_\_\_\_

**\*Dealer / Reseller Purchased from (name of the reseller):** \_\_\_\_\_

**What is your Projector Model:** \_\_\_\_\_

**Application:**  Home  Education  Corporation  Government  
 Others

**How would you rate this screen?**  Excellent  Good  Ok  Improvement needed

**Comments:**  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**If you have pictures of your screen you'd like to share with us, please email your pictures to [registration@elitescreens.com](mailto:registration@elitescreens.com) (\*Required Field)**

*Elite***SCREENS**  
562-483-8198 Ext. 313  
[www.elitescreens.com](http://www.elitescreens.com)