

## Tuning

### Changing Preset Selection:

The Digital-6 Plus is equipped with six preset memory channels, it is set to across the Assistive Listening Band selected for best overall performance:

| Memory | Factory Setting | Frequency |
|--------|-----------------|-----------|
| 1      | Channel 2       | 72.10 MHz |
| 2      | Channel 10      | 72.50 MHz |
| 3      | Channel 19      | 72.95 MHz |
| 4      | Channel 21      | 74.70 MHz |
| 5      | Channel 28      | 75.50 MHz |
| 6      | Channel 36      | 75.90 MHz |

You may change the presets by following the step-by-step instructions. (See page 8 for frequencies corresponding to other channels.)

The Digital-6 Plus receiver is digitally tuned. Once a channel is selected, no further adjustments are necessary.

#### Step 1

Make sure that the keypad lock is turned off, by following the steps mentioned in “KEYPAD LOCK” instructions.

#### Step 2

By using the “UP” or “DOWN” button to select one out of six memory **pre-sets** which is to be changed. The current memory channel is displayed on the lower left corner of the LCD screen underneath the letter “M”.

#### Step 3

To change the current memory channel, press the button “MW”. The small letter “M” will start to flash, and one of the 37 channels used in the Assistive Listening Band will appear on the LCD screen center, press “Func” key will show the