

channel frequency, using “UP” or “DOWN” key to select a channel (ch.01 to ch.37) to be saved in this memory **pre-set**, press “MW” key again to save and exit.

Frequency Chart

Channel	*Frequency	Channel	*Frequency
01	72.05	20	74.65
02	72.10	21	74.70
03	72.15	22	74.75
04	72.20	23	75.25
05	72.25	24	75.30
06	72.30	25	75.35
07	72.35	26	75.40
08	72.40	27	75.45
09	72.45	28	75.50
10	72.50	29	75.55
11	72.55	30	75.60
12	72.60	31	75.65
13	72.65	32	75.70
14	72.70	33	75.75
15	72.75	34	75.80
16	72.80	35	75.85
17	72.85	36	75.90
18	72.90	37	75.95
19	72.95	*Frequencies are in MHz	