

Keypad Function

Channel select

Press "UP" or "DOWN" to select channel.

Keypad Lock

Pressing "Func" button and the "UP" button at the same time will locked the front keypad. The keypad lock can be unlock using the same method.

Note: When keypad is locked, only the current memory channel is accessible and a key will be displayed at the upper right corner of the LCD screen.

Reset to factory default settings:

Press and hold "UP" or "DOWN" button then turn on the power switch will restore to factory default settings.

Battery Strength:

Battery strength is displayed in the upper left hand corner of

the LCD screen.

Note:

Be sure to turn off the receiver when it is not in use. This will help preserve the battery life. To turn off the Digital-6 Plus, turn the volume knob anti-clockwise until it "clicks".

How to set the battery type:

Two "AA" size alkaline battery (3V) or rechargeable battery (2.4V) can be used on Digital-6 Plus. Change the battery type using the following steps:

Step1

Press "Func" and "MR" button at the same time, the "2.4" or "3.0" will display, using "UP" or "DOWN" to change battery type.

Step2

Press "Func" and "MR" button at the same time