 
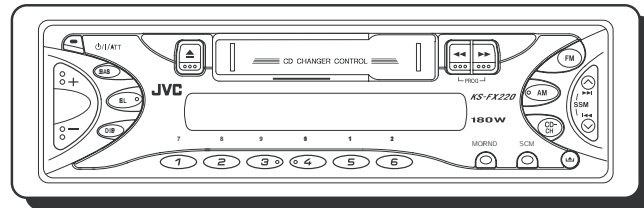 


JVC

SERVICE MANUAL

CD CHANGER SYSTEM

CH-PK220

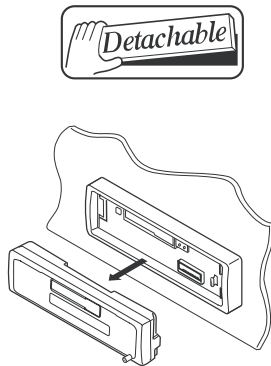

KS-FX220

 
CD changer control receiver

Area Suffix

J Northern America

**COMPACT
disc
DIGITAL AUDIO**

**CD-RW
PLAYBACK**

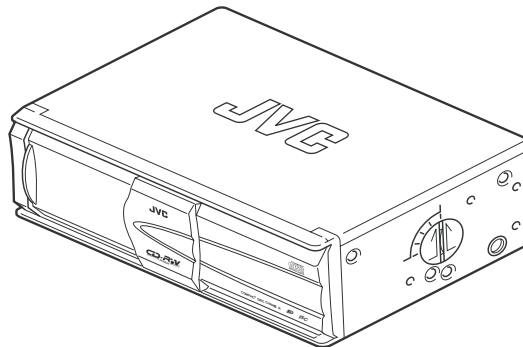

CH-X470

 
CD changer

"This model is combination of the CH-X470, CD Changer and the KS-FX220."

CD changer control receiver in one packing.

Please refer to the service manual of CH-X470RF_J(No.49668) and KS-FX220_J(No.49770) for items other than this packing.

Packing materials parts list

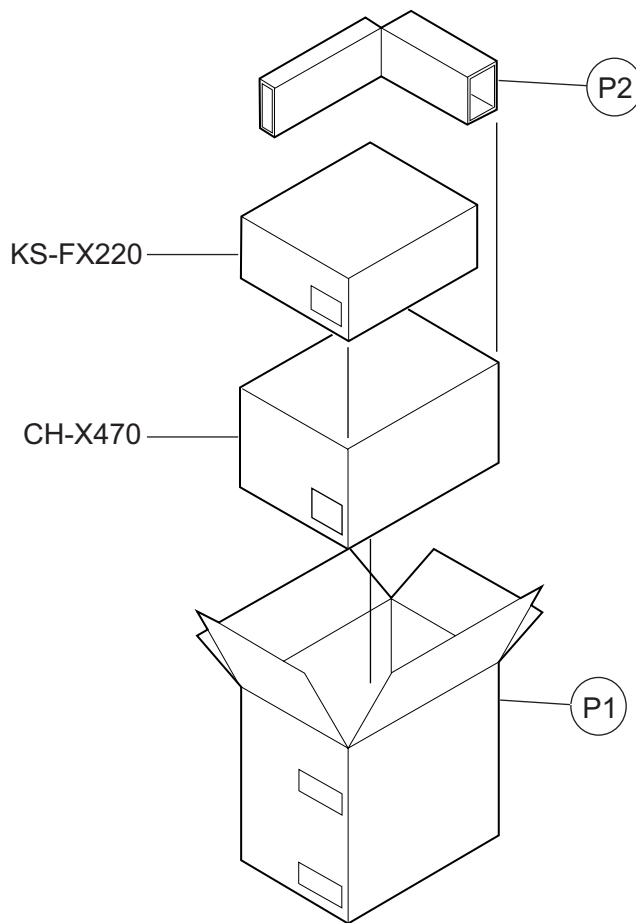Block No. M 3 M M

Parts list (Packing) [Block No.M3MM]

| △ | Item | Parts number | Parts name | Q'ty | Description | Area |
|---|------|--------------|--------------|------|-------------|------|
| | P1 | LV33460-020A | PACKING CASE | 1 | | |
| | P2 | LV33468-001A | SPACER | 1 | | |

JVC

VICTOR COMPANY OF JAPAN, LIMITED
AV & MULTIMEDIA COMPANY 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.49777)



Printed in Japan
200301WPC