




# HR-XVC14B/15S DVD Player/Video Cassette Recorder Tuner-Free Recording Operation


## QUICK START GUIDE

Need Help? Please call the JVC Customer Service  
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722  
<http://www.jvc.com>

### Included Accessories

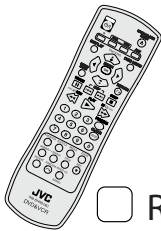

Remote control

 

"AAA" battery x 2  
(For remote control)




Video cable




Audio cable

### Easy Connection For Playback Only(DVD/VHS) INSTRUCTIONS →pg. 10

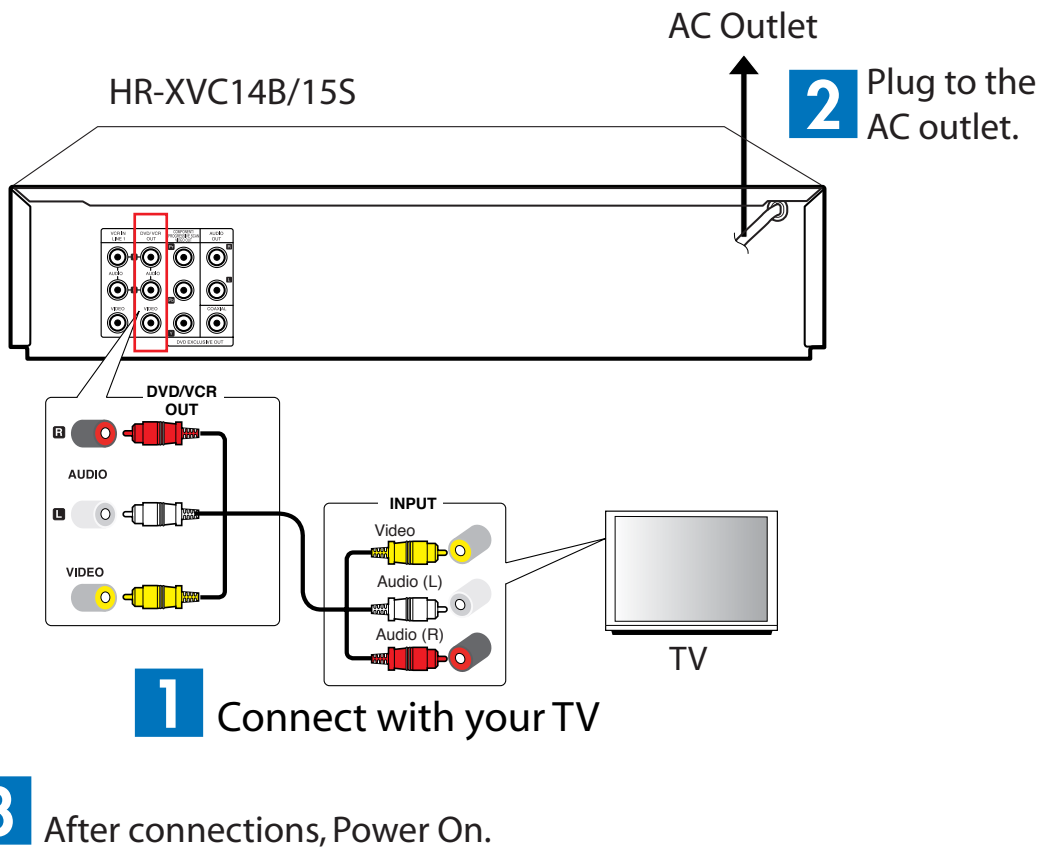

# Easy Connection For Playback(DVD/VHS) & Recording(VHS) INSTRUCTIONS → pg. 11

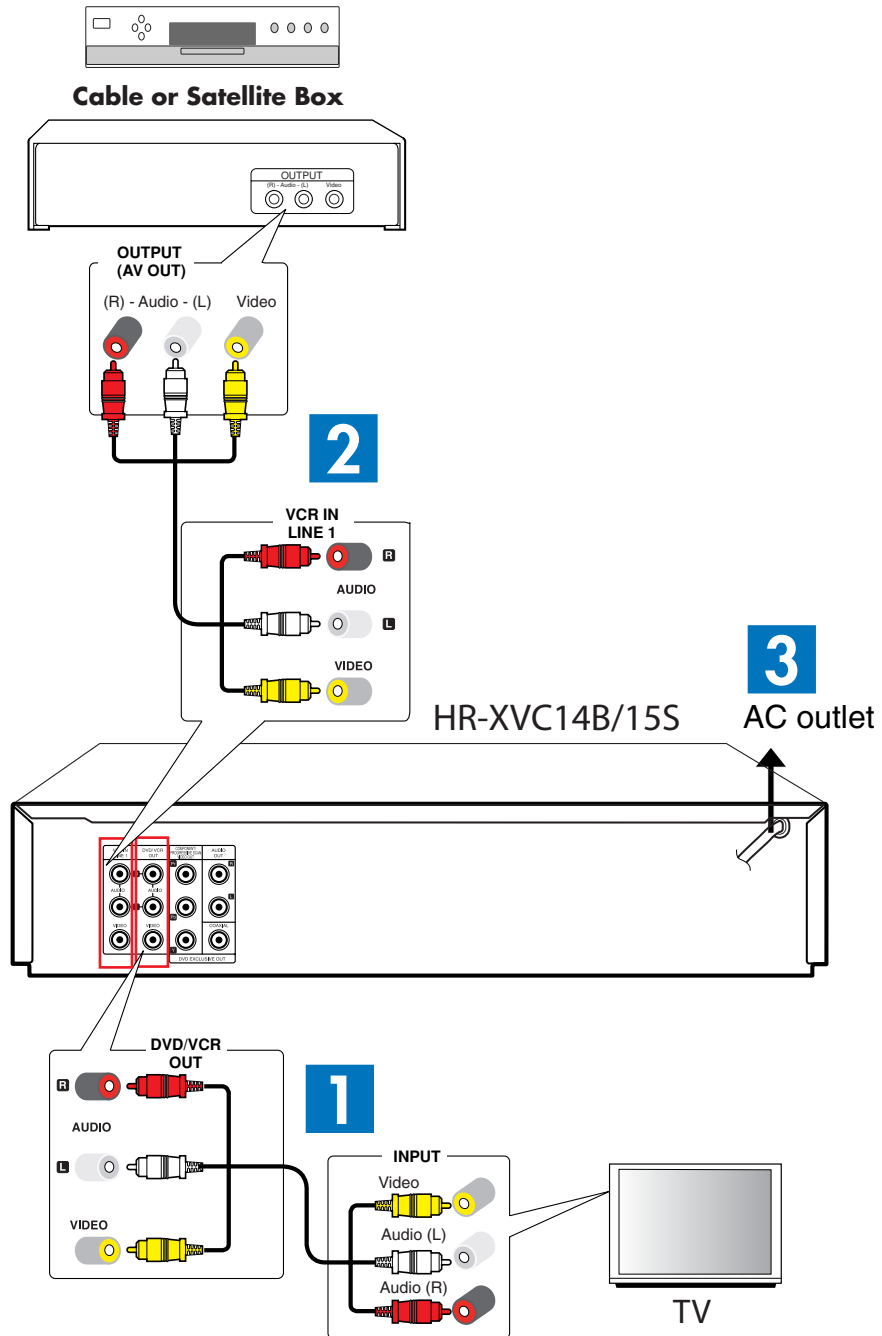


**4** After connections, Power On.

Note: Please keep HR-XVC14B/15S power on to watch TV program.

# Manual Clock Set Up

INSTRUCTIONS

→ pg. 13

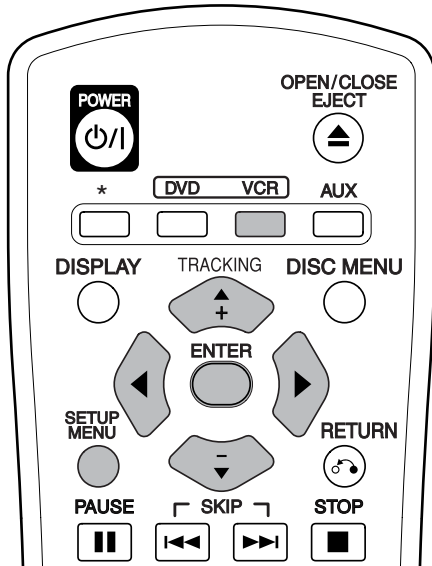

Select "Month"

4




Select "Day"

5



Select "Year"

6

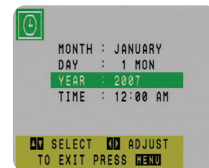

Select "VCR"

1




Select "SETUP MENU"

2



Select "Time"

7

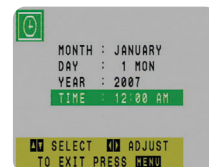

Select "CLOCK"

3



"SETUP MENU"

8



Note: Need "Clock Set Up" at the beginning & end of "Summer Time".

# BASIC PLAYBACK

INSTRUCTIONS

→ pg. 18, 24

DVD


 
Select "DVD"




Start Playback



Stop Playback

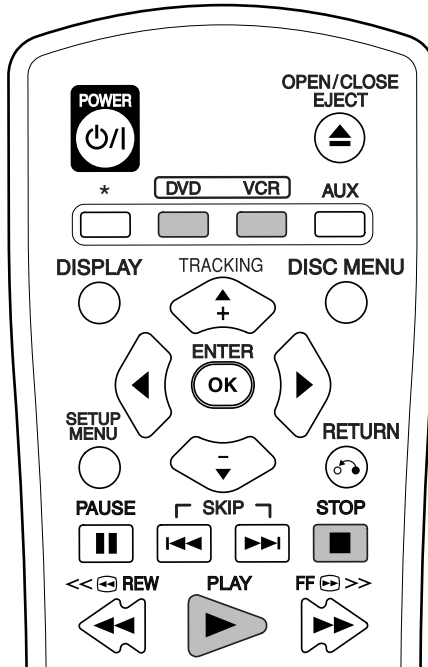

Select "VCR"

 

Start Playback



Stop Playback




Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, CD-R, Video CD, Audio CD

# BASIC RECORDING (One-Touch Recording)

 INSTRUCTIONS → pg. 19

Check! VHS Tape Inserted!!


Select "VCR"



Select Input  
(Line 1/2)



Select Mode

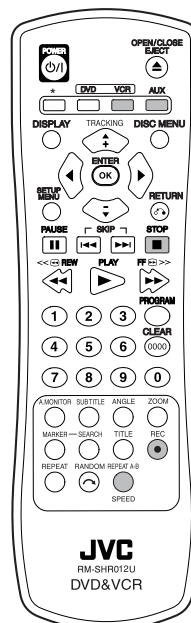

Start Recording




Stop Recording



# TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS

→ pg. 20

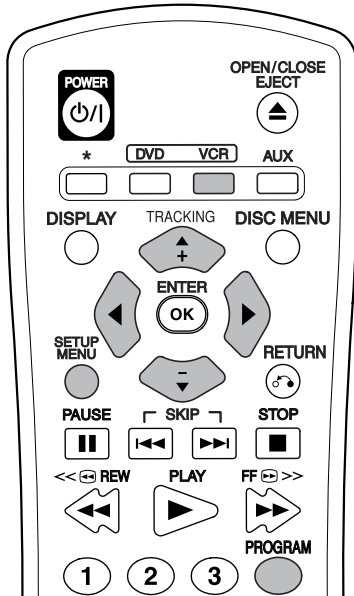

Check! VHS Tape Inserted!!

Select "VCR"

1



"PROGRAM"  
MENU

2



Select  
"PROGRAM No."

3



Select "MONTH"

4



Select "DAY"

5



Select "START"

6



Select "STOP"

7



Select "INPUT"

8



Select "SPEED"

9



Select "REPEAT"

10



"SETUP MENU"  
Finish

11



# Timer-Link Recording


INSTRUCTIONS

→ pg. 21


**Timer Link**

Check! VHS  
Tape Inserted!!


Note: Timer-Link works by using the timer function of most Cable/Satellite Boxes. Please check whether your current box has a "Timer" function.

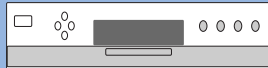

Note: Timer-Link doesn't work, if Cable/Satellite Box keeps a "Screen Saver" in "Power Off". If so, please use "Manual Timer Programming"

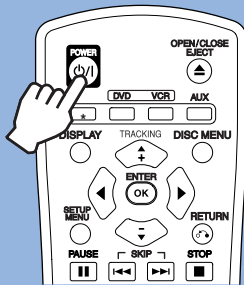

(Front of Unit)

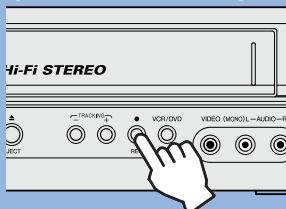

Note: If the Timer-Link "On", "TIMER/TIMER LINK" indicator blinks on the JVC deck's display window.



**1** Set Up Timer of Cable/Satellite Box

**2** Power Off Cable/Satellite Box

**3** Power Off HR-XVC14B/15S after set record speed.


**4** Hold "REC" Button for 3 seconds

1. When your Cable/Satellite Box is powered on by the timer function, HR-XVC14B/15S is also powered on and starts to record (It takes about 1 seconds) automatically.

2. When your Cable/Satellite Box is powered off using the timer function, HR-XVC14B/15S also stops recording (It takes about 3 seconds) and then powers off automatically.

## Timer-Link mode: Deactivate

(Front of Unit)

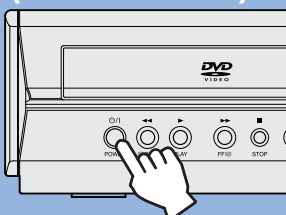

This operation makes "Timer-Link" been off after finishing Timer-Link record. If you keep "Timer-Link" on, you don't need this step.

**5** Power On HR-XVC14B/15S