

BC-2488 Connection diagram

All unused inputs and outputs pins are connected to Ground.

