

Sony MD Parallel port config.

MDS B3/4P  
MDS B5/6P

Sony MD Remote  
Connector Configuration

Pin #	Signal
1	GND (for status out)
2	PLAY STATUS OUT
3	EOM STATUS OUT
4	STOP STATUS OUT
5	EJECT LED OUT
*	6 NEXT COMMAND IN
7	GND (for command IN)
8	Reserved
9	EDIT COMMAND IN
10	ENTER COMMAND IN
11	KILL LOCAL COMMAND IN
12	Reserved
13	Reserved
14	CUE STANDBY LED OUT
15	PAUSE STATUS OUT
16	RED STATUS OUT
17	PLAY/PAUSE LED OUT
18	5 V
19	Reserved
*	20 PLAY IN COMMAND
*	21 STOP COMMAND
22	DISPLAY COMMAND IN
23	REC COMMAND IN
24	CUE STANDBY COMMAND IN
*	25 PREVIOUS COMMAND IN

+5 out  
max 50 mA

Output Level

L: < 0.8 V 25 mA  
H: open collector  
12 V max

Note: Do not set more than two  
COMMAND IN pins (6, 9, 10, 20, 21,  
22, 23, 24, and 25) to LOW at the same  
time.