

Sony MZ-R55 User's Manual



Table Of Contents

Welcome	Look At Controls
MD Recording	MD Playing
Various Ways Of Recording	Various Ways Of Playing
Editing Recorded Track	Labeling Recorded Tracks
Power Sources	Additional Information

Operating Instructions



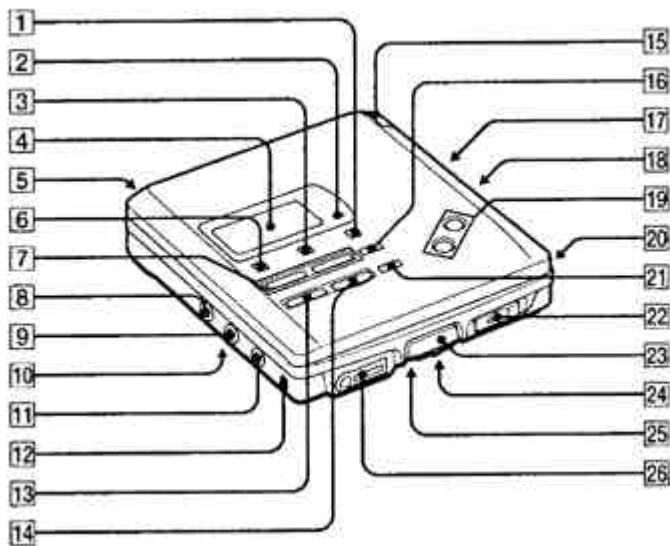
Welcome!

Welcome to the world of the MiniDisc! Here are some of the capabilities and features you'll discover with the new MiniDisc Recorder.

- Recording MD Walkman in an ultra-compact body -- Almost as small as a playback-only MD Walkman ; easy to carry in your pocket or bag.
- Low power consumption design -- runs on a single "chewing gum" type rechargeable battery.
- Simultaneous labelling feature -- No more waiting for the recording to end ; you can label tracks

- and discs while the MD is being recodered.
 - Shock-resistant memory -- Offsets up to 40 seconds of optical read errors.
 - High-fidelity recording -- Low-noise, low-distortion, high-fidelity recording through the optical digital input jack.
 - Digital synchro-recording -- The recorder automatically starts and pauses recording in sync with operation on the connected digital equipment.
 - Sampling rate converter -- This unit enables you to record programs from digital equipment using other sampling rates, such as a BS tuner or DAT deck.
 - Long recording with monaural sound -- You can record up to 148 minutes on a disc using monaural recording.
 - Date and time stamp function -- The built-in clock automatically records the date and time whenever you make a recording.
 - Digital AGC (Auto Gain Control) -- Automatic recording level adjustment without sacrificing superb digital sound.
 - Title function -- You can see disc and track titles in the display on the main unit or the remote control while you are playing/recording an MD.
-

Looking at the controls

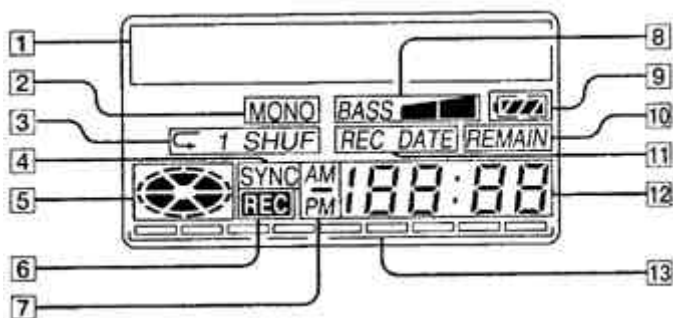


The recorder

- 1 END SEARCH button**
- 2 REC lamp**
- 3 DISPLAY button** -- Press to display the current play mode, the remaining time of the current track, the remaining time of the disc, or the recording date and time.
- 4 Display window**
- 5 DC IN 3V jack**
- 6 MODE button** -- Each time you press here while playing an MD, the recorder plays the MD in

a different play mode: normal play, all repeat, single repeat, or shuffle repeat. Press here while recording to select monaural recording.

- 7 **◀◀/▶▶** (search/AMS) **buttons**
- 8 **LINE IN (OPTICAL) jack**
- 9 **MIC (PLUG IN POWER) jack**
- 10 **MIC SENS** (mic sensitivity) **switch** (at the bottom)
- 11 **LINE OUT jack**
- 12 **DIGITAL MEGA BASS button** -- *Press to emphasize bass sound.*
- 13 **■** (stop) **button** / **CHARGE button**
- 14 **▶** (play) **button**
- 15 **Battery Compartment**
- 16 **EDIT/ENTER button**
- 17 **AVLS** (Automatic Volume Limiter System) **switch** (at the bottom) -- *Slide to LIMIT to limit the maximum volume.*
- 18 **SYNCHRO REC** (synchro-recording) **switch**
- 19 **VOLUME +/- buttons**
- 20 **T MARK** (track mark) **button**
- 21 **||** (pause) **button**
- 22 **REC** (record) **switch**
- 23 **ERASE button**
- 24 **HOLD switch** -- *Slide to lock the controls of the recorder.*
- 25 **CLOCK SET button** (at the bottom)
- 26 **🎧/REMOTE** (headphones/remote) **jack**






The display window of the recorder

1 Character information display -- Displays the disc and track name, date, error messages, track numbers, etc.

* Disc and track names appear only with MDs that have been electronically labeled.

2 MONO (monaural) **indication**

3 Play mode indication -- Shows the play mode of the MD.

-  (all repeat): All tracks play repeatedly.
-  1 (single repeat): One track plays repeatedly.
-  SHUF (shuffle repeat): Tracks will be repeated in random order.

4 SYNC (synchro-recording) **indication** -- Lights up while synchro-recording.

5 Disc indication -- Shows that the disc is rotating for recording, playing or editing an MD.

6 REC indication -- Lights up while recording. Flashes when standing by for recording.

7 AM/PM indication -- Lights up along with the time indication in the 12-hour system.

8 Mega bass indication

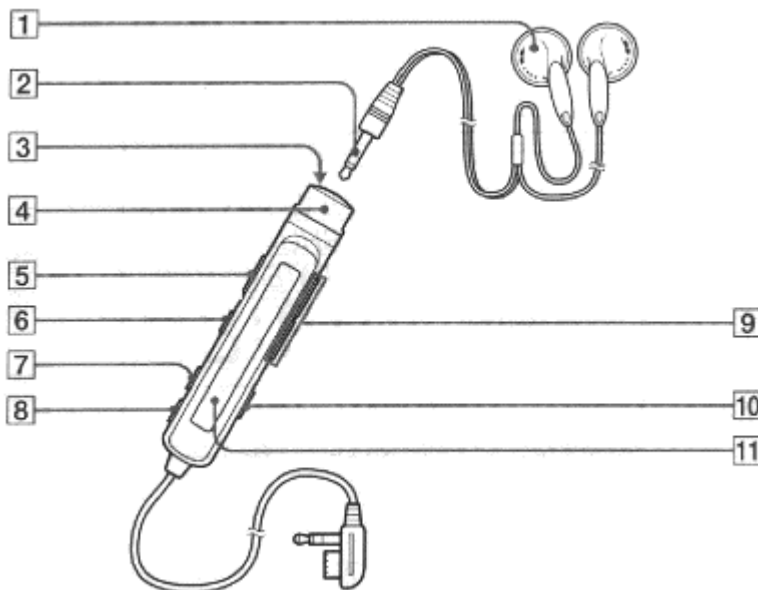
9 Battery indication -- Shows battery condition. While charging the rechargeable battery, this indication shows the charging condition.

10 REMAIN (remaining time/tracks) **indication** -- Lights up along with the remaining time of the track, remaining time of the MD, or remaining number of tracks.

11 REC DATE (recorded/current date) **indication**

12 Time Display -- Shows the elapsed time of track being recorded or played.

13 Level meter -- Shows the level of the MD being played or recorded. **Time display** -- Shows the elapsed time of the track being recorded or played.



The headphones with a remote control

- 1 Headphones** -- *Can be replaced with optional headphones.*
- 2 Stereo mini plug**
- 3 ■ (stop) button**
- 4 Control** -- *To play, turn to ►•►► during stop. Turn to ►•►► during play to search the beginning of the succeeding track; hold in this position to fast-forward. Turn to ◀◀◀ during play to search the beginning of the preceding track; hold in this position to rewind.*
- 5 HOLD switch** -- *Slide to lock the controls of the remote control.*
- 6 || (pause) button**
- 7 PLAY MODE button**
- 8 DISPLAY button**
- 9 VOL (volume) +/- buttons** -- *When the AVLS switch is set on, you cannot increase the volume to the maximum. To increase the volume above the limited level, set the AVLS switch to off.*
- 10 TRACK MARK button**
- 11 Display window**

MD recording



Recording an MD right away!

Use a line cable (not supplied) to hook up an analog source. The source sound of CDs or tapes will be sent as an analog signal and recorded digitally. If you want to record programs from digital equipments or a microphone, see "[Various ways of recording](#)". Premastered MDs cannot be recorded over.

1 Make connections.

- Connect the LINE IN (OPTICAL) jack of recorder to the LINE OUT R(red)/L(white) jacks of the source with a line cable. The recorder switches to analog input automatically.
- Connect the DC IN 3V jack of the recorder to a wall outlet with the supplied AC power adaptor.

When the recorder has different sound sources connected at the same time, the recorder switches to the digital, microphone, or analog input in this order of priority.

2 Insert a recordable MD.

- Press OPEN switch and open the lid.

- Insert a recordable MD with the label side facing up, and press the lid down to close.

3 Select recording start point. If you want to add a recording to the end of the previous recording, press END SEARCH button. (If you want to start recording from the beginning, skip this step.)

4 Start recording.

- Press and slide the REC switch to the right. "REC" lights up and recording starts.
- Play the sound source. The level of the recorded sound is adjusted automatically.

To stop recording, press ■. Do not move or jog the recorder or disconnect the power source while the "Data Save" or "Toc Edit" indication is flashing in the display.

To	Press
Pause	⏸.(1) Press ⏸ again to resume recording.
Record over partway through the previous recording	▶, ▶▶ or ◀◀ to find the start point of recording and press ■ to stop. Then slide the REC switch.
Remove the MD	■, then slide the OPEN switch and open the lid.(2)

(1) A new track mark is added at the point where you pressed , and the recording will be marked with the new track number when you resume recording.

(2) Once you open the lid, the point to start recording will change to the beginning of the first track. When recording on a recorded MD, check the point to start recording on the display.

If the recording does not start

Make sure the MD is not record-protected. If the tab at the side of the MD is open, slide it back so the tab is visible.

Note

If the power supply is disrupted (i.e. the battery is removed or becomes exhausted or A.C power adaptor is disconnected) when the recorder is operating, the lid will not open until the power is restored.


MD playing



Playing an MD right away!

If you want to use the rechargeable battery, be sure to recharge them before playing.


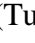
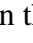
1 Make connections.

- Connect the remote control-equipped headphones (supplied to the /REMOTE jack).
- Connect the DC IN 3V jack of the recorder to a wall outlet with the supplied AC power adaptor.





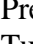






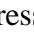

2 Insert an MD.


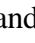
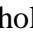
- Slide the OPEN switch and open the lid.
- Insert an MD with the label side facing up, and press the lid down to close.

3 Start playing.

- Press  (Turn the control to • on the remote control). A short beep sounds in the headphones.
- Press the VOLUME +/- buttons to adjust the volume.

To stop play, press .

To	Do this (Beeps in the headphones)
Pause	 . (Continuous short beeps) Press  again to resume play.
Find the beginning of the current track	Press  once. Turn the control to  on the remote control. (Three short beeps)
Find the beginning of the next track	Press  once. Turn the control to  •  on the remote control. (Two short beeps)
Go backwards while playing ⁽¹⁾	Keep pressing  . Keep the control turned to  on the remote control.
Go forward while playing ⁽¹⁾	Keep pressing  . Keep the control turned to  •  on the remote control.
Remove the MD	 , then slide the OPEN switch and open the lid. ⁽²⁾

⁽¹⁾ To go backwards or forward quickly without listening, press  and hold down  or  (keep the control turned on the remote control).

⁽²⁾ Once you open the lid, the point to start play will change to the beginning of the first track.

If the playback does not start

Make sure the recorder is not locked. If it is locked, slide the HOLD switch in the opposite direction of the arrow.

When using optional headphones

Use headphones with a stereo mini-plug. You cannot use headphones with a micro-plug.

Notes

- The sound may skip during playback when the recorder is exposed to continuous vibration, such as while jogging.
- If the power supply is disrupted (i.e. the battery is removed or become exhausted or the A.C power is disconnected) when the recorder is operating, the lid will not open until the power is restored.

Various ways of recording**Connecting digital and analog inputs**

The recorder selects digital or analog input according to how the sound source is hooked up.

Input Difference	Digital input	Analog (line) input
Connectable source	Equipment with an optical digital output jack	Equipment with an analog (line) output jack
Usable cord	Digital cable (with an optical or an optical mini-plug)	Line cable (with 2 phono plugs or a stereo mini-plug)
Signal from the source	Digital	Analog Even when a digital source (such as a CD) is connected, the signal sent to the recorder is analog.
Recorded track numbers	Marked (copied) automatically... ...at the same	Marked... ...after more than 2 seconds of silence.

	positions as the source. ...when recording is paused.	...when recording is paused. You can erase unnecessary marks after recording.
Recorded sound level	Same as the source	Adjusted automatically. You can also adjust it manually.

Recording with digital input (optical cable required)

Use an optical cable (POC-5B or POC-5AB, not supplied) to hook up a digital source such as a CD or DAT. The source sound will be sent and recorded as a digital signal.

- 1** Connect the LINE IN (OPTICAL) jack of the recorder to the optical digital output jack of the source with an optical cable (not supplied).
The recorder switches to digital input automatically.
- 2** Connect the power source.
To use on AC power, see "Recording an MD right away!" To use on other power sources, see "Power sources".
- 3** Insert a recordable MD.
Slide the OPEN switch to open the lid, insert a recordable MD, and close the lid.
- 4** Press and slide the REC switch to the right.
"REC" lights up and recording starts.
- 5** Play the sound source.

To stop recording, press ■.

Synchro-recording from a digital source

You can easily dub a digital source on an MD by using the SYNCHRO REC switch. Before synchro-recording, be sure to make digital connection and insert a recordable MD.

- 1** Slide the SYNCHRO REC switch to ON.
"SYNC" lights up in the display.
- 2** Press and slide the REC switch to the right.
"REC" lights up in the display.
The recorder starts recording when you start playing the source player.

To stop recording, press ■.

Tips

- You cannot pause recording manually during synchro-recording.
- When there is no sound from the source player for more than 3 seconds during synchro-recording, the recorder stands by for recording automatically. When the sound comes from the source player, the recorder starts synchro-recording again. When the MD player is in recording pause for longer than 5 minutes, recording stops automatically.

Note

Do not switch SYNCHRO REC after step 2. Recording may not be made properly.

Recording from a microphone

Connect a microphone to the MIC (PLUG IN POWER) jack. Use a stereo microphone (ECM-717, ECM-MS097, ECM-MS957, etc., not supplied).

- 1** Select the sensitivity with the MIC SENS switch.
Usually, set it to HIGH. When recording loud sounds such as a live concert, set it to LOW.
- 2** Insert a recordable MD.
Slide the OPEN switch to open the lid, insert a recordable MD, and close the lid.
- 3** Press and slide the REC switch to the right.
"REC" lights up and recording starts.

To stop recording, press ■.

Recording in monaural for double the normal recording time of an MD

Before recording, make connections to the sound source and the power source, and insert a recordable MD.

- 1 While pressing **■**, press and slide the REC switch to the right.
The recorder stands by for recording.
- 2 Press the MODE button.
"Mono REC" appears in the display, and the recorder switches to monaural recording.
- 3 Press **■** again to start recording.
- 4 Start the sound source.

Tips

- The recorder switches back to stereo recording when you press **■** to stop recording.
 - If you record in monaural from a stereo source, the sounds from left and right will be mixed.
 - The MDs recorded in monaural can be played back only with an MD player/recorder that has the monaural playing function.
-

Adjusting the recording level (Manual recording)

When you record with an analog (line) input, the sound level is adjusted automatically. If necessary, you can set the level manually.

- 1 While holding down **■**, hold the REC switch to the right for more than 2 seconds.
"ManualREC" appears, and the recorder stands by for recording.
- 2 Play the source.
- 3 While observing the level meter in the display, adjust the recording level by pressing **▶▶** (+) or **◀◀** (-).
Set the level so that it hits the seventh indicator from the bottom at maximum input level.
- 4 Press **■** again to start recording.

Tips

- The recorder switches back to automatic level adjustment when you press **■** to stop recording.
 - The recording level should be adjusted while the recorder is in standby mode. You cannot adjust it while recording.
-

Setting the clock to stamp the recorded time

To stamp the date and time on the MD when you record, you need to set the clock.

- 1 Connect the supplied AC power adaptor.
- 2 Press CLOCK SET button at the bottom of the recorder with a pointed object.
The digits of the year flash.
- 3 Change the current year by pressing ◀◀ or ▶▶.
To change the digits rapidly, keep pressing ◀◀ or ▶▶.
- 4 Press ▶ to enter the year.
The digit of the month flashes.
- 5 Repeat steps 3 and 4 to enter the current month, date, hour, and minute.
When you press ▶ to enter the minute, the clock starts operating.

If you make a mistake while setting the clock

Press ■, and repeat the steps above.

Press ▶ to locate the digit to be changed.

To display the time in the 24-hour system

Press DISPLAY button while setting the clock. To change the clock to the 12-hour system, press DISPLAY again.

Charging the built-in battery for the clock

After setting the clock, leave the recorder connected to the AC power for about 2 hours to charge the built-in battery for the clock. Once charged, the built-in battery will last for about a month without being connected to any of the power sources. The recorder will automatically charge the built-in battery while operating on AC power, a rechargeable battery or dry batteries.

Various ways of playback



Playing tracks repeatedly

Press MODE (PLAY MODE on the remote control) while the recorder is playing an MD.

Each time you press MODE (PLAY MODE on the remote control), the play mode indication changes as follows:

pressed once...

(none) (normal play)

All the tracks are played once.

pressed again...

"↺" (all repeat)

All the tracks are played repeatedly.

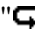
pressed again...

"↺1" (single repeat)

A single track is played

repeatedly.

pressed again...

" SHUF" (shuffle repeat)

All the tracks are played repeatedly in random order.

Connecting to a stereo system


Connect the LINE OUT jack of the recorder to the line in jacks of an amplifier or a tape player with a line cable (not supplied). The output is analog. The recorder plays the MD digitally and sends analog signals to the connected equipment.

Editing Recorded Tracks



You can edit your recordings. Premastered MDs cannot be edited.

Notes


-When you press  after editing, "Toc Edit" flashes for about a second. Do not move or jog the recorder or disconnect the power source while the indication is flashing.




-You cannot edit on an MD with its tab open for protection. Before editing, close the tab at the side of the MD.


Erasing a track

You can quickly erase a recorded track. Note that once a recording has been erased, you cannot retrieve it.

1 Press the EDIT/ENTER button while playing the track you want to erase.

" : Name" flashes in the display, and the recorder plays the selected track repeatedly. Check the track number in the display

2 Press  or  repeatedly until " : Erase" flashes in the display.


3 Press EDIT/ENTER again. "Erase Ok?" and "Push ENTER" appear alternately in the display. To cancel erasing, press .

To erase a part of a track

Add track marks at the beginning and the end of the part you want to erase, then erase the part.

Erasing a whole disc

You can erase all the tracks on a disc at a time. Note that once a recording has been erased, you cannot retrieve it.

- 1 Press EDIT/ENTER on the recoder
 - 2 Press **⏮** or **⏭** repeatedly until "  : Erase " flashes in the display.
 - 3 Press EDIT/ENTER again. "All Erase?" and "Push ENTER" appears alternately in the display. To cancel erasing, press **■** or T MARK.
 - 4 Press EDIT/ENTER again "TOC Edit" in the display and all the tracks will be erased and all the tracks will be erased. When erasing is complete, "BLANK DISC" appears in the display.
-

Adding a track mark

You can insert a track mark into a track.

- 1 While the recorder is playing or pausing an MD, press T MARK button on the recorder at the point you want to mark.
"MARK ON" appears in the display, and the track mark is added.

To add track marks while recording

Press T MARK button while recording (except while Synchro-recording).

Erasing a track mark

When you record with analog (line), input, unnecessary track marks may be recorded. You can erase a track mark to combine the tracks before and after the track mark.

- 1 While playing the track with the track mark you want to erase, press **||** to pause.
- 2 Find the track mark by pressing **⏮** slightly.
"00:00" flashes in the display.
- 3 Press the T MARK button to erase the mark.
The track mark is erased and the two tracks are combined. The number of the newly combined track will be that of the first track and the succeeding tracks will be renumbered.

Moving recorded tracks

You can change the order of the recorded tracks.

On the recoder

- 1 Press EDIT/ENTER while playing the track you want to move.
" 🎵 : Name" flashes in the display and the recoder plays the selected track repeatedly
- 2 Press ⏮ or ⏭ repeatedly until "MOVE" flashes in the display again.
- 3 Press the EDIT/ENTER button again.
- 4 Press ⏮ or ⏭ repeatedly to select the destination track number.
To cancel erasing, press ■ or T MARK.
- 5 Press EDIT/ENTER again. The track moves to the selected destination track.

On the remote control




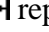
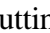

- 1 Press DISPLAY for 2 seconds or longer while playing the track you want to move.
" 🎵 : Name" flashes in the display and the recoder plays the selected track repeatedly
- 2 Turn the control until " 🎵 : Move" appears in the display.
- 3 Press ■.
- 4 Turn the control to select the destination track number.
- 5 Press ■ again. The track moves to the selected destination track.

Labeling Recordings



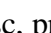



You can label the MDs and tracks you recorded with letters, numbers, and marks. Each label can be made up of up to 200 characters, and each MD can include up to 1700 characters.




Labelling a disc during stop

- 1 Insert a disc
To label a disc, that is already in the recorder
Press ■ to stop.
- 2 Press EDIT/ENTER .
"  : Name" flashes in the display
- 3 Press EDIT/ENTER again.
- 4 .Press  or  repeatedly to select a letter and press  to enter. The selected letter stops flashing and the cursor moves to the next input position.
Press ■ to switch between katakana, the alphabets and symbols/numbers. Press VOLUME +/- to move the cursor to left or right.
Press  when inputting alphabet, aymbols or numbers to change the letter to the one before/next one. Press  to go back.
Press MODE to delete a letter and move back all following letters to the left.
Press ■ or T MARK to cancel labeling.
- 5 Repeat step 4 and enter all characters of the label name.
- 6 Press the EDIT/ENTER
- 6 The track or disc is labelled.

Labeling a track or a disc during recording



- 1 Press EDIT/ENTER during recording "  : Name" flashes in the display.
- 2 To label a disc, press  or  repeatedly until "  : Name" flashes in the display, then press EDIT/ENTER.
- 3 Follow steps 4 to 6 of " **Labeling a disc during stop** " above..

Labeling on the remote control





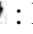
- 1 Insert a disc
To label a disc, that is already in the recorder
Press ■ to stop.
- 2 Press DISPLAY for 2 seconds or longer until "  : Name" flashes in the display.
- 3 Press ■.
- 4 Turn the control to select a letter and press ■ to enter.
The selected letter stops flashing and the cursor moves to the next input position.
Press ■ to switch between katakana, the alphabet and symbols/numbers.
Press VOLUME +/- to move the cursor to left or right.
Turn to the control to  when inputting alphabet, symbol or numbers to change the letter to one before/
next one. Turn to  to go back.
Press DISPLAY to insert a blank space to type in a new letter.
Press PLAY MODE to delete a letter and move back all following letters to the left.
Press TRACK MARK to cancel labeling.
- 5 Repeat step 4 and enter all characters of the label name.
- 6 Keep pressing ■ for 2 seconds or longer.

The track or disc is labeled.

Labeling a track during playback

- 1 Insert a disc and play the track you want to label
- 2 Press DISPLAY for 2 seconds or longer. "  : Move" appears in the display.
- 3 Press 
The disc is ready to be labeled.
- 4 Follow steps 4 to 6 of "[Labeling a disc during the stop](#)" above, enter the selected character.

Labeling a track a disc during recording

- 1 Press DISPLAY for 2 seconds or longer. "  : Move" appears in the display.
- 2 To label a track, Press .
To label a disc, turn the control to  or  "  : Name" flashes in the display, then press DISPLAY.
- 3 Follow steps 4 to 6 of "[Labeling a disc during stop](#)" above.

To cancel labeling, Press .

Power sources



You can use the recorder on...

- house current.
- a nickel metal hyride rechargeable batter (supplied).
- dry batteries (not supplied).

It is preferable to use the recorder on house current when recording for a long time.

Using on a nickel metal hyride rechargeable battery

Before using the supplied nickel metal hyride rechargeable battery for the first time, you must charge it .

- 1 Connect the supplied AC power adaptor.
- 2 Insert the NH-14WM to the recorder and close the lid.
When charging is completed, battery indication disappears.
A completely discharged battery takes about 3 hours to charge fully and about 2 hours to charge 80%.
- 3 Press **■**/CHARGE.
"Charging" flashes, **☐** appears in the display and charging starts.

Tip

You can use the recorder while charging.

Using on dry batteries/nickel metal hydride rechargeable battery

Be sure rechargeable battery, is fully charged.

1. Insert the fully charged nickel metal hydride rechargeable battery with correct polarity..
-

Using on dry batteries

Use the battery case.

1. Attach the supplied battery case.
 2. Insert the dry batteries with correct polarity.
-

Battery life

Batteries	Recording	Playback
NH-14WM nickel metal hydride rechargeable battery	Approx. 2.5 hours	Approx. 4 hours
R6 (size AA) Sony alkaline dry batteries LR6(SG) x 2	Approx. 5 hours	Approx. 10 hours
NH-14WM + LR6(SG) x 2	Approx. 9.5 hours	Approx. 16 hours

When to replace the batteries

When the dry batteries or rechargeable battery are weak, the battery indicator is flashing, or "LOW BATT" appears in the display. Replace the dry batteries or charge the rechargeable battery.

Notes on dry batteries

Incorrect battery usage may lead to leakage of battery fluid or bursting batteries. To prevent such accidents, observe the following precautions:

- Insert the + and - poles of the batteries correctly.
- Do not install new and used batteries or different kinds of batteries together.
- Do not try to recharge the batteries.
- When the recorder is not used for a long time, be sure to remove the batteries.
- If a battery leak should develop, carefully and thoroughly wipe away battery fluid from the battery compartment before inserting new ones
- When replacing the dry batteries, replace both batteries with new ones.
- The recorder does not operate properly: always use two dry batteries..

Additional information



Messages

If the recorder cannot carry out an operation, error messages may flash in the display window as follows.

- BLANK DISC** You tried to play an MD with no recording on it.
- DISC ERR** The recorder cannot read the MD (it is scratched or dirty). Reinsert the MD. If the same message still appears, replace the MD.
- DISC FULL** There is no more space to record on the MD (less than 12 seconds available).
- Data Save** The MD player is recording information (sounds) from the memory to the disk. Wait until this process is completed. Do not expose the player to any physical shock, nor disrupt power supply.
- Toc Edit** The MD player is recording information (track start and end position) from the memory to the disk. Wait until this process is completed. Do not expose the player to any physical shock, nor disrupt power supply.
- BUSY** You tried to operate the recorder while it was accessing the recorded data. Wait until the message goes out (in rare cases, it may take about a minute).
- NAME FULL** You tried to enter more than 200 characters of track or disc name, or the characters entered in an MD are more than 1700.
- Hi DC in** The power supply is higher than required. Use the recommended power sources.
- HOLD** You tried to operate the recorder with the HOLD switch slid in the direction of the arrow. Slide back the switch.
- LOW BATT** The rechargeable battery or dry batteries are weak. Charge the rechargeable battery or replace the dry batteries.
- MEM OVER** You started recording when there is no indication in the display, with the recorder

receiving continuous vibration. Put the recorder on a stable place and start recording again.

- NO COPY** You tried to make a copy from a disc that is protected by the Serial Copy Management System. You cannot make copies from a digitally connected source which was itself recorded using the digital connection. Use the analog connection instead.
- NO DISC** You tried to play or record with no disc in the recorder.
- NO SIGNAL** The recorder could not detect digital input signals. Make sure that the source is connected firmly. If the message appears while recording, press ■ to end recording.
- P/B ONLY** You tried to record or edit on a premastered MD (P/B means playback).
- PROTECTED** You tried to record or edit on an MD with its tab in the record-protect position.
- SORRY** You tried to erase a track mark while playing the MD or at the beginning of the first track.
You tried to erase a track mark to combine tracks the recorder cannot combine.⁽¹⁾
- TEMP OVER** Heat has built up in the recorder. Wait until the recorder cools down.
- TR FULL** You tried to record more than 254 tracks.
- TrPROTECT** You tried to record over or edit a track which has been protected from being recorded over.⁽²⁾

⁽¹⁾ If you have recorded or erased many times on the same MD, the data of a single track may be scattered throughout the MD. When the data is scattered in groups of less than 12 seconds long, the recorder will not be able to combine the tracks.

⁽²⁾ Track-protected MiniDiscs-- Some MD recorders will let you protect individual tracks from being recorded over. This recorder, however, does not offer this feature.

Editing

You pressed a key on the recorder while editing on the remote control, or vice versa.



[Top](#)

Return to the [MiniDisc Community Page](#).