

DVD Player/ Video Cassette Recorder

Operating Instructions _____ **US**

Manual de instrucciones _____ **ES**

For customers in the USA

If you have any questions about your Sony DVD-VCR, you may call **Sony Customer Information Center** at 1-800-VHS-SONY (847-7669).

For all other Sony product questions, please call **Sony Customer Information Center** at 1-800-222-SONY (7669).

Or write to: **Sony Customer Information Center** 12451 Gateway Boulevard Ft. Myers, FL 33913

For Customers in Canada

If this product is not working properly, please call 1-877-602-2008 for **Peace of Mind Warranty Replacement service**.

For other product related questions please contact our **Customer Information Service Center** at 1-877-899-7669 or write to us at: Customer Information Service 115 Gordon Baker Road, Toronto, Ontario, M2H 3R6



Hi-Fi



SLV-D570H



WARNING


To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

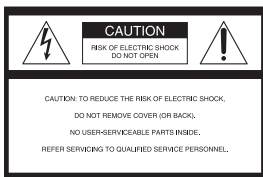

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A Owner's Record

The model and serial numbers are located at the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notes about discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available disc/lens cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.

Precautions

On safety

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- Operate the unit only on 120 V AC, 60 Hz.
- This unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

On placement

- Do not install the unit in a confined space such as a bookshelf or similar unit.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit, discs and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.

On operation

- When you move the player, take out any discs. If you don't, the disc may be damaged.
- If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player and cause damage to the video head, tape, and the optical block. Should this occur, the player may not operate properly. When you first install the player, or when you move it from a cold to a warm location, remove the disc and tape and leave the player turned on for about three hours before operating the player.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

On cleaning

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

On cleaning discs, disc/lens cleaners

 
Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the player to malfunction.

On cleaning the video heads

- **Rough picture**
- **Unclear picture**
- **No picture (or black & white screen appears)**



initial
contamination



terminal

When the video heads are dirty, clean the video heads using a Sony video head cleaning cassette. If a Sony cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony dealer (a standard service fee will be charged). Do not use a commercially available liquid type cleaning cassette, as it may damage the video heads.

On replacement of parts

In the event that this unit is repaired, repaired parts may be collected for reuse or recycling purposes.

US

continued

Copyright

- Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmission and/or program owner.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Table of contents

- 2 WARNING
- 2 Notes about discs
- 3 Precautions
- 7 About this manual
- 7 This player can play the following discs

Getting Started

- 10 Step 1 : Unpacking
- 11 Step 2 : Setting up the remote commander
- 14 Step 3 : Basic hookups
- 20 Step 4 : Selecting a language
- 21 Step 5 : Setting the clock
- 25 Step 6 : Presetting channels
- 29 Step 7 : Setting up the VCR Plus+® system

Advanced Hookups

- 32 S-Video/Component Video/HDMI hookup
- 34 A/V Receiver hookup

Basic Operations

- 36 Playing discs
- 40 Guide to the on-screen display
- 43 Playing a tape
- 47 Recording TV programs
- 50 Recording TV programs using the timer
- 53 Recording TV programs using the VCR Plus+® system
- 56 Checking/changing/canceling timer settings
- 58 Locking the DVD-VCR (Child Lock)

continued

DVD Settings and Adjustments

- 59** Audio Setup
- 62** Screen Setup
- 66** Setting the display or sound track language
- 68** Parental Control (limiting playback by children)

DVD Additional Operations

- 71** Using the DVD's menu
- 72** Zooming into a scene
- 73** Changing the angles
- 74** Displaying the subtitle
- 76** Various play mode functions (Program play, Shuffle play, Repeat play)
- 80** Changing the sound
- 82** Virtual surround setting
- 84** Playing an MP3 audio track
- 90** Playing JPEG image files
- 94** Playing VIDEO CDs with "PBC ON/OFF" Functions

VCR Additional Operations

- 96** Quick Timer Recording
- 97** Recording stereo and bilingual programs
- 98** Searching using various functions
- 100** Changing menu options
- 102** Editing with another VCR








Additional Information

- 104** General setup information
- 107** Troubleshooting
- 112** Glossary
- 114** Specifications
- 115** Index to parts and controls
- 119** DVD Audio/Subtitle Language
- 120** Index

* VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation.
The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.











About this manual

- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the DVD-VCR having the same or similar names.
- “DVD” may be used as a general term for DVD VIDEOS, DVD-RWs/DVD-Rs, and DVD+RWs/DVD+Rs.
- The meaning of the icons used in this manual is described below:

Icon	Meaning
	Functions available for DVD VIDEOS and DVD-RWs/DVD-Rs in video mode or DVD+RWs/DVD+Rs
	Functions available for DVD-RWs/DVD-Rs in VR (Video Recording) mode
	Functions available for VIDEO CDs, Super VCDs or CD-Rs/CD-RWs in video CD format or Super VCD format
	Functions available for music CDs or CD-Rs/CD-RWs in music CD format
	Functions available for DATA CDs (CD-ROMs/CD-Rs/CD-RWs containing MP3* audio tracks or JPEG files)
	Functions available for DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs containing MP3* audio tracks or JPEG files)
	Functions available for VHS VIDEOS

* MP3 (MPEG 1 Audio Layer 3) is a standard format defined by ISO/MPEG which compresses audio data.

This player can play the following discs

Format of discs	
DVD VIDEO	
DVD-RW/-R	 
DVD+RW/+R	  
VIDEO CD/ Music CD	 
CD-RW/-R	 

“DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.

Note about CDs/DVDs

The player can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats:

- music CD format
- video CD format
- MP3 audio tracks and JPEG image files of format conforming to ISO 9660* Level 1/Level 2, or its extended format, Joliet
- KODAK Picture CD format

* A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).


The player can play DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs recorded in the following formats:

- MP3 audio tracks and JPEG image files of format conforming to UDF (Universal Disk Format)
- 8 cm DVD+RW, DVD-RW, and DVD-R recorded with a DVD Video camera


continued

Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEO discs (playback only) labeled with identical region codes. This system is used to protect copyrights.

DVDs labeled  will also play on this player.

If you try to play any other DVD VIDEO, a message will appear on the TV screen to indicate that the disc is not playable. Depending on the DVD VIDEO, no region code indication may be labeled even though playing the DVD VIDEO is prohibited by area restrictions.

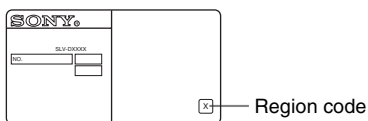

Example of discs that the player cannot play

The player cannot play the following discs:

- CD-ROMs/CD-Rs/CD-RWs other than those recorded in the formats listed on the previous page.
- CD-ROMs recorded in PHOTO CD format.
- Data part of CD-Extras
- DVD Audios
- HD layer on Super Audio CDs
- DVD-RAMs

Also, the player cannot play the following discs:

- A DVD VIDEO with a different region code.
- A disc recorded in a color system other than NTSC, such as PAL or SECAM (this player conforms to the NTSC color system).
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

Notes about DVD+RWs/ DVD+Rs, DVD-RWs/DVD-Rs or CD-Rs/CD-RWs

Some DVD+RWs/DVD+Rs, DVD-RWs/DVD-Rs or CD-Rs/CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device. Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Note on DualDiscs

 

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side.

However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.


Step 1 : Unpacking

Check that you have received the following items with the DVD-VCR:

- Remote commander
- 75-ohm coaxial cable with F-type connectors

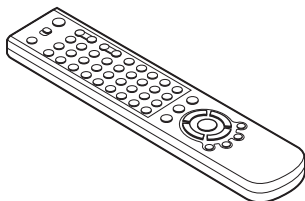

- Size AA (R6) batteries

 

Note

- The supplied remote commander is for the exclusive use of this DVD-VCR.


Step 2 : Setting up the remote commander

Inserting the batteries

Insert two size AA (R6) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.


Insert the negative (–) end first, then push in and down until the positive (+) end clicks into position.


Reattach the cover after inserting the battery.

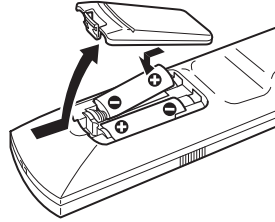

Using the remote commander

You can use this remote commander to operate this DVD-VCR and a Sony TV. Buttons on the remote commander marked with an orange dot (•) can be used to operate your Sony TV.

If the TV does not have the  symbol near the remote sensor, this remote commander will not operate the TV.

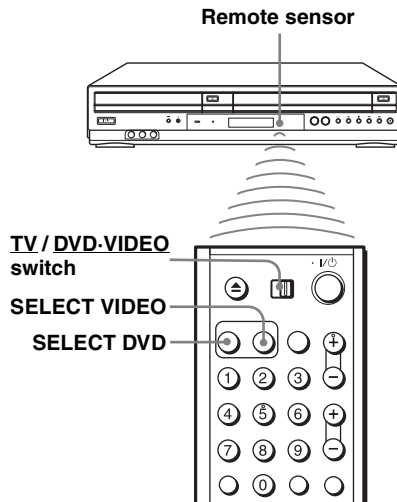

To operate	Set <u>TV / DVD-VIDEO</u> switch to
the DVD player	<u>DVD-VIDEO</u> , then press SELECT DVD and point at the remote sensor at the DVD-VCR
the VCR	<u>DVD-VIDEO</u> , then press SELECT VIDEO and point at the remote sensor at the DVD-VCR
your TV	<u>TV</u> and point at the remote sensor at your TV

continued

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.
- Do not leave the remote commander in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.

Controlling TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the following table, set the appropriate manufacturer's code number.

1 Set TV / DVD-VIDEO switch at the top of the remote commander to TV.

2 Hold down **I/⏻**, and enter your TV's code number using the number buttons. Then release **I/⏻**.

Now you can use the buttons with an orange dot (•) to control your TV.

When the TV/VIDEO switch is set to TV, the remote performs the following:

Buttons	Operations
I/⏻	Turns your TV on or off
VOL +/-	Adjusts the volume of your TV
CH +/-	Selects the channel on your TV
Number buttons and ENTER*	Selects the channel on a Sony TV
MUTING*	Mutes a Sony TV equipped with the muting function
TV/VIDEO	Switches your TV's input source

* for Sony TV only

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

TV brand	Code number
Sony	01 (default)
Akai	04
AOC	04
Centurion	12
Coronado	03
Curtis-Mathes	12
Daewoo	22
Daytron	12
Emerson	03, 04, 14
Fisher	11
General Electric	06, 10
LG/Gold Star	03, 04, 17
Hitachi	02, 03
J.C.Penney	04, 12
JVC	09
KMC	03
Magnavox	03, 08, 12
Marantz	04, 13
MGA/Mitsubishi	04, 12, 13, 17
NEC	04, 12

TV brand	Code number
Panasonic	06, 19
Philco	03, 04
Philips	08
Pioneer	16
Portland	03
Quasar	06, 18
Radio Shack	05, 14
RCA	04, 10
Sampo	12
Sanyo	11
Scott	12
Sears	07, 10, 11
Sharp	03, 05, 18
Sylvania	08, 12
Teknika	03, 08, 14
Toshiba	07
Wards	03, 04, 12
Yorx	12
Zenith	15

Notes

- If you enter a new code number, the code number previously entered will be erased.
- If the TV uses a different remote control system from the one programmed to work with the DVD-VCR, you cannot control your TV with the remote commander.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.

Step 3 : Basic hookups

Before you get started

- Be sure to disconnect the AC power cord of each component before connecting.
- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed. If you connect the AC power cord before the connections are completed, you may not be able to use the Plug and Play function.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV does not match any of the examples provided, see your nearest Sony dealer or qualified technician.

Selecting the best hookup option

There are many ways in which your DVD-VCR can be hooked up. To hook up your DVD-VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your DVD-VCR.

If your TV has audio/video inputs, refer to page 15 for audio/video (A/V) hookup. Then follow one of the hookups below. If your TV does not have A/V inputs, go directly to one of the hookups below.

If you have	Use	Refer to
Antenna only, no cable TV	Hookup 1 A or B (Plug and Play)	Page 16 and 18
No cable box or cable box with only a few scrambled channels	Hookup 1 C (Plug and Play)	Page 17 and 18
Cable box with many scrambled channels	Hookup 2	Page 19

After you have completed the connections, follow the instructions for setup.

After you have completed the setup, you are ready to use your DVD-VCR. Procedures differ depending on the hookup you used.

Caution

Connections between the DVD-VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the DVD-VCR to an antenna or make simultaneous (parallel) antenna and DVD-VCR connections at the antenna terminals of your receiver.

Note to CATV system installer (in USA)


This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Audio/video (A/V) hookup


If your TV has audio/video (A/V) input jacks, you will get better picture and sound if you hook up your DVD-VCR using these connections. If your TV does not have A/V inputs, see the following pages for antenna or cable hookups. Note that “Advanced Hookups” (page 32) explains additional hookup methods that will optimize the picture and sound for a true “hometheater” experience.

If you are not planning to use your DVD-VCR to record programs, you only need to make the connections shown on this page. If you want to record regular or cable TV programs, complete these connections first, and then go to the following pages for antenna or cable hookups.

A Use this hookup if your TV has stereo jacks

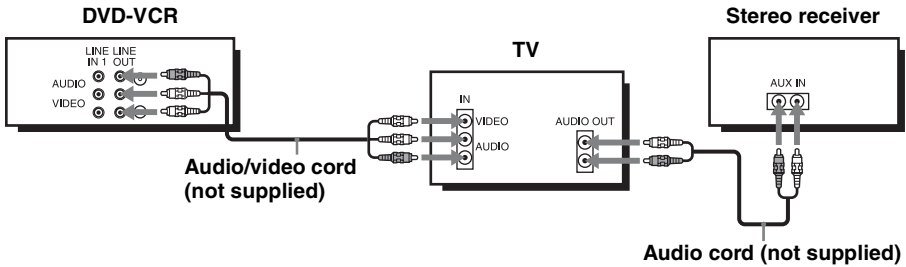

B Use this hookup if your TV does not have stereo jacks

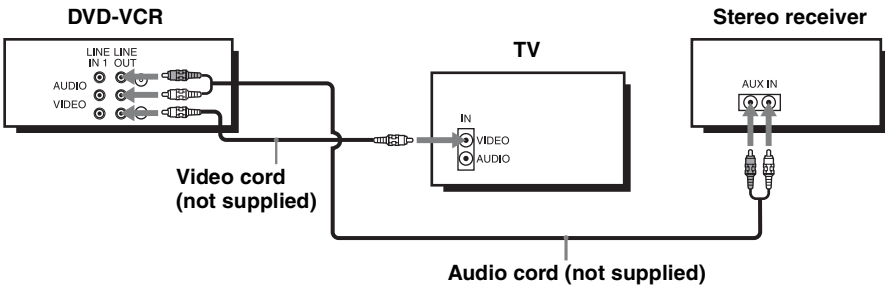

Notes


- To play a tape/disc in stereo, you must use the A/V connection.
- If you do not have a stereo receiver, connect the white LINE OUT/AUDIO L jack to the AUDIO IN jack on your TV.

continued


Hookup 1 (Plug and Play)

A Use this hookup if you are using:

- VHF/UHF antenna (you get channels 2–13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

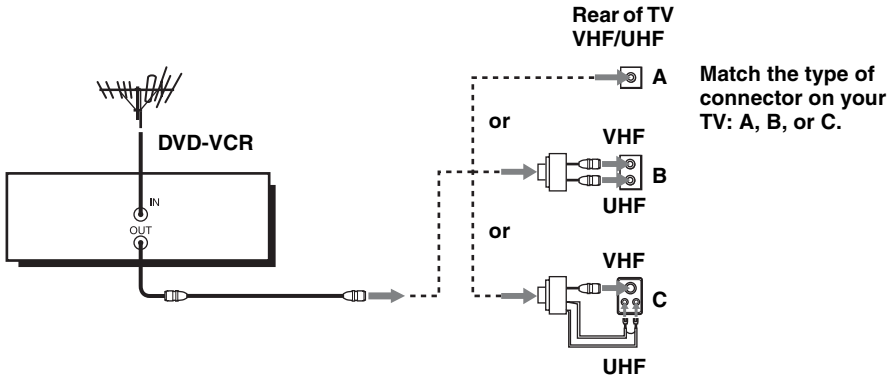

B Use this hookup if you are using a VHF-only antenna (you get channels 2–13 only)

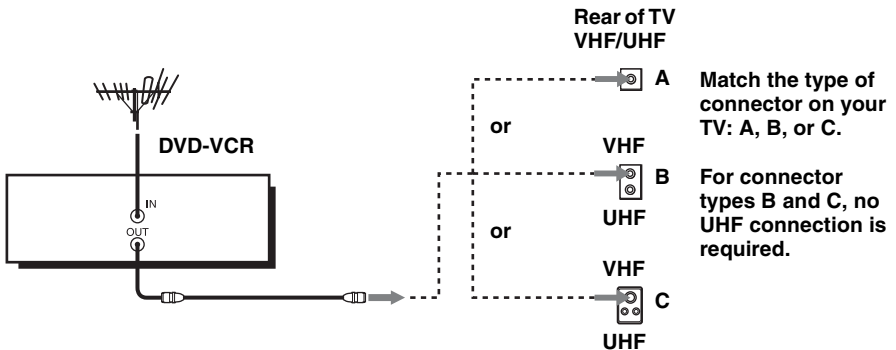

If you cannot connect your antenna cable to the DVD-VCR directly

If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied) (page 106).


- C Use this hookup if you have no cable box, or a cable box with only a few scrambled channels

What you can do with this hookup

- Record any unscrambled channel by selecting the channel on the VCR

What you cannot do

- Record scrambled channels that require a cable box

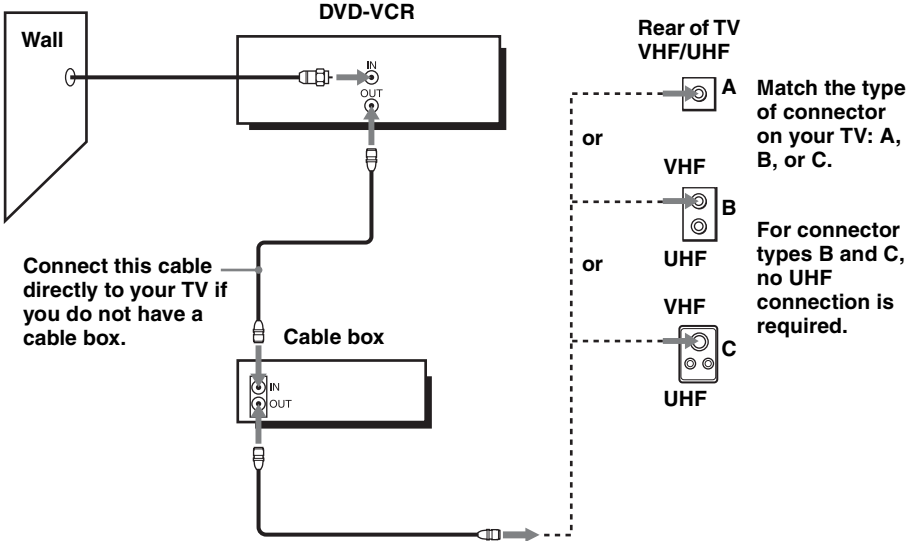


continued


DVD-VCR setup (Hookup 1 continued)

Plug the DVD-VCR into an AC outlet.

The DVD-VCR automatically presets the DVD-VCR's clock and TV channels when the DVD-VCR is plugged into the AC outlet.

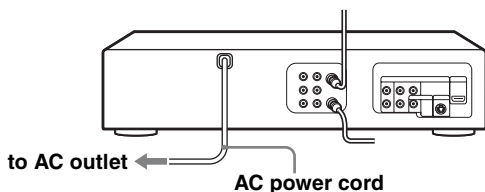

The DVD-VCR starts presetting the clock and channels.

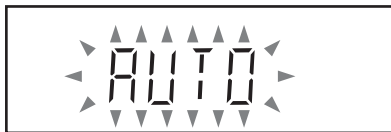

When Auto preset is completed, the current time appears in the display window.



You have now completed DVD-VCR setup.

To begin using your DVD-VCR, go to “Basic Operations” on page 36.

To change the on-screen display language to French or Spanish, see “Step 4 : Selecting a language” on page 20.

The clock is set using a time signal provided by some TV channels. If the clock is incorrect, or “-:-” appears in the display window, see “Using Manual Clock Set” on page 23.

To add or disable channels manually, see “Presetting/disabling channels manually” on page 27.

Notes

- If you connect the AC power cord before the antenna connections are completed, the channels may be incorrectly set. If this happens, see “Step 6 : Presetting channels” on page 25.
- Do not press any buttons on the DVD-VCR or remote commander during Auto preset.
- Auto preset starts automatically only when you plug in the AC power cord for the first time after you purchase the DVD-VCR.
- Auto preset can be performed by pressing **■** on the unit continuously for 5 seconds or more with the DVD-VCR power turned off.

Hookup 2


Use this hookup if you are connecting a cable box with many scrambled channels

What you can do with this hookup

- Record any channel by selecting the channel on the cable box


What you cannot do

- Record with the cable box turned off
- Record one channel while watching another channel

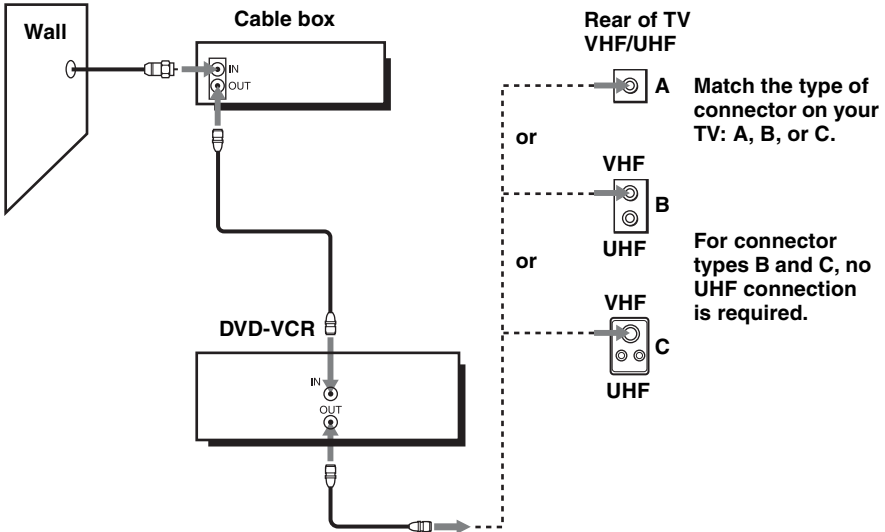

After you have completed hookup...

After you have completed hookup, plug the DVD-VCR into an AC outlet and see “Step 4 : Selecting a language” on page 20.

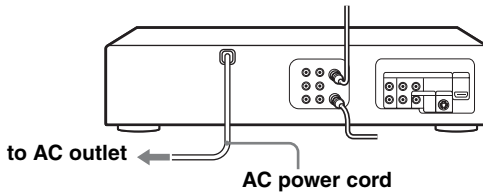




Step 4 : Selecting a language



You can change the on-screen display language.


 
Before you start...

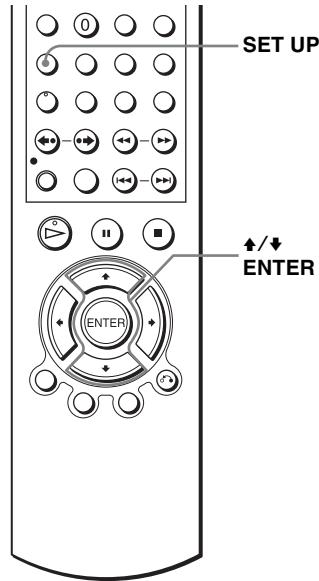- Turn on the DVD-VCR and your TV.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.




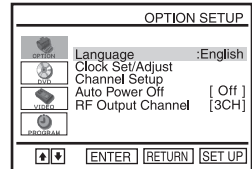

1  Press SET UP, then press  to select (OPTION) and press ENTER.




2  Press  to select "Language", then press ENTER.

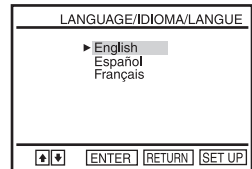The "LANGUAGE/IDIOMA/LANGUE" menu appears.



3  Press  to select the desired language, English, Spanish or French, then press ENTER.

4  Press SET UP to exit the menu.

Step 5 : Setting the clock

You must set the clock on the DVD-VCR to use the timer features properly.


Using the Auto Clock Set feature

Some TV and cable channels transmit time signals with their broadcasts. Your DVD-VCR can pick up this time signal to automatically set the clock.



The Auto Clock Set feature works only if a channel in your area is broadcasting a time signal. If broadcasters in your area are not sending time signals, set the time manually (page 23).

Before you start...


- Turn on the DVD-VCR and your TV.
When using a cable box, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

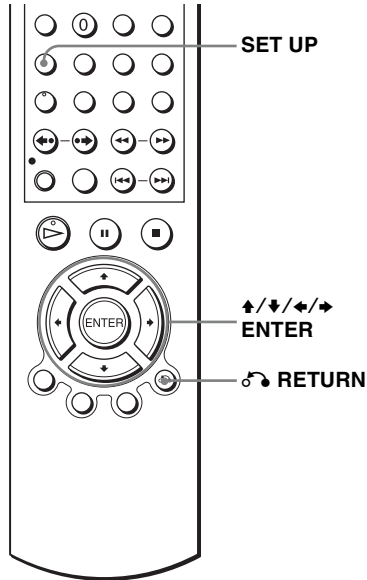

 - 1** Press **SET UP**, then press **↑/↓** to select **(OPTION)** and press **ENTER**.

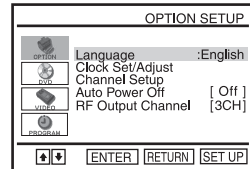

- 2** Press **↑/↓** to select "Clock Set/Adjust", then press **ENTER**.
The "CLOCK SET/ADJUST" menu appears.

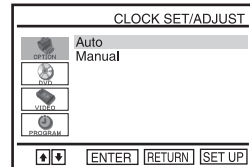


continued

3



Press $\blacktriangle/\blacktriangledown$ to select “Auto”, then press ENTER.



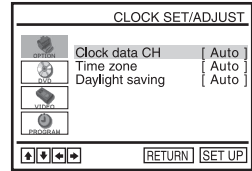


4



Press $\blacktriangle/\blacktriangledown$ to select the item you want, then press $\blacktriangle/\blacktriangledown$ to make the setting.

- For “Clock data CH”
Leave the setting to “Auto” to have the DVD-VCR automatically search for a channel that carries a time signal. Press $\blacktriangle/\blacktriangledown$ to select a channel that carries a time signal. Use this option if you know of a channel that carries a time signal. Most PBS member stations broadcast a time signal. For the fastest response, select your local PBS station.
- For “Time zone”
Select the time zone of your area, or select “Auto” to have the DVD-VCR automatically set your time zone.
The options are:
Auto \leftrightarrow Atl. (Atlantic) \leftrightarrow East (Eastern)
 \leftrightarrow Cen. (Central) \leftrightarrow Mtn. (Mountain) \leftrightarrow
Pac. (Pacific) \leftrightarrow Alas (Alaska) \leftrightarrow
Haw. (Hawaii) \leftrightarrow Auto
- For “Daylight saving”
Select “Yes” or “No” (standard time), or “Auto” to have the DVD-VCR automatically set the daylight saving time.

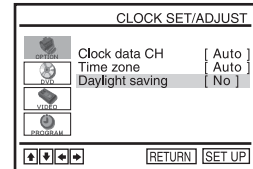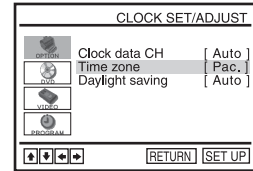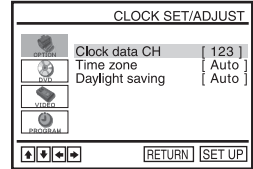

5



RETURN

SET UP



Press \curvearrowright RETURN, then press SET UP to exit the menu.

6

To activate the Auto Clock Set function, turn off the DVD-VCR.


Notes

- The clock cannot be set automatically if you do not receive a channel that carries a time signal in your area. If so, set the clock manually (page 23).
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take up to about 20 minutes. If nothing happens even after you wait about 20 minutes, set the clock manually (page 23).
- If you made Hookup 2, make sure you leave the cable box on.
- The clock display appears when VIDEO mode is selected with no tape inserted or when the DVD-VCR is turned off.



Using Manual Clock Set

Before you start...


- Turn on the DVD-VCR and your TV.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

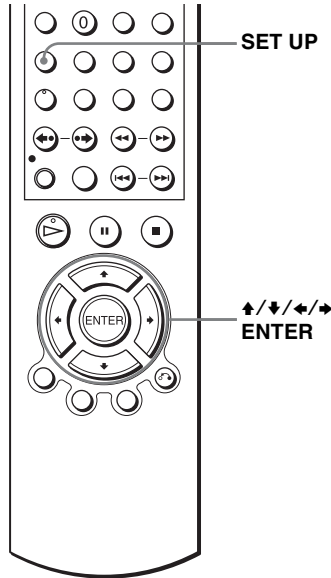

 - 1** Press **SET UP**, then press **↑/↓** to select **OPTION** and press **ENTER**.

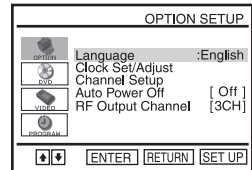

- 2** Press **↑/↓** to select “Clock Set/Adjust”, then press **ENTER**.
The “CLOCK SET/ADJUST” menu appears.

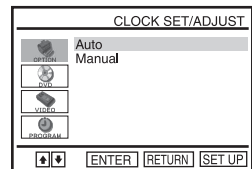


continued

3




Press \uparrow/\downarrow to select “Manual”, then press ENTER.

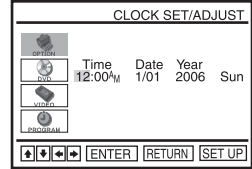

4



Set the hour, minutes, month, day and year in sequence by pressing \leftarrow/\rightarrow to select the item to be set, and press \uparrow/\downarrow to select the digits. The day of the week is set automatically.

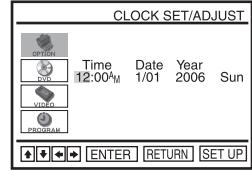

5



Press ENTER to confirm the setting.

6

SET UP



Press SET UP to exit the menu.

Note

- The clock display appears when VIDEO mode is selected with no tape inserted or when the DVD-VCR is turned off.


Step 6 : Presetting channels

This DVD-VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting methods. Then, if there are any unwanted channels, disable them manually. If you have already decided which channels you wish to preset, set them directly using manual presetting methods (page 27).

Presetting all receivable channels automatically

Before you start...

- Turn on the DVD-VCR and your TV.
When using a cable box, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

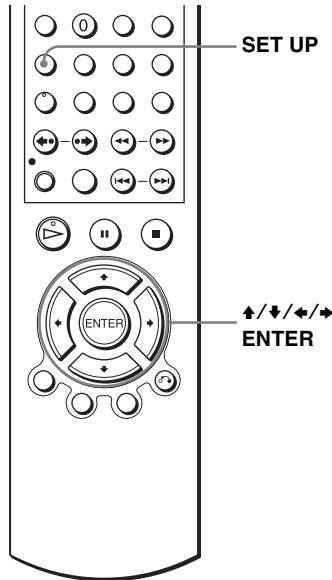


1

SET UP



Press SET UP, then press \uparrow/\downarrow to select (OPTION) and press ENTER.

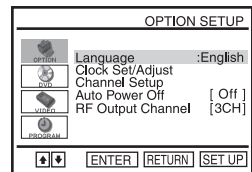


continued

2



Press \uparrow/\downarrow to select “Channel Setup”, then press ENTER.

The “CHANNEL SETUP” menu appears.

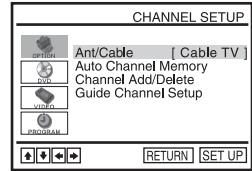

3




Press \uparrow/\downarrow to select “Ant/Cable.”


4



- To preset cable TV channels:
Press \leftarrow/\rightarrow to select “Cable TV.”

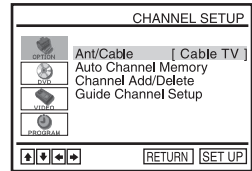

- To preset VHF and UHF channels:
Press \leftarrow/\rightarrow to select “Antenna.”

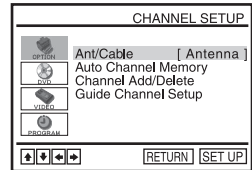


5



Press \uparrow/\downarrow to select “Auto Channel Memory,” then press ENTER.


All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

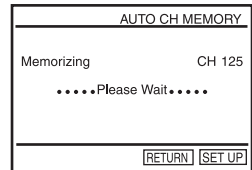




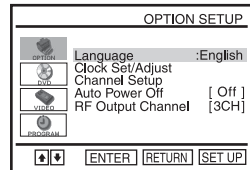
Presetting/disabling channels manually


 
Before you start...

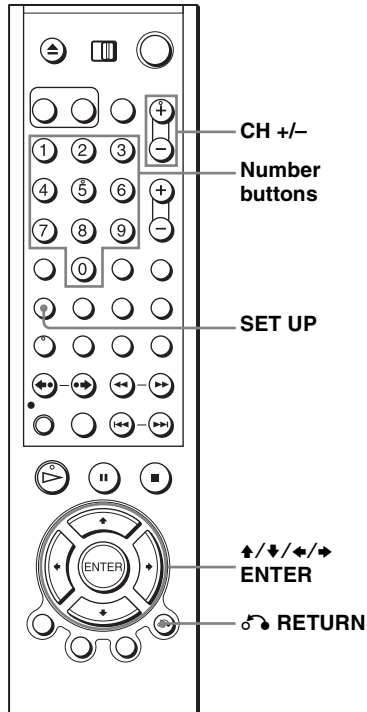- Turn on the DVD-VCR and your TV.
When using a cable box, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.




1  Press SET UP, then press  to select (OPTION) and press ENTER.

2  Press  to select "Channel Setup", then press ENTER.

The "CHANNEL SETUP" menu appears.

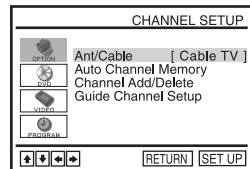

continued

 
3



Press \uparrow/\downarrow to select “Channel Add/Delete,” then press ENTER.

4


• CH/
TRACKING




To preset/disable a channel:

- 1 Press CH +/- or number buttons to enter the channel number.
- 2 Press \leftarrow/\rightarrow to select “ADD” (in memory) or “DELETE” (deleted).
- 3 Press ENTER.

Channel to be preset

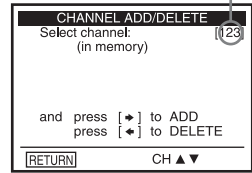

Channel to be disabled

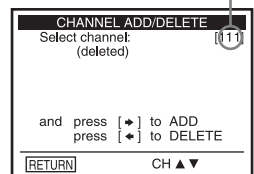

5



RETURN

Press \hookrightarrow RETURN to confirm the setting.

6

SET UP



Press SET UP to exit the menu.

Note

- If you have not preset channels automatically, you cannot preset/disable channels manually.

Step 7 : Setting up the VCR Plus+® system

VHS

Getting Started

How the VCR Plus+ system works

Whenever you want to record a TV program, all you need to do is look up the “PlusCode” number, a number assigned to each program published in the TV section of most newspapers, cable TV listings, and even TV GUIDE magazine. Then, just enter the PlusCode number of the program you want and the VCR is automatically programmed to record that show. It’s that simple.

Example of “PlusCode”

		PlusCode
5:30	14 MOVIE — Musical (2hrs.)	33044
	2 SPORT — Golf (1hr. 25min.)	42060
	CNN — WS 9974	
6:30	2 3 4 DRAMA — Comedy (2hrs.)	17390
	5 SCIENCE AND TECHNOLOGY (1hr. 15min.)	73457

How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that is assigned to that channel in your program guide).


To find the guide channel numbers, look at the “Channel Line-up Chart” in the program guide for your area that features VCR PlusCode numbers. It usually looks like the example to the right.

To set the guide channels, use the Channel Line-up Chart to check that the guide channel numbers match the TV channel your VCR receives. For example, if HBO is listed in the Channel Line-up Chart as channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. If the guide and TV channel numbers are the same, you can skip this procedure.


Example of “Channel Line-up Chart”

CABLE CH	CABLE TV	VCR Plus+ GUIDE CH
16	AMC American Movie Classics	35
17	BRV Bravo (program grid only)	54
20	CNN Cable News Network	42
21	CSP C-SPAN	28
22	DIS The Disney Channel	53
25	DSC The Discovery Channel	37
34	ESN ESPN	34
35	FAM The Family Channel	47
5	HBO Home Box Office	33
27	LIF Lifetime	46
29	MAX Cinemax	45
30	MTV Music Television	48
31	NIK Nickelodeon	38
38	SC Sports Channel	59
39	SCA Sports Channel America	70
45	SHO Showtime	41
17	TBS TBS SuperStation	43
44	TMC The Movie Channel	58
49	TNN The Nashville Network	49
50	TNT Turner Network Television	52
51	USA USA Network	44


continued

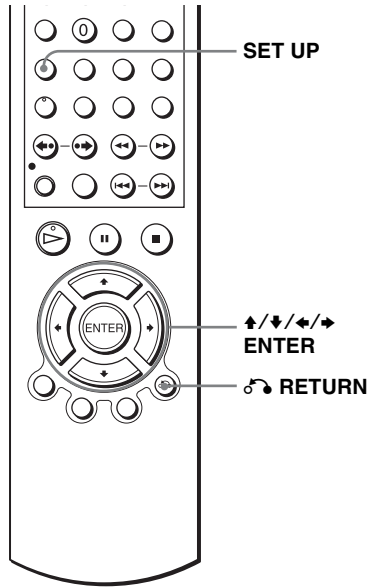

1

 


Press SET UP, then press \uparrow/\downarrow to select (OPTION) and press ENTER.

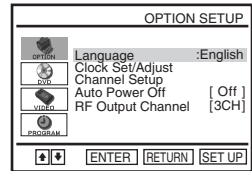

2




Press \uparrow/\downarrow to select "Channel Setup", then press ENTER.
The "CHANNEL SETUP" menu appears.

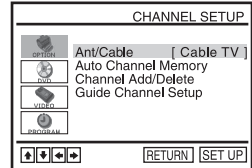

3



Press \uparrow/\downarrow to select "Guide Channel Setup," then press ENTER.

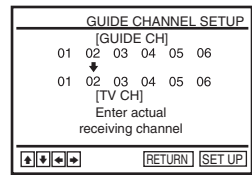

4

The upper row shows VCR Plus+ guide channels and the lower row shows TV channels or cable box out put channels. Press ◀/▶ to select the channel number that does not match the guide channel.

5

- If you made Hookup 1 (page 16, 17, 18) : Enter the actual number on your TV (and VCR), then press ▲/▼.
- If you made Hookup 2 (page 19): Enter the cable box output channel (usually 2, 3, or 4), then press ▲/▼.

6

Repeat steps 4 and 5 for each channel number that does not match.

7

RETURN

Press ↶ RETURN to confirm the setting.

8

SET UP



Press SET UP to exit the menu.


S-Video/Component Video/HDMI hookup

DVD_{Video} **DVD_{vR}** **VCD** **DATA-CD** **DATA-DVD**

Select one of the following patterns **A**, **B** or **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver). You can enjoy higher quality images when playing DVDs.

Make audio connections using the LINE OUT AUDIO L/R jacks or DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT jacks on the right side of the DVD-VCR when you use S-VIDEO/Component Video hookup. See page 34 for audio connections.

If your TV accepts progressive (480p) format signals, you must use the connection **B**. Select pattern **C** when connecting to a TV, projector or AV amplifier (receiver) equipped with HDMI input.

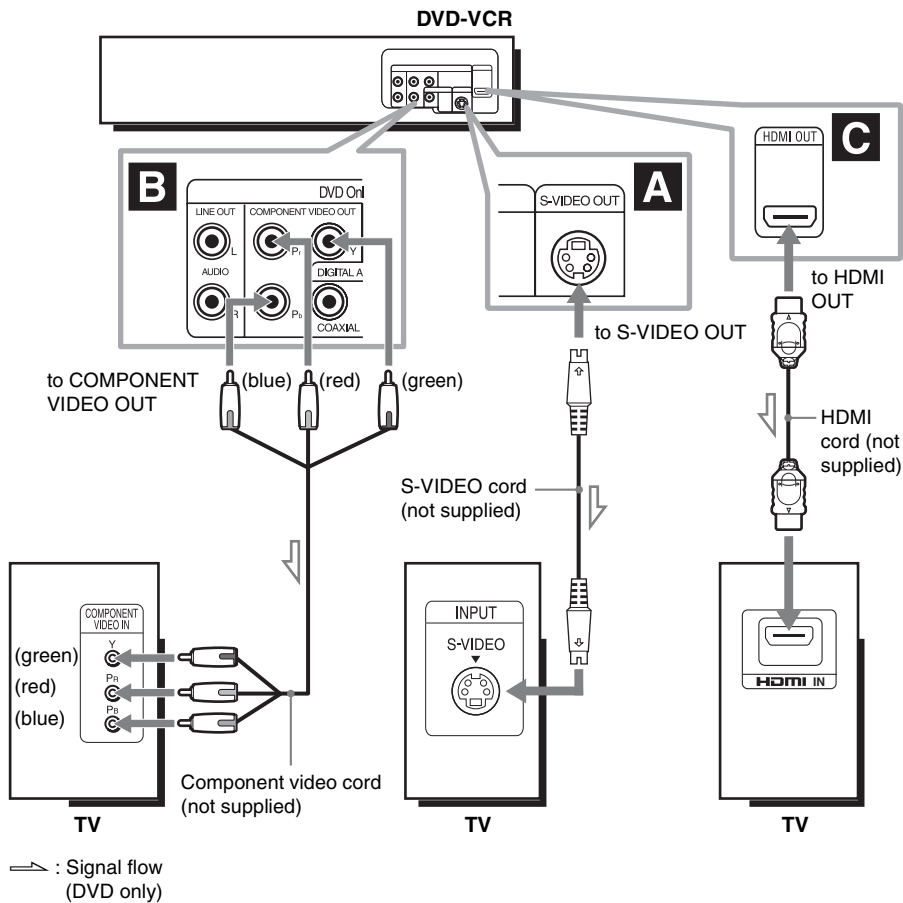

A Use this hookup if your TV has an S-VIDEO input jack

Connect an S-VIDEO cord (not supplied). You will enjoy high quality images. See page 34 for audio connections.

B Use this hookup if your TV has component video input jacks

Connect a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images.

See page 34 for audio connections.

C Use this hookup if your TV has an HDMI input jack

Use a certified Sony HDMI cord (not supplied) to enjoy high quality digital picture and sound through the HDMI OUT jack. When connecting to the HDMI OUT jack, carefully align the HDMI connector with the jack. Do not bend or apply pressure to the HDMI cord.

To connect to a TV with DVI input

Use an HDMI-DVI converter cord (not supplied). The DVI jack will not accept any audio signals, so you have to use another audio connection in addition to this connection (page 34). Furthermore, you cannot connect the HDMI OUT jack to DVI jacks that are not HDCP compliant (e.g., DVI jacks on PC displays).

Notes


- The connection using S-VIDEO OUT, COMPONENT VIDEO OUT and HDMI OUT jacks are only for the DVD player. The signal from the VCR will not be output.
- In the connection using S-VIDEO OUT jack, if you set “Progressive” to “On” in the “SCREEN SETUP” menu, S-Video playback may be distorted.
- You cannot connect the HDMI OUT jack (connection **C**) to DVI jacks that are not HDCP compliant (e.g., DVI jacks on PC displays).

A/V Receiver hookup

DVD_{Video} DVD_{VR} VCD CD DATA-CD DATA-DVD

Select one of the following patterns **A** or **B**, according to the input jack on your AV amplifier (receiver). This will enable you to listen to DVD audio tracks through your AV amplifier (receiver).

For correct speaker location, see the operating instructions supplied with the connected components.

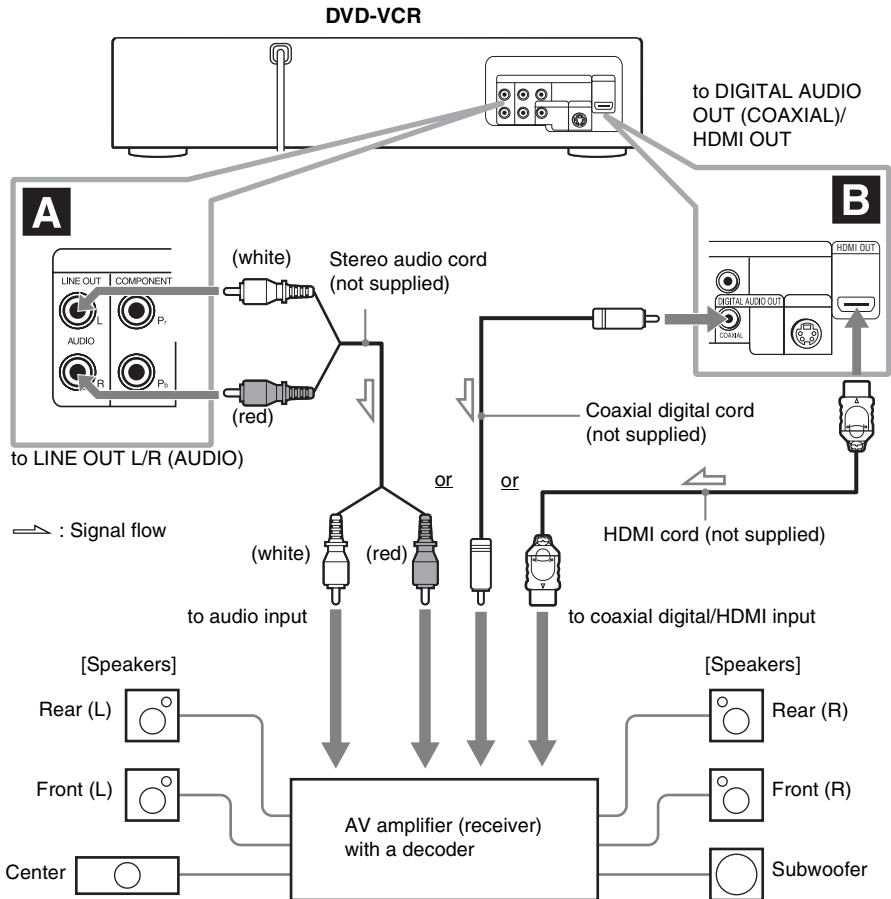

A Connecting to audio L/R jacks

This connection uses a stereo amplifier's (receiver's) two front speakers for sound. You can enjoy the surround function that creates virtual speakers from two stereo speakers. Select from "Surround1", "Surround2" or "Surround3" of the surround effects (page 82).

B Connecting to a digital audio input jack

Use this connection if your AV amplifier (receiver) has a Dolby*¹ Digital or DTS*² decoder and a digital input jack. You can enjoy the surround effect of Dolby Digital (5.1ch) or DTS (5.1ch).

*¹ Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

*² "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Notes

- After you have completed the connection using DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT, be sure to set "Dolby Digital" to "Dolby Digital" and "DTS" to "On" in "AUDIO SETUP" menu (page 59). Otherwise, no sound or a loud noise will come from the speakers.
- When you connect the player to an AV amplifier (receiver) using an HDMI cord, you will need to do one of the following:
 - Connect the AV amplifier (receiver) to the TV with the HDMI cord.
 - Connect the player to the TV with a video cord other than HDMI cord (component video cord, S VIDEO cord, or audio/video cord).
- When connecting to the HDMI OUT jack, carefully align the HDMI connector with the jack. Do not bend or apply pressure to the HDMI cord.

Playing discs

DVD_{Video}

DVD_{VR}

VCD

CD


DATA-CD

DATA-DVD


Depending on the disc, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.


Before you start ...

- Turn on the DVD-VCR and your TV.
- Set the TV to video input so that the signal from the player appears on the TV screen.

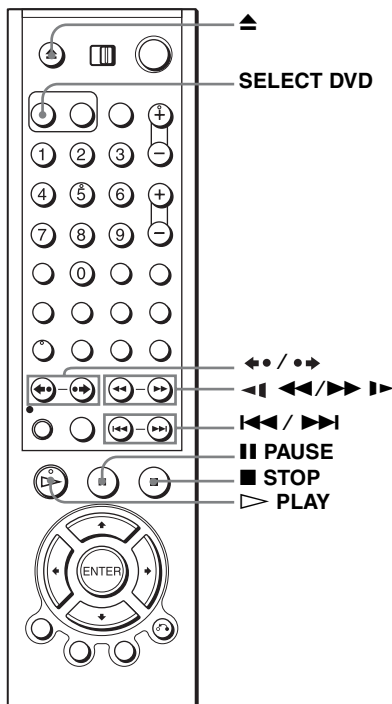

 1 Press **SELECT DVD** to control the DVD player.



2 Press  to open the disc tray and place a disc on the disc tray.



with the playback side facing down

3




Press  **PLAY**.

The disc tray closes and the DVD player starts playback. The display window shows the playback time*.

Depending on the disc, a menu may appear on the TV screen.

For DVDs, see page 71. For VIDEO CDs, see page 94.

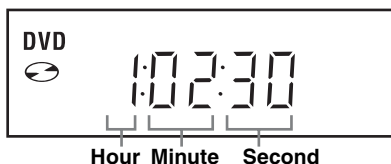

* “-----” appears when no disc is loaded.

Tip

- To make a video timer reservation during DVD playback, we recommend performing the operations under “Quick Timer Recording” (page 96).

Notes

- You can change the screen type using the “SCREEN SETUP” menu (see “Screen Setup” on page 62).
- Stop VIDEO playback while playing back a disc.
- If you play a DVD or VIDEO CD that has scratches, the player may stop playback at the point of the scratch.
- Playback of play lists longer than 10 hours recorded in VR mode is not guaranteed.

Additional operations

To	Press
Stop play	■ STOP
Pause play	PAUSE If you pause the DVD player for more than 5 minutes, the DVD player will automatically stop.
Resume play after pause	▷ PLAY
Go to the next frame in pause mode	•➡ SKIP
Go to the previous frame in pause mode	◀• REPLAY
Go to the next chapter, track, or scene in continuous play mode	▶▶ NEXT on the remote or ▶▶ on the unit
Go back to the previous chapter, track, or scene in continuous play mode	◀◀ PREV on the remote or ◀◀ on the unit

To	Press
Locate a point quickly	<p>◀◀ or ▶▶ on the remote (or hold down ◀◀ or ▶▶ on the unit)</p> <p>The playback speed changes as follows each time you press the button on the remote (or depending on how long you press the button on the unit):</p> <ul style="list-style-type: none"> DVD fast forward: PLAY → ×1.4 •▶▶*¹ → 1▶▶ → 2▶▶ → 3▶▶ → 4▶▶ → 5▶▶ → 6▶▶ fast reverse: PLAY → 1◀◀ → 2◀◀ → 3◀◀ → 4◀◀ → 5◀◀ → 6◀◀ CD, MP3 and VIDEO CD fast forward: PLAY → 1▶▶ → 2▶▶ → 3▶▶ fast reverse: PLAY → 1◀◀ → 2◀◀ → 3◀◀ <p>When you find the point you want, press ▷ PLAY.</p>
Watch slow motion in continuous play mode (DVD and VIDEO CD only)	<p>⏸ PAUSE during playback, then press ◀◀ or ▶▶</p> <p>The playback speed changes as follows each time you press ◀◀ or ▶▶:</p> <ul style="list-style-type: none"> DVD forward slow motion: ×0.6 •▶▶*¹ → 2▶▶ → 3▶▶ reverse slow motion (except for DVD-RW in VR mode): 1◀◀ → 2◀◀ → 3◀◀ VIDEO CD forward slow motion only: 1▶▶ → 2▶▶ → 3▶▶ <p>To resume normal playback, press ▷ PLAY.</p>
Replay the previous scene for 10 seconds in continuous play mode* ² (Instant Replay)	◀◀ REPLAY
Briefly fast forward the current scene for 30 seconds in continuous play mode* ² (Instant Advance)	<p>•▶▶ SKIP</p> <p>You can press •▶▶ SKIP up to 4 times. This allows you to fast forward up to 2 minutes in total.</p>
Stop play and remove the disc	⏏

*¹ Playback quickly or slowly with sound (See “To playback quickly or slowly with sound (DVD only)” on page 39.)

*² For DVD VIDEOS and DVD-RWs/DVD-Rs or DVD+RWs/DVD+Rs only

Notes

- No sound is output except for:
 - during normal play
 - during playback quickly or slowly with sound
- You cannot perform playback quickly or slowly with sound when a virtual surround effect is set.
- The fast reverse operation may not be possible for CD, MP3 and VIDEO CD depending on the recording method.
- You may not be able to use the Instant Replay or Instant Advance function with some scenes.
- Switching between original (ORG) and play list (PL) within a disc recorded in VR mode is possible only while the disc is stopped. Press TOP MENU to switch between ORG and PL.

To playback quickly or slowly with sound (DVD only)

You can listen to dialog or sound while playing the current scene quickly or slowly.

To playback quickly, press ►► during playback.

To playback slowly, press ■■ PAUSE, then press ►► during playback.

Press ▷ PLAY to return to normal playback.

Notes

- You cannot set virtual surround effects while performing playback quickly or slowly with sound. In addition, you cannot perform playback quickly or slowly with sound when a virtual surround effect is set.
- You cannot perform DTS audio output during playback quickly or slowly with sound. In addition, you cannot perform playback quickly or slowly with sound when DTS audio output is set.

To Resume playback for the current disc (Resume Play)

The DVD player remembers the point where you stopped the disc even if the DVD player enters standby mode by pressing I/⏻.

1 While playing a disc, press ■ STOP to stop playback.

2 Press ▷ PLAY.

The DVD player starts playback from the point where you stopped the disc in Step 1.

Tip

- To begin playback from the top of the disc, press ■ STOP twice then press ▷ PLAY.

Notes on playing DTS* sound tracks on a CD

- When playing DTS-encoded CDs, excessive noise will be heard from the analog stereo jacks. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo jacks of the DVD player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1-channel decoder system must be connected to the digital jack of the DVD player.
- Set the sound to “Stereo” using the AUDIO button when you play DTS sound tracks on a CD (page 80).
- Do not play DTS sound tracks without first connecting the DVD player to an audio component having a built-in DTS decoder. The DVD player outputs the DTS signal via the DIGITAL AUDIO OUT (COAXIAL) jack even if “DTS” is set to “Off” in “AUDIO SETUP” menu (page 59), and may affect your ears or cause your speakers to be damaged.

Notes on playing DVDs with a DTS sound track

- DTS audio signals are output only through the DIGITAL AUDIO OUT (COAXIAL) jack.
- When you play a DVD with DTS sound tracks, set “DTS” to “On” in “AUDIO SETUP” menu (page 59).
- If you connect the player to audio equipment without a DTS decoder, do not set “DTS” to “On” in “AUDIO SETUP” menu (page 59). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

* “DTS” and “DTS Digital Out” are trademarks of Digital Theater Systems, Inc.

Guide to the on-screen display


DVD_{Video} DVD_{VR} VCD CD

You can check disc information during playback.

The displayed contents differ according to the type of disc being played.

Before you start...

- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

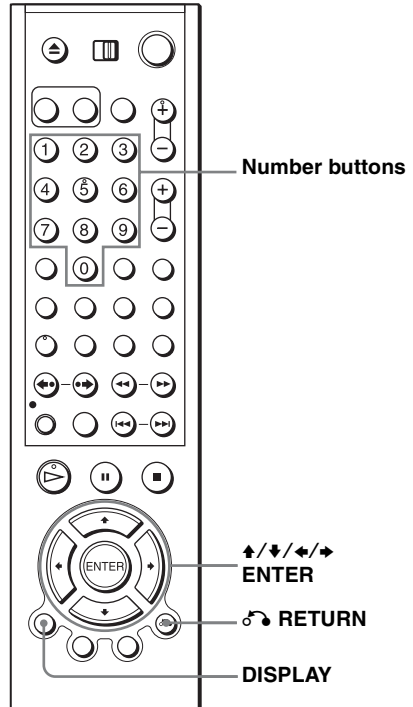

Press **DISPLAY** during playback. The following information appears; type of disc, current title/track, chapter, counter position, voice language, subtitle language and Custom AV Mode setting. Refer to “DVD Audio/Subtitle Language” on page 119 for the abbreviation of the language.

Type of disc	DVD	PLAY
Current title/track number	1/3	
Current chapter number	1/36	
Counter position	T 0:01:09	
Voice language	ENG 5,1CH	
Subtitle language	ENG (3/5)	
Custom AV Mode	Standard	

At the bottom of the table, there is a row of icons: a screen, a play button, a stop button, a return button, and an ENTER button.


Note

- You cannot select disc information items when the disc is stopped.

To playback the desired title/track or chapter

You can playback the desired title/track or chapter using this menu.

- 1 Press **▲/▼** during playback to select the desired item.
- 2 Press **←/→** to change the item.
- 3 Press **ENTER** to start playback.
- 4 Press **DISPLAY** or **↵** RETURN to turn off the menu.

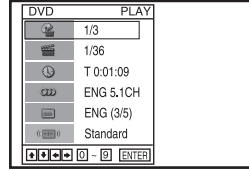


The title/track or chapter icon will appear on the DVD playback screen followed by the current title/track or chapter number and the counter position.

To playback from the desired title/track counter position

You can playback from the desired title/track counter position using this menu.

- 1 Press **▲/▼** during playback to select the counter position icon.
- 2 Enter the desired elapsed playing time of the current title/track using the number buttons.
- 3 Press **ENTER** to start playback.
- 4 Press **DISPLAY** or **↵** RETURN to turn off the menu.

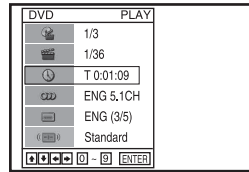

Tip

- You can change the counter position information (playing time or remaining time) using **←/→** (DVD and CD only).

DVD

Indication	Counter information
T * : * * : * *	Elapsed playing time of the current title
T- * : * * : * *	Remaining time of the current title
C * : * * : * *	Elapsed playing time of the current chapter
C- * : * * : * *	Remaining time of the current chapter

CD

Indication	Counter information
T * : * * : * *	Elapsed playing time of the current track
T- * : * * : * *	Remaining time of the current track
D * : * * : * *	Elapsed playing time of the disc
D- * : * * : * *	Remaining time of the disc

continued


Notes

- The display may not change as operated depending on the disc.
- The display window continue indicating the playing time even when the counter position information on the on-screen display is being changed.

To adjust the playback picture (Custom AV Mode)

You can adjust the video signal of the DVD or VIDEO CD (with PBC function off) from the player to obtain the picture quality you want. Choose the setting that best suits the program you are watching.

- 1 Press **↑/↓** during playback to select the Custom AV Mode icon.

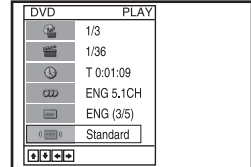

- 2 Press **←/→** to change the setting.

Setting	Video Setting	Audio Setting
Dynamic 1	Produces a bold dynamic picture by increasing the picture contrast and the color intensity.	Full (modulated) sound with clear treble and bass.
Dynamic 2	Produces a more dynamic picture than Dynamic 1 by further increasing the picture contrast and the color intensity.	Full (modulated) sound with even clearer treble and bass than Dynamic 1.
Standard	Off (Default setting) Displays a standard picture.	Standard sound.
Cinema 2	Enhances details in dark areas by increasing the black level.	Powerful sound with even stronger bass than Cinema 1.
Cinema 1	White colors become brighter and black colors become richer, and the color contrast is increased.	Powerful sound with strong bass.


Tip


- When you watch a movie, “Cinema 1” or “Cinema 2” is recommended.

Playing a tape **VHS**


Before you start ...


- Turn on the DVD-VCR and your TV.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.

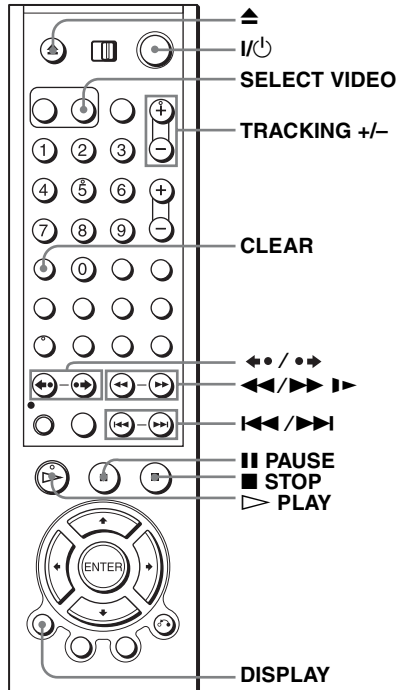

1  Press **SELECT VIDEO** to control the VCR.

 2 Insert a tape.
The VCR starts playing automatically if you insert a tape with its safety tab removed.



3  Press **▶ PLAY**.
The display window shows the playback time.
When the tape reaches the end, it will rewind automatically.



continued

Additional operations

To	Press
Stop play	■ STOP
Pause play	PAUSE If you pause the VCR for more than 5 minutes, the VCR will automatically resume play.
Resume play after pause	PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ during stop
Rewind the tape	◀◀ during stop
Eject the tape	▲
View the picture during fast-forward or rewind	During fast-forward, hold down ▶▶. During rewind, hold down ◀◀.
Play at high speed	<ul style="list-style-type: none"> • During playback, briefly press ▶▶ or ◀◀. The tape continues to play at 5 times normal speed. • During playback, hold down ▶▶ or ◀◀. The tape continues to play at 5 times normal speed. When you release the button, normal playback resumes.
Play in slow motion	During pause, press ▶.
Play frame by frame	During pause, press ●▶ SKIP.
Replay the previous scene in continuous play mode* (Instant Replay)	During playback, press ◀● REPLAY.
Fast forward the current scene for 30 seconds in continuous play mode (Instant Skip)	During playback, press ●▶ SKIP. You can press ●▶ SKIP up to 4 times. This allows you to fast forward up to 2 minutes in total.
Play at various speeds (Shuttle play)	During playback, press ◀◀ or ▶▶ . You can change the playback speed as follows. -×7 ↔ -×5 ↔ -×3 ↔ STILL ↔ SLOW ↔ PLAY ↔ ×2 ↔ ×3 ↔ ×5 ↔ ×7

* For 10 seconds in SP or LP mode/for 15 seconds in EP mode

To resume normal playback

Press ▷ PLAY.

To turn off the power while rewinding (Rewind Shut Off)

Press I/⏻ while the tape is rewinding. The power will turn off but the tape will keep rewinding until it reaches the end.

To use the time counter

Press CLEAR at the point on the tape that you want to find later. The counter in the display window resets to “0:00:00.” To search for the counter 0:00:00 point automatically, see “Searching using various functions” on page 98.



To display the counter on the TV screen, press DISPLAY during normal playback.

Tip

- Adjust the picture using the TRACKING +/- buttons if:
 - Streaks appear while playing in slow motion.
 - Bands appear at the top or bottom while pausing.
 - The picture shakes during pause.

Notes

- Tapes recorded in LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The counter resets to “0:00:00” whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- When 10 hours have passed, the counter in the display window returns to “0:00:00” and the count starts over again.
- No sound is output during playback at various speeds.
- The picture may show noise when playing at high speed in reverse.
- While playing a tape, you can display the setup menu, but the remote commander’s function switches to DVD automatically. Press RETURN repeatedly to exit the menu.
- When playback does not start even if you insert a tape with its safety tab removed, set “Auto Play” to “On” in the “VIDEO FUNCTION SETUP” menu (page 100).
- Stop disc playback while playing back a video.
- The VCR can also play S-VHS tapes recorded by S-VHS mode. The VCR will automatically identify the type of tape inserted in the VCR (either VHS or S-VHS). When S-VHS tapes are played in the VCR, the enhanced resolution will not be visible on screen; there may also be picture distortion while playing the S-VHS tape in slow motion or while utilizing other special playback modes. The VCR will not record in S-VHS mode on an S-VHS tape.
- The playback of S-VHS tapes recorded in EP/LP mode cannot be guaranteed.


continued

Adjusting the picture (tracking) **VHS**

Although the VCR automatically adjusts the tracking when playing a tape, distortion may occur if the recording is in poor condition. In this case, manually adjust the tracking.

Press **TRACKING +/-** to display the tracking meter. The distortion should disappear as you press one of the two tracking buttons.

To resume automatic tracking adjustment, eject the tape and reinsert it.

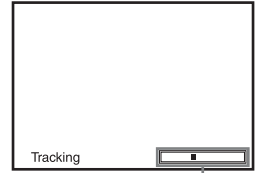

Tracking meter


Note


- The auto tracking adjustment cannot be guaranteed to work with tapes recorded in the LP mode on other VCRs.


Recording TV programs **VHS**


Before you start ...


- Turn on the DVD-VCR and your TV.
When using a cable box, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- Make sure the tape is longer than the total recording time.

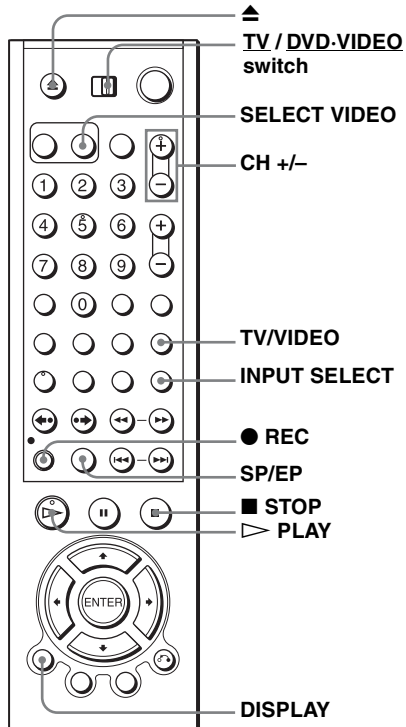

 1  Press SELECT VIDEO to control the VCR.

 2 Insert a tape with its safety tab in place. 

3  Press CH +/- to select the channel or line input video source you want to record.



You can select a video source from the LINE IN 1 or LINE-2 IN jacks using the INPUT SELECT button. "L1" or "L2" appears in the display window.

continued

4

SP / EP



Press SP/EP to select the tape speed, SP or EP.

EP (Extended Play) provides recording time three times as long as SP (Standard Play). However, SP produces better picture and audio quality.



5

● REC



Press ● REC to start recording.

“REC” appears in the display window.




To stop recording


Press ■ STOP.

To check the remaining tape length

Press DISPLAY to display the time counter. With the display on, press DISPLAY again to check the remaining time. The white bar indicates the current location in relation to the entire tape length. The remaining time also appears. Press DISPLAY to turn off the indicators.

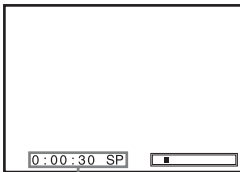

Time counter

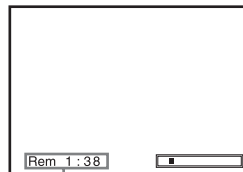

Remaining tape length

To check the remaining tape length of a tape, set “Tape Length” in the “VIDEO FUNCTION SETUP” menu correctly (page 100).

Maximum Recording Time

Tape Length	SP	EP
T-120	2 hrs	6 hrs
T-160	2 hrs 40 mins	8 hrs
T-180	3 hrs	9 hrs

To watch another TV program while recording

- 1 Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- 2 Press **TV/VIDEO** to display “TV” in the display window.



- 3 If your TV is connected to the VCR using A/V connections, set the TV to the TV's antenna input; if not, skip this step.
- 4 Select another channel on the TV.

To watch a DVD while recording

- 1 Press **SELECT DVD** to control the DVD player.
- 2 Press **▲** and place the disc on the disc tray.
- 3 Press **▷ PLAY**.

The disc tray closes and the DVD player starts playback. The TV screen will automatically change to the DVD playback screen.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the tape again, cover the tab hole with adhesive tape.



Tips

- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press **ENTER**.
- The display appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you do not want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

Notes

- The remaining tape length may not be indicated accurately for short tapes such as T-20 or T-30, or tapes recorded in LP mode.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press **DISPLAY**.
- You cannot record a DVD directly to a VCR tape using your DVD-VCR.
- To watch a TV program during video recording, stop disc playback.


Recording TV programs using the timer


VHS


You can preset up to eight programs at a time.

Before you start...

- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV. When using a cable box, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

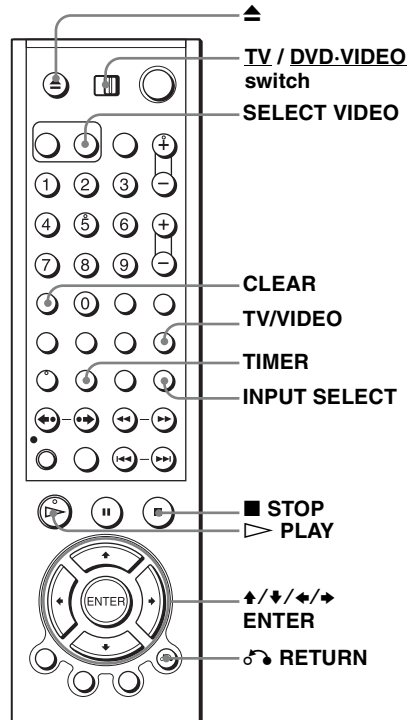

1  Press SELECT VIDEO to control the VCR.

2  Press TIMER. The timer programming menu appears.

CH	START	END	DATE	SPEED
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
[Navigation Icons]				RETURN

3



Set the channel number, start and stop times, date, and tape speed:

- 1 Press **▶** to select each item in turn.
- 2 Press **▲/▼** to set each item.

To correct a setting, press **◀** to return to that setting and reset.

CH	START	END	DATE	SPEED
35	10:00 ^{AM}	12:00 ^{AM}	10/13	Auto
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
----	----	----	----	----
◀▶▶▶				RETURN CLEAR

INPUT SELECT



- To record from a source connected to the LINE IN 1 or LINE-2 IN jacks, press INPUT SELECT or **▲/▼** to display “L1” or “L2” in the “CH” position.
- To record the same program every day or the same day every week, press **▼** while the date is flashing. For details, see “Daily/weekly recording” on page 51.
- To use the Auto Tape Speed function, press **▼** to display “Auto” in the “SPEED” position. For details, see “To use the Auto Tape Speed function” on page 52.

4



Press **▶** to confirm the setting.

To enter another setting, press **▲/▼** to select the next row and repeat step 3.

Press CLEAR to cancel the setting.

CLEAR



5



RETURN

Press **↶** RETURN to exit the menu.

6

The **⊖** indicator appears in the display window and the VCR stands by for recording. Timer recording will operate properly regardless if the DVD-VCR power is on or off.

To record from a decoder or other source, leave the connected equipment switched on.

To stop recording

To stop the DVD-VCR while recording, press SELECT VIDEO and then press **■** STOP.

Daily/weekly recording

In step 3, press **▼** to select the recording pattern. Each time you press **▼**, the indication changes as shown below. Press **▲** to change the indication in reverse order.

the current date → **Daily** → **Mo-Sa** → **Mo-Fr** → **Sun's** → **Mon's** → → **Sat's**
 → **1 month later** → (dates count down) → **the current date**

continued

To use the Auto Tape Speed function

When you are recording a program in the Auto mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to EP mode. Note that some noise will appear on the picture when the tape speed is changed. If you want to keep the tape speed, select SP. To operate this function, set “Tape Length” in “VIDEO FUNCTION SETUP” menu correctly (page 100).



To watch another TV program after setting the timer

- 1 Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.
- 2 Press TV/VIDEO to display “TV” in the display window.







- 3 If your TV is connected to the VCR using A/V connections, set the TV to the TV's antenna input; if not, skip this step.
- 4 Select another channel on the TV.

To watch a DVD after setting the timer


- 1 Press SELECT DVD to control the DVD player.
- 2 Press  and place the disc on the disc tray.
- 3 Press  PLAY.

The disc tray closes and the DVD player starts playback. The TV screen will automatically change to the DVD playback screen.

Tips

- If the  indicator appears, the timer settings overlap. To check, change or cancel the timer setting, see “Checking/changing/canceling timer settings” on page 56.
- If the  indicator appears, this means that the VCR is currently recording this program.
- You can also do the following tasks while the VCR is recording:
 - Reset the counter (page 45).
 - Display tape information on the TV screen (page 48).
- You can also display the timer programming menu by first pressing SET UP, then  to select  (PROGRAM) and pressing ENTER in step 2.

Note


- The  indicator flashes in the display window when you complete the timer setting with no tape inserted.


Recording TV programs using the VCR Plus+[®] system **VHS**


Just enter the PlusCode number listed in the TV program guide. The date, time and channel number of that program are set automatically. You can preset up to eight programs together with manual timer settings at one time.


Before you start...


- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.
- When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

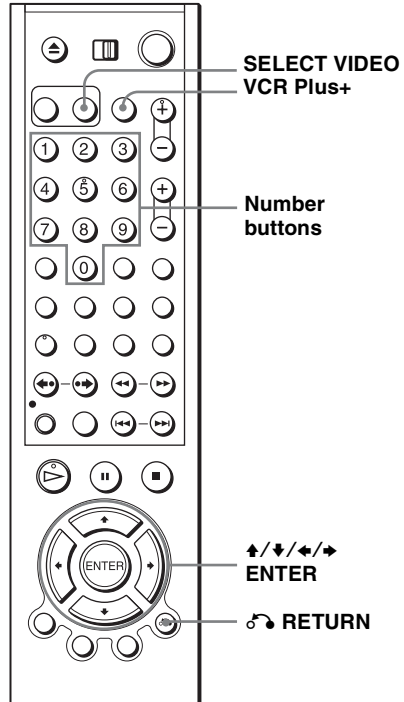

 1  Press SELECT VIDEO to control the VCR.


2  Press VCR Plus+.

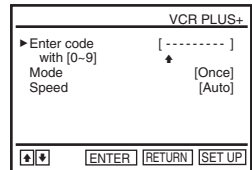

3  Press ▲/▼ to select "Enter code."


continued

 4



Press the number buttons to enter the PlusCode number.

To correct a setting, press ◀ to return to that setting and reset.

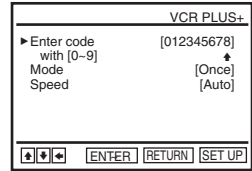

5




Press ▲/▼ to select “Mode.”

6



Press ◀/▶ to select the recording pattern:


To record	Select
Only once	Once
Everyday Monday to Friday	Mo~Fr
Every Monday to Saturday	Mo~Sa
Everyday	Daily
Once a week	Weekly

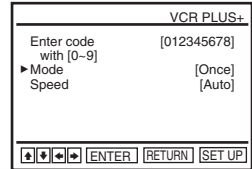

7




Press ▲/▼ to select “Speed.”

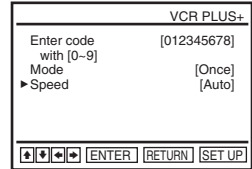

8



Press ◀/▶ to select the tape speed, Auto, SP, or EP, then press ENTER.

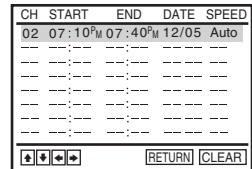

9

To enter another setting, repeat steps 2 to 8.

10



Press ↶ RETURN to exit the menu.

The timer indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.

To stop recording

To stop the VCR while recording, press ■ STOP.

To use the DVD-VCR after setting the timer

To use the DVD-VCR before a timer recording begins, just press I/⏻. The timer indicator disappears from the display window and the DVD-VCR switches on. Remember to press I/⏻ to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 45).
- Display tape information on the TV screen (page 48).
- Check the timer settings (page 56).
- Watch another TV program (page 49).

Tip

- To check, change or cancel the program setting, see “Checking/changing/canceling timer settings” on page 56.


Notes

- If the VCR does not accept the PlusCode number, this means that:
 - The PlusCode number is incorrect.
 - “Once,” “Daily,” “Mo~Sa,” “Mo~Fr” or “Weekly” was selected incorrectly. You cannot select “Daily,” “Mo~Sa,” “Mo~Fr” or “Weekly” for a program that airs more than seven days ahead.Correctly set the PlusCode number again from step 3.
- When the PlusCode number is incorrect, “Invalid code” will appear in the display.


Checking/changing/canceling timer settings **VHS**

Before you start...


- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV. When using a cable box or a decoder, turn it on.
- Set the TV to video input so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

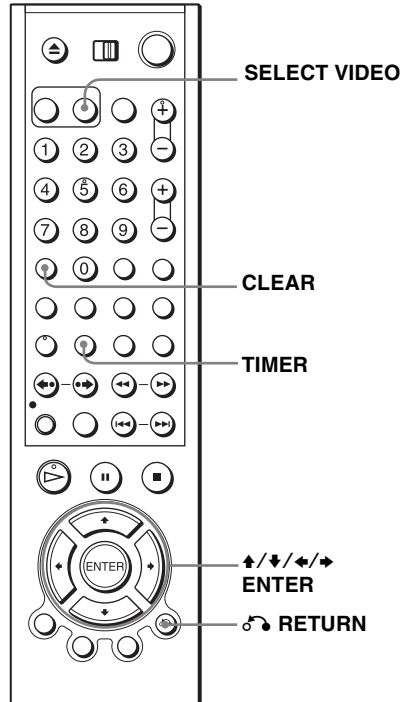


1 **SELECT VIDEO** Press SELECT VIDEO to control the VCR.



2 **SUBTITLE/TIMER** Press TIMER. The timer programming menu appears.



CH	START	END	DATE	SPEED
01	05:31 ^{PM}	07:31 ^{PM}	1/20	SP
03	01:31 ^{PM}	03:32 ^{PM}	1/21	Auto
06	06:32 ^{PM}	08:32 ^{PM}	1/21	EP
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---


RETURN

3



CLEAR



Press **▲/▼** to select setting you want to change or cancel.

- To change the setting, press **←/→** to select the item you want to change, and press **▲/▼** to change it.
- To cancel the setting, press CLEAR.

CH	START	END	DATE	SPEED
01	05:31 ^P	07:31 ^P	1/20	SP
03	01:31 ^M	03:32 ^M	1/21	Auto
06	06:32 ^M	08:32 ^M	1/21	EP
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
				[RETURN] [CLEAR]

4




RETURN

Press **↻** RETURN to confirm the setting.

Press **↻** RETURN again to exit the menu.

When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.

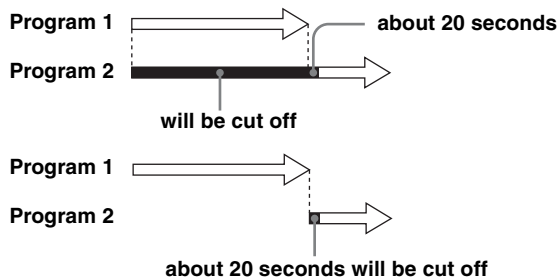


Tips

- If the indicator appears, the timer settings overlap.
- You can also display the timer programming menu by first pressing SET UP, then **▲/▼** to select (PROGRAM) and pressing ENTER in step 2.

Locking the DVD-VCR (Child Lock)

After you have set the timer, you can lock all of the buttons on the DVD-VCR so that the settings are not canceled by mistake.

I/⏻ POWER

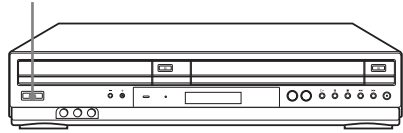

To lock the DVD-VCR

When the DVD-VCR is turned on, hold down I/⏻ POWER on the unit until “LOCK” appears in the display window. The DVD-VCR turns off and the ⊖ indicator remains lit if there is a timer setting. The DVD-VCR will not work except for timer recordings.

To unlock the DVD-VCR

Hold down I/⏻ POWER on the unit until “LOCK” disappears from the display window. The DVD-VCR is unlocked and turns on.

To stop timer recording while the DVD-VCR is locked, press ■. The recording stops and the DVD-VCR is unlocked.

Note


- The DVD-VCR will be unlocked when:
 - You stop timer recording by pressing ■.
 - You insert a tape.
 - The AC power cord is disconnected or power supply stops.

Audio Setup DVD_{Video} DVD_{VR}



“Audio Setup” allows you to set the sound according to the playback and connection conditions.

Before you start...


- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.

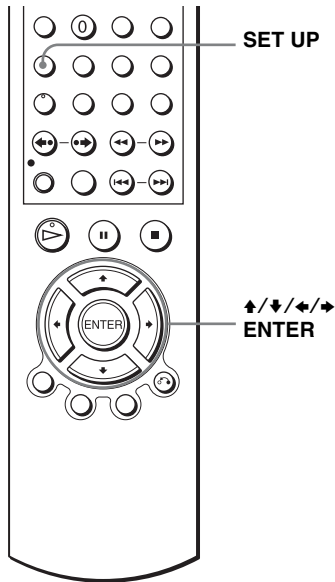

 - Press SET UP when the DVD player is in stop mode, then press \uparrow/\downarrow to select (DVD), then press ENTER.

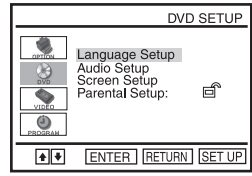

- Press \uparrow/\downarrow to select “Audio Setup,” then press ENTER.

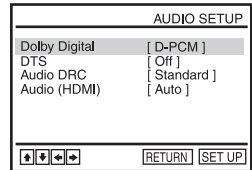

- Press \uparrow/\downarrow to select the setup item from the displayed list: “Dolby Digital,” “DTS” or “Audio DRC.”



continued

4Press **←/→** to select an item.

5

SET UP



Press SET UP to exit the menu.

Menu choices

- **Dolby Digital**

Selects the type of Dolby Digital signal.

The default setting is indicated in bold print.

D-PCM	Select this when the player is connected to an audio component lacking a built-in Dolby Digital decoder.
Dolby Digital	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder.

- **DTS**

Selects whether or not to output DTS signals.

The default setting is indicated in bold print.

Off	Select this when the player is connected to an audio component lacking a built-in DTS decoder.
On	Select this when the player is connected to an audio component with a built-in DTS decoder.

- **Audio DRC (Dynamic Range Control)**

Makes the sound clear when the volume is turned down when playing a DVD that conforms to “Audio DRC.” This affects the output from the following jacks:

- LINE OUT AUDIO L/R jacks
- DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT jack only when “Dolby Digital” is set to “D-PCM”.

The default setting is indicated in bold print.

Standard	Normally select this position.
Wide Range	Gives you the feeling of being at alive performance.

- **Audio (HDMI)**

Selects the type of audio signal output from the HDMI OUT jack.

Auto	Normally select this position. Outputs audio signals according to the “Dolby Digital” or “DTS” settings (page 60).
PCM	Converts Dolby Digital or DTS to PCM.

Notes


- If you connect a component that does not conform to the selected audio signal, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged.
- Noise may occur in the LinearPCM double-speed audio. This is not a malfunction.
- If the HDMI OUT jack is connected to equipment not compatible with DOLBY DIGITAL signals, the “D-PCM” signals will be automatically output even when you select “DOLBY DIGITAL”.


Screen Setup DVDVideo



“Screen Setup” allows you to set the screen according to the playback and connection conditions.

Before you start...


- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.

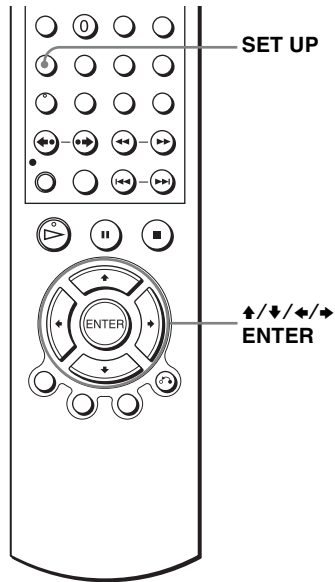

 - 1** Press SET UP when the DVD player is in stop mode, then press \uparrow/\downarrow to select  (DVD), then press ENTER.

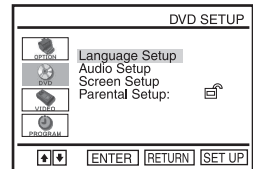

- 2** Press \uparrow/\downarrow to select “Screen Setup,” then press ENTER.

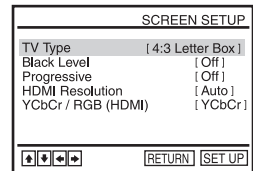

- 3** Press \uparrow/\downarrow to select the setup item from the displayed list: “TV Type,” or “Black Level.”



To set the “Progressive” setting, see page 64.

4



Press ◀/▶ to select an item.

5

SET UP



Press SET UP to exit the menu.
The setting is applied after exiting the menu.

Menu choices

- TV Type

Selects the aspect ratio of the connected TV (4:3 standard or wide).
The default setting is indicated in bold print.

4:3 Letter Box	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 Pan Scan	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.
16:9	Select this when you connect a wide-screen TV or a TV with a wide mode function.

 
4:3 Letter Box



4:3 Pan Scan



16:9



- Black Level

You can enhance the black level by increasing the brightness and contrast when viewing DVD VIDEOS with the PROGRESSIVE indicator turned off.
The default setting is indicated in bold print.

Off	Stops the increase of the contrast.
On	Increases the contrast.

- HDMI Resolution

Selects the type of video signals output from the HDMI OUT jack. When you select AUTO (default), the player outputs video signals of the highest resolution acceptable for your TV. If the picture is not clear, natural or to your satisfaction, try another option that suits the disc and your TV/projector, etc. For details, refer also to the instruction manual supplied with the TV/projector, etc.

Auto	Normally select this position.
1920×1080i	Sends 1920×1080i video signals.
1280×720p	Sends 1280×720p video signals.
720×480p	Sends 720×480p video signals.

continued

- YCbCr/RGB

Selects the type of HDMI signal output from HDMI OUT jack.

YCbCr	Outputs YCbCr signals.
RGB	Outputs RGB signals.


Notes

- Even when a setting other than “AUTO” for “HDMI Resolution” is selected and the connected TV cannot accept the resolution, the player automatically adjusts the video signals that are suitable for the TV.
- Playback settings stored in the disc take priority over the “DVD SETUP” menu settings and not all the functions described may work.
- Depending on the DVD VIDEO, “4:3 Letter Box” may be selected automatically instead of “4:3 Pan Scan” or vice versa.
- If the playback picture becomes distorted, set “YCbCr” to “RGB”.
- Select “720×480p” under “HDMI Resolution” if you cannot change the aspect ratio on your TV.


To set the “Progressive” setting

If your TV accepts progressive (480p) format signals, you will enjoy accurate color reproduction and high quality image.

- 1 Follow step 1 and 2 on page 62, then press $\blacktriangle/\blacktriangledown$ to select “Progressive.”


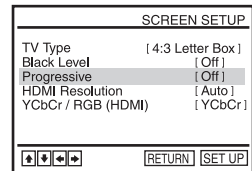


- 2 Press \leftarrow/\rightarrow to select “On,” then press ENTER.

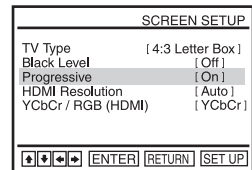


- 3 Follow the instructions appearing on the screen.

- 1 Ensure your TV is (480p) Progressive Scan capable.
- 2 Connect with Component Video Output jacks (red/green/blue connections).
For details, see the connection **B** on page 32.
- 3 Press \leftarrow/\rightarrow to select [OK] to test your video signal.

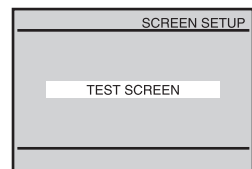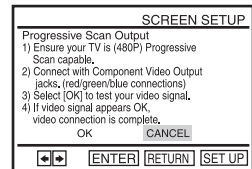


- 4** If video signal appears OK, video connection is complete.
Press ENTER.

 The PROGRESSIVE indicator on the unit lights up in orange.




PROGRESSIVE indicator

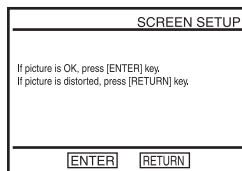

If picture is distorted, press  RETURN. Check the connection (page 32).

- 5** Press SET UP to exit the menu.

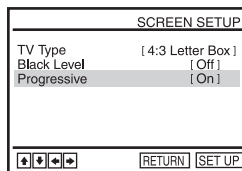

To cancel the “Progressive” setting

Select “Off” in step 2.

You can also cancel by pressing SELECT DVD and then press **||** on the unit continuously for 5 seconds or more when the DVD-VCR is in stop mode.

Note


- If you select progressive signal when you connect the DVD-VCR to a TV that cannot accept the signal in progressive format, the image quality will deteriorate. In this case, set “Progressive” to “Off”.
- When you connect the DVD-VCR to a TV using HDMI cord, you cannot cancel the “Progressive” setting.

Setting the display or sound track language DVDVideo


You can set various languages for the disc's menu, sound track or subtitle.


Before you start...


- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

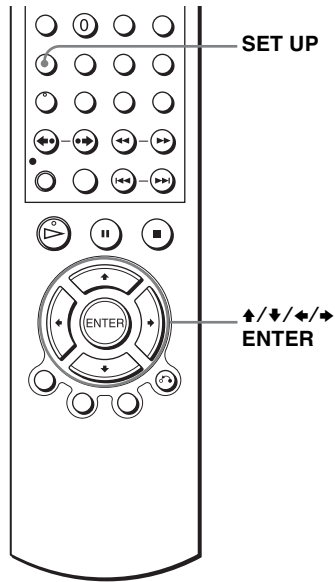

1

 


Press **SET UP** when the DVD player is in stop mode, then press **↑/↓** to select  (DVD) and press **ENTER**.

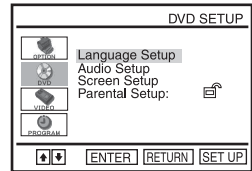

2



Press **↑/↓** to select “Language Setup,” then press **ENTER**.
The “LANGUAGE SET UP” menu appears.

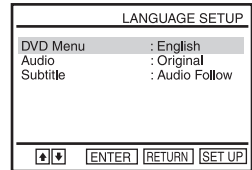

3



Press **↑/↓** to select the language setup item from the displayed list: “DVD Menu,” “Audio,” or “Subtitle.”
Then press **ENTER**.

4




Press $\blacktriangle/\blacktriangledown$ to select the desired language, then press ENTER.


- **DVD MENU LANGUAGE**
You can select the desired language for the disc's menu.



- **AUDIO LANGUAGE**
Switches the language of the sound track. When you select "Original," the language given priority in the disc is selected.

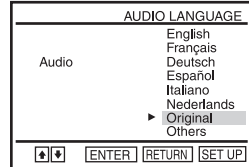

- **SUBTITLE LANGUAGE**
Switches the language of the subtitle recorded on the DVD VIDEO. When you select "Audio Follow," the language for the subtitle changes according to the language you selected for the sound track.

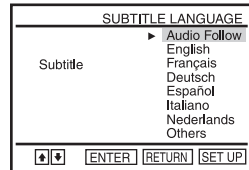

5

SET UP



Press SET UP to exit the menu.

Tip

- If you select "Others" in step 4, an additional language menu appears. Press $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select the desired language, then press ENTER.



Notes

- When you select a language that is not recorded on the DVD VIDEO in step 4, one of the recorded languages will be automatically selected.
- Playback settings stored in the disc take priority over the DVD SETUP settings and not all the functions described may work.


Parental Control (limiting playback by children)

DVDVideo

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. The “Parental Control” function allows you to set a playback limitation level.

Before you start...


- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.

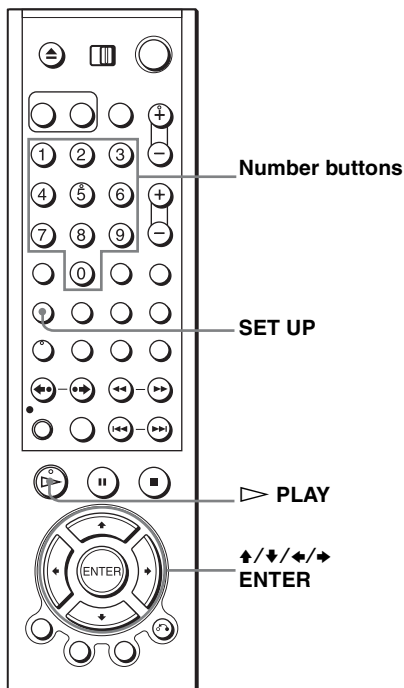

1

SET UP

 



Press SET UP when the DVD player is in stop mode, then press  (DVD) and press ENTER.




2



Press  to select “Parental Setup,” then press ENTER.

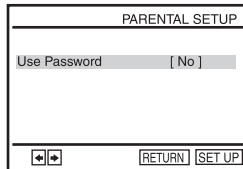


3

 


Press to set the parental control.



- If you have not entered a password
The display for registering a new password appears.
Enter a 4-digit password using the number buttons.

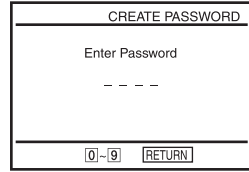

- The display for confirming the password appears.
Re-enter the password.

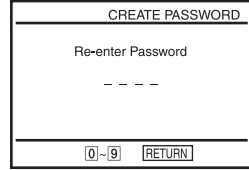


- When you have already registered a password
The display for entering the password appears.
Enter a 4-digit password using the number buttons.
After registering a password, if you set “Use Password” to “No,” “PASSWORD CHECK” screen will not appear.

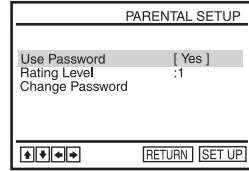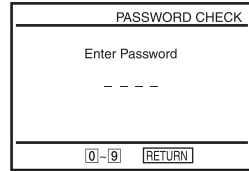

4



Press / to select “Rating Level,” then press ENTER.

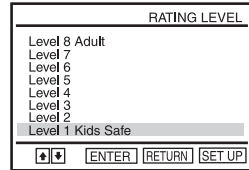

5




Press / to select the level you want, then press ENTER.

The options are as follows.

Level 8 Adult ↔ Level 7 ↔ Level 6 ↔
Level 5 ↔ Level 4 ↔ Level 3 ↔ Level 2
↔ Level 1 Kids Safe

The lower the value, the stricter the limitation.

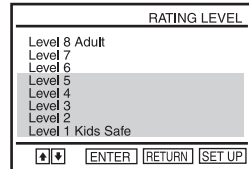

6

SET UP



Press SET UP to exit the menu.

continued

To change the password

- 1** Select “Change Password” in step 4 on page 69.
The display for entering a new password appears.
- 2** Enter a new 4-digit password using the number buttons.
The display for confirming the password appears.
- 3** Re-enter the new password.

To turn off the Parental Control function

Set “Use Password” to “No” in step 3 on page 69.

To play a disc for which Parental Control is set

- 1** Insert the disc, then press ▷ PLAY.
The display for entering your password appears.
- 2** Enter your 4-digit password using the number buttons.
The player starts playback.

If you forget your password

- 1** Turn on the DVD-VCR.
Be sure to disconnect the HDMI cord when it is connected.
- 2** Remove the disc and close the disc tray.
- 3** Hold down ◀◀ and ▶▶ on the front panel simultaneously for 5 seconds.
“Reset OK” appears on the screen.
- 4** Turn off the DVD-VCR.
The password is cleared.
- 5** To create a new password, follow step 3 on page 69.

Notes

- When you play DVD VIDEOS which do not have the Parental Control function, playback cannot be limited on this player.
- All the ratings higher than the level you select will be blocked.
- Write your password down and keep it in a safe place in case you forget it.
- When you clear the password, “Language” in the “OPTION SETUP” menu and all items in the “DVD SETUP” menu are returned to the default setting.
- When you clear the password, all DVD settings below are returned to the default setting.
 - Language Setup
 - Audio Setup
 - Screen Setup
 - Parental Setup


Using the DVD's menu DVDVideo



A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD VIDEO which contains several titles, you can select the title you want using the TOP MENU button.


 
When you play DVD VIDEOS that allow you to select items such as the language for the subtitles and the language for the sound, select these items using the MENU button.

Before you start...

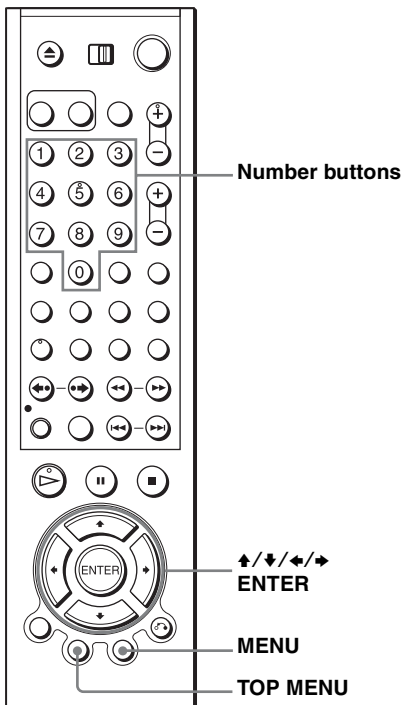- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.



-  Press TOP MENU or MENU.
 The disc's menu appears on the TV screen.
 The contents of the menu vary from disc to disc.

-  Press **↑/↓/←/→** to select the item you want to play or change, then press ENTER.
 You can also use the number buttons to select the item.
 

Note

- Depending on the DVD VIDEO, you may not be able to use the TOP MENU button or search a point by setting the time.


Zooming into a scene DVDVideo DVDVR VCD

You can zoom into a scene during playback or still mode.


To zoom into a JPEG image, see “Playing JPEG image files” on page 90.




Before you start...

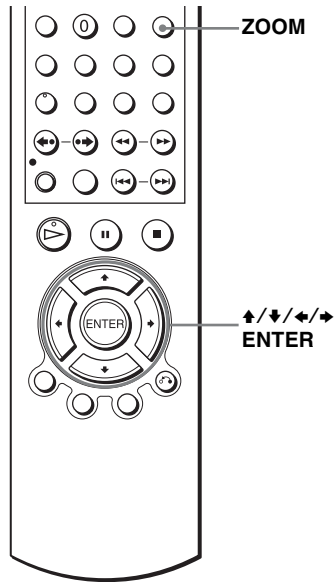
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

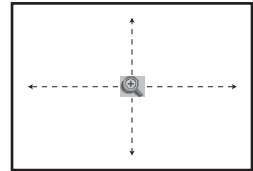

- 1**  Press ZOOM.
“” appears.




- 2**  Press  to move “” to the position where you want to zoom in.

- 3**  Press ENTER repeatedly to change the magnification.
Each time you press the button, the magnification changes as shown below.
2× → 4× → 2× → normal magnification

Notes


- You cannot use 4× magnification when you play VIDEO CDs.
- The zoom function may not work depending on the DVD.

Changing the angles DVDVideo

If various angles (multi-angles) for a scene are recorded on the DVD VIDEO, “” appears in the display window. This means that you can change the viewing angle.

Before you start...

- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

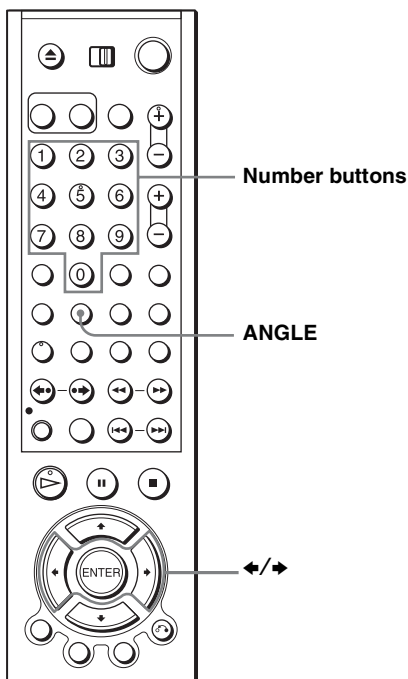

1


ANGLE



Press ANGLE during playback.

The angle number appears on the display.

The number after the slash indicates the total number of angles.

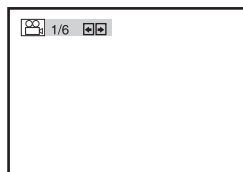


2



Press \leftarrow/\rightarrow repeatedly to select the angle number.

 The scene changes to the selected angle.



Note


- Depending on the DVD VIDEO, you may not be able to change the angles even if multi-angles are recorded on the DVD VIDEO.

Displaying the subtitle

DVDVideo

DVDVR

If subtitles are recorded on the disc, you can change the subtitles or turn them on and off whenever you want while playing a DVD.

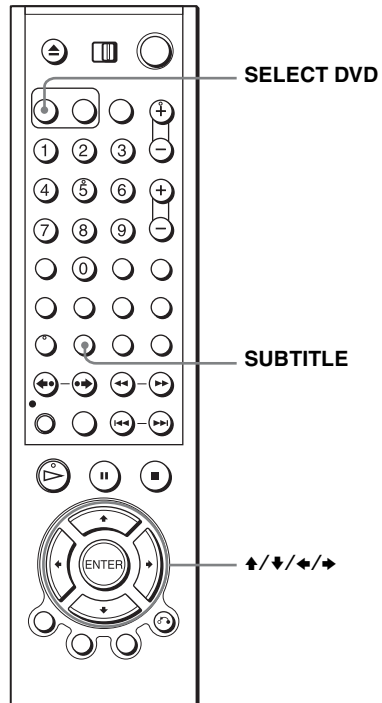

1




Press SELECT DVD to control the DVD player.

2



Press SUBTITLE during playback.

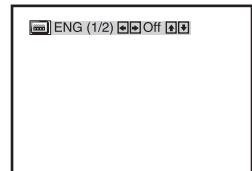

3



Press \leftarrow/\rightarrow repeatedly to select the language.

Depending on the DVD, the choice of language varies. Refer to “DVD Audio/Subtitle Language” on page 119 for the abbreviation of the language.

4



Press **↑/↓** repeatedly to select “On.”

To turn off the subtitles

Select “Off” in step 4.

Note

- Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it. You also may not be able to turn them off.

Various play mode functions (Program play, Shuffle play, Repeat play)


DVD_{Video} DVD_{VR} VCD CD DATA-CD DATA-DVD

Before you start...

- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

Notes

- The play mode is canceled when:
 - you open the disc tray
 - the player enters standby mode by pressing **I/O**.

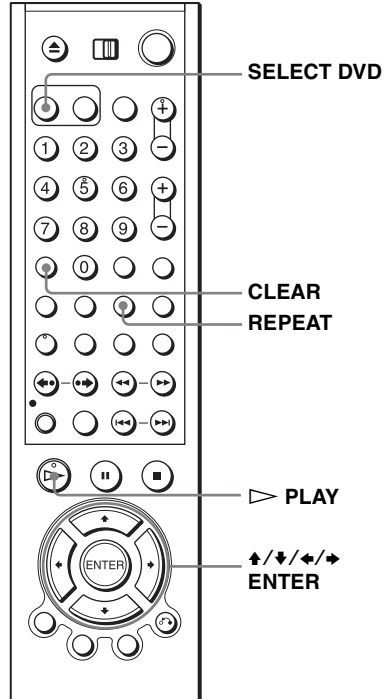


Creating your own program (Program play) **CD**


You can play the contents of a disc in the order you want by arranging the order of the tracks on the disc to create your own program. You can program up to 20 tracks.

To program MP3 audio tracks, see page 86.


- 1** Press **SELECT DVD** to control the DVD player.
- 2** Press **REPEAT** when the DVD player is in stop mode.

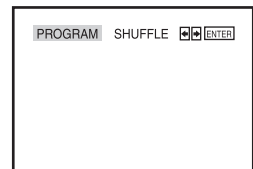

3 Press \leftarrow/\rightarrow to select “PROGRAM”, then press ENTER.

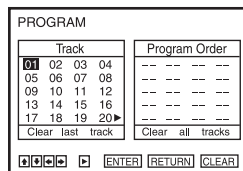

4 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select the track number you want to program, then press ENTER.

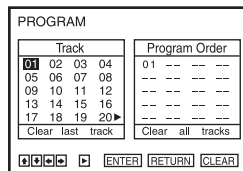

5 To program other tracks, repeat step 4.

The programmed track numbers are displayed in the selected order.

6 Press \triangleright PLAY to start program play.

Program play starts.

When the program ends, you can restart the same program again by pressing \triangleright PLAY.

To stop program play

Press CLEAR until “Off” appears at the upper left top of the TV screen during programme play.

To change or cancel a program

- 1 Follow steps 1 to 3 of “Creating your own program (Program play).”
- 2 Press \downarrow repeatedly to select “Clear last track,” then press ENTER. Each time you press the button, the last programmed number is canceled. You can also cancel the last programmed number by pressing CLEAR.
- 3 Follow step 4 for new programming.

To cancel all the programmed numbers

- 1 Follow steps 1 to 3 of “Creating your own program (Program play).”
- 2 Press \downarrow repeatedly to select “Clear last track,” then press \rightarrow to select “Clear all tracks” and press ENTER.

All the programmed numbers are canceled.

Notes

- Up to 99 tracks can be displayed.
- You cannot repeat play while in program play.



Playing in random order (Shuffle play)

You can shuffle the playback order of tracks. Subsequent “shuffling” may produce a different playing order.

To shuffle MP3 audio tracks, see page 87.

- 1 Press SELECT DVD to control the DVD player.
- 2 Press REPEAT when the DVD player is in stop mode.

- 3 Press \leftarrow/\rightarrow to select “SHUFFLE”, then press ENTER.

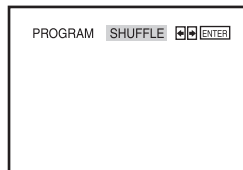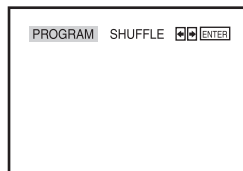

To return to normal play

Press CLEAR until “Off” appears at the upper left top of the TV screen during shuffle play.

Tip

- Shuffle play will stop when all the tracks are played back.

Note


- You cannot repeat play while in shuffle play.

Playing repeatedly (Repeat play) DVDVideo VCD CD DATA-CD DATA-DVD

You can play all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.

1 Press SELECT DVD to control the DVD player.

2 Press REPEAT during playback.

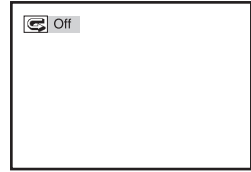

3 Press REPEAT or ◀/▶ repeatedly to select the item to be repeated.

When playing a DVD

- Chapter: repeats the current chapter.
- Title: repeats the current title on a disc.

When playing a VIDEO CD (with PBC function off) or CD

- Track: repeats the current track.
- Disc: repeats all of the tracks.

When playing a DATA CD/DATA DVD (MP3 audio)

- FILE: repeats the current track (file).
- DIR: repeats the current album (directory).
- DISC: repeats the current disc.

To return to normal play

Select “Off” in step 3 or press CLEAR during repeat play.

Tip

- When you press ■ STOP during repeat play, repeat play is canceled.

Notes

- You cannot repeat play with DVD-RW/DVD-R in VR mode.
- You cannot repeat play VIDEO CDs with PBC function on. See “Playing VIDEO CDs with “PBC ON/OFF” Functions” on page 94.
- You cannot repeat play while in program play or shuffle play.

Changing the sound

DVD_{Video}

DVD_{VR}


VCD

CD

When playing a DVD recorded in multiple audio formats (PCM, Dolby Digital, or DTS), you can change the audio format. If the DVD is recorded with multilingual tracks, you can also select the language.

With CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a Karaoke VIDEO CD containing a song with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.


Disc type	Playback instruments only
Karaoke VIDEO CD	Yes
Karaoke DVD	No

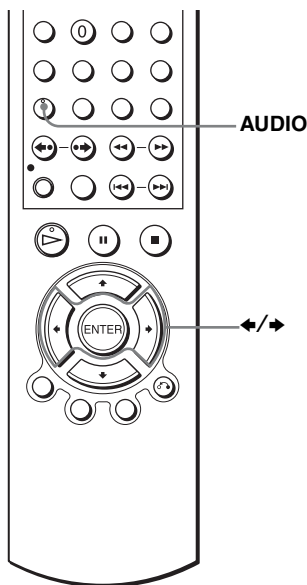

1



Press AUDIO during playback.

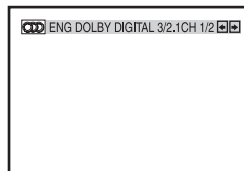

2



Press \leftarrow/\rightarrow repeatedly to select the desired language/audio setting.

- When playing a DVD
Depending on the DVD, the choice of language varies. Refer to “DVD Audio/Subtitle Language” on page 119 for the abbreviation of the language.
- When playing a VIDEO CD or CD
The default setting is indicated in bold print.

Stereo	The standard stereo sound
Left	The sound of the left channel (monaural)
Right	The sound of the right channel (monaural)

Notes

- To enjoy Dolby Digital or DTS effect from a LinearPCM format disc, you have to make the connection using DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT (page 34).
- When you play a DVD with DTS sound tracks, set “DTS” to “On” in “AUDIO SETUP” menu (page 59).
- If you set DTS audio output, you cannot select surround setting (page 82).
- You cannot perform playback quickly or slowly with sound when DTS audio output is set (page 39).

Virtual surround setting


DVDVideo

DVDVR


VCD

CD

When you connect a stereo TV or 2 front speakers, SURROUND lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers without using actual rear speakers.

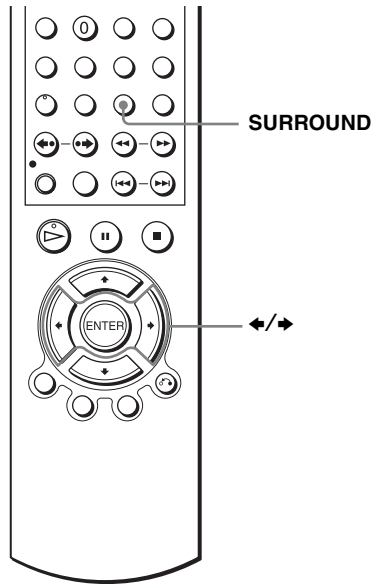


1 SURROUND Press SURROUND during playback.

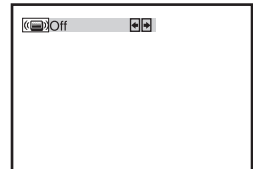


2 Press \leftarrow/\rightarrow repeatedly to select "Surround1," "Surround2," "Surround3."
Surround effect increases as shown below.




Surround1

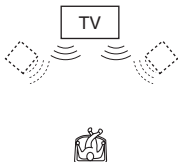


Surround2

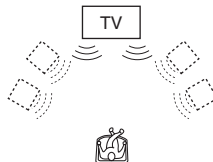

Surround3

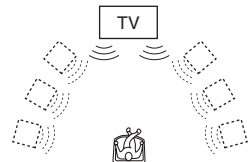

 : Virtual speaker

To cancel the setting

Select “Off” in step 2.

Notes


- When the playing signal does not contain a signal for the rear speakers, the surround effects will be difficult to hear.
- When you activate the surround effect, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings.
- If you use the DIGITAL AUDIO OUT (COAXIAL) /HDMI OUT jack and set “Dolby Digital” to “Dolby Digital” or “DTS” to “On” in “AUDIO SETUP” menu (page 59), sound will come from your speakers but it will not have the surround effect.
- You cannot perform playback quickly or slowly with sound when a virtual surround effect is set (page 39).

Playing an MP3 audio track DATA-CD DATA-DVD




You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs) recorded in MP3 (MPEG1 Audio Layer 3) format.

Before you start...

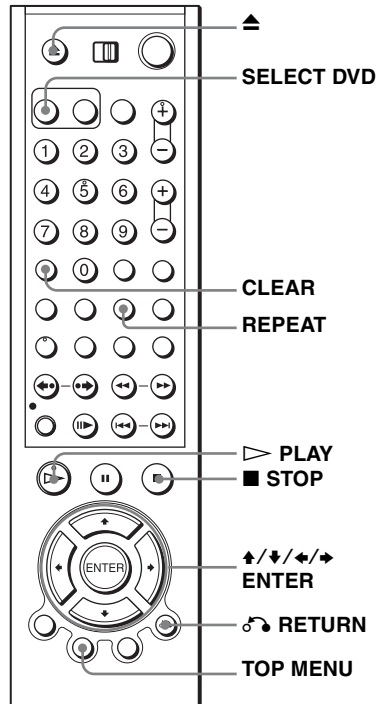
- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.



 1  Press SELECT DVD to control the DVD player.

2  Press  and place a DATA CD or DATA DVD on the disc tray, then press  to close the tray.

When you load a DATA CD or DATA DVD which contains MP3 audio tracks and JPEG image files, “Select a Media Type” menu appears.

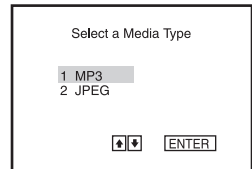

If you load a DATA CD or DATA DVD which contains only MP3 audio files, the MP3 display appears. Then you can skip step 3.


3



Press $\blacktriangle/\blacktriangledown$ to select “MP3”, then press ENTER.

The first track starts playing. Press \blacksquare STOP if necessary.


Repeat mode
Elapsed playing time

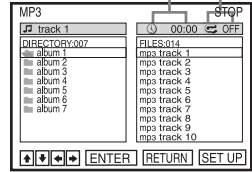

4



Press \curvearrowright RETURN, then press $\blacktriangle/\blacktriangledown$ to select the desired directory in the left column, then press ENTER.

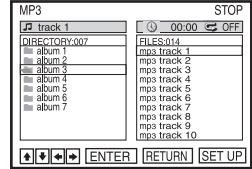


5



Press $\blacktriangle/\blacktriangledown$ to select the desired track in the right column, then press ENTER.

The selected track starts playing.

When a track or album is being played, the title is shown in a box. The playing track number appears on the display window.

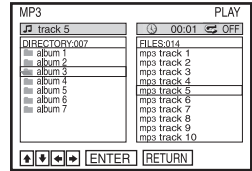

To stop play

Press \blacksquare STOP.

To repeat play

Press REPEAT repeatedly during playback to change the repeat mode.

- FILE: repeats the current track (file).
- DIR: repeats the current album (directory).
- DISC: repeats the current disc.

For details, see “Playing repeatedly (Repeat play)” (page 79).

To go to the next or previous page

Press \blacktriangleright or \blacktriangleleft .

To return to the previous display

Press \curvearrowleft RETURN.

To return to the “Select a Media Type” menu

Press \blacksquare STOP twice, then press TOP MENU.

continued

To turn off the display


Press ■ STOP twice, then press ⏪ RETURN repeatedly.

Notes


- Only the letters in the alphabet and numbers can be used for album or track names. Anything else is displayed as an asterisk.
- Up to 12 alphanumeric characters can be displayed for album or track names.
- ID3 tags cannot be displayed.
- You cannot repeat play while in program play or shuffle play.

To program MP3 audio tracks


1 Press ■ STOP twice, then press REPEAT.

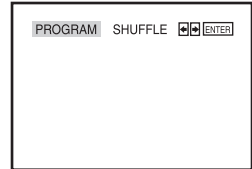


2 Press ⏪/⏩ to select "PROGRAM," then press ENTER.

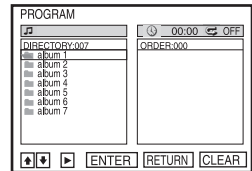

3 Press ⏪/⏩ to select the desired directory in the left column, then press ENTER.

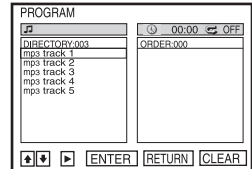

4 Press ⏪/⏩ to select the track you want to program, then press ENTER.

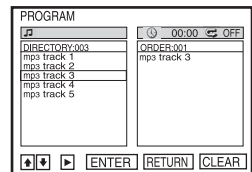

5 To program other tracks, repeat step 4.

The programmed tracks are displayed in the selected order. Press CLEAR to cancel the last programmed track.

6 Press ▷ PLAY to start program play.

Program play starts. When the program ends, you can restart the same program again by pressing ▷ PLAY.

To stop program play

Press ■ STOP during program play.

To return to normal play


Press CLEAR during program play.

Notes

- Up to 20 tracks can be programmed at one time.
- You cannot repeat play while in program play.

To shuffle MP3 audio tracks

- 1 Press REPEAT when the MP3 is in stop mode.
- 2 Press ←/→ to select “SHUFFLE,” then press ENTER.

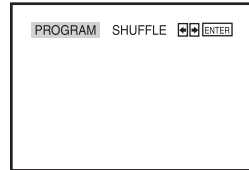

To return to normal play

Press CLEAR during shuffle play.

Tip

- Shuffle play will stop when all the tracks are played back.

Note

- You cannot repeat play while in shuffle play.

About MP3 audio tracks

You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs) recorded in MP3 (MPEG-1 Audio Layer III) format. However, the discs must be recorded according to ISO9660 Level 1/Level 2 or Joliet format and DATA DVDs of Universal Disk Format (UDF) for the player to recognize the tracks (or files). You can also play DATA CDs or DATA DVDs recorded in Multi Session or Multi Border (see “Note on Multi Session/Border discs” on page 87).

Refer to the instructions supplied with the CD-R/CD-RW/DVD-R/DVD-RW drives and the recording software (not supplied) for details on the recording format.

Note on Multi Session/Border discs

If MP3 audio tracks are recorded in the first session/border, the player will also play MP3 audio tracks in other session/border. If audio tracks and images in Music CD format or Video CD format are recorded in the first session/border, only the first session/border will be played back.

Notes


- If you put the extension “.MP3” to data not in MP3 format, the player cannot recognize the data properly and will generate a loud noise which could damage your speaker system.
- The player cannot play audio tracks in MP3PRO format.
- The player may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format.
- If both video data and MP3 audio tracks exist on a DATA DVD, the player recognizes only the video data.
- This player supports MP3 audio tracks recorded with a bit rate of 128 kbps and a sampling frequency of 44.1 kHz. Attempting to play MP3 audio tracks recorded with different specifications may result in loud noise, sound skipping or speaker damage.
- Depending on the disc contents, playback may take some time to start.

The Playback order of MP3 audio tracks

The playback order of albums and tracks recorded on a DATA CD or DATA DVD is as follows.

- Structure of disc contents

Tree 1 Tree 2 Tree 3 Tree 4 Tree 5

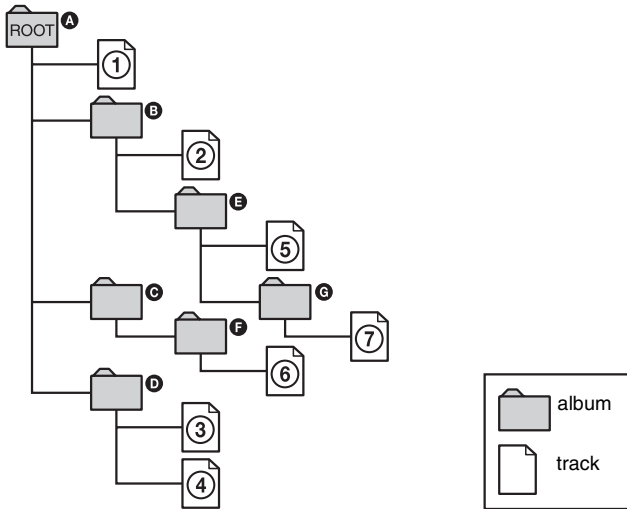

When you insert a DATA CD or DATA DVD and press \triangleright PLAY, the numbered tracks are played sequentially, from ① through ⑦. Any sub-albums/tracks contained within a currently selected album does not take priority over the next album in the same tree. (Example: **E** contains **G** but ⑥ is played before ⑦.)

When you press \curvearrowright RETURN and the list of MP3 albums appears (page 85), the albums are arranged in the following order: **A** \rightarrow **B** \rightarrow **D** \rightarrow **E** \rightarrow **F** \rightarrow **G**. Albums that do not contain tracks (such as album **C**) do not appear in the list.

Tips

- If you add numbers (01, 02, 03, etc.) to the front of the track file names, the tracks will be played in that order.
- A disc with many trees takes longer to start playback. Some discs with many trees cannot be played back.

Notes


- Depending on the software you use to create the DATA CD or DATA DVD, the playback order may differ from the illustration above.
- The playback order above may not be applicable if there are more than a total of 1000 albums and tracks in the DATA CD or DATA DVD.
- A total of up to 999 files can be recognized for discs that contain both MP3 and JPEG files. Files are recognized in the order that they were recorded. For example, if 990 JPEG files are recorded then 100 MP3 files are recorded, the 990 JPEG files recorded first and only the first 9 MP3 files can be recognized.
- Depending on the disc contents, playback may take some time to start.

Playing JPEG image files DATA-CD DATA-DVD


 
 
You can play JPEG image files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs).

Before you start...


- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

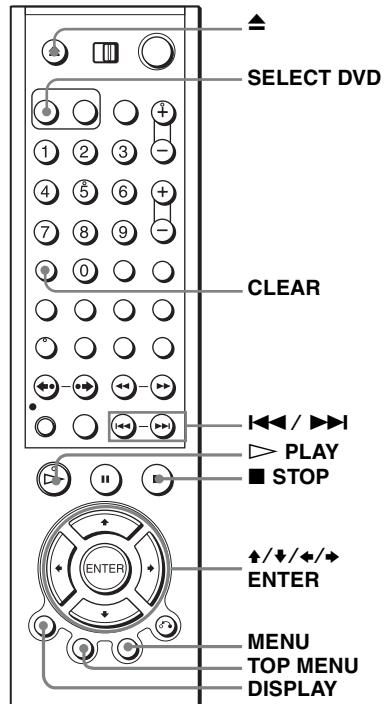

1  Press **SELECT DVD** to control the DVD player.

2  Press  and place a DATA CD or DATA DVD on the disc tray, then press  to close the tray.

When you load a DATA CD or DATA DVD which contains MP3 audio tracks and JPEG image files, “Select a Media Type” menu appears.

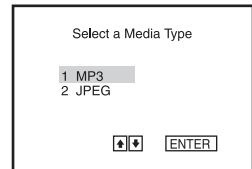


If you load a DATA CD or DATA DVD which contains only JPEG image files, the “Album” display appears. Then you can skip step 3.

3

Press \uparrow/\downarrow to select “JPEG”, then press ENTER.

The “Album” display will appear.

If you do not press ENTER after selecting a media type, the selected media will be automatically played.

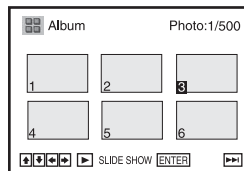**4**

Press \leftarrow/\rightarrow to select the next/previous album page, then press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select an image in the “Album” display.



To display the selected image

1 Press ENTER.

The selected image number appears in the display window.

2 To display the next/previous image, press \leftarrow/\rightarrow .



PLAY



To play the Slide show

1 Press \triangleright PLAY.

You can also play the Slide show using the menu on the selected image.

For details, see “To enjoy the Slide show” on page 92.

2 Press \leftarrow/\rightarrow to select the desired playing speed on the “Interval” menu, then press ENTER.

Slide show starts from the selected image.

Fast

Normal

Slow



To rotate the selected image

1 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select an image in the “Album” display, then press ENTER.



 
2 Press \leftarrow/\rightarrow to select “ \square ”, then press ENTER.


Each time you press ENTER, the image turns clockwise by 90°.



continued

To zoom in an image


- 1 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select an image in the “Album” display, then press ENTER.
- 2 Press \leftarrow/\rightarrow to select “”, then press ENTER.
“” appears.
- 3 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move “” to the position where you want to zoom in.
- 4 Press ENTER repeatedly to change the magnification. Each time you press ENTER, the magnification changes as shown below.
 $2\times \rightarrow$ normal magnification

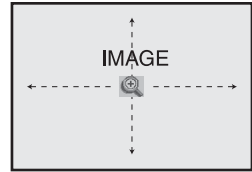


Note

- You cannot use ZOOM on the remote in JPEG image files on DATA CD/DATA DVD.

To enjoy the Slide show

- 1 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select an image in the “Album” display, then press ENTER.
- 2 Press \leftarrow/\rightarrow to select “”, then press ENTER.
The “Interval” menu appears.
- 3 Press \leftarrow/\rightarrow to select the desired play speed, then press ENTER.
Slide show starts.

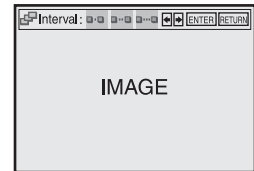

To turn on/off the menu in the single image display

Press CLEAR to turn off the menu. Press \leftarrow or \rightarrow to turn on the menu.



To return to the “Album” display

Press MENU to return to the “Album” display. Press \blacktriangleleft repeatedly to return to the first “Album” page.

To return to the “Select a Media Type” menu

Press \blacksquare STOP twice, then press TOP MENU.

Notes

- Slide show can play in only one direction.
- You cannot rotate or zoom in the image during Slide show.
- If you select “” in the rotated image display, the images in the “Album” display will not be rotated. But if you start the slide show, the images will be rotated. Correct the rotation in the “” menu.

About JPEG image files

You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs) recorded in JPEG format. However, the discs must be recorded according to ISO9660 Level 1/Level 2 or Joliet format and DATA DVDs of Universal Disk Format (UDF) for the player to recognize the tracks (or files). You can also play DATA CDs or DATA DVDs recorded in Multi Session or Multi Border (see “Note on Multi Session/Border discs” on page 93).

Refer to the instructions supplied with the CD-R/CD-RW/DVD-R/DVD-RW drives and the recording software (not supplied) for details on the recording format.

Notes

- If both video data and JPEG image files exist on a DATA DVD, the player recognizes only the video data.
- A total of up to 999 files can be recognized for discs that contain both MP3 and JPEG files. Files are recognized in the order that they were recorded. For example, if 990 JPEG files are recorded then 100 MP3 files are recorded, the 990 JPEG files recorded first and only the first 9 MP3 files can be recognized.

Note on Multi Session/Border discs

If JPEG image files are recorded in the first session/border, the player will also play JPEG image files in other session/border. If audio tracks and images in Music CD format or Video CD format are recorded in the first session/border, only the first session/border will be played back.

Tip

- If you add numbers (01, 02, 03, etc.) to the front of the file names, the files will be played in that order.

Notes


- This player can play JPEG image files with the extension “.JPEG” or “.JPG.”
- Some DATA CDs or DATA DVDs cannot be played on this system depending on file format.
- The player may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format.
- If you add the extension “.JPG” or “.JPEG” to data not in JPEG format, “Can not Display” will appear.
- Depending on the disc or the size of image files, playback may take some time to start.
- Progressive and lossless compression JPEG image files are not supported.
- The image size that can be displayed is limited. You can display the following images; width 128 - 7680 pixels by height 128 - 7680 pixels.

Playing VIDEO CDs with “PBC ON/OFF” Functions **VCD**

The PBC (Playback control) function allows you to search and perform other operations interactively. PBC playback follows a selection menu displayed on your TV screen.

Before you start...

- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

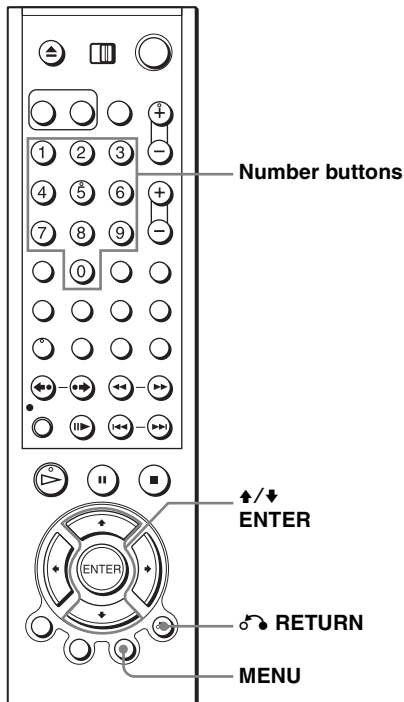

1

 


Press MENU repeatedly to select “PBC ON.”
The menu for your selection appears.

2



Press **↑/↓** to select the item number you want.
You can also use the number buttons to select the item number and track.



3

Press ENTER.

4

Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

To return to the menu

Press  RETURN.


To play using “PBC OFF”

Press MENU to select “PBC OFF.”

When “PBC OFF” is selected, the DVD player starts continuous play. You cannot play still pictures such as a menu.


To return to “PBC ON,” press MENU to select “PBC ON.”

Note


- Depending on the VIDEO CD, “Press ENTER” in step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press  PLAY.

Quick Timer Recording **VHS**


After you have started recording, you can have the VCR stop recording automatically after a specified duration.

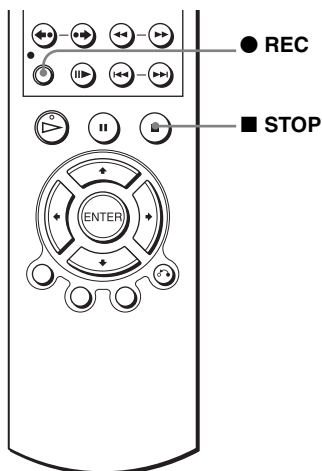

1 While recording, press ● REC.

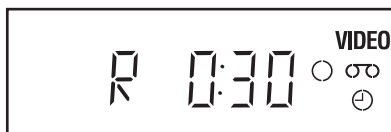

 2 Press ● REC repeatedly to set the duration.
Each press advances the time as follows.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording.

To extend the duration

Press ● REC repeatedly to set a new duration time.

To cancel the duration

Press ● REC repeatedly until the ⊖ indicator disappears and the VCR returns to normal recording mode.

To stop while recording

Press ■ STOP.

Note

- You cannot display the current tape time in the display window when setting the recording duration time.

Recording stereo and bilingual programs

VHS

Recording stereo programs

When you receive a program broadcast in stereo, press AUDIO to display “Hi-Fi” on the TV screen. You can also select “Left,” “Right,” or “Mono.” If there is noise in the stereo program, select “Mono.” The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise.

Recording bilingual programs

Press AUDIO to display “SAP” on the TV screen. When a SAP (Second Audio Program) is received, “SAP” appears on the TV screen. When “MAIN” is selected, the VCR records only the main sound.


Selecting the sound during playback

During playback, press AUDIO to select the sound you want.

To listen to	On-screen display	Display window
Stereo	Hi-Fi	STEREO indicator
Left channel	Left	STEREO indicator
Right channel	Right	STEREO indicator
Monaural sound on the normal audio track	Mono	No indicator

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

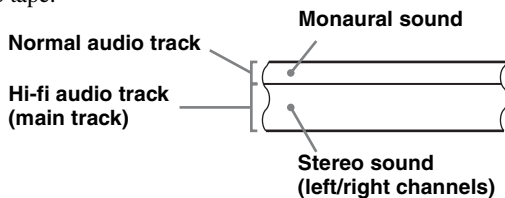


Notes

- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO setting.


Searching using various functions **VHS**

The VCR automatically marks the tape with an index signal at the point where each recording begins.

You can easily find a specific point using various search functions.

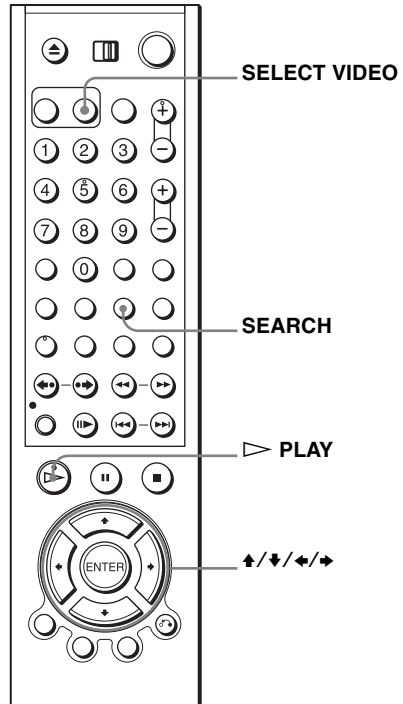


1 **SELECT VIDEO** Press SELECT VIDEO to control the VCR.



2 Insert an indexed tape into the VCR.


3 **REPEAT/SEARCH** Press SEARCH.

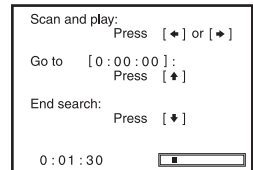4



- Scan and Play (To search using the index function):
 - 1 Press **▶** to scan ahead, or **◀** to scan backwards.
The VCR searches and then plays back for about five seconds.

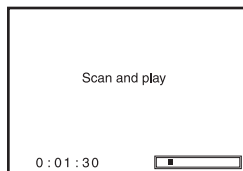


- 2 Press **▷** PLAY to view the program.
If you do not press **▷** PLAY, the VCR automatically searches for the next index mark, or until it reaches the end of the tape.

- Go to [0:00:00] (To search for the counter 0:00:00 point):
Press **▲**.


The VCR starts searching and automatically stops at the 0:00:00 point.

To mark a point on the tape that you want to find later, press CLEAR to reset the tape counter to "0:00:00."

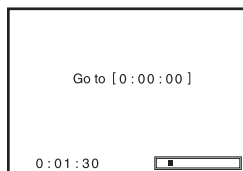

- End search (To search for a blank portion of the tape)
Press **▼**.

The VCR starts searching and automatically stops at the beginning of a blank space. If no blank space is found, the VCR reaches the end.

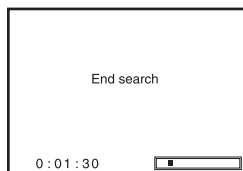

To stop searching

Press **■**.

Note


- Once in recording mode, if the VCR is put in pause and then released to start the recording, no index mark will be inserted. An index mark will be inserted if the channel is changed while VCR is put in pause.


Changing menu options **VHS**


You can change the tape length, auto play and auto repeat settings. Normally the default settings are used. Change these settings if necessary.



Before you start...

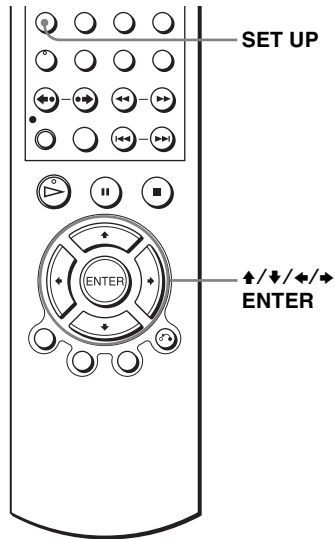
- Set **TV / DVD-VIDEO** switch to **DVD-VIDEO** on the remote.

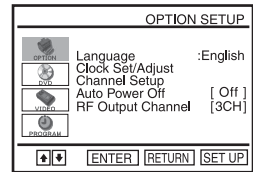


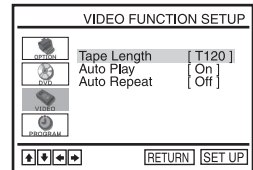
- 1**  Press **SET UP** when the DVD player is in stop mode.



- 2**  Press **↑/↓** to select  (VIDEO) and press **ENTER**.

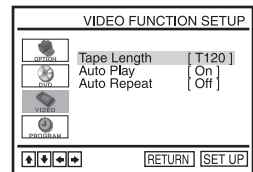

- 3**  Press **↑/↓** to select the option to change.



4

Press **←/→** to change the setting.

5

SET UP



Press SET UP to exit the menu.


Menu choices

The default settings are indicated in bold print.

Menu option	Set this option to
Tape Length	<ul style="list-style-type: none">• T-120 when using a T-120 or shorter length tape.• T-160 when using a T-160 length tape.• T-180 when using a T-180 or longer length tape.
Auto Play	<ul style="list-style-type: none">• On to start playback automatically, when you insert a tape with its safety tab removed.• Off to turn off Auto play. You need to press ▷ PLAY to start playback, even if you insert a tape with its safety tab removed.
Auto Repeat	<ul style="list-style-type: none">• On to play back a tape repeatedly. The VCR rewinds a tape to the beginning and restarts playback automatically.• Off to turn off Auto repeat.

Editing with another VCR **VHS**

How to connect to record on this VCR

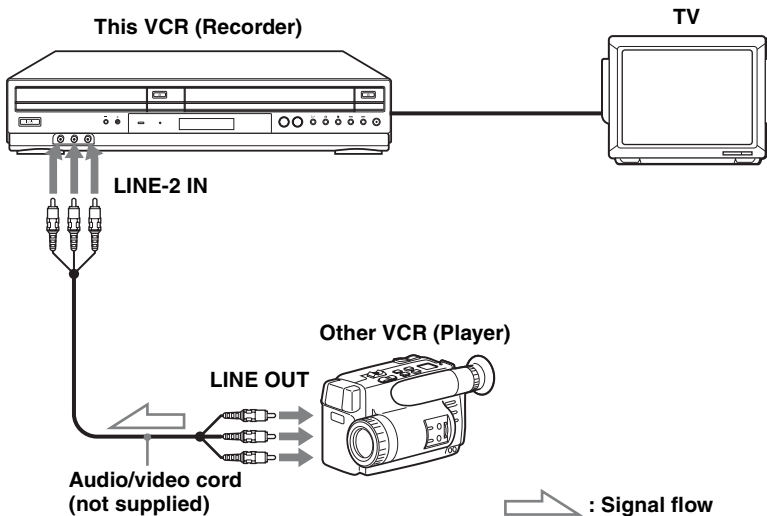


Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type and connected to this VCR's LINE-2 IN jacks, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. If you connect to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- You can use the LINE IN 1 jacks for editing. If the other VCR is a monaural type the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO L/R jacks using an audio/video cord (not supplied).

Operation (when recording on this VCR)

Before you start editing

- Turn on the VCR and the TV and set it to the video channel.
- Press INPUT SELECT to display “L1” or “L2” in the display window.
- Press SP/EP to select the tape speed, SP or EP.

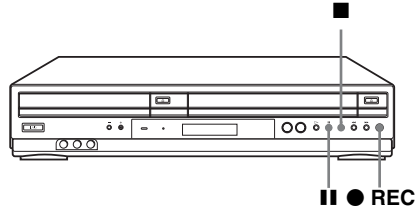

- 1** Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2** Insert a tape into this (recording) VCR. Search for the point to start recording and press **||**.
- 3** Press **●** REC on this VCR to set it to recording pause.
- 4** To start editing, press the **||** (pause) buttons on both VCRs at the same time.

To stop editing

Press the **■** (stop) buttons on both VCRs.


Tip

- To cut out unwanted scenes while editing, press **||** on this VCR when an unwanted scene begins. When it ends, press **||** again to resume recording.



General setup information

Before you start...


- Set TV / DVD-VIDEO switch to DVD-VIDEO on the remote.

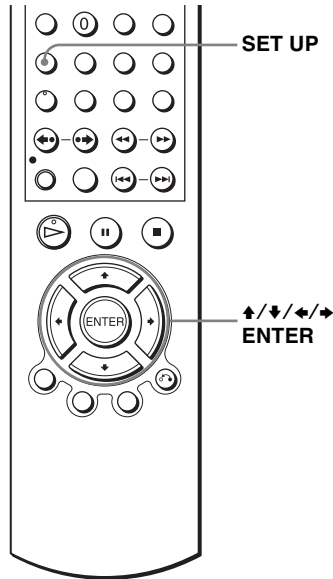

 1 **SET UP** Press SET UP when the DVD player is in stop mode, then press \uparrow/\downarrow to select (OPTION), then press ENTER.

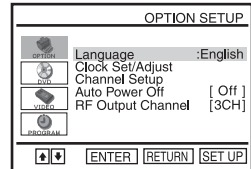

2 Press \uparrow/\downarrow to select the option to change.

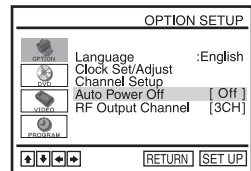

3 Press \leftarrow/\rightarrow to change the setting.



When changing the “RF Output Channel,” confirmation messages will appear. Press ENTER to confirm the messages.

4

SET UP

Press SET UP to exit the menu.




Menu choices

The default settings are indicated in bold print.

Menu option	Set this option to
Auto Power Off	<ul style="list-style-type: none"> • “Off” to deactivate the Auto Power Off function. • “1Hr”/“2Hr” to turn the DVD-VCR off automatically if no signal is received and you do not press any of the buttons during this time.
RF Output Channel	<ul style="list-style-type: none"> • “3CH” when using channel 3 to receive the VCR signal. • “4CH” when using channel 4 to receive the VCR signal. For details, see page 105.

Setting the RF Output channel

When connecting the DVD-VCR to the TV using only the antenna cable, you must set the RF Output channel in the “OPTION SETUP” menu so that the TV can receive the correct signal from the DVD-VCR.

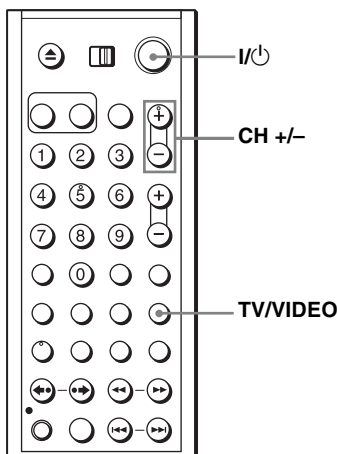

- 1 Set the RF Output channel to “3CH” or “4CH” (see page 104 to set the channel), whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press I/Power to turn on the DVD-VCR.
- 3 Press TV/VIDEO to turn on “VIDEO” in the DVD-VCR’s display window.



- 4 Press CH +/- to display a channel number in the display window.
Select an active channel number in your area.

Additional Information


continued

- 5** Turn on your TV and set it to the channel you selected in step 1 (3CH or 4CH).
The channel you selected in step 4 appears on the TV screen. If the channels change when you press CH +/-, you have made the correct setting.

Whenever you use the DVD-VCR, set the TV to the channel selected in step 1.

Attaching the external antenna connector


When using a 300-ohm twin lead cable for a VHF/UHF antenna, use an antenna connector (not supplied) to connect the antenna to the DVD-VCR.

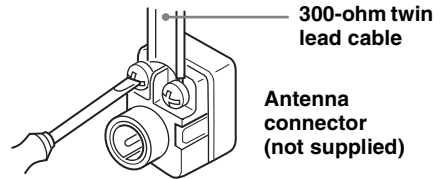

- 1** Loosen the screws on the antenna connector.
- 2** Wind the twin leads around the screws on the antenna connector.
- 3** Retighten the screws.

Attaching a VHF/UHF band mixer

When using both a 75-ohm coaxial cable and a 300-ohm twin lead cable for a VHF/UHF antenna, use a VHF/UHF band separator/mixer (not supplied) to connect the antenna to the DVD-VCR.

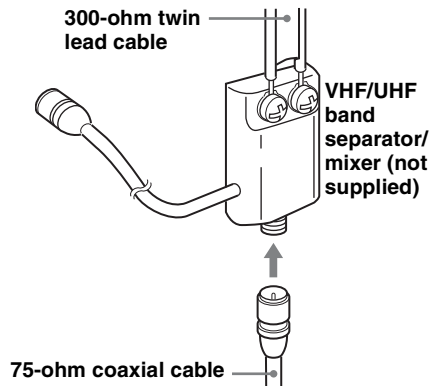

- 1** Loosen the screws on the mixer.
- 2** Wind the twin leads around the screws on the mixer.
- 3** Retighten the screws.
- 4** Connect the 75-ohm coaxial cable to the mixer.

Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony dealer. (For customers in USA)

General Troubleshooting

	Symptom	Remedy
Power	The I/⏻ switch does not function.	<ul style="list-style-type: none">• Connect the AC power cord securely.
	The power is turned on but the DVD-VCR does not operate.	<ul style="list-style-type: none">• Moisture condensation has occurred. Turn the power off, unplug the AC power cord and leave the DVD-VCR to dry for over three hours.
Clock	The clock has stopped and “-:--” appears in the display window.	<ul style="list-style-type: none">• The clock stops if the DVD-VCR is disconnected from the wall outlet. Reset the clock (and timer).
Others	The remote commander does not function.	<ul style="list-style-type: none">• Make sure you are pointing the remote commander at the remote sensor on the DVD-VCR.• Replace all the batteries in the remote commander with new ones if they are weak.• Make sure the TV / DVD-VIDEO switch is set correctly.• Select correctly VIDEO or DVD with the SELECT DVD/VIDEO button.
	The tracking meter does not appear on the screen.	<ul style="list-style-type: none">• The recording condition of the tape is very poor and tracking cannot be adjusted.
	You cannot control other TVs.	<ul style="list-style-type: none">• Set your TV's code number. The code number may change when you replace the batteries of the remote commander.

DVD Troubleshooting

	Symptom	Remedy
Picture	There is no picture/picture noise appears.	<ul style="list-style-type: none"> • Re-connect the connecting cord securely. • The connecting cords are damaged. • Check the connection to your TV (page 14) and switch the input selector on your TV so that the signal from the player appears on the TV screen. • The disc is dirty or flawed. • If the picture output from your player goes through your VCR to get to your TV or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience problems even when you connect your player directly to your TV, please try connecting your player to your TV's S-VIDEO input (page 32). • You have set the player to progressive format (the PROGRESSIVE indicator lights up in orange) even though your TV cannot accept the progressive signal. In this case, set "Progressive" to "Off" (page 64). • Even if your TV is compatible with progressive format (480p) signals, the image may be affected when you set the player to progressive format. In this case, set "Progressive" to "Off" and the player is set to normal (interlace) format (page 64). • COMPONENT VIDEO OUT jack is not used or "Progressive" of the "SCREEN SETUP" menu is not set correctly while the PROGRESSIVE indicator lights up in orange. Check the setting (page 62) and connection (page 32).
	There is no picture or the picture noise appears when connected to the HDMI OUT jack.	<ul style="list-style-type: none"> • Try the following: ①Turn the DVD-VCR off and on again. ②Turn the connected equipment off and on again. ③Disconnect and then connect the HDMI cord again. • If the HDMI OUT jack is used for video output, changing the "HDMI Resolution" setting in the "SCREEN SETUP" menu may solve the problem (page 63). Connect the TV and the recorder using a video jack other than the HDMI OUT, and switch the TV's input to the connected video input so that you can see the on-screen displays. Change the "HDMI Resolution" setting in the "SCREEN SETUP" menu, and switch the TV's input back to HDMI. If the picture still does not appear, repeat the steps and try other options. • The DVD-VCR is connected to an input device that is not HDCP compliant (page 32).
	Even though you set the aspect ratio in "TV Type" of the "SCREEN SETUP" menu the picture does not fill the screen.	<ul style="list-style-type: none"> • The aspect ratio of the disc is fixed on your DVD.
	There is no picture from your VCR connected to the LINE IN jacks.	<ul style="list-style-type: none"> • The DVD player must be in standby mode to view pictures from your VCR.

	Symptom	Remedy
Sound	There is no sound.	<ul style="list-style-type: none"> • Re-connect the connecting cord securely. • The connecting cord is damaged. • The player is connected to the wrong input jack on the amplifier (receiver) (page 15). • The amplifier (receiver) input is not correctly set. • The player is in pause mode or in Slow-motion Play mode. • The player is in fast forward or fast reverse mode. • If the audio signal does not come through the DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT jacks, check the audio settings (page 59).
	No sound is output from the HDMI OUT jack.	<ul style="list-style-type: none"> • Try the following: ①Turn the DVD-VCR off and on again. ②Turn the connected equipment off and on again. ③Disconnect and then connect the HDMI cord again.
	Sound is noisy.	<ul style="list-style-type: none"> • When playing a CD with DTS sound tracks, noise will come from the LINE OUT L/R (AUDIO) jacks (page 39) or DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT jacks.
	The sound volume is low.	<ul style="list-style-type: none"> • The sound volume is low on some DVDs. The sound volume may improve if you set "Audio DRC" to "Wide Range" (page 60).
Operation	The disc does not play.	<ul style="list-style-type: none"> • The disc is turned over. • Insert the disc with the playback side facing down on the disc tray. • The disc is skewed. • The player cannot play certain discs (page 7). • The region code on the DVD does not match the player. • Moisture has condensed inside the player (page 3). • The player cannot play a recorded disc that is not correctly finalized (page 8). • Make sure the TV / DVD-VIDEO switch is set correctly. • Select correctly VIDEO or DVD with SELECT DVD/ VIDEO button.
	The MP3 audio track cannot be played (page 84).	<ul style="list-style-type: none"> • The DATA CD or DATA DVD is not recorded in the MP3 format that conforms to ISO9660 Level 1/Level 2 or UDF. • The MP3 audio track does not have the extension ".MP3." • The data is not formatted in MP3 even though it has the extension ".MP3." • The data is not MPEG1 Audio Layer 3 data. • The player cannot play audio tracks in MP3PRO format.
	The JPEG image file cannot be played.	<ul style="list-style-type: none"> • The DATA CD or DATA DVD is not recorded in JPEG format that conforms to ISO9660 Level 1/Level 2 or UDF. • The JPEG image file does not have the extension ".JPG" or ".JPEG." • The data is not formatted in JPEG even though it has the extension ".JPG" or ".JPEG." • Length or width of the image is more than 4720 dots.

	Symptom	Remedy
Operation	The title of the MP3 audio album/ track or JPEG image album/file is not correctly displayed.	<ul style="list-style-type: none"> The player can only display numbers and alphabet. Other characters are displayed as asterisks.
	The disc does not start playing from the beginning.	<ul style="list-style-type: none"> Program play, shuffle play, or repeat play, has been selected (pages 76, 78, 79). Resume play has taken effect (page 39).
	The player starts playing the disc automatically.	<ul style="list-style-type: none"> The disc features an auto playback function.
	Playback stops automatically.	<ul style="list-style-type: none"> While playing discs with an auto pause signal, the player stops playback at the auto pause signal.
	You cannot perform some functions such as stop, search, slow-motion play, repeat play, shuffle play, or program play.	<ul style="list-style-type: none"> Depending on the disc, you may not be able to do some operations. See the operating manual that comes with the disc.
	The language for the sound track cannot be changed.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 71). Multilingual tracks are not recorded on the DVD being played. The DVD prohibits the changing of the language for the sound track.
	The subtitle language cannot be changed or turned off.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 71). Multilingual subtitles are not recorded on the DVD being played. The DVD prohibits the changing of the subtitles.
	The angles cannot be changed.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 71). Multi-angles are not recorded on the DVD being played. The DVD prohibits changing of the angles.
The player does not operate properly.	<ul style="list-style-type: none"> When static electricity, etc., causes the player to operate abnormally, unplug the player. 	

VCR Troubleshooting

	Symptom	Remedy
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> Adjust the tracking with the TRACKING +/- buttons. The video heads are dirty (see "On cleaning the video heads" (page 3)). Clean the video heads using a Sony video head cleaning cassette. If a Sony cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony dealer (a standard service fee will be charged). Do not use a commercially available liquid type cleaning cassette, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony dealer for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. If you made A/V connections, check the audio cord connection.
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input. Select the correct source with the INPUT SELECT or CH +/- buttons. Select a channel number when recording TV programs; select "L1" or "L2" when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> Adjust the TV antenna.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> Check that the safety tab has not been removed.
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> Make sure the tape is not at its end.
Timer recording	The timer does not operate.	<ul style="list-style-type: none"> Check that the clock is set. Make sure a tape has been inserted. Check that the safety tab has not been removed. Make sure the tape is not at its end. Make sure a program has been set for timer recording. Make sure your timer settings are past the current time. Check that the cable box is turned on. The clock stops if the DVD-VCR is disconnected from the wall outlet for more than one minute. Reset the clock and timer. Turn the power off and unplug the AC power cord.
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> Check that a tape is not already in the tape compartment.
	Control by AV mouse is not possible.	<ul style="list-style-type: none"> The unit is not compatible with satellite TV receiver AV mouse, etc.

Glossary

Chapter (page 40)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

Dolby Digital (pages 34 and 60)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same 5.1 discrete channels of high quality digital audio found in Dolby Digital cinema audio systems. Good channel separation is realized because all of the channel data are recorded discretely and little deterioration is realized because all channel data processing is digital.

Dolby Surround (page 35)

Audio signal processing technology that Dolby Laboratories developed for surround sound. When the input signal contains a surround component, the process outputs the front, center and rear signals. The rear channel is monaural.

DTS (page 60)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

DVD (page 7)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is 9.4 GB, and double-layer and double-sided DVD is 17GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more real audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

DVD+R (page 7)

A DVD+R (read “plus R”) is a recordable disc that is the same size as a DVD VIDEO. Contents can be recorded only once to a DVD+R, and will have the same format as a DVD VIDEO.

DVD-R (page 7)

A DVD-R is a recordable disc that is the same size as a DVD VIDEO. Contents can be recorded only once to a DVD-R, and will have the same format as a DVD VIDEO. The DVD-R has two different modes: VR mode and Video mode. DVDs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

DVD-RW (page 7)

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

DVD+RW (page 7)

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

HDMI (High-Definition Multimedia Interface) (pages 32 and 63)

HDMI is an interface that supports both video and audio on a single digital connection. The HDMI connection carries standard to high definition video signals and multi-channel audio signals to AV components such as HDMI equipped TVs, in digital form without degradation.

The HDMI specification supports HDCP (High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signals.

Interlace format

Interlace format shows every other line of an image as a single “field” and is the standard method for displaying images on television. The even number field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

Progressive format (pages 32 and 64)

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper. This player is compatible with the 480 progressive format.

Title (page 40)

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

Track (page 40)

Sections of a picture or a music feature on a CD or VIDEO CD (the length of a song).

Specifications

System

- Laser
 - Semiconductor laser
- Format
 - VHS NTSC standard
- Video recording system
 - Rotary head helical scanning FM system
- Video heads
 - Double azimuth four heads
- Video signal
 - NTSC color, EIA standards
- Tape speed
 - SP: 33.35 mm/s (1 $\frac{3}{8}$ inches/s)
 - EP: 11.12 mm/s ($\frac{7}{16}$ inches/s)
 - LP: 16.67 mm/s ($\frac{1}{16}$ inches/s), playback only
- Maximum recording/playback time
 - 8 hrs. in EP mode (with T-160 tape)
- Rewind time
 - Approx. 1 min. (with T-120 tape)

Tuner section

- Channel coverage
 - VHF 2 to 13
 - UHF 14 to 69
 - CATV A-8 to A-1, A to W, W+1 to W+84
- Antenna
 - 75-ohm antenna terminal for VHF/UHF

Inputs and outputs

- LINE IN 1 and LINE-2 IN
 - VIDEO IN, phono jack (1 each)
 - Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
 - AUDIO IN, phono jacks (2 each)
 - Input level: 327 mVrms
 - Input impedance: more than 47 kilohms
- LINE OUT
 - VIDEO OUT, phono jack (1)
 - Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
 - AUDIO OUT, phono jacks (2)
 - Standard output: 327 mVrms
 - Load impedance: 47 kilohms
 - Output impedance: less than 10 kilohms
- DIGITAL OUT
 - COAXIAL, phono jack
 - Output signal: 0.5 Vp-p, 75 ohms

- COMPONENT VIDEO OUT (Y, Pb, Pr)
 - Phono jack
 - Y: 1.0 Vp-p/Pb, Pr: 0.7 Vp-p, 75 ohms
- S-VIDEO OUT
 - 4-pin, mini-DIN jack
 - Y: 1.0 Vp-p, unbalanced, sync negative
 - C: 0.286 Vp-p, load impedance 75 ohms
- HDMI OUT
 - Type A (19 pin)

Timer section

- Clock
 - Quartz locked
- Timer indication
 - 12-hour cycle
- Timer setting
 - 8 programs (max.)

General

- Power requirements
 - 120 V AC, 60 Hz
- Power consumption
 - 25 W
- Power back-up
 - Back-up duration: 0 min
- Operating temperature
 - 0°C to 45°C (32°F to 113°F)
- Storage temperature
 - 20°C to 60°C (-4°F to 140°F)
- Operating humidity
 - 25% to 80%
- Dimensions including projecting parts and controls (w/h/d)
 - Approx. 430 × 85 × 287 mm (Approx. 17 × 3 $\frac{3}{8}$ × 11 $\frac{3}{8}$ inches)
- Mass
 - Approx. 3.6 kg (Approx. 7.9 lbs)

Supplied accessories


- Remote commander (1)
- Size AA (R6) batteries (2)
- 75-ohm coaxial cable with F-type connectors (1)

Design and specifications are subject to change without notice.

Index to parts and controls

Refer to the pages indicated in parentheses () for details.

Front panel

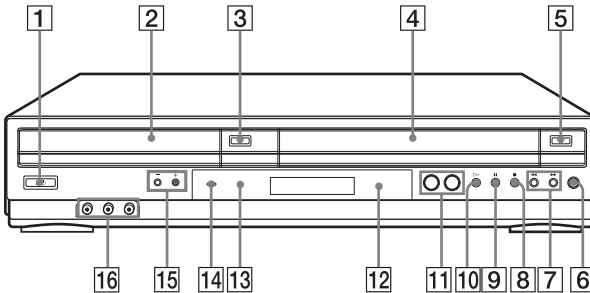

1 I/⏻ POWER (on/standby) switch (39) (44)

2 Disc tray (36)

3 ⏮ (open/close) button (36) (38)

4 Tape compartment (43)

5 ⏭ (eject) button (44)

6 ● REC (record) button (48)

7 ◀◀ (rewind)/▶▶ (fast-forward) button (38) (44)

8 ■ (stop) button (37) (44)

9 || (pause) button (37) (44)

10 ▷ (play) button (37) (43)

11 SELECT DVD/VIDEO buttons (11)

12 📡 Remote sensor (11)

13 PROGRESSIVE indicator (64)

14 HDMI*¹ (High-Definition Multimedia Interface) indicator (63)

Lights up when the HDMI OUT jack is correctly connected to a HDCP (High-bandwidth Digital Content Protection) compliant device with HDMI or DVI (Digital Visual Interface) input.

15 CHANNEL/TRACKING +/- buttons*² (46) (47)

16 LINE-2 IN VIDEO/AUDIO L (MONO)/R jacks (102)

*¹ This DVD-VCR is based on version 1.2a of High-Definition Multimedia Interface Specifications.


This DVD-VCR incorporates High-Definition Multimedia Interface (HDMI™) technology.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

*² CHANNEL/TRACKING + buttons have a tactile dot. Use the tactile dot as a reference.


continued

Display window

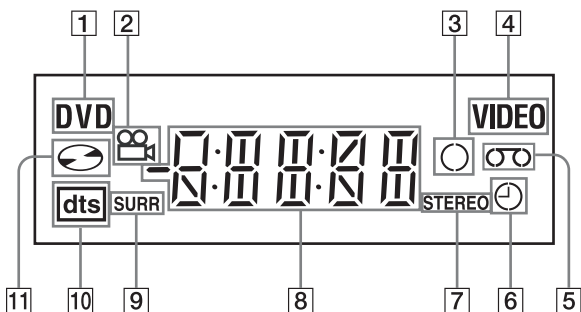

- | | |
|--------------------------------|--|
| 1 DVD indicator (37) | 7 STEREO indicator (97) |
| 2 Angle indicator (73) | 8 Playing time/clock/current status indicator (37) (43) |
| 3 Record indicator (48) | 9 SURR (surround) indicator (82) |
| 4 VIDEO indicator (43) | 10 DTS indicator (60) |
| 5 Tape indicator (43) | 11 Disc indicator (37) |
| 6 Timer indicator (51) | |

Rear panel

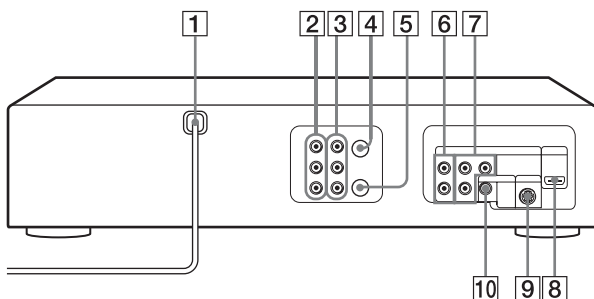


DVD player and VCR

- 1** AC power cord (14) (18)
- 2** LINE IN 1 VIDEO/AUDIO L/R jacks (102)
- 3** LINE OUT VIDEO/AUDIO L/R jacks (15)
- 4** IN (FROM ANT.) connector (16)
- 5** OUT (TO TV) connector (16)

DVD player only

- 6** LINE OUT AUDIO L/R jacks (34)
- 7** COMPONENT VIDEO OUT Pr/Pb/Y jacks (32)
- 8** HDMI OUT (High-Definition Multimedia Interface out) jack (32) (34)
- 9** S-VIDEO OUT jack (32)
- 10** DIGITAL AUDIO OUT/COAXIAL jack (35)

Remote commander for DVD

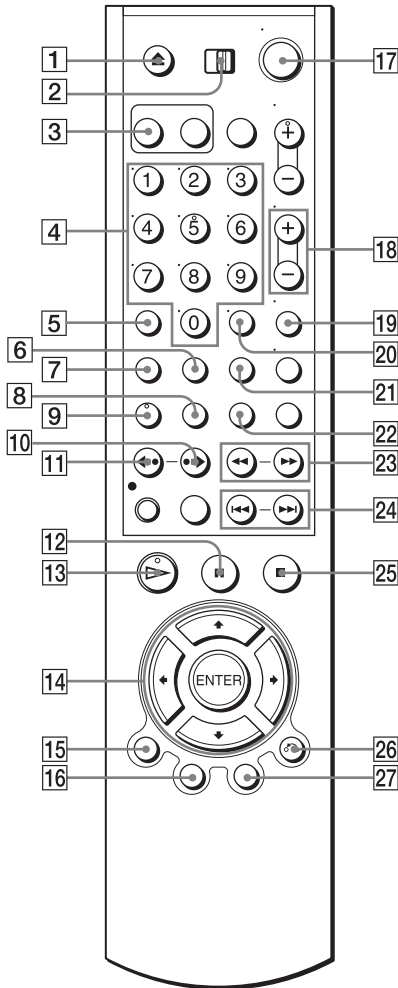


- 1** ▲ (open/close) button (36) (38)
- 2** TV / DVD-VIDEO switch (11)
- 3** SELECT DVD button (11)
- 4** Number buttons* (41) (68)
- 5** CLEAR button (77)
- 6** ANGLE button (73)

- 7** SET UP button (20)
- 8** SUBTITLE button (74)
- 9** AUDIO button* (80)
- 10** ●▶ SKIP button (37)
- 11** ◀● REPLAY button (37)
- 12** ■■ PAUSE button (37)
- 13** ▷ PLAY button* (37)
- 14** ▲/▼/◀/▶ buttons (20)
ENTER button (20)
- 15** DISPLAY button (40)
- 16** TOP MENU button (71)
- 17** I/⏻ (on/standby) switch (12) (39)
- 18** VOL (volume) +/- buttons (12)
- 19** ZOOM button (72)
- 20** ENTER button (20)
- 21** REPEAT button (76)
- 22** SURROUND button (82)
- 23** ◀◀/▶▶ buttons (37)
- 24** ◀◀ PREV (previous)/▶▶ NEXT button (37)
- 25** ■ STOP button (37)
- 26** ⏪ RETURN button (22)
- 27** MENU button (71)

* Number 5, AUDIO and ▷ PLAY buttons have a tactile dot. Use the tactile dot as a reference.

Remote commander for VIDEO

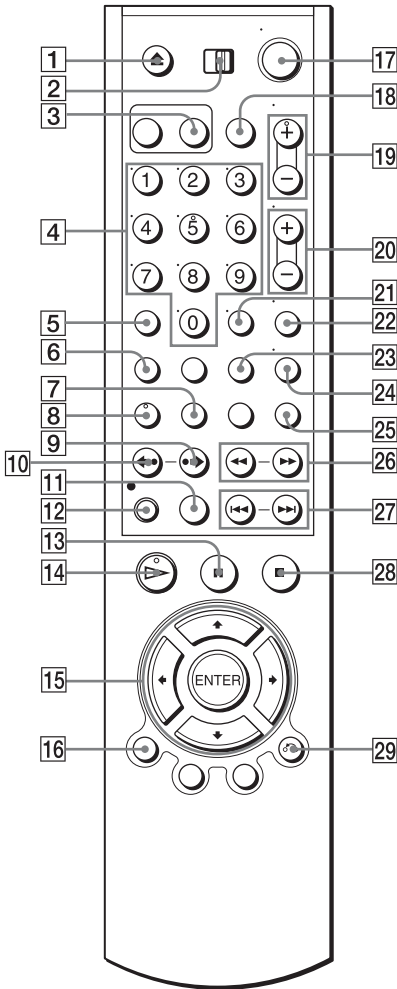

- 1 ▲ (eject) button (44)
- 2 TV / DVD-VIDEO switch (11)
- 3 SELECT VIDEO button (11)
- 4 Number buttons* (28)
- 5 CLEAR button (45) (51)

- 6 SET UP button (20)
- 7 TIMER button (50)
- 8 AUDIO button* (97)
- 9 ●→ SKIP button (44)
- 10 ←● REPLAY button (44)
- 11 SP (Standard Play)/EP (Extended Play) button (48)
- 12 ● REC (record) button (48)
- 13 ■ PAUSE button (44)
- 14 ▷ PLAY button* (43)
- 15 ▲/▼/◀/▶ buttons (20)
ENTER button (20)
- 16 DISPLAY button (45)
- 17 I/⏻ (on/standby) switch (12) (44)
- 18 VCR Plus+ button (29)
- 19 CH (channel)/TRACKING +/- buttons* (46) (47)
- 20 VOL (volume) +/- buttons (12)
- 21 ENTER button (20)
- 22 MUTING button (12)
- 23 SEARCH button (98)
- 24 TV/VIDEO button (49)
- 25 INPUT SELECT button (47)
- 26 ◀◀ (rewind)/▶▶ (fast-forward)/▶ (slow) buttons (44)
- 27 ◀◀/▶▶ SHUTTLE button (44)
- 28 ■ STOP button (44)
- 29 ↻ RETURN button (22)

* Number 5, AUDIO, ▷ PLAY and CH/TRACKING + buttons have a tactile dot. Use the tactile dot as a reference.

DVD Audio/Subtitle Language

Abbreviation	Language
ARA	Arabic
BUL	Bulgarian
CHI	Chinese
CRO	Croatian
CZE	Czech
DAN	Danish
DEU	German
ENG	English
ESP	Spanish
FIN	Finish
FRA	French
GRE	Greek
HUN	Hungarian
IDN	Indonesian
IND	Hindi
ISL	Icelandic
ITA	Italian
IWR	Hebrew
JPN	Japanese
KOR	Korean
MAL	Malay
NLD	Dutch
NOR	Norwegian
POL	Polish
POR	Portuguese
RUS	Russian
SVE	Swedish
THA	Thai
TUR	Turkish
VIE	Vietnamese
ZAF	Afrikaans

Index

Numerics

- 16:9 63
- 4:3 Letter Box 63
- 4:3 Pan Scan 63

A

- Adjusting
 - picture 46
 - tracking 46
- Angle 73
- Audio track 97
- Audio/video (A/V) hookup 15
- Auto Clock Set 21

C

- Cable hookup 14
- Channel line-up chart 29
- Child Lock 58
- Cleaning the video heads 3
- Clock setting 21
- Connecting
 - Cable TV 19
 - external antenna connector 106
 - VHF/UHF band mixer 106
- Counter 45
- Custom AV Mode 42

D

- DATA CD 7, 84, 90
- DATA DVD 7, 84, 90
- Disabling channels 27
- DOLBY DIGITAL 35, 80
- DTS 80
- Dubbing. *see* Editing
- DVD 7

E

- Editing 102
- EP mode 48

H

- Handling discs 2
- HDMI
 - Audio (HDMI) 60
 - HDMI 113
 - HDMI Resolution 63
- Hi-fi audio track 97

I

- Instant Advance 38
- Instant Replay 38, 44
- Instant Skip 44

J

- JPEG 7, 90

L

- Language selecting 20
- LP mode 49

M

- Monaural 97
- Monitoring audio during playback 97
- MP3 7, 84

N

- Normal audio track 97

P

- Parental Control 68
- PBC (Playback control) 94
- Picture adjustment 46
- Playback
 - at various speeds 38, 44
 - frame by frame 44
 - MP3 audio track 84
 - program play 76
 - repeat play 79
 - selecting the sound 97
 - shuffle play 78
 - shuttle play 44
 - slow motion 38, 44
 - VIDEO CDs 94
- Playback quickly or slowly with sound 39
- Presetting channels 25
- Program play 76
- Progressive 113

R

- Recording
 - bilingual programs 97
 - SAP broadcasts 97
 - saving 49
 - stereo broadcasts 97
 - using the VCR Plus+ system 53
 - while watching another program 49, 52
- Repeat play 79
- Resume Play 39
- RF channel 105

S

- Safety tab 49
- SAP (Second Audio Program) 97
- Searching
 - at various speeds 38, 44
 - for a blank portion 99
 - for the counter 0 point 99
 - Scan and Play 99
- Shuffle play 78
- Shuttle play 44
- SP mode 48
- STEREO 80
- Stereo 97
- Subtitle 74
- Surround 82

T

- Timer setting
 - daily/weekly recording 51
 - using the VCR Plus+ system 53
- Tracking adjustment. *see* Adjusting

U

- Usable discs 7

V

- VCR Plus+ system
 - channel set up 29
 - recording 53
- VIDEO CD 7, 94

Z

- Zoom 72

Índice

Este manual muestra la configuración básica para utilizar la Videograbadora-DVD.
Para ver detalles, consulte el manual de instrucciones en inglés.

Procedimientos iniciales

- 3** Conexiones básicas
 - 9** Selección del idioma
 - 10** Ajuste del reloj
 - 11** Memorización de canales
 - 12** Conexiones avanzadas
-

Operaciones básicas

- 14** Reproducción de discos
- 16** Reproducción de cintas
- 18** Grabación de programas de TV

Conexiones básicas

Antes de comenzar

- Asegúrese de desconectar el cable de alimentación de CA de cada componente antes de conectarlo.
- Desactive la alimentación de todo el equipo.
- No conecte los cables de alimentación de CA hasta no realizar todas las conexiones. Si conecta el cable de alimentación de CA antes de haber completado las conexiones, es posible que no pueda utilizar la función Plug and Play.
- Asegúrese de hacer las conexiones firmemente. Las conexiones flojas pueden provocar distorsiones en la imagen.
- Si su televisor no coincide con ninguno de los ejemplos suministrados, consulte con el proveedor Sony o técnico calificado más cercano.

Selección de la mejor opción de conexión

Si su televisor tiene entradas de audio/video, consulte la página 4 para la conexión de audio/video (A/V). Siga después uno de los siguientes procedimientos de conexión. Si su televisor no tiene entradas de A/V, vaya directamente a una de las siguientes conexiones.

Si tiene	Utilice	Consulte
Antena sólo, sin TV por cable	Conexión 1 A o B (Plug and Play)	Página 5 e 7
Decodificador con muy pocos canales codificados o sin decodificador	Conexión 1 C (Plug and Play)	Página 6 e 7
Decodificador con muchos canales codificados	Conexión 2	Página 8

ES

Después de realizar las conexiones, siga las instrucciones para el ajuste.

Después de realizar el ajuste podrá utilizar la Videgrabadora-DVD. Los procedimientos varían en función de la conexión utilizada.

Precaución

Las conexiones entre el conector VHF/UHF del Videgrabadora-DVD y los terminales de antena del receptor de TV deberán ser hechas solamente como se muestra en las siguientes instrucciones. Si no lo hace así podrá resultar en una operación que violará los reglamentos de la Comisión de Comunicaciones Federal (FCC) relacionada con el uso y la operación de dispositivos de radiofrecuencia. No conecte nunca la salida de la Videgrabadora-DVD a una antena ni haga conexiones simultáneas (en paralelo) de antena y Videgrabadora-DVD en los terminales de antena de su receptor.

Nota para el instalador del sistema CATV (en EE.UU.)

Este recordatorio está provisto para llamar la atención del instalador del sistema CATV sobre el artículo 820-40 del NEC que ofrece directrices para la apropiada puesta a tierra y, en particular, especifica que el cable de tierra deberá ser conectado al sistema de puesta a tierra del edificio, lo más cerca posible del punto de entrada del cable como sea práctico.


continúa

Conexión de audio/video (A/V)


Si su televisor tiene tomas de entrada de audio/vídeo (A/V), obtendrá mejor imagen y sonido si conecta su Videgrabadora-DVD utilizando estas conexiones. Si su televisor no tiene entrada A/V, consulte las páginas siguientes para la conexión de antena o cable.

Si no piensa utilizar su Videgrabadora-DVD para grabar programas, solamente necesitará hacer las conexiones mostradas en esta página. Si desea grabar programas normales o de TV por cable, realice primero estas conexiones y, después, siga con las páginas siguientes para realizar las conexiones de antena o cable.

A Utilice esta conexión si su televisor tiene tomas estéreo

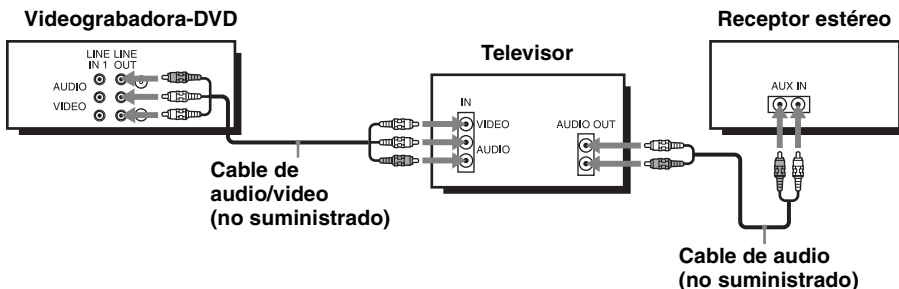

B Utilice esta conexión si su televisor no tiene tomas estéreo

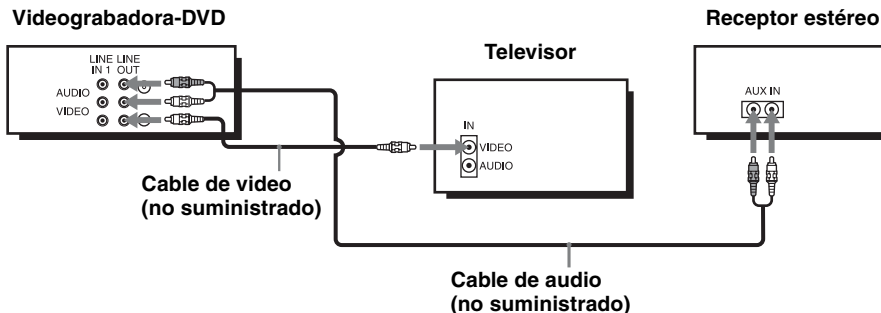


Notas

- Para reproducir una cinta/disco en estéreo, debe utilizar la conexión de A/V.
- Si no dispone de receptor estéreo, conecte la toma LINE OUT/AUDIO L blanca a la toma AUDIO IN del televisor.


Conexión 1 (Plug and Play)

A Utilice esta conexión si está utilizando:

- Antena VHF/UHF (obtendrá los canales 2–13 y canales 14 y superior)
- Antena UHF sólo (obtendrá los canales 14 y superiores)
- Antenas VHF y UHF independientes

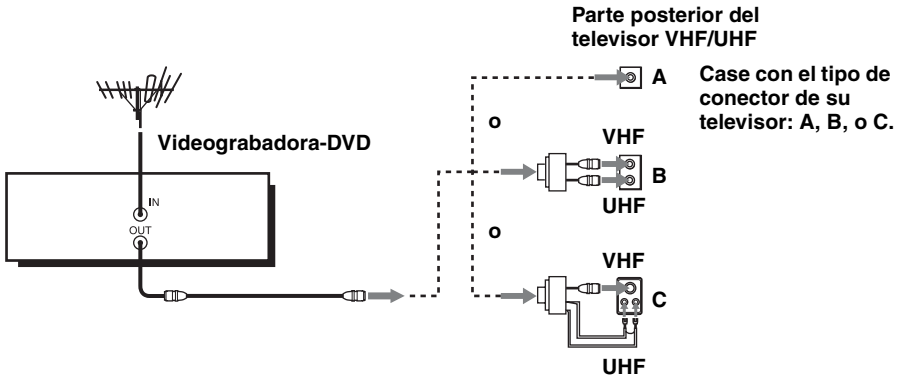

B Utilice esta conexión si emplea una antena sólo para VHF (obtendrá sólo los canales 2–13)

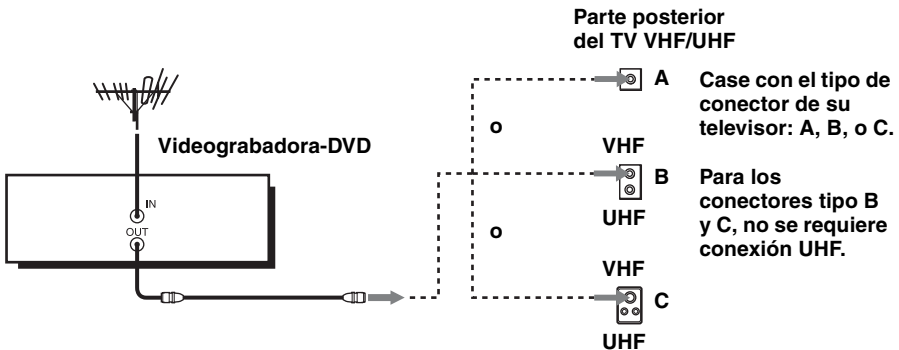

Si no puede conectar directamente el cable de la antena a la Videgrabadora-DVD

Si su cable de antena es un cable plano (cable bifilar de 300 ohm), enchufe un conector de antena externa (no suministrado) para poder conectar el cable al conector IN. Si tiene cables independientes para antenas VHF y UHF, debe utilizar un mezclador de bandas de U/V (no suministrado).

- C** Utilice esta conexión si no tiene decodificador de cable, o si tiene un decodificador de cable con sólo unos pocos canales codificados

Uso recomendado


Utilice esta conexión si no tiene un decodificador. Utilice también esta conexión si su sistema de cable sólo codifica algunos canales.

Con esta conexión podrá

- Grabar cualquier canal no codificado seleccionando el canal en la Videograbadora

Con esta conexión no podrá


- Grabar canales codificados que requieran un decodificador

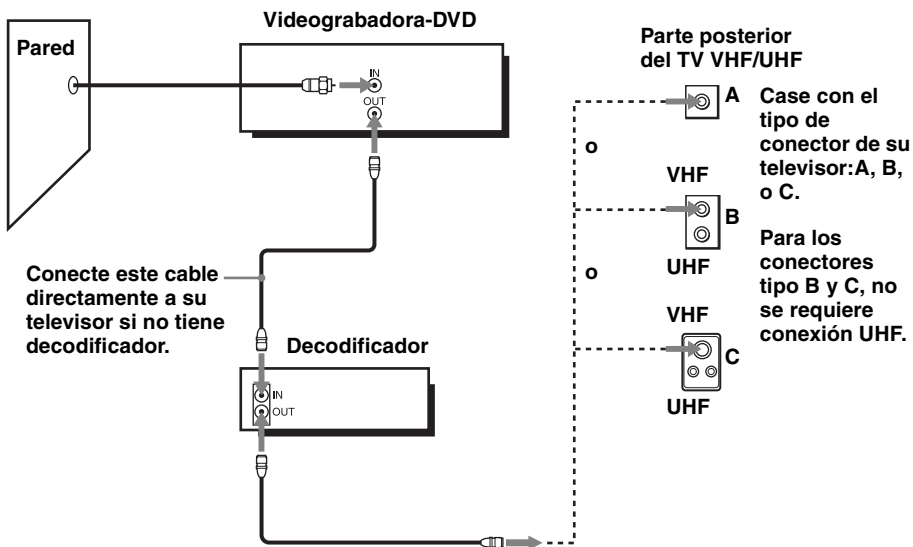


Videgrabadora-DVD configuración (Conexión 1 continuación)

Enchufe la Videgrabadora-DVD en la toma de CA.

Cuando enchufe la Videgrabadora-DVD en la toma de CA, la Videgrabadora-DVD preajustará automáticamente el reloj y memorizará los canales de TV de la Videgrabadora-DVD.

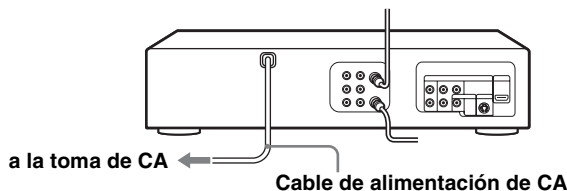

La Videgrabadora-DVD empezará a preajustar el reloj y memorizar los canales.

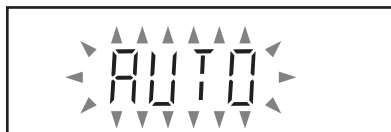

Cuando el preajuste automático esté completo, aparecerá la hora actual en el visualizador.



Ha finalizado el ajuste de la Videgrabadora-DVD.

Para empezar a utilizar su Videgrabadora-DVD, vaya a “Operaciones básicas” en la página 14.

Para cambiar el idioma de las indicaciones en pantalla a español, consulte “Selección del idioma” en la página 9.

El reloj se ajusta utilizando una señal horaria ofrecida por algunos canales de TV. Si el reloj es incorrecto, o si aparece “--:--” en el visualizador, consulte “Ajuste del reloj” en la página 10.

Notas

- Si conecta el cable de alimentación de CA antes de haber completado las conexiones de la antena, los canales podrán ajustarse incorrectamente. Si se diera el caso, consulte “Memorización de canales” en la página 11.
- No presione ningún botón en la videgrabadora-DVD ni en el mando a distancia durante el preajuste automático.
- El preajuste automático sólo comienza automáticamente cuando usted enchufa el cable de alimentación de CA por primera vez después de comprar la Videgrabadora-DVD.
- El preajuste automático puede realizarse presionando **■** en la unidad continuamente durante 5 segundos o más con la alimentación del Videgrabadora-DVD desconectada.

Conexión 2


Utilice esta conexión si va a conectar un decodificador de cable con muchos canales codificados

Con esta conexión podrá

- Grabar cualquier canal seleccionando el canal en el decodificador


Con esta conexión no podrá

- Grabar con el decodificador apagado
- Grabar un canal mientras ve otro canal

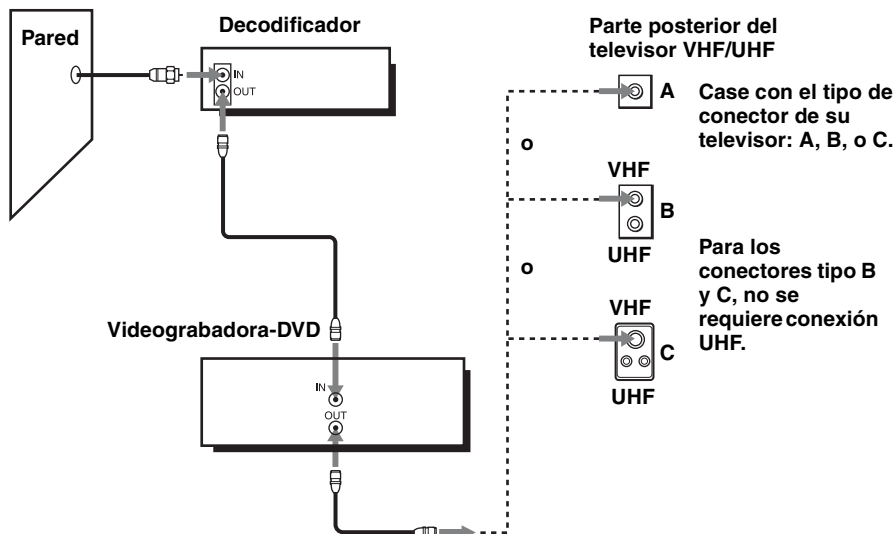

Después de haber completado la conexión...

Después de haber completado la conexión, enchufe la videograbadora-DVD en la toma de CA y consulte "Selección del idioma" en la página 9.

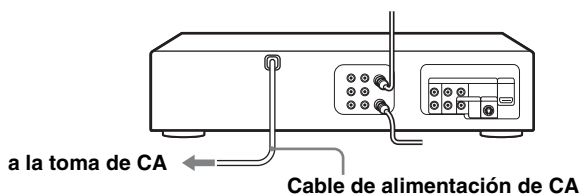


Selección del idioma

Es posible cambiar el idioma de las indicaciones en pantalla.


Antes de comenzar...

- Encienda la Videgrabadora-DVD y su televisor.
- Ajuste el televisor a entrada de vídeo para que aparezca en la pantalla de televisor la señal procedente del reproductor.
- Si el reproductor de DVD está en el modo de reproducción, no podrá visualizar el menú de ajustes. Pare la reproducción de DVD.
- Utilice el mando a distancia para realizar las siguientes funciones.

- 1** Pulse SET UP, después pulse \uparrow/\downarrow para seleccionar (OPTION) y pulse ENTER.

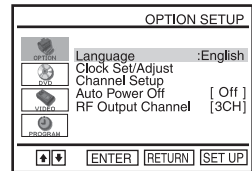

- 2** Pulse \uparrow/\downarrow para seleccionar “Language”, después pulse ENTER.
Aparecerá el menú “LANGUAGE/IDIOMA/LANGUE”.

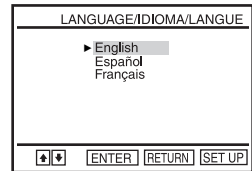


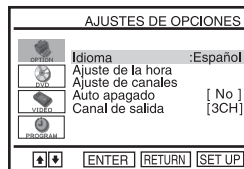
- 3** Pulse \uparrow/\downarrow para seleccionar el idioma deseado, inglés, español o francés, después pulse ENTER.
- 4** Pulse SET UP para salir del menú.

Ajuste del reloj

Antes de comenzar...


- Encienda la Videograbadora-DVD y su televisor.
- Ajuste el televisor a entrada de vídeo para que aparezca en la pantalla de televisor la señal procedente del reproductor.
- Si el reproductor de DVD está en el modo de reproducción, no podrá visualizar el menú de ajustes. Pare la reproducción de DVD.
- Utilice el mando a distancia para realizar las siguientes funciones.

- 1** Pulse SET UP, después pulse \uparrow/\downarrow para seleccionar  (OPTION) y pulse ENTER.



- 2** Pulse \uparrow/\downarrow para seleccionar “Ajuste de la hora”, después pulse ENTER.

Aparecerá el menú “AJUSTE DE LA HORA”.

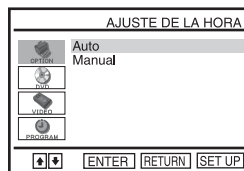

- 3** Pulse \uparrow/\downarrow para seleccionar “Manual”, y pulse ENTER.



- 4** Ajuste la hora, los minutos, el mes, el día y el año consecutivamente pulsando \leftarrow/\rightarrow para seleccionar el elemento a ajustar, y pulse \uparrow/\downarrow para seleccionar los dígitos.

El día de la semana se ajusta automáticamente.

- 5** Pulse ENTER para confirmar el ajuste.

- 6** Pulse SET UP para salir del menú.

Notas


- Para grabar programas de TV utilizando el temporizador, deberá ajustar el reloj con exactitud.
- La visualización del reloj aparecerá cuando se seleccione el modo VIDEO sin cinta insertada o cuando sea apagada la Videograbadora-DVD.


Memorización de canales

Esta Videgrabadora-DVD puede recibir los canales VHF 2 al 13, los canales UHF 14 al 69 y los canales CATV no codificados 1 al 125. Se recomienda que primero memorice los canales sintonizables en su área utilizando los métodos de memorización automática.

Antes de comenzar...


- Encienda la Videgrabadora-DVD y su televisor. Si utiliza un decodificador, enciéndalo.
- Ajuste el televisor a entrada de vídeo para que aparezca en la pantalla de televisor la señal procedente del reproductor.
- Si el reproductor de DVD está en el modo de reproducción, no podrá visualizar el menú de ajustes. Pare la reproducción de DVD.
- Utilice el mando a distancia para realizar las siguientes funciones.

1 Pulse SET UP, después pulse \uparrow/\downarrow para seleccionar  (OPTION) y pulse ENTER.

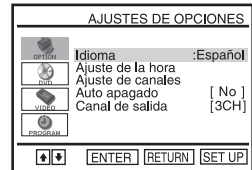


2 Pulse \uparrow/\downarrow para seleccionar “Ajuste de canales”, después pulse ENTER.

Aparecerá el menú “AJUSTE DE CANALES”.

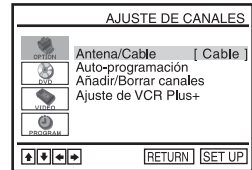


3 Pulse \uparrow/\downarrow para seleccionar “Antena/Cable”.

- 4**
- Para memorizar los canales de TV por cable: Pulse \leftarrow/\rightarrow para seleccionar “Cable”.
 - Para memorizar los canales VHF y UHF: Pulse \leftarrow/\rightarrow para seleccionar “Antena”.

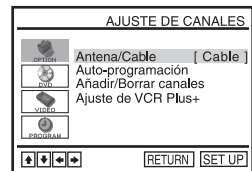

5 Pulse \uparrow/\downarrow para seleccionar “Auto-programación”, después pulse ENTER.

Se memorizarán todos los canales sintonizables en secuencia numérica. Cuando ya no puedan encontrarse más canales, la memorización se detendrá y aparecerá la imagen del canal de número más bajo en la pantalla del televisor.

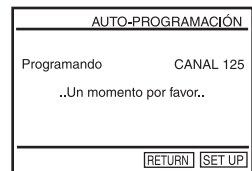


Conexiones avanzadas

Conexión S-Video/Vídeo Componente/HDMI

DVDVideo DVDVR VCD DATA-CD DATA-DVD

Seleccione uno de los patrones siguientes **A**, **B** o **C**, según la toma de entrada de su monitor de televisión, proyector o amplificador (receptor) de AV. Podrá disfrutar de imágenes de mayor calidad cuando reproduzca DVD.

Si su televisor acepta señales de formato progresivo (480p), deberá utilizar la conexión **B**. Seleccione el patrón **C** cuando conecte a un televisor, proyector o amplificador (receptor) de AV equipado con entrada HDMI.

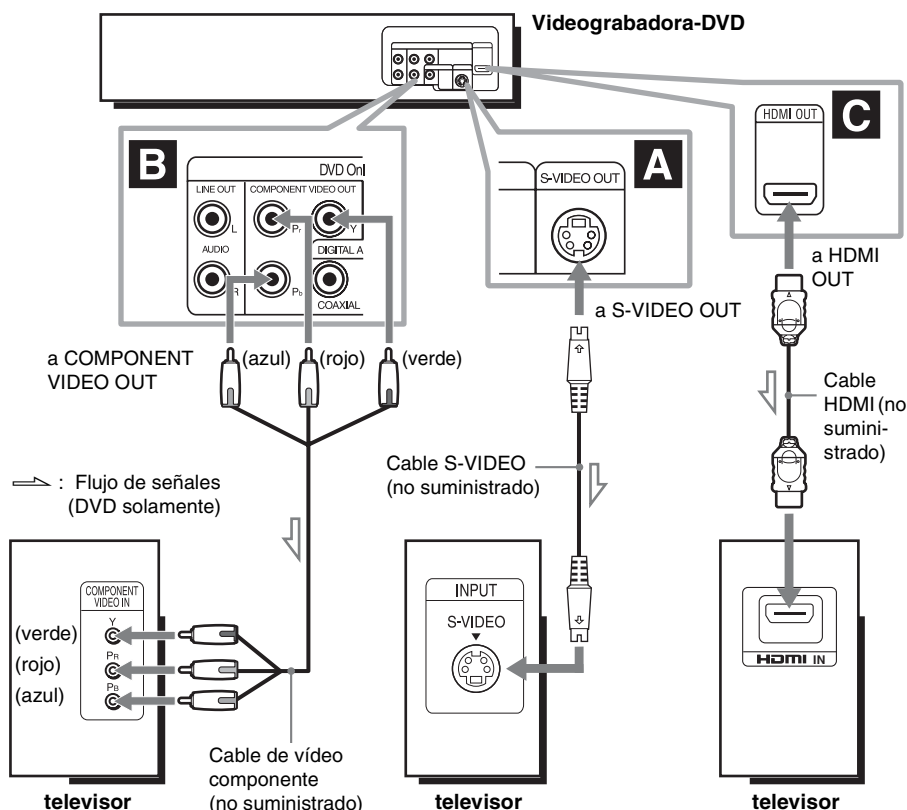

Para hacer conexiones de audio

Utilice las tomas LINE OUT AUDIO L/R o las tomas DIGITAL AUDIO OUT (COAXIAL)/HDMI OUT del lado derecho de Videogradora-DVD cuando utilice la conexión S-VIDEO/Vídeo componente.

A Utilice esta conexión si su televisor tiene una toma de entrada de S-VIDEO

Conecte un cable S-VIDEO (no suministrado). Disfrutará de imágenes de alta calidad.

Consulte la página 12 para conexiones de audio.

B Utilice esta conexión si su televisor tiene tomas de entrada de vídeo componente

Conecte un cable de vídeo componente (no suministrado) o tres cables de vídeo (no suministrados) del mismo tipo y longitud. Disfrutará de una fiel reproducción del color y de imágenes de alta calidad.

Consulte la página 12 para conexiones de audio.

C Utilice esta conexión si su televisor tiene una toma de entrada de HDMI

Utilice un cable HDMI de Sony homologado (no suministrado) para disfrutar de imagen y sonido digitales de alta calidad a través de la toma HDMI OUT. Cuando vaya a conectar a la toma HDMI OUT, alinee cuidadosamente el conector HDMI con la toma. No doble ni aplique presión al cable HDMI.

Para conectar a un televisor con entrada DVI

Utilice un cable convertidor HDMI-DVI (no suministrado). La toma DVI no aceptará ninguna señal de audio, por lo que tendrá que utilizar otra conexión de audio además de esta conexión (página 12). Además, no se puede conectar la toma HDMI OUT a tomas DVI que no sean compatibles con HDCP (por ejemplo, tomas DVI de pantallas de PC).

Notas

- Las conexiones que utilizan las tomas S-VIDEO OUT, COMPONENT VIDEO OUT y HDMI OUT son solamente para el reproductor de DVD. La señal procedente de VCR no será sacada.
- En la conexión utilizando la toma S-VIDEO OUT, la salida de reproducción de S-Video de la señal progresiva podrá distorsionarse.
- No se puede conectar la toma HDMI OUT (conexión **C**) a tomas DVI que no sean compatibles con HDCP (por ejemplo, tomas DVI de pantallas de PC).

Reproducción de discos DVDVideo DVDVR VCD CD

DATA-CD DATA-DVD

Dependiendo del disco, algunas operaciones podrán variar o estar restringidas. Consulte el manual de instrucciones suministrado con su disco.

Antes de comenzar...

- Encienda la Videograbadora-DVD y su televisor.
- Ajuste el televisor a entrada de vídeo para que aparezca en la pantalla de televisor la señal procedente del reproductor.
- Utilice el mando a distancia para realizar las siguientes funciones.

1 Pulse SELECT DVD para controlar el reproductor de DVD.


2 Pulse ▲ para abrir la bandeja de discos y poner un disco en ella.



con la cara de reproducción hacia abajo

3 Pulse ▷ PLAY.

La bandeja de discos se cerrará y el reproductor de DVD comenzará a reproducir. El visualizador mostrará el tiempo de reproducción*.

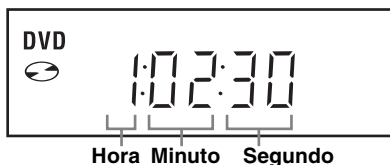

* Cuando no haya disco cargado aparecerá “— — — —”.

Notas

- Detenga la reproducción VIDEO mientras reproduzca un disco.
- Si reproduce un DVD o VIDEO CD que esté rayado, el reproductor podrá parar la reproducción en el punto donde esté rayado.
- La reproducción de listas de reproducción de duración superior a 10 horas grabadas en el modo VR no está garantizada.

Operaciones adicionales

Para	Pulse
Detener la reproducción	■ STOP
Hacer pausas durante la reproducción	▬ PAUSE Si hace una pausa en el reproductor de DVD de más de 5 min (minuto), el reproductor de DVD se parará automáticamente.

Para	Pulse
Reanudar la reproducción después de la pausa	▷ PLAY
Avanzar al siguiente fotograma en el modo de pausa	•➡ SKIP
Volver al fotograma anterior en el modo de pausa	◀• REPLAY
Ir al siguiente capítulo, tema, o escena en el modo de reproducción continua	▶▶▶ NEXT en el mando a distancia o ▶▶ en la unidad
Volver al capítulo, tema o escena anterior en el modo de reproducción continua	◀◀◀ PREV en el mando a distancia o ◀◀ en la unidad
Localizar un punto rápidamente	◀◀ o ▶▶ en el mando a distancia (o mantenga pulsado ◀◀ o ▶▶ en la unidad) La velocidad de reproducción cambia de la forma siguiente cada vez que se pulsa el botón en el mando a distancia (o dependiendo del tiempo que mantenga pulsado el botón en la unidad): Cuando encuentre el punto que quiera, pulse ▷ PLAY.
Ver a cámara lenta en el modo de reproducción continua (DVD y VIDEO CD solamente)	PAUSE durante la reproducción, y pulse ◀ o ▶ La velocidad de reproducción cambia de la forma siguiente cada vez que se pulsa ◀ o ▶ : Para reanudar la reproducción normal, pulse ▷ PLAY.
Reproducción de la escena anterior en 10 s (segundo) el modo de reproducción continua*1 (Reproducción instantánea)	◀• REPLAY
Avanzar ligeramente la escena actual 30 s (segundo) en el modo de reproducción continua*1 (Avance instantáneo)	•➡ SKIP Puede pulsar •➡ SKIP hasta 4 veces. Esto le permitirá avanzar rápidamente hasta 2 minutos en total.
Parar la reproducción y extraer el disco	▲

*1 Para DVD VIDEO y DVD-RW/DVD-R o DVD+RW/DVD+R solamente

Notas

- No saldrá sonido excepto:
 - durante la reproducción normal
 - durante la reproducción rápida o lenta con sonido
- Dependiendo del método empleado para la grabación es posible que no pueda realizarse la operación de retroceso rápido para CD, MP3 y VIDEO CD.
- Tal vez no pueda utilizar la función de reproducción instantánea o avance instantáneo con algunas escenas.

Reproducción de cintas **VHS**

 
Antes de comenzar...

- Encienda la Videgrabadora-DVD y su televisor.
- Ajuste el televisor a entrada de vídeo para que aparezca en la pantalla de televisor la señal procedente del reproductor.
- Utilice el mando a distancia para realizar las siguientes funciones.

1 Pulse SELECT VIDEO para controlar el reproductor de Videgrabadora.

2 Inserte una cinta.


La videgrabadora comenzará a reproducir automáticamente si inserta una cinta con su lengüeta de seguridad quitada.



3 Pulse ▷ PLAY.

El visualizador mostrará el tiempo de reproducción.

Cuando la cinta llegue al final, se rebobinará automáticamente.

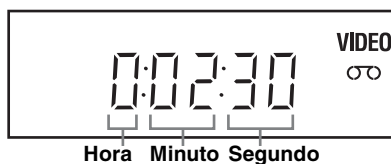

Operaciones adicionales

Para	Pulse
Detener la reproducción	■ STOP
Hacer pausas durante la reproducción	PAUSE Si hace una pausa en la videgrabadora de más de 5 min (minuto), la videgrabadora reanudará automáticamente la reproducción.
Reanudar la reproducción después de la pausa	PAUSE o bien ▷ PLAY
Avanzar la cinta rápidamente	▶▶ durante la parada
Rebobinar la cinta	◀◀ durante la parada
Expulsar la cinta	▲
Visualización de la imagen durante el avance rápido o el rebobinado	Durante el avance rápido, mantenga pulsado ▶▶. Durante el rebobinado, mantenga pulsado ◀◀.

Para	Pulse
Reproducción a alta velocidad	<ul style="list-style-type: none"> • Durante la reproducción, pulse brevemente ►► o ◀◀. La cinta continuará reproduciéndose a una velocidad 5 veces mayor que la reproducción normal. • Durante la reproducción, mantenga pulsado ►► o ◀◀. La cinta continuará reproduciéndose a una velocidad 5 veces mayor que la reproducción normal. Al dejar de pulsar el botón, se reanuda la reproducción normal.
Reproducción a cámara lenta	Durante la pausa, pulse ►►.
Reproducción fotograma a fotograma	Durante la pausa, pulse ●► SKIP.
Reproducción de la escena anterior en el modo de reproducción continua* (Reproducción instantánea)	Durante la reproducción, pulse ◀◀ REPLAY.
Salto de la escena actual 30 s (segundo) en el modo de reproducción continua* (Salto instantáneo)	Durante la reproducción, pulse ●► SKIP. Puede pulsar ●► SKIP hasta 4 veces. Esto le permitirá avanzar rápidamente hasta 2 minutos en total.
Reproducción a varias velocidades (Reproducción Shuttle)	<p>Durante la reproducción, pulse ◀◀◀ o ►►►. Podrá cambiar la velocidad de reproducción de la siguiente forma.</p> <p>◀◀◀ -x7 ↔ -x5 ↔ -x3 ↔ Reproducción de la imagen fija ↔ Reproducción a cámara lenta ↔ Reproducción normal ↔ x2 ↔ x3 ↔ x5 ↔ x7</p>

* 10 s (segundo) en el modo SP o en el modo LP/15 s (segundo) en el modo EP

Para reanudar la reproducción normal

Pulse ▷ PLAY.

Para desconectar la alimentación durante el rebobinado (Parada del rebobinado)

Pulse I/⏪ mientras la cinta se está rebobinando. La alimentación se desactivará pero la cinta seguirá rebobinándose hasta que llegue al final.

Notas

- A varias velocidades de reproducción no sale sonido.
- La imagen puede aparecer con ruido al reproducirse a alta velocidad en sentido inverso.
- Pare la reproducción de disco mientras esté reproduciendo un vídeo.

Grabación de programas de TV **VHS**

Antes de comenzar...


- Encienda la Videograbadora-DVD y su televisor.
- Cambie el selector de entrada de su televisor de forma que aparezca la señal procedente del reproductor en la pantalla del televisor.
- Para grabar desde un decodificador, enciéndalo.
- Compruebe que la longitud de la cinta sea superior al tiempo total de grabación.
- Utilice el mando a distancia para realizar las siguientes funciones.

- 1** Pulse SELECT VIDEO para controlar la videograbadora.
- 2** Inserte una cinta provista de lengüeta de seguridad.
- 3** Presione CH +/- para seleccionar el canal o la fuente de video de entrada de línea que desee grabar.



- 4** Pulse SP/EP para seleccionar la velocidad de cinta, SP (reproducción estándar) o EP (reproducción extendida).

El modo EP proporciona un tiempo de grabación tres veces superior al modo SP. No obstante, se obtiene una mejor calidad de imagen y sonido con el modo SP.

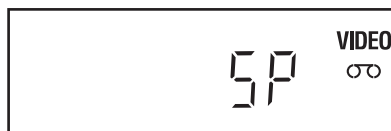

- 5** Pulse ● REC para iniciar la grabación.
Aparecerá "REC" en el visualizador.



Para detener la grabación

Pulse ■ STOP.

Notas

- No es posible grabar un DVD directamente a una cinta Videograbadora utilizando su Videograbadora-DVD.

