

SECTION 6 SPARE PARTS

WRT820

PARTS ORDERING INFORMATION

Standardization of Parts

Repair parts supplied from Sony Parts Center may not be always identical with the part which actually in use due to "accommodating the improved parts and/or engineering changes" or "standardization of genuine parts". This manual's exploded views and electrical parts list are indicating the parts numbers of the "standardized genuine parts at present".

Parts marked with S in the column of SP. These parts are normally stocked as replaceable parts.

Parts marked with O in the column of SP. Orders for these parts will be processed, but allow for additional delivery time.

Parts without Part No.

These parts are not stocked because they are seldom required for routine service.

6-1. EXPLODED VIEW AND PARTS LIST

Index

Index No.	Part No.	SP Description
1	A-4537-112-A	o MOUNTED PCB, SBX1609(64) (FOR WRT-820A(64))
	A-4537-111-A	o MOUNTED PCB, SBX1609(66) (FOR WRT-820A(66))
	A-4537-110-A	o MOUNTED PCB, SBX1609(68) (FOR WRT-820A(68))
2	A-4521-033-D	s CASE ASSY, BATTERY
3	1-501-458-11	s ANTENNA
4	1-561-376-00	s CONNECTOR (S) 4P
5	2-098-862-11	s SPACER, JACK
6	2-540-009-01	s CUSHION (B)
7	2-540-955-01	o PANEL
8	2-540-956-01	o COVER, SWITCH
9	2-540-957-01	s KNOB, POWER6
10	2-540-959-01	o PLATE, GUIDE
11	2-540-960-01	o SHEET, BLIND
12	2-540-965-11	s CASE
13	2-540-966-01	o FRAME, BATTERY
14	2-540-967-01	o CHASSIS
15	2-540-969-01	s SCREW (M2x4), LR
16	2-540-991-01	s SPRING, BATTERY COIL
17	2-540-997-01	s SPACER
18	2-942-493-01	s LABEL, MODEL NUMBER (64) (FOR WRT-820A(64))
	2-542-452-01	s LABEL, MODEL NUMBER (66) (FOR WRT-820A(66))
	2-542-451-01	s LABEL, MODEL NUMBER (68) (FOR WRT-820A(68))
19	2-542-542-01	s PLATE (A), INDICATION
20	3-326-148-01	o PACKING (A)
21	4-886-864-11	s SPACER, LED
22	7-627-552-08	s SCREW, PRECISION +P 1.7x2.5
23	9-911-844-99	s CUSHION, HOLDER

