

4 insert the supplied shorter wing bolts in the three holes on the upper support and screw them in to fix the upper support to the lower support.

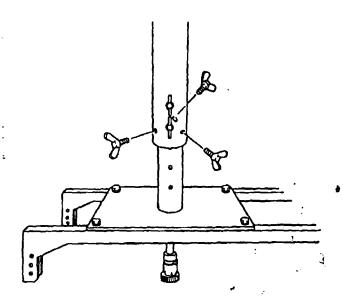

Sinstall the projector in the mounting bracket stays.

Do not pull down on the mounting bracket stays or the projector itself.

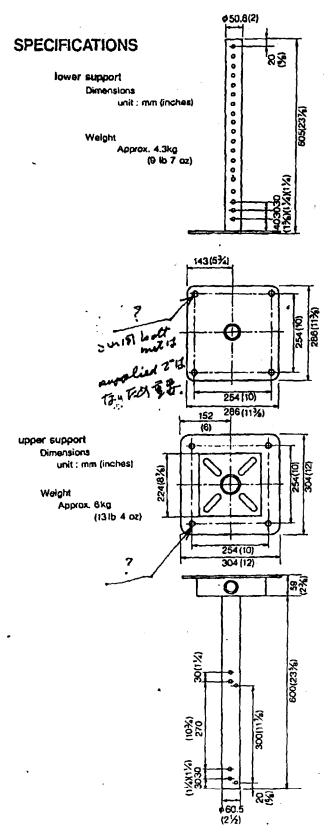

While the information given is true at the time of printing, small production changes in the course of our company's policy of improvement through research and design might not necessarily be indicated in the specifications. We would ask you to check with your appointed Sony dealer if clarification on any point is required.