

- Press specific telephone line-key for line.
- or-
- Press **1 - 4** on the telephone dial pad for line group.
- or-
- Press **0** on the telephone dial pad for no selection. (When 0 is stored and automatic dialing is used, system will pick line assigned to telephone or last line used.)
- Dial the number sequence to be stored from the telephone dial pad (up to 16 digits).
  - To store a pause, press **HOLD** on telephone.
  - To store a flash, press **RECALL** on telephone.

#### To store another number for automatic dialing,

- Press **SAVE** on telephone.
- Press next Module key (or press **HOLD** plus Module key if DSS/BLF is programmed).
- Select line, group or none as described above.
- Dial number sequence as described above.
- Repeat this procedure for each desired key.

***HINT:** Store often-used, host system PBX or CENTREX feature access codes at Module key locations. This will provide one-key access to those host system features.*

#### To end programming,

- Press **MONITOR** on telephone.

#### To dial numbers automatically,

- Press desired Module key.
- or-
- If desired key is also programmed for DSS/BLF operation,
  - Press **HOLD** on telephone and then press desired key on Module.
- When party answers, lift handset of telephone.

## OFF-HOOK VOICE ANNOUNCE AND HANDSFREE ANSWER- BACK

The Adjunct Feature Module can receive a voice signalled intercom call (voice announce) at the same time that the paired station is active on another call. You can answer the voice signalled intercom call in a handsfree manner without interrupting your currently active call.

#### To answer voice announce in a handsfree manner,

- Hear voice signalling (voice announce) over Module speaker,
- Respond to voice announce by speaking toward Module (handsfree answerback).

Adjust the audio level of the voice signalling with the speaker volume control located on the right side of the Module.

**COMDIAL**  
Made right in the USA

## Executech 32-Button Adjunct Feature Module (With Voice Announce Capability)

## USER GUIDE

For use with following hybrid/key system models:

- 1432 Series
- 22xx Series

**COMDIAL**

Charlottesville, VA 22906


GCA 70-096.01  
June 1988

—COM06-056

## OVERVIEW

The 32-Button Adjunct Feature Module extends the memory keys of your Executech II multiline telephone by an additional thirty-two keys and status lights. The keys can be programmed for automatic dialing and/or direct station selection (DSS) with busy lamp field (BLF).

This Module also provides an off-hook voice announce and handsfree answerback features. With this capability, a second call can be announced to you while you are engaged on a call. You can respond to the announcement, if necessary, in a handsfree manner.

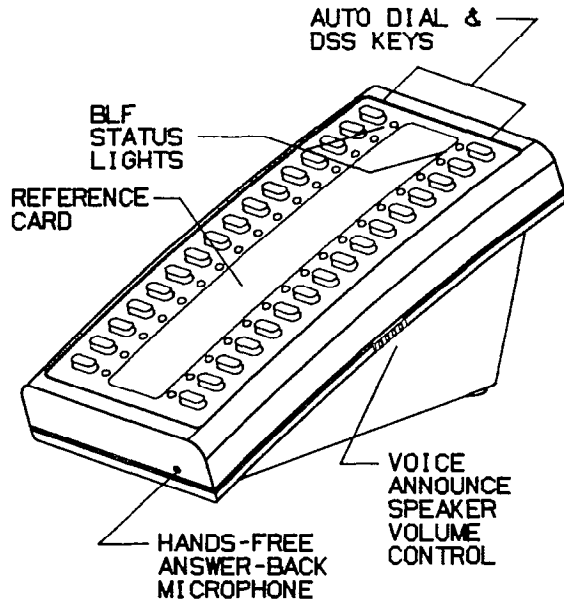

## DIRECT STATION SELECTION BUSY LAMP FIELD (DSS/BLF) OPERATION

DSS/BLF provides one-key intercom calling with visual indication of station status.

### To program DSS numbers,

- Press **ITCM** on telephone. Listen for tone.
- Dial **85** from telephone dial pad. Tone will stop.
- Press desired key on Module.
- Dial extension number from telephone dial pad.
- Repeat previous two steps for all desired stations.
- Press **MONITOR** on telephone when programming is complete.
- Record DSS names or locations on supplied reference card and install card on Module faceplate.
- Lift out plastic reference card cover from Module faceplate.
- Write or type names in squares on reference card.
- Install card under cover and snap cover back into place on Module.

**NOTE:** An autodial number also can be programmed as a secondary function at every DSS/BLF memory location. See *Automatic Dialing instructions for details.*

### To voice announce a call to a DSS number,

- Lift telephone handset.
- Press key on Module.
- Voice announce.

**NOTE:** If you are transferring a call, the outside line is automatically placed on hold when a DSS key is pressed.

### To tone signal a call to a DSS number,

- Lift telephone handset.

- Press key on Module.
- Press **ITCM** on telephone. When station answers, two-way conversation can take place.

The BLF lights that are adjacent to the DSS keys on the Module indicate the status of the stations programmed at the keys. Status conditions are as follows:

BLF STATUS	STATION STATUS
Light Off	Station Idle
Light Flashing	Station calling you on intercom line.
Light On Steady	Station busy.
	Station in do not disturb mode.
Light Flutters	Station has left call-back message.

## AUTOMATIC DIALING

Auto dialing provides one-key calling of often used numbers and access codes.

### To store a number for automatic dialing,

- Press **ITCM** on telephone. Listen for tone.
- Press **SAVE** on telephone. Tone will stop.
- Press desired key on Module. Listen for fast tone bursts.
- or-
- If desired key is also programmed for DSS/BLF operation (as described previously),
  - Press **HOLD** on telephone and then press desired Module key.
  - Listen for fast tone bursts.
- Select specific line, line group, or no selection as required.