




## OVERVIEW

The 32-Button DSS/BLF Console extends the memory button capability of an adjacent companion DigiTech telephone by an additional 32 buttons and status lights. The buttons can be programmed for automatic dialing (autodial) and/or direct station selection (DSS) with busy lamp field (BLF).

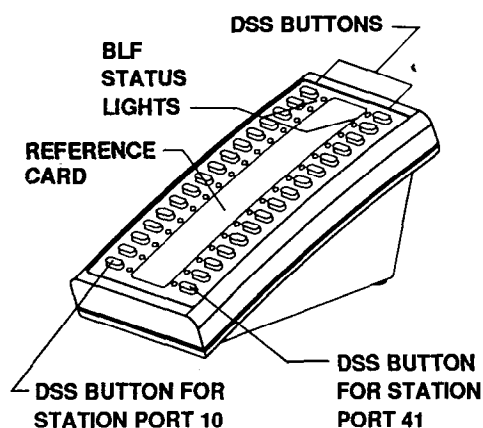

When a DSS/BLF console is initially connected at a station port, the system recognizes it as such, and automatically assigns the station intercom numbers to the console buttons for the maximum number of stations connected to the system. (The maximum coverage is limited by the 32 available buttons.)

## DSS/BLF OPERATION

DSS/BLF provides one-button intercom calling with visual indication of station status.

### STORING DSS NUMBERS

**To program DSS numbers,**

- Press **ITCM** on telephone. Listen for tone.
- Dial \* \* 3 from telephone dial pad. Tone will stop.
- Press desired button on Console.
- Dial extension number from telephone dial pad.
- Repeat previous two steps for all desired stations.
- Press **MNTR (SPKR)** on telephone when programming is complete.
- Record DSS names or locations on supplied reference card and install card on Console faceplate.
- Lift out plastic reference card cover from Console faceplate.
- Write or type names in squares on reference card.
- Install card under cover and snap cover back into place on Console.

**To blank a DSS button,**

- Press **ITCM** on telephone
- Dial \* \* 3 from telephone dial pad.
- Press desired console button.
- Press **MNTR (SPKR)** on telephone.

### DSS CALLING

**To voice announce a call to a DSS number,**

- Lift telephone handset.
- Press DSS button on Console.
- Voice announce.

**NOTE:** If you are transferring an outside call to an intercom station, press the **TRANS/CONF** button on the telephone before pressing the DSS button on your Console.

**To tone signal a call to a DSS number,**

- Lift telephone handset.

- Press DSS button on Console.
- Press **ITCM** on telephone. When station answers, two-way conversation can take place.

The BLF lights that are adjacent to the DSS buttons on the Console indicate the status of the stations programmed at the buttons. Status conditions are as follows:

BLF STATUS	STATION STATUS
Light Off	Station Idle.
Light Flashing	Station calling you on intercom line.
	Station ringing if monitoring feature is active.
Light On Steady	Station busy.
	Station in do not disturb mode.
Light Flutters	Station has left call-back message.

**NOTE:** An autodial number also can be programmed as a secondary function at every DSS/BLF memory location. See Automatic Dialing instructions for details.

## AUTOMATIC DIALING

Automatic dialing provides one- or two-button calling of often used numbers and access codes as a secondary function of the DSS buttons. For a primary autodial function, blank the DSS/BLF function at the desired buttons.

### STORING NUMBERS

**To store a number for automatic dialing,**

- Press **ITCM** on telephone. Listen for tone.
- Dial \* \* 1 from the telephone dial pad. Tone will stop.