

MITEL

Attendant *Consoles*



User Guide

for SX-200® EL/ML SUPERCONSOLE 1000®



Industry Canada Notice

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Corporation (MITEL). The information is subject to change without notice and should not be construed in any way as a commitment by MITEL or any of its affiliates or subsidiaries. MITEL and its affiliates and subsidiaries assume no responsibility for any error or omissions in document. Revisions of this document or new editions of it may be issued to incorporate any such changes.

WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Nothing in this document may be reproduced in any manner, either wholly or in part for any use whatsoever, without written permission from Mitel Corporation.

PN 9 109-090-005-NA

May 1999, Issue 4

®, ™ Trademark of MITEL Corporation.

© Copyright 1999, MITEL Corporation

All rights reserved.

Printed in Canada.

Table of Contents

GETTING STARTED	1
Introduction	3
About the Console	3
Before you begin	3
Console Components	4
Using this Guide	8
Conventions	8
Adjusting the Console	9
Adjusting the Ringer Volume	9
Turning the Console Bell (Ringer) Off/On	9
Switching to Night/Day Service	9
Setting the Console Language	10
Attendant Console Lockout	10
CALL HANDLING	11
Answering Calls	13
New Call Indication	14
When Multiple Calls are Waiting	14
Extending (Transferring) Calls	14
Misdialed Numbers	14
Reaching a Busy Destination or an Extension with Do Not Disturb Activated	15
Reaching an Extension with an Advisory Message	16
Placing Calls	16
Placing a Call on Hold	16
Hold Recall	17
Hold Pickup	17
Stacked Hold	18
Setting up Conferences and Call Splitting	18
Answering Recalls	19

Table of Contents

Answering Intercepts to the Console	20
Paging from the Console	20
PA Paging	20
Extension Paging	21
Setting and Canceling Do Not Disturb on an Extension	22
Setting and Canceling Message Waiting on an Extension	22
Overriding Busy or Do Not Disturb	23
Redialing the Last Number	23
Setting up a Serial Call	24
Using Tone Signaling	24
Flashing on Trunks	25
Answering a Call with Night Service Enabled	25
Using Directed Call Pickup	26
Multiple Console Operation	26
Inter-Console Calls and Transfers	27
Centralized Attendant Service (CAS)	27
Voice mail	27
USING SYSTEM FUNCTIONS	29
Viewing System Alarm Information	31
Viewing 911 Call Alarms	32
Setting System Date and Time	33
Canceling All Call Forwarding	34
Canceling All Callbacks	34
Changing DISA codes	35
Setting up System-Abbreviated Dialing Numbers	35
Setting up Night Answer Points	36
Displaying the System Identification	37
Displaying the Console Identity	37
Accessing Applications	38

USING EXTENSION FUNCTIONS	39
Setting/Canceling Call Forwarding	41
Setting/Canceling Do Not Disturb	42
Setting/Clearing Message Waiting	42
Reading and Clearing Messages	43
Setting/Clearing Advisory Messages	44
Taking an Extension Out of Service	45
 USING TRUNK FUNCTIONS	 47
Viewing Trunk Status	49
Viewing Trunk Group Busy Status	49
Accessing Specific Trunks	50
Taking a Trunk Out of Service	51
 HOTEL/MOTEL FEATURES	 53
Displaying and Changing Room Data	55
Listing/Counting Rooms by Occupancy and Condition Status	56
Changing Room Occupancy and Condition Status	57
Setting/Canceling Wake-up Calls	58
Setting Room Call Restrictions	59
Blocking Room-to-Room Calls	60
Displaying/Clearing a Message Register	60
Printing Reports	61
 REFERENCE	 63
Telephone Directory	65
Abbreviated Dialing List	66
Class of Service/Restriction	67
Console Display Abbreviations	68
Advisory Messages for SUPERSET™ Display Telephones	69
Glossary	70
Tone Demonstration	72
Trunk Identification	74
 INDEX	 75

Getting Started



Introduction

Take a few minutes to explore this guide – it contains all the information you need to operate the SUPERCONSOLE 1000® Attendant Console.

The first section introduces you to the console. You will learn what each group of keys does and how to interpret information on the console display. This section also contains information about how to use this guide.

A note about feature availability

The features available on your telephone system have been selected by your company and may not include all the features described in this guide.

About the Console

BEFORE YOU BEGIN


Before operating the console, check that the display shows [F1> through [F0> and the correct time and date. Also, make sure the handset is plugged into the side of the console.

If any problems occur, contact your communications department for assistance.

CONSOLE COMPONENTS


The illustration below shows the main parts of the console. Note the two jacks on the left side. One is for the handset or headset that you use; the other is for the handset or headset used by the person training or monitoring new attendants.

The cabling required to connect the console to the telephone system is located at the rear of the console. The cables should be connected by a qualified system installer and should not be adjusted by unauthorized personnel.

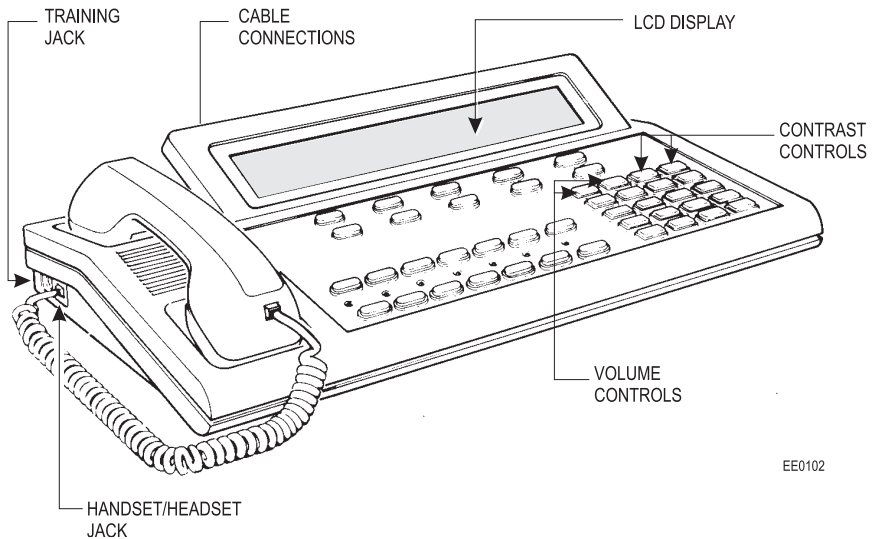

Console Keys

The console has three types of keys: Dialpad keys, Softkeys and Fixed Keys.

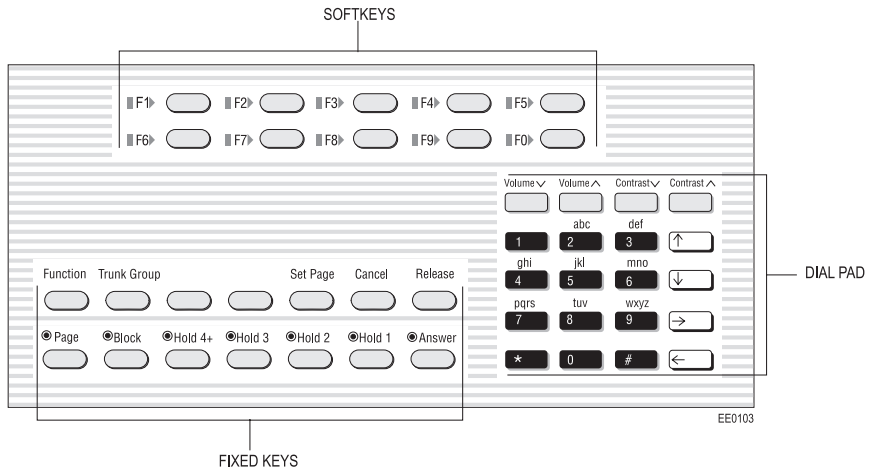

Dialpad keys

The dialpad on the right side of the console has 20 keys, including the standard 12 dialing keys.

Ringer Volume keys: The **Volume** \wedge and **Volume** \vee keys increase or decrease the loudness of the console ringer.



The two unlabeled keys next to the Volume keys are reserved for future system enhancements.

Cursor Control keys: The \leftarrow , \rightarrow , \uparrow and \downarrow keys are used in the following circumstances:

\leftarrow (**Backspace**): Press this key to correct mistakes when dialing extension or trunk numbers or when entering **Function** key information.

The other cursor control keys are used along with the \leftarrow key for applications such as Hotel/Motel guest service and Customer Data Entry.

Fixed Keys

The Fixed keys are arranged in two rows of seven keys. You use them to perform basic operations such as answering calls and placing calls on hold.

Each key in the bottom row has a lamp that indicates the status of a call or feature. For example, when you use a Hold key to place a call on hold, the lamp above the key lights.

Use this key...	When you want to...
Function	activate softkeys (explained in the next section), which are used for operations such as setting the console date and time and switching the console to Night Service.
Trunk Group	see which trunk groups are busy.
Cancel	clear misdialed information.
Set Page	page extension users using their telephone speakers.
Release	disconnect or transfer calls.
Page	make an announcement over the paging system.
Block	restrict selected extensions/guest rooms from calling each other.
Hold	place calls to the console on hold. Hold 1 through 3 are direct holds. Pressing Hold 1, Hold 2, or Hold 3 places a call on hold at that location. The lamp above the key lights to indicate a call is on hold. Pressing Hold 4+ accesses five additional hold slots.
Answer	answer incoming calls to the console on a "first come, first served" basis.



The two unlabeled keys next to the Trunk Group key are reserved for future system enhancements.

Softkeys

Softkeys have functions that change depending on the state of the call you are handling or the feature you are using. For example, when you call a busy extension the display will show the softkey functions that are available for handling the call. One of these functions is Override, another is Msg Waiting.

The [F1> to [F0> labels on the display correspond to the [F1> to [F0> keys on the consoles. To use a softkey function, press the [F1> to [F0> key that corresponds to the display label for that function.

Console Display

During call handling, the upper two lines identify the SOURCE or calling party and the DESTINATION or called party.

The two lower lines, labeled [F1> to [F0>, show the current softkey labels. For example, if [F8> is labeled [Override], pressing [F8> lets you override a busy extension's conversation. At another time, the same key, [F8>, could be labeled [Night 1]. Now, pressing [F8> places the console in Night 1 operation.

Using this Guide

Some of the procedures in this guide include an illustration of the console display. The illustration shows how the display will look when you are performing the procedure.

```

SRC TRUNK 76      COS 14  COS 15      10:59
>>>DST 3011  S. BERRY  COS 12  COS 16      BUSY <<<
■ F1 ▶SOURCE   ■ F2 ▶          ■ F3 ▶          ■ F4 ▶CALLBACK ■ F5 ▶
■ F6 ▶          ■ F7 ▶SEND MSG ■ F8 ▶OVERRIDE ■ F9 ▶          ■ F0 ▶

```

Note the abbreviations in the upper half of the display. The following table explains the meaning of those abbreviations. For explanations of the other abbreviations, including those used in the lower half of the display, see page 68.

Abbreviation	Definition
DST	The DESTINATION (called) party
SRC	The SOURCE (calling) party
>>> <<<	Appears on either the SRC or DST line to indicate which party is currently connected to the console
COS	Shows the Class of Service assigned to the extension or trunk that is currently connected to the console
COR	Shows the Class of Restriction assigned to the extension or trunk that is currently connected to the console
C/W	Preceded by a number to indicate how many calls are waiting to be answered

CONVENTIONS

This guide uses the following conventions to differentiate between the two types of console keys:

- ◆ Fixed keys appear in bold letters—for example, **Answer** or **Hold**.
- ◆ Softkeys appear in bold letters within brackets—for example, **[BELL ON]** or **[CONF]**.

Adjusting the Console

ADJUSTING THE RINGER VOLUME

You can raise or lower the volume of the ringer while the console is ringing.

- 1 - Press and release the **Volume** \wedge key to increase or the **Volume** \vee key to decrease the volume.
- 2 - Repeat until the ringing is at the volume you want.

TURNING THE CONSOLE BELL (RINGER) OFF/ON

When the bell is off, a flashing **Answer** key and the **C/W** indicator on the display are the only indications that calls are waiting to be answered.

To turn the bell on or off:

- 1 - Press **Function**.
- 2 - Press **[BELL OFF]** or **[BELL ON]**.

SWITCHING TO NIGHT/DAY SERVICE

Incoming calls that normally ring the console during the day can ring another answering point at night. Your system may have one or two night service modes called Night 1 and Night 2. The mode you should select depends on system programming.

Any attendant can switch the system into night or day service. When the system is in night service, the night status indicator (Night 1 or Night 2) displays on all consoles.

To switch to night or day service:

- 1 - Press **Function**.
- 2 - Press **[NIGHT 1]**, **[NIGHT 2]**, or **[DAY]** as required.

You can change the Night1 and Night2 answering points for individual trunks from the console. For more information, see page 36.

SETTING THE CONSOLE LANGUAGE

The console can display call-handling information and softkey prompts in English, French or Spanish.

To change languages:

- 1 - Press **Function**.
- 2 - Press **[LANGUAGE]**.
- 3 - Press the softkey that corresponds to the language you want.

ATTENDANT CONSOLE LOCKOUT

You can enter an access code to restrict the capabilities of the attendant console. This prevents system tampering via the console when you leave it unattended—for example, during breaks. When the console is locked out, it cannot be used to place outgoing trunk calls or to access console functions, except 911 Call alarms. You can still use the console to place internal calls and to answer incoming trunk calls.

To lock out the console (cannot have calls connected):

- ◆ Enter the console Lockout access code. (Ask your communications department for the code.)
The display shows “Console in Restricted Service.”

To return the console to normal operation:

- ◆ Re-enter the console Lockout access code.

 
Call Handling



Answering Calls

Ringling and a flashing **Answer** key indicate the arrival of a call. The number next to **C/W** in the display indicates how many calls are waiting to be answered.

The information displayed next to the softkeys F1 to F0 indicate the actions you can take by pressing the corresponding softkey.



For example, you can answer an outside (trunk) call by pressing [**LDN 1**] (Listed Directory Number 1), or an internal (extension) call by pressing [**DIAL 0**].

The following softkey prompts can accompany an incoming call:

- ◆ [**RECALL**]
- ◆ [**INTERNAL**]
- ◆ [**DIAL 0**]
- ◆ [**PRIORITY 0**]
- ◆ [**NIGHT ANS**]
- ◆ [**LDN 1**], [**LDN 2**], ... [**LDN 9**]
- ◆ or any pre-programmed customer-specific information (for example, your company may choose to display [**LINE 1**] instead of [**LDN 1**]).

The [**INTERNAL**] softkey indicates calls to a specific attendant made by dialing the console's internal directory number (as opposed to dialing "0"). The other prompts are explained elsewhere in the guide.

To answer calls:

Do one of the following:

- ◆ Press **Answer** to answer the first call in the queue.
- ◆ Press a softkey (F1 – F0) to answer a specific type of call.

The first line of the display shows >>> SRC followed by an extension number and name for an internal call, or a trunk number for an external call. The DST line (the second line) remains blank until you dial a destination number.

NEW CALL INDICATION

When you are engaged in a call, a single burst of ringing signals the next incoming call. Subsequent calls do not ring the console, but the **C/W** indicator on the display lets you know that calls are waiting.

The console can be programmed at the system level to provide a single burst of tone at regular intervals when calls are waiting.

WHEN MULTIPLE CALLS ARE WAITING

You cannot answer a new call until the one you are engaged in is transferred, disconnected, or put on hold.

Extending (Transferring) Calls

When a caller requests to speak to someone, ask the caller to wait a moment, and then transfer the call to the requested destination.

To extend a call:


1 - Dial the destination number.

The caller is automatically placed on hold while you complete the transfer.

2 - When you hear ringing, press **Release** to connect the caller to the destination and release the console from the call.

MISDIALED NUMBERS

If you do not want to complete dialing, or if you misdial a number, either

◆ Press  to erase the misdialed digits, and then dial the correct number.

- or -

◆ Press **Cancel** to return to the Source party, and then redial the number.

REACHING A BUSY DESTINATION OR AN EXTENSION WITH DO NOT DISTURB ACTIVATED

If the called destination is busy or the extension has Do Not Disturb activated, the display will show “Busy” or “DND” on the DST line.

In both cases, your options for handling the call are the same, except for the Callback option, which only applies when calling a busy destination.

To handle a call to a busy destination or an extension with Do Not Disturb activated:

- ◆ Press **[SOURCE]** to return to the caller requesting the transfer.
- ◆ Press **Cancel** to disconnect the destination so that you can dial a new one.
- ◆ Press **Release** to camp the caller on to the busy destination or disconnect the source. (For an explanation of camp-on, see page 70.) If the transfer is not allowed, you will hear a beep tone and “CANT” will show on the display.
- ◆ Press **[OVERRIDE]** to break into the busy extension. For more information on using Override, see page 23.
- ◆ Press **[SEND MSG]** to send a message waiting indication to the called extension. For more information on Message Waiting, see page 22.
- ◆ Press **[CALLBACK]** to receive notification when the destination is free.

If you reach a busy extension or you are placing an outside call and all of the trunks are busy, you can request an automatic Callback. The system monitors the line and rings the console when the line becomes free. When you answer a Callback at the console, the top line of the display will show “CALLBACK.” Callbacks on outside calls are used when all system trunks are busy, not when the called party is busy.

REACHING AN EXTENSION WITH AN ADVISORY MESSAGE

Users with a SUPERSET™ display phone can show a short message, called an Advisory Message, on other display phones or consoles that call their phone. When you call an extension with an Advisory Message, the message appears on the DST line of the console display as follows:

```
>>>DST 3070 S.BERRY  IN A MEETING RINGING<<<
```

In this example, the user has left the message “In a meeting” on his or her phone. For a list of other Advisory Messages, see page 69. See also *Setting/Clearing Advisory Messages* on page 44.

Placing Calls

To place a call:

1 - Dial the destination number using the dialpad keys.

The dialed number appears on the second line of the display.

2 - After you complete the call, press **Release** to disconnect it from the console.

Placing a Call on Hold

You can place up to three calls on hold using the fixed Hold keys. If you need to place more calls on hold, use the Hold 4+ key in combination with the softkeys.

To place a call on hold:

1 - Inform the caller that you are placing the call on hold.

2 - Press **Hold 1**, **Hold 2** or **Hold 3**.

Its lamp lights indicating the call is on hold.


To retrieve a call on hold:

◆ Press **Hold** that was used to place the call on hold.

To access the five Hold slots available on the softkeys:

- 1 - Press **Hold 4+**.

The display changes as follows:

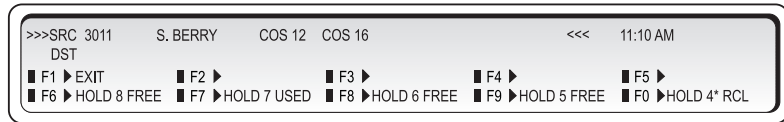

The display shows that Hold slots 5, 6, and 8 are free, Hold 7 is in use, and Hold 4* is "recalling" the console.

- 2 - Press a free [**HOLD**] softkey.

The lamp above the **Hold 4+** key lights whenever any of the softkey hold slots are in use.

The display returns to the information that was showing before you pressed the **Hold 4+** key.

To retrieve a call at a softkey Hold slot:

- 1 - Press **Hold 4+**.
- 2 - Press **Hold** softkey that was used to place the call on hold.

HOLD RECALL

If a call is left on hold longer than a specified time, it returns to the console as a recall. The lamp above the Hold key used to place the call on hold flashes and the console beeps once to indicate a recall at Hold 1, twice for Hold 2, three times for Hold 3, and four times for calls on hold at any of the softkey Hold slots.


To answer the recall, follow the procedure above for retrieving a call on hold.

HOLD PICKUP

Extensions can pick up calls placed on hold at the console by dialing a Hold Pickup code and the Hold slot number. The call and the code required to retrieve it are usually announced using paging. For more information, see page 20.

STACKED HOLD

When an extension has a call on hold, or is in a conference call, and dials the attendant, the display will indicate a held or conferenced call. For example, a held call would show as:

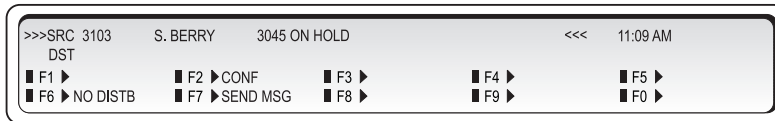

Pressing the **[CONF]** softkey establishes a conference call involving the console and extensions 3103 and 3045.

Setting up Conferences and Call Splitting

When you are setting up a call between two parties, you may want to conference the call (speak with both parties at the same). Once you establish the conference, you can speak privately to either party by splitting the conference.

To conference a call:

- 1 - Start with a call involving one of the parties you want to include in the conference.
- 2 - Call the other party.
- 3 - Press the **[CONF]** key.

To split a conference call:

- ◆ Press **[SOURCE]** to speak privately to the first party or **[DEST]** to speak privately to the other party.

To release the console from a conference call:

Do one of the following:

- ◆ Press **Release** to connect both parties and then release them from the console.
- ◆ Press **Cancel** to release the parties from the console without first connecting them.

Answering Recalls

When a call is transferred and the extension is busy or does not answer, the call either returns to the console within a specified time or is directed to the extension's voice mailbox (if available).

To answer a "No Answer" recall:

- 1 - Press **Answer** or **[RECALL]**.
- 2 - Inform the caller that the destination is not answering.
- 3 - Do one of the following:
 - ◆ Press **[RING AGAIN]** to redial the same destination.
 - ◆ Dial a new destination, and then press **Release**.
 - ◆ Press **Cancel** to disconnect the Source party.

To answer a "Busy" recall:

- 1 - Press **Answer** or **[RECALL]**.
- 2 - Inform the caller that the destination is busy.
- 3 - Do one of the following:
 - ◆ Press **Cancel** to disconnect the Source party.
 - ◆ Press **Release** to transfer the call to the same destination again.
 - ◆ Press **[DEST]** to reconnect with the busy destination.
- 4 - If you pressed **[DEST]**, do one of the following:
 - ◆ Press **[OVERRIDE]** to break into the busy extension.
 - ◆ Press **[SEND MSG]** to send a message waiting indication to the busy extension.
 - ◆ Press **[SOURCE]** to connect to the Source party.
 - ◆ Press **[CALLBACK]** to receive notification when the extension is free.
 - ◆ Press **Release** to camp the source on to the destination again. (See page 70 for an explanation of camp-on.)
 - ◆ Press **Cancel** to clear the destination and dial a new extension number.

Answering Intercepts to the Console

Misdialed calls from extensions, or calls to extensions with Do Not Disturb activated, could ring the console depending on system programming.

When you answer the call, the display will show the reason for the interception:

- ◆ DND INT for calls to an extension with Do Not Disturb activated.
- ◆ ILL # INT for illegal number dialed.
- ◆ VAC # INT for vacant (unassigned) number dialed.

Paging from the Console

Two types of paging are available from the console: Public Address (PA) Paging and Extension Paging.

PA PAGING

If your system has external paging equipment, you can place a call on hold, and then page for someone to pick up the call from the console Hold slots. You can also use PA Paging to make public announcements.

Your paging equipment may be set up to access several areas or “zones.” If so, you use the **Page** key to speak to all zones at once and access codes to speak to individual zones. These codes are available from your communications department.

To page someone to pick up a call on hold at the console:

- 1 - Place the Source call on hold. (See page 16.)
- 2 - Press and hold **Page**.

The lamp above the **Page** key lights.

3 - Do one of the following:

- ◆ If you have only one paging zone, announce the Hold Pickup access code and the Hold slot number appearing on the top line of the display.
- ◆ If you have more than one page zone, dial the two-digit paging code (dial 00 for all zones), and then announce the Hold Pickup access code and the Hold slot number.
- ◆ If any of the paging zones are busy, the display shows “Busy” on the second line. Press **[OVERRIDE]** to interrupt the page in progress.

4 - Release **Page**.

EXTENSION PAGING

Extension Paging allows you to page extension users using their telephone speakers. This feature is available only for paging *SUPERSET* telephones that are programmed as key system telephones.

You can use Extension Paging to page a specific extension (Directed Page), multiple extensions assigned to a group (Group Page), or all extensions (All Set Page).

To page an extension:

1 - Press **Set Page**.

2 - Do one of the following:

- ◆ To page a specific extension, dial the extension number.
- ◆ To page a group of extensions, press **[GROUP PAGE]**, and then press the two-digit group number.
- ◆ To page all extensions, press **[ALL SET PAGE]**.

3 - Make the page.

Setting and Canceling Do Not Disturb on an Extension

Do Not Disturb (DND) prevents calls from ringing a user's extension. You can set and cancel DND on a user's extension while you are on a call with the user.

To set or cancel DND on an extension:

1 - While connected to the extension, press **[No Distb]**.

"DND" appears next to the extension information on the display to indicate that Do Not Disturb is set.

2 - Press **Release**.

You can also set and cancel DND without calling the extension. For more information, see page 42.

Setting and Canceling Message Waiting on an Extension

If an extension is busy or the user does not answer, you can send a notice to let the user know a message is waiting at the console. You can also cancel messages you left at an extension.

To set or cancel Message Waiting on a ringing or busy extension:

1 - Press **[SEND MSG]** to set Message Waiting or **[CLEAR MSG]** to clear it.

"MSW" appears next to the extension information on the display to indicate that Message Waiting is set.

2 - Press **Release**.

If you are setting Message Waiting on a *SUPERSET* display telephone, an indication appears on the display to let the user know a message is waiting at the console. On other types of telephones, either a flashing lamp or distinctive ringing every 20 minutes indicates that a message is waiting.

Overriding Busy or Do Not Disturb

The Override feature allows you to intrude into a busy extension or an extension with Do Not Disturb (DND) active.

To use Override:

1 - Press and hold **[OVERRIDE]**.

If you are overriding a busy extension, both parties hear a long beep, and then you enter the conversation. You will remain connected to the conversation until you release the **[OVERRIDE]** softkey.

If you are overriding an extension with DND active, you will hear ringing.

2 - Press **Cancel** or **Release** to disconnect the console from the busy extension.

If the busy extension hangs up while you are pressing **[OVERRIDE]**, you will hear fast busy tone and the display will show “Hung Up” instead of “Busy.”

Redialing the Last Number

You can redial the last manually dialed number (internal or external) by pressing a single key.

To redial the last number:

◆ Press **[REDIAL]**.

Setting up a Serial Call

The Serial Call feature allows outside callers to talk to more than one extension user in sequence without redialing the main business number each time.

To set up a serial call while connected to an outside call:

- 1 - Tell the caller to remain on the line after completing each call.
- 2 - Press **[SERIAL CALL]**.
- 3 - Dial an extension number.
- 4 - Press **Release**.

When the extension user hangs up, the outside call returns to the console as a recall.

- 5 - When the call returns to the console, press **[RECALL]**.
- 6 - Dial the next extension number, and then press **Release**.
- 7 - When all calls are completed, press **[SERIAL CALL]** and then **Release**.

Using Tone Signaling

You may have noticed that when you dial a number at the console, you do not hear any of the tones or pulses normally associated with telephones. This is because the console “communicates” with the rest of the telephone system using a different type of signaling.

However, there are times when telephone equipment, either in or outside your office, needs to receive tones to complete a call. Typically, special services such as Voice mail systems (described on page 27) require information in the form of tones before allowing access.

To enable tone signaling while connected to a service requiring tones:

- 1 - Press **[TONES ON]**.
- 2 - Dial the required code.
- 3 - When you complete the call, press **[TONES OFF]** to turn off tone signaling.

Flashing on Trunks

A trunk flash is a signal sent to another telephone system to do something such as place a call on hold. You may need to use this feature when you have a call from another PABX in your own company network, and you want to transfer it to the originating PABX or to a third one.

You can flash only when you are talking on a trunk to another trunk in a two-party call.

To flash on a trunk for further dialing:

- 1 - Press **[FLASH]**.
- 2 - Dial the required number.
- 3 - Press **Release**.

Answering a Call with Night Service Enabled

When the console is in Night Service, incoming calls ring night bells or some other night answering point. These calls can still be answered from the console even though they do not ring the console bell.

The night answer point is programmed at the system level. If required, you can change the night answering point for individual trunks from the console. For more information, see page 36.

To answer a call when the console is in Night Service:

- ◆ Press **[NIGHT BELL]**.

Using Directed Call Pickup

Directed Call Pickup allows you to answer a call ringing at an extension. You can also use this feature to retrieve a call that you transferred to the wrong extension.

To pick up a call ringing at an extension:

- 1 - Dial the Directed Call Pickup code. (Your communications department can provide the code.)
- 2 - Dial the extension number of the ringing extension.
- 3 - Speak to the calling party.

Multiple Console Operation

When more than one console is in use at the same time, they will operate in one of two ways:

1 - Independent Operation

Consoles in this arrangement operate independently. Each console has unique hold slots and incoming calls ring a specific console. A recall to the attendant returns only to the console that initially handled the call.

2 - Transparent Operation

With transparent operation, all consoles operate the same way. Recalls return to all consoles, not just to the console that originally handled the call.

The consoles are also given privileges to read or cancel messages left at an extension by other extension users or the attendant. For more information about reading and canceling messages, see page 43.

INTER-CONSOLE CALLS AND TRANSFERS

An attendant can make and transfer calls to another attendant by dialing the console's directory number, but not by dialing 0 (zero). Whether you are transferring calls to an extension or another attendant, the procedure is the same—see page 14 for instructions.



Inter-console calls cannot be put on hold.

Centralized Attendant Service (CAS)

CAS allows an attendant at one PABX to answer calls that arrive at another interconnected PABX. Except for recalls, CAS has no effect on the way you handle calls from the console. When a call from another PABX in a CAS system recalls the console, it appears as a “Dial 0” call. Keep this in mind when answering the recall as it may affect how you greet the caller.

Voice mail

A voice mail system connected to your telephone system does not affect the operation of the console. If a call is answered by such a system, you may be prompted to enter an access code or an identification number. Before responding to the prompt, you must turn on tone signaling using the **[TONES ON]** softkey. For more information, see *Using Tone Signaling* on page 24.

Using System Functions



Viewing System Alarm Information

 
An alarm indicator on the display means a fault in the telephone system has occurred. You can read information about the nature and location of the fault from the console.

To read an alarm message:

1 - Press **Function**.

2 - Press [**ALARM**].

The display shows, for example:



3 - Record all the alarm information.

Press [**MORE...**] to display additional information or other alarms (if any).

The Alarm indicator will continue to flash until all alarm messages have been displayed.

4 - Contact your communications department.

5 - Press [**EXIT**].

The system may be programmed to raise an alarm when an extension is left off-hook without a call too long. If so programmed, the console will ring with no calls waiting. To cancel the alarm and stop the ringing, press **Function** followed by [**SHOW LOCKOUT**], and then press [**CLEAR**].

Viewing 911 Call Alarms

This feature raises an alarm at the console when an extension user places a 911 call and identifies the extension that placed the call. With this information, you can direct emergency services (for example, police or ambulance personnel) to the location from which the call was placed.

When a 911 Call alarm is raised, the console rings and the display shows “911 Call <Press Function Key for Details> ALARM”.

 


Although the console alarm indicates the calling extension's location, the emergency could be somewhere else—for example, in another room or on a different floor. Therefore, it is important to get verbal confirmation from the caller about where help is needed.

To read a 911 Emergency Call alarm message:

- 1 - Press **Function**.
- 2 - Press **[ALARM]**.
- 3 - Press **[SHOW 911]**.

The display shows:



- 4 - Record the number of the extension from which the 911 call originated.

If additional 911 calls were made, press **[MORE]** to view them.

To delete the 911 alarm, press **[CLEAR]**.


- 5 - Contact the appropriate emergency services.
- 6 - Press **[EXIT]**.

If an attendant console is in Attendant Console Lockout state, you can still access 911 alarm information, but you cannot clear the alarms.

Setting System Date and Time

You can change the date and time appearing on the console display. The time displays either in 12- or 24-format depending on system programming.

To set the time:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**SET TIME**].
- 4 - Enter the current time using four digits (hh:mm).
For example, for 9:30 enter 0930.
- 5 - Press [**PM**] if applicable.
[**PM**] appears only if the system is set to 12-hour format, and the hour entered is in the range 01 – 12.
- 6 - Press [**SET**].
[**SET**] appears only if the time has been entered correctly. You can use the  key to make corrections.
- 7 - Press [**EXIT**].

To set the date:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**SET DATE**].
- 4 - Enter the current date in day/month/year format.
For example, for December 12, 1999, enter 121299.
- 5 - Press [**SET**].
- 6 - Press [**EXIT**].

Canceling All Call Forwarding

You can cancel Call Forwarding on all extensions in the system.

To cancel Call Forwarding on all extensions:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**MORE...**].
- 4 - Press [**CAN. ALL FWD**].

You can also set up Call Forwarding for individual extensions from the console. For more information, see page 41.

Canceling All Callbacks

You can cancel Callback messages on all extensions in the system.

To cancel Callbacks on all extensions:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**MORE...**].
- 4 - Press [**CAN. ALL CBK**].

Changing DISA codes

You can change the DISA (Direct Inward System Access) code that outside callers must dial to access system features.


To change the DISA access code:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**MORE...**].
- 4 - Press [**DISA CODE**].
- 5 - Enter the new access code.
- 6 - Do one of the following
 - ◆ Press [**SET**] to confirm the new access code.
 - ◆ Press [**EXIT**] to exit without changing the code.

Setting up System-Abbreviated Dialing Numbers

 
Abbreviated dialing allows extension users to call a telephone number or enter a system access code by dialing a three-digit index number. You can program and display system-abbreviated dialing numbers from the console.

To program or display system abbreviated dialing numbers:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**ABBR DIAL**].
- 4 - Enter a three-digit index number from 000 to 999.
Press  to delete entry errors and then enter the correct number.
- 5 - Press [**PRIVATE**] to not display the number when dialed.

- 6 - Press **[ENTER]**.
- 7 - Press **[CANCEL]** to change the existing number.
- 8 - Enter the new number. (Include the outside line access code (e.g. "9") and an area code, if applicable.)

You can insert pauses in the numbers. Enter *9 for each 1-second pause; enter *1 for each 5-second pause.

Press  to delete entry errors, and then enter the correct number.
- 9 - Press **[SET]**.
- 10 - Repeat step 4 to 9 to program other numbers, or press **[EXIT]** to end programming.

Setting up Night Answer Points

A night answer point is the number of an extension or other destination where incoming trunk calls will ring when the system is in Night Service. For more information about Night Service, see page 9.

To set up night answer points:

- 1 - Press **Function**.
- 2 - Press **[ATT FUNCTION]**.
- 3 - Press **[MORE...]**.
- 4 - Press **[FLEX NIGHT]**.
- 5 - Enter the trunk number.
- 6 - Press either **[NIGHT 1]** or **[NIGHT 2]** to choose the night service mode.
- 7 - Dial the destination number of the night answer point.

The destination can be an extension, an attendant console directory number, an LDN number on a console, a hunt group or a Night Bell directory number.
- 8 - Press **[SET]** to confirm the new number or **[EXIT]** to exit without making changes.

Displaying the System Identification

A System Identification number may be assigned to your PABX. This number appears on Station Message Detail Reporting (SMDR) and traffic-measurement reports to identify your system when central polling equipment is used. It is usually unnecessary to change this number once it is entered.

To display or change the System Identification:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**SYSTEM IDENT**].
- 4 - Enter a new three-digit number if required.
- 5 - Press [**SET**] to confirm the new number.

Displaying the Console Identity

The console has an extension number which extension users can dial instead of "0" (zero) to call you. You can display the console extension number along with the system software version.

To display the console extension number and the system software version:

- 1 - Press **Function**.
- 2 - Press [**IDENTITY**].

Accessing Applications

The Application function is primarily used by maintenance personnel or someone responsible for doing Customer Data Entry (CDE). Access to these functions requires a password.

To access the Application function:

- 1 - Press **Function**.
- 2 - Press **[APPLICATION]**.

Your Communications Department will give you further instructions if you are required to do any Customer Data Entry.

Using Extension Functions



Setting/Canceling Call Forwarding

You can set up and cancel Call Forwarding on individual extensions from the console.

The instructions that follow apply to systems programmed with Split Call Forwarding, which allows you to specify different destinations for internal and external calls. If your system is programmed with another type of Call Forwarding, internal and external calls will both go to the same destination. Note that calls from the console are considered external.

To set or cancel Call Forwarding on an extension:

- 1 - Press **FUNCTION**.
- 2 - Press **[ATT FUNCTION]**.
- 3 - Press **[STATIONS]**.
- 4 - Dial the number of the extension for which you want to set or cancel Call Forwarding.

If you dial an invalid number, press **[CLEAR NO.]**.

- 5 - Press **[CALL FWD]**.
- 6 - Do one of the following:
 - ◆ Press **[INTERNAL]** to set or cancel call forwarding of internal calls.
 - ◆ Press **[EXTERNAL]** to set or cancel call forwarding of external calls.
- 7 - Do one of the following:
 - ◆ Press **[CANCEL]** to cancel the current call forwarding.
 - ◆ Dial a destination and then select the type of call forwarding—Always, No Answer, etc.

To return to the main display without making changes, press **[EXIT]**.

Setting/Canceling Do Not Disturb

Do Not Disturb (DND) prevents calls from ringing an extension. You can set and cancel DND on any extension in the system.

To set or cancel DND on an extension:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**STATIONS**].
- 4 - Dial the extension number.
- 5 - Press [**No DISTB**].

The first line of the display shows "DND" to indicate that DND is set.

You can also set and cancel DND while on a call to an extension. For more information, see page 23.

Setting/Clearing Message Waiting

You can notify extension users that a message is waiting for them at the console. When the user returns and calls the console, the display shows "MSW" to indicate that there is a message waiting for that extension.

Use this feature if you know that the person you are trying to contact is out of the office. If you know that the person is in the office, use the Callback feature described on page 15.

To set or clear Message Waiting on an extension:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**STATIONS**].
- 4 - Dial the extension number.

5 - Do one of the following:

- ◆ Press **[SEND MSG]** to set message waiting.
- ◆ Press **[CLEAR MSG]** to clear message waiting.

6 - Press **[EXIT]**.

READING AND CLEARING MESSAGES


Depending on your system's programming, you may be able to read and clear messages left for an extension by another user or attendant console. Without this capability, you can only read and clear messages that you have set.

To read and cancel an extension's messages:

- 1 - Press **Function**.
- 2 - Press **[ATT FUNCTION]**.
- 3 - Press **[STATIONS]**.
- 4 - Dial the extension number.
- 5 - Press **[READ MSG]**.

The absence of **[READ MSG]** on the display means that you are not authorized to read or clear messages other than those you have left.

The display shows the number of messages at that extension, the extension number of the user that left the message, and when the message was left.

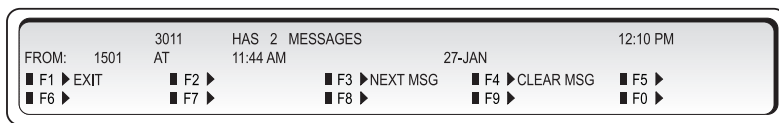

6 - Do one of the following:

- ◆ Press **[NEXT MSG]** to read the extension's next message.
- ◆ Press **[CLEAR MSG]** to clear the message.
- ◆ Press **[EXIT]** to return to the main display.


Setting/Clearing Advisory Messages

You can read Advisory Messages left on a *SUPERSET* display telephone and clear or change an existing message.

To read, set, or clear an Advisory Message:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Dial the extension number.
- 4 - Press [**SET UP MSG**].

The display shows:

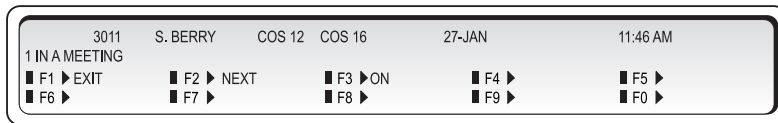

- 5 - Do one of the following:
 - ◆ Press [**ON**] to activate the currently displayed message.
 - ◆ Press [**NEXT**] until the message you want to leave appears, and then press [**ON**] to activate the message.

If the extension has an Advisory Message active, the message will appear on the display. You can either press [**OFF**] to clear the message or replace it with another one by pressing [**NEXT**] until the replacement message appears, and then pressing [**ON**] to activate the message.

Taking an Extension Out of Service

You can take an extension out of service (busy it out) if there is a problem with that extension or the system. An out-of-service extension can neither make nor receive calls.

To busy out an extension:

- 1 - Press **FUNCTION**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**STATIONS**].
- 4 - Dial the extension number.
- 5 - Press [**BUSY OUT**].

If the display shows “BUSY” instead of “IDLE” the extension is in use and will not be taken out of service until it becomes idle.

- 6 - Do one of the following:
 - ◆ Press [**SET**] to busy out the extension.
 - ◆ Press [**CLEAR**] to return the extension to service.

Using Trunk Functions



Viewing Trunk Status

You can view trunk status information to determine the current assignment of services and features on a trunk.

To view the current status of an extension:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**TRUNKS**].
- 4 - Enter the trunk number.
- 5 - Press [**STATUS**] to view information about the trunk such as its Class of Service (COS) and Class of Restriction (COR).
- 6 - Press [**EXIT**].

Viewing Trunk Group Busy Status

You can check the status of trunk groups to see which ones are busy. A maximum of 20 groups can be displayed at one time, either when the console is idle or during call handling.

To check the status of trunk groups:

- 1 - Press **Trunk Group** to view the first 20 trunk groups.

The display shows, for example:

```

TRK GRP >          1 2 3 4 5 6 7 8 9          1 2 3 4 5 6 7 8 9          11:32 AM
STATUS >          00 ■ ■ ■ ■          10 ■
■ F1 ▶ EXIT      ■ F2 ▶          ■ F3 ▶          ■ F4 ▶          ■ F5 ▶
■ F6 ▶          ■ F7 ▶          ■ F8 ▶          ■ F9 ▶          ■ F0 ▶ MORE...

```

The display tells you that trunk groups 02, 05, 07 and 12 are busy.

- 2 - Press [**MORE...**] to display the next 20 groups.
Repeat as required.
- 3 - Press [**EXIT**].

Accessing Specific Trunks

You can access a specific trunk and use it to make an outgoing call.

To access a specific trunk:

- 1 - Press **Function**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**TRUNKS**].
- 4 - Enter the trunk number.
- 5 - Press [**ENTER**].
- 6 - Press [**ATT ACCESS**].
- 7 - Do one of the following:
 - ◆ If the trunk is free (as indicated by dial tone), dial the outside number.
 - ◆ If the trunk is busy, either press [**FORCED RLS**] to clear the trunk of the call, or press and hold down [**OVERRIDE**] to barge into the call. Both parties will hear a long beep before you enter the conversation.

Trunks that are designated as dictation trunks (M/MM leads), and in use, cannot be accessed.

Taking a Trunk Out of Service

If may be necessary to take a trunk out of service (busy it out) if there are problems with that trunk or the system. You can busy out an idle trunk or one that is in use. Afterwards, you can return the trunk to service.

To busy out a trunk or return a trunk to service:

- 1 - Press **FUNCTION**.
- 2 - Press [**ATT FUNCTION**].
- 3 - Press [**TRUNKS**].
- 4 - Enter the trunk number.
- 5 - Press [**BUSY OUT**].
- 6 - Do one of the following:
 - ◆ Press [**SET**] to busy out the trunk.
 - ◆ Press [**CLEAR**] to return the trunk to service.

Hotel/Motel Features



 
Displaying and Changing Room Data

Room data includes occupancy and condition status (Vacant, Clean, Outgoing Call Restrictions, etc.) and the status of message waiting, wake-up call, and other services. You can change room data while the console is idle, or when you are connected to the room.

To display or change data for a room:


- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].

The display shows:



- 3 - Dial a room number (not necessary if you're already connected to the room).

 The display shows, for example:



This display shows that room 4321 is vacant and dirty, the maid is in the room, and only internal calls are allowed.

- 4 - Do any of the following:
 - ◆ Press [**CLR REG**] to clear the message register count. (See page 60.)
 - ◆ Press [**No DISTB**] to set Do Not Disturb and block incoming calls.
 - ◆ Press [**SEND MSG**] to set or [**CLEAR MSG**] to clear the message waiting indicator on the room phone.
 - ◆ Press [**SET WAKE-UP**] to set or [**CLR WAKE-UP**] to clear a wake-up call time. (See page 58.)
 - ◆ Press [**STATUS**] to change the room's Occupancy or Condition status (See *Changing Room Occupancy and Condition Status* on page 57.)
 - ◆ Press [**ROOM NUMBER**] to display the status of another room. (This option is not available when the console is connected to a room.)


Listing/Counting Rooms by Occupancy and Condition Status

You can display a list of rooms by occupancy and condition status—for example, Vacant and Not Clean, or Occupied and Maid Present. The system also reports the total number of rooms that are in the state you specify. You can cycle through all rooms or start with a particular room number—for instance, the first room on the third floor.


To list all rooms by occupancy and condition status:

- 1 - Press **Function**.
- 2 - Press **[GUEST ROOM]**.

The display shows:

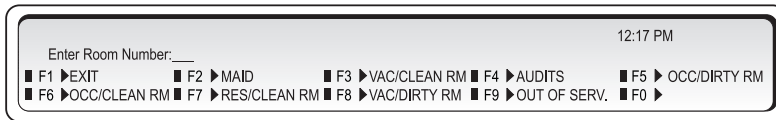

 - 3 - Press the softkey that corresponds to the rooms you want to display—for example, to display all vacant and clean rooms, press **[VAC/CLEAN RM]**.



- 4 - Press **[MORE...]** to display the next 10 rooms matching the specified states.

If a printer is attached to the console, you can print a list of all vacant or occupied rooms. For more information, see *Printing Reports* on page 61.

To display a list of rooms beginning with a particular room number:

- 1 - Complete steps 1 to 4 above.
- 2 - Press **[ROOM NUMBER]**.
- 3 - Dial the number of the first of the rooms you want to display.

Changing Room Occupancy and Condition Status

You can change the occupancy and condition status of a room while the console is idle or while you are connected to the room.

The occupancy and condition states are as follows:

Occupancy	Condition
Vacant	Clean
Occupied	Dirty
Reserved	Maid
Guaranteed	To Inspect
	Out of Service

To change a room's occupancy and condition status:

- 1 - Press **FUNCTION**.
- 2 - Press **[GUEST ROOM]**.
- 3 - Dial the room number (not necessary if you are already connected to the room).
- 4 - Press **[STATUS]**.
- 5 - Press the softkey that corresponds to the states you want to set—for example, to change a room from vacant to occupied press **[OCCUPIED]**.



The Maid status can only be changed from the room by dialing a code.

Your system may be programmed to automatically change all “occupied and clean” rooms to “occupied and dirty” at a set time. Ask your communications department for information.

Setting/Canceling Wake-up Calls

Both you and the guest can set, change, and cancel wake-up calls for a guest room. The system does not distinguish whether a wake-up call is set, changed, or canceled from the attendant console or guest room telephone. So, for example, a guest can cancel a wake-up call that you set and vice-versa.


You can set or cancel a wake-up call while the console is idle or while connected to the guest room.

If a printer is attached to the console, a report may print each time you set, change, or cancel a wake-up call.

To set or cancel a wake-up time while connected to the guest room:

- 1 - Press **[SET WAKE-UP]**.
- 2 - Enter the time using four digits (hh:mm).

For example, for 6:30 enter 0630.
- 3 - Do one of the following:
 - ◆ Press **[SET]** to set the time as AM.
 - ◆ Press **[PM]** to set the time as PM. (**[PM]** only appears if the system clock is set to 12-hour format, and the hour entered is in the range 01 – 12.)

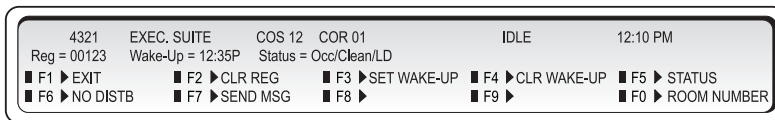

To set or change a wake-up time when NOT connected to the guest room:

- 1 - Press **Function**.
- 2 - Press **[GUEST ROOM]**.
- 3 - Dial the room number.
- 4 - Follow steps 1-3 from the previous procedure.

To cancel a wake-up call:

- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].
- 3 - Dial the room number.
- 4 - Press [**CLR WAKE-UP**].
- 5 - Press [**EXIT**].



Some display sets can set their own timed reminder. The above procedures will also clear or change a reminder already set by the user.

If the guest fails to answer the wake-up call, the system will ring the room twice more at five-minute intervals. If a third wake-up call goes unanswered or reaches a busy line, the system may generate a minor alarm at the console.

Setting Room Call Restrictions

You can restrict guests from placing local or long distance calls from their room phones. The procedure you use to set call restrictions depends on whether the hotel/motel is using a Property Management System.

If the hotel/motel is NOT using a Property Management System

- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].
- 3 - Dial the room number.
- 4 - Press [**STATUS**].
- 5 - Do one of the following:
 - ◆ Press [**INTERNAL**] to allow internal calls only.
 - ◆ Press [**LOCAL**] to allow internal and local calls.
 - ◆ Press [**LONG DIST**] to allow internal, local, and long distance calls.

If the hotel/motel is using a Property Management System

- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].
- 3 - Dial the room number.
- 4 - Press [**RESTRICT O/G**].

The phone is restricted from making outgoing trunk calls. To remove the restriction and allow outgoing calls, repeat the procedure.

Blocking Room-to-Room Calls

You can use the **Block** key on the console to bar calls between guest rooms. Only room phones programmed with call blocking will be affected by this; ask your communications department for further information.

To block room-to-room calls:

- ◆ Press **Block**.

The lamp above the **Block** key lights and stays lit until blocking is canceled.

Displaying/Clearing a Message Register

The message register is a record of all external calls placed from a guest room telephone. You can display and clear a room's message register while the console is idle or while connected to the guest room.

To display or clear a room's message register:

- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].
- 3 - Dial the room number (not necessary if you are already connected to the room).
- 4 - Press [**CLR REG**].

If a printer is attached to the console, a report may print showing the contents of the register before it was cleared.

Printing Reports

 
If a printer is connected to the console, you can request printed reports (audits) of message registers, room status and automatic wake-ups.

Each audit has its own format and some are printed automatically. For example, when a wake-up call is set, changed or canceled, the printer automatically records it.

To print a report:

- 1 - Press **Function**.
- 2 - Press [**GUEST ROOM**].
- 3 - Press [**AUDITS**].

The display shows:



- 4 - Select the report you want to print.
- 5 - Press [**EXIT**].

Reference



Telephone Directory

Name	Number
POLICE:	
FIRE:	
HOSPITAL:	
TROUBLE WITH EXTENSION OR CONSOLE:	

Class of Service/Restriction

Each extension and trunk has a COS (Class of Service) and a COR (Class of Restriction) that defines what the user of that extension or trunk can or cannot do. The system can have up to 50 of each, although most companies use only a few.

To help you answer questions from users who may be having problems with the system, you may want to record a brief description of the most common COSs and CORs. For example, COS 1 might mean, "Allows only local calls," and COR 10 might be, "No long distance calls after 6 PM." Your communications department can give you the required details.

COS	COS NAME	ALLOWS...

COR	COR NAME	RESTRICTS...

Console Display Abbreviations

Abb.	Meaning
ABBR	Abbreviated
ACC	Account
ANSR	Answer
ATT	Attendant
BSY OUT	Busied Out
CAN	Cancel
CBK	Callback
CDE	Customer Data Entry
CLR	Clear
COR	Class of Restriction
COS	Class of Service
C/W	Call Waiting
DD/MM/ YY	Day/month/year
DISA	Direct Inward System Access
DISTB	Disturb
DND	Do Not Disturb
DST	Destination

Abb.	Meaning
FLEX	Flexible
FWD	Forwarding
IDENT	Identity
INT	Intercept/Internal
LD	Long Distance
LDN	Listed Directory Number
LOC	Local
MSG	Message
MSW	Message Waiting
OCC	Occupied
RCL	Recall
REG	Register
RLS	Release
RM	Room
RS	Room Status or Restricted Outgoing Calls
SER	Serial
VAC	Vacant

Advisory Messages for *SUPERSET* Display Telephones

The following default messages can appear on all *SUPERSET* telephones equipped with displays.

Message Number	Message
01	IN MEETING
02	OUT OF TOWN
03	ON VACATION
04	OUT ON A CALL
05	OUT TO LUNCH
06	GONE FOR THE DAY
07	GONE HOME
08	IN TOMORROW
09	
10	
11	
12	
13	
14	
15	

Authorized *SUPERSET* users can change these messages and program seven more for system-wide use. Keep a record of any changes and additions.

For instructions on setting these messages from the console, see page 44.

Glossary

BUSY OUT

A feature allowing you to make a line or equipment indicate busy to an incoming call. In effect, you take the line out of service until it can be repaired or tested.

CAMP-ON

A feature allowing the system to queue calls directed to a busy extension, and then automatically connect the waiting party when the extension becomes free. The busy extension hears a quick beep to indicate a call is waiting.

CENTRAL OFFICE (CO)

A facility housing the public telephone system and related equipment which provides telephone service for customers in a geographical area.

CLASS OF RESTRICTION (COR)

When the system is programmed, the extensions and trunks are assigned to different Classes of Restriction. A COR controls the outgoing call capabilities of the extension or trunk. For example, an extension can be assigned a COR that prevents it from making outside calls other than with the assistance of the operator.

CLASS OF SERVICE (COS)

When your telephone system is programmed, the extensions are assigned to different Classes of Service. Each class has access to a specific set of features.

DISA (DIRECT INWARD SYSTEM ACCESS)

A feature which allows callers to dial directly into the telephone system and use its features and facilities.

HARDWARE

The physical components of the system.

HUNT GROUP

Extensions assigned to a group with a common (pilot) telephone number as well as their own personal extension numbers. An incoming call to a hunt group will ring the first available extension.

LDN KEYS (LISTED DIRECTORY NUMBER)

Call-handling keys which allow you to select the sequence in which you answer calls from outside the PABX.

PABX (PRIVATE AUTOMATIC BRANCH EXCHANGE)

Telephone switching system for private use by a company.

RECALL

A call which returns to the console after being transferred to a busy or unanswered extension.

SOFTWARE

The routines, programs, and instructions required to run the system.

TRUNK

A trunk (outside line) is the external communications link between two switching systems. This link can be between one or more telephone systems (PABXs) or the PABX and Central Office equipment.

Tone Demonstration

Your telephone system has several tones to inform you of the progress of your call. You can use the Tone Demonstration feature to familiarize yourself with the tones.

- 1 - Dial the Tone Demonstration access code _____. (Ask your communications department for the code.)
- 2 - Dial a two-digit tone code from the list below.
- 3 - Continue dialing codes to listen to other tones.
- 4 - Hang up when you are finished.

Code	Tone Name	Meaning
11	Dial Tone	Heard when you lift the handset.
12	Transfer Tone	Heard at an extension when the user places a call on hold to consult with another party or to transfer the call.
13	Busy Tone	Heard when the number you dialed is busy.
14	Special Busy Tone	Heard when the extension you called has Do Not Disturb activated.
15	Ringback Tone	Heard when the destination you dialed is ringing.
16	Not used	
17	Reorder Tone (Error Tone)	Heard when a feature is not available to you or not in your Class of Service, or when you dial an invalid number.
18	Conference	Heard when a new person joins a conference call.
19	Call Waiting Tone (Camp-on)	Heard during a conversation when you have an internal call waiting to be answered.
20	Intrusion Tone (Override)	Heard by all parties in a conversation when someone overrides (intrudes into) a call.
21	Interrupted Dial Tone	Heard when you lift the handset at an extension that has Do Not Disturb or Call Forward Always activated.
22	Not used	
23	Waiting on Hold Tone	Heard by a caller on hold and during camp-on.

Code	Tone Name	Meaning
24	Paging Tone	Heard when you are connected to the loudspeaker paging equipment.
25	Not used	
26	Trunk Camp-on Double Beep Tone	Heard during a conversation when you have an external call waiting.
27	ARS Expensive Warning Tone	If your system has Automatic Route Selection (ARS), you will hear this tone when no inexpensive routes are available for your long-distance call. The tone is a warning that your call is taking an expensive route.
28	ARS Dial Tone	If your system has Automatic Route Selection (ARS), you will hear this tone after you dial the trunk access code.
29	Override Warning Tone	Heard by all parties in a conversation when someone overrides (intrudes into) the call.
30	Privacy Release Tone	Heard when privacy is released on a <i>SUPERSET</i> telephone and the new member joins the call.
31	Auto Answer Call End Tone	Heard by a user that has a <i>SUPERSET</i> in Auto-Answer mode when the calling party hangs up.
32	Attendant Error Tone	Heard by the Attendant, when attempting to do something that is not allowed, such as trying to connect two devices that are not allowed to be connected.
33	Ringer Pitch Adjustment	Dialed at <i>SUPERSET</i> telephones to hear adjustments to ringer pitch.

Index



Index

Numerics

911 call alarms, viewing and clearing, 32

A

Abbreviated Dialing numbers, entering and viewing, 35

abbreviations, console display, 68

accessing individual trunks, 50

Advisory Messages

calling extensions with Advisory Messages, 16

list of Advisory Messages, 69

setting and clearing on extensions, 44

alarms, viewing and clearing, 31

All Set Page, 21

Answer key, 6, 13

answering calls

multiple calls waiting, 14

new call indication, 14

new calls, 13

when Night Service enabled, 25

applications, accessing, 38

audits (printouts) for guest rooms, 61

B

bell, *See* ringer

Block key, 6

blocking calls between guest rooms, 60

busy

recalls, 19

transferring to busy extensions, 15

busy out

definition, 70

extensions, 45

trunks, 51

C

cables, console, 4

Call Block, 60

call forwarding

cancel on all extensions, 34

setting and cancelling on individual extensions, 41

call restrictions for guest rooms, 59

call splitting, 18

Callback

about, 15

cancelling on all extensions, 34

leaving at an extension, 15

Camp-on, definition, 70

Cancel key, 6

cancelling

Advisory Messages, 44

all Call Forwarding, 34

all callbacks, 34

Call Forwarding on individual extensions, 41

Do Not Disturb on individual extensions, 22, 42

Message Waiting on individual extensions, 22, 42

CAS, *See* Centralized Attendant Service

CDE (Customer Data Entry), 38

Central Office, definition, 70

Centralized Attendant Service, 27

Class of Restriction, definition, 70

Class of Service, definition, 70

conferences, setting up, 18

console

- cables, 4
- components, 4
- directory number, displaying, 37
- display abbreviations, 68
- display, 7
- handset/headset jacks, 4
- intercepts, 20
- keys, 5
- language, changing, 10
- lockout, 10
- Night/Day Service, switching, 9
- ringer, adjusting, 9
- ringer, turning on/off, 9

Cursor control keys, 5

Customer Data Entry, 38

D

date, setting, 33

Day Service, switching, 9

Dial pad keys, about, 5

dialing mistakes, correcting, 14

Directed Call Pickup, 26

directory number, display console, 37

DISA

- access codes, changing, 35
- definition, 70

display

- abbreviations, 68
- about the console, 7
- changing language, 10
- language, changing, 7

DND

- overriding, 15, 23
- setting and canceling on an extension, 22, 42

Do Not Disturb, *See* DND

E

emergency 911 call alarms, viewing and clearing, 32

extending calls, *See* transferring calls

external calls, allowing/restricting from guest rooms, 59

F

Fixed function keys, 6

flashing on trunks, 25

Flexible Night Answer, 36

French, console language, 10

Function key, 6

G

Group Paging, 21

Guest Room

- blocking room-to-room calls, 60
- calling restrictions, 59
- changing occupancy and condition status, 57
- display and changing room data, 55
- displaying and clearing Message Register, 60
- listing rooms by occupancy and condition status, 56
- printing status, 61
- wake-up calls, 58

H

hardware, definition, 70

Hold

- Hold 4+ key, 17
- keys, 6
- pickup, 17
- placing calls on, 16
- recall, 17
- retrieving calls on hold, 16
- stacked, 18

Hotel/Motel features, *See* Guest Room

Hunt Group, definition, 71

I

identity

- console, 37
- system, 37

intercepts to console, 20

internal calls, allowing/restricting from guest rooms, 59

J

jacks, handset/headset, 4

L

language, changing on display, 10
 last number redial, 23
 LDN (Listed Directory Number), definition, 71
 local calls, allowing/restricting from guest rooms, 59
 lockout console, 10
 long distance calls, allowing/restricting from guest rooms, 59

M

making calls, 16
 Message Register
 displaying and clearing, 60
 printing, 61
 Message Waiting
 reading messages, 43
 setting and canceling on an extension, 22, 42
 misdialed numbers, correcting, 14
 multiple console operation, 26

N

new call indication, 14
 night answering points, setting up, 36
 Night Service
 answering calls when Night Service enabled, 25
 setting up answering points, 36
 switching, 9
 no answer recalls, 19

O

outgoing calls, allowing/restricting from guest rooms, 59
 override busy and Do Not Disturb, 23

P

PABX, definition, 71
 Page key, 6
 paging, 20
 picking up calls on hold at the console, 17
 placing calls, 16
 printing guest room reports, 61

R

recalls
 answering, 19
 definition, 71
 redialing, last number redial, 23
 Release key, 6
 restricting calls from guest rooms, 59
 ringer
 adjusting volume, 9
 turning on/off, 9
 Ringer Volume keys, 5
 room status
 changing, 57
 listing by occupancy and condition status, 56

S

Serial Call, 24
 service
 switching to Day/Night, 9
 taking extensions in or out, 45
 taking trunks in or out, 51
 Set Page key, 6
 Set Paging, 21
 Softkeys, about, 7
 software version, displaying, 37
 software, definition, 71
 Spanish, console language, 10
 splitting conferences, 18
 stacked hold, 18
 SUPERSET telephones
 calling SUPERSETs with Advisory Messages, 16
 list of Advisory Messages, 69
 setting and clearing Advisory Messages, 44
 system
 alarms, viewing and clearing, 31
 identification, displaying and changing, 37
 software version, displaying, 37
 time and date, setting, 33
 System Speed Calling numbers, *See* Abbreviated Dialing numbers

T

- time, setting, 33
- tone demonstration, 72
- Tone Signaling
 - enabling/disabling tones, 24
 - voice mail, 27
- transferring calls, 14, 27
- Trunk Group key, 6
- trunks
 - accessing individual, 50
 - busy out, 51
 - definition, 71
 - flashing, 25
 - viewing status of individual trunks, 49
 - viewing status of trunk groups, 49

V

- voice mail, affect on console operations, 27
- volume, handset/headset, 9

W

- wake-up calls
 - printing, 61
 - setting and canceling, 58