



NORTEL
NETWORKS™


T7100 Telephone User Card

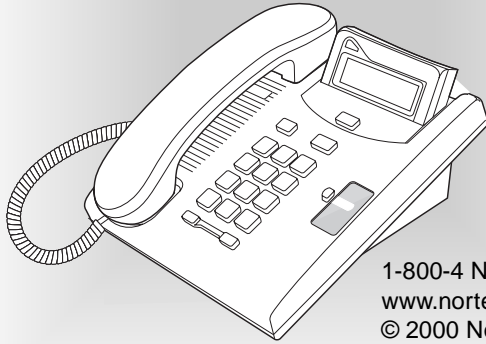

1-800-4 NORTEL
www.nortelnetworks.com
© 2000 Nortel Networks
P0935242 02
Printed in Canada

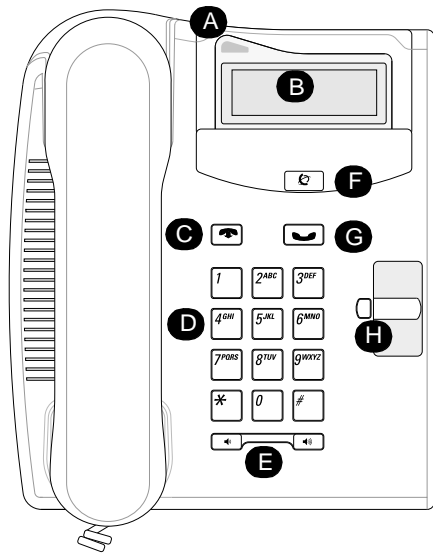


Write your extension number on this card.

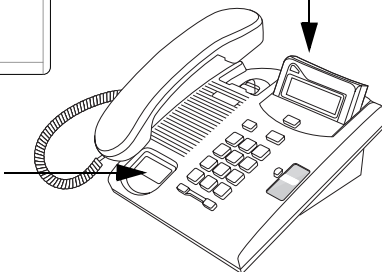

Adjust the display to your personal preference.


Cord connections

- 1 Desk mount option**
Route line cord through the stand.

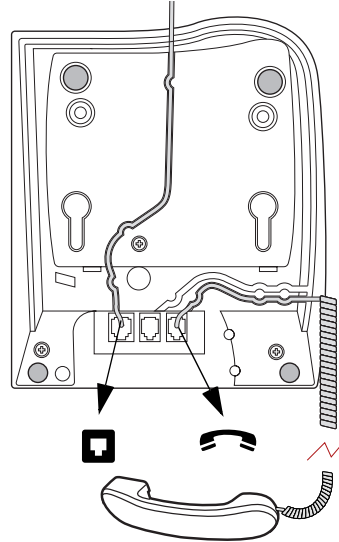

Connect cord to handset.

2

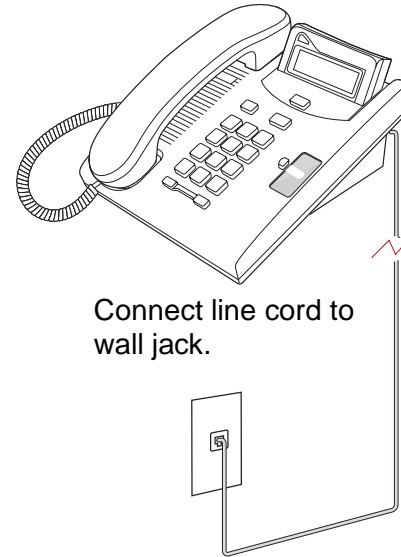


Connect line cord to wall jack.

Your T7100 telephone

- A Telephone light**
Flashes when a call rings at the telephone. Lights up when Message Waiting Indication (MWI) is supported by system software. Contact your System Administrator or Coordinator for more information.
- B Adjustable display**
Shows the time and date, call and feature information.
- C Release button**
Ends an active call.
- D Dial pad**
- E Volume control**
Adjusts the handset and ringer volume.
- F Feature button**
Starts or ends a feature.
- G Hold button**
Places calls on hold.
- H Memory button**


Wall mount without a telephone stand

- 1** Press here to remove the stand.

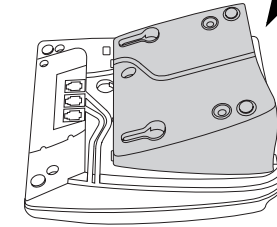

Connect cords to the telephone, refer to "Cord connections" illustrations.


2

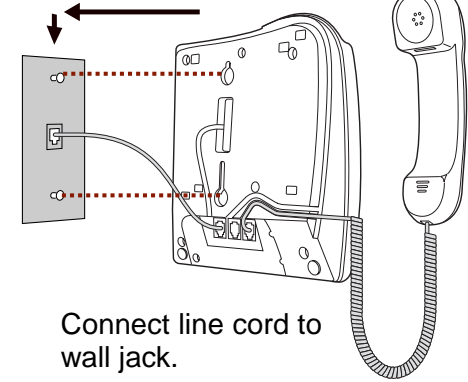


Connect line cord to wall jack.
Place the telephone onto the wall mount plate and slide it down.

Wall mount with a telephone stand

- 1** Press here to remove the stand.

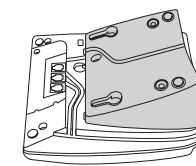


- 2** Use the key hole slots on the stand to mark the location for the screws. Tighten screws for a secure fit.

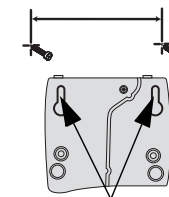


key hole slots

- 3** Mount the stand as shown and insert screw. Use the screw that came with your telephone.

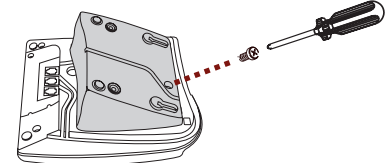

Connect cords to the telephone, refer to "Cord connections" illustrations.

4

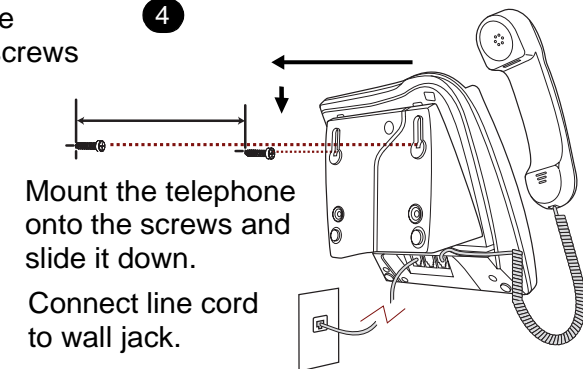

Mount the telephone onto the screws and slide it down.

Connect line cord to wall jack.

