Panasonic

Digital Super Hybrid System

Quick Reference Guide

Model No. KX-TD500

 
Features List

Desired Function	Operation				
Making Calls					
Calling	To an extension To an external party ► extension no. ► (((-)) To an external party • phone no. ► (((-))				
Receiving calls	► \$\(\lambda'\)\(\lambda'\)				
Redial	► Control Con				
Quick Dialing	property (quick dial no.) ► (\(\begin{align*} \bigcup_{\langle(\alpha')}^{\alpha'}\\ \bigcup_{\langle(\alpha')}^{\alpha'}\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\				
One-Touch Dialing	To program PROGRAM ► 9 9 ► CO				
Calling an operator	▶ 0 ▶ ((((\\\)				
Speed Dialing (Station)	To set				
Speed Dialing (System)	To dial AUTO DIAL STORE System speed dial no. (000-999) ► ((() ≥				
Doorphone Call					
Automatic Callback Busy	To set When hearing a busy tone 6 ► □ To answer the extension To answer the CO line phone no. ► □ To phone no. ► □ To answer the CO line				











Features List

Desired Function	Operation				
During a Conversation					
Holding a call	Holding To retrieve a call at the holding extension → CO / → DN → ((()) To retrieve an outside call from another extension → CO / → DN → ((()) → CO /				
Holding a call exclusively	Holding To retrieve a call on exclusive hold → CO / INTERCOM / DN → C				
Transferring a call	to an extension CO phone no. to an external party Announce.				
Three-party conference	To add a third party □ third party's no. ► □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □				
	Useful Features				
Forwarding a call	All calls Description Des				
Picking up a call	CO Line A X Directed A 1 Pextension no. Group 4 0				
Call Waiting	To talk to the new party While hearing a tone HOLD CO MITERCOM TO Set To talk to the new party While hearing a tone FOR THE TO				

Features List

Desired Function	Operation				
	Useful Features				
Paging	To page All groups & external speakers 3 2				
Do Not Disturb (DND)	To set To cancel FWD/DND ► 1 ► FWD/DND ► 0 ► FWD/DND				
Sending a Call Waiting tone	While hearing a busy tone 1 ▶ Wait for an answer. ▶ ((())				
Message Waiting	Sender To leave a notification While hearing a busy tone MESSAGE MESSA				
Setting Absent Message	To set				
Log-In/Log-Out	► 4 5 1 For Log-In 4 5 0 For Log-Out ► □				
Locking your extension	► 7 6 2 lock code (000-999) lock code Lock 7 6 2 lock code (000-999) Unlock Unlock				
Station Program Clear					
Timed Reminder	To set To set To set To cancel To stop the alarm any key To column (PT only)				

Station Programming

To enter the programming	mode	To exit the programming mode				
PROGRAM ► 9 9		PROGRAM				
Operation						
Direct Station Selection	° ► 1	extension no.				
One-Touch Dialing	^{co} ▶ 2	desired no.				
MESSAGE	CO AUTO DIAL STORE					
FWD/DND	^{co} ▶ 4	AUTO DIAL STORE				
SAVE	∞ ► 5	AUTO DIAL STORE				
Account	°° ► 6	AUTO DIAL STORE				
CONF (Conference)	^{co} ▶ 7	AUTO DIAL STORE				
Log-In/Log-Out	^{co} ▶ 7	1 Nauto DIAL STORE				
Ringing Tone Selection for CO Buttons	^{co} ▶ ^{co}	► tone type (1-8) ► Ĉ	UTO DIAL STORE			
Preferred Line Assignment, Outgoing	1 \rightarrow \big[\frac{1}{2} \\ \frac{3}{3}))	no line idle line prime line			
Preferred Line Assignment, Incoming	2 ► 1 2 3)) • • • / • / • DN	no line ringing line prime line			
Full One-Touch Dialing Assignment	3 ▶ [1) off / 2 on] ▶ ☐ AUTO DIAL STORE				
Intercom Alerting Assignment	4 ► 1 ring-calling / 2 voice-calling ► LAUTO DIAL STORE					
Call Waiting Tone Type Assignment	5 ► 1 tone 1 / 2 tone 2 ► AUTO DIAL STORE					
Self-extension Number Confirmation	6 ► □					
Handset/Headset Selection	9 ▶ [1	handset/2 headset	AUTO DIAL STORE			
Station Programming Data Default Set	# ► AUTO DIA	٦				