Panasonic

Digital Super Hybrid System

Quick Reference Guide

Model No. KX-TD500

Features List

Desired Function	Operation				
	Making Calls				
Calling	To an extension To an external party Pextension no. ► ((()) To an external party Perturbation To an external party Perturbation To an external party Perturbation To an external party				
Receiving calls	► \ \ \ \ \ \ \ \ \ \				
Redial	► REDIAL ► CUIC				
Quick Dialing	p quick dial no.				
One-Touch Dialing	To program PROGRAM ► 9 9 ► CO				
Calling an operator					
Speed Dialing (Station)	To set				
Speed Dialing (System)	To dial AUTO DIAL STORE System speed dial no. (000-999) □ □ □ □ □ □ □ □ □ □ □ □ □				
Doorphone Call	\bullet \bullet \bullet doorphone no. (1-8) \bullet \bullet				
Automatic Callback Busy	To set When hearing a busy tone 6 ► □ To answer the entension To answer the CO line To phone no. ► □ □ □ □ □ □ □ □ □ □ □ □ □				











Features List

Desired Function	Operation				
During a Conversation					
Holding a call	Holding To retrieve a call at the holding extension → □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □				
Holding a call exclusively	Holding To retrieve a call on exclusive hold → CO / → DN → DN → CO / → DN → DN → CO / → DN →				
Transferring a call	to an extension CO phone no. to an external party Announce.				
Three-party conference	To add a third party □ third party's no. ► □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □				
	Useful Features				
Forwarding a call	All calls Description Des				
Picking up a call	CO Line A X Directed A 1 Pextension no. Group 4 0				
Call Waiting	To talk to the new party While hearing a tone HOLD CO MITERCOM TO Set To talk to the new party While hearing a tone FOR THE TO				

Features List

Desired Function	Operation				
	Useful Features				
Paging	To page All groups & external speakers 3 2 ** All external speakers 3 2 external speakers 3 2 external speaker no. (1 or 2) All groups 3 3 # Particular groups 3 3 paging group no. (01-16) To answer Through an external speaker 4 2 external speaker 4 3 To deny 7 2 1 1 Set 7 2 1 0 Cancel				
Do Not Disturb (DND)	To set To cancel FINDIDAD ► 1 ► FINDIDAD ► 0 ► FINDIDAD				
Sending a Call Waiting tone	While hearing a busy tone 1 ▶ Wait for an answer. ▶ (())				
Message Waiting	Sender To leave a notification To cancel a notification MESSAGE → ▼ 7 0 0 ● extension no.				
	Receiver To call back To clear all notifications				
Setting Absent Message	To set				
Log-In/Log-Out	► 4 5 1 For Log-In 4 5 0 For Log-Out ► □				
Locking your extension	► 7 6 2 lock code (000-999) lock code Lock 7 6 2 lock code (000-999) Unlock Unlock				
Station Program Clear	№ 7 9 0 > ?				
Timed Reminder	To set To stop the alarm any key To set To stop the alarm To stop the alarm To set To stop the alarm				

Station Programming

To enter the programming	mode	To exit the programming mode				
PROGRAM ► 9 9		PROGRAM				
Operation						
Direct Station Selection	^{co} ▶ 1	extension no.				
One-touch Dialing	^{co} ▶ 2	desired no.				
MESSAGE	^{co} ► 3	AUTO DIAL STORE				
FWD/DND	^{co} ▶ 4	AUTO DIAL STORE				
SAVE	^{co} ▶ 5	AUTO DIAL STORE				
Account	^{co} ▶ 6	AUTO DIAL STORE				
CONF (Conference)	^{co} ▶ 7	AUTO DIAL STORE				
Log-In/Log-Out	^{co} ▶ 7	1 AUTO DIAL STORE				
Ringing Tone Selection for CO Buttons	co ► co	► tone type (1-8) ► Å	UTO DIAL STORE			
Preferred Line Assignment, Outgoing	1 \rightarrow \big[\frac{1}{2} \\ 3)) ▶ ^{CO} / INTERCOM / DN	no line idle line prime line			
Preferred Line Assignment, Incoming	2 > 1 2 3)) ▶ ^{CO} / □ / DN INTERCOM / □	no line ringing line prime line			
Full One-touch Dialing Assignment	3 ▶ [1	off / 2 on ▶ ☐ AUTO DIAL STORE				
Intercom Alerting Assignment	4 ▶ [1	ring-calling / 2 voice-	calling] ► (Auto DIAL STORE)			
Call Waiting Tone Type Assignment	5 ▶ [1) tone 1 / (2) tone 2 >	AUTO DIAL STORE			
Self-extension Number Confirmation	6 ►) 				
Handset/Headset Selection	9 ▶ [1	handset/2 headset	AUTO DIAL STORE			
Station Programming Data Default Set	# NAUTO DIA	٦				