

**SECTION** **WW**  
**WIPER & WASHER**

A  
 B  
 C  
 D  
 E  
 F  
 G  
 H  
 I  
 J  
 K  
**WW**  
 M  
 N  
 O  
 P

**CONTENTS**

<b>BASIC INSPECTION</b> .....	3	Diagnosis Procedure .....	19
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	3	<b>FRONT WIPER MOTOR GROUND CIRCUIT</b> ...	21
Work Flow .....	3	Diagnosis Procedure .....	21
<b>FUNCTION DIAGNOSIS</b> .....	6	<b>FRONT WIPER AND WASHER SYSTEM</b> .....	22
<b>FRONT WIPER AND WASHER SYSTEM</b> .....	6	Wiring Diagram .....	22
System Diagram .....	6	<b>ECU DIAGNOSIS</b> .....	27
System Description .....	6	<b>BCM (BODY CONTROL MODULE)</b> .....	27
Component Parts Location .....	9	Reference Value .....	27
Component Description .....	10	<b>IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM)</b> .....	32
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	11	Reference Value .....	32
<b>COMMON ITEM</b> .....	11	<b>SYMPTOM DIAGNOSIS</b> .....	34
COMMON ITEM : Diagnosis Description .....	11	<b>FRONT WIPER AND WASHER SYSTEM SYMPTOMS</b> .....	34
COMMON ITEM : CONSULT-III Function .....	11	Symptom Table .....	34
<b>WIPER</b> .....	11	<b>FRONT WIPER DOES NOT OPERATE</b> .....	36
WIPER : CONSULT - III Function (BCM - WIPER)...	11	Description .....	36
<b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....	13	Diagnosis Procedure .....	36
Diagnosis Description .....	13	<b>NORMAL OPERATING CONDITION</b> .....	38
CONSULT - III Function (IPDM E/R) .....	13	Description .....	38
<b>COMPONENT DIAGNOSIS</b> .....	14	<b>PRECAUTION</b> .....	39
<b>WIPER AND WASHER FUSE</b> .....	14	<b>PRECAUTIONS</b> .....	39
Description .....	14	Supplemental Restraint System (SRS) AIR BA G and SEAT BELT PRE-TENSIONER .....	39
Diagnosis Procedure .....	14	<b>ON-VEHICLE REPAIR</b> .....	40
<b>FRONT WIPER MOTOR LO CIRCUIT</b> .....	15	<b>FRONT WIPER</b> .....	40
Component Function Check .....	15	Exploded View .....	40
Diagnosis Procedure .....	15	<b>FRONT WIPER ARMS</b> .....	40
<b>FRONT WIPER MOTOR HI CIRCUIT</b> .....	17	FRONT WIPER ARMS : Removal and Installation...	40
Component Function Check .....	17		
Diagnosis Procedure .....	17		
<b>FRONT WIPER AUTO STOP SIGNAL CIR- CUIT</b> .....	19		
Component Function Check .....	19		

<b>FRONT WIPER DRIVE ASSEMBLY</b> .....	41	FRONT WASHER NOZZLE : Adjustment .....	44
FRONT WIPER DRIVE ASSEMBLY : Removal and Installation .....	41	<b>WASHER TANK</b> .....	<b>44</b>
<b>FRONT WASHER</b> .....	<b>43</b>	WASHER TANK : Removal and Installation .....	44
<b>WASHER TUBE</b> .....	<b>43</b>	<b>FRONT WASHER PUMP</b> .....	<b>45</b>
WASHER TUBE : Layout .....	43	FRONT WASHER PUMP : Removal and Installa- tion .....	45
<b>FRONT WASHER NOZZLE</b> .....	<b>43</b>	<b>FRONT WIPER AND WASHER SWITCH</b> .....	<b>46</b>
FRONT WASHER NOZZLE : Removal and Instal- lation .....	43	Removal and Installation .....	46

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003071754

OVERALL SEQUENCE

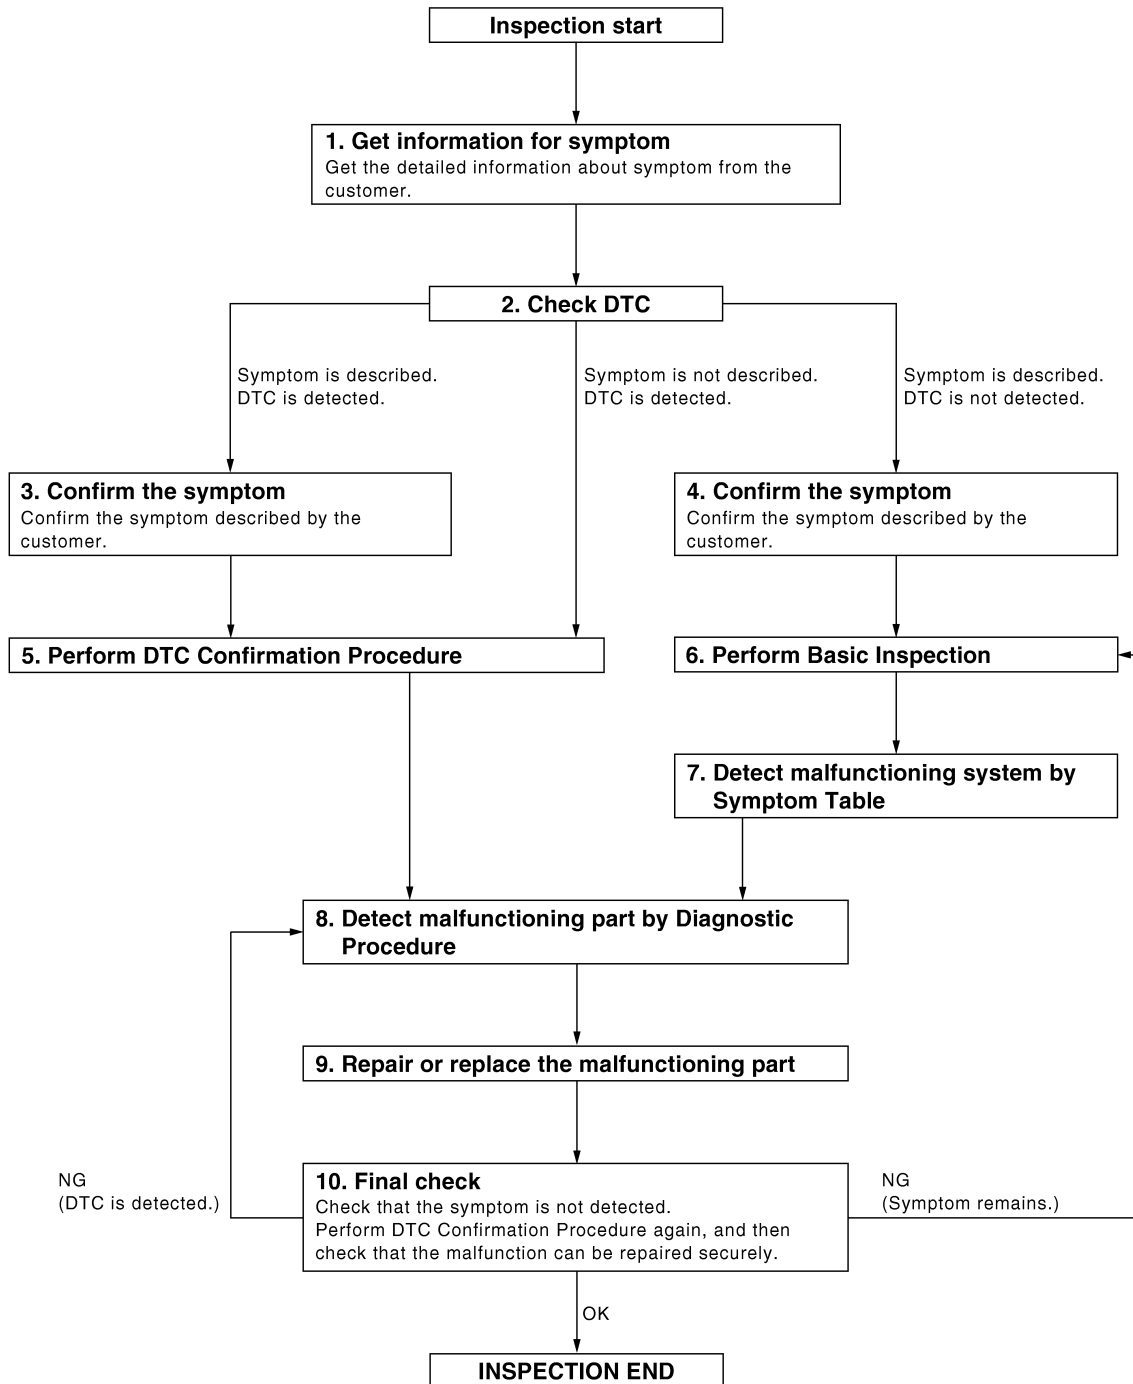

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

## 1. GET INFORMATION FOR SYMPTOM

---

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

## 2. CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
  - Record DTC and freeze frame data (Print them out with CONSULT-III.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

## 3. CONFIRM THE SYMPTOM

---

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

## 4. CONFIRM THE SYMPTOM

---

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

## 5. PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-79. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

**NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check. If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-42. "Intermittent Incident"](#).

## 6. PERFORM BASIC INSPECTION

---

Perform [WW-3. "Work Flow"](#).

Inspection End>>GO TO 7

## 7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

---

Detect malfunctioning system according to [WW-36. "Diagnosis Procedure"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

## 8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

---

Inspect according to Diagnostic Procedure of the system.

**NOTE:**

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 9

NO >> Check voltage of related BCM terminals using CONSULT-III.

---

## 9. REPAIR OR REPLACE THE MALFUNCTIONING PART

---

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

---

## 10. FINAL CHECK

---

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS

### FRONT WIPER AND WASHER SYSTEM

#### System Diagram

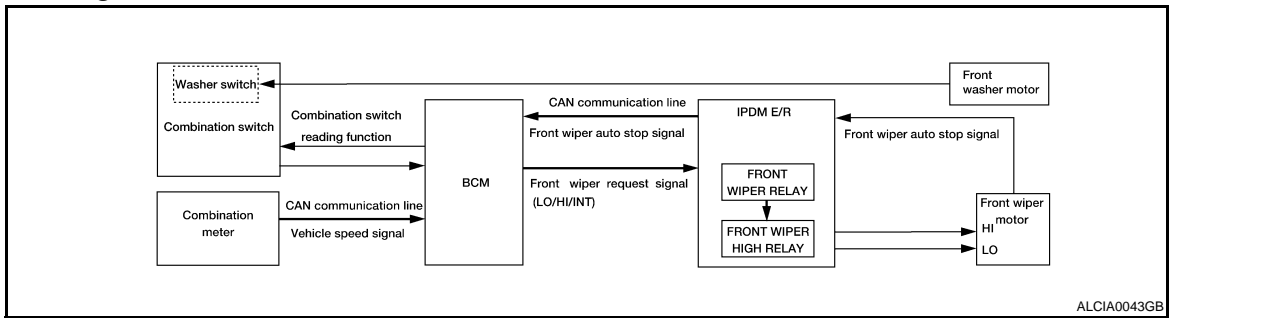

#### System Description

INFOID:000000003071756

#### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

##### Control by BCM

- Combination switch reading function
- Front wiper control function

##### Control by IPDM E/R

- Front wiper control function
- Relay control function

#### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

#### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

##### Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

#### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

##### Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

#### FRONT WIPER INT OPERATION

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.


##### Front wiper INT operating condition

- Ignition switch ON
- Front wiper switch INT

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper auto stop signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.

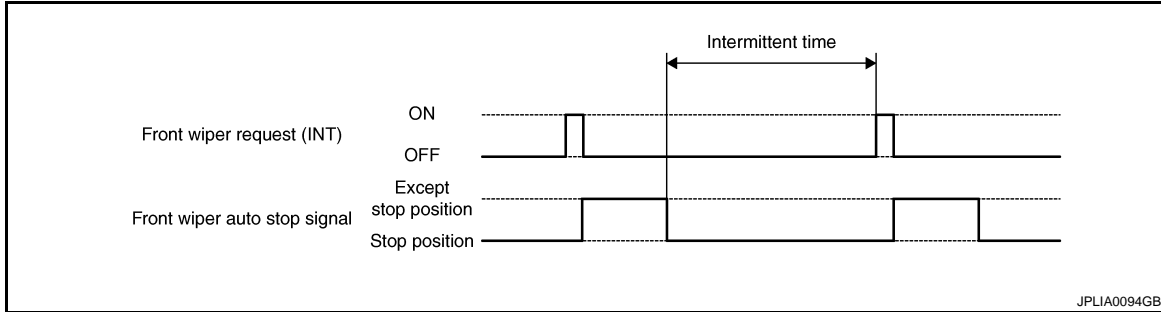

### NOTE:

Front wiper intermittent operation can be set to the operation with vehicle speed by CONSULT-III. Refer to [WW-11, "WIPER : CONSULT - III Function \(BCM - WIPER\)"](#).

Front wiper intermittent operation with vehicle speed

- BCM calculates the intermittent operation delay interval from the following
  - Vehicle speed signal (received from the combination meter with CAN communication)
  - Wiper intermittent dial position

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval (s)			
		Vehicle speed			
		Vehicle stopped or less than 5 km/h (3.1 MPH)	5 km/h (3.1MPH) or more or less than 35km/h (21.7 MPH)	35 km/h (21.7 MPH) or more or less than 65km/h (40.4 MPH)*	65 km/h (40.4MPH) or more
1	Short ↑	0.8	0.6	0.4	0.24
2		4	3	2	1.2
3		10	7.5	5	3
4		16	12	8	4.8
5		24	18	12	7.2
6	Long ↓	32	24	16	9.6
7		42	31.5	21	12.6

\*: When without vehicle speed setting


## FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper auto stop signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

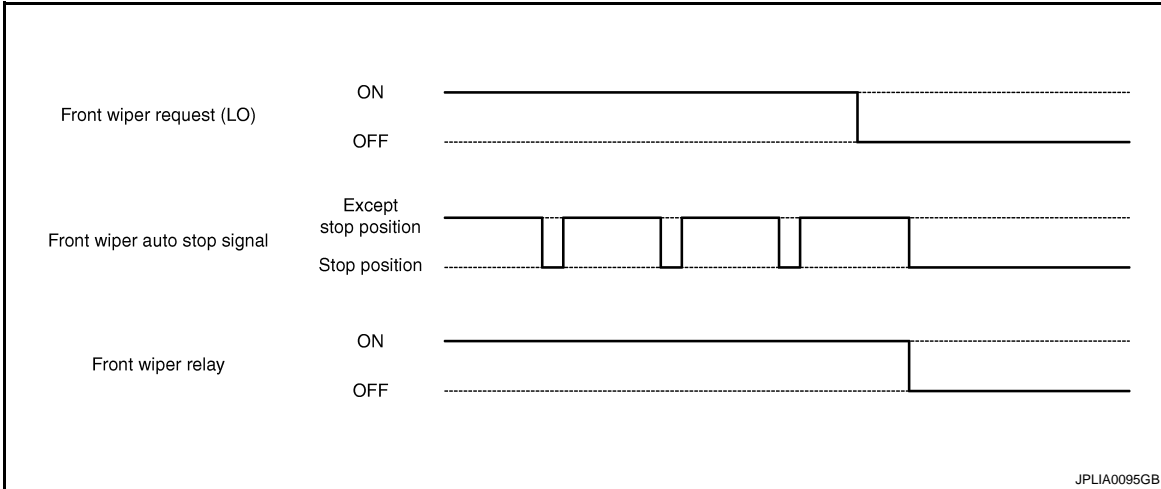

### NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch OFF.

### FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The front washer motor is grounded through the combination switch when the front washer switch is ON.

### FRONT WIPER FAIL-SAFE OPERATION

When the front wiper auto stop circuit is malfunctioning, IPDM E/R performs the fail-safe function. Refer to [PCS-30. "Fail Safe"](#).




# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003071757

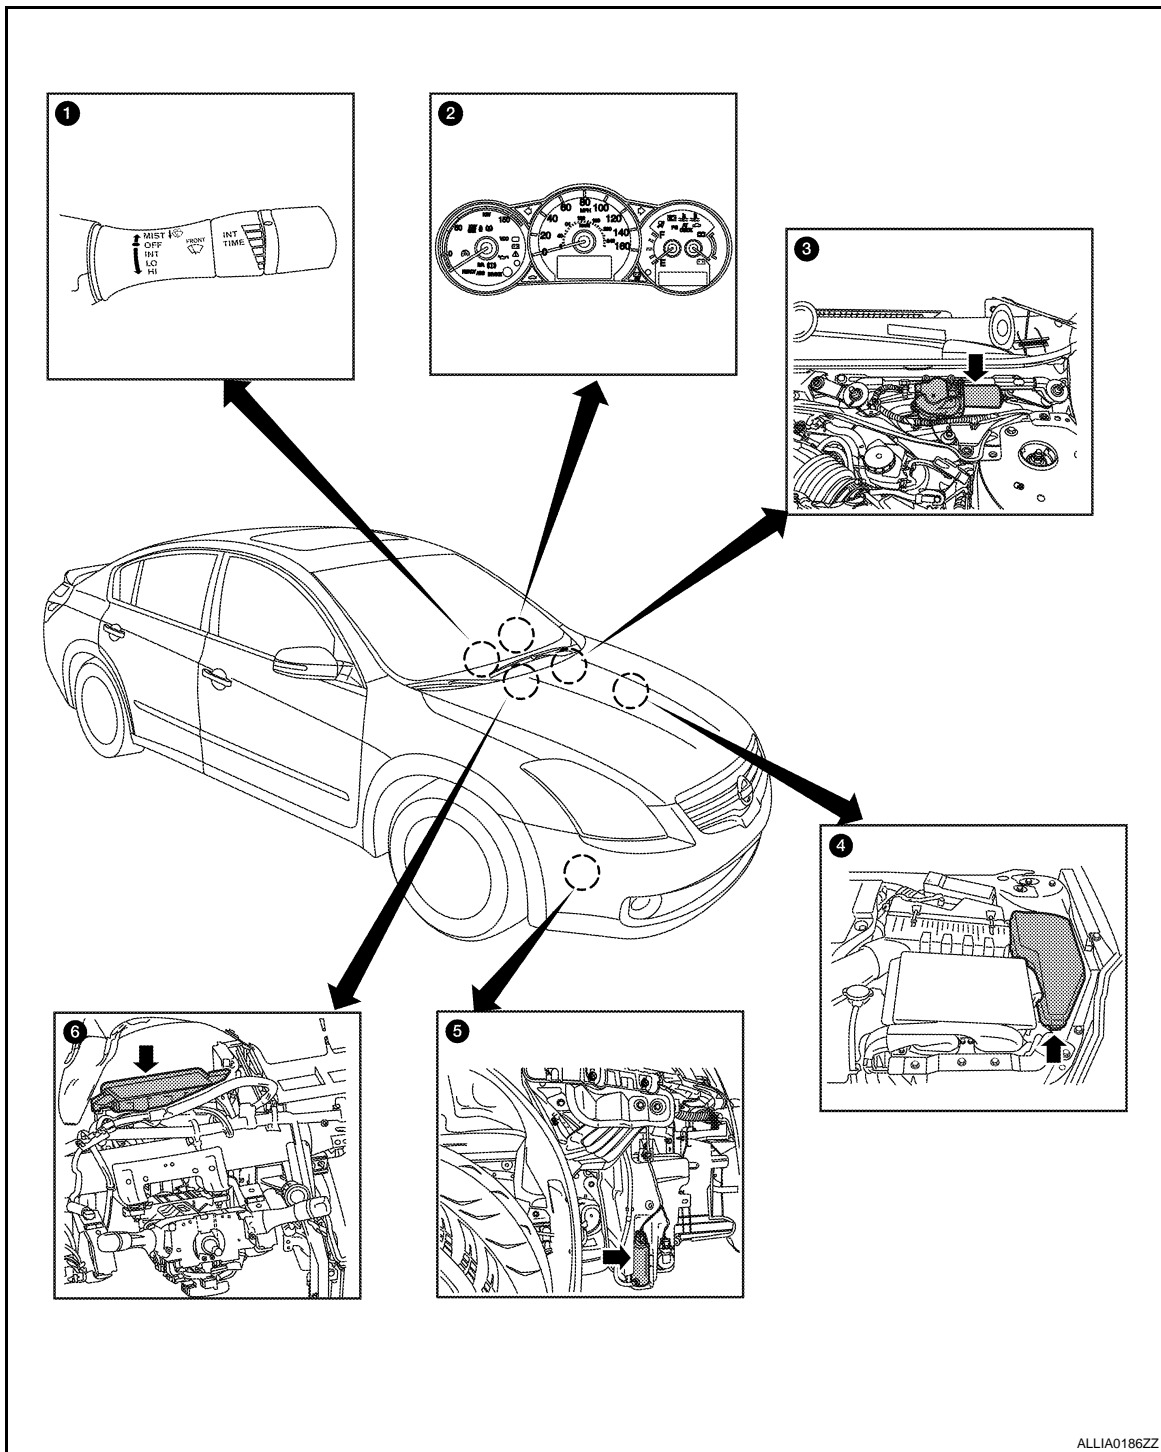

1. Combination switch M28
4. IPDM E/R E17, E18, E200

2. Combination meter M24
5. Front washer motor E226

3. Front wiper motor E25
6. BCM, B16, B17, B18, B19 (view with instrument panel removed)

ALLIA0186ZZ

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Description

INFOID:000000003071758

Part	Description
BCM	<ul style="list-style-type: none"><li>• Judges the each switch status by the combination switch reading function.</li><li>• Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.</li></ul>
IPDM E/R	<ul style="list-style-type: none"><li>• Controls the integrated relay according to the request (with CAN communication) from BCM.</li><li>• Performs the auto stop control of the front wiper.</li></ul>
Combination switch (Wiper & washer switch)	Refer to <a href="#">WW-6, "System Description"</a> .
Combination meter	Transmits the vehicle speed signal to BCM with CAN communication.

# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : Diagnosis Description

INFOID:000000003071759

#### BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	This function is not used even though it is displayed.

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
Wiper and washer	WIPER	×	×	×
Combination switch	COMB SW		×	

#### COMMON ITEM : CONSULT-III Function

INFOID:000000003071760

#### ECU IDENTIFICATION

Displays the BCM part No.

#### SELF-DIAG RESULT

Refer to [BCS-81, "DTC Index"](#).

#### WIPER

#### WIPER : CONSULT - III Function (BCM - WIPER)

INFOID:000000003071761

#### WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	ON	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	OFF*	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

\*:Factory setting

#### DATA MONITOR

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## DIAGNOSIS SYSTEM (BCM)

### < FUNCTION DIAGNOSIS >

Monitor Item [Unit]	Description
PUSH SW	Displays the status of the engine switch (push switch) judged by BCM.
VEH SPEED 1 [km/h]	Displays the value of the vehicle speed signal received from combination meter with CAN communication.
FR WIPER HI [OFF/ON]	Status of each switch judged by BCM using the combination switch reading function
FR WIPER LOW [OFF/ON]	
FR WASHER SW [OFF/ON]	
FR WIPER INT [OFF/ON]	
FR WIPER STOP [OFF/ON]	Displays the status of the front wiper auto stop signal received from IPDM E/R with CAN communication.
INT VOLUME [1 - 7]	Status of each switch judged by BCM using the combination switch reading function

### ACTIVE TEST

Test item	Operation	Description
FRONT WIPER	HI	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	LO	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	OFF	Stops transmitting the front wiper request signal to stop the front wiper operation.

# DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000003071762

#### AUTO ACTIVE TEST

Refer to [PCS-10. "Diagnosis Description"](#).

### CONSULT - III Function (IPDM E/R)

INFOID:000000003071763

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
ECU Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

#### SELF DIAGNOSTIC

Refer to [PCS-32. "DTC Index"](#).

#### DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIG- NALS	Description
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.

#### ACTIVE TEST

Test item

Test item	Operation	Description
FRONT WIPER	OFF	OFF
	LO	Operates the front wiper relay.
	HI	Operates the front wiper relay and front wiper high relay.

# WIPER AND WASHER FUSE

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### WIPER AND WASHER FUSE

#### Description

INFOID:000000003071764

#### Fuse list

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	55	30 A
Front washer motor	IPDM E/R	38	10 A

#### Diagnosis Procedure

INFOID:000000003071765

#### 1. CHECK FUSES

Check that the following fuses are not blown.

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	55	30 A
Front washer motor	IPDM E/R	38	10 A

#### Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
- NO >> The fuse is normal.

# FRONT WIPER MOTOR LO CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR LO CIRCUIT

### Component Function Check

INFOID:000000003071766

#### 1. CHECK FRONT WIPER LO OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper LO operation and OFF.

**LO** : Front wiper LO operation

**OFF** : Stop the front wiper.

#### Does the front wiper operate?

- YES >> Front wiper motor LO circuit is normal.  
 NO >> Refer to [WW-15, "Diagnosis Procedure"](#).


### Diagnosis Procedure

INFOID:000000003071767

#### 1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

##### Ⓜ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

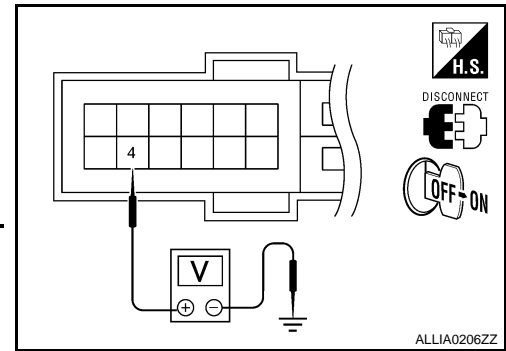


Terminals		Test item	Voltage (V) (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E18	4		
		LO	Battery voltage
		OFF	0V

#### Is the measurement normal?

- YES >> GO TO 2  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

#### 2. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R.
3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

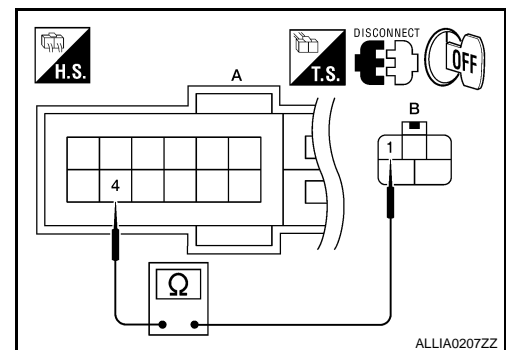

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E18 (A)	4	E25 (B)	1	Yes

#### Does continuity exist?

- YES >> GO TO 3  
 NO >> Repair or replace harness.

#### 3. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

# FRONT WIPER MOTOR LO CIRCUIT

## < COMPONENT DIAGNOSIS >


Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E18	4		No

Does continuity exist?

YES >> Repair or replace harness.

NO >> Replace front wiper motor. Refer to [WW-41, "FRONT WIPER DRIVE ASSEMBLY : Removal and Installation"](#).

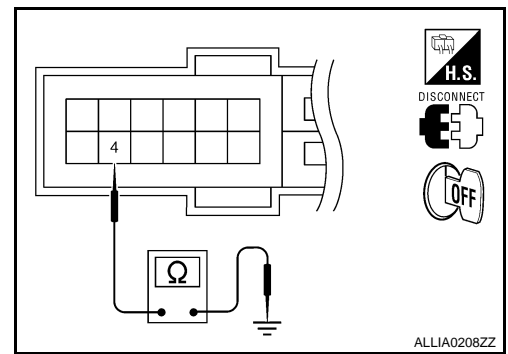



# FRONT WIPER MOTOR HI CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR HI CIRCUIT

### Component Function Check

INFOID:000000003071768

#### 1. CHECK FRONT WIPER HI OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper HI operation and OFF.

**HI** : Front wiper HI operation

**OFF** : Stop the front wiper.

#### Does the front wiper operate?

- YES >> The front wiper motor HI circuit is normal.  
 NO >> Refer to [WW-15, "Diagnosis Procedure"](#).


### Diagnosis Procedure

INFOID:000000003071769

#### 1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

##### Ⓜ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

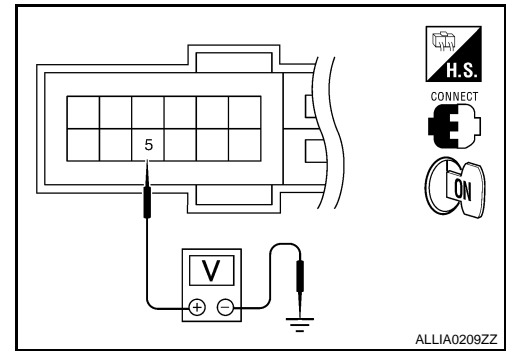


Terminals		Test item	Voltage (V) (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E18	5		
		HI	Battery voltage
		OFF	0V

#### Is the measurement normal?

- YES >> GO TO 2  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

#### 2. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R.
3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

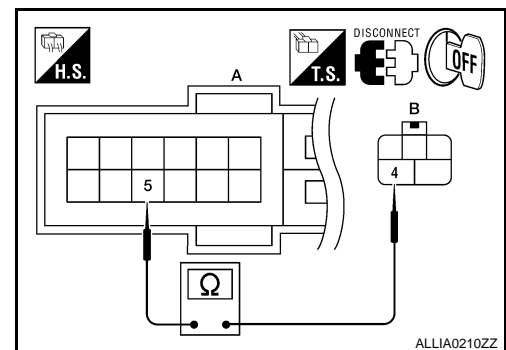

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E18 (A)	5	E25 (B)	4	Yes

#### Does continuity exist?

- YES >> GO TO 3  
 NO >> Repair or replace harness.

#### 3. CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

# FRONT WIPER MOTOR HI CIRCUIT

## < COMPONENT DIAGNOSIS >


Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E18	5		No

Does continuity exist?

YES >> Repair or replace harness.

NO >> Replace front wiper motor. Refer to [WW-41, "FRONT WIPER DRIVE ASSEMBLY : Removal and Installation"](#).

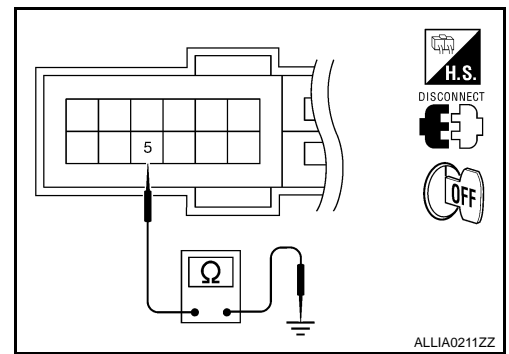

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000003071770

### 1. CHECK FRONT WIPER (AUTO STOP) OPERATION

#### CONSULT-III DATA MONITOR

1. Select "FRONT WIPER STOP" of IPDM E/R DATA MONITOR item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

Monitor item	Condition		Monitor status
FR WIPER STOP	Front wiper motor	Stop position	STOP P
		Except	ACT P

Is the status of item normal?


- YES >> Auto stop signal circuit is normal.  
 NO >> Refer to [WW-19, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003071771

### 1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Turn the ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

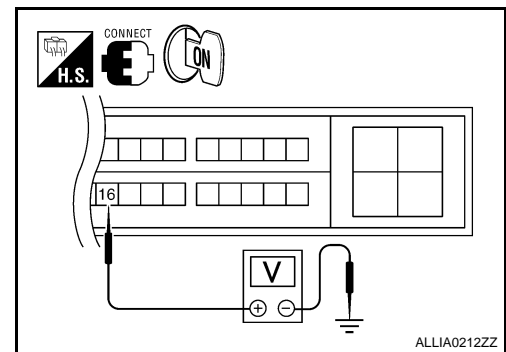


Terminals		Voltage (V) (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E18	16	
		Battery voltage

Is the measurement normal?

- YES >> GO TO 2  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

### 2. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R.
3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

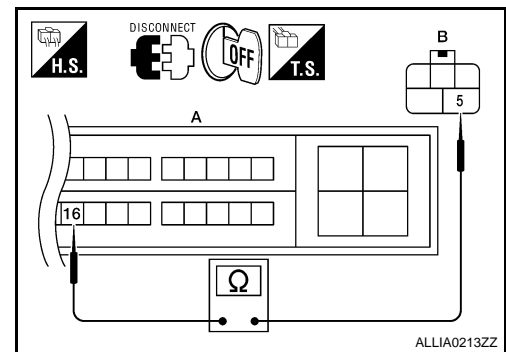

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E18 (A)	16	E25 (B)	5	Yes

Does continuity exist?

- YES >> GO TO 3  
 NO >> Repair or replace harness.

### 3. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

## < COMPONENT DIAGNOSIS >


Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E18	16		No

Does continuity exist?

YES >> Repair or replace harness.

NO >> Replace front wiper motor. Refer to [WW-41. "FRONT WIPER DRIVE ASSEMBLY : Removal and Installation"](#).

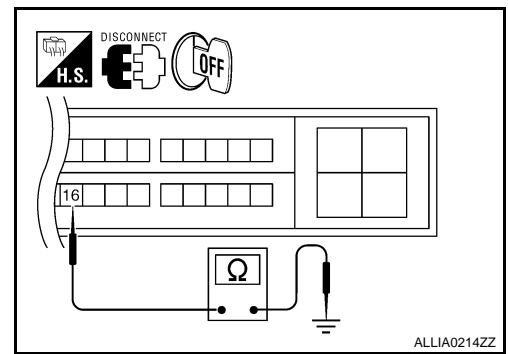

# FRONT WIPER MOTOR GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000003071772


#### 1. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		
E25	2		Yes

#### Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.  
NO >> Repair or replace harness.

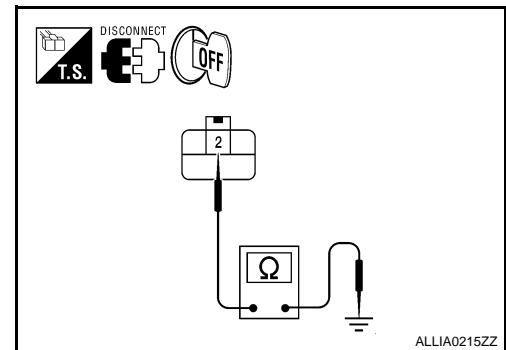

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

## FRONT WIPER AND WASHER SYSTEM

Wiring Diagram

INFOID:000000003071773

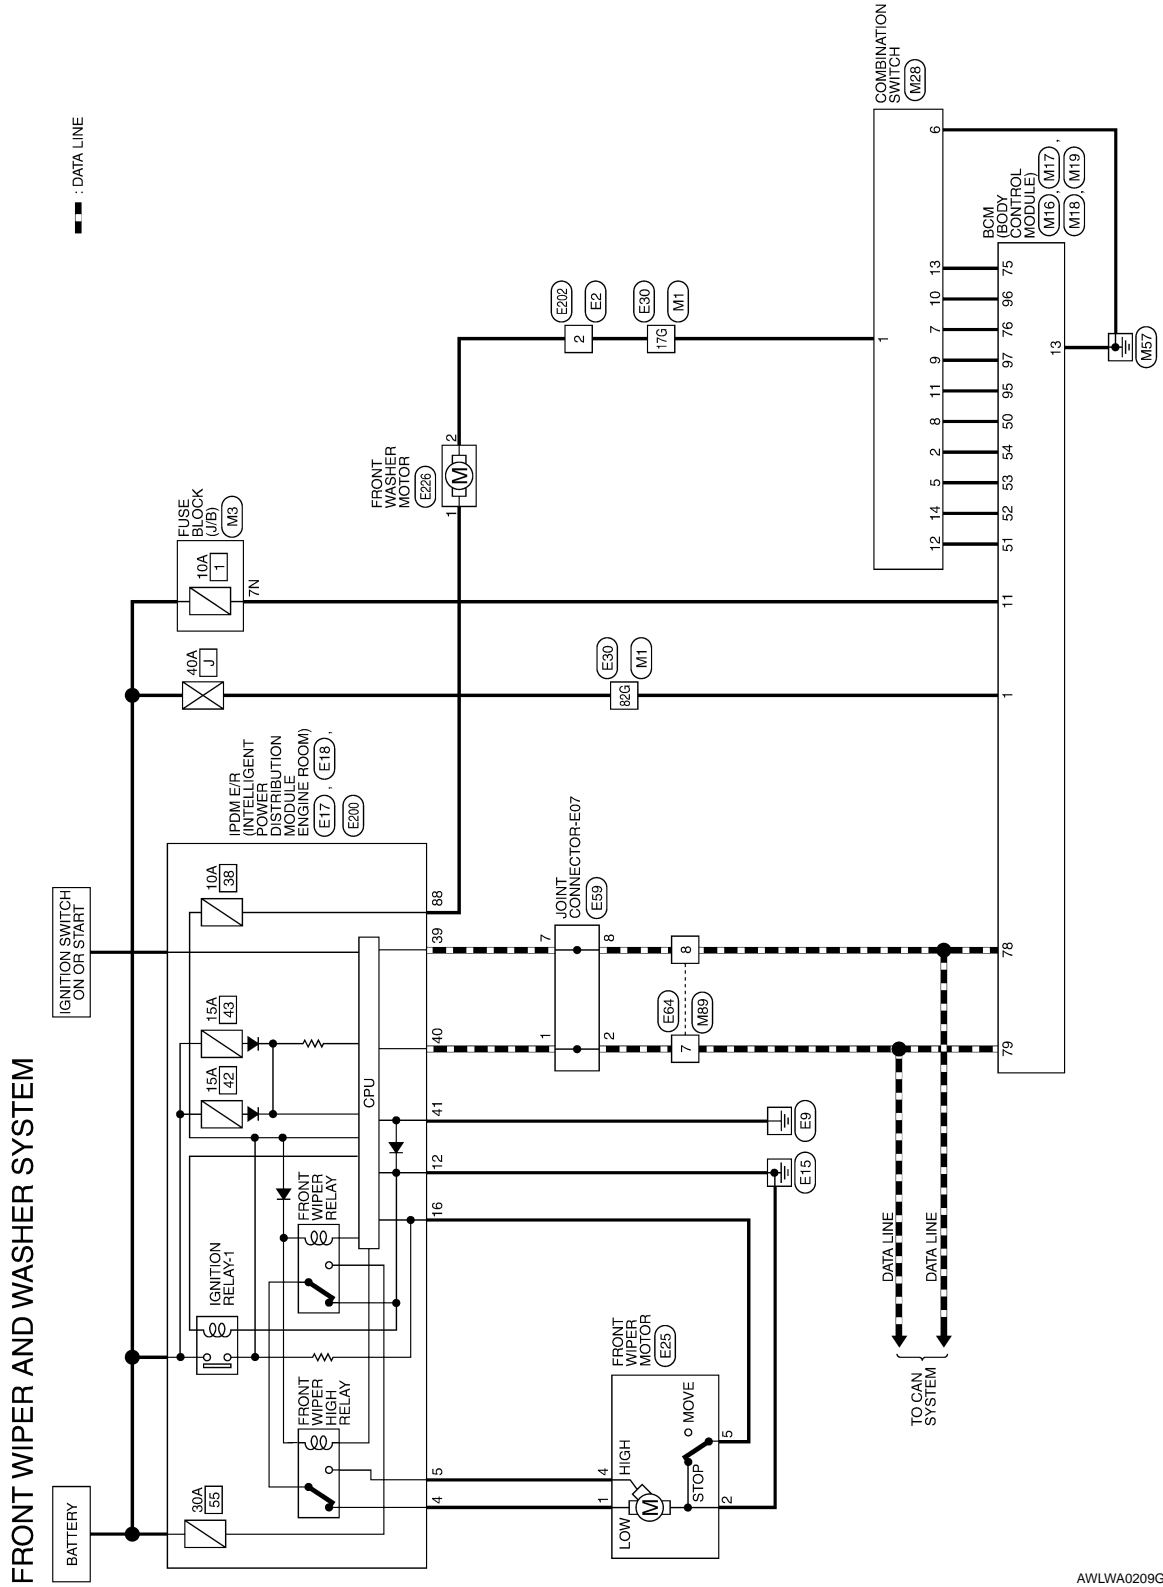


AWLWA0209Gf

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >


### FRONT WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

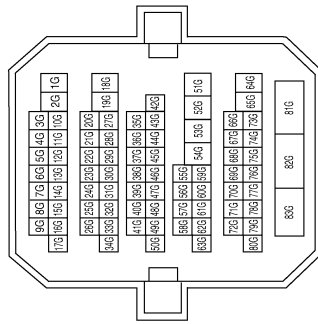

Terminal No.	Color of Wire	Signal Name
17G	R/L	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

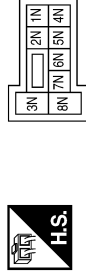

Terminal No.	Color of Wire	Signal Name
7N	Y/R	—

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

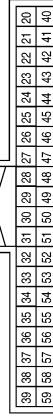

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4

AWLIA0716GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

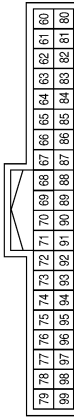


Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

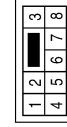


Terminal No.	Color of Wire	Signal Name
2	R/L	—

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

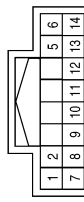

Terminal No.	Color of Wire	Signal Name
1	R/L	WASH_MTR
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
6	B	GND
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

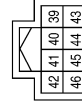


Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B/Y	S-GND

Connector No.	M89
Connector Name	WIRE TO WIRE
Connector Color	WHITE

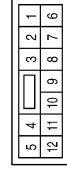

Terminal No.	Color of Wire	Signal Name
7	L	—
8	P	—

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

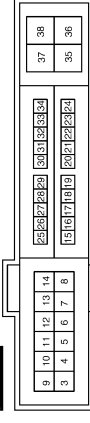


Terminal No.	Color of Wire	Signal Name
4	L/R	FR_WIPER_LO
5	L/B	FR_WIPER_HI
12	B	P-GND
16	L/Y	WIPER_AUTOSTOP



# FRONT WIPER AND WASHER SYSTEM


## < COMPONENT DIAGNOSIS >

Connector No.	E59
Connector Name	JOINT CONNECTOR-E07
Connector Color	BLUE

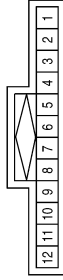

Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—
7	P	—
8	P	—

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

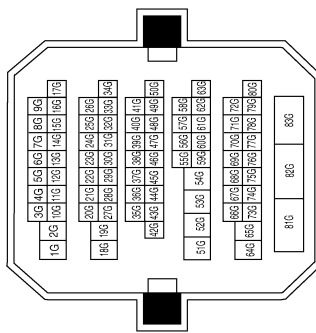


Terminal No.	Color of Wire	Signal Name
17G	R/L	—
82G	W/B	—

Connector No.	E25
Connector Name	FRONT WIPER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L/R	—
2	B/Y	—
3	—	—
4	L/B	—
5	L/Y	—

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

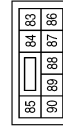

Terminal No.	Color of Wire	Signal Name
88	R/W	WASHER_MTR

Connector No.	E64
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	L	—
8	P	—

ALLIA0218GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

---

Connector No.	E226
Connector Name	FRONT WASHER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/W	—
2	R/L	—

Connector No.	E202
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/L	—

ALLIA0219GB

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

### ECU DIAGNOSIS

#### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000003304729

#### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
DOOR SW-BK	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF
CDL LOCK SW	Other than power door lock switch LOCK	OFF
	Door lock/unlock switch LOCK	ON
CDL UNLOCK SW	Other than door lock/unlock switch UNLOCK	OFF
	Door lock/unlock switch UNLOCK	ON
KEY CYL LK-SW	Other than front door LH key cylinder LOCK position	OFF
	Front door LH key cylinder LOCK position	ON
KEY CYL UN-SW	Other than front door LH key cylinder UNLOCK position	OFF
	Front door LH key cylinder UNLOCK position	ON
KEY CYL SW-TR	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
REAR DEF SW	When rear window defogger switch is pressed	ON
FAN ON SIG	When AUTO switch or fan switch is pressed	ON
AIR COND SW	When A/C switch is pressed	ON
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF
	Trunk lid opener cancel switch ON	ON
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF
	While the trunk lid opener switch is turned ON	ON
TRNK/HAT MNTR	Trunk lid closed	OFF
	Trunk lid opened	ON
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF
	When LOCK button of Intelligent Key is pressed	ON
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF
	When UNLOCK button of Intelligent Key is pressed	ON
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF
	When TRUNK OPEN button of Intelligent Key is pressed	ON
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF
	When PANIC button of Intelligent Key is pressed	ON
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF
	When UNLOCK button of Intelligent Key is pressed and held	ON
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON
OPTICAL (LIGHT) SENSOR	When outside of the vehicle is bright	Close to 5 V
	When outside of the vehicle is dark	Close to 0 V
REQ SW-DR	When front door LH request switch is not pressed	OFF
	When front door LH request switch is pressed	ON
REQ SW-AS	When front door RH request switch is not pressed	OFF
	When front door RH request switch is pressed	ON
REQ SW-BD/TR	When trunk request switch is not pressed	OFF
	When trunk request switch is pressed	ON

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
PUSH SW	When push-button ignition switch is not pressed	OFF	A
	When push-button ignition switch is pressed	ON	
IGN RLY -F/B	Ignition switch OFF or ACC	OFF	B
	Ignition switch ON	ON	
ACC RLY -F/B	Ignition switch OFF	OFF	C
	Ignition switch ACC or ON	ON	
BRAKE SW 1	When the brake pedal is not depressed	ON	
	When the brake pedal is depressed	OFF	D
DETE/CANCL SW	When selector lever is in P position	OFF	
	When selector lever is in any position other than P	ON	E
SFT PN/N SW	When selector lever is in any position other than P or N	OFF	
	When selector lever is in P or N position	ON	F
S/L -LOCK	Electronic steering column lock LOCK status	OFF	
	Electronic steering column lock UNLOCK status	ON	G
S/L -UNLOCK	Electronic steering column lock UNLOCK status	OFF	
	Electronic steering column lock LOCK status	ON	H
S/L RELAY-F/B	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	I
UNLK SEN-DR	Front door LH UNLOCK status	OFF	
	Front door LH LOCK status	ON	J
PUSH SW -IPDM	When push-button ignition switch is not pressed (IPDM E/R sends via CAN)	OFF	
	When push-button ignition switch is pressed (IPDM E/R sends via CAN)	ON	K
IGN RLY1 F/B	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	
DETE SW -IPDM	When selector lever is in P position (IPDM E/R sends via CAN)	OFF	
	When selector lever is in any position other than P (IPDM E/R sends via CAN)	ON	WW
SFT PN -IPDM	When selector lever is in any position other than P or N (IPDM E/R sends via CAN)	OFF	
	When selector lever is in P or N position (IPDM E/R sends via CAN)	ON	M
SFT P -MET	When selector lever is in any position other than P (combination meter sends via CAN)	OFF	
	When selector lever is in P position (combination meter sends via CAN)	ON	N
SFT N -MET	When selector lever is in any position other than N (combination meter sends via CAN)	OFF	
	When selector lever is in N position (combination meter sends via CAN)	ON	O
ENGINE STATE	Engine stopped	STOP	
	While the engine stalls	STALL	P
	At engine cranking	CRANK	
	Engine running	RUN	
S/L LOCK-IPDM	Electronic steering column lock LOCK status (IPDM E/R sends via CAN)	OFF	
	Electronic steering column lock UNLOCK status (IPDM E/R sends via CAN)	ON	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
S/L UNLCK-IPDM	Electronic steering column lock UNLOCK status (IPDM E/R sends via CAN)	OFF
	Electronic steering column lock LOCK status (IPDM E/R sends via CAN)	ON
S/L RELAY-REQ	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DR DOOR STATE	Front door LH LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Front door LH UNLOCK status	UNLK
AS DOOR STATE	Front door RH LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Front door RH UNLOCK status	UNLK
ID OK FLAG	Ignition switch ACC or ON	RESET
	Ignition switch OFF	SET
PRMT ENG STAT	When the hybrid system start is prohibited	RESET
	When the hybrid system start is permitted	SET
PRMT RKE STAT	<b>NOTE:</b> This item is displayed, but cannot be monitored.	RESET
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF
	When Intelligent Key is inserted into key slot	ON
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key
RKE OPE COUN2	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Operation frequency of Intelligent Key
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	When ID of front LH tire transmitter is registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	DONE
	When ID of front LH tire transmitter is not registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	YET
ID REGST FR1	When ID of front RH tire transmitter is registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	DONE
	When ID of front RH tire transmitter is not registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	YET
ID REGST RR1	When ID of rear RH tire transmitter is registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	DONE
	When ID of rear RH tire transmitter is not registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	YET
ID REGST RL1	When ID of rear LH tire transmitter is registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	DONE
	When ID of rear LH tire transmitter is not registered (refer to <a href="#">WT-6, "ID Registration Procedure"</a> )	YET

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
WARNING LAMP	Tire pressure indicator OFF	OFF
	Tire pressure indicator ON	ON

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000003304737

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
RADFAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
TAIL&CLR REQ	Lighting switch OFF		OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		ON
HL LO REQ	Lighting switch OFF		OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)		ON
HL HI REQ	Lighting switch OFF		OFF
	Lighting switch HI		ON
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	OFF
		<ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime light activated (Canada only)</li> </ul>	ON
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	LOW
		Front wiper switch HI	HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	OFF
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		OFF
	Ignition switch ON		ON
IGN RLY	Ignition switch OFF or ACC		OFF
	Ignition switch ON		ON
PUSH SW	Release the push-button ignition switch		OFF
	Press the push-button ignition switch		ON
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> <li>• Press the selector button with CVT selector lever in P position</li> <li>• CVT selector lever in any position other than P</li> </ul>	OFF
		Release the CVT selector button with CVT selector lever in P position	
S/L RLY -REQ	None of the conditions below are present		OFF
	<ul style="list-style-type: none"> <li>• Open the front door LH after the ignition switch is turned OFF (for a few seconds)</li> <li>• Press the push-button ignition switch when the steering lock is activated</li> </ul>		ON



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
S/L STATE	Steering lock is activated	LOCK
	Steering lock is deactivated	UNLK
	[DTC B210A] is detected	UNKWN
DTRL REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF
OIL P SW	Ignition switch OFF, ACC or engine running	OPEN
	Ignition switch ON	CLOSE
THFT HRN REQ	Not operated	OFF
	<ul style="list-style-type: none"> <li>• Panic alarm is activated</li> <li>• Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>	ON
HORN CHIRP	Not operated	OFF
	Door locking with Intelligent Key (horn chirp mode)	ON
CRNRNG LMP REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored.	OFF

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### FRONT WIPER AND WASHER SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000003071776

**CAUTION:**

Perform the self-diagnosis with CONSULT-III before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

Symptom	Probable malfunction location	Inspection item	
Front wiper does not operate	HI only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (HI) circuit Refer to <a href="#">WW-17, "Component Function Check"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
	LO and INT	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (LO) circuit Refer to <a href="#">WW-15, "Component Function Check"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
	INT only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
	HI, LO, and INT	SYMPTOM DIAGNOSIS Refer to <a href="#">WW-36, "Diagnosis Procedure"</a> .	

# FRONT WIPER AND WASHER SYSTEM SYMPTOMS

## < SYMPTOM DIAGNOSIS >

Symptom	Probable malfunction location	Inspection item	
Front wiper does not stop	HI only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
		IPDM E/R	—
	LO only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
		IPDM E/R	—
	INT only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>BCM</li> </ul>	Combination switch refer to <a href="#">BCS-8, "System Description"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R Data monitor "FR WIP REQ"
	Front wiper does not operate normally	Intermittent adjustment cannot be performed	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>
BCM			—
Intermittent control linked with vehicle speed cannot be performed		Check the vehicle speed detection wiper setting. Refer to <a href="#">WW-11, "WIPER : CONSULT - III Function (BCM - WIPER)"</a> .	
Wiper is not linked to the washer operation		<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-8, "System Description"</a> .
		BCM	—
Does not return to stop position (Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation.)	<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper auto stop signal circuit Refer to <a href="#">WW-19, "Component Function Check"</a> .	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT WIPER DOES NOT OPERATE

### Description

INFOID:000000003071777

The front wiper does not operate under any operation conditions

### Diagnosis Procedure

INFOID:000000003071778

#### 1. CHECK WIPER RELAY OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/HI operation.

##### Ⓟ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper LO/HI operation and OFF.

**LO** : Front wiper LO operation

**HI** : Front wiper HI operation

**OFF** : Stop the front wiper.

Does the front wiper operate?

YES >> GO TO 5

NO >> GO TO 2

#### 2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the front wiper motor fuse 30A (No. 55, located in the IPDM E/R) is not blown.

Is the fuse blown?

YES >> Replace the fuse after repairing the affected circuit.

NO >> GO TO 3

#### 3. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		
E25	2		Yes

Does continuity exist?


YES >> GO TO 4

NO >> Repair or replace harness.


#### 4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

##### Ⓟ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

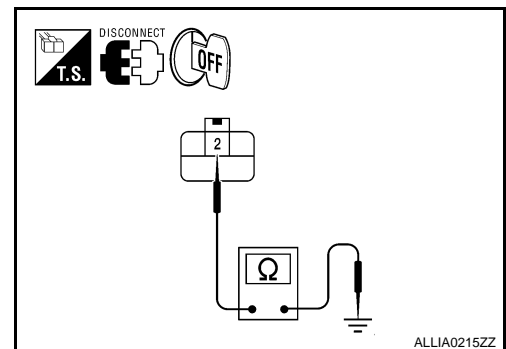

ALLIA0215ZZ

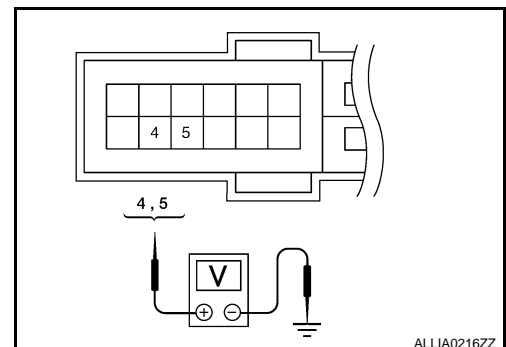

ALLIA0216ZZ

# FRONT WIPER DOES NOT OPERATE

## < SYMPTOM DIAGNOSIS >

Terminals		Test item	Voltage (V) (Approx.)		
(+)	(-)				
IPDM E/R		FRONT WIPER			
Connector	Terminal				
E18	4			LO	Battery voltage
	5			OFF	0 V
Ground		HI	Battery voltage		
		OFF	0 V		

Is the measurement normal?

- YES >> Replace front wiper motor. Refer to [WW-41, "FRONT WIPER DRIVE ASSEMBLY : Removal and Installation"](#).
- NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

### 5. CHECK FRONT WIPER REQUEST SIGNAL INPUT

 CONSULT-III DATA MONITOR

- Select "FR WIP REQ" of IPDM E/R "DATA MONITOR" item.
- Switch the front wiper switch to HI and LO.
- With operating the front wiper switch, check the monitor status.

Monitor item	With operating the front wiper switch condition		Monitor status
FR WIPER REQ	Front wiper switch HI	ON	HI
		OFF	STOP
	Front wiper switch LO	ON	LOW
		OFF	STOP

Is the status of item normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
- NO >> GO TO 6

### 6. CHECK COMBINATION SWITCH

- Perform the inspection of the combination switch. Refer to [BCS-8, "System Description"](#).

Is combination switch normal?

- YES >> Replace BCM. Refer to [BCS-85, "Removal and Installation"](#).
- NO >> Repair or replace the malfunctioning parts.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

### NORMAL OPERATING CONDITION

#### Description

INFOID:000000003071779

#### FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Supplemental Restraint System (SRS) AIR BAG and SEAT BELT PRE-TENSIONER

INFOID:000000003071780

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### FRONT WIPER

Exploded View

INFOID:000000003071784

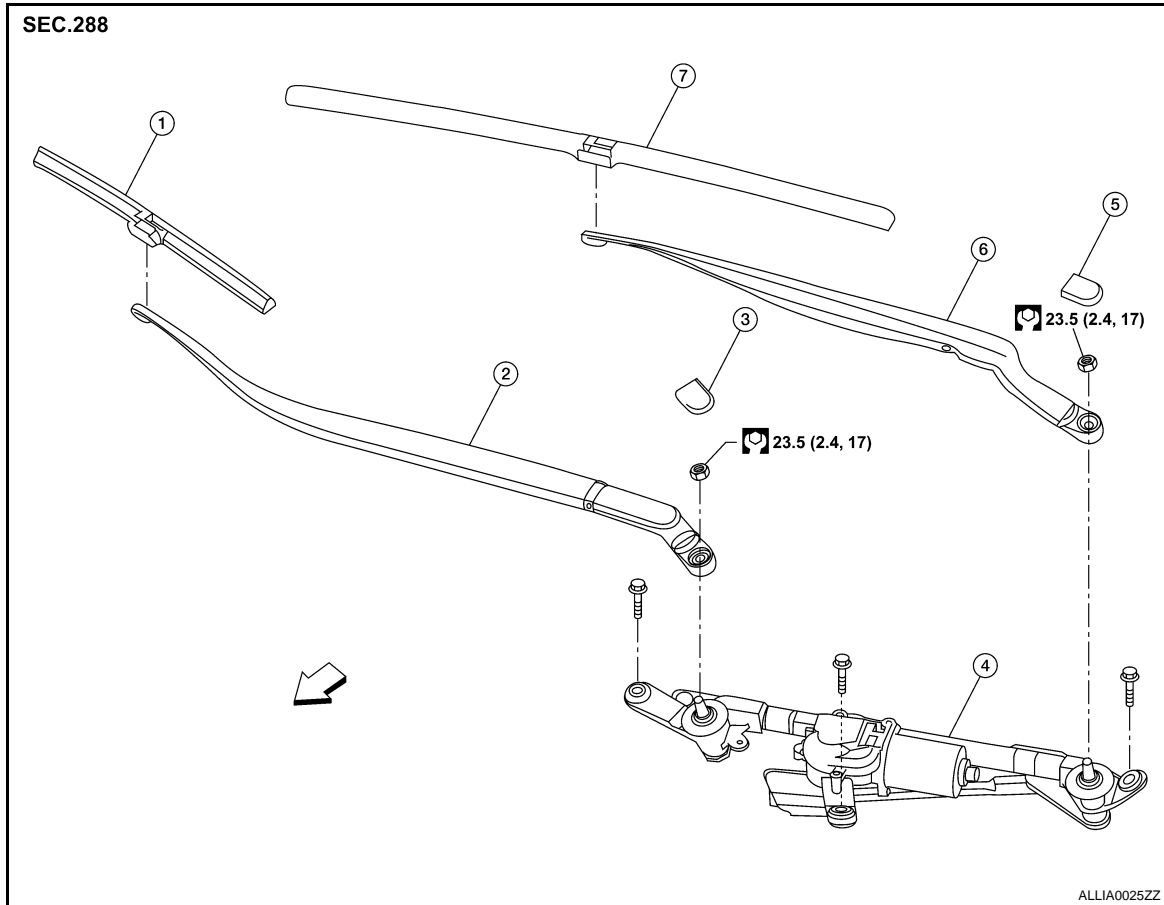

- |                               |                       |                       |
|-------------------------------|-----------------------|-----------------------|
| 1. Front RH wiper blade       | 2. Front RH wiper arm | 3. Wiper arm cap      |
| 4. Front wiper drive assembly | 5. Wiper arm cap      | 6. Front LH wiper arm |
| 7. Front LH wiper blade       | ← Front               |                       |

## FRONT WIPER ARMS

### FRONT WIPER ARMS : Removal and Installation

INFOID:000000003071785

#### REMOVAL

1. Turn wiper switch ON to operate wiper motor, and then turn wiper switch OFF (auto stop).
2. Open hood, remove arm caps, and remove wiper arm nuts.
3. Raise wiper arm, and remove wiper arm from the vehicle.


#### INSTALLATION




# FRONT WIPER

## < ON-VEHICLE REPAIR >

1. Clean up the pivot area as shown in the figure. This will reduce possibility of wiper arm looseness.

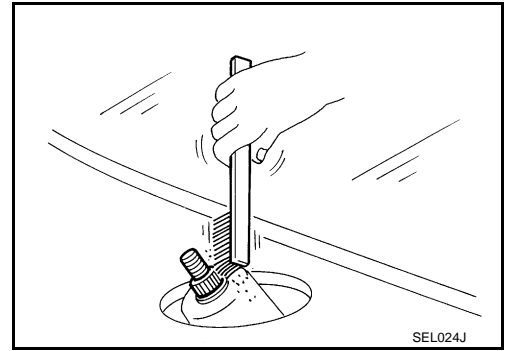

2. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (auto stop).
3. Push wiper arm onto pivot shaft, paying attention to blind spline.
4. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "A", "B", "C" and "D" immediately before temporarily tightening the wiper arm nuts.
5. Spray washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
6. Make sure that wiper blades stop within clearance "A", "B", "C" and "D".

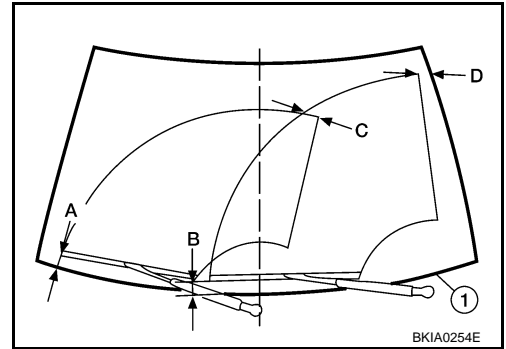

Clearance "A"	: 41.3 ± 7.5 mm (1.626 ± 0.295 in)
Clearance "B"	: 65.5 ± 7.5 mm (2.579 ± 0.295 in)
Clearance "C"	: 27.8 mm (1.094 in)
Clearance "D"	: 53.7 mm (2.114 in)

7. Tighten wiper arm nuts to specification. Refer to [WW-40, "Exploded View"](#).
8. Attach wiper arm caps.

## ADJUSTMENT

To adjust the wiper arm stop location, the wiper arm must be removed and installed. Refer to [WW-40, "FRONT WIPER ARMS : Removal and Installation"](#).

## FRONT WIPER DRIVE ASSEMBLY


### FRONT WIPER DRIVE ASSEMBLY : Removal and Installation

INFOID:000000003071786

WW

#### REMOVAL

1. Operate front wiper motor, and stop at the auto stop position.
2. Remove wiper arms. Refer to [WW-40, "FRONT WIPER ARMS : Removal and Installation"](#).
3. Remove the cowl top cover. Refer to [EXT-17, "Removal and Installation"](#).
4. Remove the strut brace bolts (A), detach the wiper drive assembly harness clips, then remove the strut brace (1).

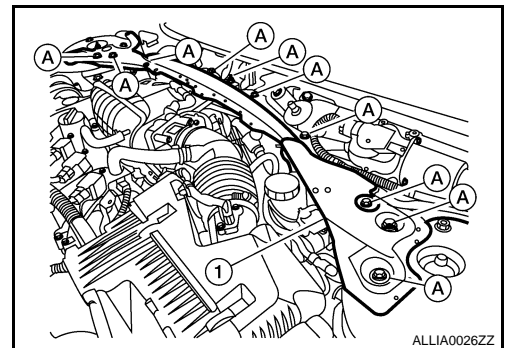


5. Detach the wiper drive harness clip from the wiper drive assembly frame.

## FRONT WIPER

### < ON-VEHICLE REPAIR >

6. Remove the front wiper drive assembly bolts (A), disconnect the wiper drive motor connector and remove the front wiper drive assembly (1).

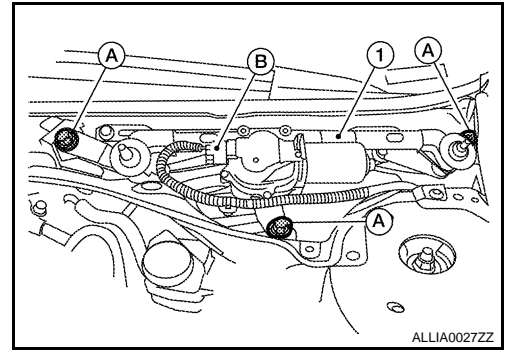

### INSTALLATION

1. Install the front wiper drive assembly.
2. Connect wiper motor connector. Turn wiper switch ON to operate wiper motor, then turn wiper switch OFF (auto stop).
3. Attach the wiper drive harness clip to the wiper drive assembly frame.
4. Install the strut brace, then attach the wiper drive assembly harness clips.
5. Install the cowl top cover. Refer to [EXT-17, "Removal and Installation"](#).
6. Attach the wiper arms. Refer to [WW-40, "FRONT WIPER ARMS : Removal and Installation"](#).
7. Adjustment of wiper arm stop location. Refer to [WW-40, "FRONT WIPER ARMS : Removal and Installation"](#).

# FRONT WASHER


< ON-VEHICLE REPAIR >

## FRONT WASHER

### WASHER TUBE

#### WASHER TUBE : Layout

INFOID:000000003071787

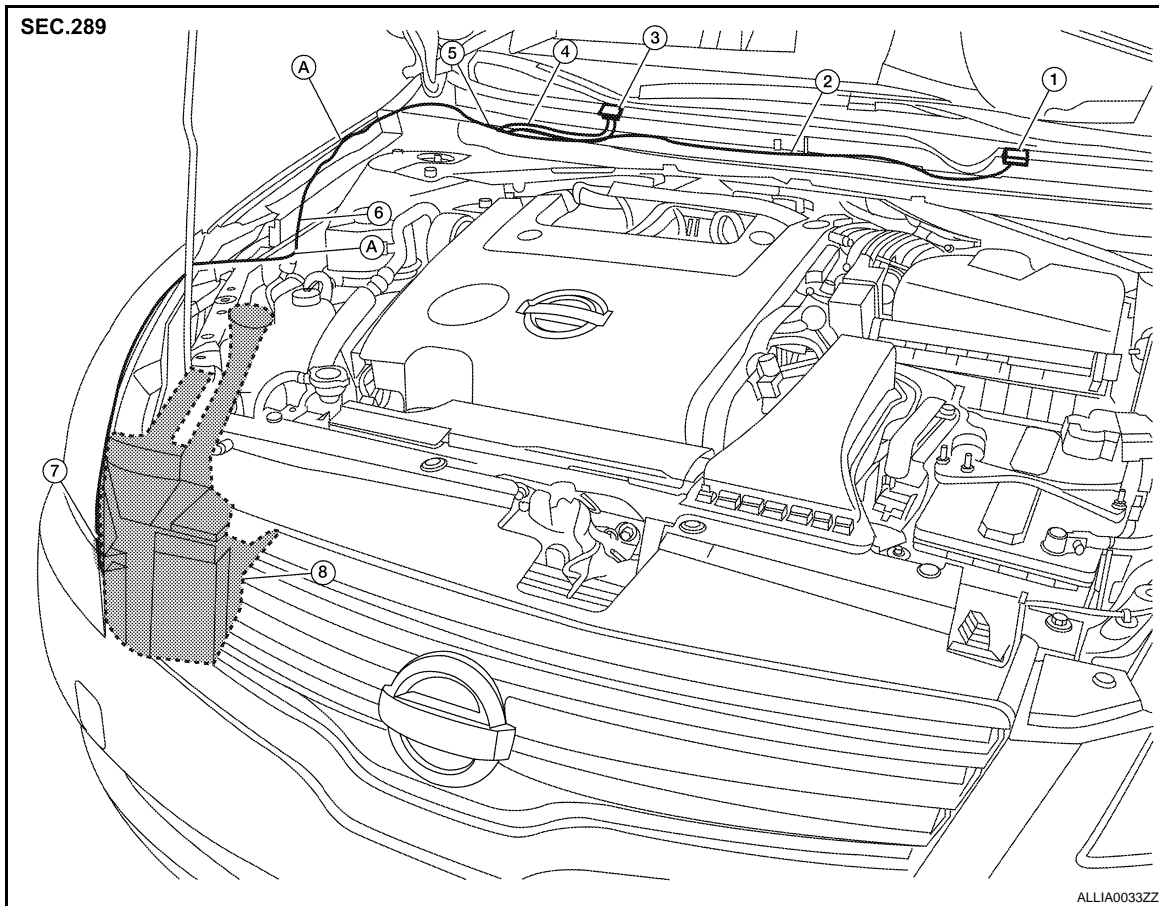

- |                          |                          |                     |
|--------------------------|--------------------------|---------------------|
| 1. Washer nozzle LH      | 2. Washer nozzle hose LH | 3. Washer nozzle RH |
| 4. Washer nozzle hose RH | 5. Y-tube connector      | 6. Clip             |
| 7. Washer tank hose      | 8. Washer tank           | A. Tube connectors  |


## FRONT WASHER NOZZLE

### FRONT WASHER NOZZLE : Removal and Installation

INFOID:000000003071788

#### REMOVAL

1. Remove the cowl top cover Refer to [EXT-17, "Removal and Installation"](#).
2. Push washer nozzle tab (A), to release from the cowl top cover, then disconnect the washer nozzle hose (2).
  - Washer nozzle (1)

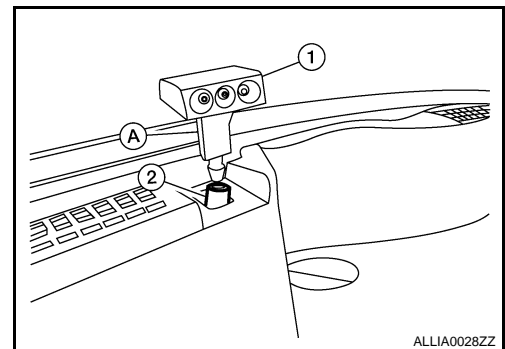

#### INSTALLATION

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

# FRONT WASHER

## < ON-VEHICLE REPAIR >

1. Installation is in the reverse order of removal.
2. Adjust nozzle spray location. Refer to [WW-44, "FRONT WASHER NOZZLE : Adjustment"](#).


## FRONT WASHER NOZZLE : Adjustment

INFOID:000000003071789

Adjust spray positions to match the dimensions as shown.

Unit: mm (in)

Spray area	Dimension
A	Vertical center line
B	545 (21.46)
C	Black matte area
D	260 (10.24)
E	18 (0.71)
F	83 (3.27)
G	323 (12.72)
H	33 (1.30)
I	275 (10.83)
J	Spray target zone
K	490 (19.29)

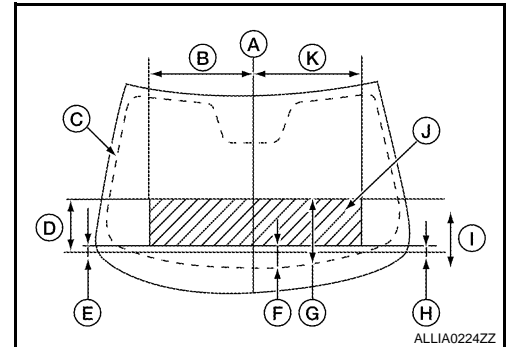

ALLIA0224ZZ

Insert a needle or suitable tool into the nozzle hole and move up/down and left/right to adjust the spray position.


## WASHER TANK

### WASHER TANK : Removal and Installation

INFOID:000000003071790


#### REMOVAL

1. Remove the washer tank filler tube (1).

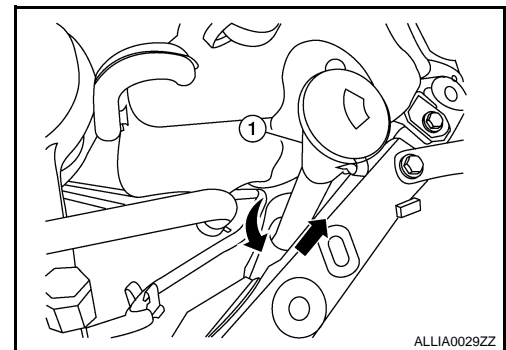

ALLIA0029ZZ

2. Remove engine under cover.
3. Position the RH fender protector back. Refer to [EXT-18, "Removal and Installation"](#).
4. Disconnect the washer pump and washer fluid level sensor connectors (C), then detach the connector harness clip (B).
5. Remove the washer tank nuts (A), disconnect the washer pump hose and remove the washer tank (1).

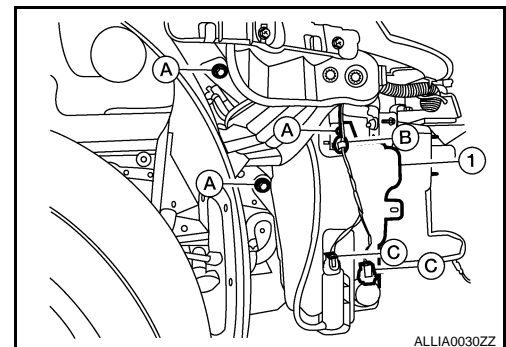

ALLIA0030ZZ

#### INSTALLATION

Installation is in the reverse order of removal.

# FRONT WASHER

< ON-VEHICLE REPAIR >

---

**CAUTION:**

After installation, add water up to the upper level of washer tank inlet, and check for water leaks.

## FRONT WASHER PUMP

### FRONT WASHER PUMP : Removal and Installation

INFOID:000000003071791

Front washer pump is not available separately, it is part of the washer tank. Refer to [WW-44. "WASHER TANK : Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SWITCH

< ON-VEHICLE REPAIR >

---

## FRONT WIPER AND WASHER SWITCH

### Removal and Installation

INFOID:000000003071792

#### **NOTE:**

The wiper washer switch is part of the combination switch assembly.

#### REMOVAL

1. Remove the spiral cable. Refer to [SRS-6, "Removal and Installation"](#).
2. Disconnect the combination switch connector and remove the combination switch assembly.

#### INSTALLATION

Installation is in the reverse order of removal.