

A  
B  
C  
D

# WT

## SECTION

### ROAD WHEELS & TIRES

## CONTENTS

WT

<p><b>PREPARATION</b> ..... 3</p> <p style="padding-left: 20px;">Special Service Tools ..... 3</p> <p style="padding-left: 20px;">Commercial Service Tools ..... 3</p> <p><b>NOISE, VIBRATION AND HARSHNESS (NVH)</b></p> <p><b>TROUBLESHOOTING</b> ..... 4</p> <p style="padding-left: 20px;">NVH Troubleshooting Chart ..... 4</p> <p><b>ROAD WHEEL</b> ..... 5</p> <p style="padding-left: 20px;">Inspection ..... 5</p> <p style="padding-left: 40px;">ALUMINUM WHEEL ..... 5</p> <p style="padding-left: 40px;">STEEL WHEEL ..... 5</p> <p><b>ROAD WHEEL TIRE ASSEMBLY</b> ..... 6</p> <p style="padding-left: 20px;">Balancing Wheels (Bonding Weight Type) ..... 6</p> <p style="padding-left: 20px;">REMOVAL ..... 6</p> <p style="padding-left: 20px;">WHEEL BALANCE ADJUSTMENT ..... 6</p> <p style="padding-left: 20px;">Tire Rotation ..... 7</p> <p><b>LOW TIRE PRESSURE WARNING SYSTEM</b> ..... 8</p> <p style="padding-left: 20px;">System Components ..... 8</p> <p style="padding-left: 20px;">System Description ..... 8</p> <p style="padding-left: 40px;">TRANSMITTER ..... 8</p> <p style="padding-left: 40px;">LOW TIRE PRESSURE WARNING CONTROL UNIT ..... 8</p> <p style="padding-left: 40px;">ANTENNA ..... 9</p> <p style="padding-left: 40px;">DISPLAY UNIT ..... 9</p> <p><b>CAN COMMUNICATION</b> ..... 10</p> <p style="padding-left: 20px;">System Description ..... 10</p> <p style="padding-left: 20px;">CAN Communication Unit ..... 10</p> <p style="padding-left: 40px;">TYPE 1/TYPE2 ..... 10</p> <p style="padding-left: 40px;">TYPE 3 ..... 13</p> <p style="padding-left: 40px;">TYPE 4/TYPE5 ..... 17</p> <p style="padding-left: 40px;">TYPE 6 ..... 20</p> <p><b>TROUBLE DIAGNOSES</b> ..... 24</p> <p style="padding-left: 20px;">Schematic ..... 24</p> <p style="padding-left: 20px;">Wiring Diagram ..... 25</p> <p style="padding-left: 20px;">Control Unit Input/Output Signal Standard ..... 28</p> <p style="padding-left: 20px;">ID Registration Procedure ..... 28</p> <p style="padding-left: 40px;">ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL ..... 28</p> <p style="padding-left: 40px;">ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL ..... 29</p> <p style="padding-left: 20px;">Transmitter Wake Up Operation ..... 30</p>	<p style="padding-left: 20px;">WITH TRANSMITTER ACTIVATION TOOL ..... 30</p> <p style="padding-left: 20px;">Self-Diagnosis ..... 31</p> <p style="padding-left: 40px;">DESCRIPTION ..... 31</p> <p style="padding-left: 40px;">FUNCTION ..... 31</p> <p style="padding-left: 40px;">CONSULT-II ..... 31</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis for Quick and Accurate Repair ..... 33</p> <p style="padding-left: 40px;">INTRODUCTION ..... 33</p> <p style="padding-left: 40px;">WORK FLOW ..... 33</p> <p style="padding-left: 20px;">Preliminary Check ..... 34</p> <p style="padding-left: 20px;">Malfunction Code/Symptom Chart ..... 35</p> <p><b>TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS</b> ..... 36</p> <p style="padding-left: 20px;">Inspection 1: Transmitter or Low Tire Pressure Warning Control Unit ..... 36</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 21, 22, 23 OR 24 ... 36</p> <p style="padding-left: 20px;">Inspection 2: Transmitter - 1 ..... 36</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48 ..... 36</p> <p style="padding-left: 20px;">Inspection 3: Transmitter - 2 ..... 37</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 35, 36, 37 OR 38 ... 37</p> <p style="padding-left: 20px;">Inspection 4: Vehicle Speed Signal ..... 38</p> <p style="padding-left: 40px;">MALFUNCTION CODE NO. 52 ..... 38</p> <p><b>TROUBLE DIAGNOSIS FOR SYMPTOMS</b> ..... 39</p> <p style="padding-left: 20px;">Inspection 1: Warning Lamp Does Not Come On When Ignition Switch Is Turned On. .... 39</p> <p style="padding-left: 20px;">Inspection 2: Warning Lamp Stays On When Ignition Switch Is Turned On. .... 40</p> <p style="padding-left: 20px;">Inspection 3: Warning Lamp Blinks When Ignition Switch Is Turned On. .... 42</p> <p style="padding-left: 20px;">Inspection 4: Hazard Warning Lamp Blinks When Ignition Switch Is Turned On. .... 43</p> <p style="padding-left: 20px;">Inspection 5: "TIRE PRESSURE" Information In Display Unit Does Not Exist. .... 44</p> <p style="padding-left: 20px;">Inspection 6: ID Registration Cannot Be Completed... 44</p> <p><b>REMOVAL AND INSTALLATION</b> ..... 45</p> <p style="padding-left: 20px;">Transmitter ..... 45</p> <p style="padding-left: 40px;">REMOVAL ..... 45</p> <p style="padding-left: 40px;">INSTALLATION ..... 45</p> <p><b>SERVICE DATA</b> ..... 47</p>	<p>F</p> <p>G</p> <p>H</p> <p>I</p> <p>J</p> <p>K</p> <p>L</p> <p>M</p>
---	--	---

---

Road Wheel ..... 47

Tire ..... 47

Tightening Torque ..... 47

# PREPARATION


## PREPARATION

PFP:00002

### Special Service Tools

AES000JI


The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

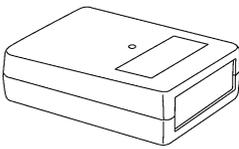Tool number (Kent-Moore No.) Tool name	Description
(J45295) Transmitter activation tool  SEIA0051E	ID registration

A  
B  
C  
D  
WT

### Commercial Service Tools

AES000JJ

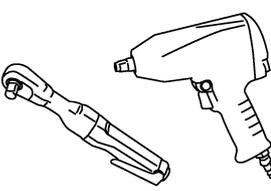Tool name	Description
Power tool  PBIC0190E	Removing wheel nuts

F  
G  
H  
I  
J  
K  
L  
M

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

PFP:00003

### NVH Troubleshooting Chart

AES000JK

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible cause and SUSPECTED PARTS														Reference page				
		Improper installation, looseness	Out-of-round	Imbalance	Incorrect tire pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	PROPELLER SHAFT	DIFFERENTIAL	FRONT AXLE AND FRONT SUSPENSION	REAR AXLE AND REAR SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING		
Noise	TIRES	Noise	x	x	x	x	x	x	x		x	x	x	x		x	x	x	x	FAX-4, FSU-6
		Shake	x	x	x	x	x	x		x	x		x	x		x	x	x	x	WT-5
		Vibration				x				x	x		x	x			x			—
		Shimmy	x	x	x	x	x	x	x	x		x	x		x		x		x	—
	Judder	x	x	x	x	x	x		x		x	x		x		x		x	—	
	Poor quality ride or handling	x	x	x	x	x	x		x		x	x		x						—
	ROAD WHEEL	Noise	x	x	x			x			x	x	x	x	x		x	x	x	—
		Shake	x	x	x			x			x		x	x	x		x	x	x	—
Shimmy, Judder		x	x	x			x					x	x	x			x	x	—	
Poor quality ride or handling		x	x	x			x					x	x	x					—	
																			NVH in PR section	
																			NVH in RFD section	
																			NVH in FAX and FSU section	
																			NVH in RAX and RSU section	
																			Refer to TIRES in this chart.	
																			Refer to ROAD WHEEL in this chart.	
																			NVH in FAX, RAX section	
																			NVH in BR section	
																			NVH in PS section	

x: Applicable

# ROAD WHEEL

## ROAD WHEEL

PFP:40300

### Inspection


#### ALUMINUM WHEEL

AES000OP

1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
  - a. Remove tire from aluminum wheel and mount on a tire balance machine.
  - b. Set dial indicator as shown in the illustration.

**Wheel runout (Dial indicator value):**

**Refer to [WT-47, "SERVICE DATA"](#)**

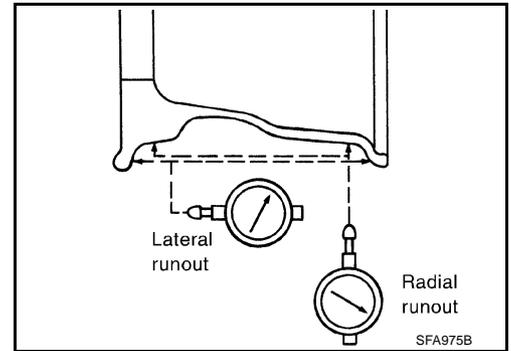

#### STEEL WHEEL


1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
  - a. Remove tire from steel wheel and mount wheel on a tire balance machine.
  - b. Set two dial indicators as shown in the illustration.
  - c. Set each dial indicator to 0.
  - d. Rotate wheel and check dial indicators at several points around the circumference of the wheel.
  - e. Calculate runout at each point as shown below.

$$\text{Radial runout} = (A + B)/2$$

$$\text{Lateral runout} = (C + D)/2$$

- f. Select maximum positive runout value and the maximum negative value. Add the two values to determine total runout. In case a positive or negative value is not available, use the maximum value (negative or positive) for total runout. If the total runout value exceeds the limit, replace steel wheel.

**Wheel runout : Refer to [WT-47, "SERVICE DATA"](#)**

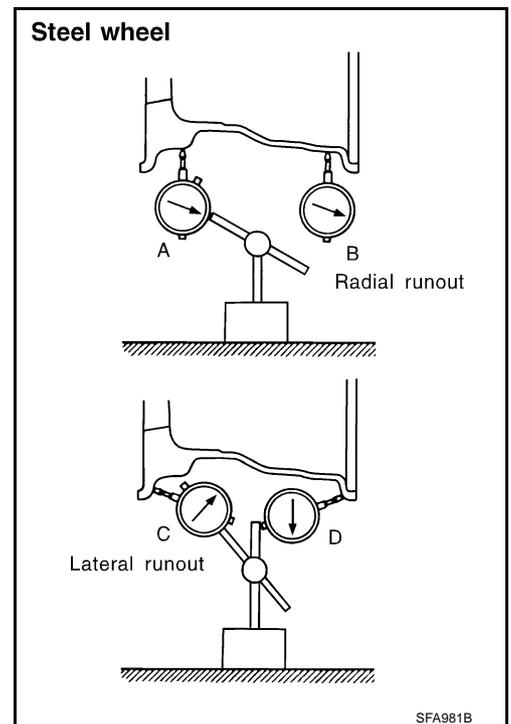

A

B

C

D

WT

F

G

H

I

J

K

L

M

# ROAD WHEEL TIRE ASSEMBLY

## ROAD WHEEL TIRE ASSEMBLY

PFP:40300

### Balancing Wheels (Bonding Weight Type) REMOVAL

AES000JM

1. Remove inner and outer balance weights from the road wheel.

**CAUTION:**

**Be careful not to scratch the road wheel during removal.**

2. Using releasing agent, remove double-faced adhesive tape from the road wheel.

**CAUTION:**

- **Be careful not to scratch the road wheel during removal.**
- **After removing double-faced adhesive tape, wipe clean traces of releasing agent from the road wheel.**

### WHEEL BALANCE ADJUSTMENT

- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for road wheels.

1. Set road wheel on wheel balancer using the center hole as a guide. Start the tire balance machine.
2. When inner and outer unbalance values are shown on the wheel balancer indicator, multiply outer unbalance value by  $5/3$  to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value above and install it to the designated outer position of, or at the designated angle in relation to the road wheel.

**CAUTION:**

- **Do not install the inner balance weight before installing the outer balance weight.**
- **Before installing the balance weight, be sure to clean the mating surface of the road wheel.**

Indicated unbalance value  $\times 5/3$  = balance weight to be installed

Calculation example:


$23 \text{ g (0.81 oz)} \times 5/3 = 38.33 \text{ g (1.35 oz)} = 40 \text{ g (1.41 oz)}$  balance weight (closer to calculated balance weight value)

Note that balance weight value must be closer to the calculated balance weight value.

Example:

$37.4 = 35 \text{ g (1.23 oz)}$


$37.5 = 40 \text{ g (1.41 oz)}$

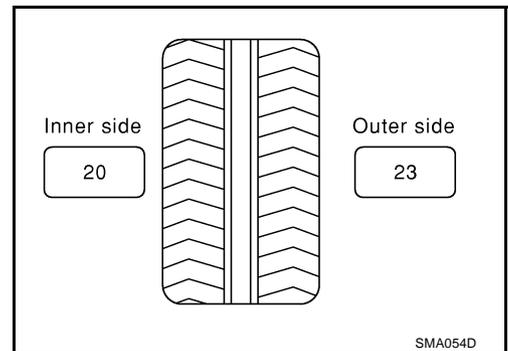

- a. Install balance weight in the position shown in the figure.
- b. When installing balance weight to road wheels, set it into the grooved area on the inner wall of the road wheel as shown in the figure so that the balance weight center is aligned with the wheel balancer indication position (angle).

**CAUTION:**

- **Always use genuine NISSAN adhesion balance weights.**
- **Balance weights are un reusable; always replace with new ones.**
- **Do not install more than three sheets of balance weight.**

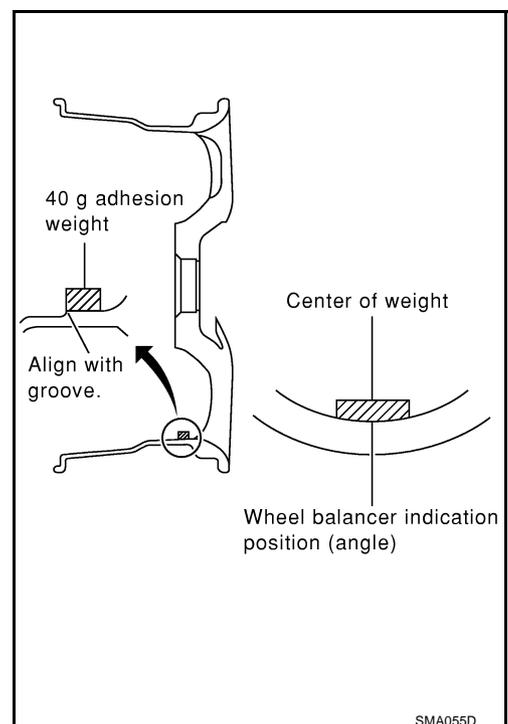

# ROAD WHEEL TIRE ASSEMBLY

- c. If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other (as shown in the figure).

**CAUTION:**

**Do not install one balance weight sheet on top of another.**

3. Start wheel balancer again.  
 4. Install drive-in balance weight on inner side of road wheel in the wheel balancer indication position (angle).


**CAUTION:**

**Do not install more than two balance weights.**

5. Start wheel balancer. Make sure that inner and outer residual unbalance values are 7.5 g (0.26 oz) each or below.  
 • If either residual unbalance value exceeds 7.5 g (0.26 oz), repeat installation procedures.

**Wheel balance (Maximum allowable unbalance):**

Maximum allowable unbalance	Dynamic (At rim flange)	7.5 g (0.26 oz) (one side)
	Static (At rim flange)	20 g (0.70 oz)

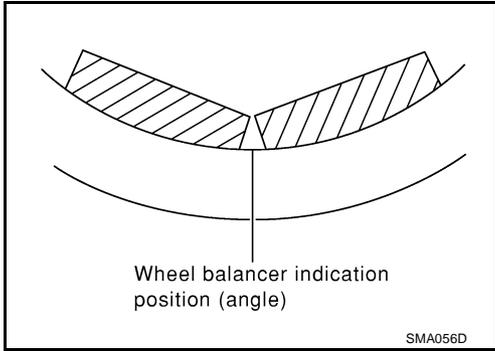

## Tire Rotation


- After rotation the tires, adjust the tire pressure.
- Retighten the wheel nuts when the vehicle has been driven for 1,000 km (600 miles) (also in cases of a flat tire, etc.).

**CAUTION:**

- **Do not include the T-type spare tire when rotating the tires.**
- **When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.**

**Tightening torque of wheel nut**

 : 108 N·m (11 kg, 80 ft-lb)

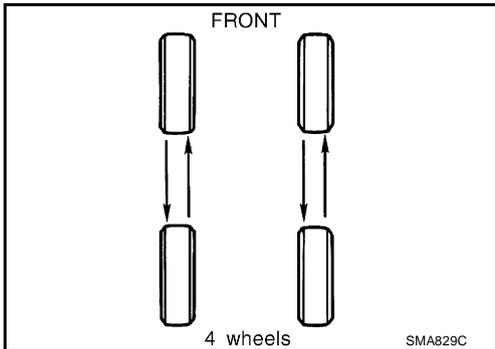

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M


# LOW TIRE PRESSURE WARNING SYSTEM

## LOW TIRE PRESSURE WARNING SYSTEM

PFP:40300

### System Components

AES000NO

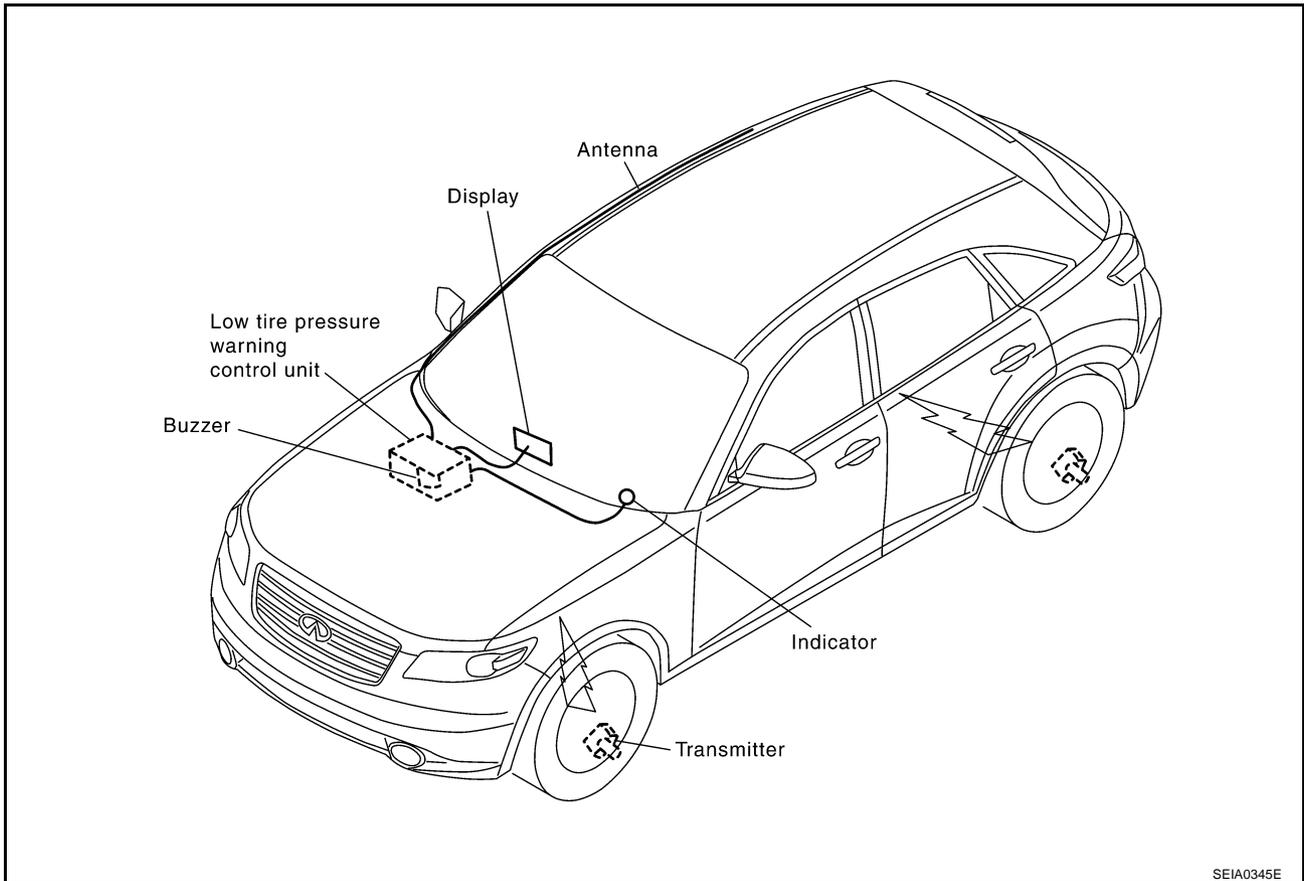


SEIA0345E

### System Description TRANSMITTER

AES000NP


A sensor-transmitter integrated with a valve is installed on a wheel, and transmits a detected air pressure signal in the form of a radio wave.

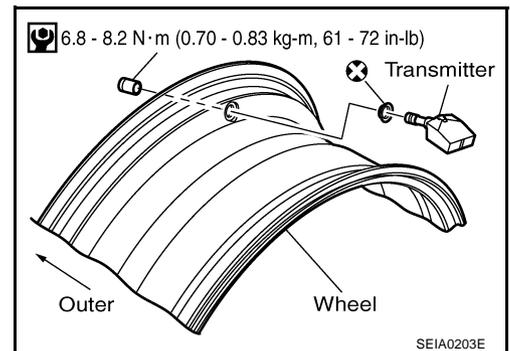

SEIA0203E

### LOW TIRE PRESSURE WARNING CONTROL UNIT


Reads the radio wave signal received by the antenna, and controls the warning lamp and the buzzer operations as shown below. It also has a judgement function to detect a system malfunction.

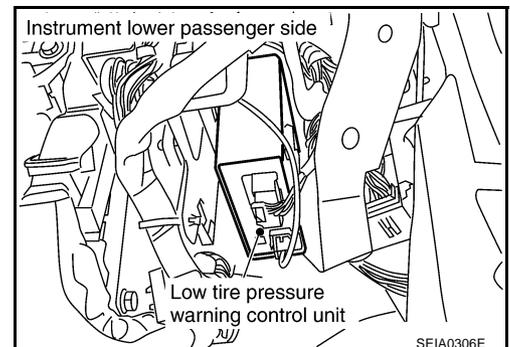

SEIA0306E

# LOW TIRE PRESSURE WARNING SYSTEM

Condition	Warning lamp	Buzzer
Less than 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) [Flat tire]	ON	Sounds for 10 sec.
System malfunction	ON	OFF

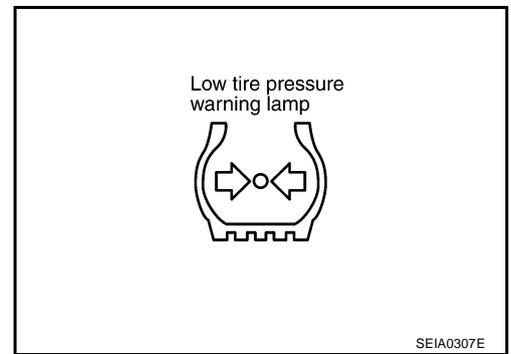

A  
B  
C  
D


## ANTENNA

Receives the radio wave signal transmitted by the transmitter.

## DISPLAY UNIT

Displays the air pressure of each tire.

- After the ignition switch is turned ON, the pressure values are not be displayed until the data of each wheel stabilizes.

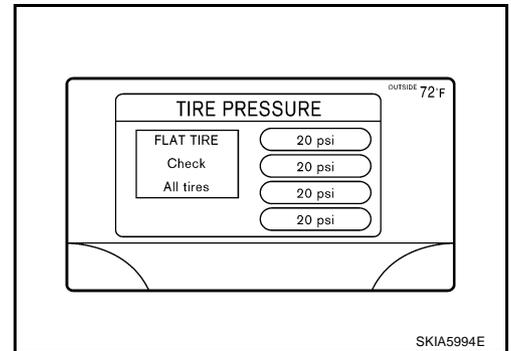

WT

F  
G  
H  
I  
J  
K  
L  
M

# CAN COMMUNICATION

## CAN COMMUNICATION

PFP:23710

### System Description

AES00000

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### CAN Communication Unit

AES000Y2

Go to CAN system, when selecting your car model from the following table.


Body type	Wagon					
Axle	2WD			AWD		
Engine	VQ35DE			VQ35DE/VK45DE		
Transmission	A/T					
Brake control	VDC					
Navigation system			×			×
Low tire pressure warning system			×			×
ICC system			×			×
Intelligent Key system			×			×
Automatic drive positioner		×	×		×	×
CAN system type	1	2	3	4	5	6

×: Applicable

### TYPE 1/TYPE2


#### System Diagram

- Type1

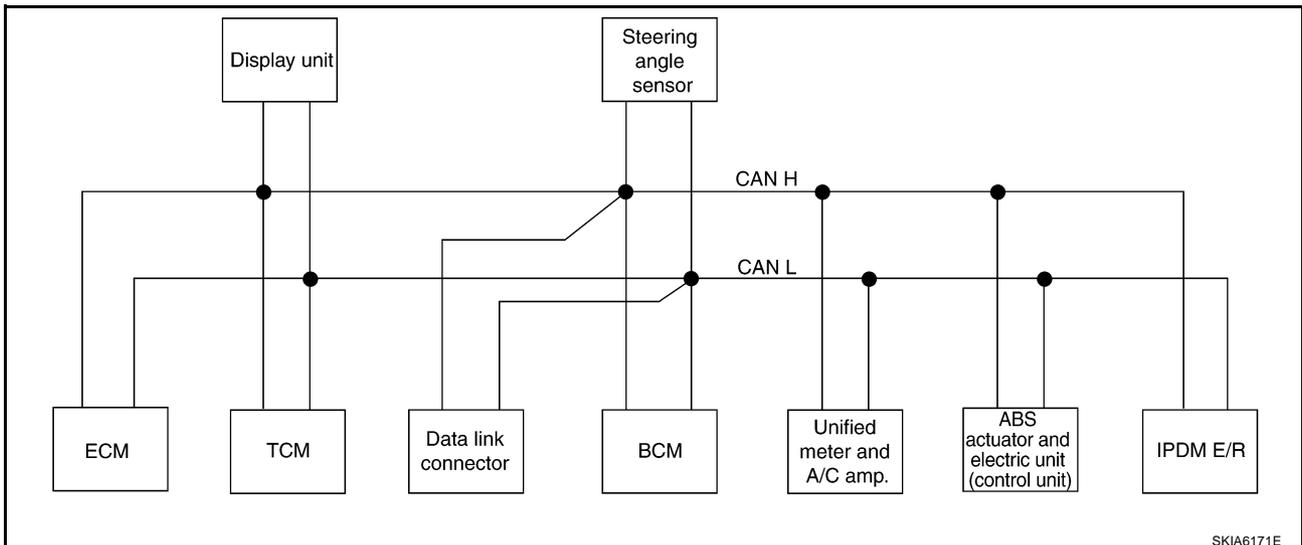

# CAN COMMUNICATION

● Type2

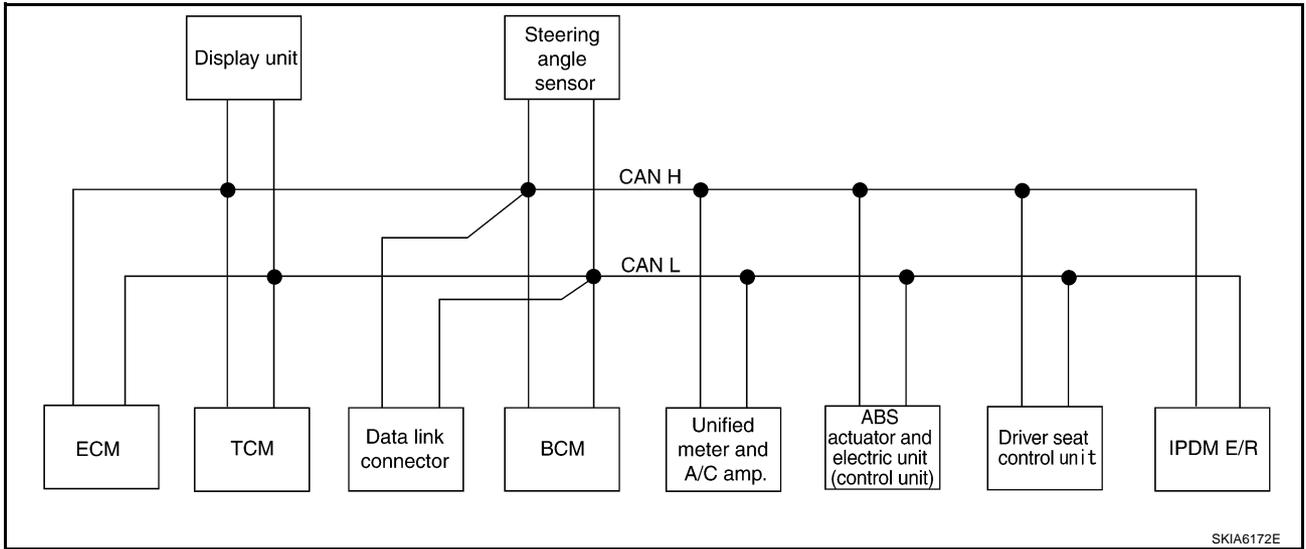

**Input/output Signal Chart**

T: Transmit R: Receive

Signals	ECM	TCM	Display unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Engine speed signal	T	R	R			R	R		
Engine status signal	T			R					
Engine coolant temperature signal	T	R				R			
A/T self-diagnosis signal	R	T							
Accelerator pedal position signal	T	R					R		
Closed throttle position signal	T	R							
Wide open throttle position signal	T	R							
Battery voltage signal	T	R							
Key switch signal				T				R	
Ignition switch signal				T				R	R
P range signal		T					R	R	
Stop lamp switch signal		R				T			
ABS operation signal	R						T		
TCS operation signal	R						T		
VDC operation signal	R						T		
Fuel consumption monitor signal	T		R			R			
Input shaft revolution signal	R	T							
Output shaft revolution signal	R	T							
A/C switch signal	R			T					
A/C compressor request signal	T								R
A/C relay status signal	R								T
A/C compressor feedback signal	T					R			
Blower fan motor switch signal	R			T					

# CAN COMMUNICATION


Signals	ECM	TCM	Display unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
A/C control signal			T			R			
			R			T			
Cooling fan speed request signal	T								R
Cooling fan speed signal	R								T
Position light request signal			R	T		R			R
Low beam request signal				T					R
Low beam status signal	R								T
High beam request signal				T		R			R
High beam status signal	R								T
Front fog light request signal				T					R
Day time running light request signal				T		R			
Turn LED burnout status signal				R		T			
Vehicle speed signal						R	T		
	R	R	R	R		T		R	
Sleep wake up signal				T		R		R	R
Door switch signal			R	T		R		R	R
Turn indicator signal				T		R			
Key fob ID signal				T				R	
Key fob door unlock signal				T				R	
Oil pressure switch signal				R					T
				T		R			
Buzzer output signal				T		R			
Fuel level sensor signal	R					T			
Fuel level low warning signal			R			T			
ASCD operation signal	T	R							
ASCD OD cancel request	T	R							
Front wiper request signal				T					R
Front wiper stop position signal				R					T
Rear window defogger switch signal				T					R
Rear window defogger control signal	R		R	R					T
Hood switch signal				R					T
Theft warning horn request signal				T					R
Horn chirp signal				T					R
Steering angle sensor signal					T		R		
ABS warning lamp signal						R	T		
VDC OFF indicator lamp signal						R	T		
SLIP indicator lamp signal						R	T		
Brake warning lamp signal						R	T		
System setting signal			T	R				R	
A/T CHECK indicator lamp signal		T				R			

# CAN COMMUNICATION

Signals	ECM	TCM	Display unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
A/T position indicator lamp signal		T				R			
A/T shift schedule change demand signal		R					T		
Manual mode signal		R				T			
Not manual mode signal		R				T			
Manual mode shift up signal		R				T			
Manual mode shift down signal		R				T			
Manual mode indicator signal		T				R			
Distance to empty signal			R			T			
Hand brake switch				R		T			

## TYPE 3 System Diagram

- Type3

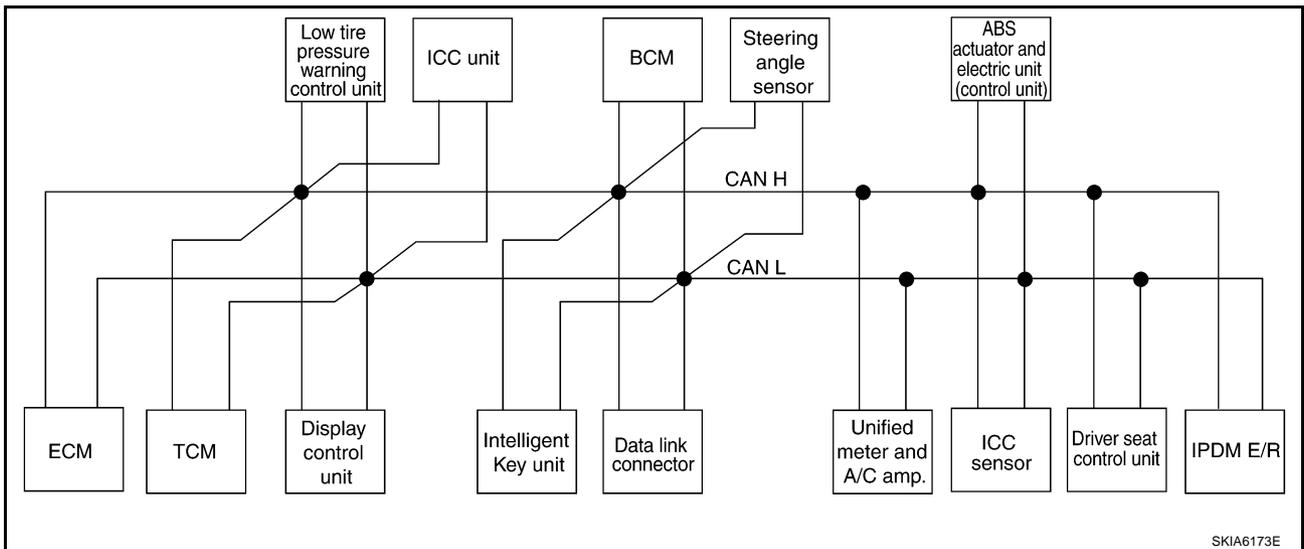

## Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Engine speed signal	T	R	R		R				R		R		
Engine status signal	T						R						
Engine coolant temperature signal	T	R			R				R				
A/T self-diagnosis signal	R	T											

# CAN COMMUNICATION

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Accelerator pedal position signal	T	R			R						R		
Closed throttle position signal	T	R			R								
Wide open throttle position signal	T	R											
Battery voltage signal	T	R											
Key switch signal							T					R	
Ignition switch signal							T					R	R
P range signal		T			R						R	R	
Stop lamp switch signal		R							T				
ABS operation signal	R				R						T		
TCS operation signal	R				R						T		
VDC operation signal	R				R						T		
Fuel consumption monitor signal	T		R						R				
Input shaft revolution signal	R	T			R								
Output shaft revolution signal	R	T			R								
A/C switch signal	R						T						
A/C compressor request signal	T												R
A/C relay status signal	R												T
A/C compressor feedback signal	T								R				
Blower fan motor switch signal	R						T						
A/C control signal			T						R				
			R						T				
Cooling fan speed signal	R												T
Position light request signal	R						T		R				R
Low beam request signal							T						R
Low beam status signal	R												T
High beam request signal							T		R				R
High beam status signal	R												T
Front fog light request signal							T						R
Day time running light request signal							T		R				

# CAN COMMUNICATION

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Turn LED burnout status signal							R		T				
Vehicle speed signal					R				R		T		
	R	R	R	R		R	R		T	R		R	
Sleep wake up signal							T		R			R	R
						T	R						
Door switch signal			R			R	T		R			R	R
Turn indicator signal							T		R				
Key fob ID signal							T					R	
Key fob door unlock signal							T					R	
Oil pressure switch signal							R						T
							T		R				
Buzzer output signal							T		R				
						T			R				
Fuel level sensor signal	R								T				
Fuel level low warning signal			R						T				
ICC operation signal	R				T								
Front wiper request signal					R		T						R
Front wiper stop position signal							R						T
Rear window defogger switch signal							T						R
Rear window defogger control signal	R		R				R						T
Hood switch signal							R						T
Theft warning horn request signal							T						R
Horn chirp signal							T						R
Steering angle sensor signal								T			R		
Tire pressure signal				T					R				
Tire pressure data signal			R	T									
ABS warning lamp signal					R				R		T		
VDC OFF indicator lamp signal					R				R		T		
SLIP indicator lamp signal									R		T		

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

# CAN COMMUNICATION


Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Brake warning lamp signal									R		T		
System setting signal			T			R						R	
Distance to empty signal			R						T				
Hand brake switch signal							R		T				
Door lock/unlock request signal						T	R						
Door lock/unlock status signal						R	T						
Starter permission signal						T	R						
Back door open request signal						T	R						
Power window open request signal						T	R						
Alarm request signal						T	R						
Key warning signal						T			R				
ICC sensor signal					R					T			
ICC warning lamp signal					T				R				
ICC system display signal					T				R				
Current gear position signal		T			R						R		
Steering switch signal	T				R								
ASCD operation signal	T	R											
ASCD OD cancel request	T	R											
ICC OD cancel request	R	R			T								
A/T CHECK indicator lamp signal		T							R				
A/T position indicator lamp signal		T							R				
A/T shift schedule change demand signal		R									T		
Manual mode signal		R							T				
Not manual mode signal		R							T				
Manual mode shift up signal		R							T				
Manual mode shift down signal		R							T				
Manual mode indicator signal		T			R				R				
Ignition knob switch signal						T	R						

# CAN COMMUNICATION


## TYPE 4/TYPE5

### System Diagram

- Type4

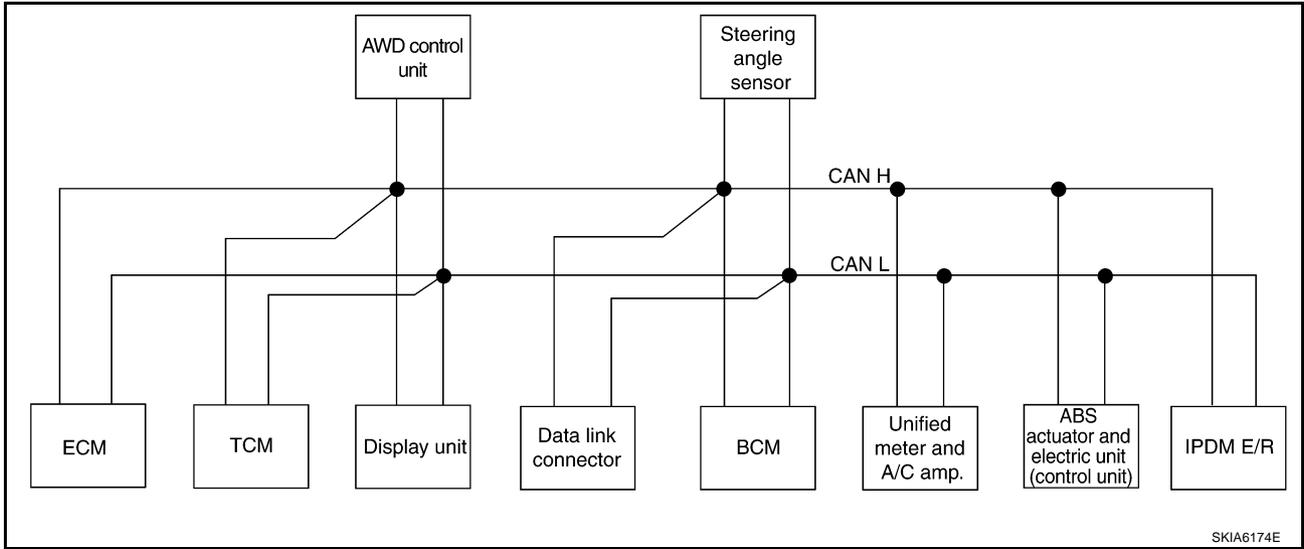

- Type5

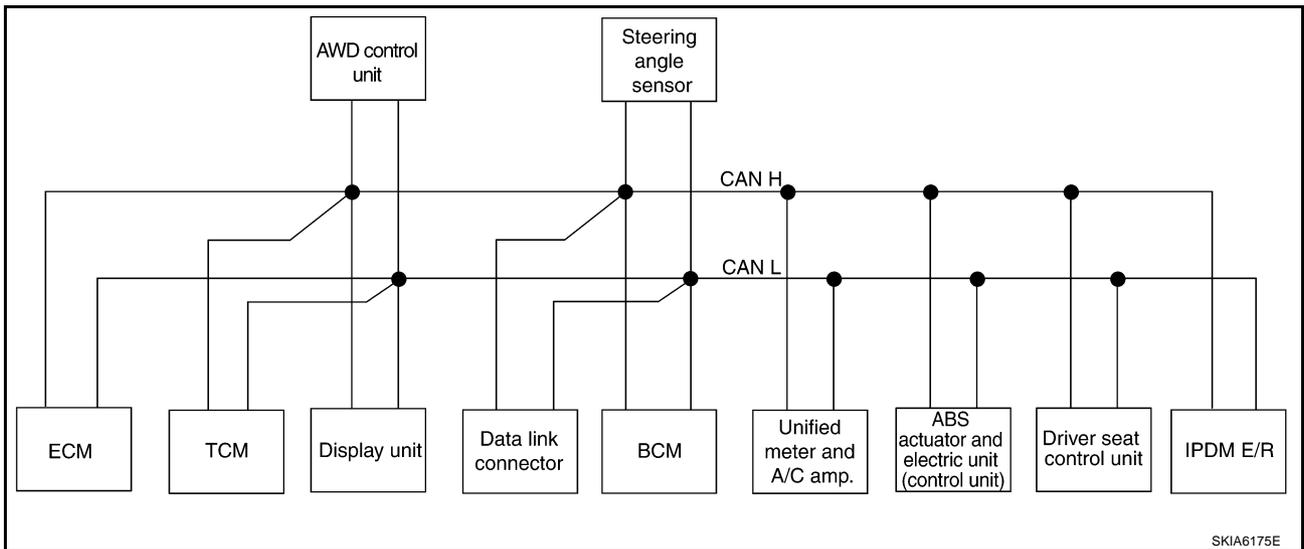

### Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Display unit	AWD control unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
A/T self-diagnosis signal	R	T								
ABS operation signal	R			R				T		
TCS operation signal	R							T		
VDC operation signal	R			R				T		
Stop lamp switch signal		R		R			T			
Battery voltage signal	T	R								

# CAN COMMUNICATION

Signals	ECM	TCM	Display unit	AWD control unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Key switch signal					T				R	
Ignition switch signal					T				R	R
P range signal		T						R	R	
Closed throttle position signal	T	R								
Wide open throttle position signal	T	R								
Engine speed signal	T	R	R	R			R	R		
Engine status signal	T				R					
Engine coolant temperature signal	T	R					R			
Accelerator pedal position signal	T	R		R				R		
Fuel consumption monitor signal	T		R				R			
Input shaft revolution signal	R	T								
Output shaft revolution signal	R	T								
A/C switch signal	R				T					
A/C compressor request signal	T									R
A/C relay status signal	R									T
A/C compressor feedback signal	T						R			
Blower fan motor switch signal	R				T					
A/C control signal			T				R			
			R				T			
Cooling fan speed signal	R									T
Position light request signal			R		T		R			R
Low beam request signal					T					R
Low beam status signal	R									T
High beam request signal					T		R			R
High beam status signal	R									T
Front fog light request signal					T					R
Day time running light request signal					T		R			
Turn LED burnout status signal					R		T			
Vehicle speed signal							R	T		
	R	R	R		R		T		R	
Sleep wake up signal					T		R		R	R
Door switch signal			R		T		R		R	R
Turn indicator signal					T		R			
Key fob ID signal					T				R	
Key fob door unlock signal					T				R	
Oil pressure switch signal					R					T
					T		R			
Buzzer output signal					T		R			

# CAN COMMUNICATION

Signals	ECM	TCM	Display unit	AWD control unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ABS actuator and electric unit (control unit)	Driver seat control unit	IPDM E/R
Fuel level sensor signal	R						T			
Fuel level low warning signal			R				T			
Front wiper request signal					T					R
Front wiper stop position signal					R					T
Rear window defogger switch signal					T					R
Rear window defogger control signal	R		R		R					T
Hood switch signal					R					T
Theft warning horn request signal					T					R
Horn chirp signal					T					R
Steering angle sensor signal						T		R		
ABS warning lamp signal							R	T		
VDC OFF indicator lamp signal							R	T		
SLIP indicator lamp signal							R	T		
Brake warning lamp signal							R	T		
System setting signal			T		R				R	
AWD warning lamp signal				T			R			
AWD lock indicator lamp signal				T			R			
Distance to empty signal			R				T			
Hand brake switch signal				R	R		T			
ASCD operation signal	T	R								
ASCD OD cancel request	T	R								
A/T CHECK indicator lamp signal		T					R			
A/T position indicator lamp signal		T					R			
A/T shift schedule change demand signal		R						T		
Manual mode signal		R					T			
Not manual mode signal		R					T			
Manual mode shift up signal		R					T			
Manual mode shift down signal		R					T			
Manual mode indicator signal		T					R			


A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

# CAN COMMUNICATION

## TYPE 6

### System Diagram

- Type6

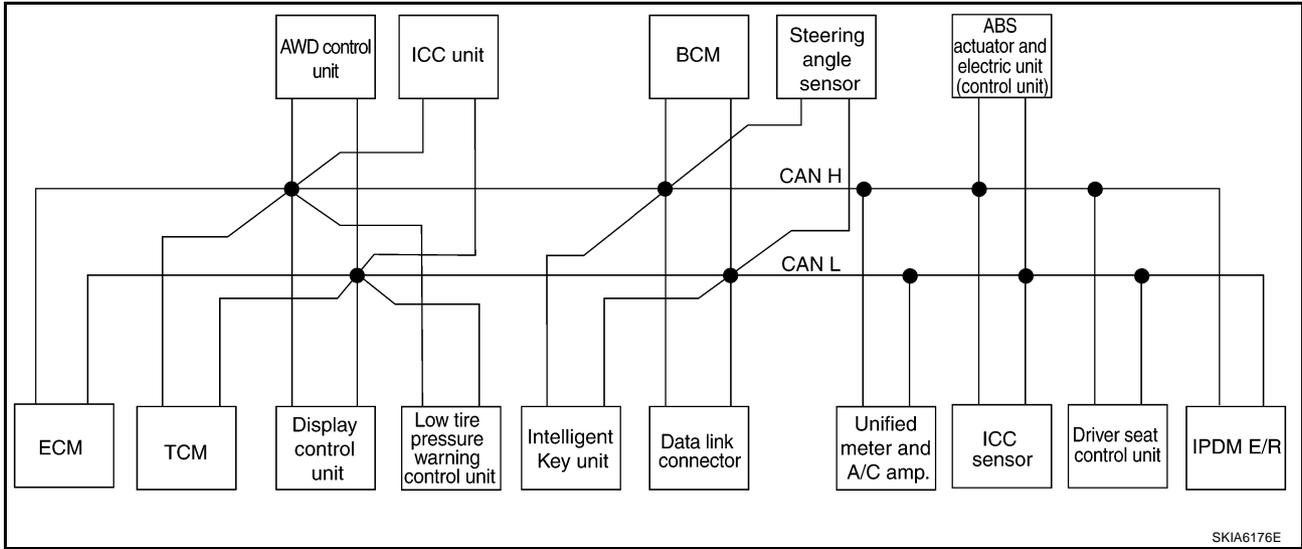

# CAN COMMUNICATION

## Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	AWD control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPD M E/R
A/T self-diagnosis signal	R	T												
ABS operation signal	R				R	R						T		
TCS operation signal	R					R						T		
VDC operation signal	R				R	R					R	T		
Stop lamp switch signal		R			R					T				
Battery voltage signal	T	R												
Key switch signal								T					R	
Ignition switch signal								T					R	R
P range signal		T				R						R	R	
Closed throttle position signal	T	R				R								
Wide open throttle position signal	T	R												
Engine speed signal	T	R	R		R	R				R		R		
Engine status signal	T							R						
Engine coolant temperature signal	T	R				R				R				
Accelerator pedal position signal	T	R			R	R						R		
Fuel consumption monitor signal	T		R							R				
A/T self-diagnosis signal	R	T												
Input shaft revolution signal	R	T				R								
Output shaft revolution signal	R	T				R								
A/C switch signal	R							T						
A/C compressor request signal	T													R
A/C relay status signal	R													T
A/C compressor feedback signal	T									R				
Blower fan motor switch signal	R							T						
A/C control signal			T							R				
			R							T				
Cooling fan speed signal	R													T
Position light request signal			R					T		R				R
Low beam request signal								T						R
Low beam status signal	R													T
High beam request signal								T		R				R

## CAN COMMUNICATION

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	AWD control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPD M E/R
High beam status signal	R													T
Front fog light request signal								T						R
Day time running light request signal								T		R				
Turn LED burnout status signal								R		T				
Vehicle speed signal						R				R		T		
	R	R	R	R			R	R		T	R		R	
Sleep wake up signal								T		R			R	R
							T	R						
Door switch signal			R				R	T		R			R	R
Key fob ID signal								T					R	
Key fob door unlock signal								T					R	
Oil pressure switch signal								R						T
								T		R				
Buzzer output signal							T			R				
						T				R				
Fuel level sensor signal	R									T				
Fuel level low warning signal			R							T				
ICC operation signal	R					T								
Front wiper request signal						R		T						R
Front wiper stop position signal								R						T
Rear window defogger switch signal								T						R
Rear window defogger control signal	R		R					R						T
Hood switch signal								R						T
Theft warning horn request signal								T						R
Horn chirp signal								T						R
Steering angle sensor signal									T			R		
Tire pressure signal				T						R				
Tire pressure data signal			R	T										
ABS warning lamp signal						R				R		T		
VDC OFF indicator lamp signal						R				R		T		
SLIP indicator lamp signal										R		T		

# CAN COMMUNICATION

Signals	ECM	TCM	Display control unit	Low tire pressure warning control unit	AWD control unit	ICC unit	Intelligent Key unit	BCM	Steering angle sensor	Unified meter and A/C amp.	ICC sensor	ABS actuator and electric unit (control unit)	Driver seat control unit	IPD M E/R
Brake warning lamp signal										R		T		
System setting signal			T				R						R	
AWD warning lamp signal					T					R				
AWD lock indicator lamp signal					T					R				
Distance to empty signal			R							T				
Hand brake switch signal					R			R		T				
Door lock/unlock request signal							T	R						
Door lock/unlock status signal							R	T						
Starter permission signal							T	R						
Back door open request signal							T	R						
Power window open request signal							T	R						
Alarm request signal							T	R						
Key warning signal							T			R				
ICC sensor signal						R					T			
ICC warning lamp signal						T				R				
ICC system display signal						T				R				
Current gear position signal		T				R						R		
Steering switch signal	T					R								
ASCD operation signal	T	R												
ASCD OD cancel request	T	R												
ICC OD cancel request	R	R				T								
A/T CHECK indicator lamp signal		T								R				
A/T position indicator lamp signal		T								R				
A/T shift schedule change demand signal		R										T		
Manual mode signal		R								T				
Not manual mode signal		R								T				
Manual mode shift up signal		R								T				
Manual mode shift down signal		R								T				
Manual mode indicator signal		T								R				
Ignition knob switch signal							T	R						

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M


# TROUBLE DIAGNOSES

## TROUBLE DIAGNOSES

PFP:00004

### Schematic

AES000NS

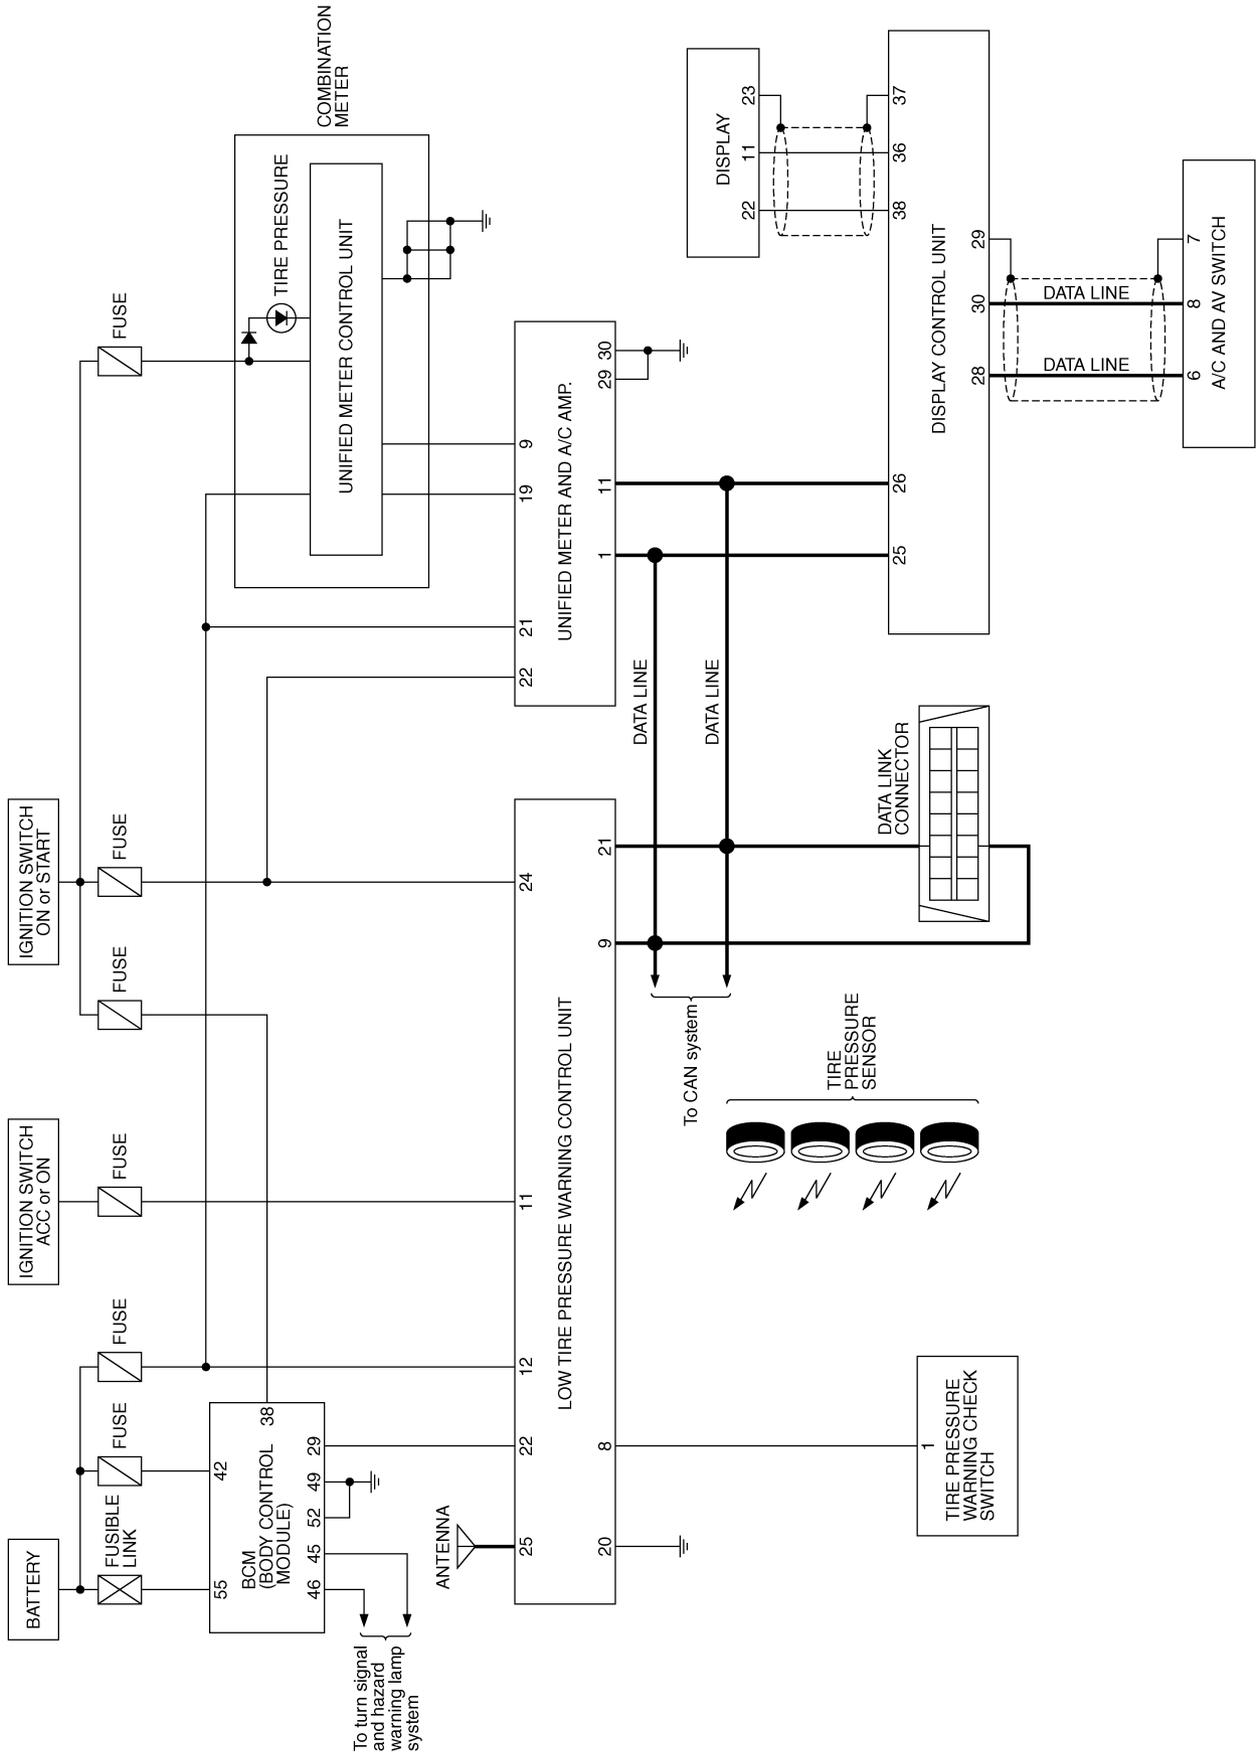



TEWM0045E

# TROUBLE DIAGNOSES

## Wiring Diagram

AES000NT


### WT-T/WARN-01

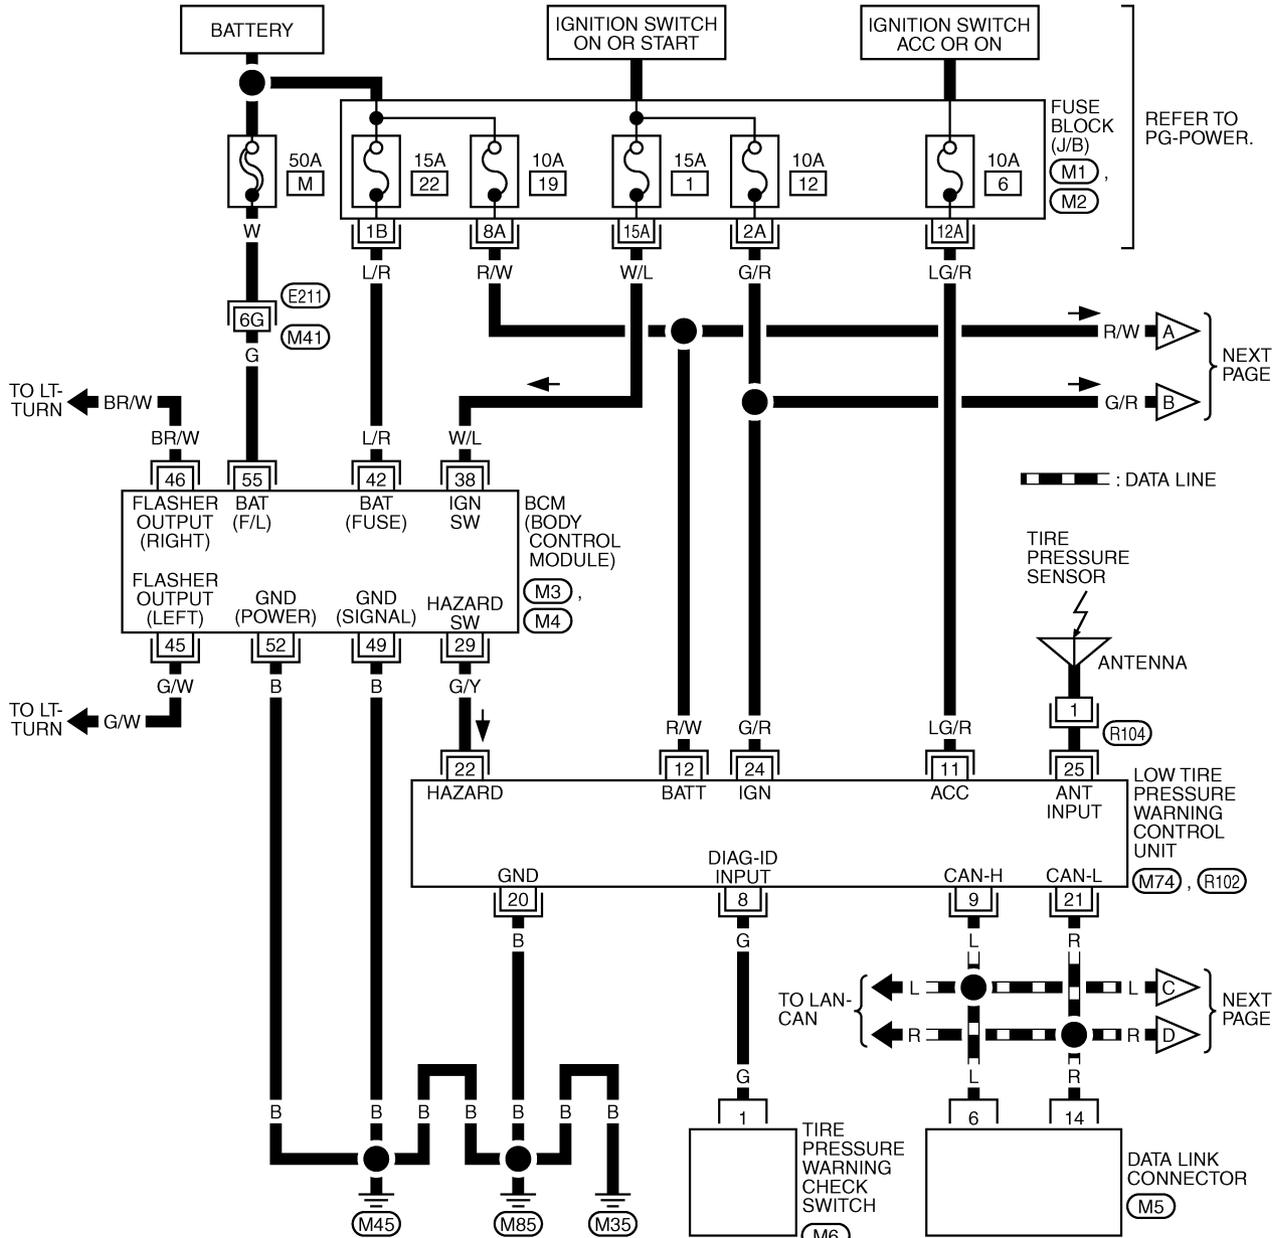

(M5) W



(M6) W



(M74) W



(R102) GY\*



(R104) GY\*

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.



REFER TO THE FOLLOWING.

- (E211) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1), (M2) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M3), (M4) -ELECTRICAL UNITS

TEWM0046E

# TROUBLE DIAGNOSES


WT-T/WARN-02

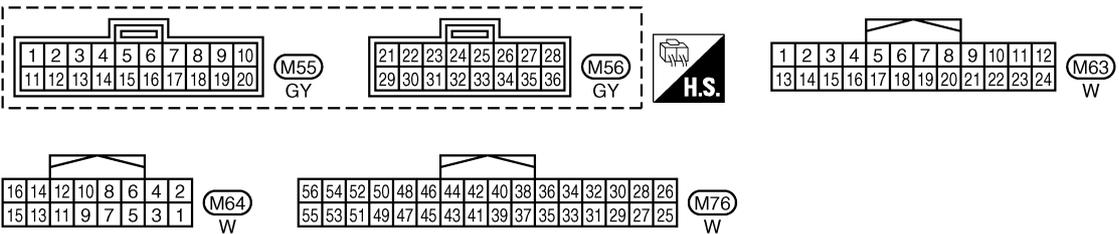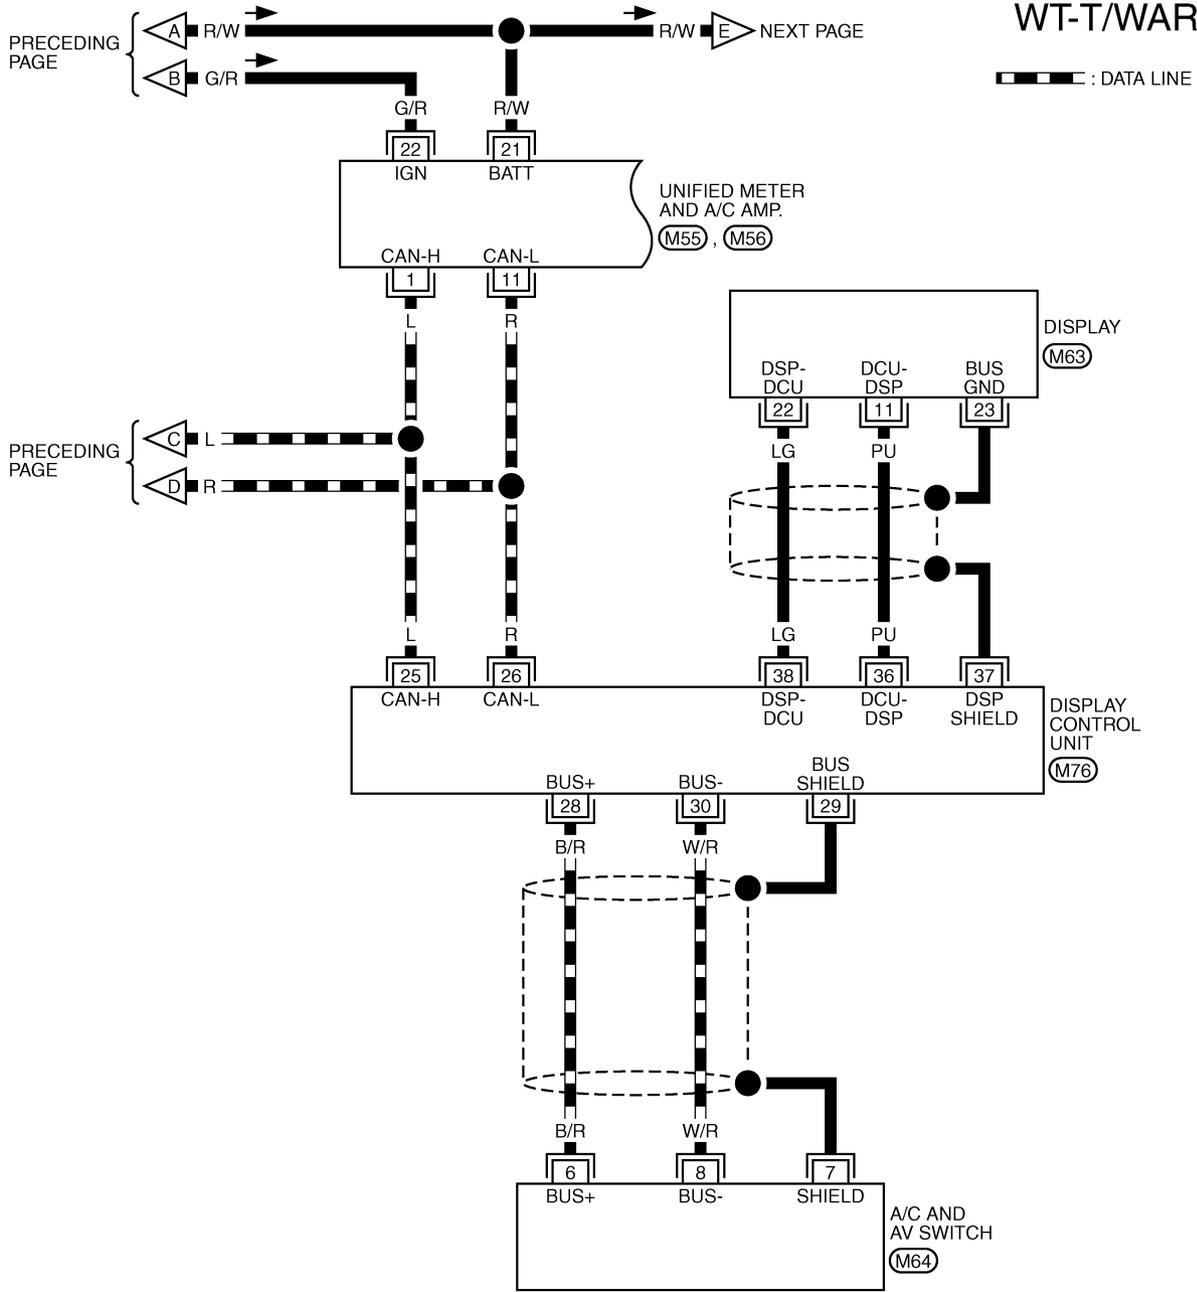



TEWM0047E

# TROUBLE DIAGNOSES

WT-T/WARN-03

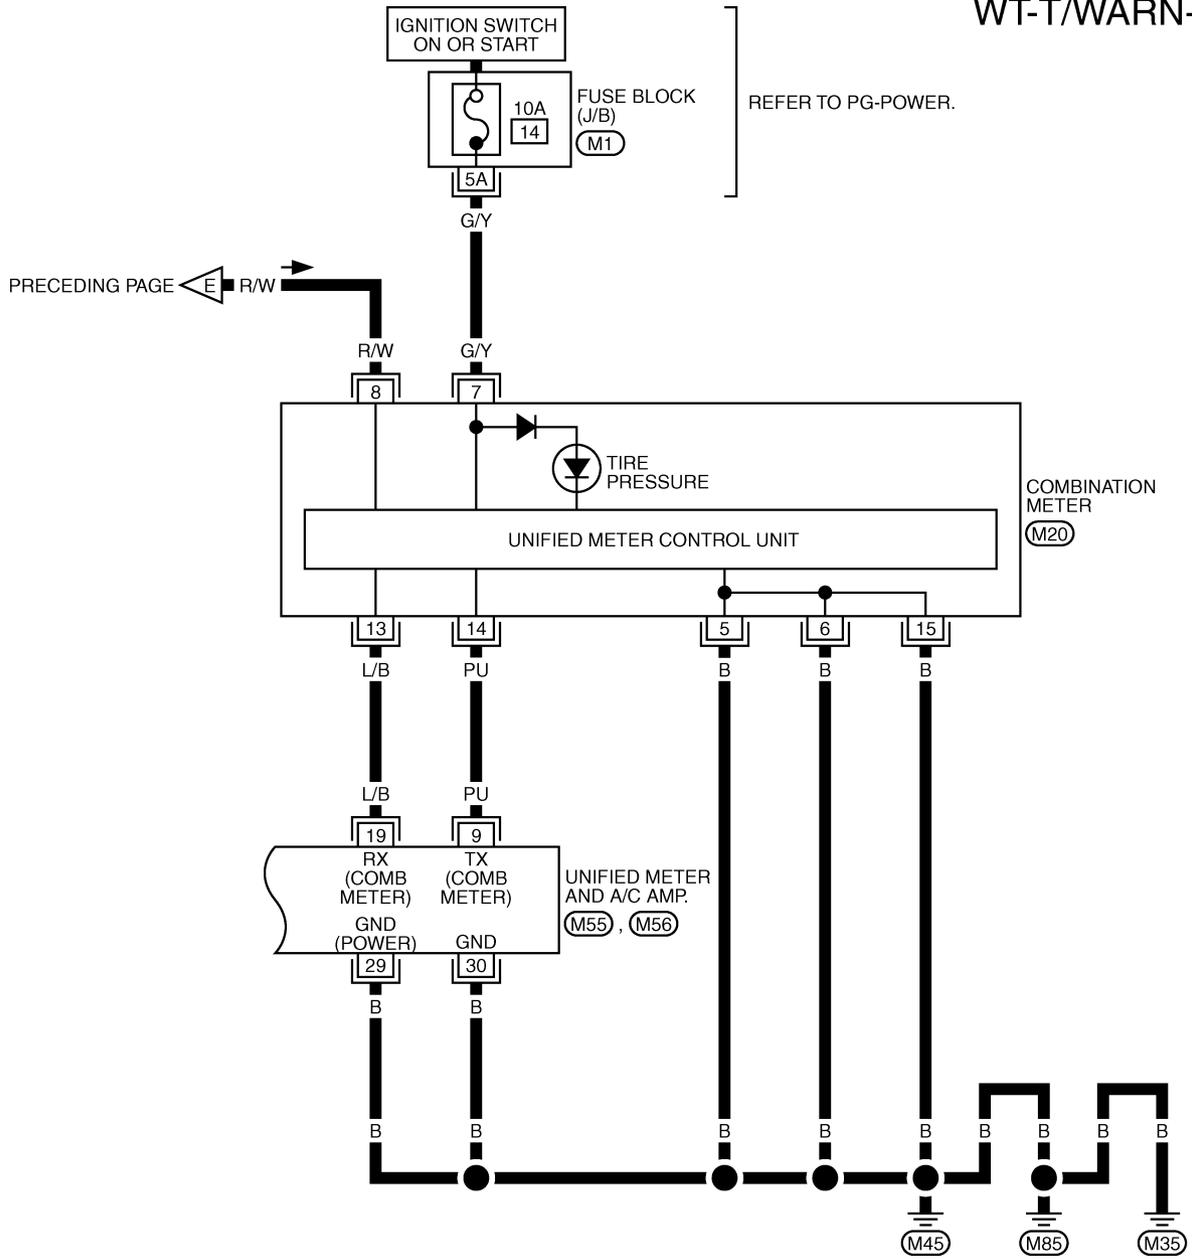

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M



REFER TO THE FOLLOWING.  
**(M1)** -FUSE BLOCK-JUNCTION BOX (J/B)

TEWM0048E

# TROUBLE DIAGNOSES

## Control Unit Input/Output Signal Standard

AES000NU

Standards using a circuit tester and oscilloscope.

Measurement terminal		Item	Operation or condition		
+	-				
8 (G)	Ground	Tire pressure warning check switch	Always	Approx. 5 V	
9 (L)		Data line (CAN H)	—	—	
11 (LG/R)		Ignition switch ACC	—	Battery voltage (Approx. 12 V)	
12 (R/W)		Battery power supply	Always	Battery voltage (Approx. 12 V)	
20 (B)		GND	—	Approx. 0 V	
21 (R)		Data line (CAN L)	—	—	
22 (G/Y)		Hazard	Hazard lamp switch OFF		Battery voltage (Approx. 12 V)
			Hazard lamp switch ON		Approx. 0 V
24 (G/R)		Ignition switch ON	—	Battery voltage (Approx. 12 V)	
25		Antenna	—	—	

( ): Wire color

## ID Registration Procedure

AES000NV

### ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL


This procedure must do after replace transmitter or low tire pressure warning control unit.

1. Turn ignition switch "OFF".
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.
3. Touch "AIR PRESSURE MONITOR", "WORK SUPPORT" and "ID REGIST".

**NOTE:**

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

4. With the transmitter activation tool (J-45295) pushed against the front-left transmitter position of the tire air valve, press the button then keep 5 seconds.

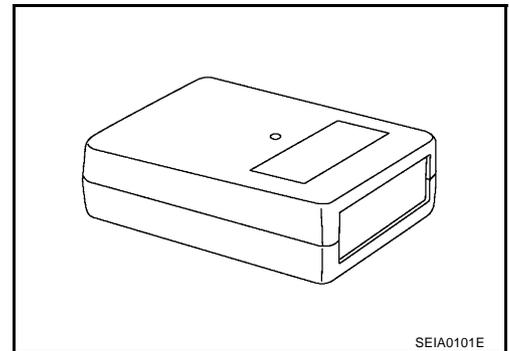

5. Register the IDs in order from FR LH, FR RH, RR RH or RR LH. When ID registration of each wheel has been completed, a buzzer sounds and hazard warning lamp blinks.

Activation tire position	Buzzer	Hazard warning lamp	CONSULT-II
Front LH	Once	2 times flashing	"YET" ↓ "DONE"
Front RH	2 times		
Rear RH	3 times		
Rear LH	4 times		

6. After completing all ID registrations, press "END" to complete the procedure.

**NOTE:**

Be sure to register the IDs in order from FR LH, FR RH, RR RH, to RR LH, or the self-diagnostic results display will not function properly.

# TROUBLE DIAGNOSES

## ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL

1. Turn ignition switch "OFF".
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.
3. Touch "AIR PRESSURE MONITOR", "WORK SUPPORT" and "ID REGIST".

**NOTE:**

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

4. Adjust the tire pressure to the values shown in the table below for ID registration, and drive the vehicle at 15 km/h (9.4 MPH) or more for a few minutes.

Tire position	Tire pressure kPa (kg/cm <sup>2</sup> , psi)
Front LH	250 (2.5, 36)
Front RH	230 (2.3, 33)
Rear RH	210 (2.1, 30)
Rear LH	190 (1.9, 27)

5. After completing all ID registrations, press "END" to complete the procedure.

Activation tire position	CONSULT-II
Front LH	"YET" ↓ "DONE"
Front RH	
Rear RH	
Rear LH	


A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSES

AES000NW

## Transmitter Wake Up Operation WITH TRANSMITTER ACTIVATION TOOL

1. With the transmitter activation tool (J-45295) pushed against the front-left transmitter, press the button then keep 5 seconds.
  - When ignition switch ON, then warning lamp is blinks as follow diagram transmitter must be waken up.

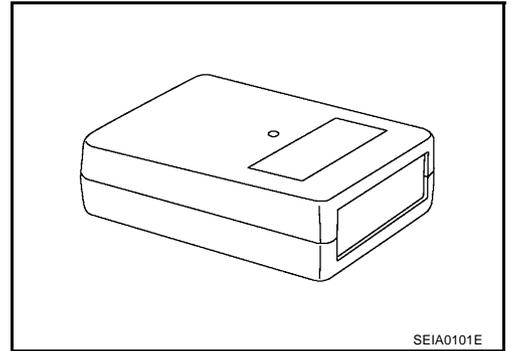

Warning lamp blinking timing		Need to activation tire position
ON OFF	a : 0.3sec b : 1.3sec	Front LH
ON OFF	a : 0.3sec b : 1.3sec	Front RH
ON OFF	a : 0.3sec b : 1.3sec	Rear RH
ON OFF	a : 0.3sec b : 1.3sec	Rear LH
ON OFF	a : 2sec b : 0.2sec	All tire

SEIA0378E

2. Register the IDs in order from FR LH, FR RH, RR RH or RR LH. When wake up of each wheel has been completed, a hazard warning lamp 2 time flashing.
3. After completing wake up of all transmitters, make sure tire pressure warning lamp go out.

# TROUBLE DIAGNOSES

AES000NX

## Self-Diagnosis

### DESCRIPTION

During driving, the low tire pressure warning system receives the signal transmitted from the transmitter installed in each wheel, and gives alarms when the tire pressure becomes low. The control unit of this system has pressure judgement and trouble diagnosis functions.

### FUNCTION

When the low tire pressure warning system detects low inflation pressure or another unusual symptom, the warning lamps in the combination meter comes on. To start the self-diagnostic results mode, ground the self-diagnostic (check) terminal. The malfunction location is indicated by the warning lamp flashing and the buzzer sounds.

### CONSULT-II

#### CONSULT-II Main Function

In a diagnosis function (main function), there are "WORK SUPPORT", "SELF-DIAGNOSTIC RESULTS", "DATA MONITOR", "CAN DIAG SUPPORT MNTR".

Diagnostic test mode	Function
WORK SUPPORT	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II.
SELF-DIAGNOSTIC RESULTS	Self-diagnostic results can be read and erased quickly.
DATA MONITOR	Input/Output data in the control unit can be read.
CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of communication can be read.

#### CONSULT-II Application to Low Tire Pressure Warning System

ITEM	SELF-DIAGNOSTIC RESULTS	DATA MONITOR
Front - Left transmitter	×	×
Front - Right transmitter	×	×
Rear - Left transmitter	×	×
Rear - Right transmitter	×	×
Warning lamp	–	×
Vehicle speed	×	×
Buzzer (in control unit)	–	×
CAN Communication	×	×

x: Applicable

–: Not applicable

#### Self-Diagnostic Results Mode

Diagnostic item	Diagnostic item is detected when ...
FLAT - TIRE - FL FLAT - TIRE - FR FLAT - TIRE - RR FLAT - TIRE - RL	Front-left tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Front-right tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Rear-right tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Rear-left tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less
[NO-DATA] - FL [NO-DATA] - FR [NO-DATA] - RR [NO-DATA] - RL	Data from front-left transmitter cannot be received. Data from front-right transmitter cannot be received. Data from rear-right transmitter cannot be received. Data from rear-left transmitter cannot be received.
[CHECKSUM- ERR] - FL [CHECKSUM- ERR] - FR [CHECKSUM- ERR] - RR [CHECKSUM- ERR] - RL	Checksum data from front-left transmitter is malfunctioning. Checksum data from front-right transmitter is malfunctioning. Checksum data from rear-right transmitter is malfunctioning. Checksum data from rear-left transmitter is malfunctioning.
[PRESSDATA- ERR] - FL [PRESSDATA- ERR] - FR [PRESSDATA- ERR] - RR [PRESSDATA- ERR] - RL	Air pressure data from front-left transmitter is malfunctioning. Air pressure data from front-right transmitter is malfunctioning. Air pressure data from rear-right transmitter is malfunctioning. Air pressure data from rear-left transmitter is malfunctioning.

# TROUBLE DIAGNOSES

Diagnostic item	Diagnostic item is detected when ...
[CODE- ERR] - FL [CODE- ERR] - FR [CODE- ERR] - RR [CODE- ERR] - RL	Function code data from front-left transmitter is malfunctioning. Function code data from front-right transmitter is malfunctioning. Function code data from rear-right transmitter is malfunctioning. Function code data from rear-left transmitter is malfunctioning.
[BATT - VOLT - LOW] - FL [BATT - VOLT - LOW] - FR [BATT - VOLT - LOW] - RR [BATT - VOLT - LOW] - RL	Battery voltage of front-left transmitter drops. Battery voltage of front-right transmitter drops. Battery voltage of rear-right transmitter drops. Battery voltage of rear-left transmitter drops.
VHCL_SPEED_SIG_ERR	Vehicle speed signal is error.

**NOTE:**

Before performing the self-diagnosis, be sure to register the ID. Or, the actual malfunction location may be different from that displayed on CONSULT-II.

**Data Monitor Mode**

MONITOR	CONDITION	SPECIFICATION
VHCL SPEED SE	Drive vehicle.	Vehicle speed (km/h or MPH)
AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL	<ul style="list-style-type: none"> <li>● Drive vehicle for a few minutes.</li> <li style="text-align: center;">or</li> <li>● Ignition switch ON and activation tool is transmitting activation signals.</li> </ul>	Tire pressure (kPa or psi)
ID REGST FL ID REGST FR ID REGST RR ID REGST RL	Ignition switch ON	Registration ID: DONE No registration ID: YET
WARNING LAMP		Warning lamp on: ON Warning lamp off: OFF
BUZZER		Buzzer in Low tire pressure warning control unit on: ON Buzzer in Low tire pressure warning control unit off: OFF

**NOTE:**

Before performing the self-diagnosis, be sure to register the ID. Or, the actual malfunction location may be different from that displayed on CONSULT-II.


# TROUBLE DIAGNOSES

## How to Perform Trouble Diagnosis for Quick and Accurate Repair INTRODUCTION

AES000NY

- Before troubleshooting, verify customer complaints.
- If a vehicle malfunction is difficult to reproduce, harnesses, harness connectors or terminals may be malfunctioning. Hold and shake these parts to make sure they are securely connected.
- When using a circuit tester to measure voltage or resistance of each circuit, be careful not to expand connector terminals.

### WORK FLOW

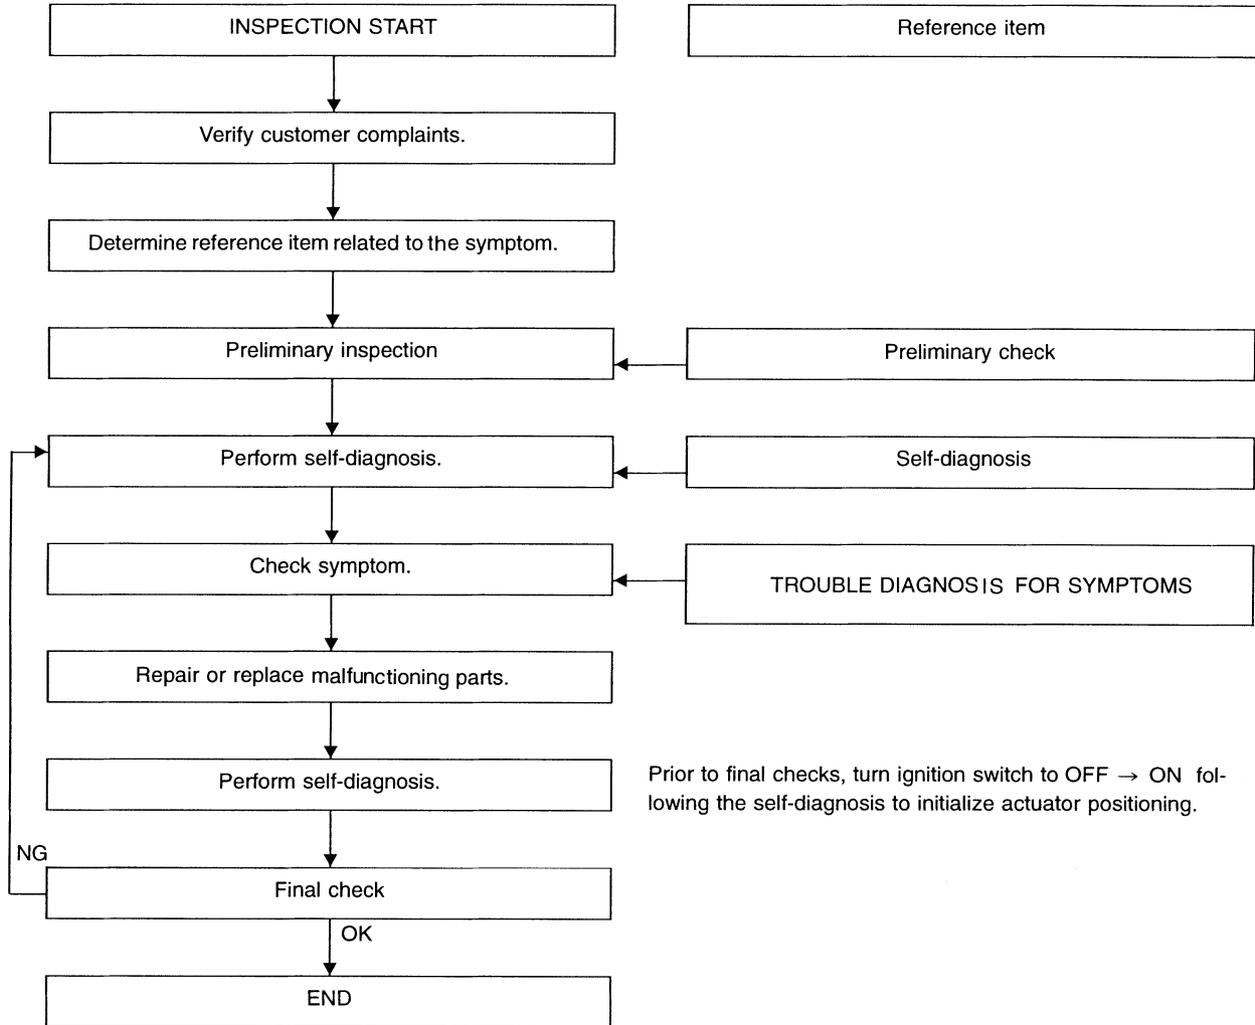

Preliminary check: [WT-34](#) Self-diagnosis: [WT-31](#) Trouble diagnosis for symptoms: [WT-39](#)

SEIA0100E

# TROUBLE DIAGNOSES

AES000NZ

## Preliminary Check

### BASIC INSPECTION

#### 1. CHECK ALL TIRES PRESSURES

---

- Check all tires pressures.

**Tire pressure** : 220 kPa (2.2 kg/cm<sup>2</sup> , 32 psi)

#### OK or NG

OK >> GO TO 2.

NG >> Adjust tire pressure to specified value.

#### 2. CHECK WARNING LAMP ACTIVATION

---

1. Check warning lamp activation.
2. Does warning lamp activate for 1 seconds when ignition switch is turned "ON".

#### Does warning lamp active?

YES >> GO TO 3.

NO >> Check fuse and combination meter.

#### 3. CHECK CONNECTOR

---

1. Disconnect low tire pressure warning control unit harness connectors M74 and R102.
2. Check terminals for damage or loose connection.
3. Reconnect harness connector.

#### OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

#### 4. CHECK TRANSMITTER ACTIVATION TOOL

---

- Check transmitter activation tool battery.

#### OK or NG

OK >> Carry out self-diagnosis.

NG >> Replace transmitter activation tool battery.

# TROUBLE DIAGNOSES

## Malfunction Code/Symptom Chart

AES00000

Code/Symptom	Malfunction part	Reference page
15 16 17 18	Front-left tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Front-right tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Rear-right tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less Rear-left tire pressure drops to 190 kPa (1.9 kg/cm <sup>2</sup> , 27 psi) or less	—
21 22 23 24	Transmitter no data (front - left) Transmitter no data (front - right) Transmitter no data (rear - right) Transmitter no data (rear - left)	<a href="#">WT-36</a>
31 32 33 34	Transmitter checksum error (front - left) Transmitter checksum error (front - right) Transmitter checksum error (rear - right) Transmitter checksum error (rear - left)	<a href="#">WT-36</a>
35 36 37 38	Transmitter pressure data error (front - left) Transmitter pressure data error (front - right) Transmitter pressure data error (rear - right) Transmitter pressure data error (rear - left)	<a href="#">WT-37</a>
41 42 43 44	Transmitter function code error (front - left) Transmitter function code error (front - right) Transmitter function code error (rear - right) Transmitter function code error (rear - left)	<a href="#">WT-36</a>
45 46 47 48	Transmitter battery voltage low (front - left) Transmitter battery voltage low (front - right) Transmitter battery voltage low (rear - right) Transmitter battery voltage low (rear - left)	<a href="#">WT-36</a>
52	Vehicle speed signal	<a href="#">WT-38</a>
Warning lamp does not come on when ignition switch is turned on.	Fuse or unified meter and A/C amp. Low tire pressure warning control unit connector or circuit Low tire pressure warning control unit	<a href="#">WT-39</a>
Warning lamp stays on when ignition switch is turned on.	Fuse or unified meter and A/C amp. Low tire pressure warning control unit connector or circuit Low tire pressure warning control unit	<a href="#">WT-40</a>
Warning lamp blinks when ignition switch is turned on.	Low tire pressure warning control unit harness connector or circuit Low tire pressure warning control unit Transmitter's mode off ID registration not yet	<a href="#">WT-42</a>
Hazard warning lamp blinks when ignition switch is turned on.	Low tire pressure warning control unit harness connector or circuit Low tire pressure warning control unit	<a href="#">WT-43</a>
"TIRE PRESSURE" information in display does not exist.	Fuse Display control unit Low tire pressure warning control unit	<a href="#">WT-44</a>
ID registration cannot be completed.	Transmitter Antenna harness connector or circuit Antenna	<a href="#">WT-44</a>

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

---

## TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

PFP:00000

### Inspection 1: Transmitter or Low Tire Pressure Warning Control Unit MALFUNCTION CODE NO. 21, 22, 23 OR 24

AES00001

---

#### 1. CHECK CONTROL UNIT

- Drive for several minutes. Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM".

Are all tires' pressure displayed 0 kPa?

- YES >> GO TO 2.  
NO >> GO TO 3.

---

#### 2. CHECK ANTENNA CONNECTOR

- Check antenna and feeder connector R102 for damage or loose connections.

OK or NG

- OK >> Replace control unit, GO TO 3.  
NG >> Repair or replace antenna or feeder connector.

---

#### 3. ID REGISTRATION

- Carry out ID registration of all transmitters.

Is there a tire that cannot register ID?

- YES >> Replace transmitter of the tire, then GO TO 5.  
NO >> GO TO 4.

---

#### 4. VEHICLE DRIVING

- Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.  
Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> INSPECTION END.  
NO >> GO TO 5.

---

#### 5. ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> GO TO inspection applicable to DTC.  
NO >> INSPECTION END.

---

### Inspection 2: Transmitter - 1

#### MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48

AES00002

---

#### 1. ID REGISTRATION (CORRECTION OF TRANSMITTER LOCATION)

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

>> GO TO 2.

# TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

## 2. REPLACE TRANSMITTER

1. Check warning lamp for blink again, replace malfunctioning transmitter.
2. Carry out ID registration of all transmitter.

Can ID registration of all transmitters be completed?

- YES >> GO TO 3.  
NO >> GO TO Inspection 1.

## 3. VEHICLE DRIVING

- Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> INSPECTION END.  
NO >> Replace malfunctioning transmitter, and perform "Step 3" again.

### Inspection 3: Transmitter - 2 MALFUNCTION CODE NO. 35, 36, 37 OR 38

AES00003

## 1. CHECK ALL TIRE PRESSURE

- Check all tire pressures.

**Tire pressure : 220 kPa (2.2 kg/m<sup>2</sup> , 32 psi)**

- OK >> GO TO 2.  
NG >> Adjust tire pressure to specified value.

## 2. VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping. Check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 15 minutes after vehicle speed become 17 km/h (11 MPH).

>> Replace transmitter with new one if "DATA MONITOR ITEM" displayed 64 psi or more. Then GO TO 3.

## 3. ID REGISTRATION AND VEHICLE DRIVING

- Carry out ID registration of all transmitters.
- Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes. Then check all tires' pressure with CONSULT-II "DATA MONITOR ITEM" within 5 minutes.

Does "DATA MONITOR ITEM" displayed tire pressure as normal without any warning lamp?

- YES >> INSPECTION END.  
NO >> GO TO the inspection applicable to DTC.

# TROUBLE DIAGNOSIS FOR SELF-DIAGNOSTIC ITEMS

AES00004

## Inspection 4: Vehicle Speed Signal MALFUNCTION CODE NO. 52

### 1. SELF-DIAGNOSIS RESULT CHECK

1. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

**NOTE:**

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

2. Select "AIR PRESSURE MONITOR" on "SELECT SYSTEM" screen.
3. Select "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
4. Check display contents in self-diagnostic results.


Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

- YES >> Malfunction in CAN communication system. GO TO [LAN-4, "Precautions When Using CONSULT-II"](#).
- NO >> GO TO 2.

### 2. CHECK UNIFIED METER AND A/C AMP. POWER SUPPLY CIRCUIT

1. Disconnect unified meter and A/C amp. connector M56.
2. Check voltage between unified meter and A/C amp. harness connector M56 terminals 21 (R/W), 22 (G/R) and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Connector	Terminal (Wire color)	Ground
M56	21 (R/W)	
	22 (G/R)	12 V

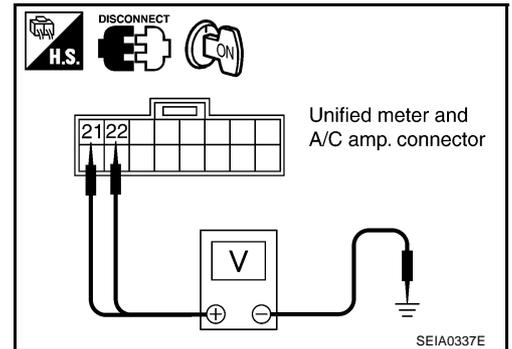


OK or NG

- OK >> GO TO 3.
- NG >> Check unified meter and A/C amp. power supply circuit for open or short.

### 3. CHECK UNIFIED METER AND A/C AMP. GROUND CIRCUIT

- Check continuity between unified meter and A/C amp. harness connector M56 terminals 29 (B), 30 (B) and ground.

Terminals		Continuity
(+)	(-)	
Connector	Terminal (Wire color)	Ground
M56	29 (B)	
	30 (B)	Yes

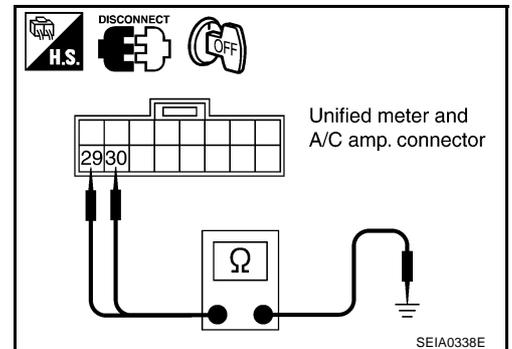

OK or NG

- OK >> Check unified meter and A/C amp. self-diagnostic. Refer to [DI-49, "SELF-DIAGNOSTIC RESULTS"](#).
- NG >> Repair or replace unified meter and A/C amp. ground circuit.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## TROUBLE DIAGNOSIS FOR SYMPTOMS

PF0:00007

### Inspection 1: Warning Lamp Does Not Come On When Ignition Switch Is Turned On.

AES00005

#### DIAGNOSTIC PROCEDURE

### 1. SELF-DIAGNOSIS RESULT CHECK

1. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

**NOTE:**

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

2. Select "AIR PRESSURE MONITOR" on "SELECT SYSTEM" screen.
3. Select "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
4. Check display contents in self-diagnostic results.

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

YES >> Malfunction in CAN communication system. GO TO [LAN-4, "Precautions When Using CONSULT-II"](#) .

NO >> GO TO 2.

### 2. CHECK COMBINATION METER

- Check combination meter operation.

OK or NG

OK >> GO TO 3.

NG >> Check combination meter. Refer to [DI-4, "System Description"](#) .

### 3. CHECK WARNING LAMP

- Disconnect low tire pressure warning control unit connector.

Does the warning lamp activate?

YES >> Replace low tire pressure warning control unit.

NO >> GO TO 4.

### 4. CHECK UNIFIED METER AND A/C AMP. POWER SUPPLY CIRCUIT


1. Disconnect unified meter and A/C amp. connector M56.
2. Check voltage between unified meter and A/C amp. harness connector M56 terminals 21 (R/W), 22 (G/R) and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Connector	Terminal (Wire color)	Ground 12 V
M56	21 (R/W)	
	22 (G/R)	

OK or NG

OK >> GO TO 5.

NG >> Check unified meter and A/C amp. power supply circuit for open or short.

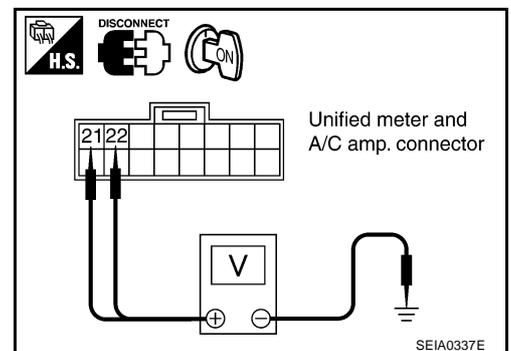

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. CHECK UNIFIED METER AND A/C AMP. GROUND CIRCUIT


- Check continuity between unified meter and A/C amp. connector M56 terminals 29 (B), 30 (B) and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (Wire color)	Ground	Yes
M56	29 (B)	Ground	
	30 (B)		

OK or NG

OK >> Check unified meter and A/C amp. Refer to [DI-31, "System Description"](#).

NG >> Repair or replace unified meter and A/C amp. ground circuit.

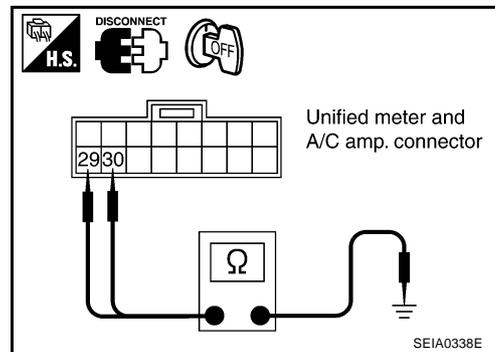

## Inspection 2: Warning Lamp Stays On When Ignition Switch Is Turned On.

AES00006

### DIAGNOSTIC PROCEDURE

#### 1. CHECK CONNECTOR

- Disconnect low tire pressure warning control unit connectors M74.
- Check terminals for damage or loose connections.

OK or NG

OK >> GO TO 2.

NG >> Repair or replace damaged parts.

#### 2. CHECK POWER SUPPLY CIRCUIT 1


Check voltage between low tire pressure warning control unit connector M74 terminal 12 (R/W) and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Connector	Terminal (Wire color)	Ground	12 V
M74	12 (R/W)	Ground	

OK or NG

OK >> GO TO 3.

NG >> Check low tire pressure warning control unit power supply circuit for open or short.

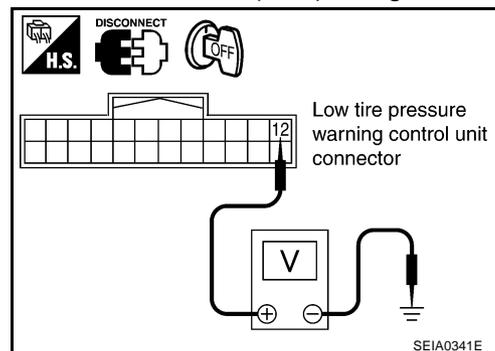

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 3. CHECK POWER SUPPLY CIRCUIT 2


1. Turn ignition switch ON.
2. Check voltage between low tire pressure warning control unit connector M74 terminals 11 (LG/R), 24 (G/R) and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Connector	Terminal (Wire color)	Ground	12 V
M74	11 (LG/R) 24 (G/R)		

OK or NG

OK >> GO TO 4.

NG >> Check low tire pressure warning control unit power supply circuit for open or short.

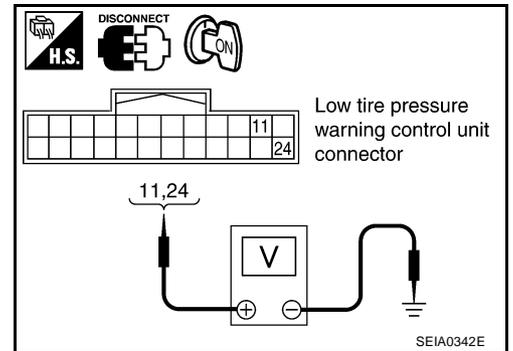

## 4. CHECK GROUND CIRCUIT


- Check continuity between low tire pressure warning control unit connector M74 terminal 20(B) and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (Wire color)	Ground	Yes
M74	20 (B)		

OK or NG

OK >> Replace low tire pressure warning control unit.

NG >> Repair or replace low tire pressure warning control unit ground circuit.

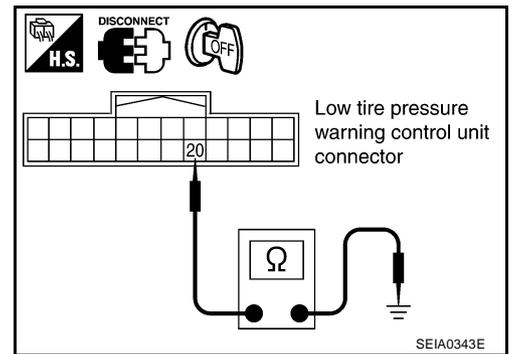

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## Inspection 3: Warning Lamp Blinks When Ignition Switch Is Turned On.


AES00007

**NOTE:**

If warning lamp blink below, the system is normal.

Blink Mode A

- This mode shows transmitter status is OFF-mode. Carry out transmitter wake up operation. Refer to [WT-30. "Transmitter Wake Up Operation"](#).

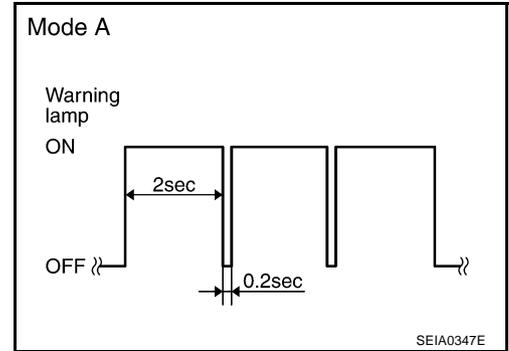

**DIAGNOSTIC PROCEDURE**

**1. CHECK CONNECTOR**

- Disconnect low tire pressure warning control unit connectors M74 and R102.
- Check terminals for damage or loose connections.

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.


**2. CHECK TIRE PRESSURE WARNING CHECK CONNECTOR CIRCUIT**

- Disconnect low tire pressure warning control unit connector M74.
- Check continuity between low tire pressure warning control unit harness connector M74 terminal 8 (G) and ground.

Terminals		Continuity
(+)	(-)	
Connector	Terminal (Wire color)	Ground
M74	8 (G)	No

OK or NG

- OK >> Replace low tire pressure warning control unit.
- NG >> Repair or replace harness connector.

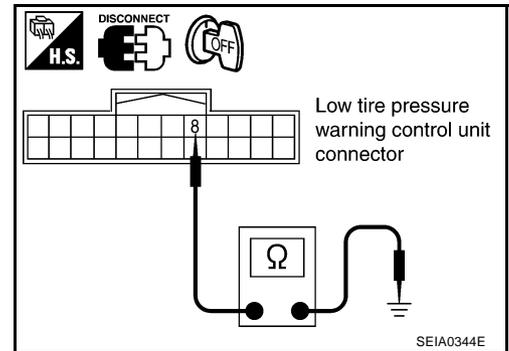

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## Inspection 4: Hazard Warning Lamp Blinks When Ignition Switch Is Turned On.

AES00008

### DIAGNOSTIC PROCEDURE


#### 1. CHECK GROUND CIRCUIT

1. Disconnect low tire pressure warning control unit connector M74.
2. Check continuity between low tire pressure warning control unit harness connector M74 terminal 20 (B) and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (Wire color)	Ground	Yes
<b>M74</b>	<b>20 (B)</b>		

#### OK or NG

- OK >> Replace low tire pressure warning control unit.  
 NG >> Repair or replace low tire pressure warning control unit ground circuit.

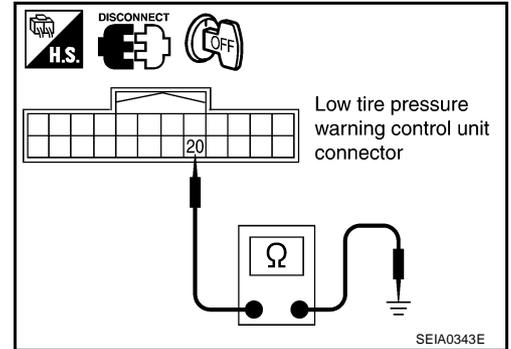

A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## Inspection 5: "TIRE PRESSURE" Information In Display Unit Does Not Exist.

AES00009

### DIAGNOSTIC PROCEDURE

#### 1. SELF-DIAGNOSIS RESULT CHECK

---

1. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

**NOTE:**

If "AIR PRESSURE MONITOR" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

2. Select "AIR PRESSURE MONITOR" on "SELECT SYSTEM" screen.
3. Select "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
4. Check display contents in self-diagnostic results.

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

- YES >> Malfunction in CAN communication system. GO TO [LAN-4, "Precautions When Using CONSULT-II"](#) .
- NO >> GO TO 2.

#### 2. CHECK DISPLAY CONTROL UNIT

---

- Perform display control unit self-diagnosis. Refer to [AV-157, "Self-Diagnosis Mode \(DCU\)"](#) .

OK or NG

- OK >> Replace low tire pressure warning control unit.
- NG >> Repair or replace malfunctioning parts.

## Inspection 6: ID Registration Cannot Be Completed.

AES0000A

### DIAGNOSTIC PROCEDURE

#### 1. ID REGISTRATION (ALL)

---

- Carry out ID registration of all transmitters.
- Can ID registration of all transmitters be completed?

YES or NO

- YES >> INSPECTION END.
- NO >> GO TO [WT-36, "Inspection 1: Transmitter or Low Tire Pressure Warning Control Unit"](#) .

# REMOVAL AND INSTALLATION


## REMOVAL AND INSTALLATION

PPF:00000


### Transmitter REMOVAL

AES000KA

1. Deflate tire. Unscrew transmitter retaining nut and allow transmitter to fall into tire.
2. Gently bounce tire so that transmitter falls to bottom of tire. Place on tire changing machine and break both tire beads ensuring that the transmitter remains at the bottom of the tire.


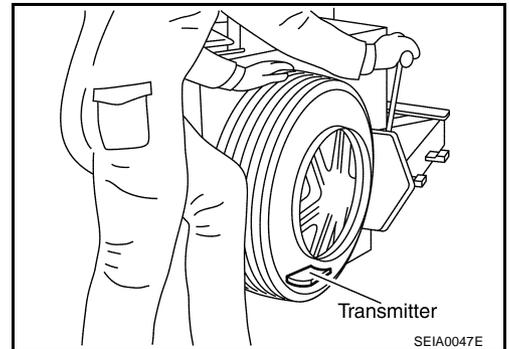


3. Turn tire so that valve hole is at bottom and bounce so that transmitter is near valve hole. Carefully lift tire onto turntable and position valve hole (and transmitter) 270 degree from mounting/dismounting head.
4. Lubricate tire well and remove first side of the tire. Reach inside the tire and remove the transmitter. Remove second side of tire.

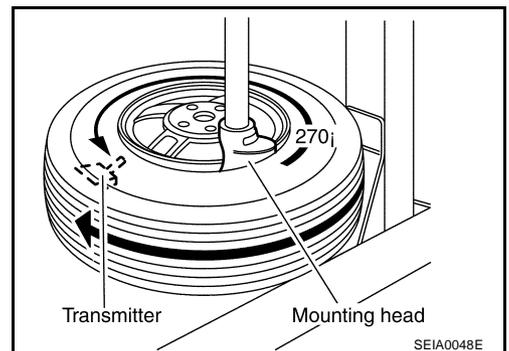

### INSTALLATION

1. Put first side of tire onto rim.
2. Mount transmitter on rim and tighten nut.

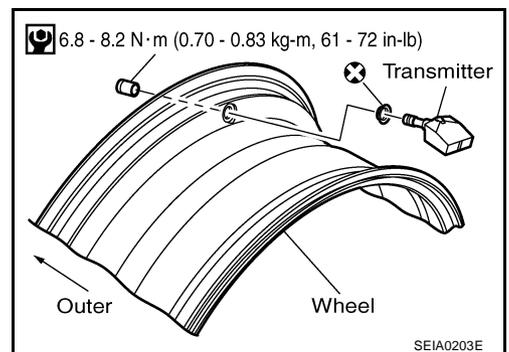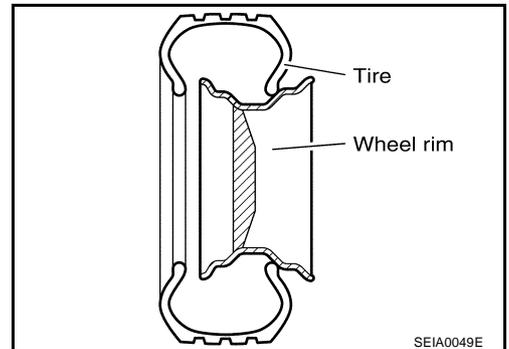


A  
B  
C  
D  
WT  
F  
G  
H  
I  
J  
K  
L  
M

## REMOVAL AND INSTALLATION

3. Place wheel on turntable of tire machine. Ensure that transmitter is 270 degree from mounting head when second side of tire is fitted.

**NOTE:**

Do not touch transmitter at mounting head.

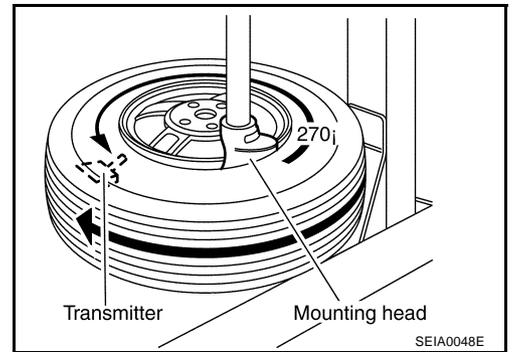

4. Lubricate tire well and fit second side of tire as normal. Ensure that tire does not rotate relative to rim.
5. Inflate tire and fit to appropriate wheel position.

# SERVICE DATA

## SERVICE DATA

PFP:00030

### Road Wheel

AES000KB

A  
B  
C  
D

Kind of wheel		Aluminum	Steel (for emergency use)
Deflection limit	Lateral deflection	Less than 0.3 mm (0.012 in)	Less than 1.0 mm (0.039 in)
	Vertical deflection	Less than 0.3 mm (0.012 in)	Less than 1.2 mm (0.047 in)
Allowable quantity of residual unbalance	Dynamic (At rim flange)	Less than 7.5 g (0.26 oz) (per side)	—
	Static (At rim flange)	Less than 20 g (0.70 oz)	—

WT

### Tire

AES000KC

Unit: kPa (kg/cm<sup>2</sup>, psi)

F  
G  
H

Tire size	Air pressure	
	Front wheel	Rear wheel
P265/60R18 109V	220 (2.2, 32)	220 (2.2, 32)
P265/50R20 106V	220 (2.2, 32)	220 (2.2, 32)
T175/90D18 110M	420 (4.2, 60)	420 (4.2, 60)

### Tightening Torque

AES000KD

I  
J  
K  
L  
M

Wheel nut	108 N·m (11 kg·m, 80 ft·lb)
-----------	-----------------------------

**SERVICE DATA**

---