

SECTION **LAN**
LAN SYSTEM

CONTENTS

CAN FUNDAMENTAL

CAN

PRECAUTIONS	3	INDEX FOR DTC	40
Precautions When Using CONSULT-II	3	DTC No. Index	40
Precautions for Trouble Diagnosis	3	HOW TO USE THIS SECTION	41
Precautions for Harness Repair	3	Caution	41
SYSTEM DESCRIPTION	4	Abbreviation List	41
CAN Communication System	4	PRECAUTIONS	42
SYSTEM DIAGRAM	4	Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	42
CAN COMMUNICATION CONTROL CIRCUIT.....	5	Precautions When Using CONSULT-II	42
Diag on CAN	6	Precautions for Trouble Diagnosis	42
DESCRIPTION	6	Precautions for Harness Repair	42
SYSTEM DIAGRAM	6	TROUBLE DIAGNOSIS	44
TROUBLE DIAGNOSIS	7	CAN Diagnostic Support Monitor	44
Condition of Error Detection	7	MONITOR ITEM LIST (CONSULT-II)	44
CAN COMMUNICATION SYSTEM ERROR	7	MONITOR ITEM LIST (ON-BOARD DIAGNO- SIS)	48
WHEN INDICATED "U1000" OR "U1001" IS INDI- CATED EVEN THOUGH CAN COMMUNICA- TION SYSTEM IS NORMAL	7	CAN System Specification Chart	49
Symptom When Error Occurs in CAN Communi- cation System	8	VEHICLE EQUIPMENT IDENTIFICATION INFORMATION	49
ERROR EXAMPLE	8	CAN Communication Signal Chart	50
Self-Diagnosis	12	TYPE 1/TYPE 2	50
CAN Diagnostic Support Monitor	13	TYPE 3	52
MONITOR ITEM (CONSULT-II)	13	TYPE 4/TYPE 5	54
MONITOR ITEM (ON-BOARD DIAGNOSIS)	14	TYPE 6	57
TROUBLE DIAGNOSES WORK FLOW	15	Schematic	60
Information Needed for Trouble Diagnosis	15	Wiring Diagram — CAN —	61
How to Use CAN Communication Signal Chart	15	Interview Sheet	64
Trouble Diagnosis Flow Chart	16	Data Sheet	65
Trouble Diagnosis Procedure	17	CONSULT-II DATA ATTACHMENT SHEET	65
INTERVIEW WITH CUSTOMER	17	ON-BOARD DIAGNOSIS COPY SHEET	68
INSPECTION OF VEHICLE CONDITION	18	CAN System (Type 1)	69
CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)..	19	DIAGNOSIS SHEET	69
CREATE INTERVIEW SHEET	21	CAN System (Type 2)	70
CREATE DATA SHEET	22	DIAGNOSIS SHEET	70
CREATE DIAGNOSIS SHEET	24	CAN System (Type 3)	71
DETECT THE ROOT CAUSE	25	DIAGNOSIS SHEET	71
		CAN System (Type 4)	72
		DIAGNOSIS SHEET	72

CAN System (Type 5)	73	ECM Branch Line Circuit	80
DIAGNOSIS SHEET	73	AWD Control Unit Branch Line Circuit	80
CAN System (Type 6)	74	Display Control Unit Branch Line Circuit	81
DIAGNOSIS SHEET	74	ICC Unit Branch Line Circuit	82
Component Parts Location	75	TCM Branch Line Circuit	82
Harness Layout	75	BCM Branch Line Circuit	83
Malfunction Area Chart	76	Data Link Connector Branch Line Circuit	84
MAIN LINE	76	Intelligent Key Unit Branch Line Circuit	84
BRANCH LINE	76	LDW Camera Unit Branch Line Circuit	85
SHORT CIRCUIT	76	Steering Angle Sensor Branch Line Circuit	86
Main Line Between TCM and Data Link Connector..	77	Unified Meter and A/C Amp. Branch Line Circuit ...	86
Main Line Between Data Link Connector and Unified		ABS Actuator and Electric Unit (Control Unit) Branch	
Meter and A/C Amp.	77	Line Circuit	87
Main Line Between Unified Meter and A/C Amp. and		ICC Sensor Branch Line Circuit	88
ABS Actuator and Electric Unit (Control Unit)	78	Driver Seat Control Unit Branch Line Circuit	89
Main Line Between ABS Actuator and Electric Unit		IPDM E/R Branch Line Circuit	89
(Control Unit) and Driver Seat Control Unit	79	CAN Communication Circuit	90

PRECAUTIONS

PF0:00001

Precautions When Using CONSULT-II

NKS004M7

Use CONSULT-II CONVERTER when connecting CONSULT-II to data link connector.

CAUTION:

CAN communication does not function properly if CONSULT-II is used without connecting CONSULT-II CONVERTER.

Precautions for Trouble Diagnosis

NKS004M8

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

NKS004M9

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

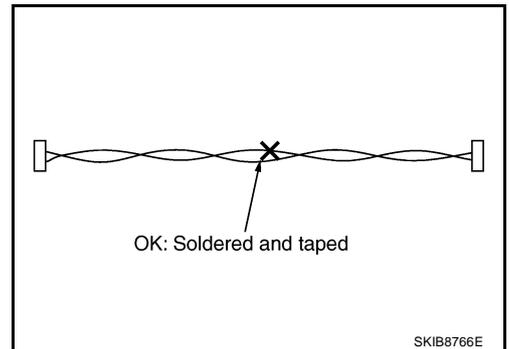

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

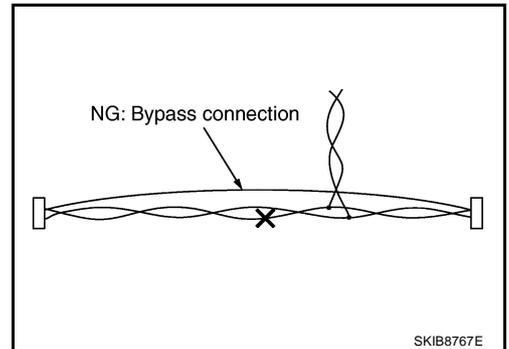

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A
B
C
D
E
F
G
H
I
J
LAN
L
M

SYSTEM DESCRIPTION


PFP:00000

CAN Communication System

NKS004MA

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.


SYSTEM DIAGRAM

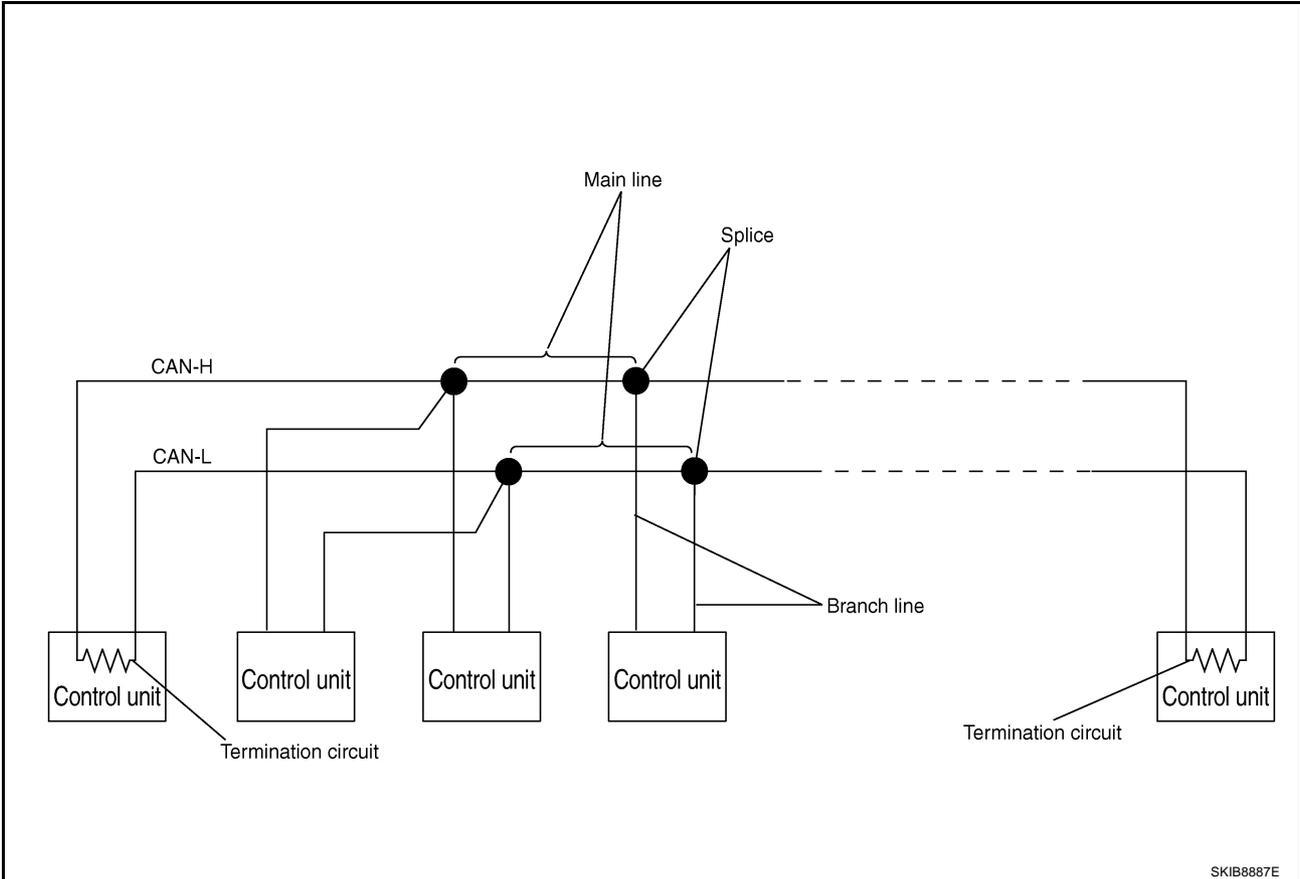

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-5. "CAN COMMUNICATION CONTROL CIRCUIT" .

CAN COMMUNICATION CONTROL CIRCUIT

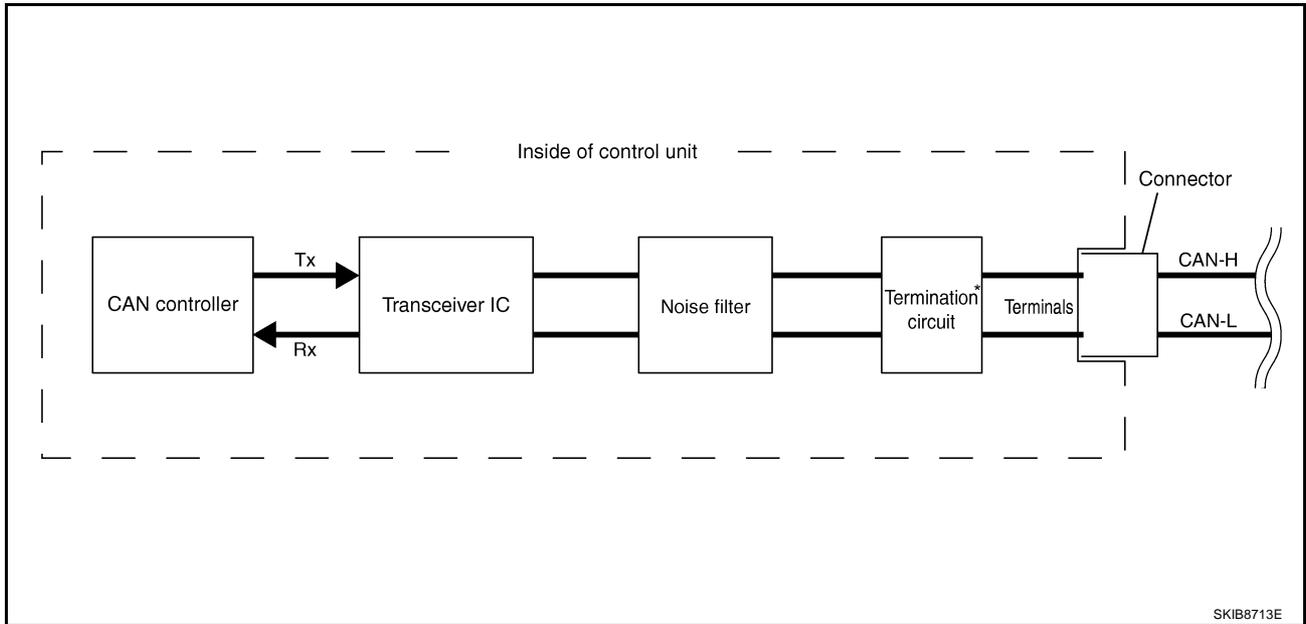

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.


A
B
C
D
E
F
G
H
I
J
L
M

LAN

Diag on CAN DESCRIPTION

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication line, between control unit and diagnosis unit.

SYSTEM DIAGRAM

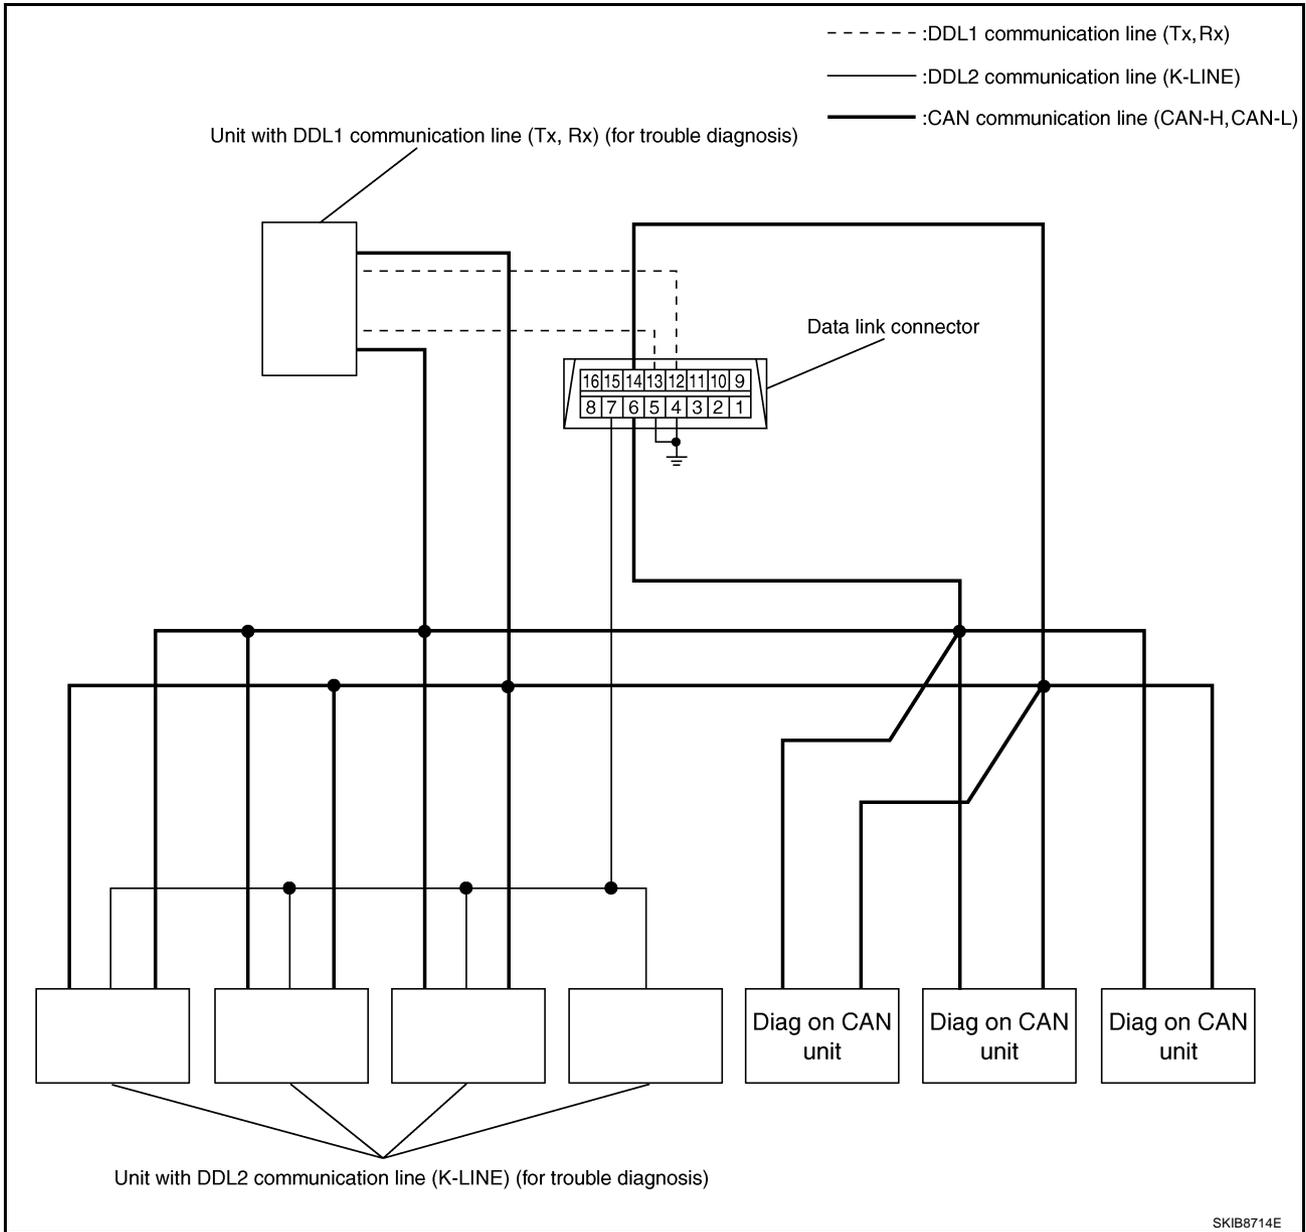

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

TROUBLE DIAGNOSIS

PFP:00004

Condition of Error Detection

NKS004MC

“U1000” or “U1001” is indicated on SELF-DIAG RESULTS on CONSULT-II if CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN INDICATED “U1000” OR “U1001” IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- CONSULT-II CONVERTER not connected: Error may be detected by the self-diagnosis when not using CONSULT-II CONVERTER (Depending on the control unit which carries out CAN communication).
- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

NOTE:

CAN communication system is normal if “U1000” or “U1001” is indicated on SELF-DIAG RESULTS of CONSULT-II under the above conditions. Erase the memory of the self-diagnosis of each unit.

A

B

C

D

E

F

G

H

I

J

LAN

L

M

Symptom When Error Occurs in CAN Communication System

NKS004MD


In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-41, "Abbreviation List"](#) for the unit abbreviation.


Example: TCM branch line open circuit

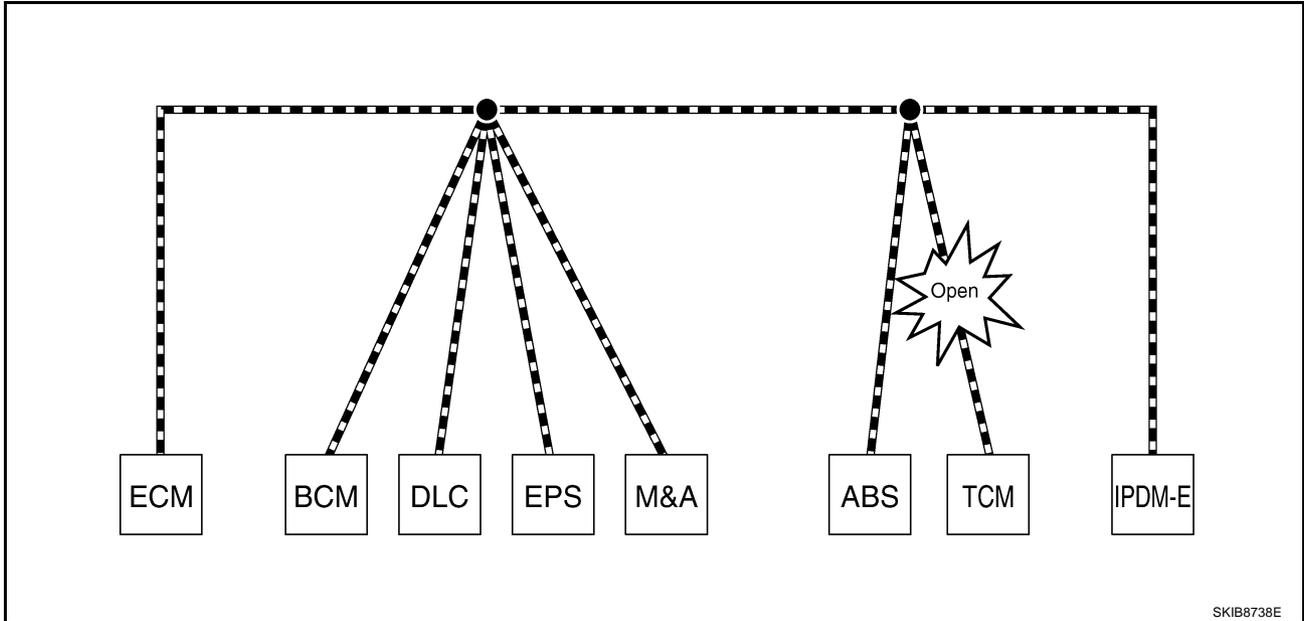

SKIB8738E

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> ● Shift position indicator and OD OFF indicator turn OFF. ● Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

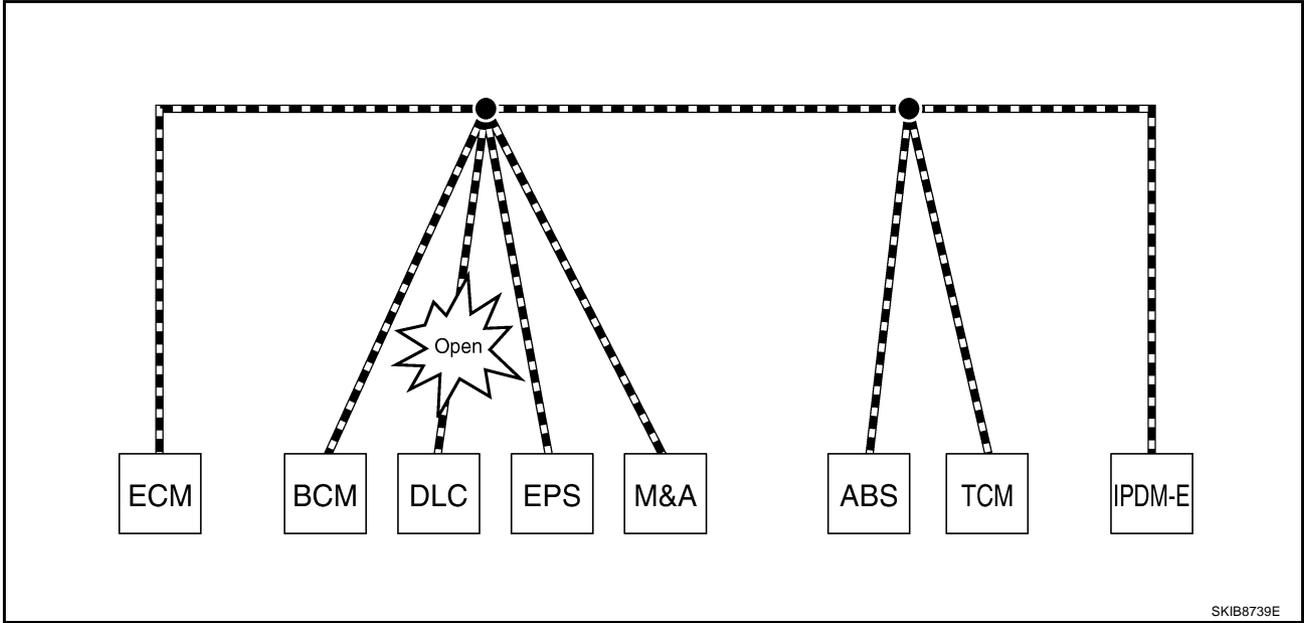

Unit name	Symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals is not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- When data link connector branch line is open, the screen-display of the CONSULT-II "SELECT SYSTEM" screen may be the same as when the CAN communication line has short-circuit. However, symptoms differ depending on the case. See below chart for the differences.

	SELECT SYSTEM (CONSULT-II)	Difference of symptom
Data link connector branch line open circuit	All Diag on CAN units are not indicated.	Normal operation.
CAN-H, CAN-L harness short-circuit		Most the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

A
B
C
D
E
F
G
H
I
J


LAN

L
M

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

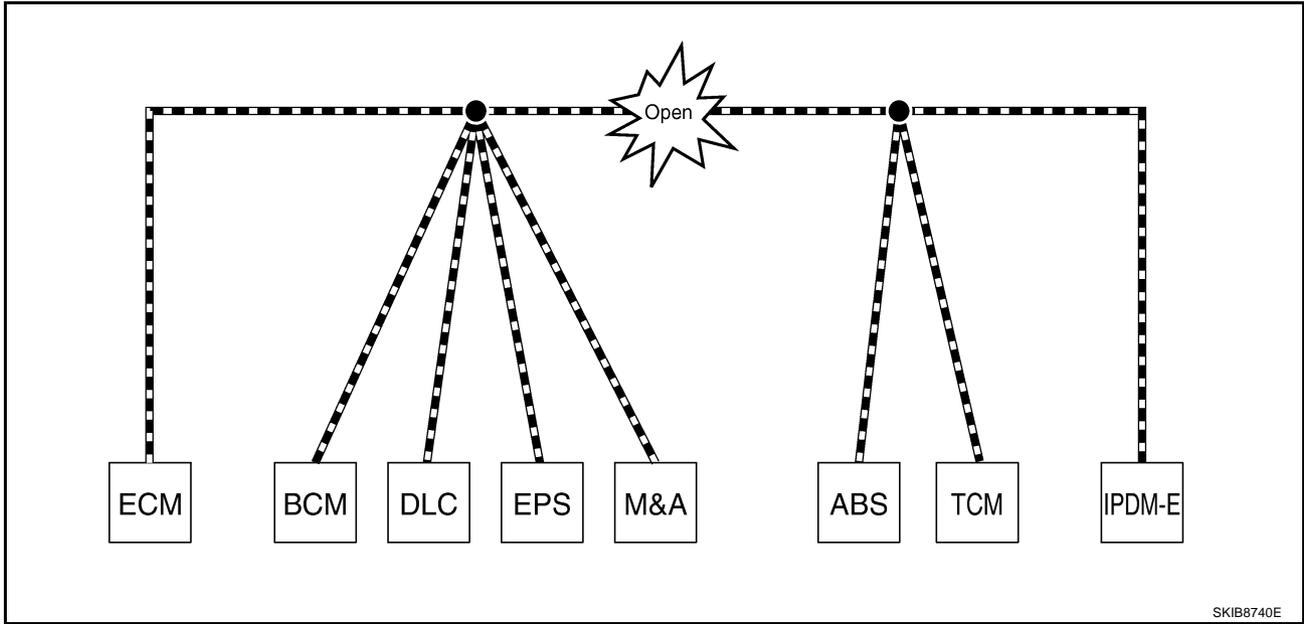


SKIB8740E

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> ● Reverse warning chime does not sound. ● The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> ● The shift position indicator and OD OFF indicator turn OFF. ● The speedometer is inoperative. ● The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> ● The headlamps (Lo) turn ON. ● The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Example: CAN-H, CAN-L Harness Short Circuit

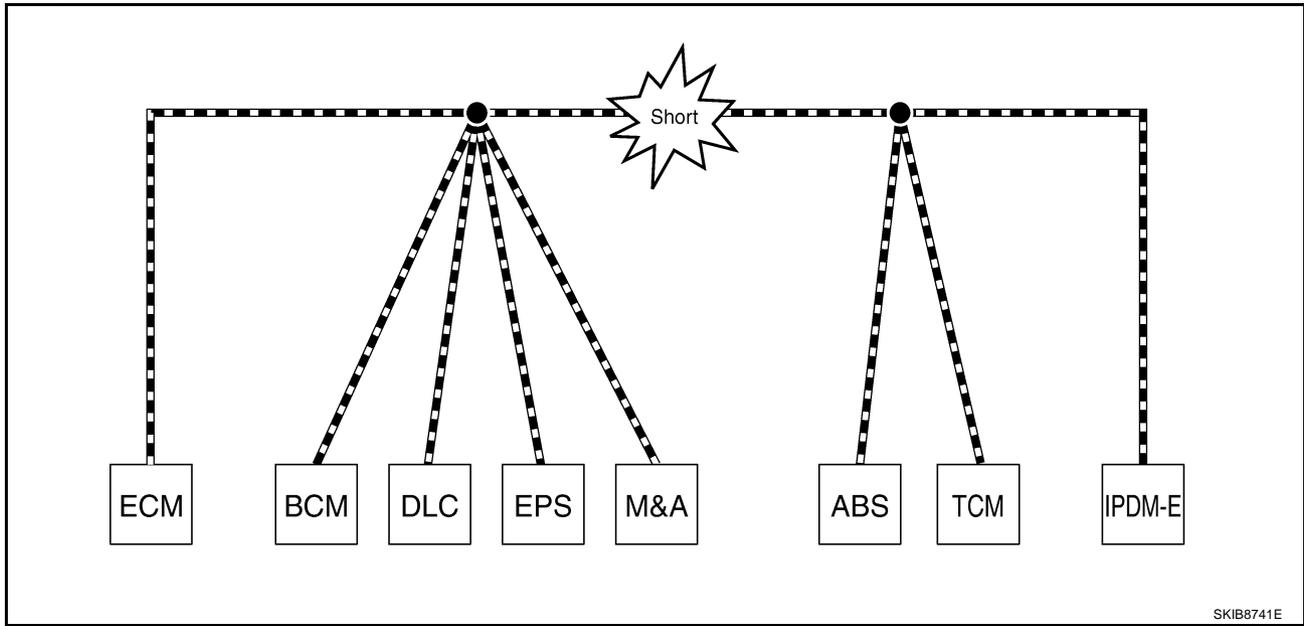

SKIB8741E

Unit name	Symptom
ECM	<ul style="list-style-type: none"> ● Engine torque limiting is affected, and shift harshness increases. ● Engine speed drops.
BCM	<ul style="list-style-type: none"> ● Reverse warning chime does not sound. ● The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. ● The room lamp does not turn ON. ● The engine does not start (if an error or malfunction occurs while turning the ignition switch is OFF.) ● The steering lock does not release (if an error or malfunction occurs while turning the ignition switch is OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> ● The tachometer and the speedometer do not move. ● Warning lamps turn ON. ● Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> ● The headlamps (Lo) turn ON. ● The cooling fan continues to rotate.

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Self-Diagnosis

NKS004ME

DTC	Self-diagnosis item (CONSULT-II indication)	DTC detection condition	Inspection/Action
U1000	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Refer to LAN-15 . "TROUBLE DIAGNOSES WORK FLOW" .
		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.	
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.	Start the inspection. Refer to the applicable section of the indicated control unit.
U1010	CONTROL UNIT [CAN]	When an error is detected during the initial diagnosis for CAN controller of each control unit.	Replace the control unit indicating "U1010".

CAN Diagnostic Support Monitor

NKS004MF

CONSULT-II and CAN diagnostic support monitor (on-board diagnosis function) are used for detecting root cause.

MONITOR ITEM (CONSULT-II)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
SYSTEM	ENGINE		SYSTEM	ENGINE	
DATE			DATE		
P/#			P/#		
		PRSNT			PRSNT PAST
INITIAL DIAG		OK	TRANSMIT DIAG		OK OK
TRANSMIT DIAG		OK	VDC/TCS/ABS		- -
TCM		OK	METER/M&A		OK OK
VDC/TCS/ABS		UNKWN	BCM/SEC		OK OK
METER/M&A		OK	ICC		- -
ICC		UNKWN	HVAC		- -
BCM/SEC		OK	TCM		OK OK
IPDM E/R		OK	EPS		- -
			IPDM E/R		OK OK
			e4WD		- -
			AWD/4WD		OK OK

SKIB8742E

Without PAST

Item	PRSNT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more. Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more. Diagnosis not performed
	UNKWN	No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present
	-	-	Diagnosis not performed. No control unit for receiving signals. (No applicable optional parts)

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-II is not available.)

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed.
		No control unit for receiving signals. (No applicable optional parts)	

TROUBLE DIAGNOSES WORK FLOW

PFP:00004

Information Needed for Trouble Diagnosis

NKS004MG

CAN communication system performs trouble diagnosis with the following tools.

Tool	Usage
Interview sheet	For filling in vehicle information and interview with customer.
Data sheet	For attaching CONSULT-II data or on-board diagnosis data.
Diagnosis sheet	For detecting the root cause. (Diagnosis sheet includes system diagram for every CAN system type)
SELECT SYSTEM (CONSULT-II)	For checking the condition of control units and the status of CAN communication.
SELF-DIAG RESULTS (CONSULT-II)	
CAN DIAG SUPPORT MNTR (CONSULT-II)	
CAN communication signal chart	For converting information received from a customer into CAN communication signal transmission and reception. This information can be used to judge whether a circuit between control units is normal or abnormal.
Abbreviation list	For checking abbreviations in CAN communication signal chart and diagnosis sheet.

How to Use CAN Communication Signal Chart

NKS004MH


The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.


T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

No communication between ECM and M&A.




It indicates that an error occurs between ECM and M&A (Shaded area).

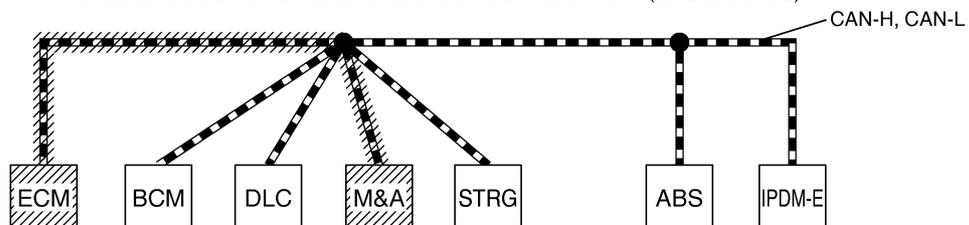

SKIB8715E

Trouble Diagnosis Flow Chart

NK5004MI

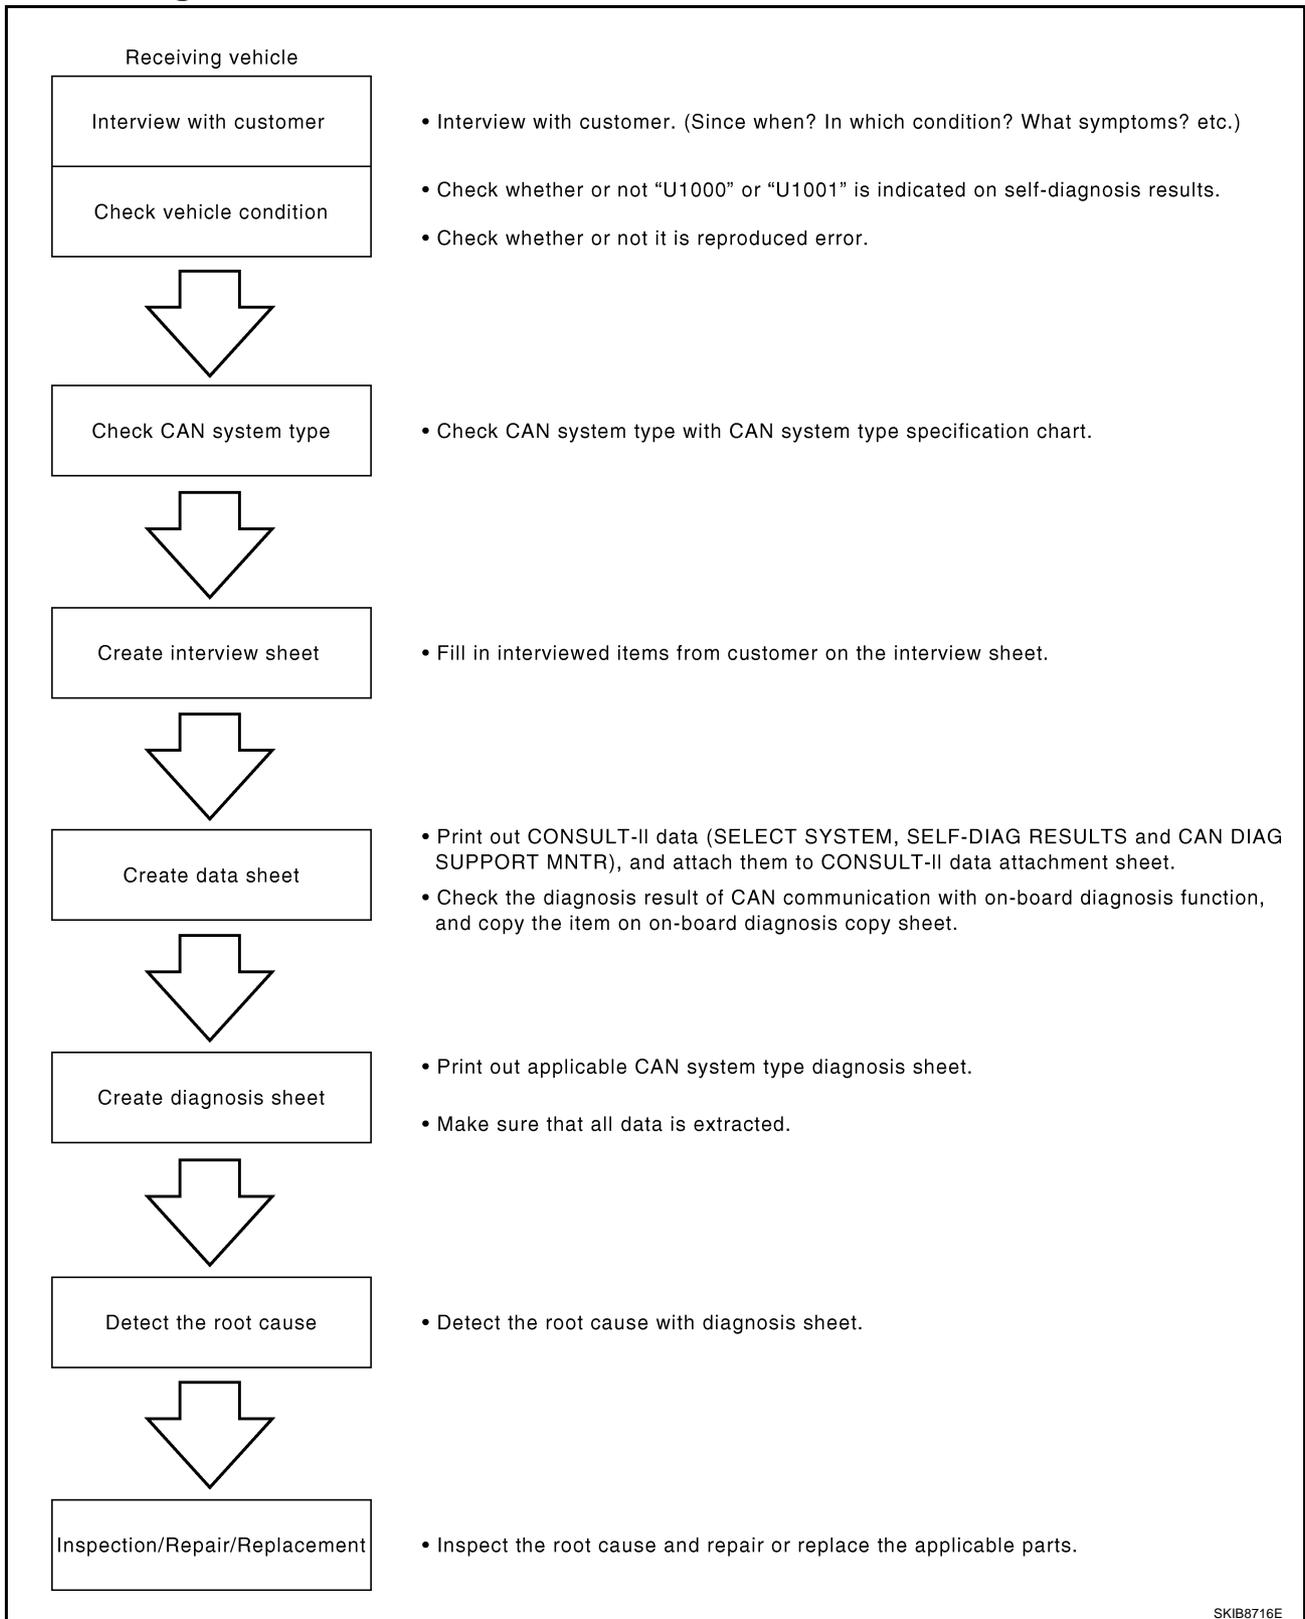

Trouble Diagnosis Procedure

INTERVIEW WITH CUSTOMER


Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

NOTE:

- Check normal units as well as error symptoms.
 - Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious from the customer, and it performs CAN communication with many units.

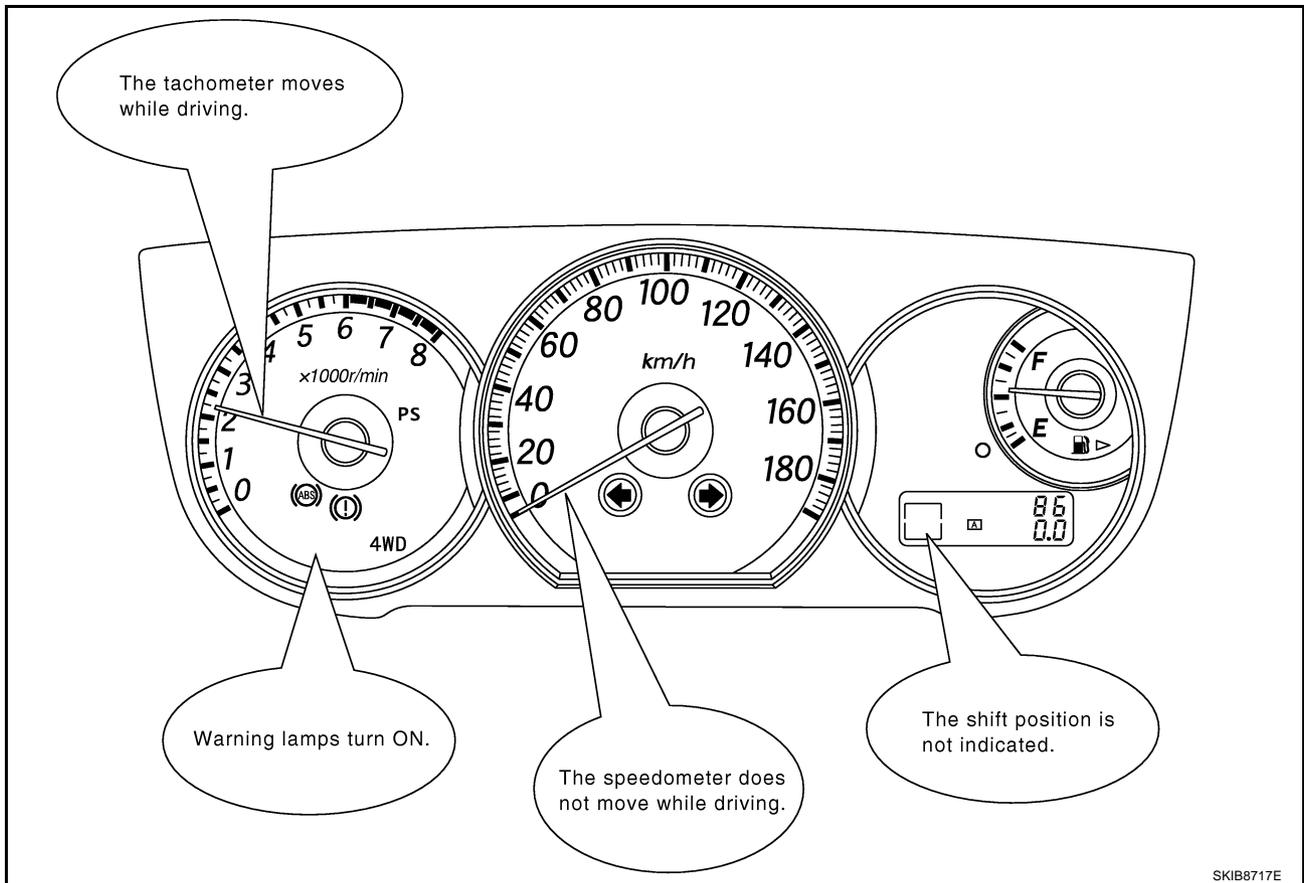

A
B
C
D
E
F
G
H
I
J
LAN
L
M

INSPECTION OF VEHICLE CONDITION

- Check whether or not "U1000" or "U1001" is indicated on "SELF-DIAG RESULTS" by CONSULT-II.

NOTE:

Root cause cannot be detected using the procedure in this section if "U1000" or "U1001" is not indicated.

- Check whether the symptom is reproduced or not.

NOTE:

- Never turn the ignition switch OFF or disconnect the battery cable while the reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

- The procedures for present errors differ from the procedures for past errors. Refer to [LAN-25](#). "[DETECT THE ROOT CAUSE](#)".

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment. Then choose the correct diagnosis sheet.

NOTE:

There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE		VQ35DE			
Transmission	A/T		CVT			
Brake control	ABS				VDC	
Intelligent Key system		X		X		X
CAN system type	1	2	3	4	5	6
Diagnosis sheet	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"		XX-XX. "TYPE 3/TYPE 4"		XX-XX. "TYPE 5/TYPE 6"	

X : Applicable

Check the vehicle equipment with the vehicle identification number plate.


Check the vehicle equipment.

The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

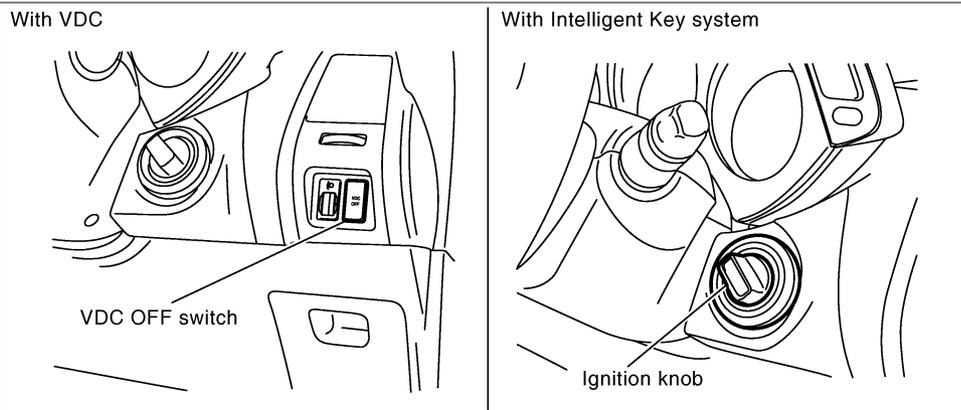

- In the above example,
 - Checking VDC OFF switch leads to judge whether or not VDC is equipped.
 - Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

For the above case, CAN system type is "6".

SKIB888E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CAN System Type Specification Chart (Style B)

NOTE:

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart

Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	AAA SPECIFICATION CHART A	XY XY SPECIFICATION CHART B	AAA SPECIFICATION CHART C

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

Select the applicable vehicle equipment. Refer to the specification chart.

x: Applicable

SPECIFICATION CHART B

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		x			x	x			x	x		x
Intelligent Key system			x		x		x	x	x	x	x	x
Navigation system				x		x	x		x			x
Automatic drive positioner								x		x	x	x
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
Diagnosis sheet	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX	XX: XX
CAN communication signal chart	XX:XX TYPE 9TYPE 10TYPE 11TYPE 12TYPE 13TYPE 14TYPE 15TYPE 16TYPE 17TYPE 18TYPE 19TYPE 20											

Check the vehicle equipment.


The number indicates the CAN system type of the vehicle.

x: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

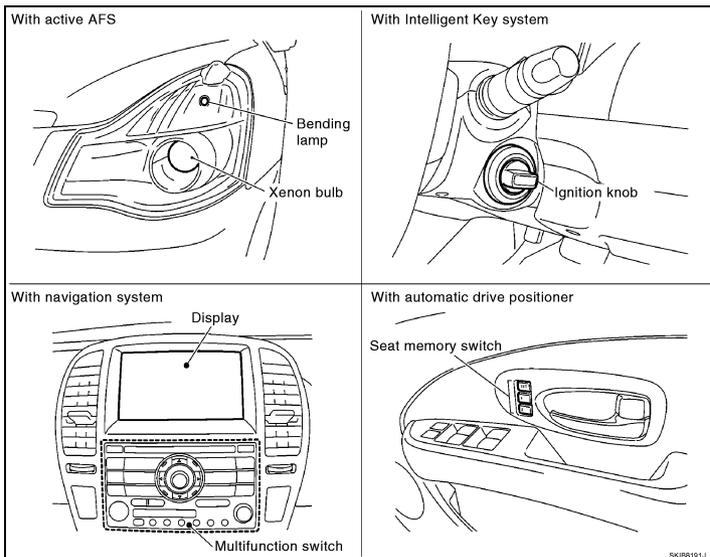

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

[For the above case, CAN system type is "20".]

SKIB8889E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet

Date received: 3, Feb. 2005

Type: DBA-KG11

VIN No.: KG11-005040

Model: BDRARGZ397EDA-E-J-

First registration: 10, Jan. 2005

Mileage: 952 km

CAN system type: Type 19

Symptom (Results from interview with customer)

- Headlamps suddenly turn ON while driving the vehicle.
- The engine does not restart after stopping the vehicle and turning the ignition switch OFF.
- The cooling fan continues rotating while turning the ignition switch ON.

Condition at inspection

Error Symptom: Present / Past

- The engine does not start.
While turning the ignition switch ON,
- The headlamps (Lo) turn ON, and the cooling fan continues rotating.
 - The interior lamp does not turn ON.
- On CONSULT-II screen,
- IPDM E/R is not indicated on SELECT SYSTEM.
 - ENGINE: U1001
 - BCM, ADAPTIVE LIGHT: U1000

SKIB8890E

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CREATE DATA SHEET


Create CONSULT-II Data Attachment Sheet

Print out the following CONSULT-II screens, and attach them to the CONSULT-II data attachment sheet.

- SELECT SYSTEM
- SELF-DIAG RESULTS
- CAN DIAG SUPPORT MNTR

NOTE:

Some items may not be needed depending on CAN system type of vehicle.

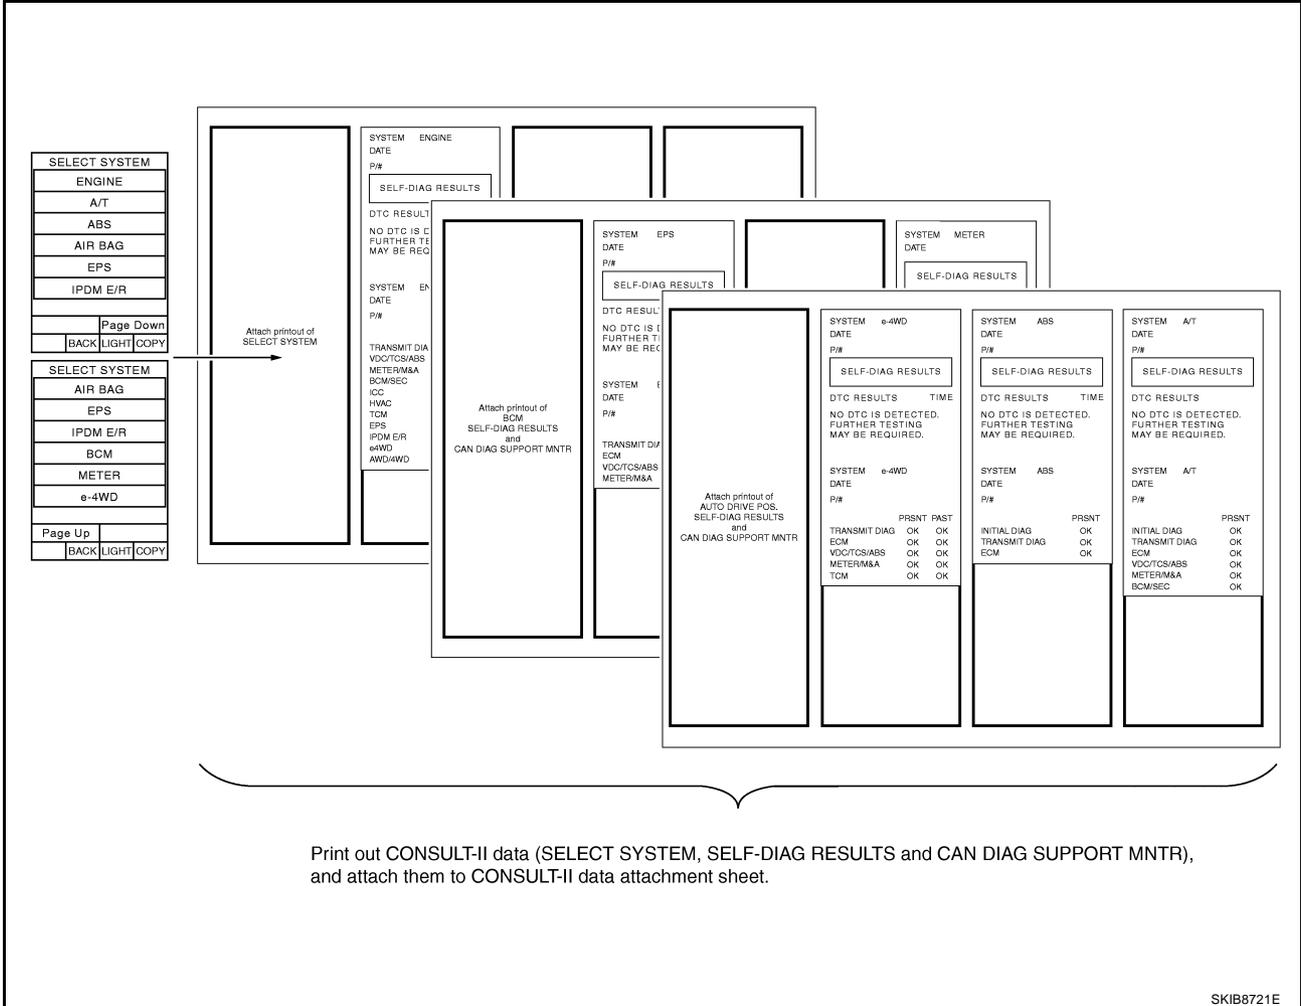

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Create On-board Diagnosis Copy Sheet

Display the trouble diagnosis result of CAN communication with the on-board diagnosis function on the vehicle monitor, etc. Copy them on the on-board diagnosis copy sheet.


NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-II is not available.)

Example: Copy the diagnosis result of CAN communication from the vehicle monitor.

Vehicle monitor indication

CAN DIAG SUPPORT MONITOR			
CAN_COMM	OK	0	Delete
CAN_CIRC_1	OK	0	
CAN_CIRC_2	UNKWN	12	
CAN_CIRC_3	UNKWN	12	
CAN_CIRC_4	UNKWN	0	
CAN_CIRC_5	OK	0	
CAN_CIRC_6	UNKWN	0	
CAN_CIRC_7	OK	0	
CAN_CIRC_8	UNKWN	0	
CAN_CIRC_9	UNKWN	50	



Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet

Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)	OK	0	CAN_CIRC_5 (Receive diagnosis of Unified meter and A/C amp.)	OK	0
CAN_CIRC_1 (Transmit diagnosis)	OK	0	CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)	UNKWN	12	CAN_CIRC_7 (Receive diagnosis of IPDM E/R)	OK	0
CAN_CIRC_3 (Receive diagnosis of ECM)	UNKWN	12	CAN_CIRC_8	Not available	
CAN_CIRC_4	Not available		CAN_CIRC_9	Not available	

Result indicated: Fill in the indication (OK, NG or UNKWN).
Error counter: Fill in the indicated number.

SKIB8722E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CREATE DIAGNOSIS SHEET

NOTE:

Be sure to use the diagnosis sheet for the correct CAN system type.


Print Diagnosis Sheet

Print the diagnosis sheet for the applicable CAN system type.

Check of Received Data

Check the created data sheet for missing information.

- For abbreviations, refer to [LAN-41, "Abbreviation List"](#).

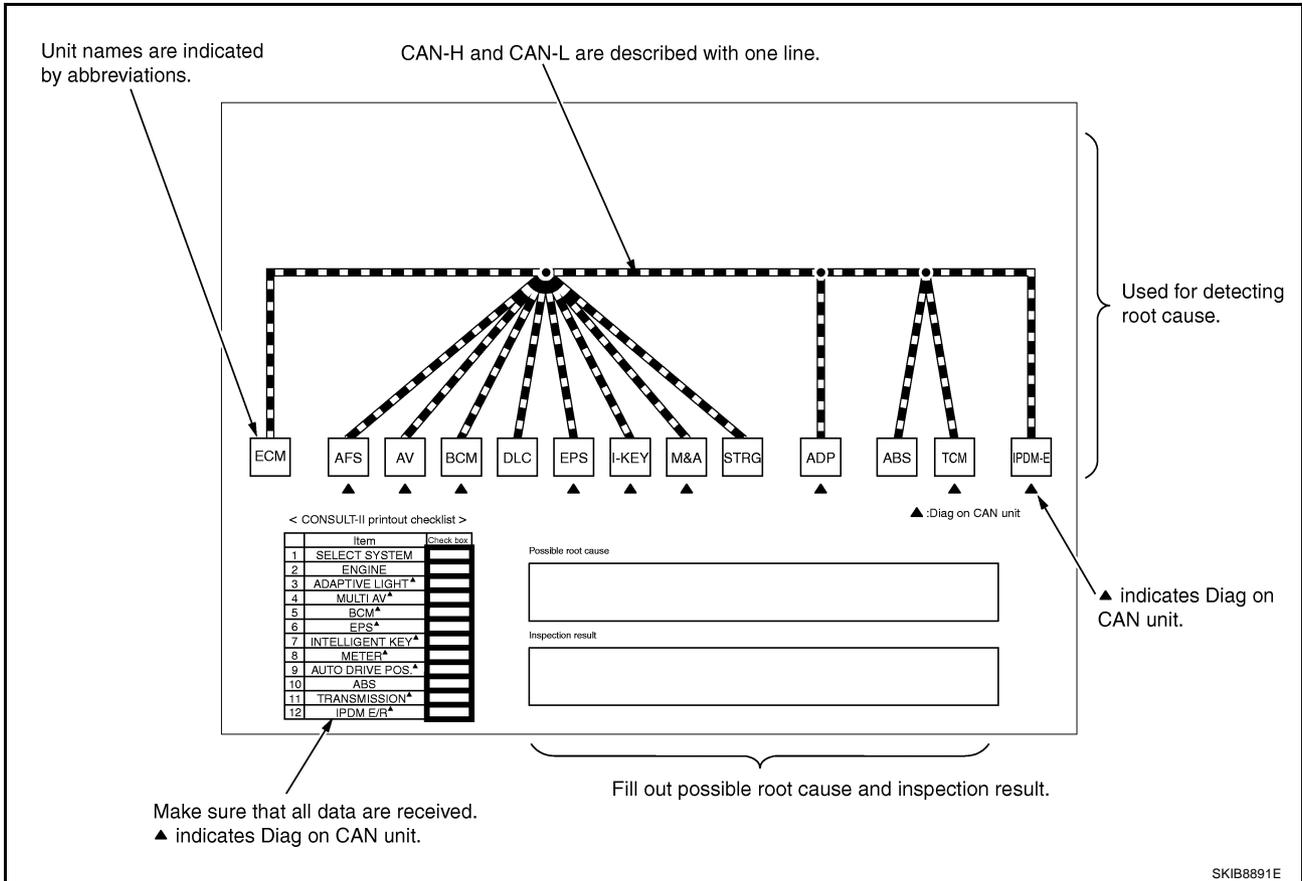

SKIB8891E

DETECT THE ROOT CAUSE

Identify the root cause using the created diagnosis sheet.

Identifying the root cause

- Draw a line on the diagnosis sheet to indicate the possible cause. Narrow the search.

NOTE:

- Color-code when drawing lines.
- Do not draw a line onto a existing line.
- Drawing a line is not necessary if the circuit is shorted. Refer to [LAN-32, "Present Error — Short Circuit —"](#) , [LAN-39, "Past Error — Short Circuit —"](#) .

Refer to the following for details of the trouble diagnosis procedure.

- [LAN-26, "Present Error — Open Circuit —"](#)
- [LAN-32, "Present Error — Short Circuit —"](#)
- [LAN-33, "Past Error — Open Circuit —"](#)
- [LAN-39, "Past Error — Short Circuit —"](#)

NOTE:

When the root cause appears to be a branch line or short circuit, be sure to check the control unit as well as the communication line.

A

B

C

D

E

F

G

H

I

J

LAN

L

M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Present Error — Open Circuit —

Identify the error circuit using information from the “SELECT SYSTEM” and “CAN DIAG SUPPORT MNTR” screens.

1. SELECT SYSTEM: Check the items indicated in “SELECT SYSTEM”. Draw a line on the diagnosis sheet to indicate the error circuit.

NOTE:


CAN communication line has no error if units other than Diag on CAN units are indicated. An error may be on the power supply of the control unit, DDL1 line or DDL2 line.

- a. “TRANSMISSION” which is Diag on CAN unit, is not indicated on “SELECT SYSTEM” screen. This indicates that DLC is not receiving a signal from TCM. Draw a line to indicate an error between DLC and TCM (line 1-a in the figure).

NOTE:

- Diag on CAN units are not indicated on the “SELECT SYSTEM” screen when the CAN line between Diag on CAN unit and the data link connector is open.
- For a description of Diag on CAN, refer to [LAN-6. "Diag on CAN"](#).

(Example)

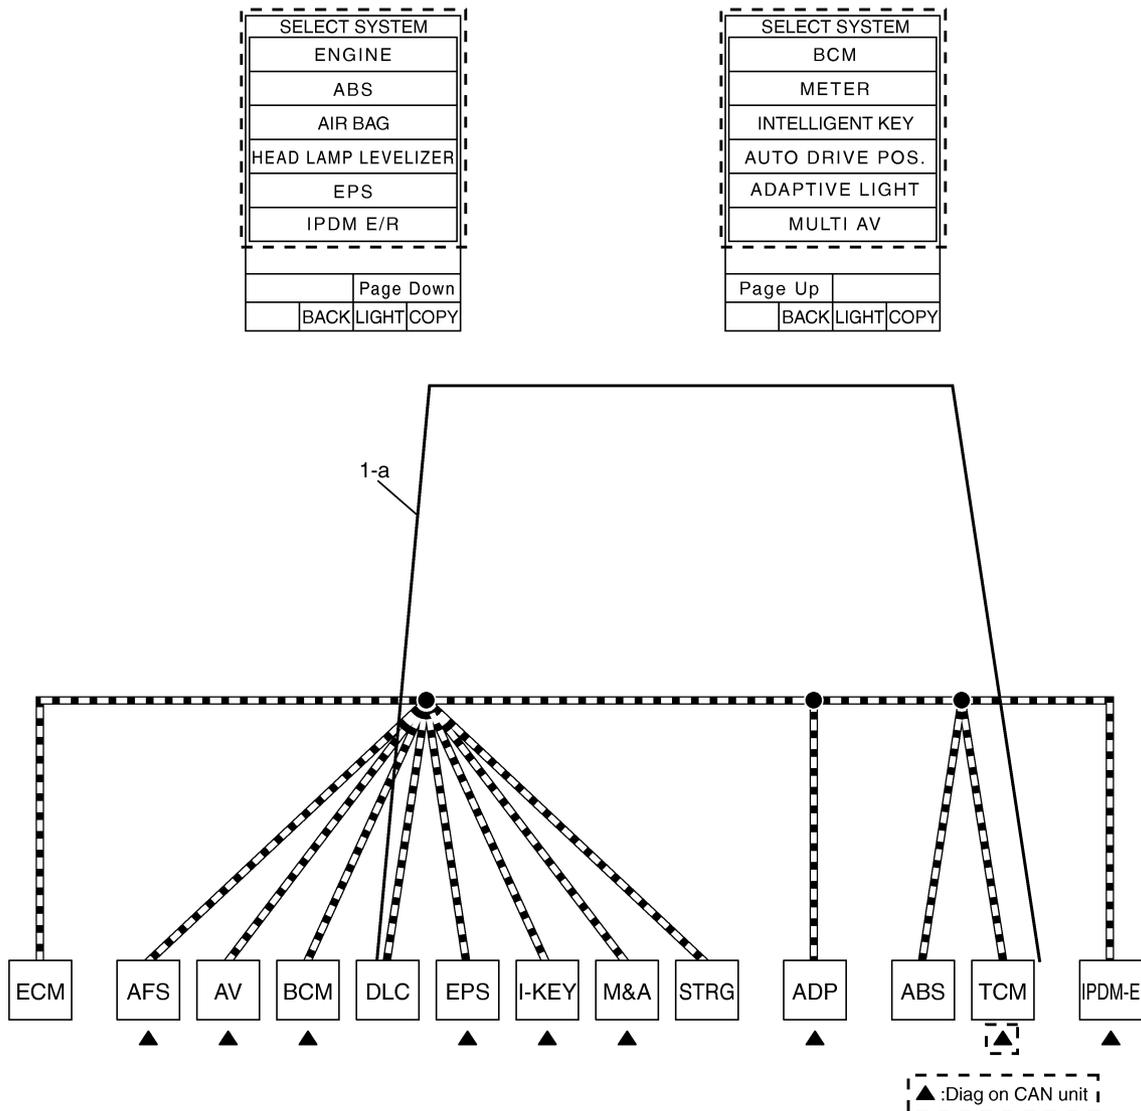

SKIB8892E


TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

2. CAN DIAG SUPPORT MNTR: Check each item on "CAN DIAG SUPPORT MNTR". Draw a line on the diagnosis sheet to indicate the error circuit.
 - a. Reception item of "ENGINE": On "TCM", "UNKWN" is indicated. This means ECM cannot receive the signal from TCM. Draw a line to indicate an error between ECM and TCM (line 2-a in the figure).

NOTE:
If "UNKWN" is indicated on "TRANSMIT DIAG", then the control unit cannot transmit CAN communication signal to each unit. Draw a line between the control unit and the splice.
 - b. Reception item of "ADAPTIVE LIGHT": On "TCM", "UNKWN" is indicated. This means AFS cannot receive the signal from TCM. Draw a line to indicate an error between AFS and TCM (line 2-b in the figure).
 - c. Reception item of "MULTI AV": "UNKWN" is not indicated. This indicates normal communication between AV and its receiving units. Do not draw any line.

A
B
C
D
E
F
G
H
I
J
L
M

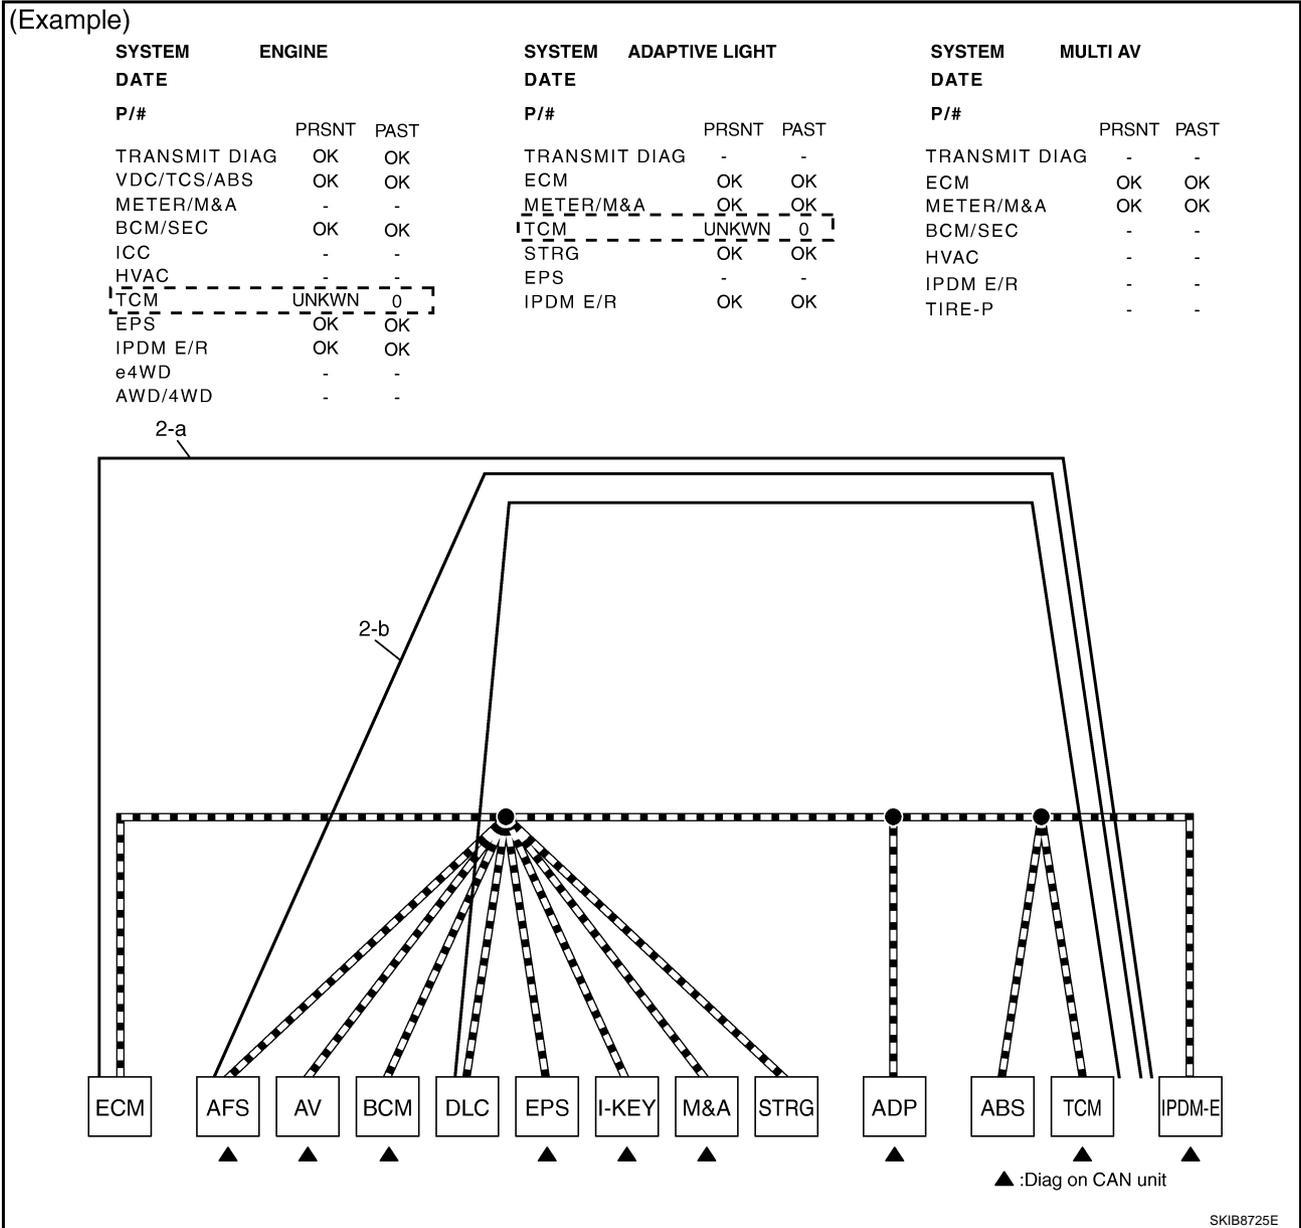

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


- d. Reception item of "BCM": On "TCM", "UNKWN" is indicated. This means BCM cannot receive the signal from TCM. Draw a line to indicate an error between BCM and TCM (line 2-d in the figure).
- e. Reception item of "EPS" and "INTELLIGENT KEY": "UNKWN" is not indicated. This indicates normal communication between EPS and I-KEY and their receiving units. Do not draw any line.

NOTE:

On CAN DIAG SUPPORT MNTR (without PAST), "UNKWN" is indicated even though the item is not used in the trouble diagnosis. For the details of each item on CAN diagnostic support monitor, refer to [LAN-44, "CAN Diagnostic Support Monitor"](#) .

(Example)

SYSTEM	BCM		SYSTEM	EPS		SYSTEM	INTELLIGENT KEY	
DATE			DATE			DATE		
P/#	PRSNT	PAST	P/#	PRSNT		P/#	PRSNT	PAST
TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	OK		TRANSMIT DIAG	OK	OK
ECM	OK	OK	ECM	OK		ECM	OK	OK
METER/M&A	OK	OK	VDC/TCS/ABS	OK		METER/M&A	OK	OK
TCM	UNKWN	0	METER/M&A	OK		BCM/SEC	OK	OK
MULTI AV	-	-						
IPDM E/R	OK	OK						
I-KEY	OK	OK						

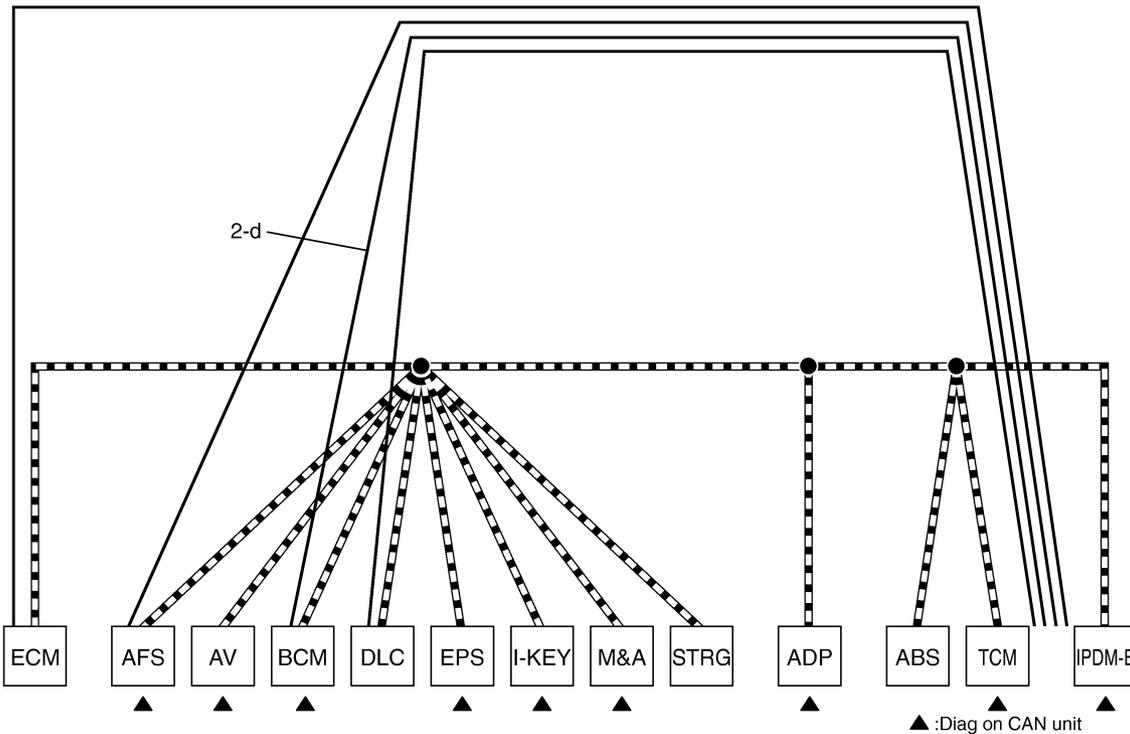


SKIB8726E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

- f. Reception item of "METER": On "TCM", "UNKWN" is indicated. This means M&A cannot receive the signal from TCM. Draw a line to indicate an error between M&A and TCM (line 2-f in the figure).
- g. Reception item of "AUTO DRIVE POS.": On "TCM", "UNKWN" is indicated. This means ADP cannot receive the signal from TCM (line 2-g in the figure).
- h. Reception item of "ABS": "UNKWN" is not indicated. This indicates normal communication between ABS and its receiving units. Do not draw any line.

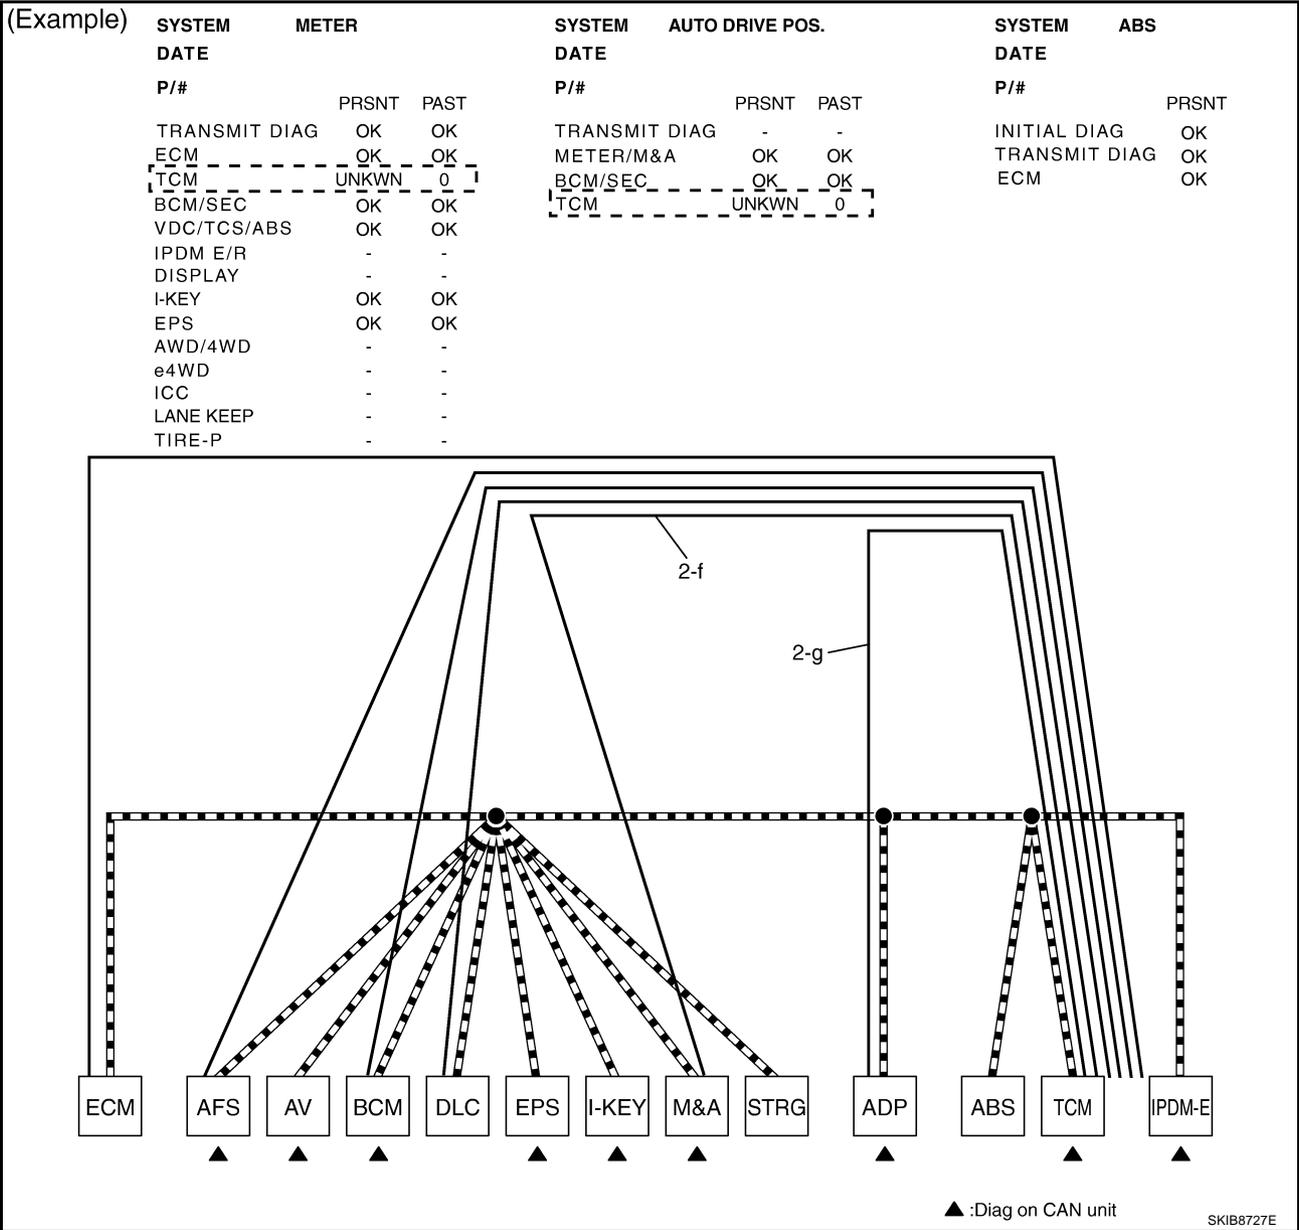

A
B
C
D
E
F
G
H
I
J
LAN
L
M


TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

- i. Reception item of "IPDM E/R": "UNKWN" is not indicated. This indicates normal communication between IPDM-E and its receiving units. Do not draw any line.
3. Based on information received from "CAN DIAG SUPPORT MNTR", place a check mark on the known good CAN communication line between ECM and IPDM-E.
 - a. Through the previous procedure, the circuit between ADP splice and TCM has the most amount of lines (shade 3-a in the figure).
 - b. Place a check mark on the known good lines to establish the error circuit. Reception item of "IPDM E/R": On "ECM", "OK" is indicated. IPDM-E communicates normally with ECM. Put a check mark on the normal circuit between ECM and IPDM-E (check mark 3-b in the figure).

(Example)

SYSTEM	IPDM E/R	
DATE	PRSENT	PAST
TRANSMIT DIAG	OK	OK
ECM	OK	OK
BCM/SEC	OK	OK

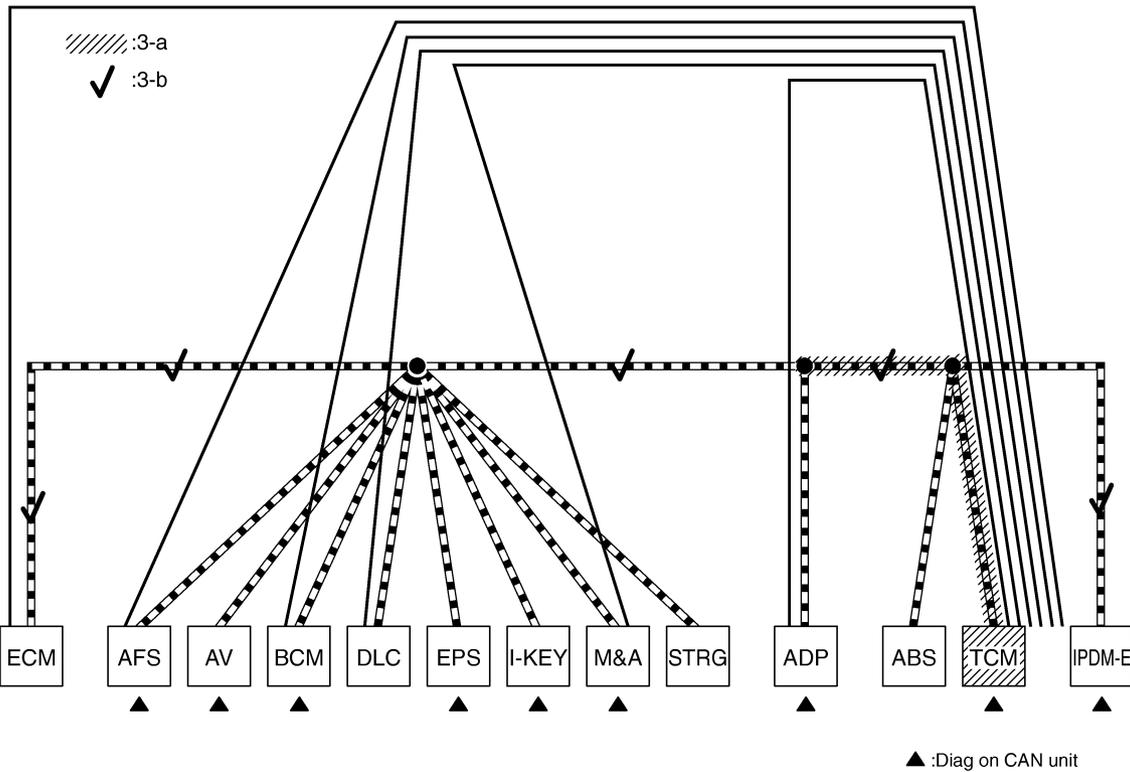

SKIB8728E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


4. Through the above procedure, the error is detected in the TCM branch line (shaded in the figure).

NOTE:

For abbreviations, refer to [LAN-41, "Abbreviation List"](#).

5. Perform the inspection for the detected error circuit. For the inspection procedure, refer to [LAN-76, "Mal-function Area Chart"](#).

(Example)

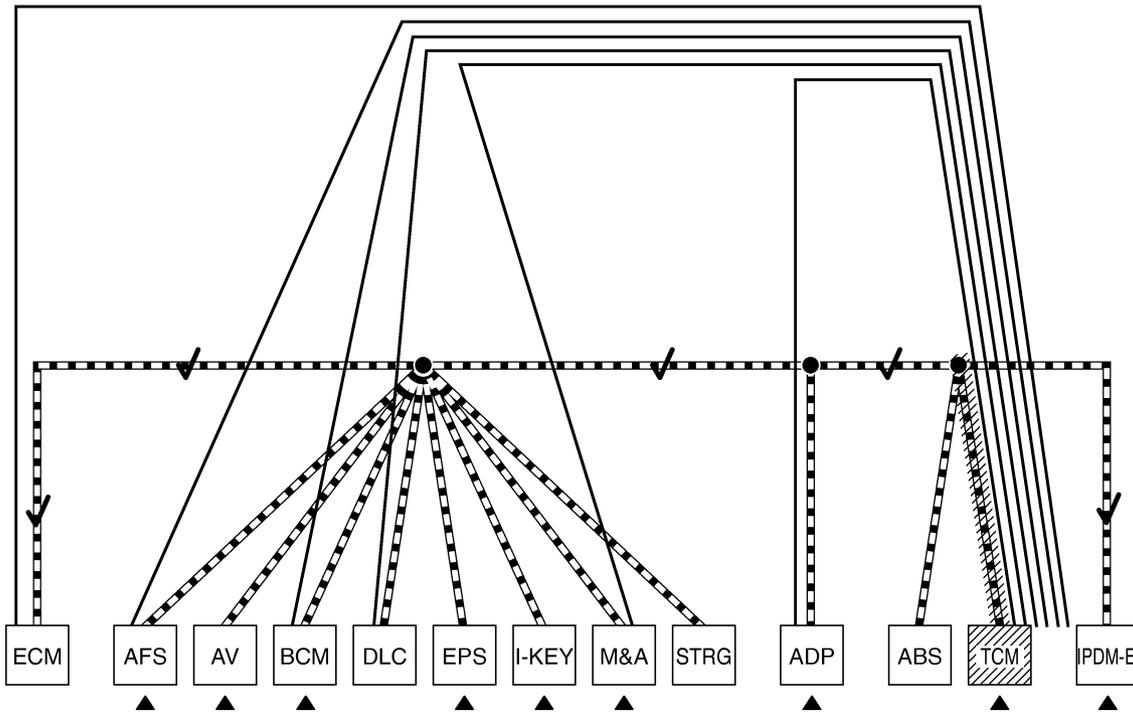

< CONSULT-II printout checklist >

	Item	Check box
1	SELECT SYSTEM	<input checked="" type="checkbox"/>
2	ENGINE	<input checked="" type="checkbox"/>
3	ADAPTIVE LIGHT [▲]	<input checked="" type="checkbox"/>
4	MULTI AV [▲]	<input checked="" type="checkbox"/>
5	BCM [▲]	<input checked="" type="checkbox"/>
6	EPS [▲]	<input checked="" type="checkbox"/>
7	INTELLIGENT KEY [▲]	<input checked="" type="checkbox"/>
8	METER [▲]	<input checked="" type="checkbox"/>
9	AUTO DRIVE POS. [▲]	<input checked="" type="checkbox"/>
10	ABS	<input checked="" type="checkbox"/>
11	TRANSMISSION [▲]	N-IDC
12	IPDM E/R [▲]	<input checked="" type="checkbox"/>

Possible root cause

- Error between TCM and splice.
- Error in TCM.

Inspection result

SKIB8893E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Present Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Received data

Item (CONSULT-II)	Indication
SELECT SYSTEM	All Diag on CAN units are not indicated.
CAN DIAG SUPPORT MNTR	"UNKWN" is indicated under "TRANSMIT DIAG" and most reception items.

Error symptom

- Most the units connected to the CAN communication system go into fail-safe mode or are deactivated.

Inspection procedure

- Refer to [LAN-76, "Malfunction Area Chart"](#) .

(Example)

SELECT SYSTEM
ENGINE
ABS
AIR BAG
HEAD LAMP LEVELIZER
BACKLIGHT COPY

All Diag on CAN units are not indicated.

SYSTEM	ENGINE	SYSTEM	ABS
DATE		DATE	
P/#	PRSNT PAST	P/#	PRSNT
TRANSMIT DIAG	UNKWN 0	INITIAL DIAG	NG
VDC/TCS/ABS	UNKWN 0	TRANSMIT DIAG	UNKWN
METER/M&A	- -	ECM	UNKWN
BCM/SEC	UNKWN 0		
ICC	- -		
HVAC	- -		
TCM	UNKWN 0		
EPS	UNKWN 0		
IPDM E/R	UNKWN 0		
e4WD	- -		
AWD/4WD	- -		

"UNKWN" is indicated under most reception items of CAN DIAG SUPPORT MNTR.

SKIB8894E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Past Error — Open Circuit —

Review CAN communication signal chart based on information received from the interview with the customer and on past error information from SELF-DIAG RESULTS and CAN DIAG SUPPORT MNTR.

- SELF-DIAG RESULTS: Inspect the control units indicating "U1000" or "U1001" on SELF-DIAG RESULTS.

(Example)

<p>SYSTEM ENGINE DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 1t [U1001]</div>	<p>SYSTEM ADAPTIVE LIGHT DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM MULTI AV DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM BCM DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>
<p>SYSTEM EPS DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT PAST [U1000]</div>	<p>SYSTEM INTELLIGENT KEY DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM METER DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM AUTO DRIVE POS. DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>
<p>SYSTEM ABS DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM TRANSMISSION DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM IPDM E/R DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	

SKIB8731E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

2. CAN DIAG SUPPORT MNTR (with PAST): Check the CAN DIAG SUPPORT MNTR (with PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.


NOTE:

For the details of each indication on CAN DIAG SUPPORT MNTR, refer to [LAN-44, "CAN Diagnostic Support Monitor"](#).

- a. Reception item of "ENGINE": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means ECM could not receive the signal from ABS in the past. Draw a line between ECM and ABS (line 2-a in the figure).
- b. Reception item of "METER": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means M&A could not receive the signal from ABS in the past. Draw a line between M&A and ABS (line 2-b in the figure).
- c. Reception item of "TRANSMISSION": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means TCM could not receive the signal from ABS in the past. Draw a line between TCM and ABS (line 2-c in the figure).

(Example)

SYSTEM ENGINE			SYSTEM METER			SYSTEM TRANSMISSION		
DATE			DATE			DATE		
P/#	PRSENT	PAST	P/#	PRSENT	PAST	P/#	PRSENT	PAST
TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	OK	OK
VDC/TCS/ABS	OK	3	ECM	OK	OK	ECM	OK	OK
METER/M&A	-	-	TCM	OK	OK	VDC/TCS/ABS	OK	3
BCM/SEC	OK	OK	BCM/SEC	OK	OK	METER/M&A	OK	OK
ICC	-	-	VDC/TCS/ABS	OK	3	BCM/SEC	OK	OK
HVAC	-	-	IPDM E/R	-	-	ICC	-	-
TCM	OK	OK	DISPLAY	-	-	e4WD	-	-
EPS	OK	OK	I-KEY	OK	OK	AWD/4WD	-	-
IPDM E/R	OK	OK	EPS	OK	OK			
e4WD	-	-	AWD/4WD	-	-			
AWD/4WD	-	-	e4WD	-	-			
			ICC	-	-			
			LANE KEEP	-	-			
			TIRE-P	-	-			

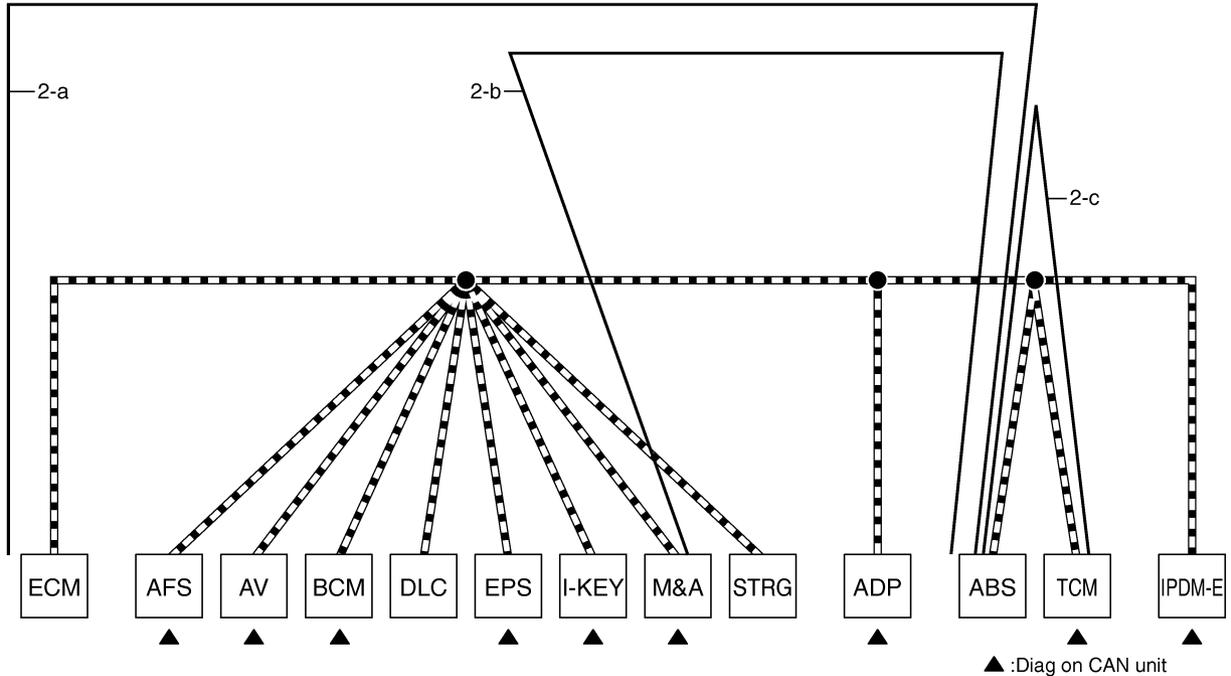

SKIB8732E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

3. CAN DIAG SUPPORT MNTR (without PAST): Check the CAN DIAG SUPPORT MNTR (without PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.


NOTE:

- While an error occurred in the past according to SELF-DIAG RESULTS, it is unclear which signal is not received. Assume that errors were detected from all reception items.
 - Draw a single line among the unit and all reception items. (Work flow differs from CAN DIAG SUPPORT MNTR (with PAST).)
- a. Reception item of "EPS": Assume that the unit could not receive the signals from ECM, ABS, and M&A. Draw a line among EPS, ECM, ABS, and M&A (line 3-a in the figure).
- b. Reception item of "ABS": Assume that the unit could not receive the signal from ECM. Draw a line between ABS and ECM (line 3-b in the figure).

(Example)

SYSTEM	EPS	PRSENT
DATE		
P/#		
TRANSMIT DIAG		OK
ECM		OK
VDC/TCS/ABS		OK
METER/M&A		OK

SYSTEM	ABS	PRSENT
DATE		
P/#		
INITIAL DIAG		OK
TRANSMIT DIAG		OK
ECM		OK

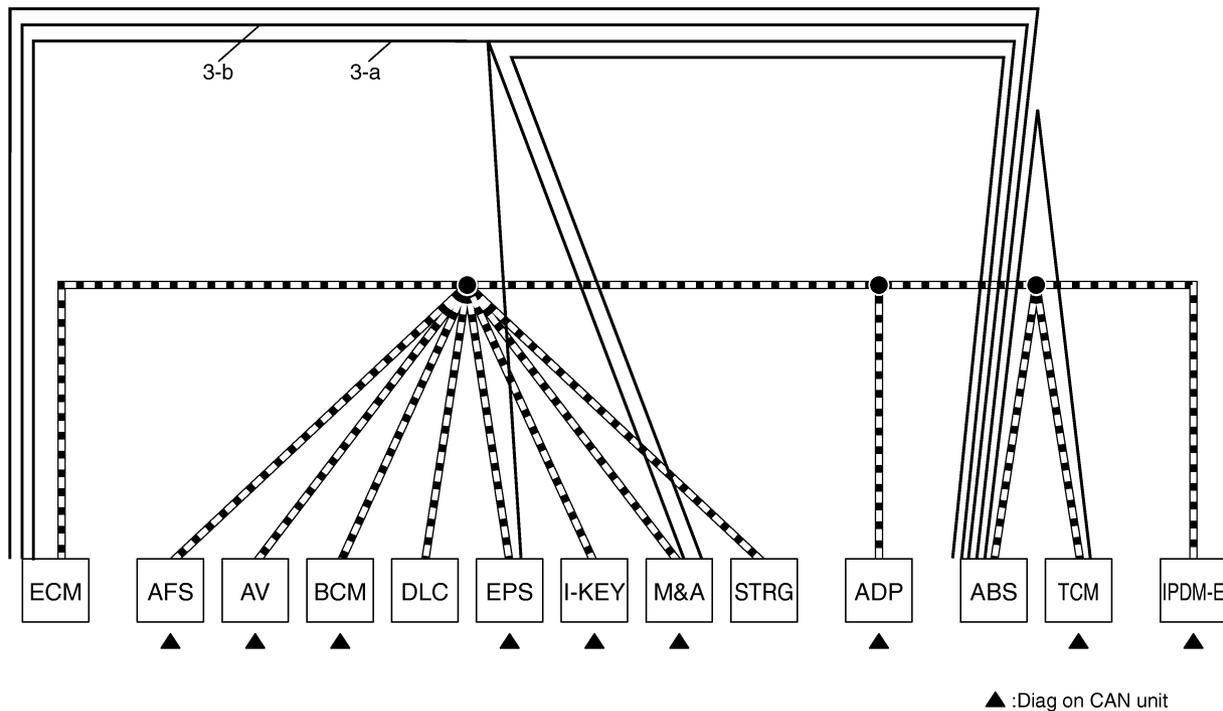

SKIB8733E

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

4. Search for the possible cause using CAN communication signal chart using information from the interview with the customer.

NOTE:

For the details of CAN communication signal, refer to [LAN-50, "CAN Communication Signal Chart"](#) .

- a. ABS warning lamp turned ON and speedometer did not move: This means that "ABS warning lamp signal" and "Vehicle speed signal" could not communicate between M&A and ABS (4-a in the figure).
- b. The tachometer moved normally: This means that "Engine speed signal" could communicate normally between ECM and M&A (4-b in the figure).

(Example)


First registration:

CAN system type:

Symptom (Results from interview with customer)

While driving,

- ABS warning lamp turned ON.
- Speedometer did not move.
- Tachometer moved normally.



CAN Communication Signal Chart

T: Transmit R: Receive

Signal name/Connecting unit	ECM	AFS ¹	AV ²	BCM	EPS	I-KEY ³	M&A	STRG ¹	ADP ⁴	ABS	TCM	IPDM-E
A/C compressor request signal	T											R
Accelerator pedal position signal	T										R	
Closed throttle position signal	T										R	
Cooling fan speed request signal	T											R
Engine and CVT integrated control signal	T										R	
	R										T	
Engine coolant temperature signal	T						R				R	
4-b Engine speed signal	T						R				R	
Engine status signal	T		R		R							
Fuel consumption monitor signal	T		R				R					
MI signal	T						R					
Wide open throttle position signal	T										R	
4-a ABS warning lamp signal							R			T		
Brake warning lamp signal							R			T		
Steering angle sensor signal		R						T				
4-a Vehicle speed signal	R				R		R			T	R	
		R		R	R	R	T		R			
Input shaft revolution signal	R											T
Output shaft revolution signal	R											T
Shift position indicator signal	R	R	R	R ⁵			R		R ⁶		T	
Second position indicator signal							R				T	
Front wiper stop position signal				R								T
High beam status signal	R	R										T
Low beam status signal	R	R										T


SKIB8895E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

5. Fill out the diagnosis sheet based on information from step 4.
 - a. The ABS warning lamp turned ON and speedometer did not move: Assume that a possible cause is no communication between M&A and ABS. Draw a line between M&A and ABS. (Line 5-a in the figure).
 - b. The tachometer moved normally: Put check marks between ECM and M&A. The circuit between ECM and M&A is functioning properly (check marks 5-b in the figure).

(Example)

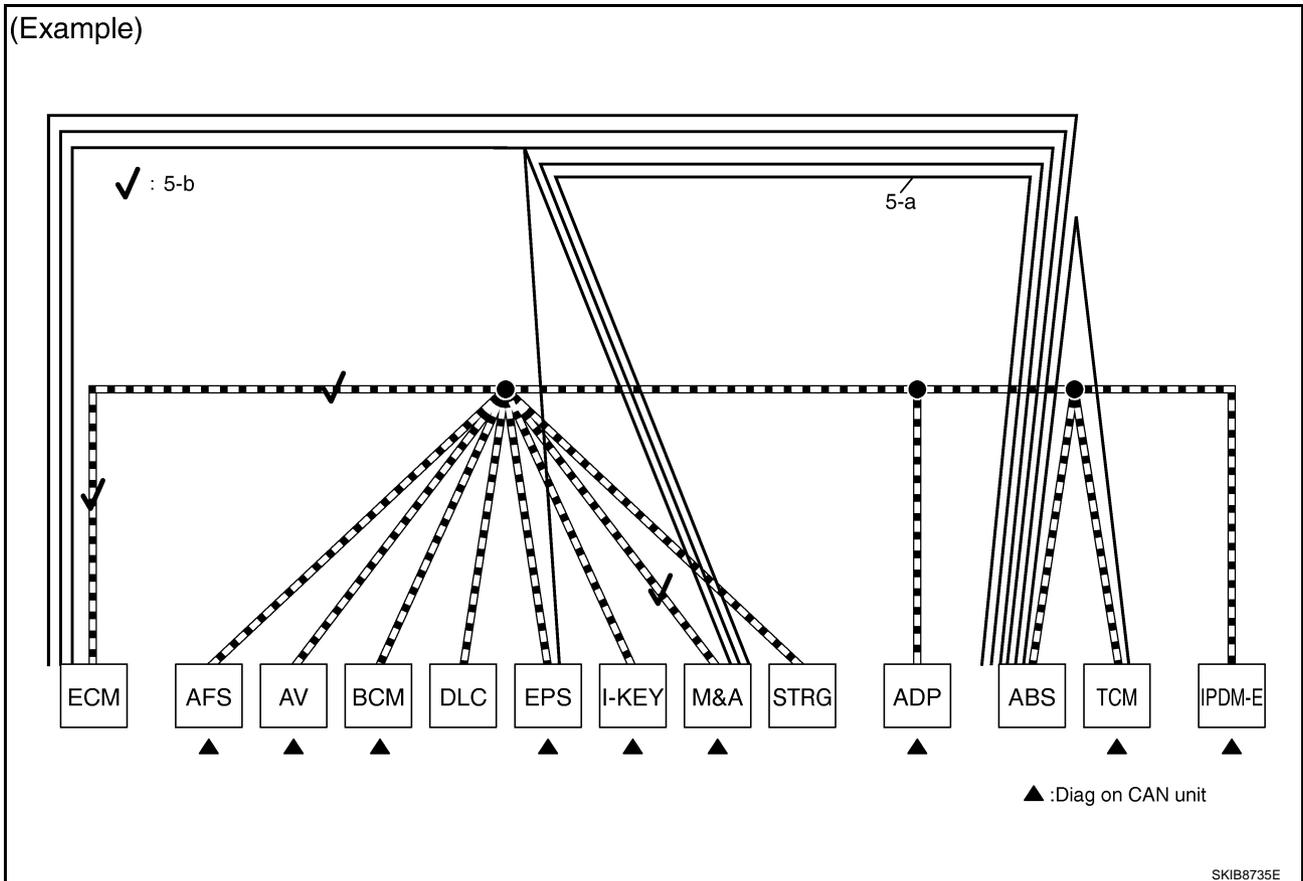

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


6. The circuit which has the most amount of lines are the possible cause. Error is detected from ABS actuator and electric unit (control unit) branch line (shaded in the figure).

NOTE:

For abbreviations, refer to [LAN-41, "Abbreviation List"](#) .

7. Perform the inspection procedure for the possible cause. Refer to [LAN-76, "Malfunction Area Chart"](#) .

(Example)

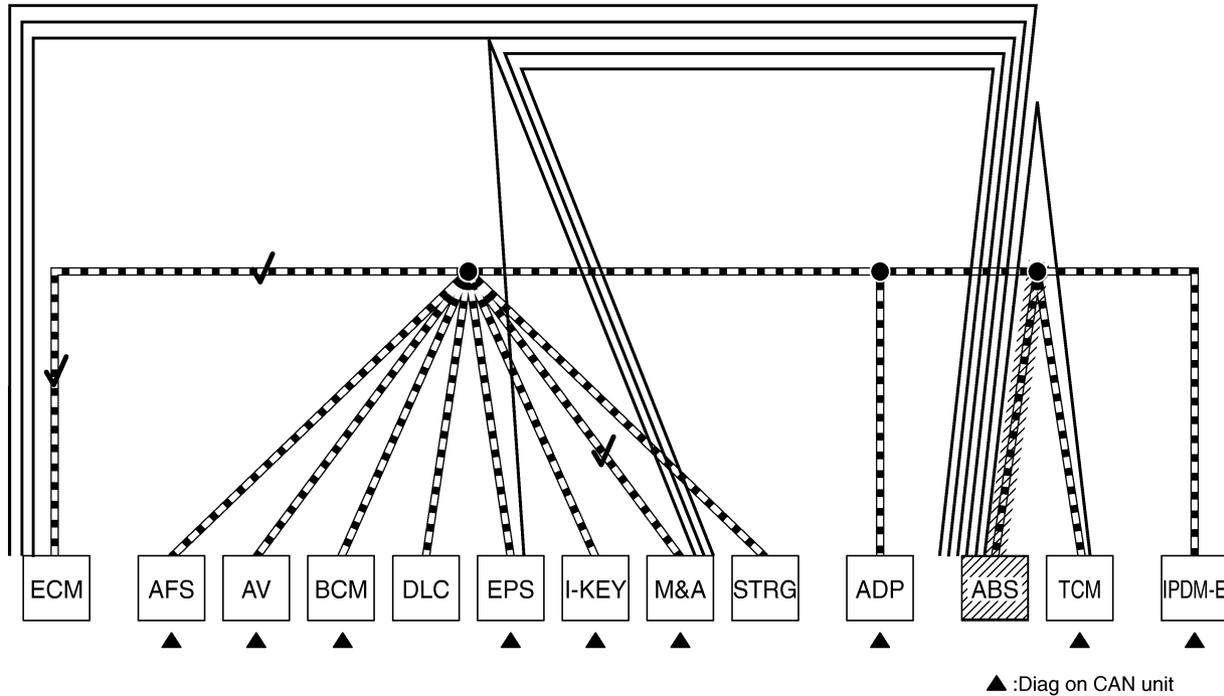

< CONSULT-II printout checklist >

	Item	Check box
1	SELECT SYSTEM	<input checked="" type="checkbox"/>
2	ENGINE	<input checked="" type="checkbox"/>
3	ADAPTIVE LIGHT [▲]	<input checked="" type="checkbox"/>
4	MULTI AV [▲]	<input checked="" type="checkbox"/>
5	BCM [▲]	<input checked="" type="checkbox"/>
6	EPS [▲]	<input checked="" type="checkbox"/>
7	INTELLIGENT KEY [▲]	<input checked="" type="checkbox"/>
8	METER [▲]	<input checked="" type="checkbox"/>
9	AUTO DRIVE POS. [▲]	<input checked="" type="checkbox"/>
10	ABS	<input checked="" type="checkbox"/>
11	TRANSMISSION [▲]	<input checked="" type="checkbox"/>
12	IPDM E/R [▲]	<input checked="" type="checkbox"/>

Possible root cause

- Error between ABS actuator and electric unit (control unit) and splice.
- Error in ABS actuator and electric unit (control unit).

Inspection result

SKIB8896E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Past Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Item (CONSULT-II)	Indication	Inspection procedure
SELF-DIAG RESULTS	“U1000” and “U1001” is indicated in the past for most units.	Refer to LAN-76, "Malfunction Area Chart" .
CAN DIAG SUPPORT MNTR	Only on CAN DIAG SUPPORT MNTR (with PAST), “1 - 39” is indicated on “PAST” of “TRANSMIT DIAG” and the reception item.	

A
B
C
D
E
F
G
H
I
J
L
M

LAN

(Example)

SYSTEM ENGINE DATE P/#	SYSTEM ADAPTIVE LIGHT DATE P/#	SYSTEM MULTI AV DATE P/#	SYSTEM BCM DATE P/#
SELF-DIAG RESULTS	SELF-DIAG RESULTS	SELF-DIAG RESULTS	SELF-DIAG RESULTS
DTC RESULTS	TIME	DTC RESULTS	TIME
CAN COMM CIRCUIT [U1000]	1t	CAN COMM CIRCUIT [U1000]	5
CAN COMM CIRCUIT [U1001]	1t		

SYSTEM EPS DATE P/#	SYSTEM INTELLIGENT KEY DATE P/#	SYSTEM METER DATE P/#	SYSTEM AUTO DRIVE POS. DATE P/#
SELF-DIAG RESULTS	SELF-DIAG RESULTS	SELF-DIAG RESULTS	SELF-DIAG RESULTS
DTC RESULTS	TIME	DTC RESULTS	TIME
CAN COMM CIRCUIT [U1000]	5	CAN COMM CIRCUIT [U1000]	5
			PAST

SYSTEM ENGINE DATE P/#	PRSENT	PAST	SYSTEM ADAPTIVE LIGHT DATE P/#	PRSENT	PAST	SYSTEM MULTI AV DATE P/#	PRSENT	PAST	SYSTEM BCM DATE P/#	PRSENT	PAST
TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-	-	TRANSMIT DIAG	-	-	TRANSMIT DIAG	OK	5
VDC/TCS/ABS	OK	5	ECM	OK	5	ECM	OK	5	ECM	OK	5
METER/M&A	-	-	METER/M&A	OK	5	METER/M&A	OK	5	METER/M&A	OK	5
BCM/SEC	OK	5	TCM	OK	5	BCM/SEC	-	-	TCM	OK	5
ICC	-	-	STRG	OK	5	HVAC	-	-	MULTI AV	-	-
HVAC	-	-	EPS	-	-	IPDM E/R	-	-	IPDM E/R	OK	5
TCM	OK	5	IPDM E/R	OK	5	TIRE-P	-	-	I-KEY	OK	5
EPS	OK	5									
IPDM E/R	OK	5									
e4WD	-	-									
AWD/4WD	-	-									

SYSTEM EPS DATE P/#	PRSENT	PAST	SYSTEM INTELLIGENT KEY DATE P/#	PRSENT	PAST	SYSTEM METER DATE P/#	PRSENT	PAST	SYSTEM AUTO DRIVE POS. DATE P/#	PRSENT	PAST
TRANSMIT DIAG	OK	5	TRANSMIT DIAG	OK	5	TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-	-
ECM	OK	5	ECM	OK	5	ECM	OK	5	METER/M&A	OK	5
VDC/TCS/ABS	OK	5	METER/M&A	OK	5	TCM	OK	5	BCM/SEC	OK	5
METER/M&A	-	-				BCM/SEC	OK	5	TCM	OK	5
						VDC/TCS/ABS	OK	5			
						IPDM E/R	-	-			
							-	-			
							OK	5			

“U1000” and “U1001” is indicated in the past for most units.

Only on CAN DIAG SUPPORT MNTR (with PAST), “1-39” is indicated on “PAST” of “TRANSMIT DIAG” and the reception item.

SKIB8897E

INDEX FOR DTC

[CAN]

INDEX FOR DTC

PFP:00004

DTC No. Index

NKS004MK

DTC	Self-diagnosis item (CONSULT-II indication)	DTC detection condition	Inspection
U1000	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Refer to LAN-41. "HOW TO USE THIS SECTION" .
		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.	
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.	Start the inspection. Refer to the applicable section of the indicated control unit.
U1010	CONTROL UNIT [CAN]	When an error is detected during the initial diagnosis for CAN controller of each control unit.	Replace the control unit indicating "U1010".

HOW TO USE THIS SECTION

[CAN]

HOW TO USE THIS SECTION

PFP:00008

Caution

NKS004ML

- This section describes information peculiar to a vehicle, sheets for trouble diagnosis, and inspection procedures.
- For trouble diagnosis procedure [LAN-17, "Trouble Diagnosis Procedure"](#).

Abbreviation List

NKS004MM

Abbreviations in CAN communication signal chart, and the diagnosis sheet are as per the following list.

Abbreviation	Unit name	SELECT SYSTEM (CONSULT-II)	CAN DIAG SUPPORT MNTR (CONSULT-II)
4WD	AWD control unit	ALL MODE AWD/4WD	AWD/4WD
A-BAG	Air bag diagnosis sensor unit	AIR BAG	-
ABS	ABS actuator and electric unit (control unit)	ABS	VDC/TCS/ABS
ADP	Driver seat control unit	AUTO DRIVE POS.	-
BCM	BCM	BCM	BCM/SEC
DISP	Display control unit	-	DISPLAY
DLC	Data link connector	-	-
ECM	ECM	ENGINE	ECM
ICC	ICC unit	ICC	ICC
			ICC/e4WD
I-KEY	Intelligent Key unit	INTELLIGENT KEY	I-KEY
IPDM-E	IPDM E/R	IPDM E/R	IPDM E/R
LANE	LDW camera unit	LDW	-
LASER	ICC sensor	-	ICC SENSOR
M&A	Unified meter and A/C amp.	METER A/C AMP	METER/M&A
STRG	Steering angle sensor	-	STRG
TCM	TCM	A/T	TCM

A
B
C
D
E
F
G
H
I
J
L
M

LAN

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

NKS004MN

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions When Using CONSULT-II

NKS004MO

Use CONSULT-II CONVERTER when connecting CONSULT-II to data link connector.

CAUTION:

CAN communication does not function properly if CONSULT-II is used without connecting CONSULT-II CONVERTER.

Precautions for Trouble Diagnosis

NKS004MP

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

NKS004MQ

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

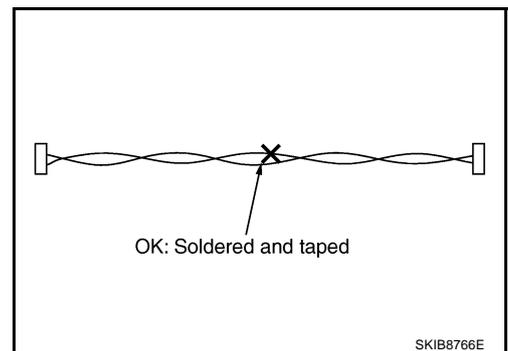


PRECAUTIONS

[CAN]

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

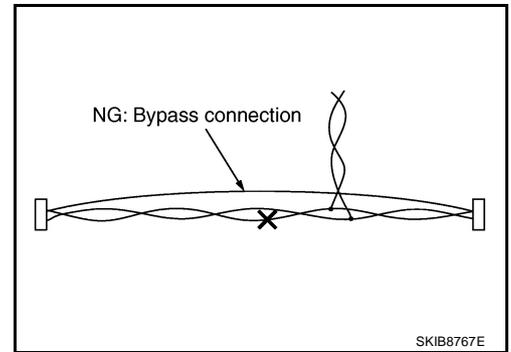

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A

B

C

D

E

F

G

H

I

J

LAN

L

M

TROUBLE DIAGNOSIS

[CAN]

TROUBLE DIAGNOSIS

PFP:00004

CAN Diagnostic Support Monitor

NKS004NN

Use "CAN DIAG SUPPORT MNTR" for detecting the root cause.

MONITOR ITEM LIST (CONSULT-II)

ECM

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
ENGINE	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	METER/M&A	Signal receiving status from the unified meter and A/C amp.				
	BCM/SEC	Signal receiving status from the BCM				
	ICC	Signal receiving status from the ICC unit				
	HVAC	Not used even though indicated				
	TCM	Signal receiving status from the TCM	OK	OK or 1 – 39*	UNKWN	0
	EPS	Not used even though indicated				
	IPDM E/R	Signal receiving status from the IPDM E/R	OK	OK or 1 – 39*	UNKWN	0
	e4WD	Not used even though indicated				
AWD/4WD	Signal receiving status from the AWD control unit	OK	OK or 1 – 39*	UNKWN	0	

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

AWD Control Unit

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
ALL MODE AWD/4WD	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		UNKWN
	ECM	Signal receiving status from the ECM		
	TCM	Not used even though indicated		
	METER/M&A	Signal receiving status from the unified meter and A/C amp.	OK	UNKWN

TROUBLE DIAGNOSIS

[CAN]

ICC Unit

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

SELECT SYS- TEM	CAN DIAG SUP- PORT MNTR	Description	Normal	Error			
			PRSNT				
ICC	INITIAL DIAG	Status of CAN controller	OK	NG			
	TRANSMIT DIAG	Signal transmission status		OK	UNKWN		
	ECM	Signal receiving status from the ECM					
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)					
	TCM	Signal receiving status from the TCM					
	METER/M&A	Not used even though indicated					
	LANE KEEP						
	ECM(I)						
	ICC SENSOR	Signal receiving status from the ICC sensor				OK	UNKWN
	STRG	Not used even though indicated					
	METER/M&A(I)						
	ERROR(I)						
	LANE DETEC- TOR						
	TCM(I)						
BCM/SEC	Signal receiving status from the BCM	OK	UNKWN				

TCM

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

SELECT SYS- TEM	CAN DIAG SUP- PORT MNTR	Description	Normal	Error	
			PRSNT		
A/T	INITIAL DIAG	Status of CAN controller	OK	NG	
	TRANSMIT DIAG	Signal transmission status		OK	UNKWN
	ECM	Signal receiving status from the ECM			
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)			
	METER/M&A	Signal receiving status from the unified meter and A/C amp.			
	ICC/e4WD	Signal receiving status from the ICC unit			
	AWD/4WD	Signal receiving status from the AWD control unit			

BCM

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

SELECT SYS- TEM	CAN DIAG SUP- PORT MNTR	Description	Normal	Error	
			PRSNT		
BCM	INITIAL DIAG	Status of CAN controller	OK	NG	
	TRANSMIT DIAG	Signal transmission status		OK	UNKWN
	ECM	Signal receiving status from the ECM			
	IPDM E/R	Signal receiving status from the IPDM E/R			
	METER/M&A	Signal receiving status from the unified meter and A/C amp.			
	I-KEY	Not used even though indicated			

TROUBLE DIAGNOSIS

[CAN]

Intelligent Key Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
INTELLIGENT KEY	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWKN	0
	ECM	Signal receiving status from the ECM				
	METER/M&A	Signal receiving status from the unified meter and A/C amp.				
	BCM/SEC	Signal receiving status from the BCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

LDW Camera Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
LDW	TRANSMIT DIAG	Not used even though indicated				
	ECM	Signal receiving status from the ECM	OK	OK or 1 – 39*	UNKWKN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	BCM/SEC	Signal receiving status from the BCM				
	TCM	Signal receiving status from the TCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

Unified Meter and A/C Amp.

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error					
			PRSNT	PAST	PRSNT	PAST				
METER A/C AMP	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWKN	0				
	ECM	Signal receiving status from the ECM								
	TCM	Signal receiving status from the TCM								
	BCM/SEC	Signal receiving status from the BCM								
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)								
	IPDM E/R	Not used even though indicated								
	DISPLAY	Signal receiving status from the display control unit	OK	OK or 1 – 39*	UNKWKN	0				
	I-KEY	Signal receiving status from the Intelligent Key unit								
	EPS	Not used even though indicated								
	AWD/4WD	Signal receiving status from the AWD control unit	OK	OK or 1 – 39*	UNKWKN	0				
	e4WD	Not used even though indicated								
	ICC	Signal receiving status from the Intelligent Key unit	OK	OK or 1 – 39*	UNKWKN	0				
	LANE KEEP	Not used even though indicated								
	TIRE-P									

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

TROUBLE DIAGNOSIS

[CAN]

ABS Actuator and Electric Unit (Control Unit)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
ABS	INITIAL DIAG	Status of CAN controller	OK	NG ^{Caution}
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	TCM	Signal receiving status from the TCM		
	METER/M&A	Not used even though indicated		
	STRG	Signal receiving status from the steering angle sensor	OK	UNKWN
	ICC	Not used even though indicated		
	AWD/4WD	Signal receiving status from the AWD control unit	OK	UNKWN

CAUTION:

Never replace the unit even when “NG” is indicated on the “INITIAL DIAG” at this stage. Follow the trouble diagnosis procedures.

Driver Seat Control Unit

NOTE:

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
AUTO DRIVE POS.	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	BCM/SEC	Signal receiving status from the BCM		
	METER/M&A	Signal receiving status from the unified meter and A/C amp.		
	TCM	Signal receiving status from the TCM		

IPDM E/R

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
IPDM E/R	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	BCM/SEC	Signal receiving status from the BCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

TROUBLE DIAGNOSIS

[CAN]

MONITOR ITEM LIST (ON-BOARD DIAGNOSIS)

Display Control Unit

NOTE:

CAN diagnostic support monitor of the display control unit is indicated on the vehicle display. Refer to [AV-81](#), "[CAN DIAG SUPPORT MONITOR](#)".

(Example)

CAN DIAG SUPPORT MONITOR			
CAN_COMM	OK	0	Delete
CAN_CIRC_1	OK	0	
CAN_CIRC_2	OK	0	
CAN_CIRC_3	OK	0	
CAN_CIRC_4	OK	0	
CAN_CIRC_5	OK	0	
CAN_CIRC_6	OK	0	
CAN_CIRC_7	OK	0	
CAN_CIRC_8	OK	0	
CAN_CIRC_9	UNKWN	0	

PKIB6080E

Unit name	Diagnosis item	Description	Indicated items on CAN DIAG SUPPORT MONITOR			
			Normal		Error	
			Result indicated	Error counter (Reference)	Result indicated	Error counter (Reference)
Display control unit	CAN_COMM	Status of CAN controller	OK	0 or 1 – 50*	NG	1 – 50*
	CAN_CIRC_1	Signal transmission status			UNKWN	
	CAN_CIRC_2	Signal receiving status from the BCM				
	CAN_CIRC_3	Signal receiving status from the ECM				
	CAN_CIRC_4	Not used even though indicated				
	CAN_CIRC_5	Signal receiving status from the unified meter and A/C amp.	OK	0 or 1 – 50*	UNKWN	1 – 50*
	CAN_CIRC_6	Not used even though indicated				
	CAN_CIRC_7	Signal receiving status from the IPDM E/R	OK	0 or 1 – 50*	UNKWN	1 – 50*
	CAN_CIRC_8	Not used even though indicated				
	CAN_CIRC_9					

*: The error counter stops counting when it reaches "50" and holds "50" until it is deleted.

TROUBLE DIAGNOSIS

[CAN]

NKS004NO

CAN System Specification Chart

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

NOTE:


Refer to [LAN-19, "CHECK OF CAN SYSTEM TYPE \(HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART\)"](#) for how to use CAN system specification chart.

Body type	Wagon							
Axle	2WD				AWD			
Engine	VQ35DE						VK45DE	
Transmission	A/T							
Brake control	VDC							
ICC system			×			×		×
Intelligent Key system		×	×		×	×	×	×
Lane departure warning system			×			×		×
CAN system type	1	2	3	4	5	6	5	6
Diagnosis sheet	LAN-69	LAN-70	LAN-71	LAN-72	LAN-73	LAN-74	LAN-73	LAN-74
CAN communication signal chart	LAN-50, "TYPE 1/ TYPE 2"		LAN-52, "TYPE 3"	LAN-54, "TYPE 4/ TYPE 5"		LAN-57, "TYPE 6"	LAN-54, "TYPE 4/ TYPE 5"	LAN-57, "TYPE 6"

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

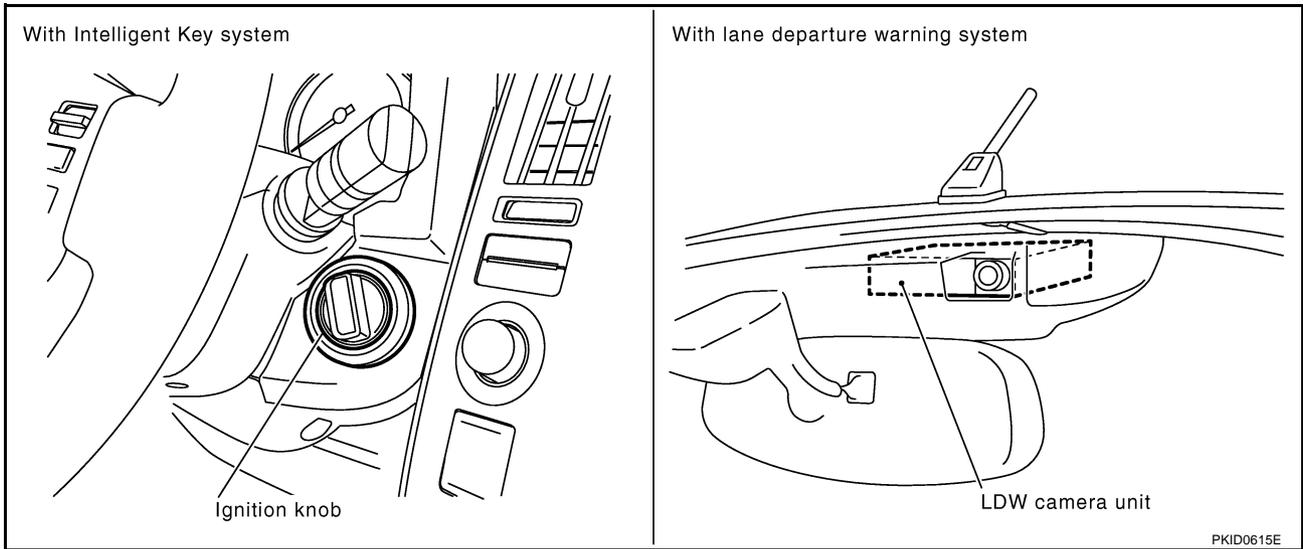

TROUBLE DIAGNOSIS

[CAN]

CAN Communication Signal Chart

NKS004NP

Refer to [LAN-15, "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

TYPE 1/TYPE 2

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
A/C compressor feedback signal	T						R			
A/C compressor request signal	T									R
Accelerator pedal position signal	T		R					R		
ASCD CRUISE lamp signal	T						R			
ASCD OD cancel request signal	T		R							
ASCD operation signal	T		R							
ASCD SET lamp signal	T						R			
Battery voltage signal	T		R							
Closed throttle position signal	T		R							
Cooling fan speed request signal	T									R
Engine coolant temperature signal	T						R			
Engine speed signal	T	R	R				R	R		
Engine status signal	T			R						
Fuel consumption monitor signal	T						R			
		R					T			
Malfunctioning indicator lamp signal	T						R			
Wide open throttle position signal	T		R							
A/C switch/indicator signal		T					R			
		R					T			
System setting signal		T			R				R	
		R			T				T	
A/T CHECK indicator lamp signal			T				R			
A/T self-diagnosis signal	R		T							
Current gear position signal			T					R		
Manual mode indicator signal			T				R			
Output shaft revolution signal	R		T							
P range signal			T					R	R	
Shift position indicator signal			T				R			
Turbine revolution signal	R		T							
A/C switch signal	R			T						
Buzzer output signal				T			R			
					T		R			
Blower fan motor switch signal	R			T						
Day time running light request signal				T			R			
Door lock/unlock status signal				T	R					
Door switch signal		R		T	R		R		R	R

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
Front fog light request signal				T						R
Front wiper request signal				T						R
High beam request signal				T			R			R
Horn chirp signal				T						R
Ignition switch signal				T					R	R
Key fob door unlock signal				T					R	
Key fob ID signal				T					R	
Key switch signal				T					R	
Low beam request signal				T						R
Oil pressure switch signal				R						T
				T			R			
Position light request signal				T			R			R
Rear window defogger switch signal				T						R
Run flat tire warning lamp signal				T			R			
Sleep wake up signal				T			R		R	R
				R	T					
Theft warning horn request signal				T						R
Tire pressure warning lamp signal				T			R			
Turn indicator signal				T			R			
Alarm request signal				R	T					
Back door open request signal				R	T					
Door lock/unlock request signal				R	T					
Ignition knob switch signal				R	T					
Key warning signal					T		R			
Power window open request signal				R	T					
Steering angle sensor signal						T		R		
Distance to empty signal		R					T			
Fuel level low warning signal		R					T			
Fuel level sensor signal	R						T			
Manual mode shift down signal			R				T			
Manual mode shift up signal			R				T			
Manual mode signal			R				T			
Not manual mode signal			R				T			
Snow mode switch signal	R						T			
Stop lamp switch signal			R				T			
Turn LED burnout status signal				R			T			
Vehicle speed signal							R	T		
	R	R	R	R	R		T		R	
A/T shift schedule change demand signal			R					T		
ABS operation signal								T		
ABS warning lamp signal							R	T		
Brake warning lamp signal							R	T		
SLIP indicator lamp signal							R	T		

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
TCS operation signal								T		
VDC OFF indicator lamp signal							R	T		
VDC OFF switch signal								T		
VDC operation signal								T		
Front wiper stop position signal				R						T
High beam status signal	R									T
Hood switch signal				R						T
Low beam status signal	R									T
Rear window defogger control signal	R	R		R						T

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

TYPE 3

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
A/C compressor feedback signal	T								R				
A/C compressor request signal	T												R
Accelerator pedal position signal	T		R	R						R			
ASCD OD cancel request signal	T			R									
ASCD operation signal	T			R									
Battery voltage signal	T			R									
Closed throttle position signal	T		R	R									
Cooling fan speed request signal	T												R
Engine coolant temperature signal	T								R				
Engine speed signal	T	R	R	R					R	R			
Engine status signal	T				R								
Fuel consumption monitor signal	T								R				
		R							T				
ICC steering switch signal	T		R										
Malfunctioning indicator lamp signal	T								R				
Snow mode switch signal	R								T				
	T		R										
Wide open throttle position signal	T			R									
A/C switch/indicator signal		T							R				
		R							T				
System setting signal		T				R						R	
		R				T						T	
Buzzer output signal					T				R				
			T			T			R				
ICC OD cancel request signal			T	R									

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
ICC operation signal	R		T										
ICC system display signal			T						R				
ICC warning lamp signal			T						R				
A/T CHECK indicator lamp signal				T					R				
A/T self-diagnosis signal	R			T									
Current gear position signal			R	T						R			
Manual mode indicator signal			R	T					R				
Output shaft revolution signal	R		R	T			R						
P range signal			R	T						R		R	
Shift position indicator signal			R	T					R				
Turbine revolution signal	R		R	T									
A/C switch signal	R				T								
Blower fan motor switch signal	R				T								
Day time running light request signal					T				R				
Door lock/unlock status signal					T	R							
Door switch signal		R			T	R			R			R	R
Front fog light request signal					T								R
Front wiper request signal			R		T								R
High beam request signal					T				R				R
Horn chirp signal					T								R
Ignition switch signal					T							R	R
Key fob door unlock signal					T							R	
Key fob ID signal					T							R	
Key switch signal					T							R	
Low beam request signal					T								R
Oil pressure switch signal					R								T
Position light request signal					T				R				R
Rear window defogger switch signal					T								R
Run flat tire warning lamp signal					T				R				
Sleep wake up signal					T				R			R	R
Theft warning horn request signal					R	T							
Tire pressure warning lamp signal					T				R				
Turn indicator signal					T		R		R				
Alarm request signal					R	T							
Back door open request signal					R	T							
Door lock/unlock request signal					R	T							
Ignition knob switch signal					R	T							
Key warning signal						T			R				
Power window open request signal					R	T							
Steering angle sensor signal								T		R			
Distance to empty signal		R							T				

A
B
C
D
E
F
G
H
I
J
K
L
M

LAN

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
Fuel level low warning signal		R							T				
Fuel level sensor signal	R								T				
Manual mode shift down signal				R					T				
Manual mode shift up signal				R					T				
Manual mode signal				R					T				
Not manual mode signal				R					T				
Parking brake switch signal					R				T				
Stop lamp switch signal				R					T				
Turn LED burnout status signal					R				T				
Vehicle speed signal			R				R		R	T			
	R	R		R	R	R			T		R	R	
ICC sensor signal			R								T		
A/T shift schedule change demand signal				R						T			
ABS malfunction signal			R							T			
ABS operation signal			R							T			
ABS warning lamp signal									R	T			
Brake warning lamp signal									R	T			
SLIP indicator lamp signal									R	T			
TCS malfunction signal			R							T			
TCS operation signal			R							T			
VDC malfunction signal			R							T			
VDC OFF indicator lamp signal									R	T			
VDC OFF switch signal			R							T			
VDC operation signal			R							T			
Front wiper stop position signal					R								T
High beam status signal	R												T
Hood switch signal					R								T
Low beam status signal	R												T
Rear window defogger control signal	R	R			R								T

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

TYPE 4/TYPER 5

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	4WD	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
A/C compressor feedback signal	T							R			
A/C compressor request signal	T										R
Accelerator pedal position signal	T	R		R					R		
ASCD CRUISE lamp signal	T							R			
ASCD OD cancel request signal	T			R							
ASCD operation signal	T			R							

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	4WD	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
ASCD SET lamp signal	T							R			
Battery voltage signal	T			R							
Closed throttle position signal	T			R							
Cooling fan speed request signal	T										R
Engine coolant temperature signal	T							R			
Engine speed signal	T	R	R	R				R	R		
Engine status signal	T				R						
Fuel consumption monitor signal	T							R			
			R					T			
Malfunction indicator lamp signal	T							R			
Wide open throttle position signal	T			R							
AWD warning lamp signal		T						R			
A/C switch/indicator signal			T					R			
			R					T			
System setting signal			T			R				R	
			R			T				T	
A/T CHECK indicator lamp signal				T				R			
A/T self-diagnosis signal	R			T							
Current gear position signal				T					R		
Manual mode indicator signal				T				R			
Output shaft revolution signal	R			T							
P range signal				T					R	R	
Shift position indicator signal				T				R			
Turbine revolution signal	R			T							
A/C switch signal	R				T						
Buzzer output signal					T			R			
						T		R			
Blower fan motor switch signal	R				T						
Day time running light request signal					T			R			
Door lock/unlock status signal					T	R					
Door switch signal			R		T	R		R		R	R
Front fog light request signal					T						R
Front wiper request signal					T						R
High beam request signal					T			R			R
Horn chirp signal					T						R
Ignition switch signal					T					R	R
Key fob door unlock signal					T					R	
Key fob ID signal					T					R	
Key switch signal					T					R	
Low beam request signal					T						R
Oil pressure switch signal					R						T
					T			R			
Position light request signal			R		T			R			R

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	4WD	DISP	TCM	BCM	I-KEY	STRG	M&A	ABS	ADP	IPDM-E
Rear window deffogger switch signal					T						R
Run flat tire warning lamp signal					T			R			
Sleep wake up signal					T			R		R	R
					R	T					
Theft warning horn request signal					T						R
Tire pressure warning lamp signal					T			R			
Turn indicator signal					T			R			
Alarm request signal					R	T					
Back door open request signal					R	T					
Door lock/unlock request signal					R	T					
Ignition knob switch signal					R	T					
Key warning signal						T		R			
Power window open request signal					R	T					
Steering angle sensor signal							T		R		
Snow mode switch signal	R							T			
Turn LED burnout status signal					R			T			
Distance to empty signal			R					T			
Fuel level low warning signal			R					T			
Fuel level sensor signal	R							T			
Manual mode shift down signal				R				T			
Manual mode shift up signal				R				T			
Manual mode signal				R				T			
Not manual mode signal				R				T			
Parking brake switch signal		R			R			T			
Stop lamp switch signal		R		R				T			
Vehicle speed signal		R						R	T		
	R		R	R	R	R		T		R	
A/T shift schedule change demand signal				R					T		
ABS operation signal									T		
ABS warning lamp signal								R	T		
Brake warning lamp signal								R	T		
SLIP indicator lamp signal								R	T		
TCS operation signal									T		
VDC OFF indicator lamp signal								R	T		
VDC OFF switch signal									T		
VDC operation signal									T		
Front wiper stop position signal					R						T
High beam status signal	R										T
Hood switch signal					R						T
Low beam status signal	R										T
Rear window defogger control signal	R		R		R						T

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

TROUBLE DIAGNOSIS

[CAN]

TYPE 6

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	4WD	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
A/C compressor feedback signal	T									R				
A/C compressor request signal	T													R
Accelerator pedal position signal	T	R		R	R						R			
ASCD OD cancel request signal	T				R									
ASCD operation signal	T				R									
Battery voltage signal	T				R									
Closed throttle position signal	T			R	R									
Cooling fan speed request signal	T													R
Engine coolant temperature signal	T									R				
Engine speed signal	T	R	R	R	R					R	R			
Engine status signal	T					R								
Fuel consumption monitor signal	T									R				
			R							T				
ICC steering switch signal	T			R										
Malfunction indicator lamp signal	T									R				
Snow mode switch signal	R									T				
	T			R										
Wide open throttle position signal	T				R									
AWD warning lamp signal		T								R				
A/C switch/indicator signal			T							R				
			R							T				
System setting signal			T				R						R	
			R				T						T	
Buzzer output signal						T				R				
							T			R				
				T						R				
ICC OD cancel request signal				T	R									
ICC operation signal	R			T										
ICC system display signal				T						R				
ICC warning lamp signal				T						R				
A/T CHECK indicator lamp signal					T					R				
A/T self-diagnosis signal	R				T									
Current gear position signal				R	T						R			
Manual mode indicator signal				R	T					R				
Output shaft revolution signal	R			R	T			R						
P range signal				R	T						R		R	
Shift position indicator signal				R	T					R				
Turbine revolution signal	R			R	T									
A/C switch signal	R					T								
Blower fan motor switch signal	R					T								

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	4WD	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
Day time running light request signal						T				R				
Door lock/unlock status signal						T	R							
Door switch signal			R			T	R			R			R	R
Front fog light request signal						T								R
Front wiper request signal				R		T								R
High beam request signal						T				R				R
Horn chirp signal						T								R
Ignition switch signal						T							R	R
Key fob door unlock signal						T							R	
Key fob ID signal						T							R	
Key switch signal						T							R	
Low beam request signal						T								R
Oil pressure switch signal						R								T
						T				R				
Position light request signal			R			T				R				R
Rear window defogger switch signal						T								R
Run flat tire warning lamp signal						T				R				
Sleep wake up signal						T				R			R	R
						R	T							
Theft warning horn request signal						T								R
Tire pressure warning lamp signal						T				R				
Turn indicator signal						T		R		R				
Alarm request signal						R	T							
Back door open request signal						R	T							
Door lock/unlock request signal						R	T							
Ignition knob switch signal						R	T							
Key warning signal							T			R				
Power window open request signal						R	T							
Steering angle sensor signal									T		R			
Distance to empty signal			R							T				
Fuel level low warning signal			R							T				
Fuel level sensor signal	R									T				
Manual mode shift down signal					R					T				
Manual mode shift up signal					R					T				
Manual mode signal					R					T				
Not manual mode signal					R					T				
Parking brake switch signal		R				R				T				
Stop lamp switch signal		R			R					T				
Turn LED burnout status signal						R				T				
Vehicle speed signal		R		R				R		R	T			
	R		R		R	R	R			T		R	R	
A/T shift schedule change demand signal					R						T			
ABS malfunction signal				R							T			

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	4WD	DISP	ICC	TCM	BCM	I-KEY	LANE	STRG	M&A	ABS	LASER	ADP	IPDM-E
ABS operation signal				R							T			
ABS warning lamp signal										R	T			
Brake warning lamp signal										R	T			
SLIP indicator lamp signal										R	T			
TCS malfunction signal				R							T			
TCS operation signal				R							T			
VDC malfunction signal				R							T			
VDC OFF indicator lamp signal										R	T			
VDC OFF switch signal				R							T			
VDC operation signal				R							T			
ICC sensor signal				R								T		
Front wiper stop position signal						R								T
High beam status signal	R													T
Hood switch signal						R								T
Low beam status signal	R													T
Rear window defogger control signal	R		R			R								T

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

A
B
C
D
E
F
G
H
I
J
LAN
L
M


TROUBLE DIAGNOSIS

[CAN]

NKS004N0

Schematic

- (AW) : AWD models
- (IC) : With ICC
- (IK) : With Intelligent Key
- (LD) : With LDW

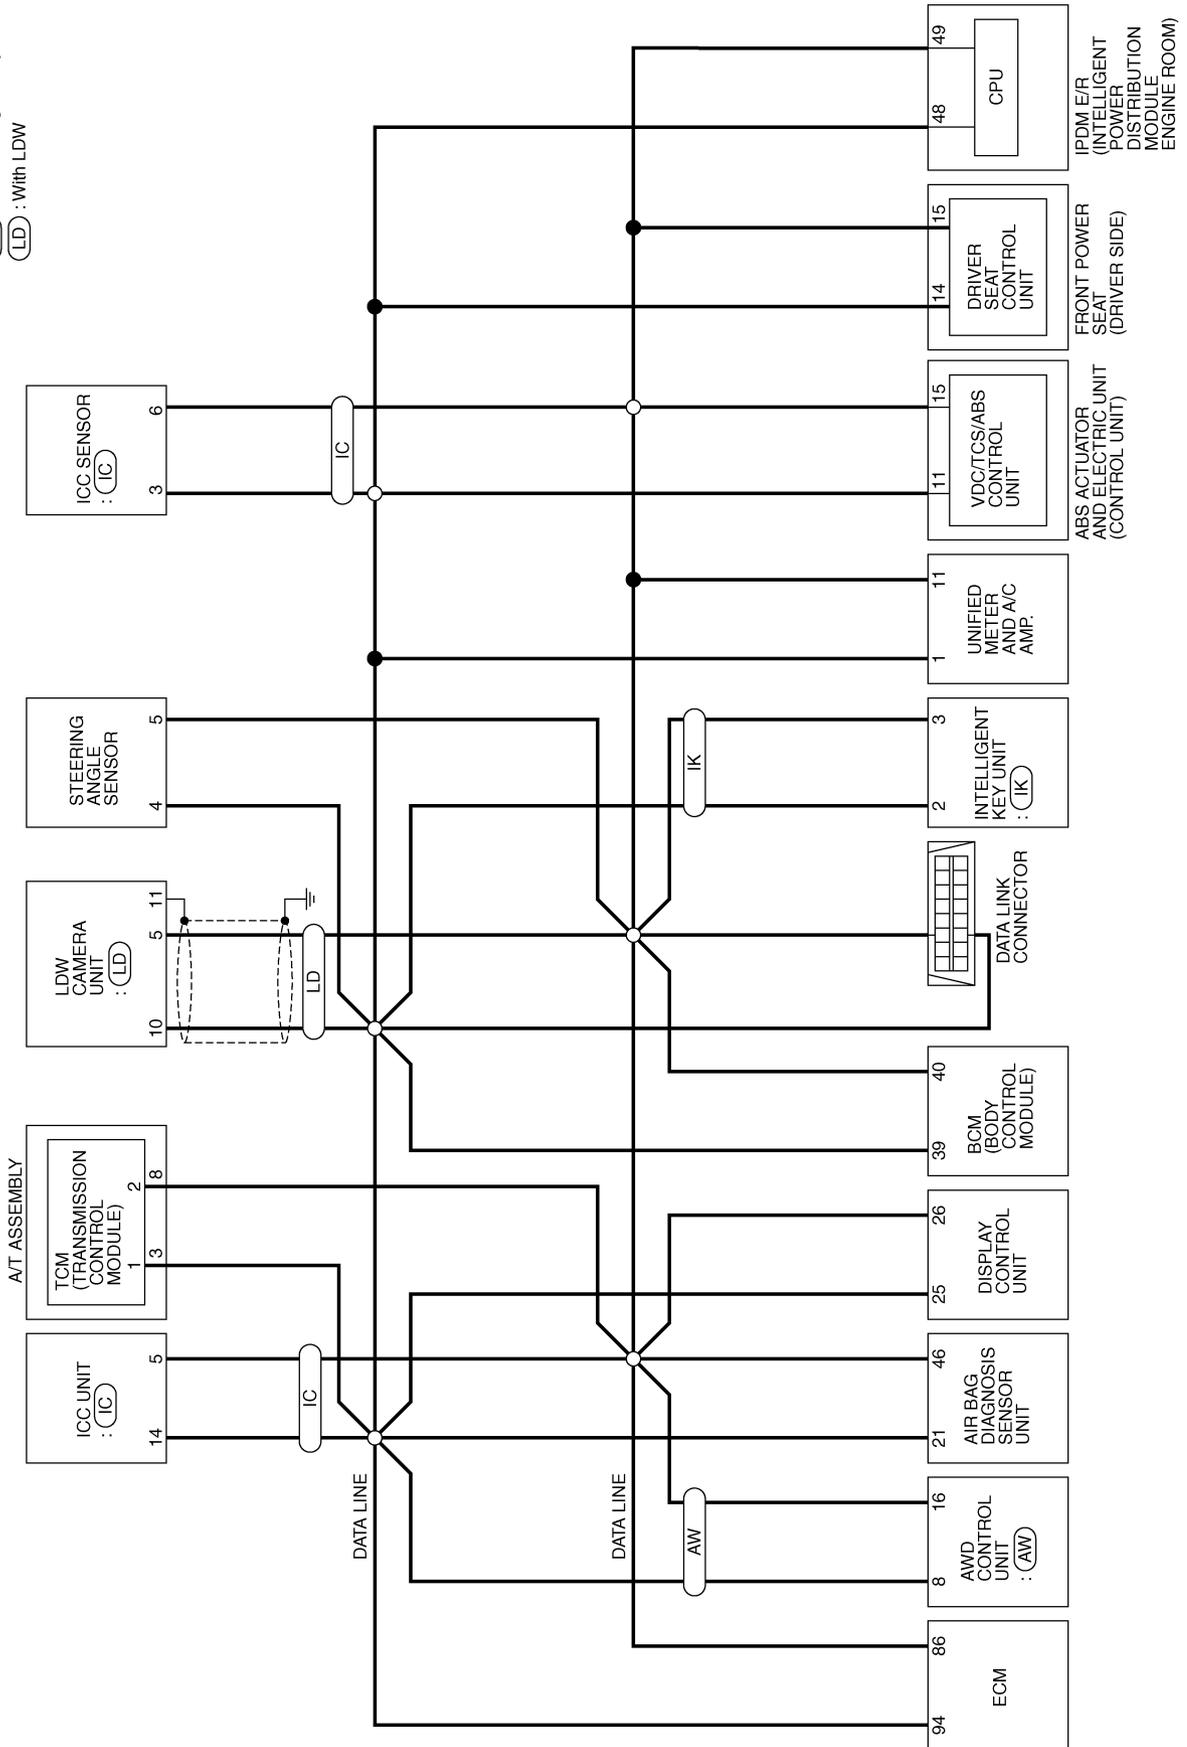

TKWM4902E

TROUBLE DIAGNOSIS




[CAN]

Wiring Diagram — CAN —

NKS004NR

LAN-CAN-01





- : DATA LINE
- : AWD MODELS
- : WITH ICC

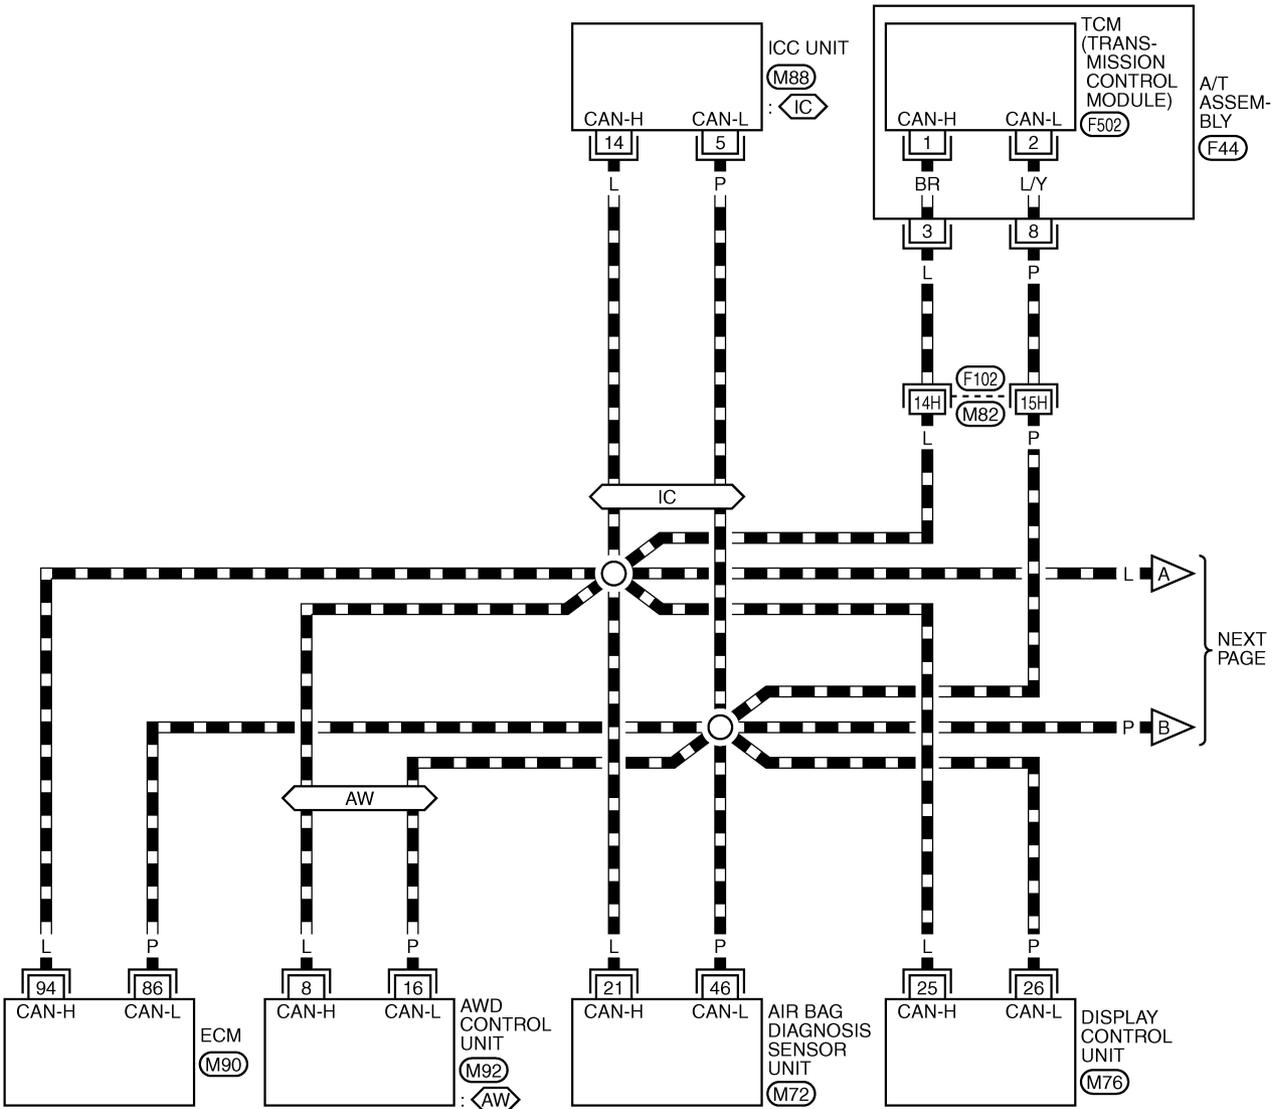

REFER TO THE FOLLOWING.

(F102) -SUPER MULTIPLE JUNCTION (SMJ)

(M90) -ELECTRICAL UNITS



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.







TKWM4957E

LAN-CAN-02

▬ : DATA LINE

◁IK▷ : WITH INTELLIGENT KEY

◁LD▷ : WITH LDW

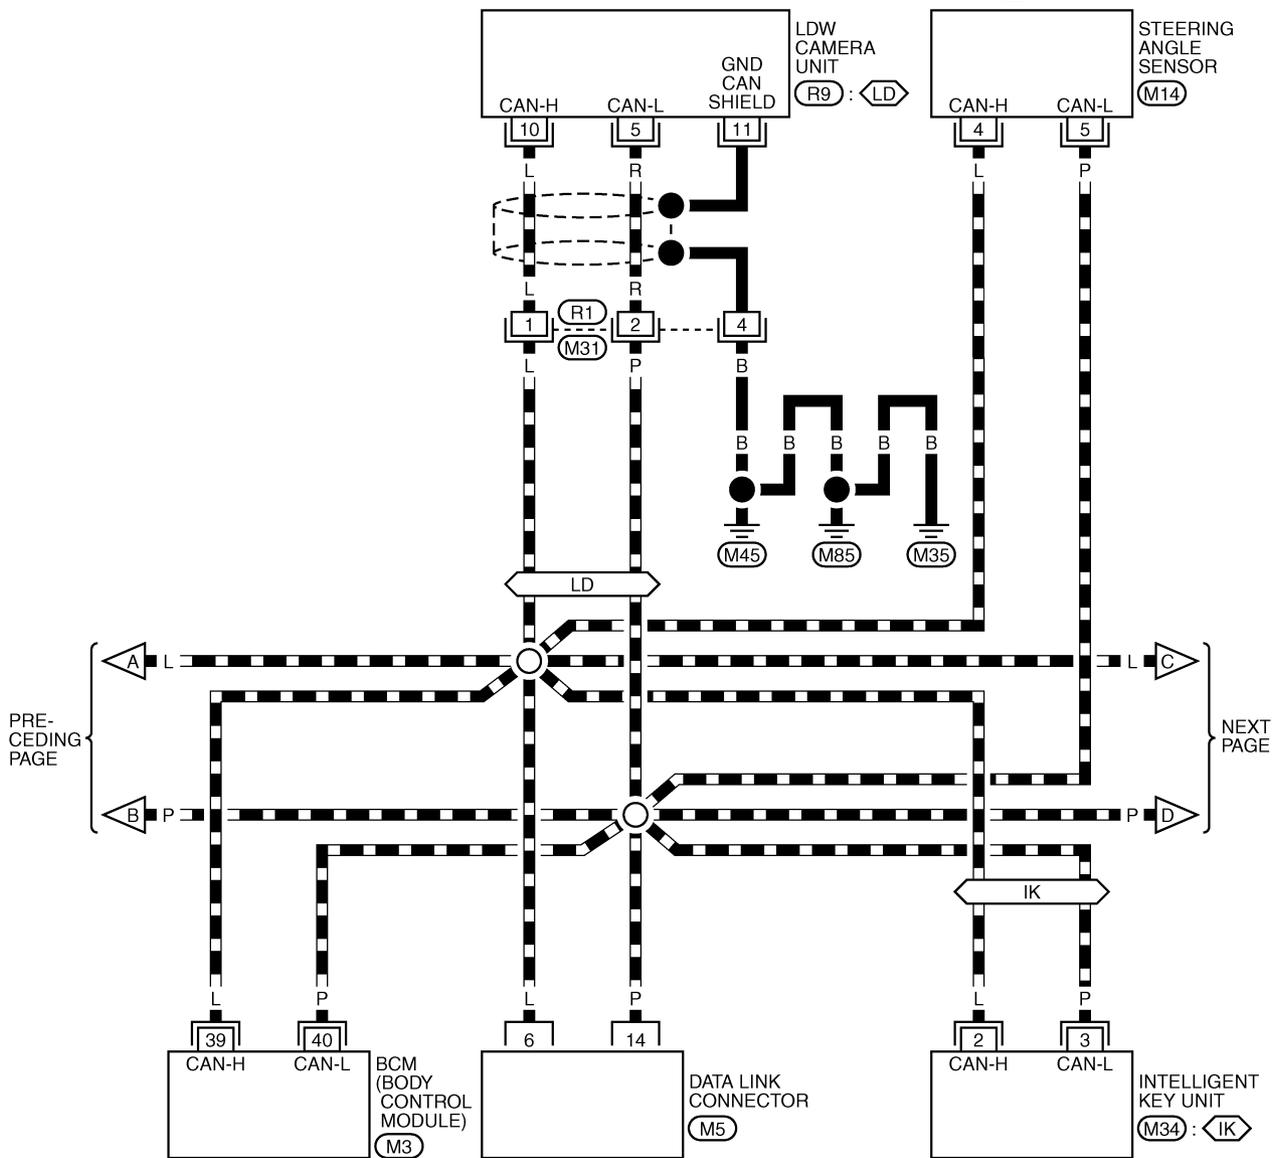







REFER TO THE FOLLOWING.
(M3) -ELECTRICAL UNITS

TROUBLE DIAGNOSIS

[CAN]

LAN-CAN-03

▬ : DATA LINE
 ◁ IC ▷ : WITH ICC

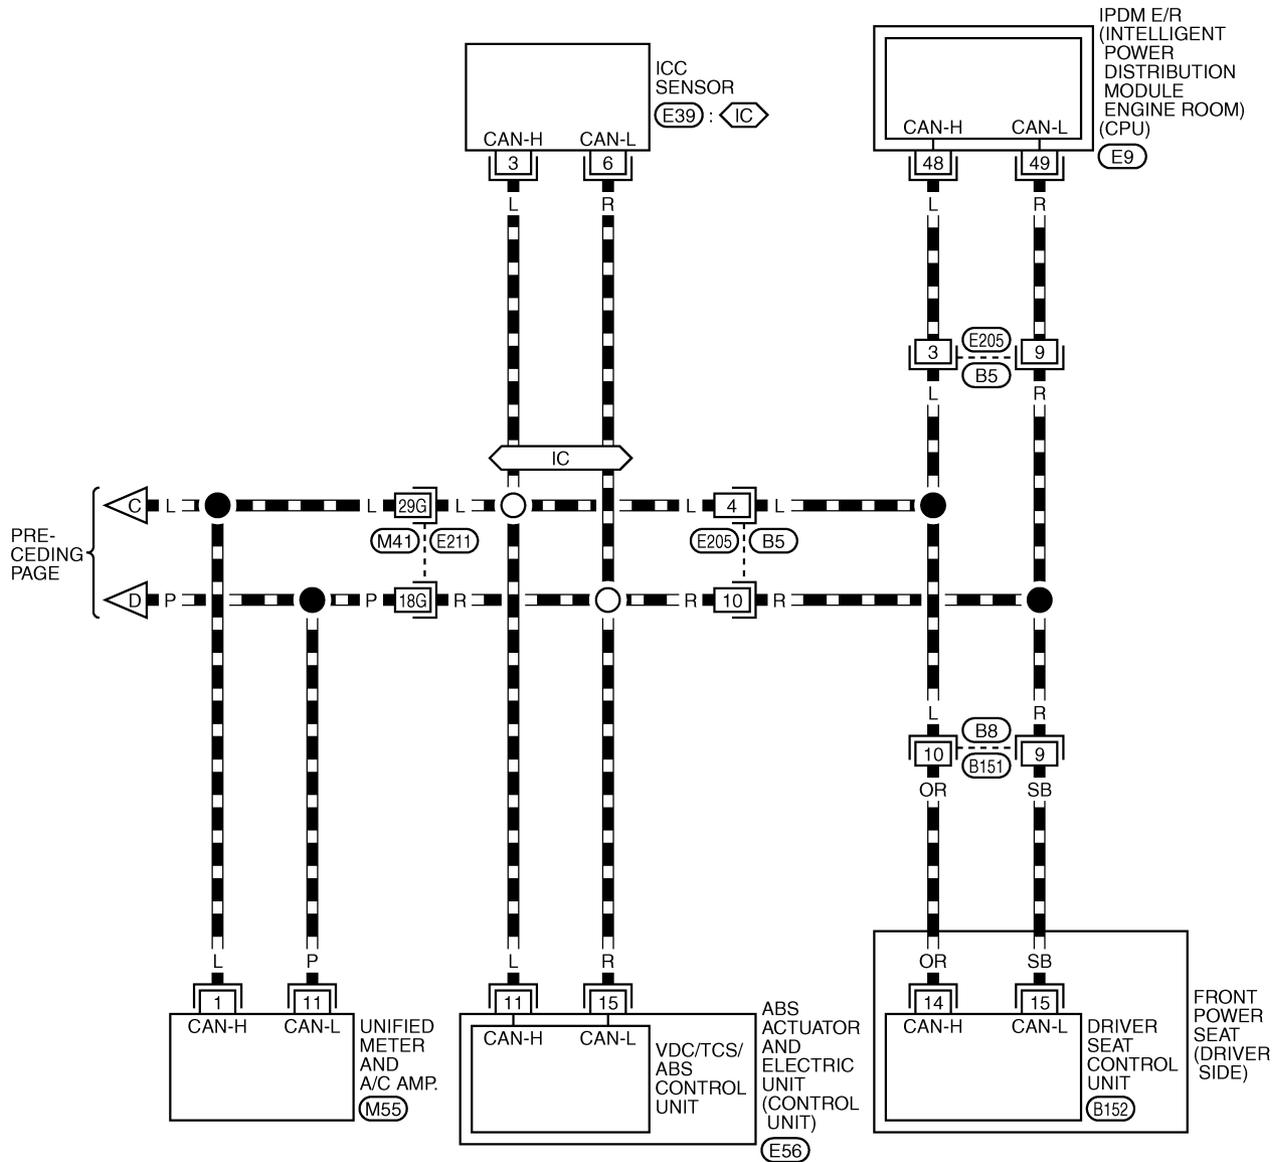

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.
 (E211) -SUPER MULTIPLE JUNCTION (SMJ)
 (E56) -ELECTRICAL UNITS

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Interview Sheet

NKS004NS

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past

SKIB8898E

TROUBLE DIAGNOSIS

[CAN]

Data Sheet CONSULT-II DATA ATTACHMENT SHEET

NKS004NT

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach printout of
ICC
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
ALL MODE AWD/4WD
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
ENGINE
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
SELECT SYSTEM

PKID0600E

TROUBLE DIAGNOSIS

[CAN]

Attach printout of
LDW
and
SELF-DIAG RESULTS
CAN DIAG SUPPORT MNTR

Attach printout of
INTELLIGENT KEY
and
SELF-DIAG RESULTS
CAN DIAG SUPPORT MNTR

Attach printout of
BCM
and
SELF-DIAG RESULTS
CAN DIAG SUPPORT MNTR

Attach printout of
A/T
and
SELF-DIAG RESULTS
CAN DIAG SUPPORT MNTR

PKID0601E

TROUBLE DIAGNOSIS

[CAN]

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach printout of
IPDM E/R
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
AUTO DRIVE POS.
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
ABS
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
METER A/C AMP
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

PKID0602E

TROUBLE DIAGNOSIS

[CAN]

ON-BOARD DIAGNOSIS COPY SHEET

NOTE:

CAN diagnostic support monitor of the display control unit is indicated on the vehicle display. Refer to [AV-81](#), "[CAN DIAG SUPPORT MONITOR](#)".

Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet					
Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)			CAN_CIRC_5 (Receive diagnosis of Unified meter and A/C amp.)		
CAN_CIRC_1 (Transmit diagnosis)			CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)			CAN_CIRC_7 (Receive diagnosis of IPDM E/R)		
CAN_CIRC_3 (Receive diagnosis of ECM)			CAN_CIRC_8	Not available	
CAN_CIRC_4	Not available		CAN_CIRC_9	Not available	

SKIB8871E


TROUBLE DIAGNOSIS

[CAN]

NKS004NU

CAN System (Type 1) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
LAN
L
M

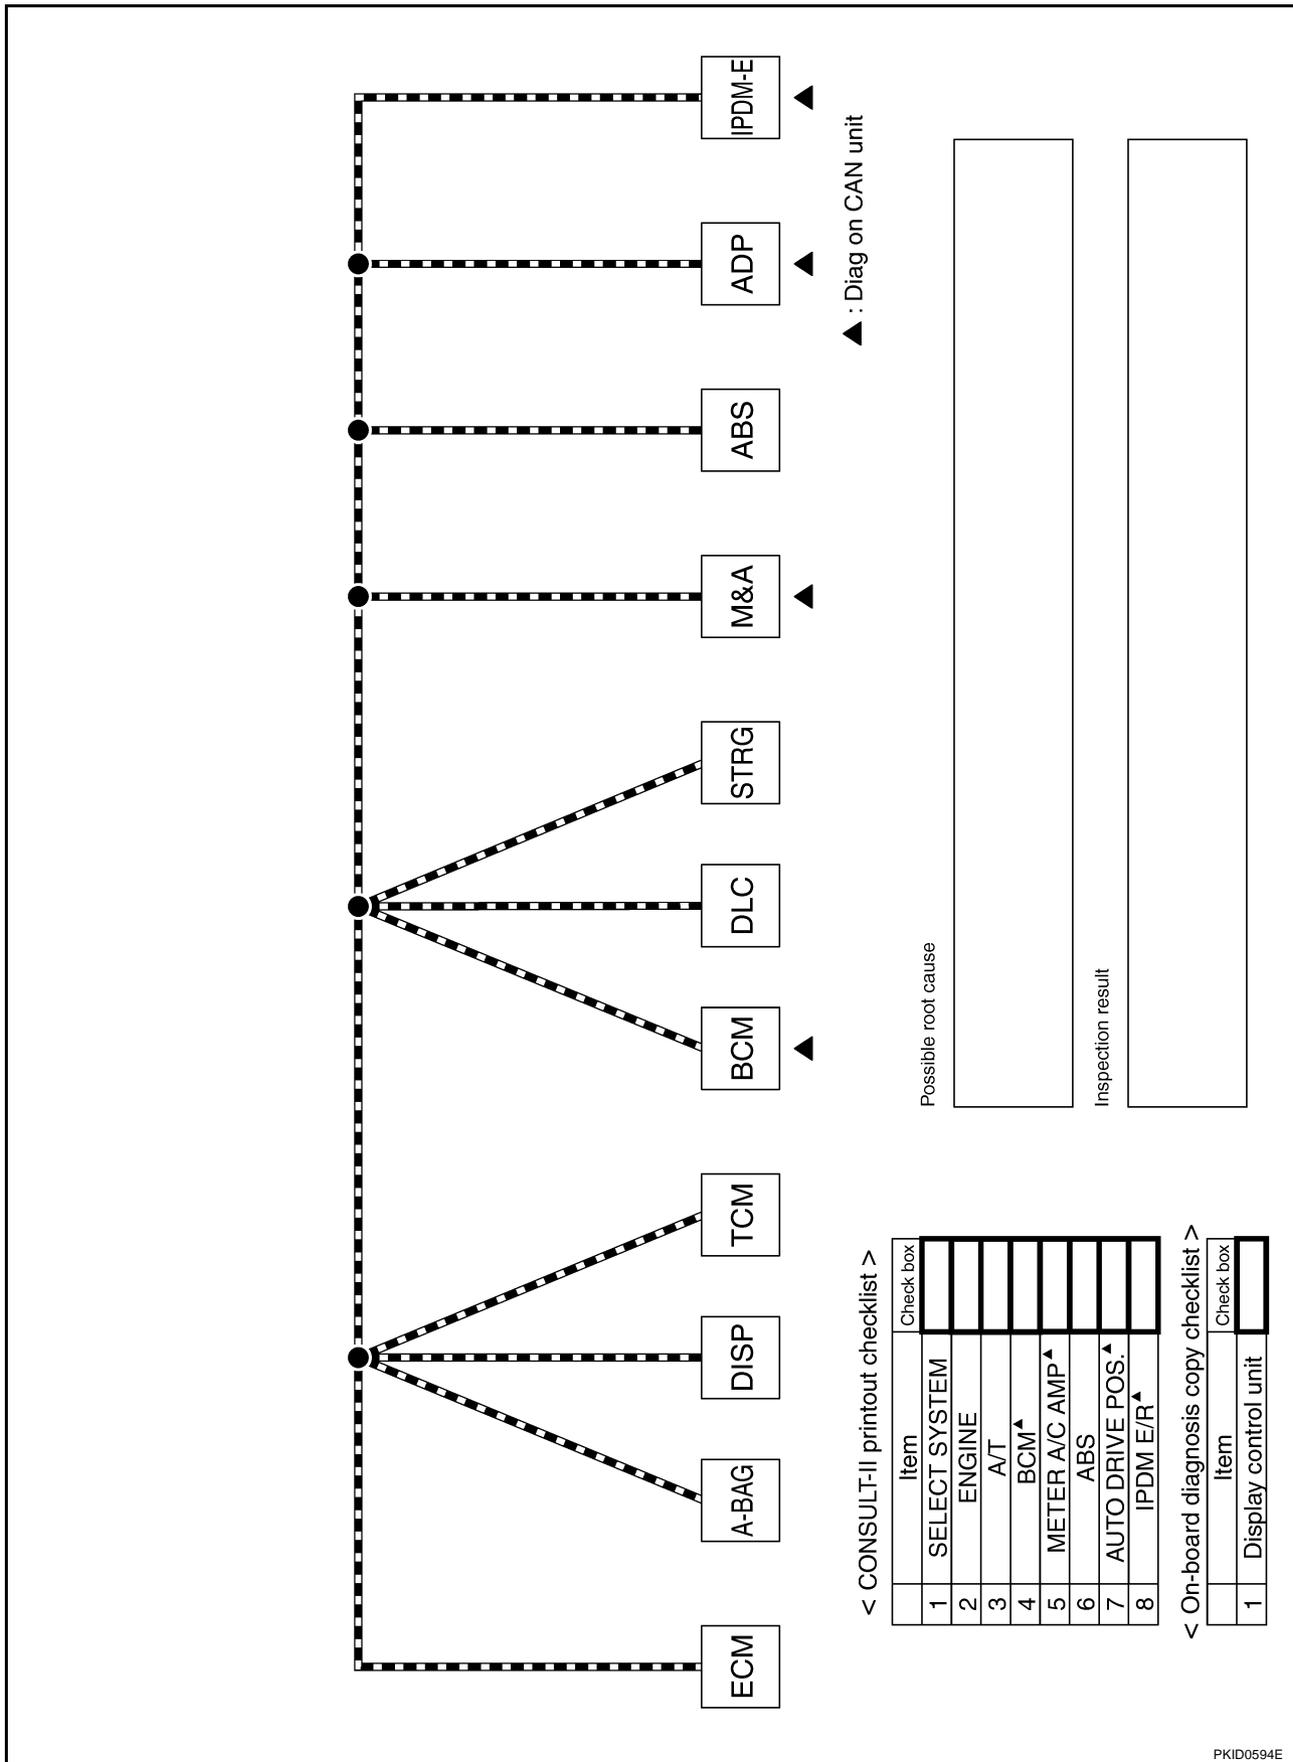


PKID0594E

TROUBLE DIAGNOSIS

[CAN]

CAN System (Type 2) DIAGNOSIS SHEET

NKS0040F

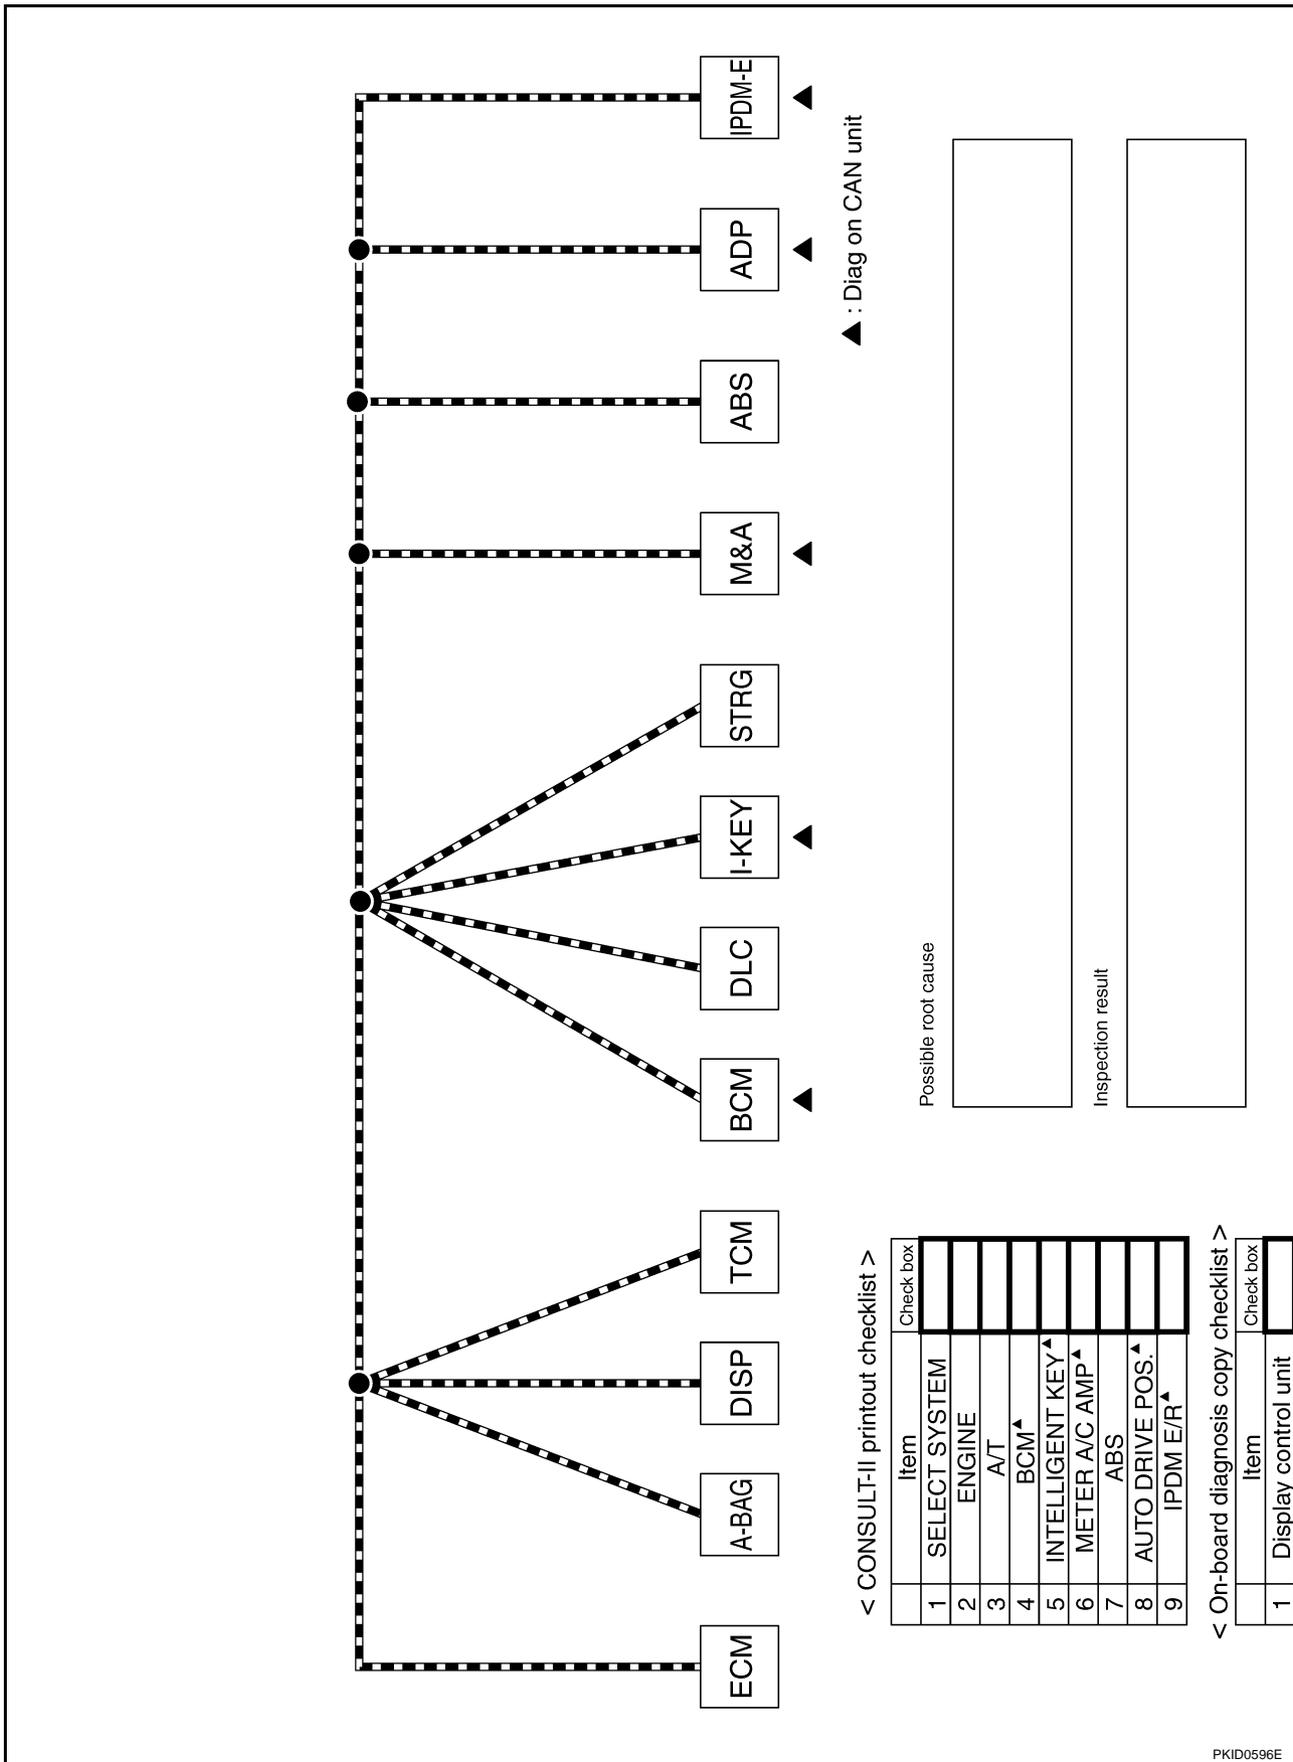

PKID0596E


TROUBLE DIAGNOSIS

[CAN]

NKS0040G

CAN System (Type 3) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
LAN
L
M

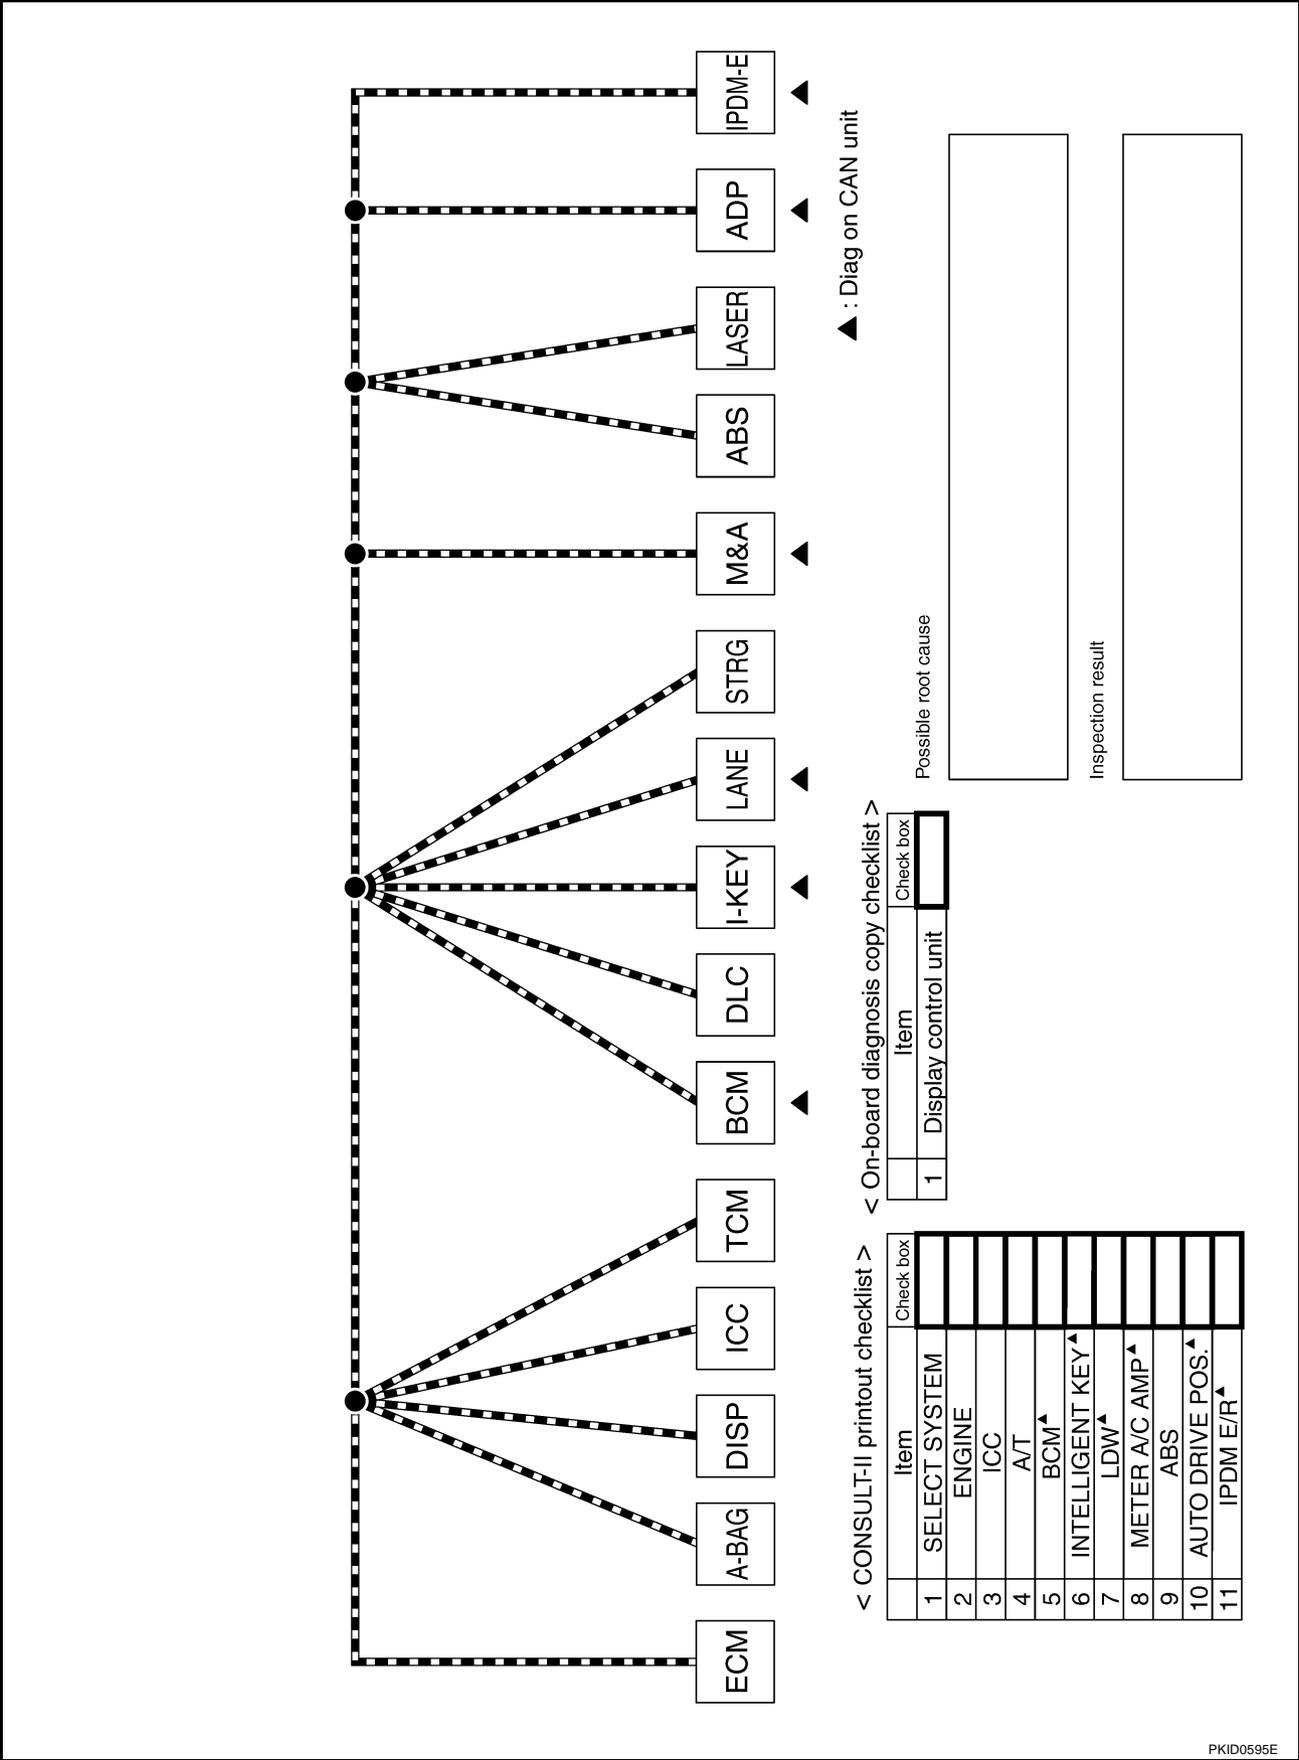


PKID0595E

TROUBLE DIAGNOSIS

[CAN]

CAN System (Type 4) DIAGNOSIS SHEET

NKS0040H

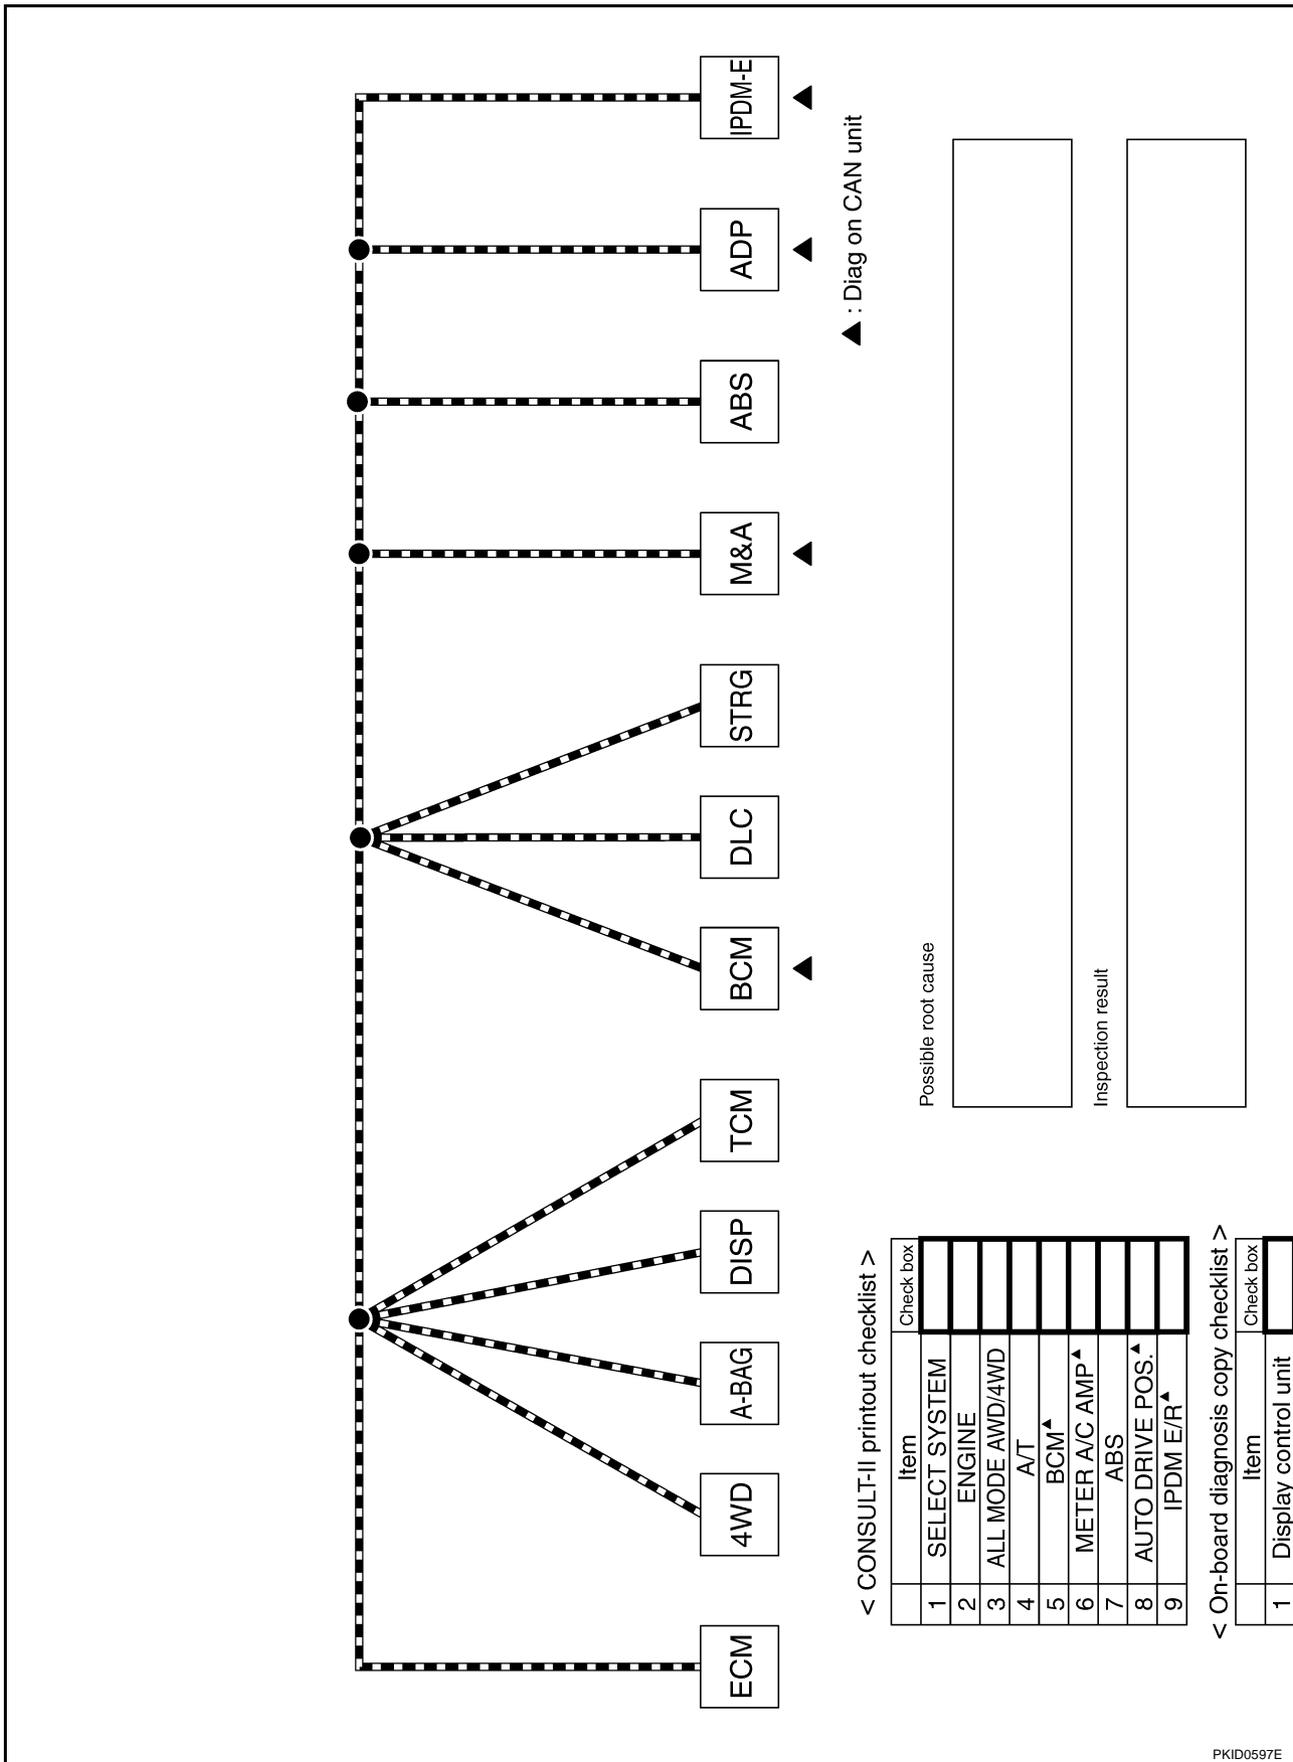

PKID0597E


TROUBLE DIAGNOSIS

[CAN]

CAN System (Type 5) DIAGNOSIS SHEET

NKS00401

A
B
C
D
E
F
G
H
I
J
LAN
L
M

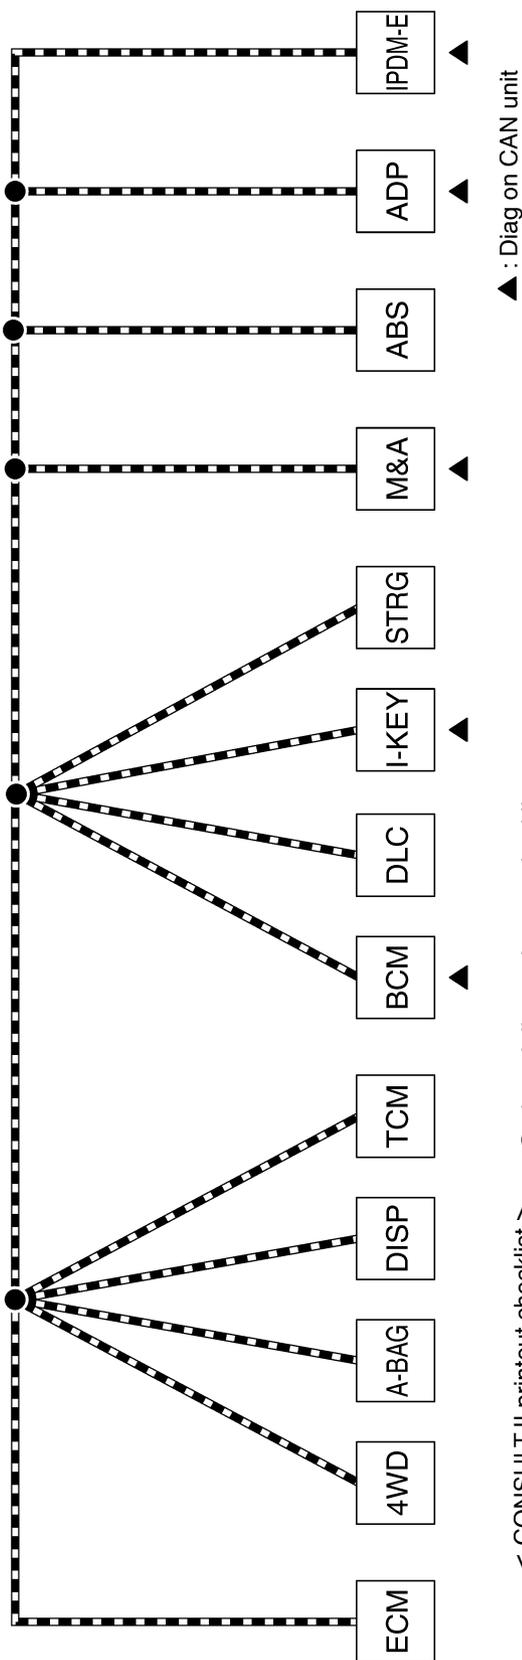

< On-board diagnosis copy checklist >

Item	Check box
1 Display control unit	<input type="checkbox"/>

Possible root cause

Inspection result

< CONSULT-II printout checklist >

Item	Check box
1 SELECT SYSTEM	<input type="checkbox"/>
2 ENGINE	<input type="checkbox"/>
3 ALL MODE AWD/4WD	<input type="checkbox"/>
4 A/T	<input type="checkbox"/>
5 BCM▲	<input type="checkbox"/>
6 INTELLIGENT KEY▲	<input type="checkbox"/>
7 METER A/C AMP▲	<input type="checkbox"/>
8 ABS	<input type="checkbox"/>
9 AUTO DRIVE POS.▲	<input type="checkbox"/>
10 IPDM E/R▲	<input type="checkbox"/>


PKID0598E

TROUBLE DIAGNOSIS

[CAN]

NKS0040J


CAN System (Type 6) DIAGNOSIS SHEET

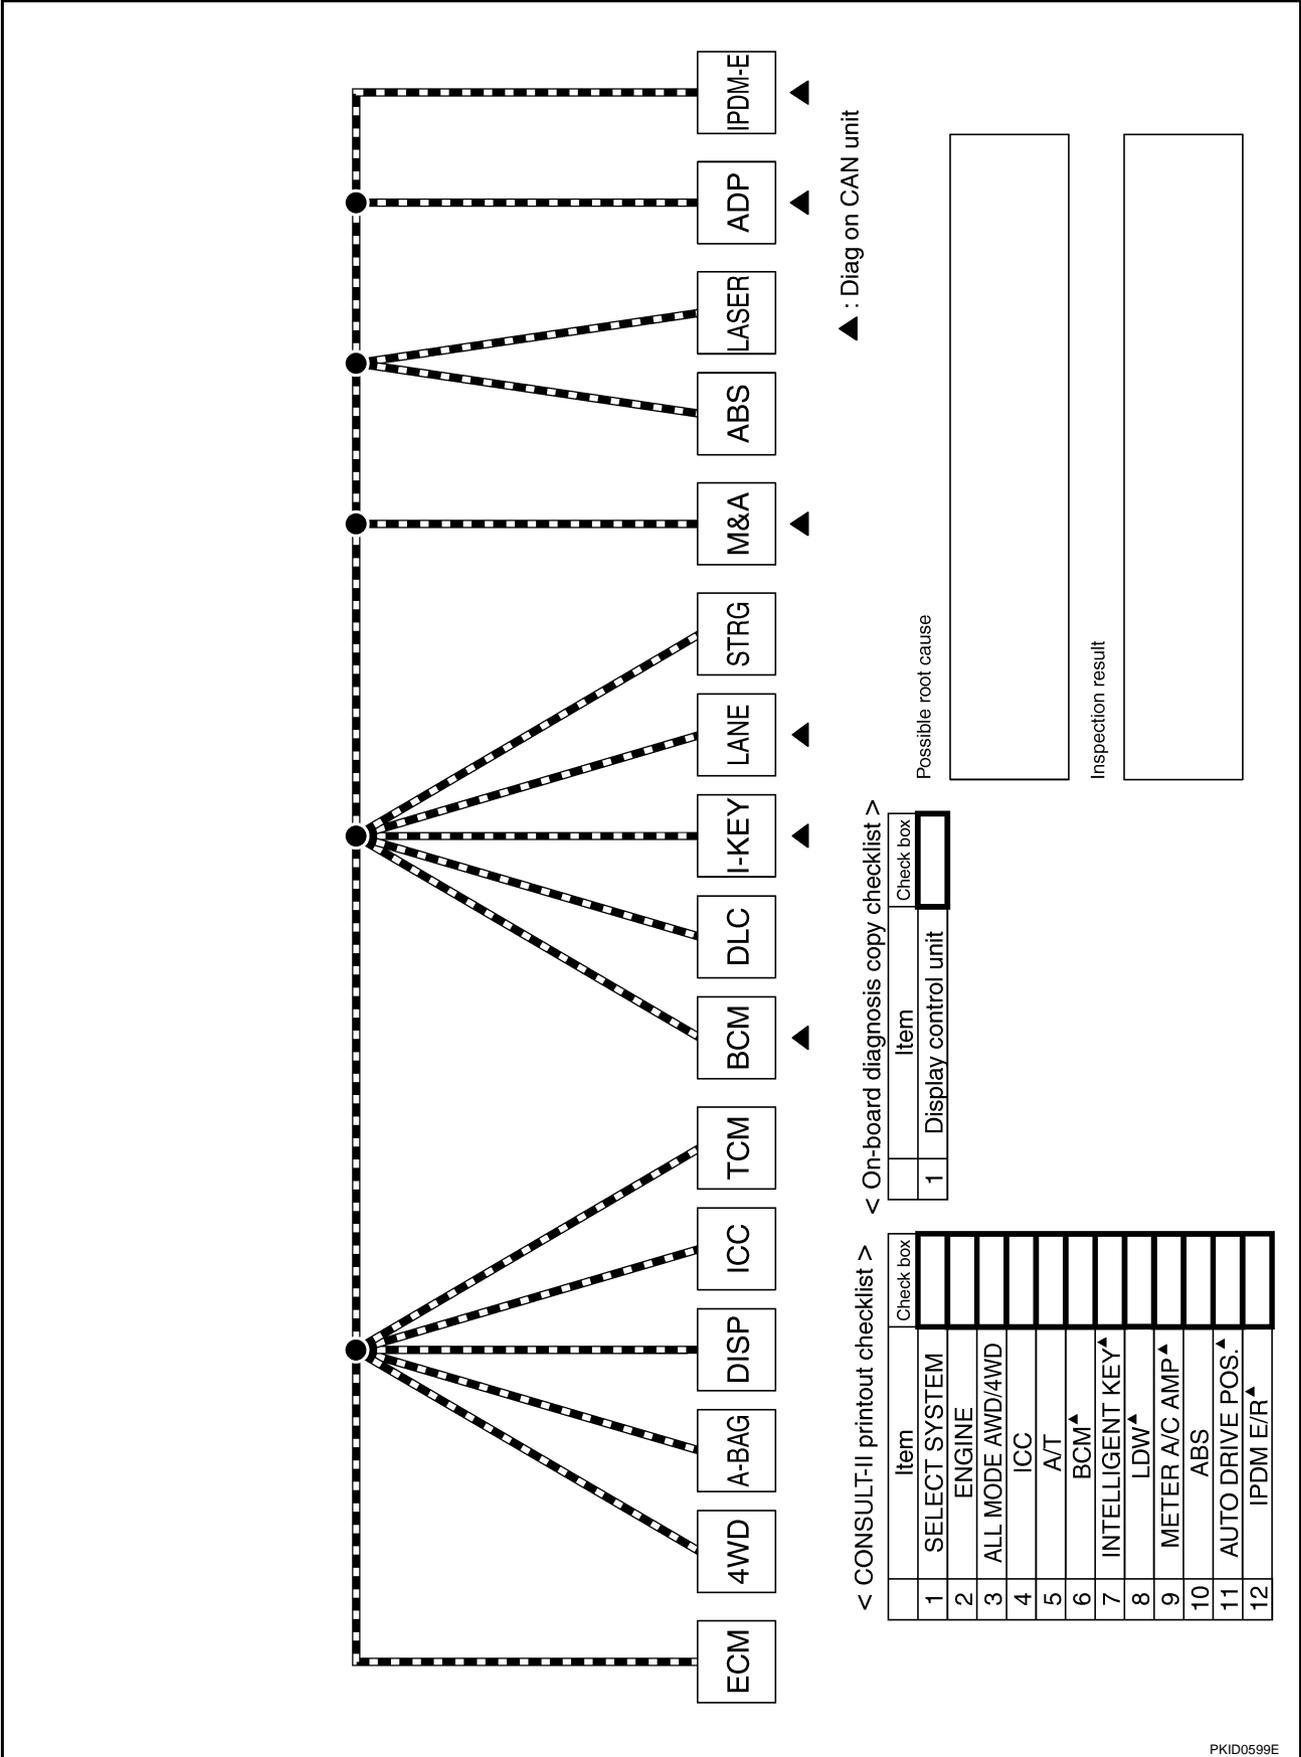

PKID0599E

Component Parts Location

NKS004NV

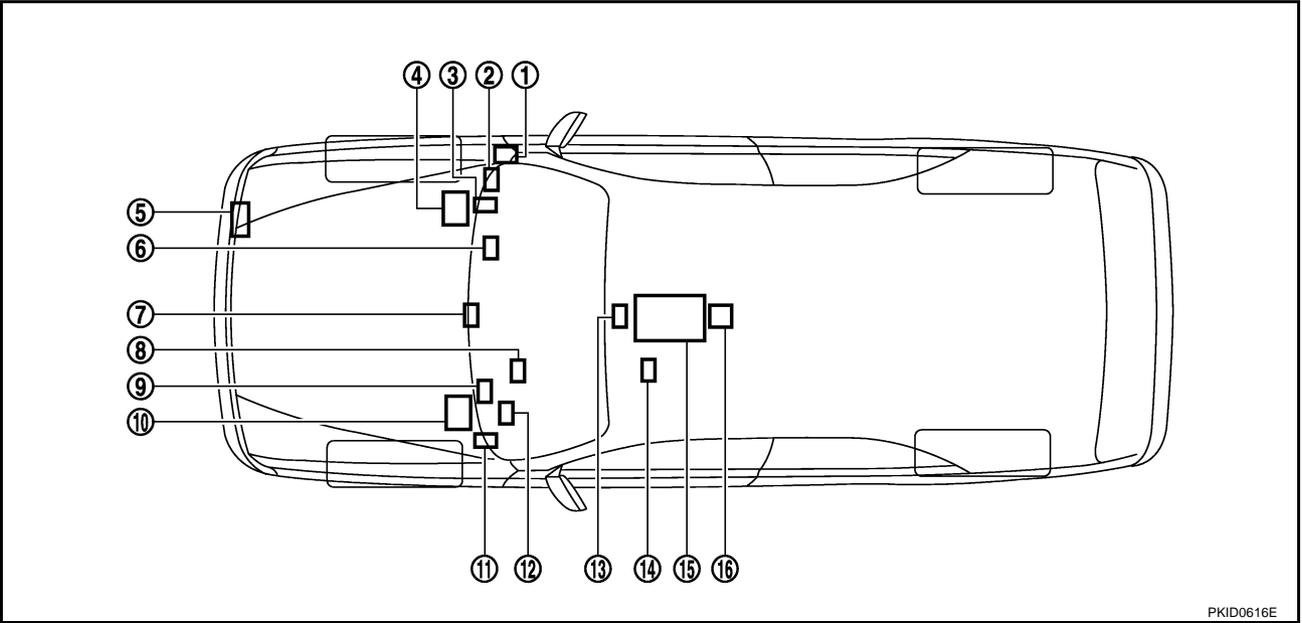

- | | | |
|---|-----------------------------------|-----------------------------|
| 1. AWD control unit M92 | 2. ICC unit M88 | 3. ECM M90 |
| 4. IPDM E/R E9 | 5. ICC sensor E39 | 6. Display control unit M76 |
| 7. Unified meter and A/C amp. M55 | 8. Steering angle sensor M14 | 9. Intelligent Key unit M34 |
| 10. ABS actuator and electric unit (control unit) E56 | 11. BCM M3 | 12. Data link connector M5 |
| 13. LDW camera unit R9 | 14. Driver seat control unit B152 | 15. A/T assembly F44 |
| 16. Air bag diagnosis sensor unit M72 | | |

Harness Layout

NKS004NW

Refer to [PG-43, "Harness Layout"](#) .

Malfunction Area Chart**MAIN LINE**

Malfunction Area	Reference
Main line between TCM and data link connector	LAN-77, "Main Line Between TCM and Data Link Connector"
Main line between data link connector and unified meter and A/C amp.	LAN-77, "Main Line Between Data Link Connector and Unified Meter and A/C Amp."
Main line between unified meter and A/C amp. and ABS actuator and electric unit (control unit)	LAN-78, "Main Line Between Unified Meter and A/C Amp. and ABS Actuator and Electric Unit (Control Unit)"
Main line between ABS actuator and electric unit (control unit) and driver seat control unit	LAN-79, "Main Line Between ABS Actuator and Electric Unit (Control Unit) and Driver Seat Control Unit"

BRANCH LINE

Malfunction Area	Reference
ECM branch line circuit	LAN-80, "ECM Branch Line Circuit"
AWD control unit branch line circuit	LAN-80, "AWD Control Unit Branch Line Circuit"
Display control unit branch line circuit	LAN-81, "Display Control Unit Branch Line Circuit"
ICC unit branch line circuit	LAN-82, "ICC Unit Branch Line Circuit"
TCM branch line circuit	LAN-82, "TCM Branch Line Circuit"
BCM branch line circuit	LAN-83, "BCM Branch Line Circuit"
Data link connector branch line circuit	LAN-84, "Data Link Connector Branch Line Circuit"
Intelligent Key unit branch line circuit	LAN-84, "Intelligent Key Unit Branch Line Circuit"
LDW camera unit branch line circuit	LAN-85, "LDW Camera Unit Branch Line Circuit"
Steering angle sensor branch line circuit	LAN-86, "Steering Angle Sensor Branch Line Circuit"
Unified meter and A/C amp. branch line circuit	LAN-86, "Unified Meter and A/C Amp. Branch Line Circuit"
ABS actuator and electric unit (control unit) branch line circuit	LAN-87, "ABS Actuator and Electric Unit (Control Unit) Branch Line Circuit"
ICC sensor branch line circuit	LAN-88, "ICC Sensor Branch Line Circuit"
Driver seat control unit branch line circuit	LAN-89, "Driver Seat Control Unit Branch Line Circuit"
IPDM E/R branch line circuit	LAN-89, "IPDM E/R Branch Line Circuit"

SHORT CIRCUIT

Malfunction Area	Reference
CAN communication circuit	LAN-90, "CAN Communication Circuit"

Main Line Between TCM and Data Link Connector

NKS004NY

INSPECTION PROCEDURE

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the connector of ECM and the harness connector M82 and F102.
4. Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	14H	M5	6	Yes
	15H		14	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Not copied from on-board diagnosis.
 - Procedure for detecting root cause.
- Past error: Error was detected in the main line between the TCM and the data link connector.
- NG >> Repair the main line between the harness connector M82 and the data link connector.

Main Line Between Data Link Connector and Unified Meter and A/C Amp.

NKS004NZ

INSPECTION PROCEDURE

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the ECM connector and the unified meter and A/C amp. connector.
4. Check the continuity between the data link connector and the unified meter and A/C amp. harness connector.

Data link connector		Unified meter and A/C amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M5	6	M55	1	Yes
	14		11	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Not copied from on-board diagnosis.
 - Procedure for detecting root cause.
- Past error: Error was detected in the main line between the data link connector and the unified meter and A/C amp.
- NG >> Repair the main line between the data link connector and the unified meter and A/C amp.

Main Line Between Unified Meter and A/C Amp. and ABS Actuator and Electric Unit (Control Unit)

NKS00400

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M41
 - Harness connector E211

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of unified meter and A/C amp. and the harness connector M41 and E211.
2. Check the continuity between the unified meter and A/C amp. harness connector and the harness connector.

Unified meter and A/C amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M55	1	M41	29G	Yes
	11		18G	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Repair the main line between the unified meter and A/C amp. connector and the harness connector M41.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E211	29G	E56	11	Yes
	18G		15	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Not copied from on-board diagnosis.
 - Procedure for detecting root cause.
 - Past error: Error was detected in the main line between the unified meter and A/C amp. and ABS actuator and electric unit (control unit).
- NG >> Repair the main line between the harness connector E211 and the ABS actuator and electric unit (control unit) harness connector.

Main Line Between ABS Actuator and Electric Unit (Control Unit) and Driver Seat Control Unit

NKS00401

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E205
 - Harness connector B5

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit) and the harness connector E205 and B5.
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E56	11	E205	4	Yes
	15		10	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Repair the main line between the ABS actuator and electric unit (control unit) connector and the harness connector E205.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B8 and B151.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	4	B8	10	Yes
	10		9	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Not copied from on-board diagnosis.
 - Procedure for detecting root cause.
 - Past error: Error was detected in the main line between the ABS actuator and electric unit (control unit) and the driver seat control unit.
- NG >> Repair the main line between the harness connector B5 and B8.

ECM Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M90	94	86	Approx. 108 – 132

OK or NG

- OK >> GO TO 3.
- NG >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-148, "POWER SUPPLY AND GROUND CIRCUIT"](#) (VQ35DE), [EC-813, "POWER SUPPLY AND GROUND CIRCUIT"](#) (VK45DE).

OK or NG

- OK >> ● Present error: Replace the ECM. Refer to [EC-82, "Procedure After Replacing ECM"](#) (VQ35DE), [EC-744, "Procedure After Replacing ECM"](#) (VK45DE).
- Past error: Error was detected in the ECM branch line.
- NG >> Repair the power supply and the ground circuit.

AWD Control Unit Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M92	8	16	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [TF-16, "Circuit Diagram"](#).

OK or NG

- OK >> ● Present error: Replace the AWD control unit. Refer to [TF-39, "AWD CONTROL UNIT"](#).
 ● Past error: Error was detected in the AWD control unit branch line.
 NG >> Repair the power supply and the ground circuit.

Display Control Unit Branch Line Circuit

NKS00404

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the display control unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of display control unit.
2. Check the resistance between the display control unit harness connector terminals.

Display control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M76	25	26	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the display control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the display control unit. Refer to [AV-56, "Schematic — INF/D —"](#).

OK or NG

- OK >> ● Present error: Replace the display control unit. Refer to [AV-92, "Removal and Installation of Display Control Unit"](#).
 ● Past error: Error was detected in the display control unit branch line.
 NG >> Repair the power supply and the ground circuit.

ICC Unit Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC unit.
2. Check the resistance between the ICC unit harness connector terminals.

ICC unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M88	14	5	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the ICC unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC unit. Refer to [ACS-20, "Schematic"](#) .

OK or NG

- OK >> ● Present error: Replace the ICC unit. Refer to [ACS-75, "ICC Unit"](#) .
 ● Past error: Error was detected in the ICC unit branch line.
 NG >> Repair the power supply and the ground circuit.

TCM Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend, and loose connection (unit side and connector side).
 - A/T assembly connector
 - Harness connector F102
 - Harness connector M82

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F44	3	8	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/T assembly. Refer to [AT-179, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#) .

OK or NG

- OK >> ● Present error: Replace control valve with TCM. Refer to [AT-239, "CONTROL VALVE WITH TCM ASSEMBLY REMOVAL AND INSTALLATION"](#) .
 ● Past error: Error was detected in the TCM branch line.
 NG >> Repair the power supply and the ground circuit.

BCM Branch Line Circuit

NKS00406

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M3	39	40	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-10, "Schematic"](#) .

OK or NG

- OK >> ● Present error: Replace the BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#) .
 ● Past error: Error was detected in the BCM branch line.
 NG >> Repair the power supply and the ground circuit.

Data Link Connector Branch Line Circuit

NKS00407

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M5	6	14	Approx. 54 – 66

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Not copied from on-board diagnosis.
 - Procedure for detecting root cause.
- Past error: Error was detected in the data link connector branch line circuit.
- NG >> Repair the data link connector branch line.

Intelligent Key Unit Branch Line Circuit

NKS00408

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the Intelligent Key unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of Intelligent Key unit.
2. Check the resistance between the Intelligent Key unit harness connector terminals.

Intelligent Key unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	2	3	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the Intelligent Key unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the Intelligent Key unit. Refer to [BL-96, "Schematic"](#) .
 OK or NG

- OK >> ● Present error: Replace the Intelligent Key unit. Refer to [BL-146, "Removal and Installation of Intelligent Key Unit"](#) .
 - Past error: Error was detected in the Intelligent Key unit branch line.
- NG >> Repair the power supply and the ground circuit.

LDW Camera Unit Branch Line Circuit

NKS004OL

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend, and loose connection (unit side and connector side).
 - LDW camera unit connector
 - Harness connector R1
 - Harness connector M31

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of LDW camera unit.
2. Check the resistance between the LDW camera unit harness connector terminals.

LDW camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R9	10	5	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
- NG >> Repair the LDW camera unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the LDW camera unit. Refer to [DI-96, "Power Supply and Ground Circuit Inspection"](#) .

OK or NG

- OK >> ● Present error: Replace the LDW camera unit. Refer to [DI-104, "Removal and Installation for LDW Camera Unit"](#) .
 - Past error: Error was detected in the LDW camera unit branch line.
- NG >> Repair the power supply and the ground circuit.

Steering Angle Sensor Branch Line Circuit

NKS00409

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	4	5	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of steering angle sensor. Refer to [BRC-15, "Schematic"](#) .

OK or NG

- OK >> ● Present error: Replace the steering angle sensor. Refer to [BRC-63, "STEERING ANGLE SENSOR"](#) .
 ● Past error: Error was detected in the steering angle sensor branch line.
- NG >> Repair the power supply and the ground circuit.

Unified Meter and A/C Amp. Branch Line Circuit

NKS0040A

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the unified meter and A/C amp. for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of unified meter and A/C amp.
2. Check the resistance between the unified meter and A/C amp. harness connector terminals.

Unified meter and A/C amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M55	1	11	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the unified meter and A/C amp. branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the unified meter and A/C amp. Refer to [DI-33, "Power Supply and Ground Circuit Inspection"](#).

OK or NG

- OK >> ● Present error: Replace the unified meter and A/C amp. Refer to [DI-37, "Removal and Installation of Unified Meter and A/C Amp."](#).
 ● Past error: Error was detected in the unified meter and A/C amp. branch line.
 NG >> Repair the power supply and the ground circuit.

ABS Actuator and Electric Unit (Control Unit) Branch Line Circuit

NKS0040B

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E56	11	15	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of ABS actuator and electric unit (control unit). Refer to [BRC-15, "Schematic"](#) .

OK or NG

- OK >> ● Present error: Replace the ABS actuator and electric unit (control unit). Refer to [BRC-60, "ACTUATOR AND ELECTRIC UNIT \(ASSEMBLY\)"](#) .
- Past error: Error was detected in the ABS actuator and electric unit (control unit) branch line.
- NG >> Repair the power supply and the ground circuit.

ICC Sensor Branch Line Circuit

NKS0040M

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC sensor for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E39	3	6	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
- NG >> Repair the ICC sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of ICC sensor. Refer to [ACS-20, "Schematic"](#) .

OK or NG

- OK >> ● Present error: Replace the ICC sensor. Refer to [ACS-75, "ICC Sensor"](#) .
- Past error: Error was detected in the ICC sensor branch line.
- NG >> Repair the power supply and the ground circuit.

Driver Seat Control Unit Branch Line Circuit

NKS0040C

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit connector
 - Harness connector B151
 - Harness connector B8

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver seat control unit.
2. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B152	14	15	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the driver seat control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of driver seat control unit. Refer to [SE-37, "CHECK POWER SUPPLY AND GROUND"](#).

OK or NG

- OK >> ● Present error: Replace the driver seat control unit.
 ● Past error: Error was detected in the driver seat control unit branch line.
 NG >> Repair the power supply and the ground circuit.

IPDM E/R Branch Line Circuit

NKS0040D

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R connector
 - Harness connector E205
 - Harness connector B5

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E9	48	49	Approx. 108 – 132

OK or NG

- OK >> GO TO 3.
 NG >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).

OK or NG

- OK >> ● Present error: Replace the IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#)
 ● Past error: Error was detected in the IPDM E/R branch line.
 NG >> Repair the power supply and the ground circuit.

CAN Communication Circuit

NKS0040E

INSPECTION PROCEDURE

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M5	6	14	No

OK or NG

- OK >> GO TO 3.
 NG >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M5	6		No
	14		No

OK or NG

- OK >> GO TO 4.
- NG >> Check the harness and repair the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
94	86	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
48	49	Approx. 108 – 132

OK or NG

- OK >> GO TO 5.
- NG >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 6.
- Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
- Non-reproduced>>Replace unit whose connector was disconnected.

