

SECTION **AV**

AUDIO, VISUAL, NAVIGATION & TELEPHONE SYSTEM

CONTENTS

<b>PRECAUTIONS</b> .....	4	Noise Inspection .....	32
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	TYPE OF NOISE AND POSSIBLE CAUSE .....	32
Wiring Diagrams and Trouble Diagnosis .....	4	Power Supply Circuit Inspection .....	33
<b>PREPARATION</b> .....	5	Steering Switch Check (With NAVI) .....	35
Commercial Service Tool .....	5	Steering Switch Check (Without NAVI) .....	36
<b>AUDIO</b> .....	6	AV Switch Check (With NAVI) .....	37
Component Parts and Harness Connector Location .....	6	Audio Communication Line Check (With Navigation System) .....	38
System Description .....	7	Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System) .....	38
BASE AND MID LEVEL SYSTEM .....	7	Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (Base and Mid Level System) .....	40
BOSE® SYSTEM .....	7	Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System) .....	42
SPEED SENSITIVE VOLUME SYSTEM .....	8	Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System) .....	46
Schematic .....	9	Sound Is Not Heard From Subwoofer (BOSE System) .....	49
BOSE SYSTEM (WITHOUT NAVI) .....	9	Removal and Installation for Audio Unit .....	52
BOSE SYSTEM (WITH NAVI) .....	10	REMOVAL - WITHOUT NAVI .....	52
Wiring Diagram — AUDIO — .....	11	INSTALLATION - WITHOUT NAVI .....	52
BASE AND MID LEVEL SYSTEM .....	11	REMOVAL - WITH NAVI .....	52
BOSE SYSTEM .....	13	INSTALLATION - WITH NAVI .....	52
Terminals and Reference Value for Audio Unit (Base and Mid Level System) .....	22	Removal and Installation for AV Switch .....	52
Terminals and Reference Value for Audio Unit (BOSE System) .....	23	REMOVAL .....	52
Terminals and Reference Value for BOSE Speaker Amp. ....	26	INSTALLATION .....	52
Terminals and Reference Value for AV Switch .....	28	Removal and Installation of Speaker .....	52
AV Switch Self-Diagnosis Function .....	29	REMOVAL - FRONT DOOR SPEAKER .....	52
STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITHOUT NAVI) .....	29	INSTALLATION - FRONT DOOR SPEAKER .....	53
STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITH NAVI) .....	29	REMOVAL - REAR DOOR SPEAKER .....	53
EXITING THE SELF-DIAGNOSIS MODE .....	30	INSTALLATION - REAR DOOR SPEAKER .....	53
DIAGNOSIS FUNCTION .....	30	REMOVAL - FRONT TWEETER .....	53
Trouble Diagnosis .....	31	INSTALLATION - FRONT TWEETER .....	54
MALFUNCTION WITH RADIO AND CD (BASE AND MID LEVEL SYSTEM) .....	31	REMOVAL - REAR DOOR TWEETER .....	54
MALFUNCTION WITH RADIO AND CD (BOSE SYSTEM) .....	31	INSTALLATION - REAR DOOR TWEETER .....	54
FOR RADIO ONLY .....	32	REMOVAL - SUBWOOFER (BOSE SYSTEM) ...	54
FOR CD ONLY .....	32	INSTALLATION - SUBWOOFER (BOSE SYSTEM) .....	54
		Removal and Installation of Bose Speaker Amp. ...	54
		REMOVAL .....	54

INSTALLATION .....	55	Wiring Diagram — NAVI — .....	87
Removal and Installation of Steering Wheel Audio		Schematic .....	94
Control Switches .....	55	Wiring Diagram — COMM — .....	95
REMOVAL .....	55	Terminals and Reference Value for NAVI Control Unit .....	98
INSTALLATION .....	55	Terminals and Reference Value for Display Control Unit .....	100
<b>AUDIO ANTENNA .....</b>	<b>56</b>	Terminals and Reference Value for Display Unit ..	104
System Description .....	56	Terminals and Reference Value for AV Switch .....	106
Wiring Diagram — W/ANT — .....	57	Terminals and Reference Value for BCM .....	107
Location of Antenna .....	58	On Board Self-Diagnosis Function .....	109
Window Antenna Repair .....	58	DESCRIPTION .....	109
ELEMENT CHECK .....	58	DIAGNOSIS ITEM .....	109
ELEMENT REPAIR .....	59	Self-Diagnosis Mode (DCU) .....	109
<b>DVD ENTERTAINMENT SYSTEM .....</b>	<b>60</b>	OPERATION PROCEDURE .....	109
Component Parts and Harness Connector Location..	60	SELF-DIAGNOSIS RESULT .....	111
System Description .....	61	Self-Diagnosis Mode (NAVI) .....	112
Schematic .....	62	OPERATION PROCEDURE .....	112
Wiring Diagram — DVD — .....	63	SELF-DIAGNOSIS RESULT .....	113
Trouble Diagnosis .....	66	Confirmation/Adjustment Mode .....	115
Power Supply Circuit Inspection .....	67	OPERATION PROCEDURE .....	115
Removal and Installation of DVD Player .....	68	DISPLAY DIAGNOSIS .....	116
REMOVAL .....	68	VEHICLE SIGNALS .....	116
INSTALLATION .....	68	NAVIGATION .....	117
Removal and Installation of Video Monitor .....	68	DISPLAY DIAGNOSIS .....	117
REMOVAL .....	68	VEHICLE SIGNALS .....	118
INSTALLATION .....	68	HISTORY OF ERRORS .....	118
<b>NAVIGATION SYSTEM .....</b>	<b>69</b>	DIAGNOSIS BY HISTORY OF ERRORS .....	118
System Description .....	69	NAVIGATION .....	120
TRAVEL DISTANCE .....	69	CAN DIAG SUPPORT MONITOR .....	122
TRAVEL DIRECTION .....	69	OPERATION PROCEDURE .....	122
MAP-MATCHING .....	69	AV Switch Self-Diagnosis Function .....	123
GPS (GLOBAL POSITIONING SYSTEM) .....	70	Power Supply and Ground Circuit Check for NAVI Control Unit .....	124
COMPONENT DESCRIPTION .....	71	Power Supply and Ground Circuit Check for Display Control Unit .....	125
BIRDVIEW™ .....	71	Power Supply and Ground Circuit Check for Display Unit .....	126
MAP DISPLAY .....	72	Power Supply and Ground Circuit Check for AV Switch .....	128
FUNCTION OF CENTER SWITCH .....	73	Vehicle Speed Signal Check for NAVI Control Unit ..	129
“VIEW” MODE .....	78	Vehicle Speed Signal Check for Display Control Unit ..	130
“HEADING” MODE .....	79	Illumination Signal Check for NAVI Control Unit ..	131
“NEARBY DISPLAY ICONS” MODE .....	79	Illumination Signal Check for Display Control Unit ..	131
“SAVE CURRENT LOCATION” MODE .....	79	Ignition Signal Check for NAVI Control Unit .....	131
“ADJUST CURRENT LOCATION” MODE .....	79	Ignition Signal Check for Display Control Unit .....	132
“AUTO RE-ROUTE” MODE .....	80	Reverse Signal Check for NAVI Control Unit .....	132
“AVOID AREA SETTINGS” MODE .....	80	Reverse Signal Check for Display Control Unit .....	132
“CLEAR MEMORY” MODE .....	80	AV Communication Line Check (Between Display Control Unit and NAVI Control Unit) .....	133
“EDIT ADDRESS BOOK” MODE .....	81	Audio Communication Line Check (Between Display Control Unit and Audio Unit) .....	134
“GPS INFORMATION” MODE .....	81	Display Communication Line Check (Between Display Control Unit and Display Unit) .....	136
“QUICK STOP CUSTOMER SETTING” MODE ..	81	AV Communication Line Check (Between Display Control Unit and AV Switch) .....	138
“SET AVERAGE SPEED” MODE .....	81	CAN Communication Line Check .....	139
“TRACKING” MODE .....	82	If NAVI Control Unit Detects That DVD-ROM Map is Not Inserted .....	139
GUIDANCE VOLUME .....	82		
DISPLAY WITH PUSHED “TRIP” BUTTON .....	82		
TRIP 1 OR TRIP 2 .....	83		
FUEL ECONOMY .....	83		
MAINTENANCE .....	83		
ENGINE OIL OR TIRE ROTATION .....	83		
TIRE PRESSURE .....	84		
WARNING INDICATIONS .....	84		
CAN Communication System Description .....	84		
Component Parts Location .....	85		
Schematic .....	86		

If NAVI Control Unit Detects That Inserted DVD-ROM Map is Malfunctioning or If It is Impossible to Load Data from DVD-ROM Map .....	139	Example of Symptoms Judged Not Malfunction ..	156	
If Connection Between NAVI Control Unit and GPS Antenna is Malfunctioning .....	140	BASIC OPERATION .....	156	A
Operating Screen for Audio and A/C is Not Displayed When Showing NAVI Screen .....	140	VEHICLE MARK .....	156	
Color of RGB Image is Not Proper (Only NAVI Screen Looks Bluish) .....	142	DESTINATION, PASSING POINTS, AND MENU ITEMS CANNOT BE SELECTED/SET .....	157	B
Color of RGB Image is Not Proper (Only NAVI Screen Looks Reddish) .....	143	VOICE GUIDE .....	158	
Color of RGB Image is Not Proper (Only NAVI Screen Looks Yellowish) .....	144	ROUTE SEARCH .....	158	
Color of RGB Image is Not Proper (All Screens Look Bluish) .....	145	EXAMPLES OF CURRENT-LOCATION MARK DISPLACEMENT .....	159	C
Color of RGB Image is Not Proper (All Screens Look Reddish) .....	146	CURRENT-LOCATION MARK SHOWS A POSITION WHICH IS COMPLETELY WRONG .....	162	D
Color of RGB Image is Not Proper (All Screens Look Yellowish) .....	147	CURRENT-LOCATION MARK JUMPS .....	162	
NAVI Screen is Rolling .....	148	CURRENT-LOCATION MARK IS IN A RIVER OR SEA .....	163	E
Guide Sound is Not Heard .....	150	WHEN DRIVING ON SAME ROAD, SOMETIMES CURRENT-LOCATION MARK IS IN RIGHT PLACE AND SOMETIMES IT IS WRONG PLACE .....	163	F
Screen is Not Shown .....	151	LOCATION CORRECTION BY MAP-MATCHING IS SLOW .....	163	
A/C Screen is Not Shown (NAVI Screen is Shown)	151	ALTHOUGH GPS RECEIVING DISPLAY IS GREEN, VEHICLE MARK DOES NOT RETURN TO CORRECT LOCATION .....	163	G
FUEL ECONOMY Screen is Not Shown .....	151	NAME OF CURRENT PLACE IS NOT DISPLAYED .....	163	H
Average Fuel Economy Displayed is Not Shown ("***" is Shown) .....	152	CONTENTS OF DISPLAY DIFFER FOR BIRD-VIEW™ AND THE (FLAT) MAP SCREEN .....	163	
Distance to Empty Displayed is Not Shown ("***" is Shown) .....	152	Program Loading of NAVI Control Unit .....	164	I
Driving Distance or Average Speed Displayed is Not Shown ("***" is Shown) .....	152	Removal and Installation of NAVI Control Unit ....	165	
WARNING DOOR OPEN Screen is Not Shown ..	153	REMOVAL .....	165	J
Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis) .....	153	INSTALLATION .....	165	
Audio Does Not Work .....	153	Removal and Installation of GPS Antenna .....	166	
Navigation System Does Not Activate .....	154	REMOVAL .....	166	
Previous NAVI Conditions are Not Stored .....	154	INSTALLATION .....	166	AV
Previous Vehicle Conditions are Not Stored .....	154	Removal and Installation of Display Unit .....	166	
Position of Current Location Mark is Not Correct.	154	REMOVAL .....	166	
Radio Wave From GPS Satellite is Not Received	154	INSTALLATION .....	166	L
Driving Test .....	155	Removal and Installation of Display Control Unit .	166	
		REMOVAL .....	166	
		INSTALLATION .....	167	M

# PRECAUTIONS

## PRECAUTIONS

PF0:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS009TV

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Wiring Diagrams and Trouble Diagnosis

EKS009TW

When you read wiring diagrams, refer to the following:

- [GI-15, "How to Read Wiring Diagrams"](#).
- [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

When you perform trouble diagnosis, refer to the following:

- [GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#).
- [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#).


# PREPARATION

## PREPARATION

PF0:00002

### Commercial Service Tool

EKS009TX

Tool name	Description
<p data-bbox="162 298 272 323">Power tool</p>  <p data-bbox="852 499 925 514">PBIC0191E</p>	<p data-bbox="1015 298 1266 323">Loosening bolts and nuts</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV


# AUDIO

PF28111

## AUDIO

### Component Parts and Harness Connector Location

EKS009TY

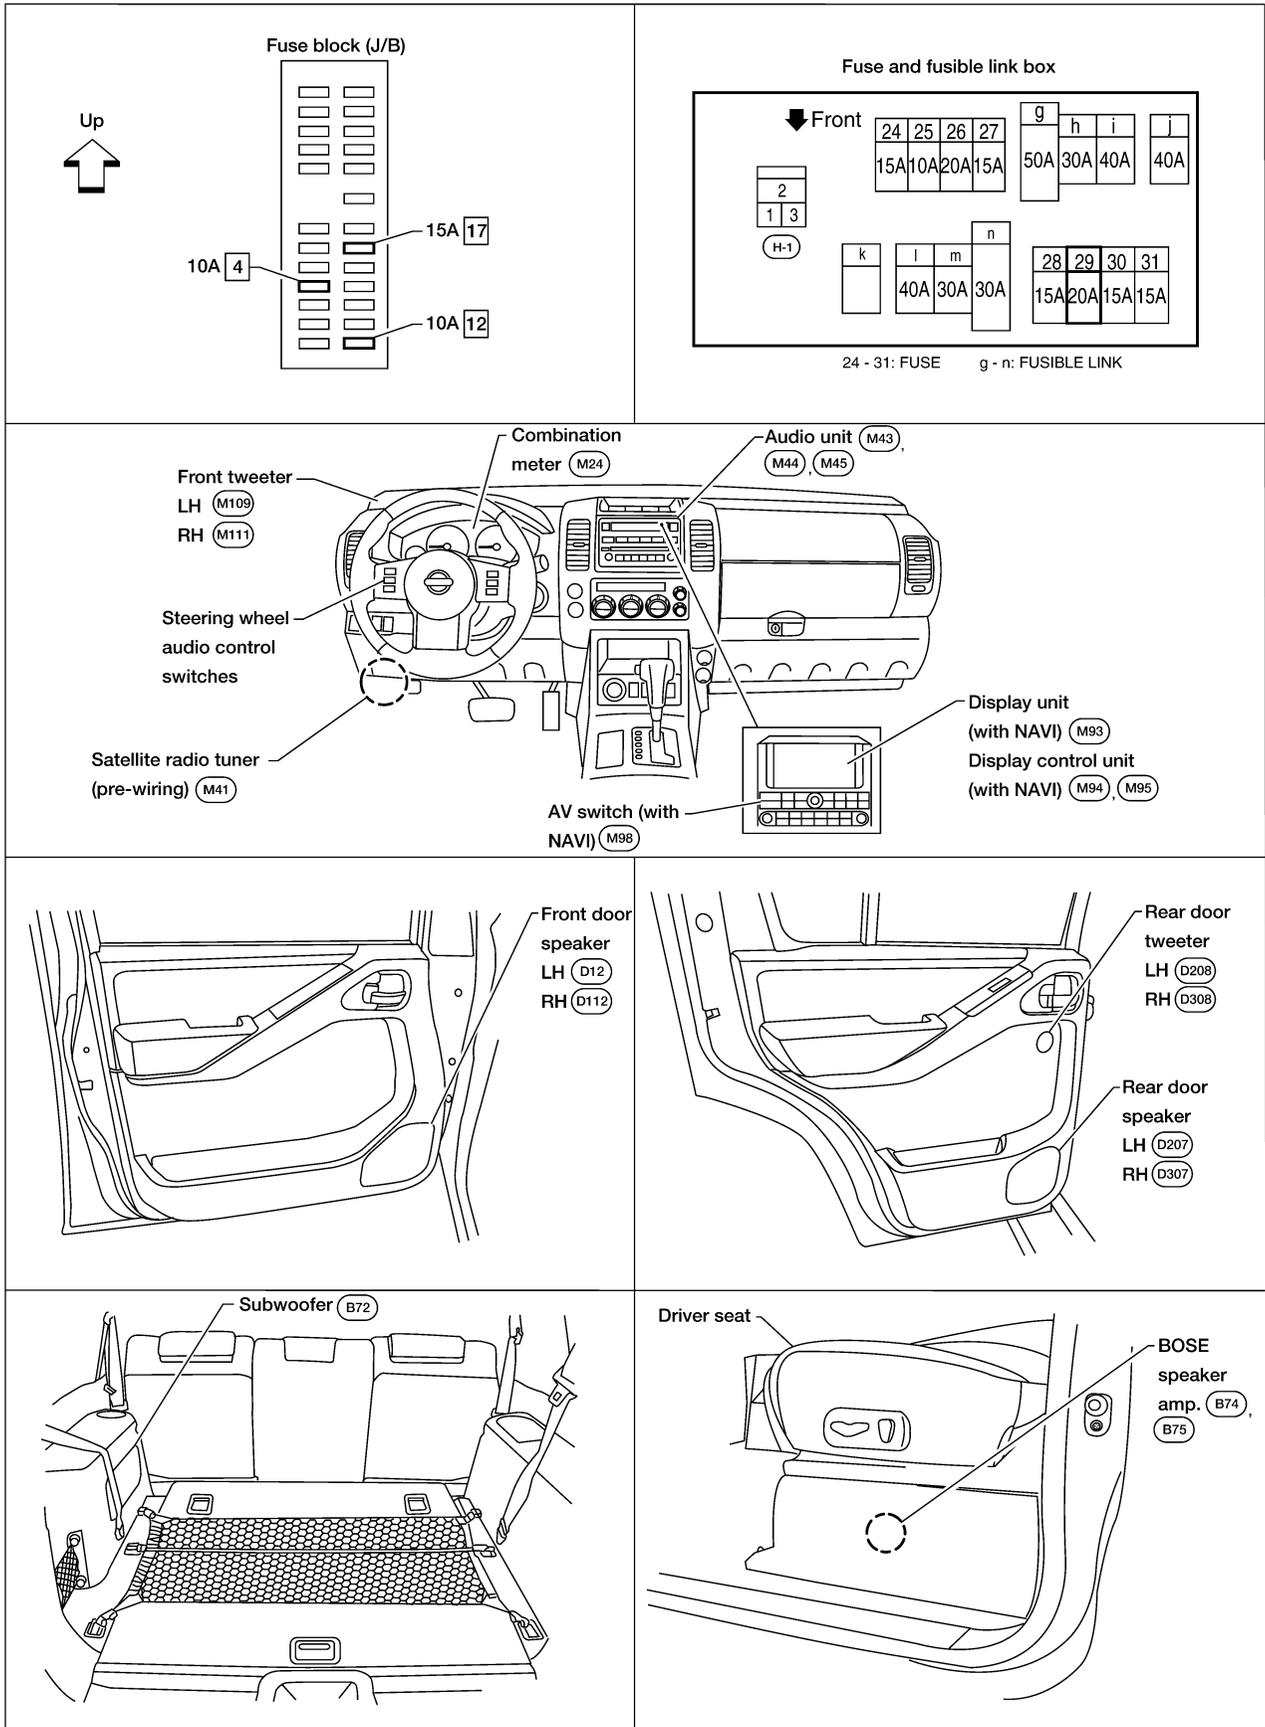

WK1A4127E

# AUDIO

EKS009TZ

## System Description BASE AND MID LEVEL SYSTEM

Refer to Owner's Manual for audio system operating instructions.  
Power is supplied at all times

- through 20A fuse [No. 29, located in the fuse and fusible link box]
- to audio unit terminal 6.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10.

Ground is supplied through the case of the audio unit.

Then audio signals are supplied

- through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16
- to terminals + and - of front door speaker LH and RH
- to terminals + and - of front tweeter LH and RH
- to terminals + and - of rear door speaker LH and RH
- to terminals + and - of rear door tweeter LH and RH (with mid level system).

When one of the steering wheel audio control switches (with mid level system) is pushed, the resistance in steering switch circuit changes depending on which button is pushed.

## BOSE® SYSTEM

Refer to Owner's Manual for audio system operating instructions.  
Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to subwoofer terminal 6
- through 20A fuse [No. 29, located in the fuse and fusible link box]
- to audio unit terminal 6
- to BOSE speaker amp. terminal 1
- to AV switch terminal 1 (with NAVI)
- to display control unit terminal 1 (with NAVI).

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10
- to AV switch terminal 2 (with NAVI)
- to display control unit terminal 10 (with NAVI).

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to display control unit terminal 12 (with NAVI).

Ground is supplied through the case of the audio unit.

Ground is also supplied

- to subwoofer terminal 5
- to BOSE speaker amp. terminal 17
- through body grounds B7 and B19 and
- to AV switch terminal 5 (with NAVI)
- to display unit terminal 1 (with NAVI)
- to display control unit terminal 3 (with NAVI)
- through body grounds M57, M61 and M79.

Then audio signals are supplied

- through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16
- to BOSE speaker amp. terminals 23, 24, 25, 26, 27, 28, 29 and 30.

Audio signals are amplified by the BOSE speaker amp.

A

B

C

D

E

F

G

H

I

J

AV

L

M

# AUDIO

---

The amplified audio signals are supplied

- through BOSE speaker amp. terminals 3, 9,10,11,12, 13, 14, 15, 16 and 19
- to terminals + and - of front door speaker LH and RH
- to terminals + and - of front tweeter LH and RH
- to terminals + and - of rear door speaker LH and RH
- to terminals + and - of rear door tweeter LH and RH
- to terminals 1 and 2 of subwoofer.

When one of steering wheel audio control switches is pushed, the resistance in steering switch circuit changes depending on which button is pushed.

## **Satellite Radio Tuner (Pre-wiring)**

The satellite radio tuner pre-wiring allows connection of a satellite radio tuner.

Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to satellite radio tuner pre-wiring terminal 32.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to satellite radio tuner pre-wiring terminal 36.

Ground is supplied through the case of the satellite radio tuner.

Then audio signals are supplied

- through satellite radio tuner pre-wiring terminals 21, 22, 23 and 24
- to audio unit terminals 41, 42, 43 and 44.


## **SPEED SENSITIVE VOLUME SYSTEM**

Volume level of this system goes up and down automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to Owner's Manual for operating instructions.

# AUDIO

EKS009U0

## Schematic BOSE SYSTEM (WITHOUT NAVI)

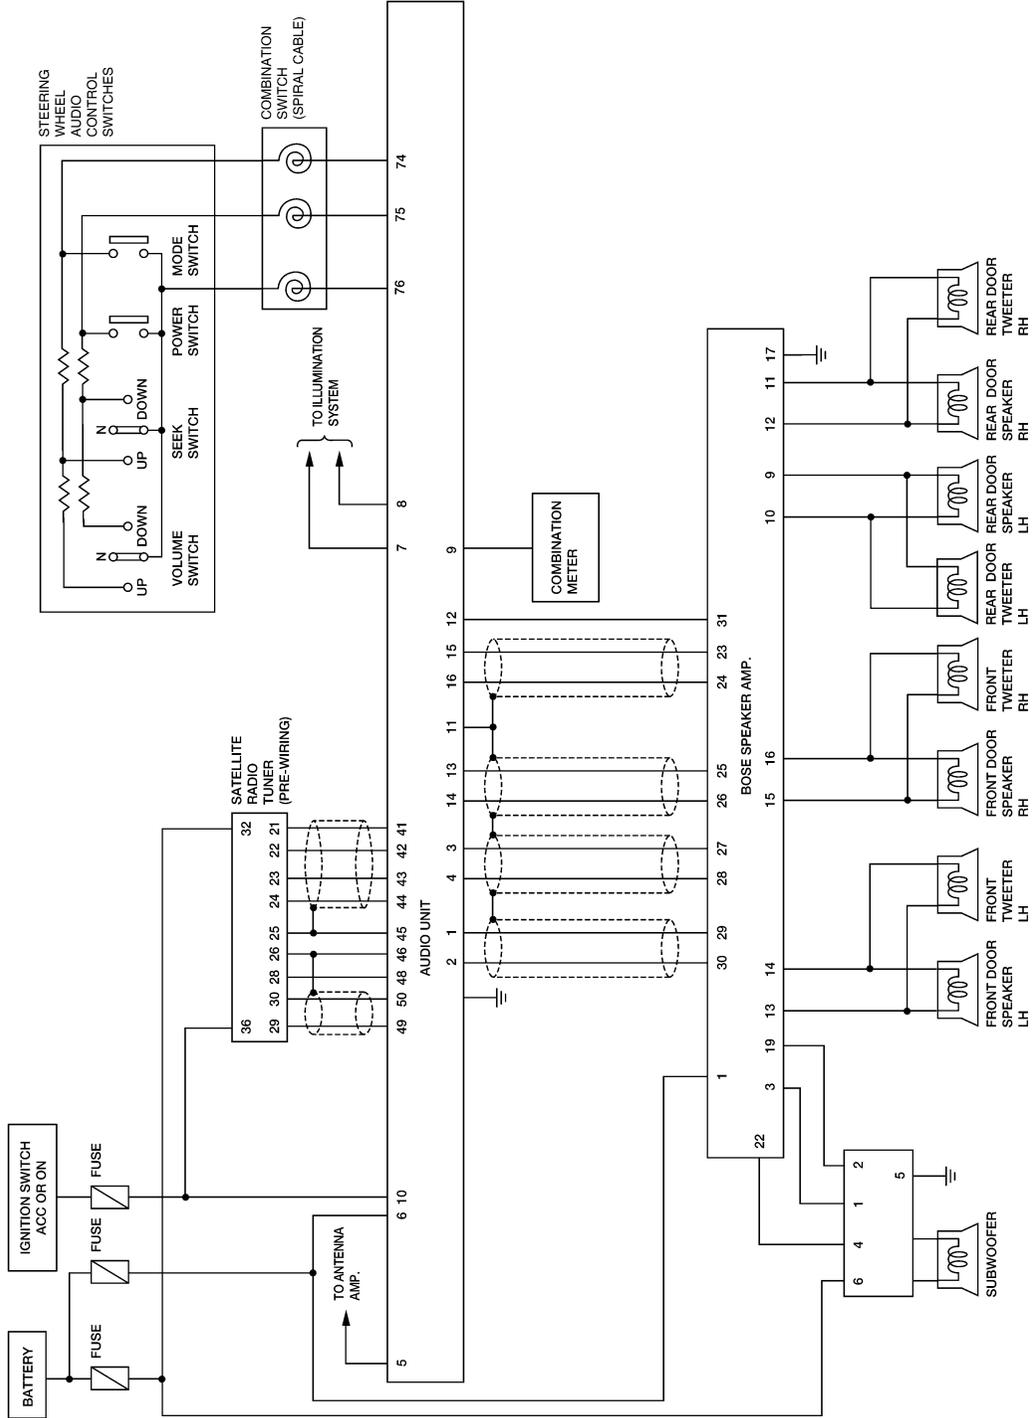


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

WKWA3033E

# AUDIO

## BOSE SYSTEM (WITH NAVI)

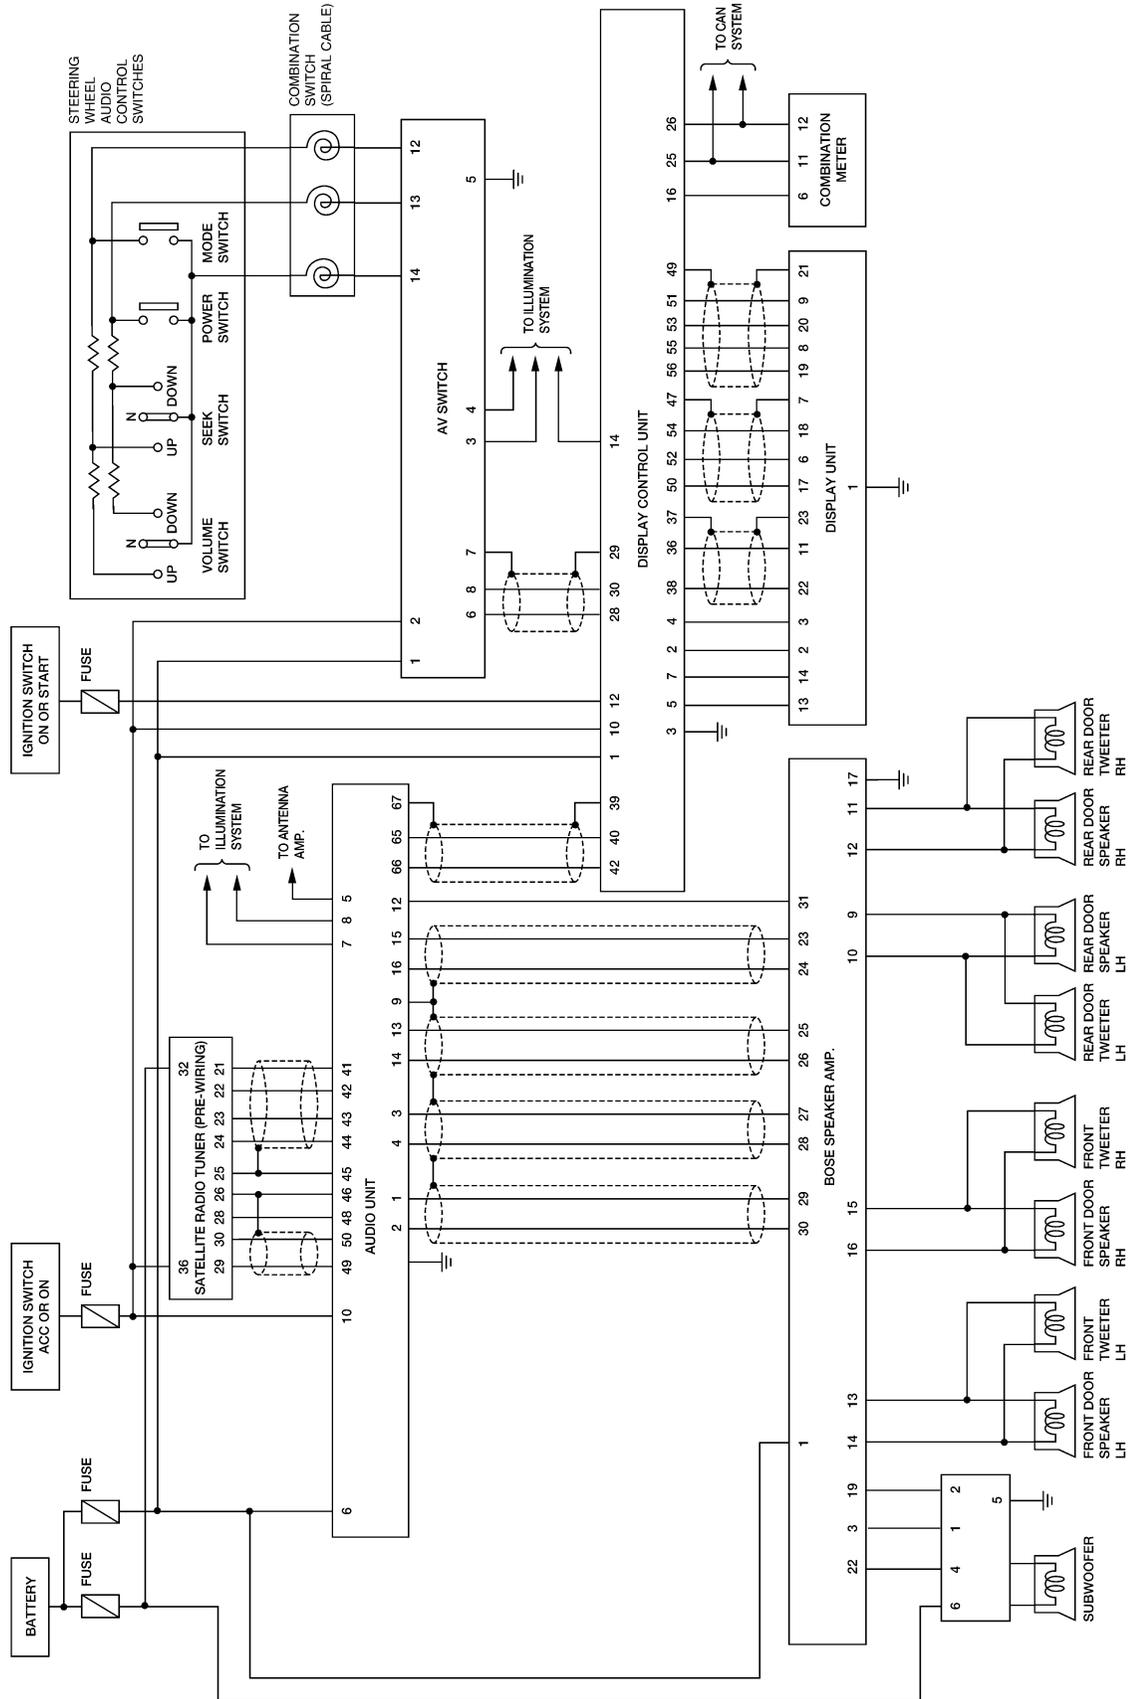





WKWA3034E

# AUDIO

EKS009U1

## Wiring Diagram — AUDIO — BASE AND MID LEVEL SYSTEM

AV-AUDIO-01

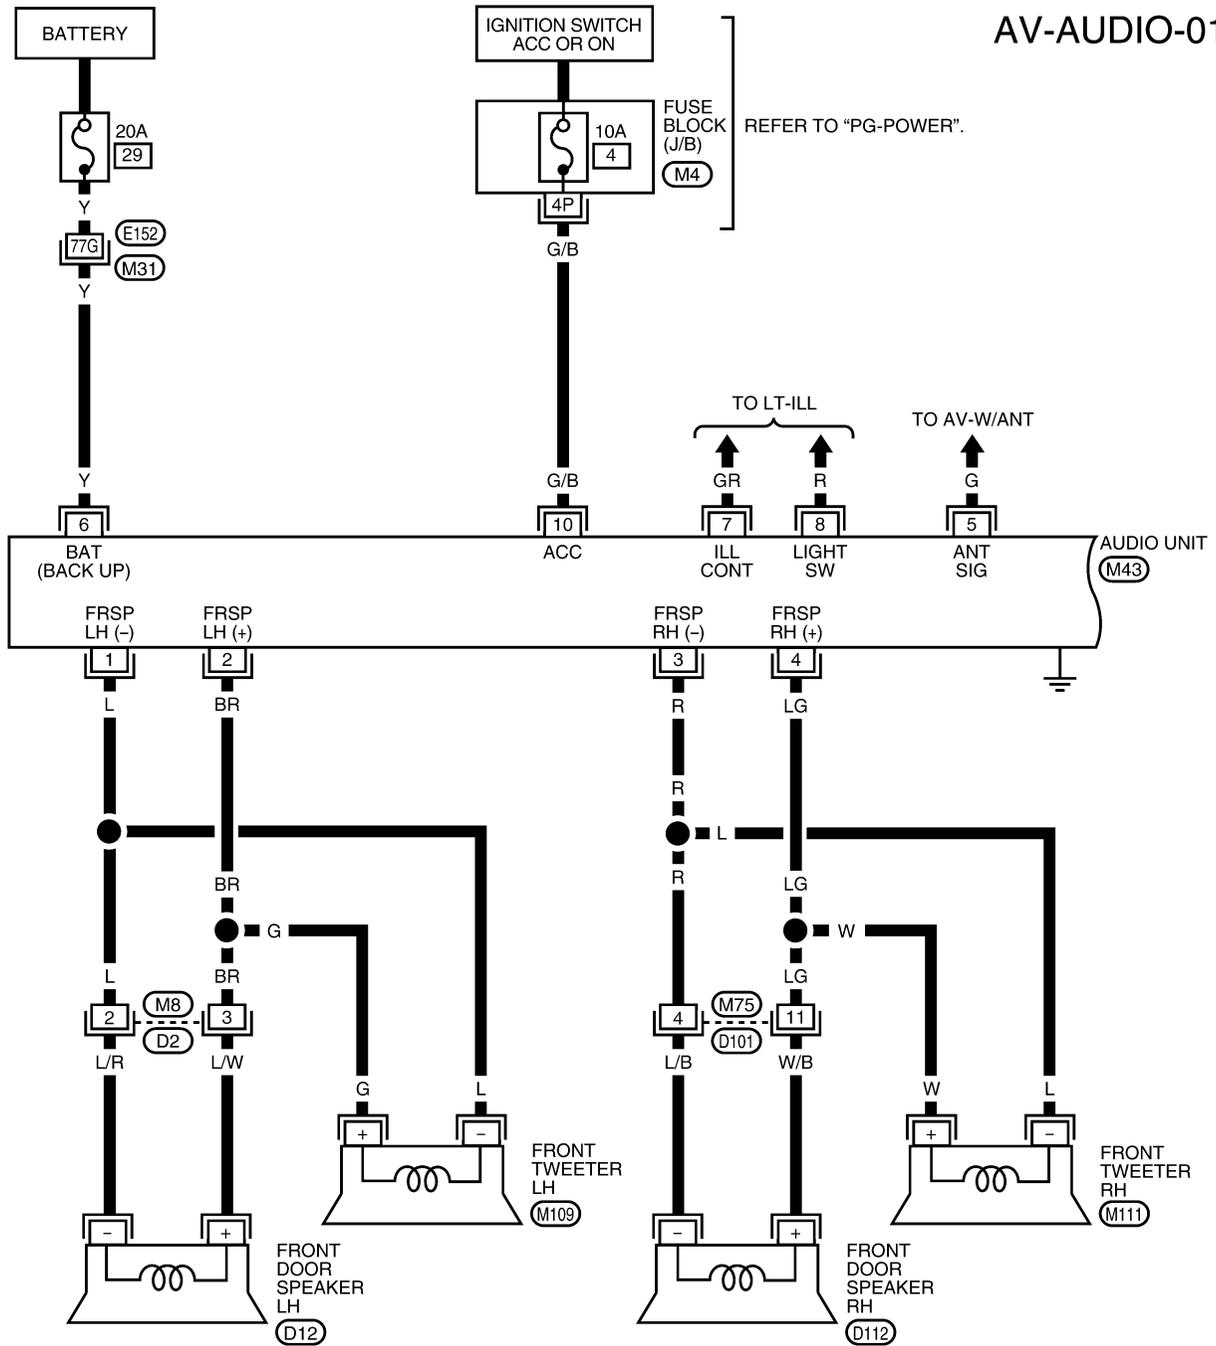



REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1984E



# AUDIO

## AV-AUDIO-02

: WITH MID LEVEL AUDIO SYSTEM

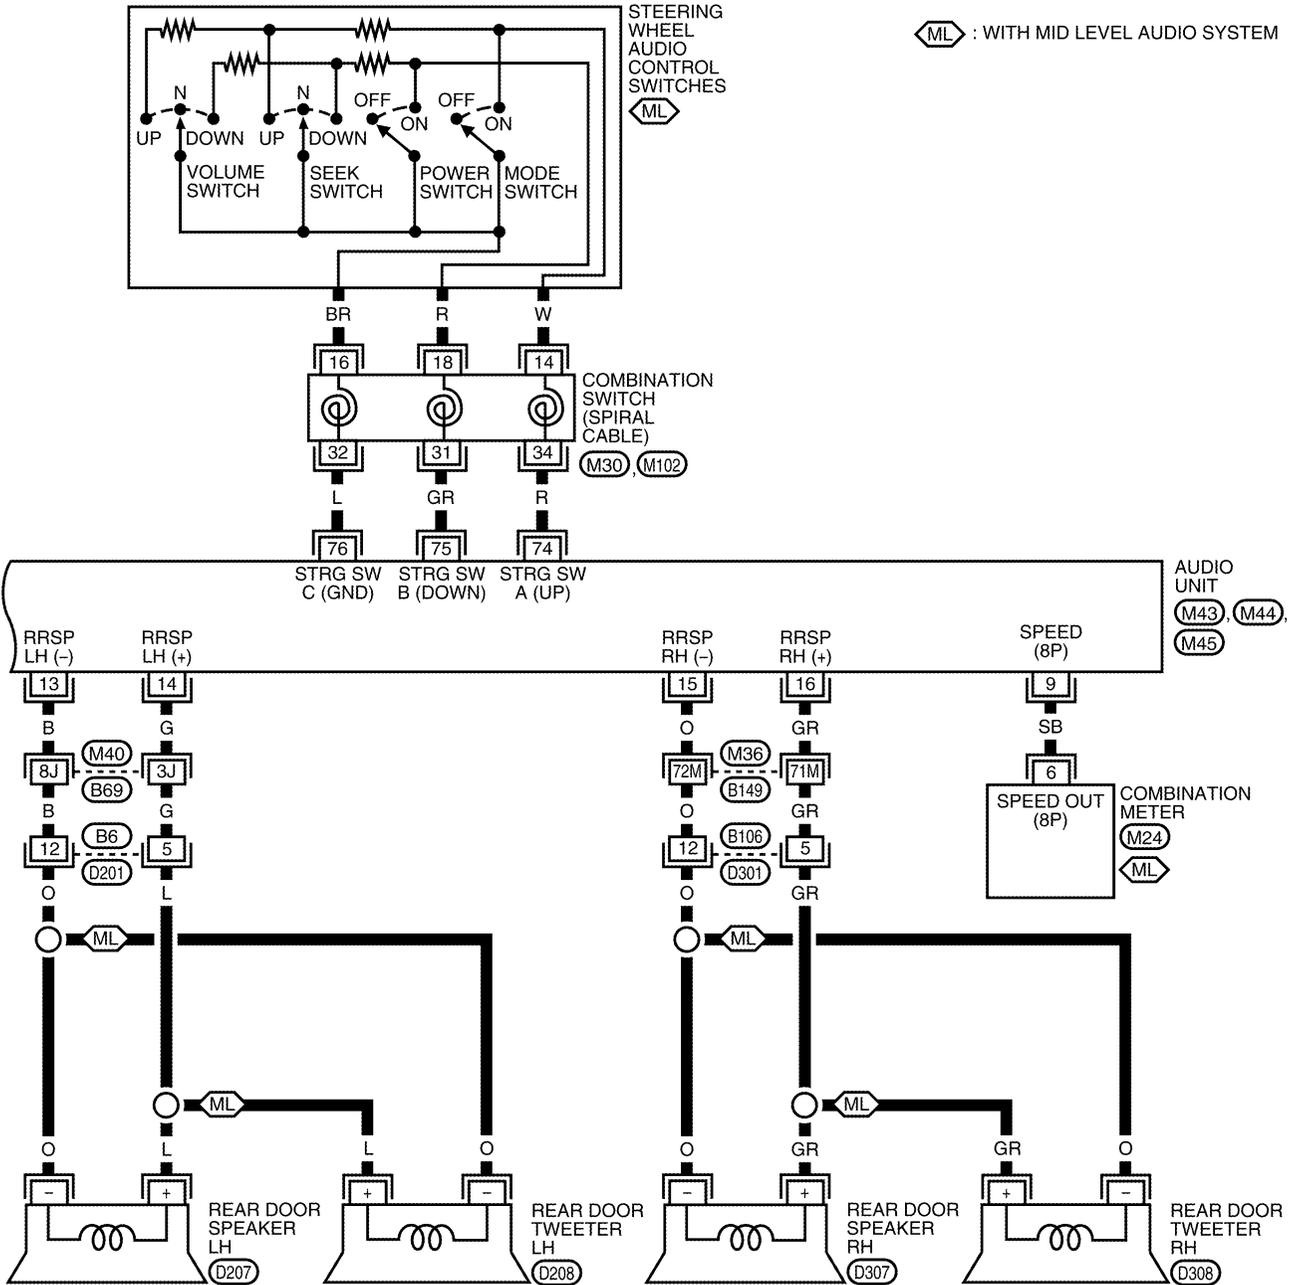



REFER TO THE FOLLOWING.  
 - SUPER  
 - MULTIPLE JUNCTION (SMJ)




\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA1985E



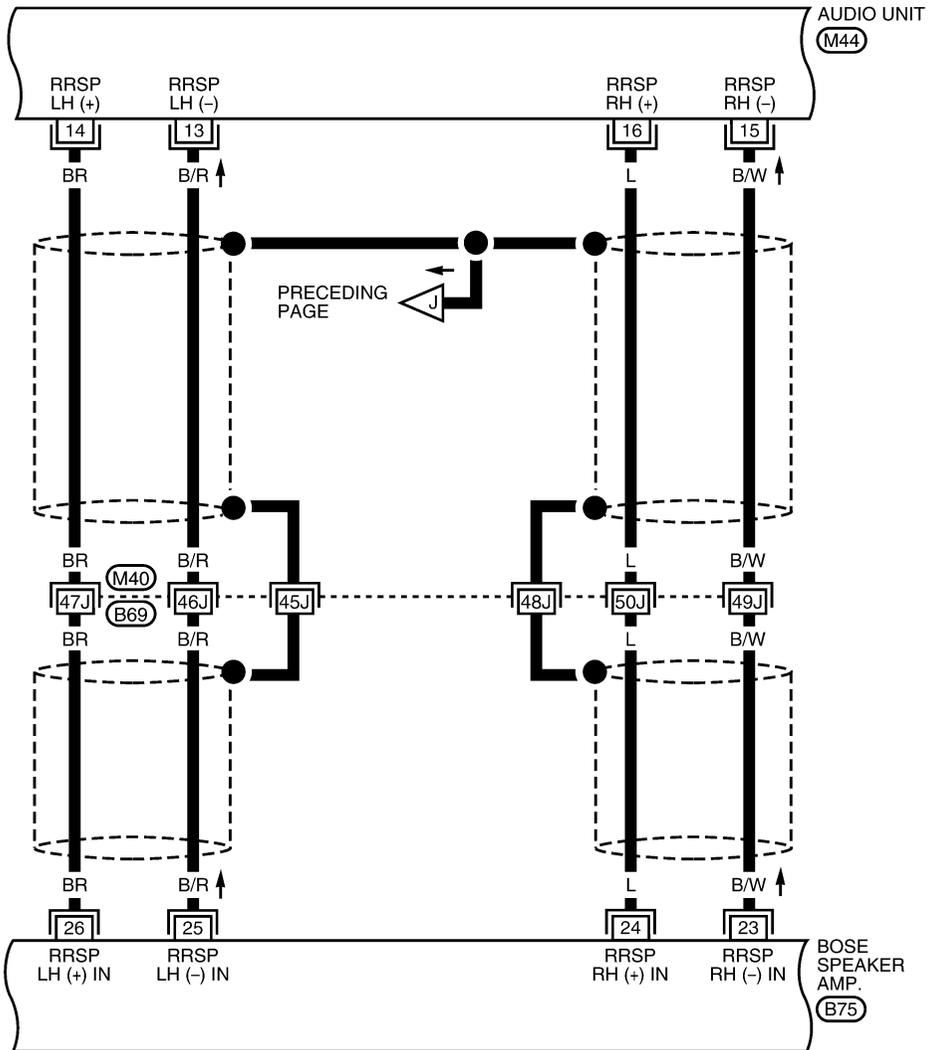

REFER TO THE FOLLOWING.  
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

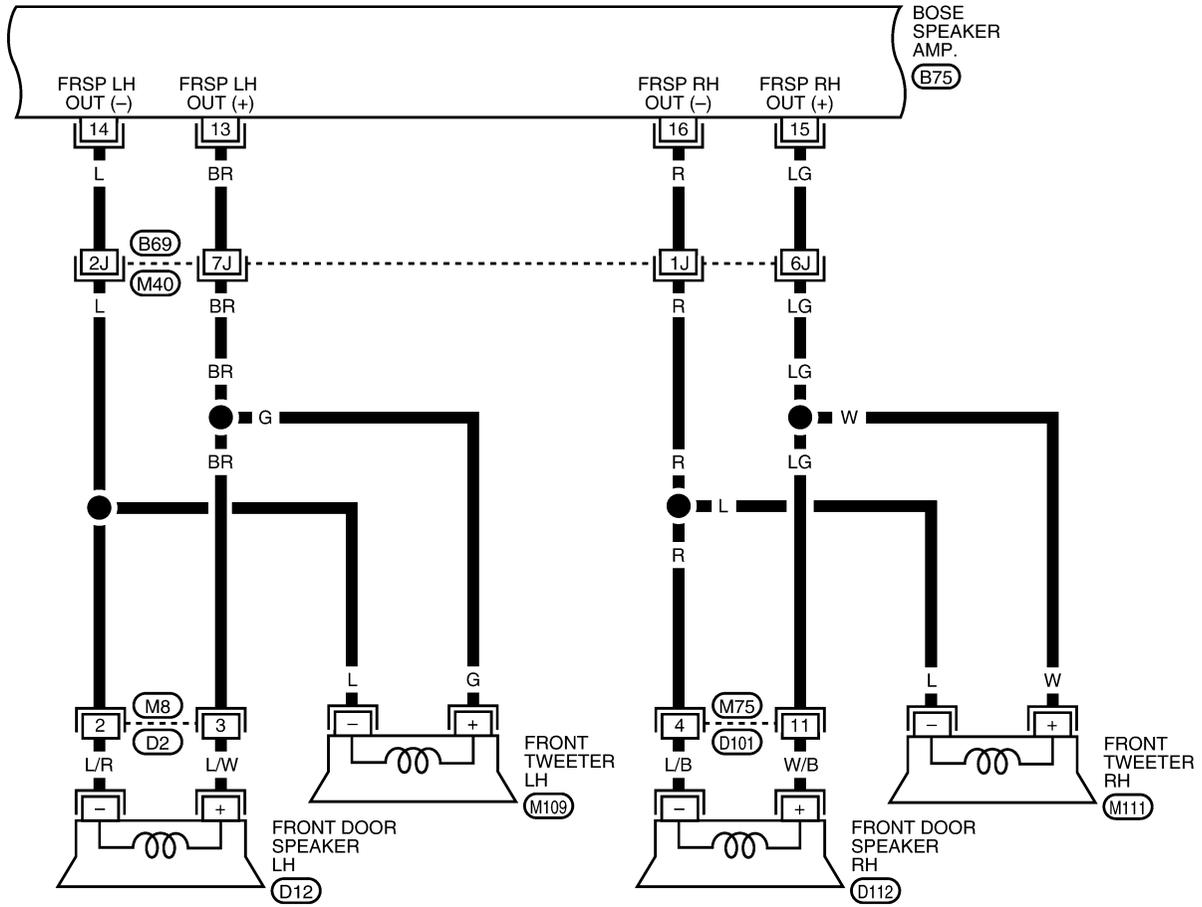

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	M8		W		

1	2	3	4	5
6	7	8	9	10
11	12	M75		W

+	-
---	---

W
---

W
---



+	-
---	---

BR
----

BR
----

5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28
29	30	31	32	B75		B					


REFER TO THE FOLLOWING.  
 M40 - SUPER MULTIPLE JUNCTION (SMJ)

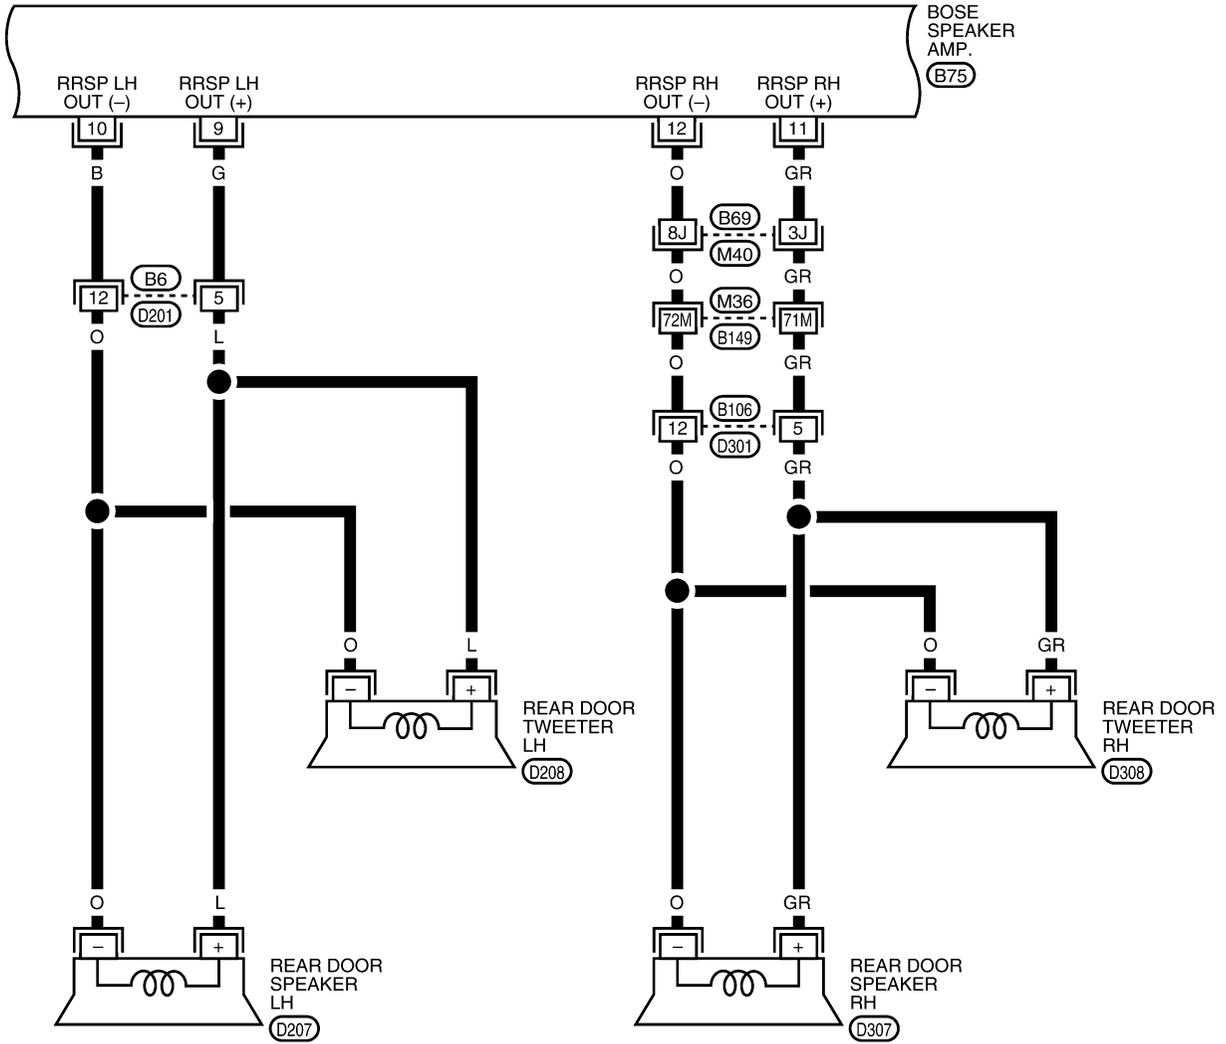

REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)


# AUDIO

AV-AUDIO-07

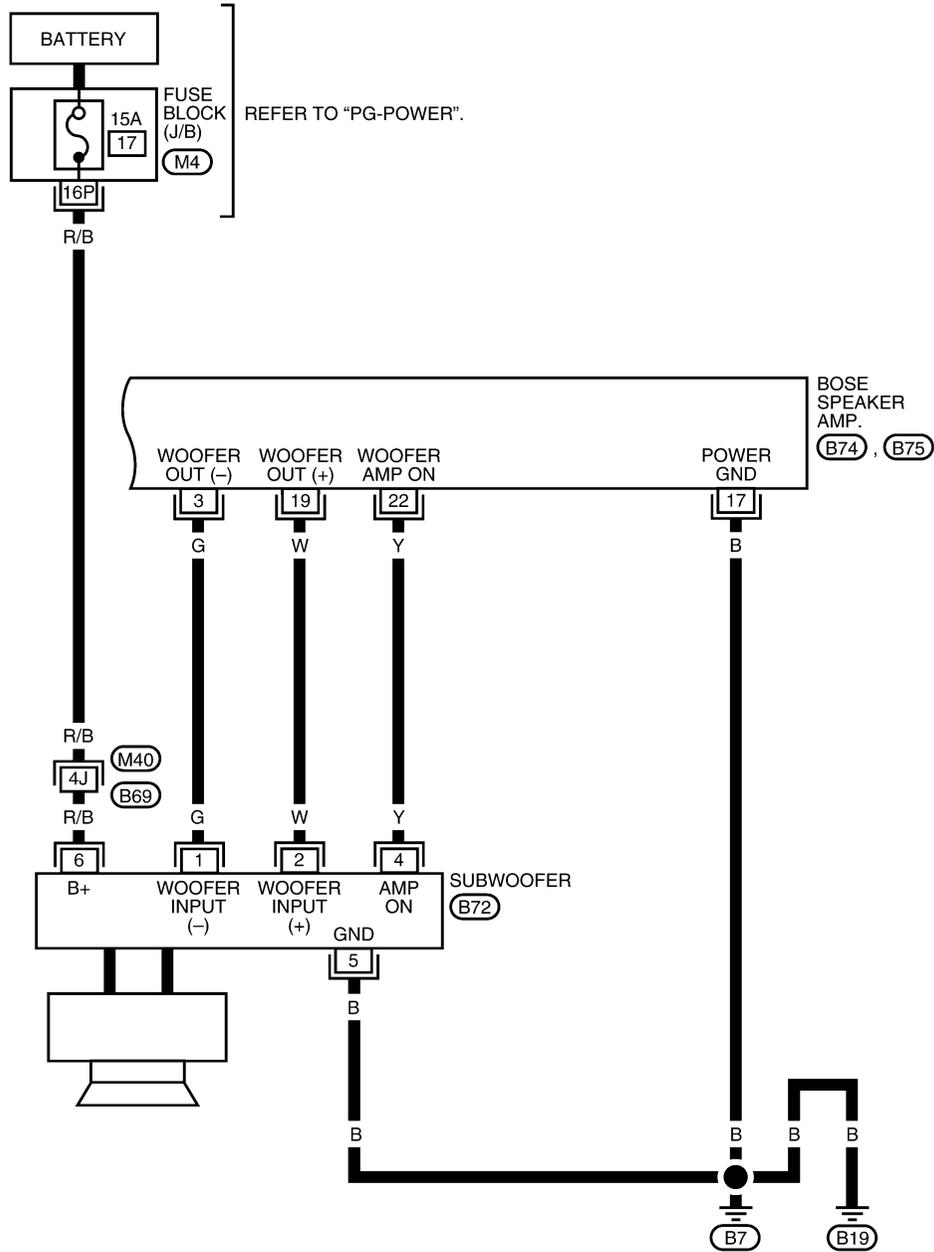

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

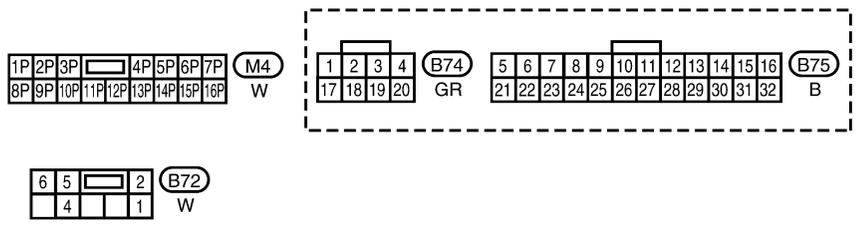



REFER TO THE FOLLOWING.  
 (M4) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3036E

# AUDIO

## WITHOUT NAVI

## AV-AUDIO-08

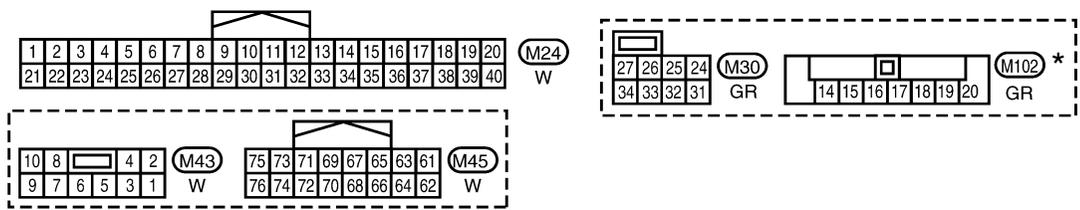
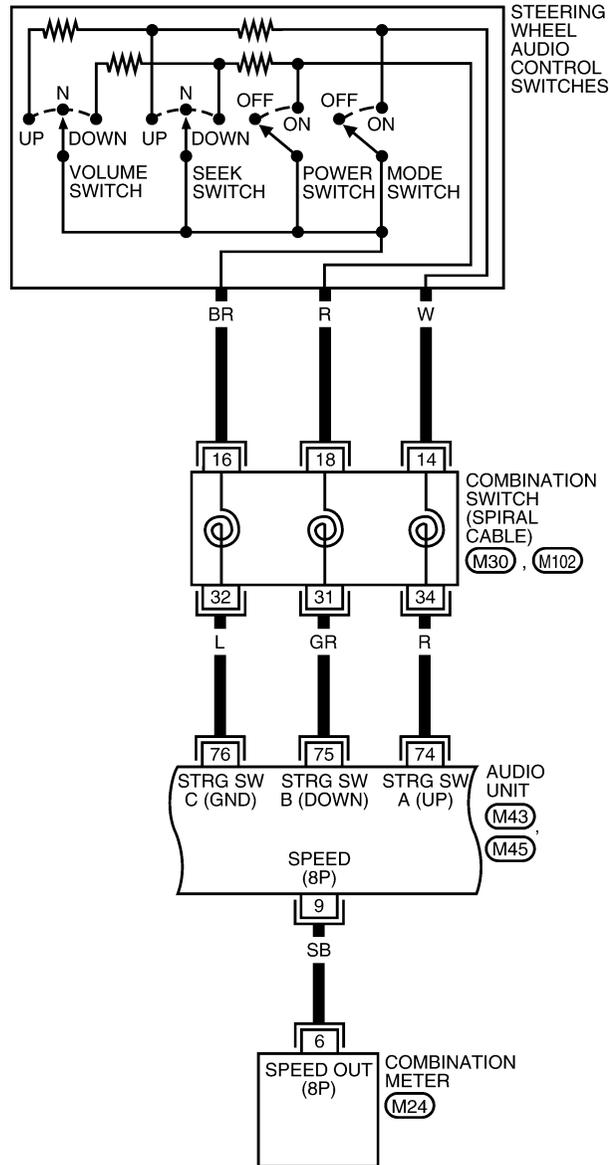


\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

# AUDIO

WITH NAVI

## AV-AUDIO-9

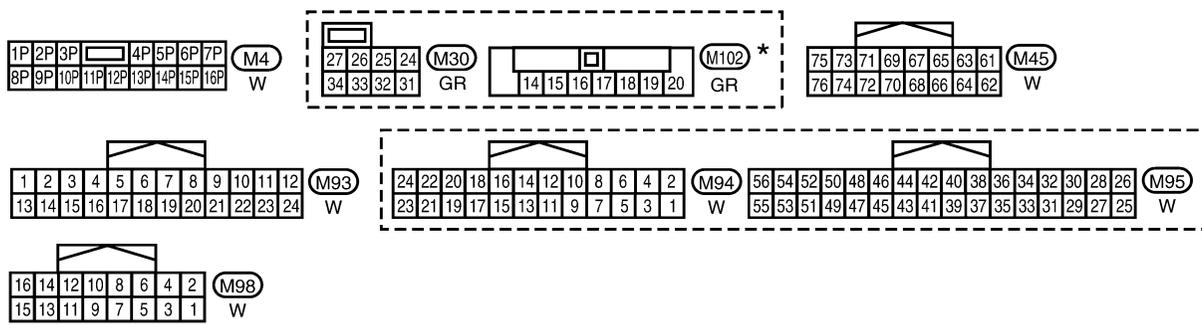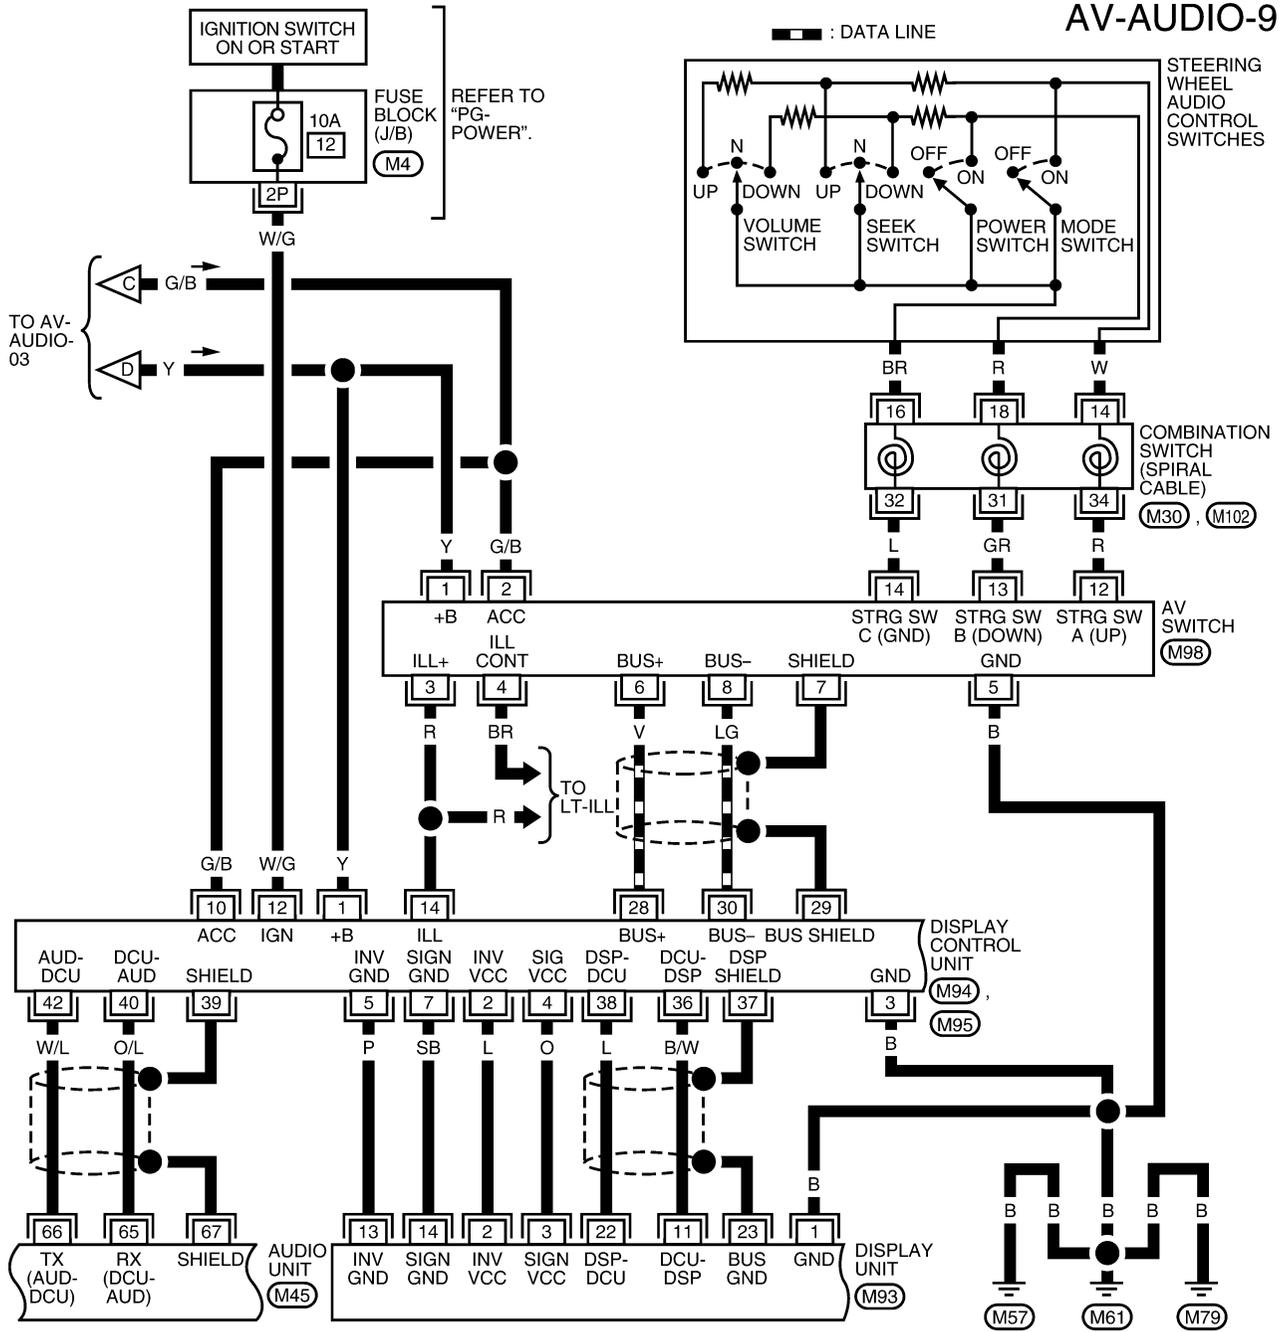



\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA1996E

# AUDIO

## AV-AUDIO-10

▬ : DATA LINE

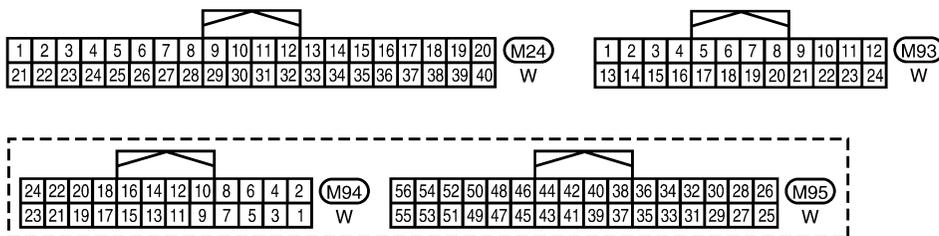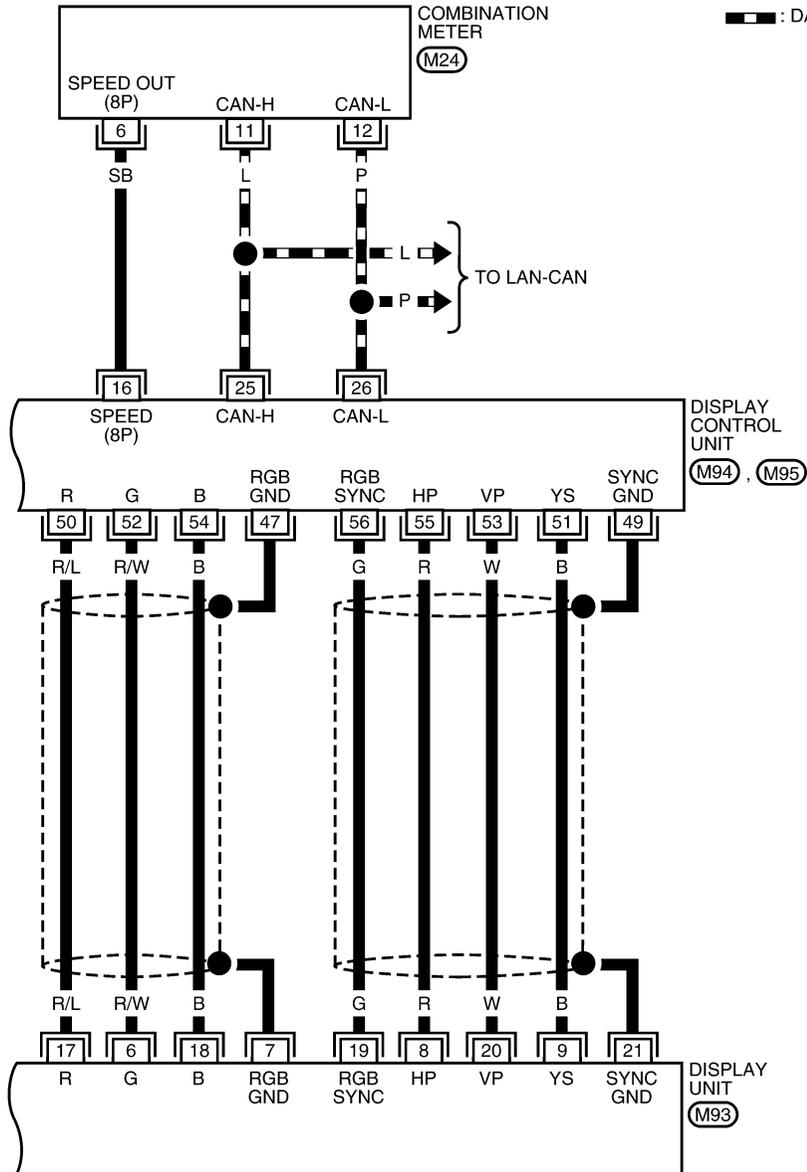


WKWA1997E

# AUDIO

## SATELLITE RADIO TUNER (PRE-WIRING)





AV-AUDIO-11

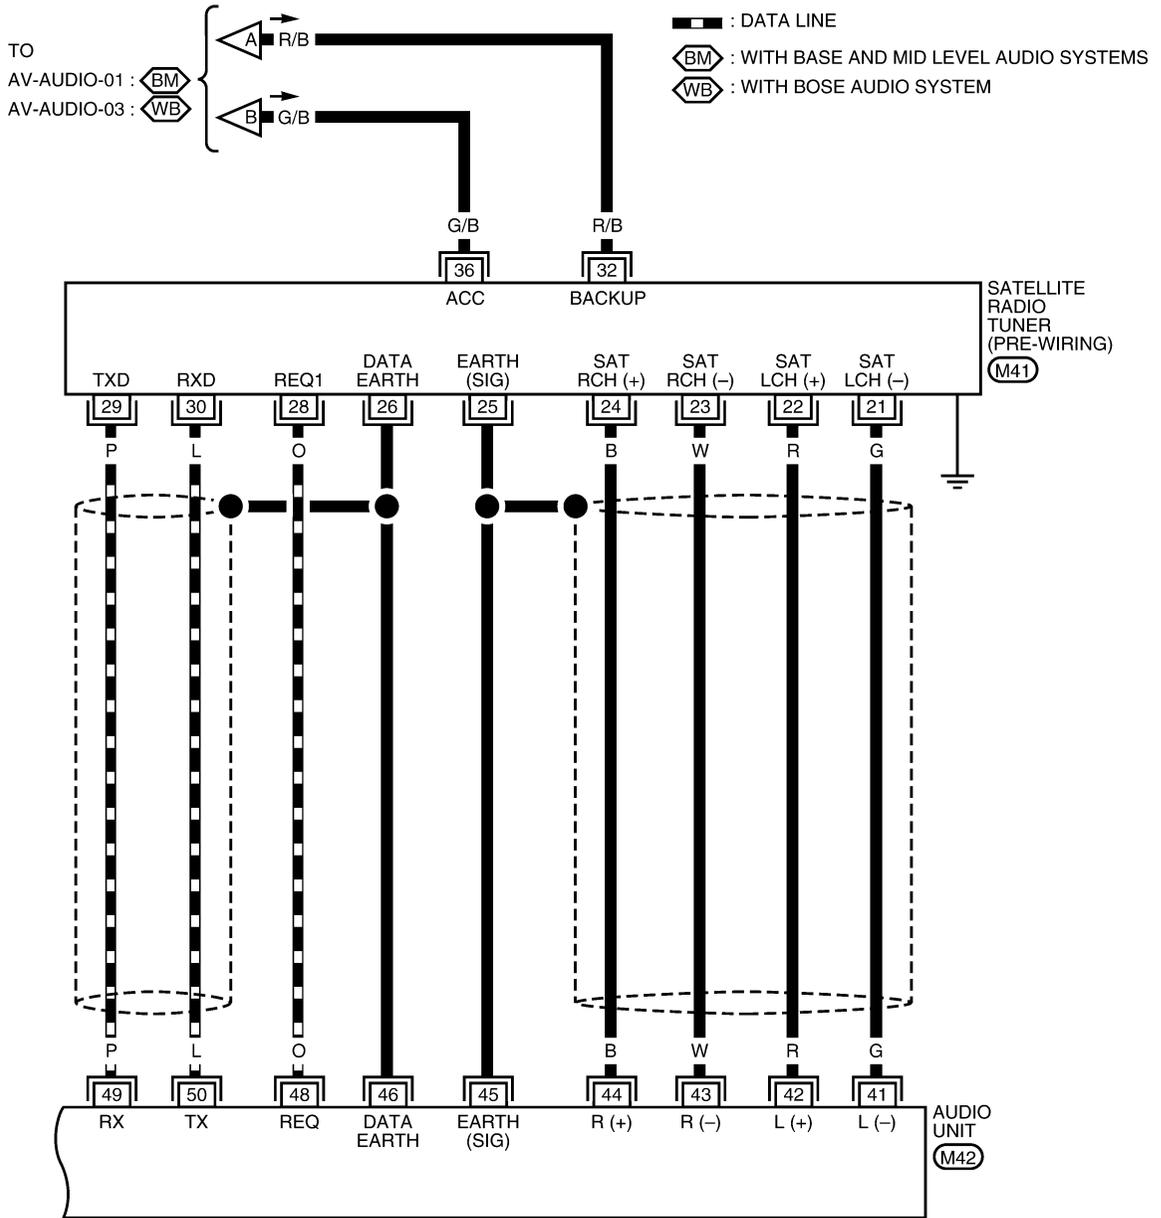

WKWA1998E

# AUDIO

## Terminals and Reference Value for Audio Unit (Base and Mid Level System) EKS009U2

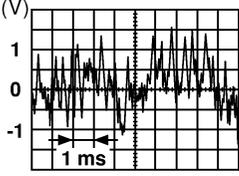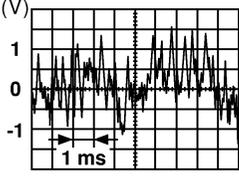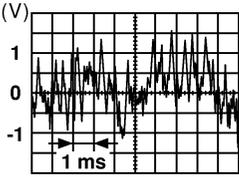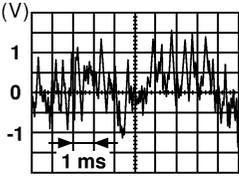Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
2 (BR)	1 (L)	Audio sound signal front LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker LH or tweeter LH.
4 (LG)	3 (R)	Audio sound signal front RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker RH or tweeter RH.
5 (G)	Ground	Antenna signal	Output	ON	-	More than 10V	Poor radio reception.
6 (Y)	Ground	Battery power	Input	-	-	Battery voltage	System does not work properly.
7 (GR)	Ground	Illumination control sig- nal	Input	ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V	Audio unit illumina- tion cannot be con- trolled.
8 (R)	Ground	Illumination signal	Input	OFF	Lighting switch is in 1st posi- tion.	Battery voltage	Audio unit illumina- tion does not come on when lighting switch is in 1st posi- tion.
					Lighting switch is OFF.	3V or less	
9 (SB)	Ground	Vehicle speed signal	Input	ON	-	Refer to <a href="#">AV-61</a> , " <a href="#">System Description</a> " (without NAVI) or <a href="#">AV-69</a> , " <a href="#">System Description</a> " (with NAVI).	Speed sensitive vol- ume inoperative.
10 (G/B)	Ground	ACC power	Input	ACC	Ignition switch ACC or ON	Battery voltage	System does not work properly.
14 (G)	13 (B)	Audio sound signal rear LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker LH or rear door tweeter LH.*
16 (GR)	15 (O)	Audio sound signal rear RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker RH or rear door tweeter RH.*



# AUDIO

Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
74 (R)*	Ground	Remote control A	Input	ON	Press MODE switch	0V	Steering wheel audio controls do not func- tion.
					Press SEEK UP switch	0.75V	
					Press VOL UP switch	2V	
					Except for above	5V	
75 (GR)*	Ground	Remote control B	Input	ON	Press POWER switch	0V	Steering wheel audio controls do not func- tion.
					Press SEEK DOWN switch	0.75V	
					Press VOL DOWN switch	2V	
					Except for above	5V	
76 (L)*	-	Remote control ground	-	-	-	-	Steering wheel audio controls do not func- tion.





\*: With mid level system

## Terminals and Reference Value for Audio Unit (BOSE System)





EKS009U3

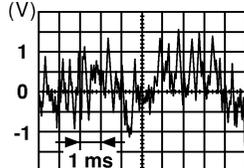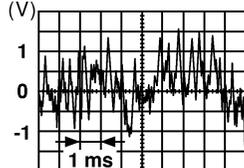Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
2 (W)	1 (B)	Audio sound signal front LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker LH or tweeter LH.
4 (Y)	3 (BR)	Audio sound signal front RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker RH or tweeter RH.
5 (G)	Ground	Antenna signal	Output	ON	-	More than 10V	Poor radio reception.
6 (Y)	Ground	Battery power	Input	-	-	Battery voltage	System does not work properly.
7 (GR)	Ground	Illumination control sig- nal	Input	ON	Illumination con- trol switch is operated by light- ing switch in 1st position.	Changes between 0 and 12V	Audio unit illumina- tion cannot be con- trolled.

# AUDIO

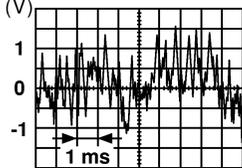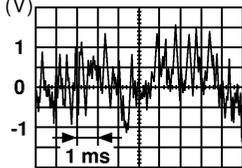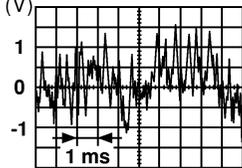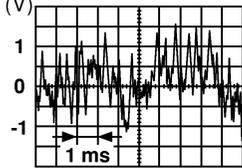Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
8 (R)	Ground	Illumination signal	Input	OFF	Lighting switch is in 1st position.	Battery voltage	Audio unit illumina- tion does not come on when lighting switch is in 1st posi- tion.
					Lighting switch is OFF.	3V or less	-
9 (SB)	Ground	Vehicle speed sig- nal	Input	ON	-	Refer to <a href="#">AV-61, "System Description"</a> (without NAVI) or <a href="#">AV-69, "System Description"</a> (with NAVI).	Speed sensitive vol- ume inoperative.
10 (G/B)	Ground	ACC power	Input	ACC	-	Battery voltage	System does not work properly.
11	-	Shield ground	-	-	-	-	-
12 (G)	Ground	Amp. ON signal	Output	ON	-	More than 6.5V	Amp. does not work properly.
14 (BR)	13 (B/R)	Audio sound signal rear LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker LH or rear door tweeter LH.
16 (L)	15 (B/W)	Audio sound signal rear RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker RH or rear door tweeter RH.
42 (R)	41 (G)	Audio left channel sound sig- nal from sat- ellite radio tuner	Input	ON	Receive audio signal	 SKIA0177E	No sound from satel- lite radio tuner left channel.
44 (B)	43 (W)	Audio right channel sound sig- nal from sat- ellite radio tuner	Input	ON	Receive audio signal	 SKIA0177E	No sound from satel- lite radio tuner right channel.
45	-	Shield ground (audio sig- nal)	-	-	-	-	-

# AUDIO

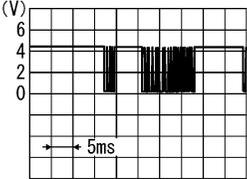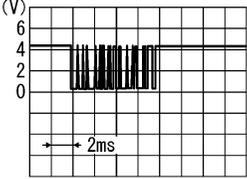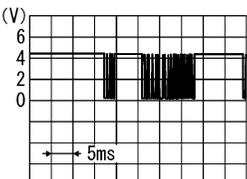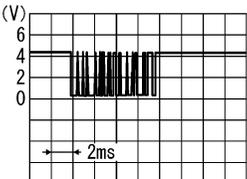Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
				Ignition switch	Operation		
46	-	Shield ground (data)	-	-	-	-	
48 (O)	Ground	Satellite radio tuner request to audio unit	Input	ON	Turn audio unit ON	5V	Satellite radio tuner does not operate properly.
49 (P)	Ground	Audio RX	Input	ON	Operate audio volume	 SKIA4403E	Satellite radio tuner audio information does not display properly.
50 (L)	Ground	Audio TX	Output	ON	Operate audio volume	 SKIA4402E	Satellite radio tuner audio information does not display properly.
65 (O/L)	Ground	Audio RX	Input	ON	Operate audio volume	 SKIA4403E	Audio does not oper- ate properly.
66 (W/L)	Ground	Audio TX	Output	ON	Operate audio volume	 SKIA4402E	Audio does not oper- ate properly.
67	-	Shield	-	ON	-	0V	Interference and dis- tortion heard from speakers.
74 (R)*	Ground	Remote control A	Input	ON	Press MODE switch	0V	Steering wheel audio controls do not func- tion.
					Press SEEK UP switch	0.75V	
					Press VOL UP switch	2V	
					Except for above	5V	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M





# AUDIO

Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
75 (GR)*	Ground	Remote control B	Input	ON	Press POWER switch	0V	Steering wheel audio controls do not func- tion.
					Press SEEK DOWN switch	0.75V	
					Press VOL DOWN switch	2V	
					Except for above	5V	
76 (L)*	-	Remote control ground	-	-	-	-	Steering wheel audio controls do not func- tion.






\*: Without NAVI.

## Terminals and Reference Value for BOSE Speaker Amp.

EKS009U4

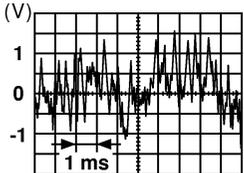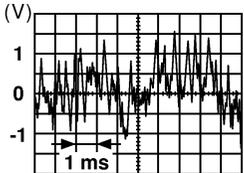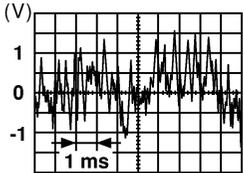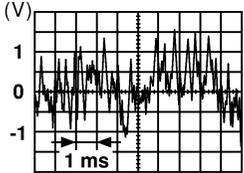Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
1 (Y)	Ground	Battery power	Input	-	-	Battery voltage	System does not work properly.
9 (G)	10 (B)	Rear door speaker LH and rear door tweeter LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker LH or rear door tweeter LH.
11 (GR)	12 (O)	Rear door speaker RH and rear door tweeter RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker RH or rear door tweeter RH.
13 (BR)	14 (L)	Front door speaker LH and front tweeter LH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker LH or front tweeter LH.
15 (LG)	16 (R)	Front door speaker RH and front tweeter RH	Output	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker RH or front tweeter RH.
17 (B)	Ground	Ground	-	ON	-	-	-

# AUDIO

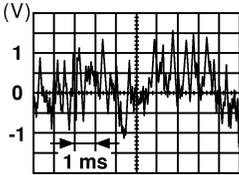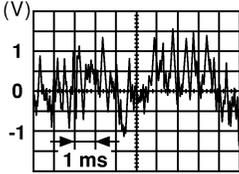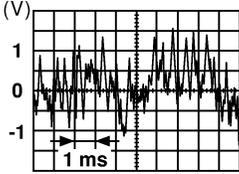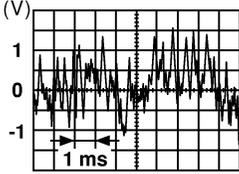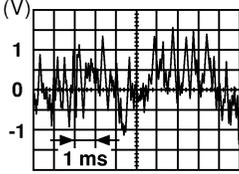Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
19 (W)	3 (G)	Subwoofer	Output	ON	Receive audio signal	 SKIA0177E	No sound from subwoofer.
22 (Y)	Ground	Subwoofer ON signal	Output	ON	-	More than 6.5V	Subwoofer does not work properly.
24 (L)	23 (B/W)	Audio sound signal rear RH	Input	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker RH or rear door tweeter RH.
26 (BR)	25 (B/R)	Audio sound signal rear LH	Input	ON	Receive audio signal	 SKIA0177E	No sound from rear door speaker LH or rear door tweeter LH.
28 (Y)	27 (BR)	Audio sound signal front RH	Input	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker RH or front tweeter RH.
30 (W)	29 (B)	Audio sound signal front LH	Input	ON	Receive audio signal	 SKIA0177E	No sound from front door speaker LH or front tweeter LH.
31 (G)	Ground	Amp. ON sig- nal	Input	ON	-	More than 6.5V	System does not work properly.



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO

## Terminals and Reference Value for AV Switch

EKS009U6

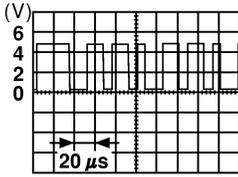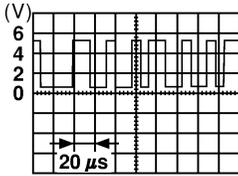
Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
1 (Y)	Ground	Battery power	Input	-	-	Battery voltage	System does not work properly.
2 (G/B)	Ground	ACC power	Input	ACC	-	Battery voltage	System does not work properly.
3 (R)	Ground	Illumination signal	Input	OFF	Lighting switch is ON (position 1).	Battery voltage	AV switch illumination does not come on when lighting switch is ON (position 1).
					Turn lighting switch OFF.	Approx. 3.0V or less	
4 (BR)	Ground	Illumination control signal	Input	ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V.	AV switch illumination cannot be controlled.
5 (B)	Ground	Ground	-	ON	-	0V	-
6 (V)	Ground	Communication signal (+)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0175E</p>	System does not work properly.
7	-	Shield ground	-	-	-	-	-
8 (LG)	Ground	Communication signal (-)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0176E</p>	System does not work properly.
12 (R)	Ground	Remote control A	Input	ON	Press MODE switch	0V	Steering wheel audio controls do not function.
					Press SEEK UP switch	0.75V	
					Press VOL UP switch	2V	
					Except for above	5V	
13 (GR)	Ground	Remote control B	Input	ON	Press POWER switch	0V	Steering wheel audio controls do not function.
					Press SEEK DOWN switch	0.75V	
					Press VOL DOWN switch	2V	
					Except for above	5V	
14 (L)	-	Remote control ground	-	-	-	-	Steering wheel audio controls do not function.

## AV Switch Self-Diagnosis Function

It can check ON/OFF operation of each switch in the AV switch (with NAVI) or audio unit (without NAVI) and diagnose the input signals from the steering switch.

### STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITHOUT NAVI)

1. Turn ignition switch from OFF to ACC.
2. Press and hold the "CLOCK" switch and turn the volume control dial clockwise or counterclockwise for 30 clicks or more.

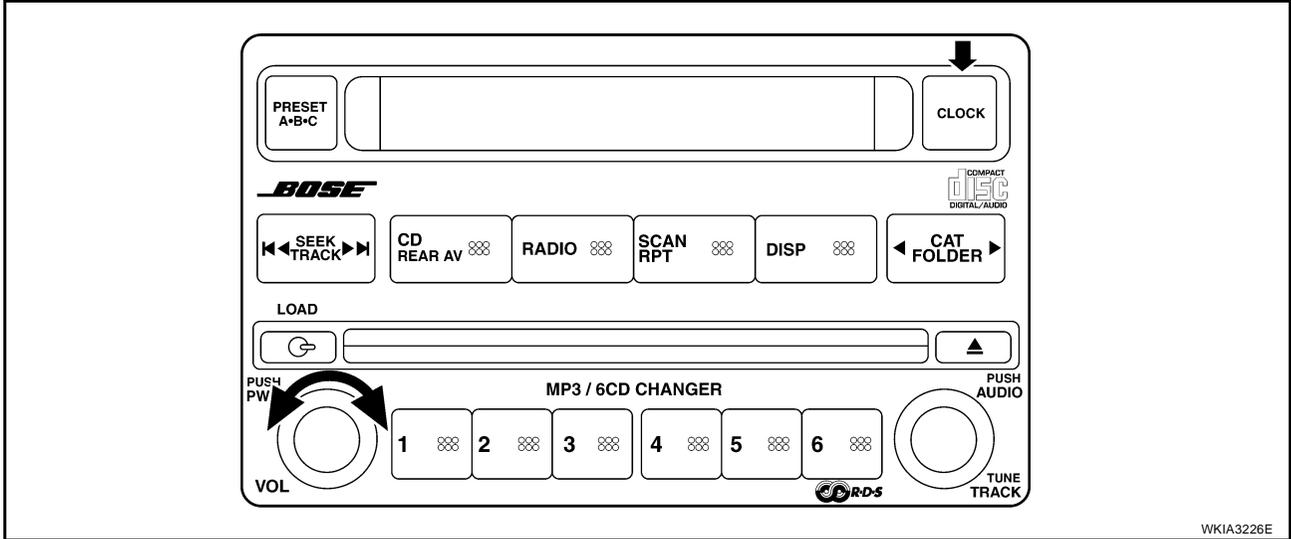

Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.

3. Initially, all display segments will be illuminated.
4. Press each switch. When each switch is pressed, its name and communication code will be displayed.

**NOTE:**


CD player LOAD and EJECT buttons are not included in this test and will not change the display when pressed.

### STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITH NAVI)

1. Turn ignition switch from OFF to ACC.
2. Within 10 seconds press and hold the switches "PAUSE/MUTE" and "PREV" simultaneously for 3 seconds. Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.
3. Press each switch and listen for beep.

**NOTE:**

CD player LOAD and EJECT buttons are not included in this test and will not beep when pressed.

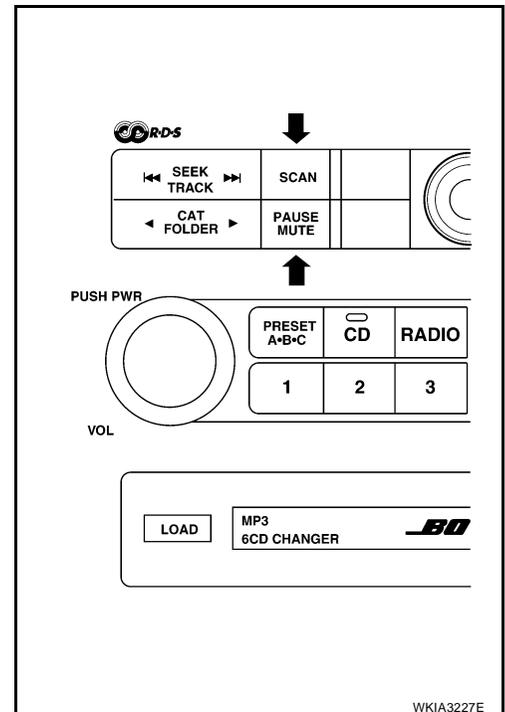

# AUDIO

---

## EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

## DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each AV switch and steering switch is pressed.
- It can check for continuity of harness between AV switch and steering switch.

# AUDIO

EKS009UB

## Trouble Diagnosis

The majority of the audio troubles are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the inspection items below to diagnose the malfunction.

### MALFUNCTION WITH RADIO AND CD (BASE AND MID LEVEL SYSTEM)

Symptom	Possible cause
Inoperative	<ul style="list-style-type: none"> <li>● Audio unit power circuit check. Refer to <a href="#">AV-33, "Power Supply Circuit Inspection"</a> .</li> </ul> <p>If above check is OK, replace audio unit.</p>
Steering switch does not operate (with mid level audio system)	<ul style="list-style-type: none"> <li>● Steering switch check. Refer to <a href="#">AV-35, "Steering Switch Check (With NAVI)"</a> .</li> </ul> <p>If above check is OK, replace audio unit.</p>
All speakers do not sound	<ul style="list-style-type: none"> <li>● Audio unit</li> </ul>
One or several speakers do not sound	<ul style="list-style-type: none"> <li>● Front door speaker check. Refer to <a href="#">AV-38, "Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System)"</a> .</li> <li>● Rear door speaker check. Refer to <a href="#">AV-40, "Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (Base and Mid Level System)"</a> .</li> </ul>
Poor sound	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● Speaker</li> </ul>
Noisy	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● Electrical equipment (generator, bonding wire, etc.)</li> </ul>

### MALFUNCTION WITH RADIO AND CD (BOSE SYSTEM)

Before proceeding on models with NAVI, confirm that other AV switch functions (except audio functions) operate. If not, refer to [AV-153, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#) .

Symptom	Possible cause
Inoperative	<ul style="list-style-type: none"> <li>● Audio unit power circuit check. Refer to <a href="#">AV-33, "Power Supply Circuit Inspection"</a> .</li> <li>● Audio communication line check (with Navigation System). Refer to <a href="#">AV-134, "Audio Communication Line Check (Between Display Control Unit and Audio Unit)"</a> .</li> <li>● AV switch check. Refer to <a href="#">AV-37, "AV Switch Check (With NAVI)"</a> .</li> </ul> <p>If above check is OK, replace audio unit.</p>
Steering switch does not operate	<ul style="list-style-type: none"> <li>● Steering switch check. Refer to <a href="#">AV-35, "Steering Switch Check (With NAVI)"</a> .</li> <li>● AV switch check. Refer to <a href="#">AV-37, "AV Switch Check (With NAVI)"</a> .</li> <li>● Audio communication line check (with Navigation System). Refer to <a href="#">AV-134, "Audio Communication Line Check (Between Display Control Unit and Audio Unit)"</a> .</li> </ul> <p>If above check is OK, replace audio unit.</p>
Audio information is not displayed on screen (with NAVI)	<ul style="list-style-type: none"> <li>● Display unit check. Refer to <a href="#">AV-109, "Self-Diagnosis Mode (DCU)"</a> .</li> </ul>
All speakers do not sound	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● BOSE speaker amp. power supply and ground circuit check. Refer to <a href="#">AV-33, "Power Supply Circuit Inspection"</a> .</li> <li>● BOSE speaker amp. ON signal</li> <li>● BOSE speaker amp.</li> </ul>
One or several speakers do not sound	<ul style="list-style-type: none"> <li>● Front door speaker check. Refer to <a href="#">AV-42, "Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System)"</a> .</li> <li>● Rear door speaker check. Refer to <a href="#">AV-46, "Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System)"</a> .</li> <li>● Subwoofer check. Refer to <a href="#">AV-49, "Sound Is Not Heard From Subwoofer (BOSE System)"</a> .</li> </ul>

# AUDIO

Symptom	Possible cause
Poor sound	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● BOSE speaker amp.</li> <li>● Speaker</li> </ul>
Noisy	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● BOSE speaker amp.</li> <li>● Electrical equipment (generator, bonding wire, etc.)</li> </ul>

## FOR RADIO ONLY

Symptom	Possible cause
No sound	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● Antenna feeder, wiring or connections</li> <li>● Antenna amplifier, power supply, wiring or connections</li> </ul>
Noisy	<ul style="list-style-type: none"> <li>● Audio unit</li> <li>● Audio unit case ground</li> <li>● Antenna feeder, wiring or connections</li> <li>● Antenna amplifier, power supply, wiring or connections</li> <li>● Noise prevention parts</li> <li>● Electrical equipment</li> <li>● Wire harness of each piece of electrical equipment</li> </ul>
All radio stations stored in memory are deleted	<ul style="list-style-type: none"> <li>● Audio unit power circuit. Refer to <a href="#">AV-33, "Power Supply Circuit Inspection"</a>.</li> <li>● Audio unit</li> </ul>

**NOTE:**

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

## FOR CD ONLY

Symptom	Possible cause
CD cannot be inserted.	<ul style="list-style-type: none"> <li>● CD</li> <li>● Audio unit</li> </ul>
CD cannot be ejected.	
The CD cannot be played.	
The sound skips, stops suddenly, or is distorted.	

## Noise Inspection

EKS009U9

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

**NOTE:**

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

### TYPE OF NOISE AND POSSIBLE CAUSE

Occurrence condition	Possible cause
Occurs only when engine is ON.	<ul style="list-style-type: none"> <li>● Ignition components</li> </ul>
	<ul style="list-style-type: none"> <li>● Generator</li> </ul>

# AUDIO

Occurrence condition	Possible cause
The occurrence of the noise is linked with the operation of the fuel pump.	<ul style="list-style-type: none"> <li>● Fuel pump condenser</li> </ul>
Noise only occurs when various electrical components are operating.	A cracking or snapping sound occurs with the operation of various switches. <ul style="list-style-type: none"> <li>● Relay malfunction, audio unit malfunction</li> </ul>
	The noise occurs when various motors are operating. <ul style="list-style-type: none"> <li>● Motor case ground</li> <li>● Motor</li> </ul>
The noise occurs constantly, not just under certain conditions.	<ul style="list-style-type: none"> <li>● Rear defogger coil malfunction</li> <li>● Open circuit in printed heater</li> <li>● Poor ground of antenna amplifier or antenna feeder line</li> </ul>
A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively.	<ul style="list-style-type: none"> <li>● Ground wire of body parts</li> <li>● Ground due to improper part installation</li> <li>● Wiring connections or a short circuit</li> </ul>

## Power Supply Circuit Inspection

EKS009UA

### 1. CHECK FUSES

Check that the following fuses are not blown.

Unit	Terminals	Signal name	Fuse No.
Audio unit	6	Battery power	29
	10	Ignition switch ACC or ON	4
AV switch	1	Battery power	29
	2	Ignition switch ACC or ON	4
BOSE speaker amp. (with BOSE)	1	Battery power	29
Display control unit	12	Ignition switch ON or START	12
Subwoofer (BOSE system)	6	Battery power	17

OK or NG

OK >> GO TO 2.


NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-4](#), "[POWER SUPPLY ROUTING CIRCUIT](#)".

# AUDIO

## 2. POWER SUPPLY CIRCUIT CHECK


1. Disconnect audio unit connector M43, subwoofer connector B72 (with BOSE) and BOSE speaker amp. connector B74 (with BOSE).
2. Check voltage between the audio unit and ground.

Unit	Terminal No.			OFF	ACC	ON
	(+)		(-)			
	Connector	Terminal				
Audio unit	M43	6	Ground	Battery voltage	Battery voltage	Battery voltage
		10	Ground	0V	Battery voltage	Battery voltage

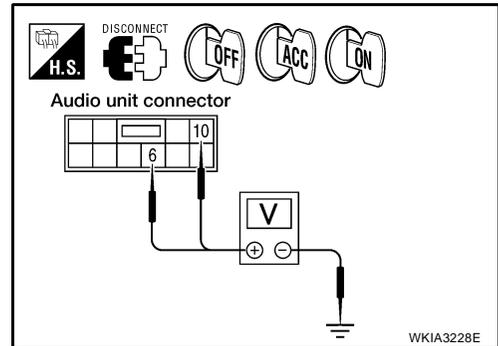


3. Check voltage between subwoofer (BOSE system) and ground.

Unit	Terminal No.			OFF	ACC	ON
	(+)		(-)			
	Connector	Terminal				
Subwoofer	B72	6	Ground	Battery voltage	Battery voltage	Battery voltage

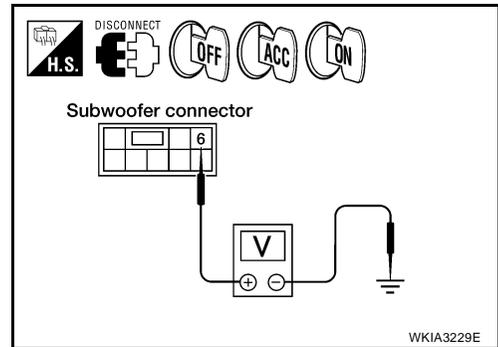

4. Check voltage between BOSE speaker amp. (with BOSE) and ground.

Unit	Terminal No.			OFF	ACC	ON
	(+)		(-)			
	Connector	Terminal				
BOSE speaker amp.	B74	1	Ground	Battery voltage	Battery voltage	Battery voltage

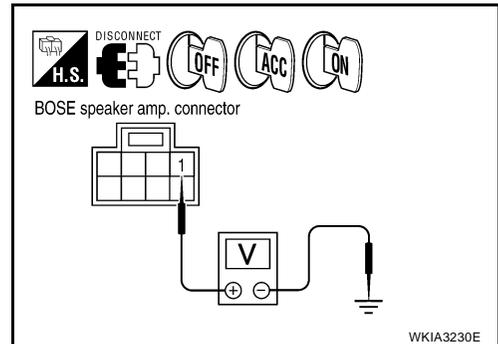

### OK or NG

OK >> GO TO 3.

NG >> ● Check connector housings for disconnected or loose terminals.

- Repair harness or connector.

## 3. GROUND CIRCUIT CHECK

Check continuity between subwoofer (BOSE system) harness connector B72 terminal 5 and BOSE speaker amp. (with BOSE) harness connector B74 terminal 17 and ground.


**Continuity should exist.**

### OK or NG

OK >> Inspection End.

NG >> ● Check connector housings for disconnected or loose terminals.

- Repair harness or connector.

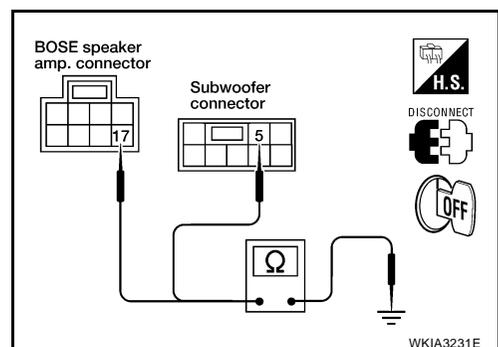

## Steering Switch Check (With NAVI)

### 1. AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

1. Start AV switch self-diagnosis function. Refer to [AV-29, "AV Switch Self-Diagnosis Function"](#).
2. Operate steering switch.


Does steering switch operate normally?

- YES >> Inspection End.  
 NO >> GO TO 2.

### 2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect AV switch connector M98 and spiral cable connector M30.
3. Check continuity between spiral cable harness connector terminal and AV switch harness connector terminal.

Terminals				Continuity
Spiral cable		AV switch		
Connector	Terminal	Connector	Terminal	
M30	31	M98	13	Yes
	32		14	
	34		12	

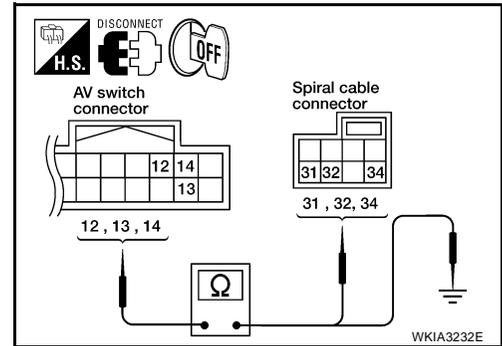

4. Check continuity between AV switch and ground.

Terminals				Continuity
AV switch		—		
Connector	Terminal			
M98	12	Ground		No
	13			
	14			


OK or NG

- OK >> GO TO 3.  
 NG >> Repair harness.

### 3. SPIRAL CABLE CHECK

1. Disconnect spiral cable connectors M30 and M102.
2. Check continuity between spiral cable terminals.

Terminals				Continuity
Spiral cable				
Connector	Terminal	Connector	Terminal	
M30	31	M102	18	Yes
	32		16	
	34		14	

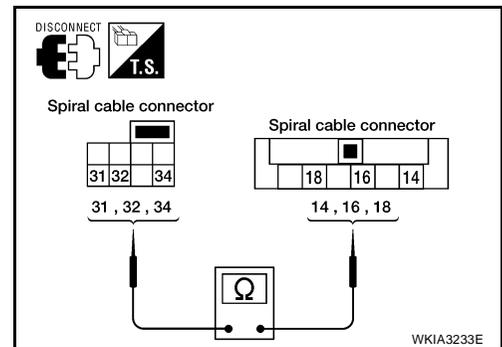

OK or NG


- OK >> GO TO 4.  
 NG >> Replace spiral cable. Refer to [SRS-46, "SPIRAL CABLE"](#).

# AUDIO

## 4. CHECK STEERING SWITCH RESISTANCE

Check resistance between steering switch terminals.

Terminal	Signal name	Condition	Resistance (Ω) (Approx.)
18	16	Seek (down)	Depress (station) down switch. 165
		Power	Depress power switch. 0
		Volume (down)	Depress volume down switch. 652
14	16	Seek (up)	Depress (station) up switch. 165
		Mode	Depress mode switch. 0
		Volume (up)	Depress volume up switch. 652

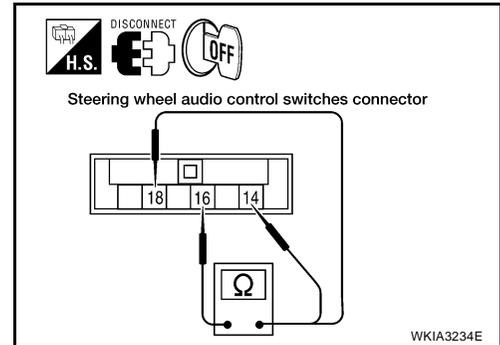

OK or NG

OK >> Inspection End.

NG >> Replace steering switch. Refer to [AV-55. "Removal and Installation of Steering Wheel Audio Control Switches"](#).


## Steering Switch Check (Without NAVI)

EKS00D87

### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect audio unit connector M45 and spiral cable connector M30.
3. Check continuity between spiral cable harness connector terminal and audio unit harness connector terminal.

Terminals				Continuity
Spiral cable		Audio unit		
Connector	Terminal	Connector	Terminal	
M30	31	M45	75	Yes
	32		76	
	34		74	

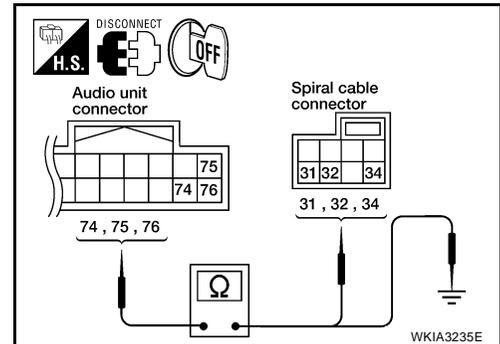

4. Check continuity between audio unit and ground.

Terminals				Continuity
Audio unit		—		
Connector	Terminal			
M45	75	Ground		No
	76			
	74			

OK or NG

OK >> GO TO 2.

NG >> Repair harness.

# AUDIO

## 2. SPIRAL CABLE CHECK


1. Disconnect spiral cable connectors M30 and M102.
2. Check continuity between spiral cable harness connector terminals.

Terminals				Continuity
Spiral cable				
Connector	Terminal	Connector	Terminal	
M30	31	M102	18	Yes
	32		16	
	34		14	

OK or NG

OK >> GO TO 3.

NG >> Replace spiral cable. Refer to [SRS-46, "SPIRAL CABLE"](#) .

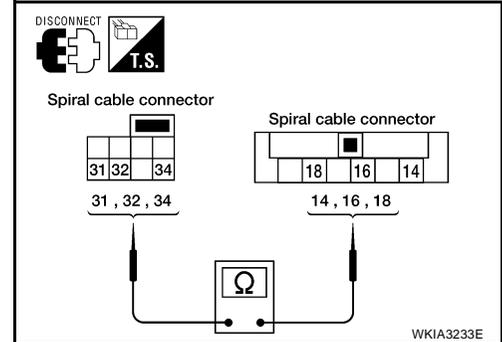

## 3. CHECK STEERING SWITCH RESISTANCE


Check resistance between steering switch terminals.

Terminal	Signal name	Condition	Resistance (Ω) (Approx.)
18	16	Seek (down)	Depress (station) down switch. 165
		Power	Depress power switch. 0
		Volume (down)	Depress volume down switch. 652
14	16	Seek (up)	Depress (station) up switch. 165
		Mode	Depress mode switch. 0
		Volume (up)	Depress volume up switch. 652

OK or NG

OK >> Inspection End.

NG >> Replace steering switch. Refer to [AV-55, "Removal and Installation of Steering Wheel Audio Control Switches"](#) .

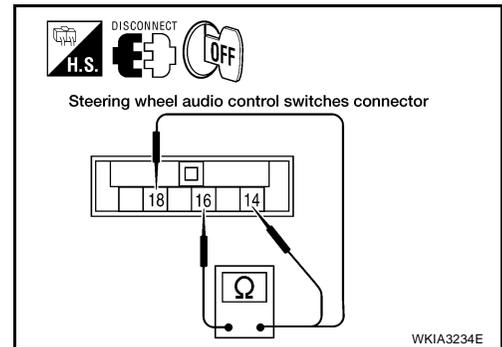

## AV Switch Check (With NAVI)

EKS00D88

### 1. AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

Perform AV switch self-diagnosis function. Refer to [AV-29, "AV Switch Self-Diagnosis Function"](#) .

Does AV switch operate normally?

YES >> Inspection End.

NO >> GO TO 2.

### 2. CHECK AV SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check AV switch power supply and ground circuit. Refer to [AV-128, "Power Supply and Ground Circuit Check for AV Switch"](#) .

OK or NG

OK >> Replace AV switch. Refer to [AV-52, "Removal and Installation for AV Switch"](#) .

NG >> Repair malfunctioning part.

# AUDIO

## Audio Communication Line Check (With Navigation System)

EKS009UD

### 1. CHECK AUDIO COMMUNICATION LINE

Start audio communication line check. Refer to [AV-134, "Audio Communication Line Check \(Between Display Control Unit and Audio Unit\)"](#).

OK or NG

- OK >> Inspection End.
- NG >> Replace malfunctioning part.

### Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System)

EKS009UE

#### 1. HARNESS CHECK

1. Disconnect audio unit connector M43 and suspect speaker or tweeter connector.
2. Check continuity between audio unit harness connector M43 terminal and suspect speaker or tweeter harness connector terminal.

Terminals				Continuity
Audio unit		Speaker or tweeter		
Connector	Terminal	Connector	Terminal	
M43	2	D12	+	Yes
	1		-	
	4	D112	+	
	3		-	
	2	M109	+	
	1		-	
	4	M111	+	
	3		-	


\*: With mid-level system

3. Check continuity between audio unit harness connector M43 terminal and ground.

Terminals			Continuity
Audio unit		—	
Connector	Terminal		
M43	2	Ground	No
	1		
	4		
	3		

OK or NG


- OK >> GO TO 2.
- NG >>
  - Check connector housings for disconnected or loose terminals.
  - Repair harness or connector.

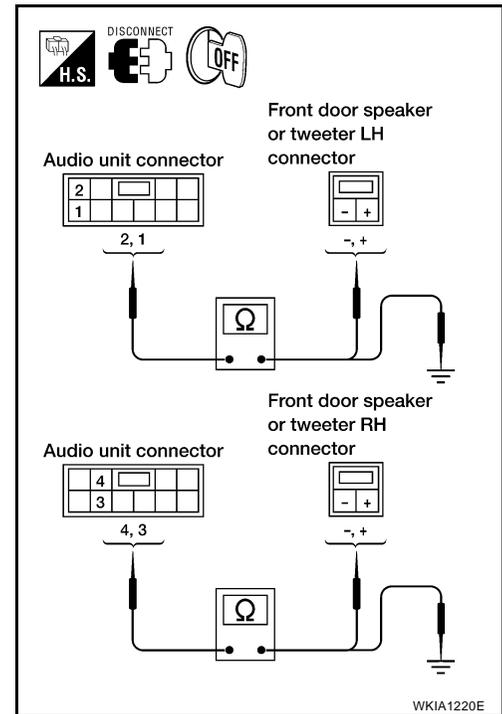

# AUDIO

## 2. FRONT SPEAKER SIGNAL CHECK


1. Connect audio unit connector and front speaker or tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminal and ground with CONSULT-II or oscilloscope.

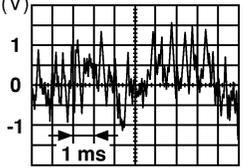Terminals		Terminals		Condi- tion	Reference signal
(+)		(-)			
Con- nec- tor	Termi- nal	Con- nec- tor	Termi- nal		
M43	2	M43	1	Receive audio signal	
	4		3		

SKIA0177E

### OK or NG

- OK >> Replace speaker. Refer to [AV-52, "Removal and Installation of Speaker"](#) .
- NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#) .

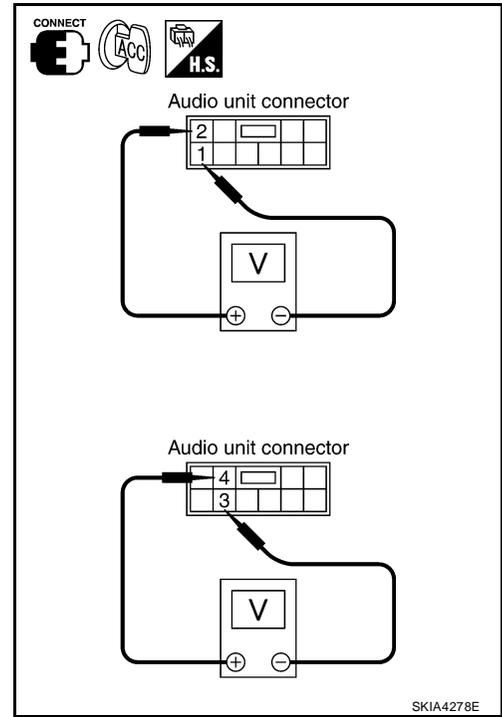

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO

EKS009UF

## Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (Base and Mid Level System)

### 1. HARNESS CHECK

1. Disconnect audio unit connector M44 and suspect speaker connector.
2. Check continuity between audio unit harness connector M44 terminal and suspect speaker harness connector terminal.

Terminals				Continuity
Audio unit		Speaker or tweeter		
Connector	Terminal	Connector	Terminal	
M44	13	D207	-	Yes
	14		+	
	15	D307	-	
	16		+	
	13	D208*	-	
	14		+	
	15	D308*	-	
	16		+	


\*: With mid level system.

3. Check continuity between audio unit harness connector M44 terminal and ground.

Terminals			Continuity
Audio unit		—	
Connector	Terminal		
M44	13	Ground	No
	14		
	15		
	16		

#### OK or NG

- OK >> GO TO 2.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

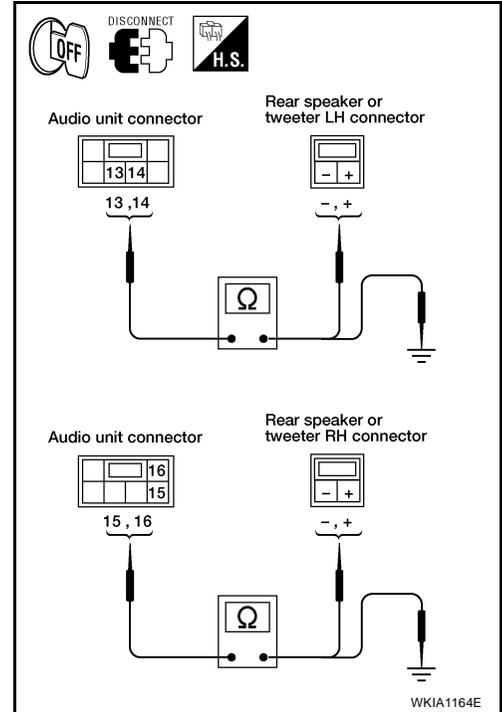


WKIA1164E

# AUDIO

## 2. REAR SPEAKER SIGNAL CHECK


1. Connect audio unit connector and rear speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminals with CONSULT-II or oscilloscope.

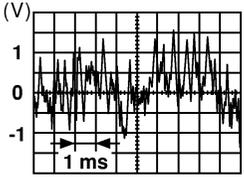Terminals				Condition	Reference signal
(+)		(-)			
Con- nector	Termi- nal	Con- nector	Terminal		
M44	14	M44	13	Receive audio signal	
	16		15		

SKIA0177E

### OK or NG

- OK >> Replace rear door speaker. Refer to [AV-52, "Removal and Installation of Speaker"](#).
- NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#).

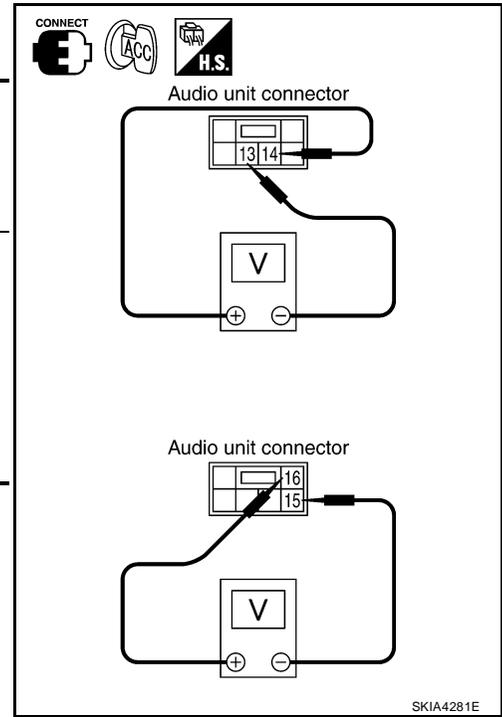

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO

## Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System)

EKS009UG

### 1. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Check continuity between BOSE speaker amp. harness connector terminal B75 and suspect speaker harness connector terminal.


Terminals				Continuity
BOSE speaker amp.		Speaker or tweeter		
Connector	Terminal	Connector	Terminal	
B75	13	D12	+	Yes
	14		-	
	15	D112	+	
	16		-	
	13	M109	+	
	14		-	
	15	M111	+	
	16		-	

3. Check continuity between BOSE speaker amp. harness connector terminal B75 and ground.

Terminals			Continuity
BOSE speaker amp.		—	
Connector	Terminal		
B75	13	Ground	No
	14		
	15		
	16		

#### OK or NG


- OK >> GO TO 2.
- NG >> ● Check connector housings for disconnected or loose terminals.  
● Repair harness or connector.

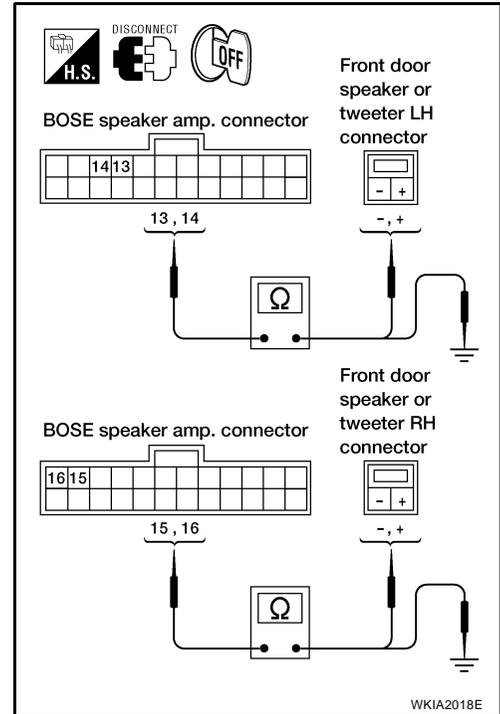

# AUDIO

## 2. FRONT SPEAKER SIGNAL CHECK


1. Connect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector B75 terminals with CONSULT-II or oscilloscope.

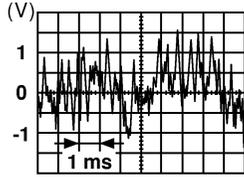Terminals				Condi- tion	Reference signal
(+)		(-)			
Con- nector	Terminal	Con- nector	Termi- nal		
B75	13	B75	14	Receive audio signal	
	15		16		

SKIA0177E

### OK or NG

- OK >> Replace suspect speaker. Refer to [AV-52, "Removal and Installation of Speaker"](#).
- NG >> GO TO 3.

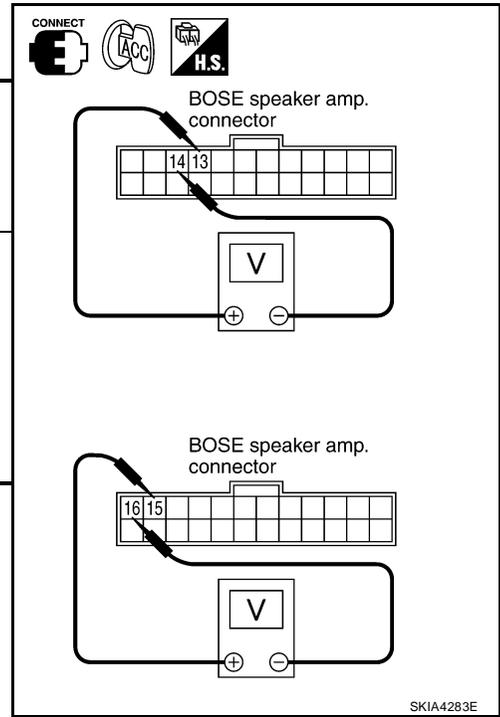

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO


## 3. HARNESS CHECK

1. Disconnect audio unit connector M43 and BOSE speaker amp. connector B75.
2. Check continuity between audio unit harness connector terminals and BOSE speaker amp. harness connector terminals.

Terminals				Continuity
Audio unit		BOSE speaker amp.		
Connector	Terminal	Connector	Terminal	
M43	1	B75	29	Yes
	2		30	
	3		27	
	4		28	

3. Check continuity between audio unit harness connector terminals and ground.

Terminals				Continuity
Audio unit		—		
Connector	Terminal			
M43	1	Ground		No
	2			
	3			
	4			

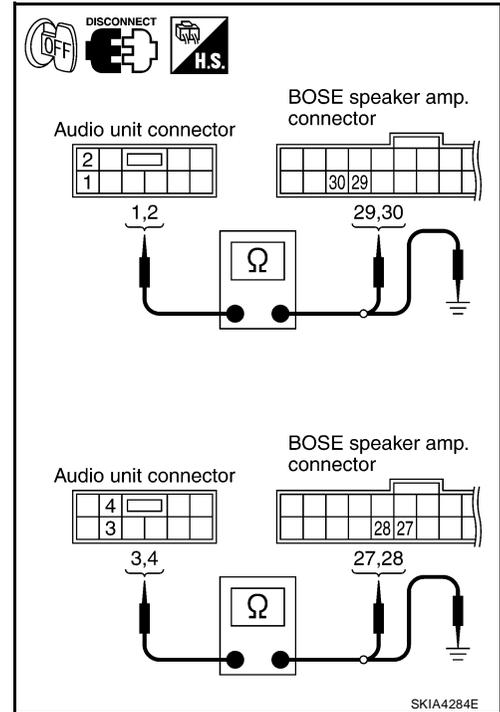


OK or NG

- OK >> GO TO 4.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

# AUDIO

## 4. FRONT SPEAKER SIGNAL CHECK


1. Connect audio unit connector and BOSE speaker amp. connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminals with CONSULT-II or oscilloscope.

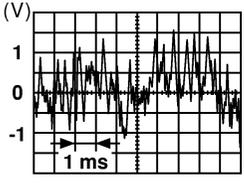Terminals				Condi- tion	Reference signal
(+)		(-)			
Con- nector	Termi- nal	Con- nector	Termi- nal		
M43	2	M43	1	Receive audio signal	
	4		3		

SKIA0177E

### OK or NG

- OK >> Replace BOSE speaker amp. Refer to [AV-54, "Removal and Installation of Bose Speaker Amp."](#)
- NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#)

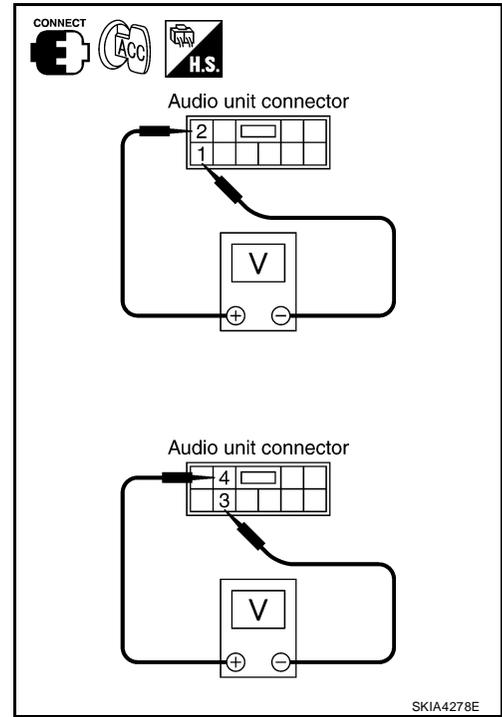

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO

## Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System)

EKS009UH

### 1. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Check continuity between BOSE speaker amp. harness connector terminal B75 and suspect speaker harness connector terminal.


Terminals				Continuity
BOSE speaker amp.		Speaker or tweeter		
Connector	Terminal	Connector	Terminal	
B75	9	D207	+	Yes
	10		-	
	11	D307	+	
	12		-	
	9	D208	+	
	10		-	
	11	D308	+	
	12		-	

3. Check continuity between BOSE speaker amp. harness connector B75 terminal and ground.

Terminals			Continuity
BOSE speaker amp.		—	
Connector	Terminal		
B75	9	Ground	No
	10		
	11		
	12		

OK or NG


- OK >> GO TO 2.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

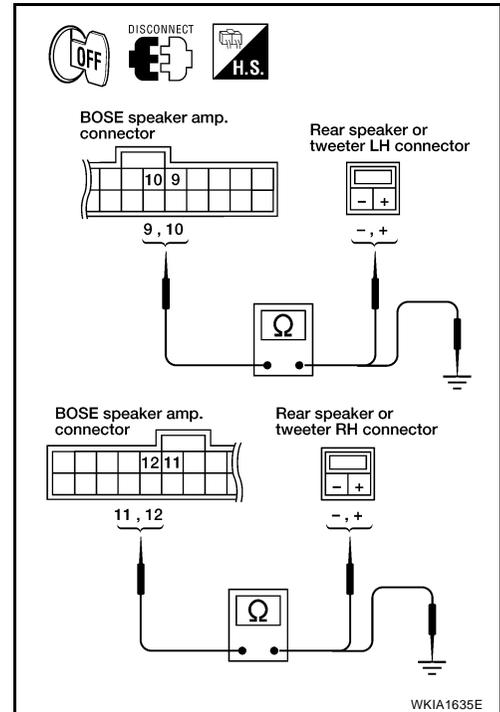

# AUDIO


## 2. REAR SPEAKER SIGNAL CHECK

1. Connect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector B75 terminals with CONSULT-II or oscilloscope.

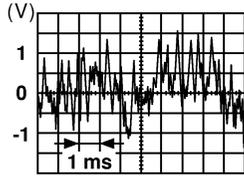Terminals				Condi- tion	Reference signal
(+)		(-)			
Con- nec- tor	Terminal	Con- nec- tor	Terminal		
B75	9	B75	10	Receive audio signal	
	11		12		

**OK or NG**

- OK >> Replace suspect speaker. Refer to [AV-52, "Removal and Installation of Speaker"](#) .
- NG >> GO TO 3.

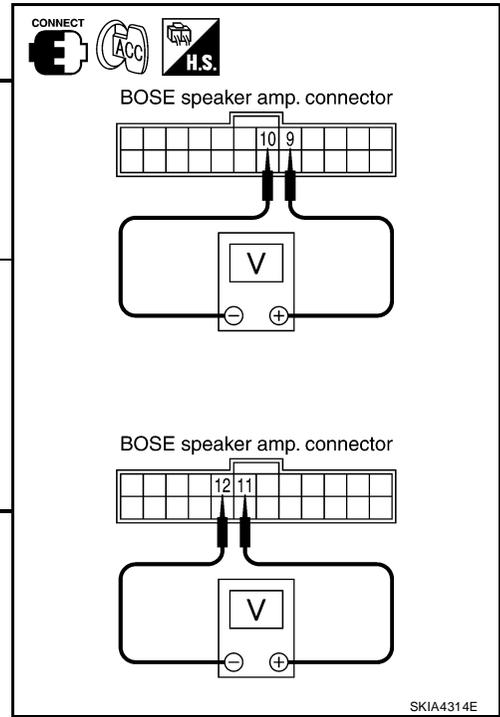

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# AUDIO


## 3. HARNESS CHECK

1. Disconnect audio unit connector M44 and BOSE speaker amp. connector B75.
2. Check continuity between audio unit harness connector M44 terminals and BOSE speaker amp. harness connector B75 terminals.

Terminals				Continuity
Audio unit		BOSE speaker amp.		
Connector	Terminal	Connector	Terminal	
M44	13	B75	25	Yes
	14		26	
	15		23	
	16		24	

3. Check continuity between audio unit harness connector terminal and ground.

Terminals			Continuity
Audio unit		—	
Connector	Terminal		
M44	13	Ground	No
	14		
	15		
	16		

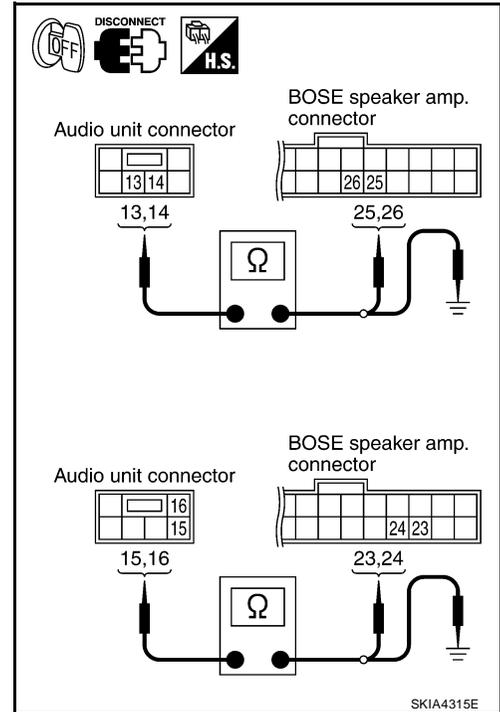

### OK or NG

- OK >> GO TO 4.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

# AUDIO

## 4. REAR SPEAKER SIGNAL CHECK


1. Connect audio unit connector M44 and BOSE speaker amp. connector B75.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M44 terminals with CONSULT-II or oscilloscope.

Terminals				Condition	Reference signal
(+)		(-)			
Connector	Terminal	Connector	Terminal		
M44	14	M44	13	Receive audio signal	
	16		15		

SKIA0177E

OK or NG

- OK >> Replace BOSE speaker amp. Refer to [AV-54, "Removal and Installation of Bose Speaker Amp."](#)
- NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#).

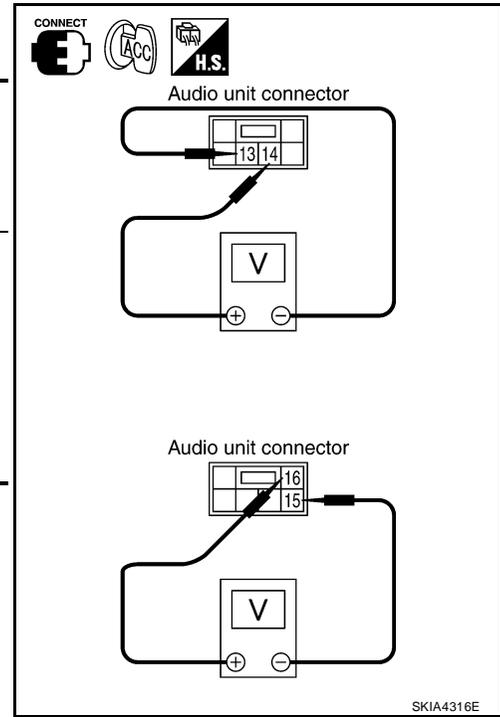

## Sound Is Not Heard From Subwoofer (BOSE System)

EKS009UJ

### 1. CHECK FUSE

Check that the following fuse is not blown.

Unit	Terminal	Signal name	Fuse No.
Subwoofer	6	Battery power	17

OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect subwoofer connector.
2. Check voltage between the subwoofer and ground.

Unit	Terminal No.			OFF	ACC	ON
	(+)		(-)			
	Connector	Terminal				
Subwoofer	B72	6	Ground	Battery voltage	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> ● Check connector housings for disconnected or loose terminals.  
● Repair harness or connector.

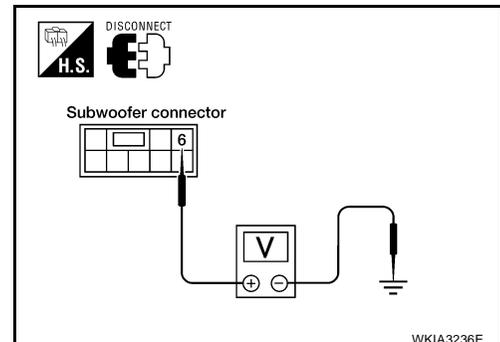

# AUDIO


## 3. GROUND CIRCUIT CHECK

Check continuity between subwoofer harness connector B72 terminal 5 and ground.

**Continuity should exist.**

OK or NG

- OK >> GO TO 4.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

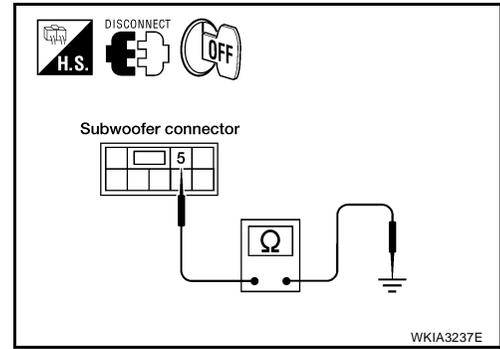

## 4. HARNESS CHECK

1. Disconnect BOSE speaker amp. connectors B74 and B75 and subwoofer connector B72.
2. Check continuity between BOSE speaker amp. and subwoofer.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
BOSE speaker amp.: B75	22	Subwoofer: B72	4	Yes

C		B		Continuity
Connector	Terminal	Connector	Terminal	
BOSE speaker amp.: B74	3	Subwoofer: B72	1	Yes
	19		2	


3. Check continuity between BOSE speaker amp. and ground.

A		Ground	Continuity
Connector	Terminal		
BOSE speaker amp.: B75	22		No

C		Ground	Continuity
Connector	Terminal		
BOSE speaker amp.: B74	3		No
	19		

OK or NG

- OK >> GO TO 5.  
 NG >> ● Check connector housings for disconnected or loose terminals.  
 ● Repair harness or connector.

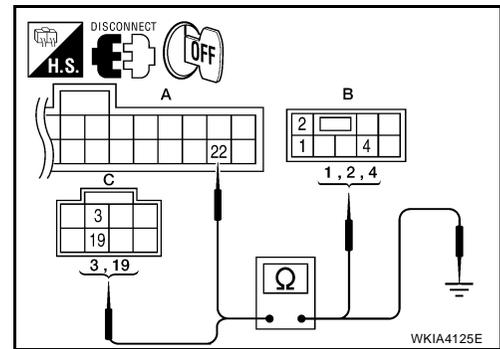

# AUDIO


## 5. CHECK SUBWOOFER AMP. ON SIGNAL

- Operate system and check voltage between subwoofer harness connector B72 terminal 4 and ground.

**Voltage** : More than approx. 6.5V

OK or NG


- OK >> GO TO 6.  
 NG >> Replace BOSE speaker amp. Refer to [AV-54, "Removal and Installation of Bose Speaker Amp."](#)

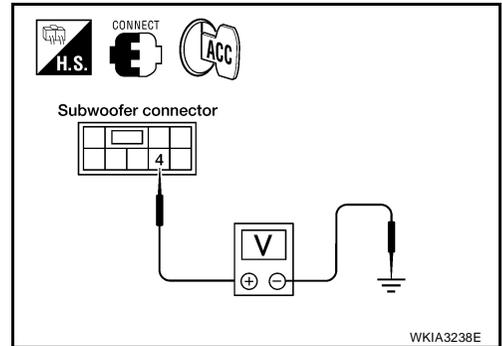

## 6. SUBWOOFER SIGNAL CHECK

- Connect BOSE speaker amp. connector and subwoofer connector.
- Turn ignition switch to ACC.
- Check the signal between BOSE speaker amp. terminals with CONSULT-II or oscilloscope.

A				Condi- tion	Reference signal
(+)		(-)			
Con- nector	Termi- nal	Con- nector	Termi- nal		
BOSE speak er amp.: B74	19	BOSE speak er amp.: B74	3	Receive audio signal	<p>(V)</p> <p>1</p> <p>0</p> <p>-1</p> <p>1 ms</p> <p>SKIA0177E</p>

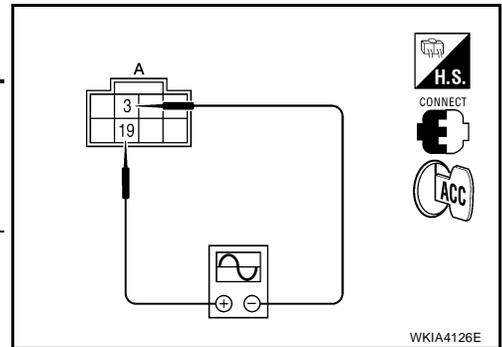

OK or NG

- OK >> Replace subwoofer. Refer to [AV-52, "Removal and Installation of Speaker"](#).  
 NG >> Replace BOSE speaker amp. Refer to [AV-54, "Removal and Installation of Bose Speaker Amp."](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV


# AUDIO

## Removal and Installation for Audio Unit

### REMOVAL - WITHOUT NAVI

1. Disconnect the negative battery cable.
2. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
3. Using power tool, remove the audio unit screws.
4. Pull out audio unit and disconnect connectors.

EKS009UK

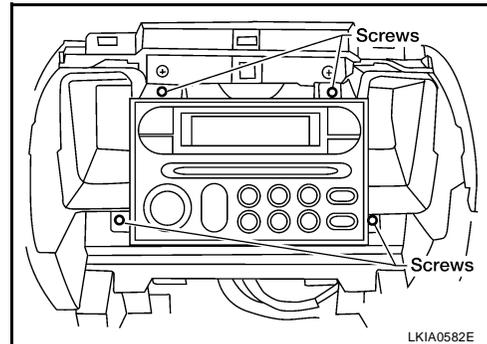


### INSTALLATION - WITHOUT NAVI

Installation is in the reverse order of removal.

### REMOVAL - WITH NAVI

1. Disconnect the negative battery cable.
2. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
3. Using power tool, remove the audio unit/CD changer assembly screws.
4. Pull out the audio unit/CD changer assembly and disconnect the connectors.

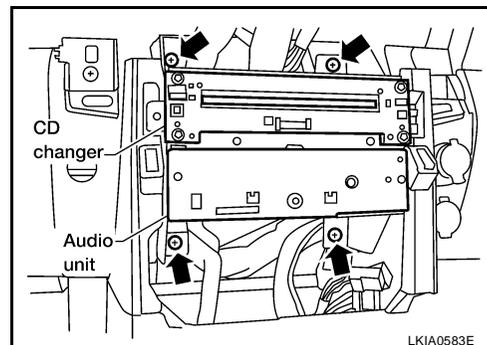

### INSTALLATION - WITH NAVI


Installation is in the reverse order of removal.

## Removal and Installation for AV Switch

### REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. Remove the AV switch screws.
3. Disengage the AV switch from rear of cluster lid C.

EKS009UL

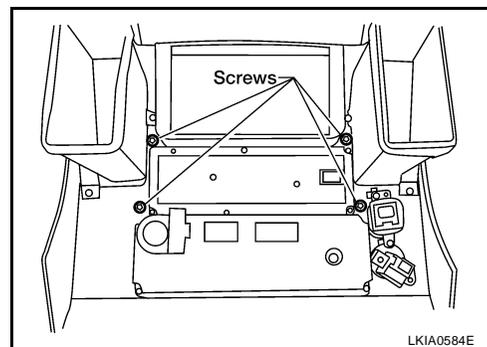

### INSTALLATION

Installation is in the reverse order of removal.

## Removal and Installation of Speaker


### REMOVAL - FRONT DOOR SPEAKER

1. Remove door finisher. Refer to [EI-25, "DOOR FINISHER"](#).

EKS009UM

# AUDIO

2. Remove the front door speaker screws.
3. Disconnect the connector and remove speaker from front door.

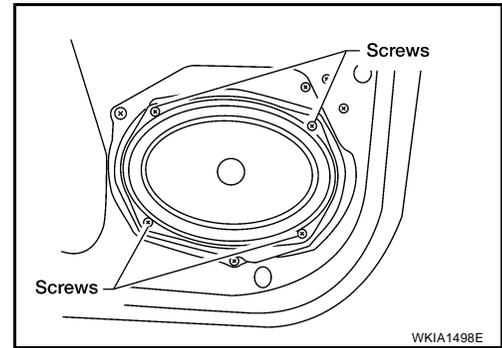


## INSTALLATION - FRONT DOOR SPEAKER

Installation is in the reverse order of removal.

**Front door speaker screws : 3.5 N·m (0.36 kg·m, 31 in·lb)**

## REMOVAL - REAR DOOR SPEAKER

1. Remove the rear door finisher. Refer to [EI-26, "REAR DOOR"](#).
2. Remove the rear door speaker screws.
3. Disconnect the connector and remove speaker from rear door.

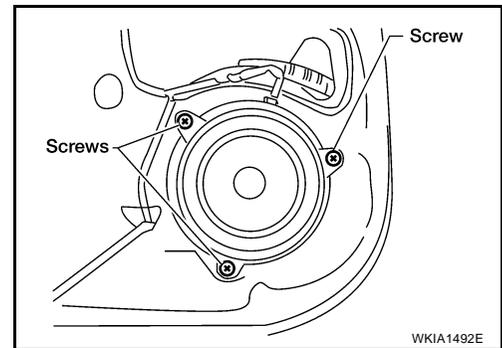

## INSTALLATION - REAR DOOR SPEAKER

Installation is in the reverse order of removal.


**Rear door speaker screws : 3.5 N·m (0.36 kg·m, 31 in·lb)**

## REMOVAL - FRONT TWEETER

1. Remove the front tweeter grille.
2. Remove the front tweeter screws.
3. Disconnect the connector and remove front tweeter from instrument panel.

### NOTE:

The standard front tweeter has four screws, the optional Bose front tweeter has two screws as shown.

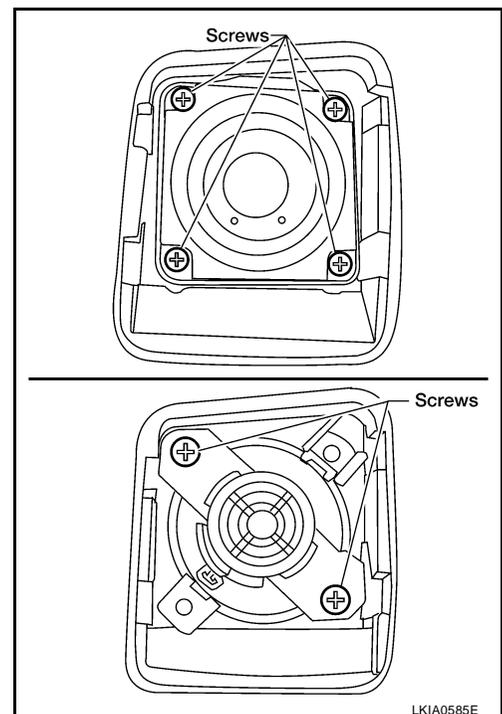

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV


# AUDIO

## INSTALLATION - FRONT TWEETER

Installation is in the reverse order of removal.

## REMOVAL - REAR DOOR TWEETER

1. Remove rear door finisher. Refer to [EI-26, "REAR DOOR"](#).
2. Remove the rear door tweeter screws.
3. Remove rear door tweeter from rear door finisher.

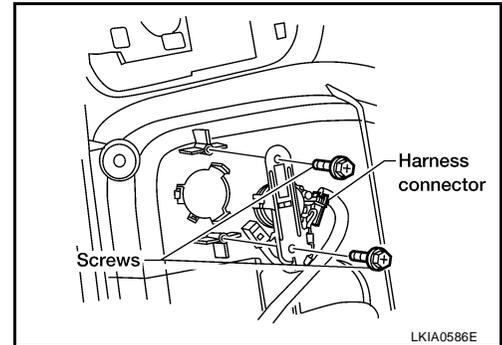


## INSTALLATION - REAR DOOR TWEETER

Installation is in the reverse order of removal.

**Rear door tweeter screws : 3.5 N·m (0.36 kg-m, 31 in-lb)**

## REMOVAL - SUBWOOFER (BOSE SYSTEM)

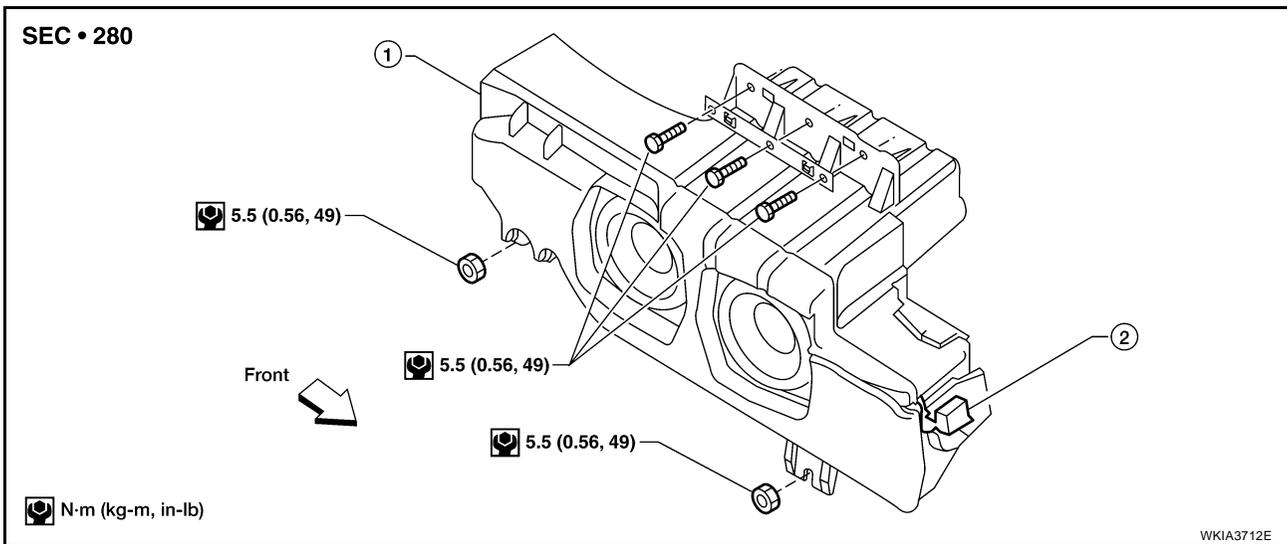

1. Subwoofer (Bose system)
2. Connector

1. Remove the luggage side lower finisher LH. Refer to [EI-32, "LUGGAGE FLOOR TRIM"](#).
2. Remove the subwoofer bolts and nuts.
3. Disconnect the connector and remove the subwoofer.

## INSTALLATION - SUBWOOFER (BOSE SYSTEM)

Installation is in the reverse order of removal.


## Removal and Installation of Bose Speaker Amp. REMOVAL

1. Disconnect the negative battery cable.
2. Remove driver side front seat. Refer to [SE-91, "FRONT SEAT"](#).

EKS00D8G

## AUDIO

3. Using a power tool, remove kick shield screws
4. Disconnect the connectors (1) and remove Bose speaker amp. from kick shield.

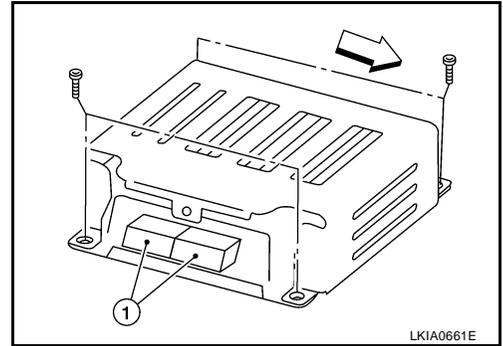

### INSTALLATION


Installation is in the reverse order of removal.

### Removal and Installation of Steering Wheel Audio Control Switches

EKS009UU

#### REMOVAL

1. Remove driver air bag module. Refer to [SRS-44, "Removal and Installation"](#).
2. Remove steering wheel audio control switch assembly screws.
3. Disconnect the switch connector and remove from steering wheel.

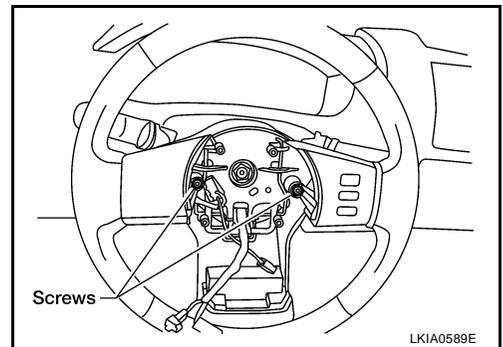

### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# AUDIO ANTENNA

---

## AUDIO ANTENNA

PFP:28200

### System Description

EKS009UV

With the ignition switch in ACC or ON, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10.

Ground is supplied through the case of the antenna amp.

When the audio unit switch is turned ON, antenna signal is supplied

- through audio unit terminal 5
- to the antenna amp. terminal 1.

Then the antenna amp. is activated.


The amplified radio signals are supplied to the audio unit through the antenna amp.

# AUDIO ANTENNA

## Wiring Diagram — W/ANT —



EKS009UW

### AV-W/ANT-01

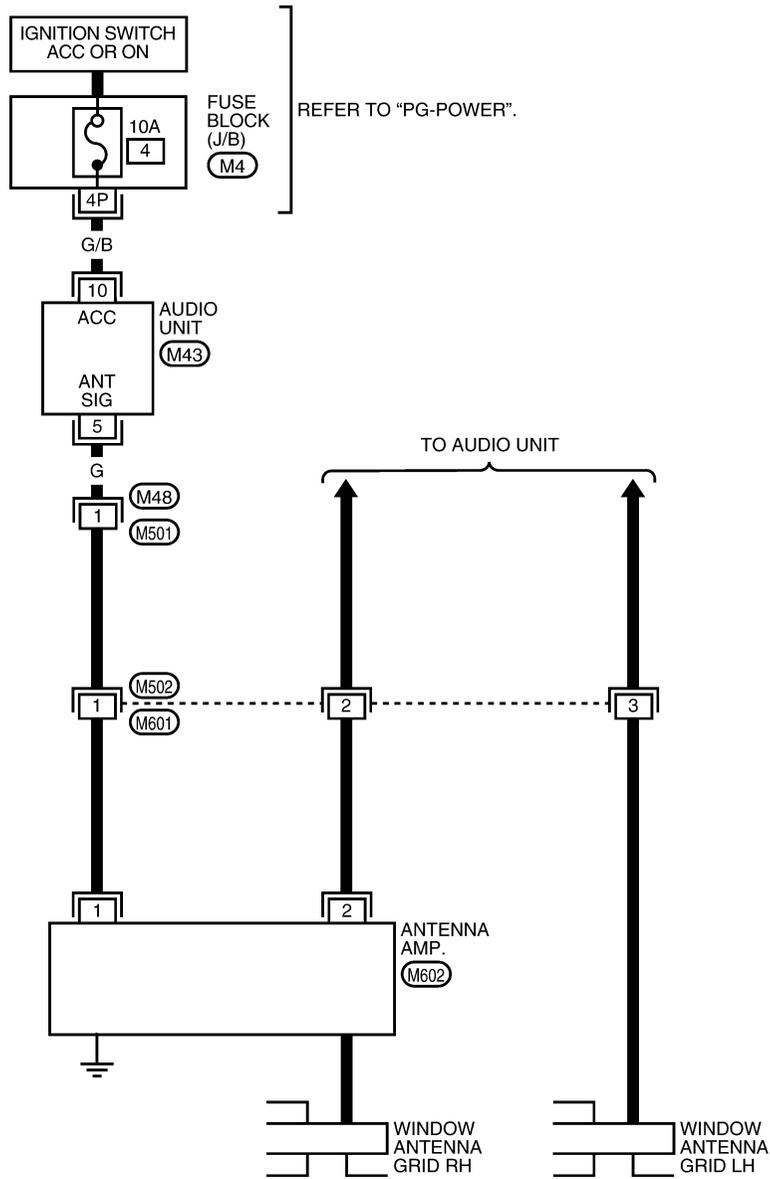

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV




\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA1999E

# AUDIO ANTENNA

## Location of Antenna

EKS009UX

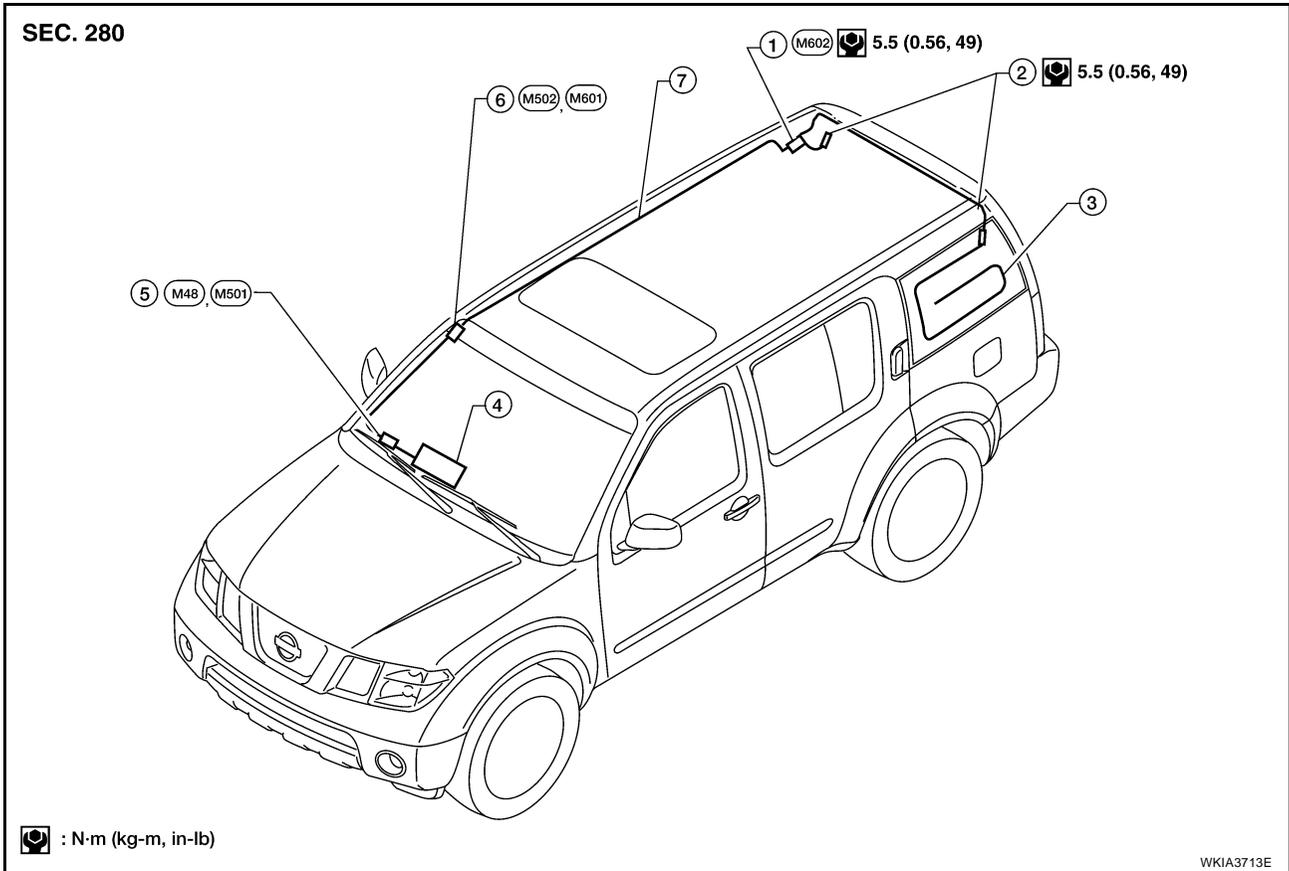


- |                      |  |                        |
|----------------------|--|------------------------|
| 1. Antenna amplifier | 2. Window antenna grid connector bracket | 3. Window antenna grid |
| 4. Audio unit        | 5. Harness connector                     | 6. Harness connector   |
| 7. Antenna feeder    |  |                        |


## Window Antenna Repair ELEMENT CHECK

EKS009UY

1. Attach probe circuit tester (ohm setting) to antenna terminal on each side.

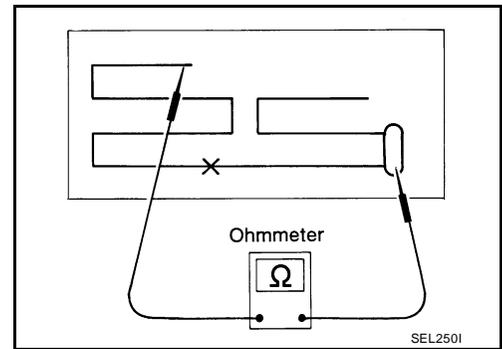


- When measuring continuity, wrap tin foil around the top of probe. Then, press the foil against the wire with your finger.

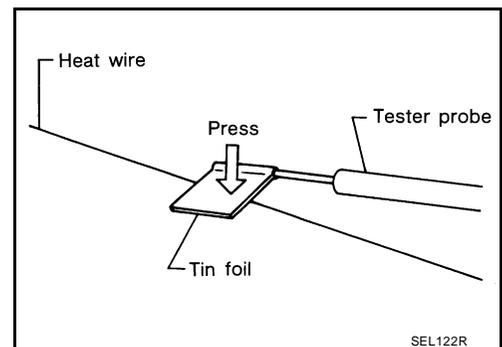


# AUDIO ANTENNA

2. If an element is broken, no continuity will exist.

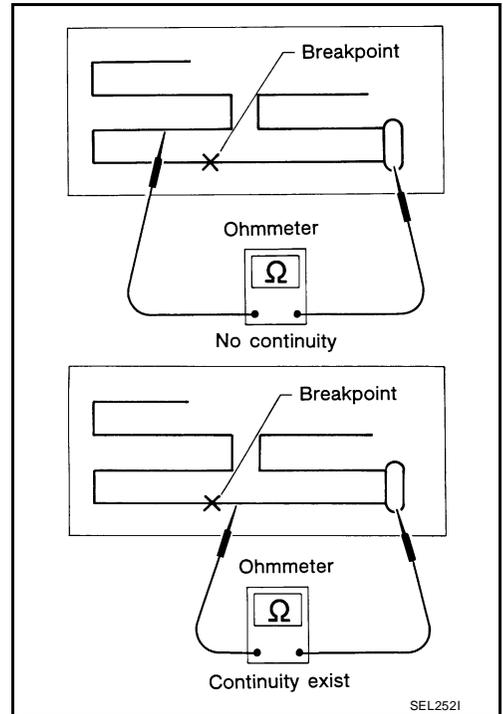

3. To locate a break, move probe along element. Tester indication will change abruptly when probe passes the broken point.

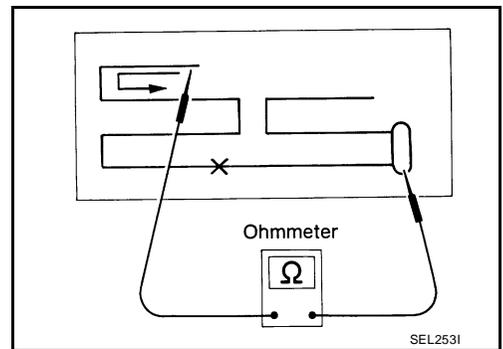

## ELEMENT REPAIR

Refer to [GW-90, "Filament Repair"](#) .

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M


# DVD ENTERTAINMENT SYSTEM

## DVD ENTERTAINMENT SYSTEM

PFP:28184

### Component Parts and Harness Connector Location

EKS009UZ

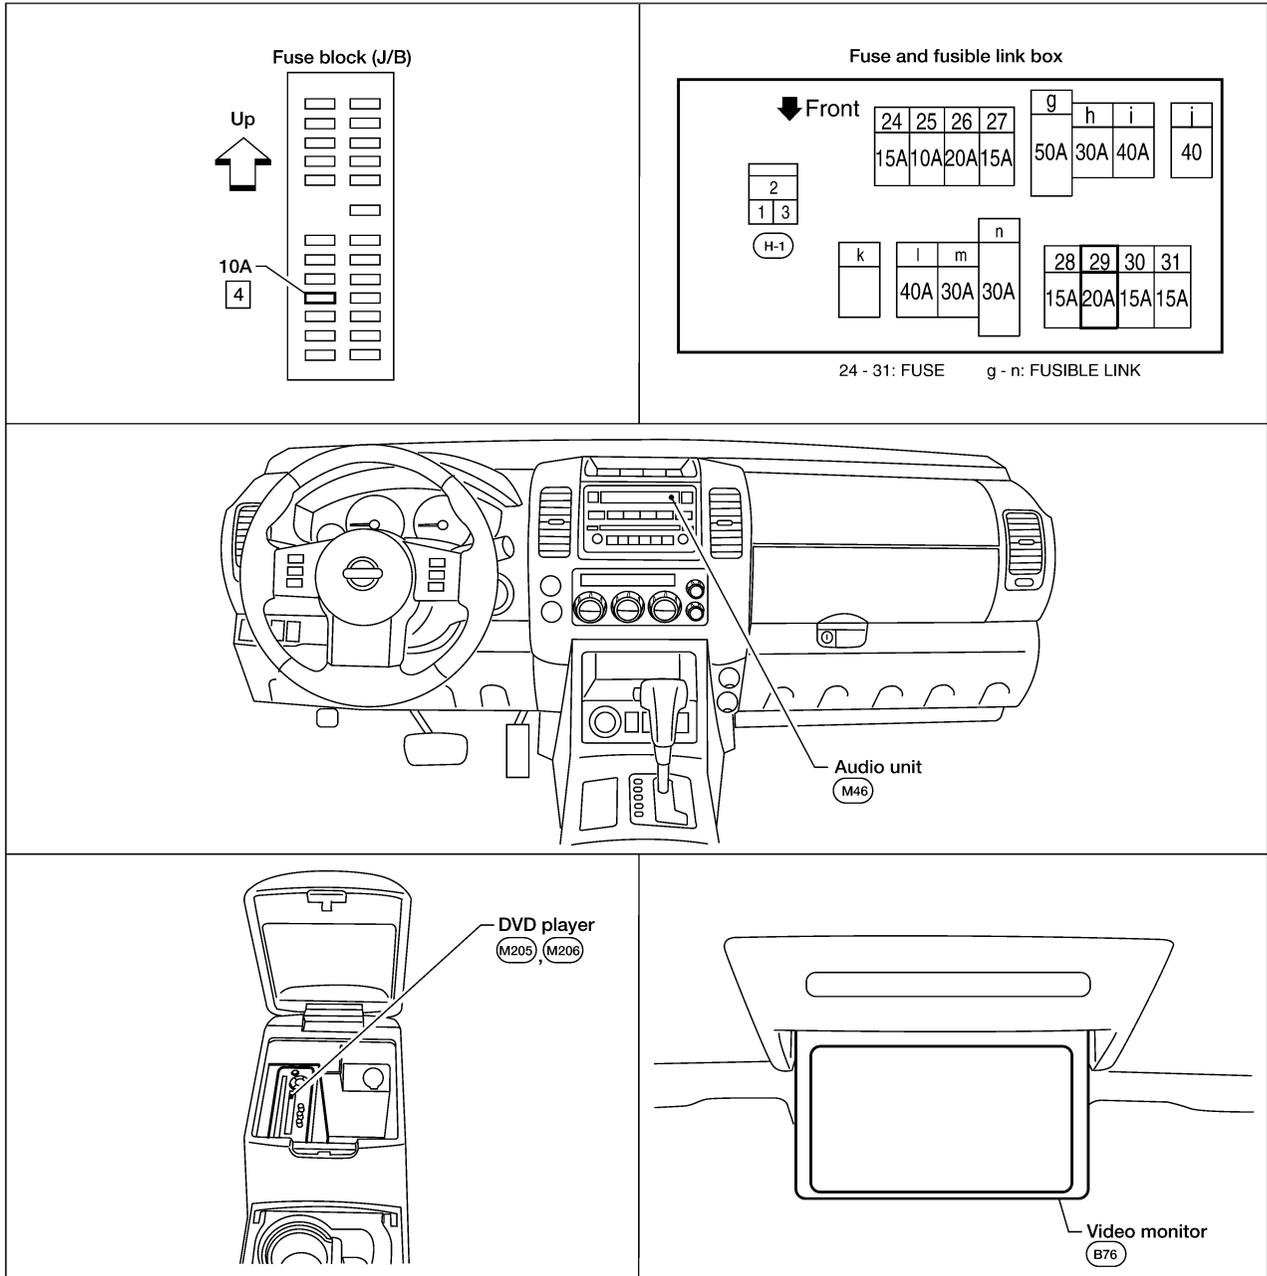

WKIA4128E

# DVD ENTERTAINMENT SYSTEM

## System Description

EKS009V0

Refer to Owner's Manual for DVD entertainment system operating instructions.

Power is supplied at all times

- through 20A fuse (No. 29, located in the fuse and fusible link box)
- to DVD player terminal 16.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to DVD player terminal 15.

Power is also supplied

- from DVD player terminals 31 (early production) and 32
- to video monitor terminals 15 (early production) and 16.

Ground is supplied

- to DVD player terminal 22
- through body grounds B7 and B19.

Audio signals are supplied

- through DVD player terminals 1, 2, 3 and 4
- to audio unit terminals 34, 35, 36 and 37.

Video signals are supplied

- through DVD player terminals 23, 24, 29 and 30
- to video monitor terminals 7, 8, 13 and 14.

A

B

C

D

E

F

G

H

I

J

AV


L

M

# DVD ENTERTAINMENT SYSTEM

## Schematic

EKS009V1

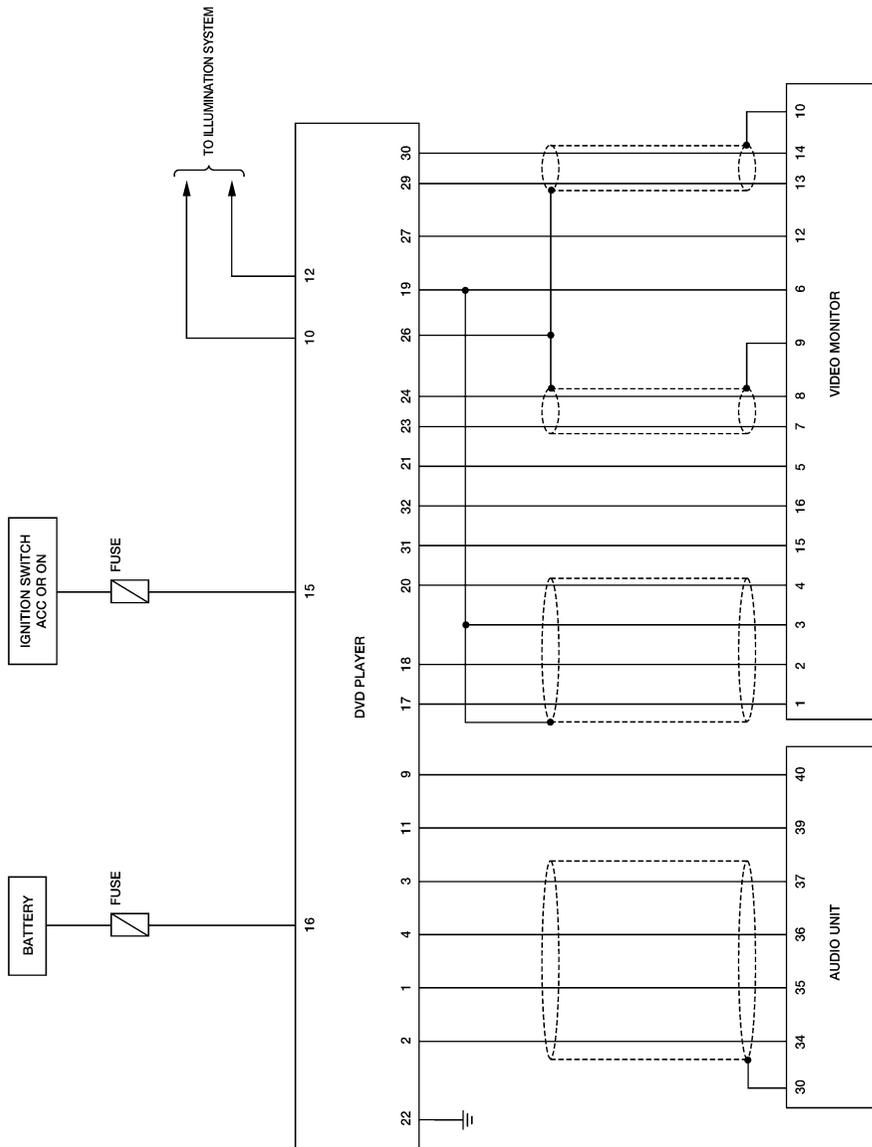



WKWA3037E

# DVD ENTERTAINMENT SYSTEM

## Wiring Diagram — DVD —

EKS009V2

AV-DVD-01


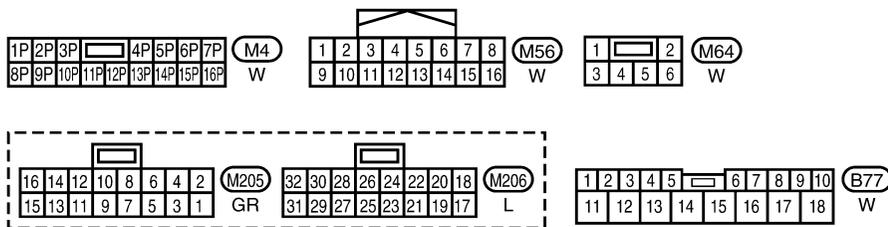
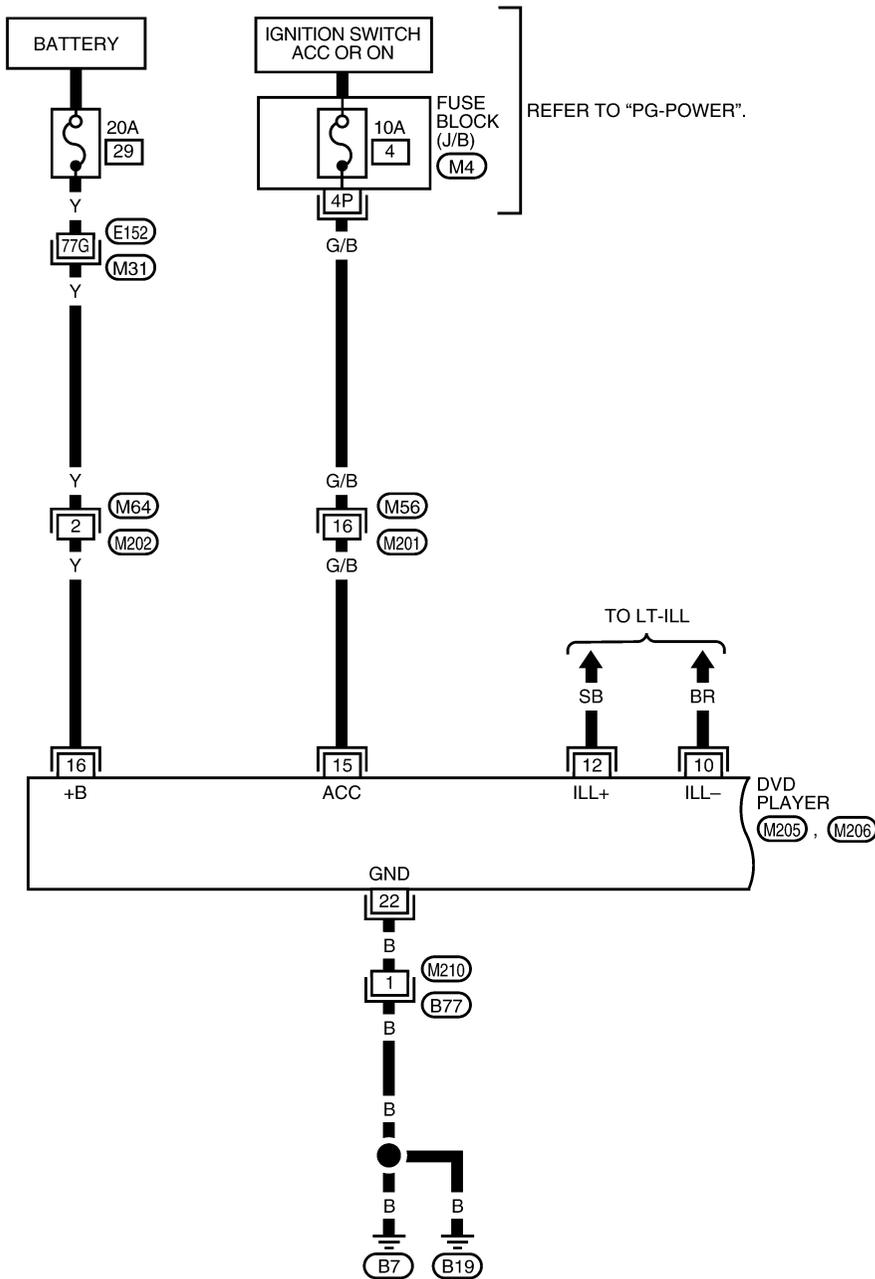


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2001E

# DVD ENTERTAINMENT SYSTEM

AV-DVD-02


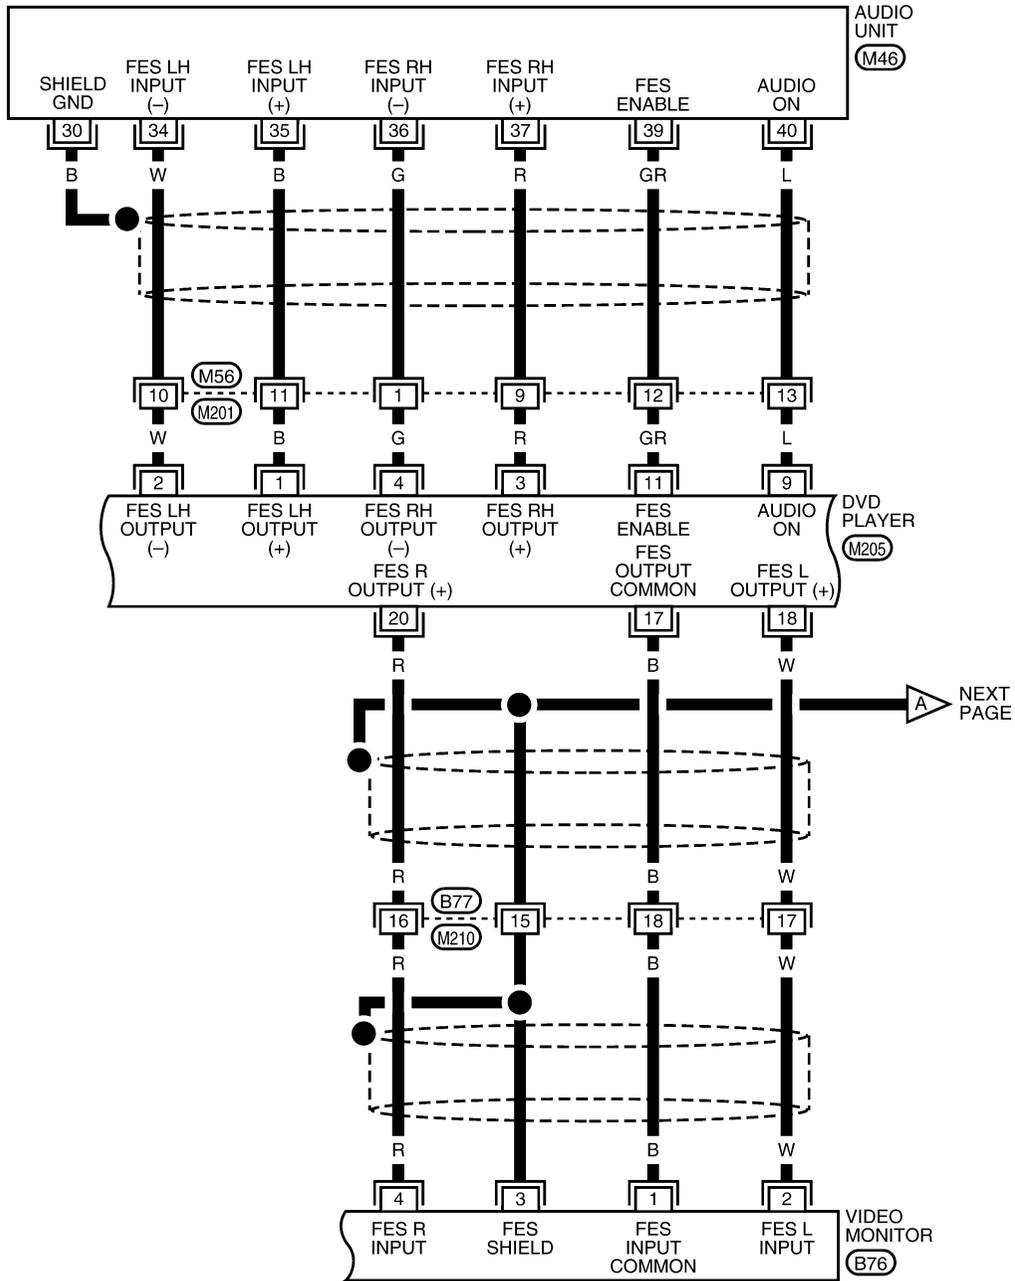


WKWA2002E

# DVD ENTERTAINMENT SYSTEM

AV-DVD-03

— : DATA LINE  
 ◊EP◊ : EARLY PRODUCTION

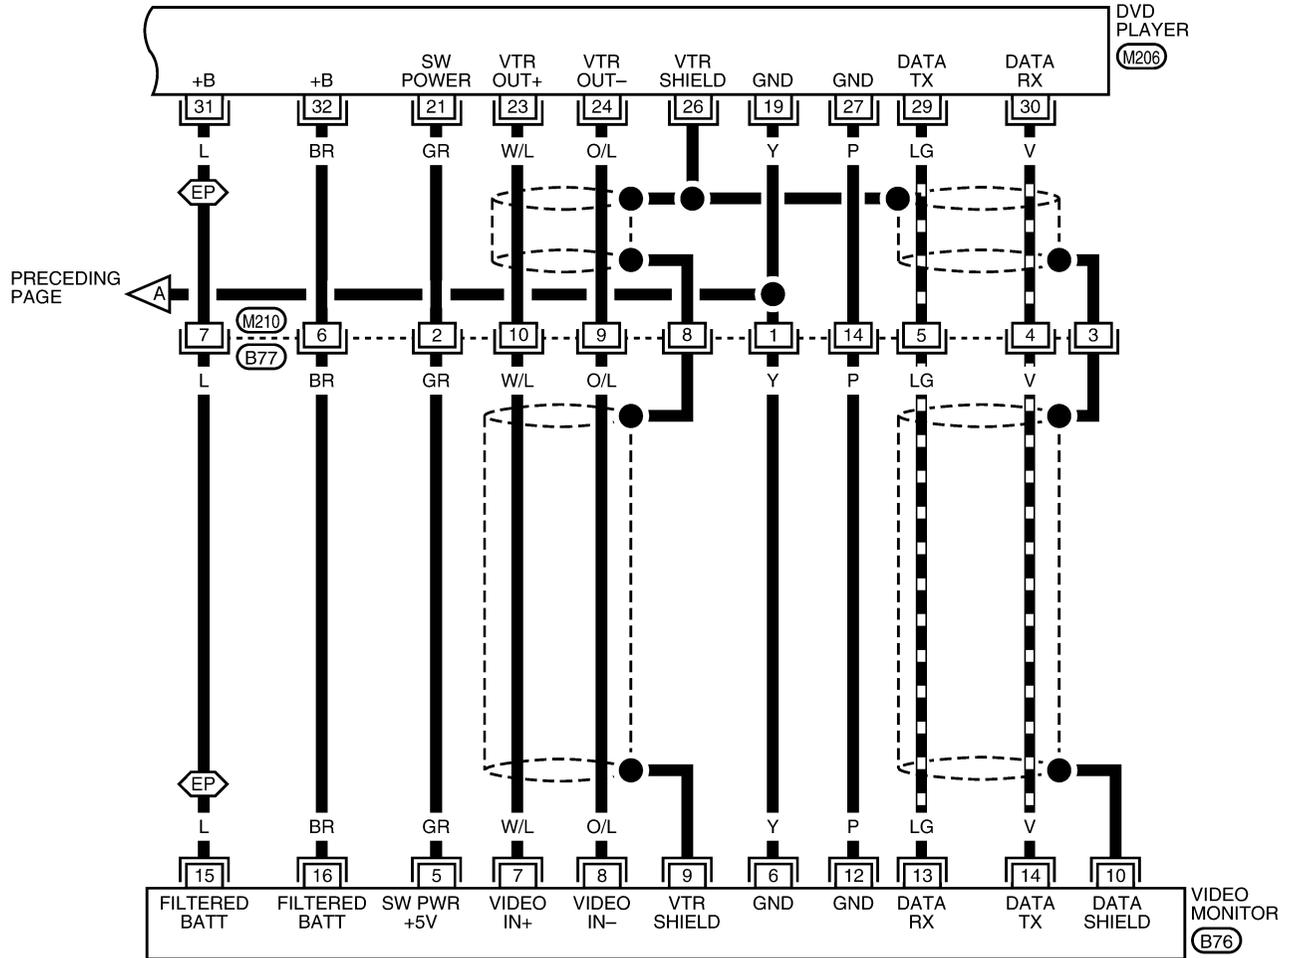

WKWA4334E

# DVD ENTERTAINMENT SYSTEM

## Trouble Diagnosis

EKS009V3

Symptom	Possible causes	Repair order
DVD player inoperative	<ol style="list-style-type: none"> <li>1. Power supply</li> <li>2. Ground circuit</li> <li>3. Audio enable circuit</li> <li>4. DVD enable signal</li> <li>5. Audio enable signal</li> <li>6. DVD player</li> <li>7. Audio unit</li> </ol>	<ol style="list-style-type: none"> <li>1. Refer to <a href="#">AV-67, "Power Supply Circuit Inspection"</a> .</li> <li>2. Refer to <a href="#">AV-67, "Power Supply Circuit Inspection"</a> .</li> <li>3. Check audio enable circuits for open or short between audio unit terminals 39, 40 and DVD player terminals 11, 9.</li> <li>4. Push power switch of DVD player and verify approx. 5V is present at terminal 39 of audio unit.</li> <li>5. Push power switch of DVD player and verify approx. 5V is present at terminal 9 of DVD player.</li> <li>6. Remove DVD player for repair.</li> <li>7. Remove audio unit for repair.</li> </ol>
No sound when playing DVD	<ol style="list-style-type: none"> <li>1. Audio signal circuits</li> <li>2. DVD player</li> <li>3. Audio unit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check audio signal circuits for open or short between DVD player terminals 1, 2, 3 and 4 and audio unit terminals 34, 35, 36 and 37.</li> <li>2. Remove DVD player for repair.</li> <li>3. Remove audio unit for repair.</li> </ol>
Video monitor is inoperative/does not operate properly	<ol style="list-style-type: none"> <li>1. Power supply</li> <li>2. Video monitor ground circuit</li> <li>3. Video circuits</li> <li>4. Data signal</li> <li>5. Video monitor</li> <li>6. DVD player</li> </ol>	<ol style="list-style-type: none"> <li>1. Operate DVD player and verify battery positive voltage is present at terminal 16 of video monitor. Verify approximately 5 volts is present at terminal 5 of video monitor.</li> <li>2. Check video monitor ground circuits between DVD player terminals 19 and 27 and video monitor terminals 6 and 12.</li> <li>3. Check video circuits between DVD player terminals 23 and 24 and video monitor terminals 7 and 8.</li> <li>4. Check data signal circuit for open or short between DVD player terminal 29 and video monitor terminal 13.</li> <li>5. Remove video monitor for repair.</li> <li>6. Remove DVD player for repair.</li> </ol>
DVD remote control is inoperative/does not operate properly	<ol style="list-style-type: none"> <li>1. Data signal</li> <li>2. DVD player remote control batteries</li> <li>3. DVD player remote control</li> <li>4. Video monitor</li> </ol>	<ol style="list-style-type: none"> <li>1. Check data signal circuit for open or short between DVD player terminal 30 and video monitor terminal 14.</li> <li>2. Replace DVD player remote control batteries.</li> <li>3. Replace DVD player remote control.</li> <li>4. Remove video monitor for repair.</li> </ol>
Headphones inoperative	<ol style="list-style-type: none"> <li>1. Headphone batteries</li> <li>2. Headphones</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace headphone batteries.</li> <li>2. Replace headphones.</li> </ol>
Snowy video/poor audio	<ol style="list-style-type: none"> <li>1. Harness or connectors</li> <li>2. DVD player</li> </ol>	<ol style="list-style-type: none"> <li>1. Check harness and connectors for open or short.</li> <li>2. Check DVD player.</li> </ol>
Snowy video (audio OK)	<ol style="list-style-type: none"> <li>1. Harness or connectors</li> <li>2. DVD player</li> </ol>	<ol style="list-style-type: none"> <li>1. Check harness and connectors for open or short.</li> <li>2. Check DVD player.</li> </ol>
No video (audio OK)	<ol style="list-style-type: none"> <li>1. Harness or connectors</li> <li>2. DVD player</li> <li>3. Video monitor</li> </ol>	<ol style="list-style-type: none"> <li>1. Check harness and connectors for open or short.</li> <li>2. Check DVD player.</li> <li>3. Check video monitor.</li> </ol>
Dim video (audio OK)	<ol style="list-style-type: none"> <li>1. Harness or connectors</li> <li>2. DVD player</li> <li>3. Video monitor</li> </ol>	<ol style="list-style-type: none"> <li>1. Check harness and connectors for open or short.</li> <li>2. Check DVD player.</li> <li>3. Check video monitor.</li> </ol>

# DVD ENTERTAINMENT SYSTEM

EKS009V4

## Power Supply Circuit Inspection

### 1. CHECK FUSES

Check that the following fuses are not blown.

Unit	Terminals	Signal name	Fuse No.
DVD player	16	Battery power	29
	15	Ignition switch ACC or ON	4

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect DVD player connector M205.
2. Check voltage between the DVD player and ground.

Unit	Terminal No.			OFF	ACC	ON
	(+)		(-)			
	Connector	Terminal				
DVD player	M205	16	Ground	Battery voltage	Battery voltage	Battery voltage
		15	Ground	0V	Battery voltage	Battery voltage

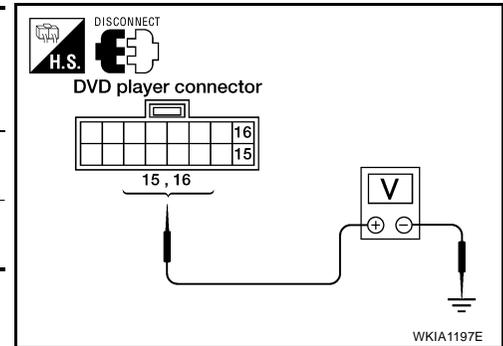

OK or NG

OK >> GO TO 3.

NG >> ● Check connector housings for disconnected or loose terminals.  
● Repair harness or connector.

### 3. GROUND CIRCUIT CHECK


Check continuity between DVD player harness connector M206 terminal 22 and ground.

**Continuity should exist.**

OK or NG

OK >> Inspection End.

NG >> ● Check connector housings for disconnected or loose terminals.  
● Repair harness or connector.

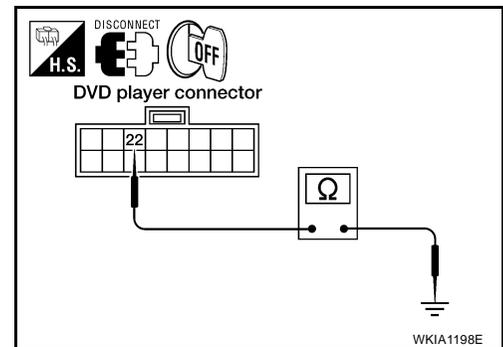


# DVD ENTERTAINMENT SYSTEM

## Removal and Installation of DVD Player

EKS009V5

### REMOVAL

1. Remove the center console assembly. Refer to [IP-16, "Center Console"](#) .
2. Remove the DVD player screws.
3. Disconnect the DVD player connectors, then remove from the center console assembly.

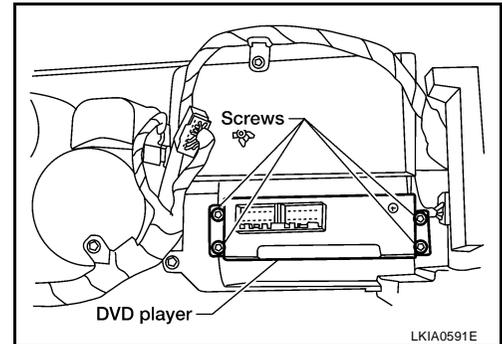

### INSTALLATION


Installation is in reverse order of removal.

## Removal and Installation of Video Monitor

EKS009V6

### REMOVAL

1. Release the clips and remove the finisher from the video monitor.
2. Press the release tabs and remove the cover.
3. Remove the video monitor screws.
4. Gently lower the assembly and disconnect the connector, then remove the video monitor from the headlining.

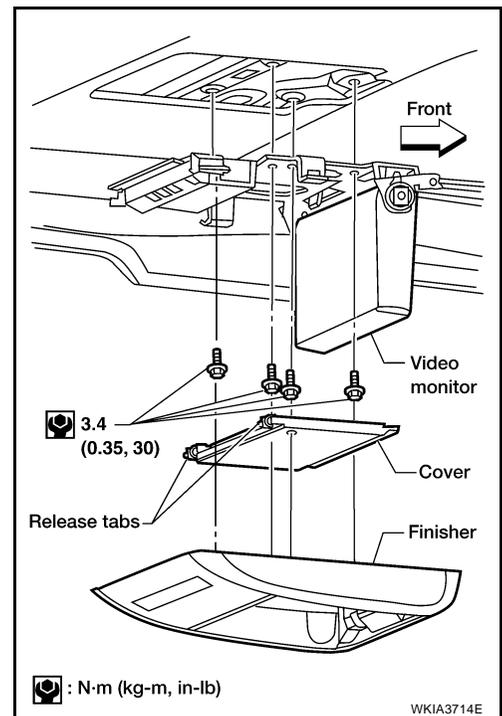

### INSTALLATION

Installation is in reverse order of removal.

## NAVIGATION SYSTEM


PFP:25915

### System Description

EKS009V7


The navigation system periodically calculates the vehicle's current position according to the following three signals: Travel distance of the vehicle as determined by the vehicle speed sensor, turning angle of the vehicle as determined by the gyroscope (angular velocity sensor), and the direction of vehicle travel as determined by the GPS antenna (GPS information).

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data read from the map DVD-ROM, which is stored in the DVD-ROM drive (map-matching), and indicated on the screen with a current-location mark.

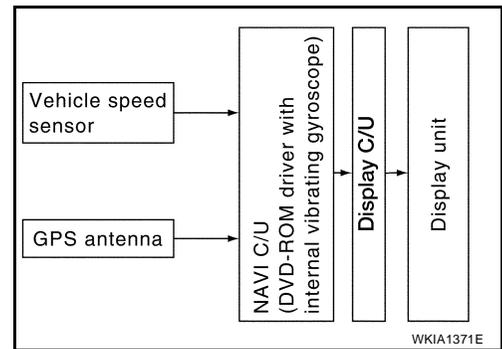

By comparing the vehicle position detection results found by the GPS and by map-matching, more accurate vehicle position data can be used.

The current vehicle position will be calculated by detecting the distance the vehicle moved from the previous calculation point and its direction.

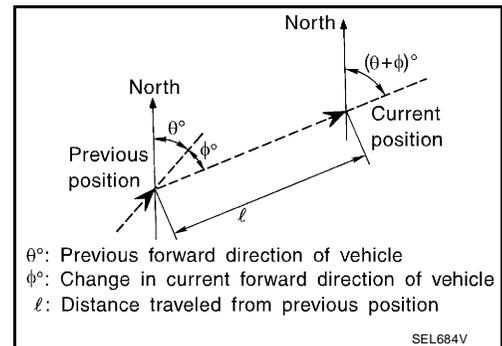

### TRAVEL DISTANCE

Travel distance calculations are based on the vehicle speed sensor input signal. Therefore, the calculation may become incorrect as the tires wear down. To prevent this, an automatic distance fine adjustment function has been adopted. Adjustments can be made in extreme cases such as driving with tire chain fitted on tires.

### TRAVEL DIRECTION

Change in the travel direction of the vehicle is calculated by a gyroscope (angular velocity sensor) and a GPS antenna (GPS information). As the gyroscope and GPS antenna have both merit and demerit, input signals from them are prioritized in each situation. However, this order of priority may change in accordance with more detailed travel conditions so that the travel direction is detected more accurately.

Type	Advantage	Disadvantage
Gyroscope (angular velocity sensor)	<ul style="list-style-type: none"> <li>Can detect the vehicle's turning angle quite accurately.</li> </ul>	<ul style="list-style-type: none"> <li>Direction errors may accumulate when the vehicle is driven for long distances without stopping.</li> </ul>
GPS antenna (GPS information)	<ul style="list-style-type: none"> <li>Can detect the vehicle's travel direction (North/South/East/West).</li> </ul>	<ul style="list-style-type: none"> <li>Correct direction cannot be detected when the vehicle speed is low.</li> </ul>


### MAP-MATCHING

Map-matching is a function that repositions the vehicle on the road map when a new location is judged to be the most accurate. This is done by comparing the current vehicle position, calculated by the method described in the position detection principle, with the road map data around the vehicle, read from the map DVD-ROM stored in the DVD-ROM drive.

Therefore, the vehicle position may not be corrected after the vehicle is driven over a certain distance or time in which GPS information is hard to receive. In this case, the current-location mark on the display must be corrected manually.


#### CAUTION:

The road map data is based on data stored in the map DVD-ROM.

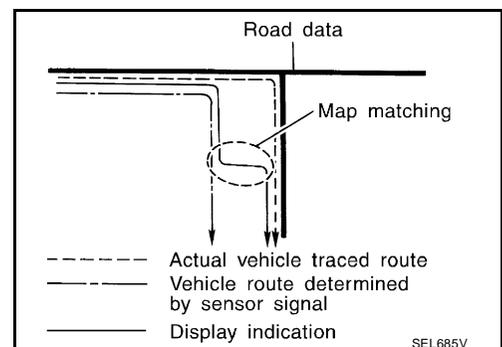


# NAVIGATION SYSTEM

- In map-matching, alternative routes to reach the destination will be shown and prioritized, after the road on which the vehicle is currently driven has been judged and the current-location mark has been repositioned.  
If there is an error in distance and/or direction, the alternative routes will be shown in different order of priority, and the wrong road can be avoided.  
If two roads are running in parallel, they are of the same priority. Therefore, the current-location mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road.

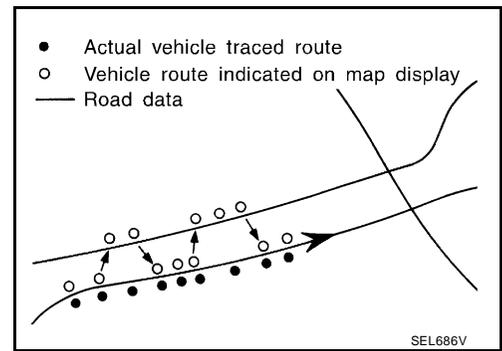


- Map-matching does not function correctly when the road on which the vehicle is driving is new and not recorded in the map DVD-ROM, or when the road pattern stored in the map data and the actual road pattern are different due to repair.  
When driving on a road not present in the map, the map-matching function may find another road and position the current-location mark on it. Then, when the correct road is detected, the current-location mark may leap to it.
- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data read from the map DVD-ROM is limited. Therefore, when there is an excessive gap between the current vehicle position and the position on the map, correction by map-matching is not possible.

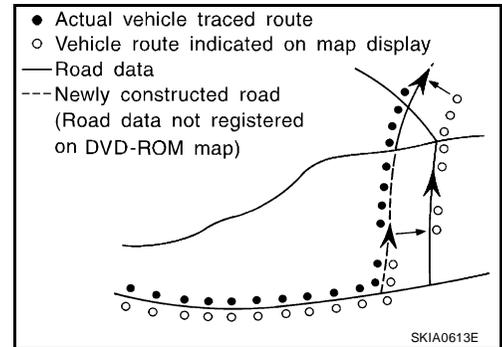

## GPS (GLOBAL POSITIONING SYSTEM)

GPS (Global Positioning System) has been developed and controlled by the US Department of Defense. The system utilizes GPS satellite (NAVSTAR), sending out radio waves while flying on an orbit around the earth at the height of approx. 21,000 km (13,000 miles). The GPS receiver calculates the vehicle's position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves received from four or more GPS satellites (three-dimensional positioning). If radio waves were received only from three GPS satellites, the GPS receiver calculates the vehicle's position in two dimensions (latitude/longitude), utilizing the altitude data calculated previously by using radio waves from four or more GPS satellites (two-dimensional positioning).

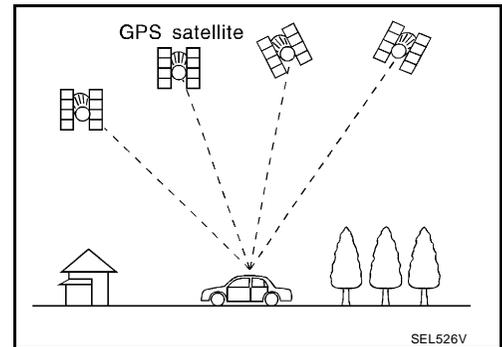

Accuracy of the GPS will deteriorate under the following conditions.


- In two-dimensional positioning, the GPS accuracy will deteriorate when the altitude of the vehicle position changes.
- There may be an error of approximately 10 m (30 ft) in position detected by three-dimensional positioning, which is more accurate than two-dimensional positioning. The accuracy can be even lower depending on the arrangement of the GPS satellites utilized for the positioning.
- Position detection is not possible when the vehicle is in an area where radio waves from the GPS satellite do not reach, such as in a tunnel, parking lot in a building, and under an elevated highway. Radio waves from the GPS satellites may not be received when some object is located over the GPS antenna.
- Position correction by GPS is not available while the vehicle is stopped.

# NAVIGATION SYSTEM

## COMPONENT DESCRIPTION


### NAVI Control Unit

- The gyro (angular speed sensor) and the DVD-ROM drive are built-in units that control the navigation functions.
- Signals are received from the gyro, the vehicle speed sensor, and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the DVD-ROM map. Location information is shown on liquid crystal display (display unit).

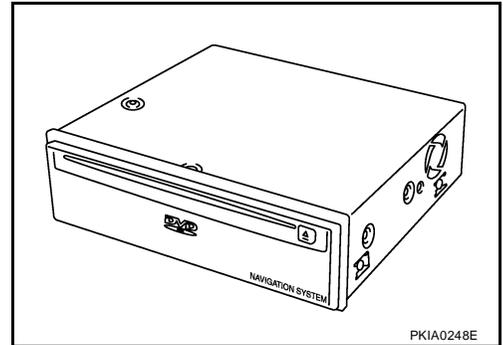

### DVD-ROM Drive

Maps, traffic control regulations, and other pertinent information can be easily read from the DVD-ROM disc.

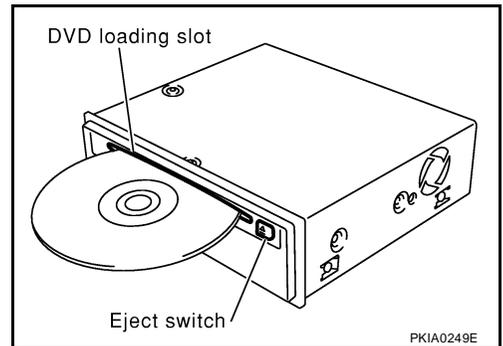

### Map DVD-ROM

- The map DVD-ROM has maps, traffic control regulations, and other pertinent information.
- To improve DVD-ROM map matching and route determination functions, the DVD-ROM uses an exclusive Nissan format. Therefore, the use of a DVD-ROM provided by other manufacturers cannot be used.


### Gyro (Angular Speed Sensor)

- The oscillator gyro sensor is used to detect changes in vehicle steering angle.
- The gyro is built into the navigation (NAVI) control unit.

### BIRDVIEW™

The BIRDVIEW™ provides a detailed and easily seen display of road conditions covering the vehicle's immediate to distant area.


- PLAN VIEW

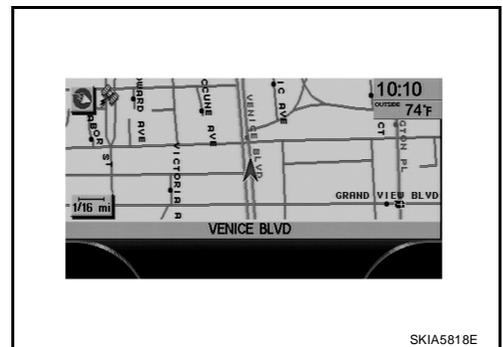

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M


# NAVIGATION SYSTEM

- BIRDVIEW™

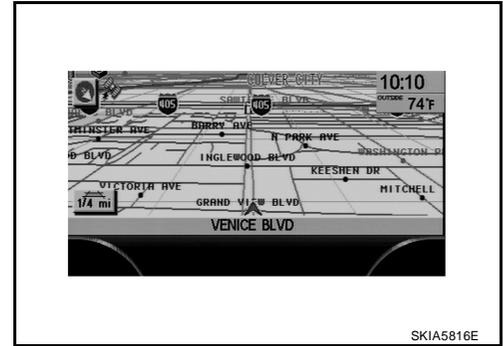

## Description


- Display area: Trapezoidal representation showing approximate distances ( $W_n$ ,  $D$ , and  $W_d$ ).
- Ten horizontal grid lines indicate display width while six vertical grid lines indicate display depth and direction.
- Pushing the “ZOOM IN” button during operation displays the scale change and the view point height on the left side of the screen.  
The height of the view point increases or decreases when “ZOOM” or “WIDE” is selected with the joystick.

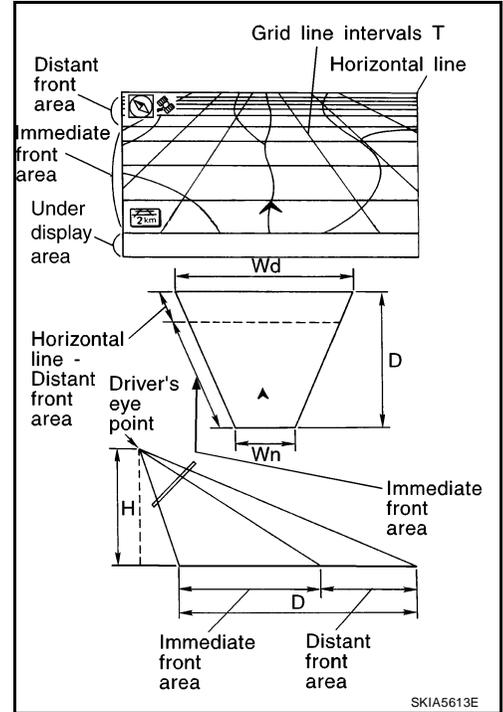

## MAP DISPLAY

Function of each icon is as follows:

1. Azimuth indication.
2. Position marker.
  - The tip of the arrow shows the current location. The shaft of the arrow indicates the direction in which the vehicle is traveling.
3. GPS reception signal (indicates current reception conditions).
4. Distance display (shows the distance in a reduced scale).

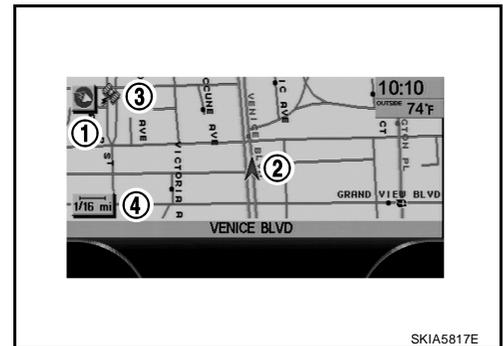


# NAVIGATION SYSTEM


## FUNCTION OF CENTER SWITCH

### Display with Pushed "DEST" button

- Easy Mode ("Short Menus" ON)

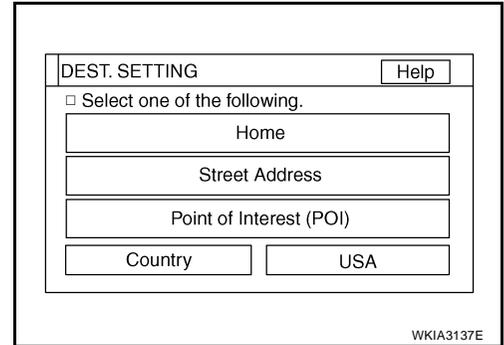

- Expert Mode ("Short Menus" OFF)

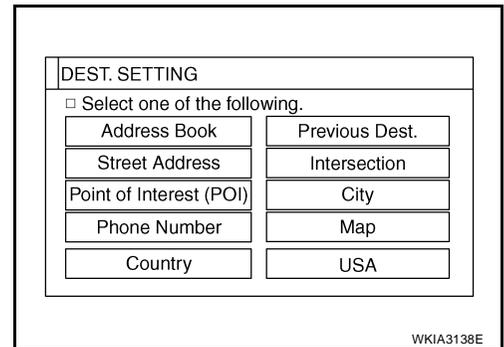


### The function of each icon is as follows:

Icon	Mode		Description
	Easy	Expert	
Address Book		×	Favorite place can be saved to memory.
Street Address	×	×	The destination can be searched from the address.
Point of Interest (POI)	×	×	The destination of favorite facility can be searched.
Previous Dest.		×	The previous ten destinations stored in memory are displayed.
Intersection		×	The destination can be searched from the intersection.
City		×	The destination can be searched from city name.
Map		×	The destination can be searched from the map.
Phone Number		×	The destination can be set by entering the phone number.
Home	×		Sets the home as a destination.
Help	×		Explanation of navigational functions appear on the display.
Country	×	×	Select country (USA, CANADA)


# NAVIGATION SYSTEM

## Display with Pushed "ROUTE" button

- Easy Mode ("Short Menu" ON)

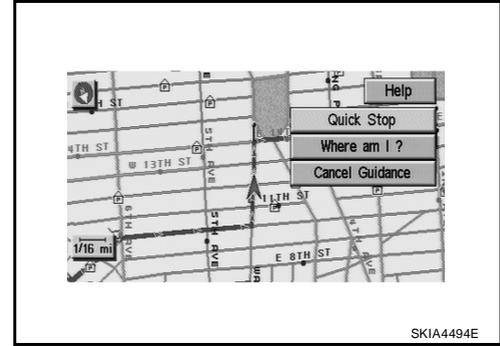

- Expert Mode ("Short Menu" OFF)

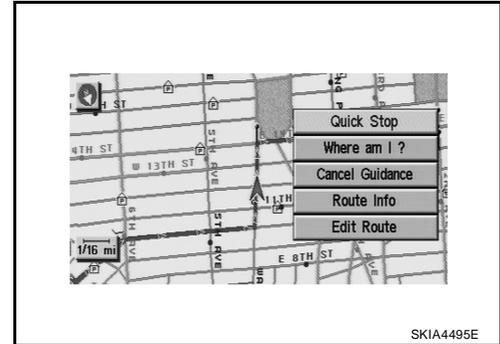

## The function of each icon is as follows:


Icon	Mode		Description
	Easy	Expert	
Quick Stop	×	×	The selected facility is set as the destination or way point. (Route guidance has been turned OFF or the destination has been reached.)
Where am I?	×	×	Next, current and previous street names can be displayed.
Cancel Guidance	×	×	The following items can be selected. <ul style="list-style-type: none"> <li>● All Destinations</li> <li>● Way point</li> <li>● Not Cancel</li> </ul> (Displayed only when the destination area has been set.)
Route Info.*		×	The following items can be selected. <ul style="list-style-type: none"> <li>● Complete Route</li> <li>● Turn List</li> <li>● Route Simulation</li> </ul> (Displayed only when the destination area has been set.)
Edit Route*		×	Change the destination or add the transit points of the route set in the route guide. (Displayed only when the automatic reroute function has been turned OFF and the recommended route is not followed.)
Help	×		Explanation of navigational functions appear on the display.

\*: When in Easy Mode, "Route Info." and "Edit Route" are not displayed.

# NAVIGATION SYSTEM

## Display with Pushed “SETTING” button

The function of each icon is as follows:

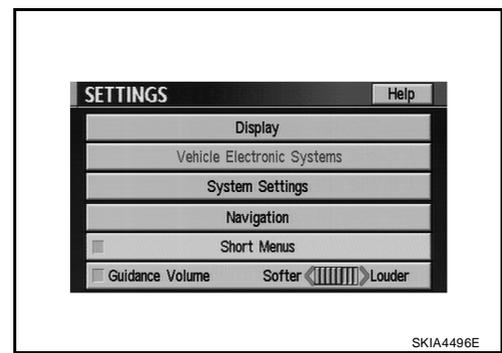


Icon	Description
Display	Settings of display can be performed.
Vehicle Electronic Systems	Settings of vehicle electrical equipment can be performed.
System Settings	Settings of linguistic select, time adjusting and beep sound can be performed.
Navigation	Settings and adjusting of navigation can be performed.
Short Menus	Easy Mode and Expert Mode can be switched.
Guidance Volume	The volume and/or on/off of voice prompt can be controlled by the joystick.
Help (only easy mode)	Explanation of navigational functions appear on the display.

## Display Settings

How To Perform Display Setting

1. Start the engine.
2. Push “SETTING” button.
3. Select “Display” with "ENTER" button.

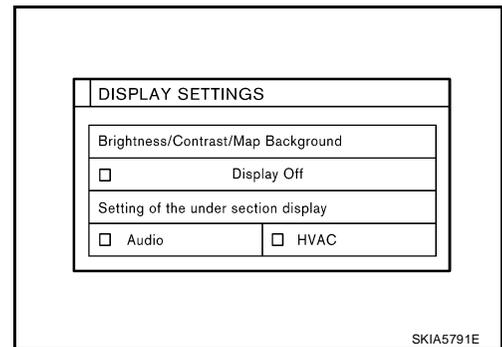

## Application Items

Icon	Description	Reference page
Brightness/Contrast/Map Background	Brightness, Contrast and Map Background can be set.	<a href="#">AV-75</a>
Display Off	Display sleep mode ON/OFF can be switched.	<a href="#">AV-75</a>
Setting of the under section display	The setting status of A/C or AV can be shown.	<a href="#">AV-76</a>

## Brightness/Contrast/Map Back ground

How To Perform Navigation Setting

1. Select “Brightness/Contrast/Map Background”.
  - Brightness, Contrast and Background are shown at the lower part of the screen, and it can be set with the joystick.

## Display Off

How To Perform Navigation Setting

1. Select “Display Off”.
  - When setting is turned on (Indicator light ON), the display will be under sleep mode.


# NAVIGATION SYSTEM

## Setting of the under section display

How To Perform Under Section Display Setting

1. Select "Setting of the Under Section Display".
  - The setting status that is selected from A/C or AV is shown at the lower part of the screen.

## Vehicle Electronic Systems

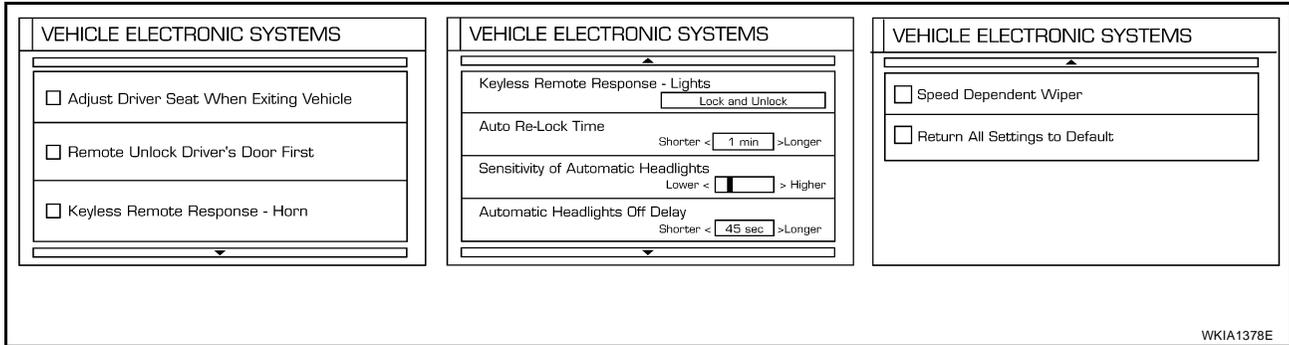

## Application Items

Icon	Description
Adjust Driver Seat When Exiting Vehicle	The driver's seat automatically moves back and returns to the original position.
Remote Unlock Driver's Door First	This option allows selection of which doors will unlock first during an unlocking operation.
Keyless Remote Response — Horn	This option allows the horn chirp mode when pressing the LOCK or UNLOCK button on the key fob to be changed.
Keyless Remote Response — Lights	This option allows the hazard flash mode when pressing the LOCK or UNLOCK button on the key fob to be changed.
Auto Re-Lock Time	This option allows the length of time before doors auto re-lock to be set.
Sensitivity of Automatic Headlights	This option allows the sensitivity of the autolights to be set.
Automatic Headlights Off Delay	This option allows the length of time before the autolights turn off to be set.
Speed Dependent Wiper	This option allows the driving speed dependent wiper function to be turned on or off.
Return All Settings Default	All settings will return to the initial conditions.


How To Perform Navigation Setting

1. Start the engine.
2. Push "SETTING" button.
3. Select "Vehicle Electronic Systems".

## System Settings

How To Perform System Setting

1. Start the engine.
2. Push "SETTING" button.
3. Select "System Settings".

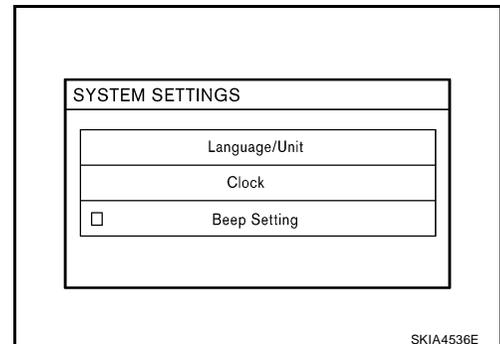

# NAVIGATION SYSTEM


## Application Items

Icon	Description	Reference page
Language/Unit	Settings of language or unit can be performed.	<a href="#">AV-77</a>
Clock	Settings of clock can be performed.	<a href="#">AV-77</a>
Beep Setting	Settings of beep sound can be performed.	<a href="#">AV-77</a>

## Language Setting

How To Perform Language Setting


1. Select "Language/Unit".
  - Language setting can be switched.
  - Unit setting can be changed.

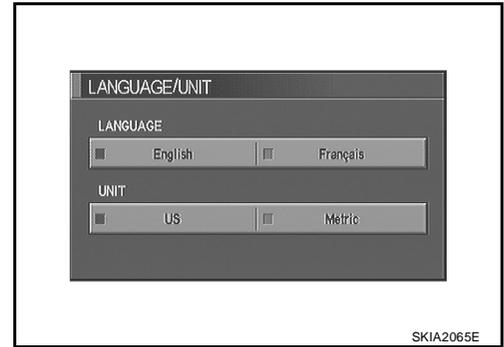

## Clock Settings

How To Perform Clock Setting

1. Select "Clock".
  - Select the "Hours" or "Minutes" key and tilt the joystick to the right or left to adjust the time.
  - Turn ON and OFF daylight saving time.
  - Select the "Auto Adjust" key. The time will be reset to the GPS time.
  - Select the "Select Time Zone" key. The [TIME ZONE] screen will appear.

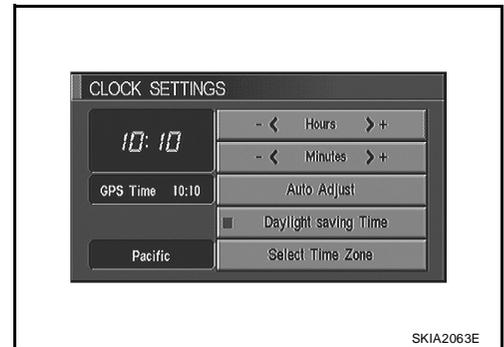

## Beep Setting


How To Perform Beep Setting

1. Select "Beep Setting".
  - When Beep Setting is on (indicator light on), a beep will sound if the button is pushed.

### NOTE:

Items in exception of Beep Setting ON/OFF.

- An error beep.
- An interrupted-screen beep.

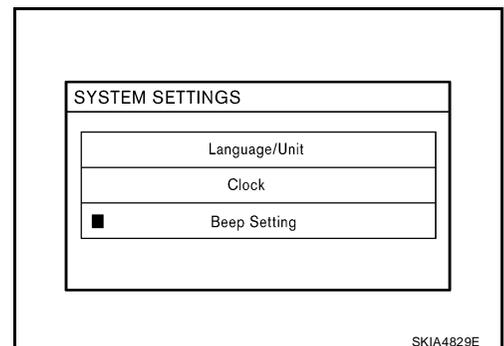


# NAVIGATION SYSTEM

## Navigation Setting

How To Perform Navigation Setting

1. Start the engine.
2. Push "SETTING" button.
3. Select "NAVIGATION".

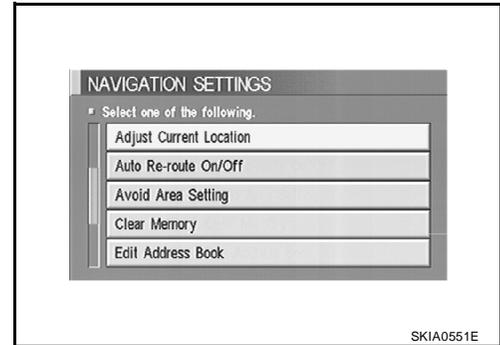


## Application Items

Icon	Description	Reference page
View	Map display mode can be switched.	<a href="#">AV-78</a>
Heading	Heading of the map display can be customized for either north heading or the actual driving direction of the vehicle.	<a href="#">AV-79</a>
Nearby Display Icons*	Icons of facilities can be displayed. Facilities to be displayed can be selected from the variety selections.	<a href="#">AV-79</a>
Save Current Location*	Current vehicle location can be registered in Address Book.	<a href="#">AV-79</a>
Adjust Current Location*	Current location of position marker can be adjusted. Direction of position marker also can be calibrated when heading direction of the vehicle on the display is not matched with the actual direction.	<a href="#">AV-79</a>
Auto Re-route On/Off*	ON/OFF of Auto Re-route can be switched.	<a href="#">AV-80</a>
Avoid Area Setting*	A particular area can be avoided when routing.	<a href="#">AV-80</a>
Clear Memory*	Address Book, Previous destination or Avoid area can be deleted.	<a href="#">AV-80</a>
Edit Address Book*	Address Book can be edited.	<a href="#">AV-81</a>
GPS Information*	The GPS data includes longitude, latitude and altitude (distance above sea level) of the present vehicle position, and current date and time for the area in which the vehicle is being driven. Also indicated are the GPS reception conditions and the GPS satellite position.	<a href="#">AV-81</a>
Quick Stop Customer Setting*	One facility of your selection can be added to your Quick Stop.	<a href="#">AV-81</a>
Set Average Speed for Estimated Journey Time*	Average vehicle speed can be set to calibrate estimated journey time for the destination.	<a href="#">AV-81</a>
Tracking On/Off*	Tracking to the present vehicle position can be displayed.	<a href="#">AV-82</a>

\*: Not displayed in Easy Mode.

## "VIEW" MODE


1. Select "Birdview™" or "Plan View" icon.
  - To open the map screen display with Birdview™, select "Birdview™".
  - To open the map screen display with Plan View, select "Plan View".

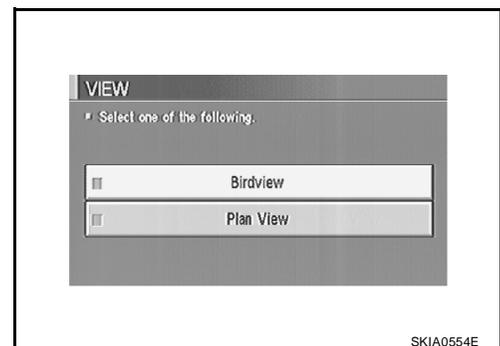

# NAVIGATION SYSTEM

## “HEADING” MODE


- To display North up, select “North up”.
- To display the car heading up, select “Heading up”.

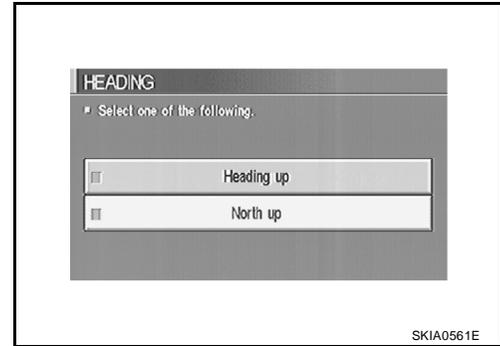

A  
B  
C  
D

## “NEARBY DISPLAY ICONS” MODE

- Select an icon to display on the map screen.

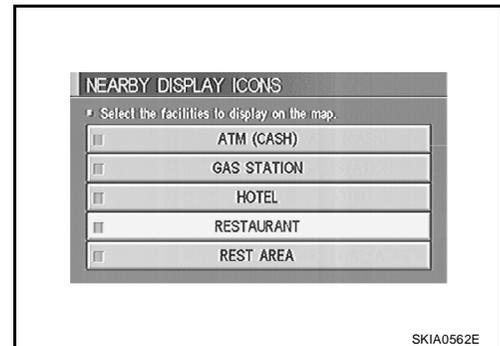


E  
F  
G  
H

## “SAVE CURRENT LOCATION” MODE

- The current vehicle location can be registered in “Address Book”.

**NOTE:**


“Address Book” can store 50 items maximum.

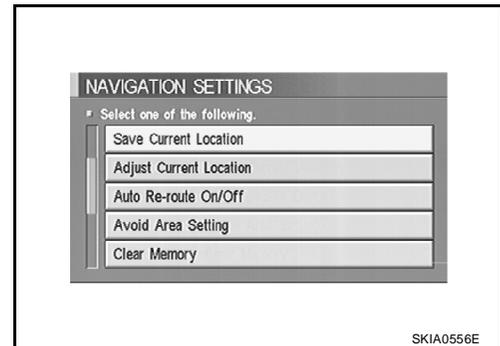

I  
J  
AV  
L

## “ADJUST CURRENT LOCATION” MODE


1. Move marker to current location.
2. Select "SET" and then vehicle mark will be located in current position.
3. Select an icon “right” or “left” to calibrate the heading direction. (Arrow marks will rotate corresponding to the calibration key.)

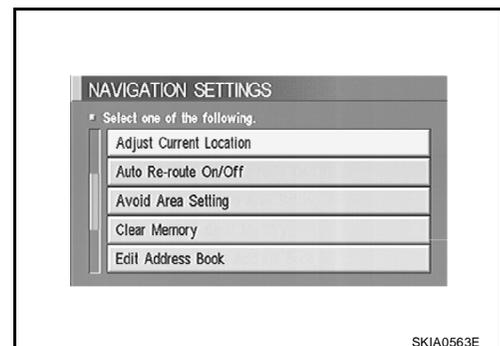

M


# NAVIGATION SYSTEM

4. Select "Set". Then the vehicle mark will be matched to the arrow mark.

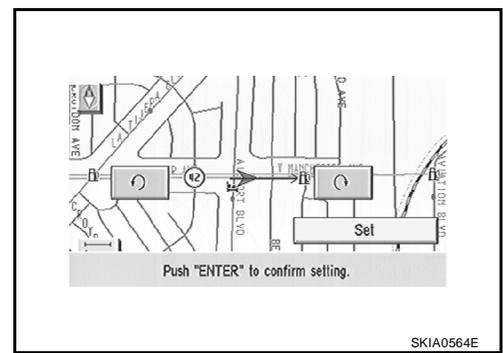


## "AUTO RE-ROUTE" MODE

- To activate "AUTO RE-ROUTE" mode, select "On".
- To deactivate "AUTO RE-ROUTE" mode, select "Off".

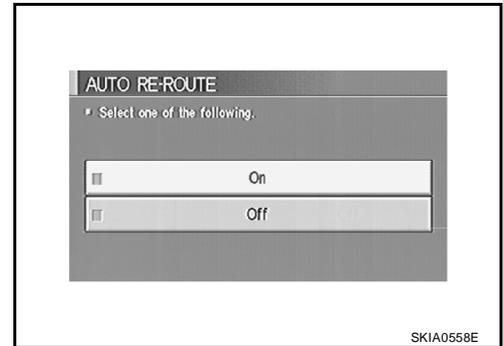


## "AVOID AREA SETTINGS" MODE

- Areas to avoid can be registered.

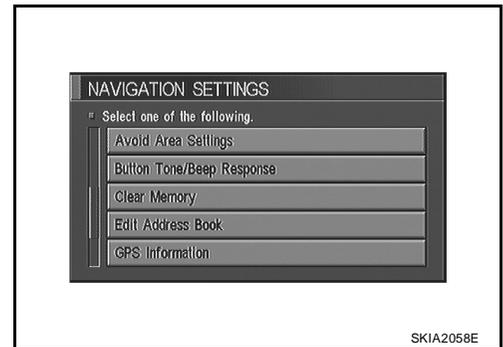

## "CLEAR MEMORY" MODE


- To delete all the stored places in "Address Book", "Avoid Area" and "Previous Destinations", select "Yes".

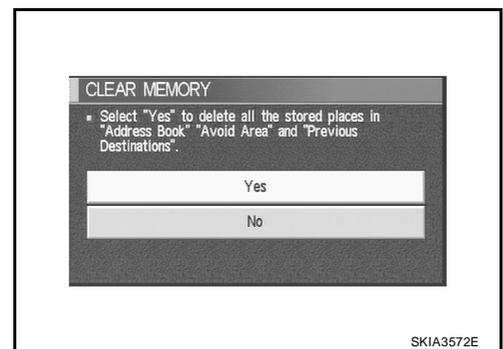

# NAVIGATION SYSTEM

## “EDIT ADDRESS BOOK” MODE

- Edit the items registered in Address Book.

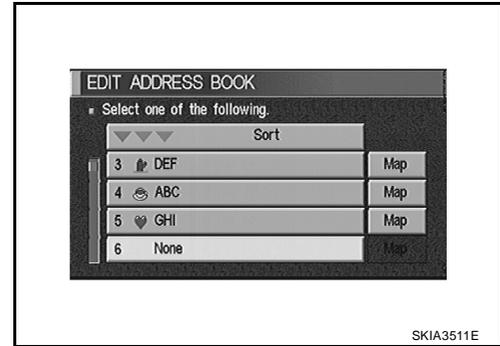


## “GPS INFORMATION” MODE

- Latitude, longitude, altitude, astrometric state, and satellite location are displayed as GPS information.

**NOTE:**

Altitude is displayed only in three-dimensional status.

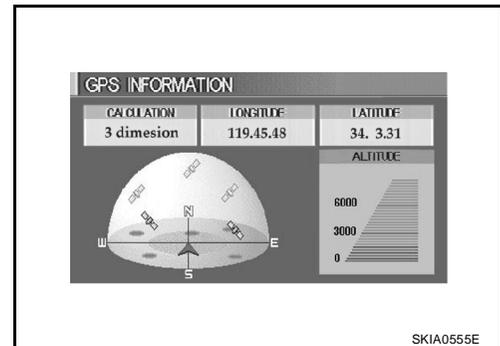


## “QUICK STOP CUSTOMER SETTING” MODE

- Select a category for the “Quick Stop” menu.


**NOTE:**

This only replaces the fifth position on the "Quick Stop" menu when "ROUTE" is pressed.

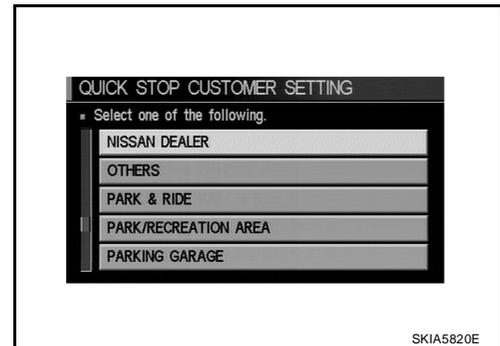

## “SET AVERAGE SPEED” MODE

- Set the average vehicle speed to calibrate the estimated journey time for the destination.
- Set three items: “Freeway”, “Main Roads”, and “Ordinary Roads”.

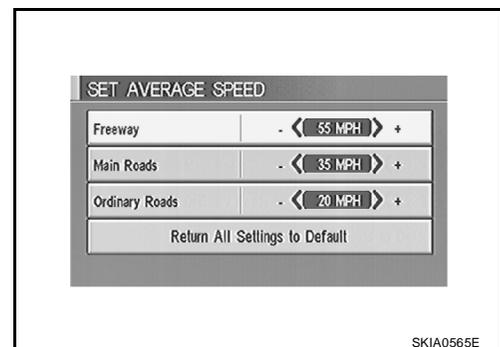


# NAVIGATION SYSTEM

## “TRACKING” MODE

- To delete the tracking marks on the map, select “Off”.
- To leave the tracking marks on the map, select “On”.

### NOTE:


When a trail display is turned OFF, trail data is erased from the memory.

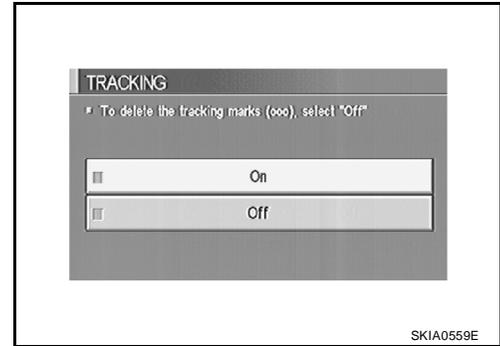

## GUIDANCE VOLUME

### Description

Following guidance volume settings can be changed.

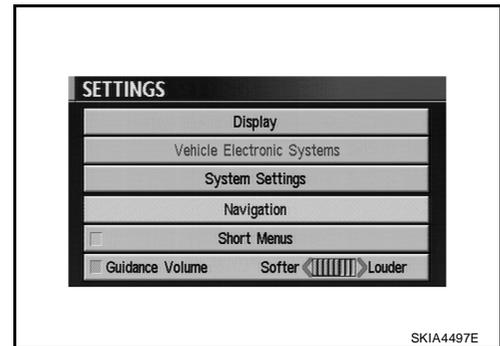

### Activation/Deactivation Setting

- The voice prompt can be turned on/off by pressing the “Guidance Volume” button.

### Voice Volume Setting

- Volume of the voice can be controlled by tilting the joystick to left/right.

## DISPLAY WITH PUSHED “TRIP” BUTTON


- When the “TRIP” button is pushed, the following items will display on the screen.
- Warning message (if there are any) →TRIP 1→TRIP 2→FUEL ECONOMY→MAINTENANCE→OFF.

Display items	Display/Setting contents		Reference page
Trip 1 or Trip 2	Elapsed Time	Displays driving time with a range of 0000:00:00 to 9999:59:59.	<a href="#">AV-83</a>
	Driving Distance [(km) or (miles)]	Displays driving distance with a range of 00000.0 to 99999.9.	
	Average speed [(km/h) or (MPH)]	Displays average speed with a range of 000.0 to 999.9.	
Fuel Economy	Average Fuel Economy [(MPG) or (l/100km)]	Displays fuel economy with ignition switch ON, average fuel economy each 30 seconds.	<a href="#">AV-83</a>
	Distance to Empty [(km) or (miles)]	Displays possible driving distance with remaining fuel.	
	Fuel Economy [(MPG) or (l/100km)]	Displays fuel economy each approx. 100 ms.	
Maintenance	Engine oil	Maintenance intervals of engine oil and setting of oil change cycle.	<a href="#">AV-83</a>
	Tire rotation	Maintenance intervals of tire and setting of tire replacement cycle.	
	Tire pressure	Tire pressure displayed as tire pressure information.	

# NAVIGATION SYSTEM


## TRIP 1 OR TRIP 2

- Elapsed time, Driving distance and Average speed are displayed as Trip 1 information or Trip 2 information.
- The way to reset is by pushing the “Reset” switch or by pushing and holding “TRIP” button more than 1.5 seconds.

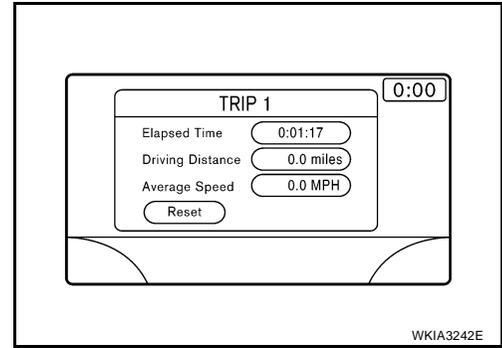

## FUEL ECONOMY

- Average Fuel Economy, Distance to Empty, Fuel Economy are displayed as Fuel Economy information.
- The way to reset is by pushing the “Reset” switch or by pushing and holding “TRIP” button more than 1.5 seconds.

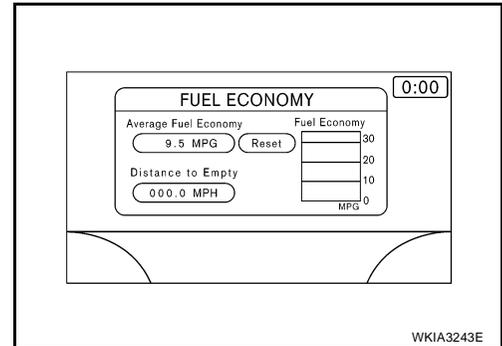


## MAINTENANCE

Engine Oil, Tire Rotation and Tire pressure are displayed as Maintenance information.


### NOTE:

In a case of a vehicle with low tire pressure warning control unit, “Tire Pressure” switch is displayed.

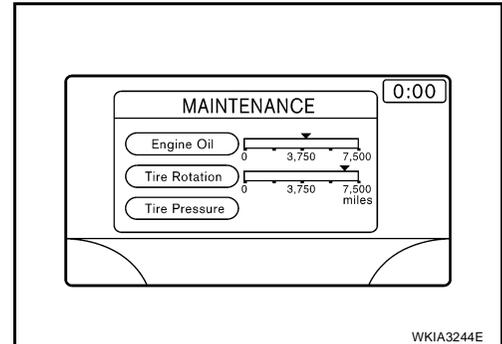

## ENGINE OIL OR TIRE ROTATION

Possible to set up interval of engine oil and tire rotation by tilting joystick right and left.

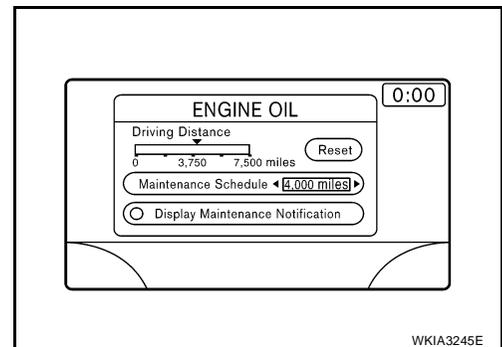


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

## TIRE PRESSURE

- Pressure indication in \*\* psi on the screen indicates that the pressure is being measured. After a few trips, the pressures for all four tires will be displayed.
- The order of tire pressure figures displayed on the screen does not correspond with the actual order of tire position.
- Tire pressure rises and falls depending on the heat caused by the vehicle's traveling condition and the temperature.
- In case of low tire pressure, the low tire pressure warning light will come on and/or a warning is displayed on the screen.
- FLAT TIRE – very low tire pressure.

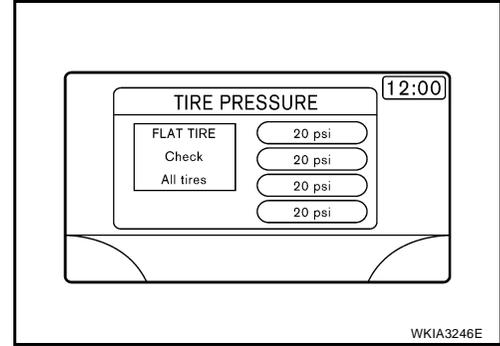


WKIA3246E

### NOTE:

- In a case of FLAT TIRE pressure, interrupt screen is not shown on the display.
- On the screen of TIRE PRESSURE, "FLAT TIRE Check All tire" is displayed.

## WARNING INDICATIONS

Warning signal is received from BCM through CAN communication line.

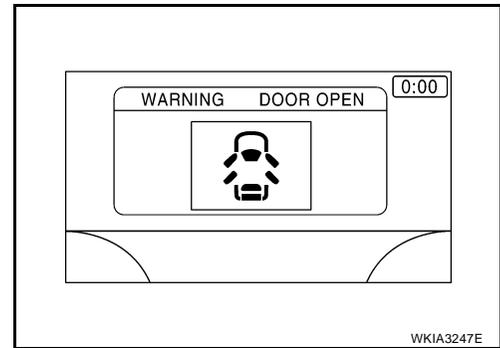

WKIA3247E

Warning indicators	Warning lamps in instrument panel	Warning detection and cancel conditions		Cases of malfunction
DOOR OPEN	Door	Detection condition	Vehicle is running [approx. 5 km/h (3 MPH) or faster] and door ajar of any of the doors is detected.	Door is open
		Cancel condition	Vehicle is stopped and all the doors lock.	
LIFTGATE OPEN	Door	Detection condition	Vehicle is running [approx. 5 km/h (3 MPH) or faster] and liftgate ajar and/or glass hatch ajar is detected.	Liftgate and/or glass hatch is open
		Cancel condition	Vehicle is stopped and both liftgate and glass hatch lock.	

## CAN Communication System Description


EKS009V8

Refer to [LAN-24, "CAN COMMUNICATION"](#) .

# NAVIGATION SYSTEM

## Component Parts Location

EKS009V9

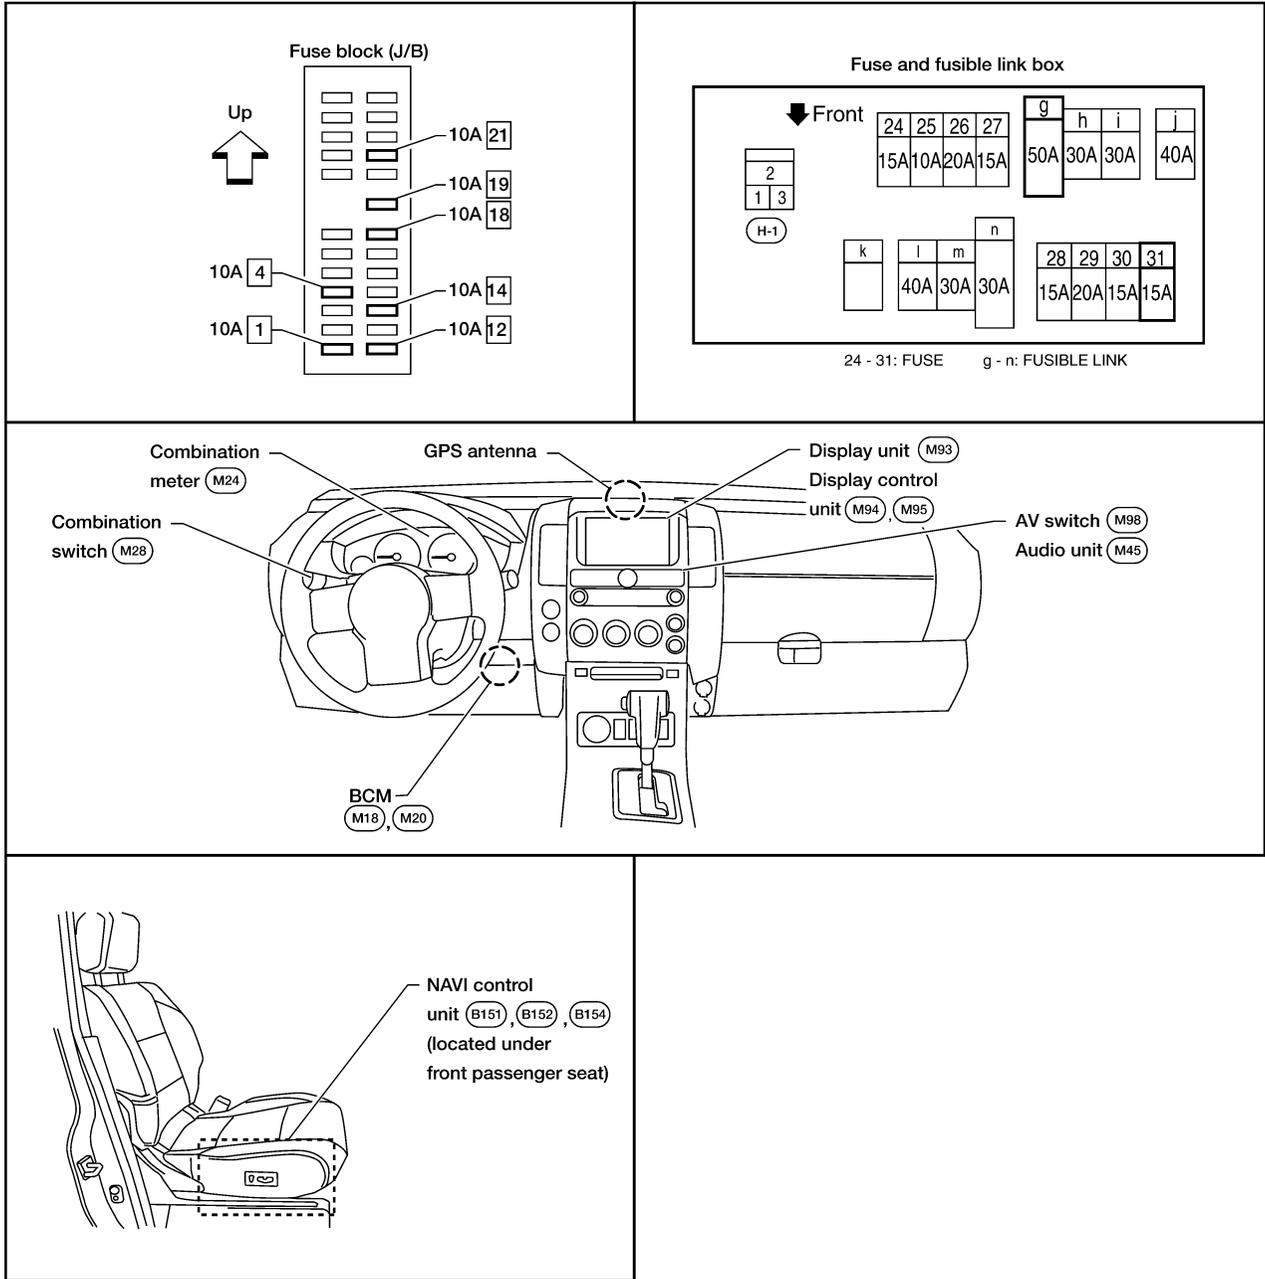

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV


WKIA4129E

# NAVIGATION SYSTEM

## Schematic

EKS009VA

\* : THIS RELAY IS BUILT INTO THE IPDM/E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

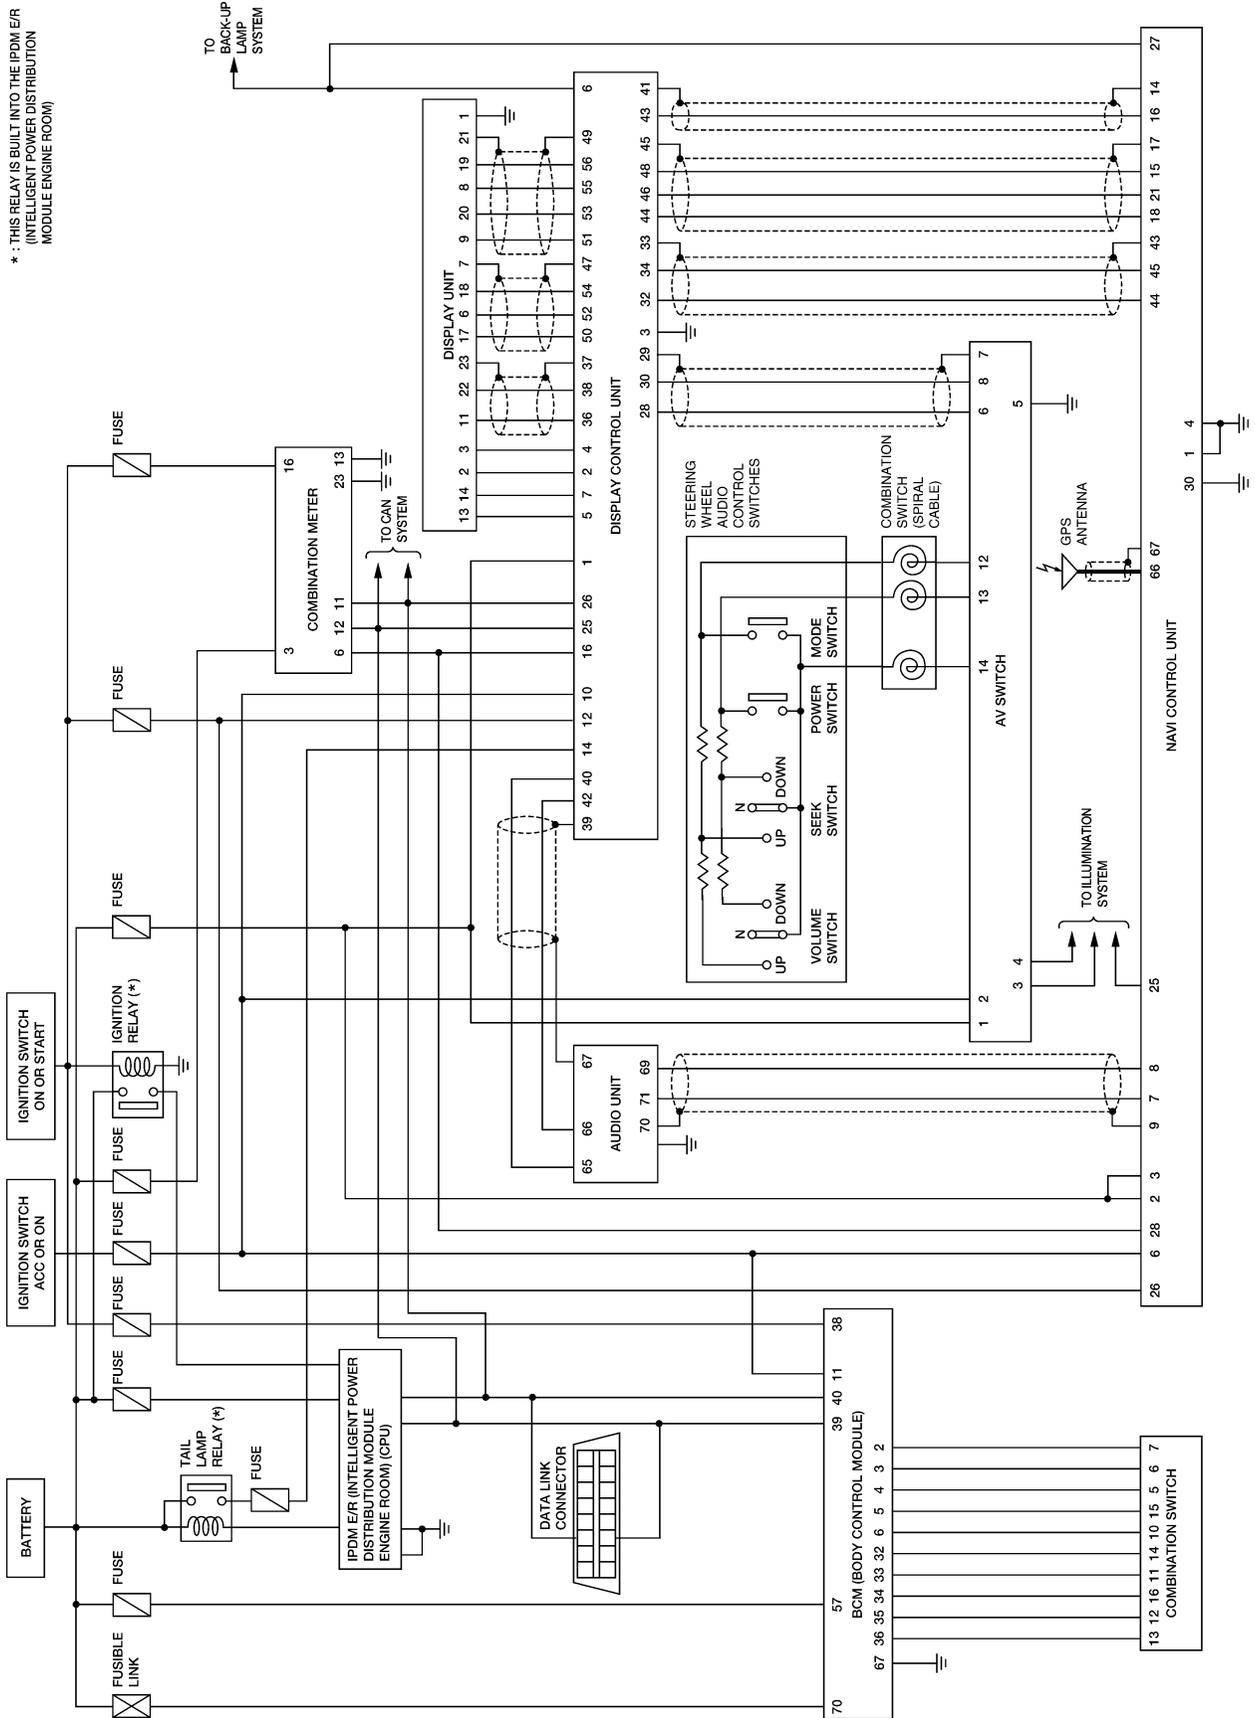



WKWA3039E

# NAVIGATION SYSTEM

## Wiring Diagram — NAVI —

EKS009VB

### AV-NAVI-01

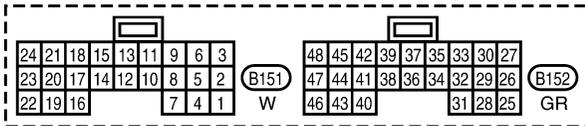
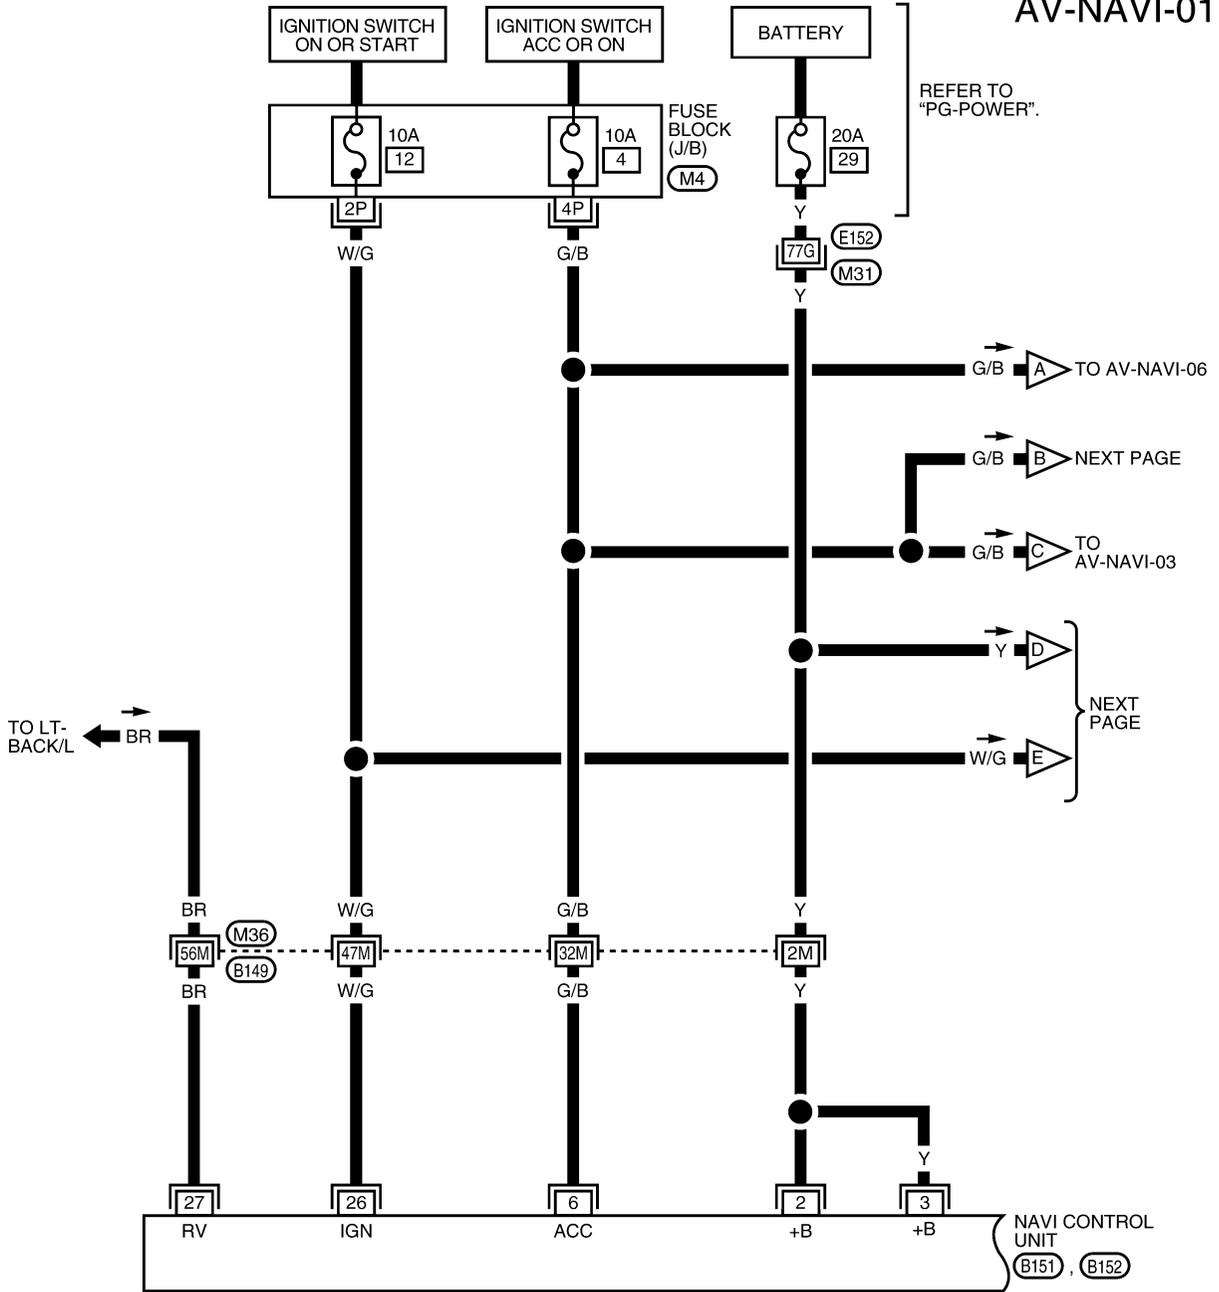


REFER TO THE FOLLOWING.  
 (M31), (M36) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WKWA2004E

# NAVIGATION SYSTEM

## AV-NAVI-02

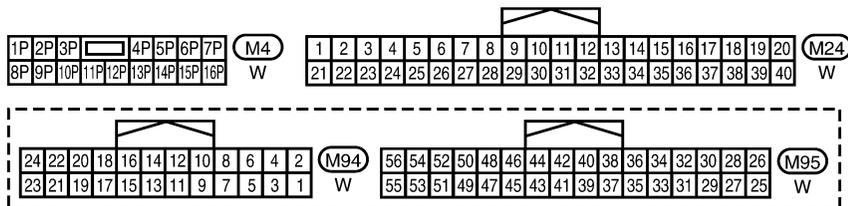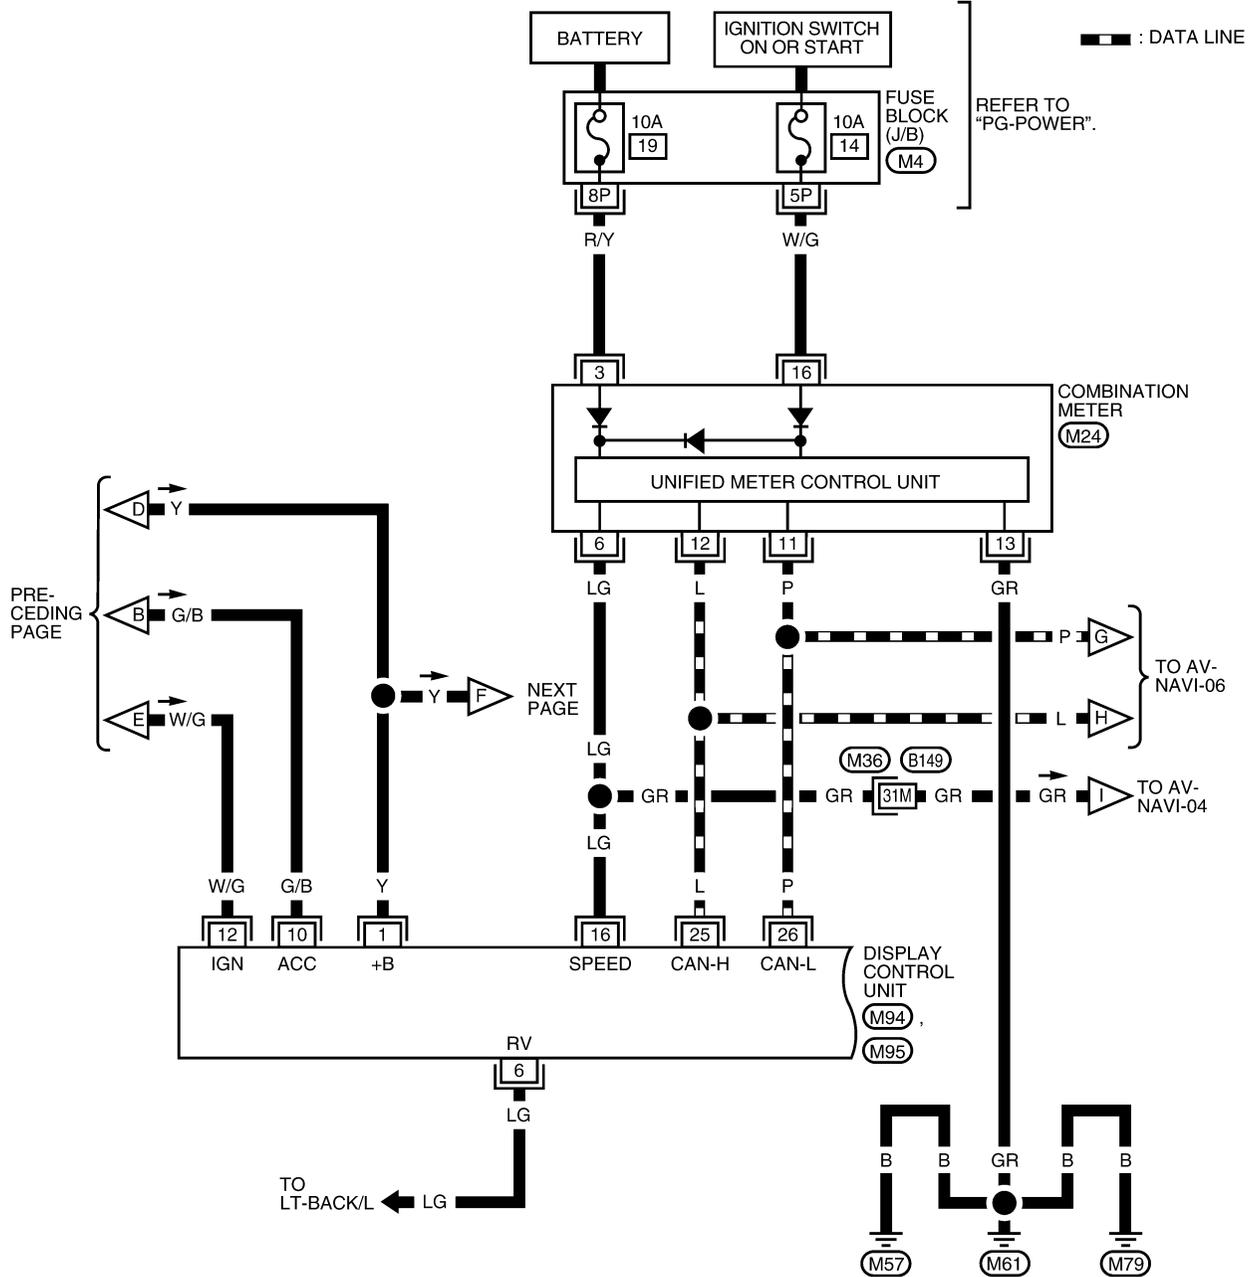





REFER TO THE FOLLOWING.  
M36 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3042E

# NAVIGATION SYSTEM

## AV-NAVI-03

— : DATA LINE

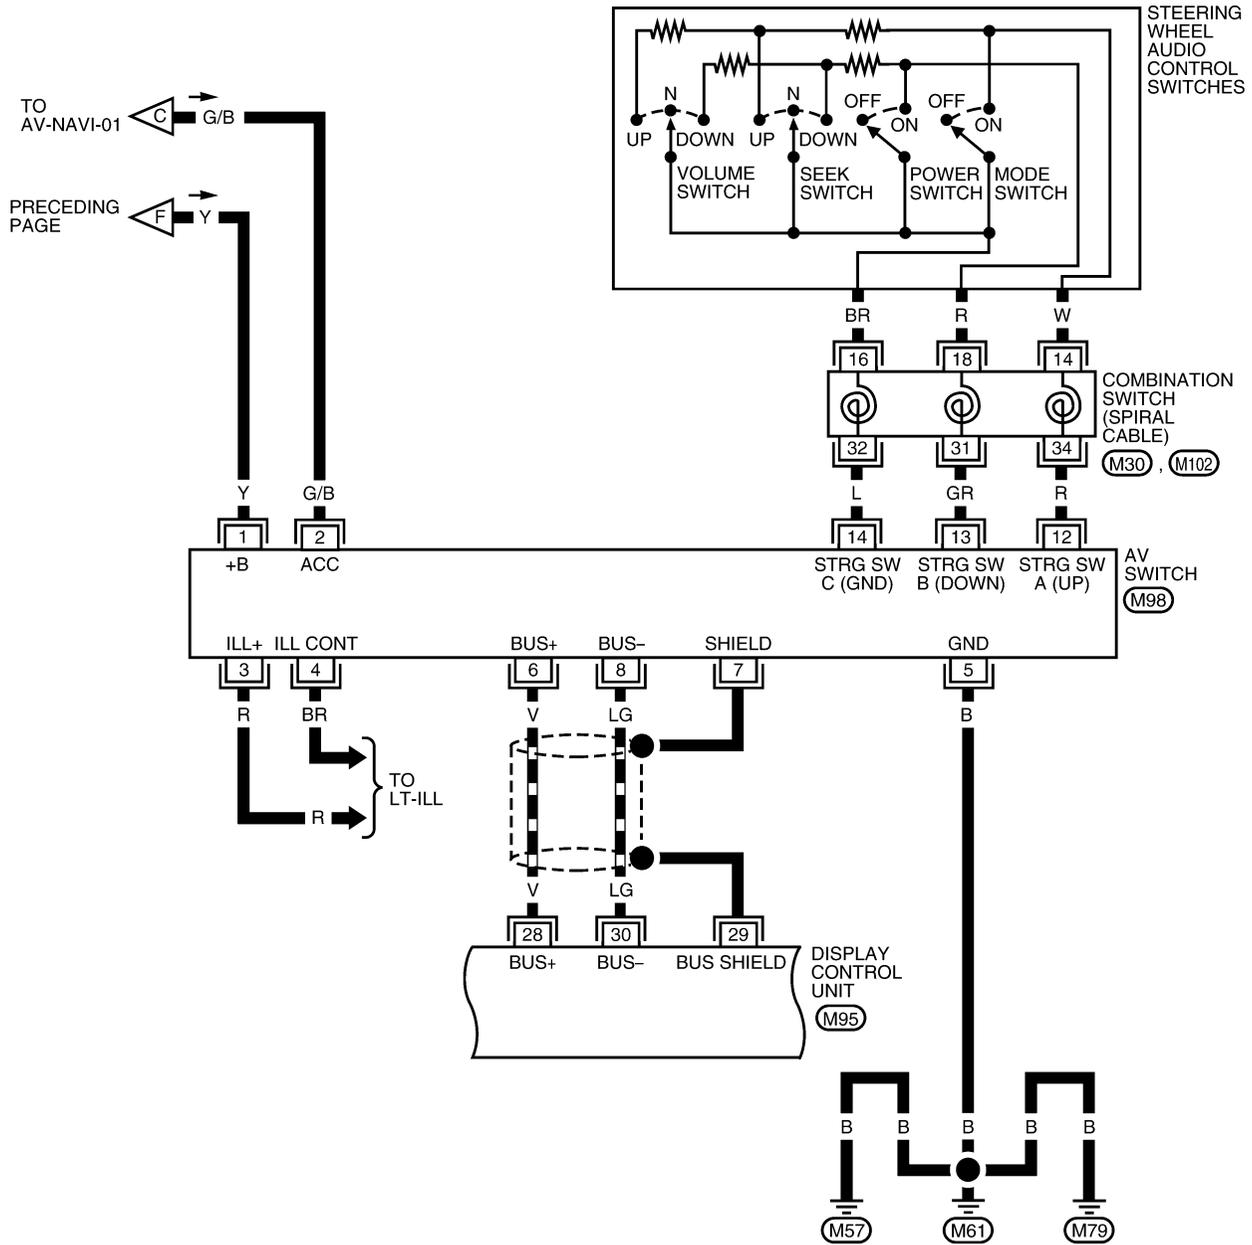


\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA2006E





# NAVIGATION SYSTEM

AV-NAVI-05

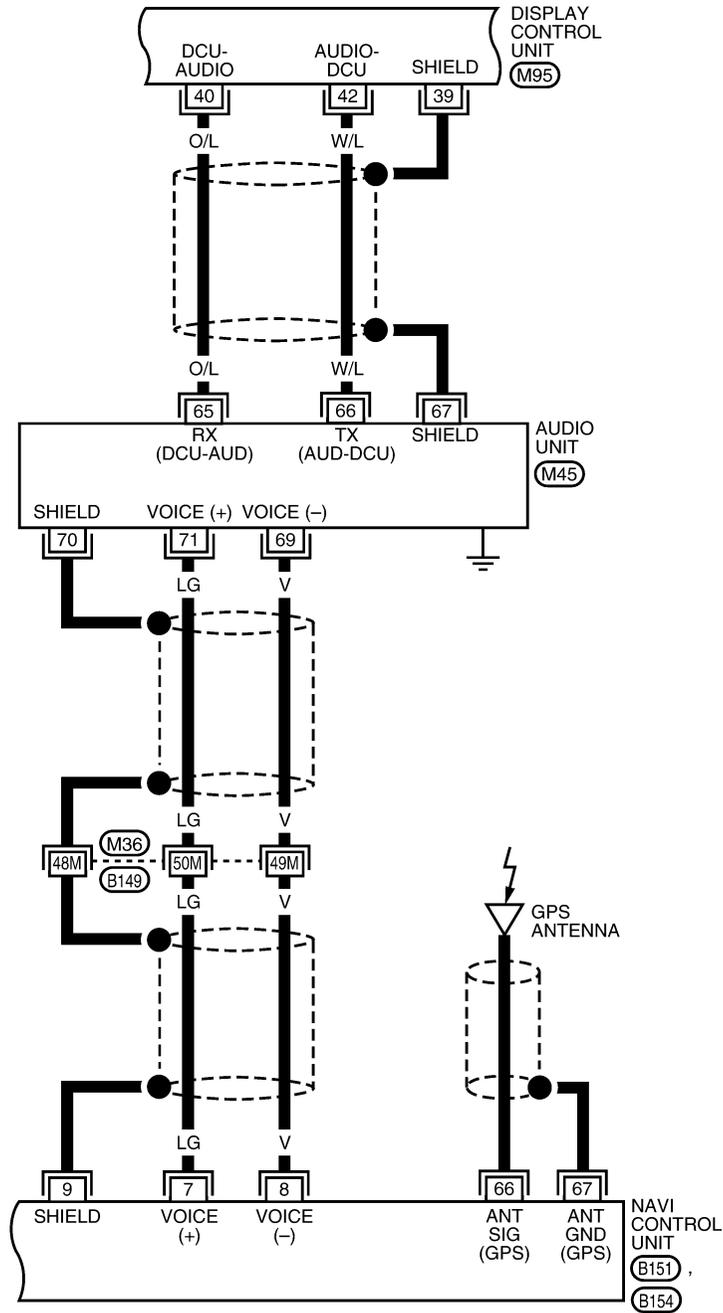

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

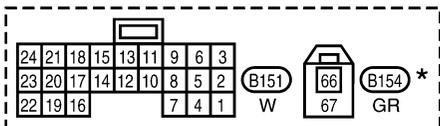



REFER TO THE FOLLOWING.  
 (M36) - SUPER MULTIPLE JUNCTION (SMJ)

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA2008E

# NAVIGATION SYSTEM

## AV-NAVI-06

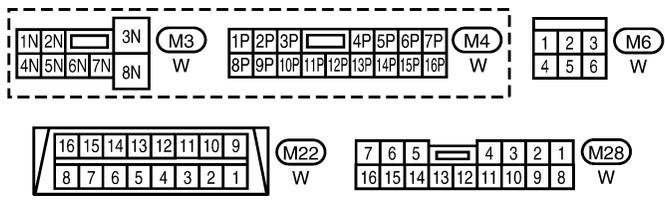
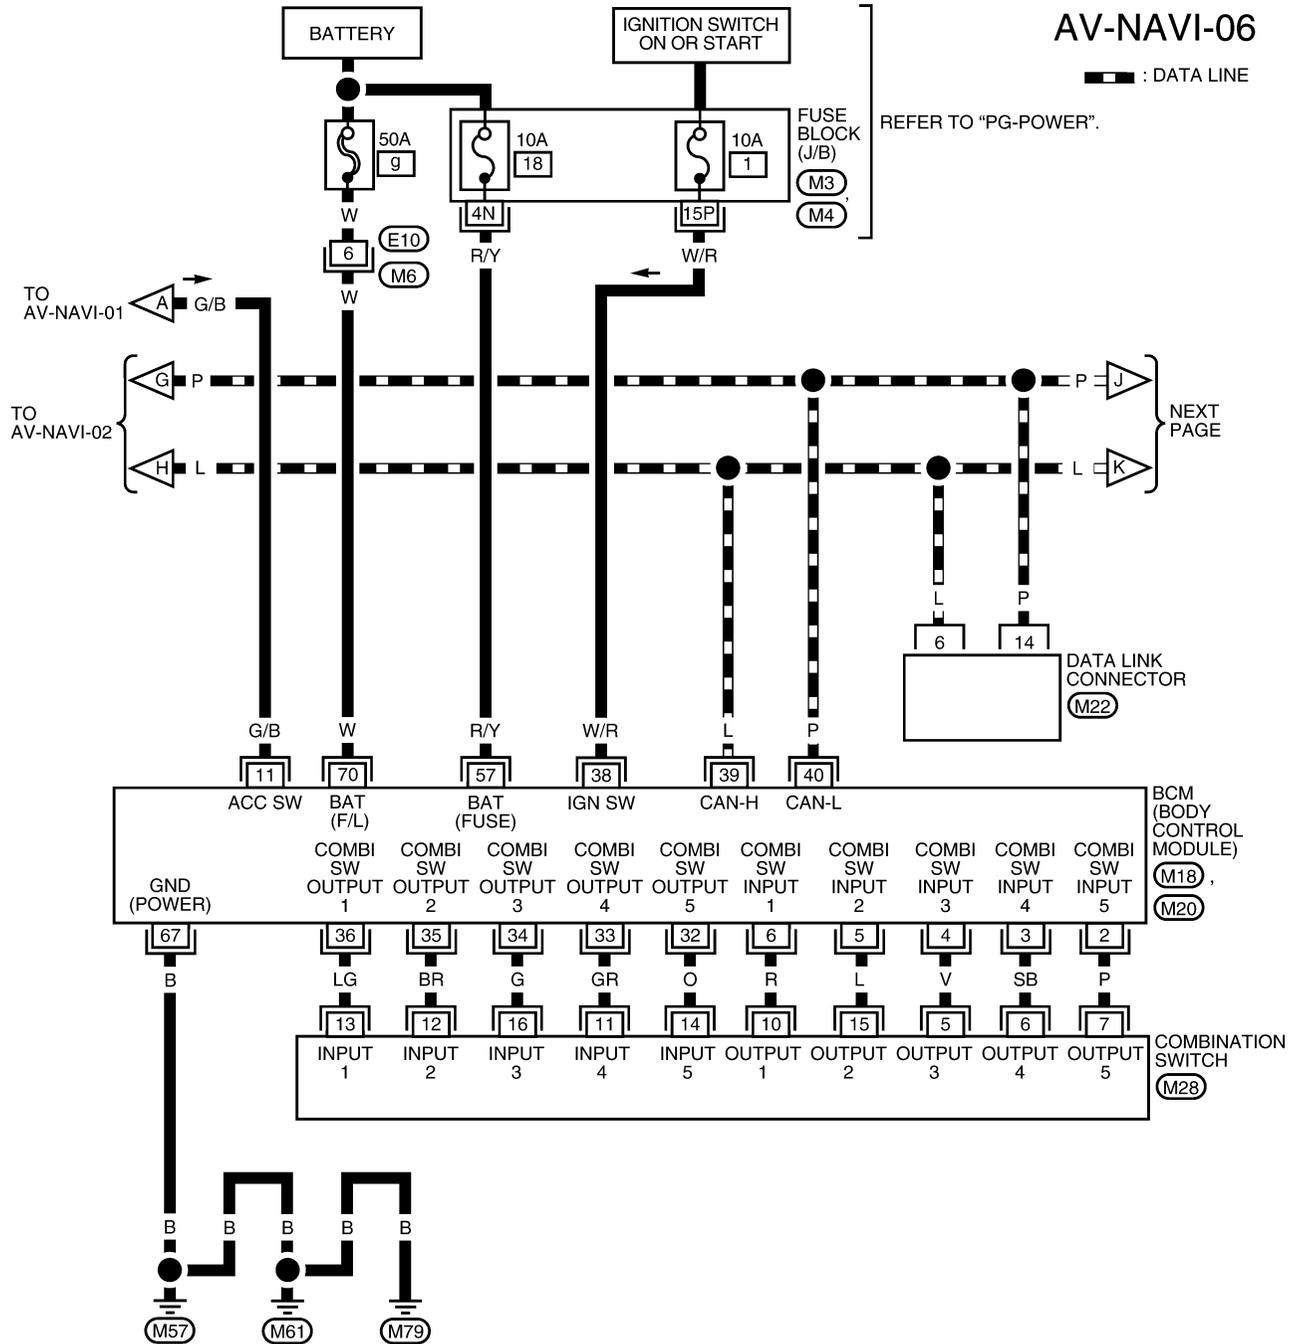


REFER TO THE FOLLOWING.  
 (M18), (M20) - ELECTRICAL UNITS

WKWA2009E

# NAVIGATION SYSTEM

AV-NAVI-07

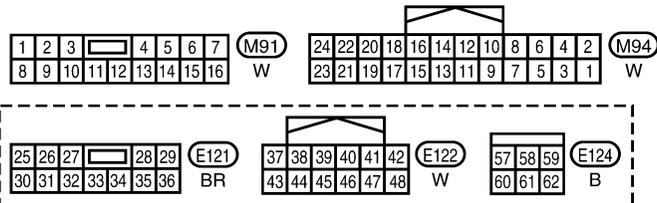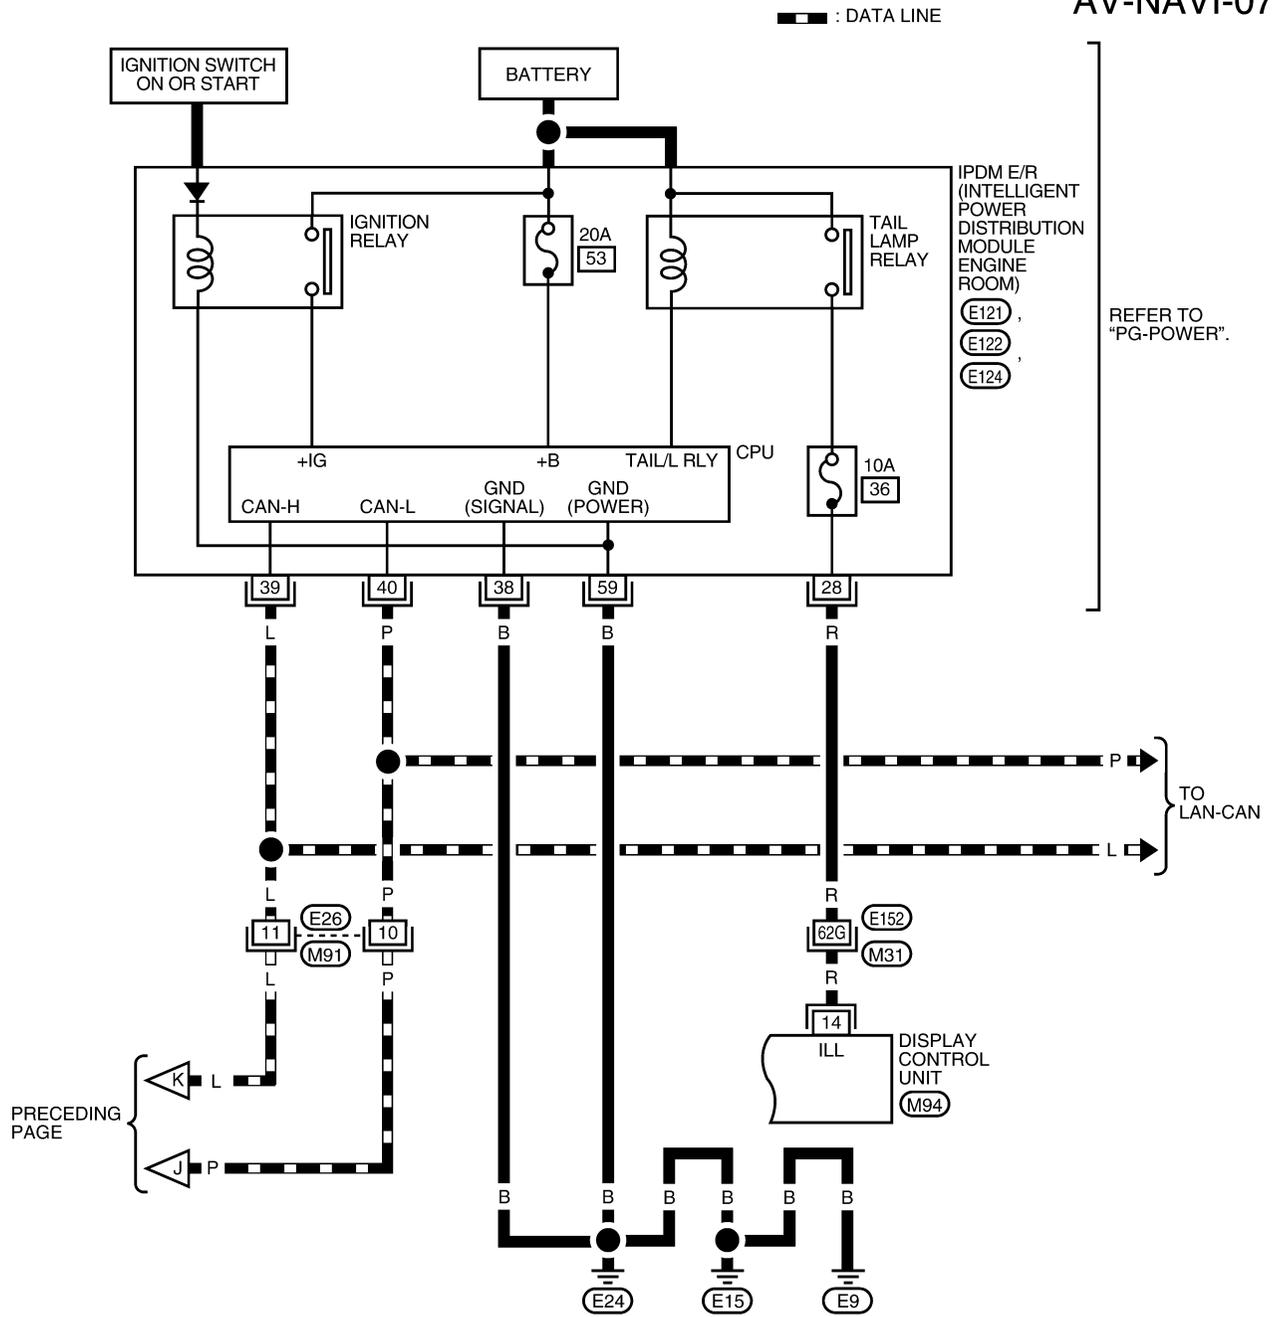

REFER TO THE FOLLOWING.


(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2010E

# NAVIGATION SYSTEM

## Schematic

EKS009VC

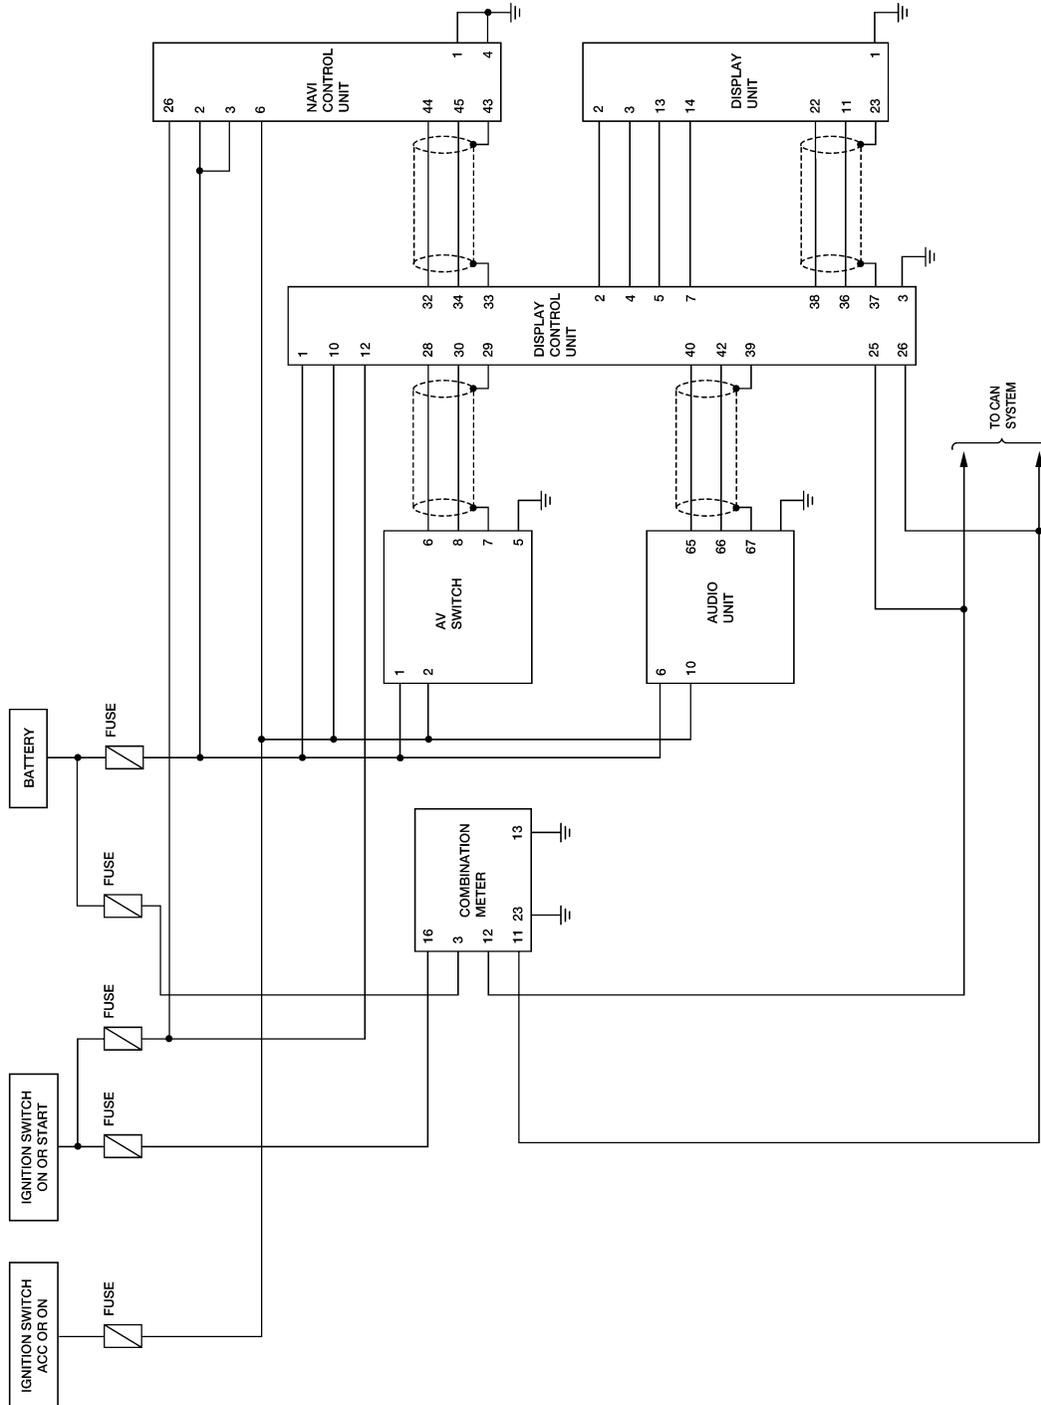


WKWA3041E

# NAVIGATION SYSTEM

## Wiring Diagram — COMM —

EKS009VD

### AV-COMM-01

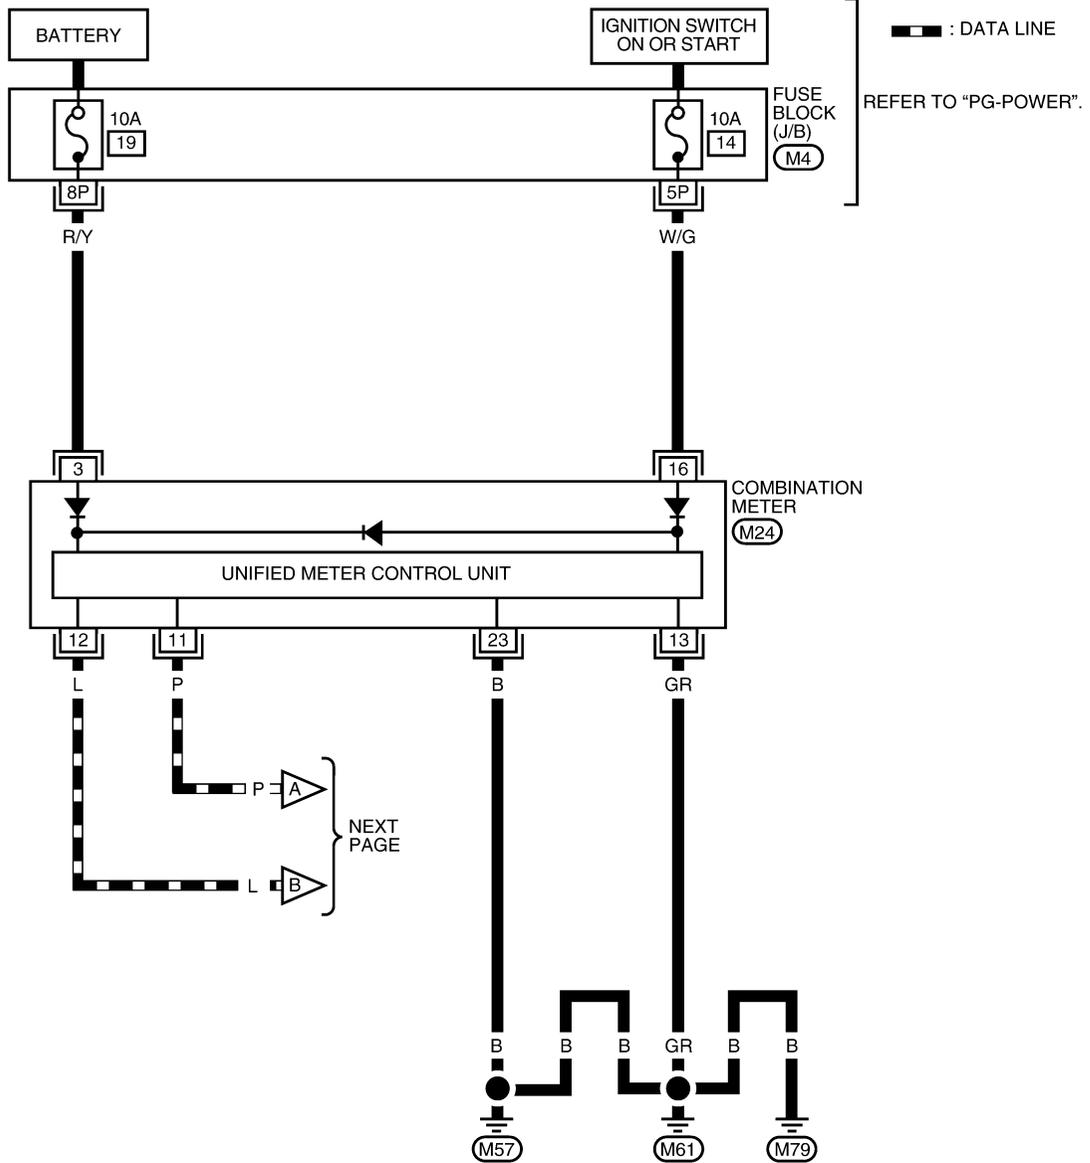

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M





1P	2P	3P	4P	5P	6P	7P	(M4)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	(M24)		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

WKWA2012E



# NAVIGATION SYSTEM

## AV-COMM-03

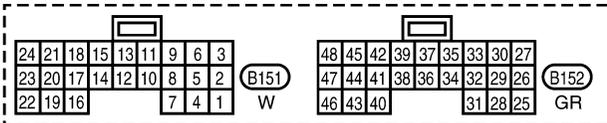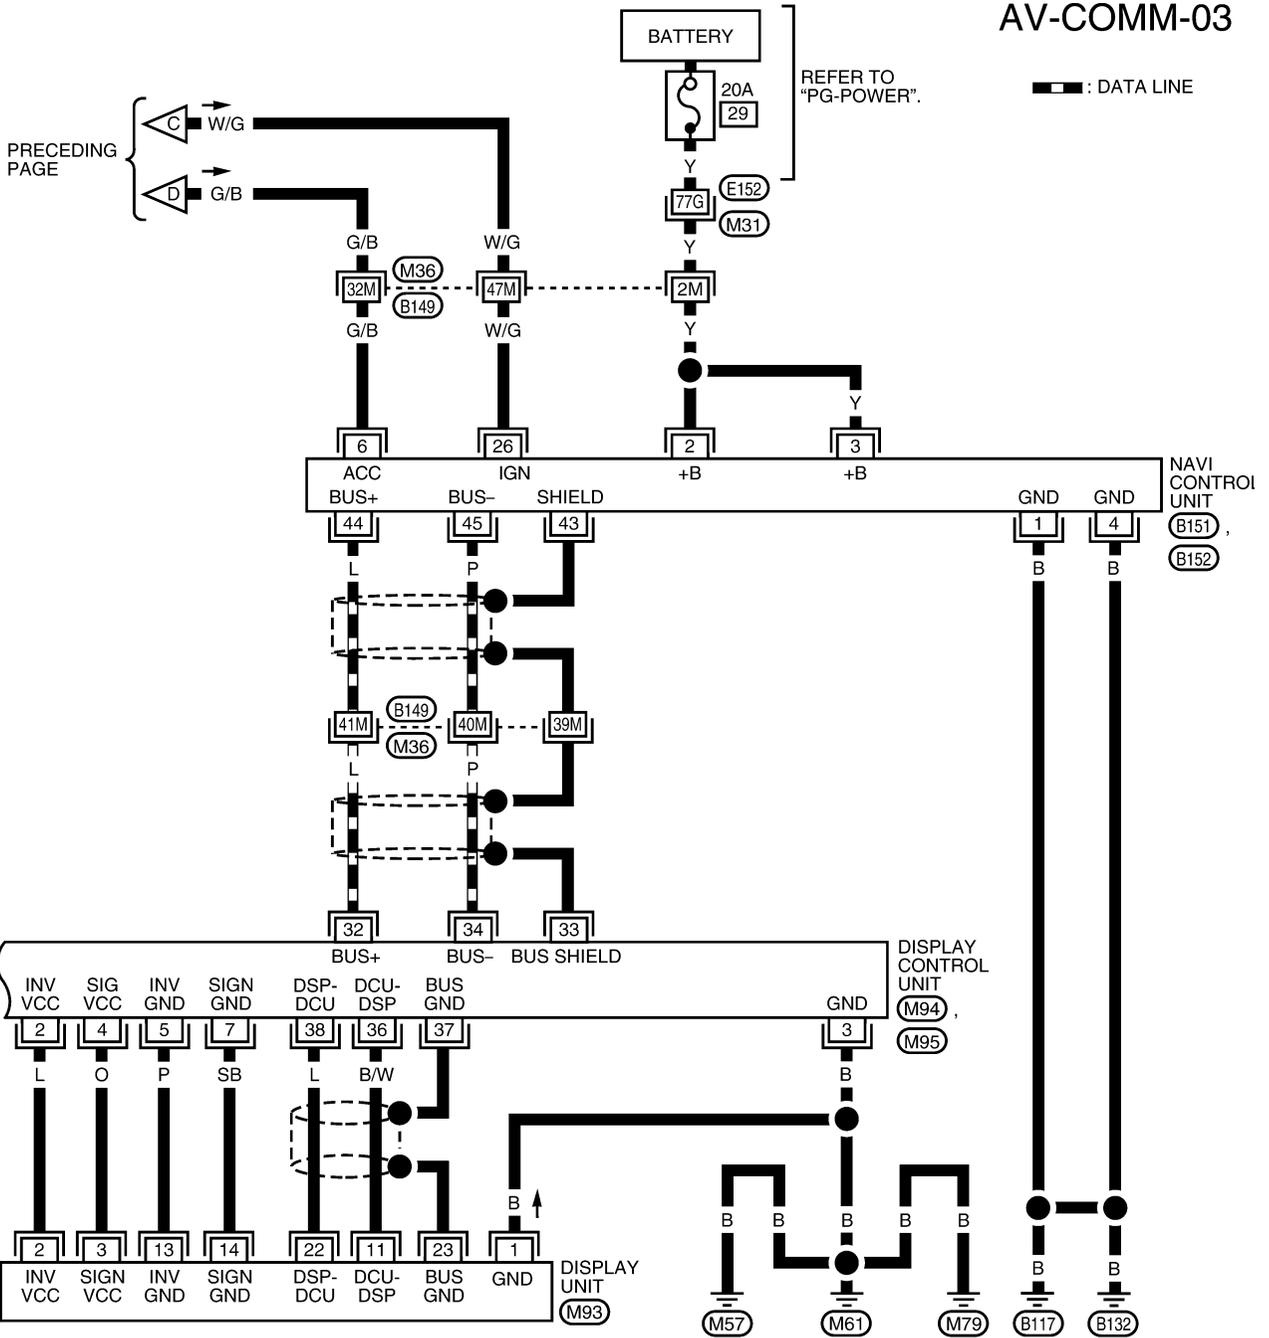





REFER TO THE FOLLOWING.  
 (M31), (M36) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WKWA2014E




# NAVIGATION SYSTEM

## Terminals and Reference Value for NAVI Control Unit

EKS009VE

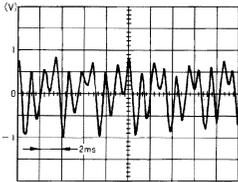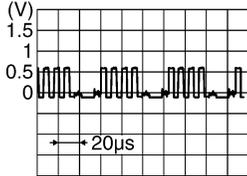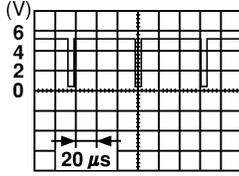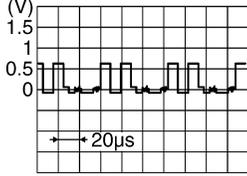Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
1 (B)	Ground	Ground	-	ON	-	0V	-
2 (Y)	Ground	Battery power	Input	OFF	-	Battery voltage	System does not work properly.
3 (Y)							
4 (B)	Ground	Ground	-	ON	-	0V	-
6 (G/B)	Ground	ACC power	Input	ACC	-	Battery voltage	System does not work properly.
7 (LG)	8 (V)	Voice guide signal	Output	ON	Press the "GUIDE/ VOICE" button.	 <p style="text-align: right; font-size: small;">SKIA0171J</p>	Only route guide and operation guide are not heard.
9	-	Shield ground	-	-	-	-	Audio noise interference.
14	-	Shield ground	-	-	-	-	Video display interference.
15 (B)	17	RGB signal (B: blue)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4979E</p>	NAVI screen looks yellowish.
16 (W)	14	RGB syn- chronizing signal	Output	ON	Press the "MAP" button.	 <p style="text-align: right; font-size: small;">SKIA0164E</p>	NAVI screen is rolling.
17	-	Shield ground	-	-	-	-	Video display interference.
18 (R/L)	17	RGB signal (R: red)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4977E</p>	NAVI screen looks bluish.
21 (R/W)	17	RGB signal (G: green)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4978E</p>	NAVI screen looks reddish.

# NAVIGATION SYSTEM

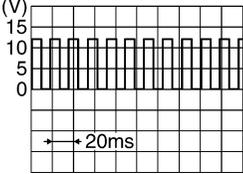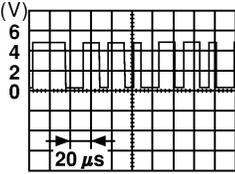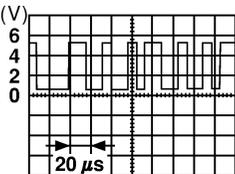Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
25 (SB)	30 (B)	Illumination signal	Input	ON	Lighting switch in 1st position	Battery voltage	Display unit illu- mination does not change when lighting switch is turned to 1st position.-
					Lighting switch is OFF	3V or less	
26 (W/G)	Ground	Ignition signal	Input	ON	-	Battery voltage	Navigation cur- rent location mark does not indicate the cor- rect position.
27 (BR)	Ground	Reverse signal	Input	ON	Selector lever in R position	Battery voltage	The navigation current-location mark moves strangely when the vehicle is moving back- wards.
					Selector lever not in R position	0V	
28 (GR)	Ground	Vehicle speed signal (8-pulse)	Input	ON	When vehicle speed is approx. 40 km/h (25 MPH)	 PKIA1935E	Navigation cur- rent location mark does not indicate the cor- rect position.
43	-	Shield ground	-	-	-	-	-
44 (L)	Ground	Communica- tion signal (+)	Input/ output	ON	-	 SKIA0175E	System does not work properly.
45 (P)	Ground	Communica- tion signal (-)	Input/ output	ON	-	 SKIA0176E	System does not work properly.
66	67	GPS signal	Input	ON	Connector is not connected.	5V	Navigation sys- tem GPS correc- tion is not possible.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV







# NAVIGATION SYSTEM

## Terminals and Reference Value for Display Control Unit

EKS009VF






Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
1 (Y)	Ground	Battery Power	Input	OFF	-	Battery voltage	System does not work properly.
2 (L)	Ground	Power Supply (Inverter)	Output	ON	-	9V	Screen is not shown.
3 (B)	Ground	Ground	-	ON	-	0V	-
4 (O)	Ground	Power Supply (Signal)	Output	ON	-	9V	Screen is not shown.
5 (P)	Ground	(Inverter) Ground	-	ON	-	0V	-
6 (LG)	Ground	Reverse signal	Input	ON	Selector lever in R position	Battery voltage	Impossible to gain direction of vehicle.
					Selector lever not in R position	0V	
7 (SB)	Ground	(Signal) Ground	-	ON	-	0V	-
10 (G/B)	Ground	ACC power	Input	ACC	-	Battery voltage	System does not work properly.
12 (W/G)	Ground	Ignition signal	Input	ON	-	Battery voltage	Vehicle information setting is not possible.
14 (R)	Ground	Illumination signal	Input	OFF	Lighting switch position 1st or 2nd	Battery voltage	Display unit does not change when lighting switch is turned to 1st position.
					Lighting switch position OFF	0V	
16 (LG)	Ground	Vehicle speed signal (8-pulse)	Input	ON	When vehicle speed is approx. 40 km/h (25 MPH)		Value of vehicle speed information is not accurately displayed.
25 (L)	-	CAN-H	-	-	-	-	-
26 (P)	-	CAN-L	-	-	-	-	-
28 (V)	Ground	Communication signal (+)	Input/Output	ON	-		System does not work properly.
29	-	Shield ground	-	-	-	-	-

# NAVIGATION SYSTEM

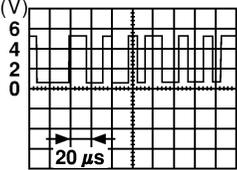
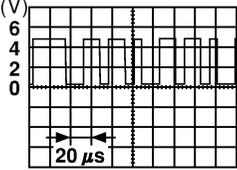
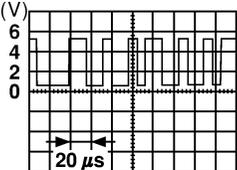
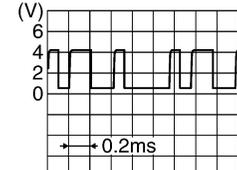
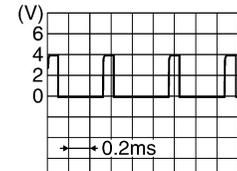
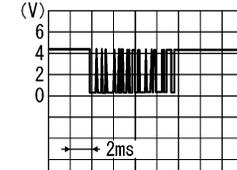
Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
30 (LG)	Ground	Communica- tion signal (-)	Input/ output	ON	-	 SKIA0176E	System does not work properly.
32 (L)	Ground	Communica- tion signal (+)	Input/ output	ON	-	 SKIA0175E	System does not work properly.
33	-	Shield ground	-	-	-	-	-
34 (P)	Ground	Communica- tion signal (-)	Input/ output	ON	-	 SKIA0176E	System does not work properly.
36 (B/W)	37	Display Com- munication signal (DCU-DSP)	Output	ON	Press the "TRIP" button.	 SKIA4364E	Though a screen is displayed, it is impossible to adjust bright- ness.
37	-	Shield ground	-	-	-	-	-
38 (L)	37	Display Com- munication signal (DSP-DCU)	Input	ON	Press the "TRIP" button.	 SKIA4363E	Though a screen is displayed, it is impossible to adjust bright- ness.
39	-	Shield ground	-	-	-	-	-
40 (O/L)	Ground	Audio TX Communica- tion signal	Output	ON	Operate audio volume.	 SKIA4402E	Audio does not operate properly.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

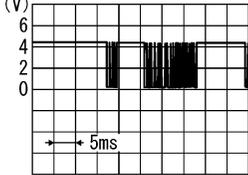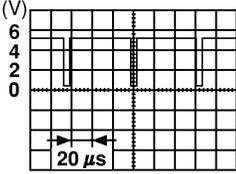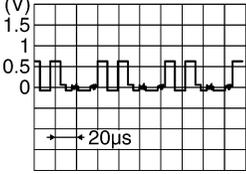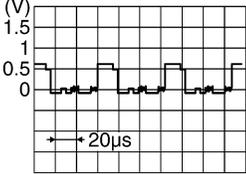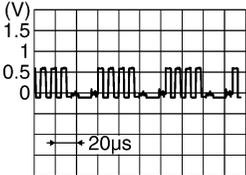Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
41	-	Shield ground	-	-	-	-	-
42 (W/L)	Ground	Audio RX communica- tion signal	Input	ON	Operate audio volume.	 SKIA4403E	Audio does not operate properly.
43 (W)	41	RGB syn- chronizing signal	Input	ON	Press the "MAP" button.	 SKIA0164E	NAVI screen is rolling.
44 (R/L)	45	RGB signal (R: red)	Input	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 SKIA4977E	NAVI screen looks bluish.
45	-	Shield ground	-	-	-	-	-
46 (R/W)	45	RGB signal (G: green)	Input	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 SKIA4978E	NAVI screen looks reddish.
47	-	Shield ground	-	-	-	-	-
48 (B)	45	RGB signal (B: blue)	Input	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function.	 SKIA4979E	NAVI screen looks yellowish.
49	-	Shield ground	-	-	-	-	-
50 (R/L)	47	RGB signal (R: red)	Output	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function.	 SKIA4980E	NAVI screen looks bluish.

# NAVIGATION SYSTEM

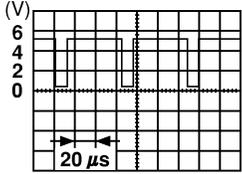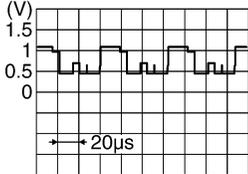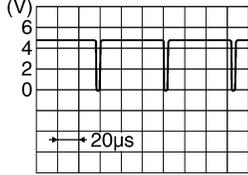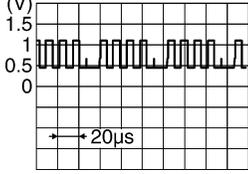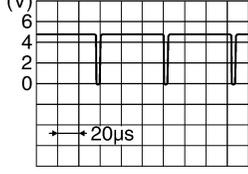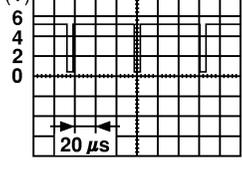Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Igni- tion switch	Operation		
51 (B)	49	RGB area (YS) signal	Output	ON	Press the "TRIP" button.	 <p style="text-align: right; font-size: small;">SKIA0162E</p>	RGB screen is not shown.
52 (R/W)	47	RGB signal (G: green)	Output	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4981E</p>	Screen looks reddish.
53 (W)	49	Vertical syn- chronizing (VP) signal	Input	ON	-	 <p style="text-align: right; font-size: small;">SKIA4983E</p>	Operating screen for audio and A/C is not displayed when showing NAVI screen.
54 (B)	47	RGB signal (B: blue)	Output	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4982E</p>	Screen looks yellowish.
55 (R)	49	Horizontal synchroniz- ing (HP) sig- nal	Input	ON	-	 <p style="text-align: right; font-size: small;">SKIA4983E</p>	Operating screen for audio and A/C is not displayed when showing NAVI screen.
56 (G)	49	RGB syn- chronizing signal	Output	ON	Press the "TRIP" button.	 <p style="text-align: right; font-size: small;">SKIA0164E</p>	NAVI screen is rolling.






A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV




# NAVIGATION SYSTEM

## Terminals and Reference Value for Display Unit

EKS009VG

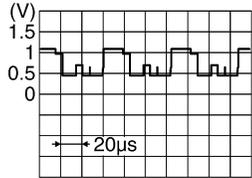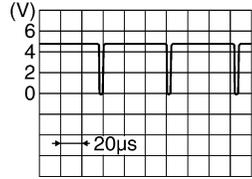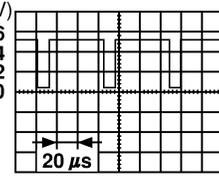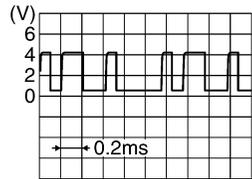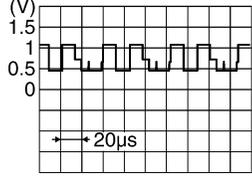Terminal No. (Wire color)		Item	Signal input/output	Condition		Voltage (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
1 (B)	Ground	Ground	-	ON	-	0V	-
2 (L)	Ground	Power supply (Inverter)	Input	ON	-	9V	Screen is not shown.
3 (O)	Ground	Power supply (Signal)	Input	ON	-	9V	Screen is not shown.
6 (R/W)	7	RGB signal (G: green)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	 SKIA4981E	Screen looks reddish.
7	-	Shield ground	-	-	-	-	-
8 (R)	21	Horizontal synchronizing (HP) signal	Output	ON	-	 SKIA4983E	Operating screen for audio and A/C is not displayed when showing NAVI screen.
9 (B)	21	RGB area (YS) signal	Input	ON	Press the "TRIP" button.	 SKIA0162E	Operating screen for audio and A/C is not displayed when showing NAVI screen.
11 (B/W)	23	Display communication signal (DCU-DSP)	Input	ON	-	 SKIA4364E	Though a screen is displayed, it is impossible to adjust brightness.
13 (P)	Ground	(Inverter) Ground	-	ON	-	0V	-
14 (SB)	Ground	(Signal) Ground	-	ON	-	0V	-
17 (R/L)	7	RGB signal (R: red)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	 SKIA4980E	Screen looks bluish.

# NAVIGATION SYSTEM

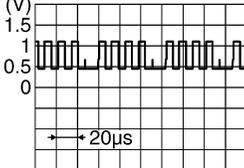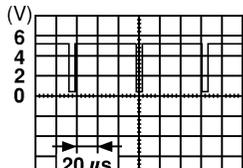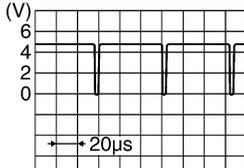Terminal No. (Wire color)		Item	Signal input/output	Condition		Voltage (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
18 (B)	7	RGB signal (B: blue)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	 <p style="text-align: right; font-size: small;">SKIA4982E</p>	Screen looks yellowish.
19 (G)	21	RGB synchronizing signal	Input	ON	Press the "TRIP" button.	 <p style="text-align: right; font-size: small;">SKIA0164E</p>	NAVI screen is rolling.
20 (W)	21	Vertical synchronizing (VP) signal	Output	ON	-	 <p style="text-align: right; font-size: small;">SKIA4983E</p>	Operating screen for audio and A/C is not displayed when showing NAVI screen.
21	-	Shield ground	-	-	-	-	-
22 (L)	23	Display communication signal (DSP-DCU)	Output	ON	-	 <p style="text-align: right; font-size: small;">SKIA4363E</p>	Though a screen is displayed, it is impossible to adjust brightness.
23	-	Shield ground	-	-	-	-	-

A

B

C

D

E

F

G

H

I

J

AV



L

M

# NAVIGATION SYSTEM

## Terminals and Reference Value for AV Switch








EKS009VH

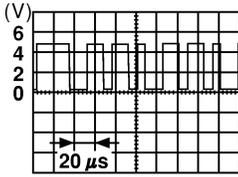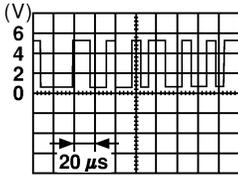Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)	Example of symptom
+	-			Ignition switch	Operation		
1 (Y)	Ground	Battery power	Input	OFF	-	Battery voltage	System does not work properly.
2 (G/B)	Ground	ACC power	Input	ACC	-	Battery voltage	System does not work properly.
3 (R)	Ground	Illumination signal	Input	OFF	Lighting switch is ON (position 1).	Battery voltage	AV switch illumination does not come on when lighting switch is ON (position 1).
					Turn lighting switch OFF.	3.0V or less	
4 (BR)	Ground	Illumination control signal	Input	ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V	AV switch illumination cannot be controlled.
5 (B)	Ground	Ground	-	ON	-	0V	-
6 (V)	Ground	Communication signal (+)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0175E</p>	System does not work properly.
7	-	Shield ground	-	-	-	-	-
8 (LG)	Ground	Communication signal (-)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0176E</p>	System does not work properly.
12 (R)	Ground	Remote control A	Input	ON	Press MODE switch	0V	Steering wheel audio controls do not function.
					Press SEEK UP switch	0.75V	
					Press VOL UP switch	2V	
					Except for above	5V	
13 (GR)	Ground	Remote control B	Input	ON	Press POWER switch	0V	Steering wheel audio controls do not function.
					Press SEEK DOWN switch	0.75V	
					Press VOL DOWN switch	2V	
					Except for above	5V	
14 (L)	-	Remote control ground	-	-	-	-	Steering wheel audio controls do not function.

# NAVIGATION SYSTEM


## Terminals and Reference Value for BCM

EKS009VI

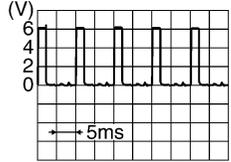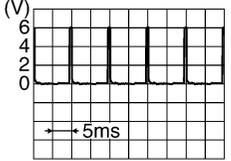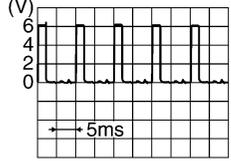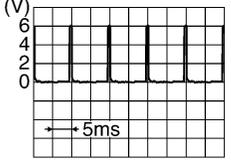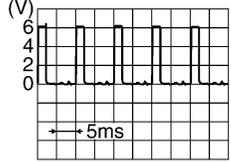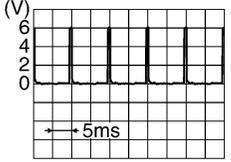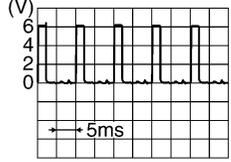Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	P	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	SB	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	V	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	L	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	R	Combination switch input 1			
11	G/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	O	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	GR	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	G	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

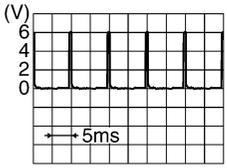Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	BR	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
36	LG	Combination switch output 1			
38	W/R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
57	R/Y	Battery power supply	OFF	—	Battery voltage
67	B	Ground	ON	—	0V
70	W	Battery power supply (fusible link)	OFF	—	Battery voltage

# NAVIGATION SYSTEM

EKS009VJ

## On Board Self-Diagnosis Function

### DESCRIPTION

- Diagnosis function consists of the self-diagnosis mode performed automatically and the CONFIRMATION/ADJUSTMENT mode operated manually.
- Self-diagnosis mode checks for connections between the units constituting this system, analyzes each individual unit at the same time, and displays the results on the LCD screen.
- CONFIRMATION/ADJUSTMENT mode is used to perform trouble diagnosis that require operation and judgment by an operator (trouble that cannot be automatically judged by the system), to check/change the set value, and to display the History of Errors of the navigation system.

### DIAGNOSIS ITEM

Mode		Description		
Self-diagnosis (DCU)		<ul style="list-style-type: none"> <li>● Display control unit diagnosis.</li> <li>● Perform connection diagnosis and unit diagnosis between display control unit and each unit.</li> </ul>		
Self-diagnosis (NAVI)		<ul style="list-style-type: none"> <li>● NAVI Control unit diagnosis (DVD-ROM drive) will not be diagnosed when no map DVD-ROM is in it.</li> <li>● Analyzes connection between the NAVI control unit and the GPS antenna and operation of each unit.</li> </ul>		
CONFIRMATION/ ADJUSTMENT	Display diagnosis	On display control unit mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale.		
	Vehicle signals	On display control unit mode, analyzes the following vehicle signals: Vehicle speed signal, light signal <sup>NOTE</sup> , ignition switch signal, and reverse signal.		
	Auto Climate Control	A/C self-diagnosis of A/C system.		
	Navigation	Display diagnosis	On NAVI C/U mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale.	
		Vehicle signals	On NAVI C/U mode, analyzes the following vehicle signals: Vehicle speed signal, light signal, ignition switch signal, and reverse signal.	
		History of Errors	Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed.	
		Navigation	Display Longitude & Latitude	Display the map. Use the joystick to adjust position. Longitude and latitude will be displayed.
			Speed Calibration	Under ordinary conditions, the navigation system distance measuring function will automatically compensate for minute decreases in wheel and tire diameter caused by tire wear or low-pressure. Speed calibration immediately restores system accuracy in cases such as when distance calibration is needed because of the use of tire chains in inclement weather.
	Angle adjustment		Corrects difference between actual turning angle of a vehicle and turning angle of the car mark on the display.	
		Initialize Location	This mode is for initializing the current location. Use when the vehicle is transported a long distance on a trailer, etc.	
CAN DIAG SUPPORT MONITOR		Display status of CAN communication.		

#### NOTE:

Make the status that is set by D/N function be shown.

### Self-Diagnosis Mode (DCU)


#### OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.


EKS009VK

# NAVIGATION SYSTEM


3. While pressing the “PAUSE/MUTE” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing “PREV” button.

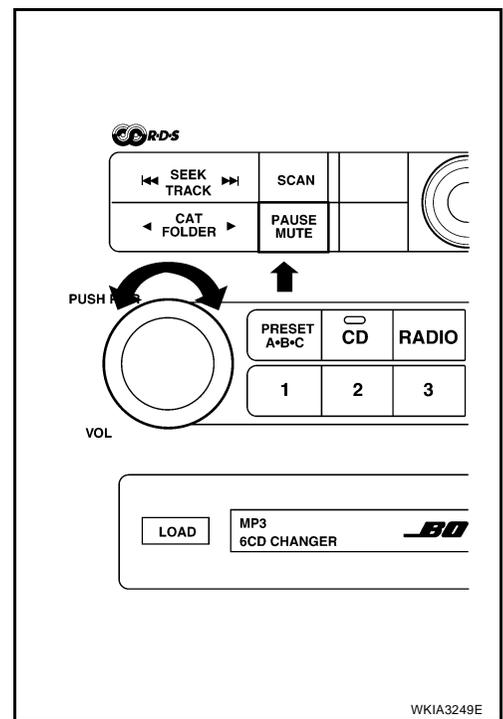


4. The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

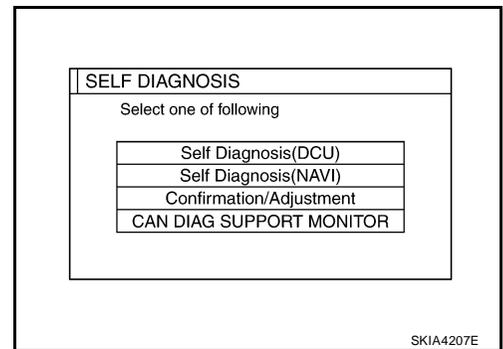

5. Perform self-diagnosis by selecting the “Self-diagnosis”.
  - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
  - A bar graph shown below the self-diagnosis subdivision screen indicates progress of the diagnosis.

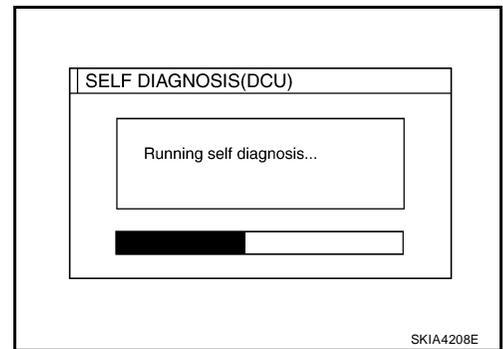

6. When the self-diagnosis completes, optional part confirmation screen will be shown.
  - When connection of an optional part is judged error, a screen to check if the optional part is actually fitted on the vehicle or not will be shown. When fitted, select the switch of the part on the screen and press “End”. Then the “SELF DIAGNOSIS” screen will be shown.
  - When the optional part is connected normally, the switch for the part will not appear on the screen.

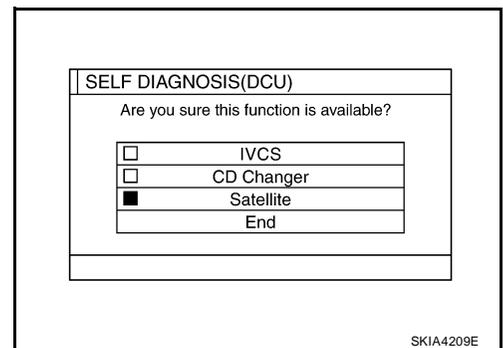


# NAVIGATION SYSTEM

7. On the “SELF DIAGNOSIS” screen, each unit name will be colored according to the diagnosis result, as follows.


- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

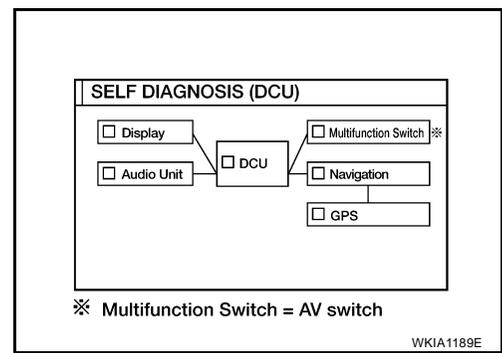

8. Select a switch on the “SELF DIAGNOSIS” screen and comments for the diagnosis results will be shown.

- When the switch is green, the following comment will be shown. “Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the “confirmation/adjustment” menu or refer to the service manual.”
- When the switch is yellow, the following comment will be shown. “Connection to the following unit is abnormal. See the service manual for further details”.
- When the switch is red, the following comment will be shown. “DCU is abnormal”.

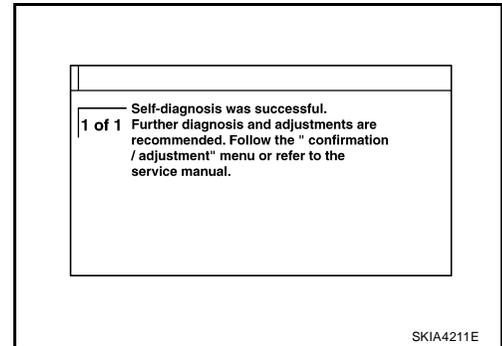

## SELF-DIAGNOSIS RESULT

### Quick reference table

1. Select a malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-95, "Wiring Diagram — COMM —"](#).
3. Turn the ignition switch OFF and perform self-diagnosis again.

Switch color	Screen switch					Diagnosis No.
	DCU*	DISPLAY	Audio unit	Navigation	GPS antenna	
Red	×					1
Gray	×	x				2
	x		x			3
	×			x	x	4

\*: DCU = Display control unit

### CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-153, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-151, "Screen is Not Shown"](#).

### Self-Diagnosis Codes


Diagnosis No.	Possible cause	Reference page
1	Display control unit malfunction	Refer to <a href="#">AV-166</a> .
2	Display communication line between display control unit and display unit	Refer to <a href="#">AV-136</a> .
3	Audio unit power supply and ground circuit Audio communication line between display control unit and audio unit	Refer to <a href="#">AV-134</a> .
4	NAVI control unit power supply and ground circuit AV communication line between display control unit and NAVI control unit	Refer to <a href="#">AV-133</a> .

# NAVIGATION SYSTEM


EKS009VL

## Self-Diagnosis Mode (NAVI) OPERATION PROCEDURE


1. Start the engine.
2. Turn the audio system off.
3. While pressing the "PAUSE/MUTE" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing "PREV" button.

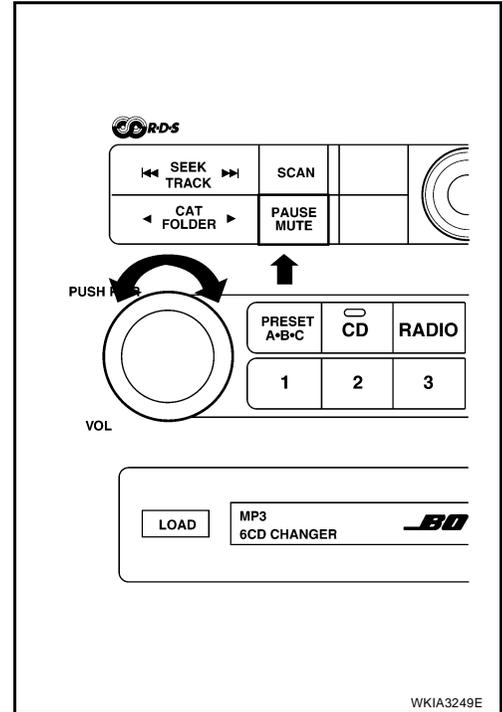

4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

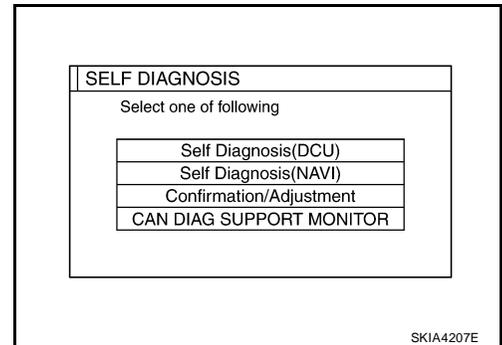

5. Perform self-diagnosis by selecting the "Self-diagnosis (NAVI)".
  - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
  - A bar graph will be shown on the screen to indicate progress of the diagnosis.

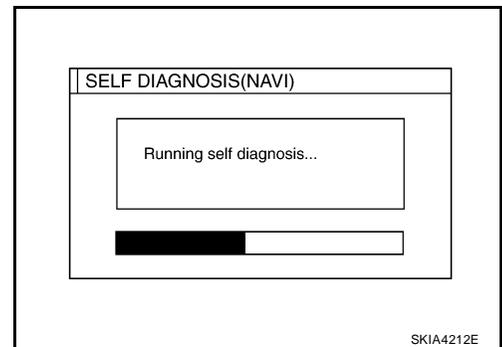


# NAVIGATION SYSTEM

6. On the “SELF DIAGNOSIS” screen, each unit name will be colored according to the diagnosis result, as follows.


- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

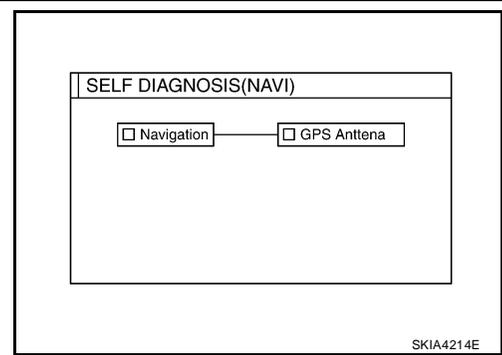

7. Select a switch on the “SELF DIAGNOSIS” screen and comments for the diagnosis results will be shown.

- When the switch is green, the following comment will be shown. “Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the “Confirmation and Adjustments” menu or refer to the service manual.”
- When the switch is yellow, the following comment will be shown. “Connection to the following unit is abnormal. See the service manual for further details”.
- When the switch is red, the following comment will be shown. “Center Control Unit is abnormal”.
- When the switch is gray, the following comment will be shown. “Self-diagnosis for DVD-ROM DRIVER of NAVI was not conducted because no DVD-ROM was available.”

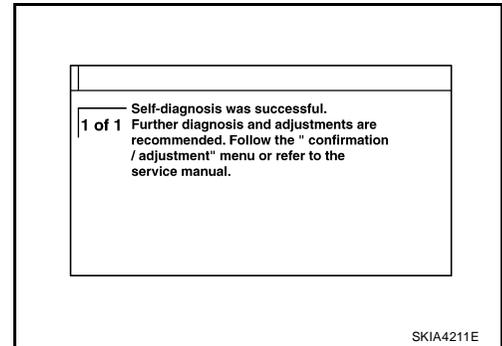

## SELF-DIAGNOSIS RESULT

### Quick reference table

1. Select an malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-95, "Wiring Diagram — COMM —"](#).
3. Turn the ignition switch OFF and perform self-diagnosis again.

Switch color	Screen switch		Diagnosis No.
	Center control unit*	GPS antenna	
Red	×		1
Gray	×		2
Yellow	×		3
	×		4
	×	×	5

\*: Center Control unit = NAVI control unit

### CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-153, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-151, "Screen is Not Shown"](#).

### Self-diagnosis codes

Diagnosis No.	Possible cause	Reference page
1	NAVI control unit malfunction.	Refer to <a href="#">AV-165</a>
2	No map DVD-ROM is inserted in the NAVI control unit.	Refer to <a href="#">AV-139</a>

# NAVIGATION SYSTEM


Diagnosis No.	Possible cause	Reference page
3	<p>When "DVD-ROM error. Please check disc." is shown.</p> <ol style="list-style-type: none"><li>1. Eject map DVD-ROM and check if it is compatible with the system.</li><li>2. Check ejected DVD-ROM for dirt, damage, and warpage.</li><li>3. If no error is found, insert a known good map DVD-ROM of the same type and perform self-diagnosis again. If same result is shown, the NAVI control unit is malfunctioning. If result is normal, the map DVD-ROM is malfunctioning.</li></ol>	Refer to <a href="#">AV-139</a>
4	<p>If "Error found in DVD-ROM or DVD-ROM driver in control unit. Please perform diagnosis in accordance with service manual" is shown, carry out same inspection as diagnosis No. 3.</p>	Refer to <a href="#">AV-139</a>
5	<p>GPS antenna system.</p> <ol style="list-style-type: none"><li>1. Visually check for a broken wire in the GPS antenna coaxial cable.</li><li>2. Disconnect GPS antenna connector, and make sure approximately 5V is supplied from the NAVI control unit. If not, the NAVI control unit is malfunctioning. If 5V is supplied, replace the GPS antenna. If the connection is still malfunction after the replacement of the GPS antenna, the NAVI control unit is malfunctioning.</li></ol>	Refer to <a href="#">AV-140</a>

# NAVIGATION SYSTEM

EKS009VM


## Confirmation/Adjustment Mode OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "PAUSE/MUTE" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing "PREV" button.

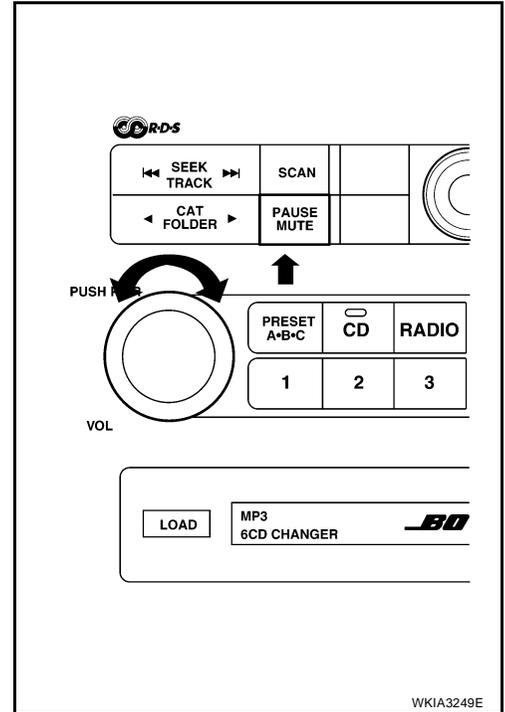


WKIA3249E

4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

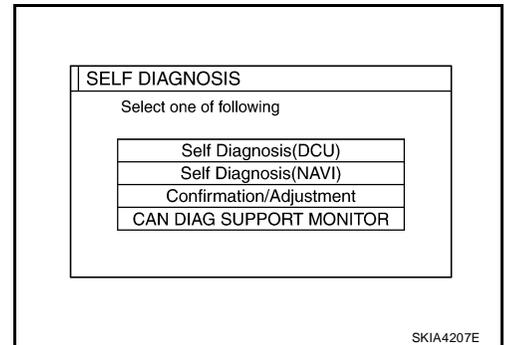

SKIA4207E


5. When "Confirmation/Adjustment" is selected on the initial self-diagnosis screen, the operation will enter the CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
6. The initial trouble diagnosis screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Auto Climate Control" and "Navigation" will become selective.
7. Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

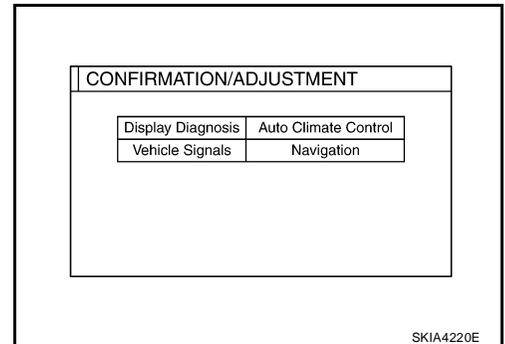

SKIA4220E

# NAVIGATION SYSTEM

## DISPLAY DIAGNOSIS

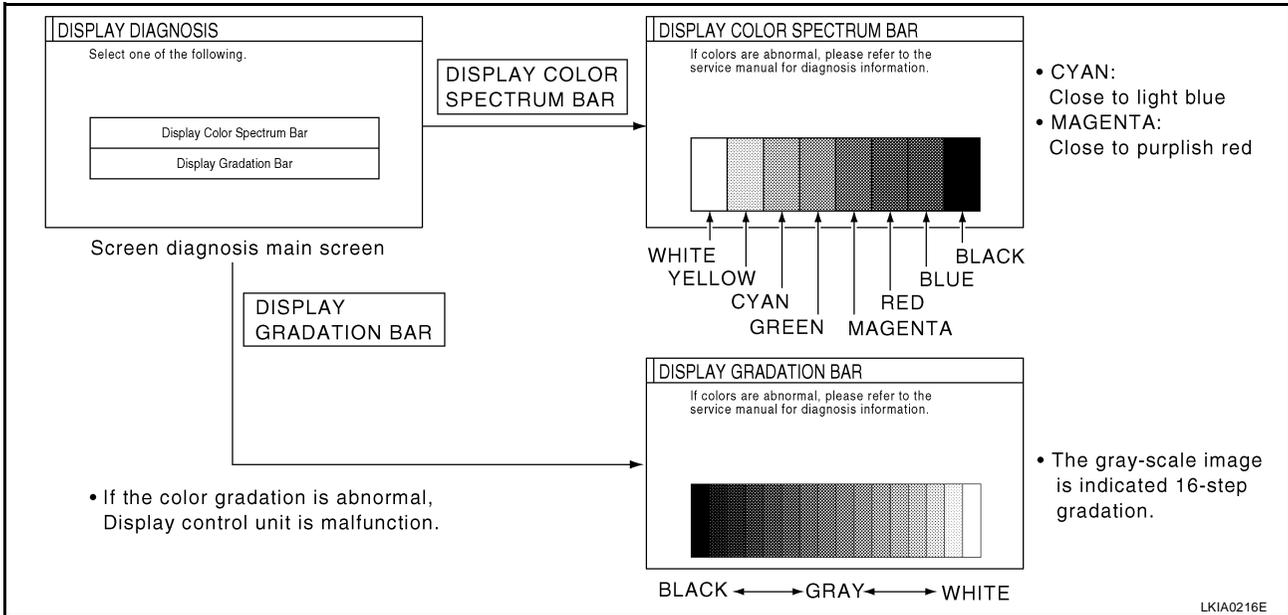

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

**R (red) signal error** : Screen looks bluish  
**G (green) signal error** : Screen looks reddish  
**B (blue) signal error** : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-145, "Color of RGB Image is Not Proper \(All Screens Look Bluish\)"](#) , [AV-146, "Color of RGB Image is Not Proper \(All Screens Look Reddish\)"](#) and [AV-147, "Color of RGB Image is Not Proper \(All Screens Look Yellowish\)"](#) .

## VEHICLE SIGNALS

- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

### CAUTION:

**In case of confirming light signal, set D/N mode to ON/OFF of lighting switch (normal setting).**

- OFF: D (Day mode)
- ON: N (Night mode)

**Unless above setting, light signal (ON/OFF) may not be accurately displayed.**

VEHICLE SIGNALS	
Vehicle Speed	OFF
IGN	ON
Reverse	OFF
IVCS	OFF
Light	OFF

WKIA3250E

Diagnosis item	Display	Condition	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
	-	Ignition switch in ACC position	
Light	ON	Lighting switch ON	-
	OFF	Lighting switch OFF	
IGN	ON	Ignition switch ON	-
	OFF	Ignition switch ACC	


# NAVIGATION SYSTEM

Diagnosis item	Display	Condition	Remarks
Reverse	ON	Selector lever in R position	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Selector lever in other than R position	
	–	Ignition switch in ACC position	
IVCS	OFF	Not used	–


- If vehicle speed is NG, refer to [AV-130, "Vehicle Speed Signal Check for Display Control Unit"](#) .
- If light is NG, refer to [AV-131, "Illumination Signal Check for Display Control Unit"](#) .
- If IGN is NG, refer to [AV-132, "Ignition Signal Check for Display Control Unit"](#) .
- If reverse is NG, refer to [AV-132, "Reverse Signal Check for Display Control Unit"](#) .

## NAVIGATION

1. The initial confirmation/adjustment screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "History of Errors" and "Navigation" will become selective.
2. Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

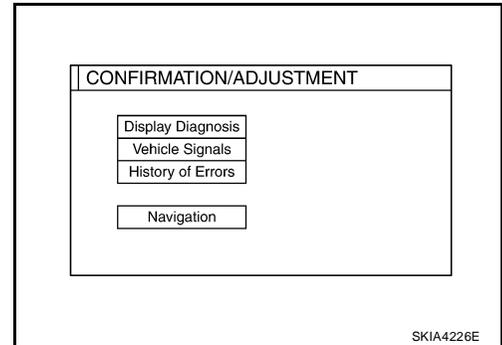

## DISPLAY DIAGNOSIS

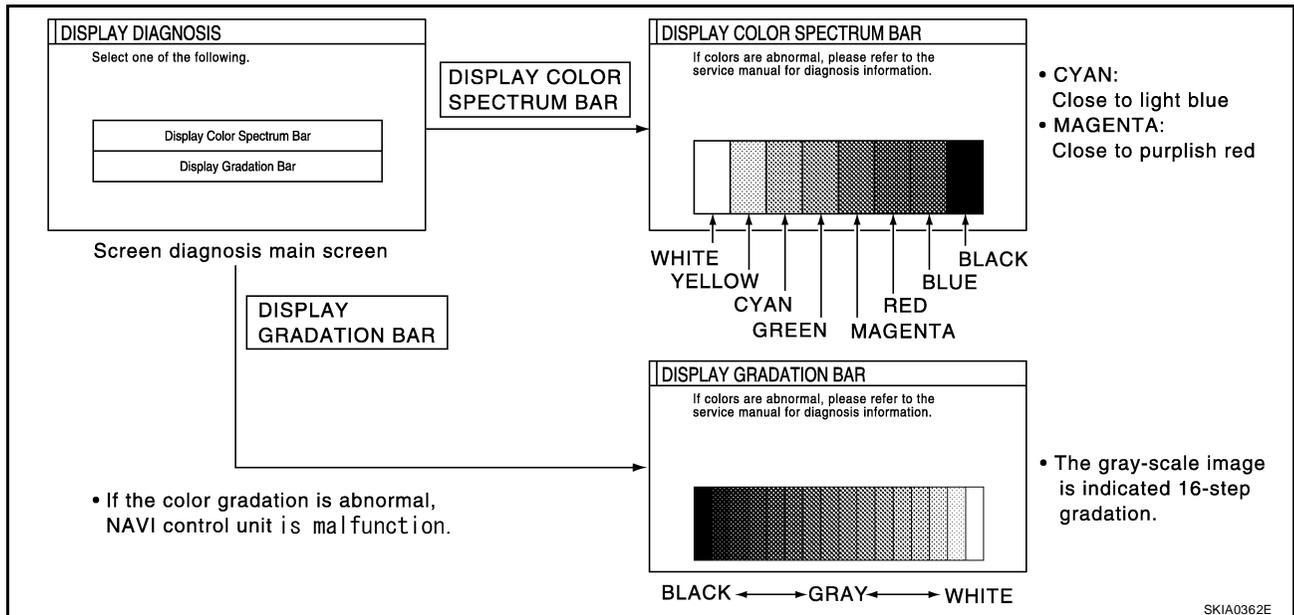

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.
  - R (red) signal error** : Screen looks bluish
  - G (green) signal error** : Screen looks reddish
  - B (blue) signal error** : Screen looks yellowish
- When the color of the screen looks unusual, refer to [AV-142, "Color of RGB Image is Not Proper \(Only NAVI Screen Looks Bluish\)"](#) , [AV-143, "Color of RGB Image is Not Proper \(Only NAVI Screen Looks Reddish\)"](#) and [AV-147, "Color of RGB Image is Not Proper \(All Screens Look Yellowish\)"](#) .

# NAVIGATION SYSTEM

## VEHICLE SIGNALS

- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

**CAUTION:**

**In case of confirming light signal, set D/N mode to ON/OFF of light switch (normal setting).**

- **OFF: D (Day mode)**
- **ON: N (Night mode)**

**Unless mode is in above setting, light signal (ON/OFF) may not be accurately displayed.**


VEHICLE SIGNALS	
Vehicle Speed	OFF
Light	OFF
IGN	ON
Reverse	OFF

WKIA3251E

Diagnosis item	Display	Condition	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
	-	Ignition switch in ACC position	
Light	ON	Lighting switch ON	-
	OFF	Lighting switch OFF	
IGN	ON	Ignition switch ON	-
	OFF	Ignition switch ACC	
Reverse	ON	Selector lever in R position	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Selector lever in other than R position	
	-	Ignition switch in ACC position	

- If vehicle speed is NG, refer to [AV-129, "Vehicle Speed Signal Check for NAVI Control Unit"](#) .
- If light is NG, refer to [AV-131, "Illumination Signal Check for NAVI Control Unit"](#) .
- If IGN is NG, refer to [AV-131, "Ignition Signal Check for NAVI Control Unit"](#) .
- If reverse is NG, refer to [AV-132, "Reverse Signal Check for NAVI Control Unit"](#) .

## HISTORY OF ERRORS

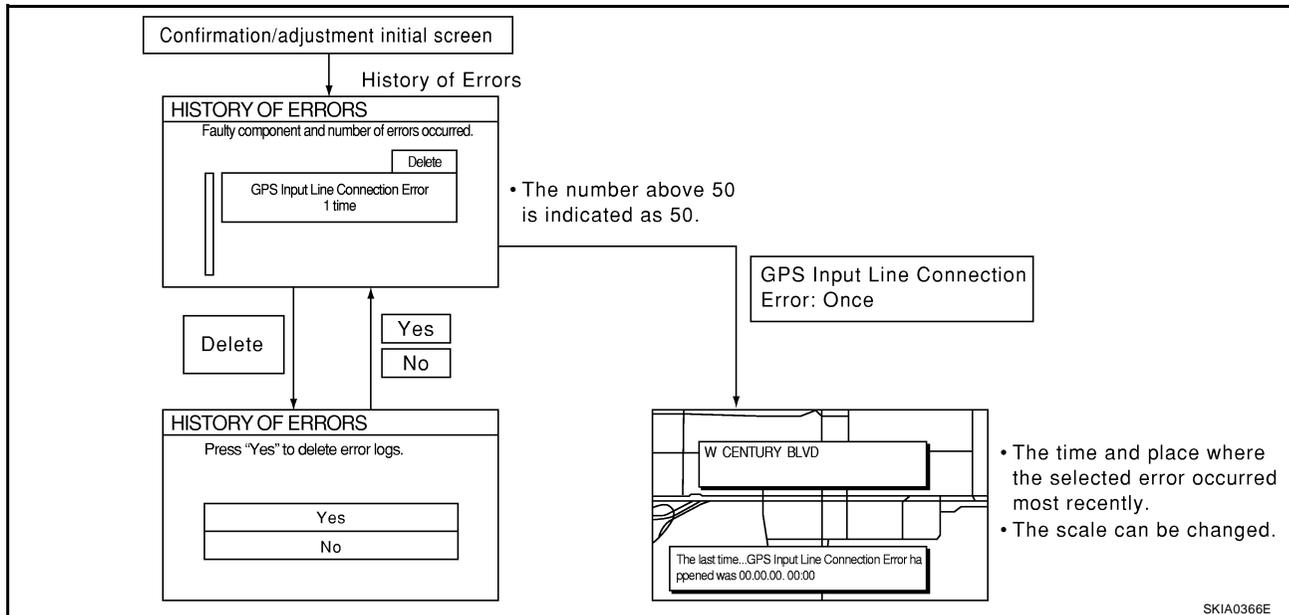

## DIAGNOSIS BY HISTORY OF ERRORS

The "Self-diagnosis" results indicate whether an error occurred during the period from when the ignition switch is turned to ON until "Self-diagnosis" is completed.

# NAVIGATION SYSTEM

If an error occurred before the ignition switch was turned to ON and does not occur again until the “Self-diagnosis” is completed, the diagnosis result will be judged normal. Therefore, those errors in the past which cannot be found by the “Self-diagnosis” must be found by diagnosing the “History of Errors”.

The History of Errors displays the time and place of the most recent occurrence of that error. However, take note of the following points.

- Correct time of the error occurrence may not be displayed when the GPS antenna substrate within the NAVI control unit has malfunctioned.
- Place of the error occurrence is represented by the position of the current-location mark at the time when the error occurred. If the current-location mark has deviated from the correct position, then the place of the error occurrence may be located correctly.
- The maximum number of occurrences which can be stored is 50. For the 51st and later occurrences, the displayed number remains 50.

When a reproducible malfunction occurred but its cause cannot be identified because several errors are present, record the item, number and place (longitude/latitude) of error occurrence (or delete the History of Errors), then turn the ignition switch from OFF to ON to reproduce the malfunction. Check the History of Errors to find the items which show an increased number of occurrences, and diagnose the item.


Error item	Possible causes	Example of symptom
	Action/symptom	
Gyro sensor disconnected	Communications malfunction between NAVI control unit and internal gyro.	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Angular velocity cannot be detected.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	
GPS disconnected	Communication error between NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.)</li> <li>● GPS receiving status remains gray.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	
GPS transmission cable malfunction	Malfunctioning transmission wires to NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> <li>● During self-diagnosis, GPS diagnosis is not performed.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	
GPS input line connection error	Malfunctioning receiving wires to NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.)</li> <li>● GPS receiving status remains gray.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	
GPS TCX0 over GPS TCX0 under	Oscillating frequency of the GPS substrate frequency synchronizing oscillation circuit exceeded (or below) the specification	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.)</li> <li>● GPS receiving status remains gray.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference, or the control unit may have been subjected to excessively high or low temperatures.</li> </ul>	
GPS ROM malfunction GPS RAM malfunction	Contents of ROM (or RAM) in GPS substrate are malfunctioning.	<ul style="list-style-type: none"> <li>● Location detection accuracy of the navigation system will deteriorate, depending on the error area in the memory, because GPS cannot make correct positioning. (Location correction using GPS is not performed.)</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	

# NAVIGATION SYSTEM

Error item	Possible causes	Example of symptom
	Action/symptom	
GPS RTC malfunction	Clock IC in GPS substrate is malfunctioning.	<ul style="list-style-type: none"> <li>● Correct time may not be displayed.</li> <li>● After the power is turned on, the system always takes some time until GPS positioning becomes possible. (The GPS receiver starts positioning without re-collecting the whole satellite information when it judged the data stored in the receiver is correct.)</li> <li>● Correct time of error occurrence may not be stored in the "History of Errors".</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference.</li> </ul>	
GPS antenna disconnected	Malfunctioning connection between GPS substrate in NAVI control unit and GPS antenna.	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.)</li> <li>● GPS receiving status remains gray.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration.</li> </ul>	
Low voltage of GPS	The power voltage supplied to the GPS circuit board has decreased.	<ul style="list-style-type: none"> <li>● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.)</li> <li>● GPS receiving status remains gray.</li> </ul>
	<ul style="list-style-type: none"> <li>● Perform self-diagnosis.</li> <li>● When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration.</li> </ul>	
DVD-ROM Malfunction DVD-ROM Read error DVD-ROM Response Error	Malfunctioning NAVI control unit.	-
	Dedicated map DVD-ROM is in the system, but the data cannot be read.	<ul style="list-style-type: none"> <li>● The map of a particular location cannot be displayed.</li> <li>● Specific guidance information cannot be displayed.</li> <li>● Map display is slow.</li> <li>● Guidance information display is slow.</li> <li>● System has been affected by vibration.</li> </ul>
	<ul style="list-style-type: none"> <li>● Is map DVD-ROM damaged, warped, or dirty?                             <ul style="list-style-type: none"> <li>- If damaged or warped, the map DVD-ROM is malfunctioning.</li> <li>- If dirty, wipe the DVD-ROM clean with a soft cloth.</li> </ul> </li> <li>● Perform self-diagnosis.</li> <li>● When NAVI control unit is judged normal by self-diagnosis, the symptom is judged intermittent, caused by vibration.</li> </ul>	

## NAVIGATION


1. The navigation screen will be shown, and items "Display Longitude & Latitude", "Speed Calibration", "Angle Adjustment" and "Initialize Location" will become selective.
2. Select each switch on "NAVIGATION" screen to display the relevant diagnosis screen.

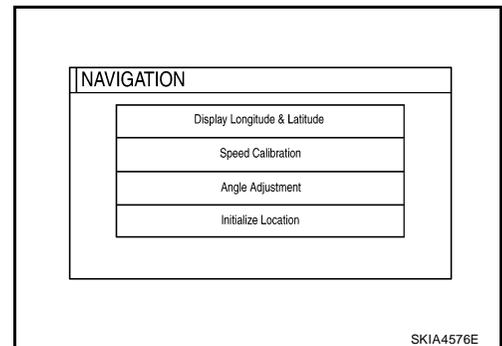

# NAVIGATION SYSTEM

## Display Longitude & Latitude


- Able to confirm/adjust longitude and latitude.

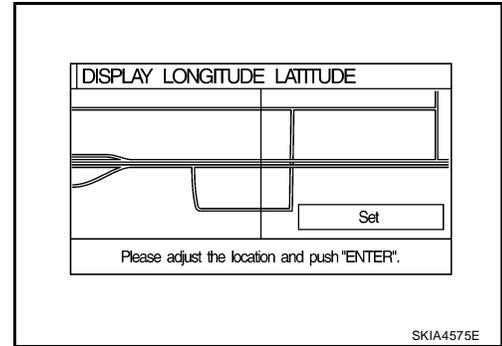

A  
B  
C  
D

## Angle adjustment


- Adjusts turning angle output detected by the gyroscope.

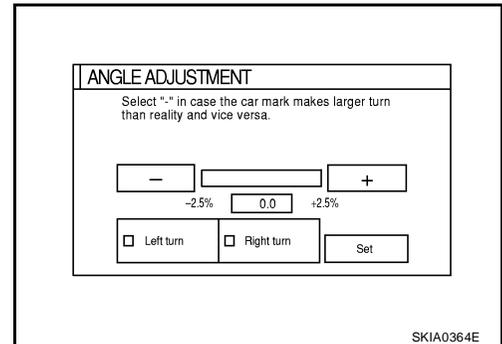

E  
F  
G  
H

## Speed Calibration

- During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

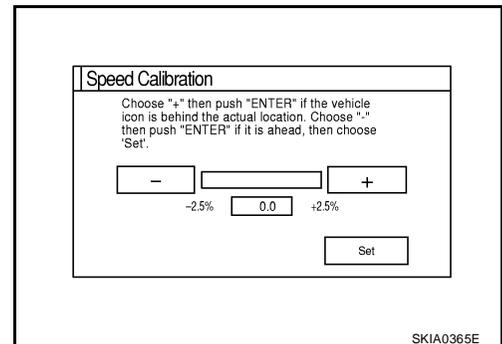

I  
J  
AV  
L


## Initialize Location

- This mode is for initializing the current location.


M

## CAN DIAG SUPPORT MONITOR OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "PAUSE/MUTE" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing "PREV" button.

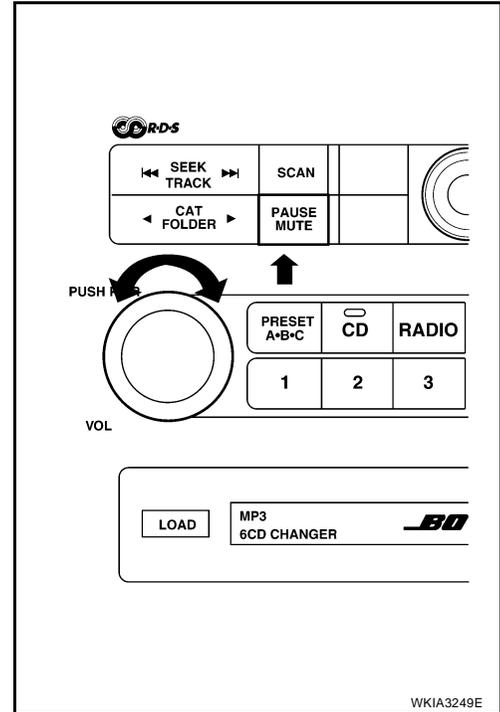


4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.
5. Select "CAN DIAG SUPPORT MONITOR".

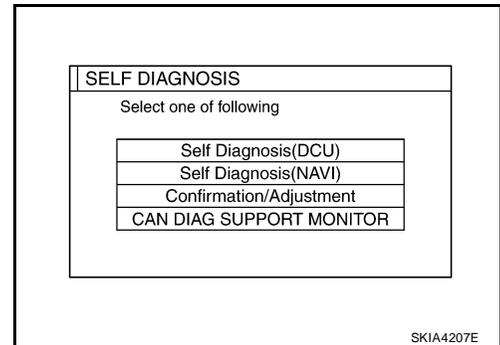

6. Display status of CAN communication.

Item	Content	Error counter
CAN_COMM	OK/NG	0-50
CAN_CIRC_1	OK/UNKWN	0-50
CAN_CIRC_2	OK/UNKWN	0-50
CAN_CIRC_3	OK/UNKWN	0-50
CAN_CIRC_4	OK/UNKWN	0-50
CAN_CIRC_5	OK/UNKWN	0-50
CAN_CIRC_6	OK/UNKWN	0-50
CAN_CIRC_7	OK/UNKWN	0-50
CAN_CIRC_8	OK/UNKWN	0-50
CAN_CIRC_9	OK/UNKWN	0-50

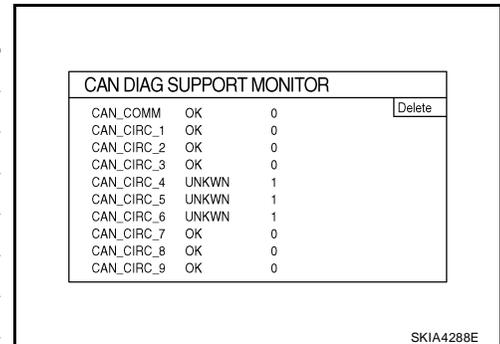

- If the ignition is turned on and UNKWN is shown on the screen, the value of the counter will be up. (MAX50)

# NAVIGATION SYSTEM

---

- The value of the counter does not change if the ignition changes to OFF. (MAX50)
- If the counter shows the value of 50 and UNKWN is shown, the value of 50 will not be changed.

## AV Switch Self-Diagnosis Function

EKS009VO

Refer to [AV-29, "AV Switch Self-Diagnosis Function"](#) .

A

B

C

D

E

F

G

H

I

J

AV

L

M

# NAVIGATION SYSTEM

EKS009VP

## Power Supply and Ground Circuit Check for NAVI Control Unit

### 1. CHECK FUSE

Make sure the following fuses of the NAVI control unit are not blown.

Terminals		Power source	Fuse No.
Connector	Terminal		
B151	2, 3	Battery power	29
	6	ACC power	4

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect NAVI control unit connector B151.
2. Check voltage between connector terminals and ground as follows.

Terminals		Ignition switch position	Ignition switch position		
(+)	(-)		OFF	ACC	ON
Connector	Terminal				
B151	2, 3	Ground	Battery voltage	Battery voltage	Battery voltage
	6		0V	Battery voltage	Battery voltage

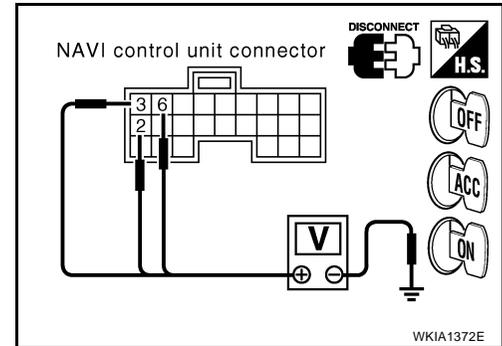

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between NAVI control unit and fuse.

### 3. CHECK GROUND CIRCUIT


Check continuity between the following NAVI control unit connector terminals and ground.

Terminals			Ignition switch	Continuity
Connector	Terminal	—		
B151	1, 4	Ground	OFF	Yes

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

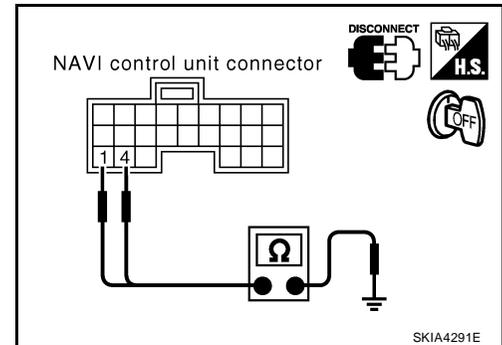

# NAVIGATION SYSTEM

## Power Supply and Ground Circuit Check for Display Control Unit

EKS009V0

### 1. CHECK FUSE

Make sure the following fuses of the display control unit are not blown.

Terminals		Power source	Fuse No.
Connector	Terminal		
M94	1	Battery power	29
	10	ACC power	4

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect display control unit connector M94.
2. Check voltage between connector terminals and ground as follows.

Terminals		Ignition switch position
(+)	(-)	
Connector	Terminal	OFF ACC ON
M94	1	Battery voltage
	10	0V

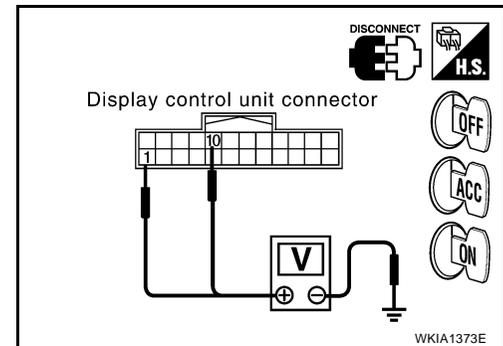

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between display control unit and fuse.

### 3. CHECK GROUND CIRCUIT


Check continuity between the following display control unit connector terminals and ground.

Terminals			Ignition switch	Continuity
Connector	Terminal	—		
M94	3	Ground	OFF	Yes

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

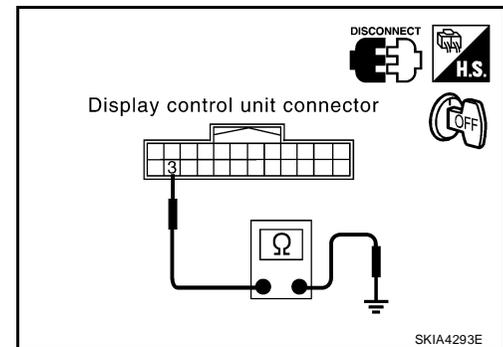

# NAVIGATION SYSTEM

EKS009VR

## Power Supply and Ground Circuit Check for Display Unit

### 1. CHECK POWER SUPPLY AND GROUND CIRCUIT FOR DISPLAY CONTROL UNIT

1. Check power supply and ground circuit for display control unit. Refer to [AV-125, "Power Supply and Ground Circuit Check for Display Control Unit"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.


### 2. CHECK POWER SUPPLY CIRCUIT FOR DISPLAY UNIT

1. Disconnect display unit connector.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminals 2, 3 and ground.

**Approx. 9V**

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

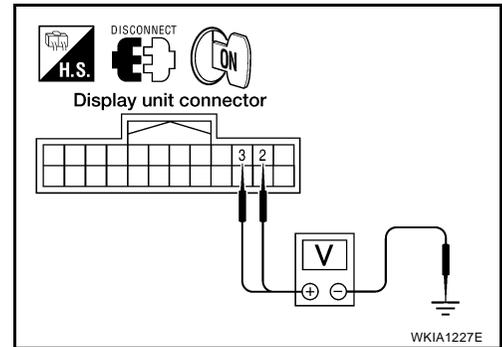


### 3. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M94.
3. Check continuity between display control unit harness connector M94 terminals 2, 4 and display unit harness connector M93 terminals 2, 3.

Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	
M94	2	M93	2	Yes
	4		3	

4. Check continuity between display unit and ground.

Terminals				Continuity
Display unit		—		
Connector	Terminal			
M93	2	Ground		No
	3			

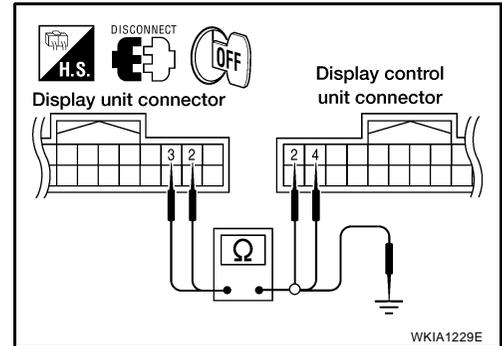

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).
- NG >> Repair harness.

# NAVIGATION SYSTEM


## 4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and ground.

**Continuity should exist.**

OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 5.

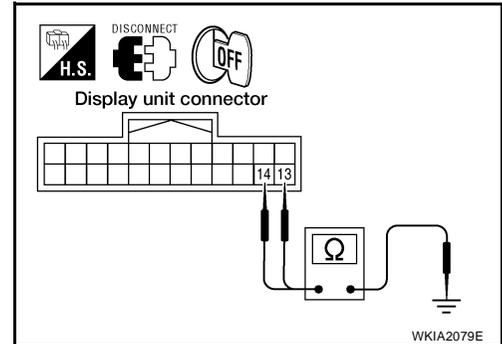


## 5. CHECK HARNESS

1. Disconnect display control unit connector M94.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and display control unit harness connector M94 terminals 5, 7.

**Continuity should exist.**

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).
- NG >> Repair harness.

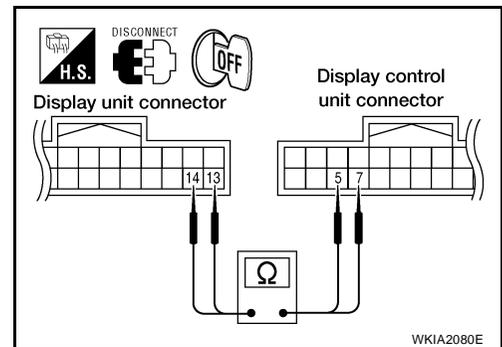


## 6. CHECK GROUND CIRCUIT

Check continuity between display unit and ground as follows.

Connector	Terminals		Ignition switch	Continuity
	Terminal	—		
M93	1	Ground	OFF	Yes

OK or NG

- OK >> Inspection End.  
 NG >> Repair harness.

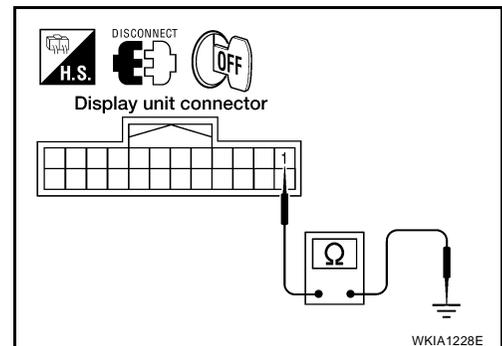

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# NAVIGATION SYSTEM

EKS009VS

## Power Supply and Ground Circuit Check for AV Switch

### 1. CHECK FUSE

Make sure the following fuses of the AV switch are not blown.

Terminals		Power source	Fuse No.
Connector	Terminal		
M98	1	Battery power	29
	2	ACC power	4

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect AV switch connector.
2. Check voltage between connector terminals and ground as follows.

Terminals			Ignition switch position		
(+)		(-)	OFF	ACC	ON
Connector	Terminal		Battery voltage	Battery voltage	Battery voltage
M98	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2		0V	Battery voltage	Battery voltage

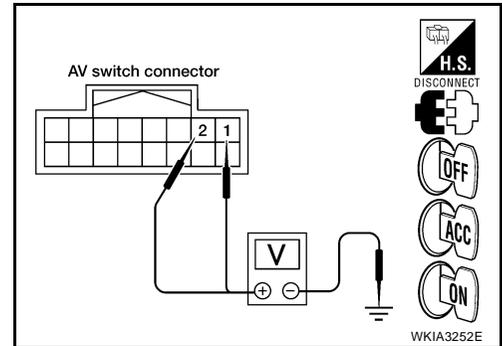

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between AV switch and fuse.

### 3. CHECK GROUND CIRCUIT


Check continuity between AV switch and ground as follows.

Terminals			Ignition switch	Continuity
Connector	Terminal	—		
M98	5	Ground	OFF	Yes

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

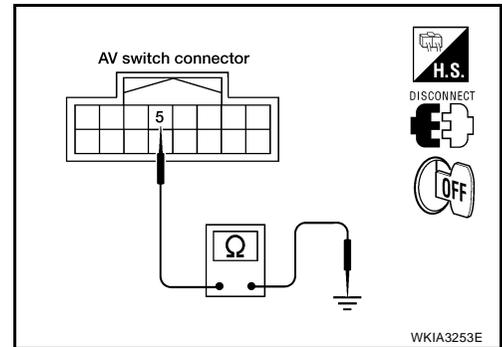

# NAVIGATION SYSTEM

EKS009VT

## Vehicle Speed Signal Check for NAVI Control Unit

### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152, combination meter connector M24, display control unit connector M94.
3. Check continuity between NAVI control unit harness connector B152 terminal 28 and combination meter harness connector M24 terminal 6.


**Continuity should exist.**

4. Check continuity between NAVI control unit harness connector B152 terminal 28 and ground.

**Continuity should not exist.**

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

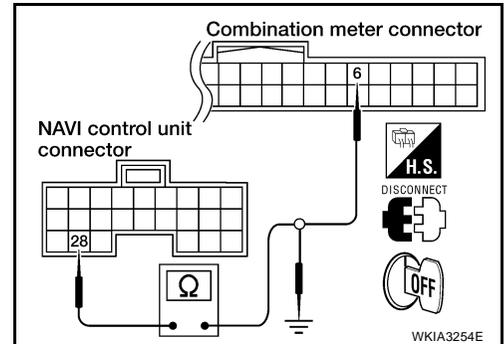


### 2. CHECK 1: VEHICLE SPEED SIGNAL

1. Connect NAVI control unit connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 28 and ground.

**Approx. 3.5V or more**

OK or NG

- OK >> GO TO 3.
- NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).

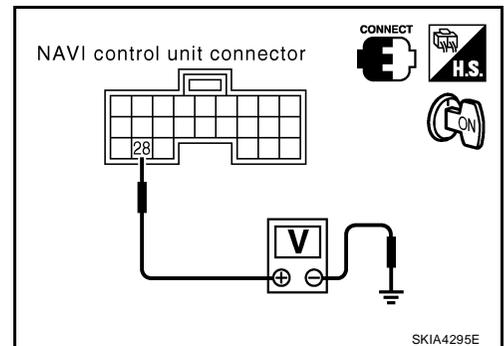


### 3. CHECK 2: VEHICLE SPEED SIGNAL

1. Connect combination meter connector and display control unit connector.
2. Drive vehicle at a constant speed.
3. Check signal between NAVI control unit harness connector B152 terminal 28 and ground with CONSULT-II or oscilloscope.

**28 - Ground** : Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#).

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NG >> Check combination meter system. Refer to [DI-21, "Vehicle Speed Signal Inspection"](#).

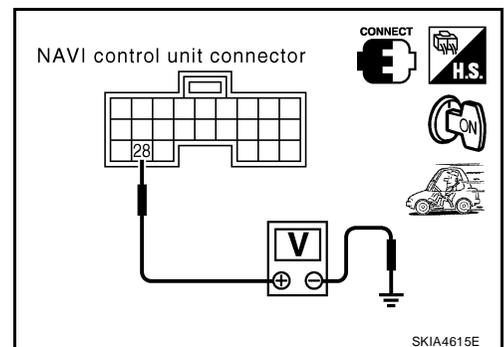

# NAVIGATION SYSTEM

EKS009VU

## Vehicle Speed Signal Check for Display Control Unit

### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M94, combination meter connector M24, NAVI control unit connector B152.
3. Check continuity between display control unit harness connector M94 terminal 16 and combination meter harness connector M24 terminal 6.

**Continuity should exist.**


4. Check continuity between display control unit harness connector M94 terminal 16 and ground.

**Continuity should not exist.**

OK or NG

OK >> GO TO 2.

NG >> Repair harness.

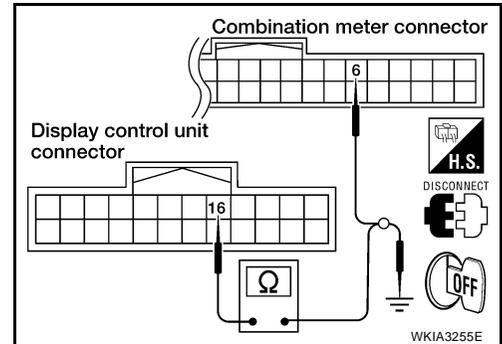

### 2. CHECK 1: VEHICLE SPEED SIGNAL


1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 16 and ground.

**Approx. 3.5V or more**

OK or NG

OK >> GO TO 3.

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

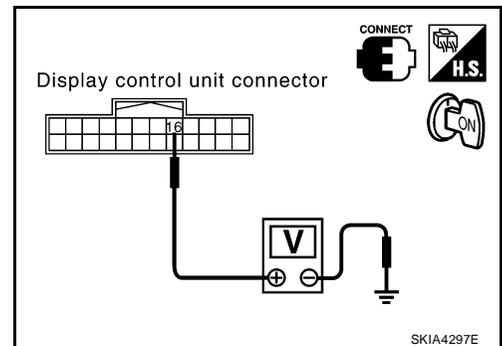

### 3. CHECK 2: VEHICLE SPEED SIGNAL


1. Connect combination meter connector and NAVI control unit connector.
2. Drive vehicle at a constant speed.
3. Check signal between display control unit harness connector M94 terminal 16 and ground with CONSULT-II or oscilloscope.

**16 - Ground** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

NG >> Check combination meter system. Refer to [DI-21, "Vehicle Speed Signal Inspection"](#) .

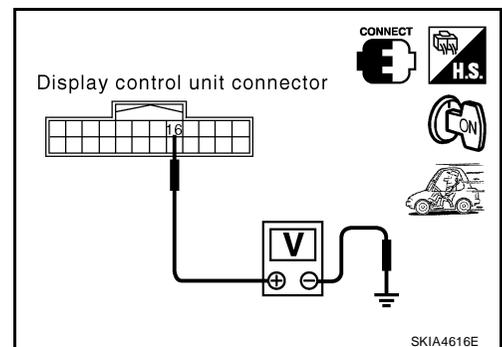

# NAVIGATION SYSTEM

## Illumination Signal Check for NAVI Control Unit

EKS009VV


### 1. CHECK ILLUMINATION SIGNAL

1. Turn the ignition switch ON.
2. Check voltage between NAVI control unit and ground.

Terminals			Lighting switch position	
(+)		(-)	1st or 2nd position	OFF
Connector	Terminal		Battery voltage	Approx. 0V
B152	25	Ground		

#### OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NG >> Check harness for open or short between NAVI control unit and IPDM E/R.

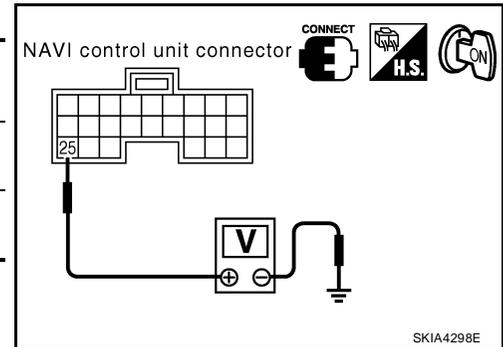

## Illumination Signal Check for Display Control Unit

EKS009VV


### 1. CHECK ILLUMINATION SIGNAL

1. Turn ignition switch ON.
2. Check voltage between display control unit and ground.

Terminals			Lighting switch position	
(+)		(-)	1st or 2nd position	OFF
Connector	Terminal		Battery voltage	Approx. 0V
M94	14	Ground		

#### OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).
- NG >> Check harness for open or short between display control unit and IPDM E/R.

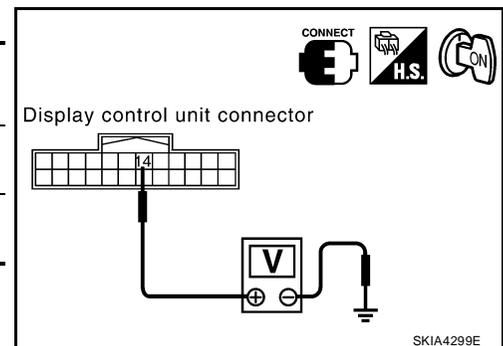

## Ignition Signal Check for NAVI Control Unit

EKS009VX


### 1. CHECK IGNITION SIGNAL

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 26 and ground.

**Battery voltage should exist.**

#### OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NG >> Check harness for open or short between NAVI control unit and fuse.

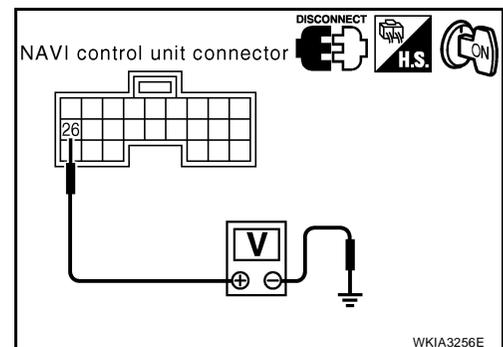

# NAVIGATION SYSTEM

EKS009VY

## Ignition Signal Check for Display Control Unit


### 1. CHECK IGNITION SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 12 and ground.

**Battery voltage should exist.**

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).
- NG >> Check harness for open or short between display control unit and fuse.

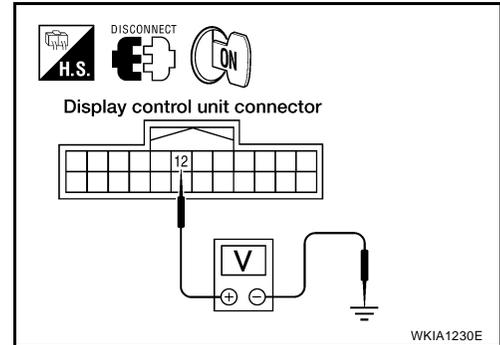

## Reverse Signal Check for NAVI Control Unit

EKS009VZ

### 1. CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place selector lever into R-position. Do back-up lamps come on?

YES or NO

- YES >> GO TO 2.
- NO >> Check back-up lamp system. Refer to [LT-100, "BACK-UP LAMP"](#).


### 2. CHECK REVERSE SIGNAL

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. With the selector lever in R-position, check voltage between NAVI control unit and ground.

Terminals			Selector lever position	
(+)		(-)		
Connector	Terminal		Ground	
B152	27	Ground	Battery voltage	Approx. 0V

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NG >> Check harness for open or short between NAVI control unit and back-up lamp position relay.

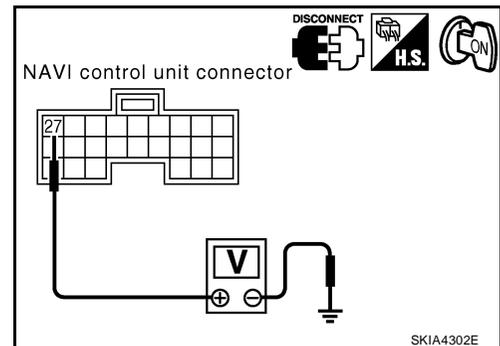

## Reverse Signal Check for Display Control Unit

EKS009W0

### 1. CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place selector lever into R-position. Do back-up lamps come on?

YES or NO

- YES >> GO TO 2.
- NO >> Check back-up lamp system. Refer to [LT-100, "BACK-UP LAMP"](#).

# NAVIGATION SYSTEM


## 2. CHECK REVERSE SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. With the selector lever in R-position, check voltage between display control unit and ground.

Terminals			Selector lever position	
(+)		(-)	R-position	Other than R-position
Connector	Terminal		Battery voltage	Approx. 0V
M94	6	Ground	Battery voltage	Approx. 0V

### OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).
- NG >> Check harness for open or short between display control unit and back-up lamp position relay.

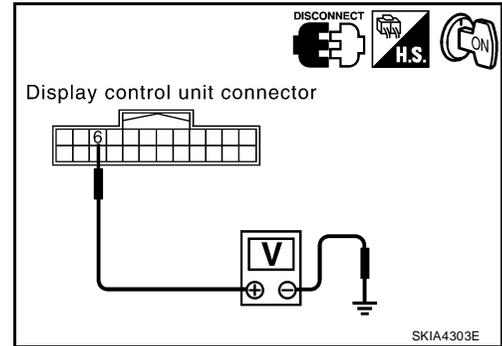

## AV Communication Line Check (Between Display Control Unit and NAVI Control Unit)

EKS009W1

### 1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for NAVI control unit. Refer to [AV-124, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#).

### OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

### 2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.


Terminals				Continuity
NAVI control unit		Display control unit		
Connector	Terminal	Connector	Terminal	
B152	44	M95	32	Yes
	45		34	

4. Check continuity between NAVI control unit and ground.

Terminals			Continuity
NAVI control unit		—	
Connector	Terminal		
B152	44	Ground	No
	45		

### OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

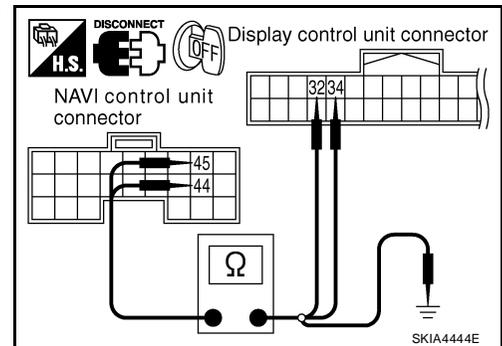

# NAVIGATION SYSTEM

## 3. CHECK SELF-DIAGNOSIS OF DCU

1. Replace NAVI control unit.
2. Connect NAVI control unit connector and display control unit connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

- OK >> Inspection End.  
 NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

## Audio Communication Line Check (Between Display Control Unit and Audio Unit)

EKS009W2

### 1. CHECK POWER SUPPLY AND GROUND CIRCUIT

1. Check power supply and ground circuit for audio unit. Refer to [AV-33, "Power Supply Circuit Inspection"](#) .

OK or NG

- OK >> GO TO 2.  
 NG >> Check the malfunctioning parts.

### 2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect audio unit connector M45 and display control unit connector M95.
3. Check continuity between audio unit and display control unit.


Terminals				Continuity
Display control unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M95	40	M45	65	Yes
	42		66	

4. Check continuity between display control unit and ground.

Terminals			Continuity
Display control unit		—	
Connector	Terminal		
M95	40	Ground	No
	42		

OK or NG

- OK >> GO TO 3.  
 NG >> Repair harness or connector.

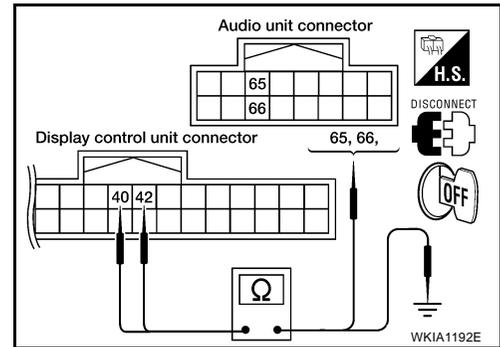

# NAVIGATION SYSTEM

## 3. CHECK 1: AUDIO-TX COMMUNICATION SIGNAL


1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M95 terminal 42 and ground.

**Approx. 3.5V or more.**

OK or NG

OK >> GO TO 4.

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

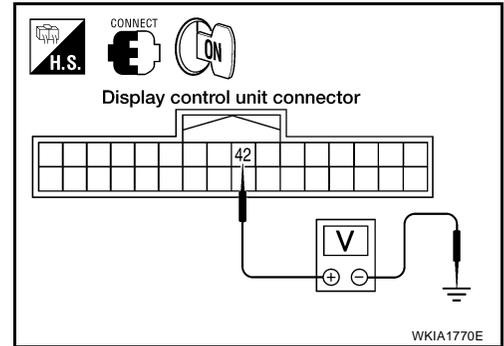

## 4. CHECK 2: AUDIO-RX COMMUNICATION SIGNAL


1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95.
3. Connect audio unit connector M45.
4. Turn ignition switch ON.
5. Check voltage between audio unit harness connector M45 terminal 65 and ground.

**Approx. 3.5V or more.**

OK or NG

OK >> GO TO 5.

NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#) .

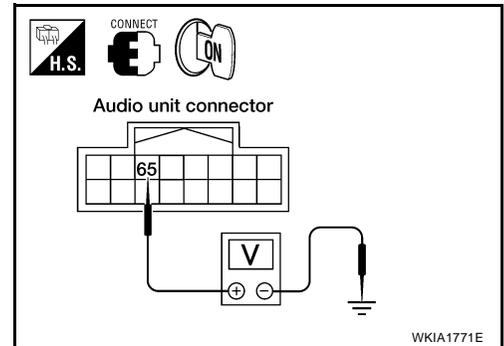

## 5. CHECK 3: AUDIO-TX COMMUNICATION SIGNAL


1. Turn ignition switch OFF.
2. Connect display control unit connector M95.
3. Turn ignition switch ON.
4. Check signal between display control unit harness connector M95 terminal 40 and ground with CONSULT-II or oscilloscope.

**40 - Ground** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

OK >> GO TO 6.

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

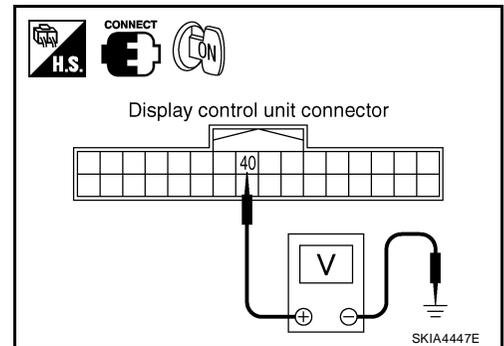

# NAVIGATION SYSTEM

## 6. CHECK 4: AUDIO-RX COMMUNICATION SIGNAL


1. Turn ignition switch ON.
2. Check signal between display control unit harness connector M95 terminal 42 and ground with CONSULT-II or oscilloscope.

**42 - Ground**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

OK or NG

- OK >> Inspection End.  
 NG >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#) .

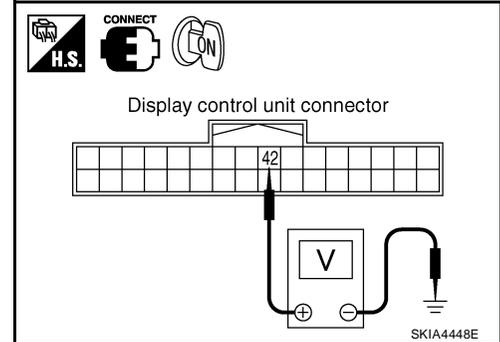

## Display Communication Line Check (Between Display Control Unit and Display Unit)

EKS009W3


### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display control unit and display unit.

Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	Yes
M95	36	M93	11	
	38		22	

4. Check continuity between display control unit and ground.

Terminals				Continuity
Display control unit		—		
Connector	Terminal	Ground		No
M95	36	Ground		
	38			

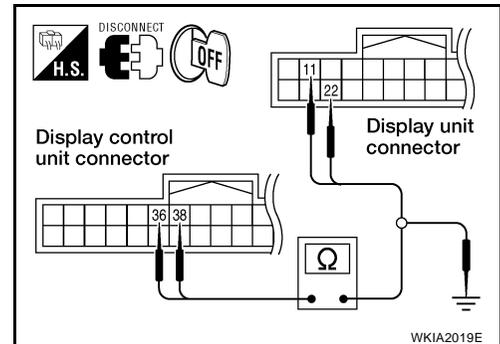

OK or NG

- OK >> GO TO 2.  
 NG >> Repair harness or connector.


### 2. CHECK 1: COMMUNICATION SIGNAL (DCU-DSP)

1. Connect display unit connector.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminal 11 and ground.

**Approx. 3.5V or more.**

OK or NG

- OK >> GO TO 3.  
 NG >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .

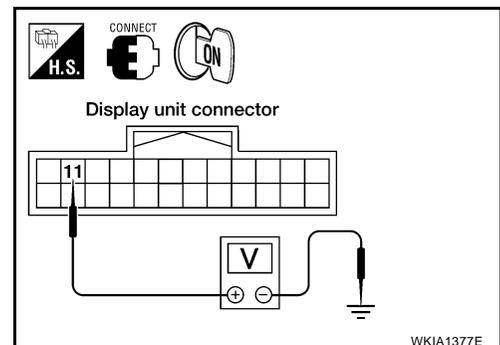

# NAVIGATION SYSTEM

## 3. CHECK 2: COMMUNICATION SIGNAL (DSP-DCU)


1. Turn ignition switch OFF.
2. Disconnect display unit connector M93.
3. Connect display control unit connector.
4. Turn ignition switch ON.
5. Check voltage between display control unit harness connector M95 terminal 38 and ground.

**Approx. 3.5V or more.**

OK or NG

OK >> GO TO 4.

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

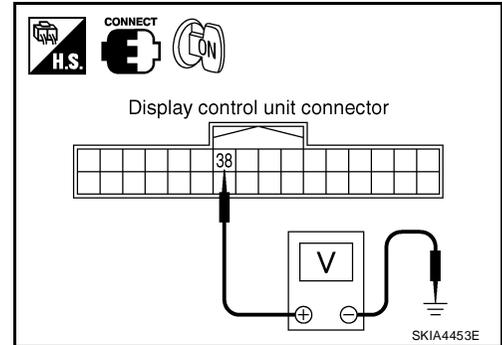

## 4. CHECK 3: COMMUNICATION SIGNAL (DCU-DSP)

1. Turn ignition switch OFF.
2. Connect display unit connector.
3. Turn ignition switch ON.
4. Check signal between display control unit harness connector M95 terminal 36 and ground with CONSULT-II or oscilloscope.


**36 - Ground**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

OK or NG

OK >> GO TO 5.

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

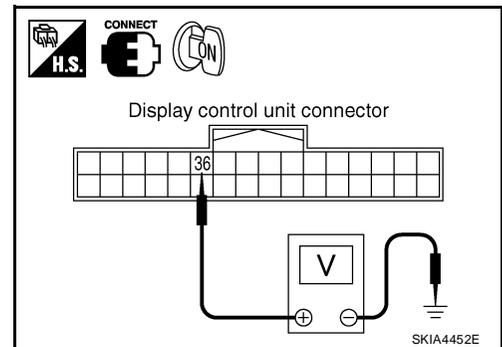

## 5. CHECK 4: COMMUNICATION SIGNAL (DSP-DCU)

1. Turn ignition switch ON.
2. Check signal between display control unit harness connector M95 terminal 38 and ground with CONSULT-II or oscilloscope.


**38 - Ground**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

OK or NG

OK >> Inspection End.

NG >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .

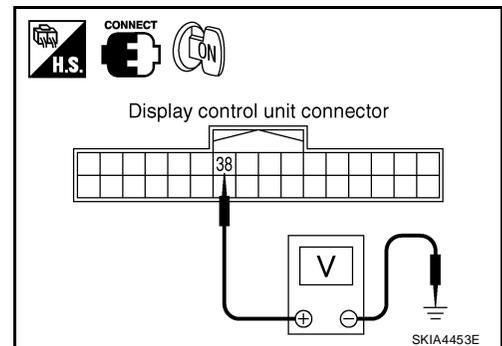

# NAVIGATION SYSTEM

## AV Communication Line Check (Between Display Control Unit and AV Switch)

EKS009W4


### 1. CHECK AV SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and AV switch connector M98.
3. Check continuity between display control unit and AV switch.

Terminals				Continuity
Display control unit		AV switch		
Connector	Terminal	Connector	Terminal	
M95	28	M98	6	Yes
	30		8	

4. Check continuity between display control unit and ground.

Terminals				Continuity
Display control unit		—		
Connector	Terminal			
M95	28	Ground		No
	30			

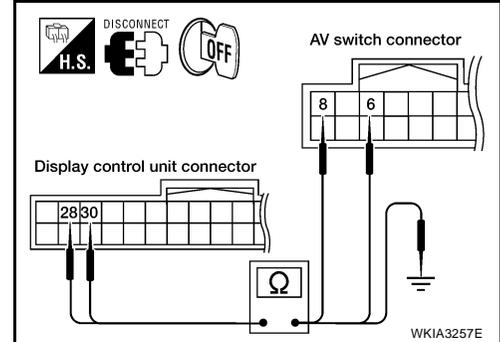

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

### 2. CHECK SELF-DIAGNOSIS OF DCU

1. Replace AV switch.
2. Connect display control unit connector and AV switch connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

- OK >> Inspection End.
- NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#).


## CAN Communication Line Check

EKS009W5

### 1. CHECK MONITOR DESCRIPTION

1. Start display control unit self-diagnosis. Refer to [AV-109, "Self-Diagnosis Mode \(DCU\)"](#).
2. Select "CAN DIAG SUPPORT MONITOR". Refer to [AV-122, "CAN DIAG SUPPORT MONITOR"](#).

Item	content		Error counter
	Normal condition	Error (Example)	
CAN_COMM	OK	NG	0-50
CAN_CIRC_1	OK	UNKWN	0-50
CAN_CIRC_2	OK	UNKWN	0-50
CAN_CIRC_3	OK	UNKWN	0-50
CAN_CIRC_4	OK	UNKWN	0-50
CAN_CIRC_5	OK	UNKWN	0-50
CAN_CIRC_6	OK	UNKWN	0-50
CAN_CIRC_7	OK	UNKWN	0-50
CAN_CIRC_8	OK	UNKWN	0-50
CAN_CIRC_9	OK	UNKWN	0-50

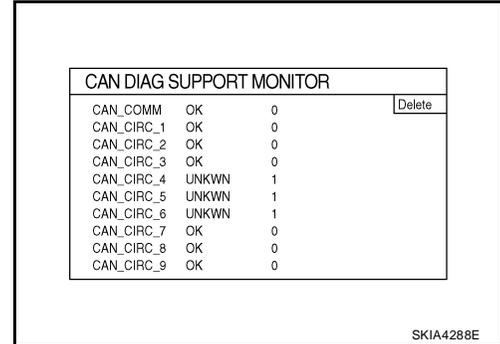

3. Record each item display description (OK/NG/UNKWN) displayed on the following CAN DIAG SUPPORT MONITOR Check Sheet.

#### CAN DIAG SUPPORT MONITOR Check Sheet

Diagnosis item	Screen display		Diagnosis item	Screen display	
CAN_COMM	OK	NG	CAN_CIRC_5	OK	UNKWN
CAN_CIRC_1	OK	UNKWN	CAN_CIRC_6	OK	UNKWN
CAN_CIRC_2	OK	UNKWN	CAN_CIRC_7	OK	UNKWN
CAN_CIRC_3	OK	UNKWN	CAN_CIRC_8	OK	UNKWN
CAN_CIRC_4	OK	UNKWN	CAN_CIRC_9	OK	UNKWN

>> After filling in CAN DIAG SUPPORT MONITOR Check Sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#).

## If NAVI Control Unit Detects That DVD-ROM Map is Not Inserted

EKS009W6

### 1. CHECK DVD-ROM

Make sure identified DVD-ROM map is inserted.

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).

NG >> Insert identified DVD-ROM map.

## If NAVI Control Unit Detects That Inserted DVD-ROM Map is Malfunctioning or If It is Impossible to Load Data from DVD-ROM Map

EKS009W7

### 1. CHECK 1: DVD-ROM

Remove inserted DVD-ROM map to check that it is identified.

OK or NG

OK >> GO TO 2.

NG >> Replace identified DVD-ROM map.

# NAVIGATION SYSTEM

## 2. CHECK 2: DVD-ROM

Check DVD-ROM for dirt, scratches and warpage.

OK or NG

- OK >> GO TO 3.
- NG >> Replace DVD-ROM map.

## 3. CHECK 3: DVD-ROM

Insert same DVD-ROM to make sure same diagnosis result is found as last self-diagnosis.

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NG >> Replace DVD-ROM map.

## If Connection Between NAVI Control Unit and GPS Antenna is Malfunctioning

EKS009W8

### 1. CHECK GPS ANTENNA

Check cable for GPS antenna for damage.

OK or NG

- OK >> GO TO 2.
- NG >> Replace GPS antenna. Refer to [AV-166, "Removal and Installation of GPS Antenna"](#).

### 2. CHECK BY REPLACEMENT OF GPS ANTENNA

Replace with other functional GPS antenna to try self-diagnosis again.

Result of self-diagnosis; Found same result?

- YES >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NO >> Replace GPS antenna. Refer to [AV-166, "Removal and Installation of GPS Antenna"](#).

## Operating Screen for Audio and A/C is Not Displayed When Showing NAVI Screen

EKS009W9

### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit harness connector M95 terminal 49, 51, 53, 55 and display unit harness connector M93 terminal 21, 9, 20, 8.


**Continuity should exist.**

4. Check continuity between display control unit harness connector M95 terminal 49, 51, 53, 55 and ground.

**Continuity should not exist.**

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

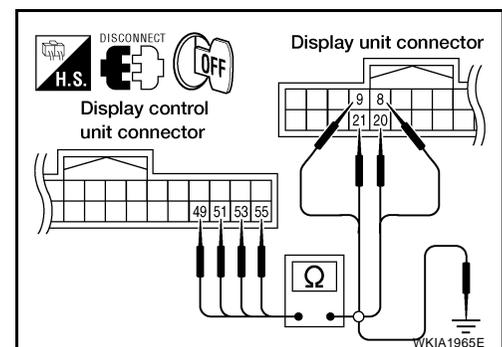

# NAVIGATION SYSTEM

## 2. CHECK HORIZONTAL SYNCHRONIZATION SIGNAL


1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display control unit connector M95 terminals 55 and 49 with CONSULT-II or oscilloscope.

**55 - 49** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

OK >> GO TO 3.

NG >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .

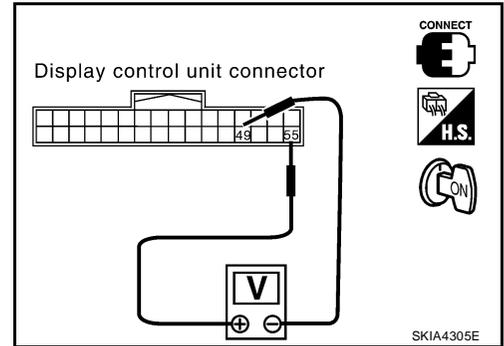

## 3. CHECK VERTICAL SYNCHRONIZATION SIGNAL


1. Turn ignition switch ON.
2. Check signal between display control unit connector M95 terminals 53 and 49 with CONSULT-II or oscilloscope.

**53 - 49** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

OK >> GO TO 4.

NG >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .

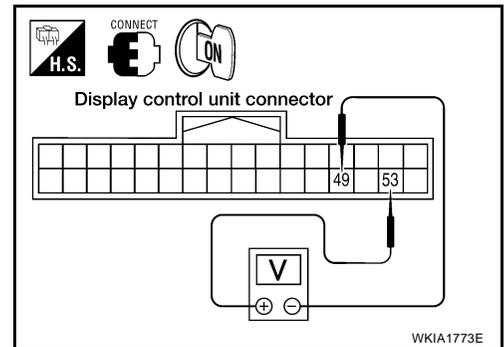

## 4. CHECK RGB AREA SIGNAL


1. Press the "TRIP" button.
2. Check signal between display control unit connector M95 terminals 51 and 49 with CONSULT-II or oscilloscope.

**51 - 49** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .

NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

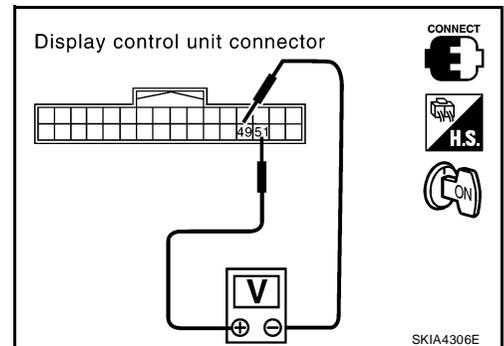

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

EKS009WA

## Color of RGB Image is Not Proper (Only NAVI Screen Looks Bluish)


### 1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

● **When the screen looks bluish.**

Terminals				Continuity
NAVI control unit		Display control unit		
Connector	Terminal	Connector	Terminal	
B151	18	M95	44	Yes
	17		45	

Terminals				Continuity
NAVI control unit		—		
Connector	Terminal			
B151	18	Ground	No	
	17			

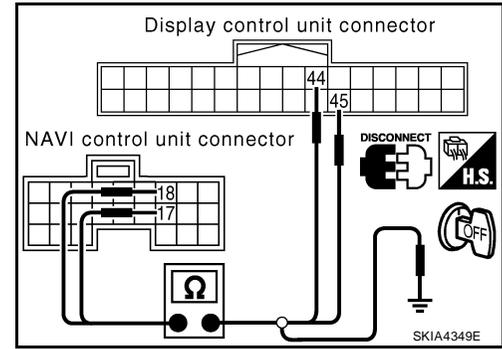

OK or NG

- OK >> GO TO 2.  
 NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check signal between NAVI control unit connector B151 terminal 18 and 17 with CONSULT-II or oscilloscope.

● **When the screen looks bluish.**

Voltage signal between NAVI control unit connector B151 terminal 18 and 17.

18 - 17

: Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#) .

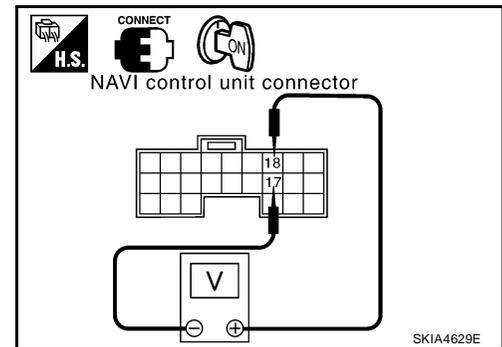

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .  
 NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

# NAVIGATION SYSTEM

## Color of RGB Image is Not Proper (Only NAVI Screen Looks Reddish)

EKS009WB

### 1. CHECK RGB HARNESS


1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

● **When the screen looks reddish.**

Terminals				Continuity
NAVI control unit		Display control unit		
Connector	Terminal	Connector	Terminal	
B151	21	M95	46	Yes
	17		45	

Terminals				Continuity
NAVI control unit		—		
Connector	Terminal			
B151	21	Ground		No
	17			

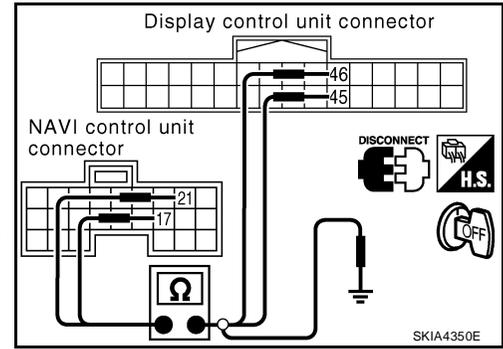

OK or NG

- OK >> GO TO 2.  
 NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check signal between NAVI control unit connector B151 terminal 21 and 17 with CONSULT-II or oscilloscope.

● **When the screen looks reddish.**

Voltage signal between NAVI control unit connector B151 terminal 21 and 17.

21 - 17

: Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#) .

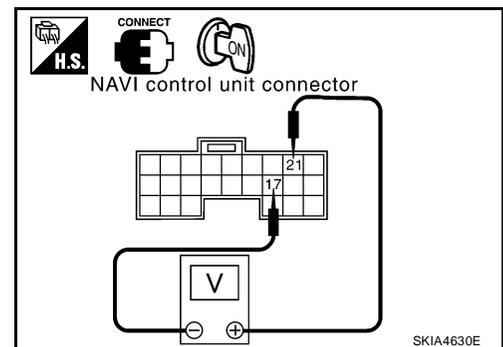

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .  
 NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

# NAVIGATION SYSTEM

## Color of RGB Image is Not Proper (Only NAVI Screen Looks Yellowish)

EKS009WC

### 1. CHECK RGB HARNESS


1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

● **When the screen looks yellowish.**

Terminals				Continuity
NAVI control unit		Display control unit		
Connector	Terminal	Connector	Terminal	
B151	15	M95	48	Yes
	17		45	

Terminals				Continuity
NAVI control unit		—		
Connector	Terminal			
B151	15	Ground		No
	17			

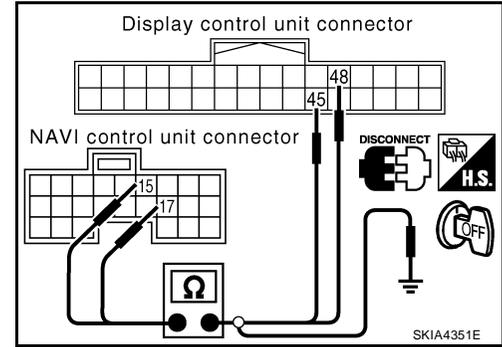

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check signal between NAVI control unit connector B151 terminal 15 and 17 with CONSULT-II or oscilloscope.

● **When the screen looks yellowish.**

Voltage signal between NAVI control unit connector B151 terminal 15 and 17.

**15 - 17**

**: Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#) .**

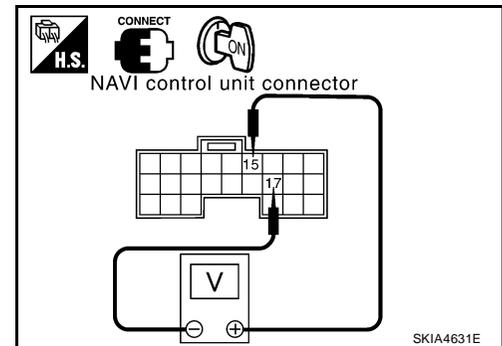

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

# NAVIGATION SYSTEM

EKS009WD

## Color of RGB Image is Not Proper (All Screens Look Bluish)

### 1. CHECK RGB HARNESS


1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.

● **When the screen looks bluish.**

Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	
M95	50	M93	17	Yes
	47		7	

Terminals				Continuity
Display control unit		—		
Connector	Terminal			
M95	50	Ground		No
	47			

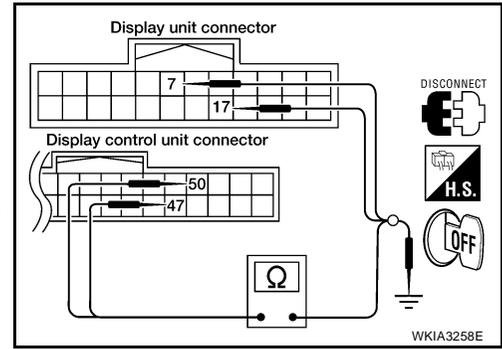

OK or NG

- OK >> GO TO 2.  
 NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.

● **When the screen looks bluish.**

Voltage signal between display control unit connector M95 terminal 50 and 47.

**50 - 47**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

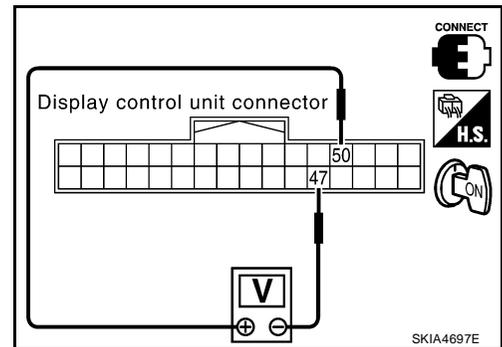

OK or NG

- OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .  
 NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

EKS009WE

## Color of RGB Image is Not Proper (All Screens Look Reddish)


### 1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.

- **When the screen looks reddish.**

Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	
M95	52	M93	6	Yes
	47		7	

Terminals				Continuity
Display control unit		—		
Connector	Terminal			
M95	52	Ground		No
	47			

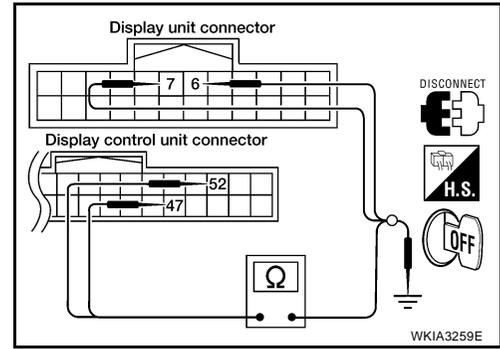

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.

- **When the screen looks reddish.**

Voltage signal between display control unit connector M95 terminal 52 and 47.

**52 - 47**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

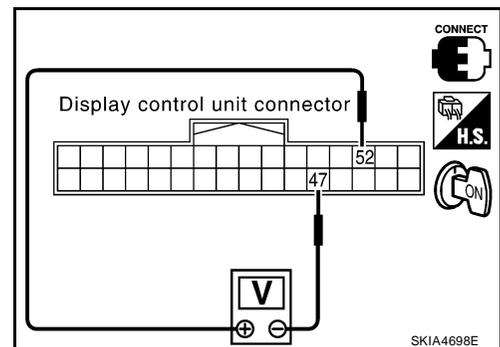

OK or NG

- OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .
- NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

# NAVIGATION SYSTEM

## Color of RGB Image is Not Proper (All Screens Look Yellowish)

EKS009WF

### 1. CHECK RGB HARNESS


1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.

● **When the screen looks yellowish.**

Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	
M95	54	M93	18	Yes
	47		7	

Terminals				Continuity
Display control unit		—		
Connector	Terminal			
M95	54	Ground		No
	47			

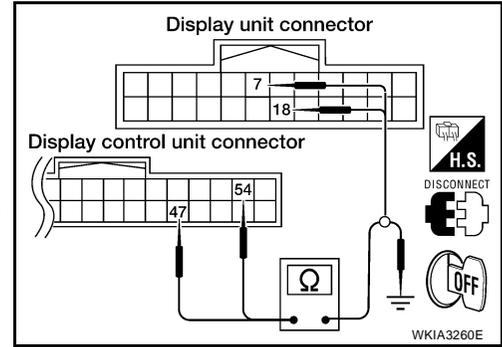

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

### 2. CHECK RGB SIGNAL


1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.

● **When the screen looks yellowish.**

Voltage signal between display control unit connector M95 terminal 54 and 47.

**54 - 47**

**: Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .**

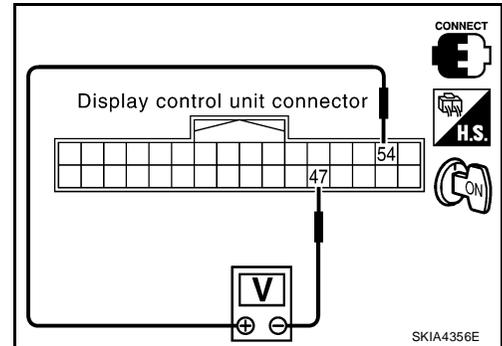

OK or NG

- OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .
- NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

# NAVIGATION SYSTEM

EKS009WG

## NAVI Screen is Rolling


### 1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.

Terminals				Continuity
NAVI control unit		Display control unit		
Connector	Terminal	Connector	Terminal	
B151	16	M95	43	Yes
	14		41	

4. Check continuity between NAVI control unit and ground.

Terminals				Continuity
NAVI control unit		—		
Connector	Terminal			
B151	16	Ground		No
	14			

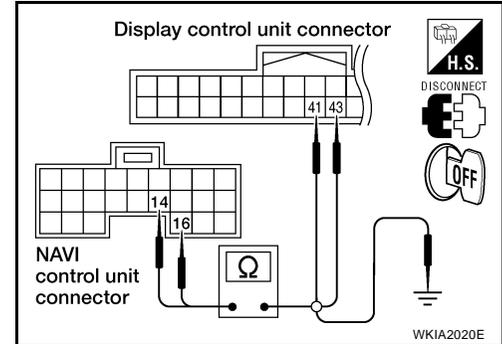

OK or NG

- OK >> GO TO 2.  
 NG >> Repair harness.

### 2. CHECK RGB SYNCHRONIZING SIGNAL


1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit connector M95 terminals 16 and 14 with CONSULT-II or oscilloscope.

16 - 14

: Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#) .

OK or NG

- OK >> GO TO 3.  
 NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

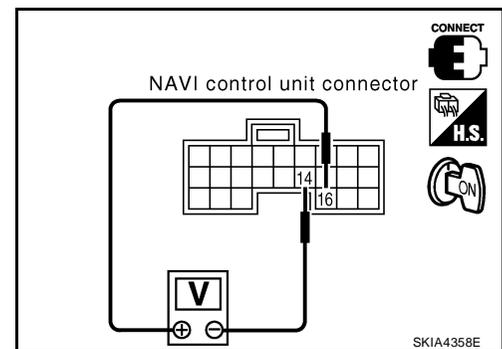

# NAVIGATION SYSTEM

## 3. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.


Terminals				Continuity
Display control unit		Display unit		
Connector	Terminal	Connector	Terminal	
M95	56	M93	19	Yes
	49		21	

4. Check continuity between display control unit and ground.

Terminals				Continuity
Display control unit		—		
Connector	Terminal			
M95	56	Ground		No
	49			

OK or NG

- OK >> GO TO 4.  
 NG >> Repair harness.

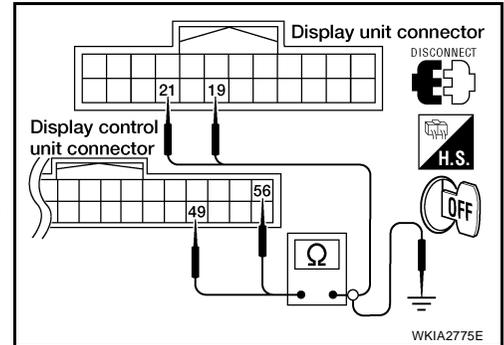


## 4. CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit connector M93 terminals 19 and 21 with CONSULT-II or oscilloscope.

**19 - 21** : Refer to [AV-100, "Terminals and Reference Value for Display Control Unit"](#) .

OK or NG

- OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .  
 NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

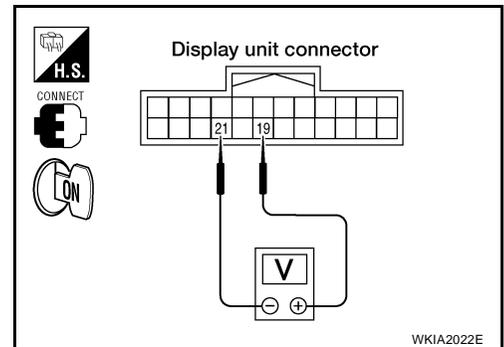

# NAVIGATION SYSTEM

EKS009WH

## Guide Sound is Not Heard

### 1. CHECK VOICE GUIDE SETTING

While driving in the dark pink route, voice guide does not operate. (note)

#### NOTE:

Voice guide is only available at intersections that satisfy certain conditions (indicated by ● on the map). Therefore, guidance may not be given even when the route on the map changes direction.

Is volume setting switched OFF?

- YES >> Switch the setting ON and turn the volume up.  
 NO >> GO TO 2.


### 2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and audio unit connector M45.
3. Check continuity between NAVI control unit and audio unit.

Terminals				Continuity
NAVI control unit		Audio unit		
Connector	Terminal	Connector	Terminal	
B151	7	M45	71	Yes
	8		69	

4. Check continuity between NAVI control unit and ground.

Terminals				Continuity
NAVI control unit		—		
Connector	Terminal			
B151	7	Ground		No
	8			

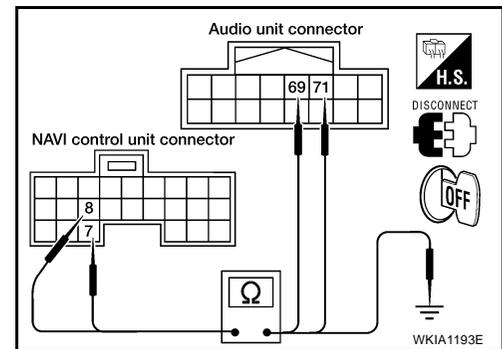

Ok or NG

- OK >> GO TO 3.  
 NG >> Repair harness.

### 3. CHECK VOICE GUIDE


1. Connect NAVI control unit connector and audio unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit harness connector B151 terminal 7 and 8 with CONSULT-II or oscilloscope.

7 - 8

: Refer to [AV-98, "Terminals and Reference Value for NAVI Control Unit"](#).

OK or NG

- OK >> Replace audio unit. Refer to [AV-52, "Removal and Installation for Audio Unit"](#).
- NG >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).

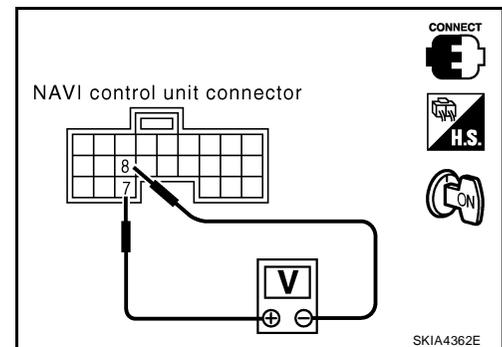

# NAVIGATION SYSTEM

## Screen is Not Shown

EKS009WI

### 1. CHECK AUDIO SYSTEM

Check operation of audio system.

Does audio system operate correctly?

- YES >> GO TO 2.
- NO >> GO TO 3.

### 2. CHECK DISPLAY UNIT POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display unit. Refer to [AV-126, "Power Supply and Ground Circuit Check for Display Unit"](#) .

OK or NG

- OK >> Replace display unit. Refer to [AV-166, "Removal and Installation of Display Unit"](#) .
- NG >> Check the malfunctioning parts.

### 3. CHECK DISPLAY CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display control unit. Refer to [AV-125, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> Check the malfunctioning parts.

## A/C Screen is Not Shown (NAVI Screen is Shown)

EKS009WJ

### 1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-132, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

### 2. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-139, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

## FUEL ECONOMY Screen is Not Shown

EKS009WK

### 1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-132, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

### 2. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-139, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

# NAVIGATION SYSTEM

---

## Average Fuel Economy Displayed is Not Shown (“ \*\*\* ” is Shown)

EKS009WL

### 1. CHECK VEHICLE SPEED SIGNAL

---

Check vehicle speed signal. Refer to [AV-130, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

### 2. CHECK CAN COMMUNICATION LINE

---

Check CAN communication line. Refer to [AV-139, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

---

## Distance to Empty Displayed is Not Shown (“ \*\*\* ” is Shown)

EKS009WM

### 1. CHECK SPEEDOMETER

---

Confirm that speedometer is functioning.

Is speedometer functioning?

- YES >> GO TO 2.
- NO >> Refer to [DI-21, "Vehicle Speed Signal Inspection"](#) .

### 2. CHECK FUEL GAUGE

---

Confirm that fuel gauge is functioning.

Is fuel gauge functioning?

- YES >> GO TO 3.
- NO >> Refer to [DI-23, "Fuel Level Sensor Unit Inspection"](#) .

### 3. CHECK CAN COMMUNICATION LINE

---

Check CAN communication line. Refer to [AV-139, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

---

## Driving Distance or Average Speed Displayed is Not Shown (“ \*\*\* ” is Shown)

EKS009WN

### 1. CHECK IGNITION SIGNAL

---

Check ignition signal. Refer to [AV-132, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

### 2. CHECK VEHICLE SPEED SIGNAL

---

Check vehicle speed signal. Refer to [AV-130, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> Check the malfunctioning parts.

# NAVIGATION SYSTEM

## WARNING DOOR OPEN Screen is Not Shown

EKS009WO

### 1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-132, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

### 2. CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-130, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Check the malfunctioning parts.

### 3. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-139, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-24, "CAN COMMUNICATION"](#) .

## Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis)

EKS009WP

### 1. AV SWITCH SELF-DIAGNOSIS

AV switch self-diagnosis. Refer to [AV-123, "AV Switch Self-Diagnosis Function"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

### 2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for AV switch. Refer to [AV-128, "Power Supply and Ground Circuit Check for AV Switch"](#) .

OK or NG

- OK >> Replace AV switch. Refer to [AV-52, "Removal and Installation for AV Switch"](#) .
- NG >> Check the malfunctioning parts.

### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display control unit. Refer to [AV-125, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Check the malfunctioning parts.

### 4. CHECK COMMUNICATION LINE

Check communication line. Refer to [AV-138, "AV Communication Line Check \(Between Display Control Unit and AV Switch\)"](#) .

OK or NG

- OK >> Replace AV switch. Refer to [AV-52, "Removal and Installation for AV Switch"](#) .
- NG >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

## Audio Does Not Work

EKS009WQ

Refer to [AV-31, "Trouble Diagnosis"](#) .

# NAVIGATION SYSTEM

---

## Navigation System Does Not Activate

EKS009WR

### 1. POWER SUPPLY AND GROUND CIRCUIT CHECK

---

Check power supply and ground circuit for NAVI control unit. Refer to [AV-124, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#) .

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

NG >> Check the malfunctioning parts.

## Previous NAVI Conditions are Not Stored

EKS009WS

### 1. CHECK BATTERY POWER

---

Check NAVI control unit battery power.

Refer to [AV-124, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#) .

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#) .

NG >> Check NAVI control unit battery power system harness.

## Previous Vehicle Conditions are Not Stored

EKS009WT

### 1. CHECK BATTERY POWER

---

Check display control unit battery power.

Refer to [AV-125, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-166, "Removal and Installation of Display Control Unit"](#) .

NG >> Check display control unit battery power system harness.

## Position of Current Location Mark is Not Correct

EKS009WU

### 1. SELF-DIAGNOSIS

---

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-112, "Self-Diagnosis Mode \(NAVI\)"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

### 2. HISTORY OF ERRORS DIAGNOSIS

---

Was any error stored in [AV-118, "HISTORY OF ERRORS"](#) of the "CONFIRMATION/ADJUSTMENT" mode?

YES or NO

YES >> [AV-118, "DIAGNOSIS BY HISTORY OF ERRORS"](#) .

NO >> [AV-155, "Driving Test"](#) .

## Radio Wave From GPS Satellite is Not Received

EKS009WV

### 1. CHECK ENVIRONMENT

---

Check if any metal object that intercepts radio waves or an object that emits radio waves (such as a portable phone) is located near the GPS antenna. Check if the vehicle is shielded by a building.

OK or NG

OK >> System is not malfunctioning. The GPS antenna may not be able to receive radio waves from the GPS satellite if it is shielded by metal object or an object emitting radio waves is placed near it.

NG >> GO TO 2.

# NAVIGATION SYSTEM

---

## 2. SELF-DIAGNOSIS

---

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-112, "Self-Diagnosis Mode \(NAVI\)"](#) .

OK or NG

- OK >> Replace GPS antenna. Refer to [AV-166, "Removal and Installation of GPS Antenna"](#) .
- NG >> Check the malfunctioning parts.

## Driving Test

EKS009WW

### 1. DRIVING TEST 1

---

1. Scroll the map screen to display the area to make correction. Press "ENTER" and select "CURRENT LOCATION CORRECTION".
2. Correct direction of the vehicle mark.
3. Perform the distance correction of the "CONFIRMATION/ADJUSTMENT" mode.  
Note: Normally, adjustment is not necessary because this system has automatic distance correction function. However, when a tire chain is fitted, adjustment in accordance with the tire diameter ratio must be made.
4. Are symptoms malfunctioning to the [AV-156, "Example of Symptoms Judged Not Malfunction"](#) after driving the vehicle?

YES or NO

- YES >> Limit of the location detection capacity of the navigation system.
- NO >> GO TO 2.

### 2. DRIVING TEST 2

---

- Did any malfunction occur when the proper test in the following test patterns is performed?
- Test pattern  
Driving test finds the difference between the symptoms monitored with and without each sensor.
  - Test pattern 1: Test method with no GPS location correction  
Disconnect GPS antenna connector (GT5) connected to the NAVI control unit. Accurately adjust the current location and the direction, then drive the vehicle.
  - Test pattern 2: Test method with no map-matching  
Accurately adjust the current location and the direction. Eject the map DVD-ROM from the NAVI control unit with ignition switch turned to OFF, then drive the vehicle. After driving, insert the map DVD-ROM back

# NAVIGATION SYSTEM

in the unit, display the track of the vehicle on the map screen and compare it with the actual road configuration.

- Sample tests
  - <To determine if the current-location mark skips at the same position, if so, whether it is caused by map-matching or by GPS>  
Perform test pattern 1.
  - <To determine if the pattern of streets displayed is correct or not>  
Perform test pattern 1 & 2.  
Compare the track of the vehicle on the map screen and the actual road configuration. For fairly accurate tracking, plotting shall be made every several hundred meters (feet).
  - <When the distance is adjusted accurately>  
Perform test pattern 1 & 2.  
Drive on a road of which distance is accurately known (by utilizing distance posts on a highway). Calculate the rate of change (increased/decreased) of the distance by comparing with the actual distance.  
Correction = A/B  
A: Distance shown on the screen  
B: Actual distance

## YES or NO

- YES >> ● If adjustment is insufficient, perform adjustment again.
- If any error is found in the map, please contact map data supplier. Refer to Navigation System Owner's Manual for contact information.
  - Replace NAVI control unit. Refer to [AV-165, "Removal and Installation of NAVI Control Unit"](#).
- NO >> Limit of the location detection capacity of the navigation system.

## Example of Symptoms Judged Not Malfunction BASIC OPERATION

EKS009WX

Symptom	Cause	Remedy
No image is shown.	Display brightness adjustment is set fully to DARK side.	Adjust the display brightness.
No guide sound is heard. Audio guide volume is too low or too high.	Volume control is set to OFF, MIN or MAX.	Adjust the audio guide volume.
	Audio guidance is not available while the vehicle is driving on a dark pink route.	System is not malfunctioning.
Screen is too dark. Motion of the image is too slow.	Temperature inside the vehicle is low.	Wait until the temperature inside the vehicle reaches the proper temperature.
Small black or bright spots appear on the screen.	Symptom peculiar to a liquid crystal display (display unit).	System is not malfunctioning.

## VEHICLE MARK

Symptom	Cause	Remedy
Map screen and BIRDVIEW™ Name of the place varies with the screen.	Some thinning of the character data is done to prevent the display becoming to complex. In some cases and in some locations, the display contents may differ. The same place name, street name, etc. may not be displayed every time on account of the data processing.	System is not malfunctioning.
Vehicle mark is not positioned correctly.	Vehicle is transferred by ferry or by towing after its ignition switch is turned to OFF.	Drive the vehicle for a while in the GPS satellite signal receiving condition.
Screen will not switch to nighttime mode after the lighting switch is turned ON.	The daytime screen is selected by the "SWITCH SCREENS" when the last time the screen dimming setting is done. Switching between daytime/nighttime screen may be inhibited by the automatic illumination adjustment function.	Perform screen dimming and select the nighttime screen by "SWITCH SCREENS".
Map screen will not scroll in accordance with the vehicle travel.	Current location is not displayed.	Press "MAP" button to display the current location.

# NAVIGATION SYSTEM

Symptom	Cause	Remedy	
Vehicle mark will not be shown.	Current location is not displayed.	Press "MAP" button to display the current location.	A
Accuracy indicator (GPS satellite mark) on the map screen stays gray.	GPS satellite signal is intercepted because the vehicle is in or behind a building.	Move the vehicle out to an open space.	B
	GPS satellite signal cannot be received because an obstacle is placed on top of the instrument panel.	Do not place anything in the center on top of the display.	C
	GPS satellites are not visible from current location.	Wait until GPS satellites are visible by moving the vehicle.	
Vehicle location accuracy is low.	Accuracy indicator (GPS satellite mark) on the map screen stays gray.	Current location is not determined.	D
	Vehicle speed setting by the vehicle speed pulse has been deviated (advanced or retarded) from the actual vehicle speed because tire chain is fitted or the system has been used on another vehicle.	Drive the vehicle for a while [for approx. 30 minutes at approx. 30 km/h (19 MPH)] and the deviation will be automatically adjusted. If advancement or retard still occur, perform the distance adjustment by CONFIRMATION/ADJUSTMENT mode of diagnosis function.	E
	Map data has error or omission. (Vehicle mark is always deviated to the same position.)	As a rule, an updated map DVD-ROM will be released once a year.	F
			G

## DESTINATION, PASSING POINTS, AND MENU ITEMS CANNOT BE SELECTED/SET

Symptom	Cause	Remedy	
Destination cannot be set.	Destination to be set is on an expressway.	Set the destination on an ordinary road.	H
Passing point is not searched when re-searching the route.	The vehicle has already passed the passing point, or the system judged so.	To include the passing points that have been passed into the route again, set the route again.	I
Route information will not be displayed.	Route searching has not been done.	Set the destination and perform route searching.	J
	Vehicle mark is not on the recommended route.	Drive on the recommended route.	
	Route guide is turned OFF.	Turn route guide ON.	
	Route information is not available on the dark pink route.	System is not malfunctioning.	AV
After the route searching, no guide sign will appear as the vehicle goes near the entrance/exit to the toll road.	Vehicle mark is not on the recommended route. (On the display, only guide signs related to the recommended route will be shown.)	Drive on the recommended route.	L
Automatic route searching is not possible.	Vehicle is driving on a highway (gray route), or no recommended route is available.	Drive on a road to be searched. Or re-search the route manually. In this case, however, the whole route will be searched.	M
Performed automatic detour search (or detour search). However, the result is the same as that of the previous search.	Performed search with every condition considered. However, the result is the same as that of the previous search.	System is not malfunctioning.	
Passing points cannot be set.	More than five passing points were set.	Passing points can be set up to five. To stop at more than five points, perform sharing in several steps.	
When setting the route, the starting point cannot be selected.	The current vehicle location is always set as the starting point of a route.	System is not malfunctioning.	
Some menu items cannot be selected.	The vehicle is being driven.	Stop the vehicle at a safe place and then operate the system.	

# NAVIGATION SYSTEM

## VOICE GUIDE

Symptom	Cause	Remedy
Voice guide will not operate.	Note: Voice guide is only available at intersections that satisfy certain conditions (indicated by ● on the map). Therefore, guidance may not be given even when the route on the map changes direction.	System is not malfunctioning.
	The vehicle is not on the recommended route.	Return to the recommended route or re-search the route.
	Voice guide is turned OFF.	Turn voice guide ON.
	Route guide is turned OFF.	Turn route guide ON.
Voice guide does not match the actual road pattern.	Voice guide may vary with the direction to which the vehicle is turned and the connection of the road to other roads.	Drive in conformity to the actual traffic rules.

## ROUTE SEARCH

Symptom	Cause	Remedy
No route is shown.	No road to be searched is found around the destination.	Find wider road (orange road or wider) nearby and reset the destination and passing points onto it. Take care of the traveling direction when there are separate up and down roads.
	Starting point and the destination are too close.	Set the destination at more distant point.
	Conditional traffic regulation (day of the week/ time of the day) is set at the area around the current location or the destination.	Turn the time-regulating search conditions OFF. Turn "Avoid regulation time" in the search conditions OFF.
Indicated route is intermittent.	In some areas, highways (gray routes) are not used for the search <sup>(Note)</sup> . Therefore, the route to the current location or the passing points may be intermittent.	System is not malfunctioning.
When the vehicle has passed the recommended route, it is deleted from the screen.	A recommended route is controlled by each section. When the vehicle has passed the passing point 1, then the map data from the starting point up to the passing point 1 will be deleted. (The data may remain undeleted in some areas.)	System is not malfunctioning.
Detouring route is recommended.	In some areas, highways (gray routes) are not used for the search. (Note). Therefore, detour route may be recommended.	Set the route closer to the basic route (gray route).
	A detour route may be shown when some traffic regulation (one-way traffic, etc.) is set at the area around the starting point or the destination.	Slightly move the starting point or the destination, or set the passing point on the route of your choice.
	In the area where highways (gray routes) are used for the search, left turn has priority around the current location and the destination (passing points). For this reason, the recommended route may be detouring.	System is not malfunctioning.
Landmarks on the map do not match the actual ones.	This can be happen due to omission or error in the map data.	As a rule, an updated map DVD-ROM will be released once a year. Wait until the latest map has become available.
Recommended route is far from the starting point, passing points, and destination.	Starting point, passing points, and destination of the route guide were set far from the desired points because route searching data around these area were not stored.	Reset the destination onto the road nearby. If this road is one of the highways (gray routes), an ordinary road nearby may be displayed as the recommended route.


**NOTE:**

Except for the ordinance-designated cities. (Malfunctioning areas may be changed in the updated map disc.)

# NAVIGATION SYSTEM

## EXAMPLES OF CURRENT-LOCATION MARK DISPLACEMENT

Vehicle's travel amount is calculated by reading its travel distance and turning angle. Therefore, if the vehicle is driven in the following manner, an error will occur in the vehicle's current location display. If correct location has not been restored after driving the vehicle for a while, perform location correction.






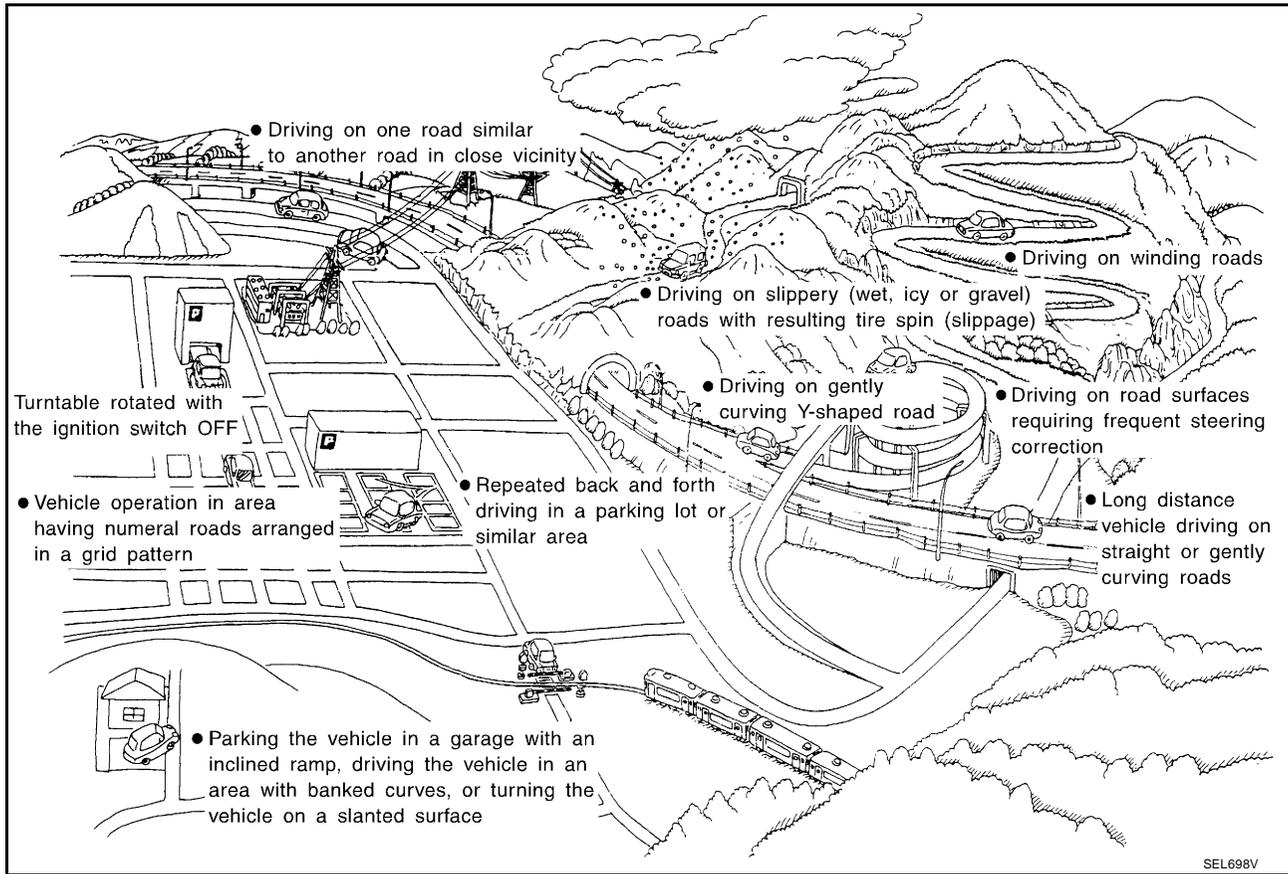


A  
B  
C  
D  
E  
F  
G  
H  
I  
J





AV

L  
M

# NAVIGATION SYSTEM

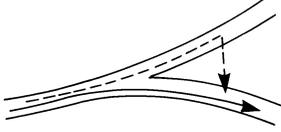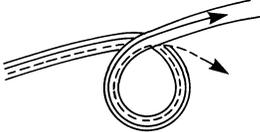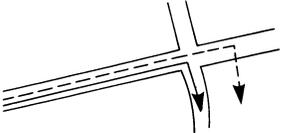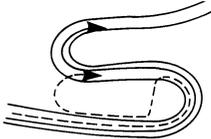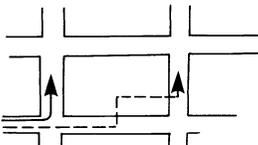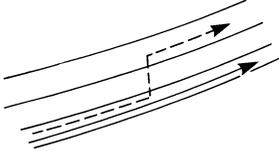	Cause (condition)    -: While driving    ooo: Display	Driving condition	Remarks (correction, etc.)
Road configuration	<p>Y-intersections</p>  <p style="text-align: center; font-size: small;">ELK0192D</p>	<p>At a Y intersection or similar gradual division of roads, an error in the direction of travel deduced by the sensor may result in the current-location mark appearing on the wrong road.</p>	<p>If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.</p>
	<p>Spiral roads</p>  <p style="text-align: center; font-size: small;">ELK0193D</p>	<p>When driving on a large, continuous spiral road (such as loop bridge), turning angle error is accumulated and the vehicle mark may deviate from the correct location.</p>	
	<p>Straight roads</p>  <p style="text-align: center; font-size: small;">ELK0194D</p>	<p>When driving on a long, straight road and slow curve without stopping, map-matching does not work effectively enough and distance errors may accumulate. As a result, the vehicle mark may deviate from the correct location when the vehicle is turned at a corner.</p>	
	<p>Zigzag roads</p>  <p style="text-align: center; font-size: small;">ELK0195D</p>	<p>When driving on a zigzag road, the map may be matched to other roads in the similar direction nearby at every turn, and the vehicle mark may deviate from the correct location.</p>	
	<p>Roads laid out in a grid pattern</p>  <p style="text-align: center; font-size: small;">ELK0196D</p>	<p>When driving where roads are laid out in a grid pattern, or where many roads are running in the similar direction nearby, the map may be matched to them by mistake and the vehicle mark may deviate from the correct location.</p>	
	<p>Parallel roads</p>  <p style="text-align: center; font-size: small;">ELK0197D</p>	<p>When two roads are running in parallel (such as highway and sideway), the map may be matched to the other road by mistake and the vehicle mark may deviate from the correct location.</p>	



# NAVIGATION SYSTEM

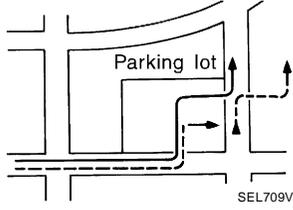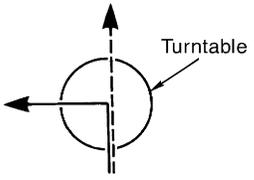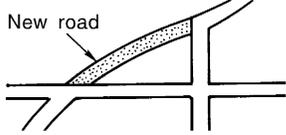Cause (condition)    -: While driving    ooo: Display		Driving condition	Remarks (correction, etc.)
Place	In a parking lot  SEL709V	When driving in a parking lot, or other location where there are no roads on the map, matching may place the vehicle mark on a nearby road. When the vehicle returns to the road, the vehicle mark may have deviated from the correct location. When driving in circle or turning the steering wheel repeatedly, direction errors accumulate, and the vehicle mark may deviate from the correct location.	If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.
	Turntable  SEL710V	When the ignition switch is OFF, the navigation system cannot get the signal from the gyroscope (angular speed sensor). Therefore, the displayed direction may be wrong and the correct road may not be easily returned to after rotating the vehicle on a turntable with the ignition OFF.	
	Slippery roads	On snow, wet roads, gravel, or other roads where tires may slip easily, accumulated mileage errors may cause the vehicle mark to deviate from the correct road.	
	Slopes	When parking in sloped garages, when travelling on banked roads, or in other cases where the vehicle turns when tilted, an error in the turning angle will occur, and the vehicle mark may deviate from the road.	
Map data	Road not displayed on the map screen  SEL699V	When driving on new roads or other roads not displayed on the map screen, map matching does not function correctly and matches the location to a nearby road. When the vehicle returns to a road which is on the map, the vehicle mark may deviate from the correct road.	
	Different road pattern (Changed due to repair)  ELK0201D	If the road pattern stored in the map data and the actual road pattern are different, map matching does not function correctly and matches the location to a nearby road. The vehicle mark may deviate from the correct road.	
Vehicle	Use of tire chains	When tire chains are used, the mileage is not correctly detected, and the vehicle mark may deviate from the correct road.	Drive the vehicle for a while. If the distance still deviates, adjust it by using the distance adjustment function. (If the tire chain is removed, recover the original value.)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

AV

# NAVIGATION SYSTEM

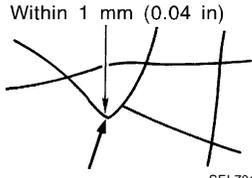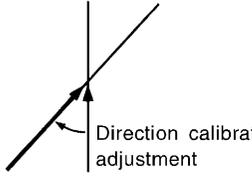Cause (condition) –: While driving    ooo: Display		Driving condition	Remarks (correction, etc.)
Precautions for driving	Just after the engine is started	If the vehicle is driven just after the engine is started when the gyroscope (angular speed sensor) correction is not completed, the vehicle can lose its direction and may have deviated from the correct location.	Wait for a short while before driving after starting the engine.
	Continuous driving without stopping	When driving long distances without stopping, direction errors may accumulate, and the current-location mark may deviate from the correct road.	Stop and adjust the orientation.
	Abusive driving	Spinning the wheels or engaging in other kinds of abusive driving may result in the system being unable perform correct detection, and may cause the vehicle mark to deviate from the correct road.	If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.
How to correct location	Position correction accuracy  <div style="text-align: center;">  </div>	If the accuracy of location settings is poor, accuracy may be reduced when the correct road cannot be found, particularly in places where there are many roads.	Enter in the road displayed on the screen with an accuracy of approx. 1mm. Caution: Whenever possible, use detailed map for the correction.
	Direction when location is corrected  <div style="text-align: center;">  </div>	If the accuracy of location settings during correction is poor, accuracy may be reduced afterwards.	Perform direction correction.

## CURRENT-LOCATION MARK SHOWS A POSITION WHICH IS COMPLETELY WRONG

In the following cases, the current-location mark may appear on completely different position in the map depending on the GPS satellite signal receiving conditions. In this case, perform location correction and direction correction.

- When location correction has not been done
  - If the receiving conditions of the GPS satellite signal is poor, or if the current-location mark becomes out of place, it may move to a completely different location and not come back if location correction is not done. The position will be corrected if the GPS signal can be received.
- When the vehicle has traveled by ferry, or when the vehicle has been towed
  - Because calculation of the current location cannot be done when travelling with the ignition OFF, for example when traveling by ferry or when being towed, the location before travel is displayed. If the precise location can be detected with GPS, the location will be corrected.

## CURRENT-LOCATION MARK JUMPS

In the following cases, the current-location mark may appear to jump as a result of automatic correction of the current location.

- When map-matching has been done
  - If the current location and the current-location mark are different when map-matching is done, the current-location mark may seem to jump. At this time, the location may be “corrected” to the wrong road or to a location which is not on a road.
- When GPS location correction has been done
  - If the current location and the current-location mark are different when the location is corrected using GPS measurements, the current-location mark may seem to jump. At this time, the location may be “corrected” to a location which is not on a road.

# NAVIGATION SYSTEM

---

## **CURRENT-LOCATION MARK IS IN A RIVER OR SEA**

The navigation system moves the current-location mark with no distinction between land and rivers or sea. If the location mark is somehow out of place, it may appear that the vehicle is driving in a river or the sea.

## **WHEN DRIVING ON SAME ROAD, SOMETIMES CURRENT-LOCATION MARK IS IN RIGHT PLACE AND SOMETIMES IT IS WRONG PLACE**

The conditions of the GPS antenna (GPS data) and gyroscope (angular speed sensor) change gradually. Depending on the road traveled and the operation of the steering wheel, the location detection results will be different. Therefore, even on a road on which the location has never been wrong, conditions may cause the vehicle mark to deviate.

## **LOCATION CORRECTION BY MAP-MATCHING IS SLOW**

- The map-matching function needs to refer to the data of the surrounding area. It is necessary to drive some distance for the function to work.
- Because map-matching operates on this principle, when there are many roads running in similar directions in the surrounding area, no matching determination may be made. The location may not be corrected until some special feature is found.

## **ALTHOUGH GPS RECEIVING DISPLAY IS GREEN, VEHICLE MARK DOES NOT RETURN TO CORRECT LOCATION**

- The GPS accuracy has an error of approximately 10 m (30 ft). In some cases the current-location mark may not be on the correct street, even when GPS location-correction is done.
- The navigation system compares the results of GPS location detection with the results from map-matching location detection. The one which is determined to have higher accuracy is used.
- GPS location correction may not be performed when the vehicle is stopped.

## **NAME OF CURRENT PLACE IS NOT DISPLAYED**

The current place name may not be displayed if there are no place names displayed on the map screen.

## **CONTENTS OF DISPLAY DIFFER FOR BIRDVIEW™ AND THE (FLAT) MAP SCREEN**

**Difference of the BIRDVIEW™ screen from the flat map screen are as follows.**


- The current place name displays names which are primarily in the direction of vehicle travel.
- The amount of time before the vehicle travel or turn angle is updated on the screen is longer than for the (flat) map display.
- The conditions for display of place names, roads, and other data are different for nearby areas and for more distant areas.
- Some thinning of the character data is done to prevent the display becoming too complex. In some cases and in some locations, the display contents may differ.
- The same place name, street name, etc. may be displayed multiple times.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M

# NAVIGATION SYSTEM

## Program Loading of NAVI Control Unit


EKS009WY

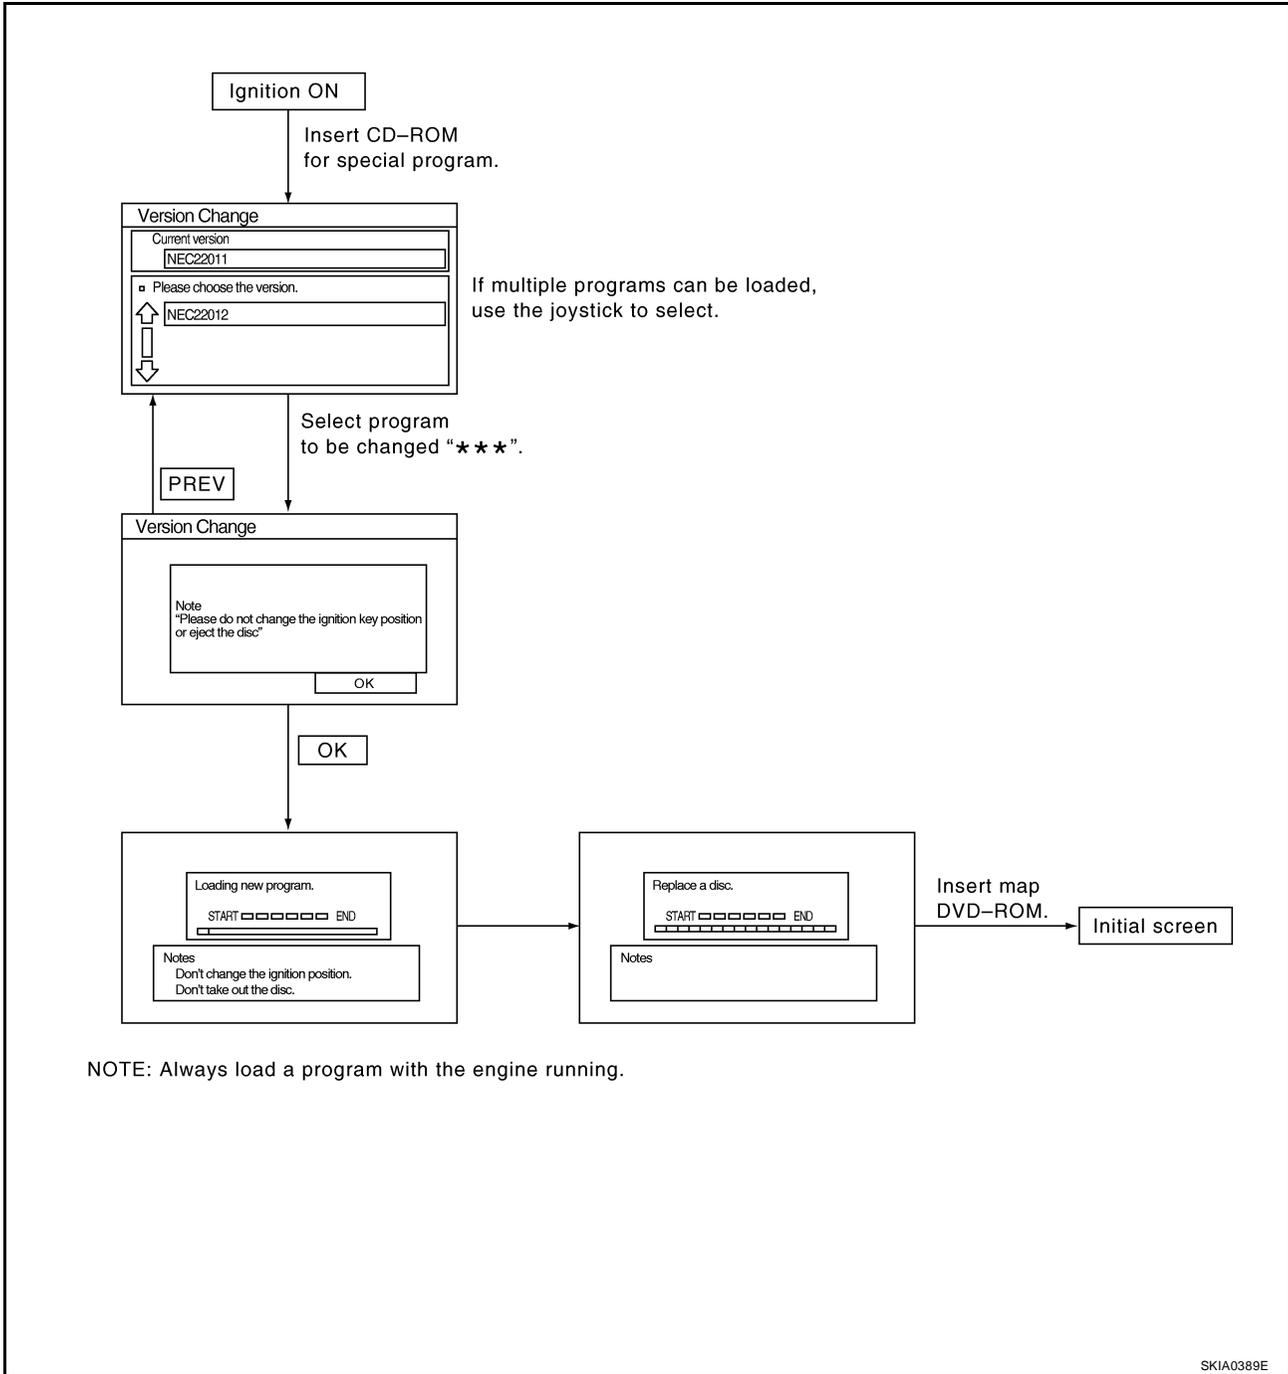

# NAVIGATION SYSTEM

## Removal and Installation of NAVI Control Unit

EKS009WZ

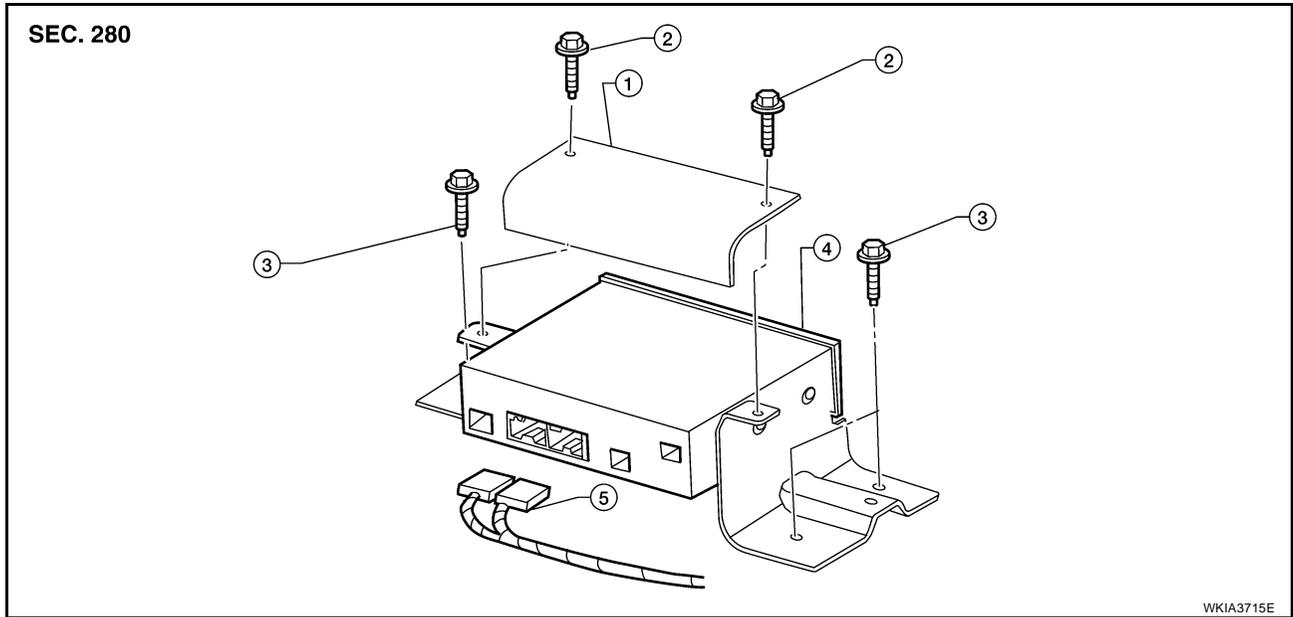

1. Kick shield
2. Kick shield screws
3. NAVI control unit self-tapping screws
4. NAVI control unit
5. Connectors

### REMOVAL

#### CAUTION:

To avoid damage, eject map DVD-ROM before removing the NAVI control unit.

1. Slide passenger front seat fully forward.
2. Remove NAVI control unit kick shield screws.
3. Disconnect the NAVI control unit connectors.
4. Remove the NAVI control unit screws and remove assembly from floor.

### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
AV  
L  
M


# NAVIGATION SYSTEM

## Removal and Installation of GPS Antenna

EKS009X0

### REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. Remove the GPS antenna screws.
3. Reach through instrument panel and disconnect the GPS antenna connector.
4. Remove GPS antenna and feeder assembly out the top of instrument panel.

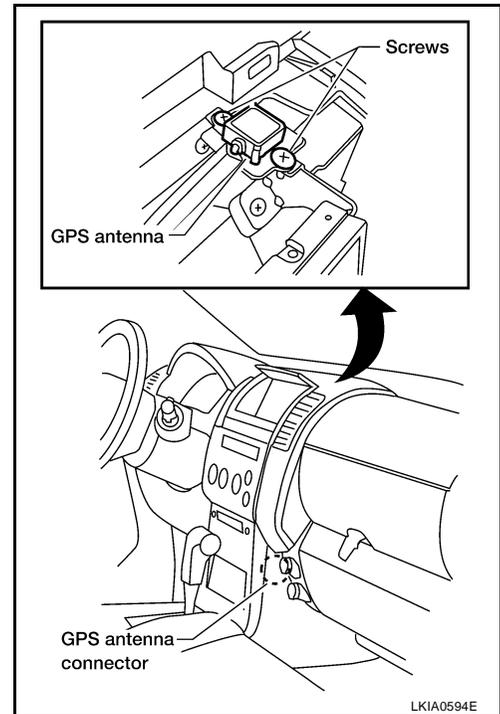

### INSTALLATION


Installation is in the reverse order of removal.

## Removal and Installation of Display Unit

EKS009X3

### REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. Remove the display unit assembly screws.
3. Disconnect the connectors and remove display unit from instrument panel.

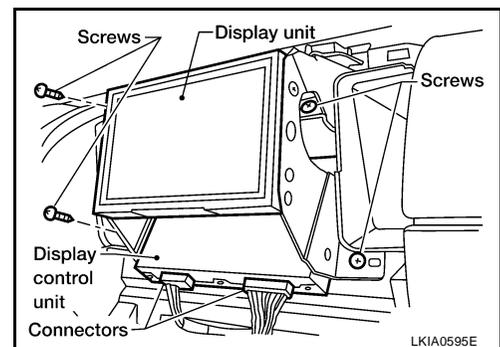

### INSTALLATION


Installation is in reverse order of removal.

## Removal and Installation of Display Control Unit

EKS009X4

### REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. Remove the display control unit assembly screws.
3. Disconnect the connectors and remove assembly from instrument panel.
4. Remove the screws, then remove the display control unit from the assembly brackets.

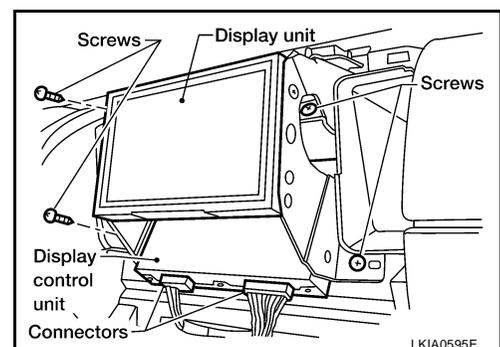

# NAVIGATION SYSTEM

---

## INSTALLATION

Installation is in reverse order of removal.

A

B

C

D

E

F

G

H

I

J

**AV**

L

M

# NAVIGATION SYSTEM

---