

SECTION **AT**

**AUTOMATIC TRANSMISSION**

A  
B  
AT

D

E

**CONTENTS**

<b>INDEX FOR DTC</b> .....	<b>5</b>	How To Perform Trouble Diagnosis For Quick and	F
Alphabetical Index .....	5	Accurate Repair .....	48
DTC No. Index .....	6	A/T Electrical Parts Location .....	53
<b>PRECAUTIONS</b> .....	<b>7</b>	Circuit Diagram .....	54
Precautions for Supplemental Restraint System		Wiring Diagram — AT — .....	55
(SRS) “AIR BAG” and “SEAT BELT PRE-TEN-		Inspections Before Trouble Diagnosis .....	62
SIONER” .....	7	Check Before Engine is Started .....	66
Precautions for On Board Diagnostic (OBD) System		Check at Idle .....	66
of A/T and Engine .....	7	Cruise Test - Part 1 .....	67
Precautions .....	8	Cruise Test - Part 2 .....	69
Service Notice or Precautions .....	9	Cruise Test - Part 3 .....	70
Wiring Diagrams and Trouble Diagnosis .....	9	Vehicle Speed When Shifting Gears .....	72
<b>PREPARATION</b> .....	<b>10</b>	Vehicle Speed When Performing and Releasing	
Special Service Tools .....	10	Complete Lock-up .....	72
Commercial Service Tools .....	12	Vehicle Speed When Performing and Releasing	
<b>A/T FLUID</b> .....	<b>13</b>	Slip Lock-up .....	72
Changing A/T Fluid .....	13	Symptom Chart .....	73
Checking A/T Fluid .....	13	TCM Input/Output Signal Reference Values .....	94
A/T Fluid Cooler Cleaning .....	15	CONSULT-II .....	95
<b>A/T CONTROL SYSTEM</b> .....	<b>18</b>	<b>DTC U1000 CAN COMMUNICATION LINE</b> .....	<b>107</b>
Cross-Sectional View (2WD models) .....	18	Description .....	107
Cross-Sectional View (4WD models) .....	19	On Board Diagnosis Logic .....	107
Shift Mechanism .....	20	Possible Cause .....	107
TCM Function .....	33	DTC Confirmation Procedure .....	107
CAN Communication .....	35	Diagnostic Procedure .....	108
Input/Output Signal of TCM .....	35	<b>DTC P0615 START SIGNAL CIRCUIT</b> .....	<b>109</b>
Line Pressure Control .....	36	Description .....	109
Shift Control .....	37	CONSULT-II Reference Value .....	109
Lock-Up Control .....	38	On Board Diagnosis Logic .....	109
Engine Brake Control .....	40	Possible Cause .....	109
Control Valve .....	40	DTC Confirmation Procedure .....	109
<b>ON BOARD DIAGNOSTIC (OBD) SYSTEM</b> .....	<b>42</b>	Diagnostic Procedure .....	110
Introduction .....	42	<b>DTC P0700 TCM</b> .....	<b>112</b>
OBD-II Function for A/T System .....	42	Description .....	112
One or Two Trip Detection Logic of OBD-II .....	42	On Board Diagnosis Logic .....	112
OBD-II Diagnostic Trouble Code (DTC) .....	42	Possible Cause .....	112
Malfunction Indicator Lamp (MIL) .....	45	DTC Confirmation Procedure .....	112
<b>TROUBLE DIAGNOSIS</b> .....	<b>46</b>	Diagnostic Procedure .....	112
DTC Inspection Priority Chart .....	46	<b>DTC P0705 PARK/NEUTRAL POSITION SWITCH</b> .....	<b>113</b>
Fail-Safe .....	46	Description .....	113

F

G

H

I

J

K

L

M

CONSULT-II Reference Value .....	113	On Board Diagnosis Logic .....	132
On Board Diagnosis Logic .....	113	Possible Cause .....	132
Possible Cause .....	113	DTC Confirmation Procedure .....	132
DTC Confirmation Procedure .....	113	Diagnostic Procedure .....	132
Diagnostic Procedure .....	114	<b>DTC P1710 A/T FLUID TEMPERATURE SENSOR</b>	
<b>DTC P0720 VEHICLE SPEED SENSOR A/T (REV- OLUTION SENSOR) .....</b>	<b>116</b>	<b>CIRCUIT .....</b>	<b>134</b>
Description .....	116	Description .....	134
CONSULT-II Reference Value .....	116	CONSULT-II Reference Value .....	134
On Board Diagnosis Logic .....	116	On Board Diagnosis Logic .....	134
Possible Cause .....	116	Possible Cause .....	134
DTC Confirmation Procedure .....	116	DTC Confirmation Procedure .....	134
Diagnostic Procedure .....	117	Diagnostic Procedure .....	135
<b>DTC P0725 ENGINE SPEED SIGNAL .....</b>	<b>119</b>	Component Inspection .....	136
Description .....	119	<b>DTC P1716 TURBINE REVOLUTION SENSOR ...</b>	<b>137</b>
CONSULT-II Reference Value .....	119	Description .....	137
On Board Diagnosis Logic .....	119	CONSULT-II Reference Value .....	137
Possible Cause .....	119	On Board Diagnosis Logic .....	137
DTC Confirmation Procedure .....	119	Possible Cause .....	137
Diagnostic Procedure .....	119	DTC Confirmation Procedure .....	137
<b>DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE .....</b>	<b>121</b>	Diagnostic Procedure .....	138
Description .....	121	<b>DTC P1721 VEHICLE SPEED SENSOR MTR .....</b>	<b>140</b>
CONSULT-II Reference Value .....	121	Description .....	140
On Board Diagnosis Logic .....	121	CONSULT-II Reference Value .....	140
Possible Cause .....	121	On Board Diagnosis Logic .....	140
DTC Confirmation Procedure .....	121	Possible Cause .....	140
Diagnostic Procedure .....	122	DTC Confirmation Procedure .....	140
<b>DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP) .....</b>	<b>124</b>	Diagnostic Procedure .....	141
Description .....	124	<b>DTC P1730 A/T INTERLOCK .....</b>	<b>142</b>
CONSULT-II Reference Value .....	124	Description .....	142
On Board Diagnosis Logic .....	124	On Board Diagnosis Logic .....	142
Possible Cause .....	124	Possible Cause .....	142
DTC Confirmation Procedure .....	124	DTC Confirmation Procedure .....	142
Diagnostic Procedure .....	125	Judgement of A/T Interlock .....	142
<b>DTC P0745 LINE PRESSURE SOLENOID VALVE .....</b>	<b>127</b>	Diagnostic Procedure .....	143
Description .....	127	<b>DTC P1731 A/T 1ST ENGINE BRAKING .....</b>	<b>145</b>
CONSULT-II Reference Value .....	127	Description .....	145
On Board Diagnosis Logic .....	127	CONSULT-II Reference Value .....	145
Possible Cause .....	127	On Board Diagnosis Logic .....	145
DTC Confirmation Procedure .....	127	Possible Cause .....	145
Diagnostic Procedure .....	128	DTC Confirmation Procedure .....	145
<b>DTC P1702 TRANSMISSION CONTROL MODULE (RAM) .....</b>	<b>130</b>	Diagnostic Procedure .....	146
Description .....	130	<b>DTC P1752 INPUT CLUTCH SOLENOID VALVE .....</b>	<b>148</b>
On Board Diagnosis Logic .....	130	Description .....	148
Possible Cause .....	130	CONSULT-II Reference Value .....	148
DTC Confirmation Procedure .....	130	On Board Diagnosis Logic .....	148
Diagnostic Procedure .....	130	Possible Cause .....	148
<b>DTC P1703 TRANSMISSION CONTROL MODULE (ROM) .....</b>	<b>131</b>	DTC Confirmation Procedure .....	148
Description .....	131	Diagnostic Procedure .....	149
On Board Diagnosis Logic .....	131	<b>DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION .....</b>	<b>151</b>
Possible Cause .....	131	Description .....	151
DTC Confirmation Procedure .....	131	CONSULT-II Reference Value .....	151
Diagnostic Procedure .....	131	On Board Diagnosis Logic .....	151
<b>DTC P1705 THROTTLE POSITION SENSOR .....</b>	<b>132</b>	Possible Cause .....	151
Description .....	132	DTC Confirmation Procedure .....	151
CONSULT-II Reference Value .....	132	Diagnostic Procedure .....	152
		<b>DTC P1757 FRONT BRAKE SOLENOID VALVE .....</b>	<b>154</b>
		Description .....	154
		CONSULT-II Reference Value .....	154

On Board Diagnosis Logic .....	154	<b>DTC P1815 MANUAL MODE SWITCH .....</b>	<b>178</b>	
Possible Cause .....	154	Description .....	178	A
DTC Confirmation Procedure .....	154	CONSULT-II Reference Value in Data Monitor Mode .....	178	
Diagnostic Procedure .....	155	On Board Diagnosis Logic .....	178	B
<b>DTC P1759 FRONT BRAKE SOLENOID VALVE</b>		Possible Cause .....	178	
<b>FUNCTION .....</b>	<b>157</b>	DTC Confirmation Procedure .....	178	
Description .....	157	Wiring Diagram .....	179	AT
CONSULT-II Reference Value .....	157	Diagnostic Procedure .....	180	
On Board Diagnosis Logic .....	157	Component Inspection .....	181	
Possible Cause .....	157	Position Indicator Lamp .....	181	
DTC Confirmation Procedure .....	157	<b>DTC P1841 ATF PRESSURE SWITCH 1 .....</b>	<b>183</b>	D
Diagnostic Procedure .....	158	Description .....	183	
<b>DTC P1762 DIRECT CLUTCH SOLENOID VALVE</b>	<b>160</b>	CONSULT-II Reference Value .....	183	E
Description .....	160	On Board Diagnosis Logic .....	183	
CONSULT-II Reference Value .....	160	Possible Cause .....	183	
On Board Diagnosis Logic .....	160	DTC Confirmation Procedure .....	183	F
Possible Cause .....	160	Diagnostic Procedure .....	184	
DTC Confirmation Procedure .....	160	<b>DTC P1843 ATF PRESSURE SWITCH 3 .....</b>	<b>186</b>	
Diagnostic Procedure .....	161	Description .....	186	G
<b>DTC P1764 DIRECT CLUTCH SOLENOID VALVE</b>		CONSULT-II Reference Value .....	186	
<b>FUNCTION .....</b>	<b>163</b>	On Board Diagnosis Logic .....	186	H
Description .....	163	Possible Cause .....	186	
CONSULT-II Reference Value .....	163	DTC Confirmation Procedure .....	186	
On Board Diagnosis Logic .....	163	Diagnostic Procedure .....	187	I
Possible Cause .....	163	<b>DTC P1845 ATF PRESSURE SWITCH 5 .....</b>	<b>189</b>	
DTC Confirmation Procedure .....	163	Description .....	189	J
Diagnostic Procedure .....	164	CONSULT-II Reference Value .....	189	
<b>DTC P1767 HIGH AND LOW REVERSE CLUTCH</b>		On Board Diagnosis Logic .....	189	
<b>SOLENOID VALVE .....</b>	<b>166</b>	Possible Cause .....	189	
Description .....	166	DTC Confirmation Procedure .....	189	K
CONSULT-II Reference Value .....	166	Diagnostic Procedure .....	190	
On Board Diagnosis Logic .....	166	<b>DTC P1846 ATF PRESSURE SWITCH 6 .....</b>	<b>192</b>	
Possible Cause .....	166	Description .....	192	L
DTC Confirmation Procedure .....	166	CONSULT-II Reference Value .....	192	
Diagnostic Procedure .....	167	On Board Diagnosis Logic .....	192	
<b>DTC P1769 HIGH AND LOW REVERSE CLUTCH</b>		Possible Cause .....	192	
<b>SOLENOID VALVE FUNCTION .....</b>	<b>169</b>	DTC Confirmation Procedure .....	192	
Description .....	169	Diagnostic Procedure .....	193	M
CONSULT-II Reference Value .....	169	<b>TOW MODE SWITCH .....</b>	<b>195</b>	
On Board Diagnosis Logic .....	169	Description .....	195	
Possible Cause .....	169	Diagnostic Procedure .....	195	
DTC Confirmation Procedure .....	169	<b>CLOSED THROTTLE POSITION AND WIDE OPEN</b>		
Diagnostic Procedure .....	170	<b>THROTTLE POSITION CIRCUIT .....</b>	<b>197</b>	
<b>DTC P1772 LOW COAST BRAKE SOLENOID</b>		CONSULT-II Reference Value .....	197	
<b>VALVE .....</b>	<b>172</b>	Diagnostic Procedure .....	197	
Description .....	172	<b>BRAKE SIGNAL CIRCUIT .....</b>	<b>198</b>	
CONSULT-II Reference Value .....	172	CONSULT-II Reference Value .....	198	
On Board Diagnosis Logic .....	172	Diagnostic Procedure .....	198	
Possible Cause .....	172	<b>TROUBLE DIAGNOSIS FOR SYMPTOMS .....</b>	<b>199</b>	
DTC Confirmation Procedure .....	172	AT CHECK Indicator Lamp does not come on ....	199	
Diagnostic Procedure .....	173	Engine Cannot Be Started In "P" or "N" Position .	200	
<b>DTC P1774 LOW COAST BRAKE SOLENOID</b>		In "P" Position, Vehicle Moves When Pushed ....	201	
<b>VALVE FUNCTION .....</b>	<b>175</b>	In "N" Position, Vehicle Moves .....	202	
Description .....	175	Large Shock ("N" to "D" Position) .....	203	
CONSULT-II Reference Value .....	175	Vehicle Does Not Creep Backward In "R" Position	206	
On Board Diagnosis Logic .....	175	Vehicle Does Not Creep Forward In "D" Position .	209	
Possible Cause .....	175	Vehicle Cannot Be Started From D1 .....	211	
DTC Confirmation Procedure .....	175	A/T Does Not Shift: D1 → D2 .....	214	
Diagnostic Procedure .....	176			

A/T Does Not Shift: D2 → D3 .....	216	Removal and Installation (4x2) .....	270
A/T Does Not Shift: D3 → D4 .....	218	Removal and Installation (4x4) .....	273
A/T Does Not Shift: D4 → D5 .....	221	<b>OVERHAUL .....</b>	<b>276</b>
A/T Does Not Perform Lock-up .....	223	Components .....	276
A/T Does Not Hold Lock-up Condition .....	225	Oil Channel .....	284
Lock-up Is Not Released .....	227	Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings .....	286
Engine Speed Does Not Return To Idle .....	228	<b>DISASSEMBLY .....</b>	<b>288</b>
CannotBeChangedtoManualMode(ColumnShift) .....	229	Disassembly .....	288
A/T Does Not Shift: 5th gear → 4th gear .....	229	<b>REPAIR FOR COMPONENT PARTS .....</b>	<b>305</b>
A/T Does Not Shift: 4th gear → 3rd gear .....	232	Oil Pump .....	305
A/T Does Not Shift: 3rd gear → 2nd gear .....	233	Front Sun Gear, 3rd One-Way Clutch .....	307
A/T Does Not Shift: 2nd gear → 1st gear .....	235	Front Carrier, Input Clutch, Rear Internal Gear ....	310
Vehicle Does Not Decelerate By Engine Brake ...	238	Mid Sun Gear, Rear Sun Gear, High and Low Reverse Clutch Hub .....	315
<b>SHIFT CONTROL SYSTEM .....</b>	<b>241</b>	High and Low Reverse Clutch .....	320
Control Device Removal and Installation .....	241	Direct Clutch .....	322
Adjustment of A/T Position .....	243	<b>ASSEMBLY .....</b>	<b>324</b>
Checking of A/T Position .....	243	Assembly (1) .....	324
<b>A/T SHIFT LOCK SYSTEM .....</b>	<b>244</b>	Adjustment .....	337
Description .....	244	Assembly (2) .....	339
Shift Lock System Electrical Parts Location .....	244	<b>SERVICE DATA AND SPECIFICATIONS (SDS) ...</b>	<b>346</b>
Wiring Diagram — A/T — Shift .....	246	General Specifications .....	346
Shift Lock Control Unit Reference Values .....	248	Vehicle Speed When Shifting Gears .....	346
<b>DIAGNOSTIC PROCEDURE .....</b>	<b>249</b>	Vehicle Speed When Performing and Releasing Complete Lock-up .....	347
Component Inspection .....	251	Vehicle Speed When Performing and Releasing Slip Lock-up .....	347
<b>KEY INTERLOCK CABLE .....</b>	<b>253</b>	Stall Speed .....	347
Components .....	253	Line Pressure .....	347
Removal .....	253	A/T Fluid Temperature Sensor .....	347
Installation .....	254	Turbine Revolution Sensor .....	347
<b>ON-VEHICLE SERVICE .....</b>	<b>255</b>	Vehicle Speed Sensor A/T (Revolution Sensor) ..	347
Control Valve With TCM and A/T Fluid Temperature Sensor 2 .....	255	Reverse brake .....	348
Rear Oil Seal .....	267	Total End Play .....	348
<b>AIR BREATHER HOSE .....</b>	<b>268</b>		
Removal and Installation .....	268		
<b>TRANSMISSION ASSEMBLY .....</b>	<b>270</b>		

# INDEX FOR DTC

## INDEX FOR DTC

PFP:00024

### Alphabetical Index

UCS002ME

**NOTE:**

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-107](#).

Items (CONSULT-II screen terms)	DTC		Reference page
	OBD-II	Except OBD-II	
	CONSULT-II GST (*1)	CONSULT-II only "A/T"	
A/T 1ST E/BRAKING	—	P1731	<a href="#">AT-145</a>
ATF PRES SW 1/CIRC	—	P1841	<a href="#">AT-183</a>
ATF PRES SW 3/CIRC	—	P1843	<a href="#">AT-186</a>
ATF PRES SW 5/CIRC	—	P1845	<a href="#">AT-189</a>
ATF PRES SW 6/CIRC	—	P1846	<a href="#">AT-192</a>
A/T INTERLOCK	P1730	P1730	<a href="#">AT-142</a>
A/T TCC S/V FNCTN	P0744	P0744	<a href="#">AT-124</a>
ATF TEMP SEN/CIRC	P0710	P1710	<a href="#">AT-134</a>
CAN COMM CIRCUIT	U1000	U1000	<a href="#">AT-107</a>
D/C SOLENOID/CIRC	P1762	P1762	<a href="#">AT-160</a>
D/C SOLENOID FNCTN	P1764 (*2)	P1764	<a href="#">AT-163</a>
ENGINE SPEED SIG	—	P0725	<a href="#">AT-119</a>
FR/B SOLENOID/CIRC	P1757	P1757	<a href="#">AT-154</a>
FR/B SOLENOID FNCT	P1759	P1759	<a href="#">AT-157</a>
HLR/C SOL/CIRC	P1767	P1767	<a href="#">AT-166</a>
HLR/C SOL FNCTN	P1769 (*2)	P1769	<a href="#">AT-169</a>
I/C SOLENOID/CIRC	P1752	P1752	<a href="#">AT-148</a>
I/C SOLENOID FNCTN	P1754 (*2)	P1754	<a href="#">AT-151</a>
L/PRESS SOL/CIRC	P0745	P0745	<a href="#">AT-127</a>
LC/B SOLENOID/CIRC	P1772	P1772	<a href="#">AT-172</a>
LC/B SOLENOID FNCT	P1774	P1774	<a href="#">AT-175</a>
MANU MODE SW/CIR	—	P1815	<a href="#">AT-178</a>
PNP SW/CIRC	P0705	P0705	<a href="#">AT-113</a>
STARTER RELAY/CIRC	—	P0615	<a href="#">AT-109</a>
TCC SOLENOID/CIRC	P0740	P0740	<a href="#">AT-121</a>
TCM	P0700	P0700	<a href="#">AT-112</a>
TCM-RAM	—	P1702	<a href="#">AT-130</a>
TCM-ROM	—	P1703	<a href="#">AT-131</a>
TP SEN/CIRC A/T	—	P1705	<a href="#">AT-132</a>
TURBINE REV S/CIRC	P1716	P1716	<a href="#">AT-137</a>
VEH SPD SE/CIR-MTR	—	P1721	<a href="#">AT-140</a>
VEH SPD SEN/CIR AT	P0720	P0720	<a href="#">AT-116</a>

\*1: These numbers are prescribed by SAE J2012.

\*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

# INDEX FOR DTC

UCS002MF

## DTC No. Index

**NOTE:**

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-107](#).

DTC		Items (CONSULT-II screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-II GST (*1)	CONSULT-II only "A/T"		
—	P0615	STARTER RELAY/CIRC	<a href="#">AT-109</a>
P0700	P0700	TCM	<a href="#">AT-112</a>
P0705	P0705	PNP SW/CIRC	<a href="#">AT-113</a>
P0710	P1710	ATF TEMP SEN/CIRC	<a href="#">AT-134</a>
P0720	P0720	VEH SPD SEN/CIR AT	<a href="#">AT-116</a>
—	P0725	ENGINE SPEED SIG	<a href="#">AT-119</a>
P0740	P0740	TCC SOLENOID/CIRC	<a href="#">AT-121</a>
P0744	P0744	A/T TCC S/V FNCTN	<a href="#">AT-124</a>
P0745	P0745	L/PRESS SOL/CIRC	<a href="#">AT-127</a>
—	P1702	TCM-RAM	<a href="#">AT-130</a>
—	P1703	TCM-ROM	<a href="#">AT-131</a>
—	P1705	TP SEN/CIRC A/T	<a href="#">AT-132</a>
P1716	P1716	TURBINE REV S/CIRC	<a href="#">AT-137</a>
—	P1721	VEH SPD SE/CIR-MTR	<a href="#">AT-140</a>
P1730	P1730	A/T INTERLOCK	<a href="#">AT-142</a>
—	P1731	A/T 1ST E/BRAKING	<a href="#">AT-145</a>
P1752	P1752	I/C SOLENOID/CIRC	<a href="#">AT-148</a>
P1754 (*2)	P1754	I/C SOLENOID FNCTN	<a href="#">AT-151</a>
P1757	P1757	FR/B SOLENOID/CIRC	<a href="#">AT-154</a>
P1759 (*2)	P1759	FR/B SOLENOID FNCT	<a href="#">AT-157</a>
P1762	P1762	D/C SOLENOID/CIRC	<a href="#">AT-160</a>
P1764 (*2)	P1764	D/C SOLENOID FNCTN	<a href="#">AT-163</a>
P1767	P1767	HLR/C SOL/CIRC	<a href="#">AT-166</a>
P1769	P1769	HLR/C SOL FNCTN	<a href="#">AT-169</a>
P1772	P1772	LC/B SOLENOID/CIRC	<a href="#">AT-172</a>
P1774	P1774	LC/B SOLENOID FNCT	<a href="#">AT-175</a>
—	P1815	MANU MODE SW/CIR	<a href="#">AT-178</a>
—	P1841	ATF PRES SW 1/CIRC	<a href="#">AT-183</a>
—	P1843	ATF PRES SW 3/CIRC	<a href="#">AT-186</a>
—	P1845	ATF PRES SW 5/CIRC	<a href="#">AT-189</a>
—	P1846	ATF PRES SW 6/CIRC	<a href="#">AT-192</a>
U1000	U1000	CAN COMM CIRCUIT	<a href="#">AT-107</a>

\*1: These numbers are prescribed by SAE J2012.

\*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

# PRECAUTIONS

## PRECAUTIONS

PF0:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UCS002MG

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Precautions for On Board Diagnostic (OBD) System of A/T and Engine

UCS002MH

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

#### **CAUTION:**

- Be sure to turn the ignition switch “OFF” and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. Will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. May cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

# PRECAUTIONS


UCS002M1

## Precautions


### NOTE:

If any malfunctions occur in the RE5R05A model transmission, replace the entire transmission assembly.

- Before connecting or disconnecting the TCM harness connector, turn ignition switch "OFF" and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned "OFF".

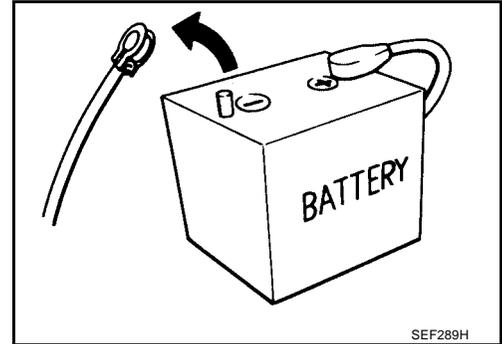

- After performing each TROUBLE DIAGNOSIS, perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE".  
If the repair is completed the DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

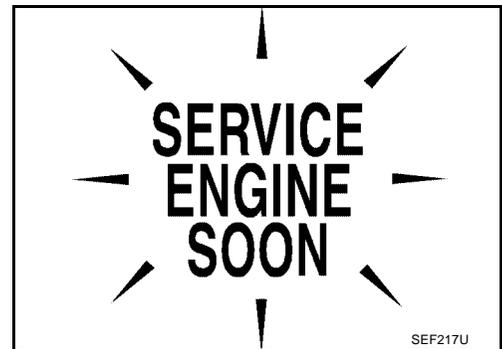

- Always use the specified brand of ATF. Refer to [MA-10, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).
- Use paper rags not cloth rags during work.
- After replacing the ATF, dispose of the waste oil using the methods prescribed by law, ordinance, etc.
- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transmission with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.  
Always follow the procedures under "Changing A/T Fluid" in the AT section when changing A/T fluid. Refer to [AT-13, "Changing A/T Fluid"](#) , [AT-13, "Checking A/T Fluid"](#) .

# PRECAUTIONS

## Service Notice or Precautions

UCS002MJ

### ATF COOLER SERVICE

- If A/T fluid contains fictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines with cleaning solvent and compressed air after repair. For A/T fluid cooler cleaning procedure, refer to [AT-15, "A/T Fluid Cooler Cleaning"](#) . For radiator replacement, refer to [CO-10, "REMOVAL"](#) .

### CHECKING AND CHANGING A/T FLUID

- Increase ATF oil temperature to 80°C (176°F) first, then check and adjust oil level at 65°C (149°F).

#### NOTE:

The A/T has both water cooling and air cooling systems. The air cooling system has a bypass valve. When ATF oil temperature is at or below 50°C (122°F), it does not flow through the air cooled system. If A/T oil level is adjusted without flow throughout the entire system, the level will be 10mm lower than required. Therefore, all piping should be filled with oil when adjusting level.

### OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the A/T CHECK indicator or the malfunction indicator lamp (MIL). Refer to the table on [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.  
**Always perform the procedure on [AT-43, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.**

For details of OBD-II, refer to [AT-42, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .

- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-69, "HARNESS CONNECTOR"](#) .**

### Wiring Diagrams and Trouble Diagnosis

UCS002MK

When you read wiring diagrams, refer to the following:

- [GI-15, "How to Read Wiring Diagrams"](#).
- [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution circuit.

When you perform trouble diagnosis, refer to the following:

- [GI-9, "How to Follow Trouble Diagnoses"](#).
- [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#).

# PREPARATION





PFP:00002

UCS002UA



## PREPARATION

### Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

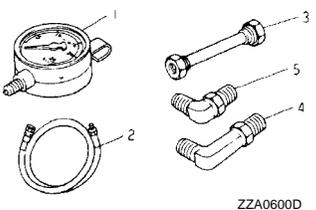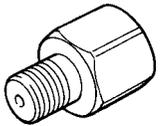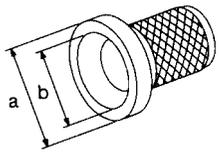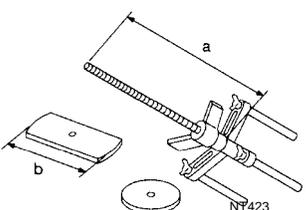Tool number (Kent-Moore No.) Tool name	Description
ST2505S001 (J-34301-C) Oil pressure gauge set 1 ST25051001 ( — ) Oil pressure gauge 2 ST25052000 ( — ) Hose 3 ST25053000 ( — ) Joint pipe 4 ST25054000 ( — ) Adapter 5 ST25055000 ( — ) Adapter	 <p style="text-align: center;">ZZA0600D</p>
KV31103600 (J-45674) Joint pipe adapter (With ST25054000)	 <p style="text-align: center;">ZZA1227D</p>
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia b: 47 mm (1.85 in) dia	 <p style="text-align: center;">NT086</p> <ul style="list-style-type: none"> <li>● Installing rear oil seal (2WD models)</li> <li>● Installing oil pump housing oil seal</li> </ul>
KV31102400 (J-34285 and J-34285-87) Clutch spring compressor a: 320 mm (12.60 in) b: 174 mm (6.85 in)	 <p style="text-align: center;">NT423</p>




# PREPARATION

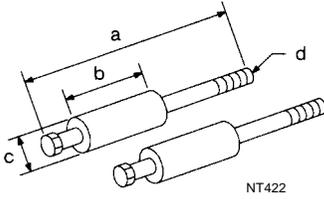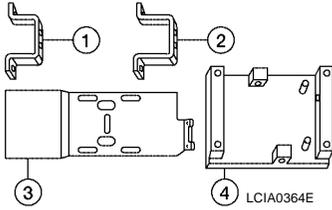Tool number (Kent-Moore No.) Tool name	Description	
ST25850000 (J-25721-A) Sliding hammer a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) d: M12X1.75P	 Remove oil pump assembly	A B <b>AT</b>
— (J-47002) Transmission jack adapter kit — (J-47002-1) Center bracket (Pathfinder with All-Mode 4WD) — (J-47002-2) Center bracket (Titan and Armada) — (J-47002-3) Adapter plate — (J-47002-4) Adapter block	 Assist in removal of transmission and transfer case as one assembly using only one transmission jack.	D E F G H

# PREPARATION

## Commercial Service Tools

UCS002UB

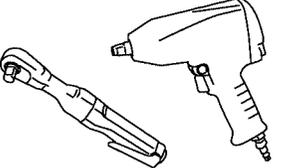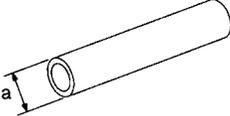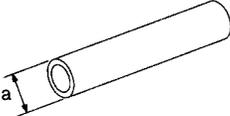Tool name	Description
<p>Power tool</p>  <p>PBI0190E</p>	<p>Loosening bolts and nuts</p>
<p>Drift a: 22 mm (0.87 in)</p>  <p>NT083</p>	<p>Installing manual shaft seal</p>
<p>Drift a: 64 mm (2.52 in)</p>  <p>NT083</p>	<p>Installing rear oil seal (4WD models)</p>

## A/T FLUID

## Changing A/T Fluid

UCS002MN

1. Increase ATF oil temperature to 80°C (176°F) once.
2. Stop engine.
3. Remove the tightening bolt for ATF level gauge.
4. Drain ATF from drain plug and refill with new ATF. Always refill same volume with drained fluid.
  - To replace the ATF, pour in new fluid at the charging pipe with the engine idling and at the same time drain the old fluid from the radiator cooler hose return side.
  - When the color of the fluid coming out is about the same as the color of the new fluid, the replacement is complete. The amount of new transmission fluid to use should be 30 to 50% increase of the stipulated amount.

**ATF: NISSAN Matic Fluid J**

**Fluid capacity: 10.6 ℓ (11-1/4 US qt, 9-3/8 Imp qt)**

**CAUTION:**

- Use only Genuine NISSAN ATF Matic Fluid J. Do not mix with other fluid.
- Using automatic transmission fluid other than Genuine NISSAN ATF Matic Fluid J will cause deterioration in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the warranty.
- When filling ATF, take care not to splash ATF on heat generating parts such as exhaust.
- Do not reuse drain plug gasket.

**Drain plug: : 34 N·m (3.5 kg-m, 25 ft-lb)**

5. Increase ATF oil temperature to 80°C (176°F) once.
6. Check fluid level and condition. Refer to [MA-21, "Checking A/T Fluid"](#) . If fluid is still dirty, repeat step 2. through 5.
7. Install the removed ATF level gauge in the fluid charging pipe.
8. Tighten the level gauge bolt.

**Level gauge bolt: : 5.1 N·m (0.52 kg-m, 45 in-lb)**

## Checking A/T Fluid

UCS002MO

1. Warm up engine.
2. Check for fluid leakage.
3. Remove the tightening bolt for ATF level gauge.
4. Before driving, fluid level can be checked at fluid temperatures of 30° to 50°C (86° to 122°F) using "COLD" range on ATF level gauge as follows.
  - a. Park vehicle on level surface and set parking brake.
  - b. Start engine and move selector lever through each gear position. Leave selector lever in "P" position.
  - c. Check fluid level with engine idling.
  - d. Remove ATF level gauge and wipe clean with lint-free paper.

**CAUTION:**

**When wiping away the fluid level gauge, always use lint-free paper, not a cloth one.**

- e. Re-insert ATF level gauge into charging pipe as far as it will go.

**CAUTION:**

**To check fluid level, insert the ATF level gauge until the cap contacts the end of the charging pipe, with the gauge reversed from the normal attachment conditions.**

- f. Remove ATF level gauge and note reading. If reading is at low side of range, add fluid to the charging pipe.

**CAUTION:**

**Do not overfill.**


5. Increase ATF oil temperature to 80°C (176°F) once.

## A/T FLUID

6. Make the fluid temperature approximately 65°C (149°F).

**NOTE:**

Fluid level will be greatly affected by temperature as shown in figure. Therefore, be certain to perform operation while checking data with CONSULT-II.

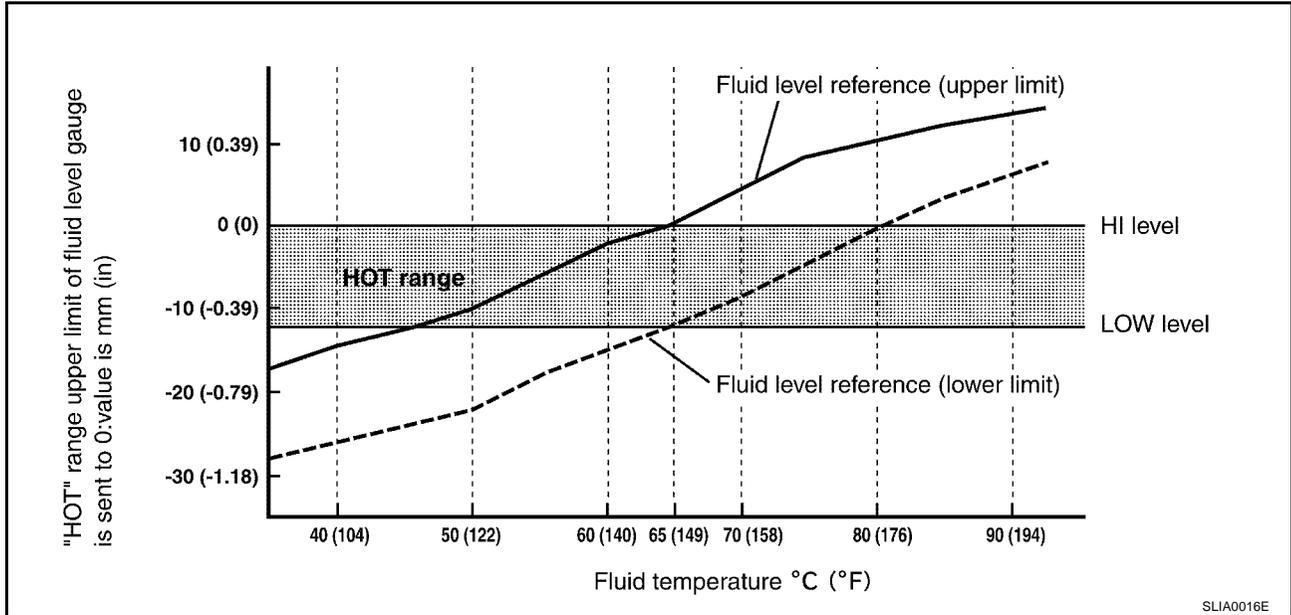


SLIA0016E

- Connect CONSULT-II to data link connector.
  - Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
  - Read out the value of "ATF TEMP 1".
7. Re-check fluid level at fluid temperatures of approximately 65°C (149°F) using "HOT" range on A/T fluid level gauge.

**CAUTION:**

- When wiping away the fluid level gauge, always use lint-free paper, not a cloth one.
- To check fluid level, insert the ATF level gauge until the cap contacts the end of the charging pipe, with the gauge reversed from the normal attachment conditions as shown.

8. Check fluid condition.
- If fluid is very dark or smells burned, check operation of A/T. Flush cooling system after repair of A/T.
  - If ATF contains frictional material (clutches, bands, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of A/T. Refer to [CO-10, "RADIATOR"](#).
9. Install the removed ATF level gauge into the fluid charging pipe.
10. Tighten the level gauge bolt.

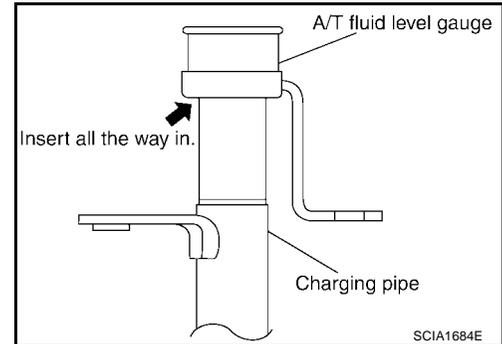

SCIA1684E

**Level gauge bolt: : 5.1 N·m (0.52 kg·m, 45 in·lb)**

## A/T Fluid Cooler Cleaning

Whenever an automatic transmission is repaired, overhauled, or replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of A/T fluid. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as A/T fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### A/T FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the automatic transmission's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

**NOTE:**

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any A/T fluid that remains in the cooler hoses to drain into the oil pan.

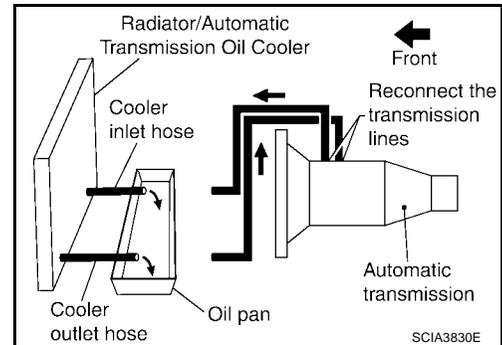


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


**CAUTION:**

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

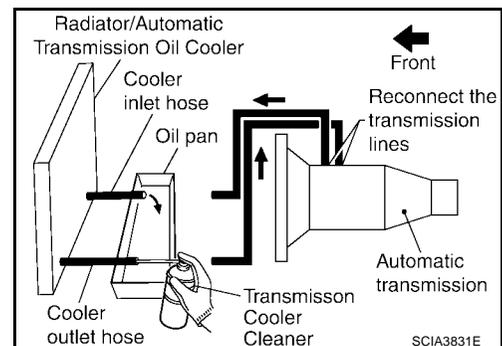

7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.

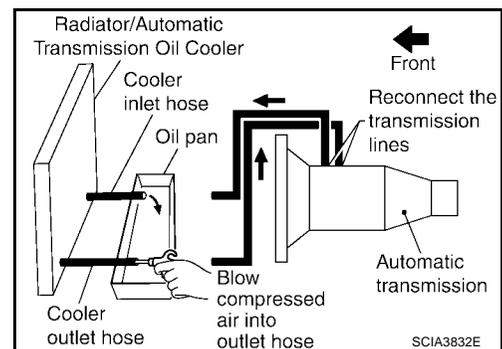

9. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining fluid.
10. Repeat steps 5 through 9 three additional times.
11. Position an oil pan under the banjo bolts that connect the fluid cooler steel lines to the transmission.
12. Remove the banjo bolts.
13. Flush each steel line from the cooler side back toward the transmission by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

## A/T FLUID

14. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through each steel line from the cooler side back toward the transmission for 10 seconds to force out any remaining fluid.
15. Ensure all debris is removed from the steel cooler lines.
16. Ensure all debris is removed from the banjo bolts and fittings.
17. Perform A/T fluid cooler inspection procedure. Refer to [AT-17, "A/T FLUID COOLER INSPECTION PROCEDURE"](#).

### A/T FLUID COOLER DIAGNOSIS PROCEDURE



#### NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.


1. Position an oil pan under the automatic transmission's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

#### CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
  - Spray cooler cleaner only with adequate ventilation.
  - Avoid contact with eyes and skin.
  - Do not breath vapors or spray mist.
4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.
  5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

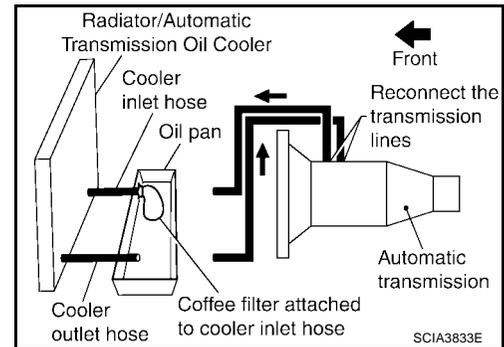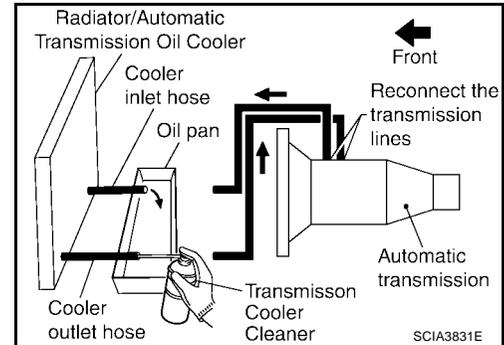


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 - 9 kg/cm<sup>2</sup> (70 - 130 psi) through the cooler outlet hose to force any remaining A/T fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform A/T fluid cooler inspection procedure. [AT-17, "A/T FLUID COOLER INSPECTION PROCEDURE"](#).

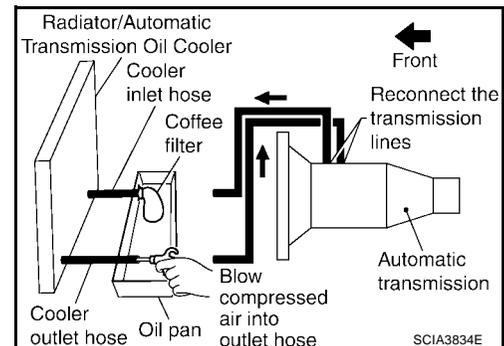


# A/T FLUID

## A/T FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
- a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.

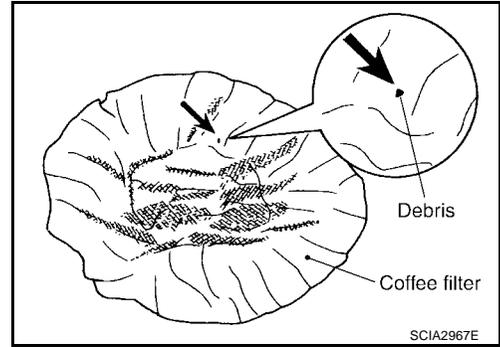

- b. If one or more pieces of debris are found that are over 1mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The A/T fluid cooler/radiator must be replaced and the inspection procedure is ended. Refer to [CO-10, "RADIATOR"](#).

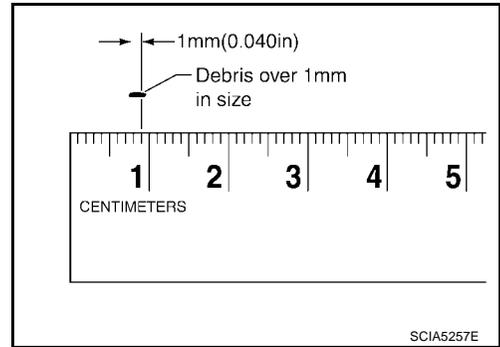

## A/T FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# A/T CONTROL SYSTEM

## A/T CONTROL SYSTEM

PFP:31036

### Cross-Sectional View (2WD models)

UCS002MQ

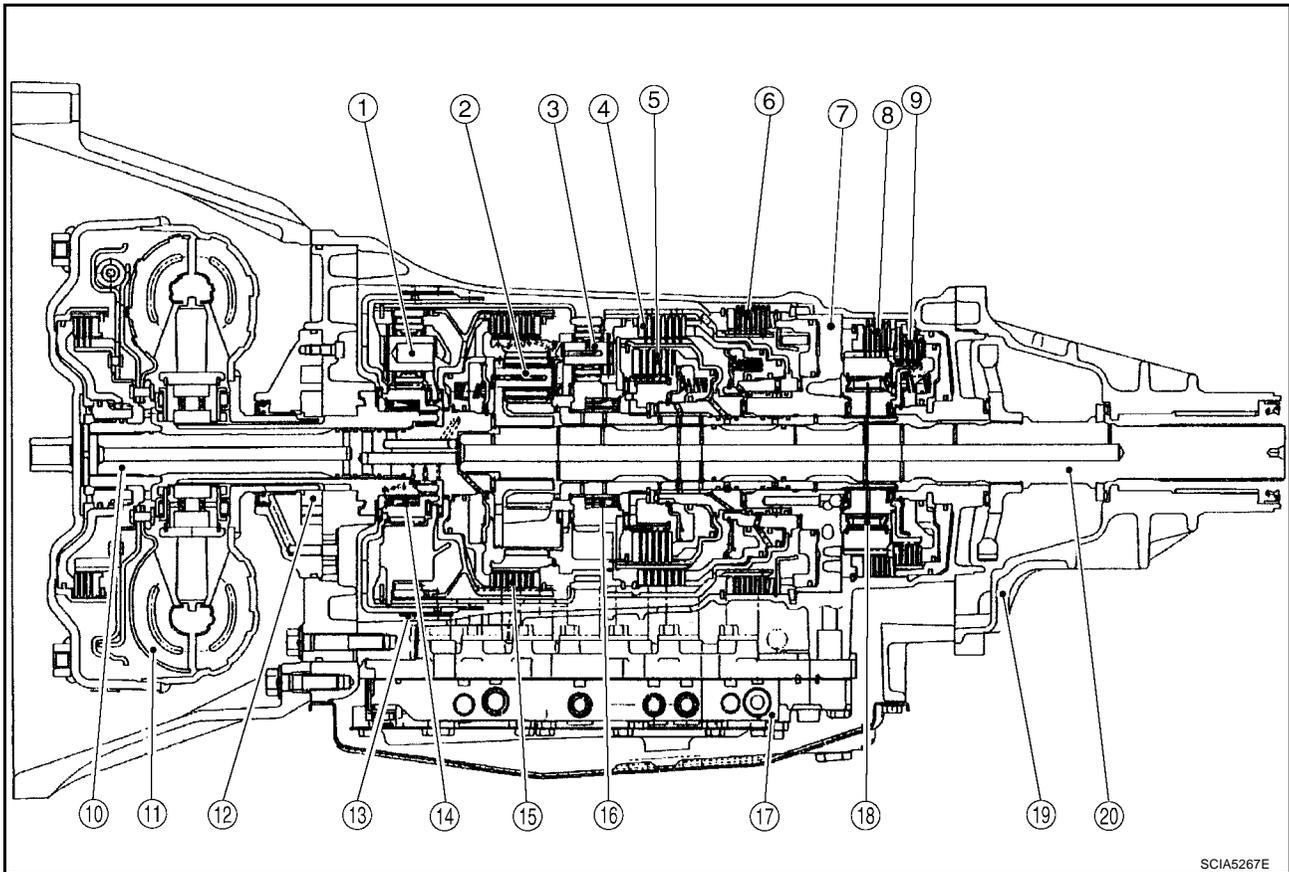


SCIA5267E

- |                         |                              |                            |
|-------------------------|------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear        | 3. Rear planetary gear     |
| 4. Direct clutch        | 5. High & low reverse clutch | 6. Reverse brake           |
| 7. Drum support         | 8. Forward brake             | 9. Low coast brake         |
| 10. Input shaft         | 11. Torque converter         | 12. Oil pump               |
| 13. Front brake         | 14. 3rd one-way clutch       | 15. Input clutch           |
| 16. 1st one-way clutch  | 17. Control valve with TCM   | 18. Forward one-way clutch |
| 19. Rear extension      | 20. Output shaft             |                            |

# A/T CONTROL SYSTEM

## Cross-Sectional View (4WD models)

UCS002MR

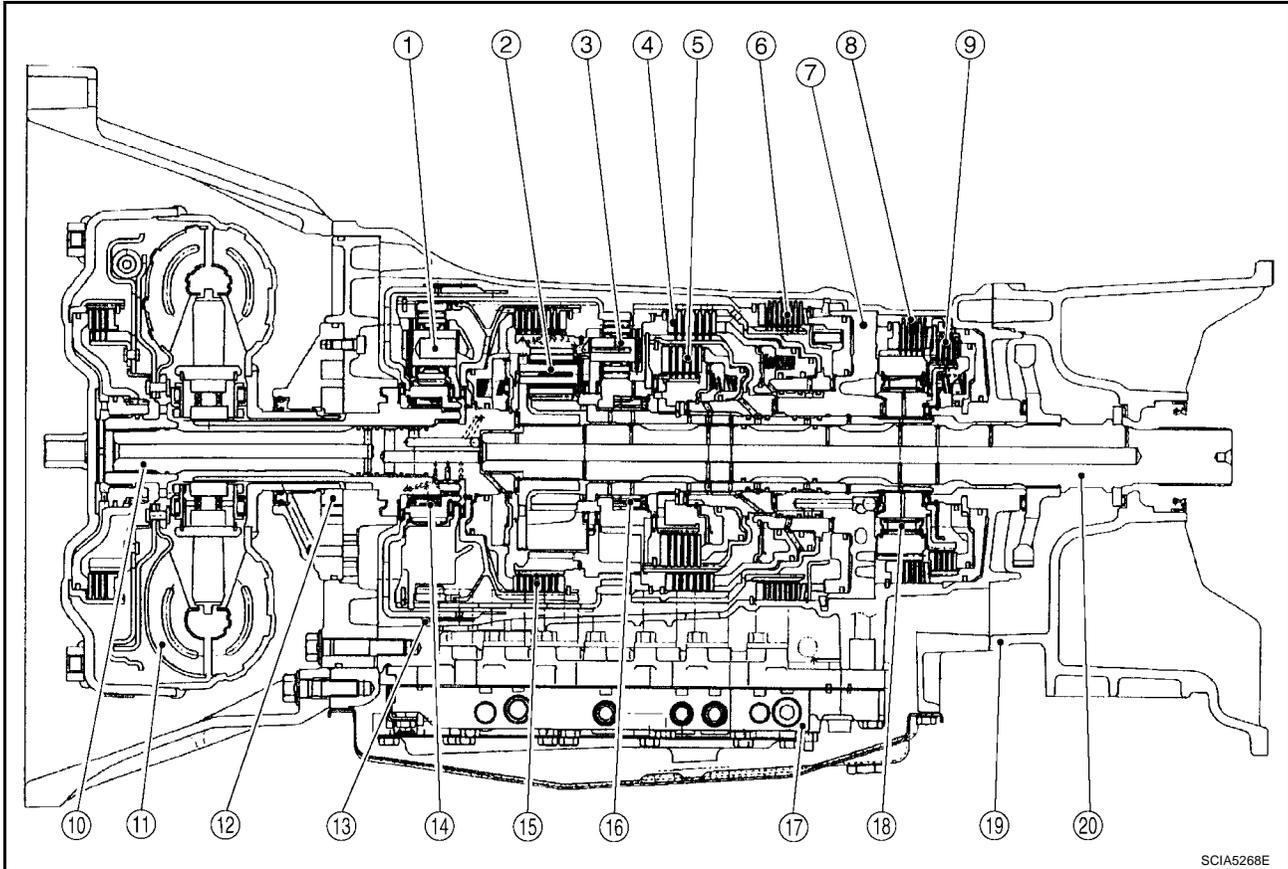

SCIA5268E

- |                         |                              |                            |
|-------------------------|------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear        | 3. Rear planetary gear     |
| 4. Direct clutch        | 5. High & low reverse clutch | 6. Reverse brake           |
| 7. Drum support         | 8. Forward brake             | 9. Low coast brake         |
| 10. Input shaft         | 11. Torque converter         | 12. Oil pump               |
| 13. Front brake         | 14. 3rd one-way clutch       | 15. Input clutch           |
| 16. 1st one-way clutch  | 17. Control valve with TCM   | 18. Forward one-way clutch |
| 19. Adapter case        | 20. Output shaft             |                            |

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# A/T CONTROL SYSTEM


UCS002MS

## Shift Mechanism

The automatic transmission uses compact dual planetary gear systems to improve power-transmission efficiency, simplify construction and reduce weight.

It also employs an optimum shift control and super wide gear ratios. They improve starting performance and acceleration during medium and high-speed operation.

## CONSTRUCTION

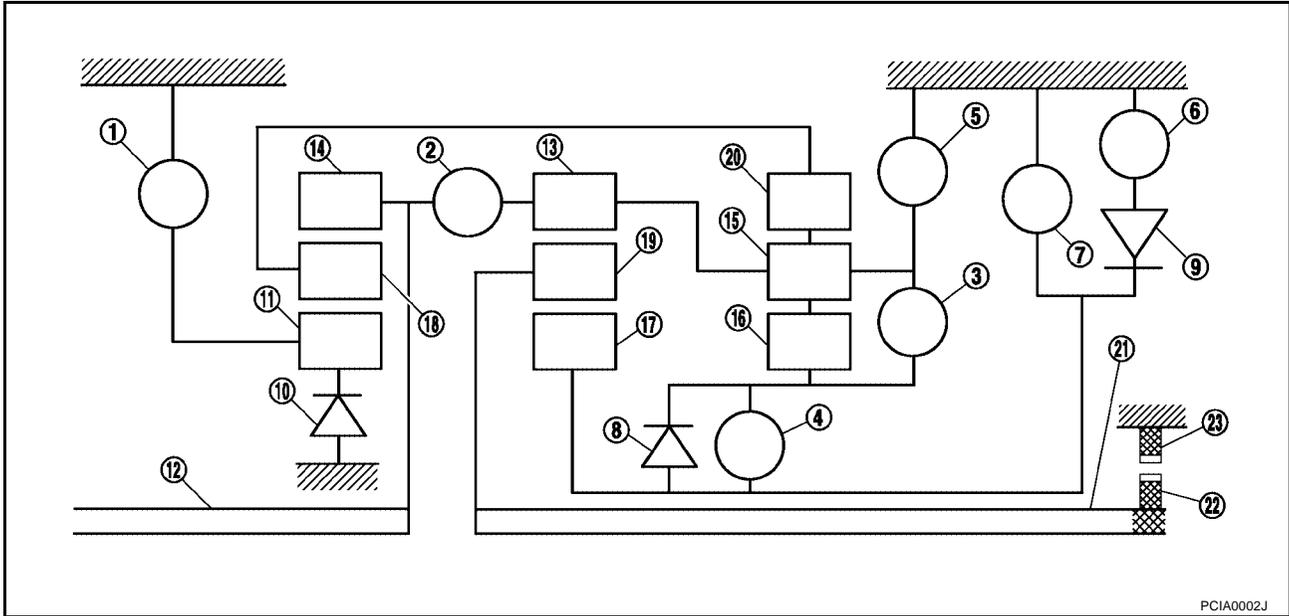

PCIA0002J

- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

## FUNCTION OF CLUTCH AND BRAKE

Name of the Part	Abbreviation	Function
Front brake (1)	FR/B	Fastens the front sun gear (11).
Input clutch (2)	I/C	Connects the input shaft (12), the front internal gear (14) and the mid internal gear (13).
Direct clutch (3)	D/C	Connects the rear carrier (15) and the rear sun gear (16).
High and low reverse clutch (4)	HLR/C	Connects the mid sun gear (17) and the rear sun gear (16).
Reverse brake (5)	R/B	Fastens the rear carrier (15).
Forward brake (6)	F/B	Fastens the mid sun gear (17).
Low coast brake (7)	LC/B	Fastens the mid sun gear (17).
1st one-way clutch (8)	1st/O.C	Allows the rear sun gear (16) to turn freely forward relative to the mid sun gear (17) but fastens it for reverse rotation.
Forward one-way clutch (9)	F/O.C	Allows the mid sun gear (17) to turn freely in the forward direction but fastens it for reverse rotation.
3rd one-way clutch (10)	3rd/O.C	Allows the front sun gear (11) to turn freely in the forward direction but fastens it for reverse rotation.


# A/T CONTROL SYSTEM

## CLUTCH AND BAND CHART (FLOOR SHIFT MODELS)

Shift position	I/C	HLR/C	D/C	R/B	FR/B	LC/B	Fwd/B	1st OWC	Fwd OWC	3rd OWC	Remarks
P		△			△						PARK POSITION
R		○		○	○			☆		☆	REVERSE POSITION
N		△			△						NEUTRAL POSITION
D	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4↔5
	2nd		○		△		○		☆	☆	
	3rd		○	○		○	△	★		☆	
	4th	○	○	○			△	★			
	5th	○	○			○	△	★		★	
4	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4
	2nd		○		△		○		☆	☆	
	3rd		○	○		○	△	★		☆	
	4th	○	○	○			△	★			
3	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4
	2nd		○		△		○		☆	☆	
	3rd		○	○		○	△	★		☆	
	4th	○	○	○			△	★			
2	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4
	2nd		○		○	○	○		☆	☆	
	3rd		○	○		○	△	★		☆	
	4th	○	○	○			△	★			
1	1st		○		○	○	○	☆	☆	☆	Locks (held stationary in 1st gear) 1↔2↔3↔4
	2nd			○		○	○		☆	☆	
	3rd		○	○		○	△	★		☆	
	4th	○	○	○			△	★			

- ○—Operates
- ☆—Operates during “progressive” acceleration.
- ★—Operates and effects power transmission while coasting.
- △—Line pressure is applied but does not affect power transmission.
- △\*—Operates under conditions shown in HLR/C Operating Condition
- △\*\*—Operates under conditions shown in LC/B Operating Condition. Delay control is applied during D (4,3,2,1) ⇒N shift.

# A/T CONTROL SYSTEM

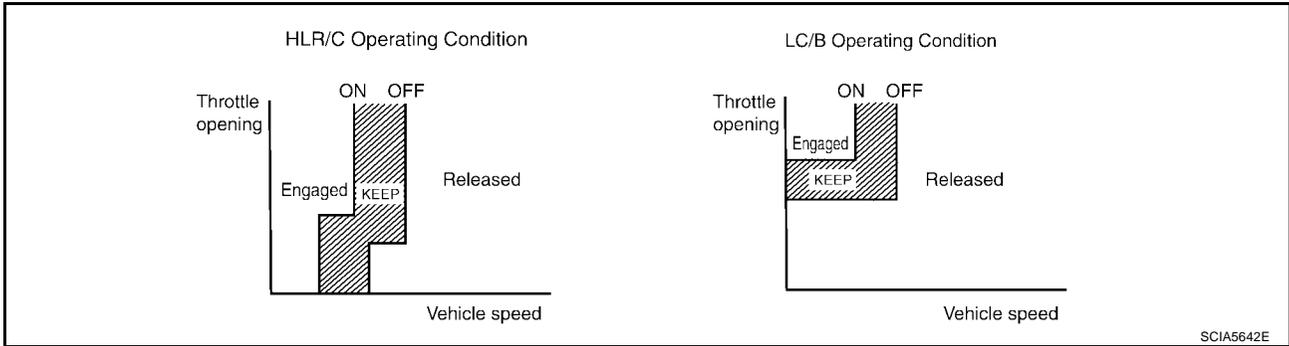

SCIA5642E


# A/T CONTROL SYSTEM

## CLUTCH AND BAND CHART (COLUMN SHIFT MODELS)

Shift position	I/C	HLR/C	D/C	R/B	FR/B	LC/B	Fwd/B	1st OWC	Fwd OWC	3rd OWC	Remarks
P		△			△						PARK POSITION
R		○		○	○			☆		☆	REVERSE POSITION
N		△			△						NEUTRAL POSITION
D	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1⇔2⇔3⇔4⇔5
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
	5th	○	○			○		△	★	★	
M5	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1⇔2⇔3⇔4⇔5
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
	5th	○	○			○		△	★	★	
M4	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1⇔2⇔3⇔4
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
M3	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1⇔2⇔3
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
M2	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1⇔2
	2nd		○		○	○	○		☆	☆	
M1	1st	○			○	○	○	☆	☆	☆	Locks (held stationary in 1st gear)
	2nd		○		○	○	○		☆	☆	

- ○—Operates
- ☆—Operates during “progressive” acceleration.
- ★—Operates and effects power transmission while coasting.
- △—Line pressure is applied but does not affect power transmission.
- △\*—Operates under conditions shown in HLR/C Operating Condition
- △\*\*—Operates under conditions shown in LC/B Operating Condition. Delay control is applied during D (4,3,2,1) ⇒N shift.

# A/T CONTROL SYSTEM

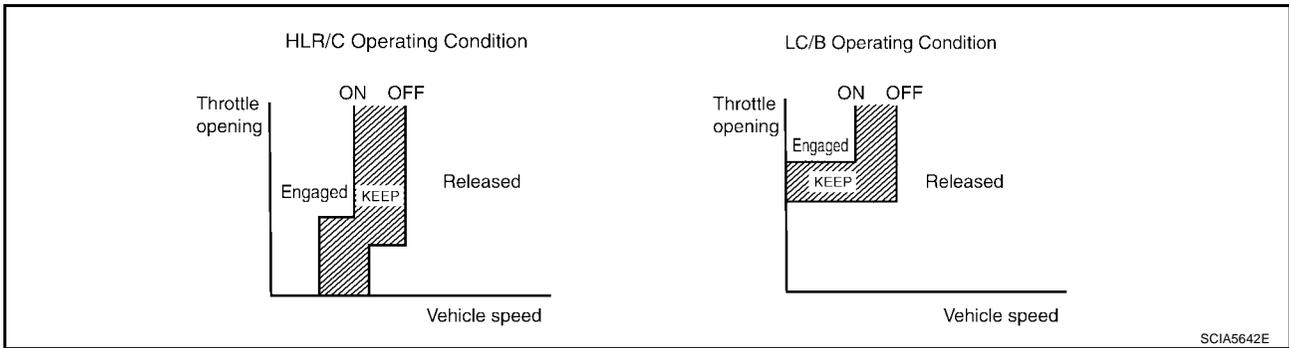

SCIA5642E


## POWER TRANSMISSION

### “N” position

Since both the forward brake and the reverse brake are released, torque from the input shaft drive is not transmitted to the output shaft.

### “P” position

- The same as for the “N” position, both the forward brake and the reverse brake are released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pawl linked with the select lever meshes with the parking gear and fastens the output shaft mechanically.

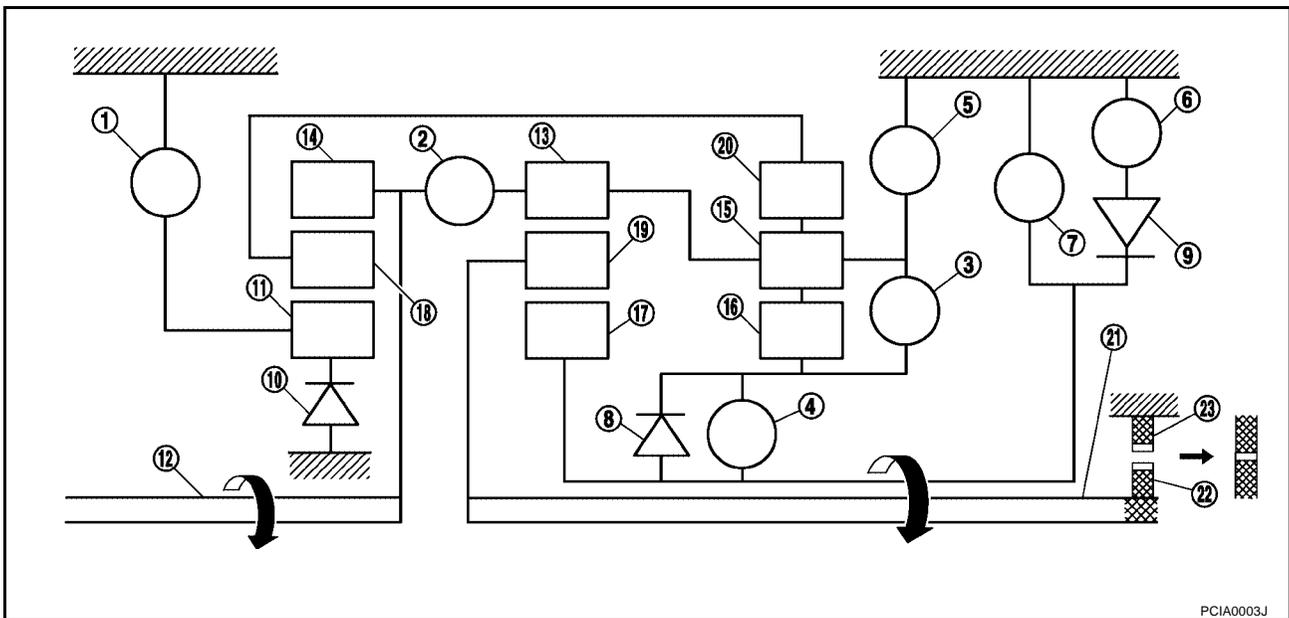


PCIA0003J

- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

**“D”, “M5”, “M4”, “M3”, “M2” positions (column shift), “D”, “4”, “3”, “2” positions (floor shift)  
1st gear**

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 1st one-way clutch regulates reverse rotation of the rear sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and the engine brake is not activated.

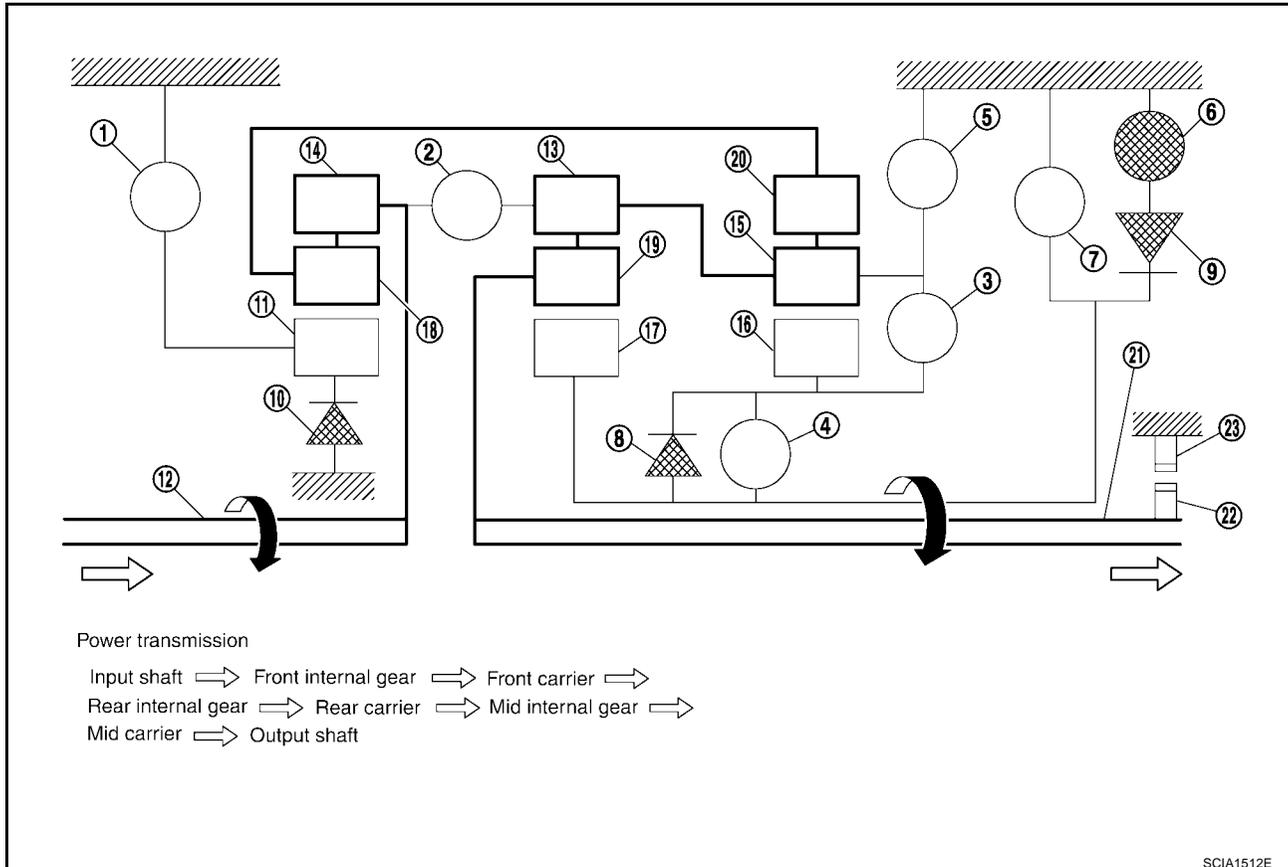


- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

## “M1” position (column shift), “1 ” position (floor shift) 1st gear

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- High and low reverse clutch connects the rear sun gear and the mid sun gear.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

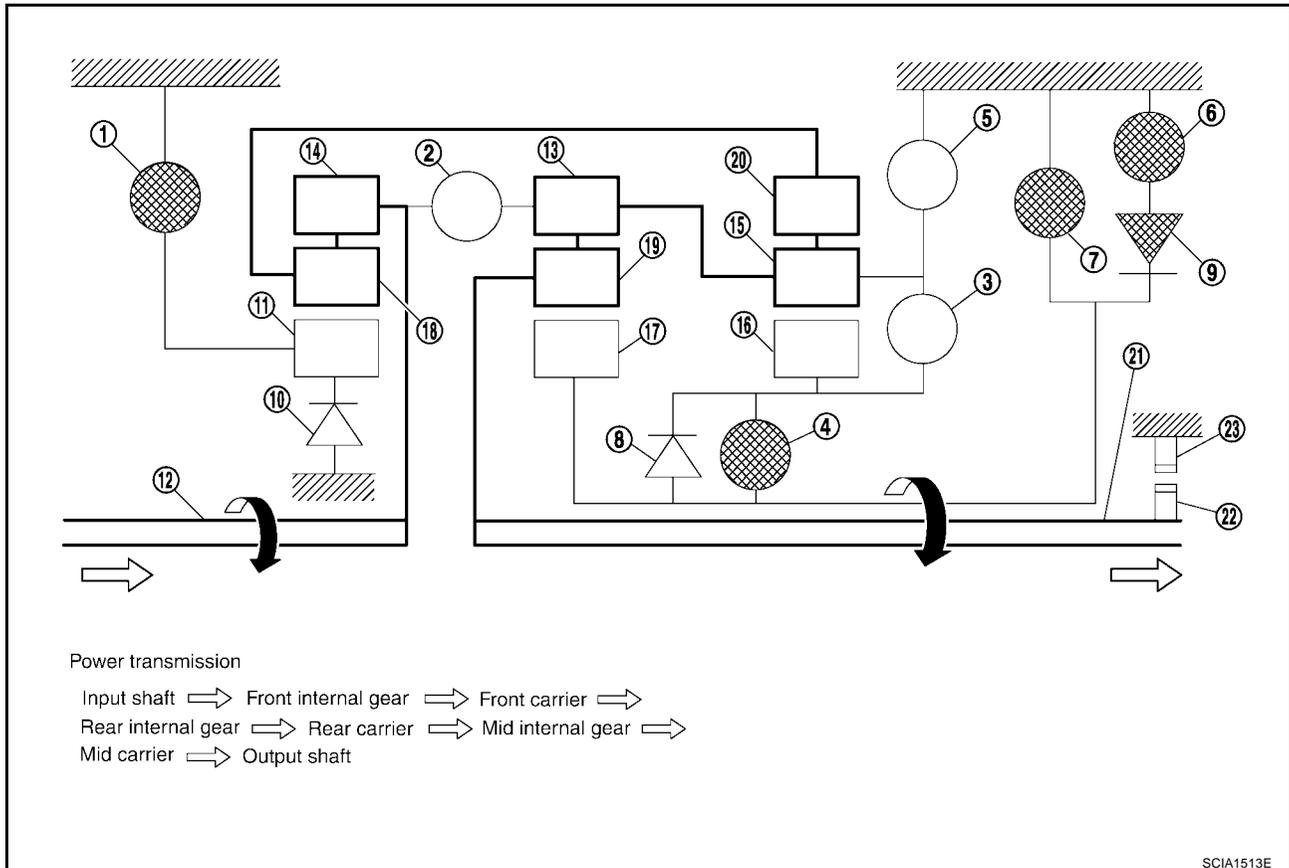


- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

## “D”, “M5”, “M4”, “M3” positions (column shift), “D”, “4”, “3” positions (column shift) 2nd gear

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- The direct clutch is coupled and the rear carrier and rear sun gear are connected.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and engine brake is not activated.

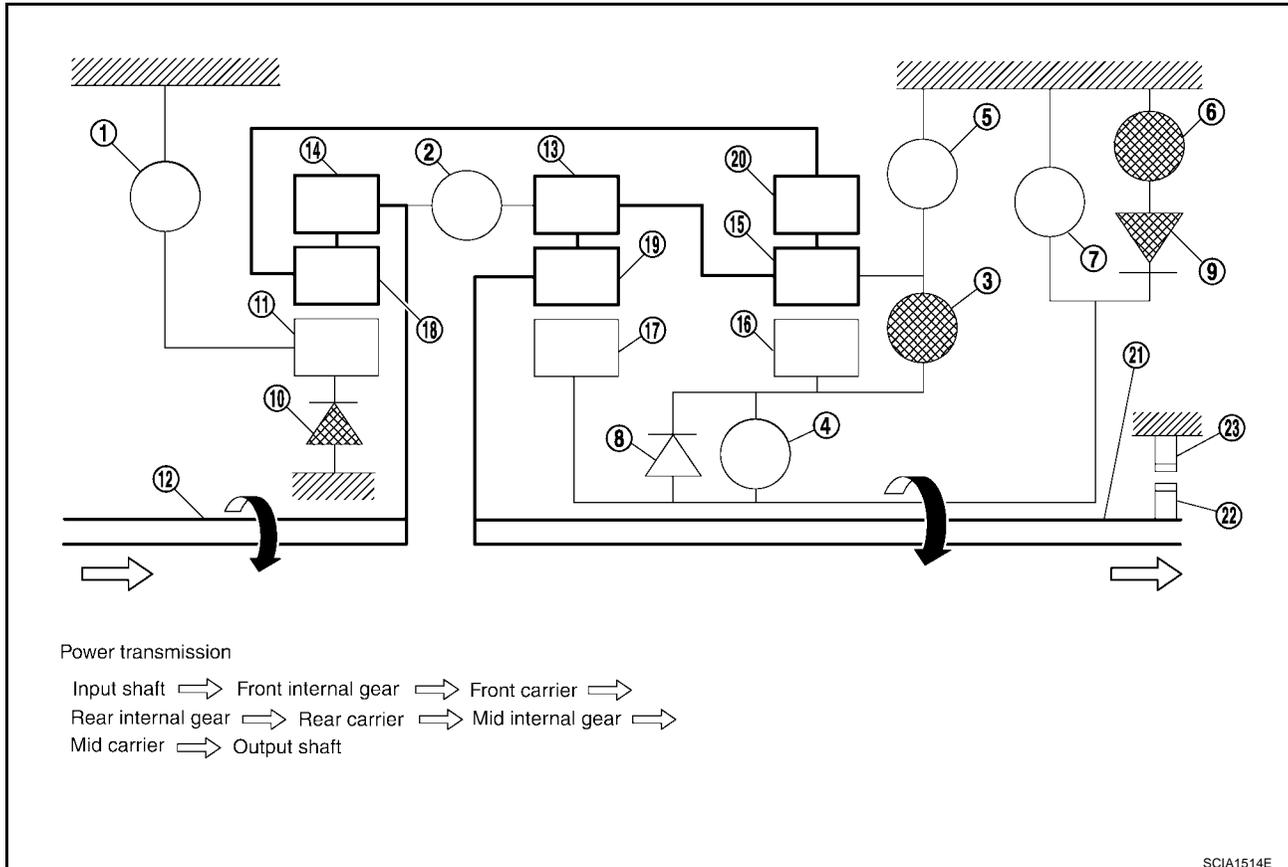


- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

## “M2”, “M1” positions (column shift), “2”, “1” positions (floor shift) 2nd gear

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

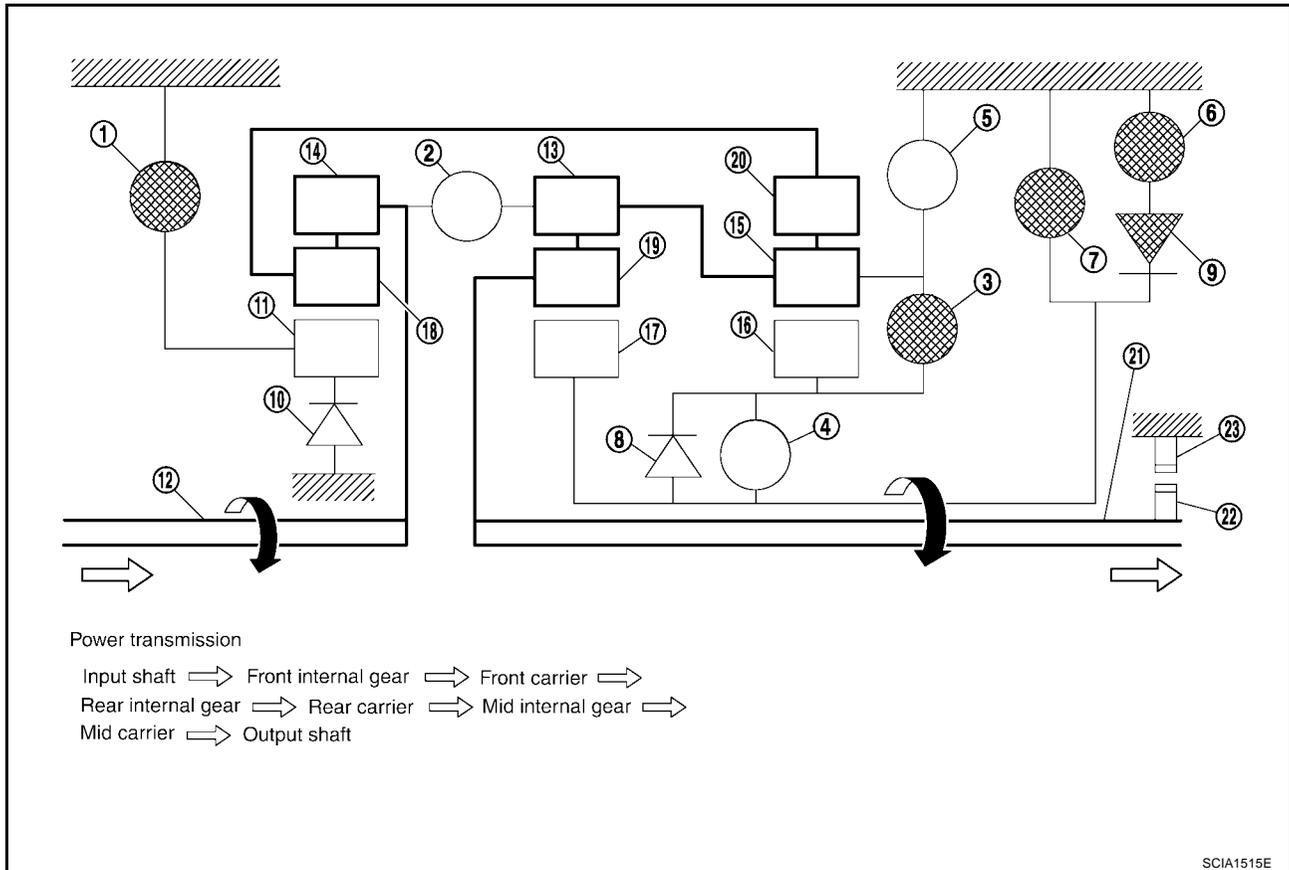


- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

**“D”, “M5”, “M4”, “M3” positions (column shift), “D”, “4”, “3” positions (floor shift) 3rd gear**

- The front brake fastens the front sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The high and low reverse clutch is coupled and the mid sun gear and rear sun gear are connected.

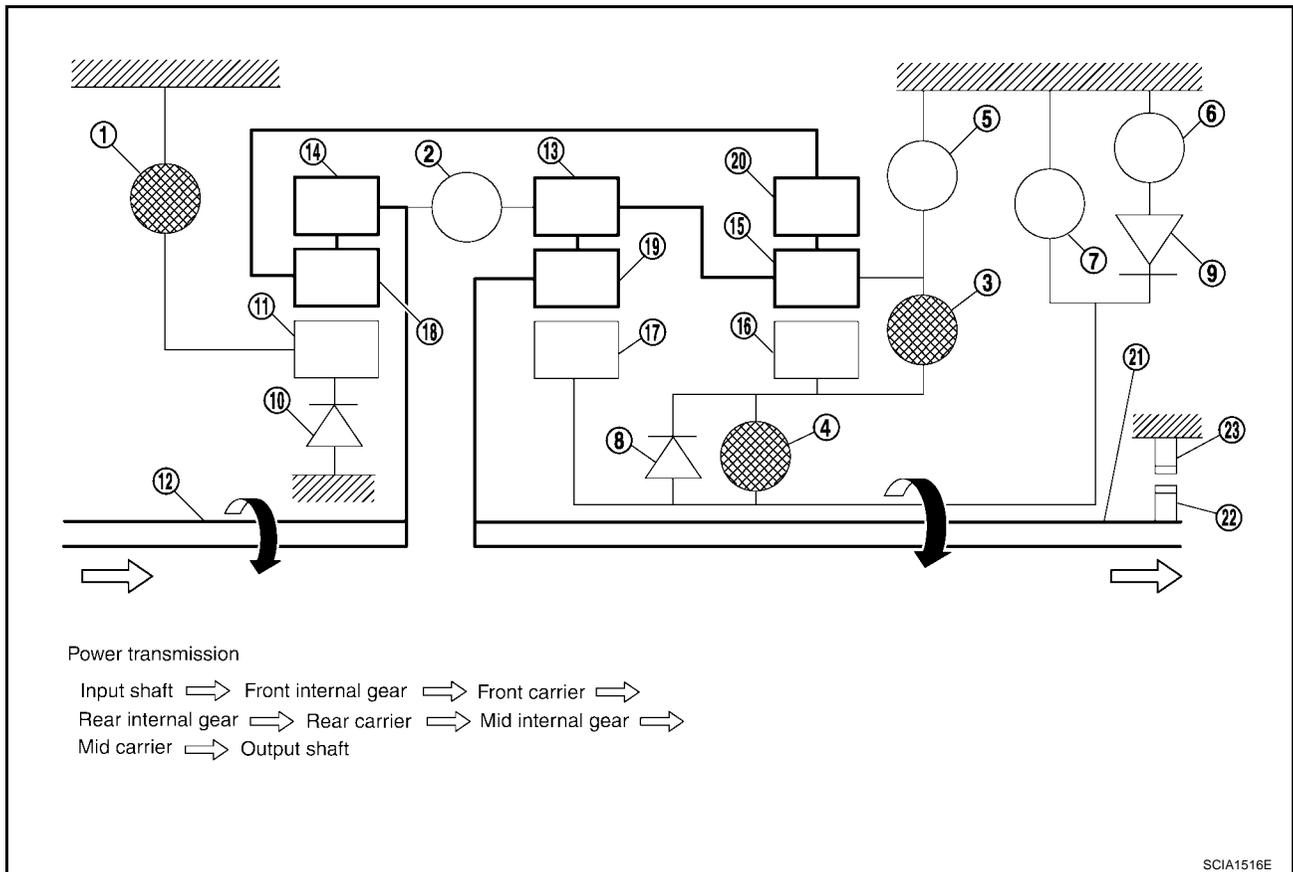

- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |






# A/T CONTROL SYSTEM

## “R” position

- The front brake fastens the front sun gear.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.
- The reverse brake fastens the rear carrier.

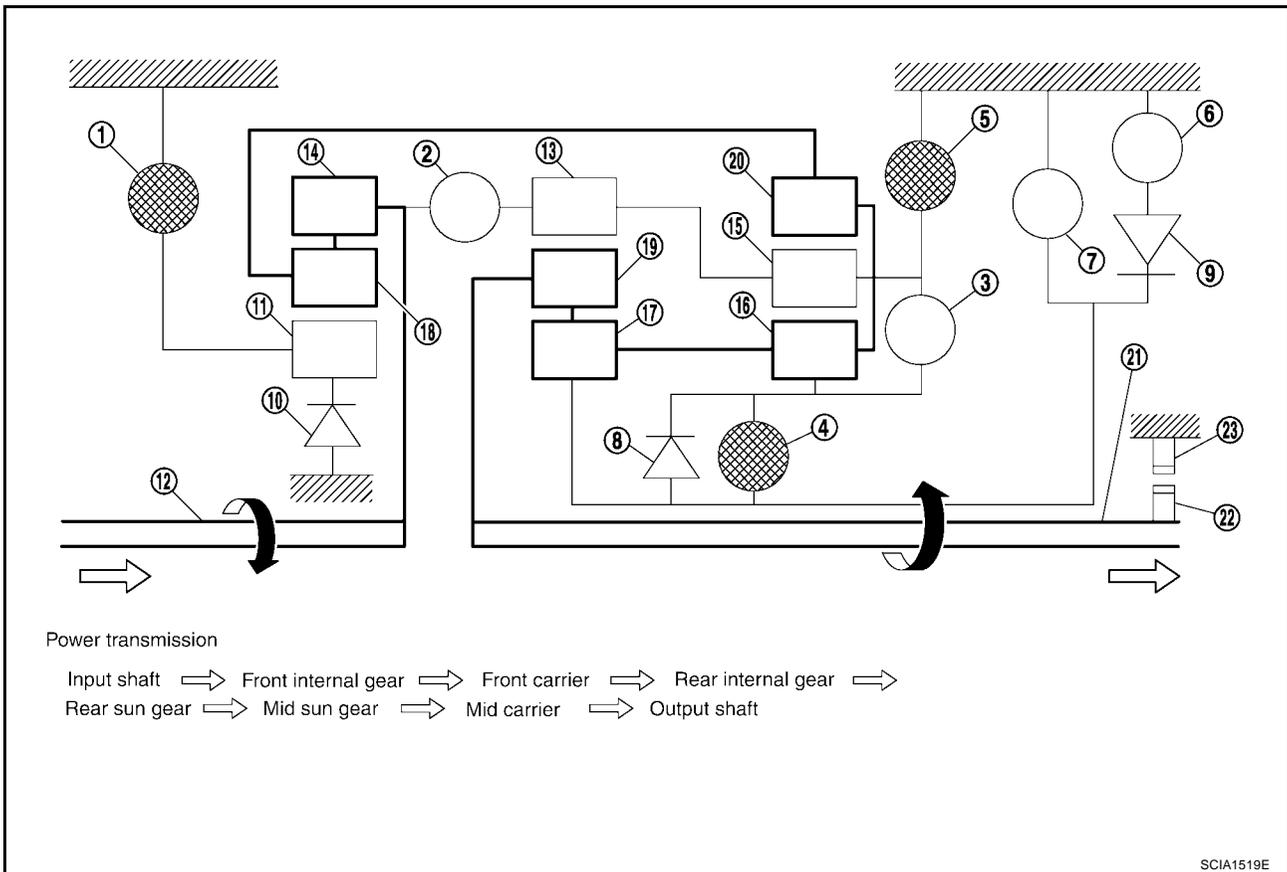

- |                                |                         |                           |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake                 | 2. Input clutch         | 3. Direct clutch          |
| 4. High and low reverse clutch | 5. Reverse brake        | 6. Forward brake          |
| 7. Low coast brake             | 8. 1st one-way clutch   | 9. Forward one-way clutch |
| 10. 3rd one-way clutch         | 11. Front sun gear      | 12. Input shaft           |
| 13. Mid internal gear          | 14. Front internal gear | 15. Rear carrier          |
| 16. Rear sun gear              | 17. Mid sun gear        | 18. Front carrier         |
| 19. Mid carrier                | 20. Rear internal gear  | 21. Output shaft          |
| 22. Parking gear               | 23. Parking pawl        |                           |

# A/T CONTROL SYSTEM

UCS002MT

## TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

## CONTROL SYSTEM OUTLINE (FLOOR SHIFT)

The automatic transmission senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNALS)		TCM		ACTUATORS
PNP switch Accelerator pedal position sensor Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed signal Stop lamp switch signal Turbine revolution sensor 1st position switch signal 4th position switch signal ATF pressure switch Tow mode switch signal	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system	⇒	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High & low reverse clutch solenoid valve Low coast brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve A/T CHECK indicator lamp Starter relay Back-up lamp relay

## CONTROL SYSTEM DIAGRAM

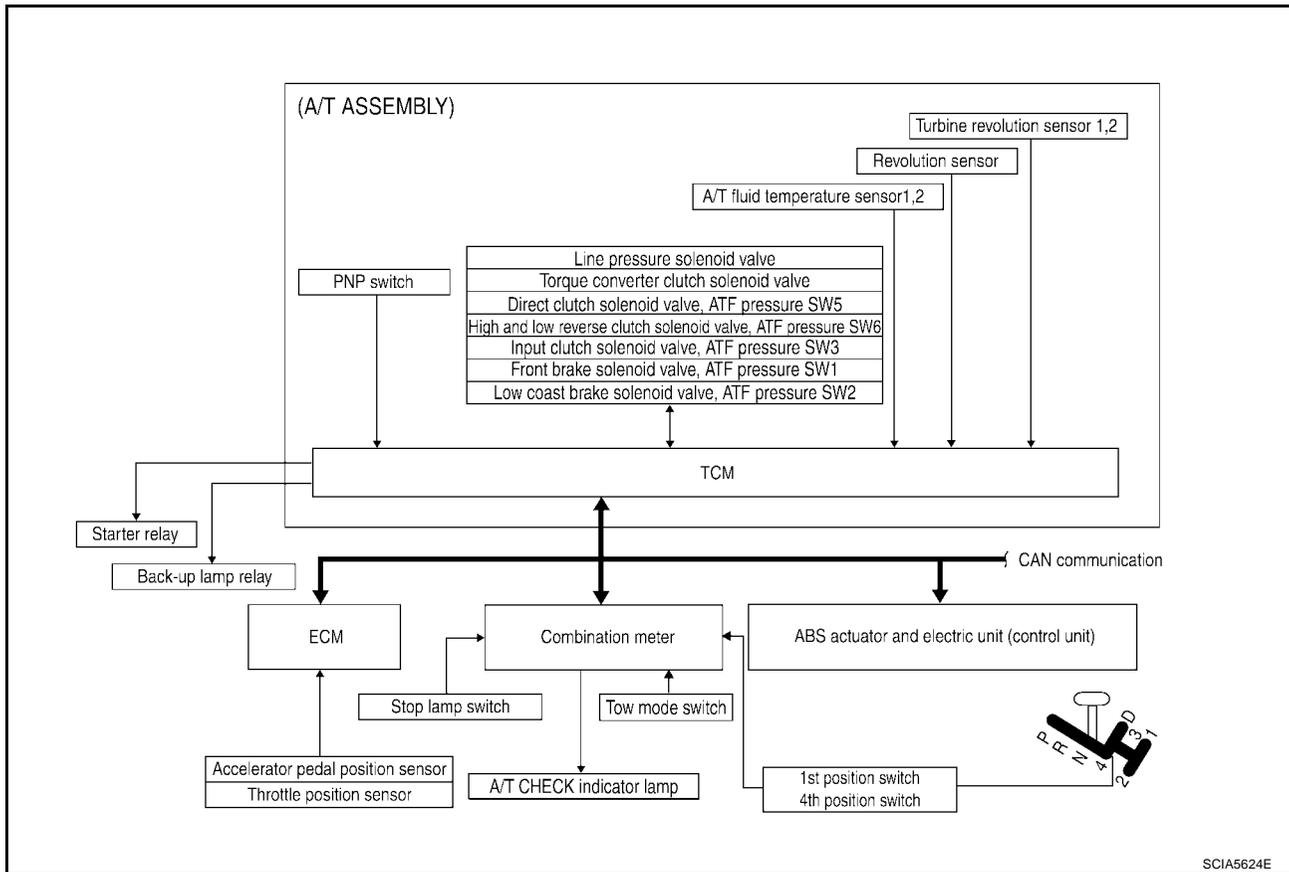

SCIA5624E


# A/T CONTROL SYSTEM

## CONTROL SYSTEM OUTLINE (COLUMN SHIFT)

The automatic transmission senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNALS)		TCM		ACTUATORS
PNP switch Accelerator pedal position sensor Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed signal Stop lamp switch signal Turbine revolution sensor Manual mode switch Tow mode switch signal	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system	⇒	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High & low reverse clutch solenoid valve Low coast brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve A/T CHECK indicator lamp Starter relay Back-up lamp relay

## CONTROL SYSTEM DIAGRAM

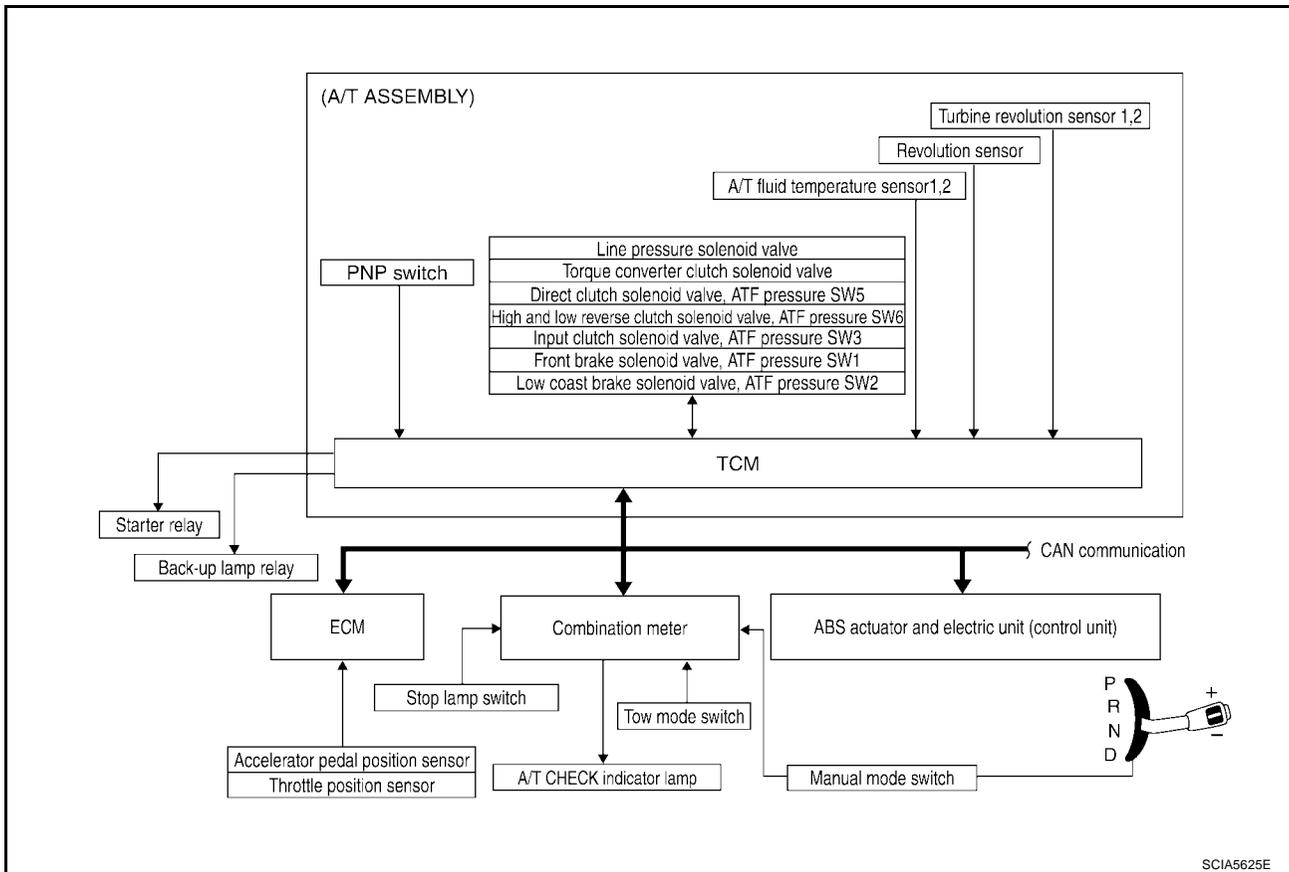

# A/T CONTROL SYSTEM

UCS002MU

## CAN Communication SYSTEM DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to [LAN-8, "CAN COMMUNICATION"](#).

## Input/Output Signal of TCM

UCS002MV

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnostics function	
Input	Accelerator pedal position signal (*4)	X	X	X	X	X	X	X	
	Vehicle speed sensor A/T (revolution sensor)	X	X	X	X		X	X	
	Vehicle speed sensor MTR(*1) (*4)	X	X	X	X			X	
	Closed throttle position signal(*4)	(*2) X	(*2) X		X	(*2) X		X	
	Wide open throttle position signal(*4)	(*2) X	(*2) X			(*2) X		X	
	Turbine revolution sensor 1	X	X		X		X	X	
	Turbine revolution sensor 2 (for 4th speed only)	X	X		X		X	X	
	Engine speed signals(*4)				X			X	
	PNP switch	X	X	X	X	X	X	X	
	A/T fluid temperature sensors 1, 2	X	X	X	X	X	X	X	
	ASCD	Operation signal(*4)		X	X	X	X		
		Overdrive cancel signal(*4)		X		X	X		
	TCM power supply voltage signal		X	X	X	X	X		X
Output	Direct clutch solenoid (ATF pressure switch 5)		X	X			X	X	
	Input clutch solenoid (ATF pressure switch 3)		X	X			X	X	
	High & low reverse clutch solenoid (ATF pressure switch 6)		X	X			X	X	
	Front brake solenoid (ATF pressure switch 1)		X	X			X	X	
	Low coast brake solenoid (ATF pressure switch 2)		X	X		X	X	X	
	Line pressure solenoid	X	X	X	X	X	X	X	
	TCC solenoid				X		X	X	
	Self-diagnostics table(*4)								X
	Starter relay							X	X

\*1: Spare for vehicle speed sensor-A/T (revolution sensor)

\*2: Spare for accelerator pedal position signal

\*3: If these input and output signals are different, the TCM triggers the fail-safe function.


\*4: CAN communications

# A/T CONTROL SYSTEM

UCS002MW

## Line Pressure Control

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.

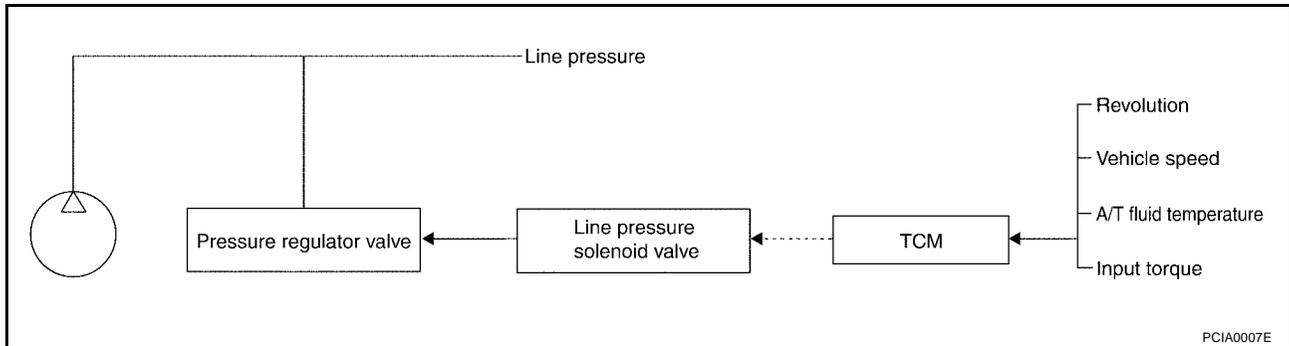


## LINE PRESSURE CONTROL IS BASED ON THE TCM LINE PRESSURE CHARACTERISTIC PATTERN

- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current valve and thus controls the line pressure.


### Normal control

Each clutch is adjusted to the necessary pressure to match the engine drive force.

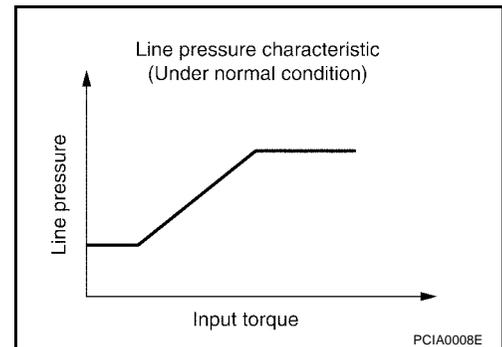

### Back-up control (Engine brake)


When the select operation is performed during driving and the transmission is shifted down, the line pressure is set according to the vehicle speed.

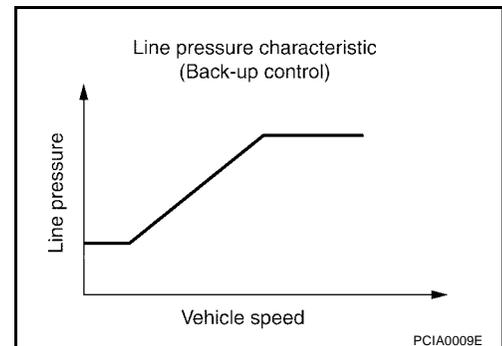

# A/T CONTROL SYSTEM


## During shift change

The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to input torque and gearshift selection. Also, line pressure characteristic is set according to engine speed, during engine brake operation.

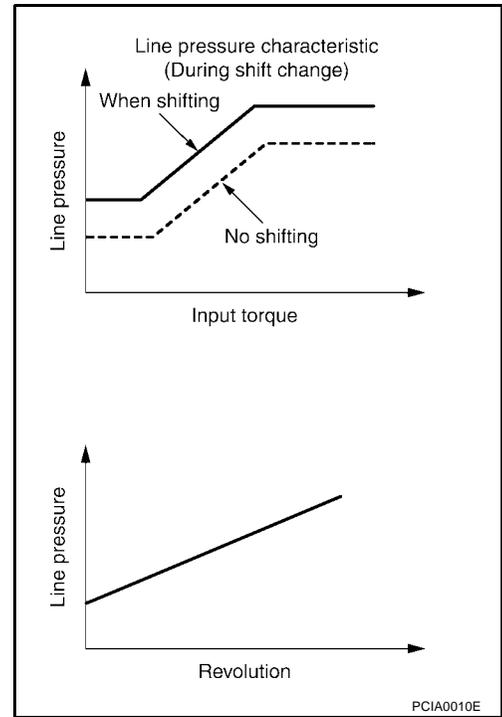


## At low fluid temperature

When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

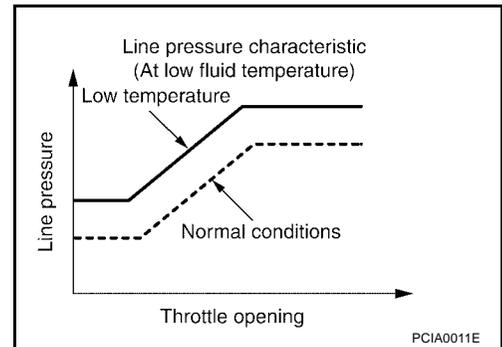

## Shift Control

The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

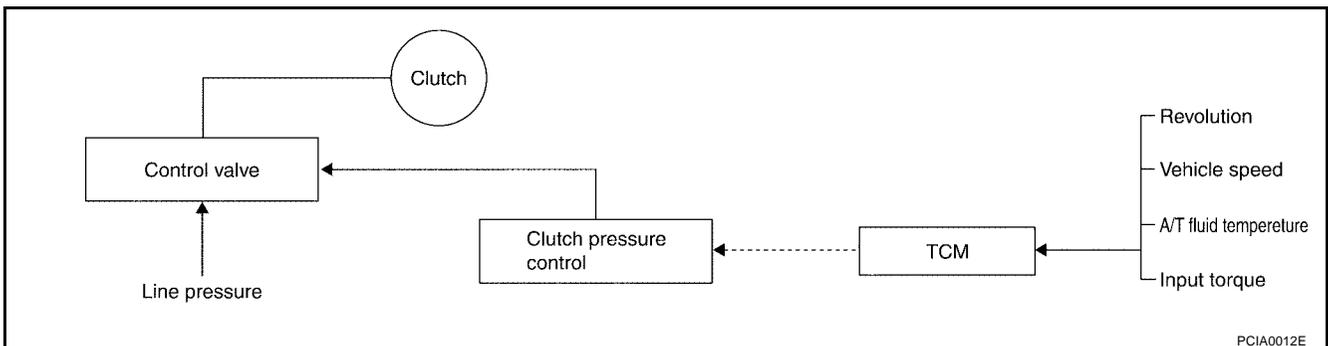


## SHIFT CHANGE

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

# A/T CONTROL SYSTEM

## Shift change system diagram

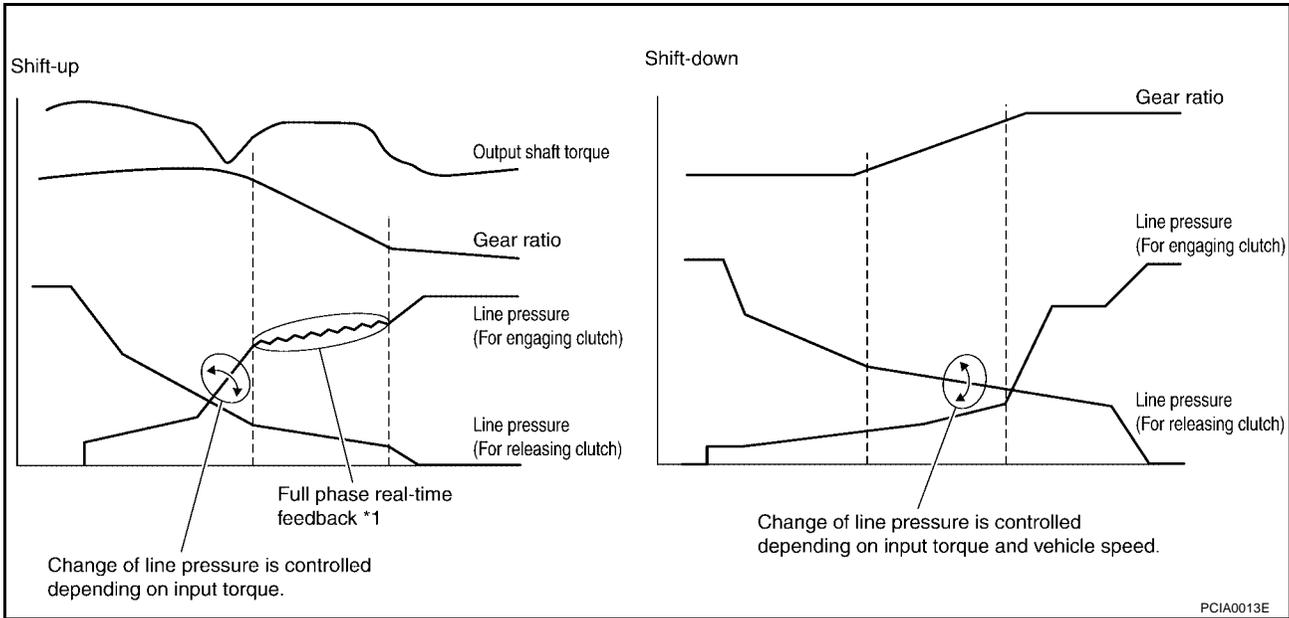

\*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure at real-time to achieve the best gear ratio.

## Lock-Up Control

UCS002MY

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.


The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

### Lock-up Operation Condition Table

Select lever	D position		M5 position	M4 or 4 position	M3 or 3 position	M2 or 2 position
Gear position	5	4	5	4	3	2
Lock-up	×	—	×	×	×	×
Slip lock-up	×	×	—	—	—	—

## TORQUE CONVERTER CLUTCH CONTROL VALVE CONTROL

### Lock-up control system diagram

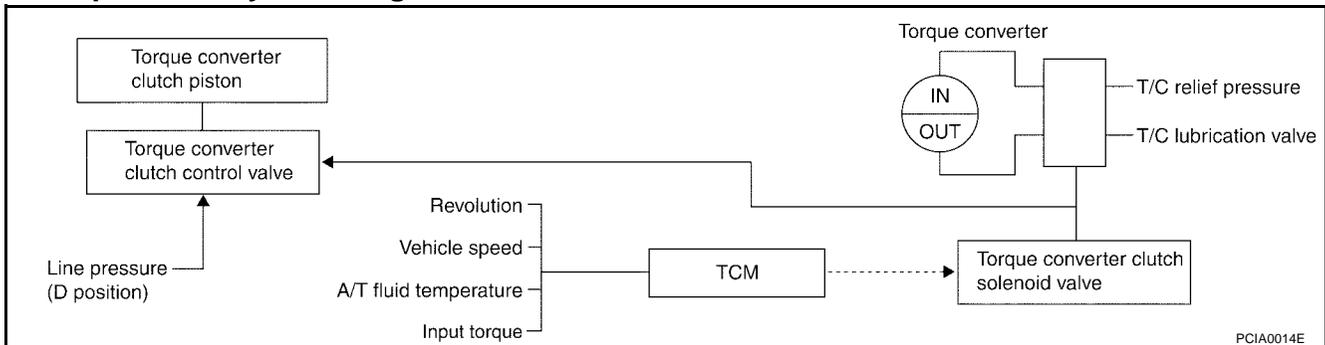

### Lock-up released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

# A/T CONTROL SYSTEM

---

## Lock-up applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

## SMOOTH LOCK-UP CONTROL

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

## Half-clutched state

- The current output from the TCM to the torque converter clutch solenoid is varied to gradually increase the torque converter clutch solenoid pressure. In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched status, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.

## Slip lock-up control

- In the slip region, the torque converter clutch solenoid current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 4th and 5th gears at both low speed and when the accelerator has a low degree of opening.

A

B

AT

D

E

F

G

H

I

J

K

L


M

# A/T CONTROL SYSTEM

## Engine Brake Control

UCS002M2

- The forward one-way clutch transmits the drive force from the engine to the rear wheels. But the reverse drive from the rear wheels is not transmitted to the engine because the one-way clutch is idling. Therefore, the low coast brake solenoid is operated to prevent the forward one-way clutch from idling and the engine brake is operated in the same manner as conventionally.

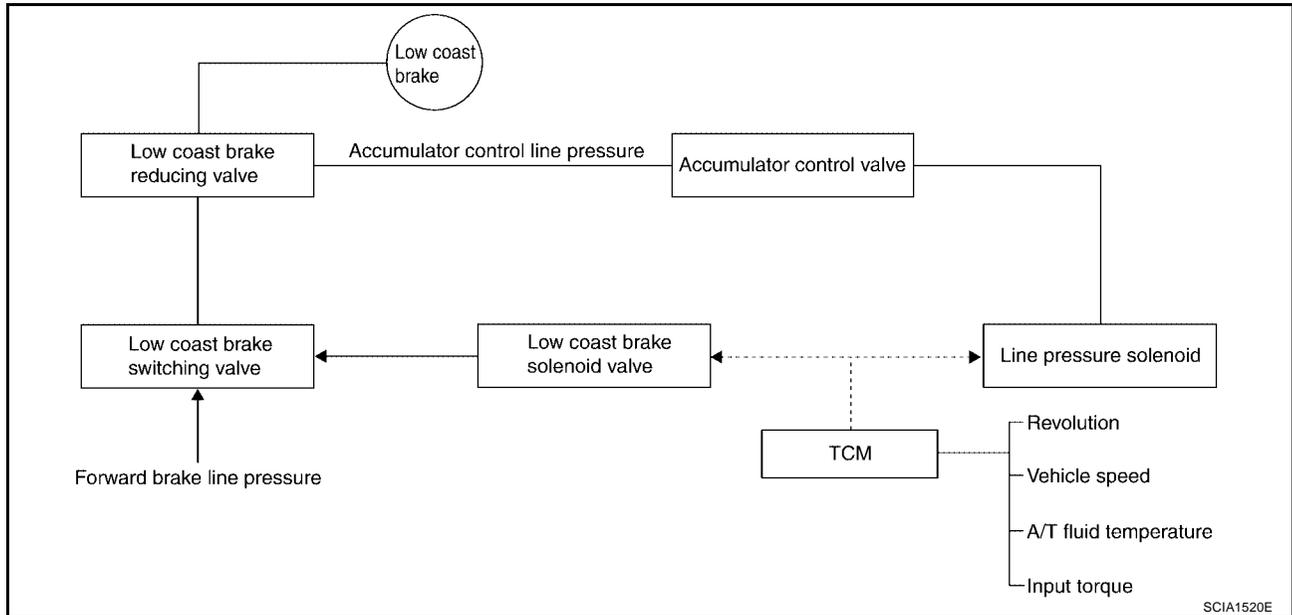

SCIA1520E

- The operation of the low coast brake solenoid switches the low coast brake switching valve and controls the coupling and releasing of the low coast brake. The low coast brake reducing valve controls the low coast brake coupling force.

## Control Valve FUNCTION OF CONTROL VALVE

UCS002N0

Name	Function
Torque converter regulator valve	In order to prevent the pressure supplied to the torque converter from being excessive, the line pressure is adjusted to the optimum pressure (torque converter operating pressure).
Pressure regulator valve Pressure regulator plug Pressure regulator sleeve	Adjusts the oil discharged from the oil pump to the optimum pressure (line pressure) for the driving state.
Front brake control valve	When the front brake is coupled, adjusts the line pressure to the optimum pressure (front brake pressure) and supplies it to the front brake. (In 1st, 2nd, 3rd, and 5th gears, adjusts the clutch pressure.)
Accumulator control valve	Adjusts the pressure (accumulator control pressure) acting on the accumulator piston and low coast reducing valve to the pressure appropriate to the driving state.
Pilot valve A	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for line pressure control, shift change control, and lock-up control.
Pilot valve B	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for shift change control.
Low coast brake switching valve	During engine braking, supplies the line pressure to the low coast brake reducing valve.
Low coast brake reducing valve	When the low coast brake is coupled, adjusts the line pressure to the optimum pressure (low coast brake pressure) and supplies it to the low coast brake.
N-R accumulator	Produces the stabilizing pressure for when N-R is selected.
Direct clutch piston switching valve	Operates in 4th gear and switches the direct clutch coupling capacity.
High and low reverse clutch control valve	When the high and low reverse clutch is coupled, adjusts the line pressure to the optimum pressure (high and low reverse clutch pressure) and supplies it to the high and low reverse clutch. (In 1st, 3rd, 4th and 5th gears, adjusts the clutch pressure.)

## A/T CONTROL SYSTEM

Name	Function
Input clutch control valve	When the input clutch is coupled, adjusts the line pressure to the optimum pressure (input clutch pressure) and supplies it to the input clutch. (In 4th and 5th gears, adjusts the clutch pressure.)
Direct clutch control valve	When the direct clutch is coupled, adjusts the line pressure to the optimum pressure (direct clutch pressure) and supplies it to the direct clutch. (In 2nd, 3rd, and 4th gears, adjusts the clutch pressure.)
TCC control valve TCC control plug TCC control sleeve	Switches the lock-up to operating or released. Also, by performing the lock-up operation transiently, lock-up smoothly.
Torque converter lubrication valve	Operates during lock-up to switch the torque converter, cooling, and lubrication system oil path.
Cool bypass valve	Allows excess oil to bypass cooler circuit without being fed into it.
Line pressure relief valve	Discharges excess oil from line pressure circuit.
N-D accumulator	Produces the stabilizing pressure for when N-D is selected.
Manual valve	Sends line pressure to each circuit according to the select position. The circuits to which the line pressure is not sent drain.

### FUNCTION OF PRESSURE SWITCH

Name	Function
Pressure switch 1 (FR/B)	Detects any malfunction in the front brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 2 (LC/B)	Detects any malfunction in the low coast brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 3 (I/C)	Detects any malfunction in the input clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 5 (D/C)	Detects any malfunction in the direct clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 6 (HLR/C)	Detects any malfunction in the high & low reverse clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.

## ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

### Introduction

UCS002N1

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the A/T CHECK indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

### OBD-II Function for A/T System

UCS002N2

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

### One or Two Trip Detection Logic of OBD-II

UCS002N3

#### ONE TRIP DETECTION LOGIC

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

#### TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st Trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd Trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

### OBD-II Diagnostic Trouble Code (DTC)

UCS002N4

#### HOW TO READ DTC AND 1ST TRIP DTC

DTC and 1st trip DTC can be read by the following methods.


( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc.

These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal. CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

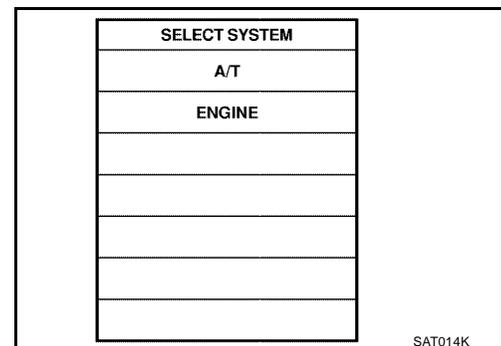

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

## Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to [AT-42, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

## HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-50, "Emission-related Diagnostic Information"](#).

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

## HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
  2. Turn CONSULT-II "ON" and touch "A/T".
  3. Touch "SELF-DIAG RESULTS".
  4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
  5. Touch "ENGINE".
  6. Touch "SELF-DIAG RESULTS".
  7. Touch "ERASE". (The DTC in the ECM will be erased.)

### How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
A/T
ENGINE


2. Turn CONSULT-II "ON", and touch "A/T".

SELECT DIAG MODE
SELF-DIAG RESULTS
DATE MONITOR
CAN DIAG SUPPORT MNTR
DTC WORK SUPPORT
ECU PART NUMBER

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
DTC RESULTS
TCC SOLENOID/CIRC [P0740]

4. Touch "ERASE". (The DTC in the TCM will be erased.)

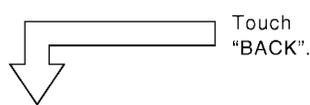

SELECT SYSTEM
A/T
ENGINE

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR(SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST

6. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	0

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SCIA5334E

## HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Select Mode 4 with Generic Scan Tool (GST). For details refer to [EC-115, "Generic Scan Tool \(GST\) Function"](#).

## HOW TO ERASE DTC (NO TOOLS)

1. Disconnect battery for 24 hours.
2. Reconnect battery.

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

## Malfunction Indicator Lamp (MIL)

UCS002N5

### DESCRIPTION

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned "ON" without the engine running. This is a bulb check.
  - If the MIL does not light up, refer to [DI-30, "WARNING LAMPS"](#).
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.



A

B

AT

D

E

F

G

H

I

J

K

L

M

# TROUBLE DIAGNOSIS

## TROUBLE DIAGNOSIS

PF0:00004

### DTC Inspection Priority Chart

UCS002N6

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

#### NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-107](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

### Fail-Safe

UCS002N7

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

In fail-safe mode the transmission is fixed in 2nd, 4th, or 5th (depending on the breakdown position), so the customer should feel "slipping" or "poor acceleration". When fail-safe mode is triggered, when the ignition switch is switched "ON", the AT CHECK indicator lamp flashes for about 8 seconds.

Even when the electronic circuits are normal, under special conditions (for example, when slamming on the brake with the wheels spinning drastically and stopping the tire rotation), the transmission can go into fail-safe mode. If this happens, switch "OFF" the ignition switch for 10 seconds, then switch it "ON" again to return to the normal shift pattern. Also, the AT CHECK indicator lamp flashes for about 8 seconds once, then is cleared. Therefore, the customer's vehicle has returned to normal, so handle according to the "diagnostics flow" (Refer to [AT-49, "WORK FLOW"](#)).

### FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the A/T to mark driving possible.

#### Vehicle Speed Sensor

- Signals are input from two systems - from vehicle speed sensor A/T (revolution sensor) installed on the transmission and from combination meter so normal driving is possible even if there is a malfunction in one of the systems. And if vehicle speed sensor A/T (revolution sensor) has unusual cases, 5th gear and manual mode are prohibited.

#### Accelerator Pedal Position Sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the engine speed is fixed by ECM to a pre-determined engine speed to make driving possible.

#### Throttle Position Sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the accelerator opening angle is controlled by the idle signal sent from the ECM which is based on input indicating either idle condition or off-idle condition (pre-determined accelerator opening) in order to make driving possible.

#### PNP Switch

- In the unlikely event that a malfunction signal enters the TCM, the position indicator is switched "OFF", the starter relay is switched "OFF" (starter starting is disabled), the back-up lamp relay switched "OFF" (back-up lamp is OFF) and the position is fixed to the "D" range to make driving possible.

#### Starter Relay

- The starter relay is switched "OFF". (Starter starting is disabled.)

# TROUBLE DIAGNOSIS

## A/T Interlock

- If there is an A/T interlock judgment malfunction, the transmission is fixed in 2nd gear to make driving possible.

### NOTE:

**When the vehicle is driven fixed in 2nd gear, a turbine revolution sensor malfunction is displayed, but this is not a turbine revolution sensor malfunction.**

- When the coupling pattern below is detected, the fail-safe action corresponding to the pattern is performed.

### A/T INTERLOCK COUPLING PATTERN TABLE

●: NG X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	–	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF

## A/T 1st Engine Braking

- When there is an A/T first gear engine brake judgment malfunction, the low coast brake solenoid is switched “OFF” to avoid the engine brake operation.

## Line Pressure Solenoid

- The solenoid is switched “OFF” and the line pressure is set to the maximum hydraulic pressure to make driving possible.

## Torque Converter Clutch Solenoid

- The solenoid is switched “OFF” to release the lock-up.

## Low Coast Brake Solenoid

- When a (electrical or functional) malfunction occurs, in order to make driving possible, the engine brake is not applied in 1st and 2nd gear.

## Input Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

## Direct Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

## Front Brake Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid “ON”, in order to make driving possible, the A/T is held in 5th gear; if the solenoid is OFF, 4th gear.

## High & Low Reverse Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

## Turbine Revolution Sensor 1 or 2

- The control is the same as if there were no turbine revolution sensors, 5th gear and manual mode are prohibited.

# TROUBLE DIAGNOSIS


## How To Perform Trouble Diagnosis For Quick and Accurate Repair INTRODUCTION

UCS002N8

The TCM receives a signal from the vehicle speed sensor, accelerator pedal position sensor (throttle position sensor) or PNP switch and provides shift control or lock-up control via A/T solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

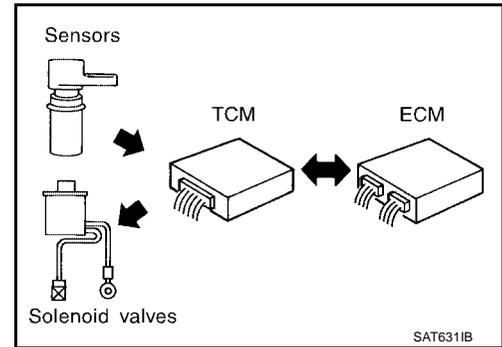

It is much more difficult to diagnose a error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [AT-49, "WORK FLOW"](#) .

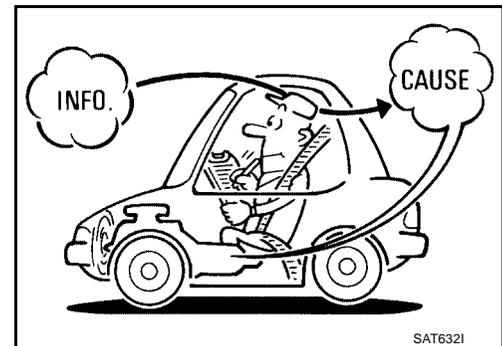

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" as shown on the example (Refer to [AT-50](#) ) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

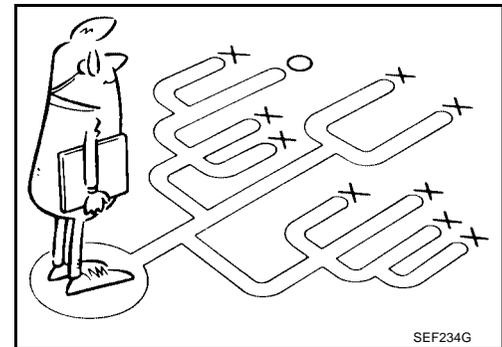


# TROUBLE DIAGNOSIS

## WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint. Make good use of the two sheets provided, "Information From Customer" (Refer to [AT-50](#)) and "Diagnostic Worksheet" (Refer to [AT-50](#)), to perform the best troubleshooting possible.

## Work Flow Chart

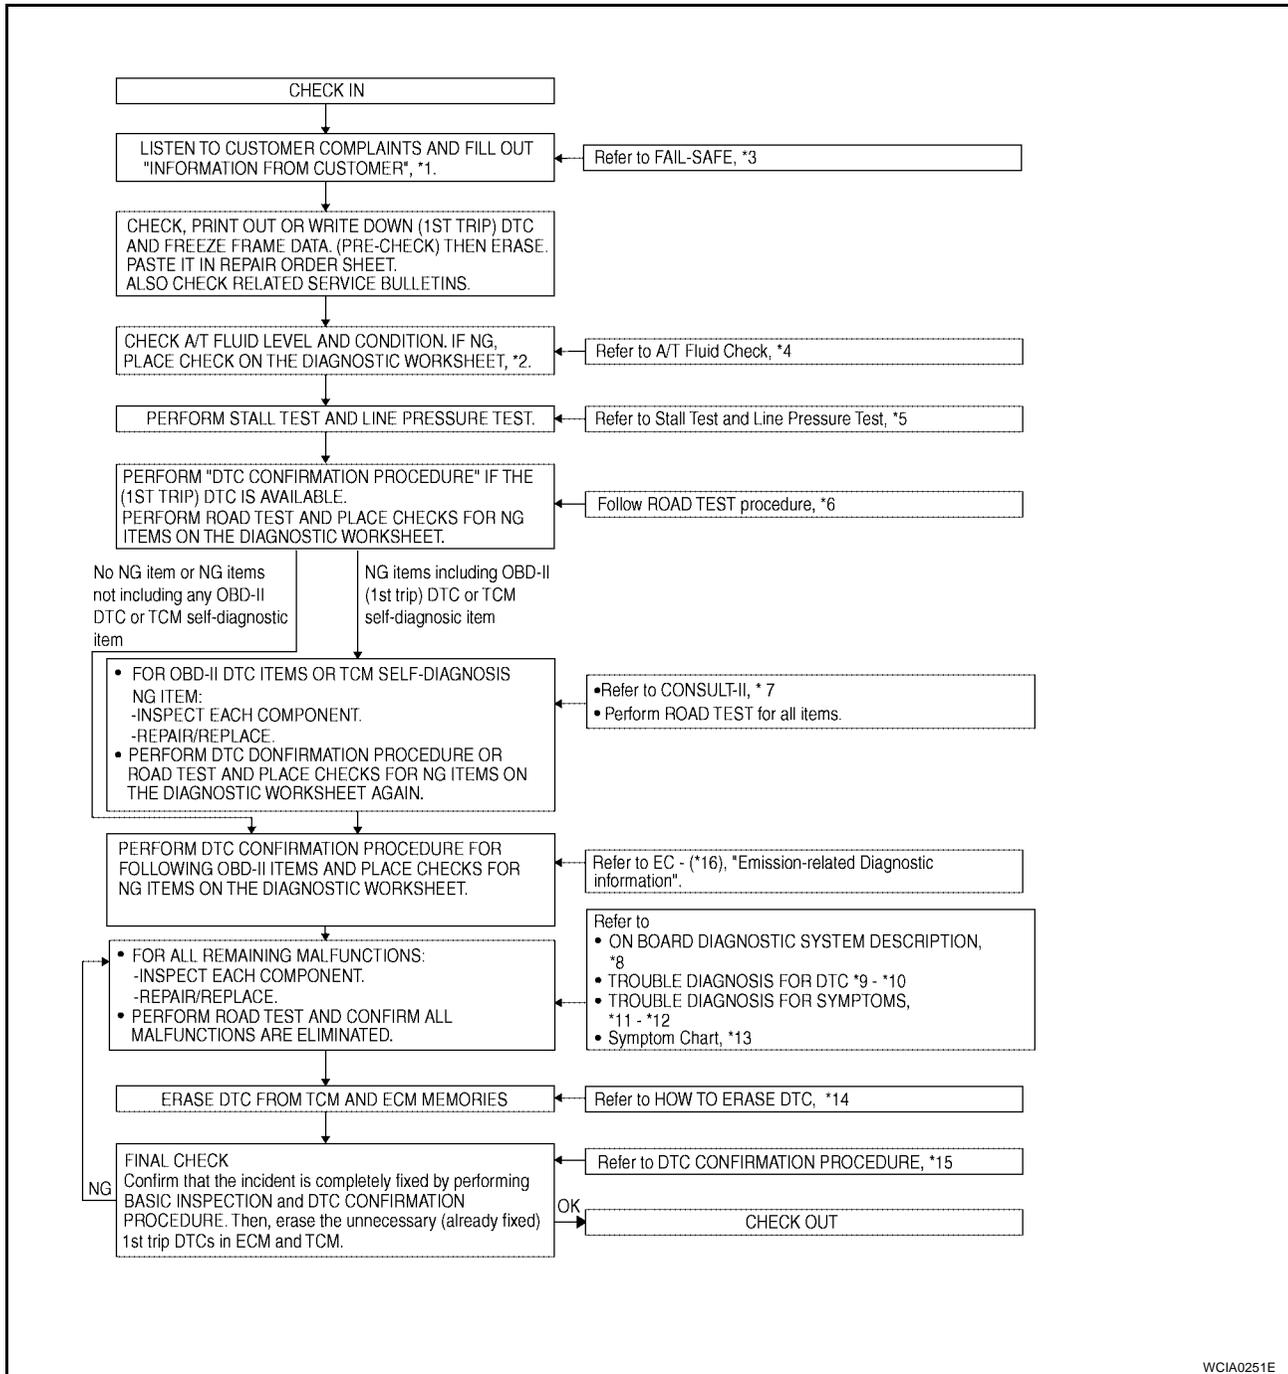

- \*1. [AT-50](#)
- \*4. [AT-62](#)
- \*7. [AT-95](#)
- \*10. [AT-195](#)
- \*13. [AT-73](#)
- \*16. [EC-50](#)

- \*2. [AT-50](#)
- \*5. [AT-62](#), [AT-63](#)
- \*8. [AT-42](#)
- \*11. [AT-199](#)
- \*14. [AT-43](#)

- \*3. [AT-46](#)
- \*6. [AT-65](#)
- \*9. [AT-107](#)
- \*12. [AT-238](#)
- \*15. [AT-107](#), [AT-192](#)



# TROUBLE DIAGNOSIS

		<input type="checkbox"/> Perform all road tests and enter checks in required inspection items.	<a href="#">AT-65</a>	A
4	4-1.	Check before engine is started <input type="checkbox"/> The AT CHECK Indicator Lamp does come on. <a href="#">AT-199</a> . <input type="checkbox"/> Perform self-diagnostics Enter checks for detected items.	<a href="#">AT-66</a>	B
		<input type="checkbox"/> <a href="#">AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)"</a> . <input type="checkbox"/> <a href="#">AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"</a> . <input type="checkbox"/> <a href="#">AT-160, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-121, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-127, "DTC P0745 LINE PRESSURE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-148, "DTC P1752 INPUT CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-172, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-166, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"</a> . <input type="checkbox"/> <a href="#">AT-134, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT"</a> . <input type="checkbox"/> <a href="#">AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"</a> . <input type="checkbox"/> <a href="#">AT-142, "DTC P1730 A/T INTERLOCK"</a> . <input type="checkbox"/> <a href="#">AT-145, "DTC P1731 A/T 1ST ENGINE BRAKING"</a> . <input type="checkbox"/> <a href="#">AT-109, "DTC P0615 START SIGNAL CIRCUIT"</a> . <input type="checkbox"/> <a href="#">AT-132, "DTC P1705 THROTTLE POSITION SENSOR"</a> . <input type="checkbox"/> <a href="#">AT-119, "DTC P0725 ENGINE SPEED SIGNAL"</a> . <input type="checkbox"/> <a href="#">AT-107, "DTC U1000 CAN COMMUNICATION LINE"</a> . <input type="checkbox"/> Battery <input type="checkbox"/> Other		D
	4-2.	Idle inspection <input type="checkbox"/> <a href="#">AT-200, "Engine Cannot Be Started In "P" or "N" Position"</a> . <input type="checkbox"/> <a href="#">AT-201, "In "P" Position, Vehicle Moves When Pushed"</a> . <input type="checkbox"/> <a href="#">AT-202, "In "N" Position, Vehicle Moves"</a> . <input type="checkbox"/> <a href="#">AT-203, "Large Shock ("N" to "D" Position)"</a> . <input type="checkbox"/> <a href="#">AT-206, "Vehicle Does Not Creep Backward In "R" Position"</a> . <input type="checkbox"/> <a href="#">AT-209, "Vehicle Does Not Creep Forward In "D" Position"</a> .	<a href="#">AT-66</a>	H
	4-3.	Driving tests Part 1 <input type="checkbox"/> <a href="#">AT-211, "Vehicle Cannot Be Started From D1"</a> . <input type="checkbox"/> <a href="#">AT-214, "A/T Does Not Shift: D1 → D2"</a> . <input type="checkbox"/> <a href="#">AT-216, "A/T Does Not Shift: D2 → D3"</a> . <input type="checkbox"/> <a href="#">AT-218, "A/T Does Not Shift: D3 → D4"</a> . <input type="checkbox"/> <a href="#">AT-221, "A/T Does Not Shift: D4 → D5"</a> . <input type="checkbox"/> <a href="#">AT-223, "A/T Does Not Perform Lock-up"</a> . <input type="checkbox"/> <a href="#">AT-225, "A/T Does Not Hold Lock-up Condition"</a> . <input type="checkbox"/> <a href="#">AT-227, "Lock-up Is Not Released"</a> . <input type="checkbox"/> <a href="#">AT-228, "Engine Speed Does Not Return To Idle"</a> .	<a href="#">AT-67</a>	J
				K
				L
				M

AT

# TROUBLE DIAGNOSIS


4	4-3	Part 2 <input type="checkbox"/> <a href="#">AT-211, "Vehicle Cannot Be Started From D1"</a> . <input type="checkbox"/> <a href="#">AT-214, "A/T Does Not Shift: D1 → D2"</a> . <input type="checkbox"/> <a href="#">AT-216, "A/T Does Not Shift: D2 → D3"</a> . <input type="checkbox"/> <a href="#">AT-218, "A/T Does Not Shift: D3 → D4"</a> .	<a href="#">AT-69</a>
		Part 3 <input type="checkbox"/> <a href="#">AT-229, "Cannot Be Changed to Manual Mode (Column Shift)"</a> . <input type="checkbox"/> <a href="#">AT-229, "A/T Does Not Shift: 5th gear → 4th gear"</a> . <input type="checkbox"/> <a href="#">AT-232, "A/T Does Not Shift: 4th gear → 3rd gear"</a> . <input type="checkbox"/> <a href="#">AT-233, "A/T Does Not Shift: 3rd gear → 2nd gear"</a> . <input type="checkbox"/> <a href="#">AT-235, "A/T Does Not Shift: 2nd gear → 1st gear"</a> . <input type="checkbox"/> <a href="#">AT-238, "Vehicle Does Not Decelerate By Engine Brake"</a> . <input type="checkbox"/> Perform self-diagnostics Enter checks for detected items.	<a href="#">AT-70</a>
		<input type="checkbox"/> <a href="#">AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)"</a> . <input type="checkbox"/> <a href="#">AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"</a> . <input type="checkbox"/> <a href="#">AT-160, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-121, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-127, "DTC P0745 LINE PRESSURE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-148, "DTC P1752 INPUT CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-172, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-166, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"</a> . <input type="checkbox"/> <a href="#">AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"</a> . <input type="checkbox"/> <a href="#">AT-134, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT"</a> . <input type="checkbox"/> <a href="#">AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"</a> . <input type="checkbox"/> <a href="#">AT-142, "DTC P1730 A/T INTERLOCK"</a> . <input type="checkbox"/> <a href="#">AT-145, "DTC P1731 A/T 1ST ENGINE BRAKING"</a> . <input type="checkbox"/> <a href="#">AT-109, "DTC P0615 START SIGNAL CIRCUIT"</a> . <input type="checkbox"/> <a href="#">AT-132, "DTC P1705 THROTTLE POSITION SENSOR"</a> . <input type="checkbox"/> <a href="#">AT-119, "DTC P0725 ENGINE SPEED SIGNAL"</a> . <input type="checkbox"/> <a href="#">AT-107, "DTC U1000 CAN COMMUNICATION LINE"</a> . <input type="checkbox"/> Battery <input type="checkbox"/> Other	
5		<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnostics and repair or replace the malfunction parts.	
6		<input type="checkbox"/> Perform all road tests and enter the checks again for the required items.	<a href="#">AT-65</a>
7		<input type="checkbox"/> For any remaining NG items, perform the "diagnostics procedure" and repair or replace the malfunction parts. See the chart for diagnostics by symptoms. (This chart also contains other symptoms and inspection procedures.)	<a href="#">AT-73</a>
8		<input type="checkbox"/> Erase the results of the self-diagnostics from the TCM.	<a href="#">AT-43</a>

# TROUBLE DIAGNOSIS

## A/T Electrical Parts Location

UCS002N9

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

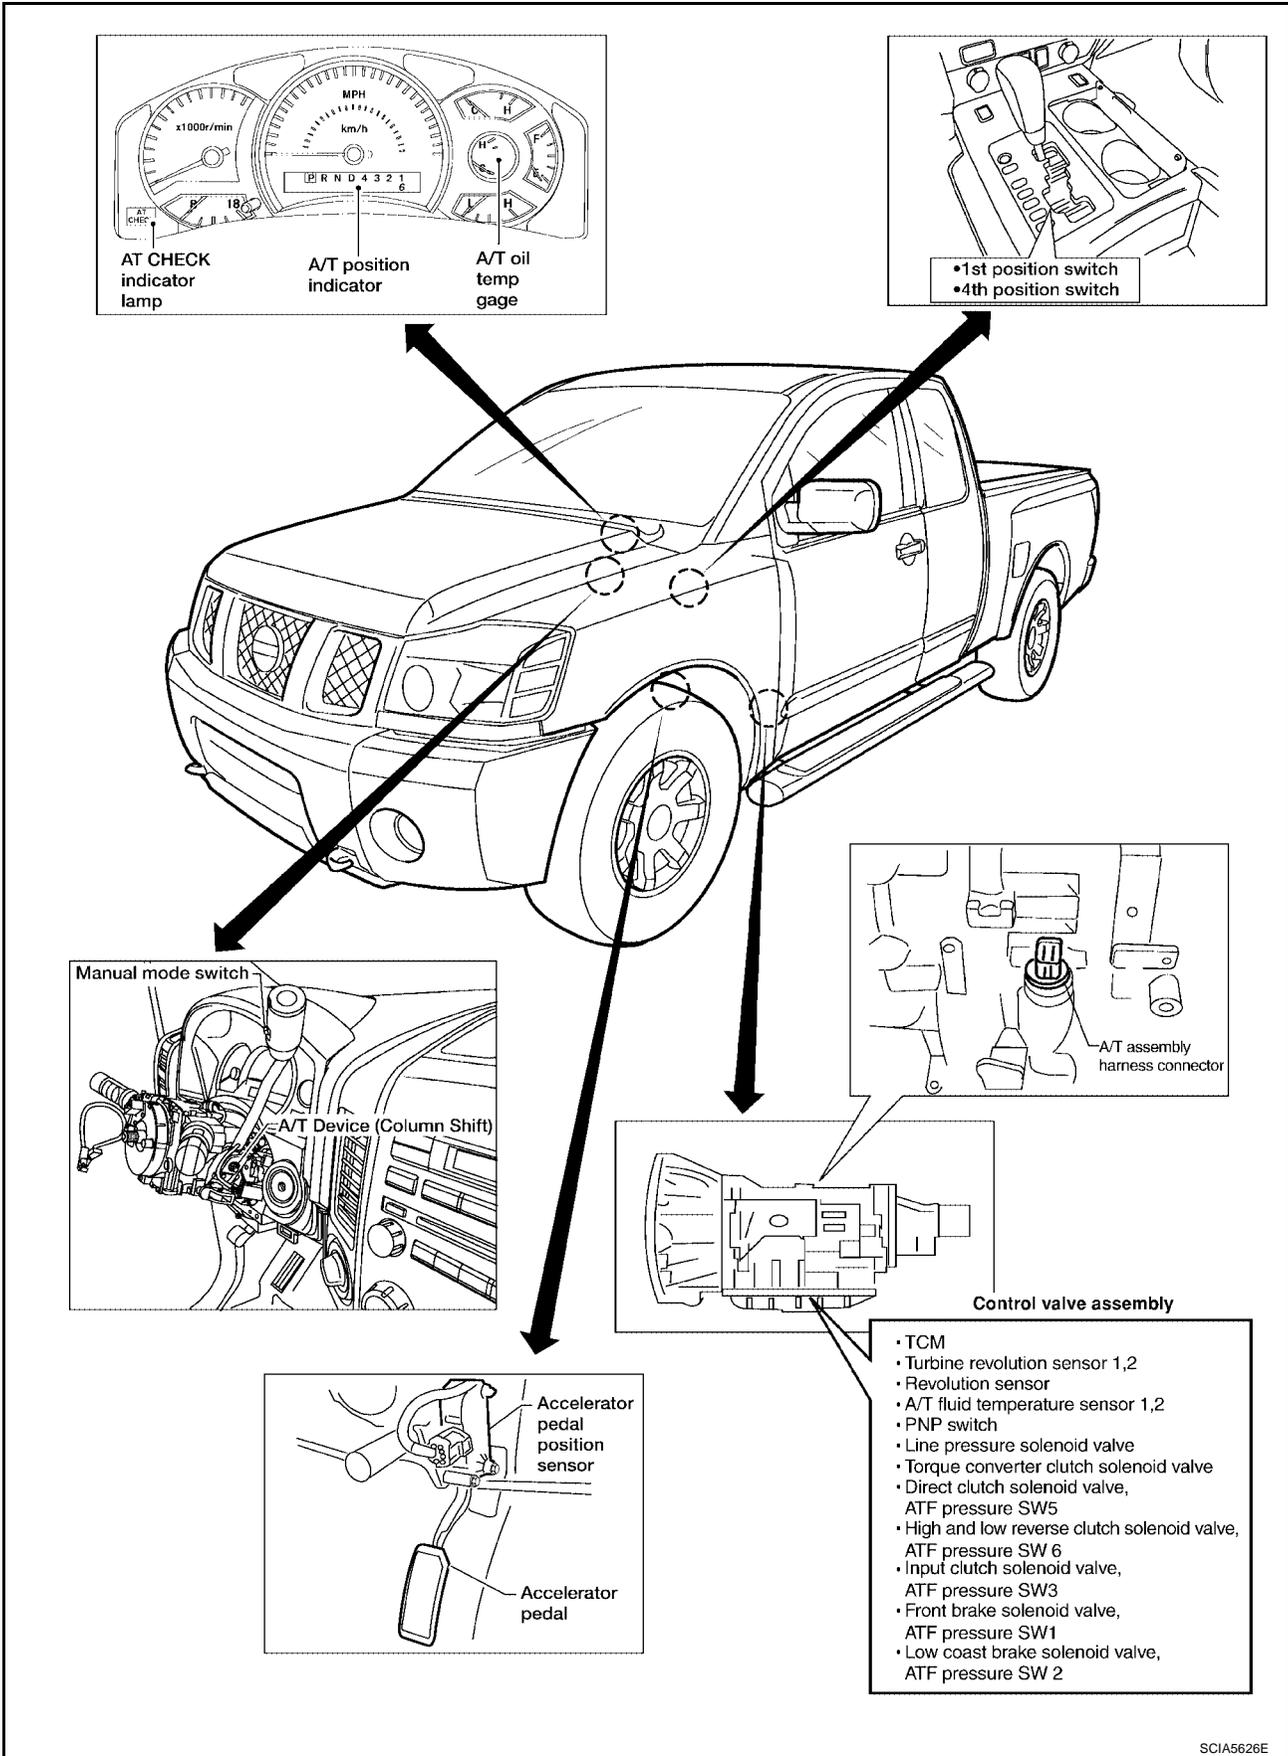


SCIA5626E

# TROUBLE DIAGNOSIS

## Circuit Diagram

UCS002NA

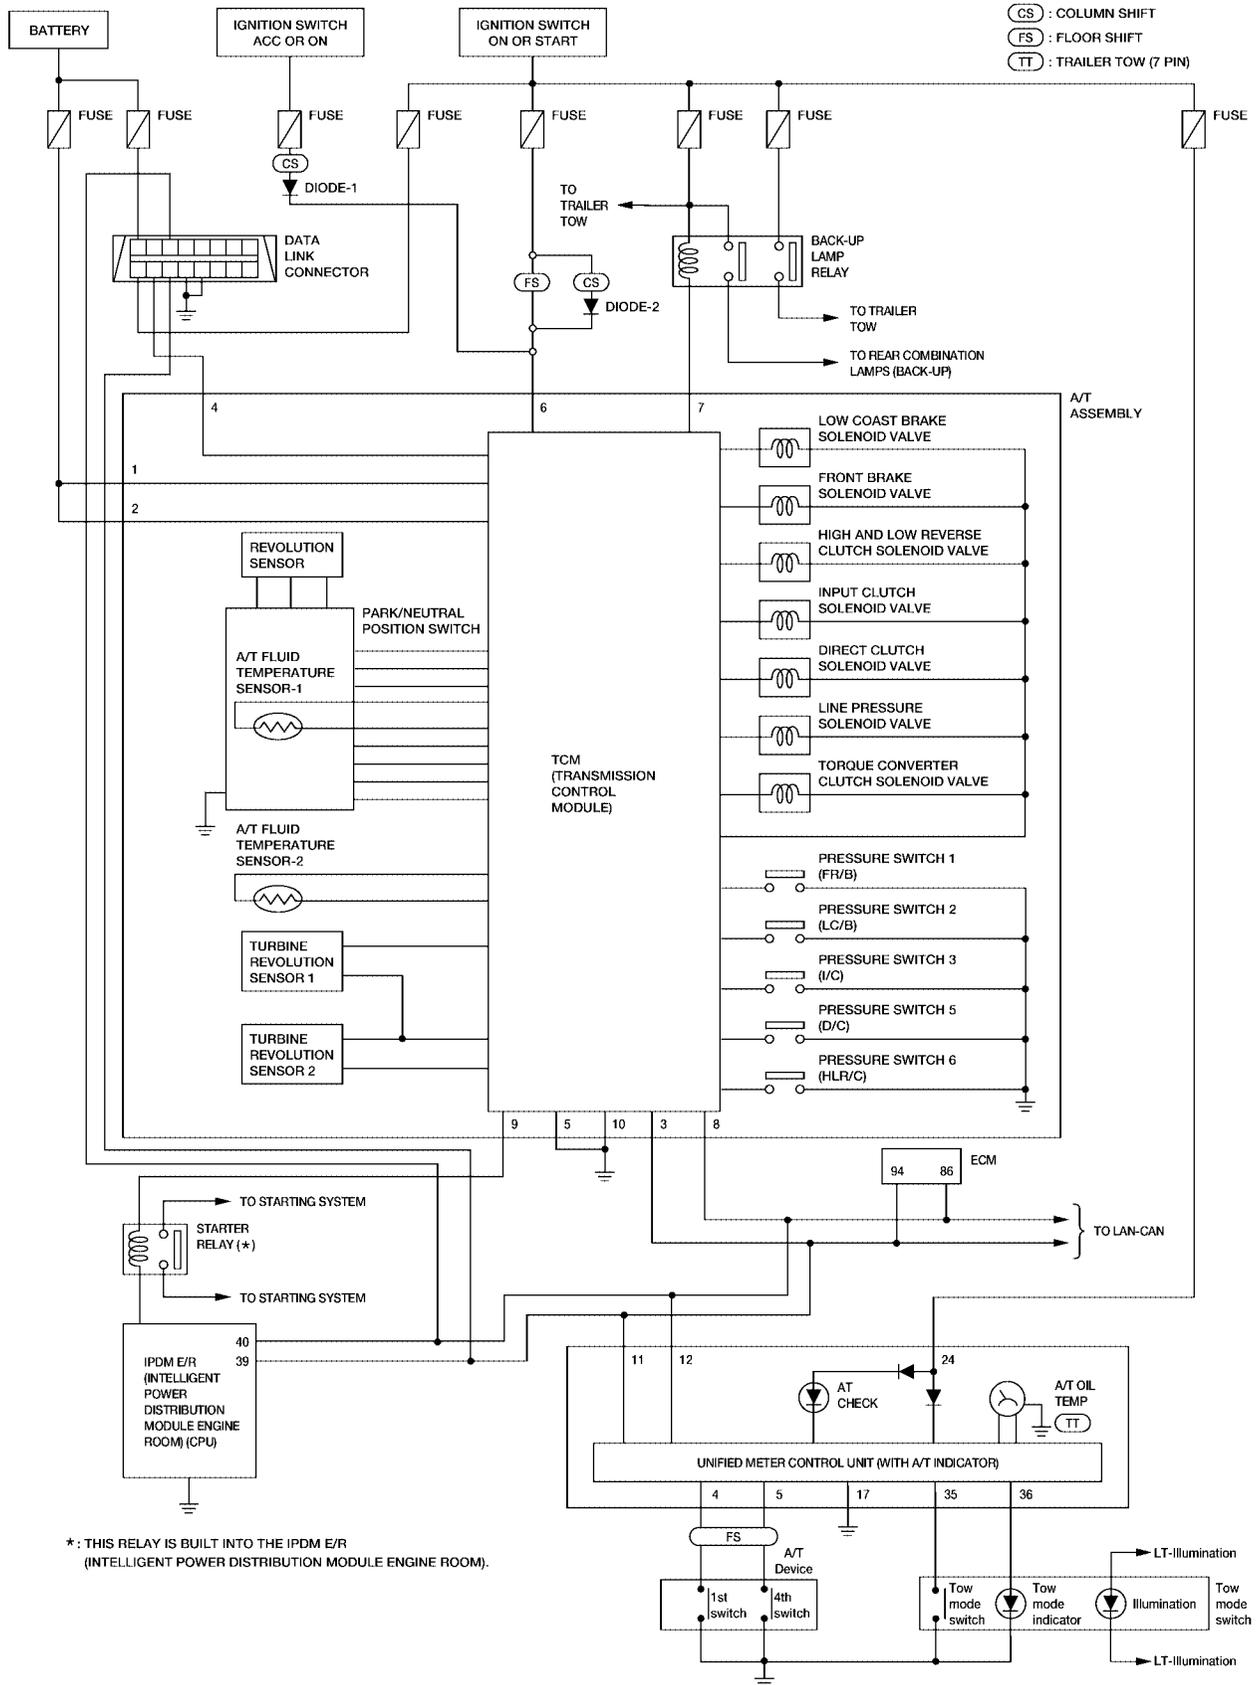

\*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).


BCWA0059E

# TROUBLE DIAGNOSIS


## Wiring Diagram — AT —

UCS002NB

AT-A/T-01

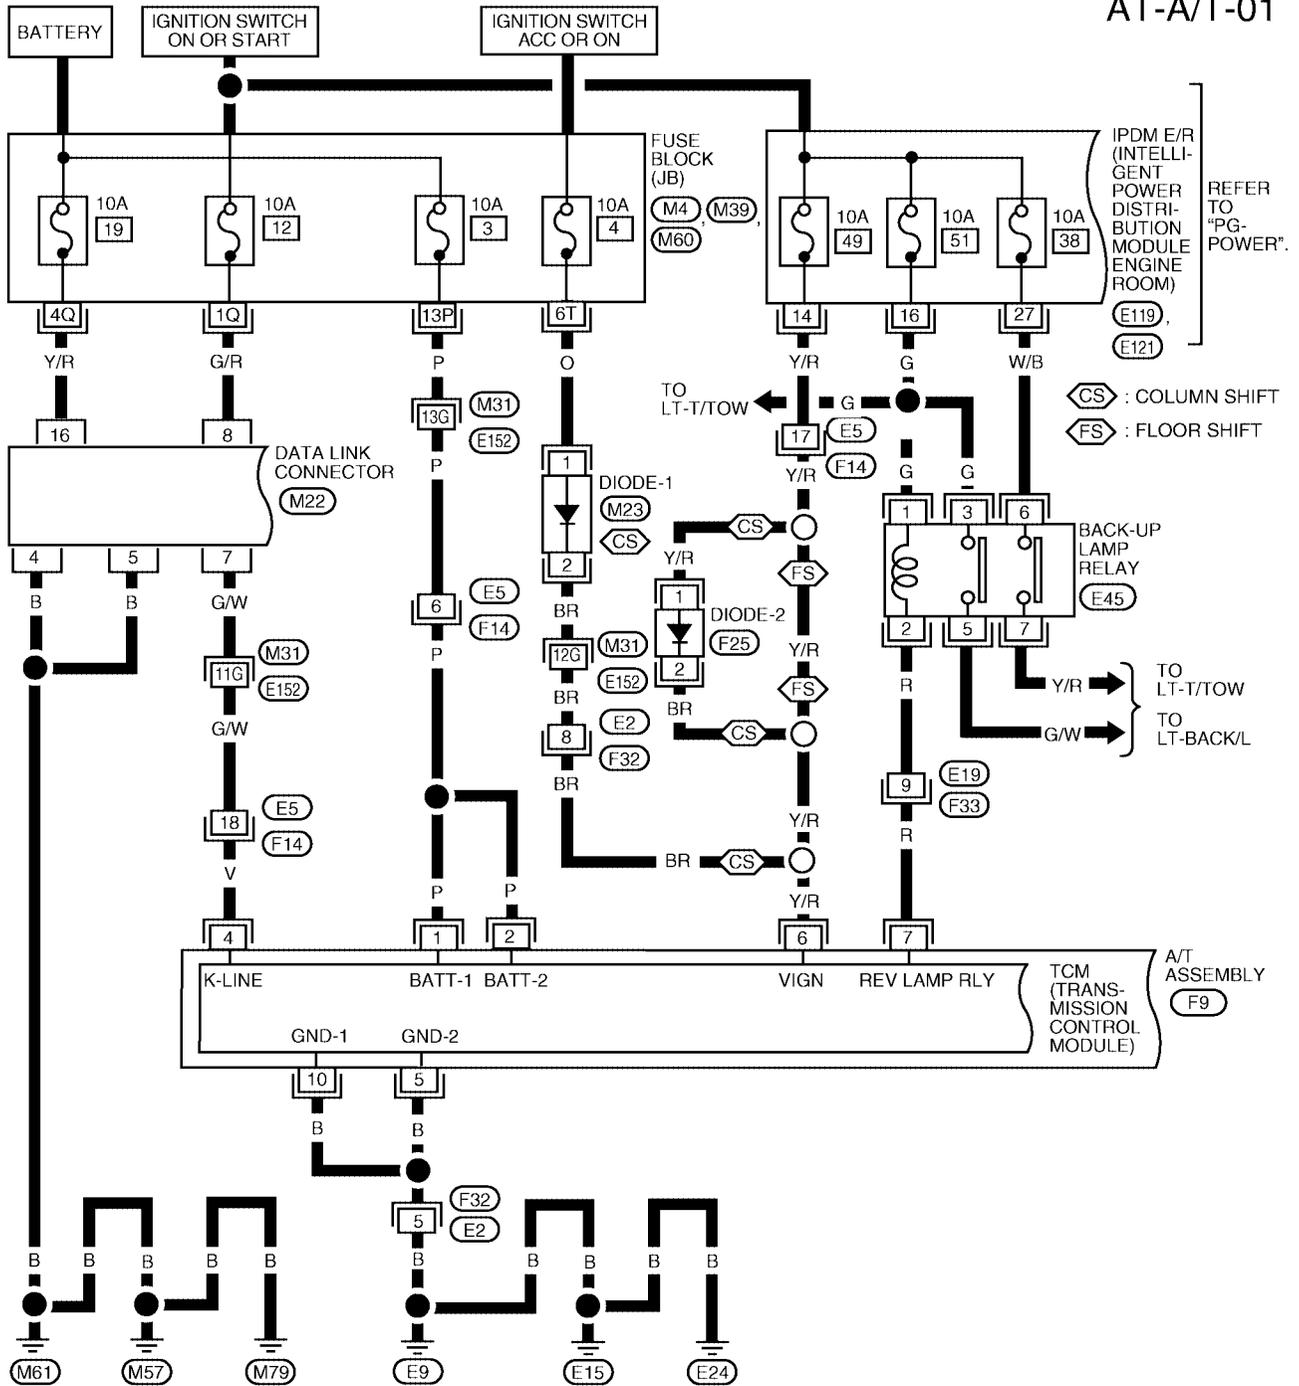

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

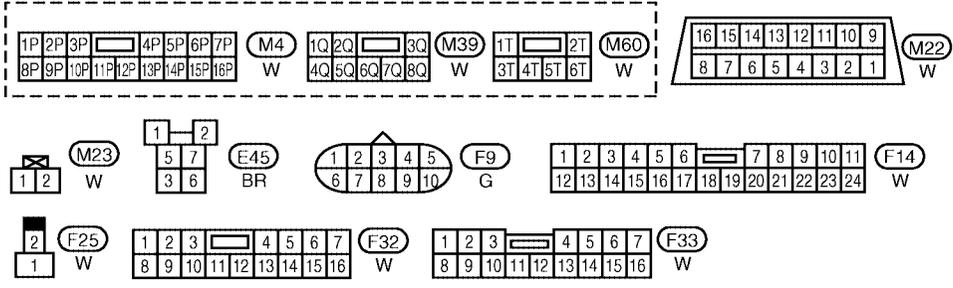


REFER TO THE FOLLOWING.  
**(M31)** - SUPER MULTIPLE JUNCTION (SMJ)  
**(E119), (E121)** - IPDM E/R

BCWA0319E

# TROUBLE DIAGNOSIS




AT-A/T-02

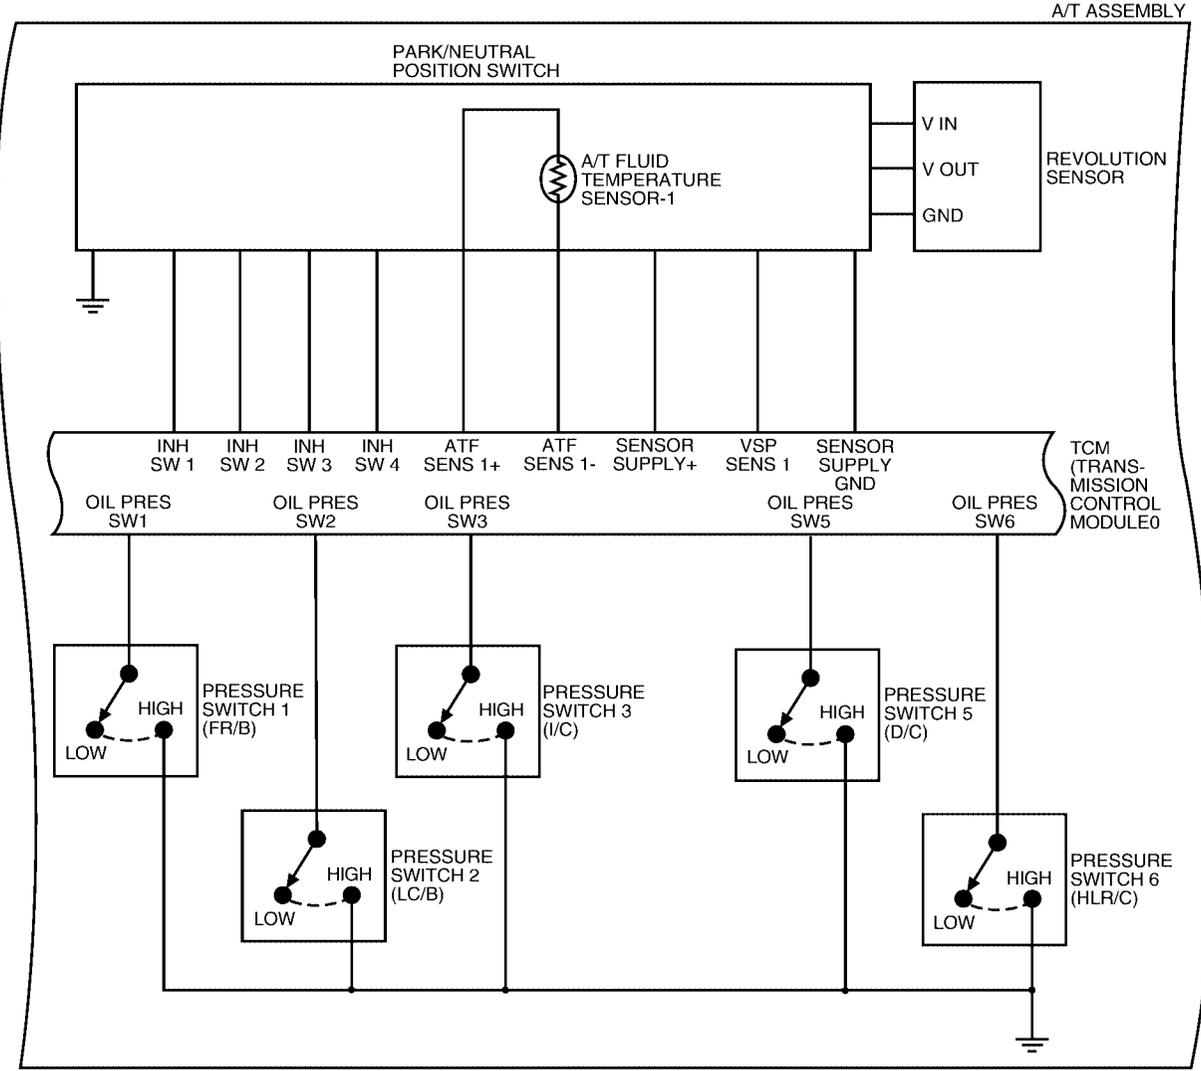

BCWA0055E

# TROUBLE DIAGNOSIS




AT-A/T-03

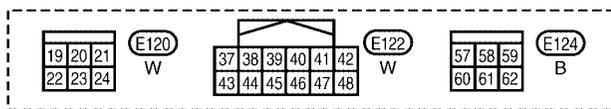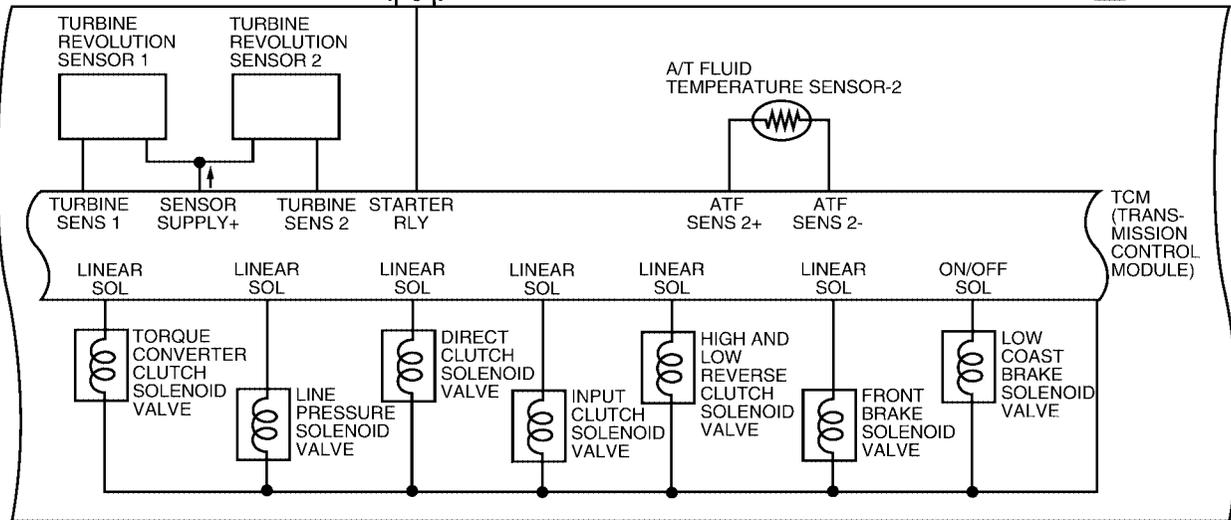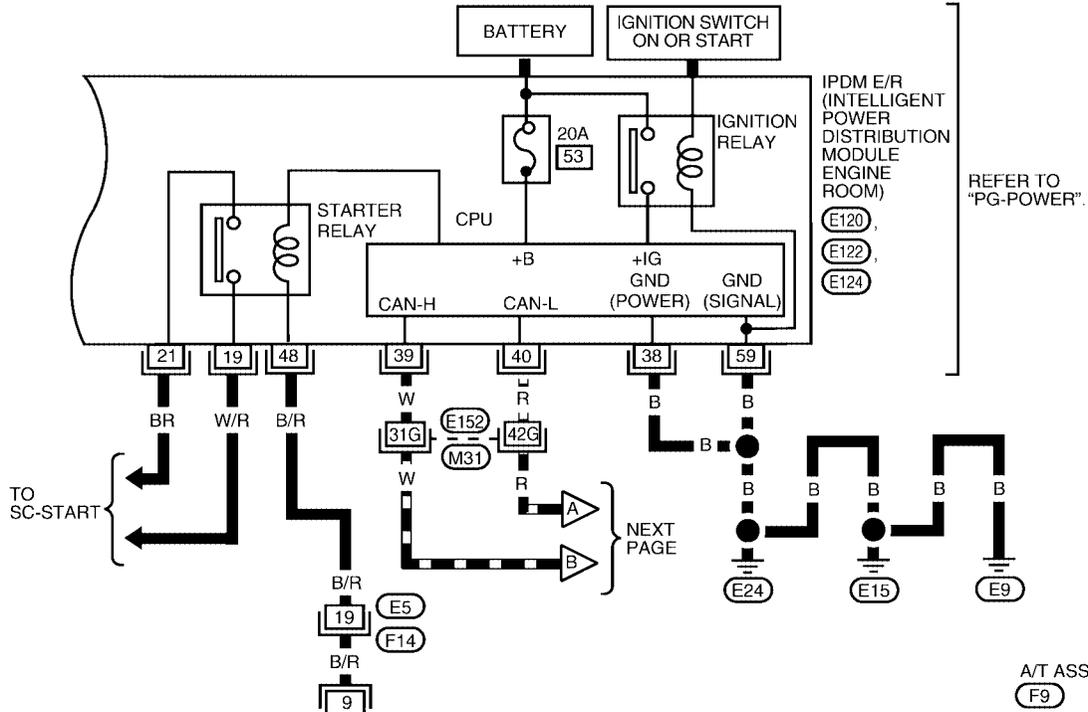

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

# TROUBLE DIAGNOSIS

AT-A/T-0.

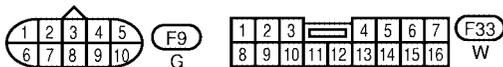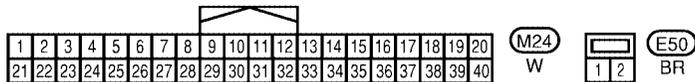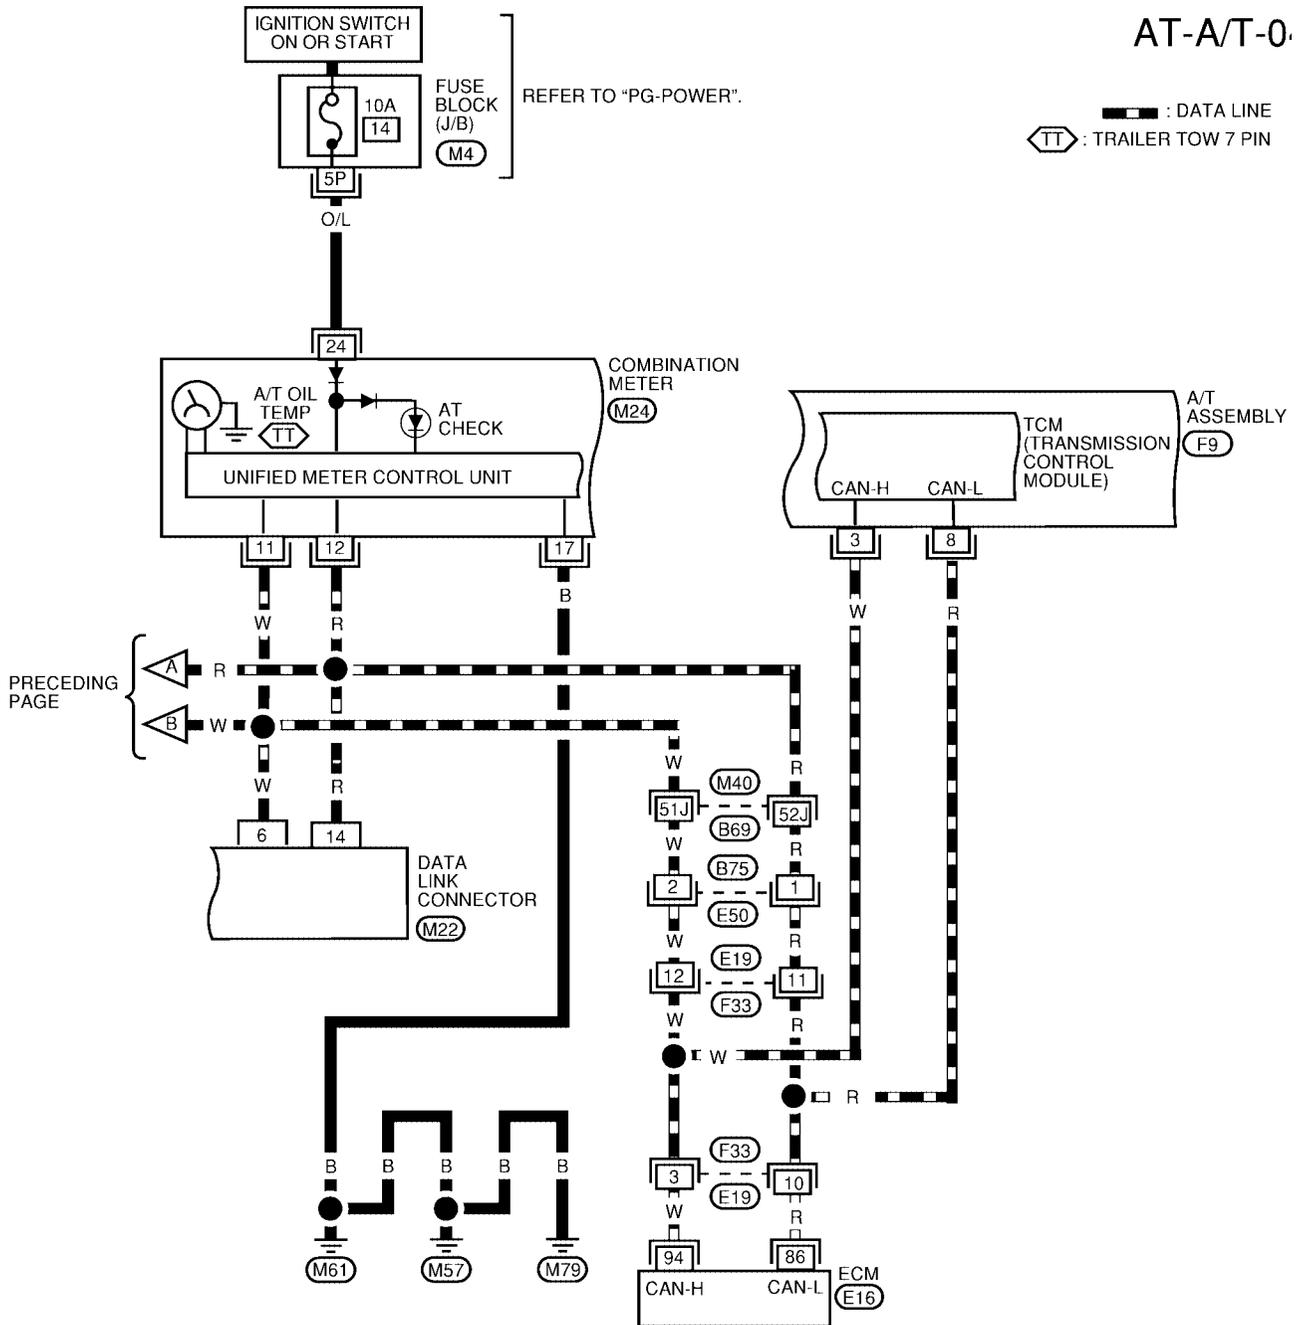

REFER TO THE FOLLOWING.

**(M40)** - SUPER MULTIPLE JUNCTION (SMJ)

**(E16)** - ELECTRICAL UNITS



WCWA0172E

# TROUBLE DIAGNOSIS

## FLOOR SHIFT

AT-A/T-05

A  
B  
**AT**  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

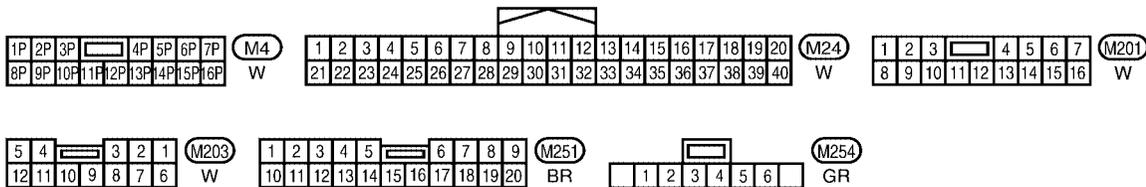
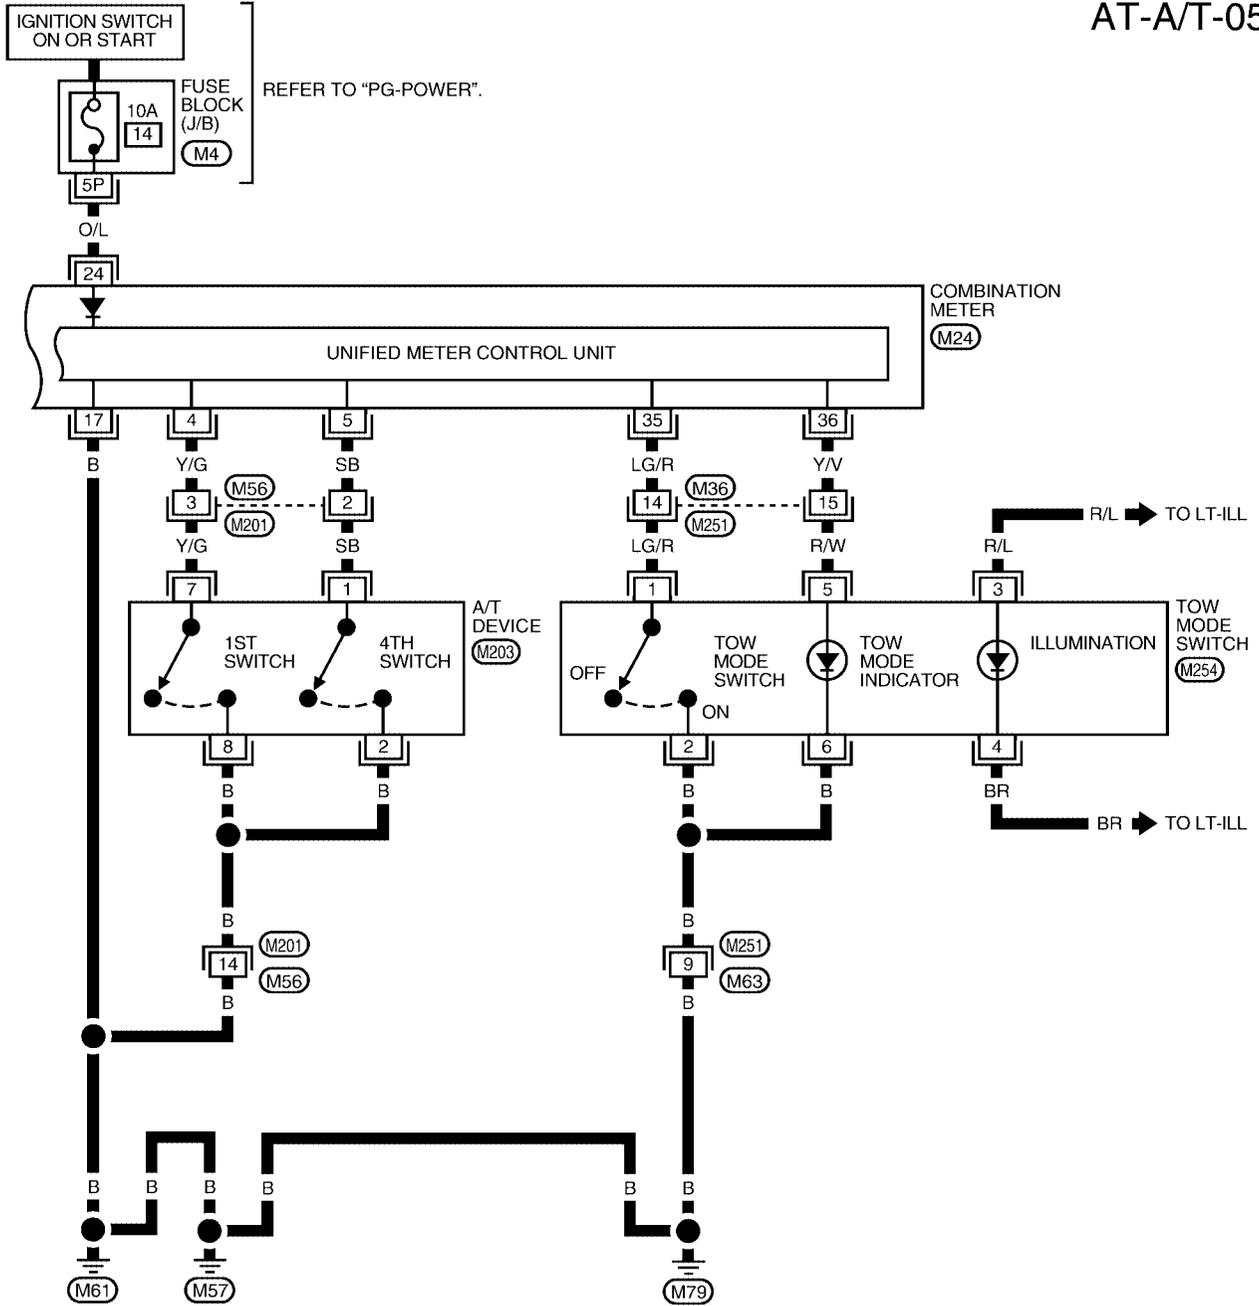


BCWA0090E

# TROUBLE DIAGNOSIS

## COLUMN SHIFT

AT-A/T-06

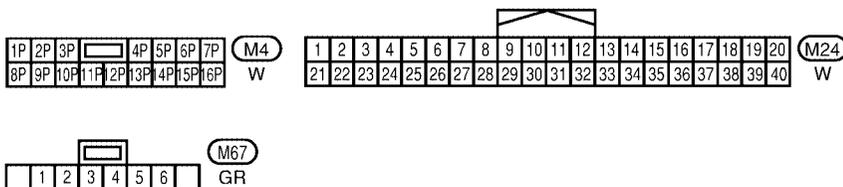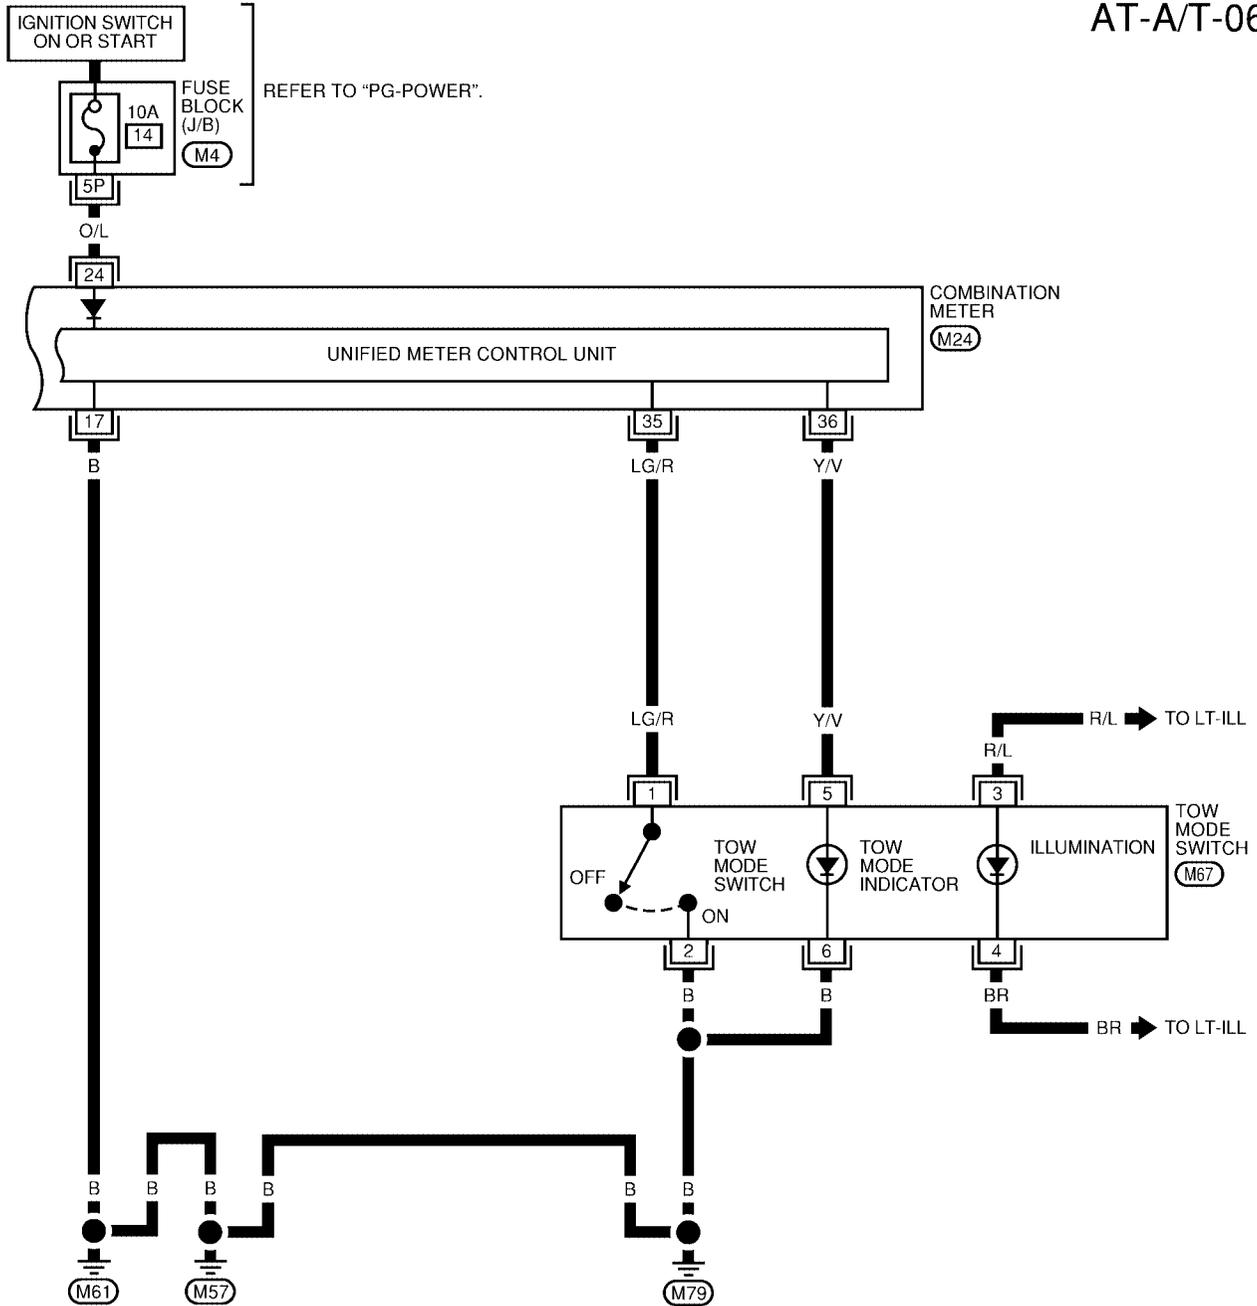

WCWA0173E

# TROUBLE DIAGNOSIS

## TCM TERMINAL MEASUREMENT CHART

TCM terminals and data are reference value. Measured between each terminal and ground.

Terminal No.	Wire color	Item	Condition	Data (Approx.)
1	P	Power supply (Memory back-up)	Always	Battery voltage
2	P	Power supply (Memory back-up)	Always	Battery voltage
3	W	CAN-H	-	-
4	V	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.	
5	B	Ground	Always	0V
6	Y/R	Power supply	 -	Battery voltage
			 -	0V
7	R	Back-up lamp relay	 Selector lever in "R" position.	0V
			 Selector lever in other positions.	Battery voltage
8	R	CAN-L	-	-
9	B/R	Starter relay	 Selector lever in "N", "P" positions.	Battery voltage
			 Selector lever in other positions.	0V
10	B	Ground	Always	0V

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

UCS002NC

## Inspections Before Trouble Diagnosis

### A/T FLUID CHECK


#### Fluid Leakage and Fluid Level Check

- Inspect for fluid leakage and check the fluid level. Refer to [AT-13, "Checking A/T Fluid"](#).

#### Fluid Condition Check

Inspect the fluid condition.


Fluid condition	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the ATF and check the A/T main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the ATF and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the ATF and check for improper operation of the A/T.

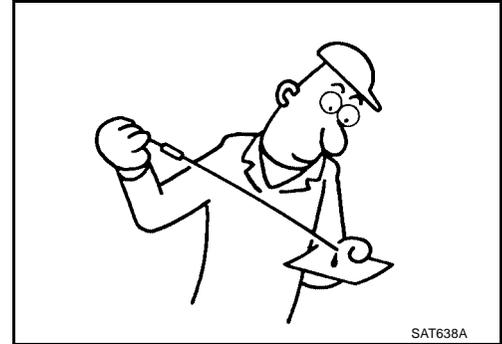


## STALL TEST

### Stall Test Procedure

1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of ATF. Replenish if necessary.

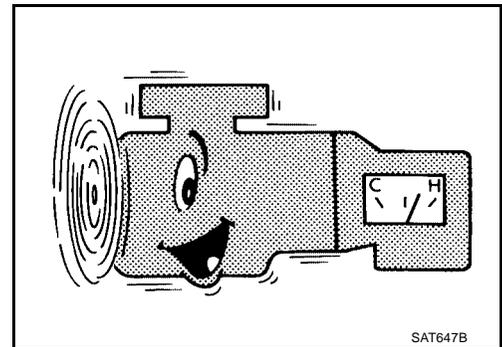

3. Securely engage the parking brake so that the tires do not turn.

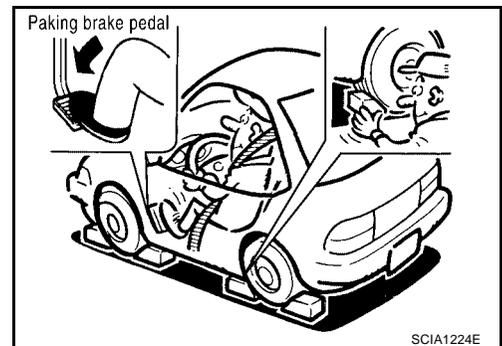


4. Engine start, apply foot brake, and place selector lever in "D" position.
5. While holding down the foot brake, gradually press down the accelerator pedal.
6. Quickly read off the stall speed, then quickly remove your foot from the accelerator pedal.

#### **CAUTION:**

**Do not hold down the accelerator pedal for more than 5 seconds during this test.**

7. Move the selector lever to the "N" position.
8. Cool down the ATF.

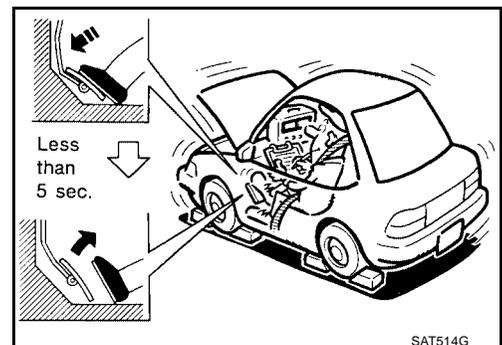

# TROUBLE DIAGNOSIS

**CAUTION:**

Run the engine at idle for at least one minute.

Stall speed: **2,500 - 2,800 rpm**

## Judgement of Stall Test

	Selector lever position		Expected problem location
	D	R	
Stall rotation	H	O	<ul style="list-style-type: none"> <li>● Forward brake</li> <li>● Forward one-way clutch</li> <li>● 1st one-way clutch</li> <li>● 3rd one-way clutch</li> </ul>
	O	H	<ul style="list-style-type: none"> <li>● Reverse clutch</li> </ul>
	L	L	<ul style="list-style-type: none"> <li>● Engine and torque converter one-way clutch</li> </ul>
	H	H	<ul style="list-style-type: none"> <li>● Line pressure low</li> </ul>

O: Stall speed within standard value position

H: Stall speed higher than standard value


L: Stall speed lower than standard value

## Stall test standard value position

Does not shift-up D, M position 1 → 2	Slipping in 2nd, 3rd, 4th gears	Direct clutch slippage
Does not shift-up D, M position 2 → 3	Slipping in 3rd, 4th, 5th gears	High and low reverse clutch slippage
Does not shift-up D, M position 3 → 4	Slipping in 4th, 5th gears	Input clutch slippage
Does not shift-up D, M position 4 → 5	Slipping in 5th gear	Front brake slippage

## LINE PRESSURE TEST

### Line Pressure Test Port

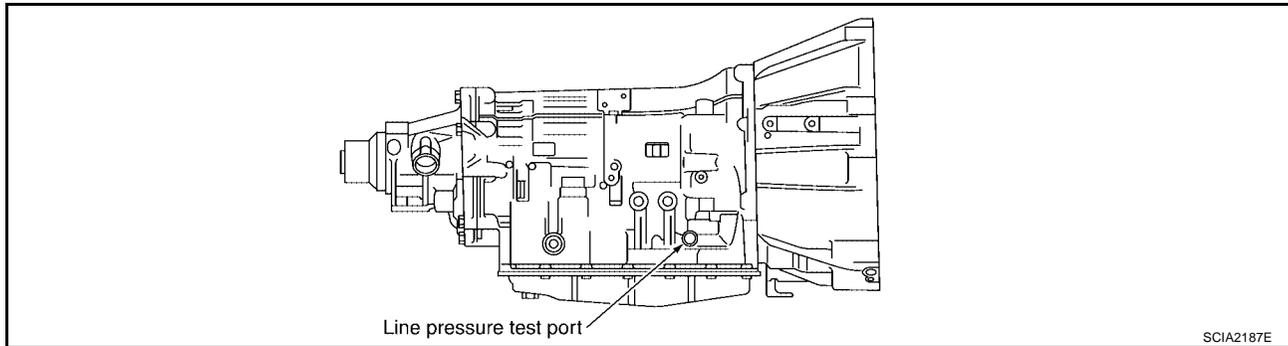

### Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the ATF reaches in range of 50 to 80°C (122 to 176°F), then inspect the amount of ATF and replenish if necessary.

**NOTE:**


The automatic fluid temperature rises in range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

# TROUBLE DIAGNOSIS


3. After warming up remove the oil pressure detection plug and install the oil pressure gauge [ST2505S001(J-34301-C)].

**CAUTION:**

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

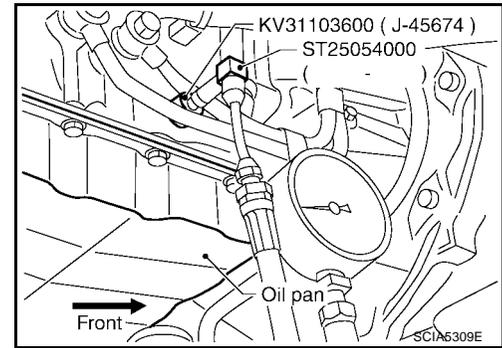

4. Securely engage the parking brake so that the tires do not turn.

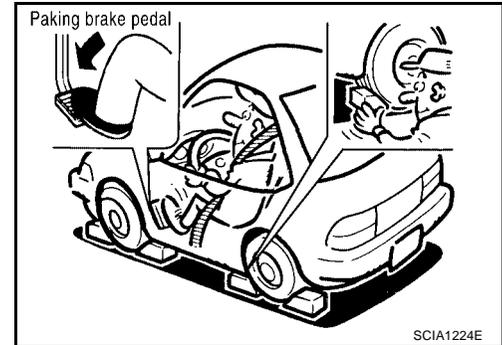


5. Start the engine, then measure the line pressure at both idle and the stall speed.

**CAUTION:**

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [AT-62, "STALL TEST"](#).

6. After the measurements are complete, install the oil pressure detection plug and tighten to the regulation torque below.

 : 7.3 N·m (0.74 kg·m, 65 in·lb)

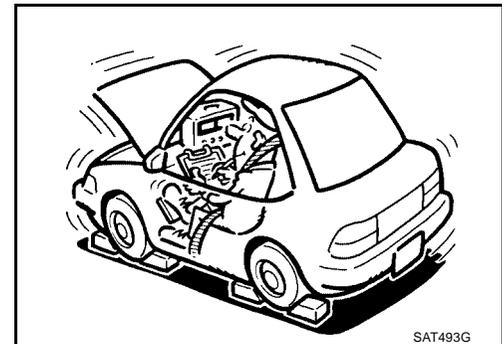

**CAUTION:**

Do not reuse the O-ring.

## Line Pressure

Engine speed	Line pressure [kPa (kg/cm <sup>2</sup> , psi)]	
	R position	D, M position
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

# TROUBLE DIAGNOSIS

## Judgement of Line Pressure Test

Judgement		Possible cause	
Idle speed	Low for all positions (P, R, N, D, M)	<p>Possible causes include malfunctions in the pressure supply system and low oil pump output.</p> <p>For example</p> <ul style="list-style-type: none"> <li>● Oil pump wear</li> <li>● Pressure regulator valve or plug sticking or spring fatigue</li> <li>● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak</li> <li>● Engine idle speed too low</li> </ul>	A B AT
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.	
	High	<p>Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function.</p> <p>For example</p> <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● ATF temperature sensor malfunction</li> <li>● Line pressure solenoid malfunction (sticking in "OFF" state, filter clog, cut line)</li> <li>● Pressure regulator valve or plug sticking</li> </ul>	D E F
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	<p>Possible causes include a sensor malfunction or malfunction in the pressure adjustment function.</p> <p>For example</p> <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● TCM breakdown</li> <li>● Line pressure solenoid malfunction (shorting, sticking in "ON" state)</li> <li>● Pressure regulator valve or plug sticking</li> <li>● Pilot valve sticking or pilot filter clogged</li> </ul>	G H
	The pressure rises, but does not enter the standard position.	<p>Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function.</p> <p>For example</p> <ul style="list-style-type: none"> <li>● Accelerator pedal position signal malfunction</li> <li>● Line pressure solenoid malfunction (sticking, filter clog)</li> <li>● Pressure regulator valve or plug sticking</li> <li>● Pilot valve sticking or pilot filter clogged</li> </ul>	I J
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.	K

## ROAD TEST

### Description

- The road test inspects overall performance of the A/T and analyzes possible malfunction causes.
  - The road test is carried out in the following three stages.
1. Check before engine is started. Refer to [AT-66](#) .
  2. Check at idle. Refer to [AT-66](#) .
  3. Cruise test
    - Inspect all the items from Part 1 to Part 3. Refer to [AT-67](#) , [AT-69](#) , [AT-70](#) .
    - Before beginning the road test, check the test procedure and inspection items.
    - Test all inspection items until the symptom is uncovered. Diagnose NG items when all road tests are complete.

# TROUBLE DIAGNOSIS

---

## Check Before Engine is Started

UCS002ND

### 1. CHECK AT CHECK INDICATOR LAMP

---

1. Park vehicle on level surface.
2. Move selector lever to "P" position.
3. Turn ignition switch to "OFF" position and wait at least 10 seconds.
4. Turn ignition switch to "ON" position. (Do not start engine.)

Does AT CHECK indicator lamp light up for about 2 seconds?

YES >> GO TO 2.

NO >> Stop the road test and go to [AT-199, "AT CHECK Indicator Lamp does not come on"](#) .

### 2. CHECK AT CHECK INDICATOR LAMP

---

Does AT CHECK indicator lamp flash for about 8 seconds?

YES >> For TCM fail-safe mode, carry out self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#) .

NO >> 1. Turn ignition switch to "OFF" position.

2. Carry out the self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#) .

3. Go to [AT-66, "Check at Idle"](#) .

## Check at Idle

UCS002NE

### 1. CHECK STARTING THE ENGINE

---

1. Park vehicle on level surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch to "OFF" position.
4. Turn ignition switch to "START" position.

Does the engine start?

YES >> GO TO 2.

NO >> Stop the road test and go to [AT-200, "Engine Cannot Be Started In "P" or "N" Position"](#) .

### 2. CHECK STARTING THE ENGINE

---

1. Turn ignition switch to "ON" position.
2. Move selector lever in "D" or "R" position.
3. Turn ignition switch to "START" position.

Does the engine start in either position?

YES >> Stop the road test and go to [AT-200, "Engine Cannot Be Started In "P" or "N" Position"](#) .

NO >> GO TO 3.

### 3. CHECK "P" POSITION FUNCTIONS

---

1. Move selector lever to "P" position.
2. Turn ignition switch to "OFF" position.
3. Release the parking brake.
4. Push the vehicle forward or backward.
5. Engage the parking brake.

When you push the vehicle with disengaging the parking brake, does it move?

YES >> Enter a check mark at "Vehicle moves when pushed in "P" position" on the diagnostics worksheet, then continue the road test.

NO >> GO TO 4.

# TROUBLE DIAGNOSIS

---

## 4. CHECK "N" POSITION FUNCTIONS

---

1. Start the engine.
2. Move selector lever to "N" position.
3. Release the parking brake.

Does vehicle move forward or backward?

- YES >> Enter a check mark at "Vehicle moves in "N" position" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 5.

---

## 5. CHECK SHIFT SHOCK

---

1. Engage the brake.
2. Move selector lever to "D" position.

When the transmission is shifted from "N" to "D", is there an excessive shock?

- YES >> Enter a check mark at "Large shock when shifted from N to D" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 6.

---

## 6. CHECK "R" POSITION FUNCTIONS

---

1. Engage the brake.
2. Move selector lever to "R" position.
3. Release the brake for 4 to 5 seconds.

Does the vehicle creep backward?

- YES >> GO TO 7.
- NO >> Enter a check mark at "Vehicle does not creep backward in R position" on the diagnostics worksheet, then continue the road test.

---

## 7. CHECK "D" POSITION FUNCTIONS

---

Inspect whether the vehicle moves forward when the transmission is put into the "D" position.

Does the vehicle move forward in the "D" positions?

- YES >> Go to [AT-67, "Cruise Test - Part 1"](#) , [AT-69, "Cruise Test - Part 2"](#) , and [AT-70, "Cruise Test - Part 3"](#) .
- NO >> Enter a check mark at "Vehicle does not move forward in D positions" on the diagnostics worksheet, then continue the road test.

### Cruise Test - Part 1

UCS002NF

---

#### 1. CHECK STARTING OUT FROM D1

---

1. Drive the vehicle for about 10 minutes to warm up the engine oil and ATF.  
Appropriate temperature for the ATF: 50 - 80°C (122 - 176°F)
2. Park the vehicle on a level surface.
3. Move selector lever to "P" position.
4. Start the engine.
5. Move selector lever to "D" position.
6. Press the accelerator pedal about half way down to accelerate the vehicle.

#### With CONSULT-II

Read off the gear positions.

Starts from D1?

- YES >> GO TO 2.
- NO >> Enter a check mark at "Vehicle cannot be started from D1" on the diagnostics worksheet, then continue the road test.

# TROUBLE DIAGNOSIS

---

## 2. CHECK SHIFT-UP D1 → D2

---

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D1 → D2) at the appropriate speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "A/T does not shift D1 → D2" on the diagnostics worksheet, then continue the road test.

---

## 3. CHECK SHIFT-UP D2 → D3

---

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D2 → D3) at the appropriate speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "A/T does not shift D2 → D3" on the diagnostics worksheet, then continue the road test.

---

## 4. CHECK SHIFT-UP D3 → D4

---

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D3 → D4) at the appropriate speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D3 → D4 at the correct speed?

YES >> GO TO 5.

NO >> Enter a check mark at "A/T does not shift D3 → D4" on the diagnostics worksheet, then continue the road test.

---

## 5. CHECK SHIFT-UP D4 → D5

---

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D4 → D5) at the appropriate speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D4 → D5 at the correct speed?

YES >> GO TO 6.

NO >> Enter a check mark at "A/T does not shift D4 → D5" on the diagnostics worksheet, then continue the road test.

# TROUBLE DIAGNOSIS

---

## 6. CHECK LOCK-UP

---

When releasing accelerator pedal from D5, check lock-up from D5 to L/U.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### With CONSULT-II

Select "TCC SOLENOID 0.00A" with the "MAIN SIGNAL" mode for A/T.

Does it lock-up?

YES >> GO TO 7.

NO >> Enter a check mark at "A/T does not perform lock-up" on the diagnostics worksheet, then continue the road test.

---

## 7. CHECK LOCK-UP HOLD

---

Does it maintain lock-up status?

YES >> GO TO 8.

NO >> Enter a check mark at "A/T hold does not lock-up condition" on the diagnostics worksheet, then continue the road test.

---

## 8. CHECK LOCK-UP RELEASE

---

Check lock-up cancellation by depressing brake pedal lightly to decelerate.

### With CONSULT-II

Select "TCC SOLENOID 0.00A" with the "MAIN SIGNAL" mode for A/T.

Does lock-up cancel?

YES >> GO TO 9.

NO >> Enter a check mark at "Lock-up is not released" on the diagnostics worksheet, then continue the road test.

---

## 9. CHECK SHIFT-DOWN D5 → D4

---

Decelerate by pressing lightly on the brake pedal.

### With CONSULT-II

Read the gear position and engine speed.

When the A/T shift-down D5 → D4, does the engine speed drop smoothly back to idle?

YES >> 1. Stop the vehicle.

2. Go to Cruise test - Part 2 (Refer to [AT-69](#) ).

NO >> Enter a check mark at "A/T does not shift-down" on the diagnostics worksheet, then continue the road test. Go to Cruise test - Part 2 (Refer to [AT-69](#) ).

---

## Cruise Test - Part 2

UCS002NG

---

### 1. CHECK STARTING FROM D1

---

1. Move selector lever the "D" position.
2. Accelerate at half throttle.

### With CONSULT-II

Read the gear position.

Does it start from D1?

YES >> GO TO 2.

NO >> Enter a check mark at "Vehicle cannot be started from D1" on the diagnostics worksheet, then continue the road test.

# TROUBLE DIAGNOSIS

---

## 2. CHECK SHIFT-UP D1 → D2

---

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D1 → D2) at the correct speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle position and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "Vehicle does not shift D1 → D2" on the diagnostics worksheet, then continue the road test.

---

## 3. CHECK SHIFT-UP D2 → D3

---

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D2 → D3) at the correct speed.

- Refer to [AT-72, "Vehicle Speed When Shifting Gears"](#) .

### Ⓜ With CONSULT-II

Read the gear position, throttle position and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "Vehicle does not shift D2 → D3" on the diagnostics worksheet, then continue the road test.

---

## 4. CHECK SHIFT-UP D3 → D4 AND ENGINE BRAKE

---

When the transmission changes speed D3 → D4, return the accelerator pedal.

Does the A/T shift-up D3 → D4 and apply the engine brake?

YES >> 1. Stop the vehicle.

2. See [AT-70, "Cruise Test - Part 3"](#) .

NO >> Enter a check mark at "Vehicle does not shift D3 → D4" on the diagnostics worksheet, then continue the road test.

## Cruise Test - Part 3

UCS002NH

---

### 1. IDENTIFY SHIFTER LOCATION

---

Identify the shifter location.

Is the shifter located on the steering column?

YES >> GO TO 2.

NO >> GO TO 4.

---

### 2. MANUAL MODE FUNCTION

---

Move to manual mode from D position.

Does it switch to manual mode?

YES >> GO TO 3.

NO >> Continue road test and add chicanery to "Cannot be changed to manual mode" on diagnostics worksheet.

# TROUBLE DIAGNOSIS

---

## 3. CHECK SHIFT-DOWN

---

During manual mode driving, move gear selector from M5 → M4 → M3 → M2 → M1.

 **With CONSULT-II**

Read the gear position.

Is downshifting correctly performed?

YES >> GO TO 5.

NO >> Enter a check mark at "Vehicle does not shift" at the corresponding position (5th → 4th, 4th → 3rd, 3rd → 2nd, 2nd → 1st) on the diagnostics worksheet, then continue the road test.

---

## 4. CHECK SHIFT-DOWN

---

During D5 driving, move gear selector from D → 4 → 3 → 2 → 1.

 **With CONSULT-II**

Read the gear position.

Is downshifting correctly performed?

YES >> GO TO 5.

NO >> Enter a check mark at "Vehicle does not shift" at the corresponding position (5th → 4th, 4th → 3rd, 3rd → 2nd, 2nd → 1st) on the diagnostics worksheet, then continue the road test.

---

## 5. CHECK ENGINE BRAKE

---

Does engine braking effectively reduce speed in M1 position (column shift) or 11 position (floor shift)?

YES >> 1. Stop the vehicle.

2. Carry out the self-diagnostics. Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#).

NO >> Enter a check mark at "Vehicle does not decelerate by engine brake" on the diagnostics worksheet, then continue trouble diagnosis.

# TROUBLE DIAGNOSIS

## Vehicle Speed When Shifting Gears NORMAL MODE

UCS002NI

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
2.937	Full throttle	70 - 74 (44 - 46)	112 - 120 (70 - 75)	176 - 186 (110 - 116)	249 - 259 (155 - 161)	245 - 255 (152 - 159)	166 - 176 (103 - 110)	100 - 108 (62 - 67)	43 - 47 (27 - 30)
	Half throttle	46 - 50 (29 - 31)	74 - 82 (46 - 51)	103 - 113 (64 - 71)	135 - 145 (84 - 90)	109 - 119 (68 - 74)	69 - 79 (43 - 49)	44 - 52 (28 - 33)	11 - 15 (7 - 10)
3.357	Full throttle	61 - 65 (38 - 41)	97 - 105 (61 - 66)	153 - 163 (95 - 102)	236 - 246 (147 - 153)	232 - 242 (144 - 151)	143 - 153 (89 - 95)	87 - 95 (54 - 59)	43 - 47 (27 - 30)
	Half throttle	41 - 45 (26 - 28)	66 - 74 (41 - 46)	89 - 99 (56 - 62)	117 - 127 (73 - 79)	95 - 105 (59 - 66)	59 - 69 (37 - 43)	38 - 46 (24 - 29)	11 - 15 (7 - 10)

- At half throttle, the accelerator opening is 4/8 of the full opening.

## TOW MODE

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
2.937	Full throttle	70 - 74 (44 - 46)	112 - 120 (70 - 75)	176 - 186 (110 - 116)	249 - 259 (155 - 161)	245 - 255 (152 - 159)	166 - 176 (103 - 110)	100 - 108 (62 - 67)	43 - 47 (27 - 30)
	Half throttle	50 - 54 (31 - 34)	81 - 89 (50 - 55)	113 - 123 (70 - 76)	135 - 145 (84 - 90)	109 - 119 (68 - 74)	69 - 79 (43 - 49)	44 - 52 (28 - 33)	11 - 15 (7 - 10)
3.357	Full throttle	61 - 65 (38 - 41)	97 - 105 (61 - 66)	153 - 163 (95 - 102)	236 - 246 (147 - 153)	232 - 242 (144 - 151)	143 - 153 (89 - 95)	87 - 95 (54 - 59)	43 - 47 (27 - 30)
	Half throttle	46 - 50 (28 - 31)	72 - 80 (45 - 50)	98 - 108 (61 - 67)	117 - 127 (73 - 79)	95 - 105 (59 - 66)	59 - 69 (37 - 43)	38 - 46 (24 - 29)	11 - 15 (7 - 10)

- At half throttle, the accelerator opening is 4/8 of the full opening.

## Vehicle Speed When Performing and Releasing Complete Lock-up

UCS002NJ

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
2.937	Closed throttle	74 - 82 (46 - 51)	71 - 79 (45 - 49)
	Half throttle	188 - 196 (117 - 122)	136 - 144 (85 - 90)
3.357	Closed throttle	65 - 73 (41 - 46)	62 - 70 (39 - 44)
	Half throttle	168 - 176 (105 - 110)	118 - 126 (74 - 79)

- At closed throttle, the accelerator opening is less than 1/8 condition.
- At half throttle, the accelerator opening is 4/8 of the full opening.

## Vehicle Speed When Performing and Releasing Slip Lock-up

UCS002NK

Final gear ratio	Throttle position	Gear position	Vehicle speed km/h (MPH)	
			Slip lock-up "ON"	Slip lock-up "OFF"
2.937	Closed throttle	4th	52 - 60 (33 - 38)	49 - 57 (31 - 36)
		5th	52 - 60 (33 - 38)	49 - 57 (31 - 36)
3.357	Closed throttle	4th	46 - 54 (29 - 34)	43 - 51 (27 - 32)
		5th	46 - 54 (29 - 34)	43 - 51 (27 - 32)

- At closed throttle, the accelerator opening is less than 1/8 condition.

# TROUBLE DIAGNOSIS

UCS002UC

## Symptom Chart

- The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.
- Overhaul and inspect inside the A/T only if A/T fluid condition is NG. Refer to [AT-62, "Fluid Condition Check"](#).

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
1		Large shock. ("N" → "D" position) Refer to <a href="#">AT-203, "Large Shock ("N" to "D" Position)"</a> .	ON vehicle	1. Engine idle speed	<a href="#">EC-32</a>
				2. Engine speed signal	<a href="#">AT-119</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. Control cable adjustment	<a href="#">AT-243</a>
				5. ATF temperature sensor	<a href="#">AT-134</a>
				6. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183, AT-154</a>
				7. CAN communication line	<a href="#">AT-107</a>
				8. Fluid level and state	<a href="#">AT-62</a>
				9. Line pressure test	<a href="#">AT-63</a>
				10. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	11. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
2	Shift Shock	Shock is too large when changing D1 → D2, 11 → 22 or M1 → M2.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Engine speed signal	<a href="#">AT-119</a>
				6. Turbine revolution sensor	<a href="#">AT-137</a>
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				8. Fluid level and state	<a href="#">AT-62</a>
				9. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	10. Direct clutch	<a href="#">AT-322</a>
3		Shock is too large when changing D2 → D3, 22 → 33 or M2 → M3.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192, AT-166</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Engine speed signal	<a href="#">AT-119</a>
				6. Turbine revolution sensor	<a href="#">AT-137</a>
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				8. Fluid level and state	<a href="#">AT-62</a>
				9. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	10. High and low reverse clutch	<a href="#">AT-320</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
4		Shock is too large when changing D3 → D4 , 33 → 44 or M3 → M4 .	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186,</a> <a href="#">AT-148</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Engine speed signal	<a href="#">AT-119</a>
				6. Turbine revolution sensor	<a href="#">AT-137</a>
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>
				8. Fluid level and state	<a href="#">AT-62</a>
				9. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	10. Input clutch	<a href="#">AT-310</a>
5	Shift Shock	Shock is too large when changing D4 → D5 , 44 → D5 or M4 → M5 .	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183,</a> <a href="#">AT-154</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Engine speed signal	<a href="#">AT-119</a>
				6. Turbine revolution sensor	<a href="#">AT-137</a>
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>
				8. Fluid level and state	<a href="#">AT-62</a>
				9. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	10. Front brake (brake band)	<a href="#">AT-276</a>
				11. Input clutch	<a href="#">AT-310</a>
6		Shock is too large for downshift when accelerator pedal is pressed.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. Engine speed signal	<a href="#">AT-119</a>
				5. Turbine revolution sensor	<a href="#">AT-137</a>
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>
				7. Fluid level and state	<a href="#">AT-62</a>
				8. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	9. Front brake (brake band)	<a href="#">AT-276</a>
				10. Input clutch	<a href="#">AT-310</a>
				11. High and low reverse clutch	<a href="#">AT-320</a>
				12. Direct clutch	<a href="#">AT-322</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
7		Shock is too large for upshift when accelerator pedal is released.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>	A
				2. Control cable adjustment	<a href="#">AT-243</a>	B
				3. Engine speed signal	<a href="#">AT-119</a>	
				4. CAN communication line	<a href="#">AT-107</a>	
				5. Turbine revolution sensor	<a href="#">AT-137</a>	AT
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>	
				7. Fluid level and state	<a href="#">AT-62</a>	D
				8. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	9. Front brake (brake band)	<a href="#">AT-276</a>	
				10. Input clutch	<a href="#">AT-310</a>	E
				11. High and low reverse clutch	<a href="#">AT-320</a>	
				12. Direct clutch	<a href="#">AT-322</a>	F
8	Shift Shock	Shock is too large for lock-up.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>	
				2. Control cable adjustment	<a href="#">AT-243</a>	G
				3. Engine speed signal	<a href="#">AT-119</a>	
				4. CAN communication line	<a href="#">AT-107</a>	
				5. Turbine revolution sensor	<a href="#">AT-137</a>	H
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>	
				7. Torque converter clutch solenoid valve	<a href="#">AT-121</a>	I
				8. Fluid level and state	<a href="#">AT-62</a>	
				9. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	10. Torque converter	<a href="#">AT-288</a>	J
9		Shock is too large during engine brake.	ON vehicle	1. Accelerator pedal position sensor	<a href="#">AT-132</a>	
				2. Control cable adjustment	<a href="#">AT-243</a>	K
				3. CAN communication line	<a href="#">AT-107</a>	
				4. Fluid level and state	<a href="#">AT-62</a>	
				5. Control valve with TCM	<a href="#">AT-255</a>	L
			OFF vehicle	6. Front brake (brake band)	<a href="#">AT-276</a>	
				7. Input clutch	<a href="#">AT-310</a>	M
				8. High and low reverse clutch	<a href="#">AT-320</a>	
				9. Direct clutch	<a href="#">AT-322</a>	

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
10		Gear does not change from D1 → D2 or from 11 → 22 or from M1 → M2 . Refer to <a href="#">AT-214, "A/T Does Not Shift: D1 → D2"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				3. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>
				4. Line pressure test	<a href="#">AT-63</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Direct clutch	<a href="#">AT-322</a>
11		Gear does not change from D2 → D3 or from 22 → 33 or from M2 → M3 . Refer to <a href="#">AT-216, "A/T Does Not Shift: D2 → D3"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192, AT-166</a>
				4. Line pressure test	<a href="#">AT-63</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. High and low reverse clutch	<a href="#">AT-320</a>
12	No Up Shift	Gear does not change from D3 → D4 or from 33 → 44 or from M3 → M4 . Refer to <a href="#">AT-218, "A/T Does Not Shift: D3 → D4"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186, AT-148</a>
				4. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183, AT-154</a>
				5. Line pressure test	<a href="#">AT-63</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
OFF vehicle	8. Input clutch	<a href="#">AT-310</a>			
13		Gear does not change from D4 → D5 or from 44 → D5 or from M4 → M5 . Refer to <a href="#">AT-221, "A/T Does Not Shift: D4 → D5"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183, AT-154</a>
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>
				5. Turbine revolution sensor	<a href="#">AT-137</a>
				6. Line pressure test	<a href="#">AT-63</a>
				7. CAN communication line	<a href="#">AT-107</a>
				8. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	9. Front brake (brake band)	<a href="#">AT-288</a>
				10. Input clutch	<a href="#">AT-310</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page			
14		In D or M range, does not downshift to 4th gear. Refer to <a href="#">AT-229, "A/T Does Not Shift: 5th gear → 4th gear"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>			
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183, AT-154</a>			
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>			
				5. CAN communication line	<a href="#">AT-107</a>			
				6. Line pressure test	<a href="#">AT-63</a>			
				7. Control valve with TCM	<a href="#">AT-255</a>			
			OFF vehicle	8. Front brake (brake band)	<a href="#">AT-288</a>			
			9. Input clutch	<a href="#">AT-310</a>				
15	No Down Shift	In D or M range, does not downshift to 3rd gear. Refer to <a href="#">AT-232, "A/T Does Not Shift: 4th gear → 3rd gear"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>			
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186, AT-148</a>			
				4. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183, AT-154</a>			
				5. CAN communication line	<a href="#">AT-107</a>			
				6. Line pressure test	<a href="#">AT-63</a>			
				7. Control valve with TCM	<a href="#">AT-255</a>			
			OFF vehicle	8. Input clutch	<a href="#">AT-310</a>			
			16		In D or M range, does not downshift to 2nd gear. Refer to <a href="#">AT-233, "A/T Does Not Shift: 3rd gear → 2nd gear"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>							
3. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192, AT-166</a>							
4. CAN communication line	<a href="#">AT-107</a>							
5. Line pressure test	<a href="#">AT-63</a>							
6. Control valve with TCM	<a href="#">AT-255</a>							
OFF vehicle	7. High and low reverse clutch	<a href="#">AT-320</a>						
17		In D or M range, does not downshift to 1st gear. Refer to <a href="#">AT-235, "A/T Does Not Shift: 2nd gear → 1st gear"</a> .				ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
							2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>
			3. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>				
			4. CAN communication line	<a href="#">AT-107</a>				
			5. Line pressure test	<a href="#">AT-63</a>				
			6. Control valve with TCM	<a href="#">AT-255</a>				
			OFF vehicle	7. Direct clutch	<a href="#">AT-322</a>			

A

B

AT

D

E

F

G

H

I

J

K

L

M

## TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
18	Slips/Will Not engage	When D or M position, remains in 1st gear.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. Direct clutch solenoid valve	<a href="#">AT-160</a>
				4. Line pressure test	<a href="#">AT-63</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. 3rd one-way clutch	<a href="#">AT-307</a>
				8. 1st one-way clutch	<a href="#">AT-315</a>
				9. Gear system	<a href="#">AT-276</a>
				10. Reverse brake	<a href="#">AT-288</a>
				11. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
19		When D or M position, remains in 2nd gear.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. Low coast brake solenoid valve	<a href="#">AT-172</a>
				4. Line pressure test	<a href="#">AT-63</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. 3rd one-way clutch	<a href="#">AT-307</a>
				8. Gear system	<a href="#">AT-276</a>
				9. Direct clutch	<a href="#">AT-322</a>
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
20		When D or M position, remains in 3rd gear.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	A
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>	B
				3. Line pressure test	<a href="#">AT-63</a>	AT
				4. CAN communication line	<a href="#">AT-107</a>	
				5. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	6. 3rd one-way clutch	<a href="#">AT-307</a>	D
				7. Gear system	<a href="#">AT-276</a>	
				8. High and low reverse clutch	<a href="#">AT-320</a>	
				9. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	E
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	F
21	Slips/Will Not engage	When D or M position, remains in 4th gear.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	G
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>	
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186, AT-148</a>	H
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>	
				5. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192, AT-166</a>	I
				6. Low coast brake solenoid valve	<a href="#">AT-172</a>	
				7. Front brake solenoid valve	<a href="#">AT-154</a>	J
				8. Line pressure test	<a href="#">AT-63</a>	
				9. CAN communication line	<a href="#">AT-107</a>	K
				10. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	11. Input clutch	<a href="#">AT-310</a>	L
				12. Gear system	<a href="#">AT-276</a>	
				13. High and low reverse clutch	<a href="#">AT-320</a>	
				14. Direct clutch	<a href="#">AT-322</a>	M

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
22		When D or M position, remains in 5th gear.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183</a> , <a href="#">AT-154</a>
				4. Line pressure test	<a href="#">AT-63</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Front brake (brake band)	<a href="#">AT-288</a>
				8. Input clutch	<a href="#">AT-310</a>
				9. Gear system	<a href="#">AT-276</a>
				10. High and low reverse clutch	<a href="#">AT-320</a>
23	Slips/Will Not Engage	Vehicle cannot be started from D1 . Refer to <a href="#">AT-211</a> . " <a href="#">Vehicle Cannot Be Started From D1</a> " .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Accelerator pedal position sensor	<a href="#">AT-132</a>
				3. Line pressure test	<a href="#">AT-63</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	6. Torque converter	<a href="#">AT-288</a>
				7. Oil pump assembly	<a href="#">AT-305</a>
				8. 3rd one-way clutch	<a href="#">AT-307</a>
				9. 1st one-way clutch	<a href="#">AT-315</a>
				10. Gear system	<a href="#">AT-276</a>
				11. Reverse brake	<a href="#">AT-288</a>
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
24		Does not lock-up. Refer to <a href="#">AT-223</a> . " <a href="#">A/T Does Not Perform Lock-up</a> " .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Engine speed signal	<a href="#">AT-119</a>
				4. Turbine revolution sensor	<a href="#">AT-137</a>
				5. Torque converter clutch solenoid valve	<a href="#">AT-121</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>
				9. Oil pump assembly	<a href="#">AT-305</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page		
25	Slips/Will Not engage	Does not hold lock-up condition. Refer to <a href="#">AT-225, "A/T Does Not Hold Lock-up Condition"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	A	
				2. Line pressure test	<a href="#">AT-63</a>	B	
				3. Engine speed signal	<a href="#">AT-119</a>		
				4. Turbine revolution sensor	<a href="#">AT-137</a>		
				5. Torque converter clutch solenoid valve	<a href="#">AT-121</a>	AT	
				6. CAN communication line	<a href="#">AT-107</a>		
				7. Control valve with TCM	<a href="#">AT-255</a>		
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>	D	
				9. Oil pump assembly	<a href="#">AT-305</a>		
26		Slips/Will Not engage	Lock-up is not released. Refer to <a href="#">AT-227, "Lock-up Is Not Released"</a> .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	E
					2. Line pressure test	<a href="#">AT-63</a>	
					3. Engine speed signal	<a href="#">AT-119</a>	
					4. Turbine revolution sensor	<a href="#">AT-137</a>	F
					5. Torque converter clutch solenoid valve	<a href="#">AT-121</a>	
					6. CAN communication line	<a href="#">AT-107</a>	G
					7. Control valve with TCM	<a href="#">AT-255</a>	
				OFF vehicle	8. Torque converter	<a href="#">AT-288</a>	H
					9. Oil pump assembly	<a href="#">AT-305</a>	
27	Slips/Will Not engage		No shock at all or the clutch slips when vehicle changes speed D1 → D2 , 11 → 22 or M1 → M2 .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	
					2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116, AT-140</a>	I
					3. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189, AT-160</a>	
					4. CAN communication line	<a href="#">AT-107</a>	J
					5. Line pressure test	<a href="#">AT-63</a>	
					6. Control valve with TCM	<a href="#">AT-255</a>	K
				OFF vehicle	7. Torque converter	<a href="#">AT-288</a>	
					8. Oil pump assembly	<a href="#">AT-305</a>	L
					9. 3rd one-way clutch	<a href="#">AT-307</a>	
		10. Gear system			<a href="#">AT-276</a>		
		11. Direct clutch			<a href="#">AT-322</a>	M	
		12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)			<a href="#">AT-288</a>		

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
28	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D2 → D3 , 22 → 33 or M2 → M3 .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192,</a> <a href="#">AT-166</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Line pressure test	<a href="#">AT-63</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>
				8. Oil pump assembly	<a href="#">AT-305</a>
				9. 3rd one-way clutch	<a href="#">AT-307</a>
				10. Gear system	<a href="#">AT-276</a>
				11. High and low reverse clutch	<a href="#">AT-320</a>
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
29	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D3 → D4 , 33 → 44 or M3 → M4 .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186,</a> <a href="#">AT-148</a>
				4. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183,</a> <a href="#">AT-154</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Line pressure test	<a href="#">AT-63</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>
				9. Oil pump assembly	<a href="#">AT-305</a>
				10. Input clutch	<a href="#">AT-310</a>
				11. Gear system	<a href="#">AT-276</a>
				12. High and low reverse clutch	<a href="#">AT-320</a>
				13. Direct clutch	<a href="#">AT-322</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
30	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D4 → D5 , 44 → D5 or M4 → M5 .	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	A
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>	B
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183,</a> <a href="#">AT-154</a>	AT
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189,</a> <a href="#">AT-160</a>	
				5. CAN communication line	<a href="#">AT-107</a>	D
				6. Line pressure test	<a href="#">AT-63</a>	
				7. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>	E
				9. Oil pump assembly	<a href="#">AT-305</a>	
				10. Front brake (brake band)	<a href="#">AT-288</a>	F
				11. Input clutch	<a href="#">AT-310</a>	
				12. Gear system	<a href="#">AT-276</a>	G
				13. High and low reverse clutch	<a href="#">AT-320</a>	
31	Slips/Will Not engage	When you press the accelerator pedal and shift speed D5 → D4 , D5 → 44 or M5 →M4 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	H
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116,</a> <a href="#">AT-140</a>	
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183,</a> <a href="#">AT-154</a>	I
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189,</a> <a href="#">AT-160</a>	
				5. CAN communication line	<a href="#">AT-107</a>	J
				6. Line pressure test	<a href="#">AT-63</a>	
				7. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>	K
				9. Oil pump assembly	<a href="#">AT-305</a>	
				10. Input clutch	<a href="#">AT-310</a>	L
				11. Gear system	<a href="#">AT-276</a>	
				12. High and low reverse clutch	<a href="#">AT-320</a>	M
				13. Direct clutch	<a href="#">AT-322</a>	

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
32	Slips/Will Not engage	When you press the accelerator pedal and shift speed D4 → D3 , 44 → 33 or M4 →M3 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186</a> , <a href="#">AT-148</a>
				4. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183</a> , <a href="#">AT-154</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Line pressure test	<a href="#">AT-63</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>
				9. Oil pump assembly	<a href="#">AT-305</a>
				10. 3rd one-way clutch	<a href="#">AT-307</a>
				11. Gear system	<a href="#">AT-276</a>
				12. High and low reverse clutch	<a href="#">AT-320</a>
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
33	Slips/Will Not engage	When you press the accelerator pedal and shift speed D3 → D2 , 33 → 22 or M3 →M2 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192</a> , <a href="#">AT-166</a>
				4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189</a> , <a href="#">AT-160</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. Line pressure test	<a href="#">AT-63</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>
				9. Oil pump assembly	<a href="#">AT-305</a>
				10. 3rd one-way clutch	<a href="#">AT-307</a>
				11. Gear system	<a href="#">AT-276</a>
				12. Direct clutch	<a href="#">AT-322</a>
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
34	Slips/Will Not Engage	When you press the accelerator pedal and shift speed D2 → D1 , 22 → 11 or M2 →M1 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				3. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189</a> , <a href="#">AT-160</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Line pressure test	<a href="#">AT-63</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>
				8. Oil pump assembly	<a href="#">AT-305</a>
				9. 3rd one-way clutch	<a href="#">AT-307</a>
				10. 1st one-way clutch	<a href="#">AT-315</a>
				11. Gear system	<a href="#">AT-276</a>
				12. Reverse brake	<a href="#">AT-288</a>
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
35	With selector lever in D position, acceleration is extremely poor.		ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. PNP switch	<a href="#">AT-113</a>
				6. Control cable adjustment	<a href="#">AT-243</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>
				9. Oil pump assembly	<a href="#">AT-305</a>
				10. 1st one-way clutch	<a href="#">AT-315</a>
				11. Gear system	<a href="#">AT-276</a>
				12. Reverse brake	<a href="#">AT-288</a>
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
36		With selector lever in R position, acceleration is extremely poor.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192</a> , <a href="#">AT-166</a>
				5. CAN communication line	<a href="#">AT-107</a>
				6. PNP switch	<a href="#">AT-113</a>
				7. Control cable adjustment	<a href="#">AT-243</a>
				8. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	9. Gear system	<a href="#">AT-276</a>
				10. Output shaft	<a href="#">AT-288</a>
				11. Reverse brake	<a href="#">AT-288</a>
37	Slips/Will Not Engage	While starting off by accelerating in 1st, engine races or slip-page occurs.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	6. Torque converter	<a href="#">AT-288</a>
				7. Oil pump assembly	<a href="#">AT-305</a>
				8. 3rd one-way clutch	<a href="#">AT-307</a>
				9. 1st one-way clutch	<a href="#">AT-315</a>
				10. Gear system	<a href="#">AT-276</a>
				11. Reverse brake	<a href="#">AT-288</a>
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
38		While accelerating in 2nd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189</a> , <a href="#">AT-160</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>
				8. Oil pump assembly	<a href="#">AT-305</a>
				9. 3rd one-way clutch	<a href="#">AT-307</a>
				10. Gear system	<a href="#">AT-276</a>
				11. Direct clutch	<a href="#">AT-322</a>
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
39	Slips/Will Not Engage	While accelerating in 3rd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	A
				2. Line pressure test	<a href="#">AT-63</a>	B
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>	
				4. CAN communication line	<a href="#">AT-107</a>	
				5. ATF pressure switch 6, high and low reverse clutch solenoid valve	<a href="#">AT-192</a> , <a href="#">AT-166</a>	AT
				6. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>	D
				8. Oil pump assembly	<a href="#">AT-305</a>	
				9. 3rd one-way clutch	<a href="#">AT-307</a>	E
				10. Gear system	<a href="#">AT-276</a>	
				11. High and low reverse clutch	<a href="#">AT-320</a>	
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	F
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	G
40		While accelerating in 4th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	H
				2. Line pressure test	<a href="#">AT-63</a>	
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>	
				4. CAN communication line	<a href="#">AT-107</a>	I
				5. ATF pressure switch 3 and input clutch solenoid valve	<a href="#">AT-186</a> , <a href="#">AT-148</a>	
				6. Control valve with TCM	<a href="#">AT-255</a>	J
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>	
				8. Oil pump assembly	<a href="#">AT-305</a>	
				9. Input clutch	<a href="#">AT-310</a>	K
				10. Gear system	<a href="#">AT-276</a>	
				11. High and low reverse clutch	<a href="#">AT-320</a>	L
				12. Direct clutch	<a href="#">AT-322</a>	

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page				
41		While accelerating in 5th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>				
				2. Line pressure test	<a href="#">AT-63</a>				
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>				
				4. CAN communication line	<a href="#">AT-107</a>				
				5. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183,</a> <a href="#">AT-154</a>				
				6. Control valve with TCM	<a href="#">AT-255</a>				
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>				
				8. Oil pump assembly	<a href="#">AT-305</a>				
				9. Front brake (brake band)	<a href="#">AT-288</a>				
				10. Input clutch	<a href="#">AT-310</a>				
				11. Gear system	<a href="#">AT-276</a>				
				12. High and low reverse clutch	<a href="#">AT-320</a>				
42	Slips/Will Not Engage	Slips at lock-up.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>				
				2. Line pressure test	<a href="#">AT-63</a>				
				3. Engine speed signal	<a href="#">AT-119</a>				
				4. Turbine revolution sensor	<a href="#">AT-137</a>				
				5. Torque converter clutch solenoid valve	<a href="#">AT-121</a>				
				6. CAN communication line	<a href="#">AT-107</a>				
				7. Control valve with TCM	<a href="#">AT-255</a>				
			OFF vehicle	8. Torque converter	<a href="#">AT-288</a>				
				9. Oil pump assembly	<a href="#">AT-305</a>				
				43		No creep at all. Refer to <a href="#">AT-206</a> , " <a href="#">Vehicle Does Not Creep Backward In "R" Position</a> ", <a href="#">AT-209</a> , " <a href="#">Vehicle Does Not Creep Forward In "D" Position</a> "	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
								2. Line pressure test	<a href="#">AT-63</a>
								3. Accelerator pedal position sensor	<a href="#">AT-132</a>
4. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189,</a> <a href="#">AT-160</a>								
5. PNP switch	<a href="#">AT-113</a>								
6. CAN communication line	<a href="#">AT-107</a>								
7. Control cable adjustment	<a href="#">AT-243</a>								
8. Control valve with TCM	<a href="#">AT-255</a>								
OFF vehicle	9. Torque converter	<a href="#">AT-288</a>							
	10. Oil pump assembly	<a href="#">AT-305</a>							
	11. 1st one-way clutch	<a href="#">AT-315</a>							
	12. Gear system	<a href="#">AT-276</a>							
	13. Reverse brake	<a href="#">AT-288</a>							
	14. Direct clutch	<a href="#">AT-322</a>							
	15. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>							
	16. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>							

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
44		Vehicle cannot run in all positions.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. PNP switch	<a href="#">AT-113</a>
				4. Control cable adjustment	<a href="#">AT-243</a>
				5. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	6. Oil pump assembly	<a href="#">AT-305</a>
				7. Gear system	<a href="#">AT-276</a>
				8. Output shaft	<a href="#">AT-288</a>
45	Slips/Will Not Engage	With selector lever in D position, driving is not possible.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. PNP switch	<a href="#">AT-113</a>
				4. Control cable adjustment	<a href="#">AT-243</a>
				5. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	6. Torque converter	<a href="#">AT-288</a>
				7. Oil pump assembly	<a href="#">AT-305</a>
				8. 1st one-way clutch	<a href="#">AT-315</a>
				9. Gear system	<a href="#">AT-276</a>
				10. Reverse brake	<a href="#">AT-288</a>
				11. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
46		With selector lever in R position, driving is not possible.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. PNP switch	<a href="#">AT-113</a>
				4. Control cable adjustment	<a href="#">AT-243</a>
				5. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	6. Gear system	<a href="#">AT-276</a>
				7. Output shaft	<a href="#">AT-288</a>
				8. Reverse brake	<a href="#">AT-288</a>
47	Others	Shift point is high in D position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				2. Accelerator pedal position sensor	<a href="#">AT-132</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. ATF temperature sensor	<a href="#">AT-134</a>
				5. Control valve with TCM	<a href="#">AT-255</a>

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
48		Shift point is low in D position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				2. Accelerator pedal position sensor	<a href="#">AT-132</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. Control valve with TCM	<a href="#">AT-255</a>
49		Judder occurs during lock-up.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Engine speed signal	<a href="#">AT-119</a>
				3. Turbine revolution sensor	<a href="#">AT-137</a>
				4. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
			OFF vehicle	5. Accelerator pedal position sensor	<a href="#">AT-132</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Torque converter clutch solenoid valve	<a href="#">AT-121</a>
				8. Control valve with TCM	<a href="#">AT-255</a>
				9. Torque converter	<a href="#">AT-288</a>
50	Others	Strange noise in "R" position.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Engine speed signal	<a href="#">AT-119</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	5. Torque converter	<a href="#">AT-288</a>
				6. Oil pump assembly	<a href="#">AT-305</a>
				7. Gear system	<a href="#">AT-276</a>
				8. High and low reverse clutch	<a href="#">AT-320</a>
				9. Reverse brake	<a href="#">AT-288</a>
51		Strange noise in "N" position.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Engine speed signal	<a href="#">AT-119</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	5. Torque converter	<a href="#">AT-288</a>
				6. Oil pump assembly	<a href="#">AT-305</a>
				7. Gear system	<a href="#">AT-276</a>
52		Strange noise in "D" position.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Engine speed signal	<a href="#">AT-119</a>
				3. CAN communication line	<a href="#">AT-107</a>
				4. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	5. Torque converter	<a href="#">AT-288</a>
				6. Oil pump assembly	<a href="#">AT-305</a>
				7. Gear system	<a href="#">AT-276</a>
				8. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
53		Vehicle dose not decelerate by engine brake. Refer to <a href="#">AT-238</a> . <a href="#">"Vehicle Does Not Decelerate By Engine Brake"</a> .	ON vehicle	1. PNP switch	<a href="#">AT-113</a>
				2. Fluid level and state	<a href="#">AT-62</a>
				3. Control cable adjustment	<a href="#">AT-243</a>
				4. 1st position switch	<a href="#">AT-238</a>
				5. ATF pressure switch 5	<a href="#">AT-189</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Input clutch	<a href="#">AT-310</a>
				9. High and low reverse clutch	<a href="#">AT-320</a>
				10. Direct clutch	<a href="#">AT-322</a>
54	Others	Engine brake does not operate in "2" position.	ON vehicle	1. PNP switch	<a href="#">AT-113</a>
				2. Fluid level and state	<a href="#">AT-62</a>
				3. Control cable adjustment	<a href="#">AT-243</a>
				5. ATF pressure switch 6	<a href="#">AT-192</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
				OFF vehicle	8. Front brake (brake band)
			9. Input clutch		<a href="#">AT-310</a>
			10. High and low reverse clutch		<a href="#">AT-320</a>
			55		Engine brake does not operate in "1" position.
2. Fluid level and state	<a href="#">AT-62</a>				
3. Control cable adjustment	<a href="#">AT-243</a>				
4. 1st position switch	<a href="#">AT-238</a>				
5. ATF pressure switch 5	<a href="#">AT-189</a>				
6. CAN communication line	<a href="#">AT-107</a>				
7. Control valve with TCM	<a href="#">AT-255</a>				
OFF vehicle	8. Input clutch	<a href="#">AT-310</a>			
	9. High and low reverse clutch	<a href="#">AT-320</a>			
	10. Direct clutch	<a href="#">AT-322</a>			

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
56		Maximum speed low.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. Line pressure test	<a href="#">AT-63</a>
				3. Accelerator pedal position sensor	<a href="#">AT-132</a>
				4. CAN communication line	<a href="#">AT-107</a>
				5. Direct clutch solenoid valve	<a href="#">AT-160</a>
				6. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>
				8. Oil pump assembly	<a href="#">AT-305</a>
				9. Input clutch	<a href="#">AT-310</a>
				10. Gear system	<a href="#">AT-276</a>
				11. High and low reverse clutch	<a href="#">AT-320</a>
				12. Direct clutch	<a href="#">AT-322</a>
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
				14 Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>
57	Others	Extremely large creep.	ON vehicle	1. Engine idle speed	<a href="#">EC-32</a>
				2. CAN communication line	<a href="#">AT-107</a>
				3. ATF pressure switch 5	<a href="#">AT-189</a>
			OFF vehicle	4. Torque converter	<a href="#">AT-288</a>
58		With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled. Refer to <a href="#">AT-201</a> , " <a href="#">In "P" Position, Vehicle Moves When Pushed</a> " .	ON vehicle	1. PNP switch	<a href="#">AT-113</a>
				2. Control cable adjustment	<a href="#">AT-243</a>
				3. Parking pawl components	<a href="#">AT-276</a>
59		Vehicle runs with transmission in " P" position.	ON vehicle	1. PNP switch	<a href="#">AT-113</a>
				2. Fluid level and state	<a href="#">AT-62</a>
				3. Control cable adjustment	<a href="#">AT-243</a>
				4. Control valve with TCM	<a href="#">AT-255</a>
				5. Parking pawl components	<a href="#">AT-276</a>
			OFF vehicle	6. Gear system	<a href="#">AT-276</a>

# TROUBLE DIAGNOSIS


No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
60	Others	Vehicle runs with transmission in "N" position. Refer to <a href="#">AT-202, "In "N" Position, Vehicle Moves"</a> .	ON vehicle	1. PNP switch	<a href="#">AT-113</a>	A
				2. Fluid level and state	<a href="#">AT-62</a>	B
				3. Control cable adjustment	<a href="#">AT-243</a>	
				4. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	5. Input clutch	<a href="#">AT-310</a>	AT
				6. Gear system	<a href="#">AT-276</a>	
				7. Direct clutch	<a href="#">AT-322</a>	D
				8. Reverse brake	<a href="#">AT-288</a>	E
				9. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	F
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to <a href="#">AT-18</a> , <a href="#">AT-19</a> .)	<a href="#">AT-288</a>	
61	Others	Engine does not start in "N" or "P" position. Refer to <a href="#">AT-200, "Engine Cannot Be Started In "P" or "N" Position"</a> .	ON vehicle	1. Ignition switch and starter	<a href="#">PG-4, SC-10</a>	G
				2. Control cable adjustment	<a href="#">AT-243</a>	
				3. PNP switch	<a href="#">AT-113</a>	H
62	Others	Engine starts in positions other than "N" or "P".	ON vehicle	1. Ignition switch and starter	<a href="#">PG-4, SC-10</a>	I
				2. Control cable adjustment	<a href="#">AT-243</a>	
				3. PNP switch	<a href="#">AT-113</a>	J
63	Others	Engine stall.	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	K
				2. Engine speed signal	<a href="#">AT-119</a>	
				3. Turbine revolution sensor	<a href="#">AT-137</a>	
				4. Torque converter clutch solenoid valve	<a href="#">AT-121</a>	
				5. CAN communication line	<a href="#">AT-107</a>	
				6. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>	L
64	Others	Engine stalls when select lever shifted "N" → "D", "R".	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>	M
				2. Engine speed signal	<a href="#">AT-119</a>	
				3. Turbine revolution sensor	<a href="#">AT-137</a>	
				4. Torque converter clutch solenoid valve	<a href="#">AT-121</a>	
				5. CAN communication line	<a href="#">AT-107</a>	
				6. Control valve with TCM	<a href="#">AT-255</a>	
			OFF vehicle	7. Torque converter	<a href="#">AT-288</a>	

# TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
65	Others	Engine speed does not return to idle. Refer to <a href="#">AT-228</a> , " <a href="#">Engine Speed Does Not Return To Idle</a> ".	ON vehicle	1. Fluid level and state	<a href="#">AT-62</a>
				2. ATF pressure switch 5 and direct clutch solenoid valve	<a href="#">AT-189</a> , <a href="#">AT-160</a>
				3. ATF pressure switch 1 and front brake solenoid valve	<a href="#">AT-183</a> , <a href="#">AT-154</a>
				4. Accelerator pedal position sensor	<a href="#">AT-132</a>
				5. Vehicle speed sensor A/T and vehicle speed sensor MTR	<a href="#">AT-116</a> , <a href="#">AT-140</a>
				6. CAN communication line	<a href="#">AT-107</a>
				7. Control valve with TCM	<a href="#">AT-255</a>
			OFF vehicle	8. Front brake (brake band)	<a href="#">AT-288</a>
			9. Direct clutch	<a href="#">AT-322</a>	

## TCM Input/Output Signal Reference Values A/T ASSEMBLY TERMINAL CONNECTOR LAYOUT

UCS002UD

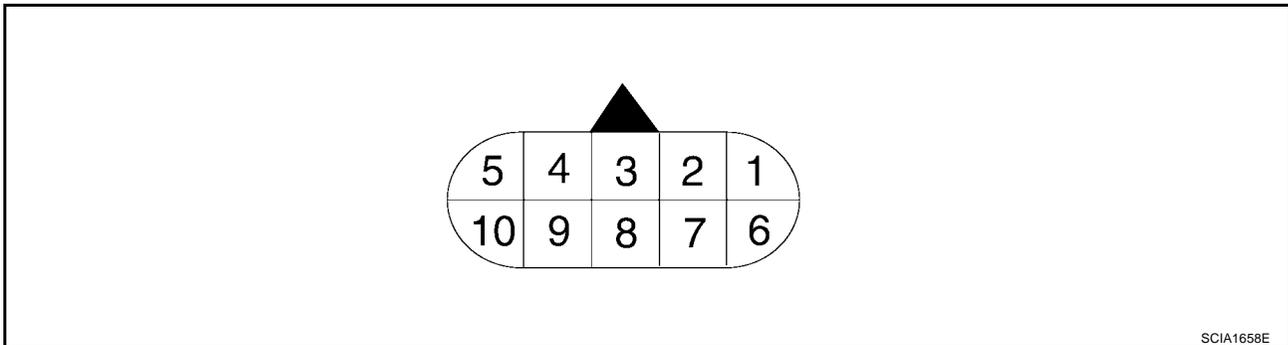

## TCM INSPECTION TABLE

Data are reference value and are measured between each terminal and ground.

Terminal No.	Wire color	Item	Condition	Data (Approx.)
1	P	Power supply (Memory back-up)	Always	Battery voltage
2	P	Power supply (Memory back-up)	Always	Battery voltage
3	W	CAN H	-	-
4	V	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.	
5	B	Ground	Always	0V
6	Y/R	Power supply		-
				0V
7	R	Back-up lamp relay		Selector lever in "R" position.
				Selector lever in other positions.
8	R	CAN L	-	-

# TROUBLE DIAGNOSIS

Terminal No.	Wire color	Item	Condition	Data (Approx.)	
9	B/R	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0V
10	B	Ground	Always	0V	

## CONSULT-II

UCS002NN

After performing "SELF-DIAGNOSTIC PROCEDURE (WITH CONSULT-II)" (Refer to [AT-97](#) ), place check marks for results on the [AT-50, "DIAGNOSTIC WORKSHEET"](#) . Reference pages are provided following the items.

### NOTICE:

- The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).  
Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
  - Actual shift schedule has more or less tolerance or allowance,
  - Shift schedule indicated in Service Manual refers to the point where shifts start, and
  - Gear position displayed on CONSULT-II indicates the point where shifts are completed.
- Display of solenoid valves on CONSULT-II changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).
- Additional CONSULT-II information can be found in the Operation Manual supplied with the CONSULT-II unit.

## FUNCTION

Diagnostic test mode	Function	Reference page
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	<a href="#">AT-97</a>
Data monitor	Input/Output data in the ECM can be read.	<a href="#">AT-101</a>
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	—
Function test	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	—
DTC work support	Select the operating condition to confirm Diagnosis Trouble Codes.	<a href="#">AT-104</a>
ECU part number	ECU part number can be read.	—

## CONSULT-II REFERENCE VALUE

Item name	Condition	Display value (Approx.)
ATF TEMP SE 1	0°C (32° F) - 20°C (68°F) - 80°C (176°F)	2.2 - 1.8 - 0.6 V
ATF TEMP SE 2		2.2 - 1.7 - 0.45 V
TCC SOLENOID	When perform slip lock-up	0.2 - 0.4 A
	When perform lock-up	0.4 - 0.6 A
SLCT LVR POSI	Selector lever in "N","P" position.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D
	Selector lever in "4" position.	4
	Selector lever in "3" position.	3
	Selector lever in "2" position.	2
	Selector lever in "1" position.	1

# TROUBLE DIAGNOSIS

Item name	Condition	Display value (Approx.)
VHCL/S SE·A/T	During driving	Approximately matches the speedometer reading.
ENGINE SPEED	Engine running	Closely matches the tachometer reading.
LINE PRES SOL	During driving	0.2 - 0.6 A
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.
VHCL/S SE·MTR	During driving	Approximately matches the speedometer reading.
ATF PRES SW 1	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
ATF PRES SW 3	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
ATF PRES SW 5	Direct clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	Direct clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
ATF PRES SW 6	High and low reverse clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	High and low reverse clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
I/C SOLENOID	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0.6 - 0.8 A
	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0 - 0.05 A
FR/B SOLENOID	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0.6 - 0.8 A
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0 - 0.05 A
D/C SOLENOID	Direct clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0.6 - 0.8 A
	Direct clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0 - 0.05 A
HLR/C SOL	High and low reverse clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0.6 - 0.8 A
	High and low reverse clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	0 - 0.05 A
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a>	OFF
STARTER RELAY	Selector lever in "N", "P" position.	ON
	Selector lever in other position.	OFF
ACCELE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8
THROTTLE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8
CLSD THL POS	Released accelerator pedal.	ON
	Fully depressed accelerator pedal.	OFF
W/O THL POS	Fully depressed accelerator pedal.	ON
	Released accelerator pedal.	OFF
BRAKE SW	Depressed brake pedal.	ON
	Released brake pedal.	OFF


# TROUBLE DIAGNOSIS

## CONSULT-II SETTING PROCEDURE


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- For details, refer to the separate "CONSULT-II Operations Manual".
- Turn ignition switch "OFF".
  - Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument lower panel on driver side.

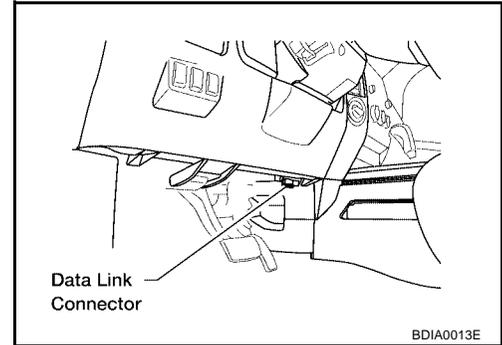

- Turn ignition switch "ON". (Do not start engine.)
- Touch "START (NISSAN BASED VHCL)".

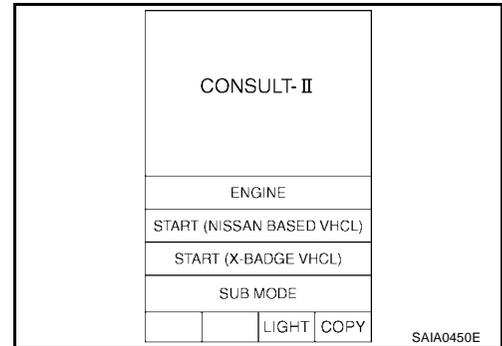


- Touch "A/T".  
If "A/T" or "ENGINE" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).
- Perform each diagnostic test mode according to each service procedure.

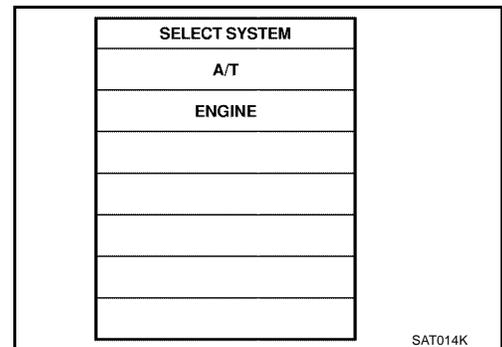

## SELF-DIAGNOSTIC RESULT MODE

### Operation Procedure

- Perform "CONSULT-II SETTING PROCEDURE". Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#).
- Touch "SELF-DIAG RESULTS".  
Display shows malfunction experienced since the last erasing operation.

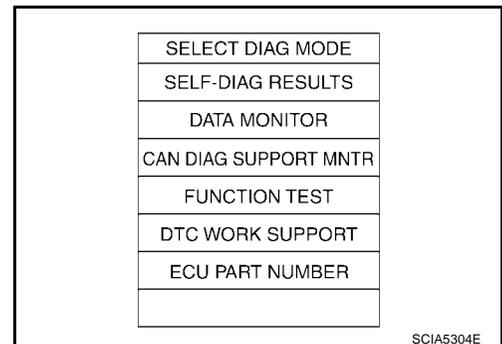

# TROUBLE DIAGNOSIS

## Display Items List

X: Applicable, —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
CAN COMM CIRCUIT	<ul style="list-style-type: none"> <li>When a malfunction is detected in CAN communications</li> </ul>	U1000	U1000
STARTER RELAY/CIRC	<ul style="list-style-type: none"> <li>If this signal is ON other than in P or N position, this is judged to be a malfunction. (And if it is OFF in P or N position, this too is judged to be a malfunction.)</li> </ul>	P0615	—
TCM	<ul style="list-style-type: none"> <li>TCM is malfunctioning</li> </ul>	P0700	P0700
PNP SW/CIRC	<ul style="list-style-type: none"> <li>PNP switch 1-4 signals input with impossible pattern</li> <li>P position is detected from N position without any other position being detected in between.</li> </ul>	P0705	P0705
VEH SPD SEN/CIR AT (Revolution sensor)	<ul style="list-style-type: none"> <li>Signal from vehicle speed sensor A/T (Revolution sensor) not input due to cut line or the like</li> <li>Unexpected signal input during running</li> <li>After ignition switch is turned ON, unexpected signal input from vehicle speed sensor MTR before the vehicle starts moving</li> </ul>	P0720	P0720
ENGINE SPEED SIG	<ul style="list-style-type: none"> <li>TCM does not receive the CAN communication signal from the ECM.</li> </ul>	P0725	—
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> <li>Normal voltage not applied to solenoid due to cut line, short, or the like</li> </ul>	P0740	P0740
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> <li>A/T cannot perform lock-up even if electrical circuit is good.</li> <li>TCM detects as irregular by comparing difference value with slip rotation.</li> </ul>	P0744	P0744*2
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> <li>Normal voltage not applied to solenoid due to cut line, short, or the like</li> <li>TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P0745	P0745
TCM-RAM	<ul style="list-style-type: none"> <li>TCM memory (RAM) is malfunctioning.</li> </ul>	P1702	—
TCM-ROM	<ul style="list-style-type: none"> <li>TCM memory (ROM) is malfunctioning.</li> </ul>	P1703	—
TP SEN/CIRC A/T	<ul style="list-style-type: none"> <li>TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.</li> </ul>	P1705	—
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> <li>During running, the ATF temperature sensor signal voltage is excessively high or low</li> </ul>	P1710	P0710
TURBINE REV S/CIRC	<ul style="list-style-type: none"> <li>TCM does not receive the proper voltage signal from the sensor.</li> <li>TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2.</li> </ul>	P1716	P1716
VEH SPD SE/CIR-MTR	<ul style="list-style-type: none"> <li>Signal (CAN communication) from vehicle speed sensor MTR not input due to cut line or the like</li> <li>Unexpected signal input during running</li> </ul>	P1721	—
A/T INTERLOCK	<ul style="list-style-type: none"> <li>Except during shift change, the gear position and ATF pressure switch states are monitored and comparative judgement made.</li> </ul>	P1730	P1730
A/T 1ST E/BRAKING	<ul style="list-style-type: none"> <li>Each ATF pressure switch and solenoid current is monitored and if a pattern is detected having engine braking 1st gear other than in the "M1" or "1" position, a malfunction is detected.</li> </ul>	P1731	—

# TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)	A
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST	B
I/C SOLENOID/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P1752	P1752	AT
I/C SOLENOID FNCTN	<ul style="list-style-type: none"> <li>● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)</li> <li>● TCM detects that relation between gear position and condition of ATF pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change)</li> </ul>	P1754	P1754*2	D E
FR/B SOLENOID/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P1757	P1757	F G
FR/B SOLENOID FNCT	<ul style="list-style-type: none"> <li>● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)</li> <li>● TCM detects that relation between gear position and condition of ATF pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change)</li> </ul>	P1759	P1759*2	H I
D/C SOLENOID/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to cut line, short, or the like</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P1762	P1762	J
D/C SOLENOID FNCTN	<ul style="list-style-type: none"> <li>● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)</li> <li>● TCM detects that relation between gear position and condition of ATF pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change)</li> </ul>	P1764	P1764*2	K L
HLR/C SOL/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like</li> <li>● TCM detects as irregular by comparing target value with monitor value.</li> </ul>	P1767	P1767	M
HLR/C SOL FNCTN	<ul style="list-style-type: none"> <li>● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)</li> <li>● TCM detects that relation between gear position and condition of ATF pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change)</li> </ul>	P1769	P1769*2	
LC/B SOLENOID/CIRC	<ul style="list-style-type: none"> <li>● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like</li> </ul>	P1772	P1772	
LC/B SOLENOID FNCT	<ul style="list-style-type: none"> <li>● TCM detects an improper voltage drop when it tries to operate the solenoid valve.</li> <li>● Condition of ATF pressure switch 2 is different from monitor value, and relation between gear position and actual gear ratio is irregular.</li> </ul>	P1774	P1774*2	

# TROUBLE DIAGNOSIS


Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST
MANU MODE SW/CIRC	<ul style="list-style-type: none"> <li>When an impossible pattern of switch signals is detected, a malfunction is detected.</li> </ul>	P1815	—
ATF PRES SW 1/CIRC	<ul style="list-style-type: none"> <li>TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)</li> </ul>	P1841	—
ATF PRES SW 3/CIRC	<ul style="list-style-type: none"> <li>TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)</li> </ul>	P1843	—
ATF PRES SW 5/CIRC	<ul style="list-style-type: none"> <li>TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)</li> </ul>	P1845	—
ATF PRES SW 6/CIRC	<ul style="list-style-type: none"> <li>TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)</li> </ul>	P1846	—
NO DTC IS DETECTED FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> <li>No NG item has been detected.</li> </ul>	X	X

\*1: Refer to [AT-45, "Malfunction Indicator Lamp \(MIL\)"](#) .


\*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

## How to Erase Self-diagnostic Results

- Perform "CONSULT-II SETTING PROCEDURE". Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#) .
- Touch "SELF-DAIG RESULTS".

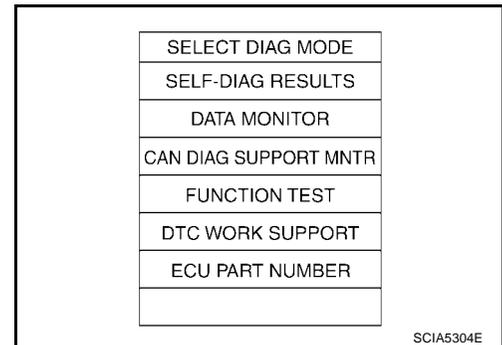

- Touch "ERASE". (The self-diagnostic results will be erased.)

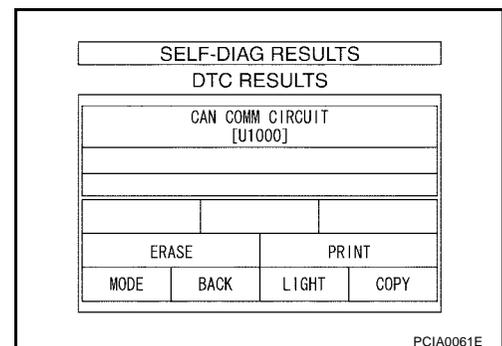

# TROUBLE DIAGNOSIS


## DATA MONITOR MODE

### Operation Procedure

1. Perform "CONSULT-II SETTING PROCEDURE". Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#)
2. Touch "DATA MONITOR".

**NOTE:**

When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.

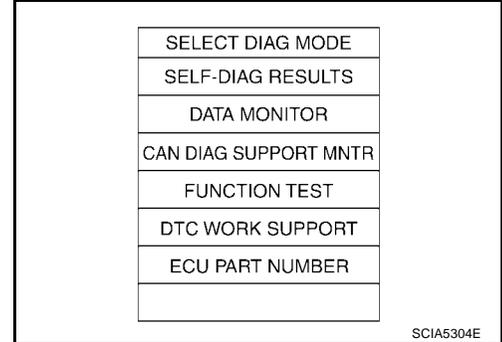

### Display Items List

X: Standard, —: Not applicable

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VHCL/S SE-A/T (km/h)	X	X	X	Revolution sensor
VHCL/S SE-MTR (km/h)	X	—	X	
ACCELE POSI (0.0/8)	X	—	X	Accelerator pedal position signal
THROTTLE POSI (0.0/8)	X	X	X	Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed.
CLSD THL POS (ON-OFF display)	X	—	X	Signal input with CAN communications
W/O THL POS (ON-OFF display)	X	—	X	
BRAKE SW (ON-OFF display)	X	—	X	Stop lamp switch
GEAR	—	X	X	Gear position recognized by the TCM updated after gear-shifting
ENGINE SPEED (rpm)	X	X	X	
TURBINE REV (rpm)	X	X	X	
OUTPUT REV (rpm)	X	X	X	
GEAR RATIO	—	X	X	
TC SLIP SPEED (rpm)	—	X	X	Difference between engine speed and torque converter input shaft speed
F SUN GW REV (rpm)	—	—	X	
F CARR GR REV (rpm)	—	—	X	
ATF TEMP SE 1 (V)	X	—	X	
ATF TEMP SE 2 (V)	X	—	X	
ATF TEMP 1 (°C)	—	X	X	
ATF TEMP 2 (°C)	—	X	X	
BATTERY VOLT (V)	X	—	X	
ATF PRES SW 1 (ON-OFF display)	X	X	X	(for FR/B solenoid)
ATF PRES SW 2 (ON-OFF display)	X	X	X	(for LC/B solenoid)
ATF PRES SW 3 (ON-OFF display)	X	X	X	(for I/C solenoid)

# TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
ATF PRES SW 5 (ON-OFF display)	X	X	X	(for D/C solenoid)
ATF PRES SW 6 (ON-OFF display)	X	X	X	(for HLR/C solenoid)
PNP SW 1 (ON-OFF display)	X	—	X	
PNP SW 2 (ON-OFF display)	X	—	X	
PNP SW 3 (ON-OFF display)	X	—	X	
PNP SW 4 (ON-OFF display)	X	—	X	
1 POSITION SW (ON-OFF display)	X	—	X	
SLCTLVR POSI	—	X	X	Selector lever position is recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.
OD CONT SW (ON-OFF display)	X	—	X	4th position switch
POWER SHIFT SW (ON-OFF display)	X	—	X	Not mounted but displayed.
HOLD SW (ON-OFF display)	X	—	X	
MANU MODE SW (ON-OFF display)	X	—	X	
NON M-MODE SW (ON-OFF display)	X	—	X	
UP SW LEVER (ON-OFF display)	X	—	X	
DOWN SW LEVER (ON-OFF display)	X	—	X	
SFT UP ST SW (ON-OFF display)	—	—	X	Not mounted but displayed.
SFT DWN ST SW (ON-OFF display)	—	—	X	
ASCD-OD CUT (ON-OFF display)	—	—	X	
ASCD-CRUISE (ON-OFF display)	—	—	X	
ABS SIGNAL (ON-OFF display)	—	—	X	
ACC OD CUT (ON-OFF display)	—	—	X	
ACC SIGNAL (ON-OFF display)	—	—	X	
TCS GR/P KEEP (ON-OFF display)	—	—	X	
TCS SIGNAL 2 (ON-OFF display)	—	—	X	
TCS SIGNAL 1 (ON-OFF display)	—	—	X	
TCC SOLENOID (A)	—	X	X	
LINE PRES SOL (A)	—	X	X	
I/C SOLENOID (A)	—	X	X	
FR/B SOLENOID (A)	—	X	X	
D/C SOLENOID (A)	—	X	X	
HLR/C SOL (A)	—	X	X	
ON OFF SOL (ON-OFF display)	—	—	X	LC/B solenoid
TCC SOL MON (A)	—	—	X	
L/P SOL MON (A)	—	—	X	
I/C SL MON (A)	—	—	X	
FR/B SOL MON (A)	—	—	X	
D/C SOL MON (A)	—	—	X	
HLR/C SOL MON (A)	—	—	X	
ONOFF SOL MON (ON-OFF display)	—	—	X	LC/B solenoid
P POSI IND (ON-OFF display)	—	—	X	

# TROUBLE DIAGNOSIS


Monitored item (Unit)	Monitor Item Selection			Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU		
R POSI IND (ON-OFF display)	—	—	X		A
N POSI IND (ON-OFF display)	—	—	X		B
D POSI IND (ON-OFF display)	—	—	X		AT
4TH POSI IND (ON-OFF display)	—	—	X		
3RD POSI IND (ON-OFF display)	—	—	X		
2ND POSI IND (ON-OFF display)	—	—	X		D
1ST POSI IND (ON-OFF display)	—	—	X		
MANU MODE IND (ON-OFF display)	—	—	X		E
POWER M LAMP (ON-OFF display)	—	—	X		
F-SAFE IND/L (ON-OFF display)	—	—	X		
ATF WARN LAMP (ON-OFF display)	—	—	X		F
BACK-UP LAMP (ON-OFF display)	—	—	X		
STARTER RELAY (ON-OFF display)	—	—	X		
PNP SW3 MON (ON-OFF display)	—	—	X		G
C/V CLB ID1	—	—	X		
C/V CLB ID2	—	—	X		H
C/V CLB ID3	—	—	X		
UNIT CLB ID1	—	—	X		
UNIT CLB ID2	—	—	X		I
UNIT CLB ID3	—	—	X		
TRGT GR RATIO	—	—	X		J
TRGT PRES TCC (kPa)	—	—	X		
TRGT PRES L/P (kPa)	—	—	X		
TRGT PRES I/C (kPa)	—	—	X		K
TRGT PRES FR/B (kPa)	—	—	X		
TRGT PRES D/C (kPa)	—	—	X		L
TRG PRE HLR/C (kPa)	—	—	X		
SHIFT PATTERN	—	—	X		
DRV CST JUDGE	—	—	X		M
START RLY MON	—	—	X		
NEXT GR POSI	—	—	X		
SHIFT MODE	—	—	X		
MANU GR POSI	—	—	X		
VEHICLE SPEED (km/h)	—	X	X	Vehicle speed recognized by the TCM.	
Voltage (V)	—	—	X	Displays the value measured by the voltage probe.	
Frequency (Hz)	—	—	X	The value measured by the pulse probe is displayed.	
DUTY-HI (high) (%)	—	—	X		
DUTY-LOW (low) (%)	—	—	X		
PLS WIDTH-HI (ms)	—	—	X		
PLS WIDTH-LOW (ms)	—	—	X		

# TROUBLE DIAGNOSIS


## DTC WORK SUPPORT MODE

### Operation Procedure


1. Perform "CONSULT-II SETTING PROCEDURE". Refer to [AT-97, "CONSULT-II SETTING PROCEDURE"](#)
2. Touch "DTC WORK SUPPORT".

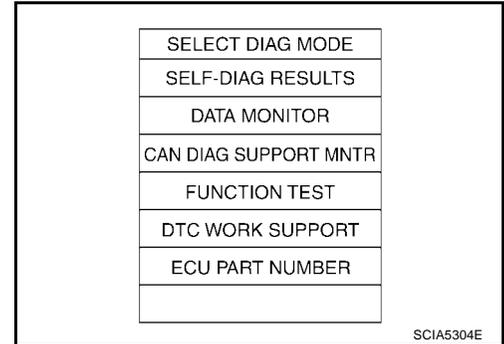


3. Touch select item menu.

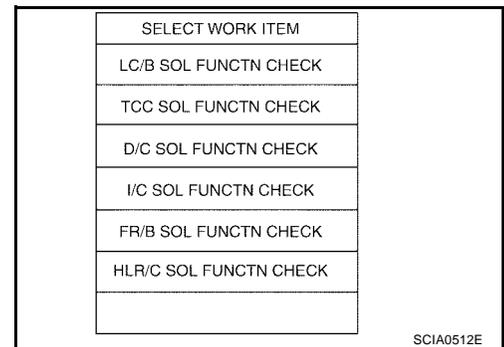

4. Touch "START".

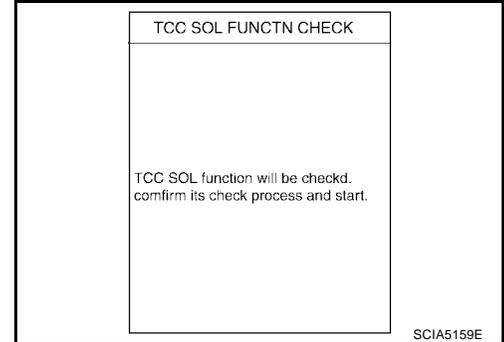

5. Perform driving test according to "DTC CONFIRMATION PROCEDURE" in "TROUBLE DIAGNOSIS FOR DTC".

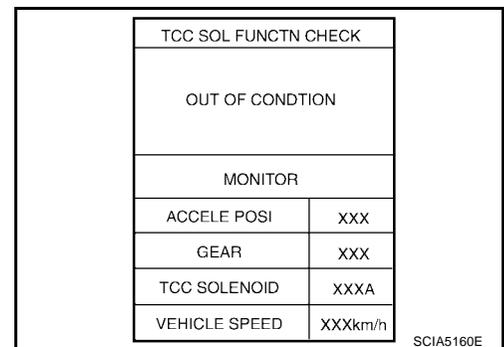

# TROUBLE DIAGNOSIS

- When testing conditions are satisfied, CONSULT-II screen changes from “OUT OF CONDITION” to “TESTING”.

TCC SOL FUNCTN CHECK	
TESTING	
MONITOR	
ACCELE POSI	XXX
GEAR	XXX
TCC SOLENOID	XXXA
VEHICLE SPEED	XXXkm/h
SCIA5161E	

A  
B  
**AT**

6. Stop vehicle.

TCC SOL FUNCTN CHECK	
STOP VEHICLE	
SCIA5164E	

D  
E  
F  
G

- If “NG” appears on the screen, malfunction may exist. Go to “Diagnostic Procedure”.

TCC SOL FUNCTN CHECK	
NG	
SCIA5162E	

H  
I  
J  
K


- Perform test drive to check gear shift feeling in accordance with instructions displayed.
- Touch “YES” or “NO”.
- CONSULT-II procedure is ended.

TCC SOL FUNCTN CHECK	
OK	
SCIA5163E	

L  
M

# TROUBLE DIAGNOSIS

- If “NG” appears on the screen, malfunction may exist. Go to “Diagnostic Procedure”.

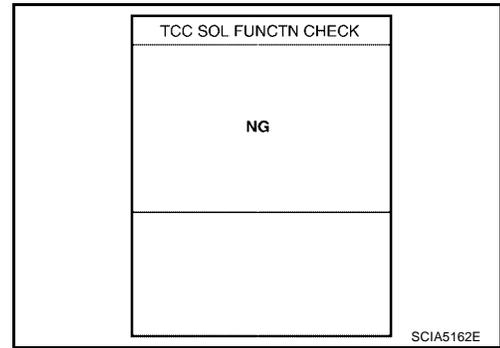

## Display Items List

DTC work support item	Description	Check item
I/C SOL FUNCTN CHECK*	—	—
FR/B SOL FUNCTN CHECK*	—	—
D/C SOL FUNCTN CHECK*	—	—
HLR/C SOL FUNCTN CHECK*	—	—
LC/B SOL FUNCTN CHECK*	—	—
TCC SOL FUNCTN CHECK	<p>Following items for “TCC solenoid function (lock-up) ” can be confirmed.</p> <ul style="list-style-type: none"> <li>● Self-diagnosis status (whether the diagnosis is being performed or not)</li> <li>● Self-diagnosis result (OK or NG)</li> </ul>	<ul style="list-style-type: none"> <li>● TCC solenoid valve</li> <li>● Hydraulic control circuit</li> </ul>

\*: Do not use, but displayed.

# DTC U1000 CAN COMMUNICATION LINE

## DTC U1000 CAN COMMUNICATION LINE

PFP:23710

### Description

UCS002UE

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### On Board Diagnosis Logic

UCS002UF

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "CAN COMM CIRCUIT" with CONSULT-II or U1000 without CONSULT-II is detected when TCM cannot communicate to other control units.

### Possible Cause

UCS002UG

Harness or connectors  
(CAN communication line is open or shorted.)

### DTC Confirmation Procedure

UCS002UH


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [AT-108, "Diagnostic Procedure"](#).

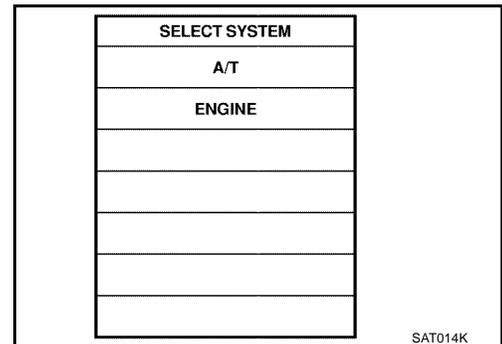

#### ④ WITH GST

Follow the procedure "WITH CONSULT-II".

# DTC U1000 CAN COMMUNICATION LINE

UCS002UI

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION CIRCUIT

#### ④ With CONSULT-II

1. Turn ignition switch "ON" and start engine.
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

YES >> Print out CONSULT-II screen, GO TO LAN section.  
Refer to [LAN-6, "Precautions When Using CONSULT-II"](#)

NO >> **INSPECTION END**

SELF-DIAG RESULTS			
DTC RESULTS			
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

PCIA0061E

# DTC P0615 START SIGNAL CIRCUIT

## DTC P0615 START SIGNAL CIRCUIT

PFP:25230

### Description

UCS002UJ

- TCM controls park/neutral (PNP) relay (starter relay) in IPDM E/R.
- TCM switches PNP relay "ON" at "P" or "N" position and allows to crank engine.
- Then it prohibits cranking other than at "P" or "N" position.

### CONSULT-II Reference Value

UCS002UK

Item name	Condition	Display value
STARTER RELAY	Selector lever in "N", "P" position.	ON
	Selector lever in other position.	OFF

### On Board Diagnosis Logic

UCS002UL

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "STARTER RELAY/CIRC" with CONSULT-II is detected when park/neutral (PNP) relay (starter relay) is switched "ON" other than at "P" or "N" position. (Or when switched "OFF" at "P" or "N" position).

### Possible Cause

UCS002UM

- Harness or connectors  
[The park/neutral position (PNP) relay (starter relay) and TCM circuit is open or shorted.]
- Park/neutral position (PNP) relay (starter relay)

### DTC Confirmation Procedure

UCS002UN


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle for at least 2 consecutive seconds.
5. If DTC is detected, go to [AT-110, "Diagnostic Procedure"](#).

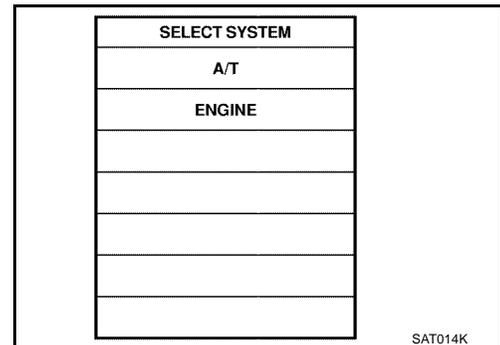

# DTC P0615 START SIGNAL CIRCUIT

UCS002UO


## Diagnostic Procedure

### 1. CHECK STARTER RELAY

#### With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II and check monitor "STARTER RELAY" ON/OFF.


Item name	Condition	Display value
STARTER RELAY	Selector lever in N, P position.	ON
	Selector lever in other position.	OFF

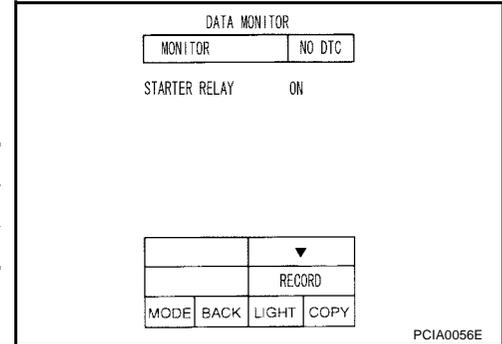

#### Without CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Check the voltage between the IPDM E/R connector and ground.

Item	Connector	Terminal (Wiring color)		Shift position	Voltage (Approx.)
Starter relay	E122	48 (B/R)	Ground	N and P	Battery voltage
				R, D and M	0V

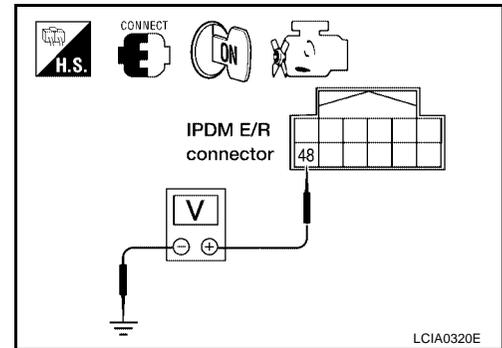

OK or NG

- OK >> GO TO 3.  
NG >> GO TO 2.

### 2. DETECT MALFUNCTIONING ITEM

Check the following items:

- Starter relay, Refer to [SC-10, "STARTING SYSTEM"](#).
- IPDM E/R, Refer to [PG-16, "IPDM E/R \(INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM\)"](#).
- Disconnections or short-circuits in the harness between TCM and IPDM E/R.

OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace damaged parts.

### 3. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

# DTC P0615 START SIGNAL CIRCUIT

---

## 5. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-109, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 3.

A

B

AT

D

E

F

G

H

I

J

K

L

M

## DTC P0700 TCM

PFP:31036

### Description

UCS002UP

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

### On Board Diagnosis Logic

UCS002UQ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM" with CONSULT-II or P0700 without CONSULT-II is detected when the TCM is malfunctioning.

### Possible Cause

UCS002UR

TCM.

### DTC Confirmation Procedure

UCS002US


#### NOTE:

**If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.**

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### Ⓟ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-112, "Diagnostic Procedure"](#) .

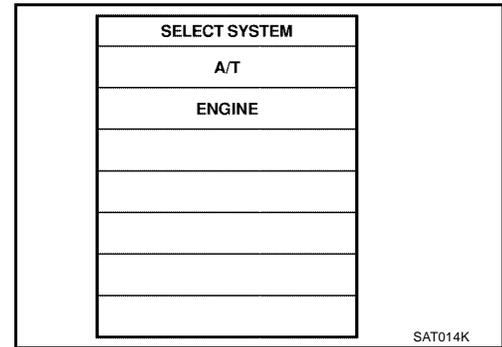

#### Ⓟ WITH GST

Follow the procedure "With CONSULT-II".

### Diagnostic Procedure

UCS002UT

#### 1. CHECK DTC


#### Ⓟ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform DTC confirmation procedure, [AT-112, "DTC Confirmation Procedure"](#) .

Is the "TCM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

NO >> **INSPECTION END**

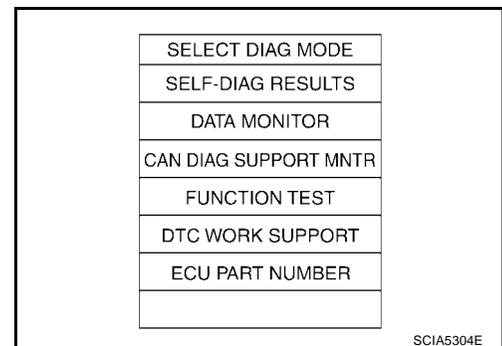

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

## DTC P0705 PARK/NEUTRAL POSITION SWITCH

PF3:32006

### Description

UCS002UU

- The park/neutral position (PNP) switch includes a transmission position switch.
- The transmission range switch detects the selector lever position and sends a signal to the TCM.

### CONSULT-II Reference Value

UCS002UV

Item name	Condition	Display value
SLCTLVR POSI	Selector lever in "N", "P" position.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D
	Selector lever in "4" position.	4
	Selector lever in "3" position.	3
	Selector lever in "2" position.	2
	Selector lever in "1" position.	1

### On Board Diagnosis Logic

UCS002UW

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PNP SW/CIRC" with CONSULT-II or P0705 without CONSULT-II is detected under the following conditions.
  - When TCM does not receive the correct voltage signal from the PNP switch 1, 2, 3, 4 based on the gear position.
  - When no other position but "P" position is detected from "N" positions.

### Possible Cause

UCS002UX

- Harness or connectors  
[The park/neutral position (PNP) switch 1, 2, 3, 4 and TCM circuit is open or shorted.]
- Park/neutral position (PNP) switch 1, 2, 3, 4

### DTC Confirmation Procedure

UCS002UY

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.  
**THRTL POS SEN: More than 1.2V**
5. If DTC is detected, go to [AT-114, "Diagnostic Procedure"](#).

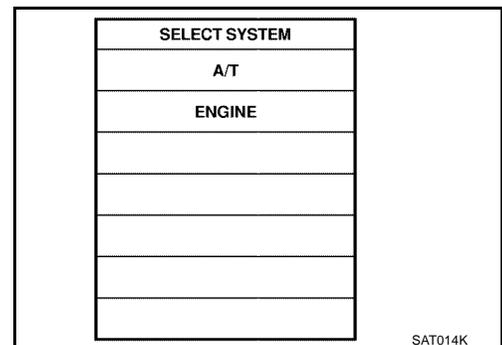

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

UCS002UZ

## Diagnostic Procedure

### 1. CHECK PNP SW CIRCUIT

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out "N·P", "R" and "D" position switches moving selector lever to each position.

Item name	Condition	Display value
SLCTLVR POSI	Selector lever in "N", "P" position.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D

DATA MONITOR	
MONITOR	NO DTC
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF
SLCT LVR POSI	N·P

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0034E

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-113, "DTC Confirmation Procedure"](#).

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

# DTC P0705 PARK/NEUTRAL POSITION SWITCH

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-113, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

## DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

PF0:32702

### Description

UCS002V0

The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

### CONSULT-II Reference Value

UCS002V1

Item name	Condition	Display value (km/h)
VHCL/S SE·A/T	During driving	Approximately matches the speedometer reading.

### On Board Diagnosis Logic

UCS002V2

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "VEH SPD SEN/CIR AT" with CONSULT-II or P0720 without CONSULT-II is detected under the following conditions.
  - When TCM does not receive the proper voltage signal from the sensor.
  - After ignition switch is turned "ON", irregular signal input from vehicle speed sensor MTR before the vehicle starts moving.

### Possible Cause

UCS002V3

- Harness or connectors  
(The sensor circuit is open or shorted.)
- Revolution sensor
- Vehicle speed sensor MTR

### DTC Confirmation Procedure

UCS002V4

#### CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle and check for an increase of "VHCL/S SE·A/T" value in response to "VHCL/S SE·MTR" value.  
If the check result is NG, go to [AT-117, "Diagnostic Procedure"](#).  
If the check result is OK, go to following step.
4. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
5. Start engine and maintain the following conditions for at least 5 consecutive seconds.

**VHCL SPEED SE: 30 km/h (19 MPH) or more**

**THRTL POS SEN: More than 1.0/8**

**Selector lever: "D" position**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

If the check result is NG, go to [AT-117, "Diagnostic Procedure"](#).

If the check result is OK, go to following step.

6. Maintain the following conditions for at least 5 consecutive seconds.


**ENGINE SPEED: 3,500 rpm or more**

**THRTL POS SEN: More than 1.0/8**

**Selector lever: "D" position**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

If the check result is NG, go to [AT-117, "Diagnostic Procedure"](#).

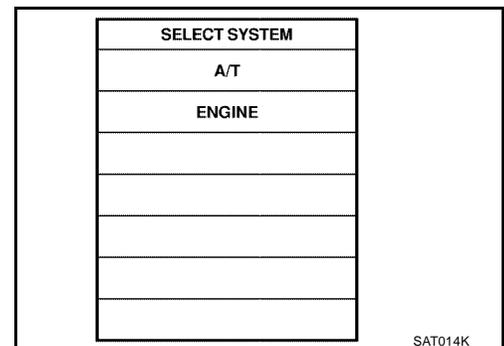

# DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

## WITH GST

Follow the procedure "With CONSULT-II".

### Diagnostic Procedure

UCS002V5

#### 1. CHECK INPUT SIGNALS

##### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "VHCL/S SE-A/T" while driving. Check the value changes according to driving speed.

Item name	Condition	Display value (km/h)
VHCL/S SE-A/T	During driving	Approximately matches the speedometer reading.

DATA MONITOR			
MONITOR		NO DTC	
VHCL/S SE-A/T	0km/h		
VHCL/S SE-MTR	0km/h		
ACCELE POSI	0.0/8		
THROTTLE POS	0.0/8		
CLSD THL POS	ON		
W/O THL POS	OFF		
		▼	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA2148E

##### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

#### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

##### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

#### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-116, "DTC Confirmation Procedure"](#).

##### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

#### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

##### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

#### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

##### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

## DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-116, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# DTC P0725 ENGINE SPEED SIGNAL

## DTC P0725 ENGINE SPEED SIGNAL

PF0:24825

### Description

UCS002V6

The engine speed signal is sent from the ECM to the TCM.

### CONSULT-II Reference Value

UCS002V7

Item name	Condition	Display value (rpm)
ENGINE SPEED	Engine running	Closely matches the tachometer reading.

### On Board Diagnosis Logic

UCS002V8

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "ENGINE SPEED SIG" with CONSULT-II is detected when TCM does not receive the ignition signal from ECM during engine cranking or running.

### Possible Cause

UCS002V9

Harness or connectors  
(The ECM to the TCM circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002VA

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.  
**VHCL SPEED SE: 10 km/h (6 MPH) or more**  
**ACCELE POSI: More than 1/8**  
**Selector lever: "D" position**
3. If DTC is detected, go to [AT-119, "Diagnostic Procedure"](#).

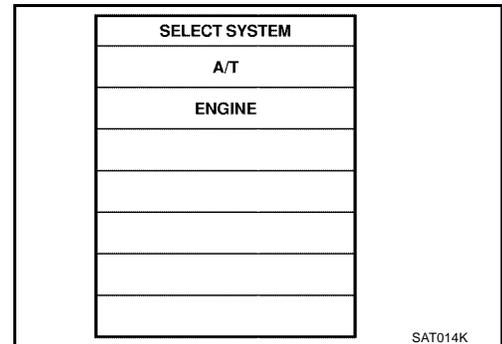

### Diagnostic Procedure

UCS002VB

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#).  
NO >> GO TO 2.

# DTC P0725 ENGINE SPEED SIGNAL

## 2. CHECK DTC WITH TCM

### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. While monitoring engine speed, check for engine speed change corresponding to wide-open throttle position signal.

Item name	Condition	Display value (rpm)
ENGINE SPEED	Engine running	Closely matches the tachometer reading.

DATA MONITOR			
MONITOR	NO DTC		
W/O THL POS	OFF		
BRAKE SW	OFF		
ENGINE SPEED	0 rpm		
TURBINE REV	0 rpm		
OUTPUT REV	0 rpm		
▼			
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0041E

### With GST

Follow the procedure "With CONSULT-II".

OK or NG

- OK >> GO TO 3.
- NG >> Check the ignition signal circuit.
  - Refer to [EC-563, "IGNITION SIGNAL"](#) .

## 3. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

## 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

## 5. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-119, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 3.

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

## DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

### Description

UCS002VC

- The torque converter clutch solenoid valve is activated, with the gear in D4 , D5 by the TCM in response to signals sent from the vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Torque converter clutch piston operation will then be controlled.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

### CONSULT-II Reference Value

UCS002VD

Item name	Condition	Display value (Approx.) (A)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4
	When performing lock-up	0.4 - 0.6

### On Board Diagnosis Logic

UCS002VE

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCC SOLENOID/CIRC" with CONSULT-II or P0740 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002VF

- Torque converter clutch solenoid valve
- Harness or connectors  
(The solenoid circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002VG

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
  - VHCL SPEED SE: 80 km/h (50 MPH) or more**
  - ACCELE POS: 0.5/8 - 1.0/8**
  - SELECTOR LEVER: "D" position**
  - Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
4. If DTC is detected go to [AT-122, "Diagnostic Procedure"](#).

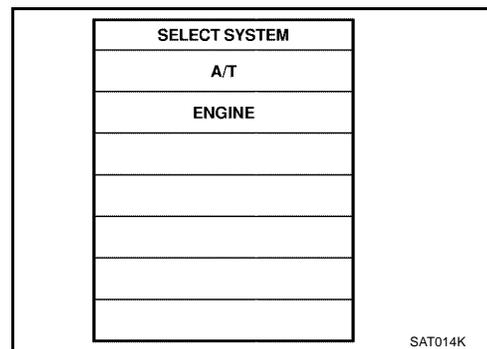

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

UCS002VH

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "TCC SOLENOID" while driving.

Item name	Condition	Display value (Approx.)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4 A
	When performing lock-up	0.4 - 0.6 A

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA4793E

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-121, "DTC Confirmation Procedure"](#).

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).  
NG >> Repair or replace damaged parts.

# DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-121, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

## DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PF3:31940

### Description

UCS002VI

This malfunction is detected when the A/T does not shift into 5th gear position or the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

### CONSULT-II Reference Value

UCS002VJ

Item name	Condition	Display value (Approx.) (A)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4
	When performing lock-up	0.4 - 0.6

### On Board Diagnosis Logic

UCS002VK

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T TCC S/V FNCTN" with CONSULT-II or P0744 without CONSULT-II is detected under the following conditions.
  - When A/T cannot perform lock-up even if electrical circuit is good.
  - When TCM detects as irregular by comparing difference value with slip rotation.

### Possible Cause

UCS002VL

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Torque converter clutch solenoid valve
- Hydraulic control circuit

### DTC Confirmation Procedure

UCS002VM

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine and Select "TCC S/V FNCTN CHECK" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

2. Accelerate vehicle to more than 80 km/h (50 MPH) and maintain the following condition continuously until "TESTING" has turned to "COMPLETE". (It will take approximately 30 seconds after "TESTING" shows.)


**ACCELE POSI: More than 1.0/8 (at all times during step 4)**

**TCC SOLENOID: 0.4 - 0.6 A**

**Selector lever: "D" position**

**[Reference speed: Constant speed of more than 80 km/h (50 MPH)]**

- Make sure "GEAR" shows "5".
  - For shift schedule, refer to [AT-72, "Vehicle Speed When Performing and Releasing Complete Lock-up"](#).
  - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0744 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
3. Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)  
Refer to [AT-125, "Diagnostic Procedure"](#).  
Refer to shift schedule, [AT-72, "Vehicle Speed When Performing and Releasing Complete Lock-up"](#).

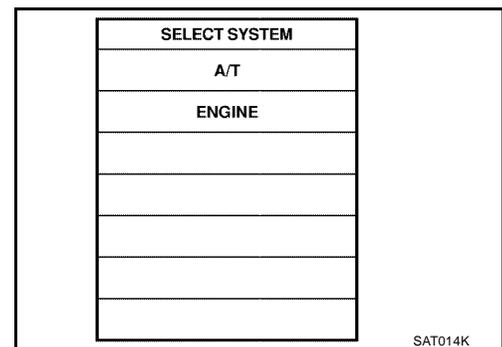

# DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

## WITH GST

Follow the procedure "With CONSULT-II".

## Diagnostic Procedure

UCS002VN

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "TCC SOLENOID" while driving.

Item name	Condition	Display value (Approx.)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4 A
	When performing lock-up	0.4 - 0.6 A

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA4793E

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-124, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

## DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-124, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

# DTC P0745 LINE PRESSURE SOLENOID VALVE

## DTC P0745 LINE PRESSURE SOLENOID VALVE

PDF:31940

### Description

UCS002VO

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

**The line pressure duty cycle value is not consistent when the closed throttle position signal is "ON". To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position signal is "OFF".**

### CONSULT-II Reference Value

UCS002VP

Item name	Condition	Display value (Approx.) (A)
LINE PRES SOL	During driving	0.2 - 0.6

### On Board Diagnosis Logic

UCS002VA

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "L/PRESS SOL/CIRC" with CONSULT-II or P0745 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002VR

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Line pressure solenoid valve

### DTC Confirmation Procedure

UCS002VS


#### NOTE:

**If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.**

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
2. Engine start and wait at least 5 second.
3. If DTC is detected, go to [AT-128, "Diagnostic Procedure"](#).

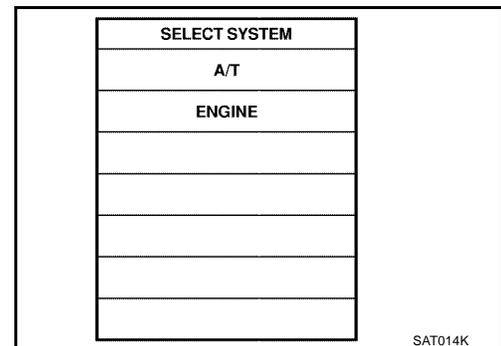

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P0745 LINE PRESSURE SOLENOID VALVE

UCS002VT

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "LINE PRES SOL" while driving.

Item name	Condition	Display value (Approx.)
LINE PRES SOL	During driving	0.2 - 0.6 A

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID		XXXX	
LINE PRES SOL		XXXX	
I/C SOLENOID		XXXX	
FR/B SOLENOID		XXXX	
D/C SOLENOID		XXXX	
HLR/C SOL		XXXX	
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-127, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

# DTC P0745 LINE PRESSURE SOLENOID VALVE

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-127, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

## DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

PF3:31036

### Description

UCS002VU

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

### On Board Diagnosis Logic

UCS002VV

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-RAM" with CONSULT-II is detected when TCM memory RAM is malfunctioning.

### Possible Cause

UCS002VW

TCM.

### DTC Confirmation Procedure

UCS002VX


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-130, "Diagnostic Procedure"](#).

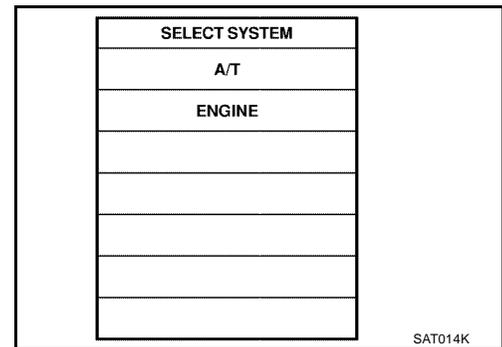

UCS002VY

### Diagnostic Procedure

#### 1. CHECK DTC


#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform "DTC confirmation procedure", [AT-130, "DTC Confirmation Procedure"](#).

Is the "TCM-RAM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NO >> **INSPECTION END**

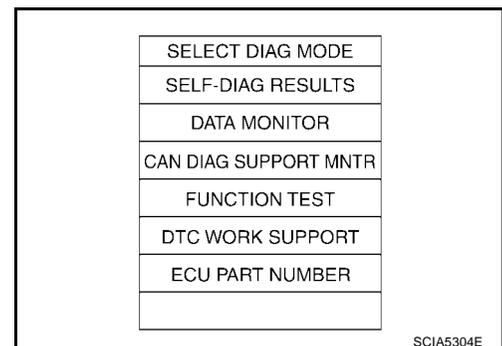

# DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

## DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

PF3:31036

### Description

UCS002VZ

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

### On Board Diagnosis Logic

UCS002W0

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TCM-ROM" with CONSULT-II is detected when TCM memory ROM is malfunctioning.

### Possible Cause

UCS002W1

TCM.

### DTC Confirmation Procedure

UCS002W2


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch to "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for A/T with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-131, "Diagnostic Procedure"](#).

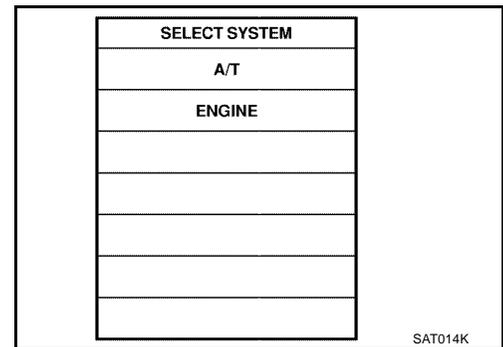

### Diagnostic Procedure

UCS002W3

#### 1. CHECK DTC


#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform "DTC confirmation procedure", [AT-131, "DTC Confirmation Procedure"](#).

Is the "TCM-ROM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NO >> **INSPECTION END**

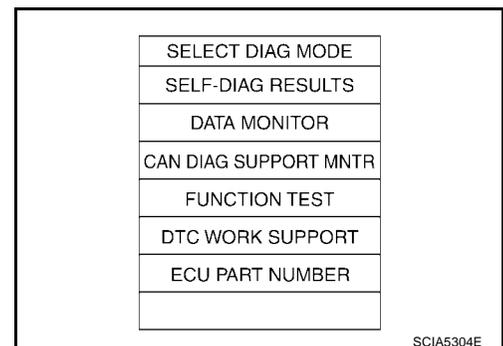

# DTC P1705 THROTTLE POSITION SENSOR

## DTC P1705 THROTTLE POSITION SENSOR

PF2:22620

### Description

UCS002W4

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor, etc. The actuator sends a signal to the ECM, and ECM sends signals to TCM with CAN communication.

### CONSULT-II Reference Value

UCS002W5

Item name	Condition	Display value (Approx.)
ACCELE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8
THROTTLE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8

### On Board Diagnosis Logic

UCS002W6

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "TP SEN/CIRC A/T" with CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

### Possible Cause

UCS002W7

Harness or connectors  
(The sensor circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002W8


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [AT-132, "Diagnostic Procedure"](#).

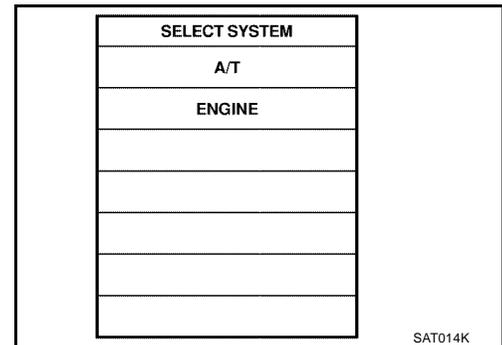

#### WITH GST

Follow the procedure "With CONSULT-II".

### Diagnostic Procedure

UCS002W9

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is a malfunction in the CAN communication indicated in the results?


- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#).  
NO >> GO TO 2.

# DTC P1705 THROTTLE POSITION SENSOR

## 2. CHECK DTC WITH ECM

### With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-103, "CONSULT-II Function"](#).

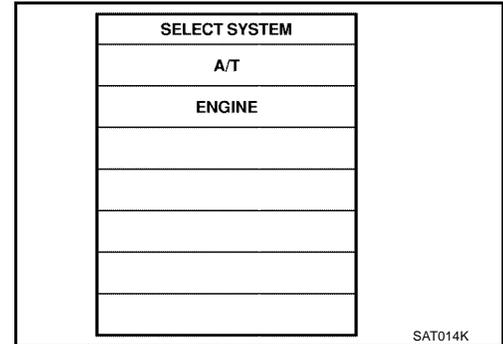

### With GST

Follow the procedure "With CONSULT-II".


#### OK or NG

- OK >> GO TO 3.
- NG >> Check the DTC detected item. Refer to [EC-103, "CONSULT-II Function"](#).
  - If CAN communication line is detected, go to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#).

## 3. CHECK DTC WITH TCM

### With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Depress accelerator pedal and read out the value of "ACCLE POS" and "THROTTLE POSI".  
Check engine speed changes according to throttle position.

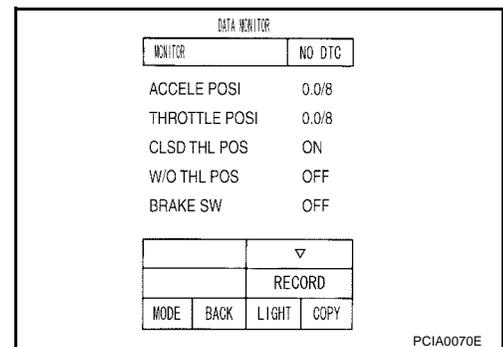

Item name	Condition	Display value (Approx.)
THROTTLE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8

- Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

### With GST

Follow the procedure "With CONSULT-II".

#### OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

## 4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-132, "DTC Confirmation Procedure"](#).

#### OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

# DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

## DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

PF3:31940

### Description

UCS002WA

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

### CONSULT-II Reference Value

UCS002WB

Item name	Condition °C (°F)	Display value (Approx.) V
ATF TEMP SE 1	0 (32) - 20 (68) - 80 (176)	2.2 - 1.8 - 0.6
ATF TEMP SE 2		2.2 - 1.7 - 0.45

### On Board Diagnosis Logic

UCS002WC

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF TEMP SEN/CIRC" with CONSULT-II or P1710 (A/T), P0710 (ENGINE) without CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

### Possible Cause

UCS002WD

- Harness or connectors  
(The sensor circuit is open or shorted.)
- A/T fluid temperature sensors 1, 2

### DTC Confirmation Procedure

UCS002WE

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)  
**VHCL SPEED SE: 10 km/h (6 MPH) or more**  
**THRTL POS SEN: More than 1.0/8**  
**Selector lever: "D" position**
4. If DTC is detected, go to [AT-135, "Diagnostic Procedure"](#).

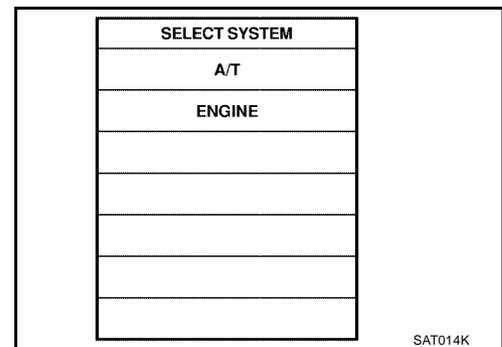

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

UCS002WF

## Diagnostic Procedure

### 1. CHECK A/T FLUID TEMPERATURE SENSOR 1 SIGNAL

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out the value of "ATF TEMP SE 1".

Item name	Condition °C (°F)	Display value (Approx.)
ATF TEMP SE 1	0 (32) - 20 (68) - 80 (176)	2.2 - 1.8 - 0.6 V

#### OK or NG

- OK >> GO TO 2.  
NG >> GO TO 4.

DATA MONITOR	
MONITOR	NO DTC
OUTPUT REV	0 rpm
ATF TEMP SE 1	1.84 v
ATF TEMP SE 2	1.72 v
BATTERY BOLT	11.5 v
ATF PRES SW 1	OFF

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0039E

### 2. CHECK A/T FLUID TEMPERATURE SENSOR 2 SIGNAL

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out the value of "ATF TEMP SE 2".

Item name	Condition °C (°F)	Display value (Approx.)
ATF TEMP SE 2	0 (32) - 20 (68) - 80 (176)	2.2 - 1.7 - 0.45 V

#### OK or NG

- OK >> GO TO 8.  
NG >> GO TO 3.

DATA MONITOR	
MONITOR	NO DTC
OUTPUT REV	0 rpm
ATF TEMP SE 1	1.84 v
ATF TEMP SE 2	1.72 v
BATTERY BOLT	11.5 v
ATF PRES SW 1	OFF

Δ	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0039E

### 3. CHECK A/T FLUID TEMPERATURE SENSOR 2

Check A/T fluid temperature sensor 2. Refer to [AT-136, "Component Inspection"](#).

#### OK or NG

- OK >> GO TO 4.  
NG >> Replace the A/T fluid temperature sensor 2. Refer to [AT-263, "A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION"](#).

### 4. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

#### OK or NG

- OK >> GO TO 5.  
NG >> GO TO 7.

### 5. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-134, "DTC Confirmation Procedure"](#).

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 6.

# DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

---

## 6. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NG >> Repair or replace damaged parts.

## 7. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NG >> Repair or replace damaged parts.

## 8. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-134, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 4.

## Component Inspection A/T FLUID TEMPERATURE SENSOR 2

UCS002WG

1. Remove A/T fluid temperature sensor 2. Refer to [AT-263, "A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION"](#).
2. Check resistance between terminals. Refer to [AT-347, "A/T Fluid Temperature Sensor"](#).

# DTC P1716 TURBINE REVOLUTION SENSOR

## DTC P1716 TURBINE REVOLUTION SENSOR

PDF:31935

### Description

UCS002WH

The turbine revolution sensor detects input shaft rpm (revolutions per minute). It is located on the input side of the automatic transmission. Monitors revolution of sensor 1 and sensor 2 for non-standard conditions.

### CONSULT-II Reference Value

UCS002WI

Item name	Condition	Display value (rpm)
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.

### On Board Diagnosis Logic

UCS002WJ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "TURBINE REV S/CIRC" with CONSULT-II or P1716 without CONSULT-II is detected under the following conditions.
  - When TCM does not receive the proper voltage signal from the sensor.
  - When TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2.

### Possible Cause

UCS002WK

- Harness or connectors  
(The sensor circuit is open or shorted.)
- Turbine revolution sensor 1, 2

### DTC Confirmation Procedure

UCS002WL

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

**VHCL SPEED SE: 40 km/h (25 MPH) or more**

**ENGINE SPEED: 1,500 rpm or more**

**ACCELE POS: 0.5/8 or more**

**Selector lever: "D" position**

**Gear position (Turbine revolution sensor 1): 4th or 5th position**


**Gear position (Turbine revolution sensor 2): All position**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

4. If DTC is detected, go to [AT-138, "Diagnostic Procedure"](#).

#### WITH GST

Follow the procedure "With CONSULT-II".

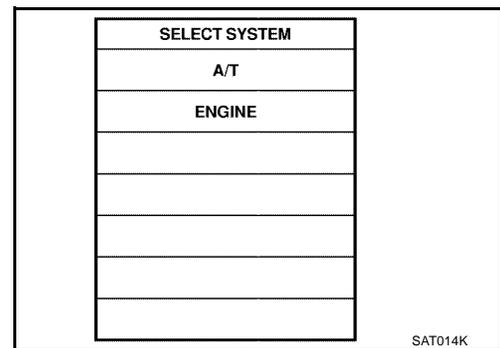

# DTC P1716 TURBINE REVOLUTION SENSOR

UCS002WM

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS


#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Vehicle start and read out the value of "TURBINE REV".

Item name	Condition	Display value (rpm)
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

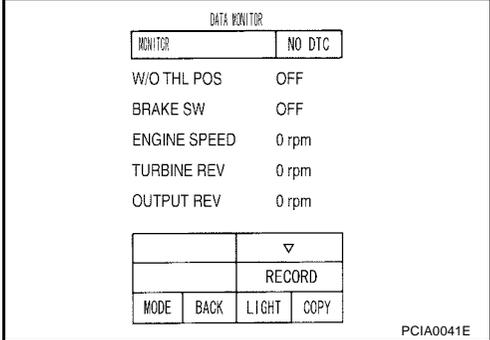

The screenshot shows the 'DATA MONITOR' screen with a 'MONITOR' button highlighted. The screen displays the following data:

MONITOR	NO DTC
W/O THL POS	OFF
BRAKE SW	OFF
ENGINE SPEED	0 rpm
TURBINE REV	0 rpm
OUTPUT REV	0 rpm

Below the data, there is a 'RECORD' button and a 'MODE' button. The 'MODE' button is highlighted. The screen also shows a 'BACK' button, a 'LIGHT' button, and a 'COPY' button. The text 'PCIA0041E' is visible in the bottom right corner.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-137, "DTC Confirmation Procedure"](#).

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).
- NG >> Repair or replace damaged parts.

# DTC P1716 TURBINE REVOLUTION SENSOR

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-137, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1721 VEHICLE SPEED SENSOR MTR

## DTC P1721 VEHICLE SPEED SENSOR MTR

PF2:24814

### Description

UCS002WN

The vehicle speed sensor-MTR signal is transmitted from combination meter to TCM by CAN communication line. The signal functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use the vehicle speed sensor-MTR signal.

### CONSULT-II Reference Value

UCS002WO

Item name	Condition	Display value (km/h)
VHCL/S SE-MTR	During driving	Approximately matches the speedometer reading.

### On Board Diagnosis Logic

UCS002WP

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "VHE SPD SE-MTR" with CONSULT-II is detected when TCM does not receive the proper vehicle speed sensor MTR signal (input by CAN communication) from combination meter.

### Possible Cause

UCS002WQ

Harness or connectors  
(The sensor circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002WR

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.  
**ACCELE POS: 1/8 or less**  
**VHCL SPEED SE: 30 km/h (17 MPH) or more**
4. If DTC is detected, go to [AT-141, "Diagnostic Procedure"](#).

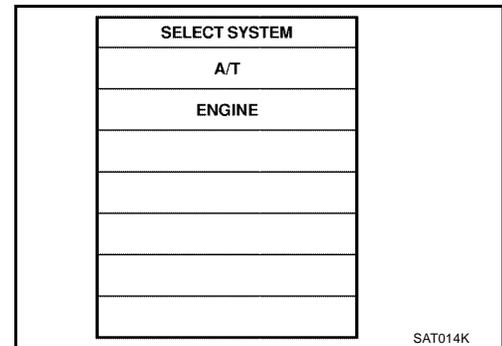

# DTC P1721 VEHICLE SPEED SENSOR MTR

UCS002WS

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .  
NO >> GO TO 2.

### 2. CHECK INPUT SIGNALS

#### With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Drive vehicle and read out the value of "VHCL/S SE-MTR".

Item name	Condition	Display value (km/h)
VHCL/S SE-MTR	During driving	Approximately matches the speedometer reading.

OK or NG

- OK >> GO TO 3.  
NG >> GO TO 6.

DATA MONITOR			
MONITOR		NO DTC	
VHCL/S SE-A/T		0km/h	
VHCL/S SE-MTR		0km/h	
ACCELE POSI		0.0/8	
THROTTLE POS		0.0/8	
CLSD THL POS		ON	
W/O THL POS		OFF	
		▼	
RECORD			
MODE	BACK	LIGHT	COPY

SCIA2148E

### 3. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 5.  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-140, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 3.

### 6. CHECK COMBINATION METER

Check combination meter. Refer to [DI-17, "How to Proceed With Trouble Diagnosis"](#) .

OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace damaged parts.

# DTC P1730 A/T INTERLOCK

## DTC P1730 A/T INTERLOCK

PF0:0000

### Description

UCS002WT

- Fail-safe function to detect interlock conditions.

### On Board Diagnosis Logic

UCS002WU

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T INTERLOCK" with CONSULT-II or P1730 without CONSULT-II is detected when TCM does not receive the proper voltage signal from the sensor and switch.
- TCM monitors and compares gear position and conditions of each ATF pressure switch when gear is steady.

### Possible Cause

UCS002WV

- Harness or connectors  
(The solenoid and switch circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

### DTC Confirmation Procedure

UCS002WW


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.  
**Selector lever: "D" position**
5. If DTC is detected, go to [AT-143, "Diagnostic Procedure"](#).

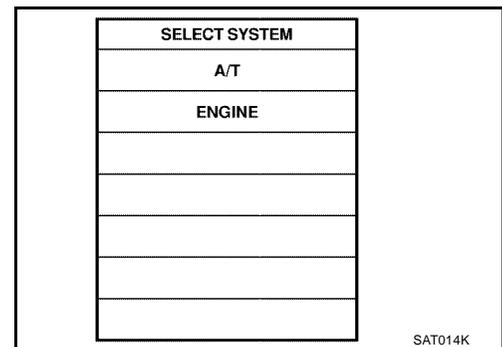

#### WITH GST

Follow the procedure "With CONSULT-II".

### Judgement of A/T Interlock

UCS002WX

When A/T Interlock is judged to be malfunctioning, the vehicle should be fixed in 2nd gear, and should be set in a condition in which it can travel.

When one of the following fastening patterns is detected, the fail-safe function in correspondence with the individual pattern should be performed.

# DTC P1730 A/T INTERLOCK

## A/T INTERLOCK COUPLING PATTERN TABLE

●: NG, X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	-	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF

## Diagnostic Procedure

UCS002WY

### 1. SELF-DIAGNOSIS


#### Ⓜ With CONSULT-II

1. Drive vehicle.
2. Stop vehicle and turn ignition switch "OFF".
3. Turn ignition switch "ON". (Do not start engine.)
4. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

#### OK or NG

OK >> GO TO 6.

NG >> Check low coast brake solenoid valve circuit and function. Refer to [AT-172, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE"](#) , [AT-175, "DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION"](#) .

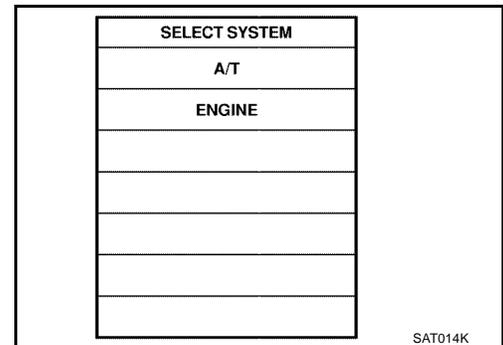

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-142, "DTC Confirmation Procedure"](#) .

#### OK or NG

OK >> **INSPECTION END**

NG >> GO TO 5.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

#### OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

NG >> Repair or replace damaged parts.

## DTC P1730 A/T INTERLOCK

---

### 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NG >> Repair or replace damaged parts.

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-142, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

# DTC P1731 A/T 1ST ENGINE BRAKING

## DTC P1731 A/T 1ST ENGINE BRAKING

PFP:00000

### Description

UCS002WZ

Fail-safe function to prevent sudden decrease in speed by engine brake other than at 1 or M1 position.

### CONSULT-II Reference Value

UCS002X0

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF

### On Board Diagnosis Logic

UCS002X1

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "A/T 1ST E/BRAKING" with CONSULT-II is detected under the following conditions.
  - When TCM does not receive the proper voltage signal from the sensor.
  - When TCM monitors each ATF pressure switch and solenoid monitor value, and detects as irregular when engine brake of 1st gear acts other than at 1 position.

### Possible Cause

UCS002X2

- Harness or connectors  
(The sensor circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

### DTC Confirmation Procedure

UCS002X3


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.  
**ENGINE SPEED: 1,200 rpm**  
**Selector lever: "1" position**  
**Gear position: 1st gear**
5. If DTC is detected, go to [AT-146, "Diagnostic Procedure"](#) .

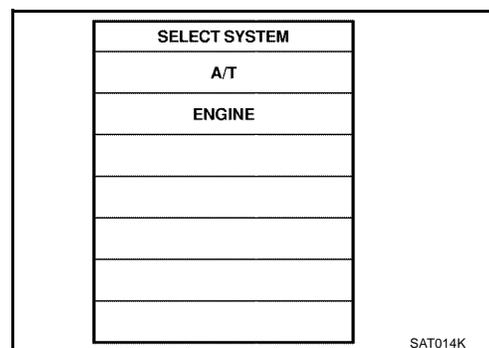

# DTC P1731 A/T 1ST ENGINE BRAKING

UCS002X4

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "1" or "M" position (1st gear), and confirm the ON/OFF actuation of the "ATF PRES SW 2".

DATA MONITOR	
MONITOR	NO DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-21</a> .	OFF

OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-145, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

# DTC P1731 A/T 1ST ENGINE BRAKING

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-145, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1752 INPUT CLUTCH SOLENOID VALVE

## DTC P1752 INPUT CLUTCH SOLENOID VALVE

PFP:31940

### Description

UCS002X5

Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### CONSULT-II Reference Value

UCS002X6

Item name	Condition	Display value (Approx.) (A)
I/C SOLENOID	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8
	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05

### On Board Diagnosis Logic

UCS002X7

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "I/C SOLENOID/CIRC" with CONSULT-II or P1752 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002X8

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Input clutch solenoid valve

### DTC Confirmation Procedure

UCS002X9

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### Ⓟ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

**ACCELE POS: 1.5/8 - 2.0/8**

**Selector lever: "D" position**


**Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

5. If DTC is detected go to [AT-149, "Diagnostic Procedure"](#) .

#### Ⓞ WITH GST

Follow the procedure "With CONSULT-II".

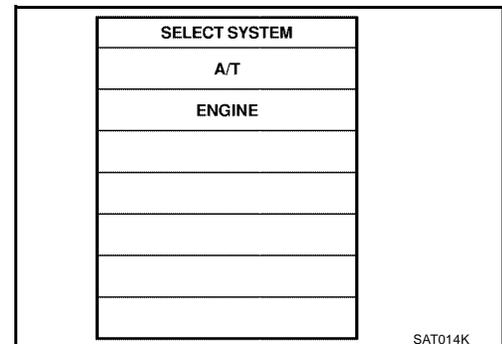

# DTC P1752 INPUT CLUTCH SOLENOID VALVE

UCS002XA

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "I/C SOLENOID" while driving.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA4793E

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8 A
	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05 A

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-148, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

## DTC P1752 INPUT CLUTCH SOLENOID VALVE

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-148, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

# DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

## DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

PF3:31940

### Description

UCS002XB

- Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### CONSULT-II Reference Value

UCS002XC

Item name	Condition	Display value (Approx.) (A)
I/C SOLENOID	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8
	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05
ATF PRES SW 3	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF

### On Board Diagnosis Logic

UCS002XD

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "I/C SOLENOID FNCTN" with CONSULT-II or P1754 without CONSULT-II is detected under the following conditions.
  - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)
  - When TCM detects that relation between gear position and condition of ATF pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002XE

- Harness or connectors  
(The solenoid and switch circuits are open or shorted.)
- Input clutch solenoid valve
- ATF pressure switch 3

### DTC Confirmation Procedure

UCS002XF

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POSI: 1.5/8 - 2.0/8**  
**Selector lever: "D" position**  
**Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1754) is detected, refer to [AT-152, "Diagnostic Procedure"](#) .  
 If DTC (P1752) is detected, go to [AT-149, "Diagnostic Procedure"](#) .  
 If DTC (P1843) is detected, go to [AT-187, "Diagnostic Procedure"](#) .

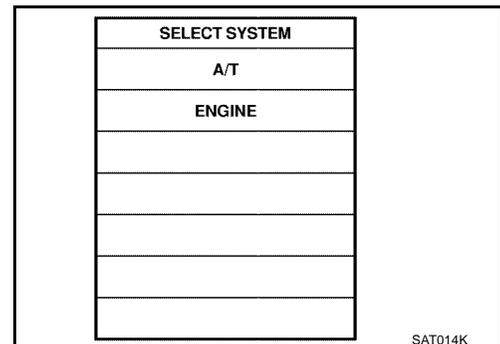

# DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

## WITH GST

Follow the procedure "With CONSULT-II".


## Diagnostic Procedure

UCS002XG

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 3" and electrical current value of "I/C SOLENOID".

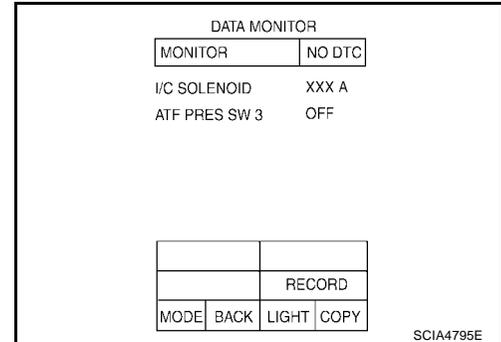

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8 A
	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05 A
ATF PRES SW 3	Input clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Input clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-151, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

# DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NG >> Repair or replace damaged parts.

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-151, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1757 FRONT BRAKE SOLENOID VALVE

## DTC P1757 FRONT BRAKE SOLENOID VALVE

PFP:31940

### Description

UCS002XH

Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### CONSULT-II Reference Value

UCS002XI

Item name	Condition	Display value (Approx.) (A)
FR/B SOLENOID	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05

### On Board Diagnosis Logic

UCS002XJ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “FR/B SOLENOID/CIRC” with CONSULT-II or P1757 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002XK

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Front brake solenoid valve

### DTC Confirmation Procedure

UCS002XL

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

**ACCELE POS: 1.5/8 - 2.0/8**

**Selector lever: “D” position**


**Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

5. If DTC is detected go to [AT-155, "Diagnostic Procedure"](#) .

#### ④ WITH GST

Follow the procedure “With CONSULT-II”.

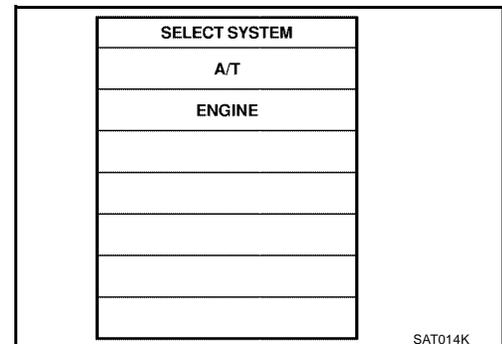

# DTC P1757 FRONT BRAKE SOLENOID VALVE

UCS002XM

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "FR/B SOLENOID" while driving.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
RECORD	
MODE	BACK
LIGHT	COPY

SCIA4793E

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8 A
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05 A

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-154, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

## DTC P1757 FRONT BRAKE SOLENOID VALVE

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-154, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

## DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

PF3:31940

### Description

UCS002XN

- Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### CONSULT-II Reference Value

UCS002XO

Item name	Condition	Display value (Approx.) (A)
FR/B SOLENOID	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05
ATF PRES SW 1	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF

### On Board Diagnosis Logic

UCS002XP

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "FR/B SOLENOID FNCT" with CONSULT-II or P1759 without CONSULT-II is detected under the following conditions.
  - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)
  - When TCM detects that relation between gear position and condition of ATF pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002XQ

- Harness or connectors  
(The solenoid and switch circuits are open or shorted.)
- Front brake solenoid valve
- ATF pressure switch 1

### DTC Confirmation Procedure

UCS002XR

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: "D" position**  
**Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1759) is detected, refer to [AT-158, "Diagnostic Procedure"](#) .  
 If DTC (P1757) is detected, go to [AT-155, "Diagnostic Procedure"](#) .  
 If DTC (P1841) is detected, go to [AT-184, "Diagnostic Procedure"](#) .

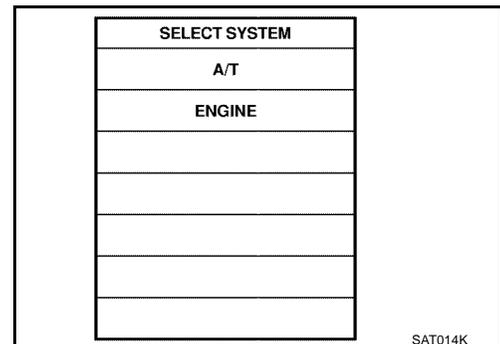

# DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

## WITH GST

Follow the procedure "With CONSULT-II".


## Diagnostic Procedure

UCS002XS

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1" and electrical current value of "FR/B SOLENOID".

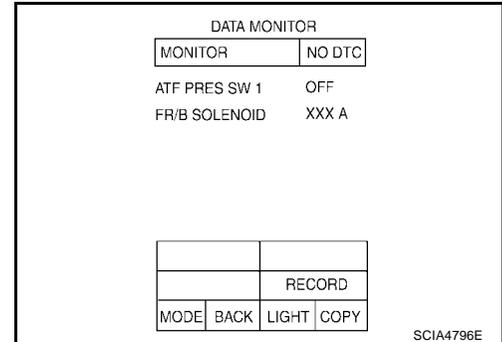

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8 A
	Front brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05 A
ATF PRES SW 1	Front brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Front brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94](#), "[TCM Input/Output Signal Reference Values](#)".

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-157](#), "[DTC Confirmation Procedure](#)".

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255](#), "[CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION](#)".
- NG >> Repair or replace damaged parts.

# DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

NG >> Repair or replace damaged parts.

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-157, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1762 DIRECT CLUTCH SOLENOID VALVE

## DTC P1762 DIRECT CLUTCH SOLENOID VALVE

PFP:31940

### Description

UCS002XT

Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### CONSULT-II Reference Value

UCS002XU

Item name	Condition	Display value (Approx.) (A)
D/C SOLENOID	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8
	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05

### On Board Diagnosis Logic

UCS002XV

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “D/C SOLENOID/CIRC” with CONSULT-II or P1762 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002XW

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Direct clutch solenoid valve

### DTC Confirmation Procedure

UCS002XX


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: “D” position**  
**Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
5. If DTC is detected, go to [AT-161](#), “Diagnostic Procedure” .

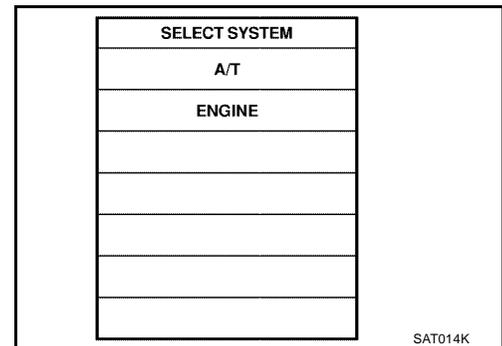

#### WITH GST

Follow the procedure “With CONSULT-II”.

# DTC P1762 DIRECT CLUTCH SOLENOID VALVE

UCS002XY

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "D/C SOLENOID" while driving.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA4793E

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8 A
	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05 A

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-160, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

## DTC P1762 DIRECT CLUTCH SOLENOID VALVE

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-160, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

# DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

## DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

PF3:31940

### Description

UCS002XZ

- Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### CONSULT-II Reference Value

UCS002Y0

Item name	Condition	Display value (Approx) (A)
D/C SOLENOID	Direct clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8
	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05
ATF PRES SW 5	Direct clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002Y1

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "D/C SOLENOID FNCTN" with CONSULT-II or P1764 without CONSULT-II is detected under the following conditions.
  - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)
  - When TCM detects that relation between gear position and condition of ATF pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002Y2

- Harness or connectors  
(The solenoid and switch circuits are open or shorted.)
- Direct clutch solenoid valve
- ATF pressure switch 5

### DTC Confirmation Procedure

UCS002Y3


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: "D" position**  
**Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1764) is detected, refer to [AT-164, "Diagnostic Procedure"](#) .  
 If DTC (P1762) is detected, go to [AT-161, "Diagnostic Procedure"](#) .  
 If DTC (P1845) is detected, go to [AT-190, "Diagnostic Procedure"](#) .

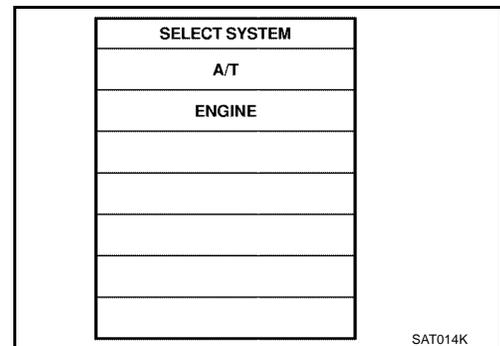

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

UCS002Y4

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the display actuation of the "ATF PRES SW 5" and electrical current value of "D/C SOLENOID".

DATA MONITOR			
MONITOR		NO DTC	
D/C SOLENOID		XXXA	
ATF PRES SW 5		OFF	
RECORD			
MODE	BACK	LIGHT	COPY

SCIA4797E

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8 A
	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05 A
ATF PRES SW 5	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94. "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-163. "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255. "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

# DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#).

NG >> Repair or replace damaged parts.

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-163, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

## DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

PF3:31940

### Description

UCS002Y5

High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### CONSULT-II Reference Value

UCS002Y6

Item name	Condition	Display value (Approx.) (A)
HLR/C SOL	High and low reverse clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8
	High and low reverse clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05

### On Board Diagnosis Logic

UCS002Y7

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "HLR/C SOL/CIRC" with CONSULT-II or P1767 without CONSULT-II is detected under the following conditions.
  - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
  - When TCM detects as irregular by comparing target value with monitor value.

### Possible Cause

UCS002Y8

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- High and low reverse clutch solenoid valve

### DTC Confirmation Procedure

UCS002Y9

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

**ACCELE POS: 1.5/8 - 2.0/8**

**Selector lever: "D" position**


**Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)**

**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**

5. If DTC is detected, go to [AT-167](#), "Diagnostic Procedure" .

#### ④ WITH GST

Follow the procedure "With CONSULT-II".

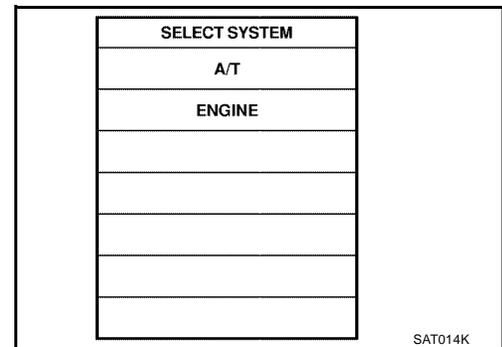

# DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

UCS002YA

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "HLR/C SOLENOID" while driving.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA4793E

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse clutch disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0.6 - 0.8 A
	High and low reverse clutch engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	0 - 0.05 A

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-166, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.
- Power supply and ground circuit for TCM.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

## DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-166, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

## DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

PFP:31940

### Description

UCS002YB

- High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### CONSULT-II Reference Value

UCS002YC

Item name	Condition	Display value (Approx.) (A)
HLR/C SOL	High and low reverse clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8
	High and low reverse clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05
ATF PRES SW 6	High and low reverse clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	High and low reverse clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002YD

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "HLR/C SOL FNCTN" with CONSULT-II or P1769 without CONSULT-II is detected under the following conditions.
  - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)
  - When TCM detects that relation between gear position and condition of ATF pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002YE

- Harness or connectors  
(The solenoid and switch circuits are open or shorted.)
- High and low reverse clutch solenoid valve
- ATF pressure switch 6

### DTC Confirmation Procedure

UCS002YF

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

- Start engine.
- Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: "D" position**  
**Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
- Perform step "2" again.
- Turn ignition switch "OFF", then perform step "1" to "3" again.
- Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1769) is detected, refer to [AT-170, "Diagnostic Procedure"](#) .  
 If DTC (P1767) is detected, go to [AT-167, "Diagnostic Procedure"](#) .  
 If DTC (P1846) is detected, go to [AT-193, "Diagnostic Procedure"](#) .

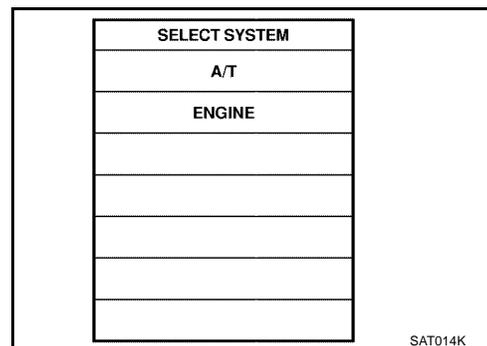

# DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

## WITH GST

Follow the procedure "With CONSULT-II".

## Diagnostic Procedure

UCS002YG

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6" and electrical current value of "HLR/C SOL".

DATA MONITOR			
MONITOR		NO DTC	
HLR/C SOL		XXX A	
ATF PRES SW 6		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4798E

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0.6 - 0.8 A
	High and low reverse engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	0 - 0.05 A
ATF PRES SW 6	High and low reverse engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	High and low reverse disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94](#), "[TCM Input/Output Signal Reference Values](#)".

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-169](#), "[DTC Confirmation Procedure](#)".

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255](#), "[CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION](#)".
- NG >> Repair or replace damaged parts.

# DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

NG >> Repair or replace damaged parts.

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-169, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P1772 LOW COAST BRAKE SOLENOID VALVE

## DTC P1772 LOW COAST BRAKE SOLENOID VALVE

PF3:31940

### Description

UCS002YH

Low coast brake solenoid valve is turned "ON" or "OFF" by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### CONSULT-II Reference Value

UCS002YI

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002YJ

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "LC/B SOLENOID/CIRC" with CONSULT-II or P1772 without CONSULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

### Possible Cause

UCS002YK

- Harness or connectors  
(The solenoid circuit is open or shorted.)
- Low coast brake solenoid valve

### DTC Confirmation Procedure

UCS002YL


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.  
**Selector lever: "1" or "2"**  
**Gear position: "1st" or "2nd" gear (LC/B ON/OFF)**
5. If DTC is detected, go to [AT-173, "Diagnostic Procedure"](#) .

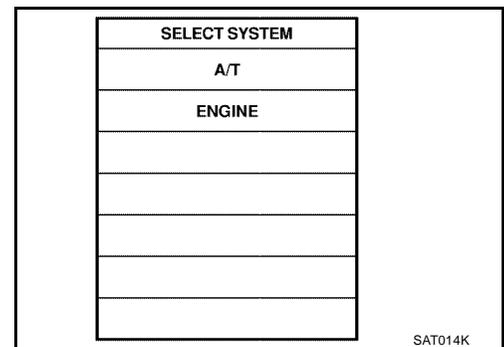

SAT014K

#### WITH GST

Follow the procedure "With CONSULT-II".

# DTC P1772 LOW COAST BRAKE SOLENOID VALVE


UCS002YM

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "ON OFF SOL" while driving.

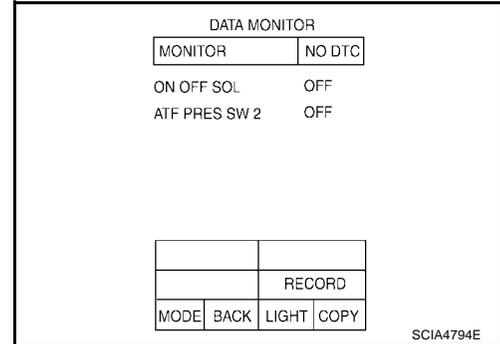

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-172, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

## DTC P1772 LOW COAST BRAKE SOLENOID VALVE

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-172, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

## DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

PF3:31940

### Description

UCS002YN

- Low coast brake solenoid valve is turned “ON” or “OFF” by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### CONSULT-II Reference Value

UCS002YO

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002YP

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “LC/B SOLENOID FNCT” with CONSULT-II or P1774 without CONSULT-II is detected under the following conditions.
  - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 2 is irregular during depressing accelerator pedal. (Other than during shift change)
  - When TCM detects that relation between gear position and condition of ATF pressure switch 2 is irregular during releasing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002YQ

- Harness or connectors  
(The solenoid and switch circuits are open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

### DTC Confirmation Procedure

UCS002YR

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**Selector lever: “1” or “2” position**  
**Gear position: “1st” or “2nd” gear (LC/B ON/OFF)**
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1774) is detected, refer to [AT-176, "Diagnostic Procedure"](#) .  
If DTC (P1772) is detected, go to [AT-173, "Diagnostic Procedure"](#) .

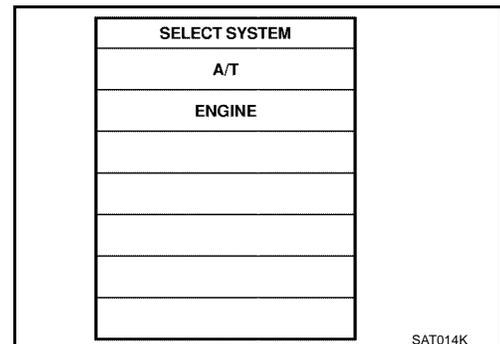

#### WITH GST

Follow the procedure “With CONSULT-II”.

# DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

UCS002YS

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELECTION FORM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Drive vehicle in the 1 or 2 position ("1" or "2" gear) or manual mode ("M1-1st" or "M2-2nd" gear), and confirm the ON/OFF actuation of the "ATF PRES SW 2" and "ON OFF SOL".

DATA MONITOR			
MONITOR		NO DTC	
ON OFF SOL		OFF	
ATF PRES SW 2		OFF	
RECORD			
MODE	BACK	LIGHT	COPY

SCIA4794E

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Low coast brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94. "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-175. "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255. "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

# DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

---

## 5. DETECT MALFUNCTIONING ITEM

---

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

NG >> Repair or replace damaged parts.

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-175, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DTC P1815 MANUAL MODE SWITCH

## DTC P1815 MANUAL MODE SWITCH

PF:34901

### Description

UCS002S1

When an impossible pattern of switch signals is detected, this is judged to be an irregularity.

### CONSULT-II Reference Value in Data Monitor Mode

UCS002S2

Monitor Item	Condition	Reference Value
MANU MODE SW [ON - OFF]	Manual shift gate position (neutral)	ON
	Other than the above	OFF
NON M-MODE SW [ON - OFF]	Manual shift gate position	OFF
	Other than the above	ON
UP SW LEVER [ON - OFF]	Select lever: + side	ON
	Other than the above	OFF
DOWN SW LEVER [ON - OFF]	Select lever: - side	ON
	Other than the above	OFF

### On Board Diagnosis Logic

UCS002S3

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "MANU MODE SW/CIR" with CONSULT-II is detected when TCM monitors Manual mode, Non manual mode, Up or Down switch signal, and detects as irregular when impossible input pattern occurs 1 second or more.

### Possible Cause

UCS002S4

- Harness or connectors (These switches circuit is open or shorted.)
- Mode select switch (Into control device)
- Position select switch (Into control device)

### DTC Confirmation Procedure

UCS002S5


#### NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Move selector lever to "M" position.
4. Start engine and drive vehicle for at least 2 consecutive seconds.
5. If DTC is detected, go to [AT-180, "Diagnostic Procedure"](#).


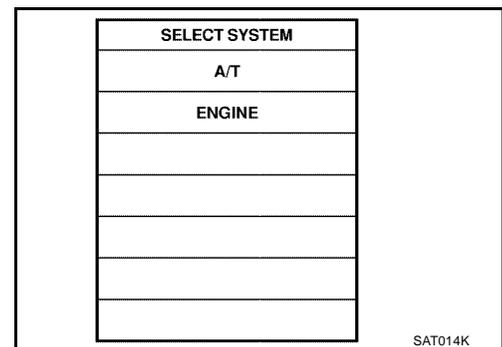


# DTC P1815 MANUAL MODE SWITCH

UCS002S6

## Wiring Diagram WIRING DIAGRAM — MMSW

### AT-MMSW-01

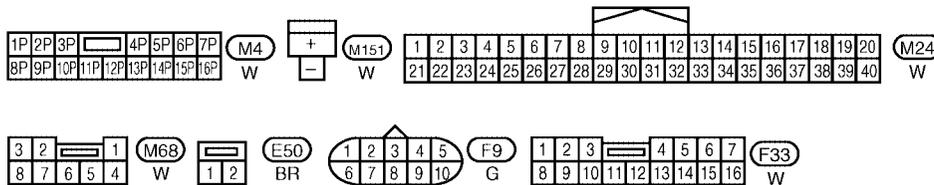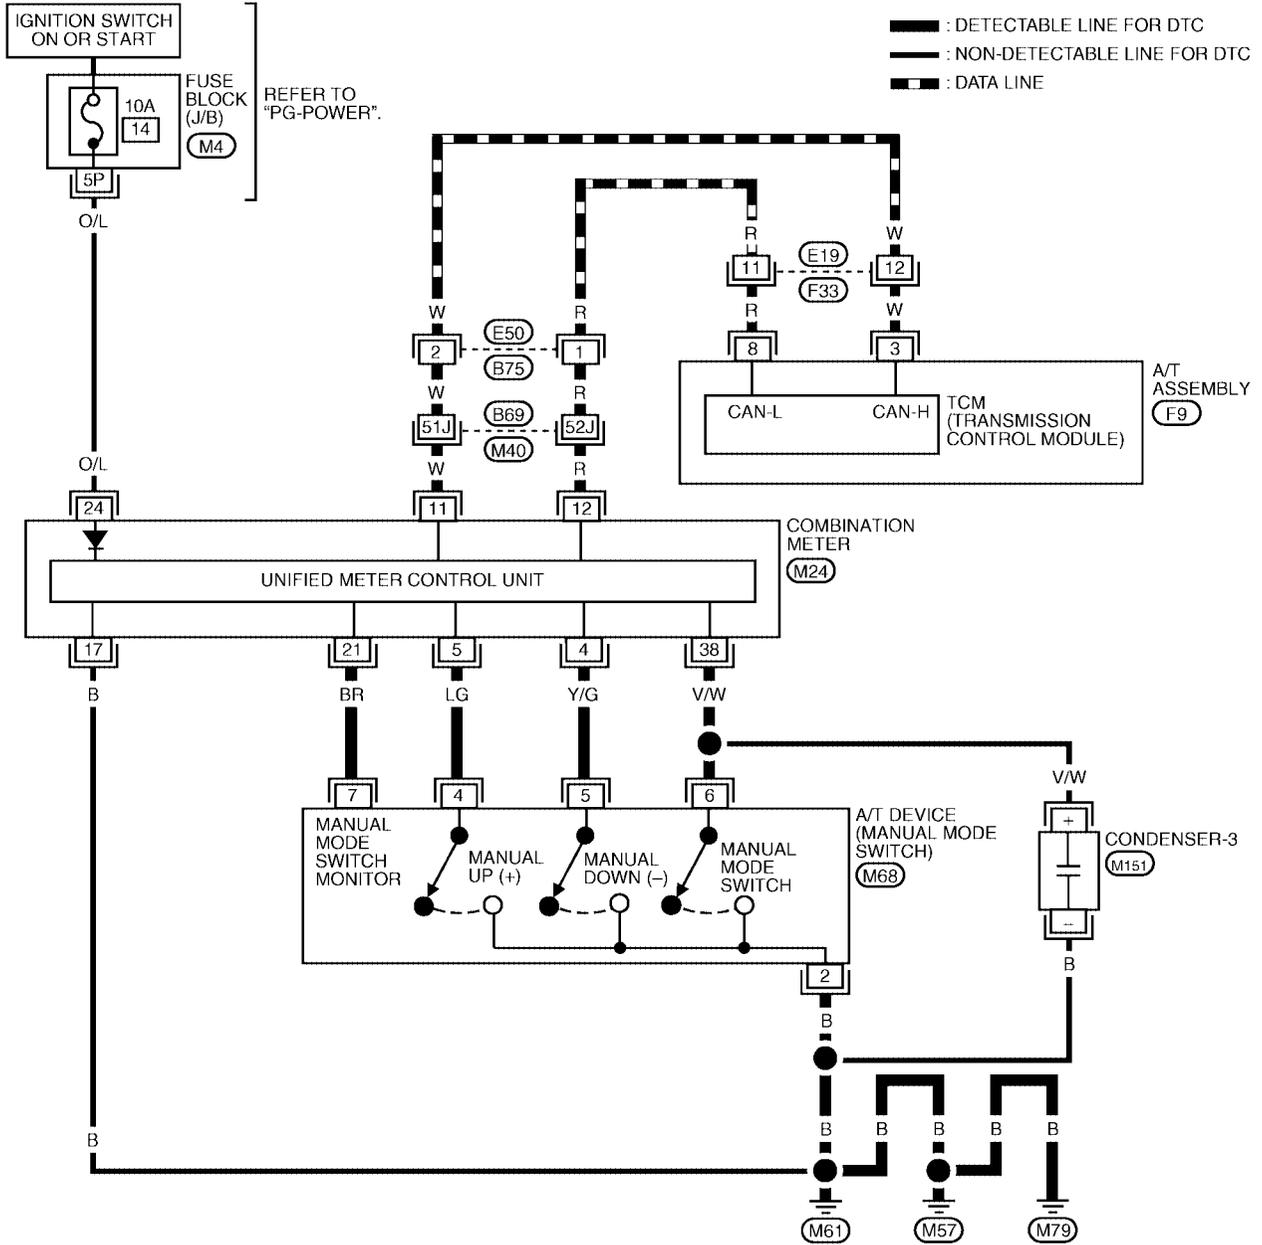

REFER TO THE FOLLOWING.  
**(M40)** - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0231E

# DTC P1815 MANUAL MODE SWITCH

UCS002S7

## Diagnostic Procedure

### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?

Yes or No

- Yes >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .  
No >> GO TO 2.

### 2. CHECK MANUAL MODE SWITCH CIRCUIT

#### ④ With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "UNIFIED METER AND A/C AMP INPUT SIGNALS" in "DATA MONITOR" mode for "METER A/C AMP" with CONSULT-II.
3. Read out ON/OFF switching action of the "AT-M GEAR".

DATA MONITOR	
MONITOR	
AT-M IND	OFF
AT-M GEAR	OFF
P RANGE IND	ON
R RANGE IND	OFF
N RANGE IND	OFF
D RANGE IND	OFF

PKIA2062E

#### ⊗ Without CONSULT-II

Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "+" (up)" or "-" (down)" side (1st ⇔ 5th gear).

OK or NG

- OK >> GO TO 6.  
NG >> GO TO 3.

### 3. DETECT MALFUNCTIONING ITEM

Check the following items.

- Manual mode switch. Refer to [AT-181, "Component Inspection"](#) .
- Pin terminals for damage or loose connection with harness connector.
- Open circuit or short to ground or short to power in harness or connector for A/T device (manual mode switch).

OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace damaged parts.

### 4. CHECK TCM

Perform TCM input/output signal inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

OK or NG

- OK >> GO TO 6.  
NG >> GO TO 5.

# DTC P1815 MANUAL MODE SWITCH

## 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transmission assembly. Refer to [AT-270, "Removal and Installation \(4x2\)"](#) , [AT-273, "Removal and Installation \(4x4\)"](#) .
- NG >> Repair or replace damaged parts.

## 6. CHECK DTC

Perform DTC Confirmation Procedure.

- Refer to [AT-178, "DTC Confirmation Procedure"](#) .

OK or NG


- OK >> **INSPECTION END**
- NG >> GO TO 4.

## Component Inspection MANUAL MODE SWITCH

UCS002S8

Check continuity between terminals.

Item	Position	Connector No.	Terminal No. (Unit side)	Continuity
Manual mode (select) switch	Manual	M34	2 - 6	Yes
UP switch	UP		2 - 4	
DOWN switch	DOWN		2 - 5	

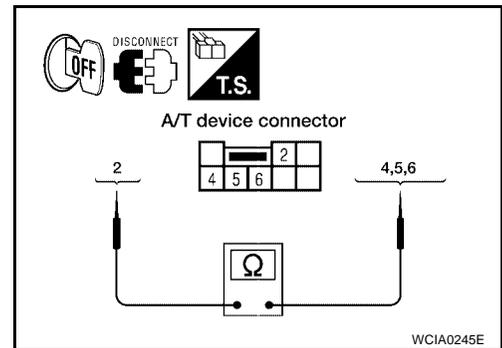

## Position Indicator Lamp DIAGNOSTIC PROCEDURE

UCS002S9


### 1. CHECK INPUT SIGNALS (WITH CONSULT-II)

Ⓜ With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for A/T with CONSULT-II and read out the value of "GEAR".
3. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the select lever is shifted to the "+ (up)" or "- (down)" side (1st ↔ 5th gear).

OK or NG

- OK >> **INSPECTION END**
- NG >> Check the following items.

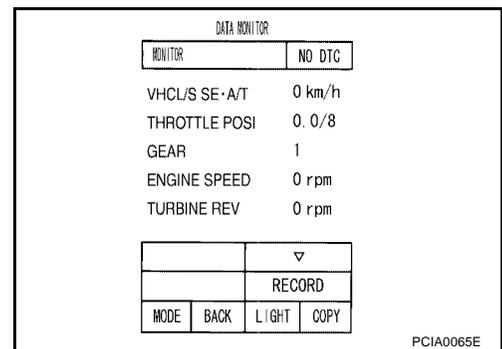

## Position Indicator Lamp Symptom Chart

## DTC P1815 MANUAL MODE SWITCH

Items	Presumed Location of Trouble
The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). The position indicator lamp is not indicated.	Manual mode switch Refer to <a href="#">AT-178, "DTC P1815 MANUAL MODE SWITCH"</a> . A/T main system (Fail-safe function actuated) ● Refer to <a href="#">AT-97, "CONSULT-II SETTING PROCEDURE"</a> .
The actual gear position changes, but the position indicator lamp is not indicated.	Perform the self-diagnosis function. ● Refer to <a href="#">AT-97, "CONSULT-II SETTING PROCEDURE"</a> .
The actual gear position and the indication on the position indicator lamp do not coincide.	Perform the self-diagnosis function. ● Refer to <a href="#">AT-97, "CONSULT-II SETTING PROCEDURE"</a> .
Only a specific position or positions is/are not indicated on the position indicator lamp.	Check the combination meter. Refer to <a href="#">DI-5, "COMBINATION METERS"</a> .

# DTC P1841 ATF PRESSURE SWITCH 1

## DTC P1841 ATF PRESSURE SWITCH 1

PFP:25240

### Description

UCS002YT

Fail-safe function to detect front brake clutch solenoid valve condition.

### CONSULT-II Reference Value

UCS002YU

Item name	Condition	Display value
ATF PRES SW 1	Front brake engaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	ON
	Front brake disengaged. Refer to <a href="#">AT-21</a> , <a href="#">AT-23</a> .	OFF

### On Board Diagnosis Logic

UCS002YV

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “ATF PRES SW 1/CIRC” with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002YW

- ATF pressure switch 1
- Harness or connectors  
(The switch circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002YX

#### CAUTION:

Always drive vehicle at a safe speed.

#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.


After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: “D” position**  
**Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II.

If DTC (P1841) is detected, go to [AT-184, "Diagnostic Procedure"](#) .

If DTC (P1757) is detected, go to [AT-155, "Diagnostic Procedure"](#) .

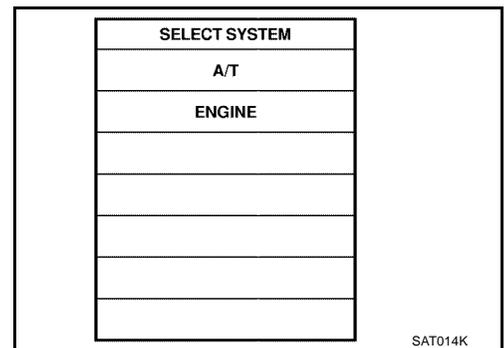

# DTC P1841 ATF PRESSURE SWITCH 1

UCS002YY


## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1".

Item name	Condition	Display value
ATF PRES SW 1	Front brake engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Front brake disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

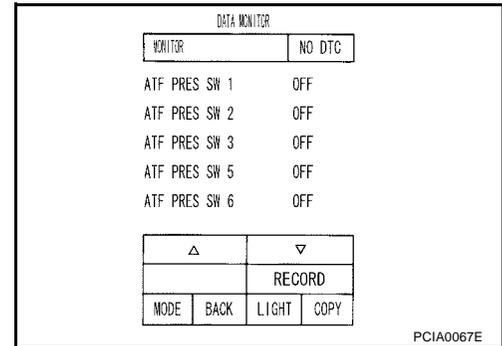

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-183, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

# DTC P1841 ATF PRESSURE SWITCH 1

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-183, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1843 ATF PRESSURE SWITCH 3

## DTC P1843 ATF PRESSURE SWITCH 3

PFP:25240

### Description

UCS002YZ

Fail-safe function to detect input clutch solenoid valve condition.

### CONSULT-II Reference Value

UCS002Z0

Item name	Condition	Display value
ATF PRES SW 3	Input clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Input clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002Z1

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “ATF PRES SW 3/CIRC” with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002Z2

- ATF pressure switch 3
- Harness or connectors  
(The switch circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002Z3

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: “D” position**  
**Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II.  
If DTC (P1843) is detected, go to [AT-187, "Diagnostic Procedure"](#) .  
If DTC (P1752) is detected, go to [AT-149, "Diagnostic Procedure"](#) .

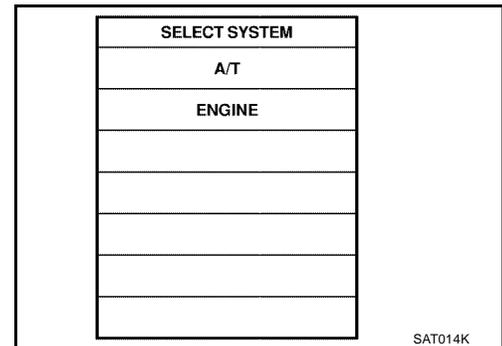

SAT014K

# DTC P1843 ATF PRESSURE SWITCH 3

UCS002Z4

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 3".

DATA MONITOR	
MONITOR	NO. DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

Δ	▽
RECORD	
MODE	BACK
LIGHT	COPY

PCIA0067E

Item name	Condition	Display value
ATF PRES SW 3	Input clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Input clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-186, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

## DTC P1843 ATF PRESSURE SWITCH 3

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-186, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# DTC P1845 ATF PRESSURE SWITCH 5

## DTC P1845 ATF PRESSURE SWITCH 5

PFP:25240

### Description

UCS002Z5

Fail-safe function to detect direct clutch solenoid valve condition.

### CONSULT-II Reference Value

UCS002Z6

Item name	Condition	Display value
ATF PRES SW 5	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS002Z7

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “ATF PRES SW 5/CIRC” with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS002Z8

- ATF pressure switch 5
- Harness or connectors  
(The switch circuit is open or shorted.)

### DTC Confirmation Procedure

UCS002Z9

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: “D” position**  
**Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II.  
If DTC (P1845) is detected, go to [AT-190, "Diagnostic Procedure"](#) .  
If DTC (P1762) is detected, go to [AT-161, "Diagnostic Procedure"](#) .

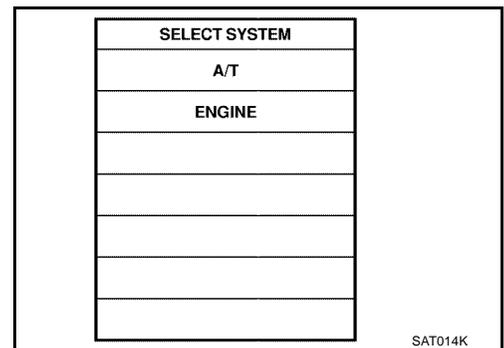

# DTC P1845 ATF PRESSURE SWITCH 5

UCS002ZA


## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 5".

Item name	Condition	Display value
ATF PRES SW 5	Direct clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	Direct clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

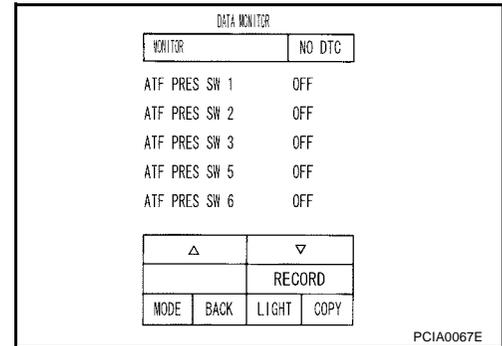

#### OK or NG

- OK >> GO TO 6.  
NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.  
NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-189, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .  
NG >> Repair or replace damaged parts.

# DTC P1845 ATF PRESSURE SWITCH 5

---

## 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-189, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

A

B

AT

D

E

F

G

H

I

J

K

L

M

# DTC P1846 ATF PRESSURE SWITCH 6

## DTC P1846 ATF PRESSURE SWITCH 6

PFP:25240

### Description

UCS0022B

Fail-safe function to detect high & low reverse clutch solenoid valve condition.

### CONSULT-II Reference Value

UCS0022C

Item name	Condition	Display value
ATF PRES SW 6	High and low reverse clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	High and low reverse clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

### On Board Diagnosis Logic

UCS0022D

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “ATF PRES SW 6/CIRC” with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)

### Possible Cause

UCS0022E

- ATF pressure switch 6
- Harness or connectors  
(The switch circuit is open or shorted.)

### DTC Confirmation Procedure

UCS0022F

#### CAUTION:

Always drive vehicle at a safe speed.


#### NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

#### ④ WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.  
**ACCELE POS: 1.5/8 - 2.0/8**  
**Selector lever: “D” position**  
**Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)**  
**Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II.  
If DTC (P1846) is detected, go to [AT-193, "Diagnostic Procedure"](#) .  
If DTC (P1767) is detected, go to [AT-167, "Diagnostic Procedure"](#) .

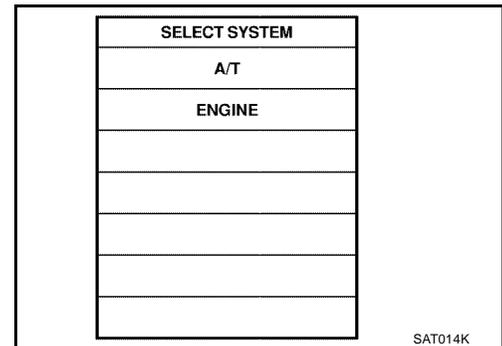

# DTC P1846 ATF PRESSURE SWITCH 6

UCS002ZG

## Diagnostic Procedure

### 1. CHECK INPUT SIGNALS

#### With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6".

DATA MONITOR	
MONITOR	NO. DTC
ATF PRES SW 1	OFF
ATF PRES SW 2	OFF
ATF PRES SW 3	OFF
ATF PRES SW 5	OFF
ATF PRES SW 6	OFF

Δ	▽
RECORD	
MODE	BACK
LIGHT	COPY

PCIA0067E

Item name	Condition	Display value
ATF PRES SW 6	High and low reverse clutch engaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	ON
	High and low reverse clutch disengaged. Refer to <a href="#">AT-23</a> , <a href="#">AT-21</a> .	OFF

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 2.

### 2. CHECK TCM

Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

### 3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-192, "DTC Confirmation Procedure"](#) .

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

### 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

### 5. DETECT MALFUNCTIONING ITEM

Check the following items:

- Power supply and ground circuit for TCM.
- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

#### OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
- NG >> Repair or replace damaged parts.

## DTC P1846 ATF PRESSURE SWITCH 6

---

### 6. CHECK DTC

---

Perform "DTC Confirmation Procedure".

- Refer to [AT-192, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 2.

# TOW MODE SWITCH

PFP:25129

## TOW MODE SWITCH

### Description

UCS002ZH

When tow mode switch is "ON", tow mode switch signals are sent to TCM from combination meter by CAN communication line. Then it's a tow mode condition.

### Diagnostic Procedure

UCS002ZI

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#).  
 NO >> GO TO 2.


#### 2. CHECK POWER SOURCE

- Turn ignition switch "ON". (Do not start engine.)
- Check the voltage between tow mode switch connector terminal 1 and ground.

Condition	Tow mode switch	Data (Approx.)
When ignition switch is turned to "ON"	ON	0V
	OFF	Battery voltage

OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 3.

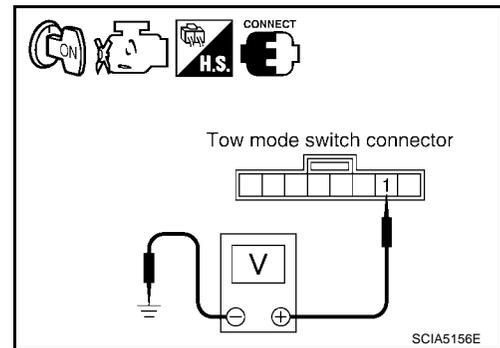


#### 3. CHECK TOW MODE SWITCH

- Turn ignition switch "OFF".
- Disconnect tow mode switch connector.
- Check continuity between tow mode switch connector M254 terminals 1 and 2.

Condition	Continuity
Tow mode switch "ON"	Yes
Tow mode switch "OFF"	No

OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace tow mode switch.

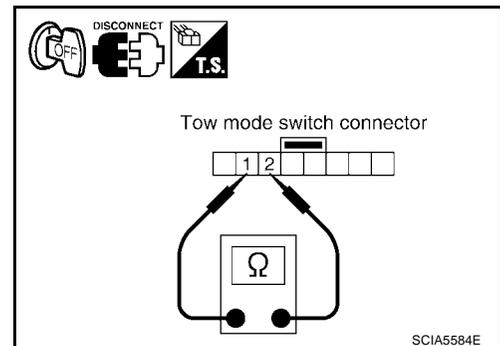

#### 4. DETECT MALFUNCTIONING ITEM

Check the following items. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between combination meter connector terminal 35 and tow mode switch connector terminal 1.
- Harness for short or open between tow mode switch connector terminal 2 and ground.

OK or NG

- OK >> GO TO 5.  
 NG >> Repair or replace damaged parts.

## TOW MODE SWITCH

---

### 5. CHECK COMBINATION METER

---

Check the combination meter. Refer to [DI-5, "COMBINATION METERS"](#) .

OK or NG

- OK >> **INSPECTION END**
- NO >> Repair or replace damaged parts.

# CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

## CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

PFP:18002

### CONSULT-II Reference Value

UCS002ZJ

Item name	Condition	Display value
CLSD THL POS	Released accelerator pedal.	ON
	Fully depressed accelerator pedal.	OFF
W/O THL POS	Fully depressed accelerator pedal.	ON
	Released accelerator pedal.	OFF

### Diagnostic Procedure

UCS002ZK

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

#### 2. CHECK THROTTLE POSITION SIGNAL CIRCUIT

##### With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Depress accelerator pedal and read out the value of "CLSD THL POS" and "W/O THL POS".

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF
▼	
RECORD	
MODE	BACK
LIGHT	COPY

PCIA0070E

Accelerator Pedal Operation	Monitor Item	
	CLSD THL POS	W/O THL POS
Released	ON	OFF
Fully depressed	OFF	ON

##### OK or NG

- OK >> **INSPECTION END**
- NG >> Check the following items. If NG, repair or replace damaged parts.
  - Perform the self-diagnosis for "ENGINE" with CONSULT-II.
  - Open circuit or short to ground or short to power in harness or connectors.
  - Pin terminals for damage or loose connection with harness connector.

# BRAKE SIGNAL CIRCUIT

## BRAKE SIGNAL CIRCUIT

PFP:25320

### CONSULT-II Reference Value

UCS002ZL

Item name	Condition	Display value
BRAKE SW	Depressed brake pedal.	ON
	Released brake pedal.	OFF

### Diagnostic Procedure

UCS002ZM

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .  
 NO >> GO TO 2.


#### 2. CHECK STOP LAMP SWITCH CIRCUIT

##### Ⓟ With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out ON/OFF switching action of the "BRAKE SW".

OK or NG

- OK >> **INSPECTION END**  
 NG >> GO TO 3.

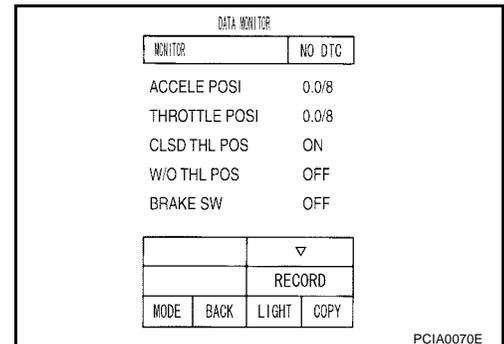

#### 3. CHECK STOP LAMP SWITCH


Check continuity between stop lamp switch harness connector terminals 1 and 2.

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .

OK or NG

- OK >> **INSPECTION END**  
 NG >> Check the following items. If NG, repair or replace damaged parts.
- Harness for short or open between battery and stop lamp switch.
  - Harness for short or open between stop lamp switch and combination meter.

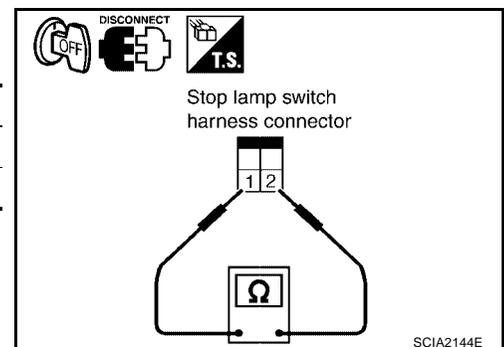

# TROUBLE DIAGNOSIS FOR SYMPTOMS

PF0:00007

## TROUBLE DIAGNOSIS FOR SYMPTOMS

### AT CHECK Indicator Lamp does not come on SYMPTOM:

UCS002ZN

AT CHECK indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

### DIAGNOSTIC PROCEDURE

#### 1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Is a malfunction in the CAN communication indicated in the results?


Yes or No

- Yes >> Check CAN communication line. Refer to [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .  
No >> GO TO 2.

#### 2. CHECK TCM POWER SOURCE


1. Disconnect A/T assembly harness connector.
2. Turn ignition switch "ON". (Do not start engine.)
3. Check voltage between A/T assembly harness connector (vehicle side) and ground. Refer to [AT-55, "Wiring Diagram — AT —"](#) .

Item	Connector No.	Terminal No. (Wire color)	Voltage
TCM	F9	1 (P) - Ground	Battery voltage
		2 (P) - Ground	
		6 (Y/R) - Ground	

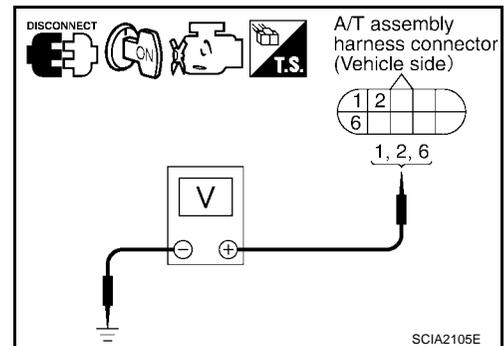

4. Turn ignition switch "OFF".
5. Check voltage between A/T assembly harness connector (vehicle side) and ground. Refer to [AT-55, "Wiring Diagram — AT —"](#) .

Item	Connector No.	Terminal No. (Wire color)	Voltage
TCM	F9	1 (P) - Ground	Battery voltage
		2 (P) - Ground	
		6 (Y/R) - Ground	

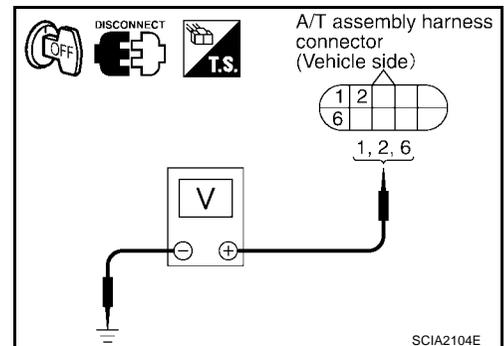

OK or NG

- OK >> GO TO 4.  
NG >> GO TO 3.

#### 3. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness for short or open between battery and TCM connector terminals 1, 2
- Harness for short or open between ignition switch and TCM connector terminal 6
- 10A fuse (No. 3, located in the fuse block)
- 10A fuse (No. 49, located in the IPDM E/R)
- Ignition switch, Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace damaged parts.


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect the TCM connector.
3. Check the continuity between A/T assembly harness connector (vehicle side) 5 (B), 10 (B) and ground. Refer to [AT-55, "Wiring Diagram — AT —"](#).
4. If OK, check the harness for short-circuit to ground or the power source.

### OK or NG

- OK >> GO TO 5.  
NG >> Repair the open or short circuit in the harness or connector.

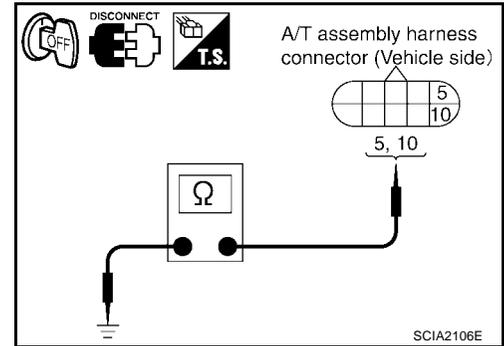

## 5. CHECK AT CHECK INDICATOR LAMP CIRCUIT

1. Turn ignition switch "OFF".
2. Check the combination meter.  
Refer to [DI-5, "COMBINATION METERS"](#).

### OK or NG

- OK >> Inspection End.  
NG >> Replace the combination meter. Refer to [DI-25, "Removal and Installation of Combination Meter"](#).

## Engine Cannot Be Started In "P" or "N" Position

UCS00220

### SYMPTOM:

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D" or "R" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis.

Do the self-diagnosis results indicate PNP switch?

- Yes >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).
- No >> GO TO 2.


#### 2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#).

### OK or NG

- OK >> GO TO 3.  
NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#).

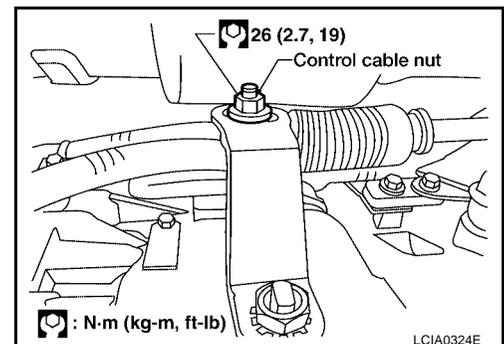

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 3. CHECK STARTING SYSTEM

Check the starting system. Refer to [SC-10, "STARTING SYSTEM"](#) .

OK or NG

- OK >> Inspection End.
- NG >> Repair or replace damaged parts.

### In "P" Position, Vehicle Moves When Pushed SYMPTOM:

UCS002ZP

Even though the selector lever is set in the "P" position, the parking mechanism is not actuated, allowing the vehicle to be moved when it is pushed.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.


#### 2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

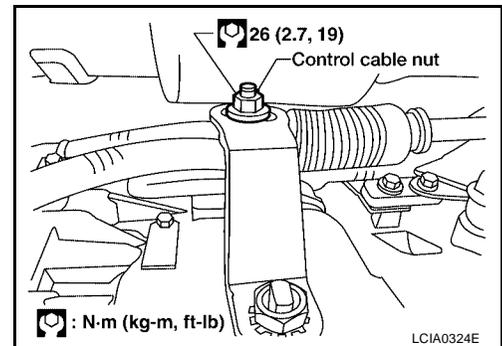

#### 3. CHECK PARKING COMPONENTS

Check parking components. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 4
- NG >> Repair or replace damaged parts.

#### 4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.58)

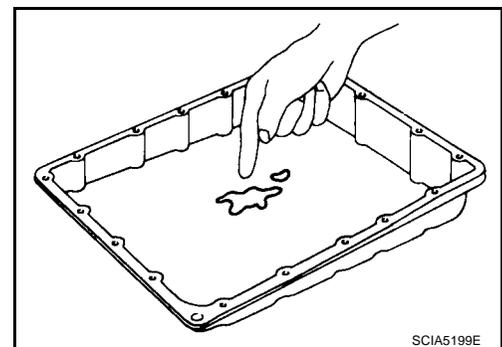

# TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS002Z0

## In "N" Position, Vehicle Moves

### SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .

NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE


Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

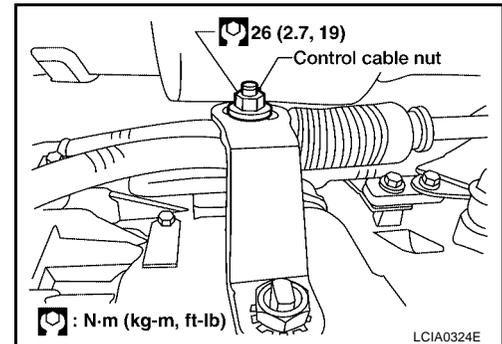


#### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

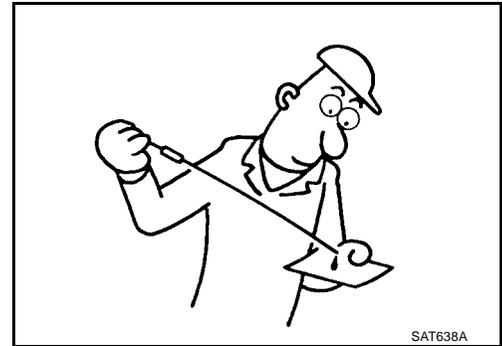

#### 4. CHECK A/T FLUID CONDITION


1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

OK >> GO TO 5.

NG >> Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.67).

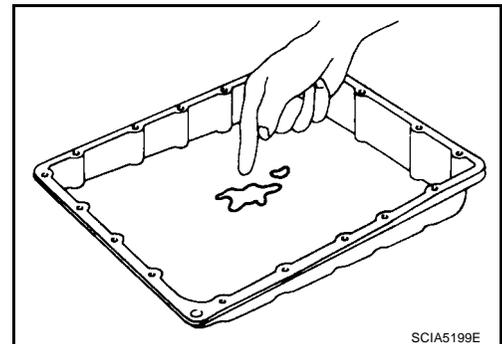

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. CHECK SYMPTOM

Check again. Refer to [AT-66, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## Large Shock ("N" to "D" Position) SYMPTOM:

UCS002ZR

A noticeable shock occurs when the selector lever is shifted from the "N" to "D" position.

## DIAGNOSTIC PROCEDURE

### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate A/T fluid temperature sensor, engine speed signal, accelerator pedal position sensor, ATF pressure switch 1, front brake solenoid valve, CAN communication line?

- YES >> Check the malfunctioning system. Refer to [AT-134, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT"](#) , [AT-119, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

### 2. ENGINE IDLE SPEED

Check the engine idle speed. Refer to [EC-32, "Idle Speed and Ignition Timing Check"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair.


### 3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

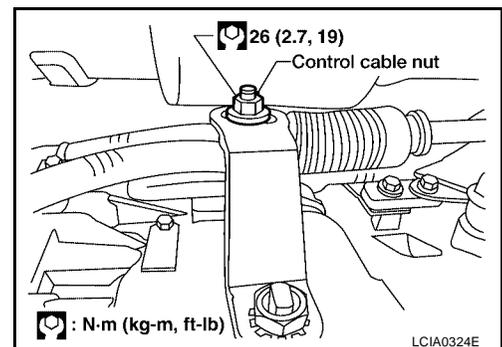


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Refill ATF.

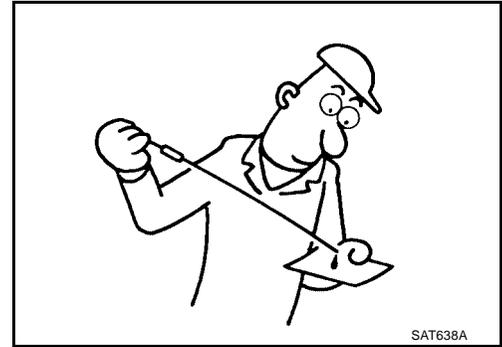


## 5. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in "D" position. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 8.
- NG - 1 >> Line pressure high: GO TO 6.
- NG - 2 >> Line pressure low: GO TO 7.

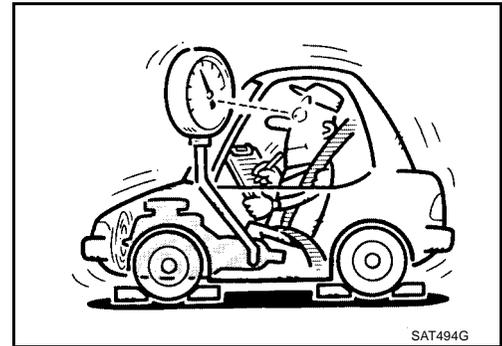

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## 7. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 9.

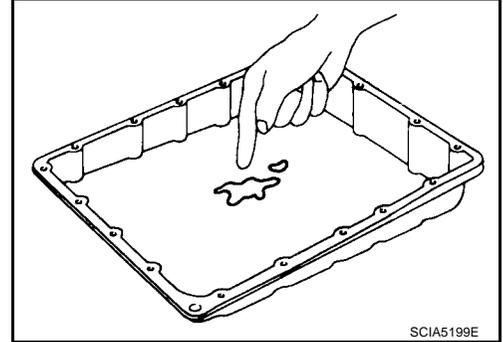

## 9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.1).

OK or NG

- OK >> GO TO 10.
- NG >> Repair or replace damaged parts.

## 10. CHECK SYMPTOM

Check again. Refer to [AT-66, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 11.

## 11. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS002ZS

## Vehicle Does Not Creep Backward In "R" Position

### SYMPTOM:

The vehicle does not creep in the "R" position. Or an extreme lack of acceleration is observed.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate accelerator pedal position sensor, ATF pressure switch 6, high and low reverse clutch solenoid valve, CAN communication line, PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-192, "DTC P1846 ATF PRESSURE SWITCH 6"](#) , [AT-166, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"](#) , [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) , [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .

NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE


Check the control cable.

● Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

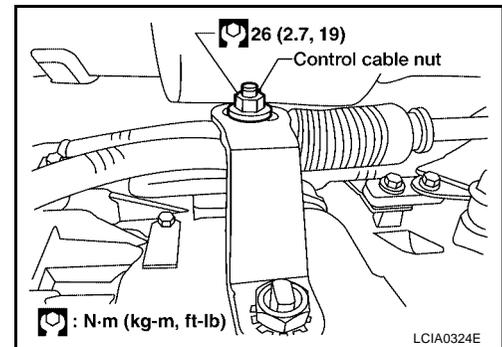


#### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

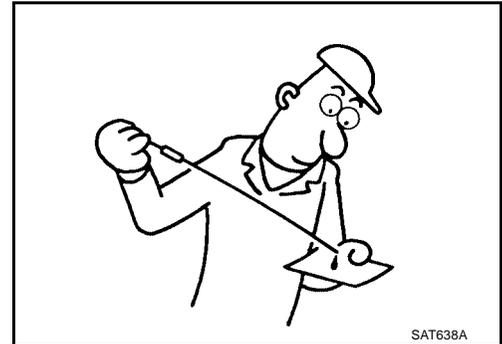

#### 4. CHECK STALL TEST

Check stall revolution with selector lever in "1" and "R" positions.

Refer to [AT-62, "STALL TEST"](#) .

OK or NG

OK >> GO TO 6.

OK in "M" position, NG in "R" position>>GO TO 5.

NG in both "M" and "R" positions>>GO TO 8.



# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. DETECT MALFUNCTIONING ITEM

1. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
2. Check the following items:
  - Reverse brake. Refer to [AT-288, "Disassembly"](#) .

### OK or NG


- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

## 6. CHECK LINE PRESSURE

Check the line pressure with the engine idling. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

### OK or NG

- OK >> GO TO 9.
- NG - 1 >> Line pressure high. GO TO 7.
- NG - 2 >> Line pressure low. GO TO 8.

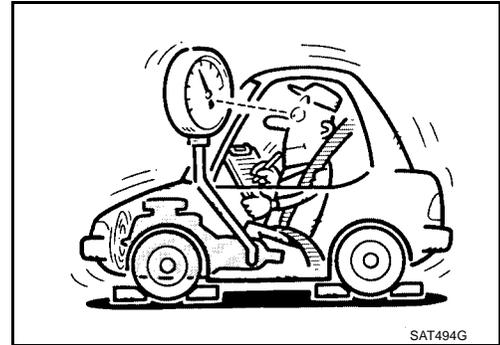

## 7. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

### OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

## 8. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

### OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 9. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 13.

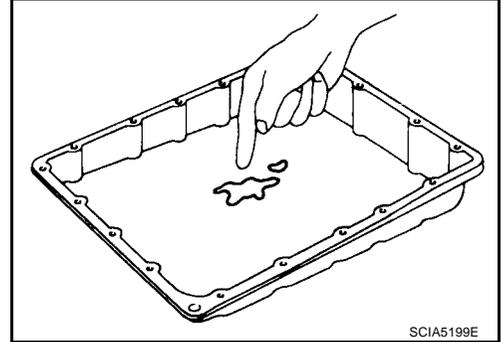

## 10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 11.
- NG >> Repair or replace damaged parts.

## 11. CHECK SYMPTOM

Check again. Refer to [AT-66, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 12.

## 12. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## 13. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 11.
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS002ZT

## Vehicle Does Not Creep Forward In "D" Position

### SYMPTOM:

Vehicle does not creep forward when selecting "D" position.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#).

Do the self-diagnostic results indicate accelerator pedal position sensor, CAN communication line, PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#), [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#), [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#).

NO >> GO TO 2.

#### 2. CHECK CONTROL CABLE


Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#).

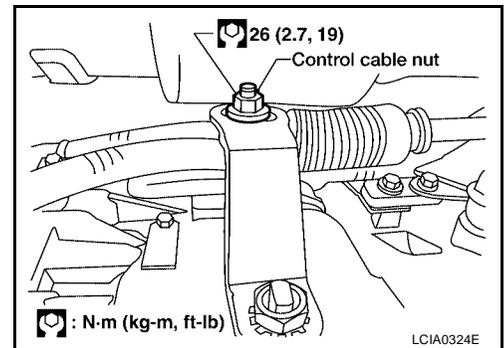


#### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#).

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

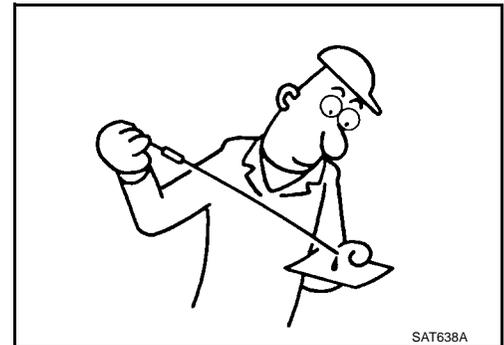

#### 4. CHECK STALL TEST

Check stall revolution with selector lever in "D" position. Refer to [AT-62, "STALL TEST"](#).

OK or NG

OK >> GO TO 5.

NG >> GO TO 7.




# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in "D" position. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 8.
- NG - 1 >> Line pressure high. GO TO 6.
- NG - 2 >> Line pressure low. GO TO 7.

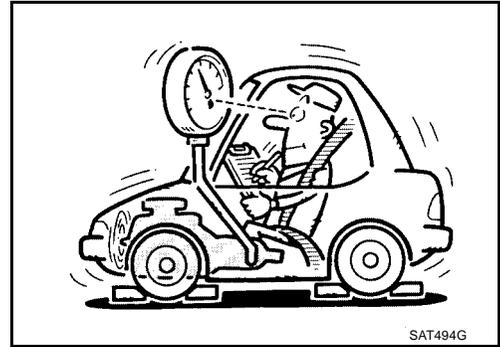

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## 7. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## 8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 12.

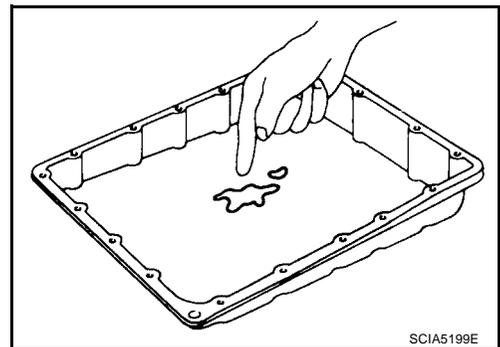

# TROUBLE DIAGNOSIS FOR SYMPTOMS

---

## 9. DETECT MALFUNCTIONING ITEM

---

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
- NG >> Repair or replace damaged parts.

---

## 10. CHECK SYMPTOM

---

Check again. Refer to [AT-66, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 11.

---

## 11. PERFORM TCM INSPECTION

---

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

---

## 12. DETECT MALFUNCTIONING ITEM

---

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
- NG >> Repair or replace damaged parts.

### Vehicle Cannot Be Started From D1 SYMPTOM:

UCS002ZU

Vehicle cannot be started from D1 on cruise test - Part 1.

### DIAGNOSTIC PROCEDURE

---

#### 1. CONFIRM THE SYMPTOM

---

Check if vehicle creeps in "R" position.

OK or NG

- OK >> GO TO 2.
- NG >> Refer to [AT-206, "Vehicle Does Not Creep Backward In "R" Position"](#) .

---

#### 2. CHECK SELF-DIAGNOSTIC RESULTS

---

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system.
- NO >> GO TO 3.

## TROUBLE DIAGNOSIS FOR SYMPTOMS

### 3. CHECK ACCELERATOR POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#)

OK or NG

OK >> GO TO 4.

NG >> Repair or replace accelerator pedal position (APP) sensor.


### 4. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 5.

NG >> Refill ATF.

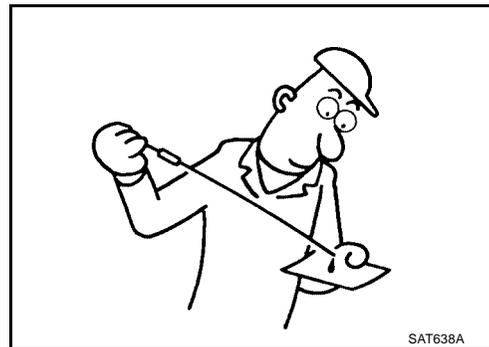

### 5. CHECK LINE PRESSURE


Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 8.

NG - 1 >> Line pressure high. GO TO 6.

NG - 2 >> Line pressure low. GO TO 7.

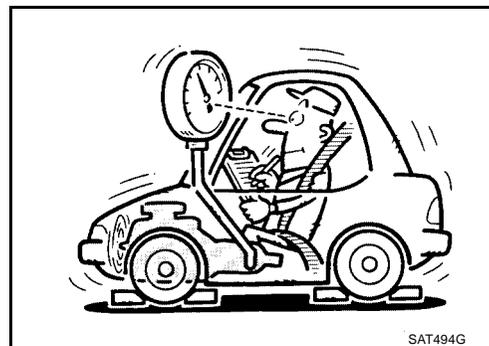

### 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .

2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .

3. Check the following items:

- Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 7. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## 8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 12.

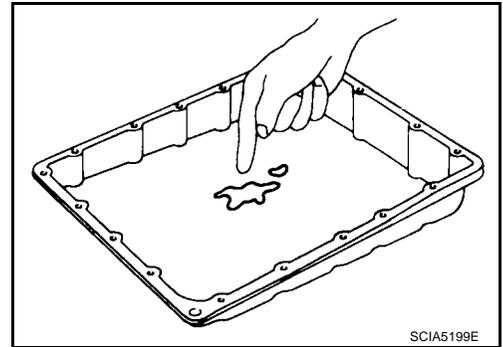

## 9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
- NG >> Repair or replace damaged parts.

## 10. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) , [AT-69, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 11.

## 11. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 12. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
- NG >> Repair or replace damaged parts.

### A/T Does Not Shift: D1 → D2

UCS002ZV

#### SYMPTOM:

The vehicle does not shift-up from the D1 to D2 gear at the specified speed.

#### DIAGNOSTIC PROCEDURE

### 1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.
- NG >> Refer to [AT-209, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

### 2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate ATF pressure switch 5, direct clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

- YES >> Check the malfunctioning system. Refer to [AT-189, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-160, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
- NO >> GO TO 3.

### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.




### 4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 7.
- NG - 1 >> Line pressure high. GO TO 5.
- NG - 2 >> Line pressure low. GO TO 6.

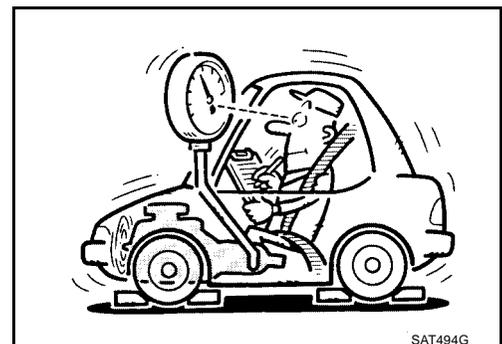

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

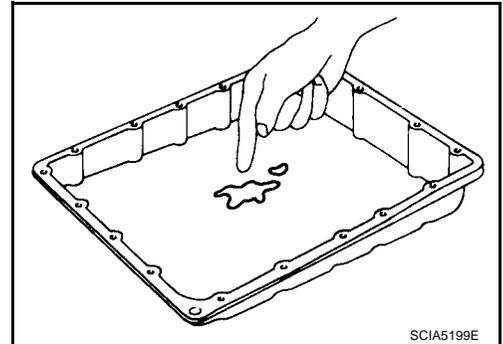

## 8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

## 9. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) , [AT-69, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

## 11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.  
NG >> Repair or replace damaged parts.

### A/T Does Not Shift: D2 → D3 SYMPTOM:

UCS002ZW

The vehicle does not shift-up from D2 to D3 gear at the specified speed.

### DIAGNOSTIC PROCEDURE

#### 1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position" and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.  
NG >> Refer to [AT-209, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

#### 2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate ATF pressure switch 6, high and low reverse clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?


- YES >> Check the malfunctioning system. Refer to [AT-192, "DTC P1846 ATF PRESSURE SWITCH 6"](#) , [AT-166, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
- NO >> GO TO 3.

#### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.  
NG >> Refill ATF.

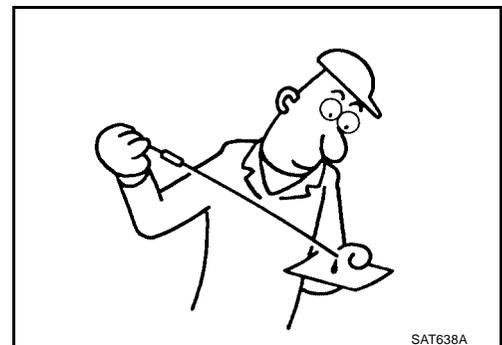


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 7.
- NG - 1 >> Line pressure high. GO TO 5.
- NG - 2 >> Line pressure low. GO TO 6.

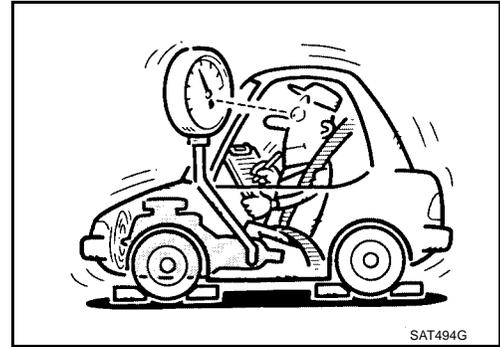

## 5. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

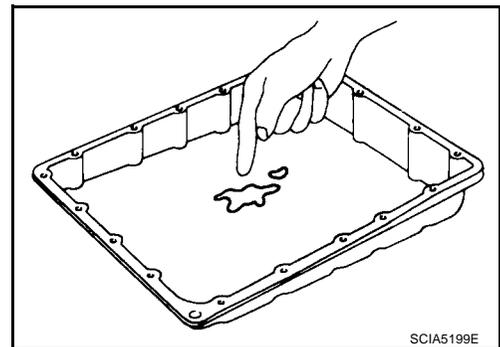

# TROUBLE DIAGNOSIS FOR SYMPTOMS

---

## 8. DETECT MALFUNCTIONING ITEM

---

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.  
NG >> Repair or replace damaged parts.

---

## 9. CHECK SYMPTOM

---

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) , [AT-69, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**  
NG >> GO TO 10.

---

## 10. PERFORM TCM INSPECTION

---

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

---

## 11. DETECT MALFUNCTIONING ITEM

---

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.  
NG >> Repair or replace damaged parts.

### **A/T Does Not Shift: D3 → D4**

UCS002ZX

#### **SYMPTOM:**

- The vehicle does not shift-up from the D3 to D4 gear at the specified speed.
- The vehicle does not shift-up from the D3 to D4 gear unless A/T is warmed up.

#### **DIAGNOSTIC PROCEDURE**

---

### 1. CONFIRM THE SYMPTOM

---

Check if vehicle creeps forward in "D" position" and vehicle can be started from D1.

OK or NG

- OK >> GO TO 2.  
NG >> Refer to [AT-209, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

---

### 2. CHECK SELF-DIAGNOSTIC RESULTS

---

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate ATF pressure switch 1, ATF pressure switch 3, front brake solenoid valve, input clutch solenoid valve, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

- YES >> Check the malfunctioning system. Refer to [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-186, "DTC P1843 ATF PRESSURE SWITCH 3"](#) , [AT-148, "DTC P1752 INPUT CLUTCH SOLENOID VALVE"](#) , [AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-132, "DTC](#)

# TROUBLE DIAGNOSIS FOR SYMPTOMS

[P1705 THROTTLE POSITION SENSOR](#) , [AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .

NO >> GO TO 3.

## 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.  
NG >> Refill ATF.



## 4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.  
NG - 1 >> Line pressure high. GO TO 5.  
NG - 2 >> Line pressure low. GO TO 6.



## 5. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

OK >> GO TO 7.  
NG >> Repair or replace damaged parts.

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG

OK >> GO TO 7.  
NG >> Repair or replace damaged parts.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

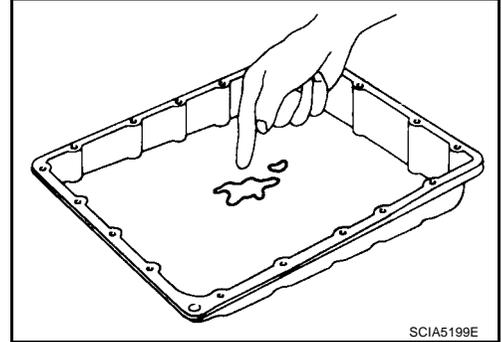

## 8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

## 9. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) , [AT-69, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

## 10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## 11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS002ZY

## A/T Does Not Shift: D4 → D5

### SYMPTOM:

- The vehicle does not shift-up from the D4 to D5 gear at the specified speed.
- The vehicle does not shift-up from the D4 to D5 gear unless A/T is warmed up.

### DIAGNOSTIC PROCEDURE

#### 1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

##### OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-209, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-211, "Vehicle Cannot Be Started From D1"](#) .

#### 2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate ATF pressure switch 1, ATF pressure switch 5, front brake solenoid valve, direct clutch solenoid valve, accelerator pedal position sensor, turbine revolution sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?

YES >> Check the malfunctioning system. Refer to [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-189, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-160, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .

NO >> GO TO 3.


#### 3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

##### OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

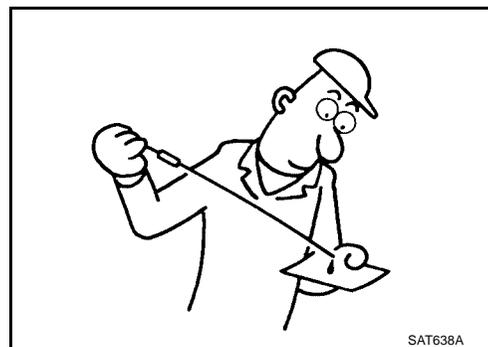

#### 4. CHECK LINE PRESSURE


Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

##### OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

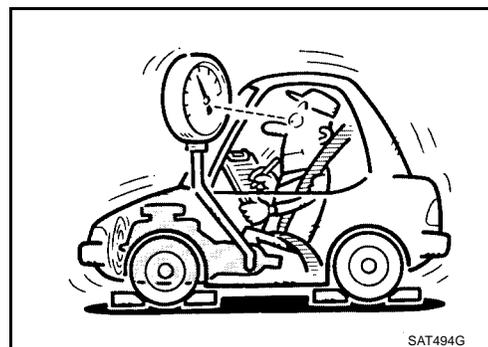

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 6. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 11.

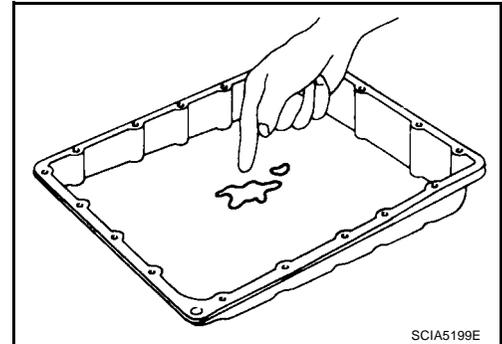

## 8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

## 9. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

## 11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.  
NG >> Repair or replace damaged parts.

### A/T Does Not Perform Lock-up SYMPTOM:

UCS002ZZ

**A/T does not perform lock-up at the specified speed.**

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, accelerator pedal position sensor, CAN communication?


- YES >> Check the malfunctioning system. Refer to [AT-121, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-119, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

#### 2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.  
NG >> Refill ATF.

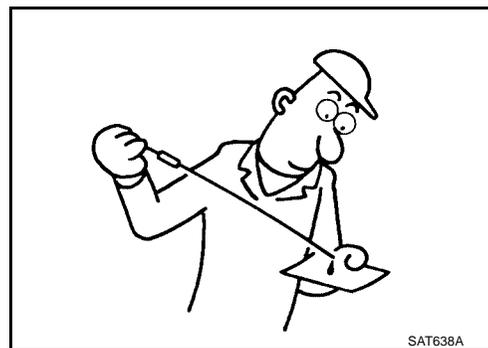

SAT638A


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 3. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-63, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG - 1 >> Line pressure high. GO TO 4.
- NG - 2 >> Line pressure low. GO TO 5.

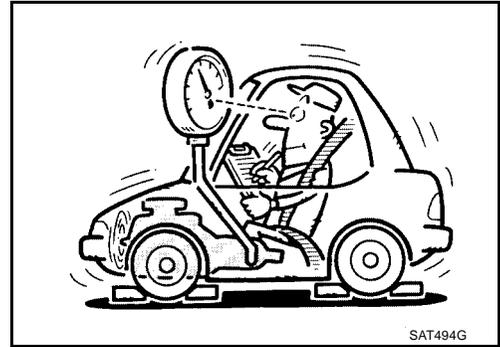

## 4. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 5. DETECT MALFUNCTIONING ITEM

1. Control valve with TCM. Refer to [AT-255, "CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION"](#) .
2. Disassemble A/T. Refer to [AT-288, "DISASSEMBLY"](#) .
3. Check the following items:
  - Oil pump assembly. Refer to [AT-305, "Oil Pump"](#) .
  - Power train system. Refer to [AT-288, "DISASSEMBLY"](#) .
  - Transmission case. Refer to [AT-288, "DISASSEMBLY"](#) .

OK or NG


- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 6. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 10.

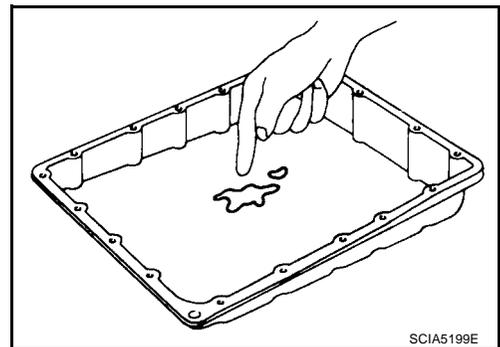

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## 8. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 9.

## 9. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## 10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

## A/T Does Not Hold Lock-up Condition SYMPTOM:

UCS00300

The lock-up condition cannot be maintained for more than 30 seconds.

## DIAGNOSTIC PROCEDURE

### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, CAN communication?

- YES >> Check the malfunctioning system. Refer to [AT-121, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-119, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Refill ATF.

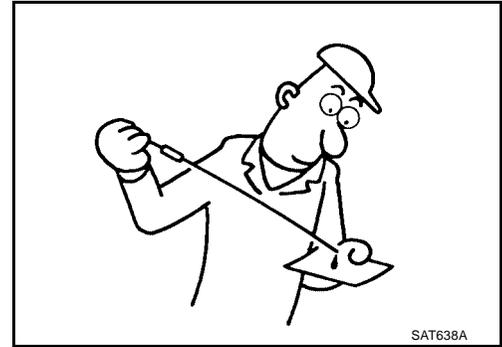


## 3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 7.

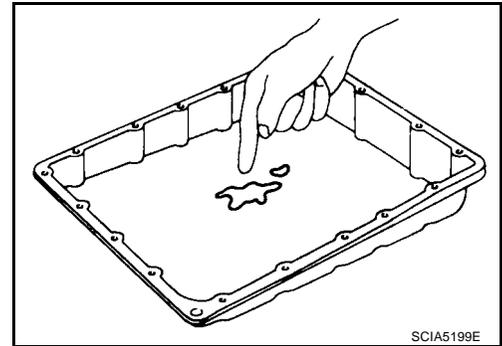

## 4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.25).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

## 5. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.25).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

### Lock-up Is Not Released SYMPTOM:

UCS00301

The lock-up condition cannot be cancelled even after releasing the accelerator pedal.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate torque converter clutch solenoid valve, engine speed signal, turbine revolution sensor, CAN communication?

- YES >> Check the malfunctioning system. Refer to [AT-121, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"](#) , [AT-119, "DTC P0725 ENGINE SPEED SIGNAL"](#) , [AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) , [AT-107, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

#### 2. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 3.

#### 3. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00302

## Engine Speed Does Not Return To Idle

### SYMPTOM:

When a shift-down is performed, the engine speed does not smoothly return to the idling speed.


### DIAGNOSTIC PROCEDURE

#### 1. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

##### OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

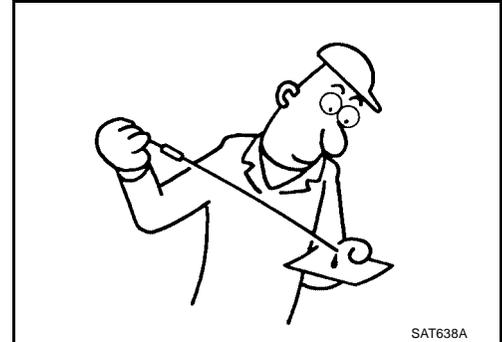

#### 2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate front brake solenoid valve, direct clutch solenoid valve, ATF pressure switch 1, ATF pressure switch 5, accelerator pedal position sensor, vehicle speed sensor A/T (revolution sensor) and vehicle speed sensor MTR?


- YES >> Check the malfunctioning system. Refer to [AT-154, "DTC P1757 FRONT BRAKE SOLENOID VALVE"](#) , [AT-160, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE"](#) , [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-189, "DTC P1845 ATF PRESSURE SWITCH 5"](#) , [AT-132, "DTC P1705 THROTTLE POSITION SENSOR"](#) , [AT-116, "DTC P0720 VEHICLE SPEED SENSOR A/T \(REVOLUTION SENSOR\)"](#) , [AT-140, "DTC P1721 VEHICLE SPEED SENSOR MTR"](#) .
- NO >> GO TO 3.

#### 3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

##### OK or NG

- OK >> GO TO 4.
- NG >> GO TO 7.

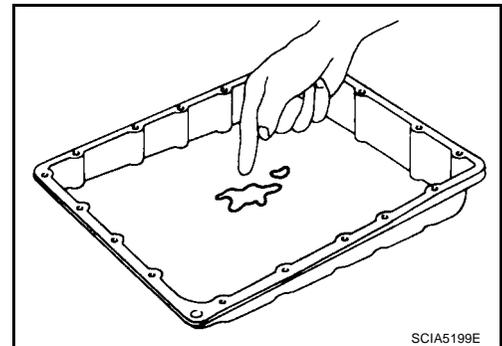

#### 4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.72).

##### OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 5. CHECK SYMPTOM

Check again. Refer to [AT-67, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

## 6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## 7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.72).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

### **Cannot Be Changed to Manual Mode (Column Shift)** **SYMPTOM:**

UCS0030Y

Does not change to manual mode when manual shift gate is used.

#### **DIAGNOSTIC PROCEDURE**

### **1. MANUAL MODE SWITCH**

Check the manual mode switch. Refer to [AT-178, "DTC P1815 MANUAL MODE SWITCH"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace damaged parts.

### **2. CHECK SELF-DIAGNOSIS RESULTS**

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate turbine revolution sensor?

- YES >> Check the malfunctioning system. Refer to [AT-137, "DTC P1716 TURBINE REVOLUTION SENSOR"](#) .
- NO >> **INSPECTION END**

### **A/T Does Not Shift: 5th gear → 4th gear** **SYMPTOM:**

UCS00303

When shifted from D5 to 44 position, does not downshift from 5th to 4th gears.

#### **DIAGNOSTIC PROCEDURE**

### **1. CHECK SELF-DIAGNOSIS RESULTS**

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch, ATF pressure switch 1?

- YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) .
- NO >> GO TO 2.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 2. CHECK 4TH POSITION SWITCH CIRCUIT

### With CONSULT-II

1. Turn ignition switch "ON".
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out "OD CONT SW" switch moving selector lever to each position.

Monitor item	Condition	Display value
OD CONT SW	When setting the selector lever to "4" and "3" position.	ON
	When setting selector lever to other positions.	OFF


DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

### Without CONSULT-II

1. Turn ignition switch "ON". (Do not start engine)
2. Check voltage between A/T device harness connector terminal and ground.

Item	Connector No.	Terminal No. (Wire color)	Condition	Data (Approx.)
4th position switch	M203	1 (SB) - Ground	When setting the selector lever to "4" and "3" position.	0V
			When setting selector lever to other positions.	Battery voltage

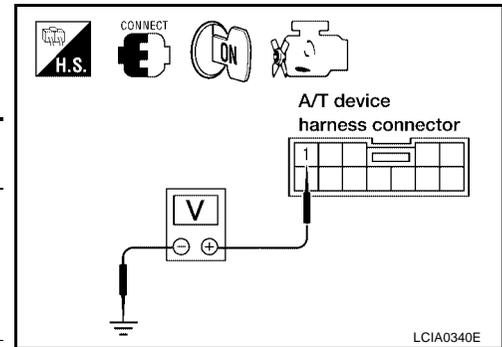

#### OK or NG


- OK >> GO TO 3.  
 NG >> Repair or replace damaged parts.

## 3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#).

#### OK or NG

- OK >> GO TO 4.  
 NG >> Refill ATF.

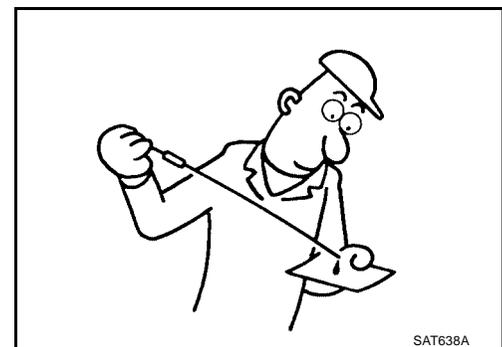

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK CONTROL CABLE


Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 5.

NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#).

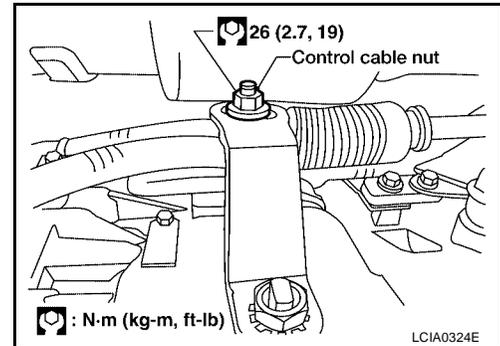


## 5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#).

OK or NG

OK >> GO TO 6.

NG >> GO TO 9.

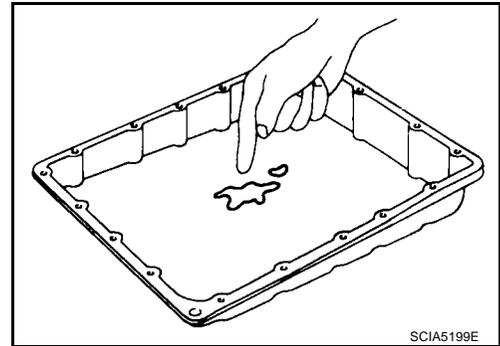

## 6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.14).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

## 7. CHECK SYMPTOM

Check again. Refer to [AT-70, "Cruise Test - Part 3"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 8.

## 8. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.14).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

### A/T Does Not Shift: 4th gear → 3rd gear SYMPTOM:

UCS00304

When shifted from 4<sup>th</sup> to 3<sup>rd</sup> position, does not downshift from 4<sup>th</sup> to 3<sup>rd</sup> gears.

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch, ATF pressure switch 1, ATF pressure switch 3?

- YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-183, "DTC P1841 ATF PRESSURE SWITCH 1"](#) , [AT-186, "DTC P1843 ATF PRES-SURE SWITCH 3"](#) .
- NO >> GO TO 2.

#### 2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Refill ATF.




#### 3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

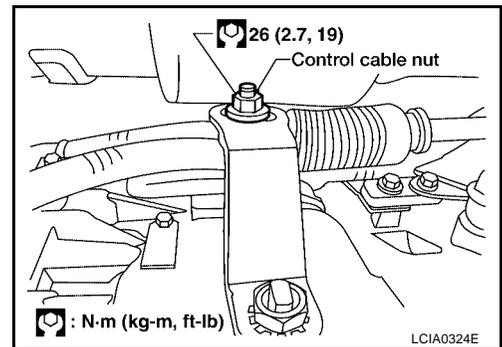


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 8.

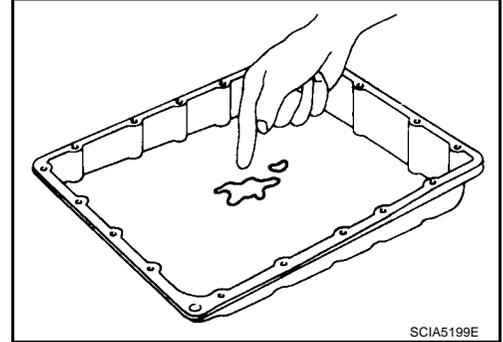

## 5. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

## 6. CHECK SYMPTOM

Check again. Refer to [AT-70, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

## 7. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

## 8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

### A/T Does Not Shift: 3rd gear → 2nd gear

#### SYMPTOM:

When shifted from 3<sub>3</sub> to 2<sub>2</sub> position, does not downshift from 3rd to 2nd gears.

UCS00305

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## DIAGNOSTIC PROCEDURE

### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch, ATF pressure switch 6?


- YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-192, "DTC P1846 ATF PRESSURE SWITCH 6"](#) .
- NO >> GO TO 2.

### 2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.  
NG >> Refill ATF.

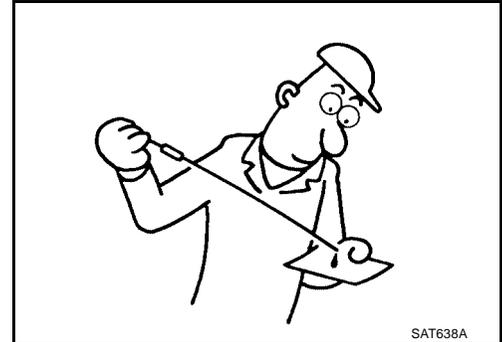


### 3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.  
NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#) .

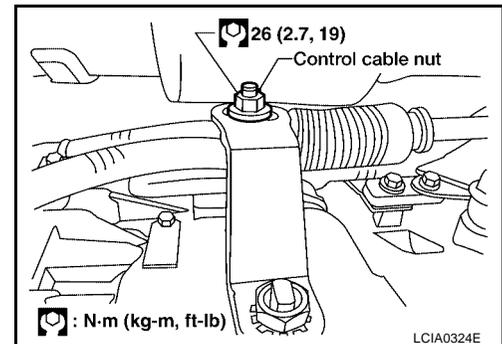


### 4. CHECK A/T FLUID CONDITION

- Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 5.  
NG >> GO TO 8.

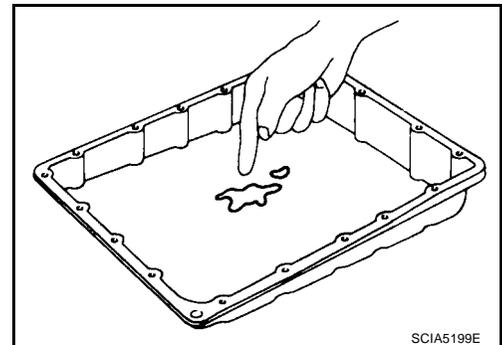

### 5. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.16).

OK or NG

- OK >> GO TO 6.  
NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

---

## 6. CHECK SYMPTOM

Check again. Refer to [AT-70, "Cruise Test - Part 3"](#) .

OK or NG

OK >> **INSPECTION END**  
NG >> GO TO 7.

---

## 7. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

---

## 8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.16).

OK or NG

OK >> GO TO 6.  
NG >> Repair or replace damaged parts.

### **A/T Does Not Shift: 2nd gear → 1st gear** **SYMPTOM:**

UCS00306

**When shifted from 22 to 11 position, does not downshift from 2nd to 1st gears.**

### **DIAGNOSTIC PROCEDURE**

---

#### **1. CHECK SELF-DIAGNOSIS RESULTS**

Perform self-diagnosis. Refer to [AT-97, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch, ATF pressure switch 5?

YES >> Check the malfunctioning system. Refer to [AT-113, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-189, "DTC P1845 ATF PRESSURE SWITCH 5"](#) .  
NO >> GO TO 2.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 2. CHECK 1ST POSITION SWITCH CIRCUIT

### With CONSULT-II

1. Turn ignition switch "ON".
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out "OVERDRIVE SW" switch moving selector lever to each position.

Monitor item	Condition	Display value
1 POSITION SW	When setting the selector lever to "1" position.	ON
	When setting selector lever to other positions.	OFF


DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

### Without CONSULT-II

1. Turn ignition switch "ON". (Do not start engine)
2. Check voltage between A/T device harness connector terminal and ground.

Item	Connector No.	Terminal No. (Wire color)	Condition	Data (Approx.)
1st position switch	M203	7 (Y/G) - Ground	When setting the selector lever to "1" position.	0V
			When setting selector lever to other positions.	Battery voltage

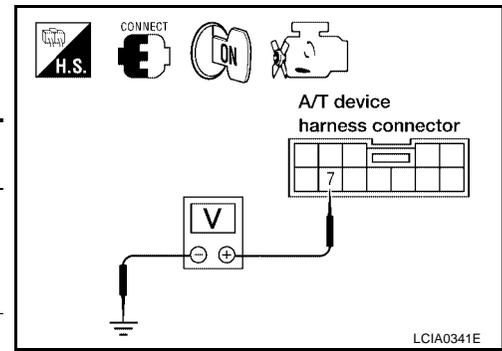

#### OK or NG


- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

## 3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13. "Checking A/T Fluid"](#) .

#### OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

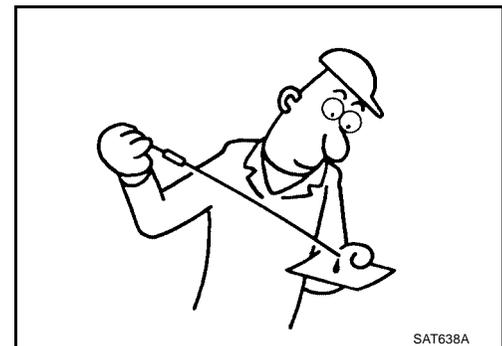

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 4. CHECK CONTROL CABLE


Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#).

OK or NG

OK >> GO TO 5.

NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#).

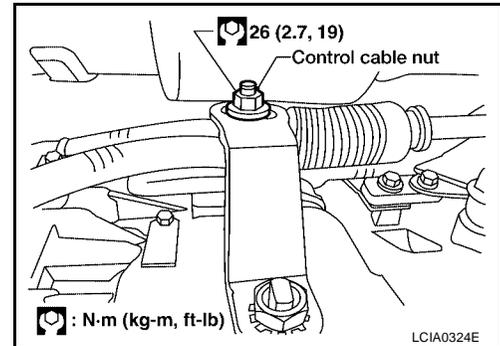


## 5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#).

OK or NG

OK >> GO TO 6.

NG >> GO TO 9.

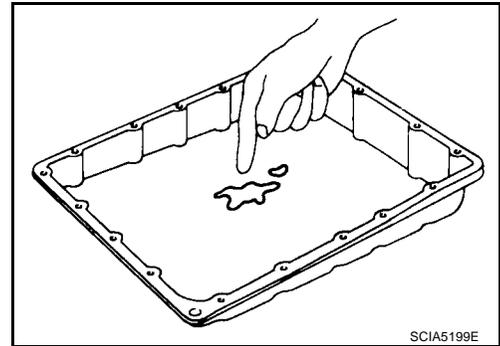

## 6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.17).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

## 7. CHECK SYMPTOM

Check again. Refer to [AT-70, "Cruise Test - Part 3"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 8.

## 8. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#).
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73. "Symptom Chart"](#) (Symptom No.17).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

### Vehicle Does Not Decelerate By Engine Brake

**SYMPTOM:**

UCS00307

No engine brake is applied when the gear is shifted from the 22 to 11 .

### DIAGNOSTIC PROCEDURE

#### 1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis.

Do the self-diagnosis results indicate PNP switch, ATF pressure switch 5?

- YES >> Check the malfunctioning system. Refer to [AT-113. "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-189. "DTC P1845 ATF PRESSURE SWITCH 5"](#) .
- NO >> GO TO 2.

#### 2. CHECK 1ST POSITION SWITCH CIRCUIT

##### With CONSULT-II

- Turn ignition switch "ON".
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "OVERDRIVE SW" switch moving selector lever to each position.

Monitor item	Condition	Display value
1 POSITION SW	When setting the selector lever to "1" position.	ON
	When setting selector lever to other positions.	OFF


DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

##### Without CONSULT-II

- Turn ignition switch "ON". (Do not start engine)
- Check voltage between A/T device harness connector terminal and ground.

Item	Connector No.	Terminal No. (Wire color)	Condition	Data (Approx.)
1st position switch	M203	7 (Y/G) - Ground	When setting the selector lever to "1" position.	0V
			When setting selector lever to other positions.	Battery voltage

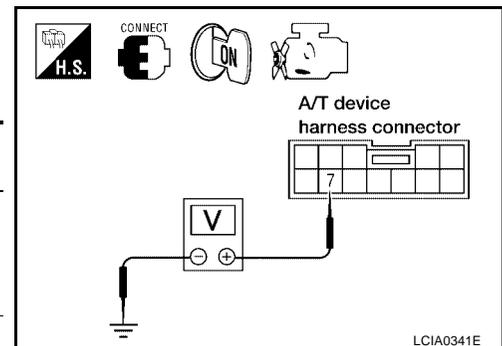

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.


# TROUBLE DIAGNOSIS FOR SYMPTOMS

## 3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

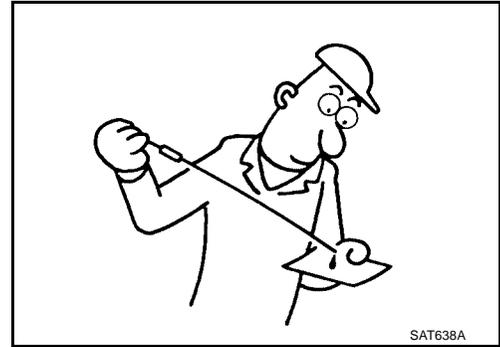


## 4. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-243, "Checking of A/T Position"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Adjust control cable. Refer to [AT-243, "Adjustment of A/T Position"](#).

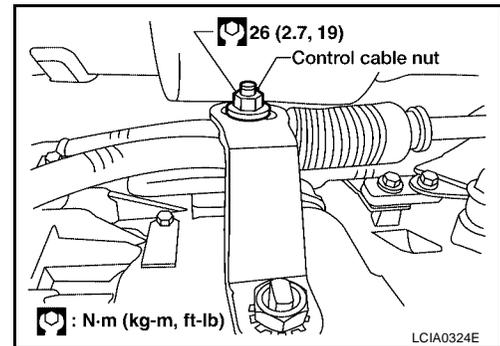


## 5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-255, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
2. Check A/T fluid condition. Refer to [AT-62, "Fluid Condition Check"](#).

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

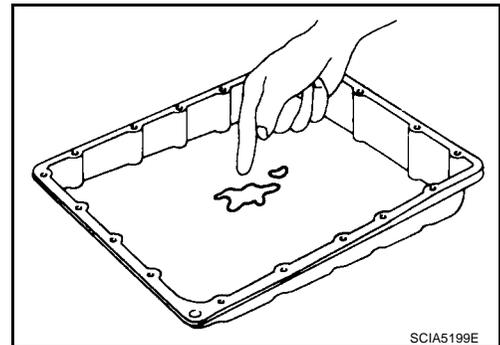

## 6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.58).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

## 7. CHECK SYMPTOM

Check again. Refer to [AT-70, "Cruise Test - Part 3"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS FOR SYMPTOMS

---

### 8. PERFORM TCM INSPECTION

---

1. Perform TCM input/output signals inspection. Refer to [AT-94, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**  
NG >> Repair or replace damaged parts.

### 9. DETECT MALFUNCTIONING ITEM

---

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-73, "Symptom Chart"](#) (Symptom No.58).

OK or NG

- OK >> GO TO 7.  
NG >> Repair or replace damaged parts.

# SHIFT CONTROL SYSTEM

## SHIFT CONTROL SYSTEM


### Control Device Removal and Installation

PFP:34901

UCS00270

#### Floor shift models

SEC. 349

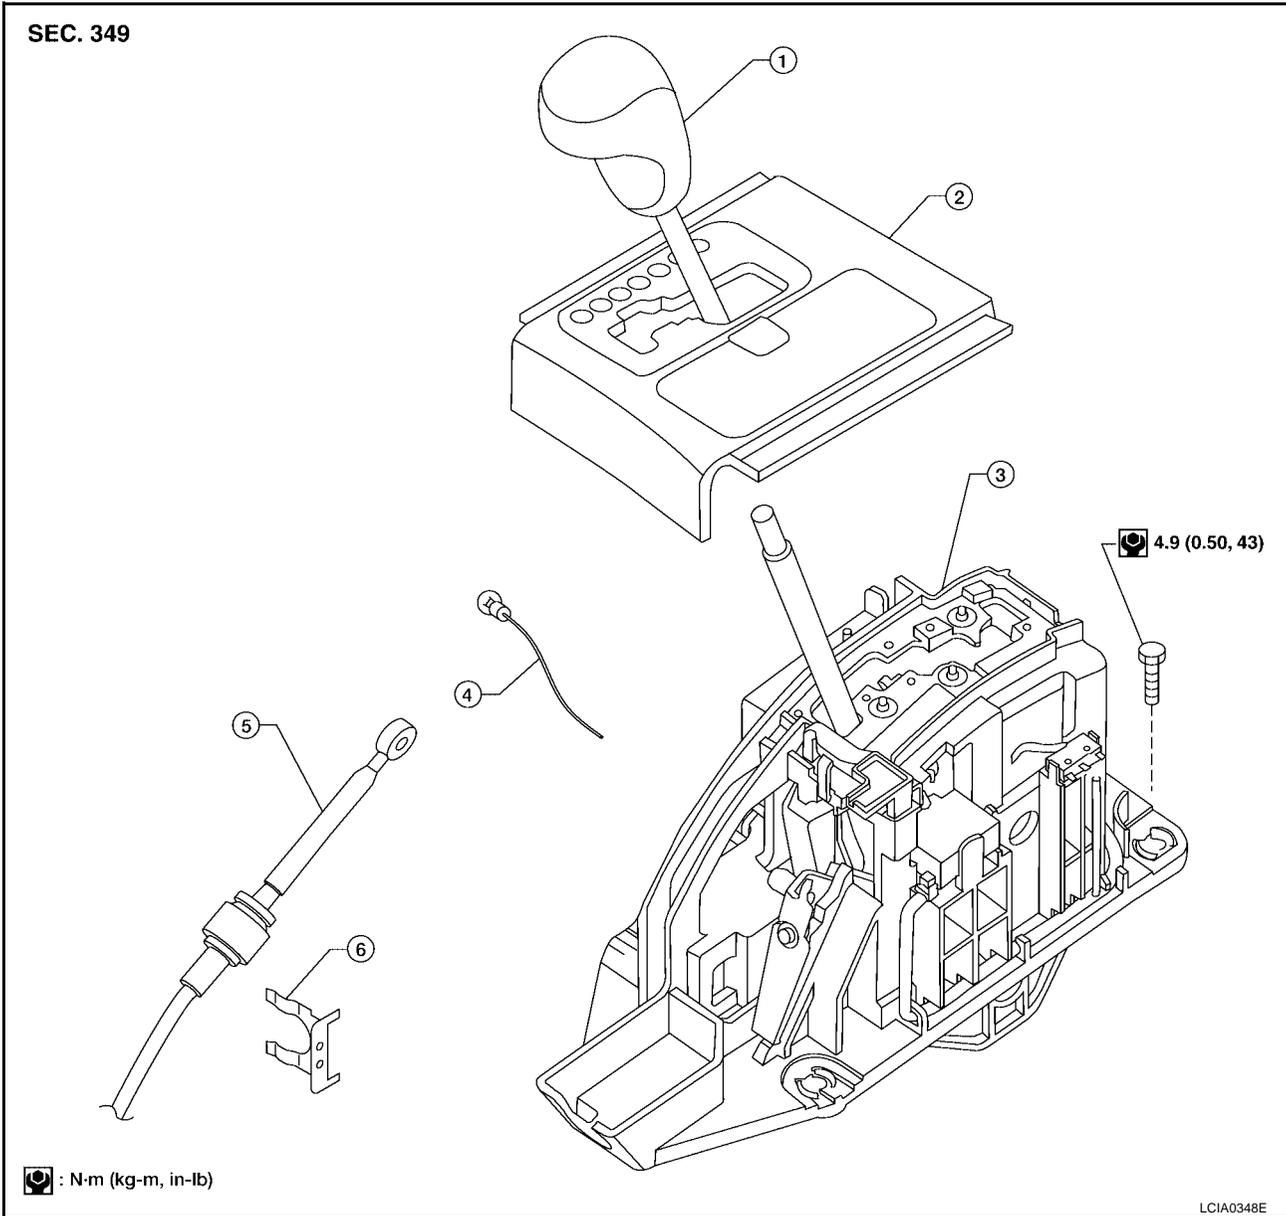

 : N·m (kg·m, in·lb)

1. Selector lever knob

2. A/T console finisher

3. Control device assembly

4. Position lamp

5. A/T selector control cable


6. Lock plate

LCIA0348E

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# SHIFT CONTROL SYSTEM

## Column shift models

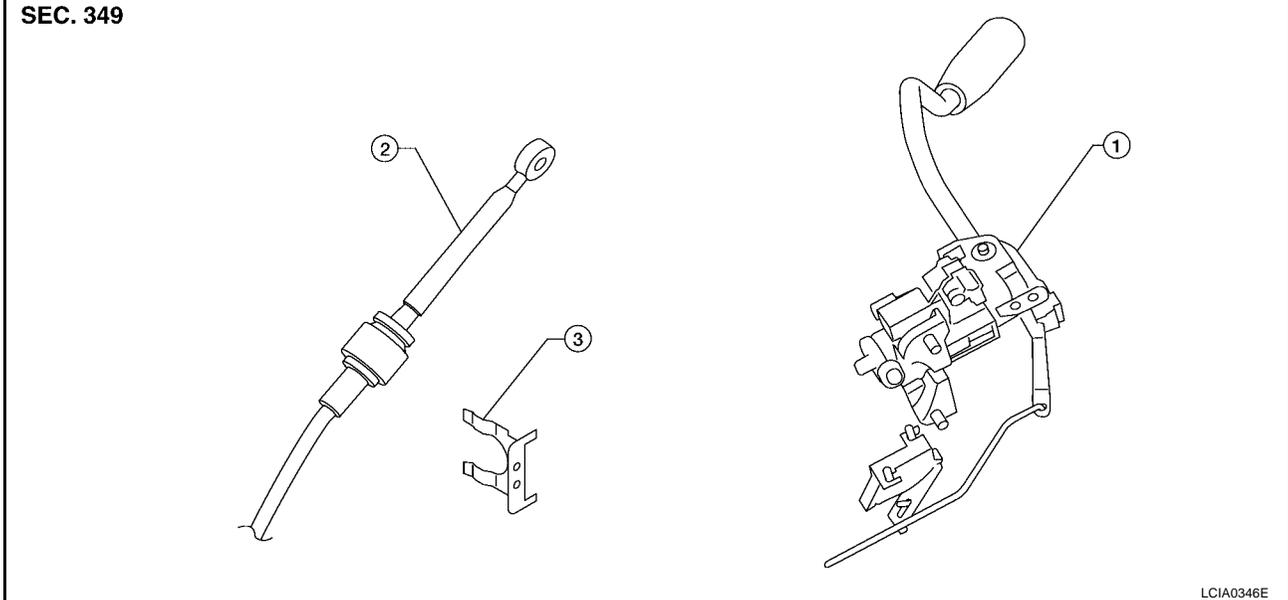

1. Column shift control

2. Shift cable

3. A/T cable lock plate clip


## REMOVAL

### Floor shift

1. Remove A/T finisher. Refer to [IP-13, "A/T FINISHER"](#) .
2. Disconnect A/T device harness connector.
3. Disconnect selector control cable.
4. Remove control device assembly.

### Column shift

1. Remove the column shift control. Refer to [PS-9, "STEERING COLUMN"](#) .
2. Remove the A/T cable clip lock plate and remove the cable from column shifter pin.

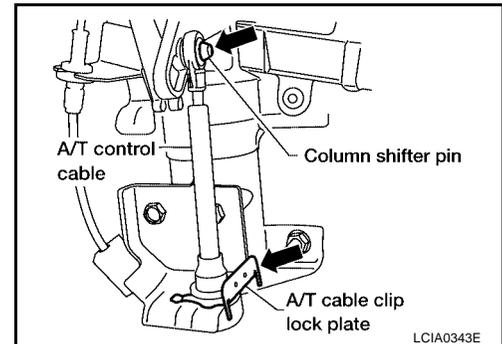

## INSTALLATION

Installation is in reverse order of removal.

- After installation is completed, be sure to check A/T position, refer to [AT-243, "Checking of A/T Position"](#) and adjust if necessary, refer to [AT-243, "Adjustment of A/T Position"](#) .


# SHIFT CONTROL SYSTEM

## Adjustment of A/T Position

UCS002TP

1. Loosen nut of control cable.
2. Place PNP switch and selector lever in "P" position.
3. After pushing the control cable in the direction shown with a force of 9.8 N·m (1kg·m, 2.2 lb-ft), release it. This is in the natural state, tighten control cable nut to specifications.

**Control cable nut : 14.5 N·m (1.5 kg·m, 11 ft·lb)**

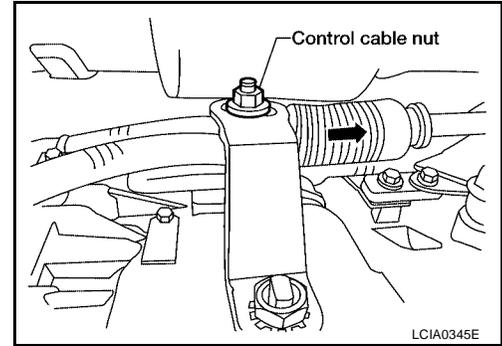



## Checking of A/T Position

UCS002TQ

### NOTE:

Following procedure will cover both column and floor shift selector levers.

1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Make sure selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the transmission body.
5. The method of operating the lever to individual positions correctly should be as shown in the figure.
6. Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps does not illuminate when selector lever is pushed against "R" position in the "P" or "N" position.
7. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
8. Make sure transmission is locked completely in "P" position.

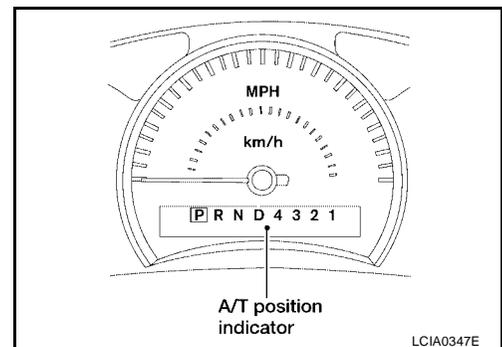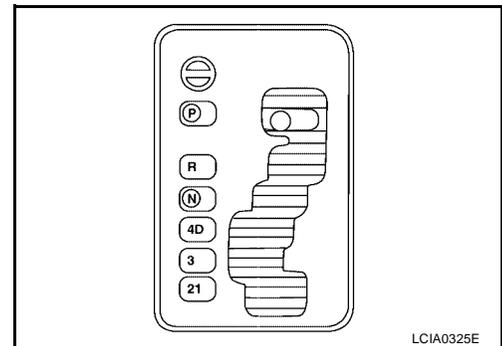

# A/T SHIFT LOCK SYSTEM

## A/T SHIFT LOCK SYSTEM

PFP:34950

### Description FLOOR SHIFT

UCS002TR


- The electrical key interlock mechanism also operates as a shift lock:  
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.  
With the key removed, the selector lever cannot be shifted from "P" to any other position.  
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder, respectively.

### COLUMN SHIFT

- The mechanical key interlock mechanism also operates as a shift lock:  
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.  
With the key removed, the selector lever cannot be shifted from "P" to any other position.  
The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder.


### Shift Lock System Electrical Parts Location FLOOR SHIFT

UCS002TS

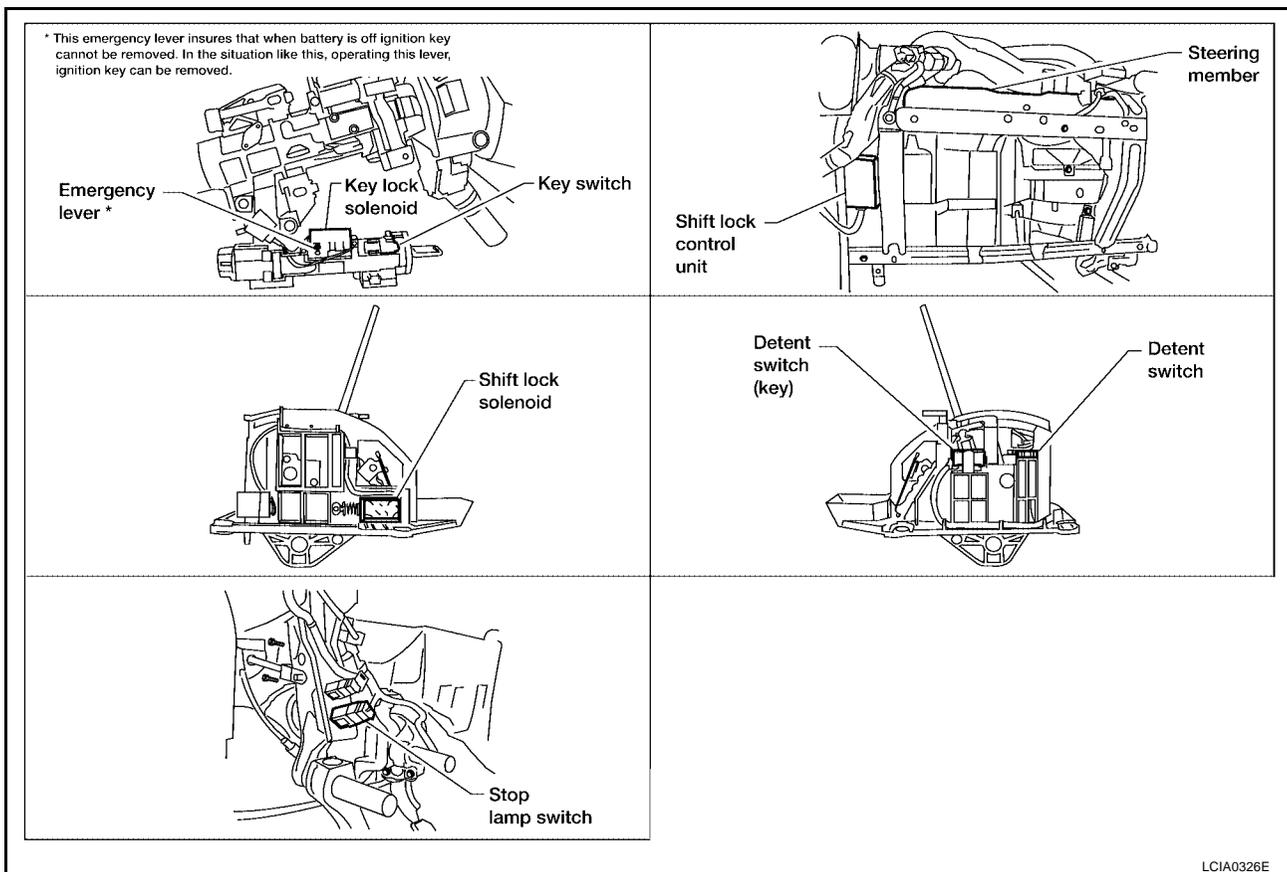

# A/T SHIFT LOCK SYSTEM

## COLUMN SHIFT

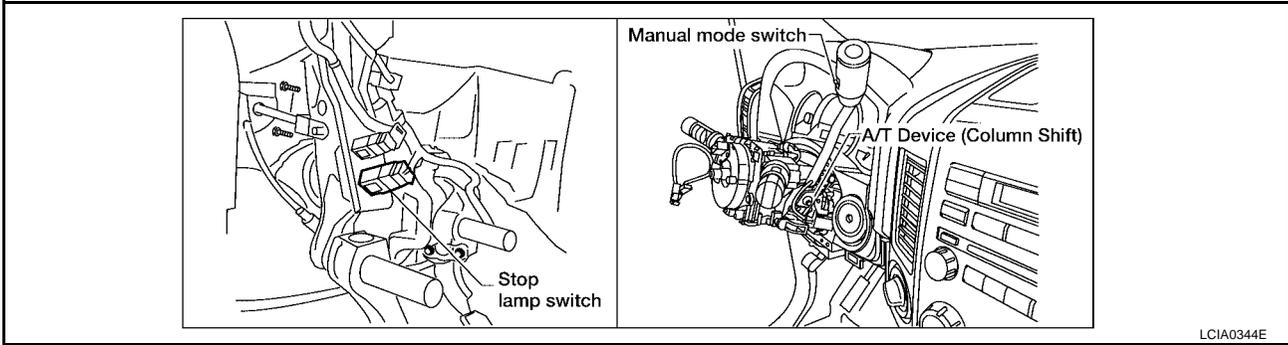

A

B

AT

D

E

F

G

H

I

J

K



L

M

# A/T SHIFT LOCK SYSTEM

UCS002TT

## Wiring Diagram — A/T — Shift FLOOR SHIFT

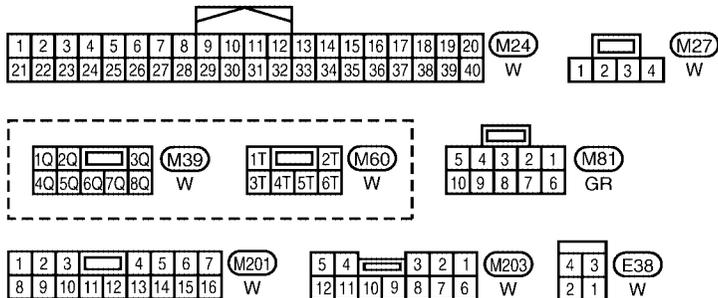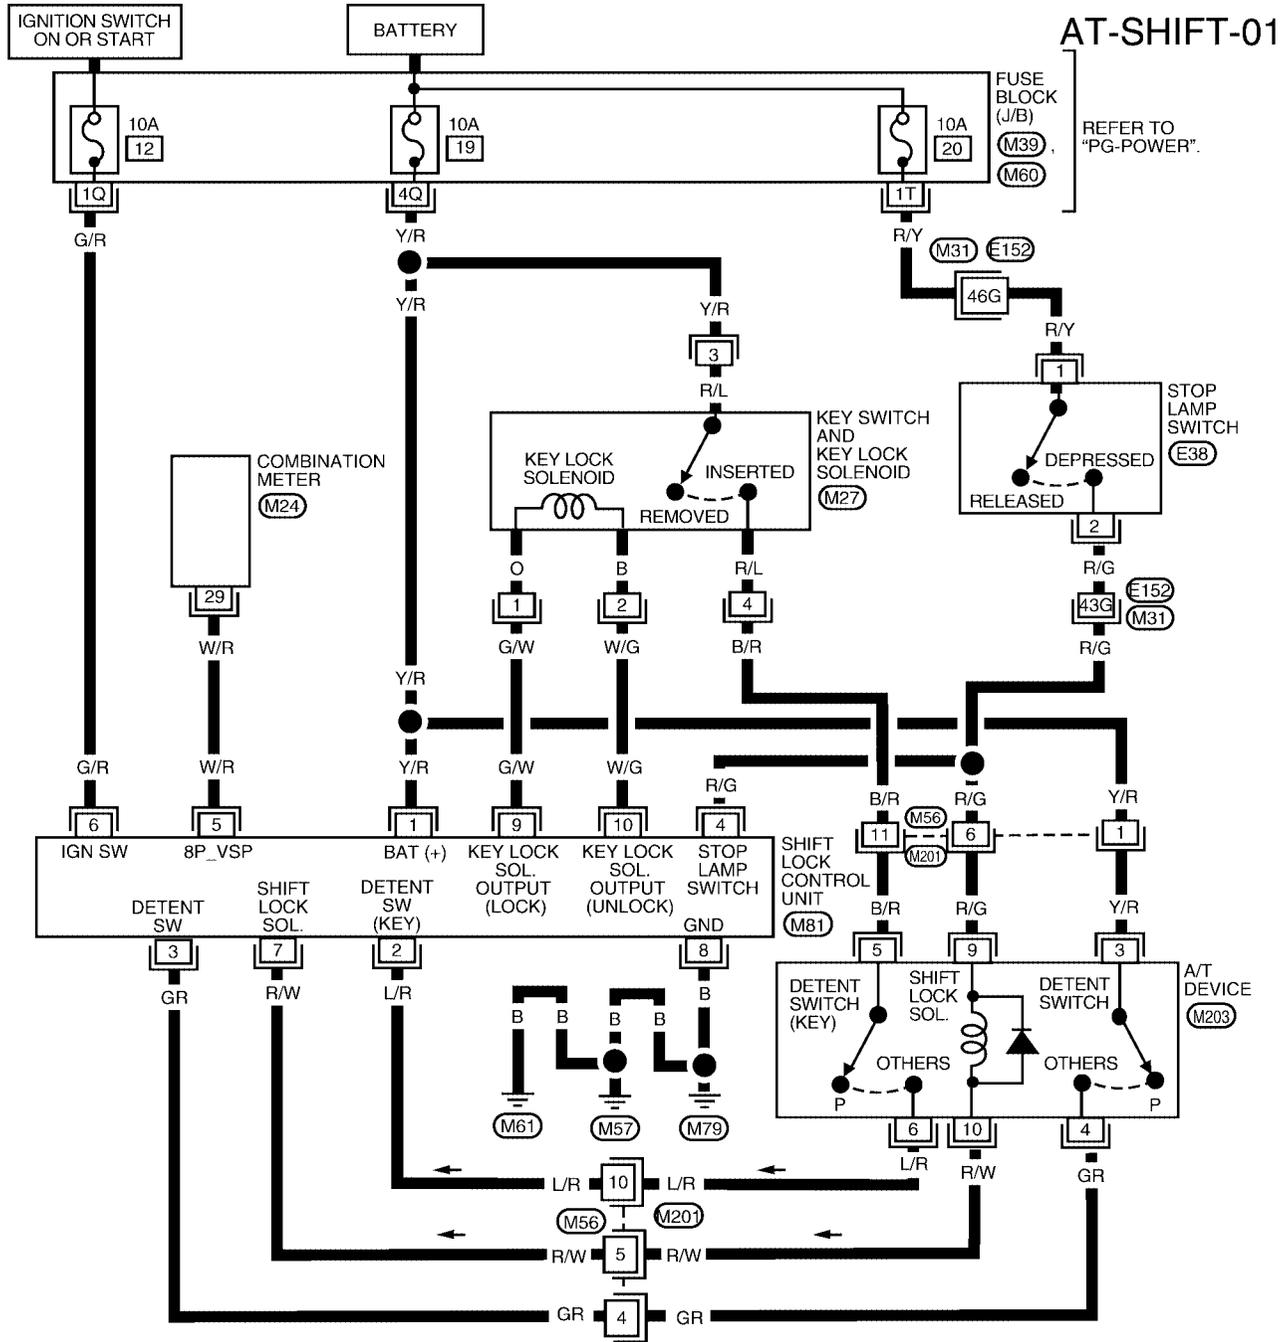

REFER TO THE FOLLOWING.


(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WCWA0178E


# A/T SHIFT LOCK SYSTEM

## COLUMN SHIFT

AT-SHIFT-02

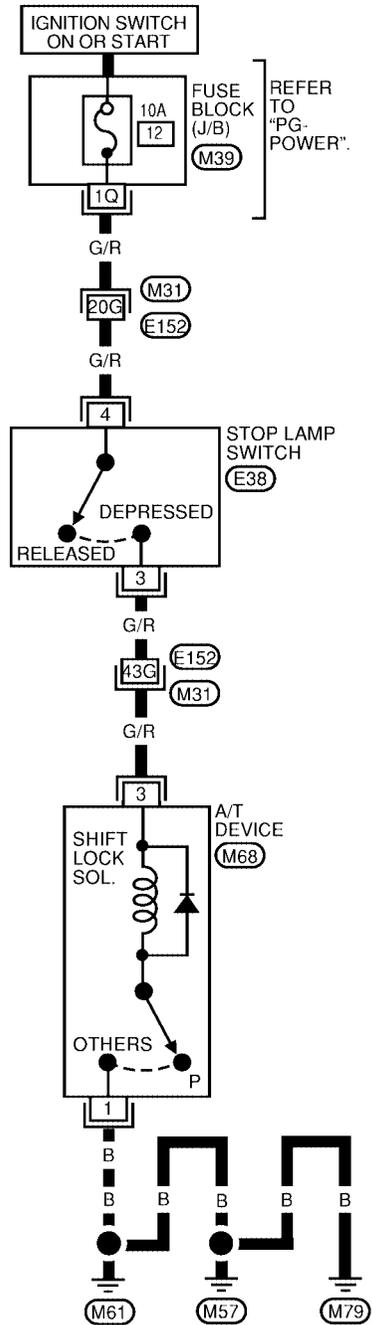

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

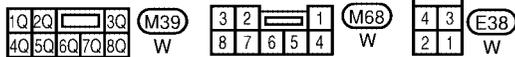


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0061E

# A/T SHIFT LOCK SYSTEM

## Shift Lock Control Unit Reference Values SHIFT LOCK HARNESS CONNECTOR TERMINALS LAYOUT

UCS002TU

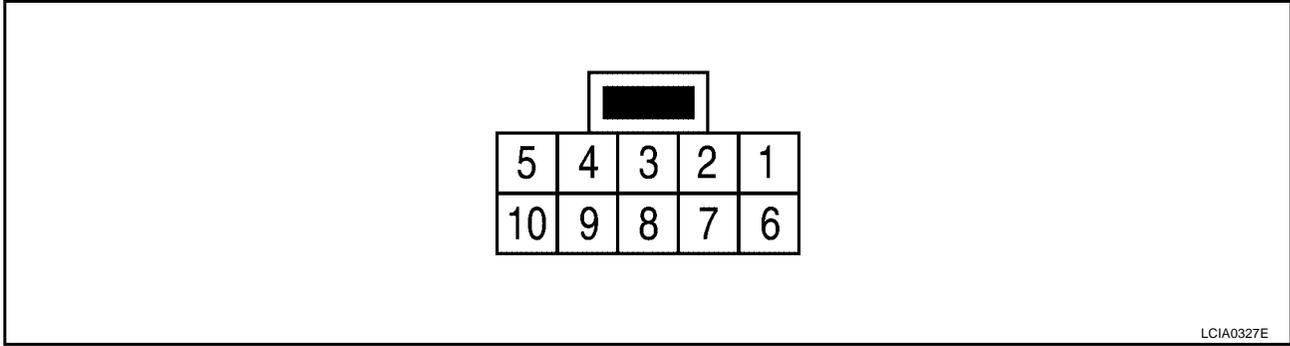

### SHIFT LOCK CONTROL UNIT INSPECTION TABLE

Data are reference values.

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	VOLTAGE (V)
1	Y/R	Power source	Ignition switch: "ON"	Battery voltage
			Ignition switch: "OFF"	Battery voltage
2	L/R	Detention switch (for key)	When selector lever is not in "P" position with key inserted.	Battery voltage
			Except the above	Approx. 0V
3	GR	Detention switch (for shift)	When selector lever is not in "P" position	Battery voltage
			Except the above	Approx. 0V
4	R/G	Stop lamp switch	When brake pedal is depressed	Battery voltage
			When brake pedal is released	Approx. 0V
5	W/R	Vehicle speed signal	—	—
			—	—
6	G/R	Ignition signal	Ignition switch: "OFF"	Approx. 0V
			Ignition switch: "ON"	Battery voltage
7	R/W	Shift lock solenoid	When brake pedal is depressed with ignition switch "ON".	Approx. 0V
			When brake pedal is depressed.	Battery voltage
8	B	Ground	Always	Approx. 0V
9	G/W	Key lock solenoid	When the selector lever is set to a position other than the "P" position, and the key switch is turned from "ON" to "OFF"	Battery voltage for approx. 0.1 sec. (Note)
			Except the above	Approx. 0V
10	W/G	Key unlock solenoid	When ignition switch is not in "ON" position with key inserted.	Battery voltage for approx. 0.1 sec. (Note)
			Except the above	Approx. 0V

**NOTE:**

Confirm that the pointer swings only momentarily because the output time is so short. If the inspection is done with an oscilloscope, it should be observed that the power source voltage lasts for 3.5 to 10 ms.

# A/T SHIFT LOCK SYSTEM

UCS002TV

## DIAGNOSTIC PROCEDURE

### COLUMN SHIFT

#### SYMPTOM 1:

- Selector lever cannot be moved from “P” position with key in ON position and brake pedal applied.
- Selector lever can be moved from “P” position with key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

#### SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to “P” position.
- Ignition key can be removed when selector lever is set to any position except “P”.

## 1. CHECK SELECTOR LEVER POSITION

Check the selector lever position for damage.

#### OK or NG

- OK >> GO TO 2.
- NG >> Check selector lever. Refer to [AT-243, "Adjustment of A/T Position"](#).

## 2. CHECK SHIFT LOCK SOLENOID AND PARK POSITION SWITCH

1. Connect A/T device harness connector.
2. Turn ignition switch “ON”.
3. Selector lever is set in “P” position.
4. Check operation sound.

Condition	Brake pedal	Operation sound
When ignition switch is turned to “ON” position and selector lever is set in “P” position.	Depressed	Yes
	Released	No

#### OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 3.


## 3. CHECK POWER SOURCE

1. Turn ignition switch “ON”. (Do not start engine.)
2. Selector lever is set in “P” position.
3. Check the voltage between A/T device connector M68 terminal 3 (G/R) and ground.

Condition	Brake pedal	Data (Approx.)
When ignition switch is turned to “ON” position.	Depressed	Battery voltage
	Released	0V

#### OK or NG

- OK >> GO TO 6.
- NG >> GO TO 4.

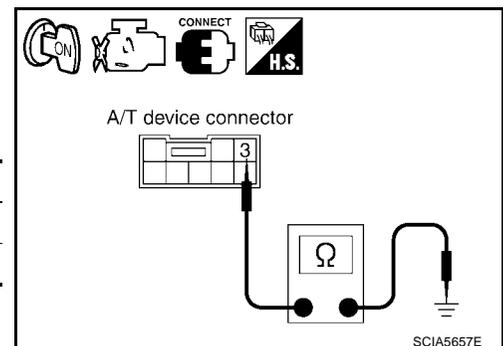

# A/T SHIFT LOCK SYSTEM

## 4. CHECK STOP LAMP SWITCH


1. Turn ignition switch "OFF".
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch connector E38 terminals 3 and 4.

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

**Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .**

OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace damaged parts.

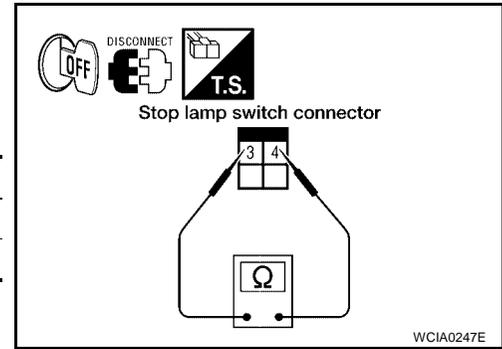

## 5. DETECT MALFUNCTIONING ITEM

Check the following items. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between fuse block (J/B) and stop lamp switch terminal 4 (G/R)
- Harness for short or open between stop lamp switch terminal 3 (G/R) and A/T device terminal 3 (G/R).
- 10A fuse [No.12, located in the fuse block (J/B)]
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 6.  
NG >> Repair or replace damaged parts.

## 6. CHECK A/T DEVICE CIRCUIT


1. Turn ignition switch "OFF".
2. Disconnect A/T device connector.
3. Check continuity between A/T device connector M68 terminal 1 and terminal 3.

Condition	Continuity
Selector lever in "P" position	No
Selector lever in other position	Yes

4. Connect A/T device connector.

OK or NG

- OK >> GO TO 7.  
NG >> Replace shift lock solenoid or park position switch.

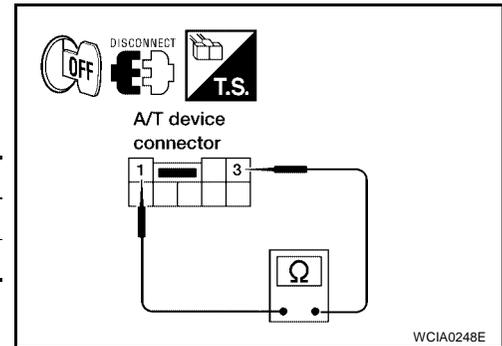


## 7. CHECK GROUND CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect A/T device connector.
3. Check continuity between A/T device connector M68 terminal 1 (B) and ground.

**Continuity should exist.**

OK or NG

- OK >> Replace shift lock solenoid or park position switch.  
NG >> Repair open circuit or short to power in harness or connectors.

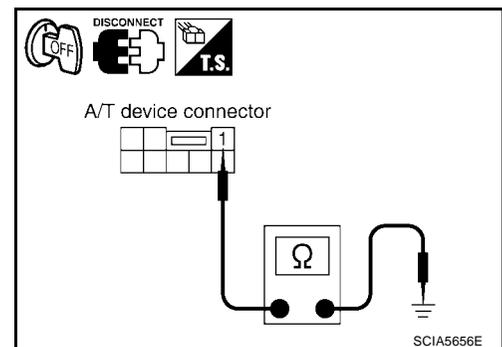

# A/T SHIFT LOCK SYSTEM

UCS002TW

## Component Inspection FLOOR SHIFT


### Shift Lock Solenoid

- Check operation by applying battery voltage to the A/T device.

**CAUTION:**

Be sure to apply the voltage of the correct polarity to the respective terminals. Otherwise, the part may be damaged.

Connector No.	Terminal No.
M203	9 (Battery voltage) - 10 (Ground)

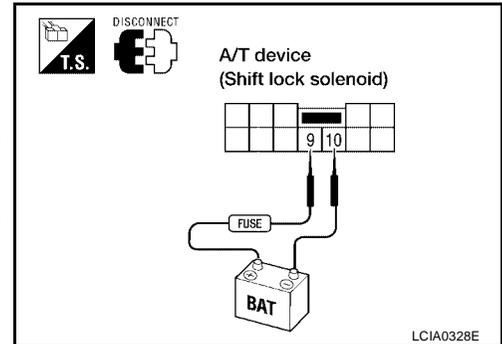


### DETENTION SWITCH

#### For Key

- Check continuity between terminals of the A/T device.


Condition	Connector No.	Terminal No.	Continuity
When selector lever is "P" position.	M203	5 - 6	No
When selector lever is not "P" position.			Yes

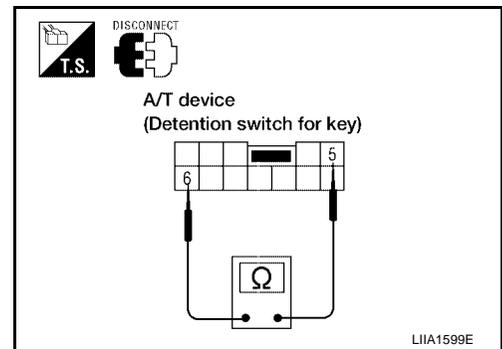

#### For Shift

- Check continuity between terminals of the A/T device.

Condition	Connector No.	Terminal No.	Continuity
When selector lever is "P" position.	M203	3 - 4	No
When selector lever is not "P" position.			Yes

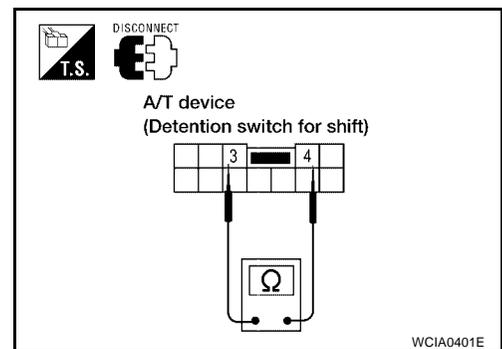

### KEY LOCK SOLENOID


#### Key Lock

- Check operation by applying battery voltage to key switch and key lock solenoid.

**CAUTION:**

Be careful not to cause burnout of the harness.

Connector No.	Terminal No. (Wire color)
M80	1 (O) (Battery voltage) - 2 (B) (Ground)

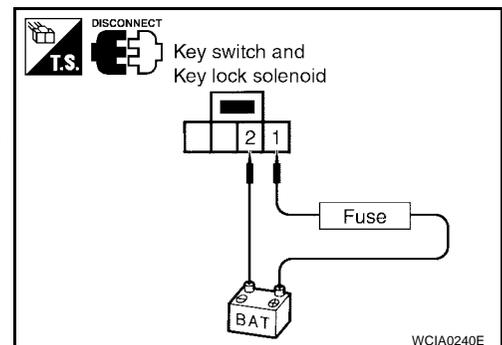

# A/T SHIFT LOCK SYSTEM


## Key Unlock

- Check operation by applying battery voltage to key switch and key lock solenoid.

### CAUTION:

Be careful not to cause burnout of the harness.


Connector No.	Terminal No. (Wire color)
M80	2 (B) (Battery voltage) - 1 (O) (Ground)

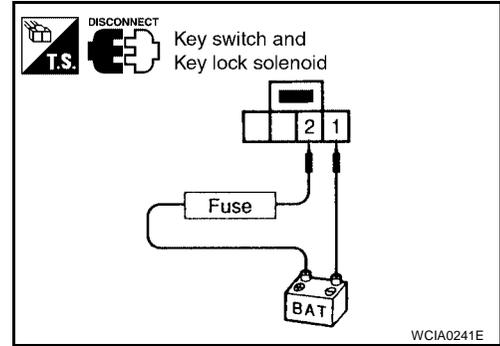

## KEY SWITCH

- Check continuity between terminals of the key switch and key lock solenoid.

Condition	Connector No.	Terminal No. (Wire color)	Continuity
Key inserted	M80	3 (R/L) - 4 (R/L)	Yes
Key withdrawn			No

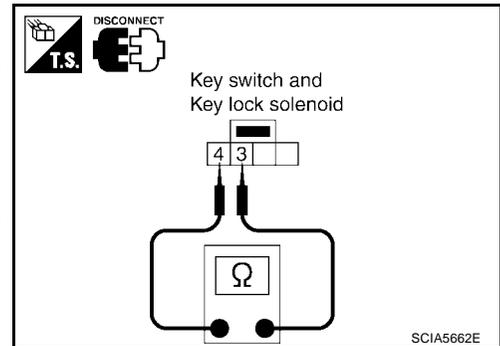


## STOP LAMP SWITCH

- Check continuity between terminals of the stop lamp switch.

Condition	Connector No.	Terminal No. (Wire color)	Continuity
When brake pedal is depressed	E38	1 (R/Y) - 2 (R/G)	Yes
When brake pedal is released			No

Check stop lamp switch after adjusting brake pedal.

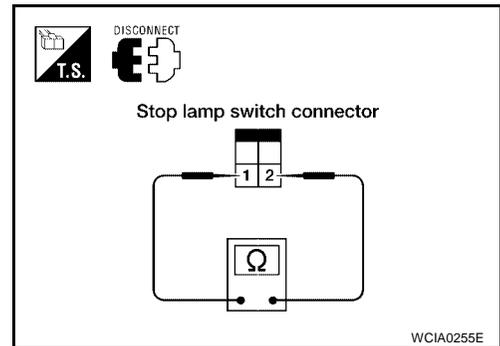


# KEY INTERLOCK CABLE

PFP:34908

## KEY INTERLOCK CABLE

### Components

UCS002TX

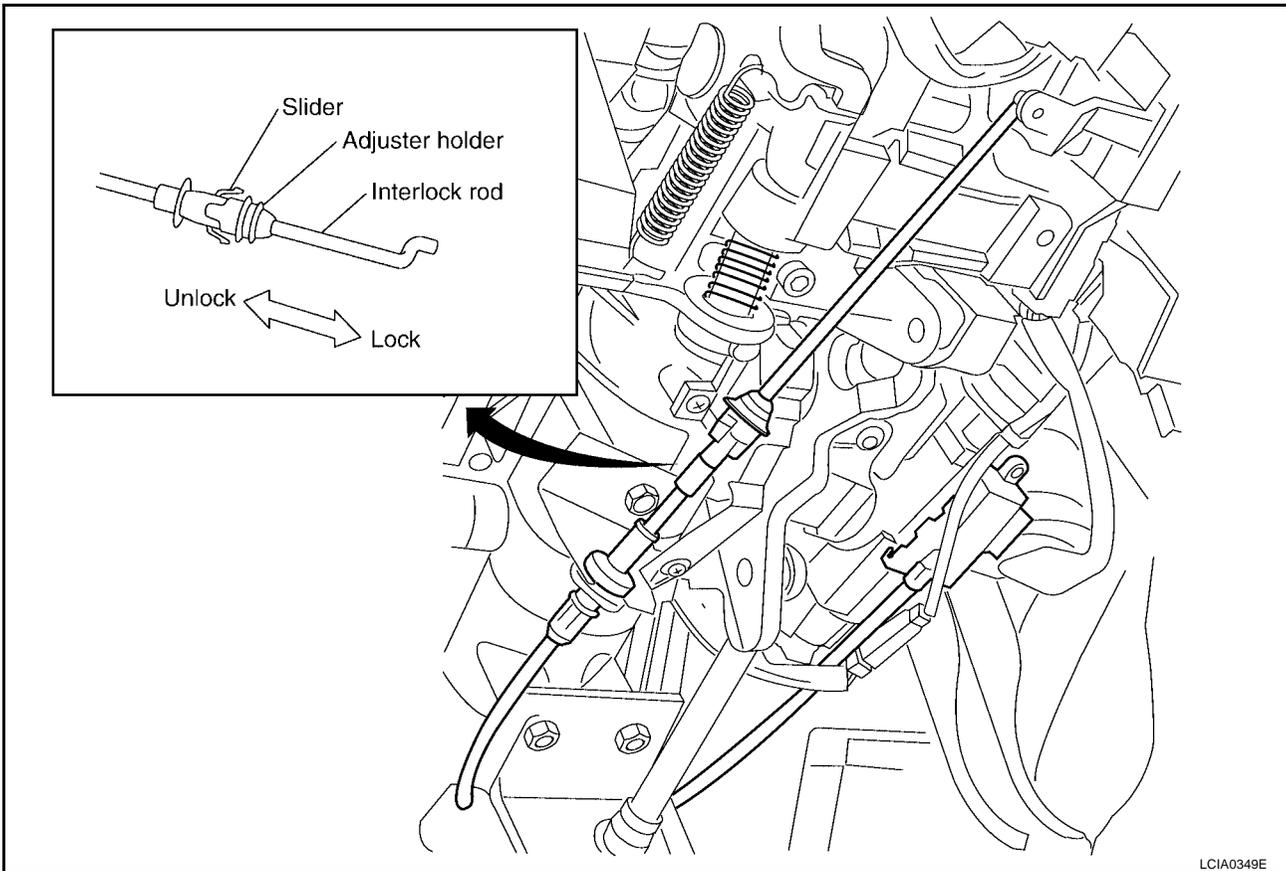


### CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap can be removed with an external load of less than 39.2 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.

### Removal


UCS002TY

1. Unlock slider from adjuster holder and remove rod from cable.

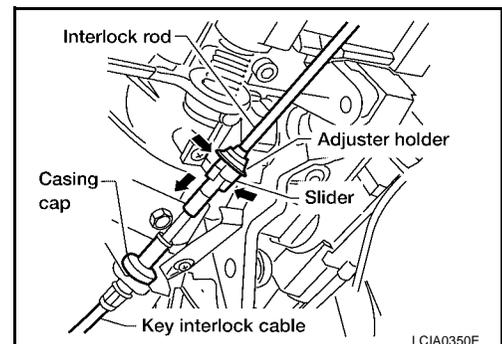


# KEY INTERLOCK CABLE

2. Remove casing cap from bracket.

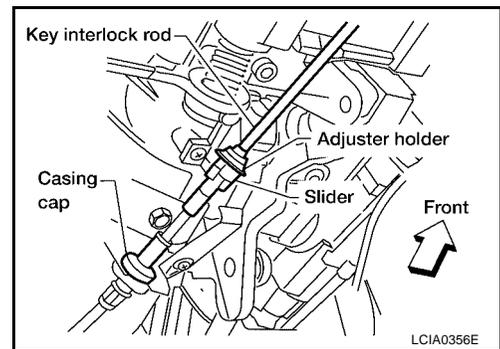


3. Disconnect the holder from the key cylinder and remove the key interlock cable.

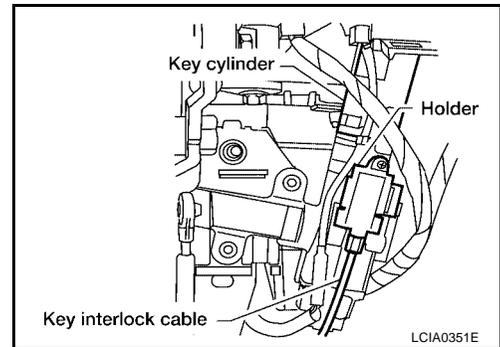

## Installation

1. Set key interlock cable to key cylinder and install holder.
2. Set selector lever to P position.
3. Turn key to lock position.


UCS002TZ

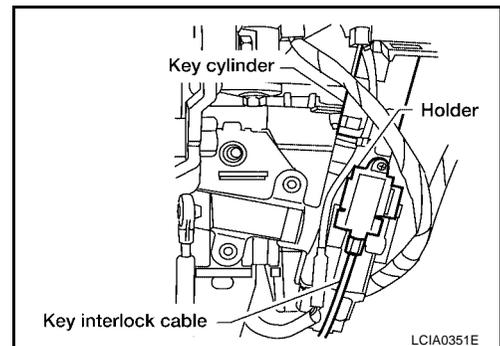

4. Insert key interlock rod into adjuster holder.
5. Install casing cap to bracket.
6. Move slider in order to lock adjuster holder to interlock rod.

### CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap can be removed with an external load of less than 39.2 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.

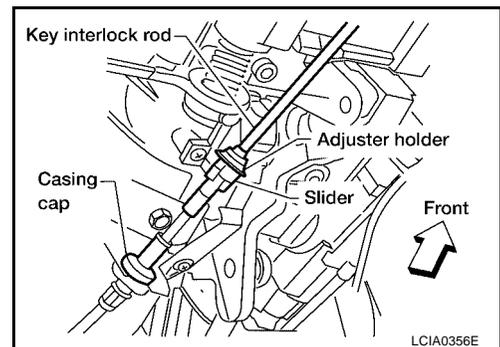


## ON-VEHICLE SERVICE

### Control Valve With TCM and A/T Fluid Temperature Sensor 2 COMPONENTS

UCS00308

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

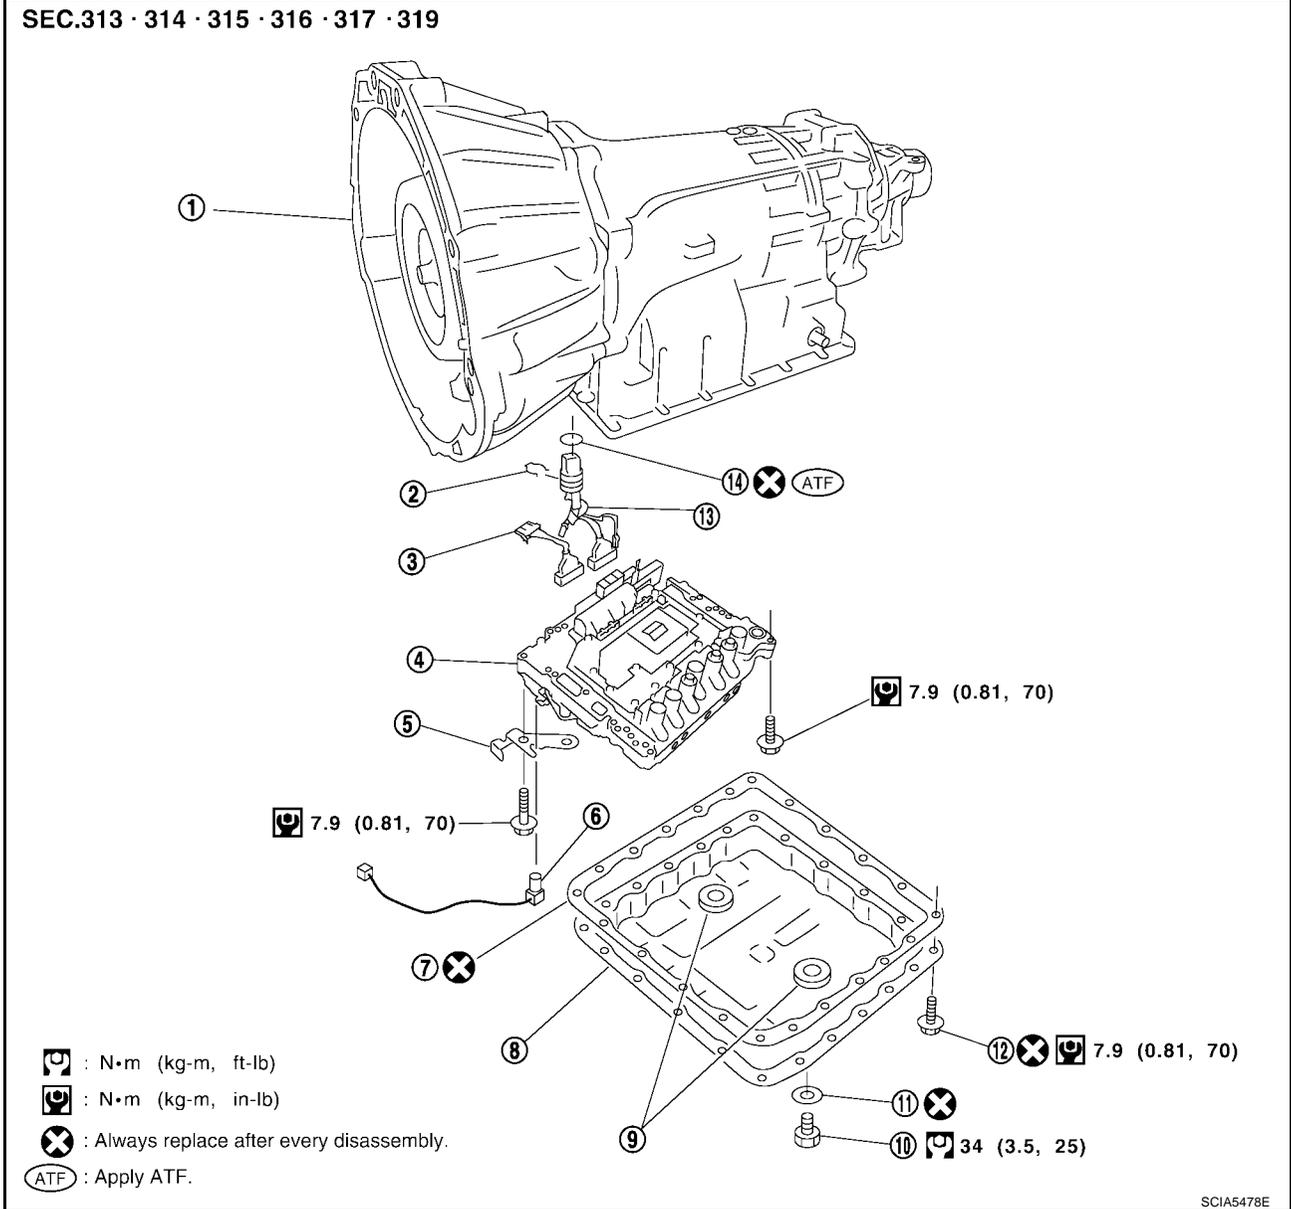

- |                            |                       |                                   |
|----------------------------|-----------------------|-----------------------------------|
| 1. Transmission            | 2. Snap ring          | 3. Sub-harness                    |
| 4. Control valve with TCM  | 5. Bracket            | 6. A/T fluid temperature sensor 2 |
| 7. Oil pan gasket          | 8. Oil pan            | 9. Magnet                         |
| 10. Drain plug             | 11. Drain plug gasket | 12. Oil pan mounting bolt         |
| 13. Terminal cord assembly | 14. O-ring            |                                   |


### CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION

#### Removal

1. Disconnect battery negative cable from battery negative terminal.
2. Drain ATF through drain plug.
3. Disconnect A/T assembly harness connector.


## ON-VEHICLE SERVICE

4. Remove snap ring from A/T assembly harness connector.

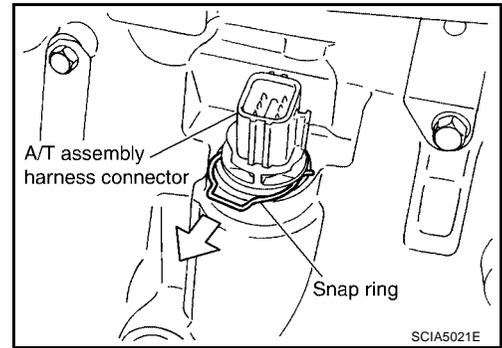


5. Push A/T assembly harness connector.

**CAUTION:**  
Be careful not to damage connector.

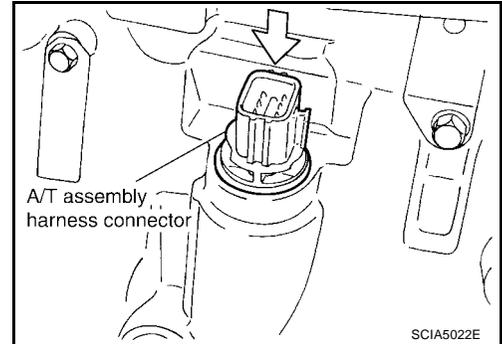


6. Remove oil pan and oil pan gasket.

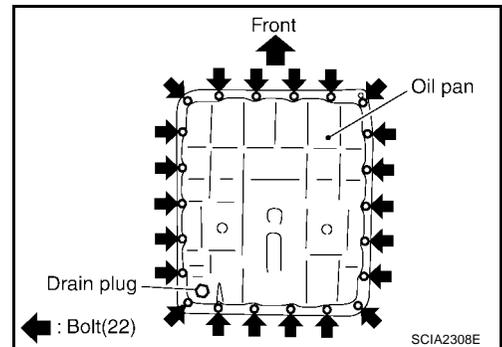


7. Check foreign materials in oil pan to help determine causes of malfunction. If the A/T fluid is very dark, smells burned, or contains foreign particles, frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

● If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [AT-15, "A/T Fluid Cooler Cleaning"](#).

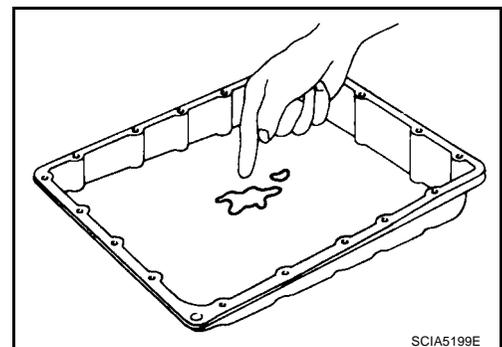


8. Remove magnets from oil pan.

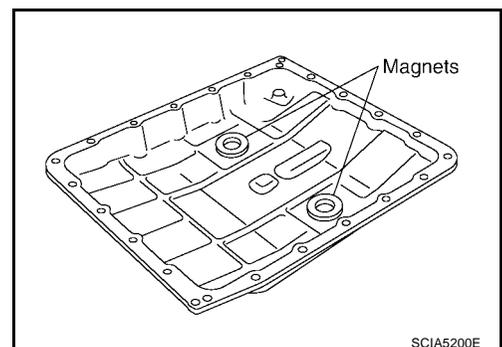


# ON-VEHICLE SERVICE

9. Disconnect A/T fluid temperature sensor 2 connector.

**CAUTION:**  
Be careful not to damage connector.

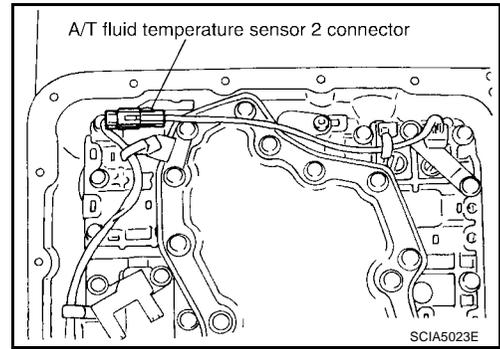


10. Straighten terminal clips to free terminal cord assembly and A/T fluid temperature sensor 2 harness.

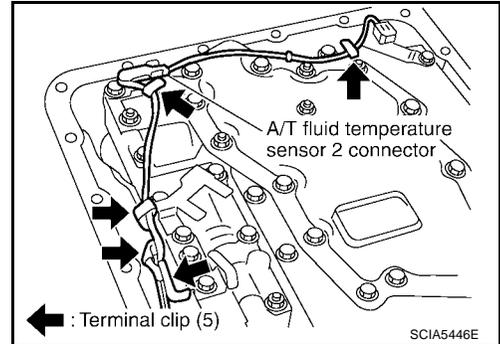


11. Disconnect revolution sensor connector.

**CAUTION:**  
Be careful not to damage connector.

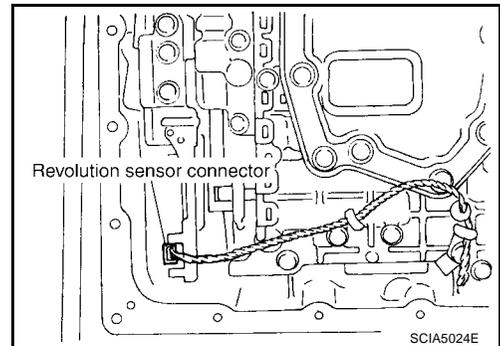


12. Straighten terminal clips to free revolution sensor harness.

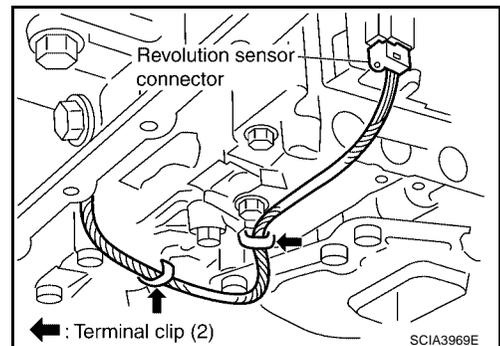

13. Remove bolts A, B and C from control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

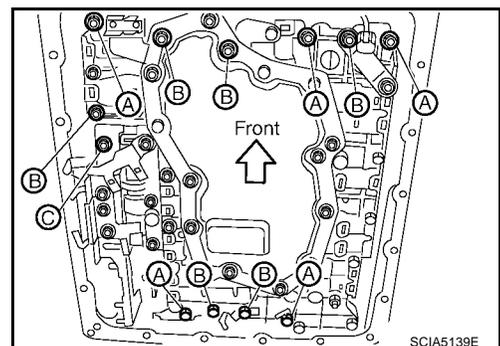


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ON-VEHICLE SERVICE


14. Remove control valve with TCM from transmission case.

**CAUTION:**


When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

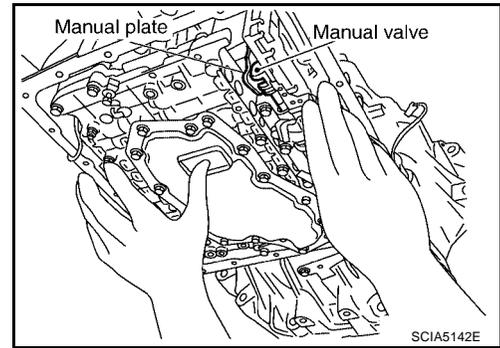


15. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

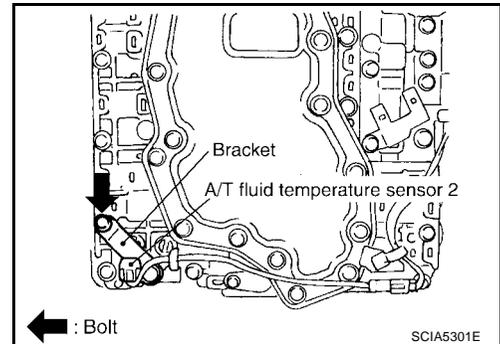

16. Remove bracket from A/T fluid temperature sensor 2.

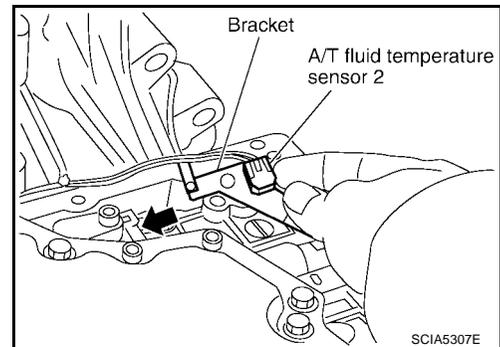


17. Remove O-ring from A/T assembly harness connector.

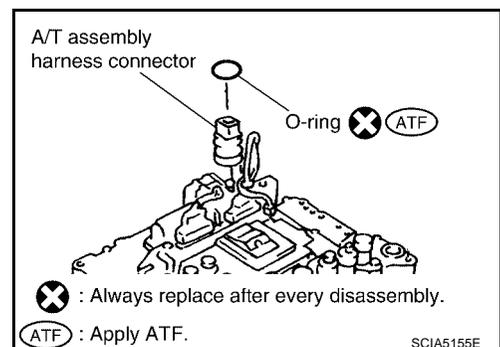

18. Disconnect TCM connectors.


**CAUTION:**

Be careful not to damage connectors.

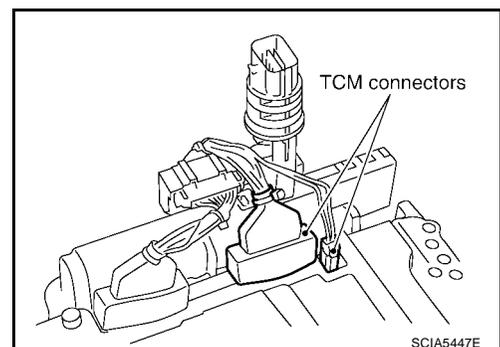

## ON-VEHICLE SERVICE


19. Remove A/T assembly harness connector from control valve with TCM using a flat-bladed screwdriver.

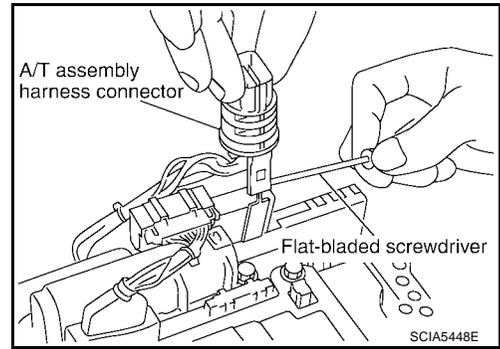

20. Disconnect TCM connector and park/neutral position switch connector.

**CAUTION:**

**Be careful not to damage connector.**

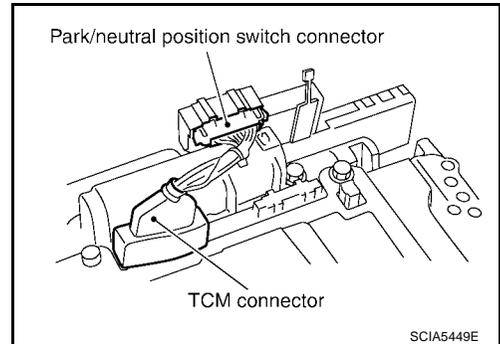


### Installation


**CAUTION:**

After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-13, "Changing A/T Fluid"](#) , [AT-13, "Checking A/T Fluid"](#) .

1. Connect TCM connector and park/neutral position switch connector.

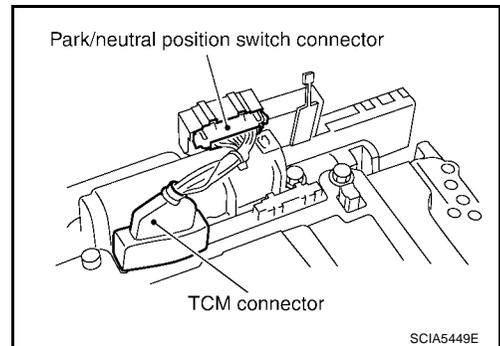


2. Install A/T assembly harness connector to control valve with TCM.

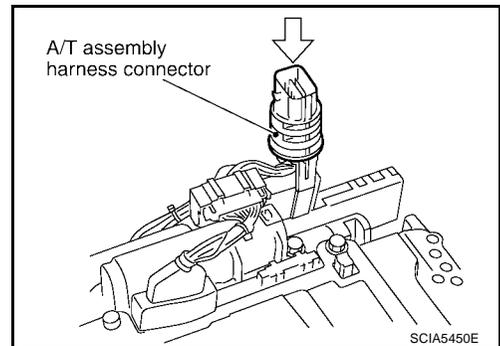

# ON-VEHICLE SERVICE


3. Connect TCM connectors.

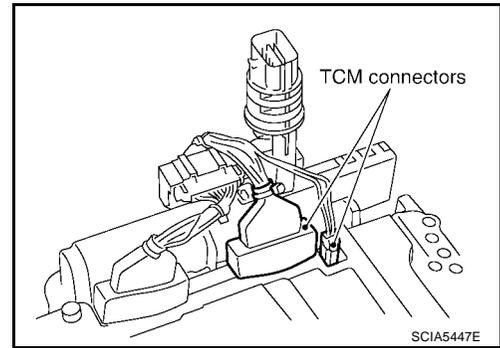


4. Install O-ring in A/T assembly harness connector.

**CAUTION:**

- Do not reuse O-ring.
- Apply ATF to O-ring.

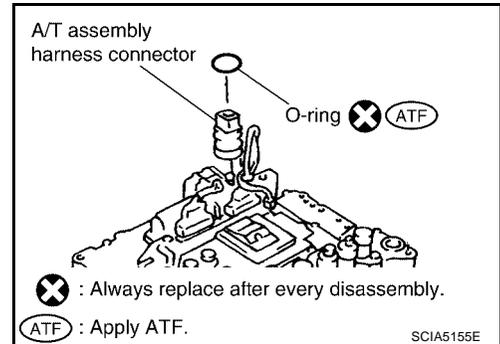


5. Install A/T fluid temperature sensor 2 to bracket.

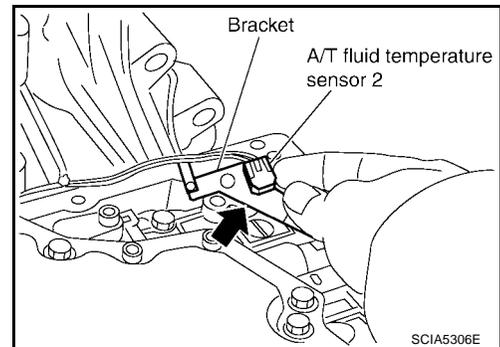

6. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM.

**CAUTION:**


**Adjust bolt hole of bracket to bolt hole of control valve with TCM.**

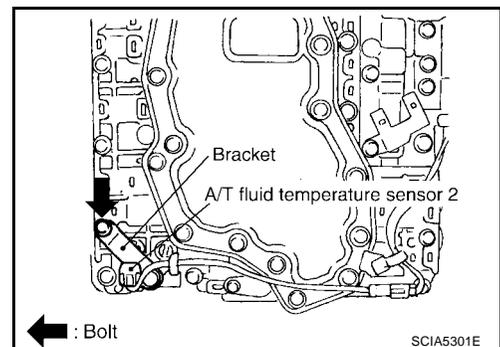

7. Install control valve with TCM in transmission case.


**CAUTION:**

- Make sure that turbine revolution sensor securely installs turbine revolution sensor hole.
- Hang down terminal cord assembly and revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

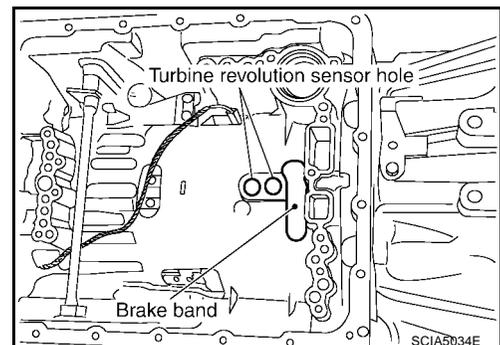

# ON-VEHICLE SERVICE


- Assemble it so that manual valve cutout is engaged with manual plate projection.

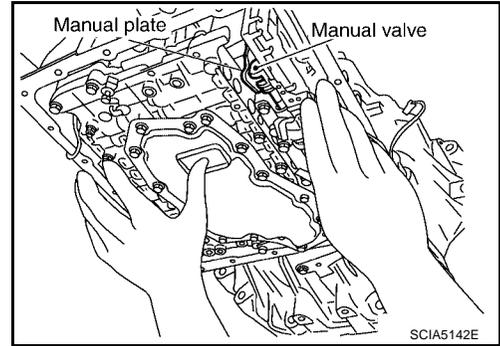

A  
B  
AT


8. Install bolts A, B and C in control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

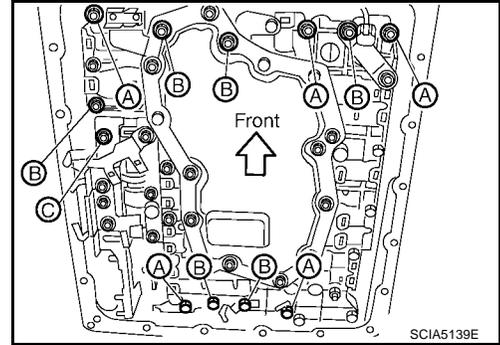


D  
E  
F

9. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts.

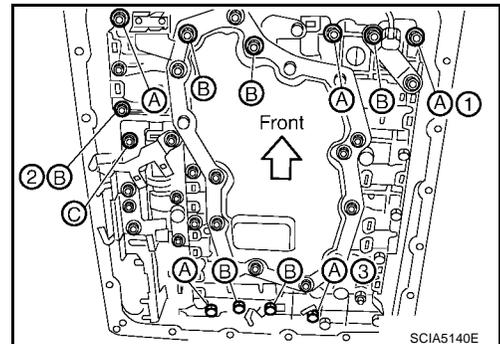


G  
H  
I

10. Connect A/T fluid temperature sensor 2 connector.

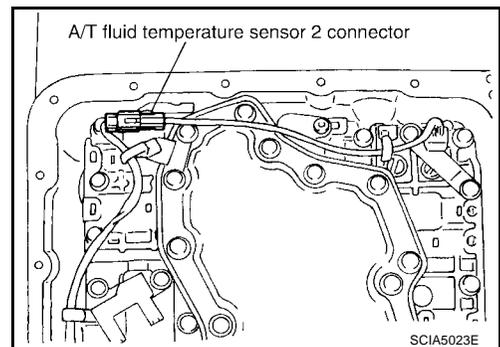

J  
K  
L


11. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

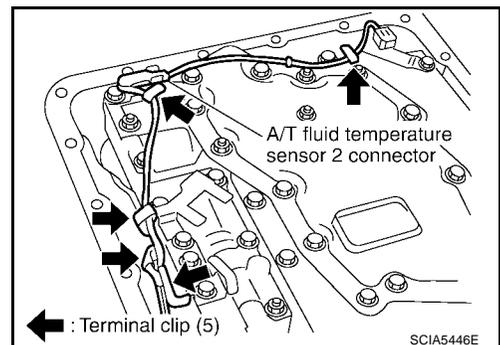


M

## ON-VEHICLE SERVICE


12. Connect revolution sensor connector.

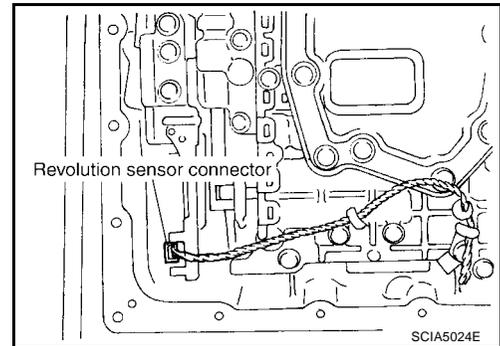

13. Securely fasten revolution sensor harness with terminal clips.

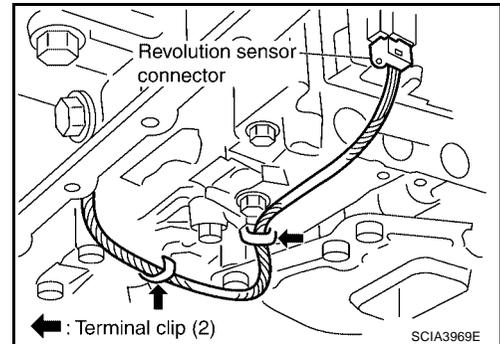

14. Install magnets in oil pan.

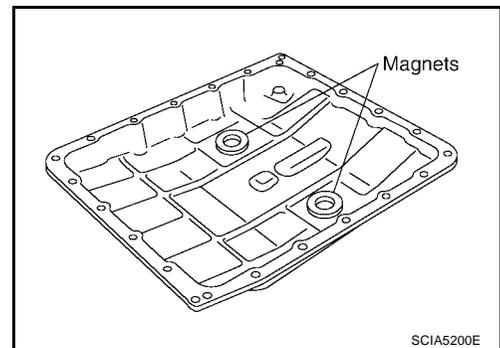

15. Install oil pan in transmission case.

a. Install oil pan gasket in oil pan.


**CAUTION:**

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surfaces.

b. Install oil pan (with oil pan gasket) in transmission case.

**CAUTION:**

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. from oil pan mounting surfaces.

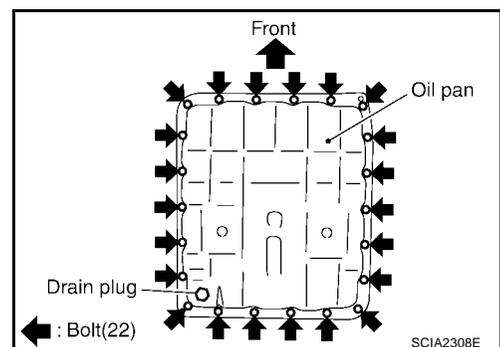

## ON-VEHICLE SERVICE

- c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Refer to [AT-255, "COMPONENTS"](#).

**CAUTION:**

**Do not reuse oil pan mounting bolts.**

16. Tighten drain plug to the specified torque. Refer to [AT-255, "COMPONENTS"](#).

**CAUTION:**




**Do not reuse drain plug gasket.**

17. Pull up A/T assembly harness connector.

**CAUTION:**

**Be careful not to damage connector.**


18. Install snap ring in A/T assembly harness connector.  
 19. Connect A/T assembly harness connector.  
 20. Pour ATF into transmission assembly. Refer to [AT-13, "Changing A/T Fluid"](#).  
 21. Connect the negative battery terminal

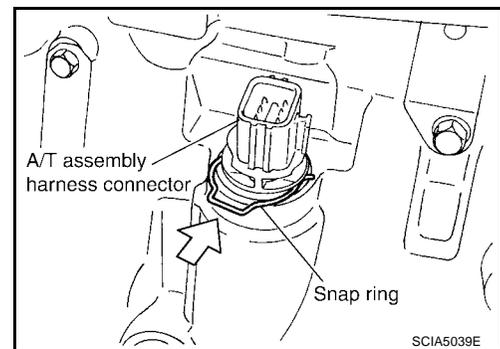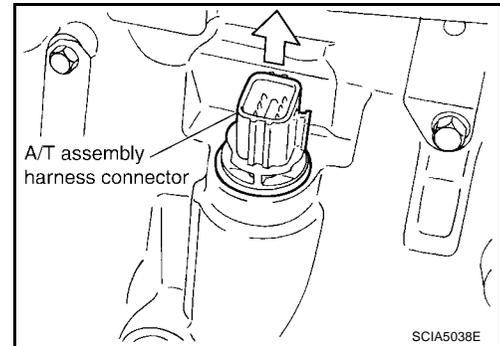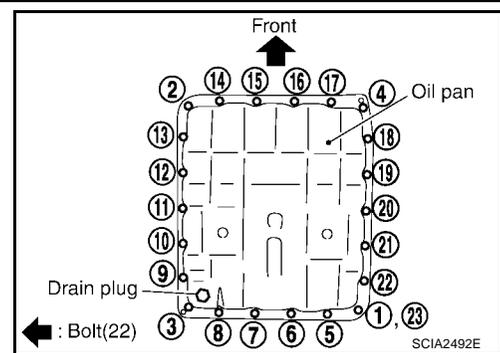

### A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION

#### Removal


1. Disconnect battery negative cable from battery negative terminal.
2. Drain ATF through drain plug.
3. Remove oil pan and oil pan gasket.

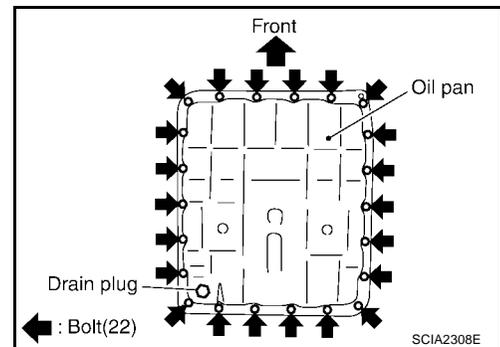

## ON-VEHICLE SERVICE


4. Check foreign materials in oil pan to help determine causes of malfunction. If the A/T fluid is very dark, smells burned, or contains foreign particles, frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [AT-15, "A/T Fluid Cooler Cleaning"](#).

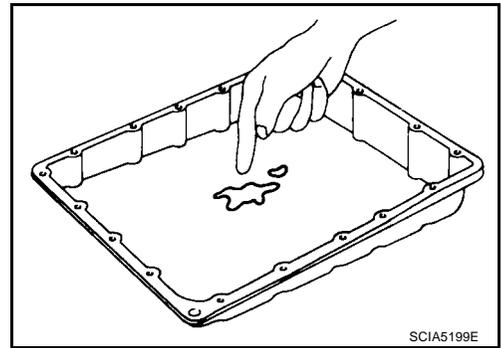


5. Disconnect A/T fluid temperature sensor 2 connector.

- CAUTION:**  
Be careful not to damage connector.

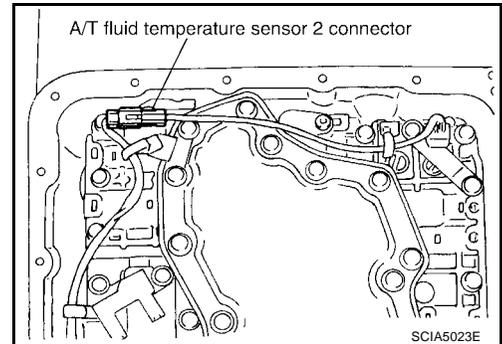


6. Straighten terminal clips to free A/T fluid temperature sensor 2 harness.


- CAUTION:**  
Be careful not to damage connector.

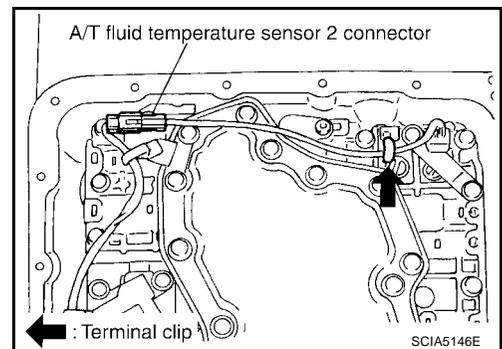

7. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

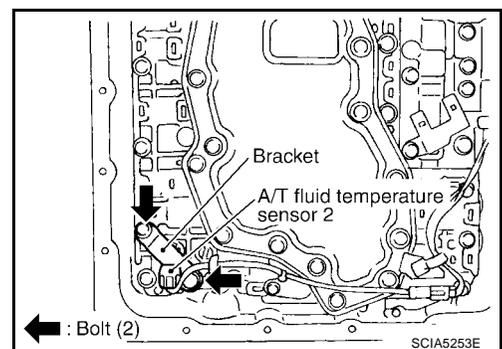

8. Remove bracket from A/T fluid temperature sensor 2.

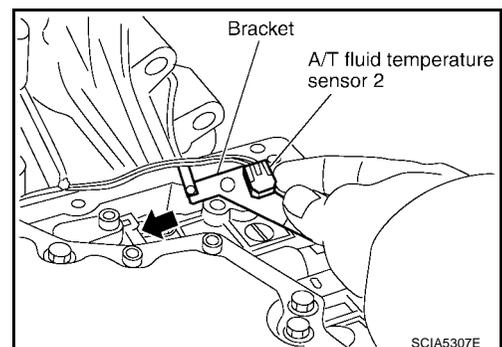

# ON-VEHICLE SERVICE

## Installation


### CAUTION:

After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-13, "Changing A/T Fluid"](#) , [AT-13, "Checking A/T Fluid"](#) .


1. Install A/T fluid temperature sensor 2 in bracket.

### CAUTION:


Adjust bolt hole of bracket to bolt hole of control valve with TCM.

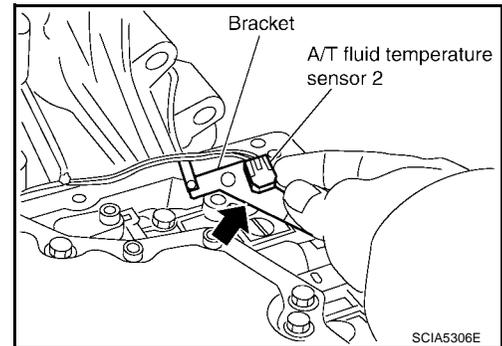


2. Install A/T fluid temperature sensor 2 in control valve with TCM. (With bracket.)

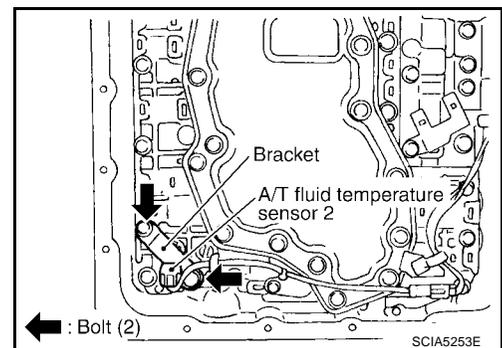

3. Connect A/T fluid temperature sensor 2 connector.

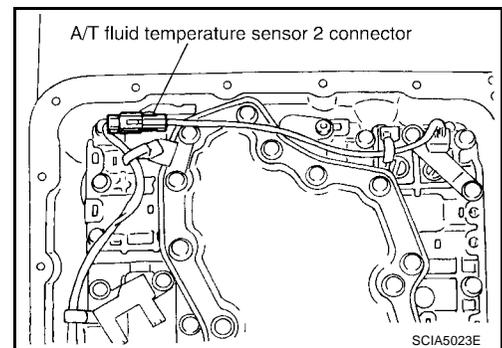

4. Securely fasten A/T fluid temperature sensor 2 harness with terminal clips.

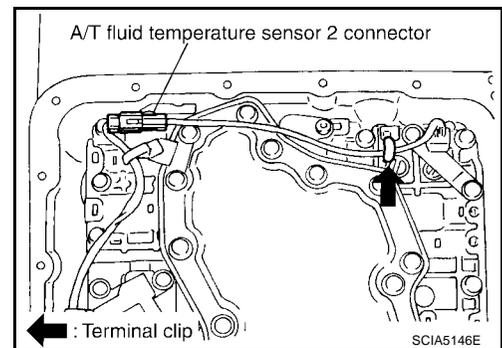

5. Install oil pan in transmission case.

- a. Install oil pan gasket in oil pan.

### CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old sealant, etc. from oil pan gasket mounting surfaces.

A  
B  
AT

D  
E

F  
G

H  
I

J  
K


L  
M

## ON-VEHICLE SERVICE

- b. Install oil pan (with oil pan gasket) to transmission case.

**CAUTION:**

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old sealant, etc. from oil pan mounting surfaces.

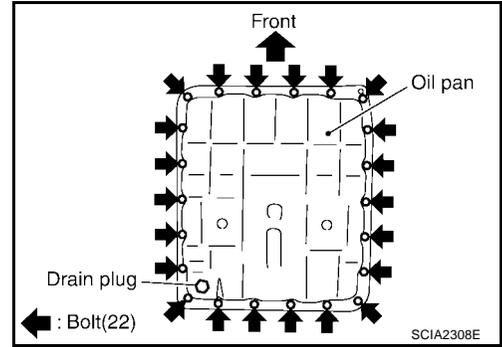

- c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Refer to [AT-255, "COMPONENTS"](#).

**CAUTION:**


**Do not reuse oil pan mounting bolts.**

6. Tighten drain plug to the specified torque. Refer to [AT-255, "COMPONENTS"](#).

**CAUTION:**

**Do not reuse drain plug gasket.**

7. Pour ATF into transmission assembly. Refer to [AT-13, "Changing A/T Fluid"](#).
8. Connect the negative battery terminal

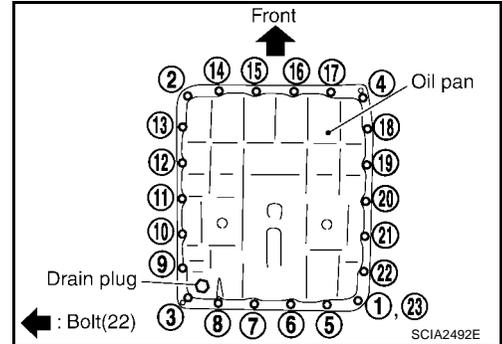


## Rear Oil Seal REMOVAL AND INSTALLATION

### Removal

1. Remove rear propeller shaft. Refer to [PR-8, "Removal and Installation"](#).
2. Remove transfer from transmission (4WD models). Refer to [TF-87, "Removal and Installation"](#).
3. Remove rear oil seal using a flat-bladed screwdriver.

**CAUTION:**

Be careful not to scratch rear extension assembly (2WD models) or adapter case assembly (4WD models).

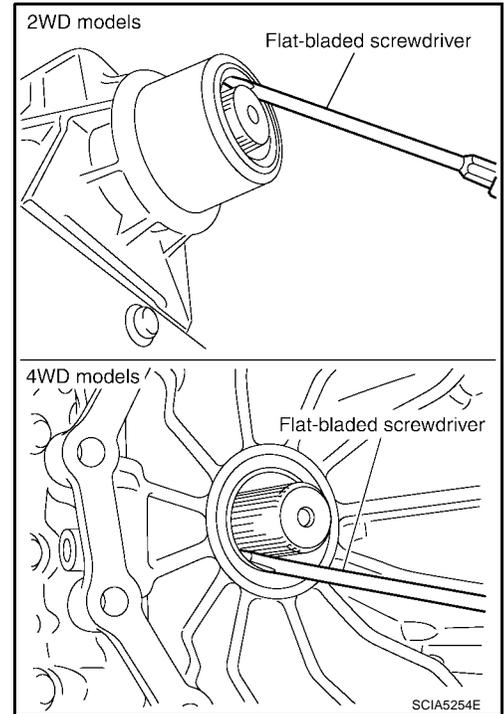

### Installation

**CAUTION:**


After completing installation, check A/T fluid leakage and fluid level. Refer to [AT-13, "Changing A/T Fluid"](#), [AT-13, "Checking A/T Fluid"](#).

1. As shown below, use a drift to drive rear oil seal into the extension case (2WD models) or adapter case (4WD models) until it is flush.

**CAUTION:**

- Apply ATF to rear oil seal.
- Do not reuse rear oil seal

2. Install transfer on transmission (4WD models). Refer to [TF-87, "Removal and Installation"](#).
3. Install rear propeller shaft. Refer to [PR-8, "Removal and Installation"](#).

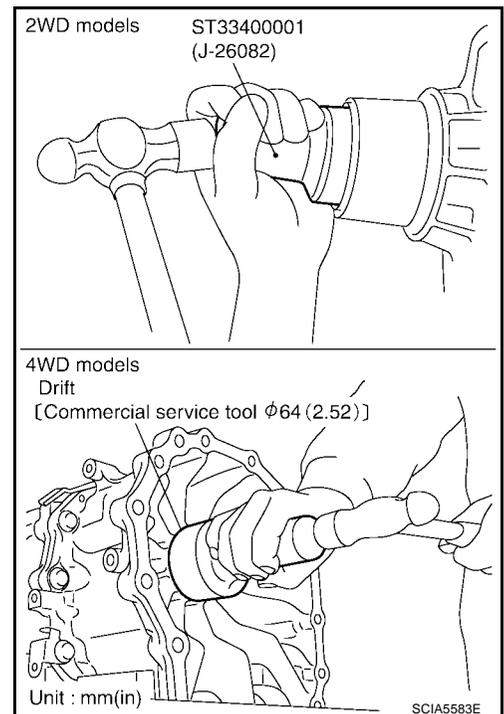

# AIR BREATHER HOSE


## AIR BREATHER HOSE

PFP:31098

### Removal and Installation 4X2

UCS002U0

Refer to the figure below for air breather hose removal and installation procedure.

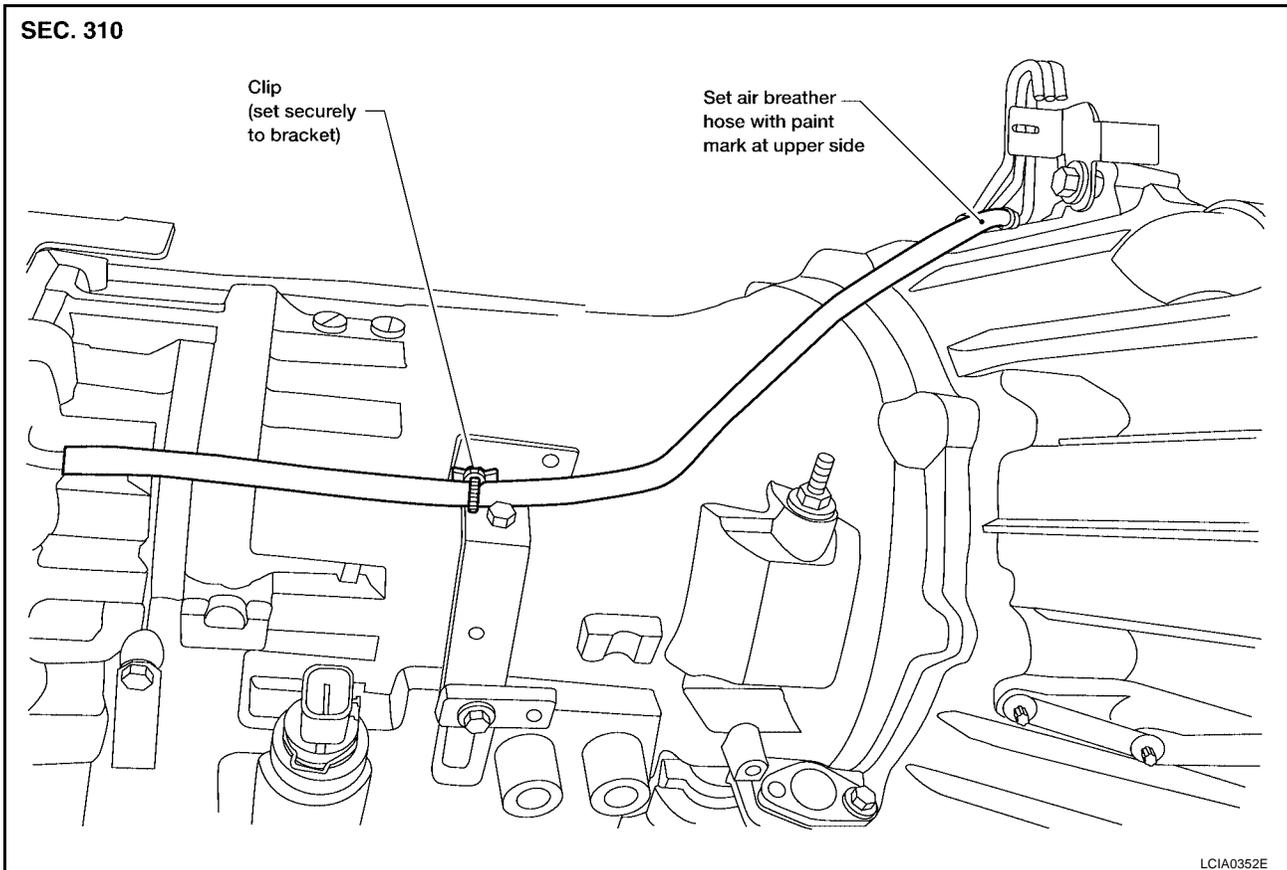


#### **CAUTION:**

- When installing an air breather hose, be careful not to crush or block the hose by folding or bending.
- When inserting a hose in to the transmission tube, be sure to insert it fully until its end reaches the tube bend portion.

# AIR BREATHER HOSE

## 4X4

Refer to the figure below for air breather hose removal and installation procedure.

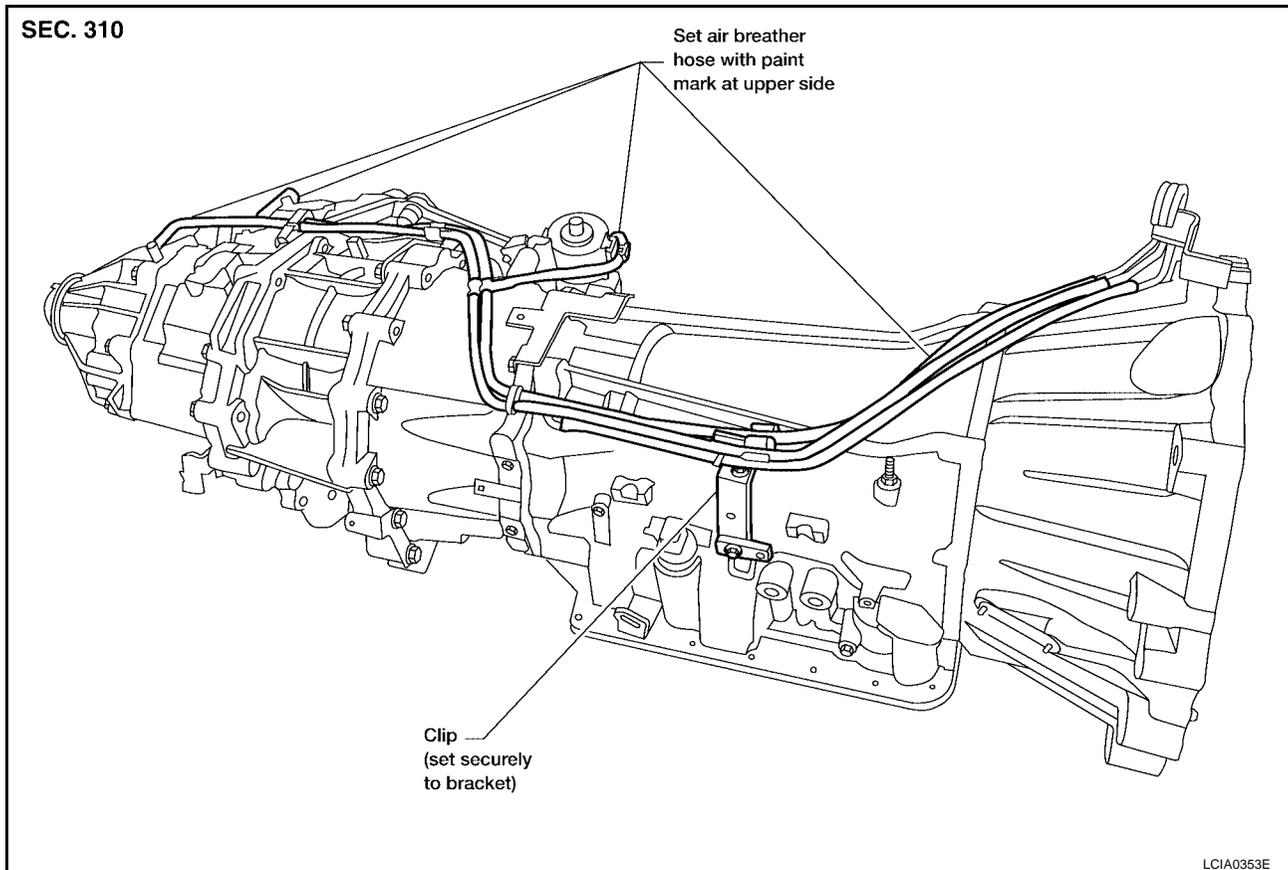

### CAUTION:

- When installing an air breather hose, be careful not to be crushed or blocked by folding or bending the hose.
- When inserting a hose to the transmission tube, be sure to insert it fully until its end reaches the tube bend portion.


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# TRANSMISSION ASSEMBLY

PFP:31020

UCS002U2

## TRANSMISSION ASSEMBLY Removal and Installation (4x2) COMPONENTS

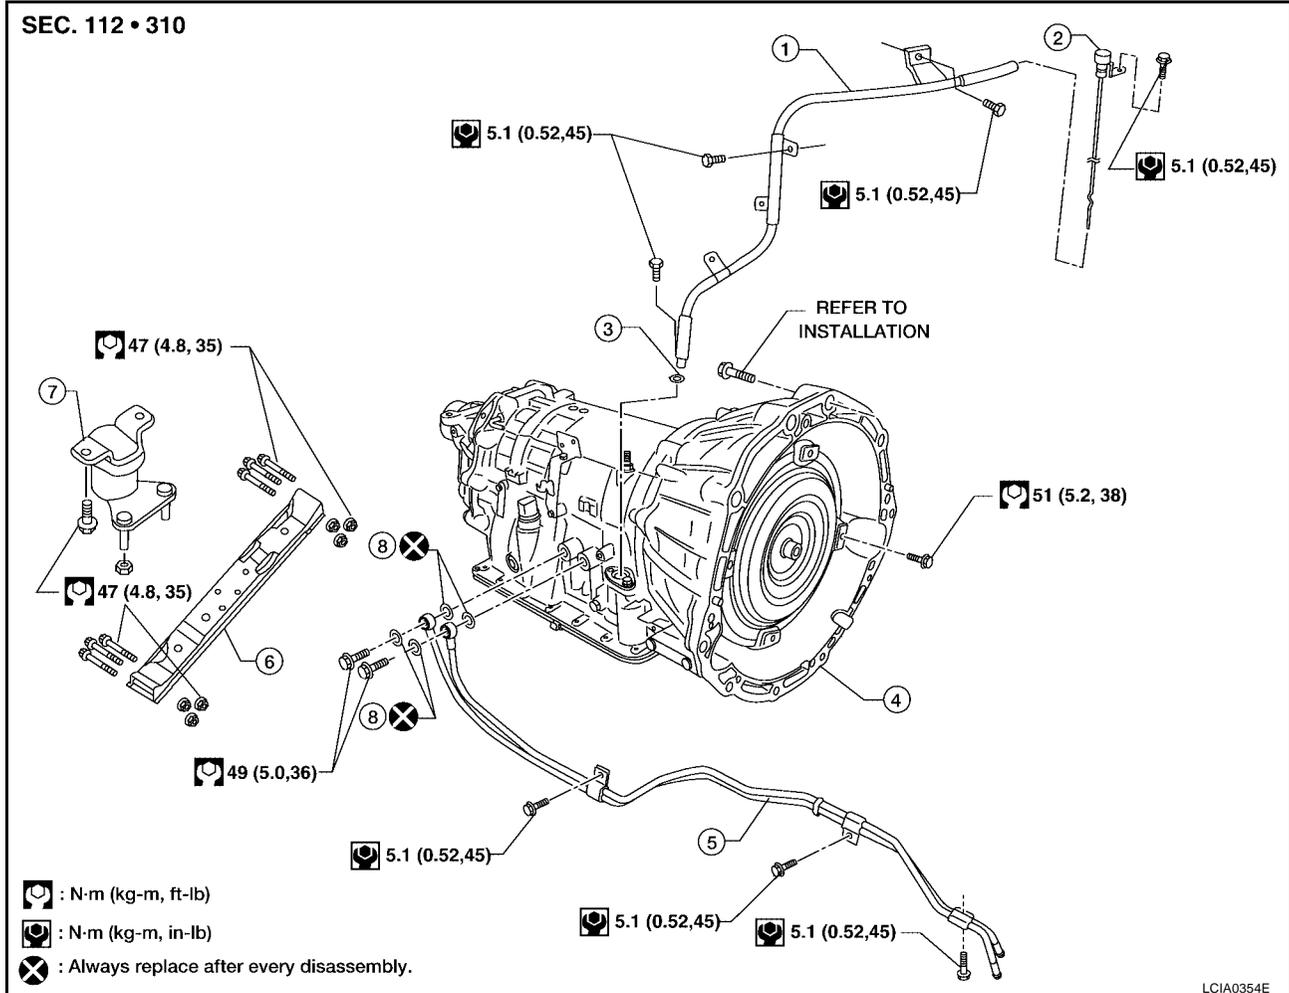

- |                             |                          |                     |
|-----------------------------|--------------------------|---------------------|
| 1. A/T fluid indicator pipe | 2. A/T fluid indicator   | 3. O-ring           |
| 4. Transmission assembly    | 5. A/T fluid cooler tube | 6. A/T cross member |
| 7. Insulator                | 8. Copper washers        |                     |

### REMOVAL

#### CAUTION:


When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

Be careful not to damage sensor edge.

1. Disconnect battery negative cable from battery negative terminal.
2. Remove engine cover.
3. Remove A/T fluid indicator gauge.
4. Remove engine under cover with power tool.
5. Remove exhaust front tube and center muffler with power tool. Refer to [EX-4, "REMOVAL"](#).
6. Remove propeller shaft. Refer to [PR-8, "Removal and Installation"](#).
7. Remove A/T control cable. Refer to [AT-241, "SHIFT CONTROL SYSTEM"](#).

# TRANSMISSION ASSEMBLY

8. Remove crankshaft position sensor (POS) from A/T assembly.
9. Remove fluid cooler tube.
10. Remove dust cover from converter housing part.

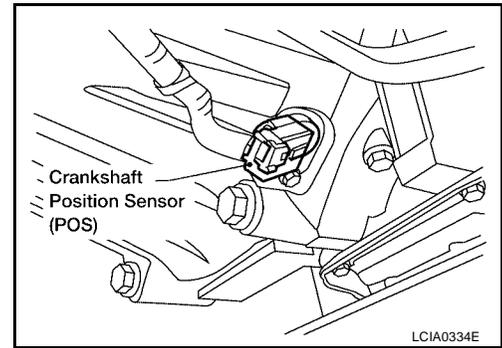

11. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

**CAUTION:**



**When turning crankshaft, turn it clockwise as viewed from the front of the engine.**

12. Support A/T assembly with a transmission jack.

**CAUTION:**

**When setting the transmission jack, be careful not to allow it to collide against the drain plug.**

13. Remove cross member with power tool.
14. Remove air breather hose. Refer to [AT-268, "Removal and Installation"](#).
15. Disconnect A/T unit assembly connector.
16. Remove A/T fluid indicator pipe from A/T assembly.
17. Plug up openings such as the fluid charging pipe hole, etc.
18. Remove the A/T assembly to engine bolts with power tool.
19. Remove A/T assembly from vehicle with a transmission jack.
  - Secure torque converter to prevent it from dropping.
  - Secure A/T assembly to a jack.

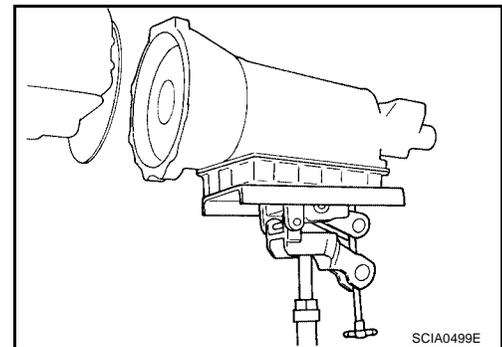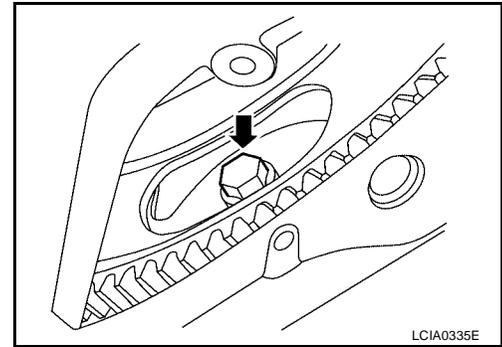


## INSPECTION

### Installation and Inspection of Torque Converter

- After inserting a torque converter to a transmission, be sure to check dimension A to ensure it is within the reference value limit.

**Dimension A : 24.0 mm (0.94 in) or more**

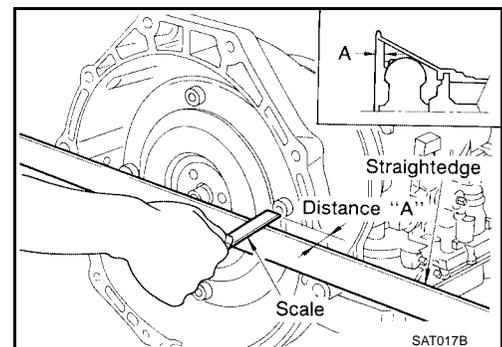

# TRANSMISSION ASSEMBLY


## INSTALLATION

Installation of the remaining components is in the reverse order of the removal.

- When installing transmission to the engine, attach the bolts in accordance with the following standard.

Bolt No.	1	2*	3
Number of bolts	5	1	4
Bolt length "ℓ"mm (in)	70 (2.76)		
Tightening torque N·m (kg·m, ft·lb)	113 (12, 83)		


\*: No.2 bolt also secures air breather vent.

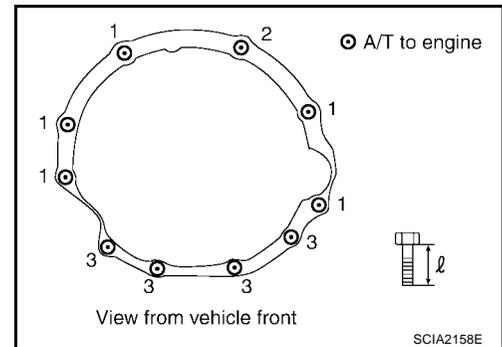

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

### CAUTION:


- **When turning crankshaft, turn it clockwise as viewed from the front of the engine.**
- **After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.**
- Install crankshaft position sensor (POS).
- After completing installation, check fluid leakage, fluid level, and the positions of A/T. Refer to [AT-13, "Changing A/T Fluid"](#) , [AT-243, "Adjustment of A/T Position"](#) , [AT-243, "Checking of A/T Position"](#) .

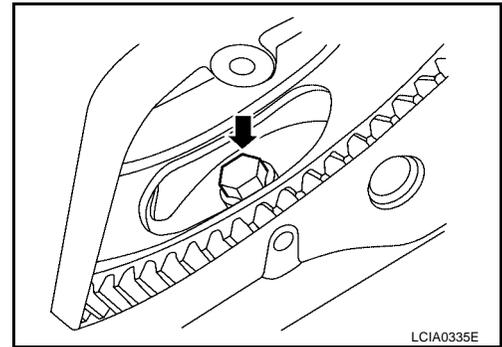

# TRANSMISSION ASSEMBLY

UCS002U3

## Removal and Installation (4x4) COMPONENTS

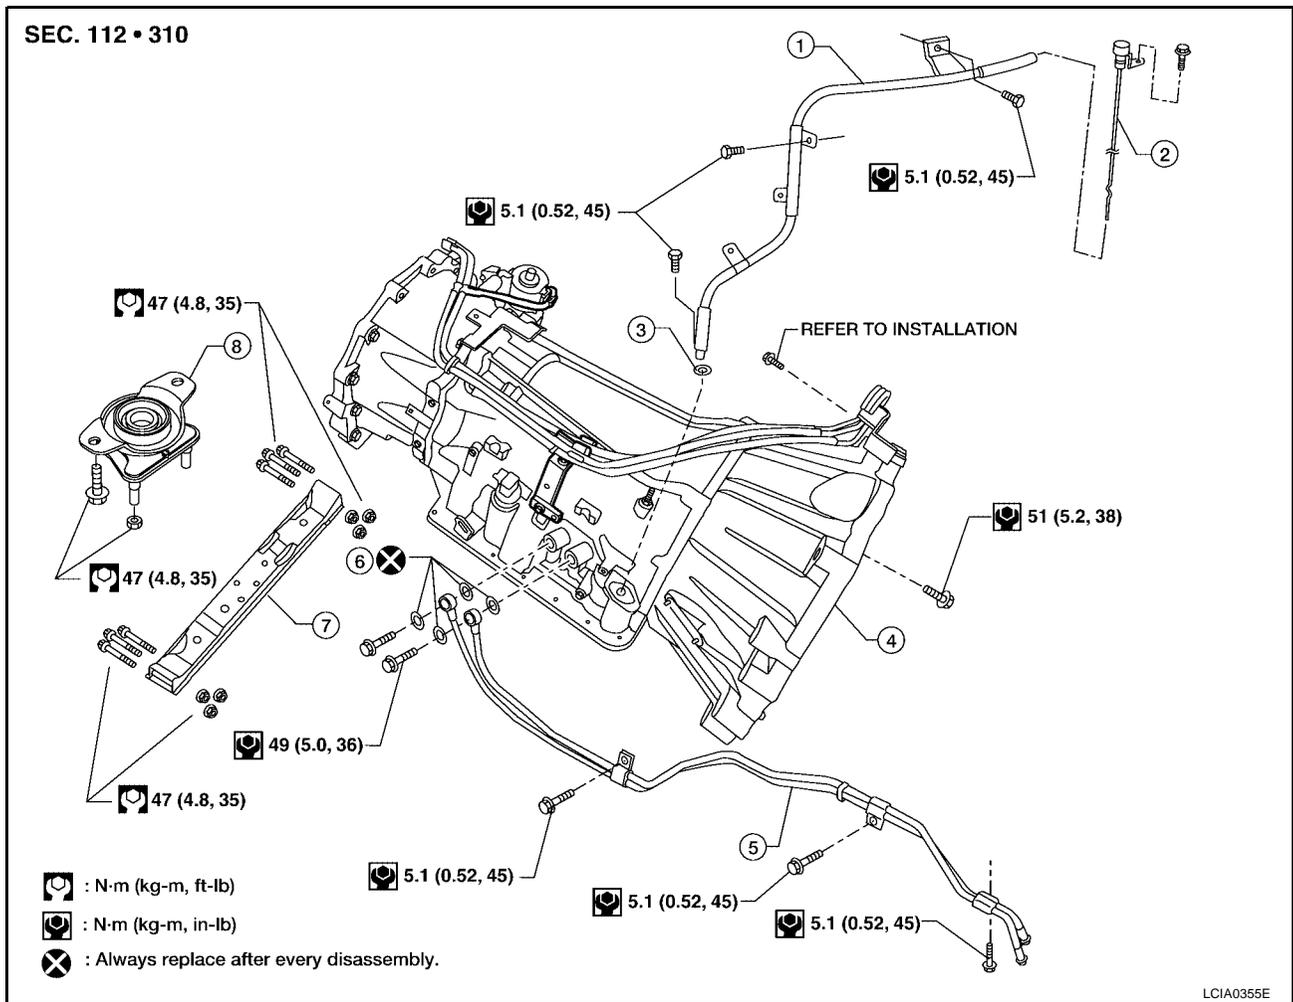

- |                             |                        |                  |
|-----------------------------|------------------------|------------------|
| 1. A/T fluid indicator pipe | 2. A/T fluid indicator | 3. O-ring        |
| 4. Transmission assembly    | 5. Fluid cooler tube   | 6. Copper washer |
| 7. A/T cross member         | 8. Insulator           |                  |

### REMOVAL

#### CAUTION:


When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

Be careful not to damage sensor edge.

1. Disconnect battery negative cable from battery negative terminal.
2. Remove engine cover with power tool.
3. Remove A/T fluid indicator.
4. Remove engine under cover with power tool.
5. Remove exhaust front tube and center muffler with power tool. Refer to [EX-4, "REMOVAL"](#).
6. Remove propeller shaft. Refer to [PR-4, "Removal and Installation"](#), [PR-8, "Removal and Installation"](#).
7. Remove A/T control cable. Refer to [AT-241, "SHIFT CONTROL SYSTEM"](#).

# TRANSMISSION ASSEMBLY

8. Remove crankshaft position sensor (POS) from A/T assembly.
9. Disconnect A/T fluid cooler tube from A/T assembly.
10. Remove dust cover from converter housing part.

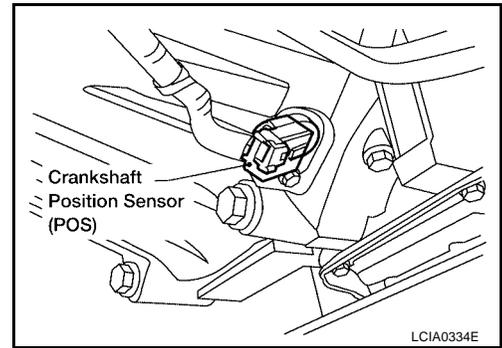

11. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

**CAUTION:**

**When turning crankshaft, turn it clockwise as viewed from the front of the engine.**


12. Support A/T assembly with a transmission jack.

**CAUTION:**

**When setting the transmission jack, be careful not to allow it to collide against the drain plug.**

13. Remove cross member with power tool.

14. Tilt the transmission slightly to keep the clearance between body and transmission, and then disconnect air breather hose from charging pipe. Refer to [AT-268, "Removal and Installation"](#).

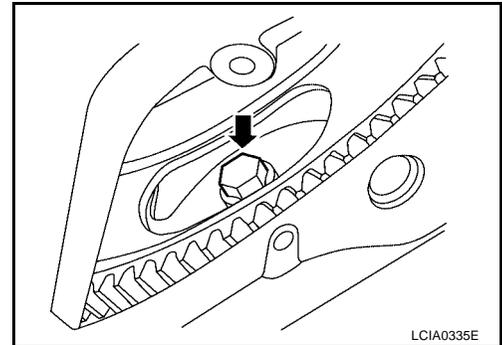

15. Disconnect A/T unit assembly connector and transfer unit connector.

16. Remove A/T fluid indicator pipe.

17. Plug up openings such as the fluid charging pipe hole, etc.

18. Remove A/T assembly to engine bolts with power tool.

19. Remove A/T assembly with transfer from vehicle, using Tool.

**Tool number** : — (J-47002)


**CAUTION:**

- Secure torque converter to prevent it from dropping.
- Secure A/T assembly to a jack.

**NOTE:**

The actual special service tool may differ from tool shown.

20. Remove transfer from A/T assembly. Refer to [TF-87, "Removal and Installation"](#).

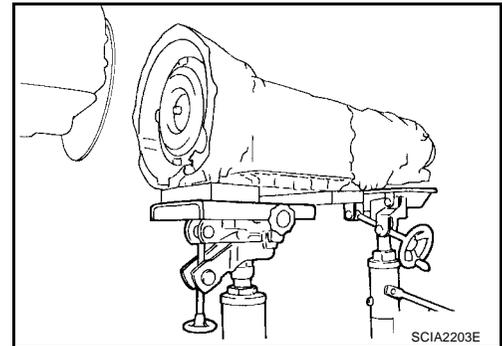


## INSPECTION

### Installation and Inspection of Torque Converter

- After inserting a torque converter to a transmission, be sure to check dimension A to ensure it is within the reference value limit.

**Dimension A** : 24.0 mm (0.94 in) or more

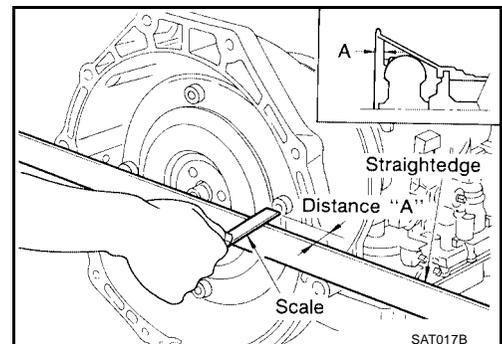

## INSTALLATION


Installation is in the reverse order of removal.

# TRANSMISSION ASSEMBLY

- When installing transmission to the engine, attach the bolts in accordance with the following standard.

Bolt No.	1	2*	3
Number of bolts	5	1	4
Bolt length "ℓ"mm (in)	70 (2.76)		
Tightening torque N·m (kg·m, ft·lb)	113 (12, 83)		


\*: No.2 bolt also secures air breather vent.

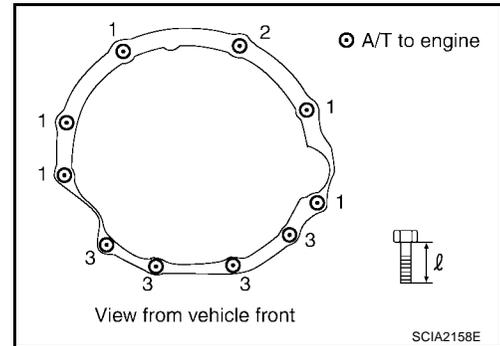

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

### CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.
- Install crankshaft position sensor (POS).
- After completing installation, check fluid leakage, fluid level, and the positions of A/T. Refer to [AT-13, "Changing A/T Fluid"](#) , [AT-243, "Adjustment of A/T Position"](#) , [AT-243, "Checking of A/T Position"](#) .

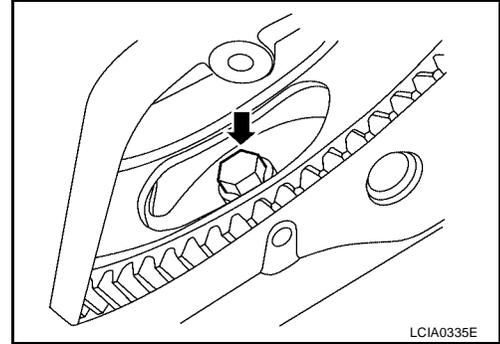


# OVERHAUL

PF0:0000

UCS0030A

## OVERHAUL Components

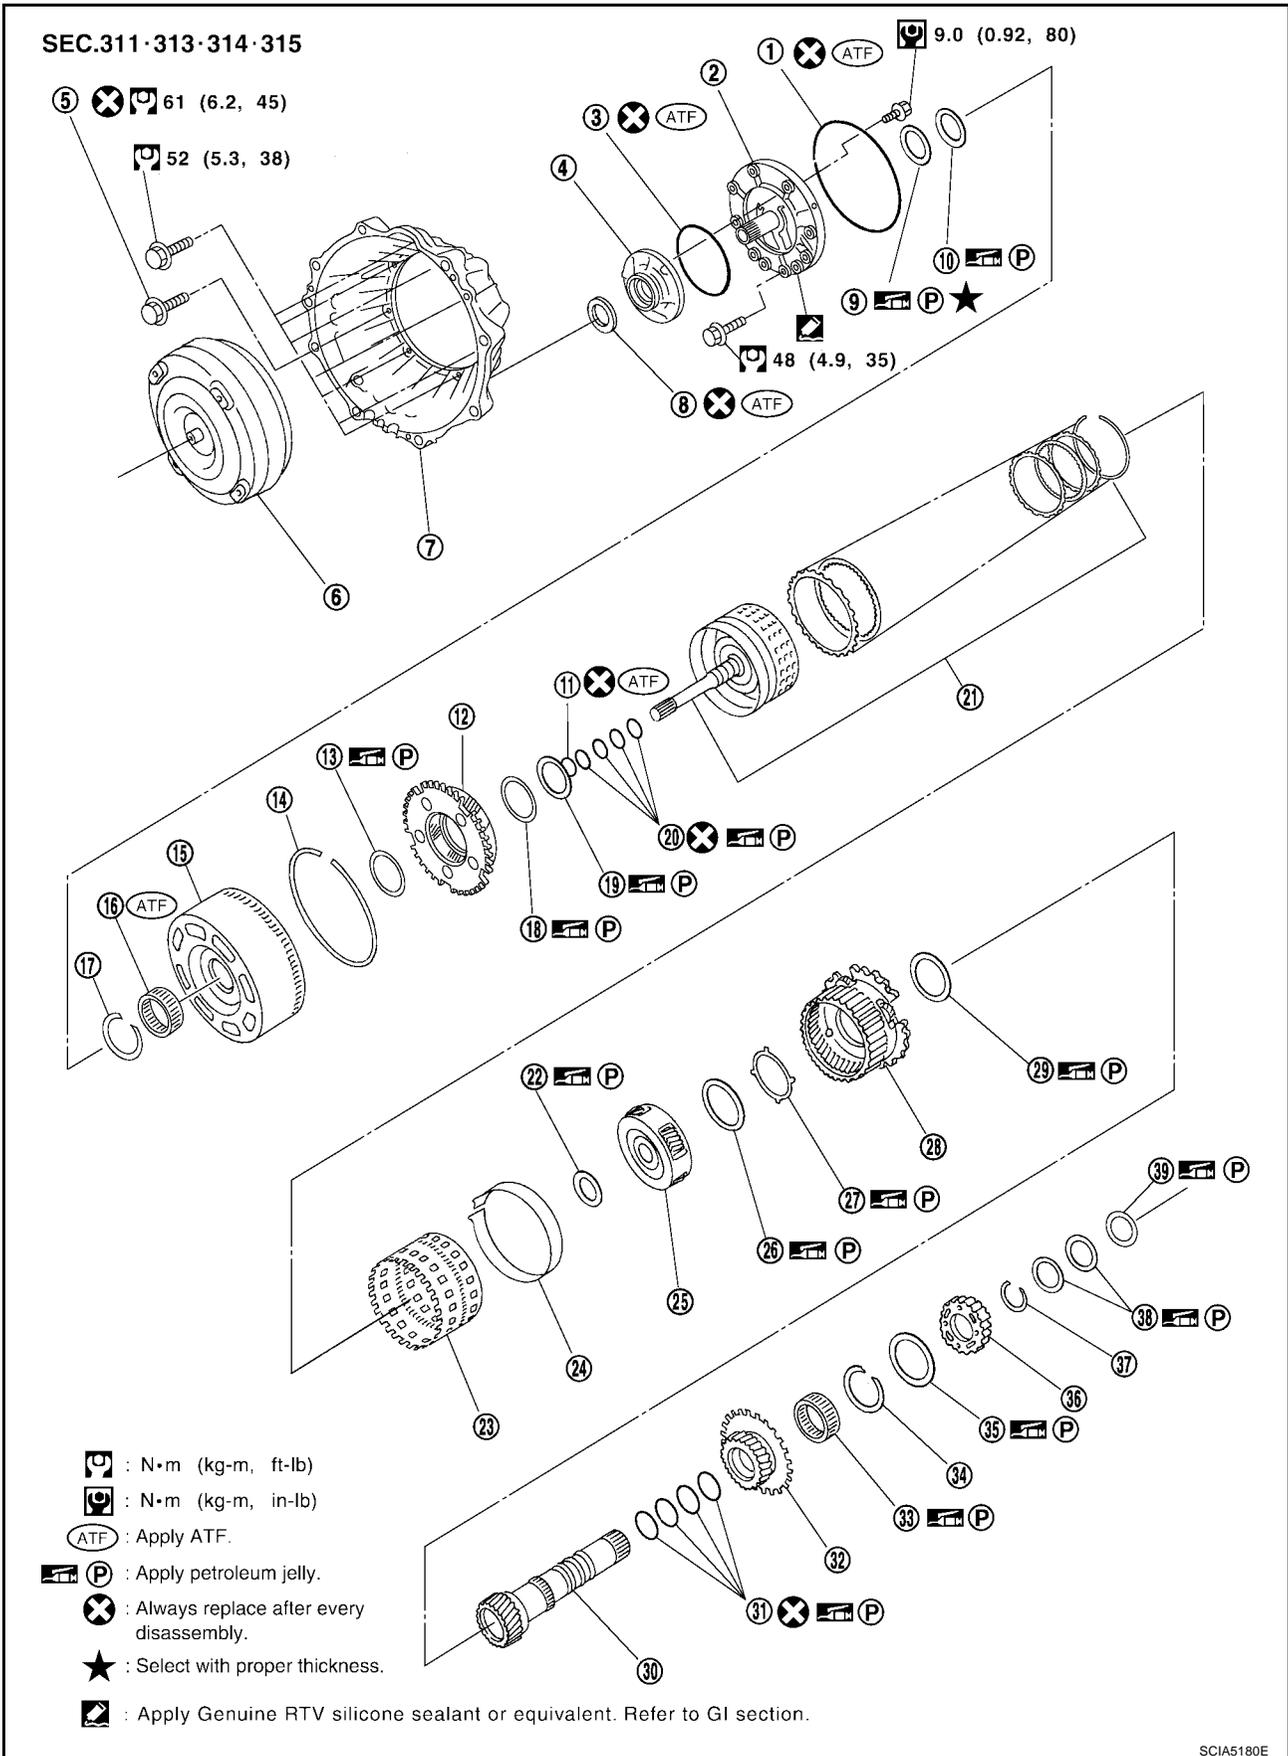

SCIA5180E

# OVERHAUL

- 
- |                           |                              |                                     |    |
|---------------------------|------------------------------|-------------------------------------|----|
| 1. O-ring                 | 2. Oil pump cover            | 3. O-ring                           | A  |
| 4. Oil pump housing       | 5. Self-sealing bolt         | 6. Torque converter                 |    |
| 7. Converter housing      | 8. Oil pump housing oil seal | 9. Bearing race                     |    |
| 10. Needle bearing        | 11. O-ring                   | 12. Front carrier assembly          | B  |
| 13. Needle bearing        | 14. Snap ring                | 15. Front sun gear                  |    |
| 16. 3rd one-way clutch    | 17. Snap ring                | 18. Bearing race                    |    |
| 19. Needle bearing        | 20. Seal ring                | 21. Input clutch assembly           | AT |
| 22. Needle bearing        | 23. Rear internal gear       | 24. Brake band                      |    |
| 25. Mid carrier assembly  | 26. Needle bearing           | 27. Bearing race                    |    |
| 28. Rear carrier assembly | 29. Needle bearing           | 30. Mid sun gear                    | D  |
| 31. Seal ring             | 32. Rear sun gear            | 33. 1st one-way clutch              |    |
| 34. Snap ring             | 35. Needle bearing           | 36. High and low reverse clutch hub |    |
| 37. Snap ring             | 38. Bearing race             | 39. Bearing race                    | E  |
| 40. Needle bearing        |                              |                                     |    |

F

G

H

I

J


K

L

M

# OVERHAUL

SEC.315 · 316

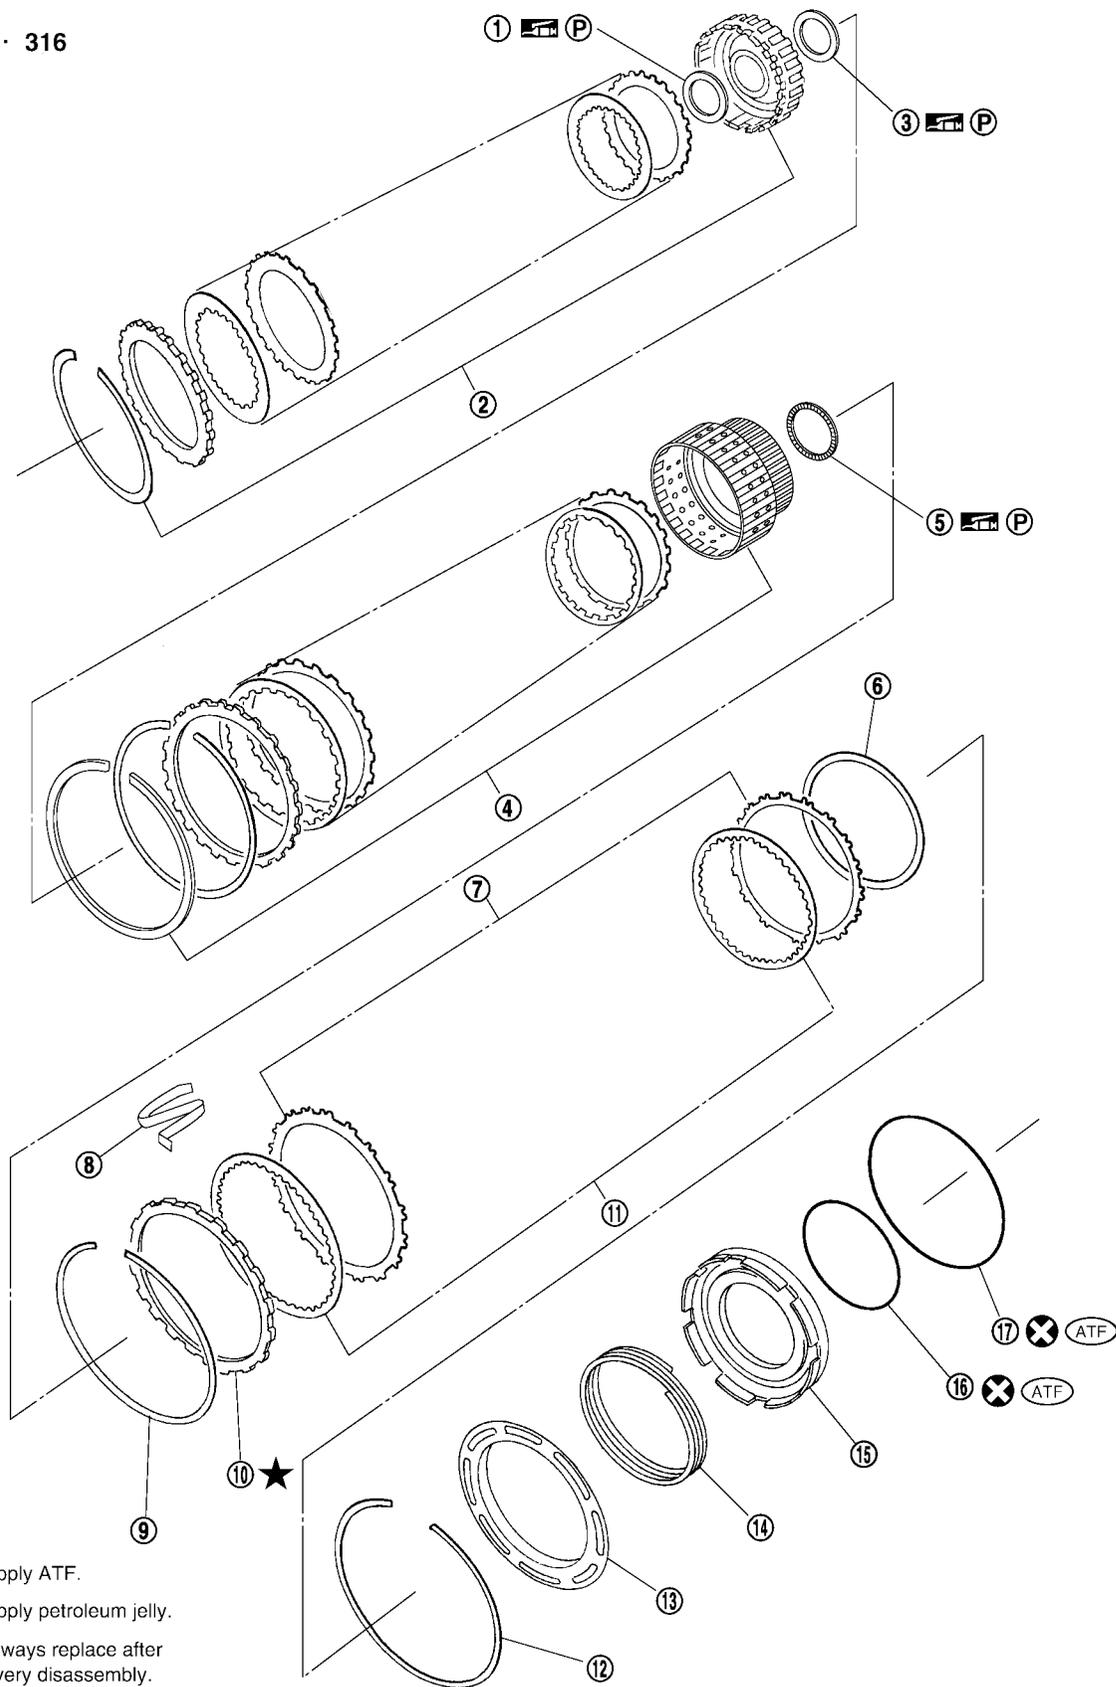

SCIA5181E

1. Bearing race

2. High and low reverse clutch assembly

3. Needle bearing

4. Direct clutch assembly

5. Needle bearing

6. Reverse brake dish plate

# OVERHAUL

- 
- |                                   |                               |                          |
|-----------------------------------|-------------------------------|--------------------------|
| 7. Reverse brake driven plate     | 8. N-sprig                    | 9. Snap ring             |
| 10. Reverse brake retaining plate | 11. Reverse brake drive plate | 12. Snap ring            |
| 13. Spring retainer               | 14. Return spring             | 15. Reverse brake piston |
| 16. D-ring                        | 17. Lip seal                  |                          |

A

B

AT

D

E

F

G

H

I

J

K


L

M

# OVERHAUL

## 2WD models

SEC.313 · 314 · 315 · 316 · 317 · 319

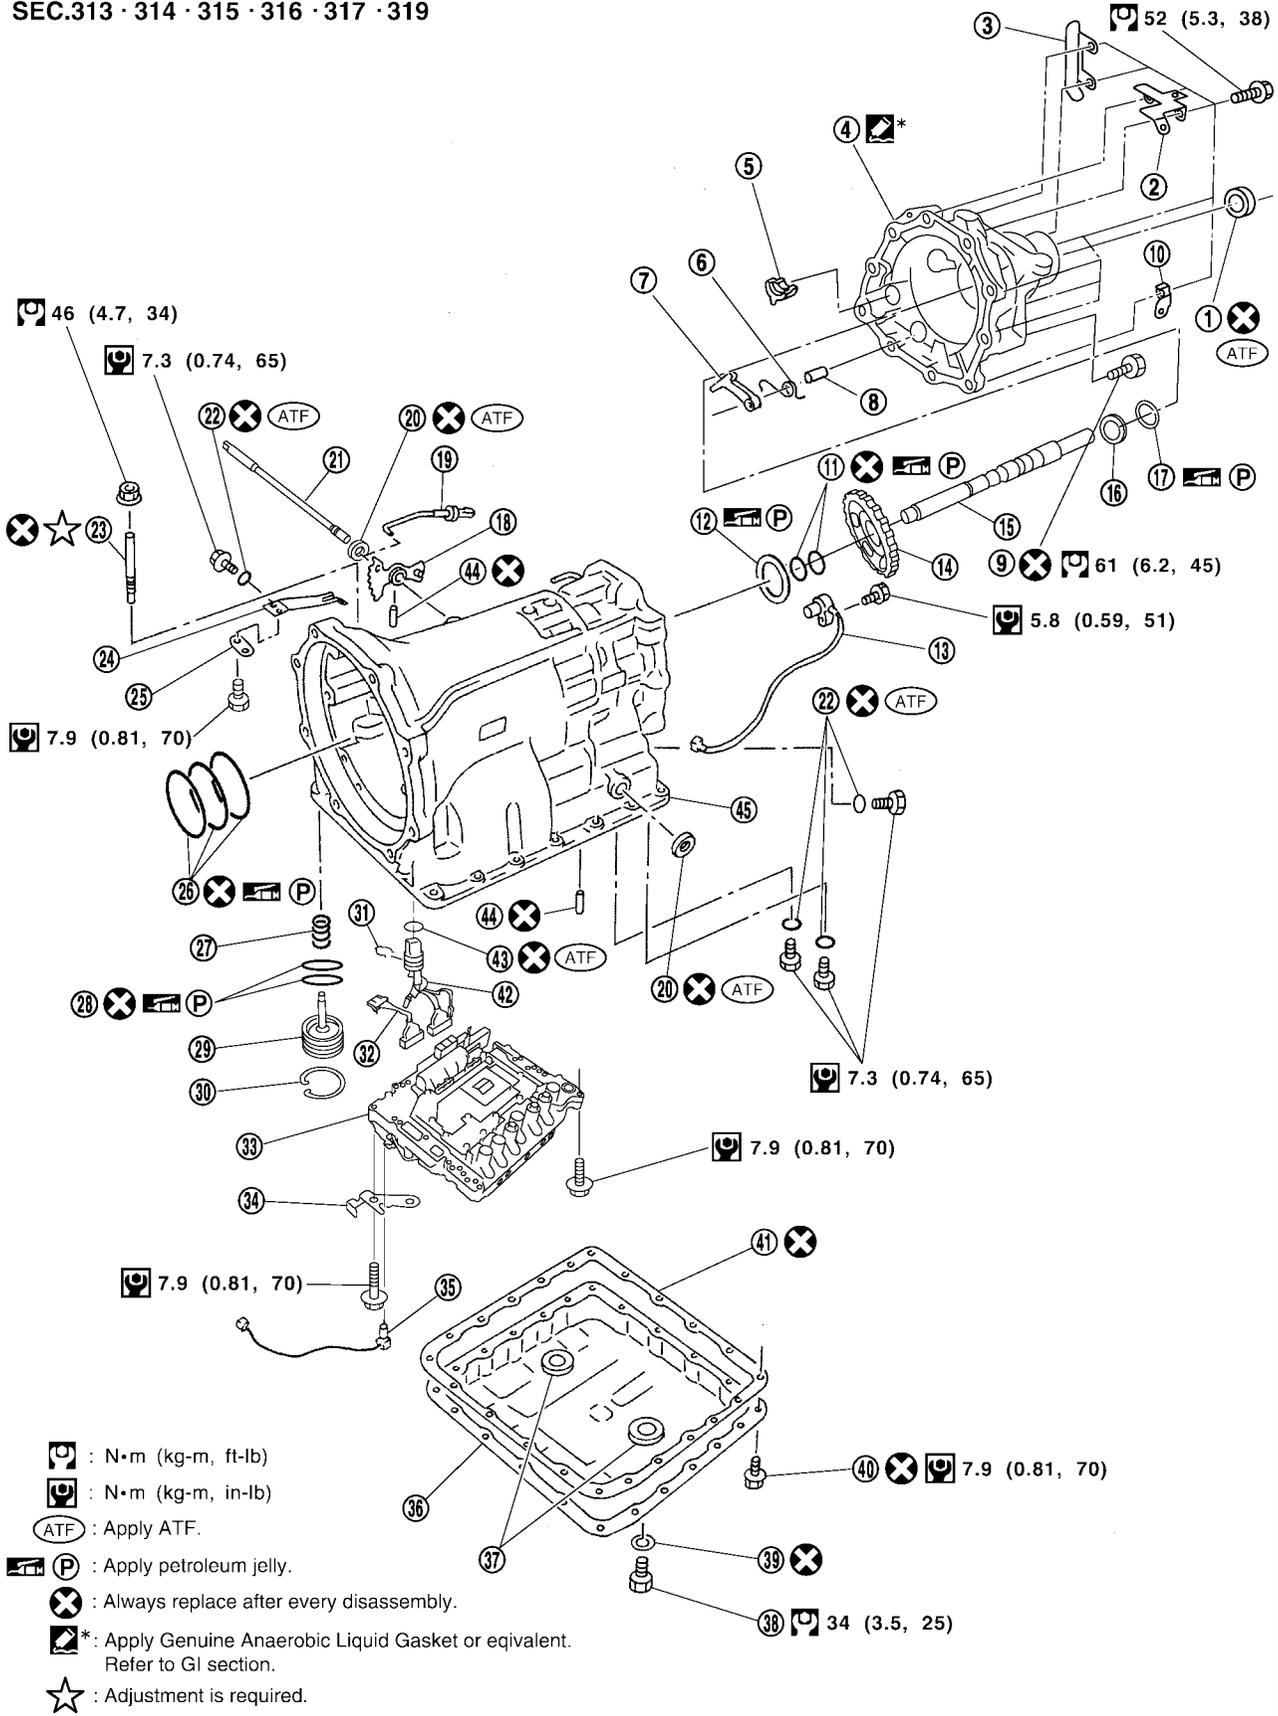

SCIA5663E

- |                   |                             |                  |
|-------------------|-----------------------------|------------------|
| 1. Rear oil seal  | 2. Bracket                  | 3. Bracket       |
| 4. Rear extension | 5. Parking actuator support | 6. Return spring |

# OVERHAUL

---

7. Parking pawl	8. Pawl shaft	9. Self-sealing bolt
10. Bracket	11. Seal ring	12. Needle bearing
13. Revolution sensor	14. Parking gear	15. Output shaft
16. Bearing race	17. Needle bearing	18. Manual plate
19. Parking rod	20. Manual shaft oil seal	21. Manual shaft
22. O-ring	23. Band servo anchor end pin	24. Detent spring
25. Spacer	26. Seal rings	27. Return spring
28. O-ring	29. Servo assembly	30. Snap ring
31. Snap ring	32. Sub-harness	33. Control valve with TCM
34. Bracket	35. A/T fluid temperature sensor 2	36. Oil pan
37. Magnet	38. Drain plug	39. Drain plug gasket
40. Oil pan mounting bolt	41. Oil pan gasket	42. Terminal cord assembly
43. O-ring	44. Retaining pin	45. Transmission case

A

B

AT

D

E

F

G

H

I

J

K

L

M



# OVERHAUL

---

7. Pawl shaft	8. Bracket	9. Self-sealing bolt
10. Seal ring	11. Needle bearing	12. Gasket
13. Revolution sensor	14. Parking gear	15. Output shaft
16. Bearing race	17. Needle bearing	18. Manual plate
19. Parking rod	20. Manual shaft oil seal	21. Manual shaft
22. O-ring	23. Band servo anchor end pin	24. Detent spring
25. Spacer	26. Seal rings	27. Return spring
28. O-ring	29. Servo assembly	30. Snap ring
31. Snap ring	32. Sub-harness	33. Control valve with TCM
34. Bracket	35. A/T fluid temperature sensor 2	36. Oil pan
37. Magnet	38. Drain plug	39. Drain plug gasket
40. Oil pan mounting bolt	41. Oil pan gasket	42. Terminal cord assembly
43. O-ring	44. Retaining pin	45. Transmission case

A

B

AT

D

E

F

G

H

I

J

K

L


M

# OVERHAUL

## Oil Channel

UCS0030B


### 2WD models

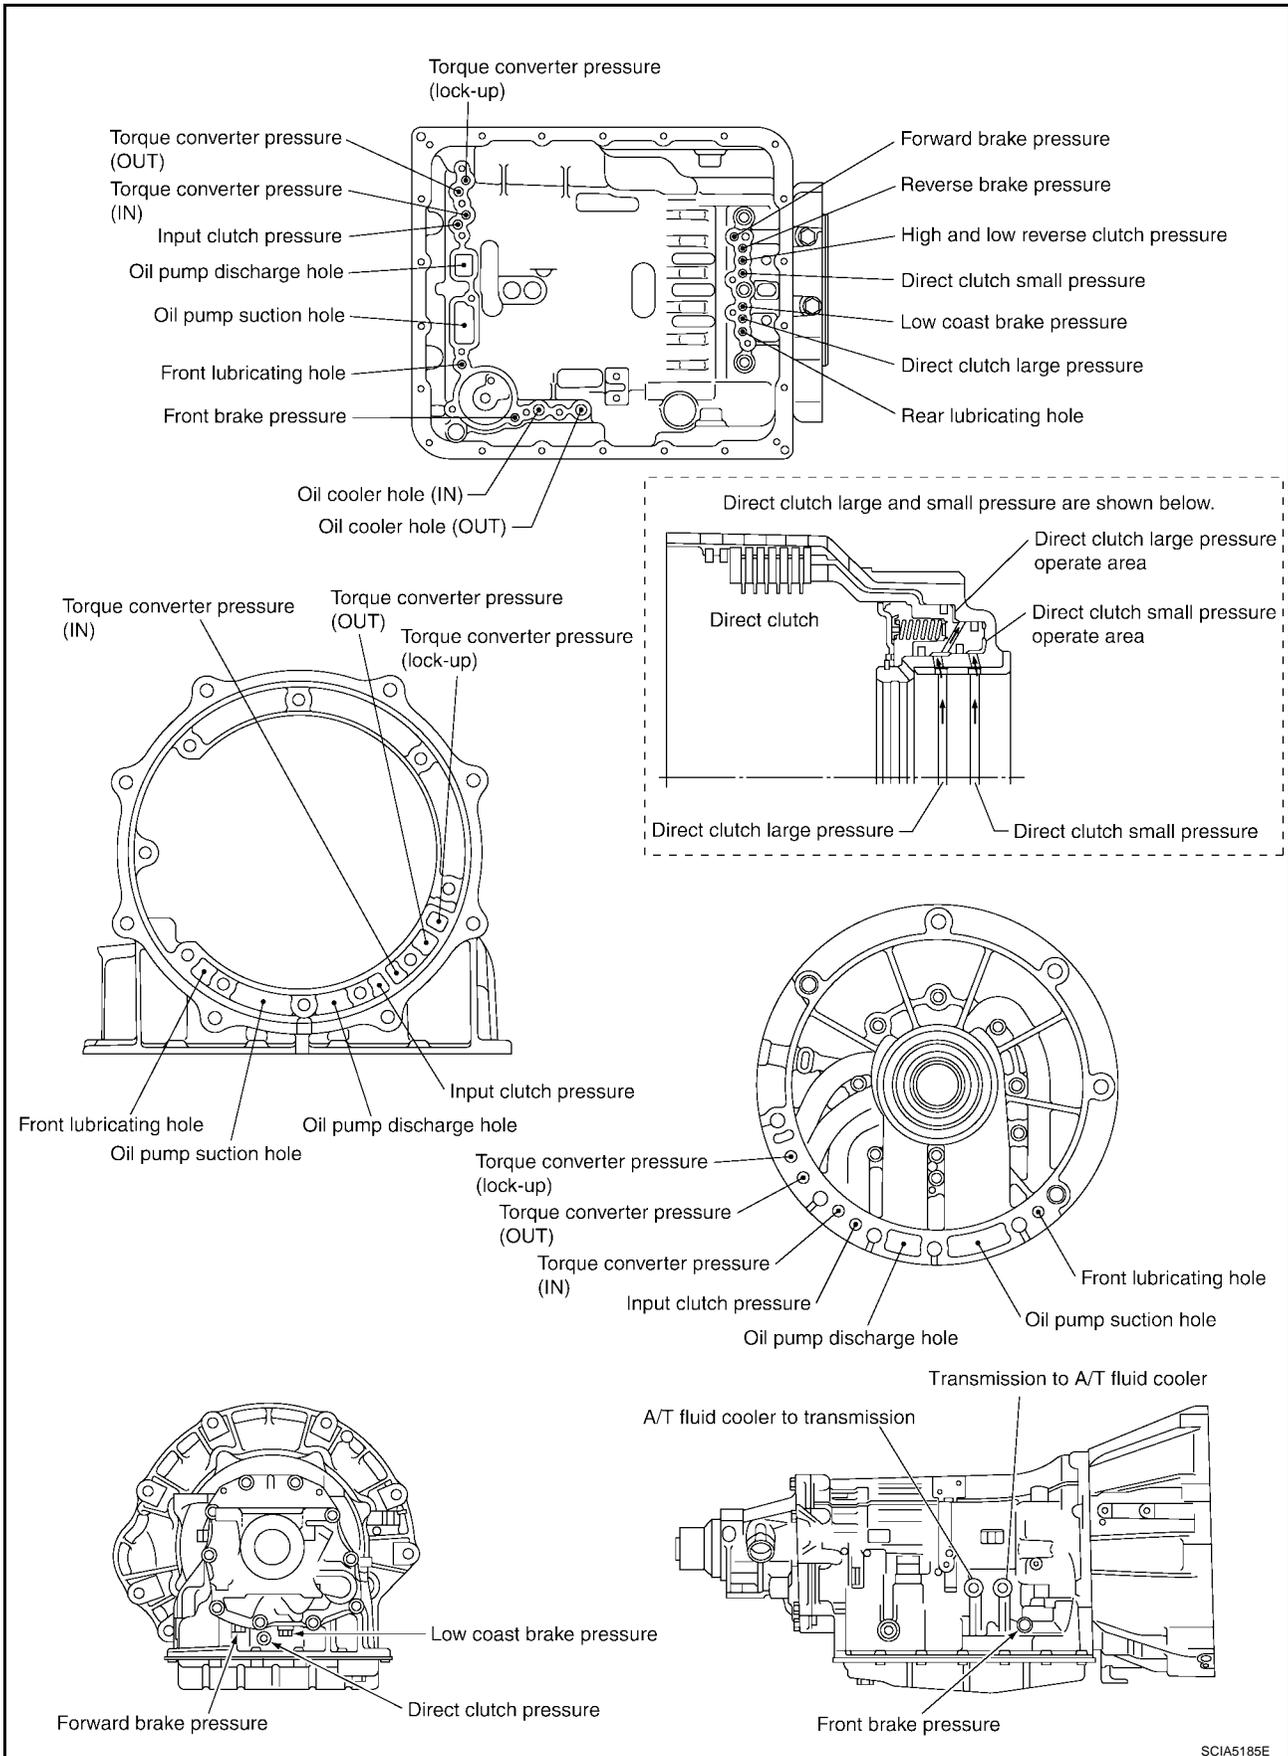

SCIA5185E

# OVERHAUL

## 4WD models

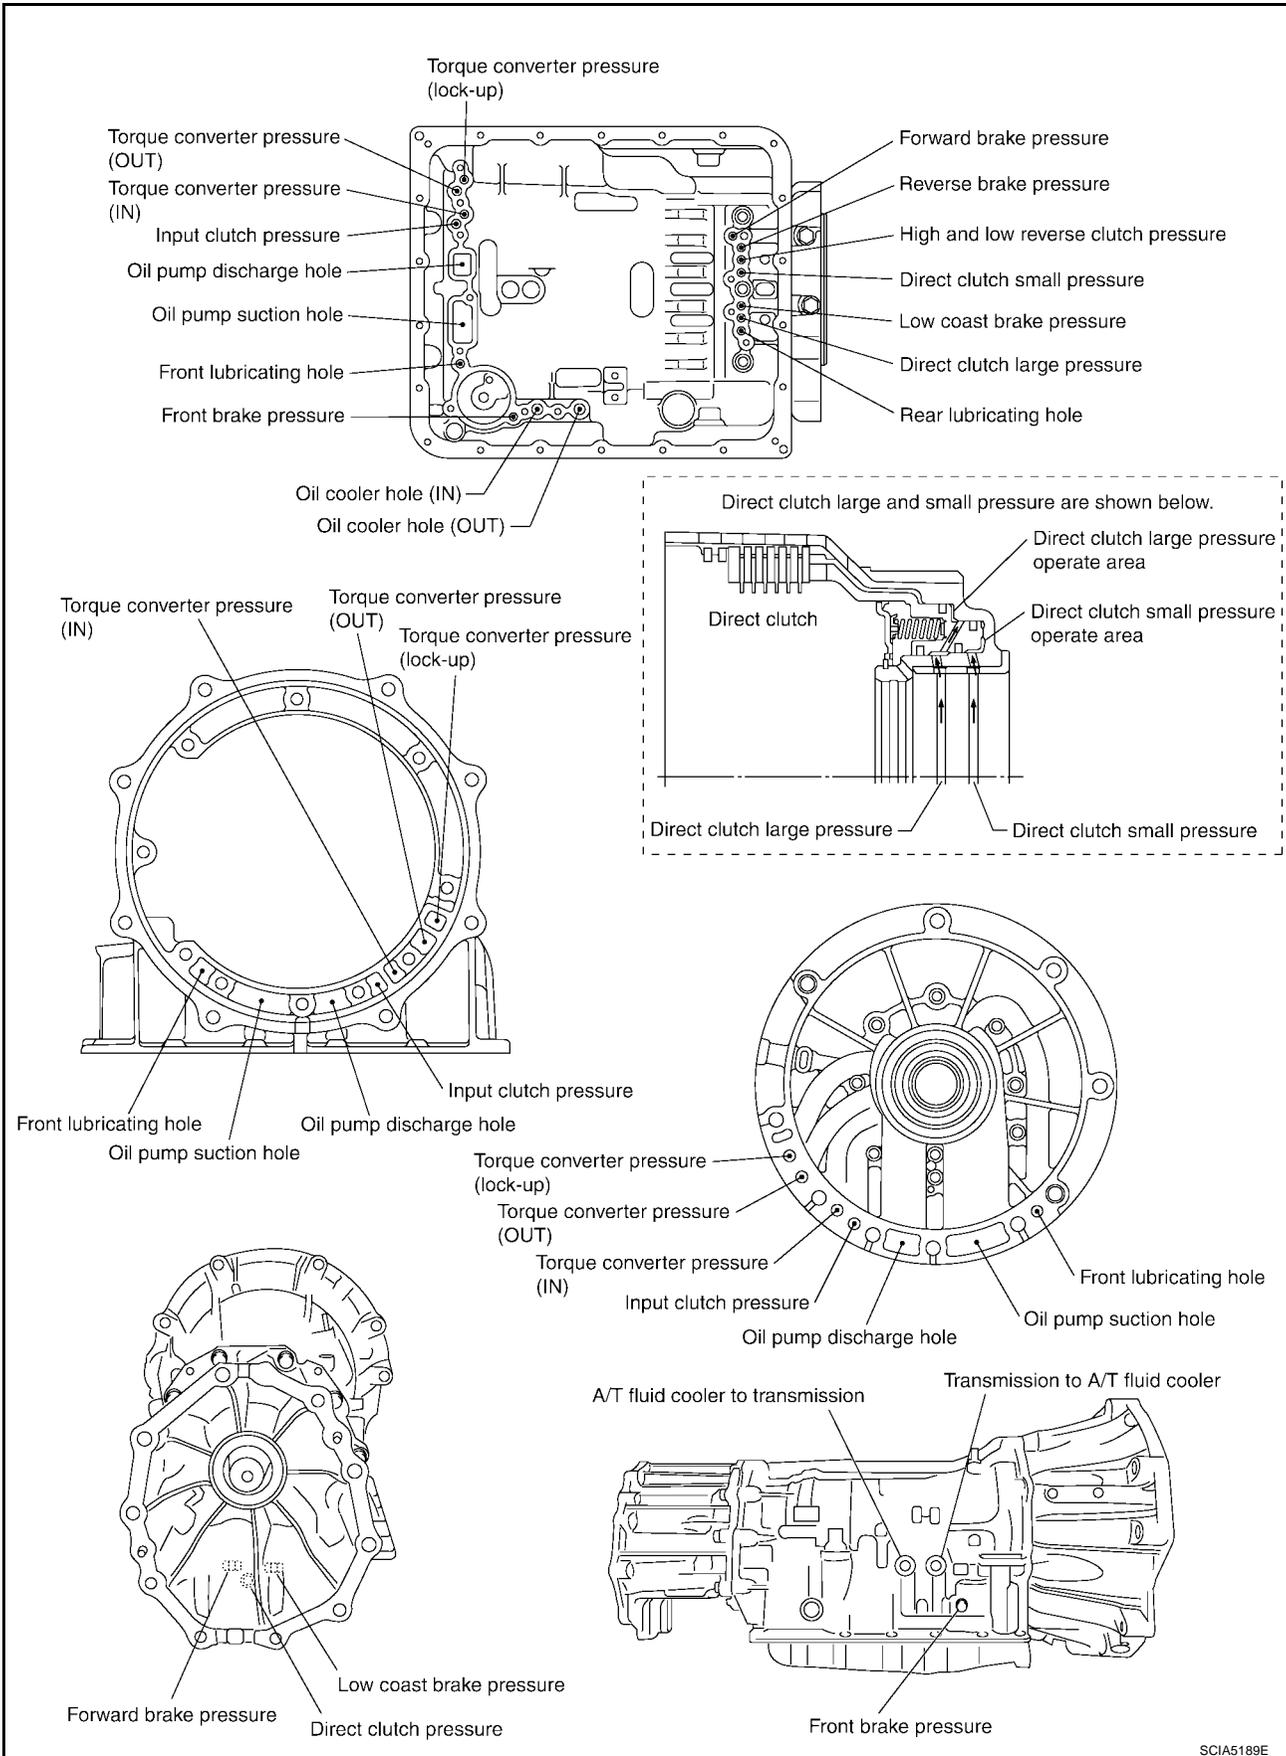

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


SCIA5189E

# OVERHAUL

## Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

UCS0030C


### 2WD models

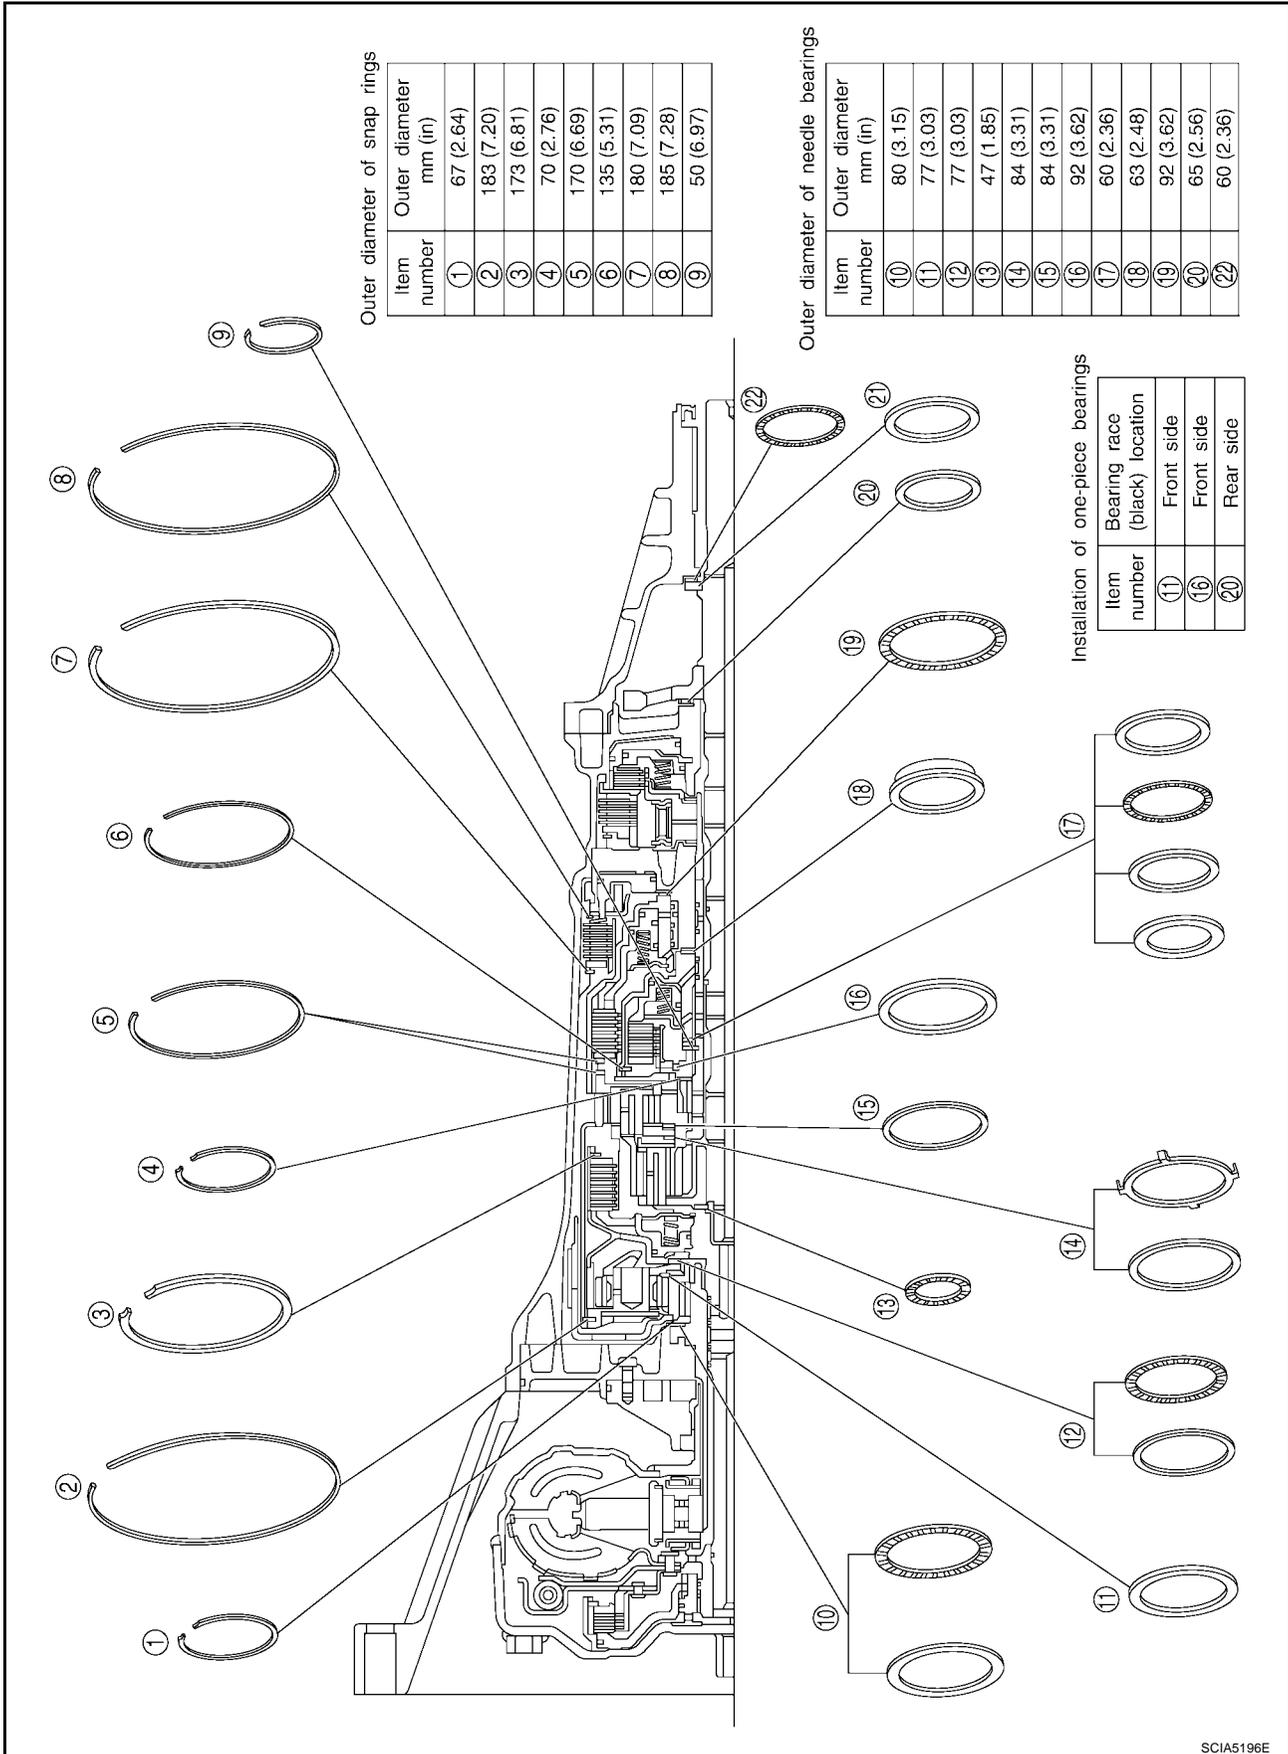

SCIA5196E

# OVERHAUL

## 4WD models

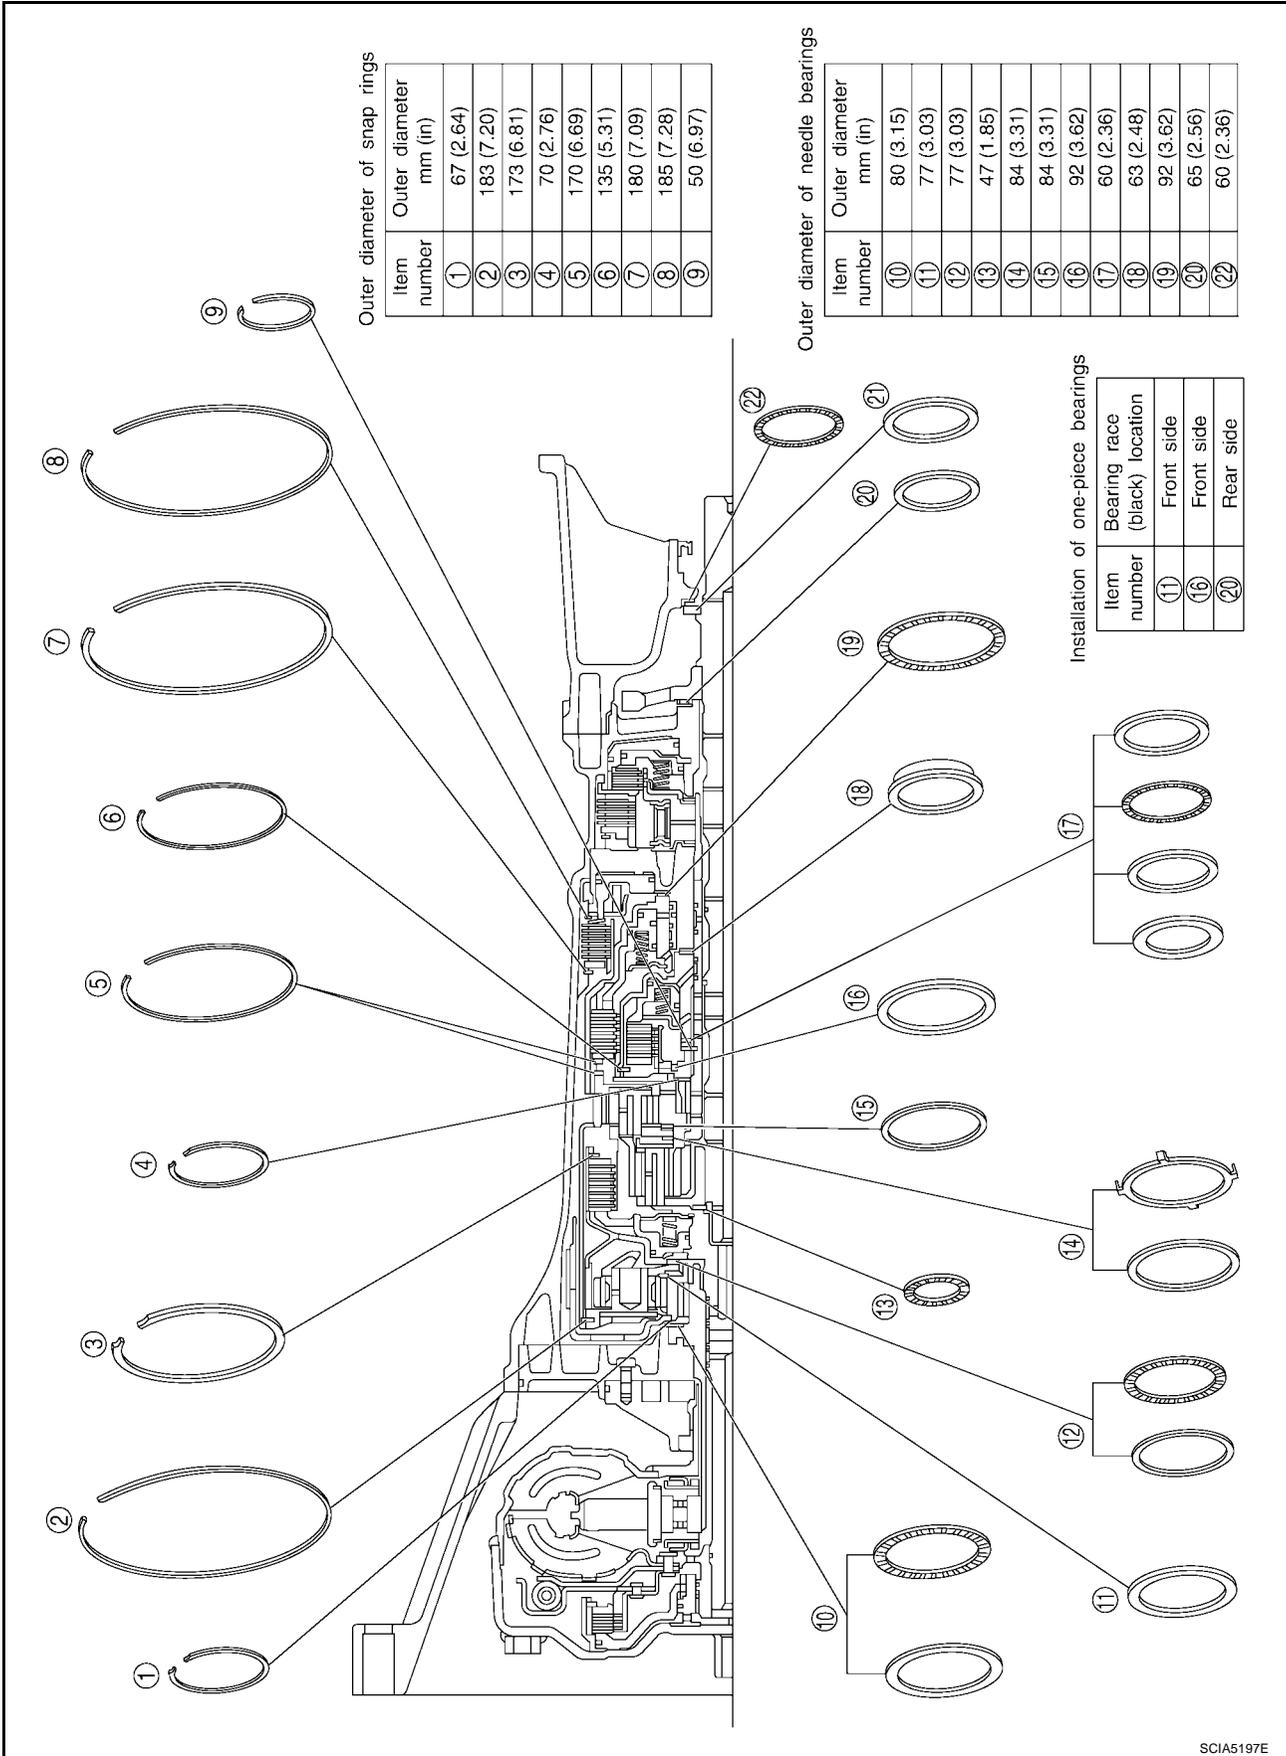

SCIA5197E

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M


## DISASSEMBLY

### Disassembly


**CAUTION:**

**Do not disassemble parts behind Drum Support.**

1. Drain ATF through drain plug.
2. Remove torque converter by holding it firmly and turning while pulling straight out.

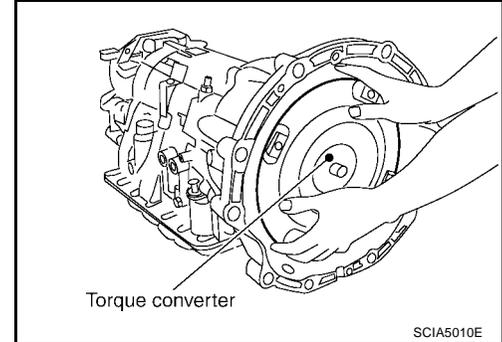


3. Check torque converter one-way clutch using check tool as shown at figure.
  - a. Insert check tool into the groove of bearing support built into one-way clutch outer race.
  - b. When fixing bearing support with check tool, rotate one-way clutch spline using screwdriver.
  - c. Check that inner race rotates clockwise only. If not, replace torque converter assembly.

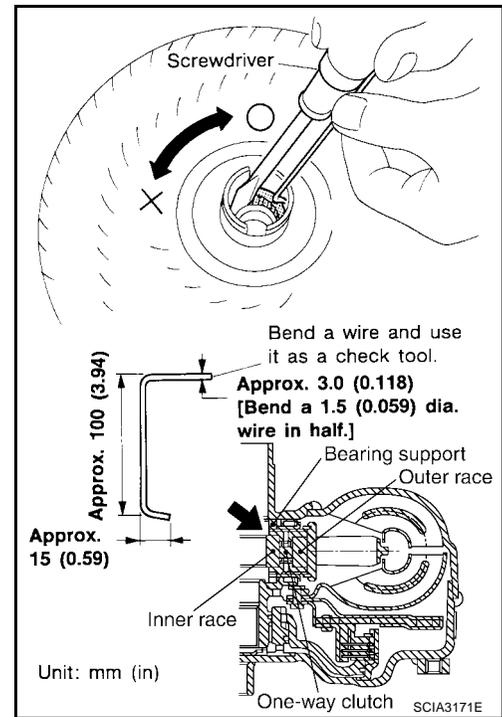

4. Remove converter housing from transmission case.


**CAUTION:**

**Be careful not to scratch converter housing.**

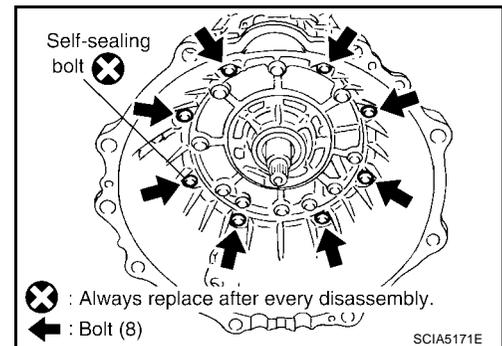


# DISASSEMBLY

5. Remove O-ring from input clutch assembly.

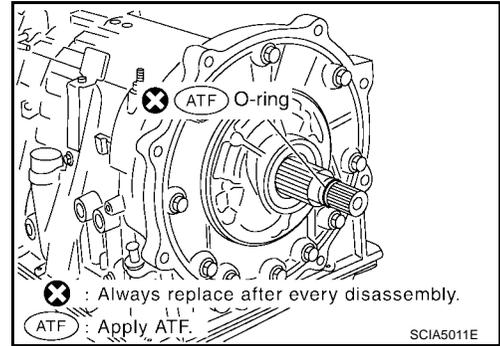


6. Remove tightening bolts for oil pump assembly and transmission case.

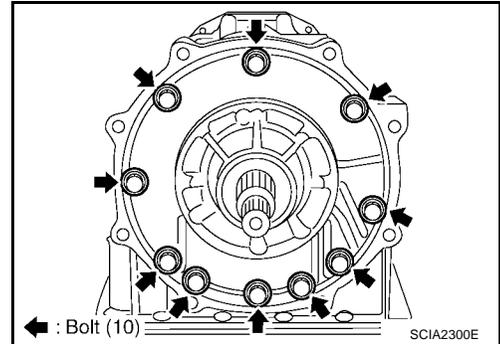


7. Attach sliding hammer to oil pump assembly and extract it evenly from transmission case.

**CAUTION:**

- Fully tighten sliding hammer screw.
- Make sure that bearing race is installed to the oil pump assembly edge surface.

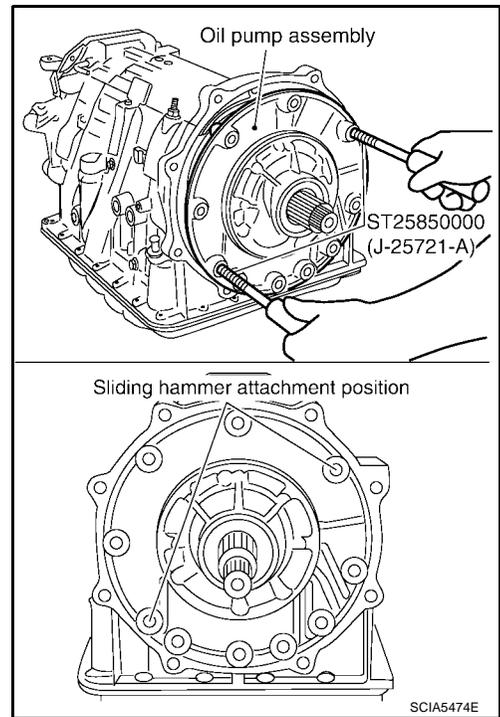


8. Remove bearing race from oil pump assembly.

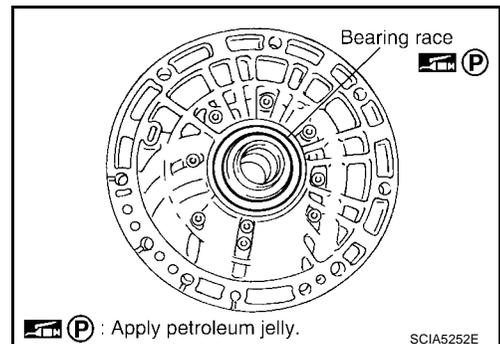


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DISASSEMBLY

9. Remove O-ring from oil pump assembly.

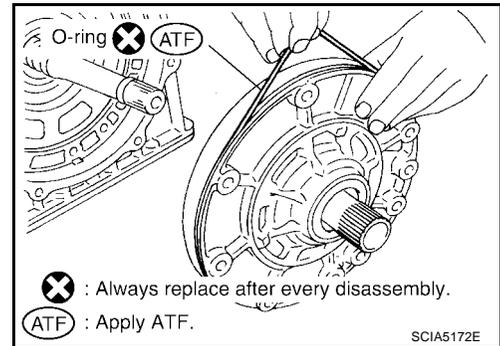


10. Remove needle bearing from front sun gear.

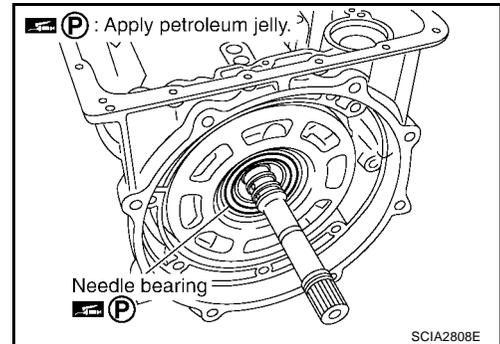


11. Remove front sun gear from front carrier assembly.


**NOTE:**  
Remove front sun gear by rotating left/right.

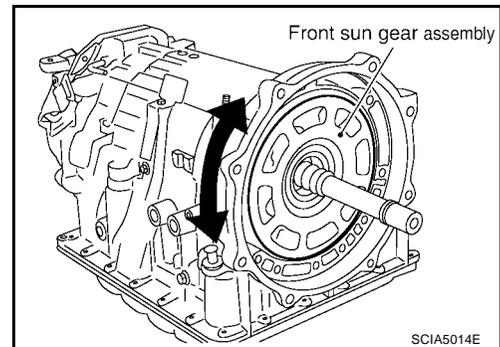

12. Remove seal rings from input clutch assembly.

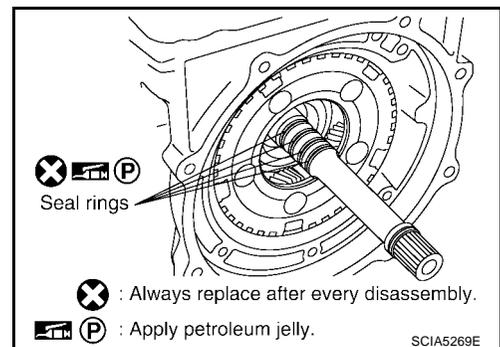


13. Remove front carrier assembly, input clutch assembly and rear internal gear as a unit.

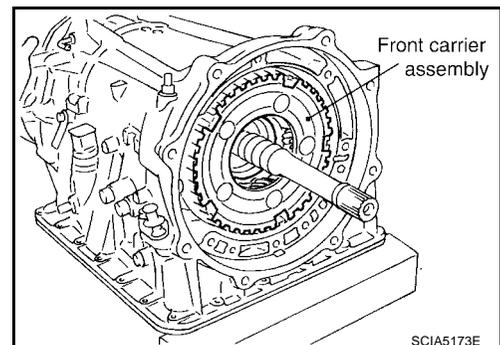


# DISASSEMBLY


14. Loosen lock nut and remove band servo anchor end pin from transmission case.

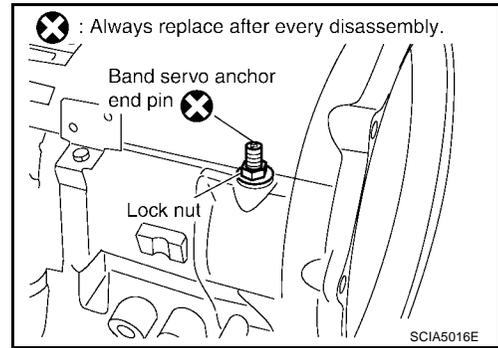


15. Remove brake band from transmission case.

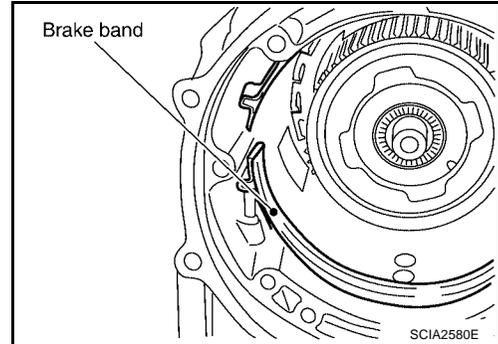

- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at left. Leave the clip in position after removing the brake band.
- Check brake band facing for damage, cracks, wear or burns.

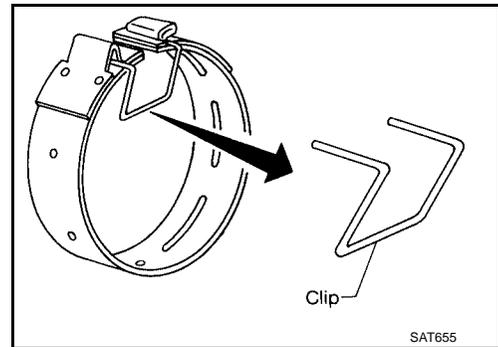


16. Remove mid carrier assembly and rear carrier assembly as a unit.

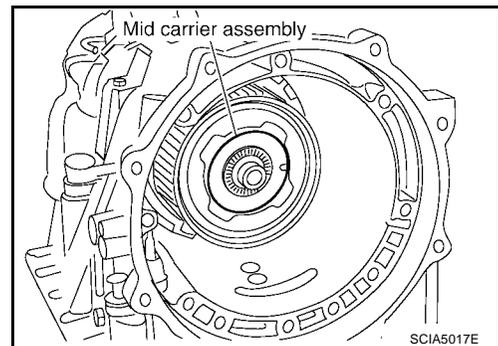


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DISASSEMBLY


17. Remove mid carrier assembly from rear carrier assembly.

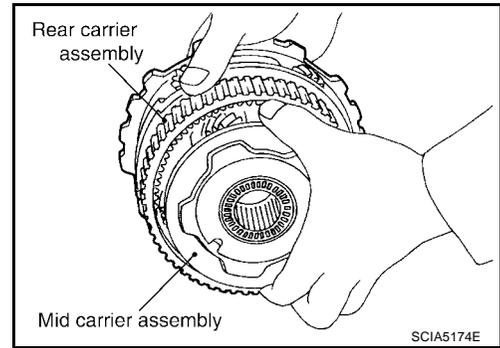


18. Remove needle bearing (front side) from mid carrier assembly.

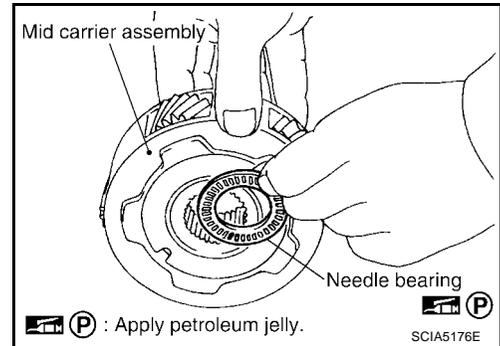


19. Remove needle bearing (rear side) from mid carrier assembly.

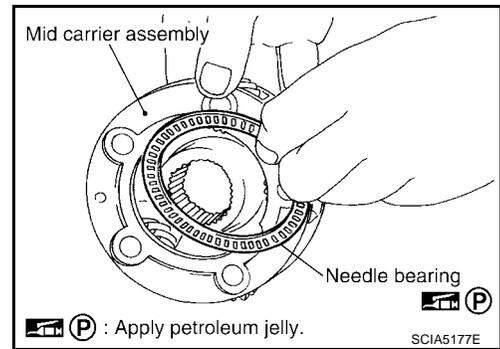

20. Remove bearing race from rear carrier assembly.

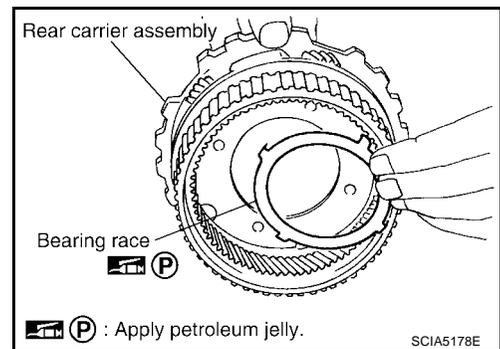


21. Remove needle bearing from rear carrier assembly.

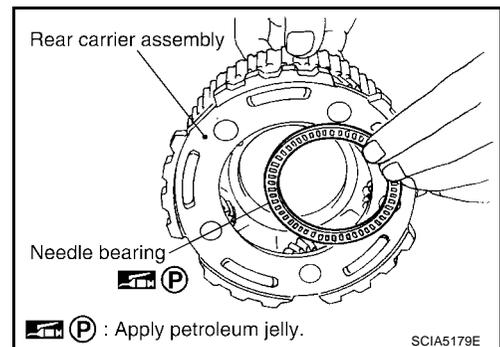


# DISASSEMBLY

22. Remove mid sun gear assembly, rear sun gear assembly and high and low reverse clutch hub as a unit.

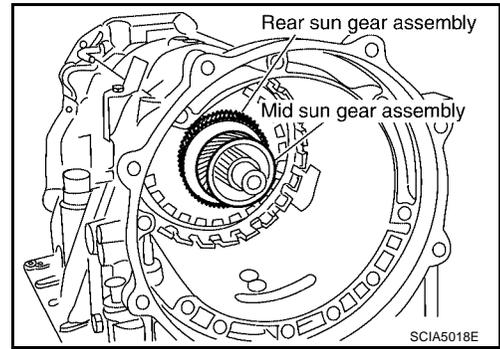


A  
B  
AT

23. Remove high and low reverse clutch assembly from direct clutch assembly.

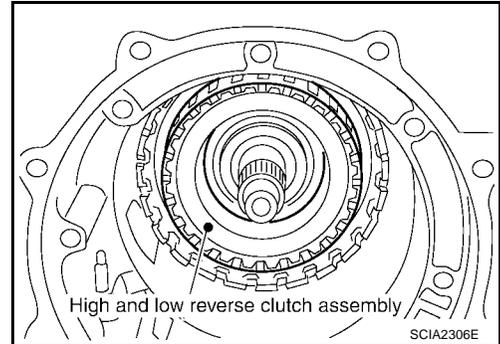


D  
E  
F  
G

24. Remove direct clutch assembly from reverse brake.

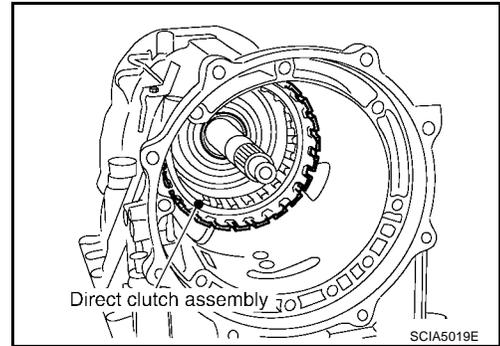


H  
I  
J  
K

25. Remove needle bearing from drum support edge surface.

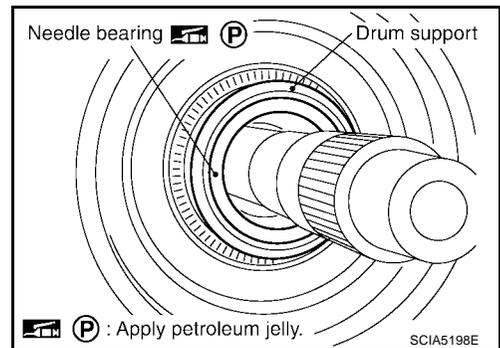

L  
M

26. Remove snap ring from A/T assembly harness connector.

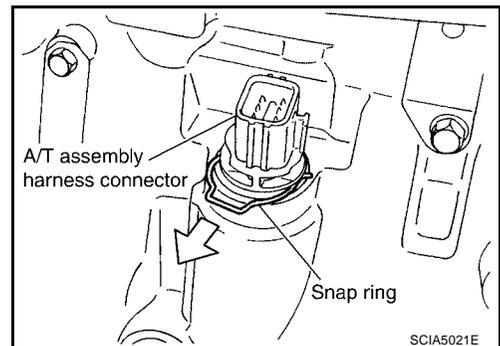


## DISASSEMBLY


27. Push A/T assembly harness connector.

**CAUTION:**

**Be careful not to damage connector.**

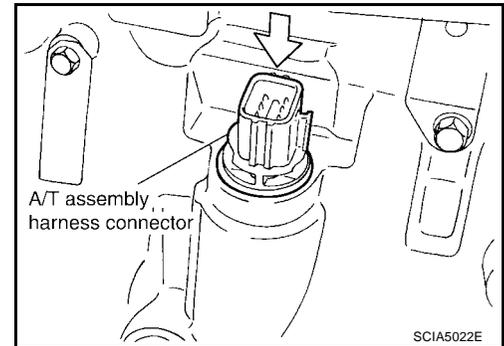


28. Remove oil pan and oil pan gasket.

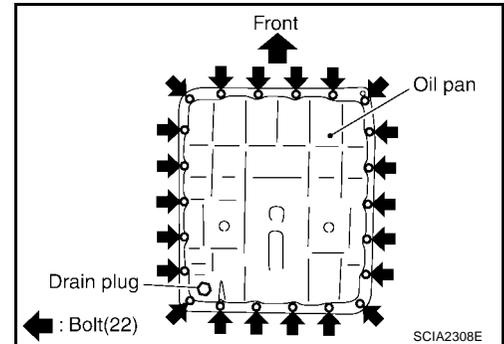


29. Check foreign materials in oil pan to help determine causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [AT-15. "A/T Fluid Cooler Cleaning"](#) .

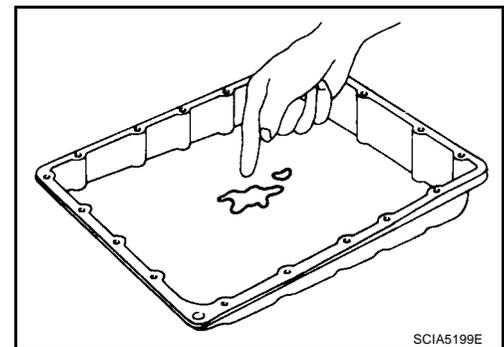


30. Remove magnets from oil pan.

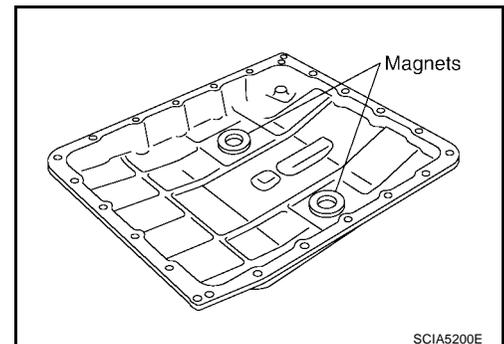

# DISASSEMBLY


31. Disconnect A/T fluid temperature sensor 2 connector.

**CAUTION:**  
Be careful not to damage connector.

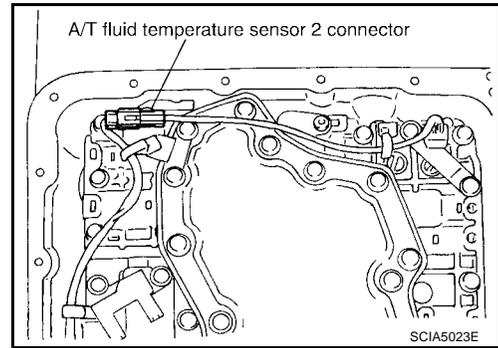


32. Disconnect revolution sensor connector.


**CAUTION:**  
Be careful not to damage connector.

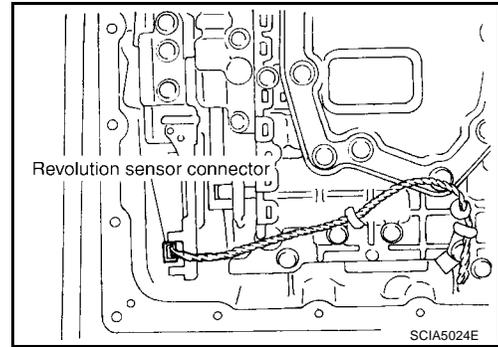

33. Straighten terminal clips to free revolution sensor harness.

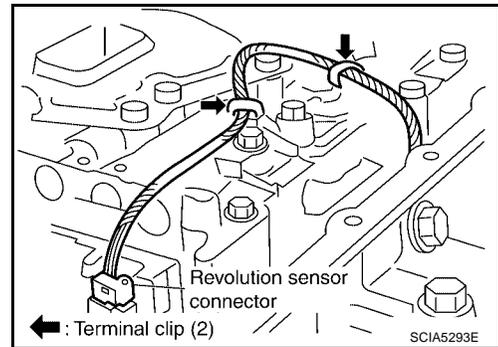


34. Straighten terminal clips to free A/T fluid temperature sensor 2 harness.

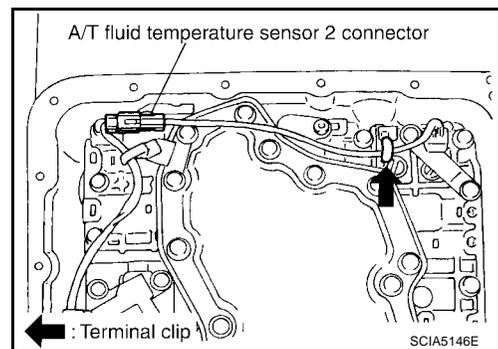

35. Remove bolts A, B and C from control valve with TCM.


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

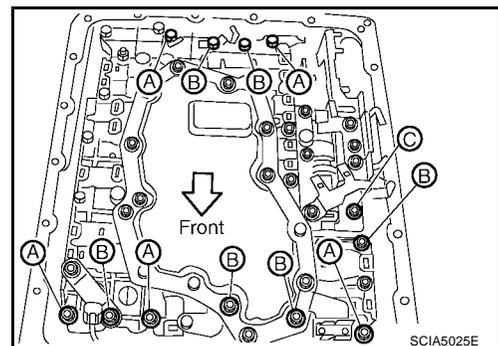


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DISASSEMBLY

36. Remove fluid temperature sensor 2 with bracket from control valve with TCM.

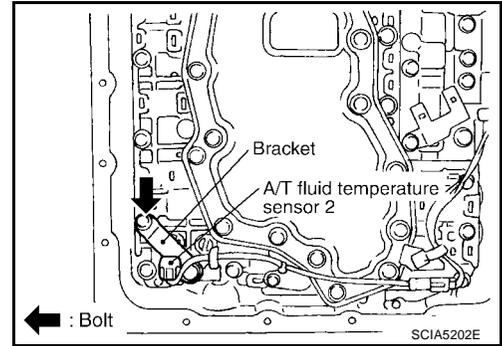


37. Remove bracket from fluid temperature sensor 2.

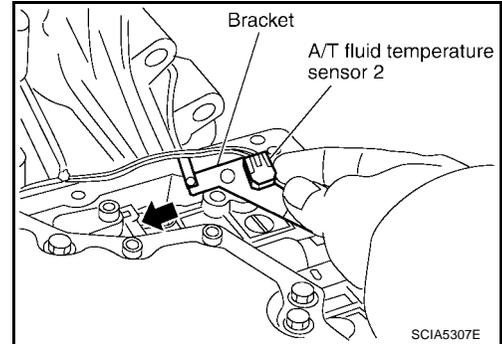


38. Remove control valve with TCM from transmission case.

**CAUTION:**  
When removing, be careful with transmission assembly terminal connector and the manual valve notch and manual plate height. Remove it vertically.

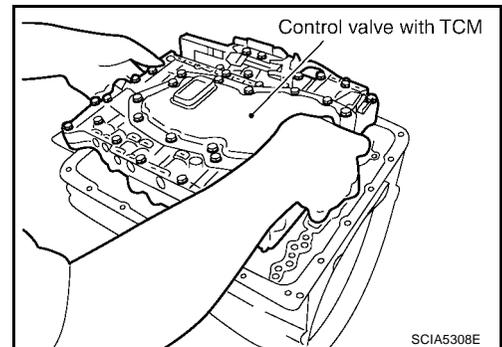

39. Remove O-ring from A/T assembly harness connector.

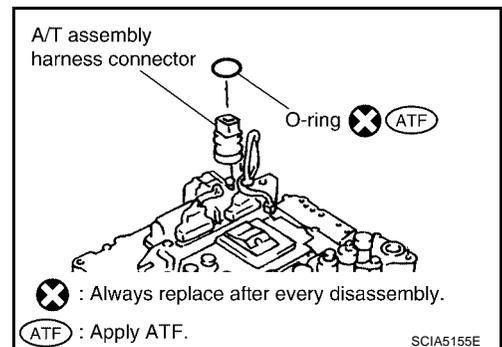


40. Remove rear extension assembly (2WD models) or adapter case assembly (4WD models) according to the following procedures.


# DISASSEMBLY

a. 2WD models


- i. Remove tightening bolts for rear extension assembly and transmission case.

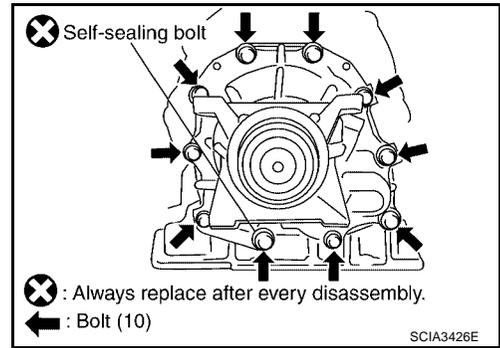

- ii. Tap rear extension assembly with soft hammer.

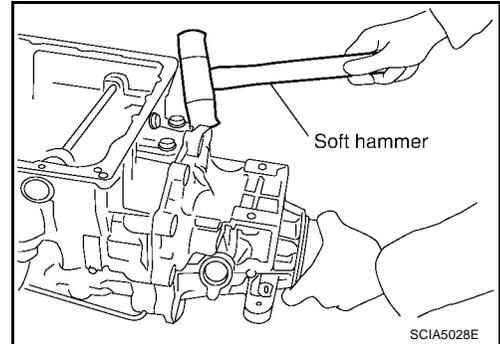


- iii. Remove rear extension assembly from transmission case. (With needle bearing)
- iv. Remove needle bearing from rear extension assembly.

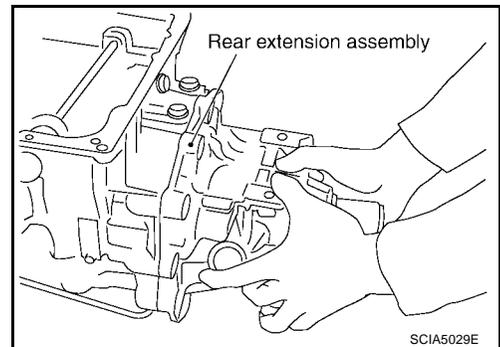

b. 4WD models

- i. Remove tightening bolts for adapter case assembly and transmission case.
- ii. Remove bracket.

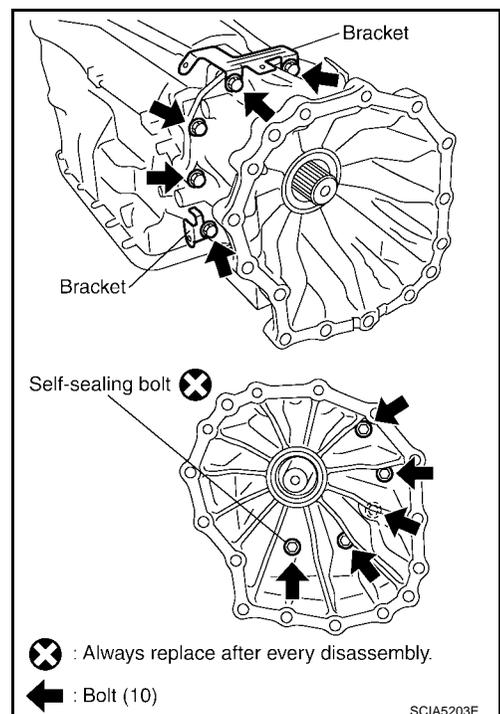

A  
B  
AT


D  
E  
F  
G

H  
I  
J  
K


L  
M

# DISASSEMBLY


iii. Tap adapter case assembly with soft hammer.

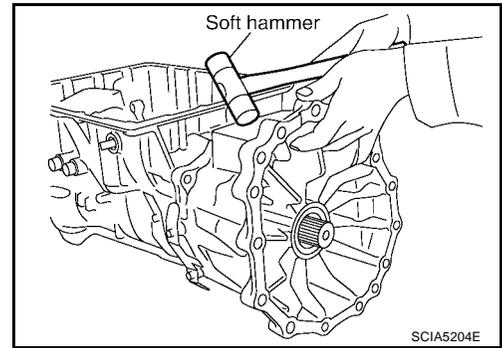


iv. Remove adapter case assembly from transmission case. (With needle bearing)

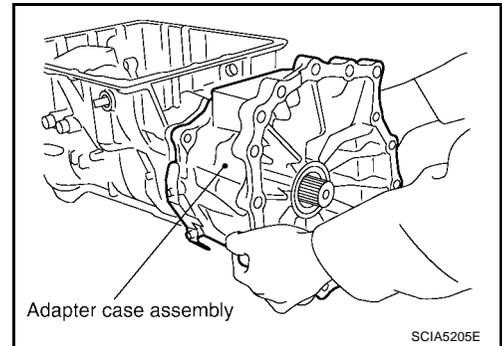


v. Remove gasket from transmission case.

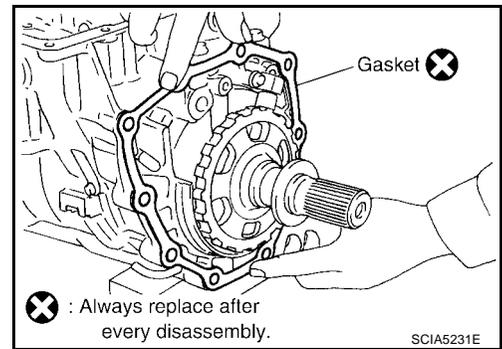

41. Remove bearing race from output shaft.

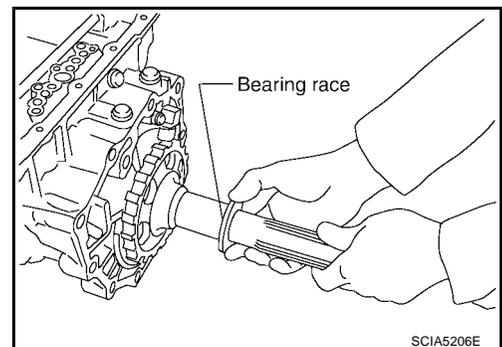


42. Remove output shaft from transmission case by rotating left/right.

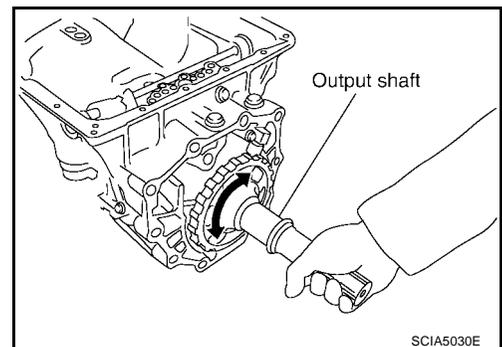


# DISASSEMBLY


43. Remove parking gear from output shaft.

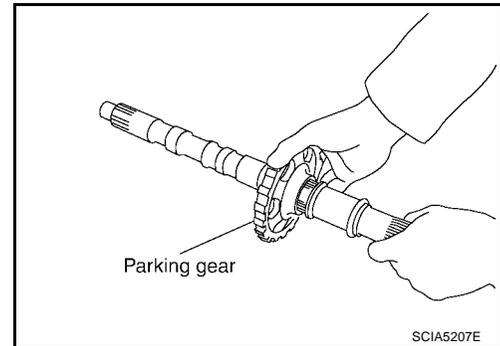

44. Remove seal rings from output shaft.

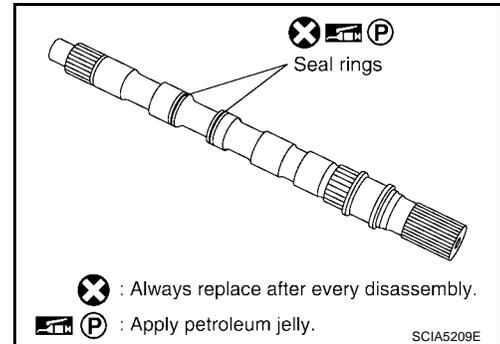


45. Remove needle bearing from transmission case.

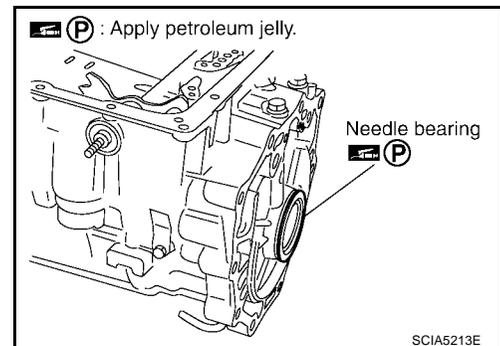

46. Remove revolution sensor from transmission case.

**CAUTION:**

- Do not subject it to impact by dropping or hitting it.
- Be careful not to damage harness with the edge of case.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

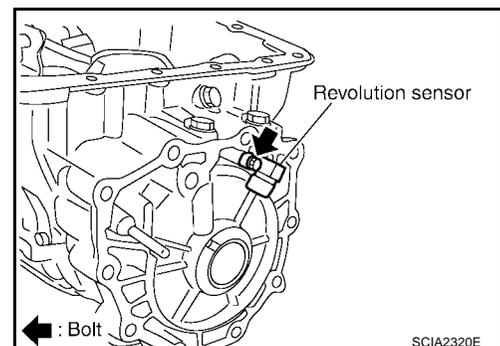


47. Remove reverse brake snap ring (fixing plate) using 2 flat-bladed screwdrivers.

**NOTE:**


Press out snap ring from the transmission case oil pan side gap using a flat-bladed screwdriver, and remove it using another screwdriver.

48. Remove reverse brake retaining plate from transmission case.

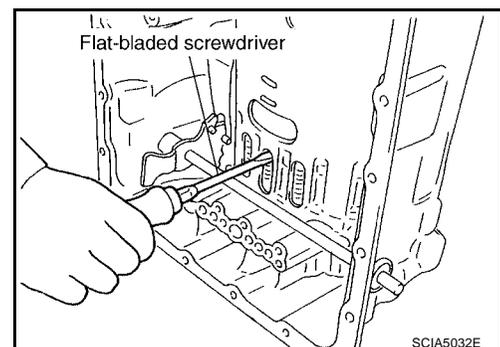


# DISASSEMBLY


49. Remove N-spring from transmission case.

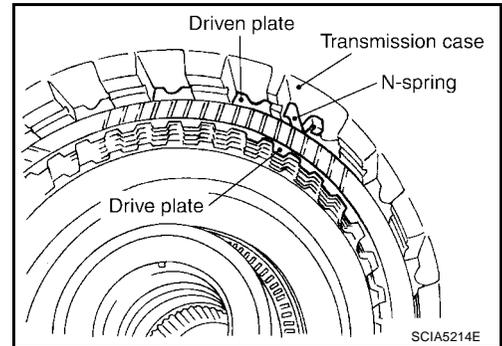


50. Remove reverse brake drive plate, driven plate and dish plate from transmission case.

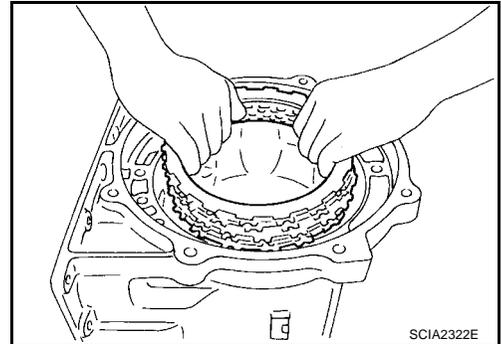

51. Set SST on spring retainer and remove snap ring (fixing spring retainer) from transmission case while compressing return spring.

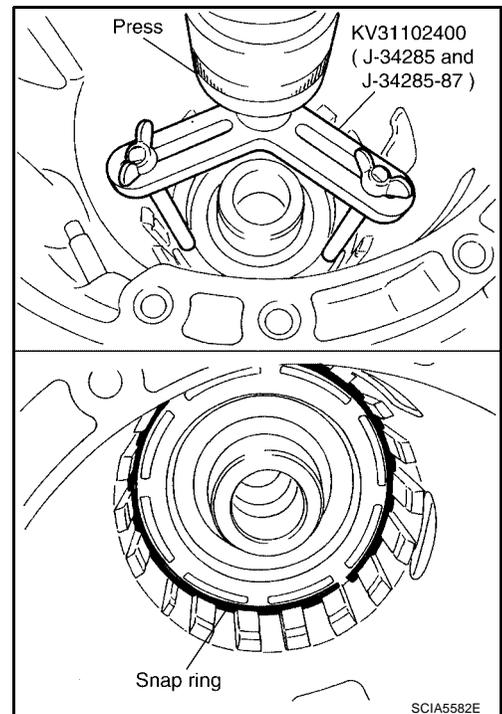


52. Remove spring retainer and return spring from transmission case.

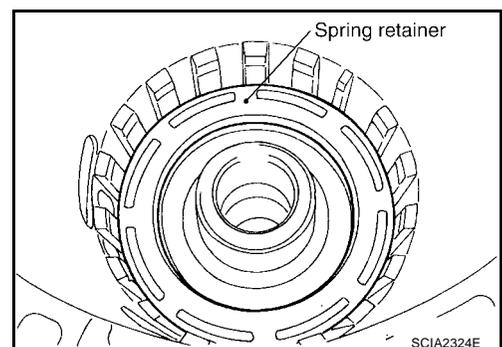


# DISASSEMBLY

53. Remove seal rings from drum support.

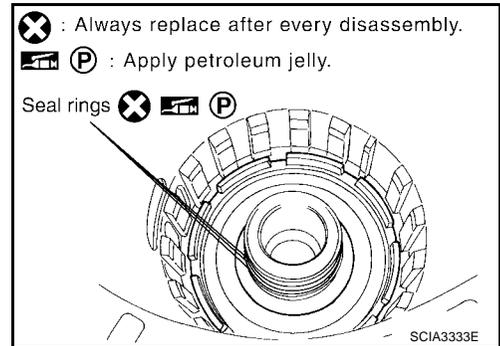


54. Remove needle bearing from drum support.

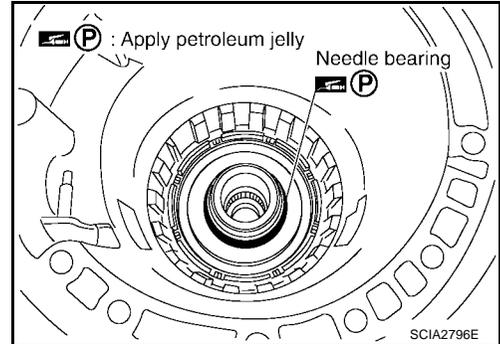


55. Remove reverse brake piston from transmission case with compressed air. Refer to [AT-284, "Oil Channel"](#).

**CAUTION:**

Care should be taken not to abruptly blow air. It makes pistons incline, as the result, it becomes hard to disassemble the pistons.

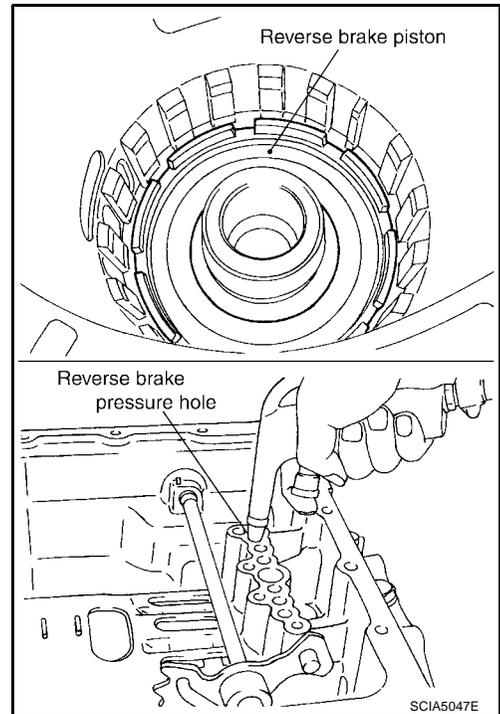


56. Remove lip seal and D-ring from reverse brake piston.

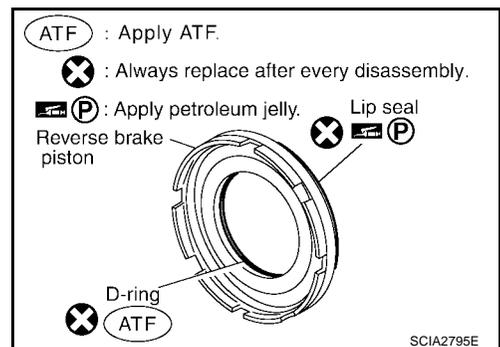


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## DISASSEMBLY


57. Use a pin punch (4mm dia. commercial service tool) to knock out retaining pin.

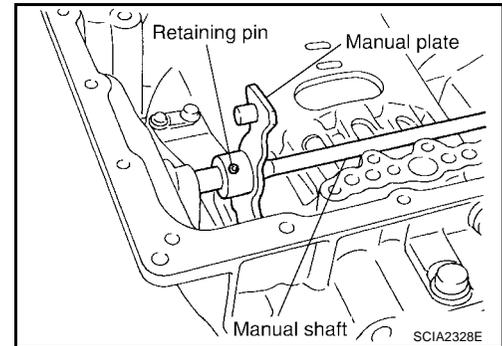

58. Remove manual shaft retaining pin with pliers.

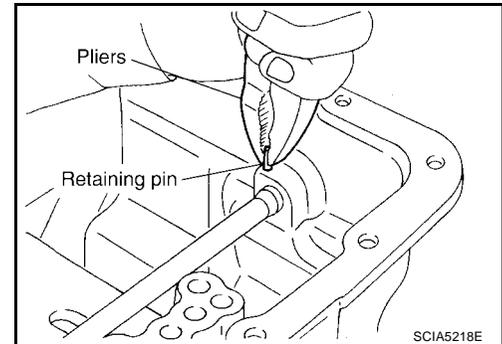


59. Remove manual plate (with parking rod) from manual shaft.

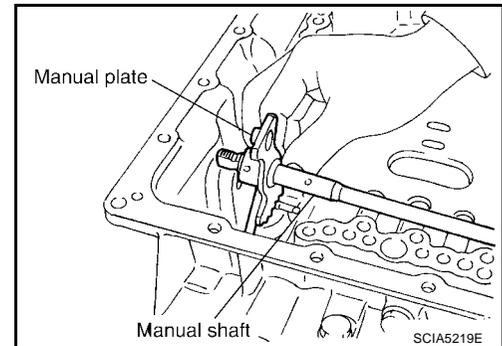


60. Remove parking rod from manual plate.

61. Remove manual shaft from transmission case.

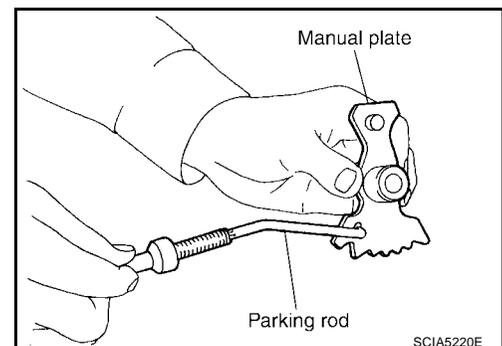


62. Remove manual shaft oil seals using a flat-bladed screwdriver.

**CAUTION:**  
Be careful not to scratch transmission case.

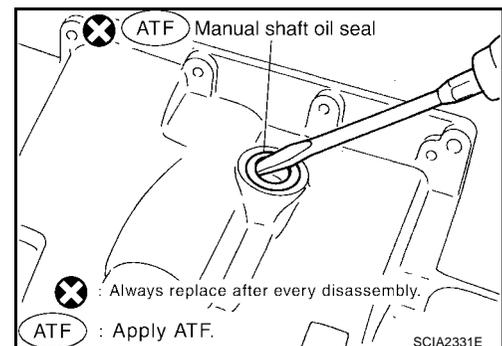


# DISASSEMBLY

63. Remove detent spring and spacer from transmission case.

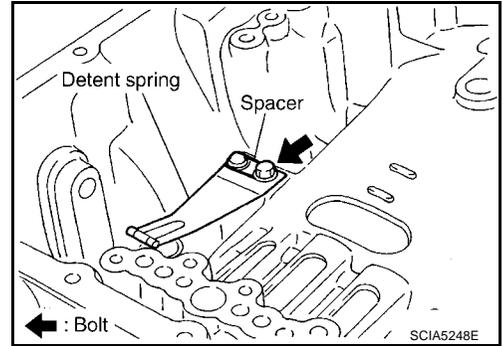


64. Using snap ring pliers, Remove snap ring from transmission case.

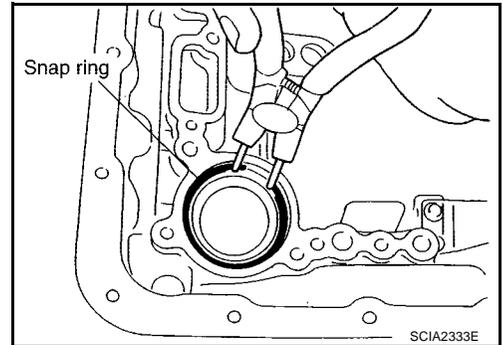


65. Remove servo assembly (with return spring) from transmission case.

66. Remove return spring from servo assembly.

67. Remove O-rings from servo assembly.

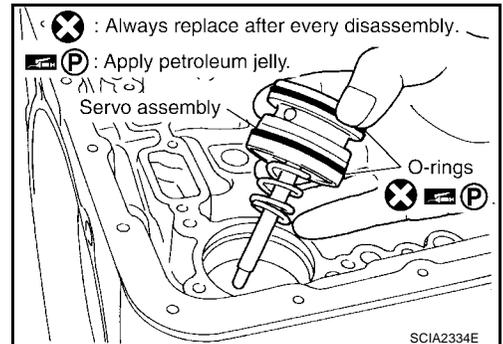


68. Remove needle bearing from rear extension (2WD models) or adapter case (4WD models).

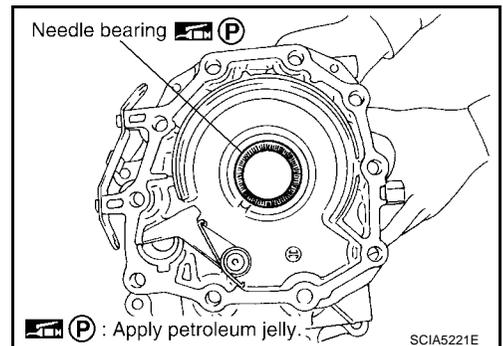


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# DISASSEMBLY


69. Remove parking actuator support from rear extension (2WD models) or adapter case (4WD models).

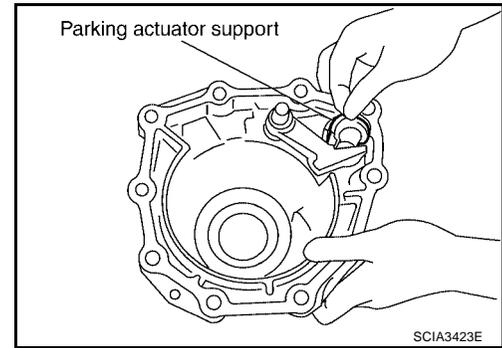

70. Remove parking pawl, pawl shaft and return spring from rear extension (2WD models) or adapter case (4WD models).

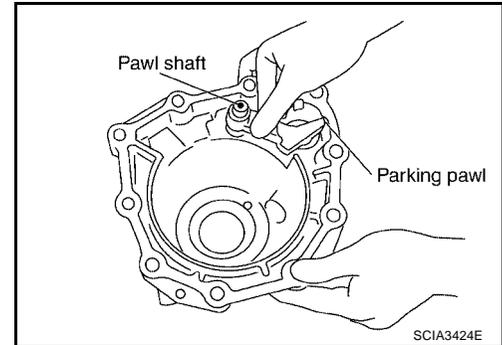


71. Remove return spring from parking pawl.

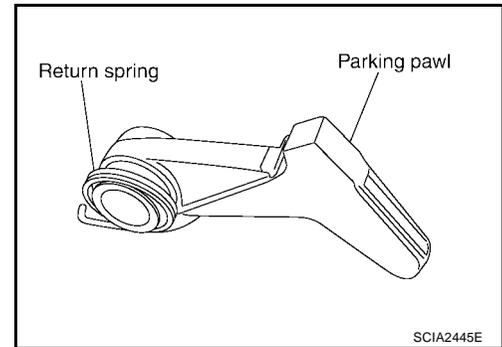

72. Remove rear oil seal from rear extension (2WD models) or adapter case (4WD models).

**CAUTION:**

**Be careful not to scratch rear extension (2WD models) or adapter case (4WD models).**

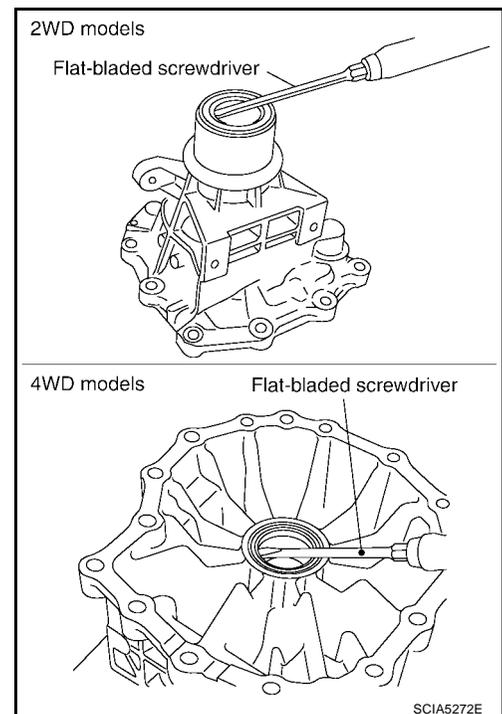


# REPAIR FOR COMPONENT PARTS

## REPAIR FOR COMPONENT PARTS

PFP:00000

### Oil Pump COMPONENTS


UCS0030E

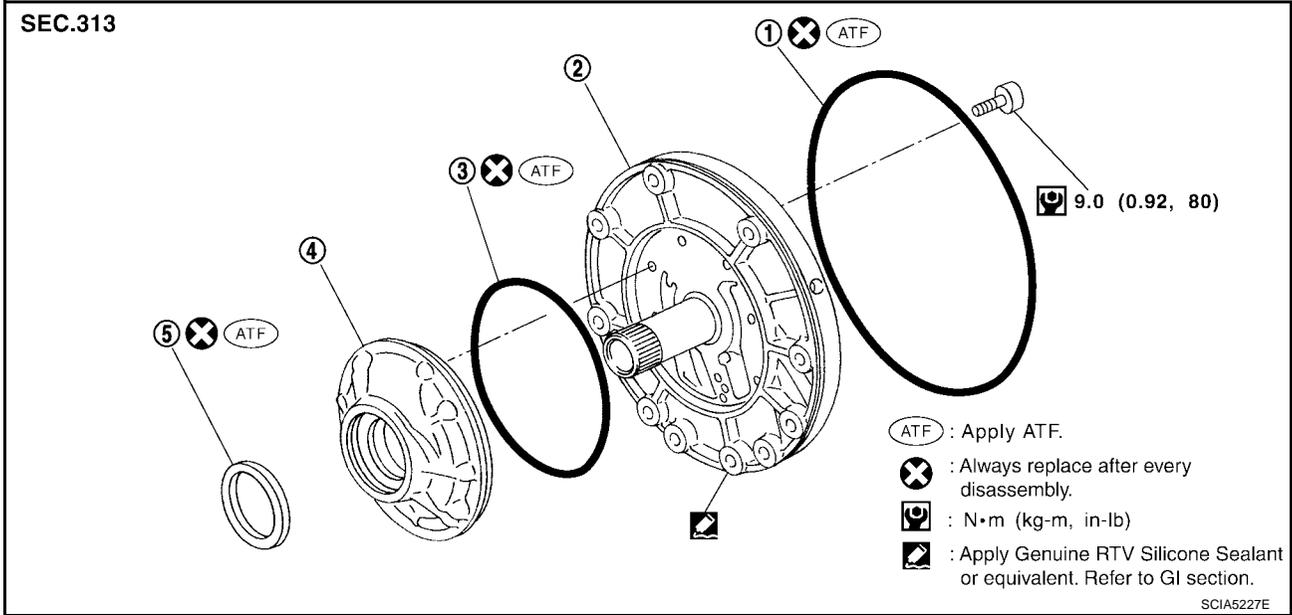

1. O-ring
2. Oil pump cover
3. O-ring
4. Oil pump housing
5. Oil pump housing oil seal

### DISASSEMBLY


1. Remove oil pump housing from oil pump cover.

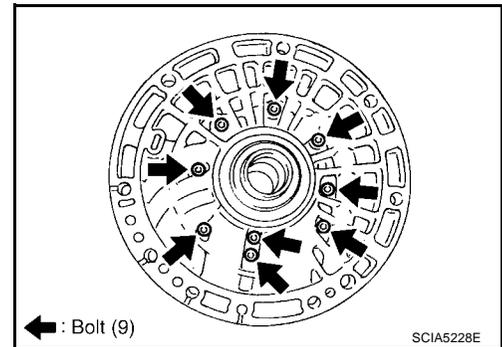

2. Remove oil pump housing oil seal using a flat-bladed screwdriver.


**CAUTION:**

Be careful not to scratch oil pump housing.

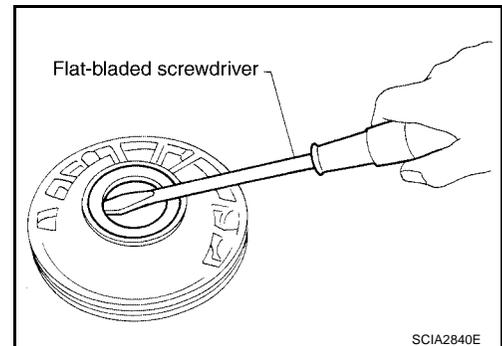

## REPAIR FOR COMPONENT PARTS

3. Remove O-ring from oil pump housing.

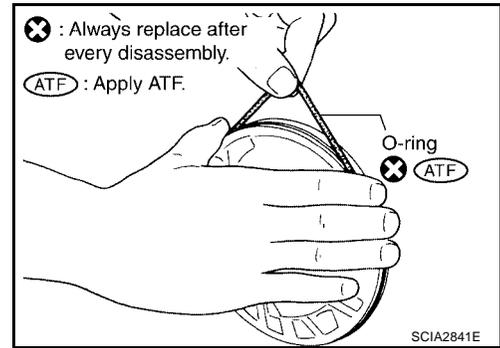

4. Remove O-ring from oil pump cover.




### ASSEMBLY

1. Install O-ring in oil pump cover.

**CAUTION:**


- Do not reuse O-ring.
- Apply ATF to O-ring.

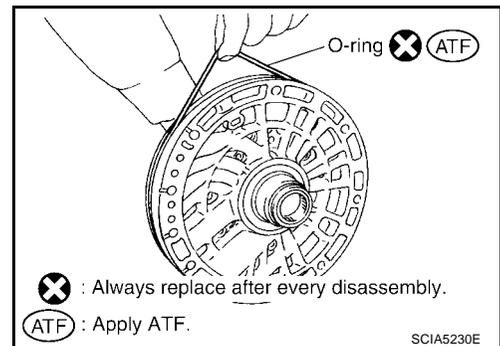

2. Install O-ring in oil pump housing.

**CAUTION:**

- Do not reuse O-ring.
- Apply ATF to O-ring.

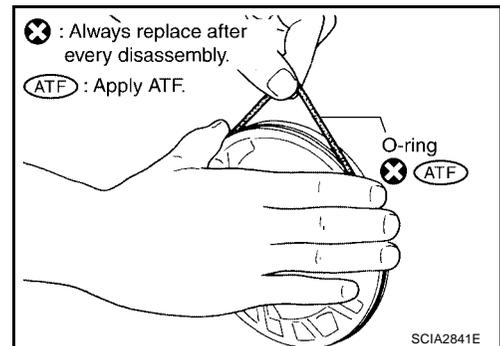


# REPAIR FOR COMPONENT PARTS


- Use a drift to drive oil pump housing oil seal into the oil pump housing until it is flush.

**CAUTION:**

- Do not reuse oil seal.
- Apply ATF to oil seal.

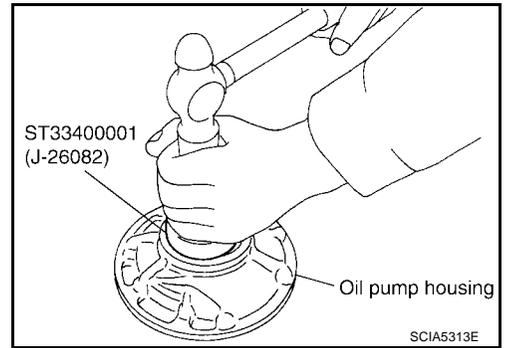


- Install oil pump housing in oil pump cover. Tighten oil pump housing fitting bolt to the specified torque. Refer to [AT-305](#), "[COMPONENTS](#)".

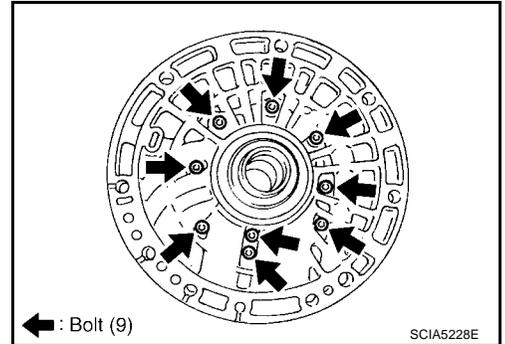

## Front Sun Gear, 3rd One-Way Clutch COMPONENTS

UCS0030F

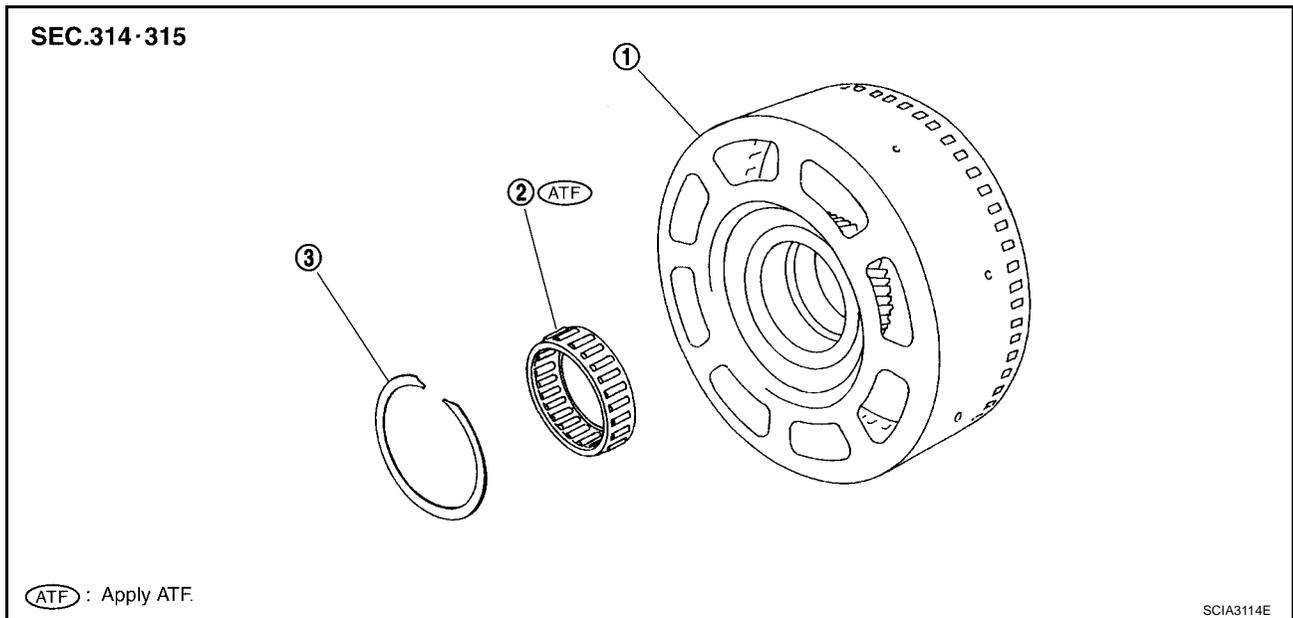


(ATF) : Apply ATF.

- Front sun gear
- 3rd one-way clutch
- Snap ring


# REPAIR FOR COMPONENT PARTS

## DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap ring from front sun gear.

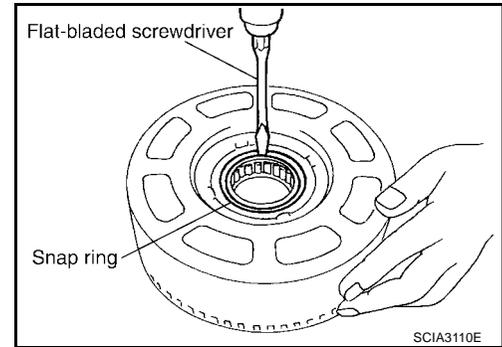

2. Remove 3rd one-way clutch from front sun gear.

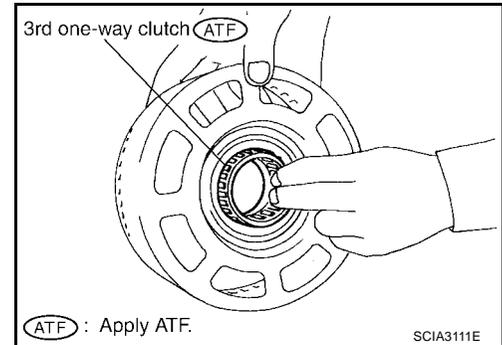

## INSPECTION

### 3rd One-way Clutch

- Check frictional surface for wear or damage.

**CAUTION:**

If necessary, replace the 3rd one-way clutch.

### Front Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

**CAUTION:**

If necessary, replace the snap ring.

### Front Sun Gear

- Check for deformation, fatigue or damage.

**CAUTION:**


If necessary, replace the front sun gear.

## ASSEMBLY

1. Install 3rd one-way clutch in front sun gear.


**CAUTION:**

Apply ATF to 3rd one-way clutch.

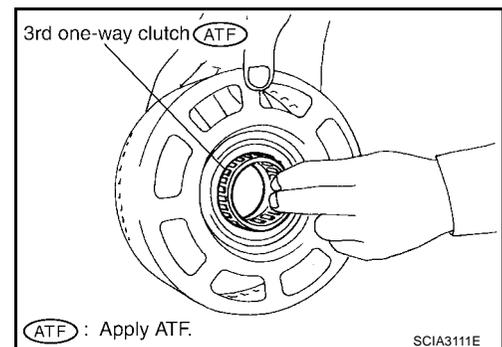

## REPAIR FOR COMPONENT PARTS


2. Using a flat-bladed screwdriver, install snap ring in front sun gear.

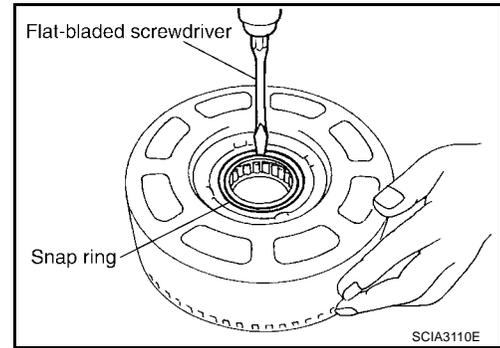

3. Check operation of 3rd one-way clutch.
  - a. Hold oil pump assembly and turn front sun gear.
  - b. Check 3rd one-way clutch for correct locking and unlocking directions.

**CAUTION:**

**If not as shown in illustration, check installation direction of 3rd one-way clutch.**

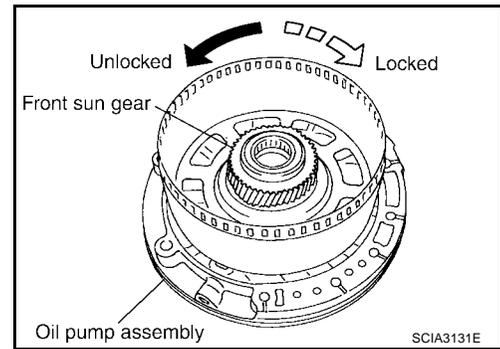


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# REPAIR FOR COMPONENT PARTS

## Front Carrier, Input Clutch, Rear Internal Gear COMPONENTS

UCS0030G

SEC.314·315

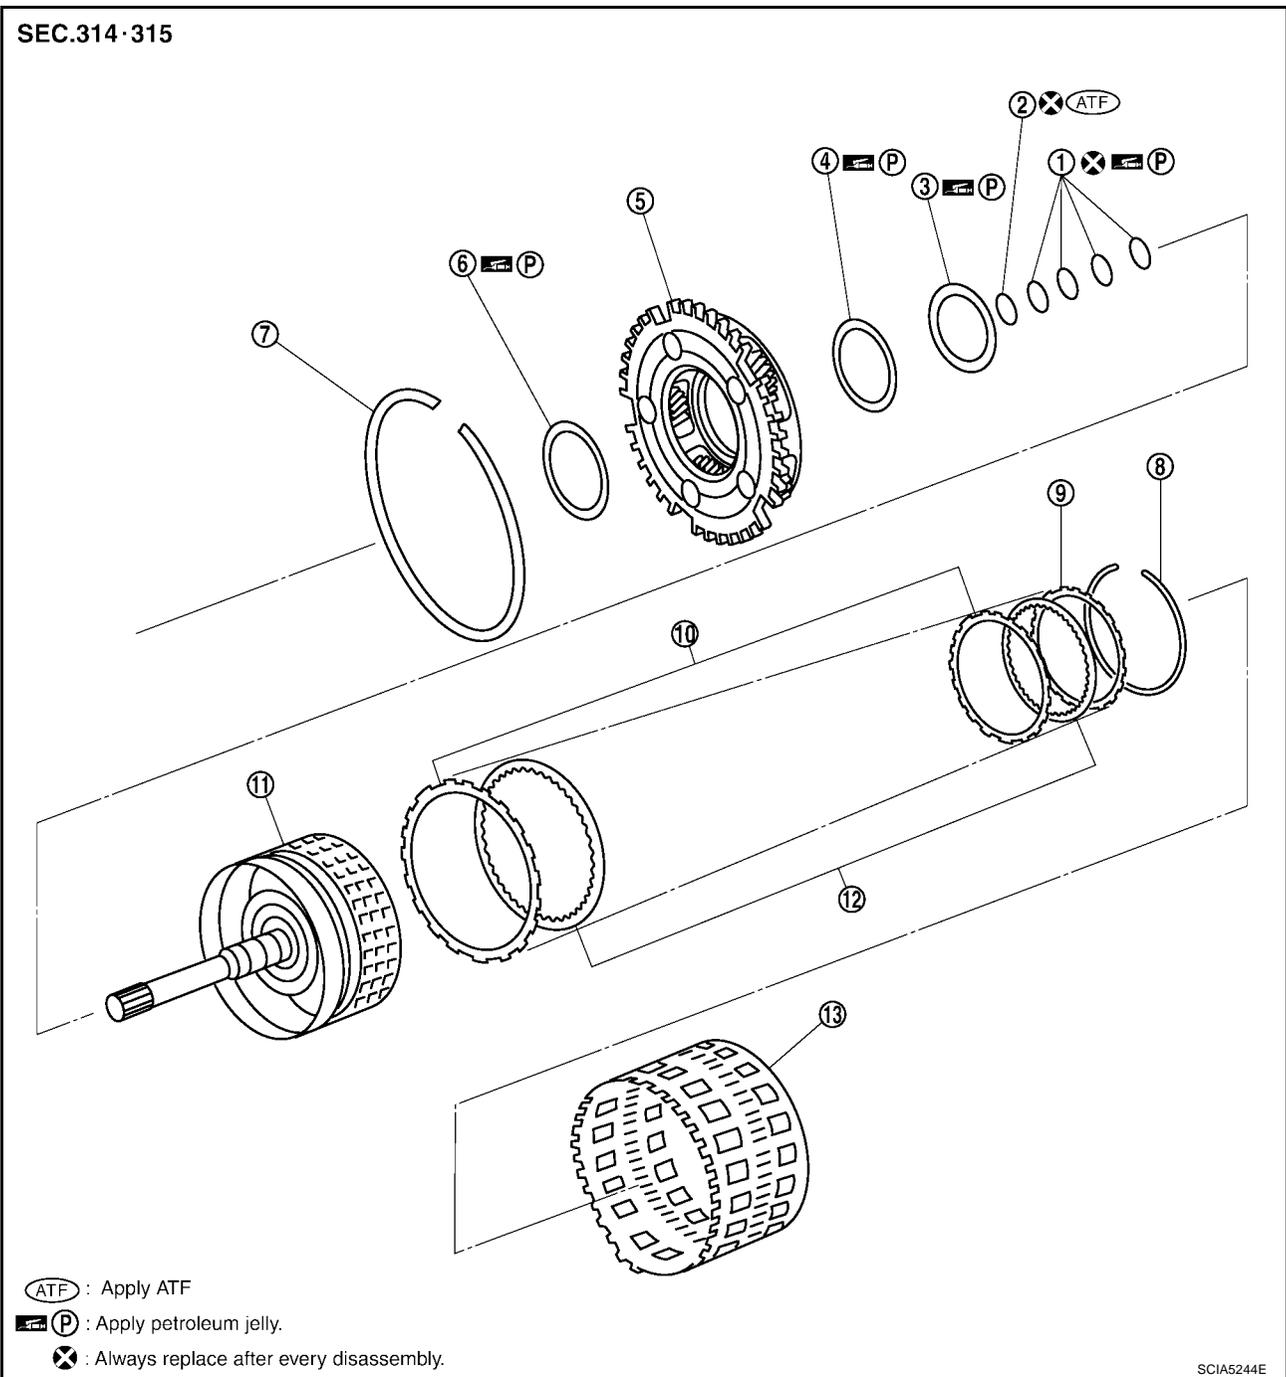


SCIA5244E

- |                        |                           |                    |
|------------------------|---------------------------|--------------------|
| 1. Seal ring           | 2. O-ring                 | 3. Needle bearing  |
| 4. Bearing race        | 5. Front carrier assembly | 6. Needle bearing  |
| 7. Snap ring           | 8. Snap ring              | 9. Retaining plate |
| 10. Driven plate       | 11. Input clutch drum     | 12. Drive plate    |
| 13. Rear internal gear |                           |                    |


# REPAIR FOR COMPONENT PARTS

## DISASSEMBLY


1. Remove front carrier assembly from rear internal gear.

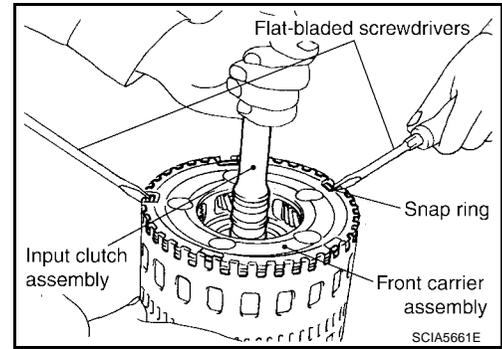

a. Remove bearing race from front carrier assembly.

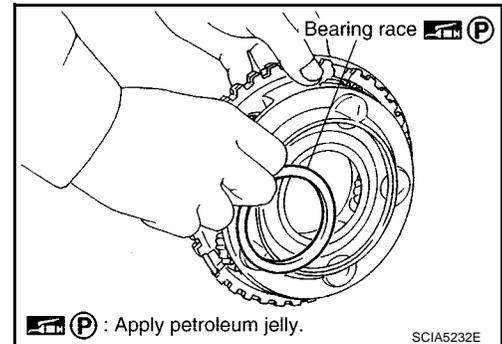


b. Remove needle bearing from front carrier assembly.

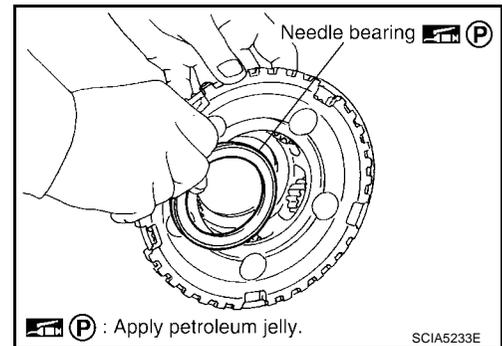

c. Remove snap ring from front carrier assembly.

**CAUTION:**


**Do not expand snap ring excessively.**

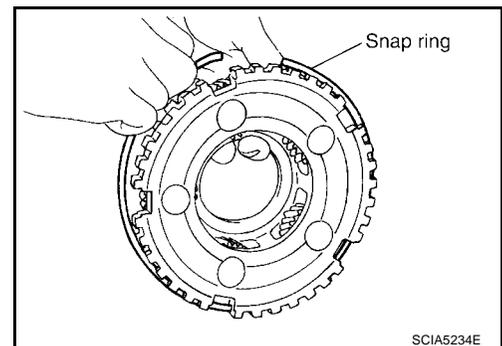


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## REPAIR FOR COMPONENT PARTS


2. Remove input clutch assembly from rear internal gear.

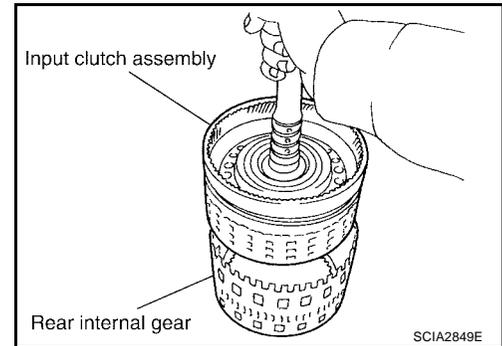

a. Remove O-ring and seal rings from input clutch assembly.

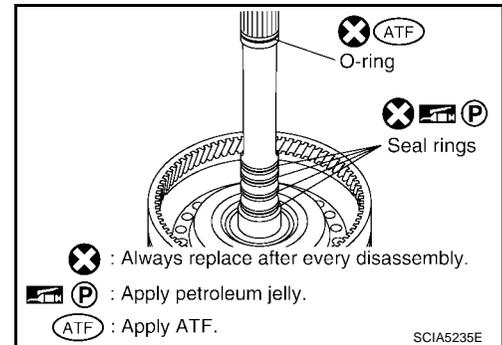


b. Remove needle bearing from input clutch assembly.

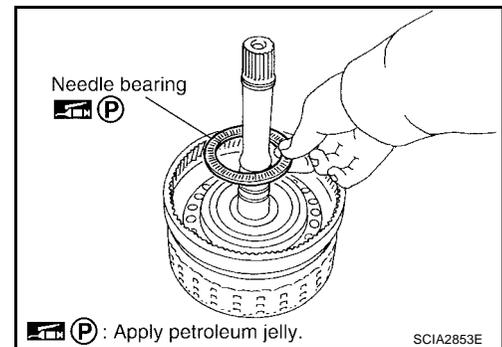

c. Using a flat-bladed screwdriver, remove snap ring from input clutch drum.

d. Remove drive plate, driven plate and retaining plate from input clutch drum.

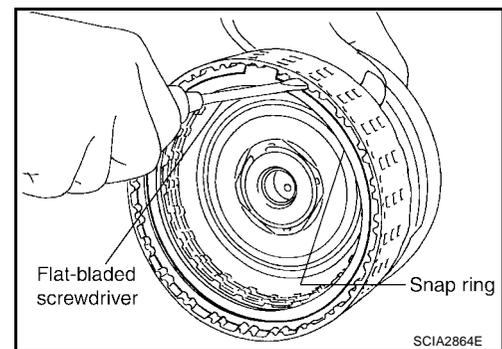

### INSPECTION

#### Front Carrier Snap Ring

- Check for deformation, fatigue or damage.

**CAUTION:**

If necessary, replace the snap ring.

#### Input Clutch Snap Ring

- Check for deformation, fatigue or damage.

**CAUTION:**

If necessary, replace the input clutch assembly.

# REPAIR FOR COMPONENT PARTS

## Input Clutch Drum

- Check for deformation, fatigue or damage or burns.

**CAUTION:**

If necessary, replace the input clutch assembly.

## Input Clutch Drive Plates

- Check facing for burns, cracks or damage.

**CAUTION:**

If necessary, replace the input clutch assembly.

## Input Clutch Retaining Plates and Driven Plates

- Check facing for burns, cracks or damage.

**CAUTION:**

If necessary, replace the input clutch assembly.

## Front Carrier Assembly

- Check for deformation, fatigue or damage.

**CAUTION:**

If necessary, replace the front carrier assembly.

## Rear Internal Gear

- Check for deformation, fatigue or damage.

**CAUTION:**


If necessary, replace the rear internal gear.

## ASSEMBLY

1. Install input clutch.
  - a. Install drive plate, driven plate and retaining plate in input clutch drum.


**CAUTION:**

Take care with order of plates.

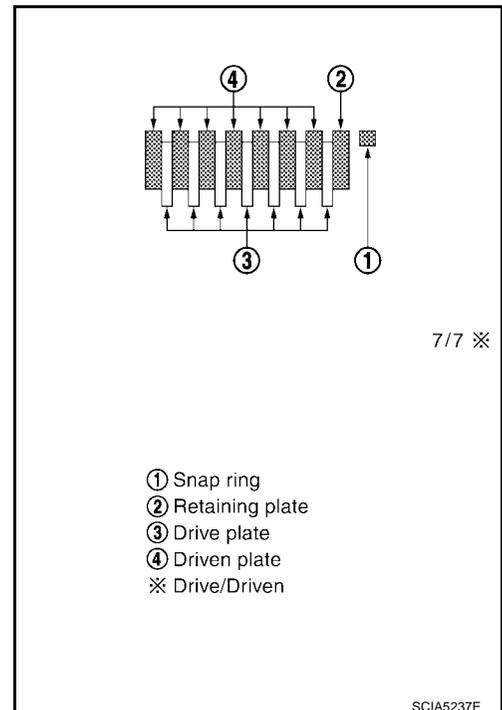

## REPAIR FOR COMPONENT PARTS


- b. Using a flat-bladed screwdriver, install snap ring in input clutch drum.

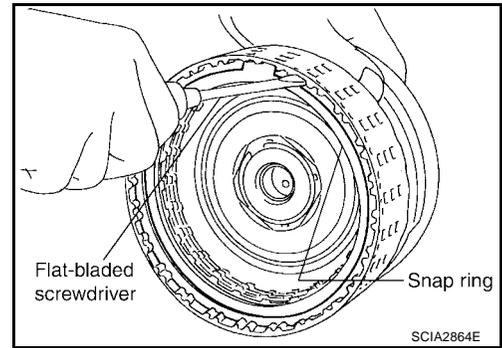

- c. Install needle bearing in input clutch assembly.

**CAUTION:**


Apply petroleum jelly to needle bearing.

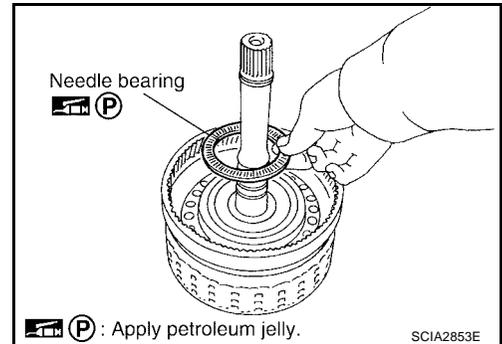


- d. Install O-ring and seal rings in input clutch assembly.

**CAUTION:**

- Do not reuse O-ring and seal rings.
- Apply ATF to O-ring.
- Apply petroleum jelly to seal rings.

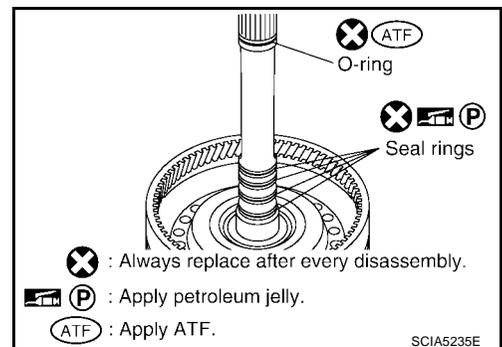

2. Install input clutch assembly in rear internal gear.

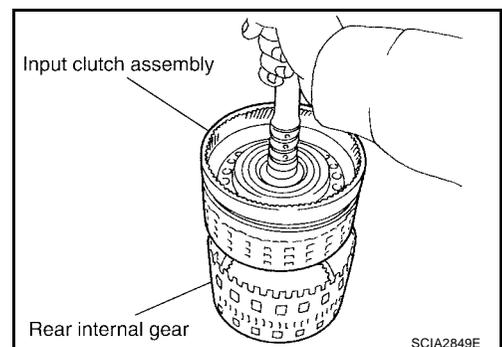


3. Install front carrier assembly.

- a. Install snap ring in front carrier assembly.

**CAUTION:**

Do not expand snap ring excessively.

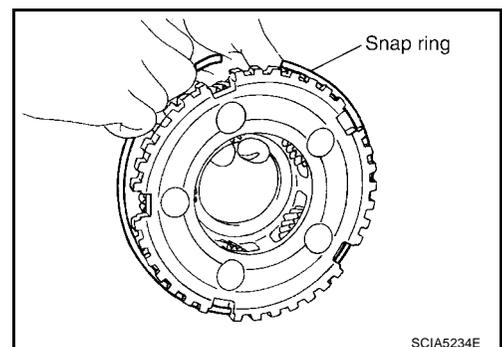


# REPAIR FOR COMPONENT PARTS

b. Install needle bearing in front carrier assembly.

**CAUTION:**


- Take care with the direction of needle bearing. Refer to [AT-286, "Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).
- Apply petroleum jelly to needle bearing.

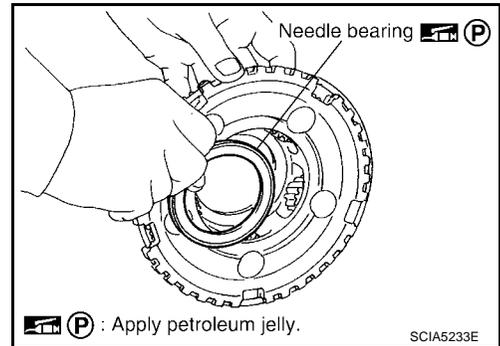


c. Install bearing race in front carrier assembly.

**CAUTION:**

Apply petroleum jelly to bearing race.

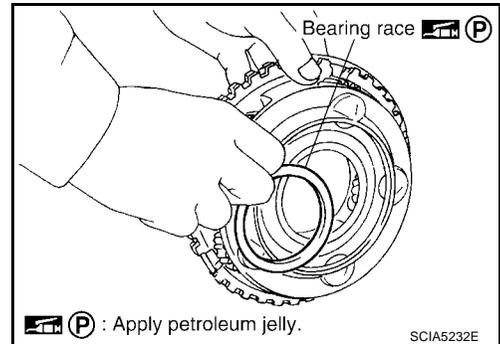


d. Install front carrier assembly in input clutch and rear internal gear.

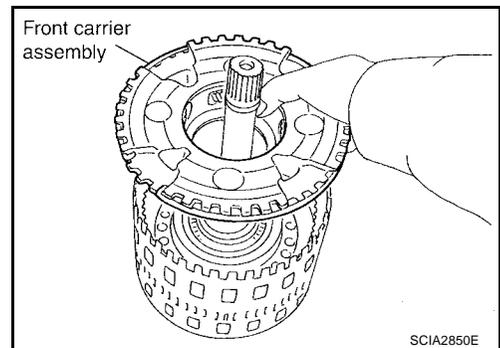

## Mid Sun Gear, Rear Sun Gear, High and Low Reverse Clutch Hub COMPONENTS

UCS0030H

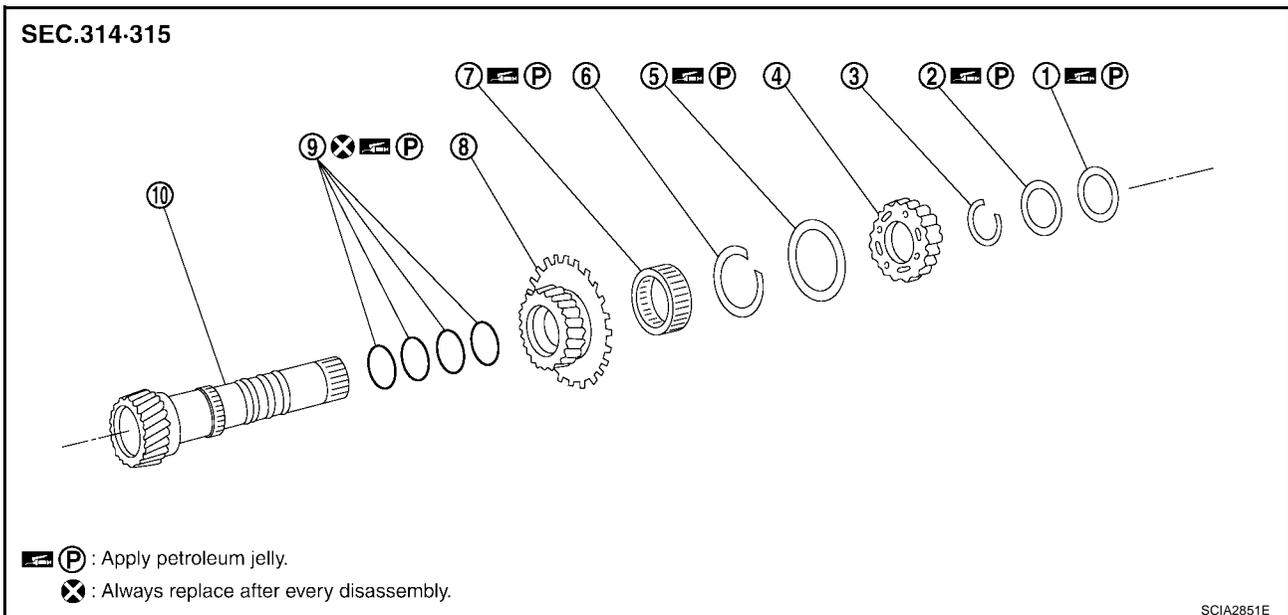


# REPAIR FOR COMPONENT PARTS

- |                                    |                   |              |
|------------------------------------|-------------------|--------------|
| 1. Needle bearing                  | 2. Bearing race   | 3. Snap ring |
| 4. High and low reverse clutch hub | 5. Needle bearing | 6. Snap ring |
| 7. 1st one-way clutch              | 8. Rear sun gear  | 9. Seal ring |
| 10. Mid sun gear                   |                   |              |

## DISASSEMBLY


1. Remove needle bearing and bearing races.

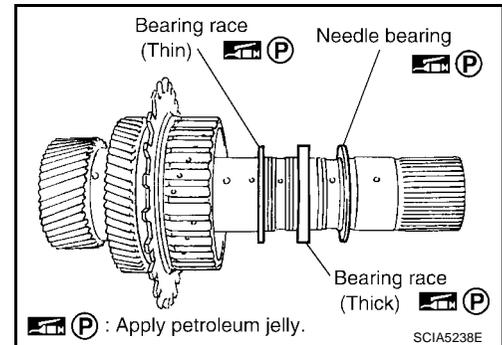


2. Using snap ring pliers, remove snap ring from mid sun gear assembly.

**CAUTION:**


**Do not expand snap ring excessively.**

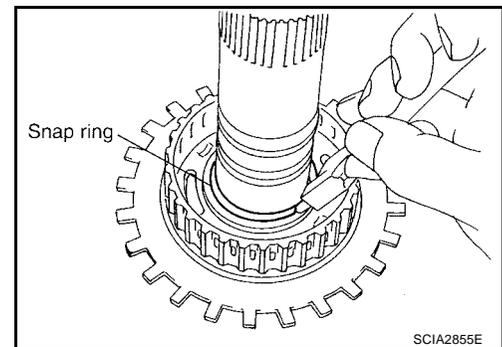

3. Remove high and low reverse clutch hub from mid sun gear assembly.

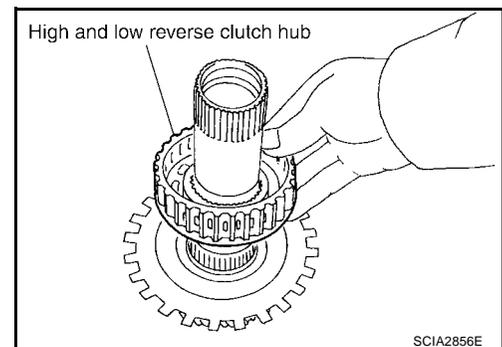


- a. Remove needle bearing from high and low reverse clutch hub.

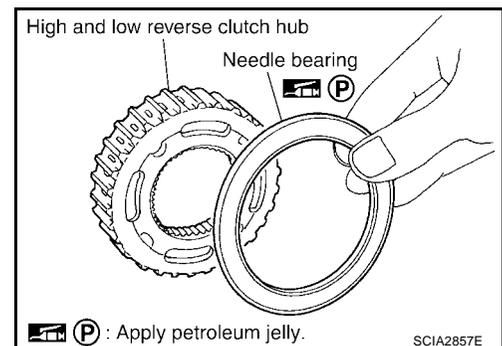


# REPAIR FOR COMPONENT PARTS


4. Remove rear sun gear assembly from mid sun gear assembly.

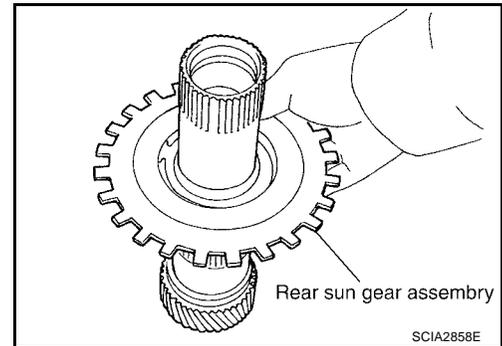


a. Using a flat-bladed screwdriver, remove snap ring from rear sun gear assembly.

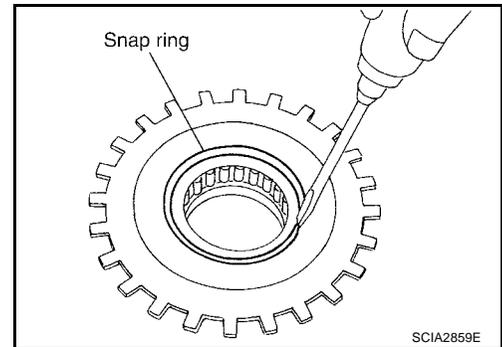

b. Remove 1st one-way clutch from rear sun gear.

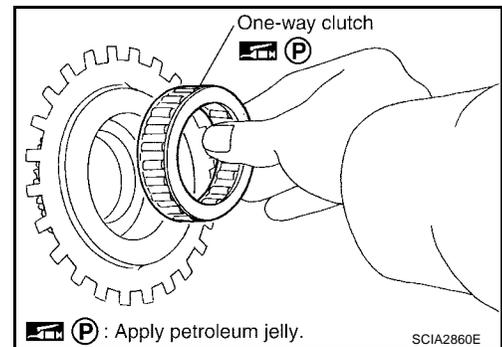

5. Remove seal rings from mid sun gear.

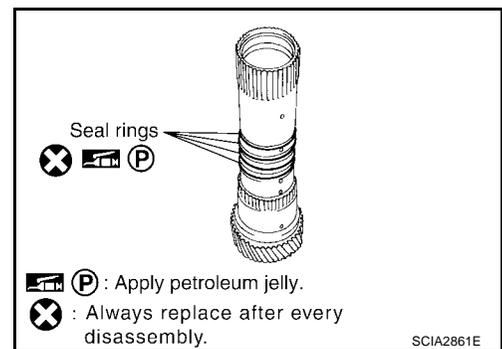

## INSPECTION

### High and Low Reverse Clutch Hub Snap Ring, Rear Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

#### **CAUTION:**

If necessary, replace the snap ring.

### 1st One-way Clutch

- Check frictional surface for wear or damage.

#### **CAUTION:**

If necessary, replace the 1st one-way clutch.

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# REPAIR FOR COMPONENT PARTS

## Mid Sun Gear

- Check for deformation, fatigue or damage.

### CAUTION:

Replace mid sun gear assembly and high and low reverse clutch assembly as a set if necessary.

## Rear Sun Gear

- Check for deformation, fatigue or damage.

### CAUTION:

If necessary, replace the rear sun gear.

## High and Low Reverse Clutch Hub

- Check for deformation, fatigue or damage.

### CAUTION:


If necessary, replace the rear sun gear.

## ASSEMBLY

1. Install seal rings from mid sun gear.

### CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

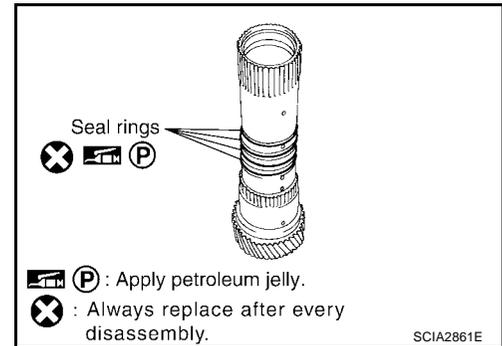


2. Install 1st one-way clutch in rear sun gear.

### CAUTION:

Apply petroleum jelly to 1st one-way clutch.

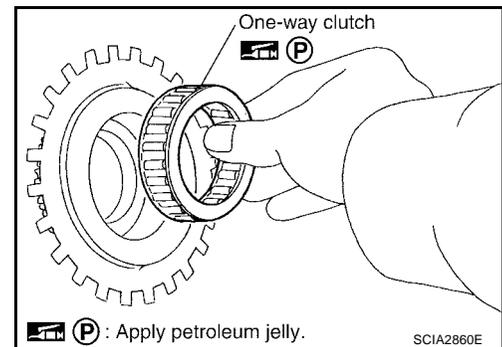


3. Using a flat-bladed screwdriver, install snap ring in rear sun gear.

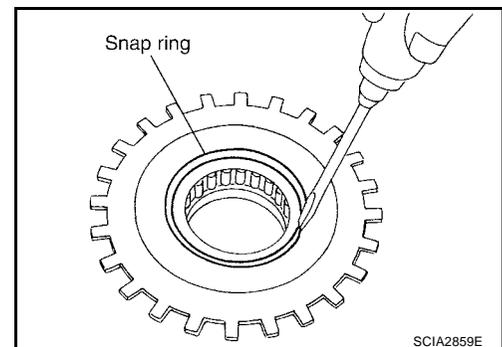

## REPAIR FOR COMPONENT PARTS


4. Install rear sun gear assembly in mid sun gear assembly.

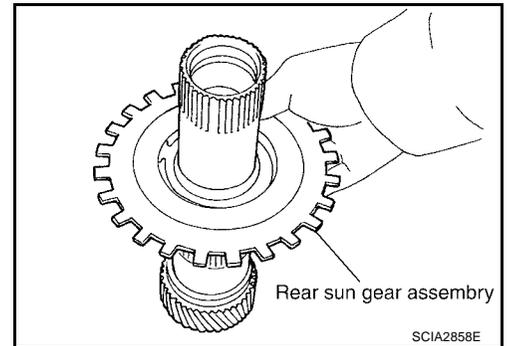


5. Install needle bearing in high and low reverse clutch hub.

**CAUTION:**

- Take care with the direction of needle bearing. Refer to [AT-286, "Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).
- Apply petroleum jelly to needle bearing.

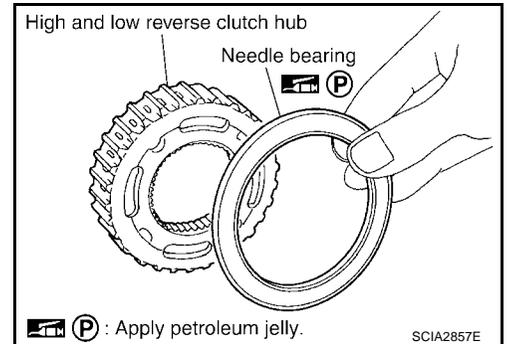


6. Install high and low reverse clutch hub in mid sun gear assembly.

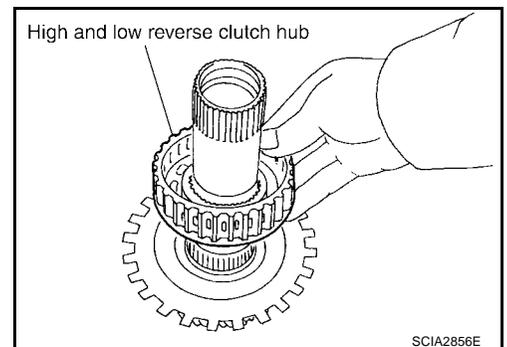

7. Using snap ring pliers, install snap ring in mid sun gear assembly.

**CAUTION:**

**Do not expand snap ring excessively.**

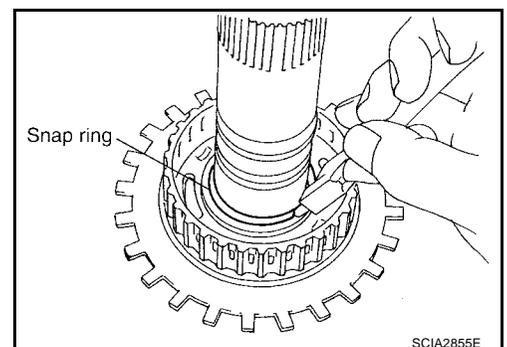


8. Check operation of 1st one-way clutch.

- a. Hold mid sun gear and turn rear sun gear.  
b. Check 1st one-way clutch for correct locking and unlocking directions.

**CAUTION:**

**If not as shown in illustration, check installation direction of 1st one-way clutch.**

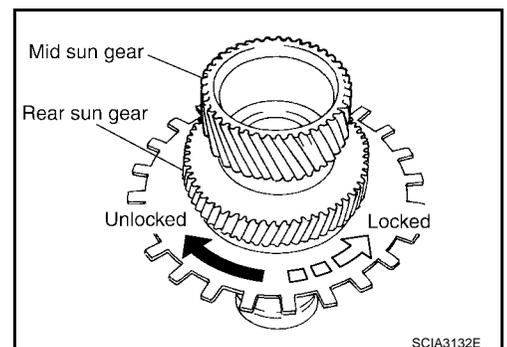


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## REPAIR FOR COMPONENT PARTS

9. Install needle bearing and bearing races.


**CAUTION:**

- Apply petroleum jelly to needle bearing and bearing races.
- Take care with order of bearing races.

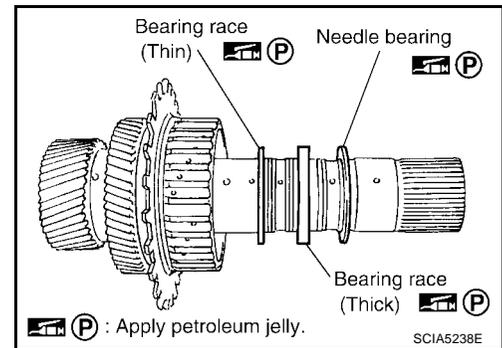

## High and Low Reverse Clutch COMPONENTS


UCS00301

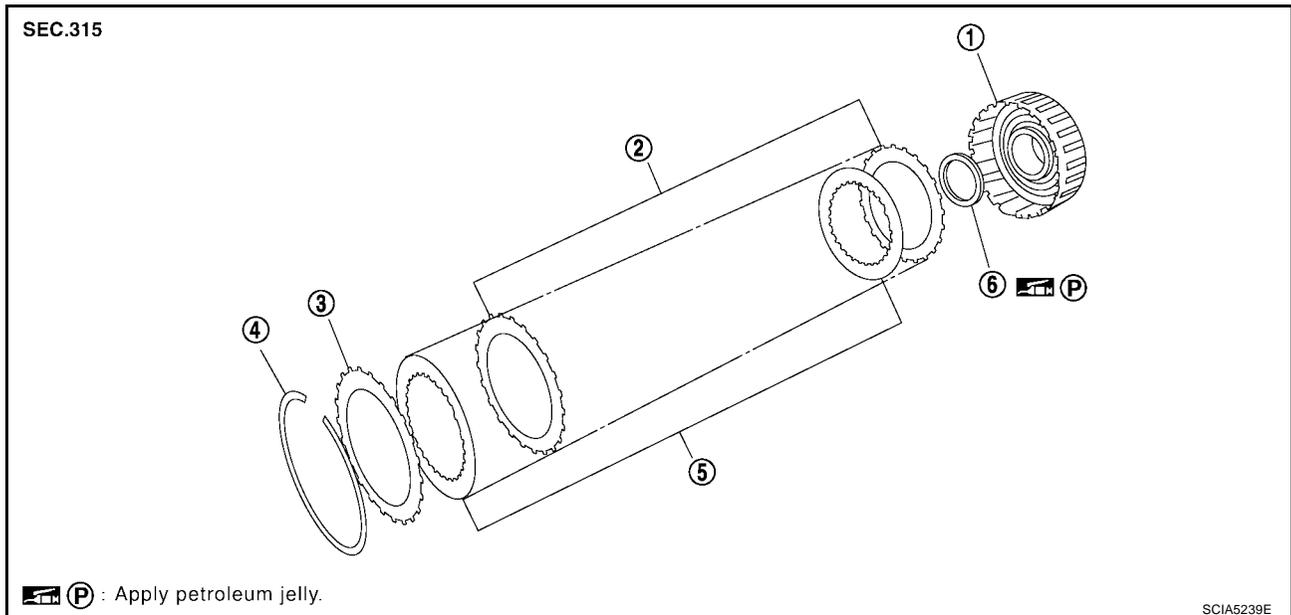

- |                                     |                 |                    |
|-------------------------------------|-----------------|--------------------|
| 1. High and low reverse clutch drum | 2. Driven plate | 3. Retaining plate |
| 4. Snap ring                        | 5. Drive plate  |                    |


### DISASSEMBLY

1. Remove bearing race from high and low reverse clutch drum.

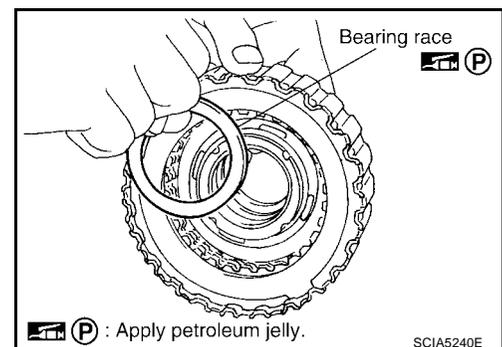

# REPAIR FOR COMPONENT PARTS

- Using a flat-bladed screwdriver, remove snap ring from high and low reverse clutch drum.
- Remove drive plates, driven plates and retaining plate from high and low reverse clutch drum.

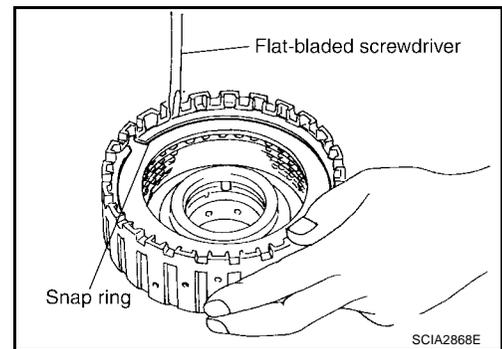

## INSPECTION

- Check the following, and replace high and low reverse clutch assembly and mid sun gear assembly as a set if necessary.

### High and Low Reverse Clutch Snap Ring

- Check for deformation, fatigue or damage.

### High and Low Reverse Clutch Drive Plates

- Check facing for burns, cracks or damage.

### High and Low Reverse Clutch Retaining Plate and Driven Plates


- Check facing for burns, cracks or damage.

## ASSEMBLY


- Install drive plates, driven plates and retaining plate in high and low reverse clutch drum.

### CAUTION:

Take care with the order of plates.

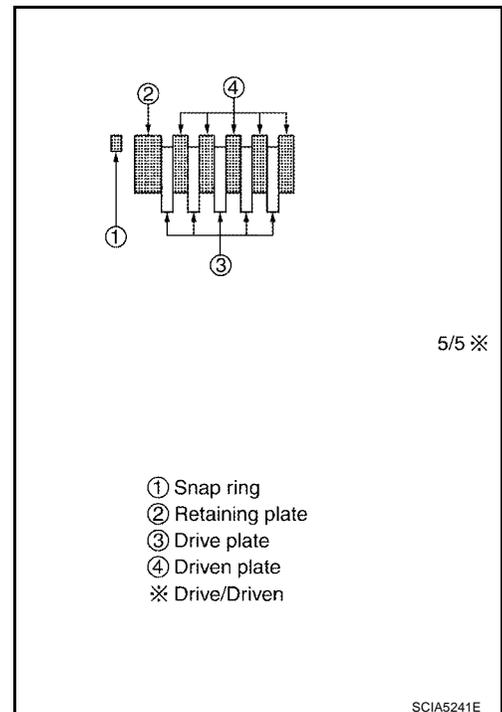

- Using a flat-bladed screwdriver, install snap ring in high and low reverse clutch drum.

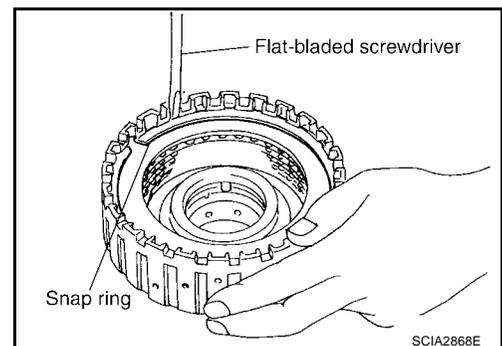


## REPAIR FOR COMPONENT PARTS

3. Install bearing race in high and low reverse clutch drum.


**CAUTION:**

Apply petroleum jelly to bearing race.

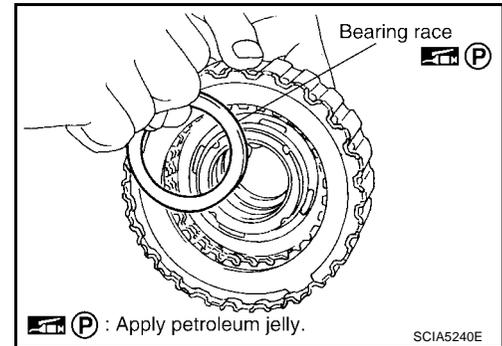

### Direct Clutch COMPONENTS


UCS0030J

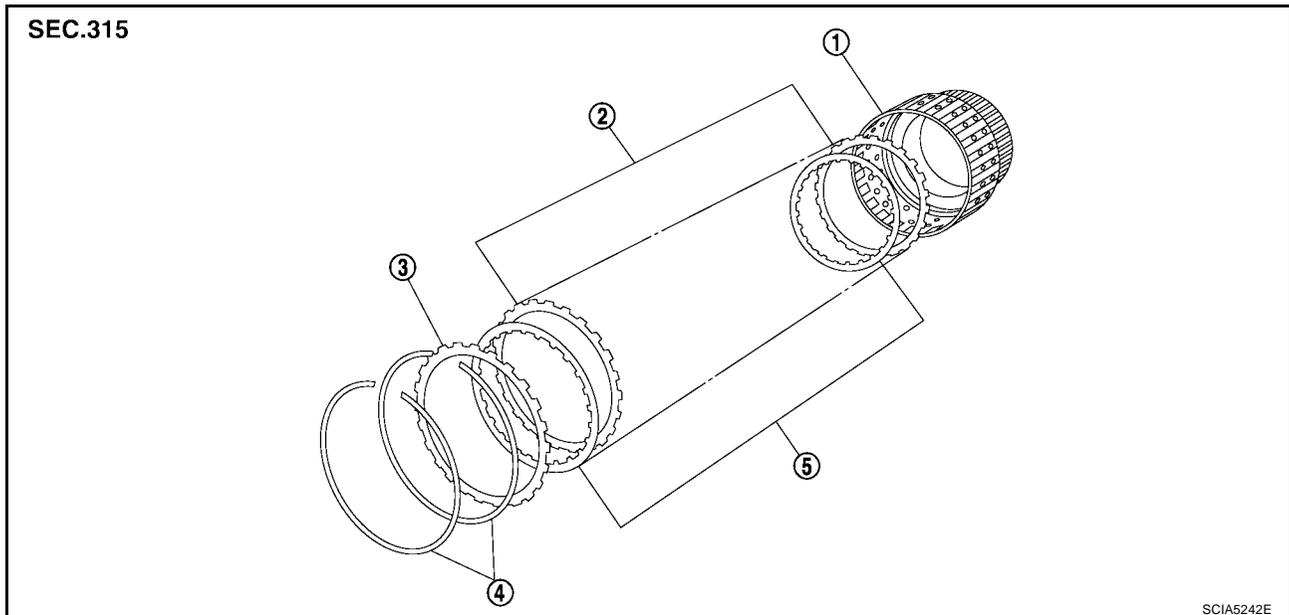

- |                       |                 |                    |
|-----------------------|-----------------|--------------------|
| 1. Direct clutch drum | 2. Driven plate | 3. Retaining plate |
| 4. Snap ring          | 5. Drive plate  |                    |

### DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap rings from direct clutch drum.
2. Remove drive plates, driven plates and retaining plate from direct clutch drum.

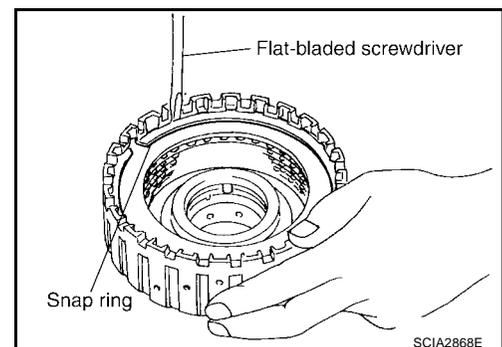

### INSPECTION

- Check the following, and replace direct clutch assembly if necessary.

#### Direct Clutch Snap Rings

- Check for deformation, fatigue or damage.

#### Direct Clutch Drive Plates

- Check facing for burns, cracks or damage.

# REPAIR FOR COMPONENT PARTS

## Direct Clutch Retaining Plate and Driven Plates


- Check facing for burns, cracks or damage.

### ASSEMBLY


1. Install drive plates, driven plates and retaining plate in direct clutch drum.

**CAUTION:**

Take care with the order of plates.

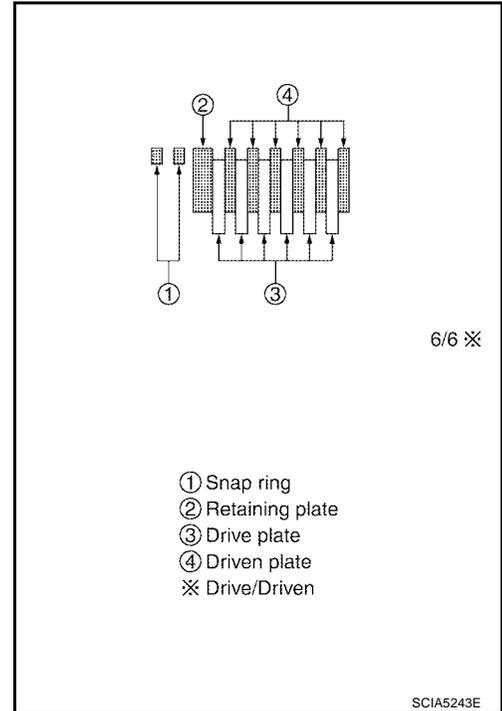

2. Using a flat-bladed screwdriver, install snap rings in direct clutch drum.

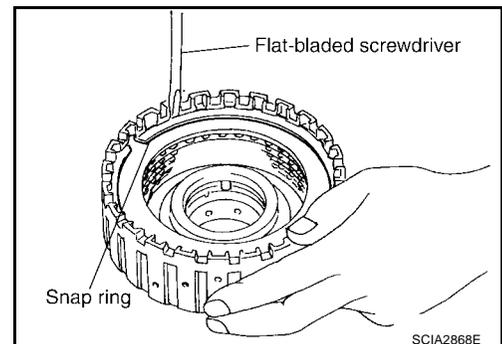

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY

## ASSEMBLY

PFP:00000


UCS0030K

### Assembly (1)


1. As shown below, use a drift [commercial service tool  $\phi 22$  mm (0.87 in)] to drive manual shaft oil seal into the transmission case until it is flush.

**CAUTION:**


- Apply ATF to manual shaft oil seal.
- Do not reuse manual shaft oil seal.

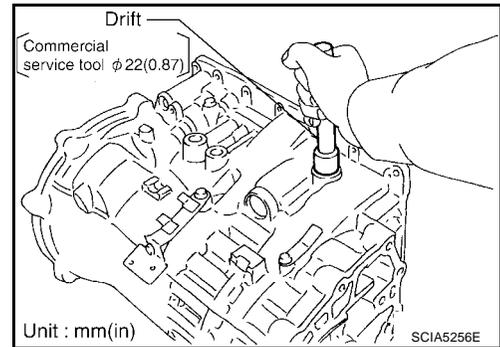


2. Install detent spring and spacer in transmission case.

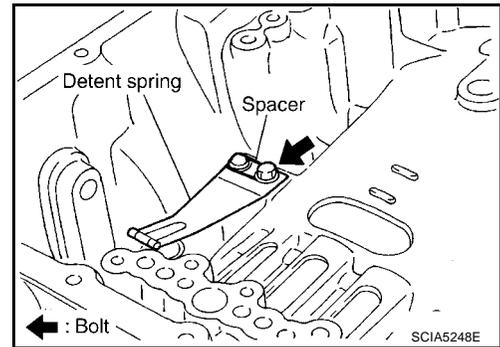

3. Install manual shaft in transmission case.
4. Install parking rod in manual plate.

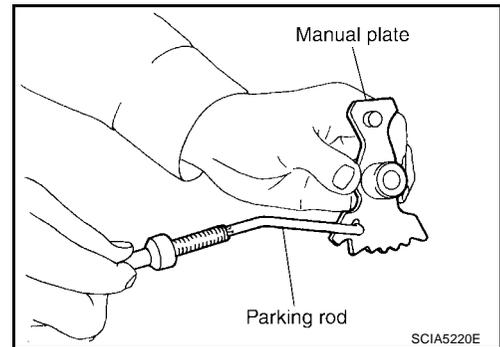

5. Install manual plate (with parking rod) in manual shaft.

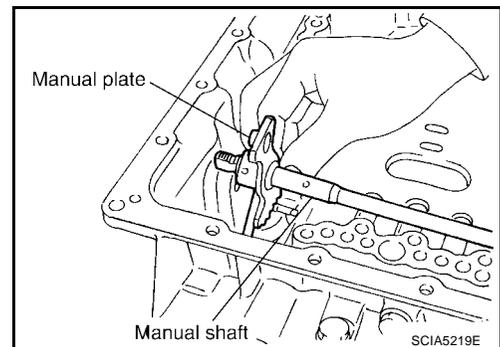


# ASSEMBLY

6. Install retaining pin into the manual plate and manual shaft.
  - a. Fit pinhole of the manual plate to pinhole of the manual shaft with a pin punch.
  - b. Use a hammer to tap the retaining pin into the manual plate.

**CAUTION:**


- Drive retaining pin to  $\pm 0.5$  mm over the manual plate.
- Do not reuse retaining pin.

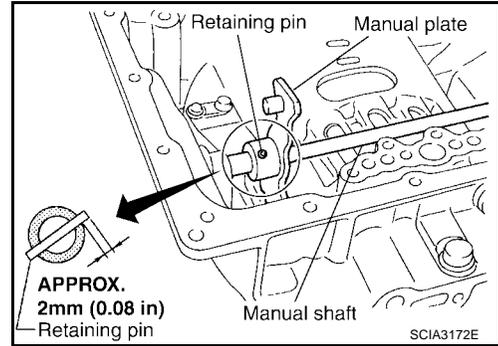

7. Install retaining pin into the transmission case and manual shaft.
  - a. Fit pinhole of the transmission case to pinhole of the manual shaft with a pin punch.
  - b. Use a hammer to tap the retaining pin into the transmission case.

**CAUTION:**


- Drive retaining pin to  $\pm 1$  mm over the transmission case.
- Do not reuse retaining pin.

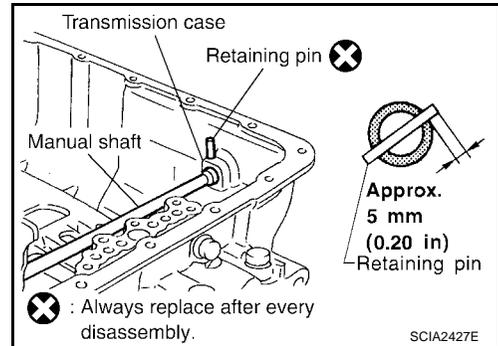


8. Install O-rings in servo assembly.
 

**CAUTION:**

  - Do not reuse O-rings.
  - Apply petroleum jelly to O-rings.
9. Install return spring in servo assembly.
10. Install servo assembly in transmission case.

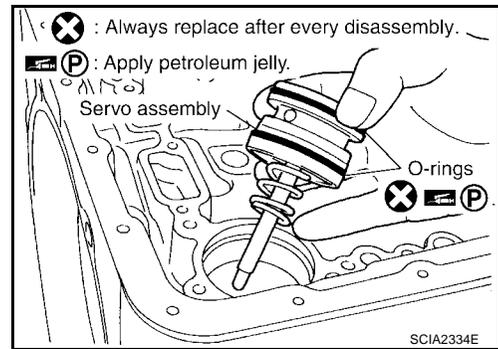


11. Using snap ring pliers, install snap ring in transmission case.

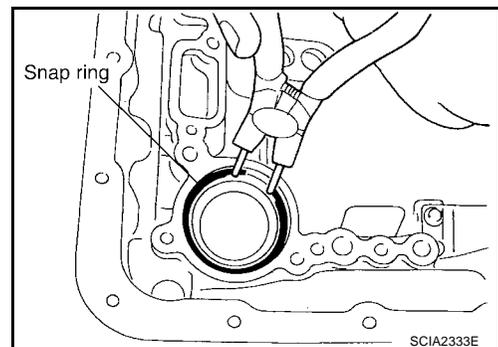

12. Install lip seal and D-ring in reverse brake piston.


**CAUTION:**

- Do not reuse lip seal and D-ring.
- Apply petroleum jelly to lip seal.
- Apply ATF to D-ring.

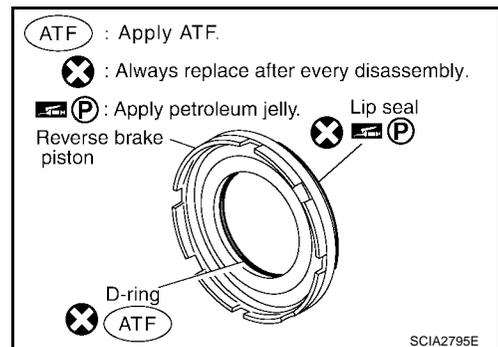

# ASSEMBLY


13. Install reverse brake piston in transmission case.

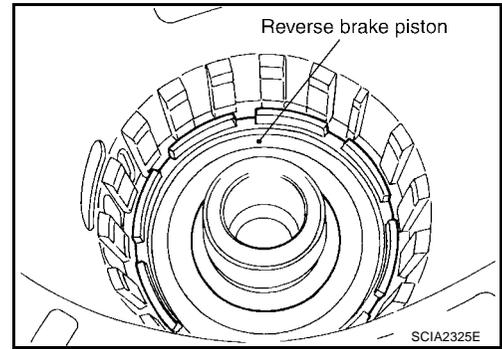

14. Install seal rings in drum support.

**CAUTION:**


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

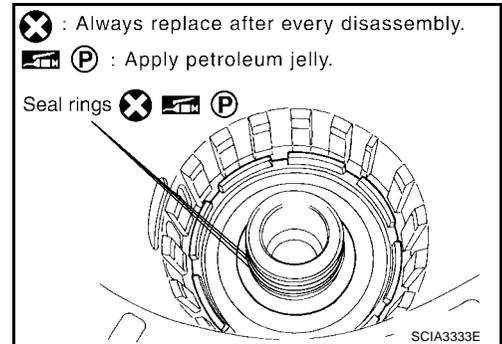


15. Install needle bearing in transmission case.

**CAUTION:**

- Apply petroleum jelly to needle bearing.

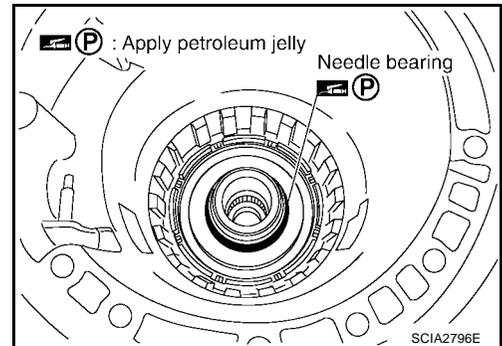

16. Install spring retainer and return spring in transmission case.

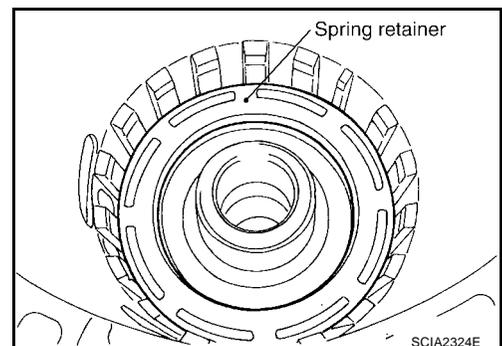


# ASSEMBLY

17. Set SST on spring retainer and install snap ring (fixing spring retainer) in transmission case while compressing return spring.

**CAUTION:**


Securely assemble them using a flat-bladed screwdriver so that snap ring tension is slightly weak.

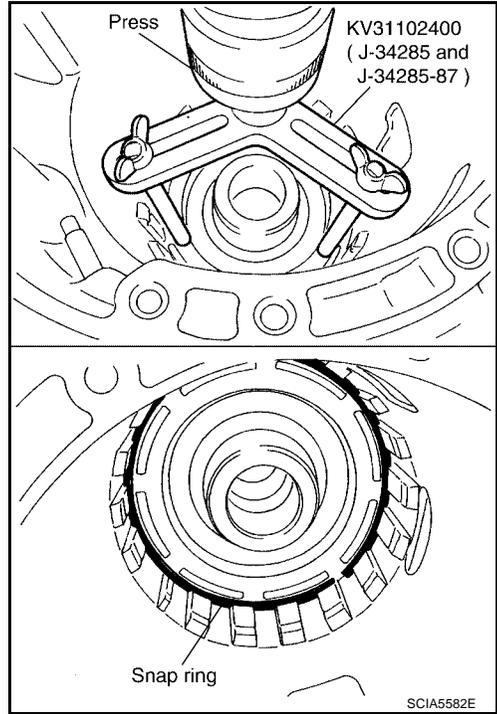

18. Install reverse brake drive plates, driven plates and dish plate in transmission case.

**CAUTION:**


Take care with the order and direction of plates.

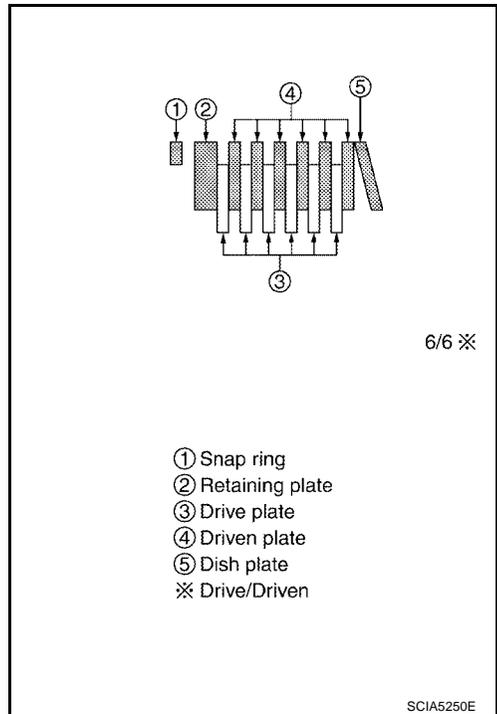


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY

19. Install N-spring.
20. Install reverse brake retaining plate in transmission case.

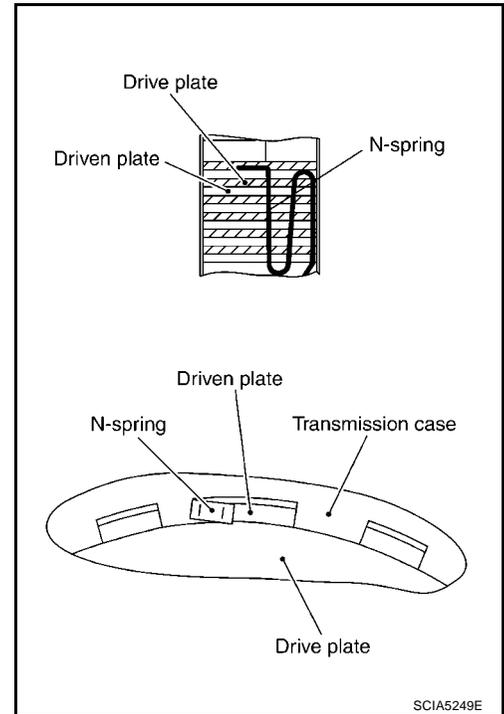

21. Install snap ring in transmission case.

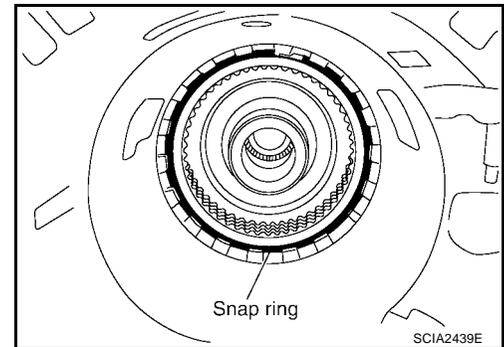


22. Measure clearance between retaining plate and snap ring. If not within specified clearance, select proper retaining plate.

**Specified clearance "A":**

**Standard: 0.7 - 1.1mm (0.028 - 0.043 in)**

**Retaining plate:**


**Refer to [AT-348, "Reverse brake"](#) .**

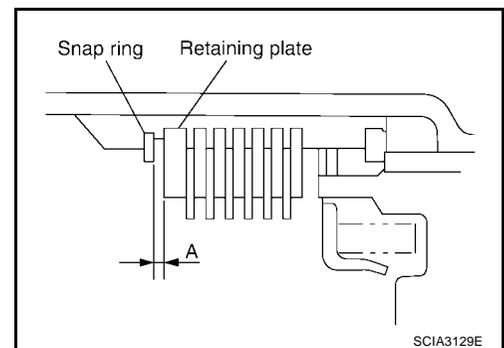

23. Install needle bearing in transmission case.

**CAUTION:**

- Take care with the direction of needle bearing. Refer to [AT-286, "Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#) .
- Apply petroleum jelly to needle bearing.

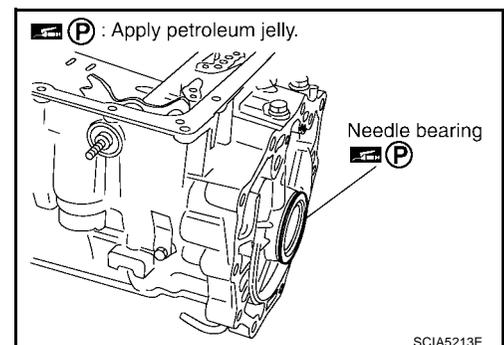


# ASSEMBLY

24. Install revolution sensor in transmission case.

**CAUTION:**


- Do not subject it to impact by dropping or hitting it.
- Be careful not to damage harness with the edge of case.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

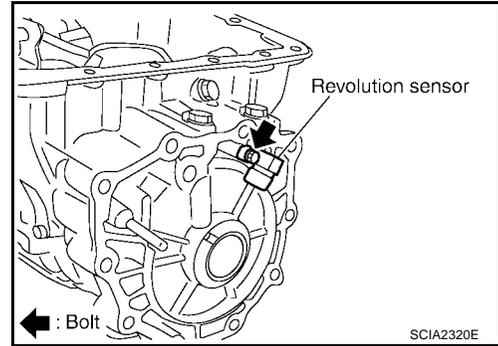


25. As shown below, use a drift to drive rear oil seal into the extension (2WD models) or adapter case (4WD models) until it is flush.

**CAUTION:**


- Apply ATF to rear oil seal.
- Do not reuse rear oil seal.

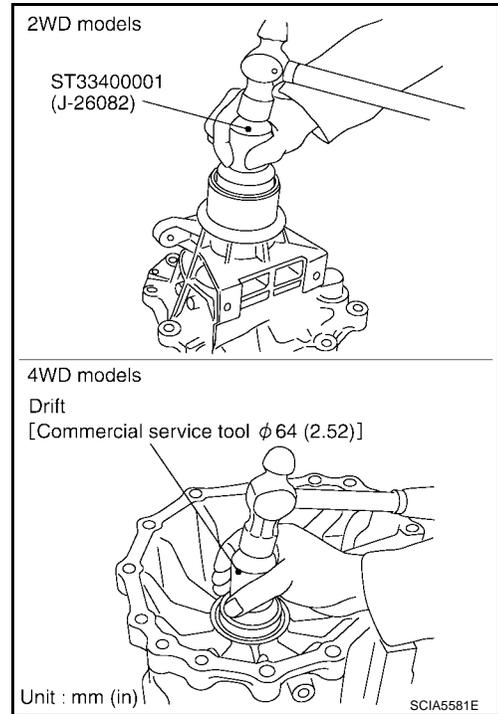

26. Install return spring in parking pawl.

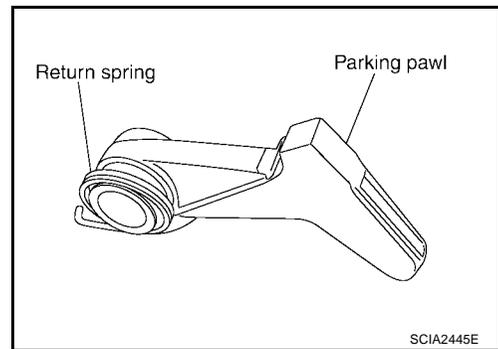


27. Install parking pawl and pawl shaft in rear extension (2WD models) or adapter case (4WD models).

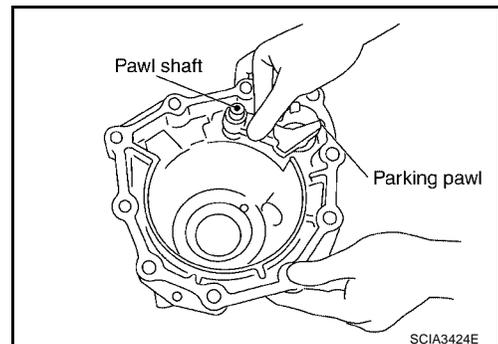

A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY


28. Install parking actuator support in rear extension (2WD models) or adapter case (4WD models).

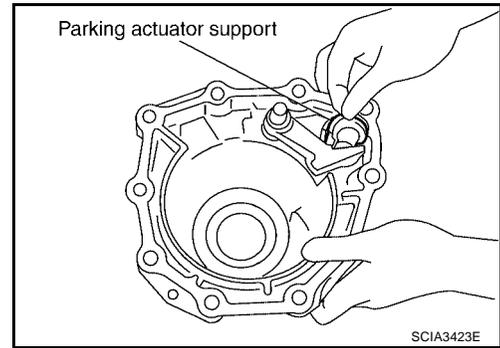

29. Install needle bearing in rear extension (2WD models) or adapter case (4WD models).

**CAUTION:**


Apply petroleum jelly to needle bearing.

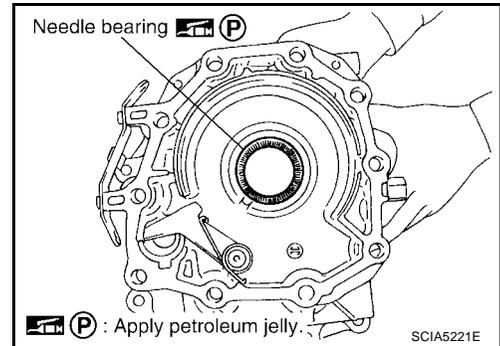


30. Install seal rings in output shaft.

**CAUTION:**

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

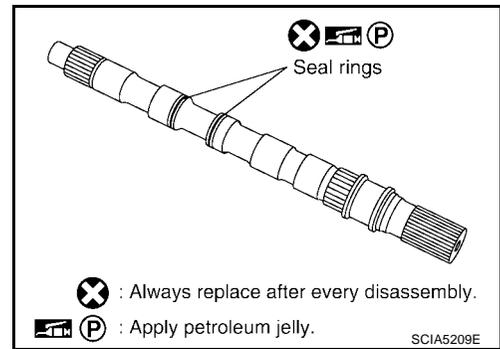


31. Install parking gear in output shaft.

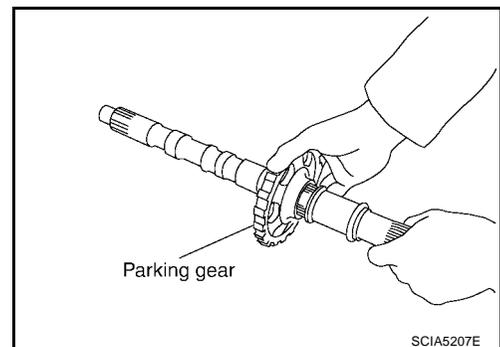

32. Install output shaft in transmission case.


**CAUTION:**

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

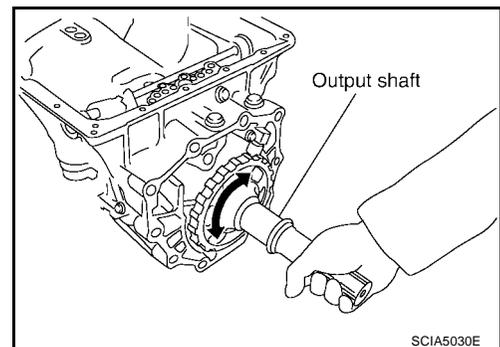

# ASSEMBLY

33. Install bearing race in output shaft.

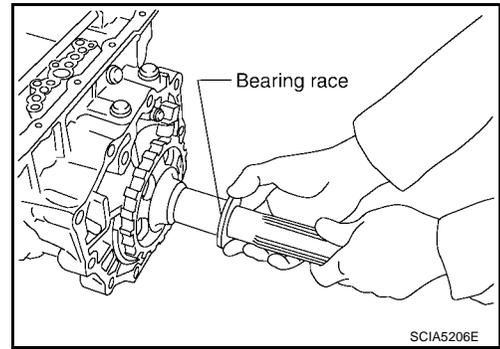


34. Install rear extension assembly (2WD models) or adapter case assembly according to the following procedures.

a. 2WD models


i. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-45, "Recommended Chemical Products and Sealants"](#) .) to rear extension assembly as shown in illustration.

**CAUTION:**

**Complete remove all moisture, oil and old sealant, etc. From the transmission case and rear extension mounting surfaces.**

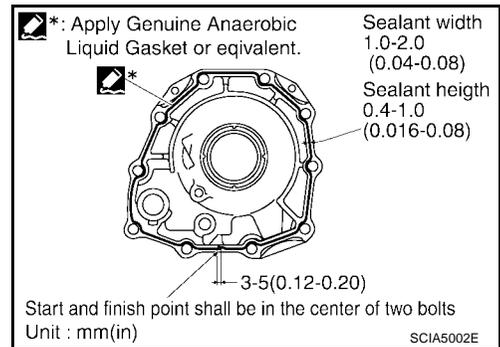

ii. Install rear extension assembly in transmission case.

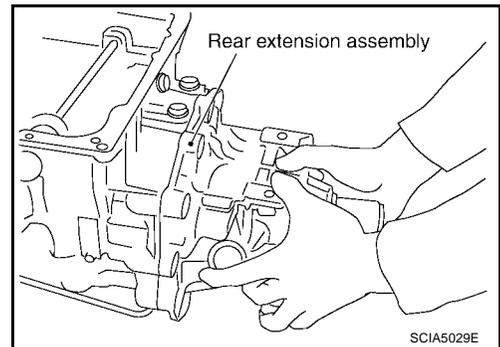

iii. Tighten rear extension assembly mounting bolts to specified torque.

**CAUTION:**


**Do not reuse self-sealing bolt.**

**Rear extension assembly mounting bolt:**

 : 52 N·m (5.3 kg·m, 38 ft·lb)

**Self-sealing bolt:**

 : 61 N·m (6.2 kg·m, 45 ft·lb)

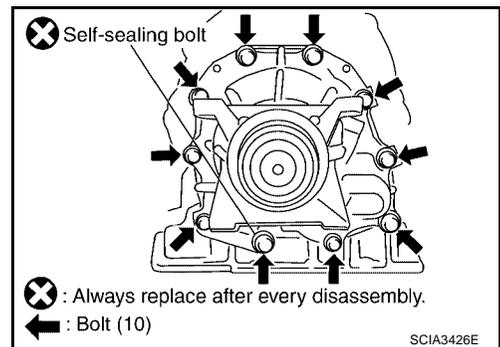


# ASSEMBLY


- b. 4WD models  
 i. Install gasket on transmission case.

**CAUTION:**

- Do not reuse gasket.
- Complete remove all moisture, oil and old gasket, etc. From the transmission case and adapter case mounting surfaces.

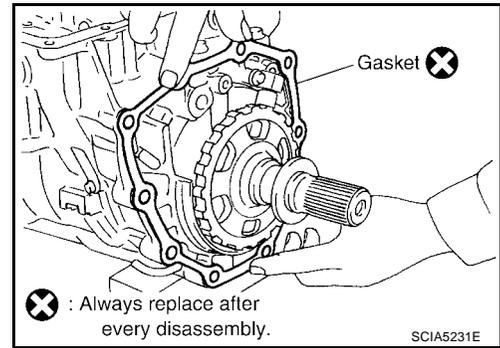

- ii. Install adapter case assembly in transmission case.

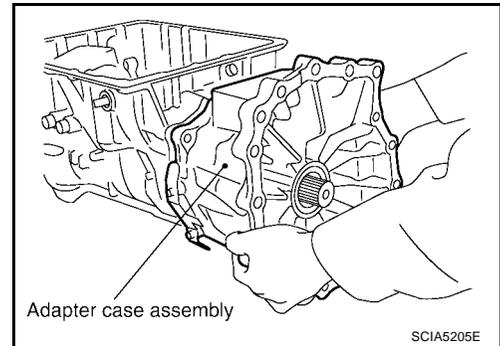

- iii. Install bracket.  
 iv. Tighten adapter case assembly mounting bolts to specified torque.

**CAUTION:**


Do not reuse self-sealing bolt.

Adapter case assembly mounting bolt:

 : 52 N·m (5.3 kg·m, 38 ft·lb)

Self-sealing bolt:


 : 61 N·m (6.2 kg·m, 45 ft·lb)

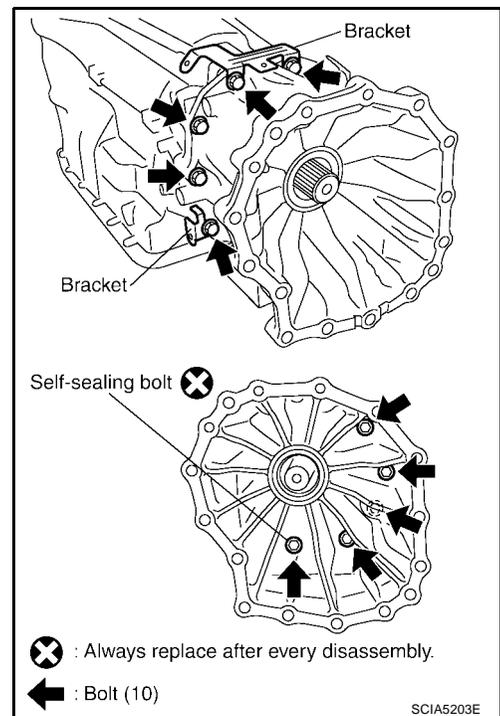

35. Install needle bearing in drum support edge surface.

**CAUTION:**

Apply petroleum jelly to needle bearing.

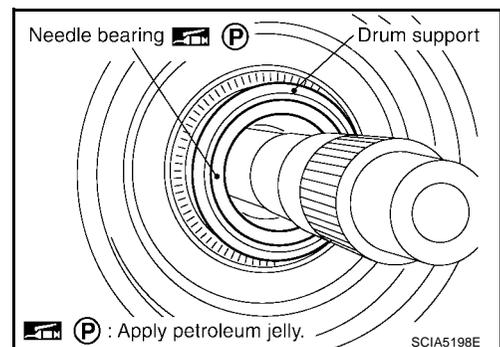


# ASSEMBLY

36. Install direct clutch assembly in reverse brake.

**CAUTION:**


**Make sure that drum support edge surface and direct clutch inner boss edge surface come to almost same place.**

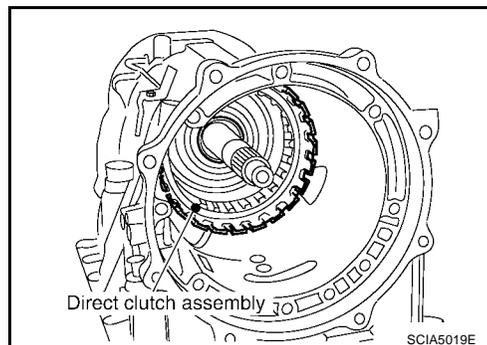


37. Install high and low reverse clutch assembly in direct clutch assembly.

**CAUTION:**


**Be sure to replace high and low reverse clutch and mid sun gear as a set.**

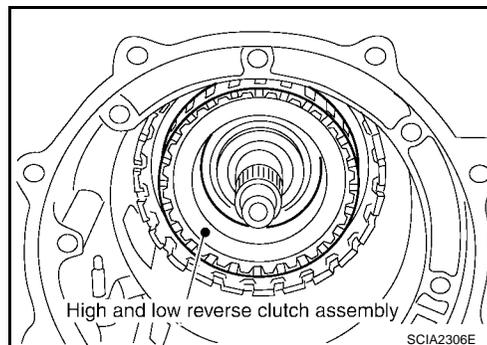

38. Using a flat-bladed screwdriver, range the drive plate.

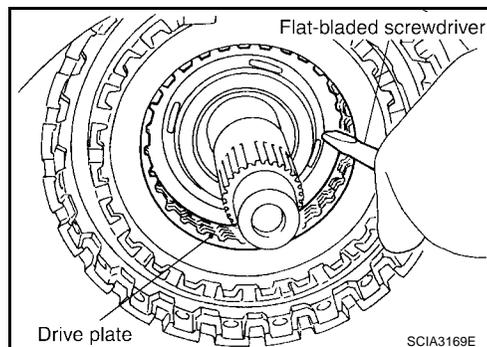

39. Install high and low reverse clutch hub, mid sun gear assembly and rear sun gear assembly in high and low reverse clutch assembly.

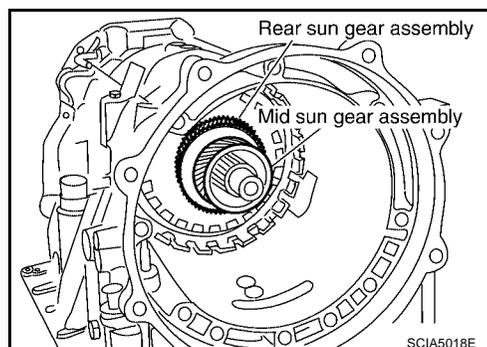


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY

**CAUTION:**


Check that portion A of high and low reverse clutch drum protrudes approximately 2 mm (0.08 in) beyond portion B of rear sun gear.

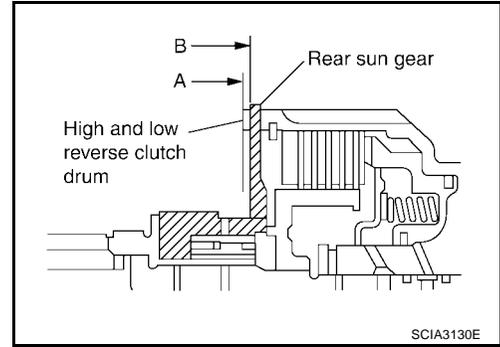

40. Install needle bearing in rear carrier assembly.

**CAUTION:**


Apply petroleum jelly to needle bearing.

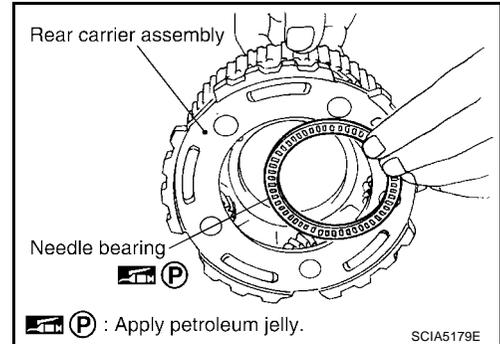


41. Install bearing race in rear carrier assembly.

**CAUTION:**

Apply petroleum jelly to bearing race.

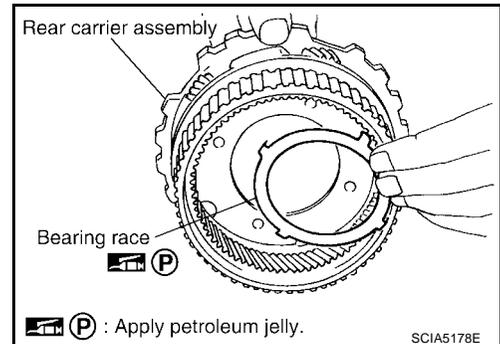

42. Install rear carrier assembly in direct clutch drum.

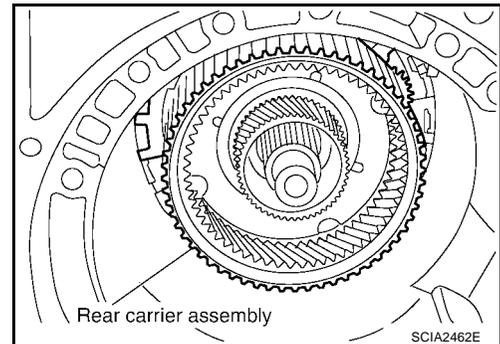


# ASSEMBLY

43. Install needle bearing (rear side) in mid carrier assembly.

**CAUTION:**


Apply petroleum jelly to needle bearing.

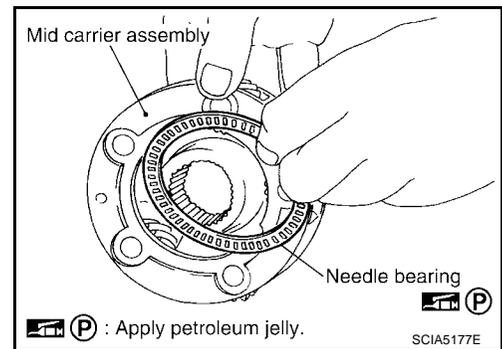


44. Install needle bearing (front side) in mid carrier assembly.

**CAUTION:**


Apply petroleum jelly to needle bearing.

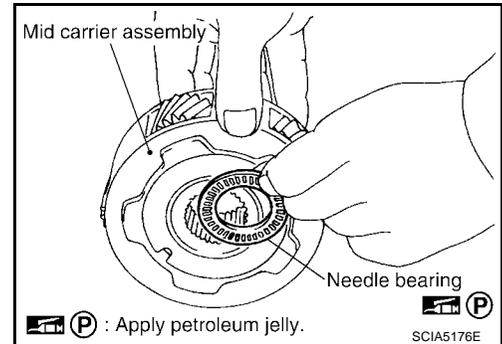

45. Install mid carrier assembly in rear carrier assembly.

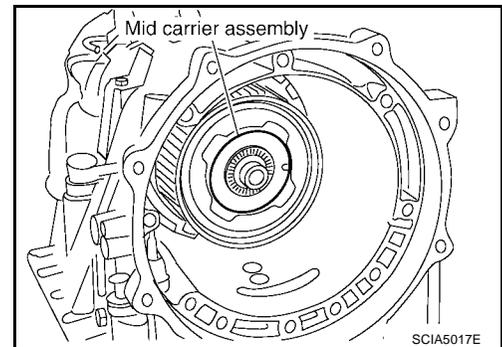


46. Install front carrier assembly, input clutch assembly and rear internal gear as a unit.

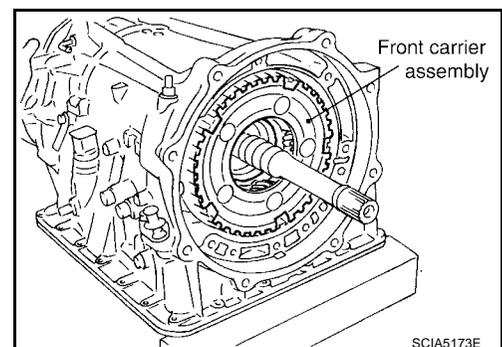

47. Install seal rings in input clutch assembly.

**CAUTION:**

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

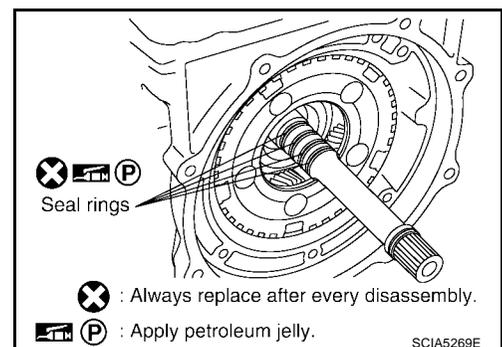


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY

48. Install band servo anchor end pin and lock nut in transmission case.

**CAUTION:**


Do not reuse band servo anchor end pin.

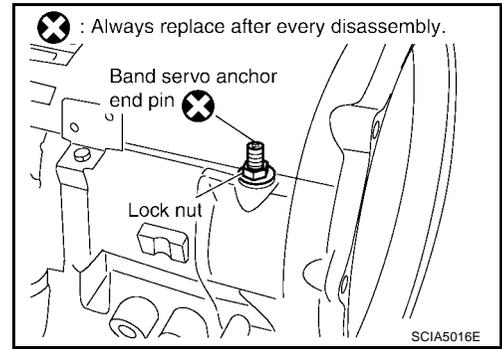

49. Install brake band in transmission case.

**CAUTION:**


Assemble it so that identification to avoid incorrect installation faces servo side.

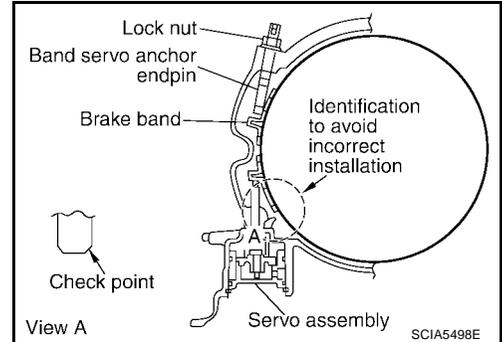

50. Install front sun gear in front carrier assembly.

**CAUTION:**


Apply ATF to front sun gear radial bearing and 3rd one-way clutch end bearing.

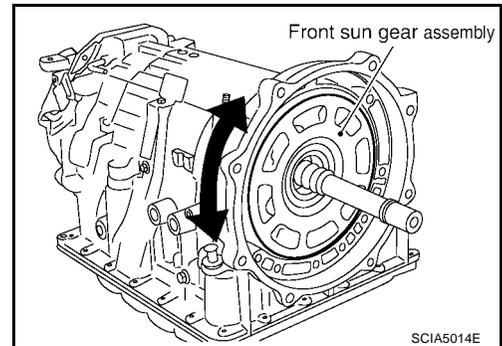


51. Install needle bearing in front sun gear.

**CAUTION:**

Apply petroleum jelly to needle bearing.

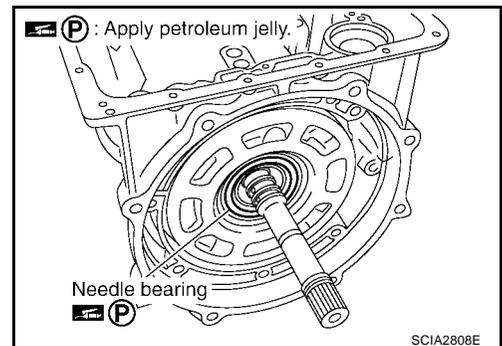

52. Adjust brake band tilting using clips so that brake band contacts front sun gear drum evenly.

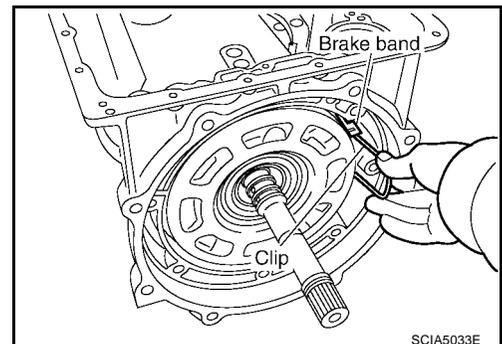


# ASSEMBLY

53. Adjust brake band.

- a. Loosen lock nut.
- b. Tighten band servo anchor end pin to specified torque.

 : 5.0 N·m (0.51 kg·m, 44 in·lb)


- c. Back of band servo anchor end pin three turns.
- d. While band servo anchor end pin, tighten lock nut to specified torque. Refer to [AT-276, "Components"](#).

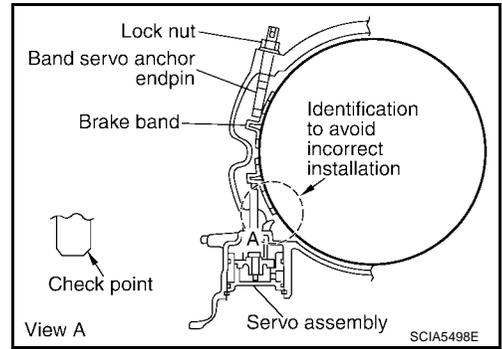


UCS0030L

## Adjustment TOTAL END PLAY


- Measure clearance between front sun gear and needle bearing for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

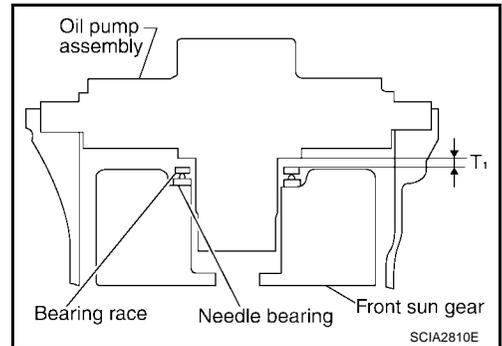

1. Measure dimensions "K" and "L" and then calculate dimension "J".

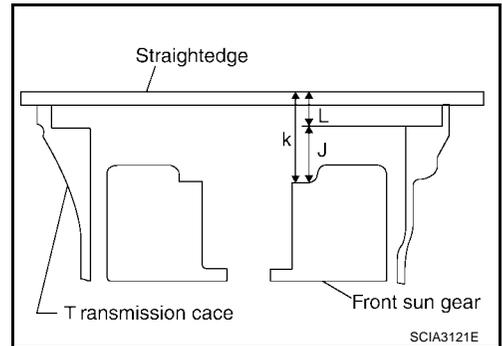

- a. Measure dimension "K".

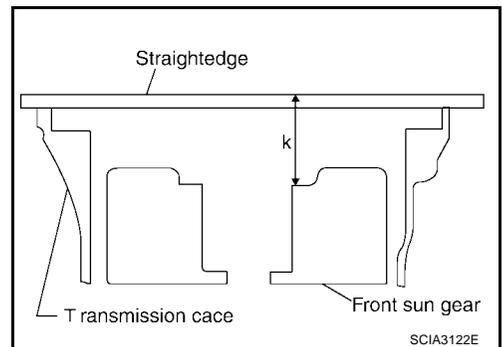


# ASSEMBLY


- b. Measure dimension "L".
- c. Calculate dimension "J".

**"J": Distance between oil pump fitting surface of transmission case and needle bearing mating surface of front sun gear.**


$$J = K - L$$

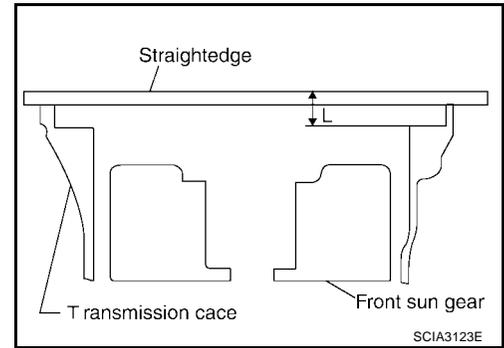


2. Measure dimensions "M1" and "M2" and then calculate dimension "M".

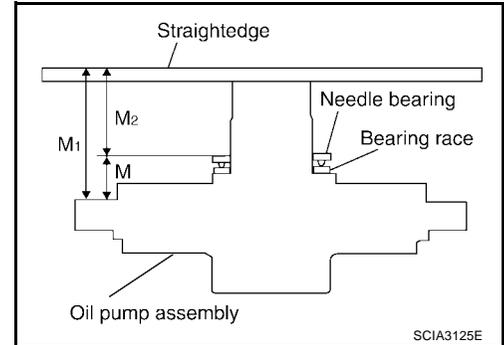

- a. Place bearing race and needle bearing on oil pump assembly.

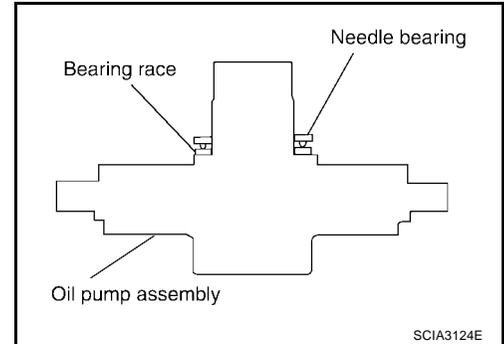


- b. Measure thickness of straightedge "M1".

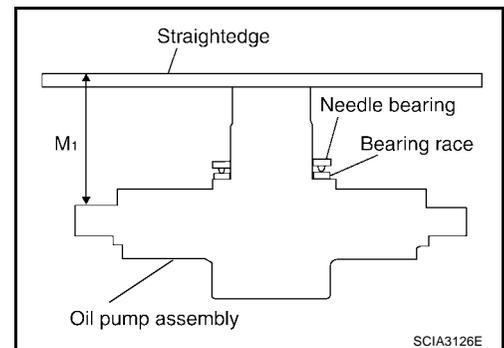

- c. Measure thickness of straightedge "M2".
- d. Calculate dimension "M".

**"M": Distance between trans mission case fitting surface of oil pump and needle bearing on oil pump.**

$$M = M1 - M2$$

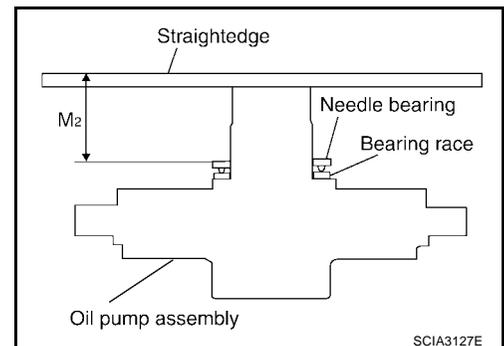

# ASSEMBLY

- Adjust total end play "T1".

$$T_1 = J - M$$

Total end play "T1":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- Select proper thickness of bearing race so that total end play is within specifications.


Bearing races: Refer to [AT-348](#), "[BEARING RACE FOR ADJUSTING TOTAL END PLAY](#)".

## Assembly (2)

- Install O-ring in oil pump assembly.

**CAUTION:**


- Do not reuse O-ring.
- Apply ATF to O-ring.

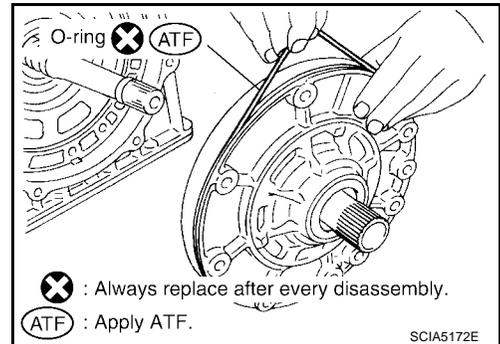

- Install bearing race in oil pump assembly.

**CAUTION:**


Apply petroleum jelly to bearing race.

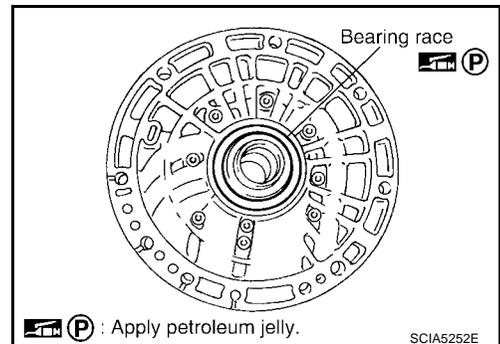

- Install oil pump assembly in transmission case.

**CAUTION:**


Apply ATF to oil pump bush.

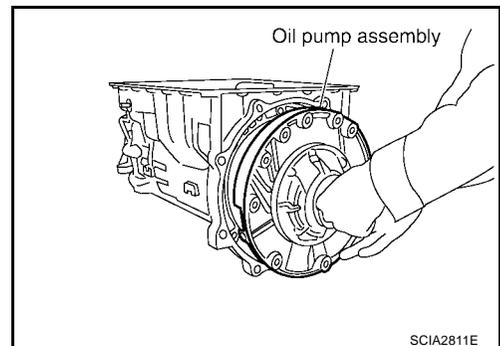

- Apply recommended sealant (Silicone RTV or equivalent. Refer to [GI-45](#), "[Recommended Chemical Products and Sealants](#)".) to oil pump assembly as shown in illustration.


**CAUTION:**

Complete remove all moisture, oil and old sealant, etc. From the oil pump mounting bolts and oil pump mounting bolt mounting surfaces.

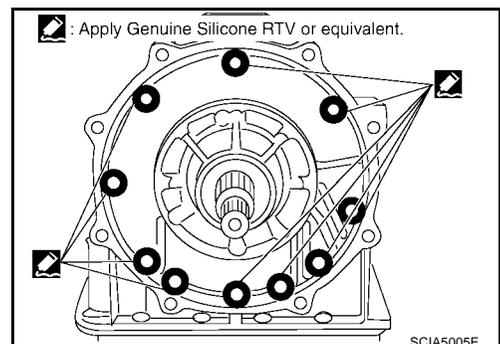

# ASSEMBLY


5. Tighten oil pump mounting bolts to specified torque. Refer to [AT-276, "Components"](#).

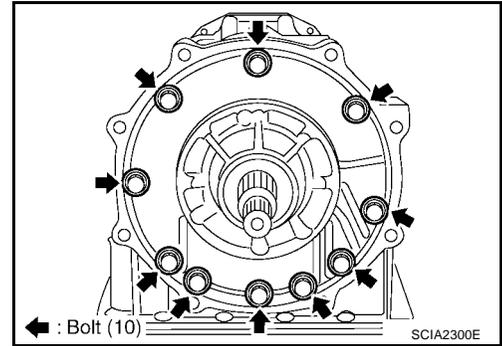

6. Install O-ring in input clutch assembly.

**CAUTION:**

- Do not reuse O-ring.
- Apply ATF to O-ring.

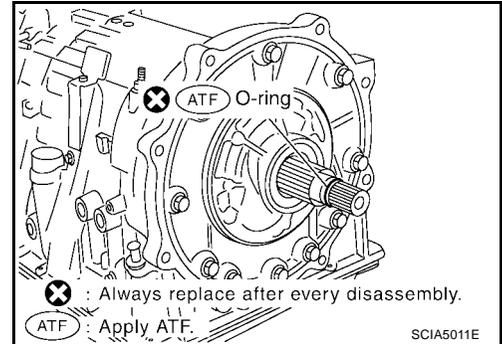

7. Install converter housing in transmission case.

**CAUTION:**


Do not reuse self-sealing bolt.

**Converter housing mounting bolt:**


 : 52 N·m (5.3 kg-m, 38 ft-lb)

**Self-sealing bolt:**

 : 61 N·m (6.2 kg-m, 45 ft-lb)

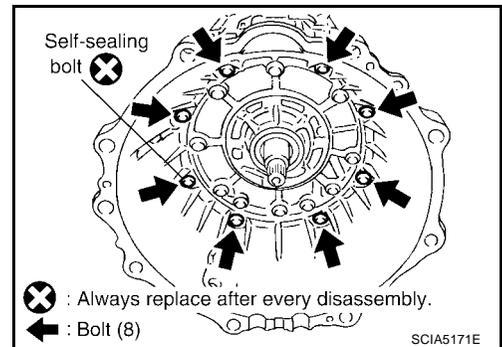


8. Make sure that brake band does not close turbine revolution sensor hole.

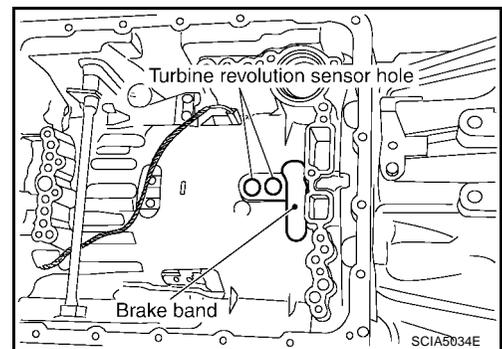


9. Install control valve with TCM.

# ASSEMBLY


- a. Connect TCM connector and park/neutral position switch connector.

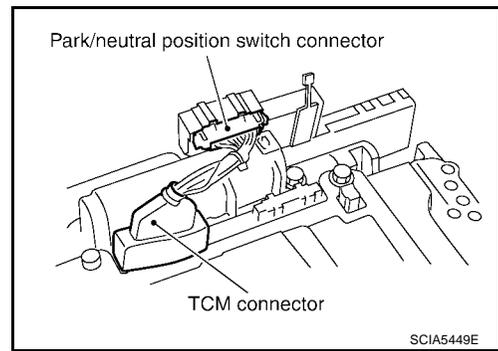

- b. Install A/T assembly harness connector from control valve with TCM.

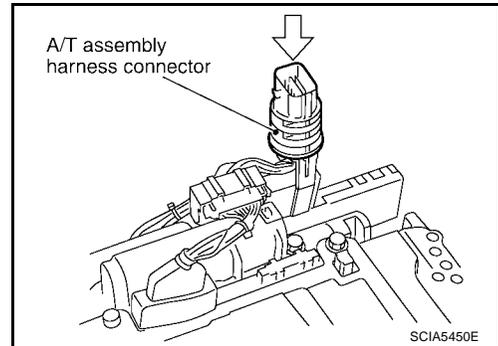


- c. Connect TCM connectors.

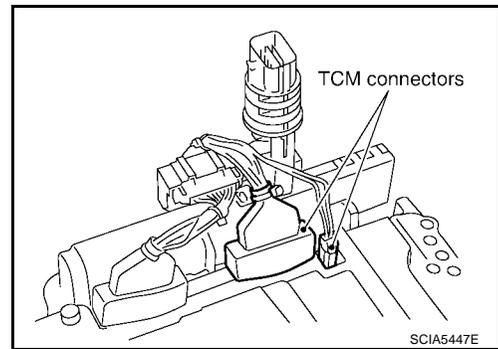


- d. Install O-ring in A/T assembly harness connector.

**CAUTION:**

- Do not reuse O-ring.
- Apply ATF to O-ring.

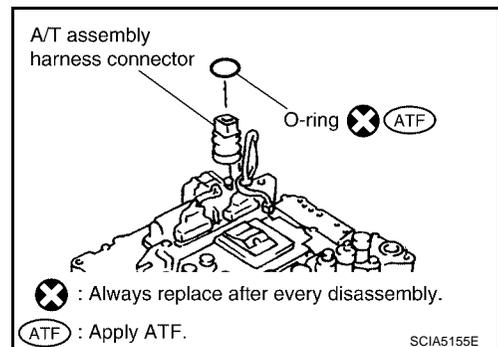

- e. Install A/T fluid temperature sensor 2 in bracket.

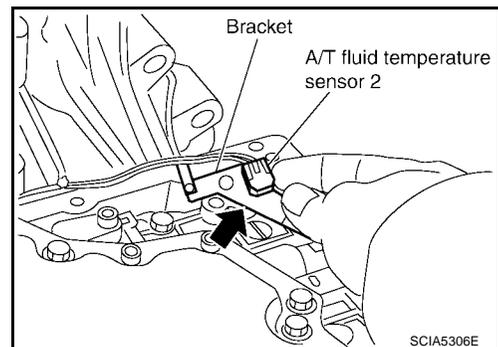


A  
B  
AT  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

# ASSEMBLY

- f. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM. Tighten A/T fluid temperature sensor 2 mounting bolt to the specified torque. Refer to [AT-276, "Components"](#).

**CAUTION:**


Adjust bolt hole of bracket to bolt hole of control valve with TCM.

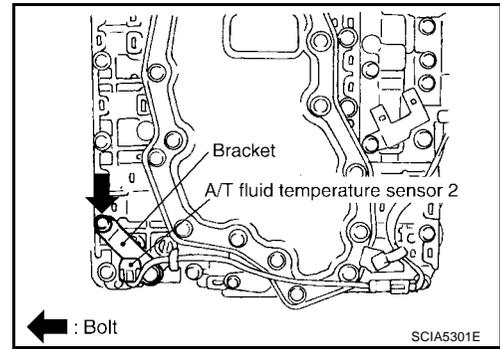


- g. Install control valve with TCM in transmission case.

**CAUTION:**

- Make sure that turbine sensor securely installs turbine sensor hole.
- Adjust A/T assembly harness connector of control valve to terminal hole of transmission case.

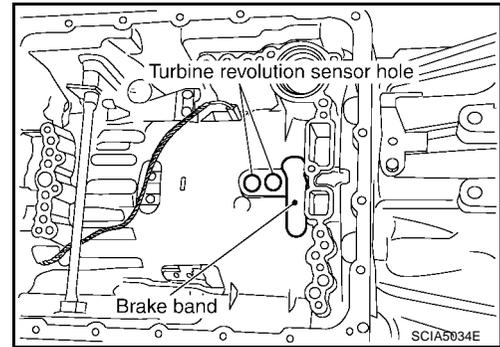


- Assemble it so that manual valve cutout is engaged with manual plate projection.

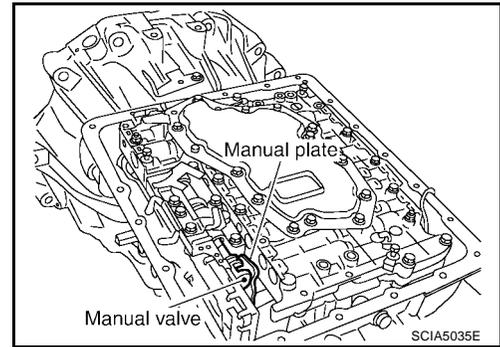


- h. Install bolts A, B and C in control valve with TCM.

Bolt symbol	Length: mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

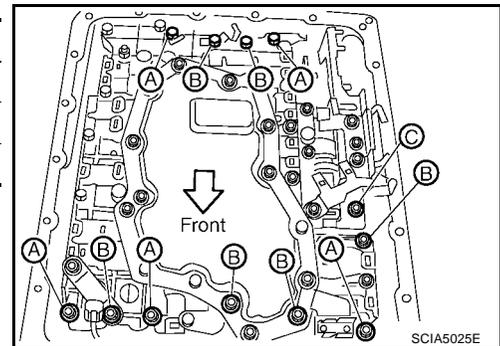


# ASSEMBLY

- i. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts.
- j. Tighten control valve with TCM mounting bolts to the specified torque. Refer to [AT-276, "Components"](#) .

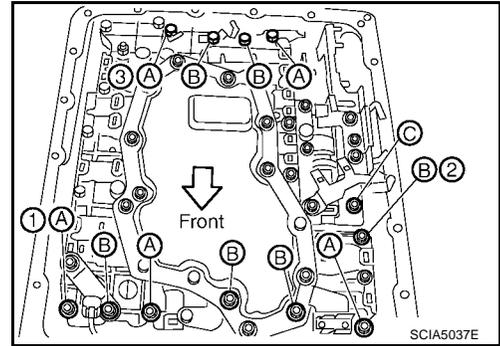


A  
B  
AT

- 10. Connect A/T fluid temperature sensor 2 connector.

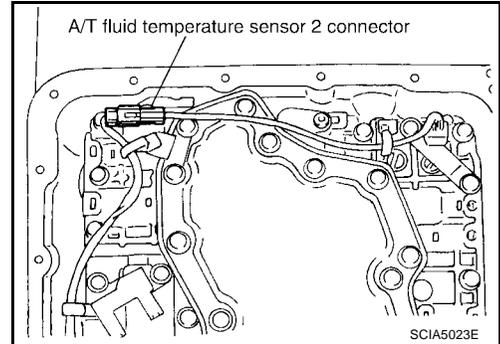


D  
E  
F  
G

- 11. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

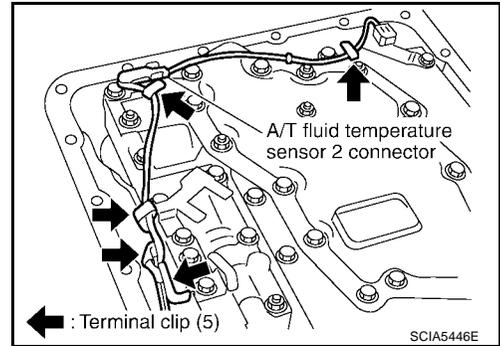


H  
I  
J  
K

- 12. Connect revolution sensor connector.

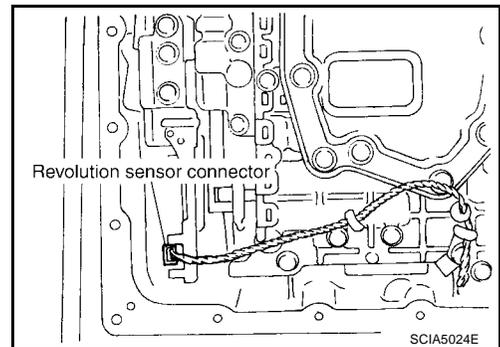


L  
M

- 13. Securely fasten revolution sensor harness with clip.

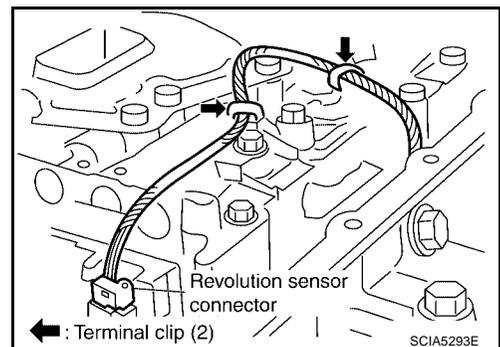

# ASSEMBLY

14. Install magnets in oil pan.

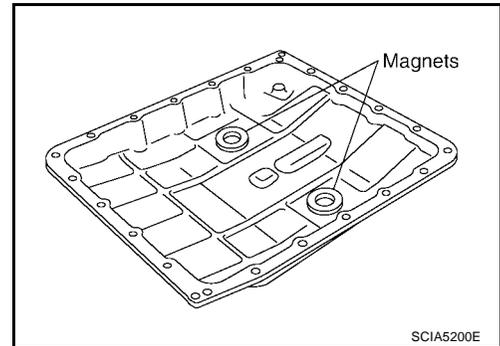

15. Install oil pan in transmission case.

a. Install oil pan gasket in oil pan.


**CAUTION:**

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. From the oil pan gasket mounting surfaces.

b. Install oil pan (with oil pan gasket) in transmission case.

**CAUTION:**

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Complete remove all moisture, oil and old gasket, etc. From the oil pan mounting surfaces.

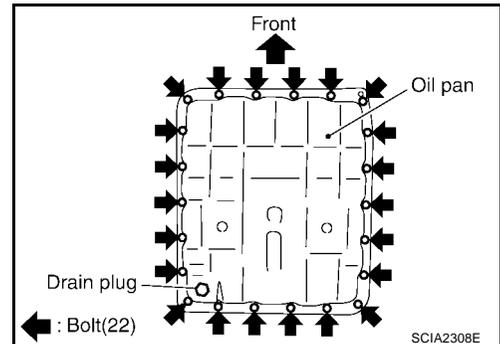

c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Refer to [AT-276, "Components"](#) .


**CAUTION:**

**Do not reuse oil pan mounting bolts.**

16. Install drain plug in oil pan. Tighten drain plug to the specified torque. Refer to [AT-276, "Components"](#) .

**CAUTION:**


**Do not reuse drain plug gasket.**

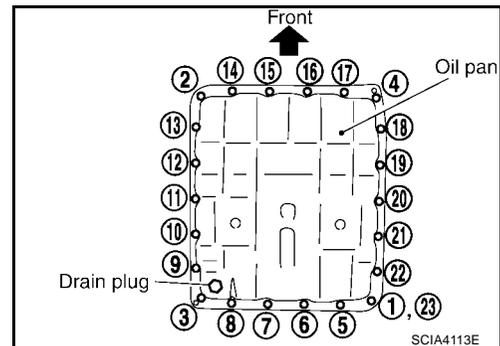

17. Pull up A/T assembly harness connector.


**CAUTION:**

**Be careful not damage A/T assembly harness connector.**

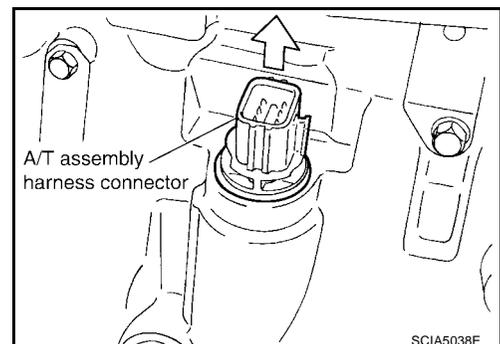

# ASSEMBLY


18. Install snap ring in A/T assembly harness connector.

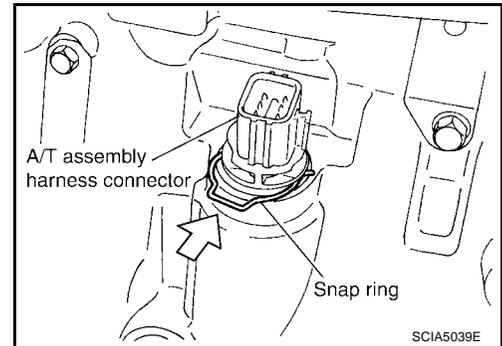

19. Install torque converter.


a. Pour ATF into torque converter.

- Approximately 2 liter (2-1/8 US qt, 1-3/4 Imp qt) of fluid is required for a new torque converter.
- When reusing old torque converter, add the same amount of fluid as was drained.

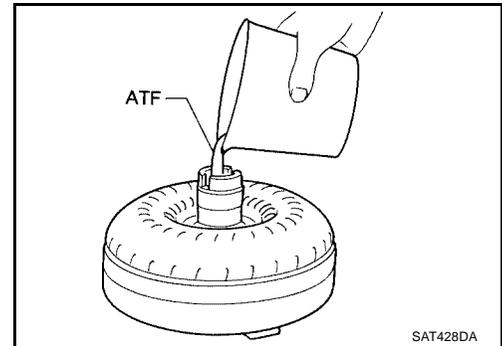


b. Install torque converter while aligning notches of torque converter with notches of oil pump.

**CAUTION:**  
Install torque converter while rotating it.

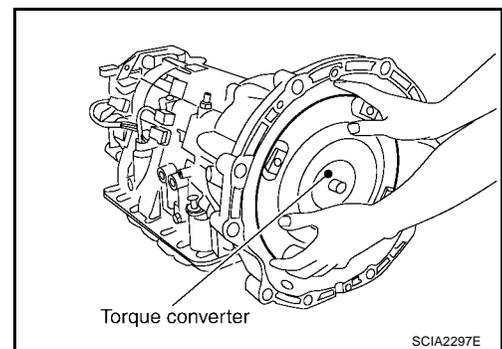

c. Measure distance "A" to check that torque converter is in proper position.

**Distance "A":**  
**: 24.0 mm (0.94 in) or more**

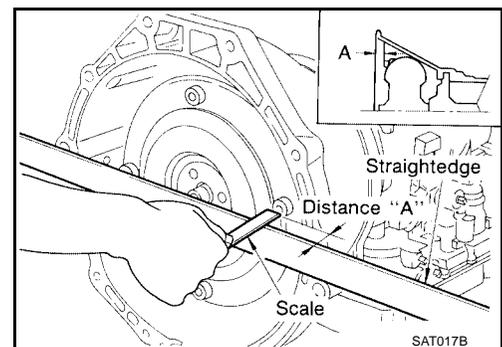

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

PF0:00030

### General Specifications

UCS0030N

Applied model	4x2	4x4
Automatic transmission model	RE5R05A	
Transmission model code number	95X13	95X16
Stall torque ratio	2.0: 1	
Transmission gear ratio	1st	3.827
	2nd	2.368
	3rd	1.519
	4th	1.000
	5th	0.834
	Reverse	2.613
Recommended fluid	NISSAN Matic Fluid J*1	
Fluid capacity	10.6 liter (11-1/4 US qt, 9-3/8 Imp qt)	

**CAUTION:**

- Use only Genuine NISSAN ATF Matic Fluid J. Do not mix with other fluid.
- Using automatic transmission fluid other than Genuine NISSAN an ATF Matic Fluid J will deteriorate in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the warranty.

\*1: Refer to [MA-10, "Fluids and Lubricants"](#).

### Vehicle Speed When Shifting Gears NORMAL MODE

UCS0030O

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
2.937	Full throttle	70 - 74 (44 - 46)	112 - 120 (70 - 75)	176 - 186 (110 - 116)	249 - 259 (155 - 161)	245 - 255 (152 - 159)	166 - 176 (103 - 110)	100 - 108 (62 - 67)	43 - 47 (27 - 30)
	Half throttle	46 - 50 (28 - 31)	74 - 82 (46 - 51)	103 - 113 (64 - 70)	135 - 145 (84 - 90)	109 - 119 (68 - 74)	69 - 79 (43 - 49)	44 - 52 (27 - 32)	11 - 15 (7 - 10)
3.357	Full throttle	61 - 65 (38 - 41)	97 - 105 (61 - 66)	153 - 163 (95 - 102)	236 - 246 (147 - 153)	232 - 242 (144 - 151)	143 - 153 (89 - 95)	87 - 95 (54 - 59)	43 - 47 (27 - 29)
	Half throttle	41 - 45 (26 - 28)	66 - 74 (41 - 46)	89 - 99 (56 - 62)	117 - 127 (73 - 79)	95 - 105 (59 - 65)	59 - 69 (37 - 43)	38 - 46 (24 - 29)	11 - 15 (7 - 10)

- At half throttle, the accelerator opening is 4/8 of the full opening.

### TOW MODE

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
2.937	Full throttle	70 - 74 (44 - 46)	112 - 120 (70 - 75)	176 - 186 (110 - 116)	249 - 259 (155 - 161)	245 - 255 (152 - 159)	166 - 176 (103 - 110)	100 - 108 (62 - 67)	43 - 47 (27 - 30)
	Half throttle	50 - 54 (31 - 34)	81 - 89 (50 - 55)	113 - 123 (70 - 76)	135 - 145 (84 - 90)	109 - 119 (68 - 74)	69 - 79 (43 - 49)	44 - 52 (27 - 32)	11 - 15 (7 - 10)
3.357	Full throttle	61 - 65 (38 - 41)	97 - 105 (61 - 66)	153 - 163 (95 - 102)	236 - 246 (147 - 153)	232 - 242 (144 - 151)	143 - 153 (89 - 95)	87 - 95 (54 - 59)	43 - 47 (27 - 29)
	Half throttle	46 - 50 (28 - 31)	72 - 80 (45 - 50)	98 - 108 (61 - 67)	117 - 127 (73 - 79)	95 - 105 (59 - 65)	59 - 69 (37 - 43)	38 - 46 (24 - 29)	11 - 15 (7 - 10)

- At half throttle, the accelerator opening is 4/8 of the full opening.

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Vehicle Speed When Performing and Releasing Complete Lock-up

UCS0030P

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
2.937	Closed throttle	74 - 82 (46 - 51)	71 - 79 (45 - 49)
	Half throttle	188 - 196 (117 - 122)	136 - 144 (85 - 90)
3.357	Closed throttle	65 - 73 (41 - 46)	62 - 70 (39 - 44)
	Half throttle	168 - 176 (105 - 110)	118 - 126 (74 - 79)

- At closed throttle, the accelerator opening is less than 1/8 condition.
- At half throttle, the accelerator opening is 4/8 of the full opening.

## Vehicle Speed When Performing and Releasing Slip Lock-up

UCS0030Q

Final gear ratio	Throttle position	Gear position	Vehicle speed km/h (MPH)	
			Slip lock-up "ON"	Slip lock-up "OFF"
2.937	Closed throttle	4th	52 - 60 (33 - 38)	49 - 57 (31 - 36)
		5th	52 - 60 (33 - 38)	49 - 57 (31 - 36)
3.357	Closed throttle	4th	46 - 54 (29 - 34)	43 - 51 (27 - 32)
		5th	46 - 54 (29 - 34)	43 - 51 (27 - 32)

- At closed throttle, the accelerator opening is less than 1/8 condition.

## Stall Speed

UCS0030R

Stall speed	2,500 - 2,800 rpm
-------------	-------------------

## Line Pressure

UCS0030S

Engine speed	Line pressure [kPa (kg/cm <sup>2</sup> , psi)]	
	R position	D position
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

## A/T Fluid Temperature Sensor

UCS0030T

Name	Condition	CONSULT-II "DATA MONITOR" (Approx.) (V)	Resistance (Approx.) (kΩ)
A/T fluid temperature sensor 1	0°C (32°F)	2.2	15
	20°C (68°F)	1.8	6.5
	80°C (176°F)	0.6	0.9
A/T fluid temperature sensor 2	0°C (32°F)	2.2	10
	20°C (68°F)	1.7	4
	80°C (176°F)	0.45	0.5

## Turbine Revolution Sensor

UCS0030U

Name	Condition	Data (Approx.)
Turbine revolution sensor 1	When running at 50 km/h (31 MPH) in 4th speed with the closed throttle position switch "OFF".	1.3 (kHz)
Turbine revolution sensor 2	When moving at 20 km/h (12 MPH) in 1st speed with the closed throttle position switch "OFF".	

## Vehicle Speed Sensor A/T (Revolution Sensor)

UCS0030V

Name	Condition	Data (Approx.)
Revolution sensor	When moving at 20 km/h (12 MPH).	185 (Hz)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Reverse brake

UCS0030W

	Thickness mm (in)	Part number*
Thickness of retaining plates	4.2 (0.165)	31667 90X14
	4.4 (0.173)	31667 90X15
	4.6 (0.181)	31667 90X16
	4.8 (0.189)	31667 90X17
	5.0 (0.197)	31667 90X18
	5.2 (0.205)	31667 90X19

\*: Always check with the Parts Department for the latest parts information.

## Total End Play

UCS0030X

Total end play mm (in)	0.25 - 0.55 (0.0098 - 0.0217)
------------------------	-------------------------------

## BEARING RACE FOR ADJUSTING TOTAL END PLAY

Thickness mm (in)	Part number*
0.8 (0.031)	31435 95X00
1.0 (0.039)	31435 95X01
1.2 (0.047)	31435 95X02
1.4 (0.055)	31435 95X03
1.6 (0.063)	31435 95X04
1.8 (0.071)	31435 95X05

\*: Always check with the Parts Department for the latest parts information.