

LEE

BULLET LUBRICATING AND SIZING KIT

LEE PRECISION, INC.

LEE LUBE AND SIZE KITS

90049	.224	90044	.314	90054	.429
90036	.225	90686	.323	90062	.430
90083	.243	90046	.356	90061	.451
90170	.284	90047	.357	90055	.452
90171	.285	90048	.358	90056	.454
90037	.308	90060	.401	90057	.457
90038	.309	90052	.410		
90039	.311	90053	.427		

Other sizes can be made on a special order basis for \$25.00. Allow 3 weeks for delivery.

LUBRICATING BULLETS

Traditional bullet lubricating methods of placing lube only in the grooves are inferior to the modern method of coating the entire bullet with Lee Liquid Alox. This places the lube where needed, on the surfaces that rub against the bore.

Lead bullets must be lubricated or your gun will be fouled with lead and accuracy will be poor.



- Place bullets in plastic container and dribble some Lee Liquid Alox onto the bullets.



- Gently shake the bullets in an orbital motion to coat the bullets. If they do not coat completely, add a little more lube.



- Spread the bullets onto waxed paper and let dry overnight.


- Load at least one bullet into a case and check to be sure it easily chambers in your gun. If it fits tightly, you must resize the bullets before loading.

Bullets can be sized after they have been lubed. However, for best results, we recommend bullets be relubed after sizing to be sure the sized portion is coated with Lee Liquid Alox.

SIZING BULLETS

All lead bullets must be lubricated, but it is not absolutely necessary to size all cast bullets. Bullets must be sized if they are so large that they expand the case too much to freely enter the gun's chamber. Sizing sometimes helps accuracy by making the bullet uniform in diameter. This insures uniform start pressure and better accuracy. Gas checks can be installed with this tool. Simply place gas check on base of bullet before sizing.

- Screw the sizing die into any standard reloading press. Exact depth is not important.
- Install the bullet punch into the ram. This fits all rams that use standard shell holders.
- Place the red box on top of the sizing die as shown.

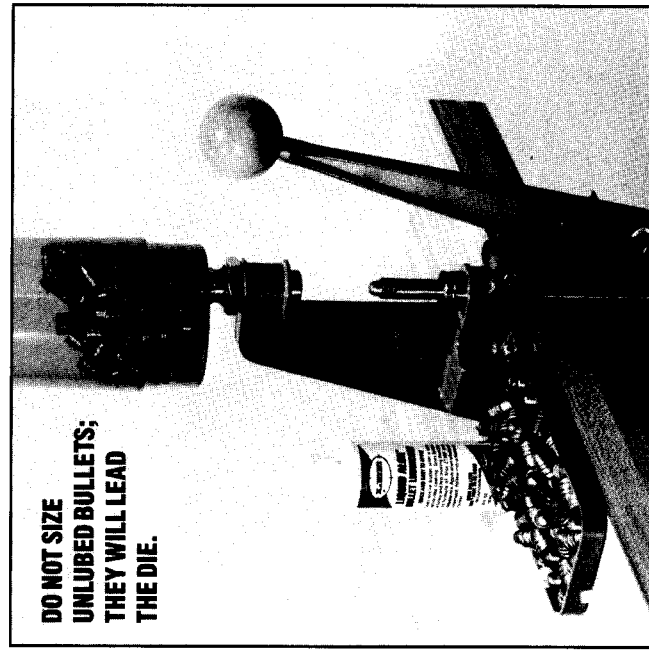

DO NOT SIZE UNLUBED BULLETS; THEY WILL LEAD THE DIE.

Very large and long bullet with a flat nose may stack and push the cover off the box. A washer under one edge of the press base will tilt the press sufficiently to prevent stacking.

SWING
CO.

LEE PRECISION, INC. 4275 HIGHWAY U HARTFORD WI 53027