

553-4001-111

Electronic Private Automatic Branch Exchange and Business
Communication Systems

Meridian MAX

Installation Guide

Product release 8 Standard 1.0 March 1997

NORTEL
NORTHERN TELECOM

Electronic Private Automatic Branch Exchange and Business Communication Systems

Meridian MAX

Installation Guide

Publication number:	553-4001-111
Product release:	8
Document release:	Standard 1.0
Date:	March 1997

© 1997 Northern Telecom
All rights reserved

Printed in the United States of America

Information is subject to change without notice. Northern Telecom reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant.

Nortel, Meridian, Meridian MAX, Meridian MAX - IPE, ACD-MAX, Meridian 1, SL-1, and Meridian Terminal Emulator are trademarks of Northern Telecom. Compaq is a trademark of Compaq Computer Corporation. DEC, VT220, VT420, and VT520 are trademarks of Digital Equipment Corporation. HP, HP Vectra, RuggedWriter, DeskJet, LaserJet, and PaintJet are trademarks of Hewlett-Packard Company. IBM, PC, AT, and IBM PS/2 are trademarks of International Business Machines Incorporated. Windows and MS/DOS are trademarks of Microsoft Corporation. Ven-Tel and the Ven-Tel logo are trademarks of Ven-Tel Incorporated. TEAC is a trademark of TEAC Corporation. UDS and SYSTEM V/68 are trademarks of Motorola Incorporated. UNIX is a registered trademark of AT&T. Reflection is a registered trademark of Walker Richer & Quinn, Inc. Ethernet is a registered trademark of Xerox. Gandalf is a registered trademark of Gandalf Technologies Inc. Racal is a registered trademark of Racal Data Communications Incorporated.

Publication history

March 1997

This document is released as the *Meridian MAX 8 Installation Guide* (NTP 553-4001-111), Standard 1.0.

Contents

About this document xxiii

Terminology xxiii
Conventions xxiii
Sample screens xxv
Reference to other Meridian MAX documents xxv
Reference to NAC documents xxviii
Reference to other ACD documents xxviii

Chapter 1: Introduction 1-1

Hardware platforms 1-1
Before you begin 1-2
Installation responsibilities 1-2
Hardware overview 1-3
 Installing the hardware 1-3
Software overview 1-4
System performance 1-4
System reliability 1-5
 Automatic backup 1-5
 Power failure 1-5
 Mean Time Between Failures 1-6

Chapter 2: Site preparation 2-1

Power requirements 2-1
Environmental requirements 2-4
 Meridian MAX Application Module 2-4
 Meridian MAX IPE/IPE-E module 2-4
X11 software packaging requirements 2-5
Site layout 2-6
 Supervisor location 2-6
 Printer location 2-7

Static electricity precautions	2-7
Multiple Queue Assignment	2-7
Capacities	2-8
Platform capacities	2-8
Hardware-dependent capacities	2-9
Meridian MAX Application Module	2-10
Meridian MAX IPE/IPE-E module	2-13
Calculating calls per hour	2-16
Dialing plans	2-19
Seven-digit CDP dialing plan	2-19
UDP dialing plan	2-20
CDP dialing plan and UDP just for NACD routing tables	2-21

Chapter 3: Hardware installation: Application Module (SNN/SNN-E) 3-1

A word about warranties	3-1
Overview	3-1
Single board computer cards	3-8
MVME167-34 and MVME177-005	3-8
Transition cards	3-11
MVME712M	3-11
NT6D51AA	3-11
MVME332XTS and MVME332XT eight-channel asynchronous boards	3-13
Meridian MAX Application Module	3-17
Installing the Application Module	3-18
Installing the power supply	3-20
Installing the mass storage unit	3-20
Meridian MAX Application Module label	3-21
Input/output panels	3-21
Input/output port assignments	3-23
Cables	3-27
Internal input/output cables	3-27
Interconnect input/output cables	3-30
External input/output cables	3-31
VME multiport cable	3-42
Hardware upgrades and replacements	3-44
Adding MVME332XTS/XT cards to an SNN/SNN-E system	3-45
Replacing the CPU card	3-47
Configuring the CPU card	3-49

Chapter 4: Hardware installation: Intelligent Peripheral Equipment module 4-1

- A word about warranties 4-1
- Overview 4-2
 - Faceplate components 4-7
 - Hardware layout 4-11
- Meridian MAX IPE/IPE-E module—Option 11 4-14
 - Input/output cables 4-14
 - Input/output port assignments 4-18
- Meridian MAX IPE/IPE-E module—Option 21–81 4-20
 - Input/output cables 4-20
 - Cable rerouting for Option 21–81 CE/PE, IPE/IPE-E modules 4-23
 - Input/output port assignments 4-31
 - Cabling Option 11 and Option 21–81 to peripherals through a main distribution frame 4-33
- Cables 4-36
 - External input/output cables 4-36
 - NT1R03AA/NT1R03BA four-port I/O cable 4-41
- Hardware upgrades 4-46
 - Performing the hardware upgrade 4-47
- Hardware replacements 4-52
 - Configuring the SMM167 card 4-53
 - SMM167 card jumper settings 4-56

Chapter 5: Modems 5-1

- Supported modems 5-1
- Other modems 5-3
- Modem cables 5-5
- Limited-distance modems 5-7
 - Gandalf LDS 120E and Develcon DS 511A limited distance 5-7
- Dial-up modems overview 5-14
- Remote diagnostic modems 5-15
 - NetComm SmartModem M7F 5-18
 - Racal VI2422PA 5-20
 - UDS 2440 5-22
 - UDS EC224A/D 2400 5-30
 - U.S. Robotics 28.8 Sportster modem 5-32
- Dial-up supervisor modems 5-35
 - NetComm SmartModem M7F 5-37
 - Racal VI2422PA 5-39
 - UDS 2440 5-41

UDS EC224A/D 2400	5-43
Ven-Tel 2400 Plus II	5-46
Ven-Tel 9600 Plus (with power pack model # L5730-01)	5-50
NAC connectivity	5-54
Limited distance modems for NAC connectivity	5-57
Remote supervisor login and network link	5-57
Dial-up modems for NAC connectivity	5-69
NAC 2 end	5-69
NAC 1 end	5-69
Meridian MAX end	5-69
Remote supervisor login	5-72
Network link	5-76
T1 connection for NAC connectivity	5-89
Direct connection for NAC connectivity	5-90
NAC 2 end	5-90
NAC 1 end	5-90
Meridian MAX end	5-90

Chapter 6: Workstations **6-1**

Overview	6-1
Reflection 4+	6-3
Meridian Terminal Emulator	6-4
MTE features	6-4
MTE installation requirements — DOS environment	6-5
MTE installation requirements — Windows environment	6-5
MTE direct (RS-232) connection	6-6
Installing MTE 5.32 or lower in DOS	6-6
Starting and exiting MTE in DOS	6-8
MTE 5.32 or lower with Windows 3.1	6-8
MTE 5.32 or lower with OS/2 2.1	6-11
MTE LAN connection	6-13
Common LAN functionality	6-18
Keyboard language configuration on PCs	6-21
Code Page 850 configuration	6-21
Video display terminal workstations	6-22
DEC VT520 or 100% compatible	6-23
DEC VT420 or 100% compatible (North American model)	6-30
DEC VT420 or 100% compatible (Worldwide model)	6-32
DEC VT220 or 100% compatible	6-34
HP 700/32 or 100% compatible	6-36

Chapter 7: Printers **7-1**

- Installing a local printer 7-2
- Serial-parallel converter 7-6
- DEC LA195 7-7
- HP RuggedWriter 7-9
- HP LaserJet series II, III, 4, 4 Plus, and 5Si MX 7-11
- HP PaintJet 3630, DeskJet, DeskJet 500, DeskJet 560C, and DeskJet 660C 7-18

Chapter 8: Meridian 1 circuit card configuration **8-1**

- SDI configurations for Meridian MAX 8-1
 - Meridian MAX Application Module 8-1
 - Meridian MAX IPE/IPE-E module 8-3
- Configuring the Meridian 1 NT6D80 MSDL card for use with the High-Speed Link or the Load Management Link 8-5

Chapter 9: Meridian MAX system configuration **9-1**

- Assigning the ports 9-2
 - Fixed port assignments 9-2
 - Required port assignments 9-2
 - Retained port assignments 9-3
 - Port assignment procedure 9-4
- Adjusting the system parameters 9-11
 - System parameters procedure 9-11
- Assigning MSI or MEI links 9-16
 - MSI or MEI link procedure 9-16
- Setting the capacity configurations 9-20
 - Introducing the Capacity Configuration feature 9-20
 - Configuring the system database 9-23
 - Basic Capacity Configuration procedure 9-28
 - Advanced Capacity Configuration procedure 9-38
 - Basic Capacity Configuration measured values 9-48
 - Advanced Capacity Configuration measured values 9-58

Chapter 10: Software installation overview **10-1**

- A word about warranties 10-1
- Meridian MAX 8 platforms 10-2
- Keycodes 10-2
- New software installations 10-4
- Software reinstallations and upgrades 10-4
 - Reinstallations 10-4

x Contents

Upgrades	10-4
Upgrading from Meridian MAX 3 through 7	10-5
Upgrading from ACD-MAX 3 and 4 systems	10-5
Load new software release	10-5
Reentry points	10-6
Installation tapes	10-7
Cleaning the tape drive	10-11
Chapter 11: New software installations	11-1
Customer-installed software	11-2
Factory-installed software	11-20
Chapter 12: Workstation, HSL, and LML configuration	12-1
Workstation configuration	12-2
Configuring the Meridian 1 NT6D80 MSDL card for use with Single Terminal Access	12-9
Configuring the High-Speed Link on the Meridian 1	12-16
Configuring the Load Management Link on the Meridian 1	12-20
Configuring the High-Speed Link on the Option 11	12-25
Configuring the Load Management Link on the Option 11	12-28
Chapter 13: Operating modes	13-1
Changing the default language	13-2
Training mode	13-3
Precutover mode	13-4
Training mode to precutover mode	13-5
Product mode	13-11
Precutover mode to product mode	13-12
Chapter 14: Meridian MAX power-down procedure	14-1
Chapter 15: Meridian MAX installation checklist	15-1
Site preparation	15-1
Hardware installation	15-1
Software installation	15-3
Operating modes	15-3
Chapter 16: Field replaceable parts	16-1

Chapter 17: List of terms **17-1**

Index **18-1**

Figures

Figure 3-1	Meridian MAX Application Module (SNN system)	3-6
Figure 3-2	Meridian MAX Application Module installation	3-7
Figure 3-3	LED locations for the MVME167-34 card and MVME177-005	3-10
Figure 3-4	MVME712M transition card showing jumper switch settings	3-12
Figure 3-5	MVME332XTS/XT eight-channel asynchronous board switch locations	3-14
Figure 3-6	LED locations for MVME332XTS and MVME332XT cards	3-16
Figure 3-7	Generic input/output connector panel (SNN/SNN-E system)	3-22
Figure 3-8	Internal input/output cabling—SNN/SNN-E hardware platform	3-29
Figure 3-9	Cabling arrangement—modem connection cable NT1R03Dx	3-34
Figure 3-10	Cabling arrangement—modem connection cable NT1R03Ex	3-35
Figure 3-11	Cabling arrangement—Meridian MAX cable NT7D47EA used for LAN through Ethernet connection	3-36
Figure 3-12	Cabling arrangement—Meridian MAX cable NT7D58Ax used for High-Speed Link (HSL), and Load Management Link (LML) connections to Meridian 1; to Option 11; and for terminals (with the A0351509 gender changer) and printer connections	3-37
Figure 3-13	Cabling arrangement—Meridian MAX cable NT7D61Ax used for the system console, or an SNN system external modem	3-38
Figure 3-14	Cabling arrangement—Meridian MAX cable NT8D93Ax used for High-Speed Link (HSL) and Load Management Link (LML) connections to Meridian 1	3-39

Figure 3-15	Cabling arrangement—modem connection cable NT7D99AA to dial-up modem or limited-distance modem 3-40
Figure 3-16	External input/output cabling—SNN/SNN-E hardware platform 3-41
Figure 3-17	VME multiport cable 3-43
Figure 3-18	MVME167-34 single-board computer card 3-48
Figure 3-19	MVME177-005 single-board computer card 3-49
Figure 4-1	Meridian MAX IPE/IPE-E module containing a 600 Mbyte tape drive—front view 4-9
Figure 4-2	Meridian MAX IPE module containing a 155 Mbyte cassette tape drive—front view 4-10
Figure 4-3	Meridian MAX IPE/IPE-E installation overview—Option 11 4-12
Figure 4-4	Meridian MAX IPE/IPE-E installation overview—Option 21–81 4-13
Figure 4-5	NT8D11 backplane cable designations (standard configuration) 4-24
Figure 4-6	NT8D11 backplane cable designations (fully expanded configuration) 4-26
Figure 4-7	NT8D37 backplane cable designations (standard configuration) 4-28
Figure 4-8	NT8D37 backplane cable designations (fully expanded configuration) 4-30
Figure 4-9	NT8D11 CE/PE cabinet input/output connector panel 4-34
Figure 4-10	NT8D37 IPE cabinet I/O panels 4-35
Figure 4-11	Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03Dx straight through RS-232 extension cable used between NT1R03AA or NT1R03BA and peripheral devices, HSL port, or LML port 4-38
Figure 4-12	Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03Ex straight through RS-232 extension cable used between NT1R03AA or NT1R03BA and peripheral devices 4-39
Figure 4-13	Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03HF modem cable used between NT1R03AA or NT1R03BA and modems 4-40
Figure 4-14	NT1R03AA four-port I/O cable 4-42
Figure 4-15	NT1R03BA four-port I/O cable 4-44

Figure 4-16	Meridian MAX IPE/IPE-E CPU card	4-49
Figure 4-17	Meridian MAX IPE/IPE-E disk drive card: outside view	4-50
Figure 4-18	Meridian MAX IPE/IPE-E disk drive card: inside view	4-51
Figure 4-19	SMM167 card jumper settings	4-56
Figure 5-1	Cabling arrangement—modem connection cable NT7D99AA for dial-up supervisor, remote supervisor login, and network link	5-5
Figure 5-2	Cabling arrangement—modem connection cable NT7D61Ax for remote diagnostics	5-6
Figure 5-3	Gandalf LDS 120E limited-distance modem hardware configuration (SNN/SNN-E)	5-8
Figure 5-4	Develcon DS 511A limited-distance modem hardware configuration (SNN/SNN-E)	5-9
Figure 5-5	Gandalf LDS 120E limited-distance modem hardware configuration (IPE/IPE-E)	5-10
Figure 5-6	Develcon DS 511A limited-distance modem hardware configuration (IPE/IPE-E)	5-11
Figure 5-7	Connecting the remote diagnostics workstation with a Meridian MAX remote diagnostic modem (SNN/SNN-E)	5-16
Figure 5-8	Connecting the remote dial-up workstation with a Meridian MAX remote diagnostic modem (IPE/IPE-E)	5-17
Figure 5-9	NetComm SmartModem M7F modem switch settings	5-18
Figure 5-10	UDS 2440 modem—front and rear view	5-22
Figure 5-11	UDS EC224A/D 2400 modem—front and rear view	5-30
Figure 5-12	UDS EC224A/D 2400 remote diagnostics modem switch settings	5-31
Figure 5-13	Rear view of the U.S. Robotics 28.8 Sportster modem	5-32
Figure 5-14	U.S. Robotics 28.8 Sportster modem switch settings for programming mode	5-33
Figure 5-15	U.S. Robotics Sportster 28.8 modem switch settings for operating mode	5-33
Figure 5-16	Connecting the remote dial-up workstation with a Meridian MAX dial-up supervisor modem (SNN/SNN-E)	5-36

Figure 5-17	Connecting the remote dial-up workstation with a Meridian MAX dial-up supervisor modem (IPE/IPE-E) 5-36
Figure 5-18	NetComm SmartModem M7F modem switch settings 5-37
Figure 5-19	UDS EC224A/D 2400 modem—front and rear view 5-43
Figure 5-20	UDS EC224A/D 2400 remote dial-up supervisor modem switch settings 5-44
Figure 5-21	Ven-Tel 2400 Plus II modem—front view 5-46
Figure 5-22	Ven-Tel 2400 Plus II modem—rear view 5-46
Figure 5-23	Ven-Tel 2400 Plus II modem—opening the modem 5-46
Figure 5-24	Ven-Tel 2400 Plus II modem—switch locations 5-47
Figure 5-25	Ven-Tel 2400 Plus II remote dial-up supervisor modem switch settings 5-48
Figure 5-26	Ven-Tel 9600 Plus modem—front view 5-50
Figure 5-27	Ven-Tel 9600 Plus modem—rear view 5-50
Figure 5-28	Ven-Tel 9600 Plus modem—opening the modem 5-51
Figure 5-29	Ven-Tel 9600 Plus modem—switch locations and settings 5-51
Figure 5-30	Ven-Tel 9600 Plus remote dial-up supervisor, remote supervisor login, and network link modem switch settings 5-52
Figure 5-31	NAC 2 network connectivity overview 5-55
Figure 5-32	NAC 1 network connectivity overview 5-56
Figure 5-33	NAC 2 Gandalf LDS 120E limited-distance modem hardware configuration for remote supervisor login or network link 5-59
Figure 5-34	NAC 2 Develcon DS 511A limited-distance modem hardware configuration for remote supervisor login or network link 5-60
Figure 5-35	NAC 1 Gandalf LDS 120E limited-distance modem hardware configuration for network link or remote supervisor login 5-61
Figure 5-36	NAC 1 Develcon DS 511A limited-distance modem hardware configuration for network link or remote supervisor login 5-62

Figure 5-37	Cabling arrangement—modem connection cable NT9D8001 5-63
Figure 5-38	Connecting NAC 2 with a Meridian MAX node—limited-distance connection (SNN/SNN-E) 5-67
Figure 5-39	Connecting NAC 1 with a Meridian MAX node—limited-distance connection (SNN/SNN-E) 5-67
Figure 5-40	Connecting the NAC 2 with a Meridian MAX node—limited-distance connection (IPE/IPE-E) 5-68
Figure 5-41	Connecting the NAC 1 with a Meridian MAX node—limited-distance connection (IPE/IPE-E) 5-68
Figure 5-42	Connecting the NAC 2 with a Meridian MAX node—dial-up connection (SNN/SNN-E) 5-70
Figure 5-43	Connecting the NAC 1 with a Meridian MAX node—dial-up connection (SNN/SNN-E) 5-70
Figure 5-44	Connecting the NAC 2 with a Meridian MAX node—dial-up connection (IPE/IPE-E) 5-71
Figure 5-45	Connecting the NAC 1 with a Meridian MAX node—dial-up connection (IPE/IPE-E) 5-71
Figure 5-46	Cabling arrangement—direct connection cable NT9D9007 5-72
Figure 5-47	NetComm SmartModem M7F modem switch settings 5-73
Figure 5-48	Ven-Tel 2400 Plus II remote supervisor login modem switch settings 5-73
Figure 5-49	Ven-Tel 9600 Plus remote supervisor login modem switch settings 5-74
Figure 5-50	UDS EC224A/D 2400 remote supervisor login modem switch settings 5-75
Figure 5-51	U.S. Robotics 28.8 Sportster remote supervisor login modem switch settings 5-76
Figure 5-52	NetComm SmartModem M7F modem switch settings 5-77
Figure 5-53	Ven-Tel 2400 Plus II network link modem switch settings 5-80
Figure 5-54	Ven-Tel 9600 Plus network link modem switch settings 5-83

Figure 5-55	U.S. Robotics 28.8 Sportster network link modem switch settings for programming mode 5-87
Figure 5-56	U.S. Robotics Sportster 28.8 modem switch settings for operating mode 5-88
Figure 5-57	Connecting the NAC 2 to a Meridian MAX node—direct connection (SNN/SNN-E) 5-91
Figure 5-58	Connecting the NAC 1 to a Meridian MAX node—direct connection (SNN/SNN-E) 5-91
Figure 5-59	Connecting the NAC 2 to a Meridian MAX node—direct connection (IPE/IPE-E) 5-92
Figure 5-60	Connecting the NAC 1 to a Meridian MAX node—direct connection (IPE/IPE-E) 5-92
Figure 6-1	MTE 5.32 set-up screen—LAN connection – general 6-9
Figure 6-2	MTE 5.32 set-up screen—LAN connection – advanced 6-10
Figure 6-3	VT520 terminal main set-up window 6-23
Figure 6-4	VT520 terminal - sample feature pop-up window 6-24
Figure 6-5	Port selection for VT520 6-29
Figure 6-6	DEC VT420 workstation (North American model) Version 1.3 or greater set-up 6-31
Figure 6-7	DEC VT420 workstation (Worldwide model) set-up 6-33
Figure 6-8	DEC VT220 workstation set-up 6-35
Figure 7-1	Meridian Terminal Emulator set-up screen 7-4
Figure 7-2	Local printer control window 7-5
Figure 7-3	Serial-parallel converter DIP switch settings 7-6
Figure 7-4	DEC LA195 DIP switch settings 7-8
Figure 7-5	RuggedWriter DIP switch settings 7-10
Figure 7-6	HP PaintJet 3630, DeskJet, DeskJet 500, DeskJet 560C, and DeskJet 660C DIP switch settings 7-18
Figure 9-1	Meridian MAX Hardware and System Parameters 9-4
Figure 9-2	Meridian MAX Communication Port Assignment 9-5
Figure 9-3	Device options on the Meridian MAX Communication Port Assignment screen 9-8
Figure 9-4	Meridian MAX Hardware and System Parameters 9-11

Figure 9-5	Meridian MAX System Parameters	9-12
Figure 9-6	Meridian MAX Hardware and System Parameters	9-16
Figure 9-7	Meridian MAX External Interface Configuration	9-17
Figure 9-8	Meridian MAX Hardware and System Parameters	9-28
Figure 9-9	Basic Capacity Configuration	9-29
Figure 9-10	Advanced Capacity Configuration	9-39
Figure 10-1	Inserting a cassette into the 600 Mbyte tape drive of a Meridian MAX 6 or 7 IPE, Meridian MAX 8 SNN-E, or any Meridian MAX SNN	10-9
Figure 10-2	Inserting a cassette into the 600 Mbyte tape drive of a Meridian MAX IPE/IPE-E	8 10-10
Figure 10-3	Inserting a cassette into the 155 Mbyte tape drive of a Meridian MAX IPE	10-11
Figure 11-1	Maintenance and Administration menu—system running	11-23
Figure 11-2	Maintenance and Administration menu—system shutdown	11-24
Figure 11-3	Meridian MAX Options screen	11-25
Figure 11-4	View/Modify Meridian MAX Options	11-26
Figure 11-5	Modify Customer-Controlled Options screen	11-27
Figure 11-6	Restart and Power Down Utilities	11-28
Figure 12-1	Terminal setup screen	12-6
Figure 13-1	Meridian MAX Training Mode menu	13-3
Figure 13-2	Meridian MAX Training Mode menu	13-6
Figure 13-3	Meridian MAX Pre-Cutover Mode menu	13-11
Figure 13-4	Meridian MAX Pre-Cutover Mode menu	13-13
Figure 13-5	Alter/View Meridian MAX IPE/IPE-Enhanced Module Information screen	13-14
Figure 13-6	Identifying the Meridian 1 option type	13-15
Figure 13-7	Identifying the starting slot location	13-16

Tables

Table 1-1	Meridian MAX 8 platform compositions	1-1
Table 1-2	Mean Time Between Failures (MTBF) for Meridian MAX Application Module (at 405C)	1-6
Table 1-3	Mean Time Between Failures (MTBF) for Meridian MAX IPE/IPE-E module	1-7
Table 2-1	Meridian MAX power requirements	2-1

xviii Contents

Table 2-2	Meridian MAX hardware platform maximums	2-8
Table 2-3	Meridian MAX 8 hardware-dependent ports	2-9
Table 2-4	SNN/SNN-E peripheral limits	2-11
Table 2-5	Meridian MAX IPE/IPE-E hardware-dependent capacities	2-14
Table 2-6	IPE/IPE-E peripheral limits	2-14
Table 2-7	Maximum sustainable call rate at full load (with shift change)	2-17
Table 2-8	Maximum sustainable call rate at full load (without shift change)	2-18
Table 3-1	Meridian MAX Application Module installation equipment and material list	3-2
Table 3-2	MVME332XTS/XT eight-channel asynchronous board's eight-switch bank settings	3-13
Table 3-3	Communication port assignment sheet	3-25
Table 3-4	Internal input/output cables	3-27
Table 3-5	Interconnect input/output cables	3-30
Table 3-6	External input/output cables	3-31
Table 3-7	VME multiport cable wiring	3-42
Table 3-8	MVME332XTS/XT card slot placement	3-46
Table 4-1	Meridian MAX IPE/IPE-E installation equipment and material list	4-2
Table 4-2	Option 11 peripheral cable connector assignment sheet (main cabinet)	4-15
Table 4-3	Option 11 peripheral cable connector assignment sheet (expansion cabinet)	4-17
Table 4-4	Option 11 communication port assignment sheet	4-19
Table 4-5	CE/PE cabinet peripheral cable connector assignment sheet	4-21
Table 4-6	IPE cabinet peripheral cable connector assignment sheet	4-22
Table 4-7	NT8D11 cable connections (standard configuration)	4-24
Table 4-8	NT8D11 cable connections (fully expanded configuration)	4-26
Table 4-9	NT8D37 cable connections (standard configuration)	4-27
Table 4-10	NT8D37 cable connections (fully expanded configuration)	4-29

Table 4-11	Option 21–81 communication port assignment sheet 4-32
Table 4-12	External input/output cables 4-36
Table 4-13	NT1R03AA 50-pin four-port cable wiring 4-43
Table 4-14	NT1R03BA 50-pin four-port cable wiring 4-45
Table 5-1	Modems—DB-25 serial port genders 5-1
Table 5-2	Modems and functions 5-2
Table 5-3	Supported Hayes modem commands 5-3
Table 5-4	Supported modem responses 5-4
Table 5-5	LDS 120E external DIP switch settings for point-to-point, full-duplex 5-13
Table 5-6	LDS 120E internal DIP switch settings for point-to-point, full-duplex 5-13
Table 5-7	LDS 120E external DIP switch settings for point-to-point, full-duplex 5-64
Table 5-8	LDS 120E internal DIP switch settings for point-to-point, full-duplex 5-65
Table 6-1	Workstations—serial port genders 6-1
Table 6-2	Ethernet transceivers 6-13
Table 6-3	Navigating the set-up windows 6-24
Table 6-4	VT520 set-up values 6-25
Table 7-1	DEC LA195 system set-up 7-7
Table 7-2	RuggedWriter option switch settings 7-9
Table 7-3	LaserJet series II printer option settings 7-12
Table 7-4	LaserJet series III printer option settings 7-13
Table 7-5	LaserJet series 4 printer option settings 7-14
Table 7-6	LaserJet series 4 Plus printer option settings 7-15
Table 7-7	LaserJet series 5Si MX printer option settings 7-17
Table 9-1	Meridian MAX ports 9-2
Table 9-2	Required ports assignments 9-3
Table 9-3	Basic Capacity Configuration worksheet 9-25
Table 9-4	Advanced Capacity Configuration worksheet 9-26
Table 9-5	Basic Capacity Configuration measured value field descriptions 9-48
Table 9-6	Advanced Capacity Configuration measured value field descriptions 9-58
Table 10-1	Meridian MAX 8 platform compositions 10-2
Table 10-2	Tape names 10-7
Table 12-1	Configuration procedures 12-1
Table 13-1	Operating modes procedures 13-1

xx Contents

Table 16-1	Recommended spare parts for Meridian MAX Application Module	16-1
Table 16-2	Recommended spare parts for Meridian MAX IPE/IPE-E module	16-2
Table 16-3	Miscellaneous spare parts for Meridian MAX	16-3
Table 16-4	Interconnect cables and part numbers for Application Module (AM)	16-3
Table 16-5	External cables and part numbers for Application Module (AM)	16-4
Table 16-6	External cables and part numbers for IPE/IPE-E	16-6

Procedures

Procedure 3-1	To install the Application Module	3-18
Procedure 3-2	To install the power supply	3-20
Procedure 3-3	To install the MSU	3-20
Procedure 3-4	To add MVME332XTS/XT cards to an SNN/SNN-E system	3-45
Procedure 3-5	To replace the CPU card	3-47
Procedure 3-6	To replace the CPU card	3-49
Procedure 4-1	To perform the hardware upgrade	4-47
Procedure 4-2	To perform the hardware replacement	4-52
Procedure 4-3	To configure the SMM167 card	4-53
Procedure 5-1	Configuring the NetComm SmartModem M7F for remote diagnostics	5-18
Procedure 5-2	Configuring the Racal VI2422PA modem for remote diagnostics	5-20
Procedure 5-3	Configuring the UDS 2440 modem through the front panel for remote diagnostics	5-23
Procedure 5-4	Alternative procedure for configuring the UDS 2440 modem through a workstation for remote diagnostics	5-28
Procedure 5-5	Configuring the U.S. Robotics 28.8 Sportster modem's remote end for a remote dial-up supervisor	5-33
Procedure 5-6	Configuring the NetComm SmartModem M7F for dial-up supervisor—remote end	5-38
Procedure 5-7	Configuring the Racal VI2422PA dial-up supervisor modem—remote end	5-40
Procedure 5-8	Configuring the UDS 2440 modem for dial-up supervisor—remote end	5-41

Procedure 5-9	Configuring the UDS EC224A/D 2400 dial-up supervisor modem—remote end 5-44
Procedure 5-10	Configuring the Ven-Tel 2400 Plus II dial-up supervisor modem—remote end 5-48
Procedure 5-11	Configuring the Ven-Tel 9600 Plus dial-up supervisor modem—remote end 5-52
Procedure 5-12	Configuring the NetComm SmartModem M7F for network link 5-77
Procedure 5-13	Configuring the UDS 2440 modem for network link 5-79
Procedure 5-14	Configuring the Ven-Tel 2400 Plus II modem for network link 5-80
Procedure 5-15	Configuring the Ven-Tel 9600 Plus modem for network link 5-83
Procedure 5-16	Configuring the Racal VI2422PA modem for network link 5-85
Procedure 5-17	Configuring the U.S. Robotics 28.8 Sportster modem for network link 5-87
Procedure 6-1	To install MTE in a DOS environment 6-6
Procedure 6-2	To start MTE 6-8
Procedure 6-3	To exit from MTE 6-8
Procedure 6-4	To set up a PC for using MTE 5.32 or lower in a LAN environment 6-16
Procedure 6-5	To configure Meridian MAX in a LAN environment 6-17
Procedure 6-6	To increase the number of packet buffers 6-18
Procedure 6-7	To set up a VT520 or 100%-compatible terminal 6-23
Procedure 6-8	To set up a VT420 or 100%-compatible terminal (North American model) 6-30
Procedure 6-9	To set up a VT420 or 100%-compatible terminal (Worldwide model) 6-32
Procedure 6-10	To set up a VT220 or 100%-compatible terminal 6-34
Procedure 6-11	To set up an HP 700/32 workstation 6-36
Procedure 7-1	To install a local printer 7-3
Procedure 7-2	To set up local printing with MTE 5.32 or lower 7-3
Procedure 8-1	To configure the Meridian 1 NT6D80 MSDL card for use with the High-Speed Link or the Load Management Link 8-5

xxii Contents

Procedure 9-1	To assign Meridian MAX ports	9-4
Procedure 9-2	To assign system parameters	9-11
Procedure 9-3	To assign the MSI or MEI links	9-16
Procedure 9-4	To assign the basic capacity configurations	9-28
Procedure 9-5	To assign the advanced capacity configurations	9-38
Procedure 11-1	New installation of the Meridian MAX 8 customer-installed software	11-2
Procedure 11-2	New installation of the Meridian MAX 8 factory-installed software	11-20
Procedure 12-1	To perform the hardware upgrade	12-2
Procedure 12-2	To configure the Meridian 1 NT6D80 MSDL card for use with Single Terminal Access	12-9
Procedure 12-3	To configure the High-Speed Link on the Meridian 1	12-16
Procedure 12-4	To configure the Load Management Link on the Meridian 1	12-20
Procedure 12-5	To configure the High-Speed Link on the Option 11	12-25
Procedure 12-6	To configure the Load Management Link on the Option 11	12-28
Procedure 13-1	To change the default language	13-2
Procedure 13-2	To switch from training mode to precutover mode	13-5
Procedure 13-3	To switch from precutover mode to product mode	13-12
Procedure 14-1	Powering down the system	14-1

About this document

This document details the steps and procedures required to successfully install the hardware and software for your Meridian MAX 8.

Terminology

The term “Meridian 1” is used throughout this document, and refers to Meridian 1 and Meridian 1-ready systems, such as Meridian 1 SL-1 style cabinets that have been upgraded.

Conventions

The following conventions are used throughout the Meridian MAX 8 document set.

CALLS ANSWD

Words in this typeface represent text on your screen or printed reports.

{RETURN}

Words or characters within braces and capitalized represent a specific key on your keyboard. When two or more such keys appear side by side, all the keys must be pressed simultaneously to achieve the desired effect.

Example

Press **{RETURN}** or **{CONTROL}{R}** to begin the procedure.

Note: **{RETURN}** and **{ENTER}** are interchangeable.

[Commands]

Words within square brackets represent the generic name attached to a specific function key.

For more information on the function key capabilities, refer to the *Meridian MAX 8 Supervisor's User Guide* (P0853407), "Understanding the interface" chapter, "Function keys" section.

Example

[Commands]

Activity Code Report

Bold text represents specific text you must type on your keyboard. You must always press **{ENTER}** after you have typed and confirmed the text so that the system can recognize that you are ready to continue.

Example

Enter **10**, followed by **{RETURN}**.

"Graphic Format Definition"

Italicized text within quotation marks represents a specific choice you must make from a menu.

Example

Choose *"Graphic Format Definition"* from the Report Definition submenu.

Graph Title

Italicized text represents the name of a specific field on a screen or report.

Example

Move the cursor to the *Display Name* field.

"Configuration Control"

Text in quotation marks represents references to other areas of a document.

Example

Refer to the "Profile Maintenance" chapter.

Meridian MAX 8 Supervisor's User Guide

Italicized text represents references to other documents.

Example

Refer to the *Meridian MAX 8 Supervisor's User Guide*.

Sample screens

All screen depictions related to the Meridian Terminal Emulator (MTE) are based on a PC running the MTE software. All other screen depictions assume that you are using the DEC VT420 or a compatible workstation. If you are using a different type of workstation, there may be a difference between the function key menu as it appears on your screen and the function key menu as it appears in this document. This is due to the different keyboards that can be used with the workstation. Please refer to the *Meridian MAX 8 Supervisor's User Guide* (P0853407), "Understanding the interface" chapter, for more information.

Reference to other Meridian MAX documents

Additional information about Meridian MAX is contained in the following Nortel (Northern Telecom) documents:

- P0853407 *Meridian MAX 8 Supervisor's User Guide*
- 553-4001-210 *Meridian MAX 8 Upgrade Guide*
 (P0853412)
- 553-4001-811 *Meridian MAX 8 Maintenance and*
 Diagnostics Guide (P0853402)
- P0853414 *Meridian MAX 8 MSI/MEI Protocol*
 Reference Guide
- P0853413 *MTE 8 User Guide*
- P0815598 *Meridian MAX 7 Supervisor's User Guide*
- 553-4001-811 *Meridian MAX 7 Maintenance and*
 Diagnostics Guide (P0815589)
- 553-4001-911 *Meridian MAX 7 Overview* (P0815591)
- 553-4001-210 *Meridian MAX 7 Installation Upgrade*
 Guide for Meridian MAX 3 through 6
 Systems (P0815593)
- P0821303 *MTE 7 User Guide*

- P0815602 *MTE 6 User Guide*
- P0802089 *Meridian MAX 6 Supervisor's User Guide*
- P0802091 *Meridian MAX 6 Supervisor's Reference Guide*
- 553-4001-811 *Meridian MAX 6 Maintenance and Diagnostics Guide (P0802081)*
- 553-4001-911 *Meridian MAX 6 Overview (P0802083)*
- 553-4001-210 *Meridian MAX 6 Installation Upgrade Guide for Meridian MAX 3, 4, 4.6 and 5 Systems (P0802085)*
- 553-4001-212 *Meridian MAX 6 Platform Upgrade Guide for ACD-MAX 3, 4 and ACD-D Systems (P0802087)*
- P0743664 *Meridian MAX 5 Supervisor's User Guide*
- P0743656 *Meridian MAX 5 Supervisor's Reference Guide*
- 553-4001-111 *Meridian MAX 5 Installation Guide (P0743645)*
- 553-4001-811 *Meridian MAX 5 Maintenance and Diagnostics Guide (P0743647)*
- 553-4001-911 *Meridian MAX 5 Overview (P0743643)*
- 553-4001-210 *Meridian MAX 5 Installation Upgrade Guide for Meridian MAX 3, 4 and 4.6 Systems (P0743683)*
- 553-4001-212 *Meridian MAX 5 Platform Upgrade Guide for ACD-MAX 3, 4 and ACD-D Systems (P0743687)*
- P0741145 *Meridian MAX - IPE 4.6 Supervisor's User Guide*
- 553-4001-024 *Meridian MAX - IPE 4.6 Master Index*
- 553-4001-121 *Meridian MAX - IPE 4.6 Installation*
- 553-4001-821 *Meridian MAX - IPE 4.6 Maintenance and Diagnostics*
- 553-4001-921 *Meridian MAX - IPE 4.6 Overview*

- 553-4001-004 *Meridian MAX 4 Master Index*
- 553-4001-111 *Meridian MAX 4 Installation*
- 553-4001-811 *Meridian MAX 4 Maintenance and Diagnostics*
- 553-4001-911 *Meridian MAX 4 Overview*

For more information on the hardware and software that operate in conjunction with Meridian MAX - IPE, refer to the following Nortel documents:

- P0735303 *Option 11—X11 Software Guide, Including Supplementary Features*
- 553-3011-200 *Option 11 General Installation and Planning Guide — Read Me First*
- 553-3011-210 *Option 11 Installation Guide*
- 553-3011-300 *Option 11 Administration Guide*
- 553-3001-200 *System Option 21, 51, 61, 71— System Installation Procedures*
- 553-3001-500 *System Option 21, 51, 61, 71 General Maintenance*
- 553-3001-305 *X11 Features and Services **
- 553-3001-400 *X11 Input/Output Guide*
- 553-2311-105A2 *Appendix to Features and Services for Generic X11 Supplementary Features **
- 553-2311-311 *X11 Data Administration Input/Output Guide Including Supplementary Features **
- 553-2301-511 *X11 Maintenance Input/Output Guide Including Supplementary Features **

(* document also used for Generic X11 International software)

Reference to NAC documents

Additional information about NAC is contained in the following Nortel documents:

- P0724352 *NAC 2 Supervisor's User Guide*
- 553-4011-110 *NAC 2 Installation Guide (P0724340)*
- 553-4011-510 *NAC 2 System Administration and Maintenance Guide (P0724342)*
- 553-4011-100 *NAC 1 Installation*
- 553-4011-500 *NAC 1 Operations*
- 553-4011-800 *NAC 1 System Messages*
- P0743022 *NAC 1 Supervisor's User Guide*

Reference to other ACD documents

Other Nortel ACD documents associated with Meridian MAX are listed below:

- 553-2671-100 *ACD Basic Features Description (Package A)*
- 553-2671-101 *ACD Advanced Features Description (Package B)*
- 553-2671-102 *Management Reports Description (Package C1)*
- 553-2671-103 *ACD Load Management Description (Package C2)*
- 553-2671-104 *ACD-D General Description (Section 3 only)*

The following Nortel documents refer to Customer Controlled Routing (CCR):

- 553-3201-110 *Application Module Overview Guide*
- 553-3201-200 *Application Equipment Module Installation Guide*
- 553-3201-210 *Application Module Installation and Upgrade Guide*
- P0729367 *Customer Controlled Routing (CCR) User Guide*

Chapter 1: Introduction

Hardware platforms

Meridian MAX 8 runs on four hardware platforms. The type of hardware platform which you use determines the features and functionality available to you. Features are common to all hardware platforms unless otherwise specified. Table 1-1 lists the available hardware platforms and their hardware composition. Refer to the “Field replaceable parts” chapter for applicable part numbers.

Table 1-1 Meridian MAX 8 platform compositions				
System type		CPU	Mass Storage Unit (MSU)	
Abbreviation	Module type	Card type	Hard drive	Cassette drive
SNN	Single	MVME167-34	1 Gbyte	600 Mbyte
SNN-E	Single	MVME177-005	2 Gbyte	600 Mbyte
IPE	IPE	SMM167	180 Mbyte or 240 Mbyte*	155 Mbyte or 600 Mbyte
IPE-E	IPE	SMM167	1 Gbyte	600 Mbyte
* The 240 Mbyte hard disk is configured and recognized by the software as a 180 Mbyte hard disk.				

Before you begin

This document describes the procedures to install the Meridian MAX hardware and software. These procedures should only be carried out by trained personnel.

Note: Not all products mentioned in this document are available worldwide. Contact your Meridian MAX service representative for more information.

Installation responsibilities

The following installation procedures are performed by your staff or the Meridian 1 distributor:

- Obtain the hardware and software required for this installation.
- Install the Meridian 1 column (if applicable).
- Install the Meridian 1 switch (if applicable).
- Install the Meridian MAX Application Equipment Module(s) (if applicable).
- Install the Meridian MAX hardware.
- Install and connect the peripheral equipment (printers, workstations, and modems).
- Install the operating system and Meridian MAX application software.
- Configure the Meridian MAX.
- Start up the system.
- Set up the High Speed Link and the Load Management Link (if applicable) between the Meridian MAX and the Meridian 1.
- Connect the Meridian MAX to the LAN, if required.
- Establish all other connections to the Meridian MAX based on the feature options which have been purchased.

Hardware overview

For an Application Equipment Module (AEM) installation, please read the following chapters in the *Application Equipment Module Installation Guide* (NTP 553-3201-200):

- “Overview”
- “Installing a Stand-alone AEM”
- “Adding an AEM to a Column”

For an IPE/IPE-E installation, please read the following chapters in the *System Option 21, 51, 61, 71, 81 Installation and Maintenance Guide* (P0736432):

- “System overview”
- “System installation”

The following information should be obtained from the “Hardware installation: Application Module (SNN/SNN-E)” or “Hardware installation: IPE/IPE-E module” chapters of this document depending on your hardware platform:

- VME card switch settings
- the internal input/output cables
- the external input/output cables
- MVME332XTS/XT serial input/output port upgrade (AEM installation only)

The installation and connection of peripheral equipment can be obtained from the “Modems,” “Workstations,” “Printers,” and “Meridian 1 circuit card configuration” chapters of this document.

Installing the hardware

The following is a list of steps to install the Meridian MAX hardware:

- 1 Decide upon the layout of the peripheral equipment to be attached to the Meridian MAX, bearing in mind the environmental and power requirements.
- 2 Assess the need for self-powered limited-distance modems that permit a distance between a peripheral and the Meridian MAX of more than 15 meters (50 feet).

- 3 Install the Meridian MAX Application Module or Meridian MAX IPE/IPE-E module, cards, power supply, and disk/tape assemblies.
- 4 Install the peripherals, connecting the appropriate equipment with the designated cables.

Software overview

The following is a list of the steps to install the Meridian MAX software:

- 1 Install the operating system and the Meridian MAX application software (customer-installed software sites).
- 2 Start up the Meridian MAX in training mode.
- 3 Train all users with the training mode.
- 4 Switch from training mode to precutover mode.
- 5 Set up the database while in precutover mode.
- 6 Switch from precutover mode to product mode.
- 7 Configure and enable the High-Speed Link (HSL).

The “Meridian MAX installation checklist” chapter lists the steps to be followed while installing Meridian MAX 8. Each step should be performed only if all of the following conditions are met:

- This document was read and understood by the qualified personnel using the checklist.
- All preceding steps were completed (where applicable) and were performed correctly.

To update certain software options on your Meridian MAX, refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration: system running” or “Maintenance and administration: system shutdown” chapter, “View/Modify Meridian MAX Options” section, for more information.

System performance

Meridian MAX is a message-driven system. Messages received from the Meridian 1 proliferate into many inter-task messages which are used to drive the Meridian MAX.

The real-time performance of the system depends largely on two factors: the Message Arrival Rate (MAR) and the Message Service Rate (MSR). The MAR and MSR are affected by several operational factors.

See Appendix 2 of *Automatic Call Distribution with an Auxiliary Data System—System Performance and Engineering Information* (NTP 553-2671-151) for a discussion of MAR and MSR. Refer to the “Site preparation” chapter of this document for a detailed discussion of Meridian MAX performance capacities.

System reliability

Meridian MAX 8 provides automatic backup and protection against the loss of data due to a power failure.

Automatic backup

Data used by the Meridian MAX’s displays and reports is stored for historical purposes. This historical data is backed up through the Meridian MAX automatic backup facility to minimize the loss of recent changes to the system’s database in the event of a disk failure.

Database files are automatically backed up to tape every midnight. Consequently, a tape must always be loaded in the tape drive. Avoid using the same tape through two consecutive backups, as the new backup overwrites the previous one. For this reason, several backup tapes should be used and rotated daily.

For more information on the Meridian MAX’s capacity to store data, refer to the “Meridian MAX system configuration” chapter.

Power failure

If a power failure occurs, Meridian MAX automatically reboots and initializes the application software as soon as power is reapplied.

If you have the DC version of the Meridian MAX, you may have also acquired the battery backup option. This option allows you to connect your Meridian MAX to a battery. In the event of a power failure, such a system can be brought down safely before the battery has discharged beyond its operable limit. The AC version of the Meridian MAX does not have this option.

If an Uninterrupted Power Supply (UPS) is being used, in the event of a power failure, such a system should be backed up manually, then brought down safely before the battery has discharged beyond its operable limit. If the system is not backed up before the battery has discharged beyond its operable limit, your data for that day is lost.

Mean Time Between Failures

The Mean Time Between Failures (MTBF) value calculated for a 16-port Meridian MAX Application Module is 10 500 hours at 40°C (104°F).

Table 1-2 lists the major components of the Meridian MAX Application Module and their MTBF values.

Table 1-2 Mean Time Between Failures (MTBF) for Meridian MAX Application Module (at 40°C)	
Hardware	MTBF (hours)
Motorola MVME167 single board computer (SNN only)	83 500
Motorola MVME177 single board computer (SNN-E only)	> 83 500
Motorola MVME712M transition board	300 000
Motorola MVME332XTS Intelligent Serial Interface card	83 500
Motorola MVME332XT Intelligent Serial Interface card	83 500
Farnell NF350 (AC) power supply	72 000
Farnell ND300 (DC) power supply	72 000
Motorola MVME867B Seagate ST31230N 1 Gbyte hard disk drive (SNN only)	800 000
Motorola MVME867 Seagate ST11200N 1 Gbyte hard disk drive (SNN only)	200 000
Motorola MVME868KA-002 Seagate ST32430N 2 Gbyte hard disk drive (SNN-E only)	800 000
Motorola MVME868KB-002 Seagate ST32171N 2 Gbyte hard disk drive (SNN-E only)	800 000
Motorola NTAM-TK600 TEAC MT-2ST/F50B-000 600 Mbyte cassette drive (at 15 minutes per 8-hour period)	75 000

The MTBF value calculated for the Meridian MAX IPE/IPE-E module is 35 800 hours. Table 1-3 lists the major components of the Meridian MAX IPE/IPE-E module and their MTBF values.

Table 1-3 Mean Time Between Failures (MTBF) for Meridian MAX IPE/IPE-E module	
Hardware	MTBF (hours)
Meridian MAX IPE/IPE-E system	35 800
Motorola SMM167 single-board computer	83 500
Motorola 01-W1512BO2I Seagate ST31055N 1 Gbyte hard disk drive (Option 11) Motorola 01-W1512B1OI Seagate ST31055N 1 Gbyte hard disk drive (Option 21-81)	800 000
Motorola MVME867B Seagate ST31230N 1 Gbyte hard disk drive	800 000
Motorola NTAM-DK240 Fujitsu M2614 M2637S 240 Mbyte hard disk drive	130 000
Motorola NTAM-DK180 Seagate ST1201N 180 Mbyte hard disk drive	130 000
Motorola NTAM-TK600 TEAC MT-2ST/F50B-000 600 Mbyte cassette drive (at 15 minutes per 8-hour period)	75 000
Motorola MVME855 TEAC MT-2ST/N50 155 Mbyte cassette drive (at 19 minutes per 8-hour period)	75 000
Power converter circuit board	146 000
CPU adapter circuit board	146 000

Chapter 2: Site preparation

Power requirements

Table 2-1 lists the power requirements for all of the hardware components used by the Meridian MAX system. Ensure that your site can provide the needed power to run all of the equipment you require.

Table 2-1 Meridian MAX power requirements			
Equipment	Voltage	Frequency	Power
Meridian MAX Application Module - single (AC)	220–240 VAC	50–60 Hz	142 W
Meridian MAX Application Module - single (DC)	–48 V	n/a	142 W
Meridian MAX IPE/ IPE-E (DC)	+5 and –48 V	N/A	142 W
DEC VT520 or 100% compatible terminal	100–240 VAC	47–63 Hz	15 W
—continued—			

2-2 Site preparation

Table 2-1 (continued) Meridian MAX power requirements			
Equipment	Voltage	Frequency	Power
DEC VT420 or 100%-compatible terminal (North American or Worldwide models)	100–240 VAC	50–60 Hz	35 W
DEC VT220 or 100%-compatible terminal	100–240 VAC	50–60 Hz	35 W
Gandalf LDS 120E	110–120 VAC	60 Hz	5 W
Develcon DS511A	115 VAC	60 Hz	2 W
NetComm SmartModem M7F	15 VAC	50-60 Hz	5 W
UDS 2440 modem	115 VAC	60 Hz	14 W
U.S. Robotics Sportster 28,800 Data/Fax modem	120 VAC	60 Hz	17 W
Ven-Tel 2400 Plus II and 9600 Plus II modems	90–130 VAC	50–60 Hz	10 W
Racal-Vadic VI2422PA modem	240, 220, or 115 V	47–63 Hz	7 W
Rugged Writer printer	100, 120, 220, 240 VAC (+/–10%) (user-selectable)	47.5–63 Hz	20 W Idle max. 80 W Printing max.
LaserJet II, LaserJet III, LaserJet 4, and LaserJet 5Si MX printers	100, 115, 220, 240 VAC (+/–10%) (user-selectable)	48–62 Hz	170 W (115 V) Idle max. 870 W (115 V) Printing max.
LaserJet 4 Plus	100–127 VAC or 220–240 VAC	48–62 Hz	300 W
—continued—			

Table 2-1 (continued) Meridian MAX power requirements			
Equipment	Voltage	Frequency	Power
PaintJet 3630 printer	100, 120, 220, 240 VAC (+/-10%) (user-selectable)	48–66 Hz	20 W
DeskJet printer	100, 120, 220, 240 VAC (+/-10%) (user-selectable)	47.5–63 Hz	8 W (120 V) Idle max. 25 W (120 V) Printing max.
DeskJet 500 printer	120 VAC	50–60 Hz	25 W
DeskJet 560C printer	100, 120, 220, 240 VAC (+/-10%) (user-selectable)	50–60 Hz	25 W
DeskJet 660C printer	100, 120, 127, 220, 230, 240 VAC (+/-10%) (user-selectable)	50–60 Hz	12 W
DEC LA195 (Epson-mode only)	95–132 VAC	47–63 Hz	33 W
—end—			

Environmental requirements

Ensure that your site can maintain the required environmental conditions for the Meridian MAX hardware before beginning the installation.

Note: At all times, the front and back panels of the Application Equipment Module (AEM) and the Meridian 1 should be closed and latched. This ensures that the temperature within the Meridian column remains reasonably constant and within the operating temperatures of the equipment.

Meridian MAX Application Module

The following list details the environmental requirements for your Meridian MAX hardware:

- operating temperature between 10°C–35°C (50°F–104°F)
- non-operating temperature between –10°C–60°C (14°F–140°F)
- changes in temperature less than 20°C/hour (68°F/hour)
- operating humidity between 20%–80% (noncondensing)
- nonoperating humidity between 20%–80% (noncondensing)
- operating altitude between 0–3.24 km (0–10 000 ft)

Meridian MAX IPE/IPE-E module

The environmental requirements for the Meridian MAX IPE/IPE-E hardware are

- operating temperature between 10°C–35°C (50°F–95°F)
- non-operating temperature between –20°C–70°C (–4°F–158°F)
- changes in temperature less than 20°C/hour (68°F/hour)
- operating humidity between 20%–80% (noncondensing)
- nonoperating humidity between 20%–90% (noncondensing)
- operating altitude between 0–3.24 km (0–10 000 ft)
- nonoperating altitude between 0–9.14 km (0–30 000 ft)

To use the HP LaserJet II printer, the environmental range must be between 10°C–32.5°C (50°F–90.5°F) with a maximum altitude of 2.6 km (8200 ft).

X11 software packaging requirements

The following options are required for use with Meridian MAX software:

- Basic ACD Features (Package A) Options 40, 45, 83
- Advanced ACD Features (Package B) Options 41, 98, 116
- ACD Reports (Package C1) Option 42
- ACD Load Management (Package C2) Option 43
- ACD Link (MAX/ACD-D) Options 50, 51
- ACD Activity Code Entry Option 155
- AUXS Security Option 114
- ACD Timed Overflow Option 111
- DN Expansion Option 150

MQA is required if the following options are on your Meridian 1:

- Multiple Queue Assignment (MQA) Option 297
- Meridian Modular Sets Option 170
- Digital Sets Option 88
- Agent Priority Option 116
(if agents are allowed to enter their priorities at the set)
- Phantom TNs Option 254
(if automatic forwarding of Agent IDN numbers)

NACD MIS is required if the following options are equipped on your Meridian 1:

- Enhanced ACD Overflow Option 178
- Network ACD (NACD) Option 207

CCR/EAR is required if the following options are equipped on your Meridian 1:

- Enhanced ACD Routing (EAR) Option 214
- Customer Controlled Routing (CCR) Option 215

Site layout

Each site has different restrictions and requirements for the layout of the hardware. This section identifies some of the factors to take into account when laying out the Meridian MAX site.

Consider the following factors when planning your site. The exact details for your site's layout depend entirely on your specific requirements and restrictions. You may choose to discuss these and other factors with your distributor or Nortel representative before installing the hardware.

ATTENTION

RS-232 cables that directly connect peripherals to the Meridian MAX must not exceed 15 meters (50 feet). This length is based on an EIA RS-232C standard. Peripherals can be farther away if self-powered limited-distance (own power supply), or dial-up modems are used.

ATTENTION

Cable connections between the LAN and the Meridian MAX must not exceed 50 meters (164 feet).

This connection is an IEEE standard 802.3.

Supervisor location

Supervisors who must use common resources (such as catalogues or inventory listings) should be placed close to the resources they require.

If the Meridian MAX system console is being used as a Supervisor Display Access (SDA) console, ensure that the workstation is located less than 15 meters (50 feet) from the Meridian MAX IPE/IPE-E system. The SDA console cannot be supported through regular or limited-distance modems. SDA is only available on the IPE/IPE-E hardware platform.

Printer location

Locate the printers in conveniently accessible areas so the supervisors can obtain their reports. Placing one printer near the Meridian MAX allows access to printed reports while performing system maintenance functions. Remember that the maximum range for the printer cable is 15 meters (50 feet). Use self-powering, limited-distance modems to extend this range if necessary. Refer to the “Modems” chapter, “Limited distance modems” section, for more information.

Static electricity precautions

Ensure that the appropriate precautions are taken against the discharge of static electricity. Static electricity can seriously affect any computerized system.

These are factors to be considered. The exact details for your site’s layout depend entirely on your specific requirements and restrictions. You may choose to discuss these and other factors with your Nortel representative before installing the hardware.

Multiple Queue Assignment

There are several requirements to using Multiple Queue Assignment (MQA) with Meridian MAX. These requirements include the following:

- The minimum system requirements to use MQA are Meridian MAX 7 and X11 Release 21.23 or higher.
- You must have one of the following Meridian Modular telephone sets: M2008, M2216, or M2616 with Special Application Display modules. Other sets are supported in MQA environments, but they are restricted to single-queue operation as assigned through the administration interface or through Meridian MAX Configuration Control. The supported displays are NT2K25YL, NT2K28AA, NT2K26XJ, NT2K27XJ, NT2K25VH, and NT2K24SA.

For more information on MQA, refer to the *Meridian MAX 8 Supervisor’s User Guide* (P0853407), “Using Multiple Queue Assignment” chapter.

Capacities

The Meridian MAX system capacity is controlled by two factors—software and hardware. The software controls the amount of detailed historical information collected by the system. The hardware sets an absolute limit to the amount of information that can be processed or stored. The following subsections discuss these capacities and guide the user in choosing the best software and hardware configuration to meet specific needs.

Platform capacities

Table 2-2 outlines the maximum capacities for the Meridian MAX running on different platforms.

Table 2-2 Meridian MAX hardware platform maximums					
Platform	Number of ports	Supervisor/ agent positions	Supervisor workstations	Number of queues	Number of routes/ trunks
SNN/SNN-E	8/16/24/ 32/40	1200	60	240	256/ 2000
IPE/IPE-E	8	200	20	100	128/ 180

Note 1: Not all maximums can be achieved at the same time, and not all maximums are available on all hardware platforms.

Note 2: The route numbers on the SNN/SNN-E platforms must be between 0 and 511. The route numbers on the IPE/IPE-E platforms must be between 0 and 127.

Note 3: Position Sizing allows the number of supervisor positions to be increased to the system maximum described in Table 2-2. To change the number of positions, a new keycode is required. For more information, refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “View/Modify Meridian MAX Options” section, “Keycode Options Update” subsection.

Hardware-dependent capacities

Not all ports need to be assigned on your Meridian MAX, but there are several ports that are preconfigured for a specific device and cannot be changed by the user. Table 2-3 lists the predefined ports for the different platforms.

Table 2-3 Meridian MAX 8 hardware-dependent ports	
Platform	Predefined ports
SNN/SNN-E	Card 2, Conn 1A is permanently assigned to the High-Speed Link and cannot be changed by the user. The LAN connection is located at the Ethernet port on the I/O panel.
IPE/IPE-E	Ports 1, 2, and 8 are permanently assigned to the maintenance console, remote diagnostic modem, and High-Speed Link respectively, and cannot be changed by the user. The maintenance console and remote diagnostics modem may also be used as a supervisor display through Supervisor Display Access (SDA). The LAN connection is located at the Ethernet port on the NT1R03AA four-port I/O cable.

At least one workstation (if there are no LAN sessions) and one printer must be assigned per configuration.

A connection for local printing can be configured. A local printer is the Windows default printer for a PC. The PC must be

- running Meridian Terminal Emulator (MTE) to receive reports and other data from the Meridian MAX
- either directly connected or connected through a LAN

For the SNN/SNN-E hardware platforms, the connections for the maintenance console and remote diagnostic modem are not included in the total number of ports available on a Meridian MAX. For the IPE/IPE-E hardware platforms, these device connections are included in the total number of ports available on a system.

Meridian MAX Application Module

Table 2-4 lists the theoretical maximum number of peripheral devices that can be configured in the Meridian MAX Application Module when the Configuration Control and NAC connectivity options are enabled or disabled. (The SNN/SNN-E platforms are part of the application module.)

Local printers

Your Meridian MAX 8 can support a number of local printers in addition to the maximum number of direct connect printers described in the following tables. An SNN/SNN-E system can support up to 20 local printers. This number is a combination of direct connect supervisor workstations running MTE and supervisor workstations running MTE connected to the LAN.

SNN/SNN-E peripheral limits

The SNN/SNN-E platforms use the AM Generic I/O Panel for attaching the Meridian MAX peripherals. The AM Generic I/O panels provide up to 40 RS-232C ports. The number of active connections is dependent upon the number of MVME332XTS/MVME332XT cards installed.

Note 1: Not all maximums can be achieved simultaneously.

Note 2: The Load Management Link must be configured to enable Configuration Control. Load Management Link is also called Configuration Control Link. The Load Management Link and the NAC Network Link each occupy one port. The NAC network link is a prerequisite if the system has NAC connectivity.

Table 2-4 SNN/SNN-E peripheral limits					
Hardware device	8 I/O ports	16 I/O ports	24 I/O ports	32 I/O ports	40 I/O ports
Configuration Control and NAC					
Maximum number of workstations connected directly or through a modem	4	12	20	28	36
Maximum number of directly connected printers	4*	8	8	8	8
Maximum number of workstations (connected directly or through a modem) and printers (connected directly)	5	13	21	29	37
High-Speed Link	1	1	1	1	1
Load Management Link	1	1	1	1	1
NAC Network Link	1	1	1	1	1
Configuration Control without NAC					
Maximum number of workstations connected directly or through a modem	5	13	21	29	37
Maximum number of directly connected printers	5*	8	8	8	8
Maximum number of workstations (connected directly or through a modem) and printers (connected directly)	6	14	22	30	38
High-Speed Link	1	1	1	1	1
Load Management Link	1	1	1	1	1
—continued—					

Table 2-4 (continued) SNN/SNN-E peripheral limits					
Hardware device	8 I/O ports	16 I/O ports	24 I/O ports	32 I/O ports	40 I/O ports
Neither Configuration Control nor NAC					
Maximum number of workstations connected directly or through a modem	6	14	22	30	38
Maximum number of directly connected printers	6*	8	8	8	8
Maximum number of workstations (connected directly or through a modem) and printers (connected directly)	7	15	23	31	39
High-Speed Link	1	1	1	1	1
—end—					

* One more printer is allowed if there is at least one active LAN session.

Meridian MAX IPE/IPE-E module

Table 2-5 lists the theoretical maximum number of each peripheral device that can be configured on the Meridian MAX IPE/IPE-E.

Local printers

Your Meridian MAX 8 can support a number of local printers in addition to the maximum number of directly connect printers described in the following tables. An IPE/IPE-E system can support up to 10 local printers. This number is a combination of direct connect supervisor workstations running MTE and supervisor workstations running MTE connected to the LAN.

IPE/IPE-E peripheral limits

The IPE/IPE-E platforms have eight RS-232C ports for attaching Meridian MAX peripherals.

Note 1: Not all maximums can be achieved simultaneously.

Note 2: “System console” and “maintenance console” are interchangeable terms. “Remote diagnostics modem” is also referred to as “diagnostics modem” and “external modem.”

Note 3: The Load Management Link must be configured to enable Configuration Control. “Load Management Link” is also called “Configuration Control Link.” The Load Management Link and the NAC Network Link each occupy one port. The NAC network link is a prerequisite if the system has NAC connectivity.

Table 2-5 Meridian MAX IPE/IPE-E hardware-dependent capacities	
Hardware device	Maximum
Maintenance console	1
Remote diagnostics modem	1
High-Speed Link	1
Load Management Link	1
Printer	2
Supervisor workstation	4
NAC network link	1

Table 2-6 lists the maximum number of each peripheral device allowed when the Meridian MAX IPE/IPE-E has Configuration Control or NAC connectivity, or both, enabled or disabled.

Table 2-6 IPE/IPE-E peripheral limits		
Hardware device	Maximum number with 1 printer	Maximum number with 2 printers
Configuration Control and NAC		
Maximum number of workstations connected directly or through a modem	2	1
Maintenance console	1	1
Diagnostics modem	1	1
High-Speed Link	1	1
Load Management Link	1	1
NAC Network Link	1	1
—continued—		

Table 2-6 (continued) IPE/IPE-E peripheral limits		
Hardware device	Maximum number with 1 printer	Maximum number with 2 printers
Configuration Control without NAC		
Maximum number of workstations connected directly or through a modem	3	2
Maintenance console	1	1
Diagnostics modem	1	1
High-Speed Link	1	1
Load Management Link	1	1
Neither Configuration Control nor NAC		
Maximum number of workstations connected directly or through a modem	4	3
Maintenance console	1	1
Diagnostics modem	1	1
High-Speed Link	1	1
—end—		

Calculating calls per hour

This section describes how to calculate the number of calls which can be supported by your Meridian MAX in a variety of scenarios.

Describing calls per hour

The maximum number of calls per hour (cph or call rate) for a Meridian MAX is calculated as simple calls per hour.

A simple call per hour is an external call which enters an ACD-DN, answered by an agent servicing that ACD-DN, and released. This scenario generates five HSL messages. A simple abandoned call generates two HSL messages. There are more HSL messages when the call is routed through CCR, IVR, NACD, and so on.

In Meridian MAX 8, the maximum call rates (when using most of the features) have been reduced to accommodate new features which require a significant amount of disk space and memory.

The maximum sustainable call rate varies depending on the load on the Meridian MAX, which depends on the features being used at the time. The peak call rate (a rate greater than the maximum sustainable call rate) is difficult to determine since it will adversely affect the performance of the various features.

The effects are different depending on the set of features. One guideline is that the peak call rate can only be sustained for a maximum of 30 seconds.

The call rates stated are the rates that the Meridian MAX can support. The Meridian 1 may support maximum/peak call rates higher or lower than the Meridian MAX can support.

Call rates at full load

A fully loaded Meridian MAX has almost every feature in use to its maximum capacity with certain events occurring during peak day service. This causes the system to use more CPU and I/O resources.

This is a list of the most common features and events which consume a large amount of CPU and I/O resources.

- These options, which can be purchased, must be enabled: MTE, CCR, NACD, CC, NAC, MQA, and MSI.
- These options, which can also be purchased, are set to their maximum: number of queues, positions, LAN supervisor sessions, MEI-Network links, and MEI-Observe links.

- Trunk-level reporting and the agent activity code feature are enabled.
- Interval data is being stored from RAM to disk.
- Midnight routines are not running.
- Meridian MAX supervisors have their display refresh rate set at 10 seconds.
- Maximum number of Meridian MAX supervisors are logged in.
- Shifts change with about one third of the agents logging on and off.
- Supervisors are using the Spare Position Handling feature.
- Three simultaneous historical reports are being generated.
- Historical database is one third its maximum size.
- There are no active MSI connections, NAC connections, or Configuration Control commands.
- There is one active MEI-Network connection.
- There are three active MEI-Observe connections.

Table 2-7 provides the maximum sustainable call rate which can be supported by a fully loaded Meridian MAX. On the Meridian 1, all the agents are servicing five queues with talk times of 30, 60, 90, and 120 seconds, randomly selected.

Table 2-7 Maximum sustainable call rate at full load (with shift change)			
Platform	HSL baud rate	Meridian MAX 8 simple calls per hour	Meridian MAX 8 HSL messages per hour
SNN-Enhanced	9600 or 19 200	22 000	110 000
SNN	9600 or 19 200	10 000	50 000
IPE-Enhanced	9600 or 19 200	3500	17 500
IPE	9600 or 19 200	4000	20 000

Call rates without shift change

Table 2-8 shows the maximum sustainable call rates based on a scenario in which a system is fully loaded but not undergoing a shift change.

Table 2-8 Maximum sustainable call rate at full load (without shift change)			
Platform	HSL baud rate	Meridian MAX 8 simple calls per hour	Meridian MAX 8 HSL messages per hour
SNN-Enhanced	9600 or 19 200	23 000	115 000
SNN	9600 or 19 200	11 000	55 000
IPE-Enhanced	9600 or 19 200	9000	45 000
IPE	9600 or 19 200	9000	45 000

Dialling plans

Network ACD is compatible with either a Coordinated Dialing Plan (CDP) or a Uniform Dialing Plan (UDP). UDP is supported by either Basic Alternate Route Selection (BARS Option #57), or Network Alternate Route Selection (NARS Option #58). When Meridian MAX is configured in a Network ACD application, a seven-digit dialling plan is required. A three-digit node identification and a four-digit ACD-DN comprise the seven digits.

The following is a guideline to programming the Meridian 1 X11 software for the NACD application using CDP and UDP dialling plans. This is not a complete set of programming instructions but is intended to be a guideline to the key inputs to implement the CDP or UDP Dialling plans in an NACD environment. This assumes the ISDN network is already programmed and operational.

For specific information regarding ISDN network configuration, CDP, or UDP, please refer to the following NTPs for those features:

- 553-2651-102 *Coordinated Dialing Plan Description*
- 553-2751-100 *Network/Basic Alternate Route Selection*
- 553-2901-100 *ISDN Primary Rate Interface Description and Administration*

Seven-digit CDP dialling plan

If there is no CDP dialling plan or if the existing CDP dialling plan is seven digits long, then the CDP dialling can be used for the NACD application.

Overlay 86 ESN data block must have the NCDP (number of digits in the CDP code) prompt equal to seven.

Overlay 87 defines the specific three-digit LSC (Local Steering Code). The LSC must have a DMI that deletes three digits. A three-digit DSC (Distant Steering Code) is required for each Network ACD node.

Overlay 15, Customer Data Block, must also define LSC as the already-defined LSC from Overlay 87. This programming must be done at all nodes in the network.

Note: When defining Route List Entries in Overlay 86 that are associated with either DSCs or LOCs used with the NACD applications

- the routes must be only ISDN routes (The ISDN routes cannot step to non-ISDN routes).
- the PNI defined for the routes must be equal to the PNI defined in Overlay 15, Customer Data Block, of the node to which it is directly connected

UDP dialling plan

Define AC1 or AC2 in Overlay 86, ESN Data Block.

Define Location Codes (LOC) and Home Location Code (HLOC) in Overlay 90, Network Translation Data Block, for each Network ACD node. The HLOC should have a DMI that deletes 3.

In Overlay 15, Customer Service Data Block, define HLOC as the already-defined HLOC in Overlay 90.

If AC2 is used within the NACD Routing tables, then put LOC after AC2.

If AC1 is used within the NACD Routing tables, then do not put LOC after AC2.

Either AC1 or AC2 can be used, but both cannot be used in the NACD Routing Tables per NACD node. That means node A can use AC1 in its NACD Routing Table, and node B can use AC2 in its NACD Routing Table, but node A cannot use AC1 and AC2 within its NACD Routing Table.

In Overlay 16, Route Data Block, define INAC as YES on all incoming ISDN routes in the network. This programming must be done at all nodes in the network.

The three-digit node identification is equivalent to the HLOC or LOC of the Network ACD node and is also required to be programmed in the Meridian MAX system. This programming is done in the Network Definition/Installation screen under Maintenance and Administration Programs.

CDP dialling plan and UDP just for NACD routing tables

There are cases in which it is preferable to use a CDP dialling plan other than seven digits. When this is the case, CDP can be used for non-NACD environments, and UDP can be configured for just the NACD application.

Define AC1 or AC2 in Overlay 86, ESN Data Block.

Define the Location Codes (LOC) and Home Location Code in Overlay 90, Network Translation Data Block. The HLOC should have a DMI that deletes 3.

In Overlay 15, Customer Data Block, define HLOC as the already-defined HLOC in Overlay 90.

If AC2 is used within the NACD tables, then put LOC after AC2.

If AC1 is used within the NACD tables, then do not put LOC after AC2. Either AC1 or AC2, but not both, can be used in the NACD tables per NACD node. That means that node A can use AC1 in its NACD Routing Table, and node B can use AC2 in its NACD Routing Table, but node A cannot use AC1 and AC2 within its NACD Routing Table.

In Overlay 16, Route Data Block, define INAC as YES on all incoming ISDN routes in the network. This programming must be done at all nodes in the network.

The three-digit node identification is equivalent to the HLOC or LOC, or the Network ACD node, and is also required to be programmed in the Meridian MAX system. This programming is done in the Network Definition/Installation screen under Maintenance and Administration Programs.

Note: When assigning Route List Index (RLI) entries in Overlay 87 or Overlay 90 for DSCs and LOCs associated with NACD applications, there must be only ISDN route choices in the RLI.MAX 8.

Chapter 3: Hardware installation: Application Module (SNN/SNN-E)

A word about warranties

You must read and understand the warranties issued for your Meridian MAX peripheral devices. Each warranty details what can be done with the warranted item. While the utmost care has been taken to ensure that the procedures described in this NTP do not void any of the warranties, it is still possible for an instruction to be in conflict with a warranty when a warranty changes after the publication of this NTP. If you find such a condition, inform your dealer or Nortel service representative of the problem.

ATTENTION

Under no circumstances should you void your warranty for the sake of following any instruction given in this (or any other) document. Be sure to register your warranties with the appropriate companies (usually the manufacturers) where required.

Overview

Meridian MAX is an ACD-MIS product that addresses the needs of the call center market. It is designed to function within the Application Equipment Module (AEM) environment. The Application Module (AM), which is installed in the AEM, contains the components to run the Meridian MAX on an SNN or SNN-E platform.

Note: The SNN platform is not available as a new system. It is only available as an upgrade system (for example, call centres with existing SNN systems upgrading to Meridian MAX 8).

3-2 Hardware installation: Application Module (SNN/SNN-E)

Table 3-1 lists the equipment and materials required for a Meridian MAX installation. For part order numbers, refer to the “Field replaceable parts” chapter.

Table 3-1 Meridian MAX Application Module installation equipment and material list	
Equipment	Contents
Meridian MAX 8 SNN/SNN-E	Motorola MVME712M transition card Motorola P2 adapter board 1 Gbyte Seagate ST31230N hard disk drive (SNN only) 1 Gbyte Seagate ST11200N hard disk drive (SNN only) 2 Gbyte Seagate ST32171N hard disk drive (SNN-E only) 2 Gbyte Seagate ST32430N hard disk drive (SNN-E only) 600 Mbyte TEAC MT-2ST/F5OB-413 cassette drive Motorola MVME167-34 single board computer with 33 MHz M68040 CPU (SNN only) Motorola MVME177-005 single board computer with 50 MHz MC68060 CPU (SNN-E only) Motorola NT6D51AA transition card (maximum of 5) Motorola MVME332XTS eight-channel asynchronous I/O board (maximum of 5) Motorola MVME332XT eight-channel asynchronous I/O board (maximum of 5) Mass storage unit (MSU) containing disk and tape drives AC or DC power supply External single-port 50-position active SCSI terminator (SNN-E only) External single-port 50-position passive SCSI terminator (SNN only)
Cables	Meridian MAX High-Speed Link (HSL) cable (NT8D93Ax for XSDI on the Meridian 1, and NT7D58Ax for SDI, QSDI, and MSDL on the Meridian SL-1) Meridian MAX Load Management Link (LML) cable (NT8D93Ax for XSDI on the Meridian 1, and NT7D58Ax for SDI, QSDI, and MSDL on the Meridian SL-1) 3 Multiport assemblies (NT8D96AE) for each MVME332XTS/XT Asynchronous Communication controller
—continued—	

Table 3-1 (continued) Meridian MAX Application Module installation equipment and material list	
Equipment	Contents
Workstations (any combination)	VDT-type (DEC VT520, DEC VT420, DEC VT320, DEC VT220, or HP700/32 or terminals which are 100% compatible) PC connected to the Meridian MAX (either directly or through a modem) and running Reflection 4+ for DOS terminal emulator. All PCs supported by Reflection are supported by Meridian MAX. PC connected to the Meridian MAX (either directly or through a LAN connection) and running Meridian Terminal Emulator (MTE)
Modems	NetComm SmartModem M7F Gandalf LDS 120E Develcon DS 511A Ven-Tel 2400 Plus II Ven-Tel 9600 Plus Racal-Vadic VI2422PA UDS EC224A/D UDS 2440 U.S. Robotics Sportster 28,800 Data/Fax
Reports printer (any combination)	HP RuggedWriter printer HP LaserJet series II printer HP LaserJet series III printer HP LaserJet series 4 printer HP LaserJet series 4 Plus printer HP LaserJet 5Si MX HP PaintJet 3630 printer HP DeskJet printer HP DeskJet 500 printer HP DeskJet 560C printer (with serial-parallel converter) HP DeskJet 660C printer (with serial-parallel converter) DEC LA195 (Epson-mode only) printer
—continued—	

3-4 Hardware installation: Application Module (SNN/SNN-E)

Table 3-1 (continued) Meridian MAX Application Module installation equipment and material list	
Equipment	Contents
Software	<p>Meridian MAX Operating System tape cassette including the Motorola UNIX System V/68 R3V8 Operating System and Standalone System Interactive Diagnostics (SSID) package</p> <p>Meridian MAX Application Software tape cassette including the Motorola Network Services Extension (NSE) package for the V/68 R3V8 OS</p> <p>UNIFY Version 5, Version UNI5.0.5.2.0 RDBMS</p> <p>Grafsmann 3.10</p> <p>Z-Modem protocol software</p> <p>Meridian Terminal Emulator (MTE) 5.32 or lower for DOS if using personal computers as workstations (optional)</p> <p>Meridian Terminal Emulator (MTE) for Windows if using personal computers as workstations (optional). This may be Version 6, 7, or 8 (optional)</p> <p>Reflection 4+ version 3.0 for DOS (or higher) if using personal computers as workstations (customer provided)</p>
Documentation	<p>P0853407 <i>Meridian MAX 8 Supervisor's User Guide</i></p> <p>P0853414 <i>Meridian MAX 8 MSI/MEI Protocol Reference Guide</i></p> <p>P0853413 <i>MTE 8 User Guide</i></p> <p>553-4001-210 <i>Meridian MAX 8 Upgrade Guide</i> (P0853412)</p> <p>A0662798 (includes the following set of NTPs):</p> <p>553-4001-111 <i>Meridian MAX 8 Installation Guide</i></p> <p>553-4001-811 <i>Meridian MAX 8 Maintenance and Diagnostics Guide</i></p> <p>553-3201-200 <i>Application Equipment Module Installation Guide</i></p>
Miscellaneous equipment	Serial-parallel converter for printers
Supplies	Minimum of three blank 600 Mbyte data cassette tapes
—end—	

Figure 3-1 shows a front view of Meridian MAX Application Module configured for the SNN/SNN-E hardware platform. The label on the CPU card appears as “MVME 167-34A” or “MVME 167-34B” on an SNN system and “MVME 177-005” on an SNN-E system.

Figure 3-2 shows a simplified overview of the hardware layout for a Meridian MAX installation. These figures are intended to show how the equipment is interconnected. The actual layout of your site may differ. See the “Site Layout” section of the “Site preparation” chapter for details.

Figure 3-1
Meridian MAX Application Module (SNN system)


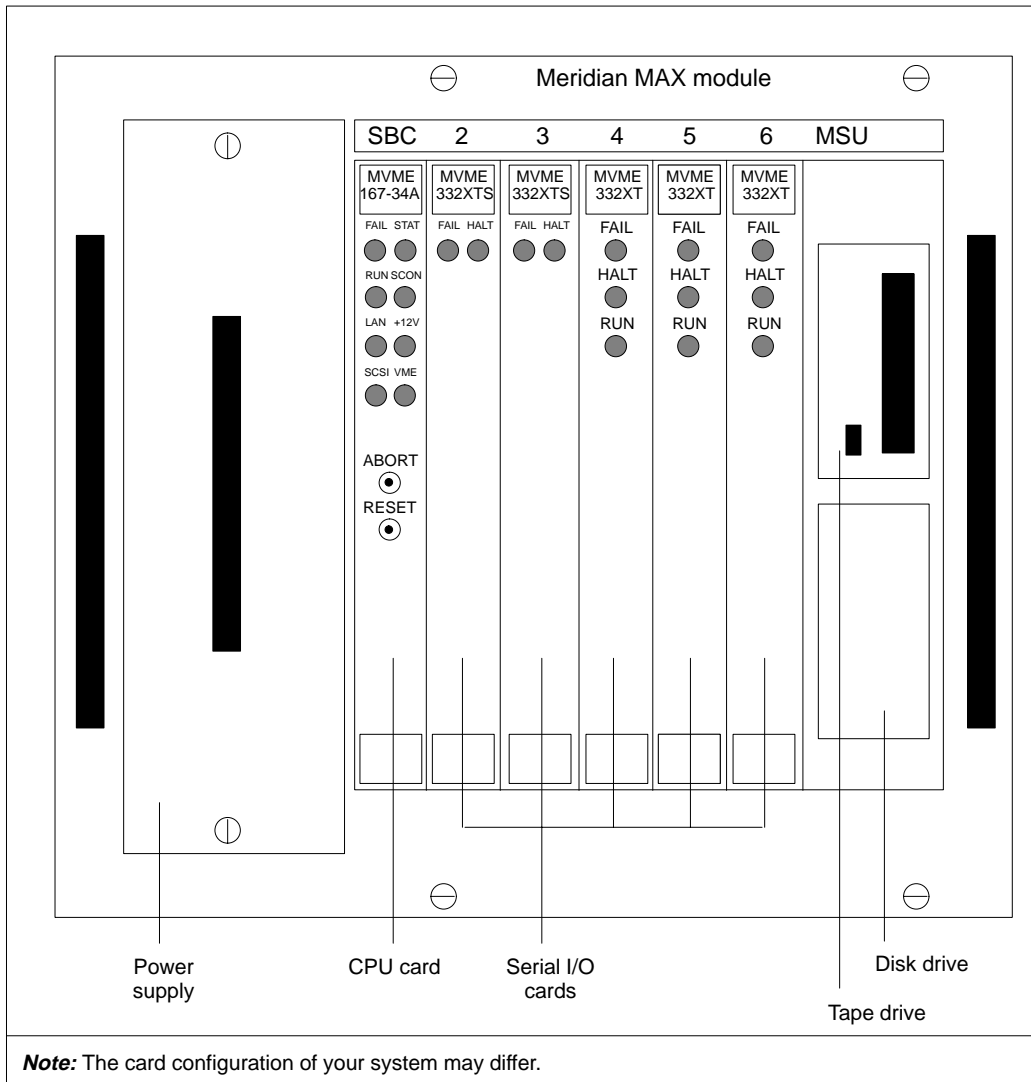


Figure 3-2
Meridian MAX Application Module installation

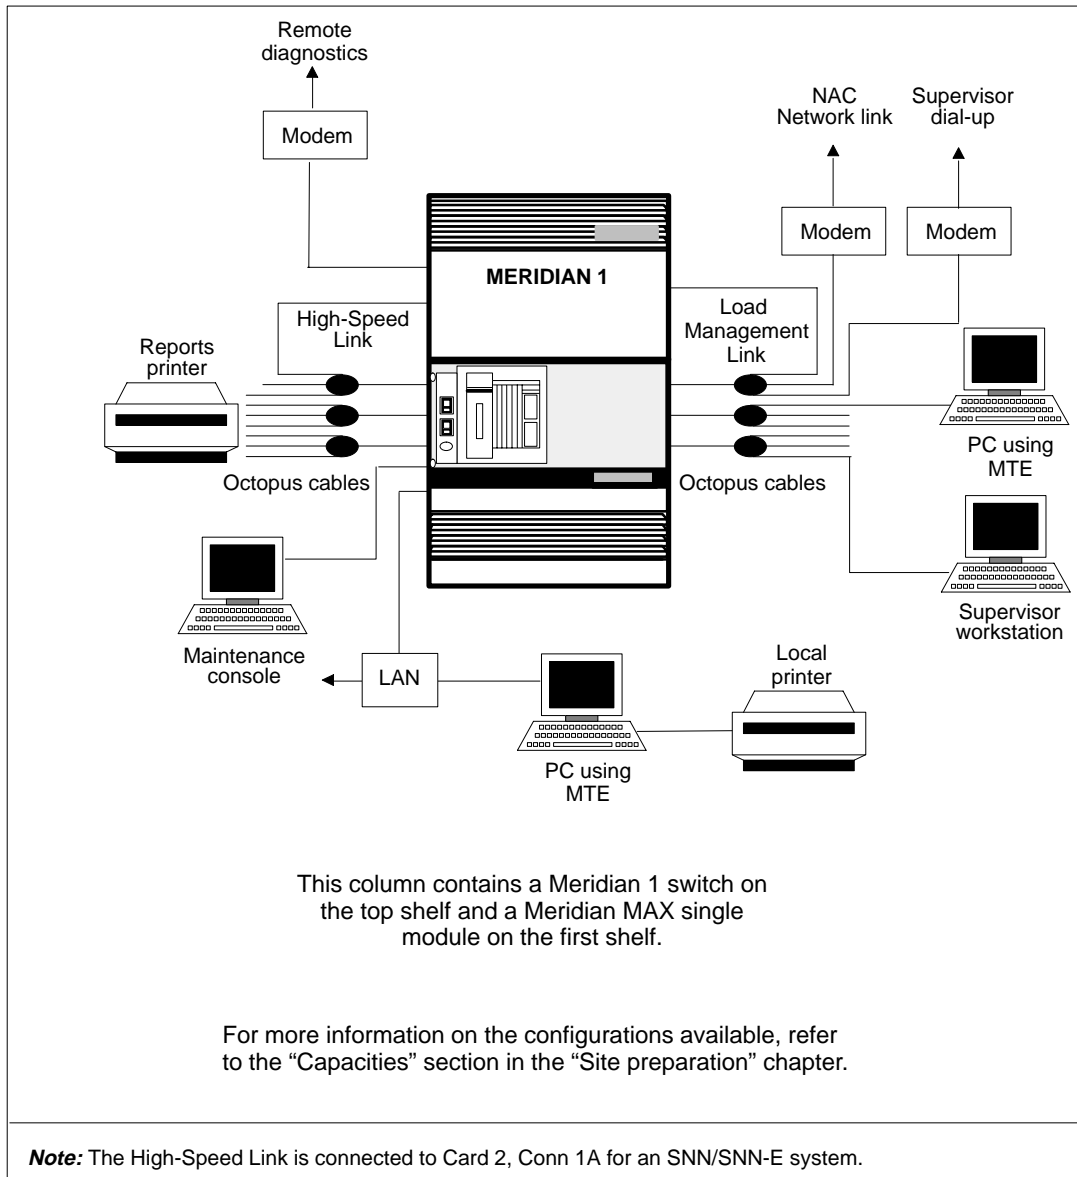

Single board computer cards

MVME167-34 and MVME177-005

The 32 Mbyte, 33 MHz MVME167-34 single board computer (SBC) card is the central processing unit of the Meridian MAX SNN system, based on the MC68040 microprocessor.

The 64 Mbyte, 50 MHz MVME177-005 SBC card is the central processing unit of the Meridian MAX SNN-E system, based on the MC68060 CPU.

Eight light-emitting diodes (LEDs) and two buttons appear on the front of the MVME167-34 card or MVME177-005 card. The label on the card, however, appears as “MVME 167-34A” or “MVME 167-34B” on an SNN system, and “MVME 177-005” on an SNN-E system.

The types of LEDs and their locations are shown in Figure 3-3. The LEDs show the following conditions:

- **FAIL** This red LED lights when a hardware failure has occurred on the CPU card. The LED also lights for a 7- to 10-minute duration when the card's on-board diagnostics is enabled during bootup.
- **STAT/STATUS** This yellow LED lights continuously, indicating a halt condition from the card processor.
- **RUN** This green LED lights almost continuously but flickers when the system processor has stopped.
- **SCON** This green LED lights continuously when the card is the VMEbus system controller.
- **LAN** This green LED flickers continuously when there is an active LAN communication.
- **+12V** This green LED lights continuously when the card is supplying +12V LAN power to the transceiver interface.
- **SCSI (Small Computer System Interface)** Heavy communication between devices is indicated by a solid light, while a flickering light indicates less data movement.
- **VME** This green LED lights when the card is accessing or being accessed by the VMEbus.



CAUTION


Risk of system interruption

Do not press the abort or reset button while applications are running. Shut down the system software before pressing the abort or reset buttons. This information is provided in the “Meridian MAX power-down procedure” chapter.

The following buttons produce the following conditions and should not be pressed unless under the direction of Nortel support personnel:

- **ABORT** This button halts the Meridian MAX.
- **RESET** This button reinitializes the Meridian MAX. The system performs a self test and then reboots.

Figure 3-3
LED locations for the MVME167-34 card and MVME177-005

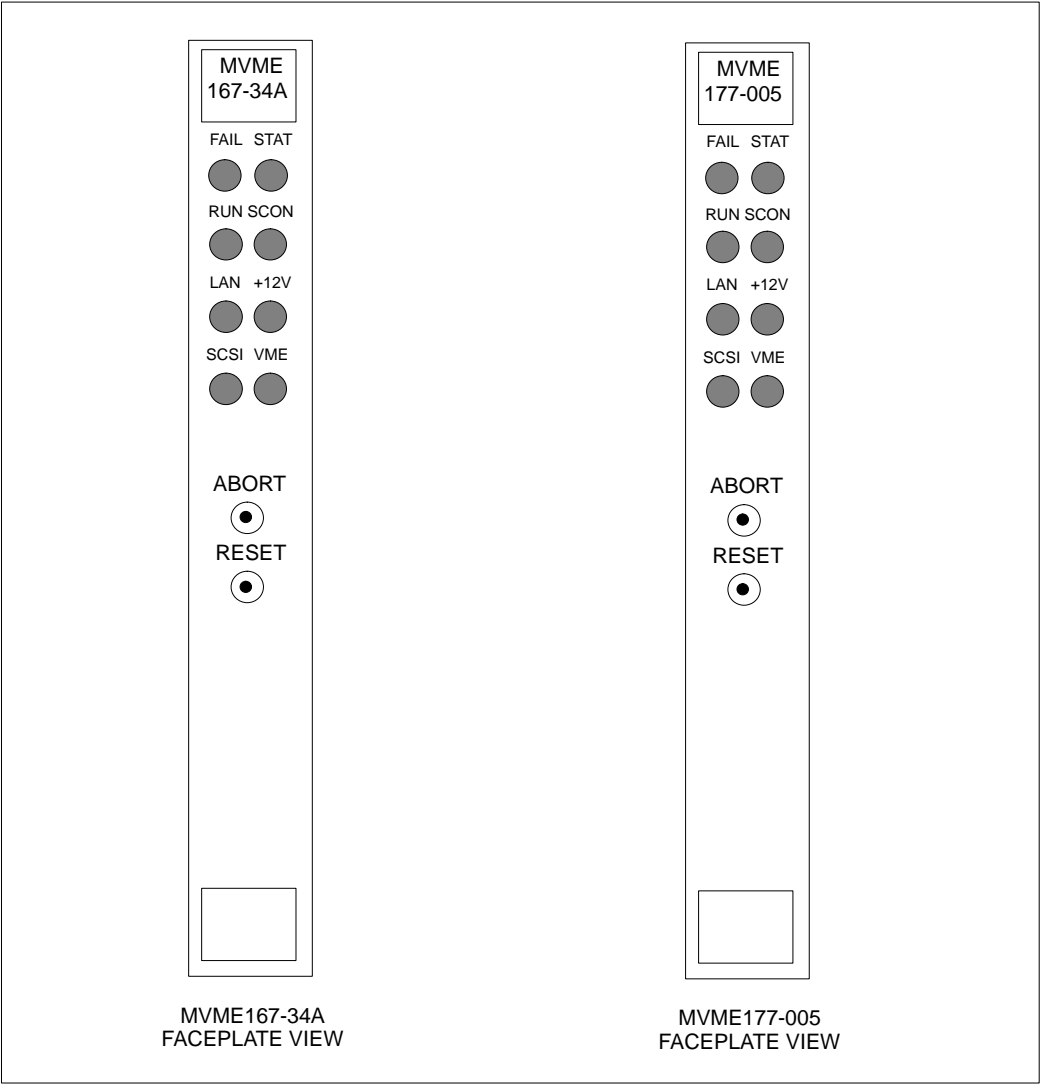

Transition cards

MVME712M


The MVME712M transition card is used as the interface between MVME167 family modules or the MVME177 family modules, and the interconnect cables that attach to the I/O panel of the Meridian MAX. The features of the MVME712M card are one independent printer port and four 25-pin multi-protocol RS-232 serial ports. These four serial ports can be configured as asynchronous, but two of the ports can also be configured as synchronous ports as well. Figure 3-4 shows the default switch settings for this card.

This transition card also provides a LAN connection through an Ethernet port supplied by a 15-pin connector that is connected to a customer supplied transceiver (MAU). The Ethernet pinouts are detailed in Figure 3-11. A SCSI port is also provided to interface with external SCSI devices. However, the SCSI terminator is connected to this port.

NT6D51AA

The NT6D51AA transition card is used as the interface between the MVME332XTS/XT serial I/O cards and the interconnect cables that attach to the I/O panel of the Meridian MAX. The features of the NT6D51AA card are three 25-pin connectors that provide eight ports for connection to peripheral devices.

Figure 3-4
MVME712M transition card showing jumper switch settings

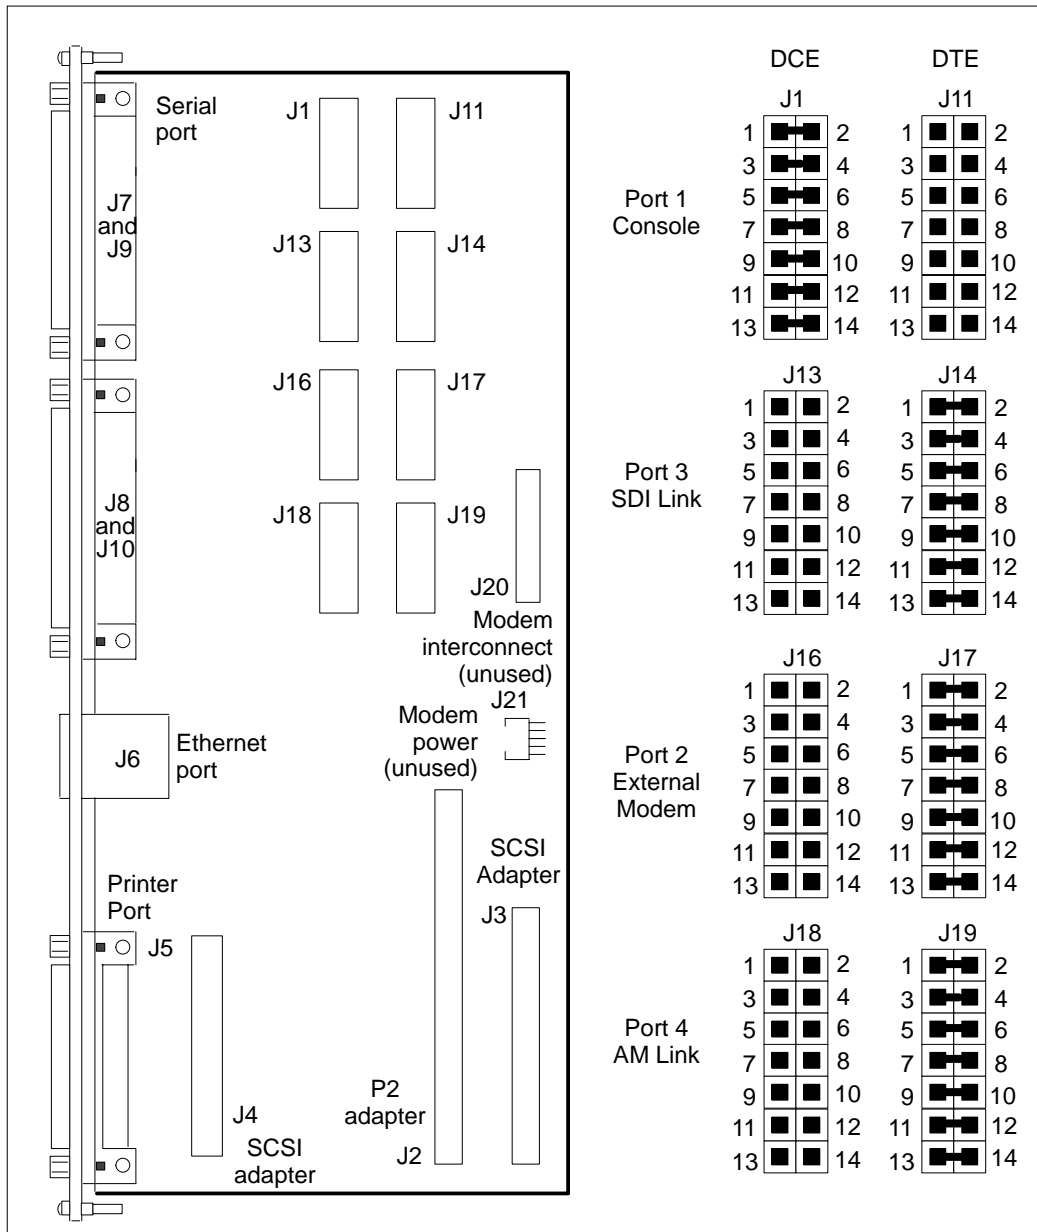

MVME332XTS and MVME332XT eight-channel asynchronous boards

Both the MVME332XTS and MVME332XT eight-channel asynchronous boards connect the Meridian MAX module with all external devices through the NT6D51AA transition card, interconnect, and external cables. Each MVME332XTS/XT eight-channel asynchronous board can communicate with a maximum of eight devices.

There are five different Meridian MAX configurations for the MVME332XTS/XT card:

- single module with one MVME332XTS/XT card (8 ports)
- single module with two MVME332XTS/XT cards (16 ports)
- single module with three MVME332XTS/XT cards (24 ports)
- single module with four MVME332XTS/XT cards (32 ports)
- single module with five MVME332XTS/XT cards (40 ports)

Each board in a Meridian MAX module has two banks of switches—a bank of eight and a bank of four. The set of eight switches has a unique setting for each card. Table 3-2 shows the settings for this bank of switches.

Table 3-2 MVME332XTS/XT eight-channel asynchronous board's eight-switch bank settings								
AM Card Slot	Switch Setting							
	1	2	3	4	5	6	7	8
2	ON	OFF	OFF	OFF	OFF	ON	ON	ON
3	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
4	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
5	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
6	ON	OFF	OFF	OFF	OFF	OFF	ON	ON

3-14 Hardware installation: Application Module (SNN/SNN-E)

Use jumpers to connect the following pins:

- On J1: 1 to 2, 5 to 6, 7 to 9, 8 to 10, 11 to 12, and 15 to 17
- On J4: jumper 1 to 2

For the bank of four switches, the settings on all cards are the same: 1 and 2 are off, and 3 and 4 are on.

Refer to Figure 3-5 for the switch locations on the MVME332XTS/XT card.

Figure 3-5
MVME332XTS/XT eight-channel asynchronous board switch locations


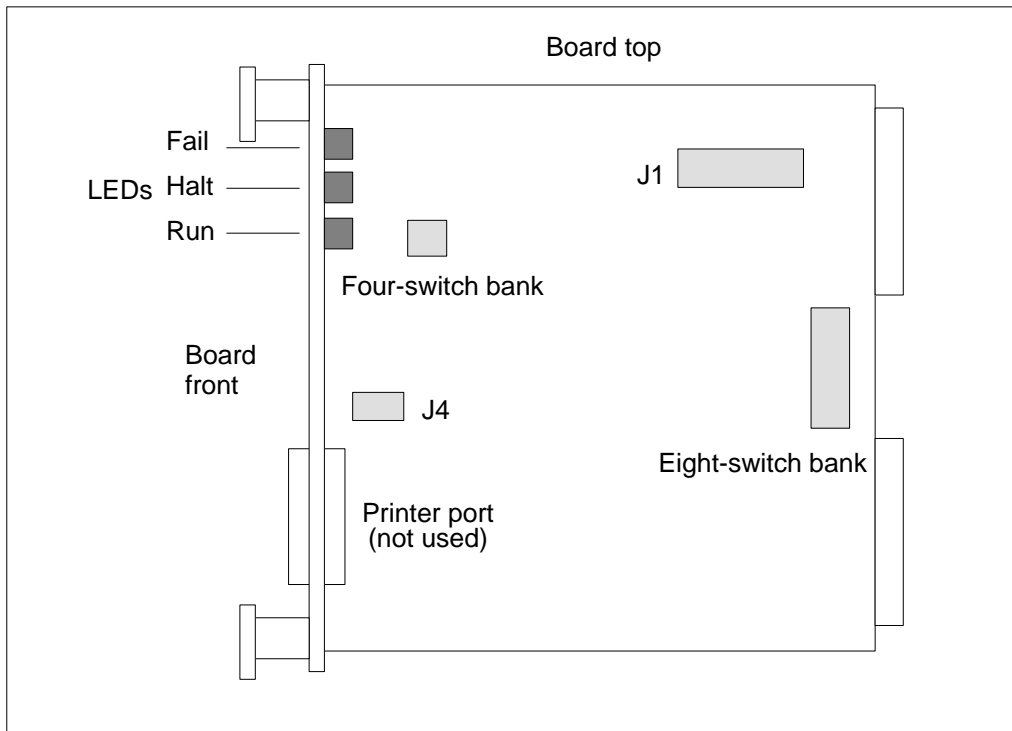


Figure 3-6 shows that there are two light-emitting diodes (LEDs) on the faceplate of the MVME332XTS card and three LEDs on the faceplate of the MVME332XT card.

The LEDs show the following conditions:

- **FAIL** This red LED lights when a hardware failure has occurred on the card.
- **HALT** This red LED lights steadily when the processor has stopped.
- **RUN** This green LED lights almost continuously but flickers every few seconds when applications are running normally. This indicator only appears on the MVME332XT card.

Figure 3-6
LED locations for MVME332XTS and MVME332XT cards

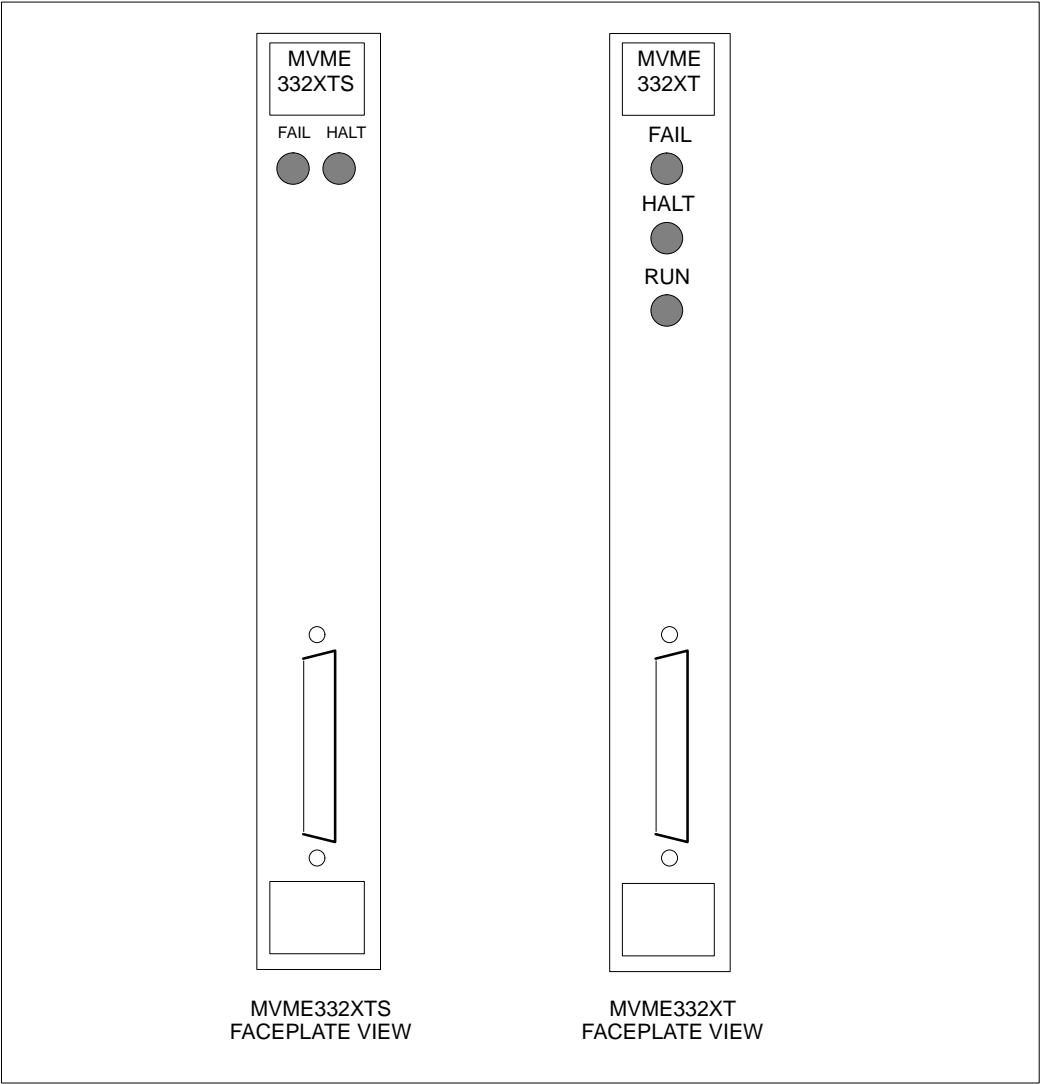

Meridian MAX Application Module

Once you have obtained your Meridian MAX, you must install the Application Module (AM) into your Application Equipment Module (AEM). The MVME167-34 card or MVME177-005 card is already installed in the AM with the MVME332XTS/XT card. The power supply and mass storage unit (MSU) must then be installed in the AM.

If your Meridian MAX was shipped already installed in the AEM, most of the AM is already assembled. The MVME167-34 card or the MVME177-005 card needs to be installed along with the MVME332XTS/XT cards, power supply, and mass storage unit (MSU).

Make sure the internal, interconnect, and external input/output cables are connected as described in the “Cables” section of this chapter.



CAUTION **Risk of data corruption**

If installing or upgrading an Application Module (AM) in an existing Application Equipment Module (AEM), ensure that each AM is powered down before beginning an installation or upgrade. Failure to power down each AM may cause unpredictable results.

If your upgrade is performed on an existing system, follow the instructions contained in the “Meridian MAX power-down procedure” chapter.

Installing the Application Module

Procedure 3-1 details instructions on installing the Meridian MAX Application Module as well as the MVME332XTS/XT and MVME167-34 or MVME 177-005 cards.

Procedure 3-1

To install the Application Module

- 1 Ensure the circuit breaker (CB) of the module in which you are installing the power supply is in the off position.

- 2 Remove the front panel covering the AM cage.

Loosen the four screws at the front panel of the AM cage, and pull the panel and attached cage away from the AEM.

- 3 Install the new Meridian MAX SNN/SNN-E Application Module into the AEM.

Align the AM with the guides at the top and bottom of the AM cage of the AEM, and slowly slide the AM into the AEM. Be careful to make sure the cables and I/O panel are drawn through to the rear of the AEM as the AM is being inserted. Tighten the four screws at the front of the AM.

- 4 Connect the I/O panel to the I/O panel section at the rear of the AEM.

Line up the eight screw holes of the I/O panel with the eight screw holes on the frame of the AEM. Connect the I/O panel to the AEM using the eight screws.

- 5 Connect the NT7D55AD power cable at the rear of the AEM.

At the back of the column, locate the power cable running from socket J8. Connect this cable to the P3 or P4 socket, which can be found behind a metal plate behind the shelf's main power circuit breakers. The first module's power cable connects to the P3 socket, and the second module's power cable connects to the P4 socket.

- 6 Connect the NT7D52AA Power Sensor Cable at the rear of the AEM.

Locate the Power Sensor Cable (two thin wires, yellow and grey, with a small plug at the end). Connect it to the power monitor located at the base of the AEM, between the two Application Modules.

Note: It may be necessary to temporarily disconnect the cable NT8D46AC and the PDU cable to make it easier to locate the correct socket for connecting the Power Sensor Cable. Make sure that you restore these cables to their original sockets after you have plugged in the Power Sensor Cable.

- 7** Connect the ground wire to the terminal block.

The orange ground wire connects to the terminal block, located at the base of the AEM between the two Application Modules, using a lug connector.
- 8** Install the Application Module power supply.

Refer to the “Installing the power supply” subsection for instructions.
- 9** Install the Meridian MAX 8 SNN/SNN-E mass storage unit (MSU).

Refer to the “Installing the mass storage unit (MSU)” subsection for instructions.
- 10** Your MVME332XTS/XT cards may come already installed in the system. You should verify the switch settings of each MVME332XTS/XT card.

Refer to the “Hardware upgrades and replacements” section, “Adding MVME332XTS/XT cards to an SNN/SNN-E system” subsection, for more information on the removal and installation of MVME332XTS/XT cards.

Refer to the “MVME332XTS and MVME332XT eight-channel asynchronous boards” section of this chapter for switch setting information.
- 11** You may install additional MVME332XTS/XT cards into your Meridian MAX 8 SNN/SNN-E.

Refer to the “Hardware upgrades and replacements” section, “Adding MVME332XTS/XT cards to an SNN/SNN-E” subsection, for more information on the installation of MVME332XTS/XT cards.
- 12** Connect your system console to the Meridian MAX using an NT7D61Ax cable.

The DB-25 end connects to the workstation, and the DB-9 end connects to the SYS CONS port on the I/O panel located at the rear of the Application Equipment module (AEM).
- 13** Configure the system console.

Refer to the “Workstation, HSL, and LML configuration” chapter, “Workstation configuration” section, for more information on configuring the system console.
- 14** Configure the MVME167-34 or MVME177-005 card.

Refer to the “Configuring the CPU card” section for instructions.

- 15** Install the Meridian MAX 8 SNN/SNN-E system software.
Refer to the “New software installations” chapter for information on software installation.
- 16** Connect all external cables to the new I/O panel.
Refer to the “Cables” section of this chapter for information on external cable connections.

Installing the power supply

The power for your Meridian MAX Application Module is supplied by either an AC or DC power supply unit. Procedure 3-2 details instructions on installing the power supply.

Procedure 3-2

To install the power supply

- 1** Ensure the circuit breaker (CB) of the module in which you are installing the power supply is in the off position.
- 2** Install the Application Module power supply. (If you have replaced a previous system, use the power supply from that system.)
- 3** Gripping the handle at the front of the power supply faceplate, line up the power supply with the guides at the top and bottom of the power supply slot of the AM.
- 4** Slowly slide the power supply into the AM until the faceplate is flush with the front of the AM.
- 5** Tighten the two screws located at the top and bottom of the power supply faceplate.

Installing the mass storage unit

Your Meridian MAX mass storage unit (MSU) contains the system disk and tape drives. Procedure 3-3 details instructions on installing the MSU.

Procedure 3-3

To install the MSU

- 1** Ensure the circuit breaker (CB) of the module in which you are installing the power supply is in the off position.
- 2** Install the Meridian MAX 8 SNN/SNN-E mass storage unit (MSU).
- 3** Carefully align the unit with the guides at the top and bottom of the AM.
- 4** Slide the unit into the card cage until the faceplate is flush with the front of the AM.

Note: If you are uncertain as to whether the MSU is in as far as it can go, simultaneously press up on the top latch and down on the bottom latch. If the card pops forward slightly, then the card was in as far as it could go.

- 5 Tighten the two screws at the top and bottom of the MSU faceplate.

Meridian MAX Application Module label

Your Meridian MAX is supplied with an Application Module label (P0844934) that contains a Meridian MAX sticker.


The Meridian MAX sticker should be adhered to the application module front panel above the NT7D19SA label.

Input/output panels

The Generic I/O panel is used with the SNN/SNN-E hardware platform, and it is to this panel that all I/O cable connections are made. This I/O panel is removable.

The Generic I/O panel has 20 connectors as shown in Figure 3-7. The serial I/O ports (labeled from Card 2, Conn 1 to Card 6, Conn 3) are 25-pin (DB-25) connectors, and the Ethernet port provides a 15-pin connector. The Central Processing Unit (CPU) ports labeled Card 1, Conn 1 to Card 1, Conn 3 are 9-pin (DB-9) connectors. The port labeled Card 1, Conn 4 is a 15-pin high density connection.

Figure 3-7
Generic input/output connector panel (SNN/SNN-E system)

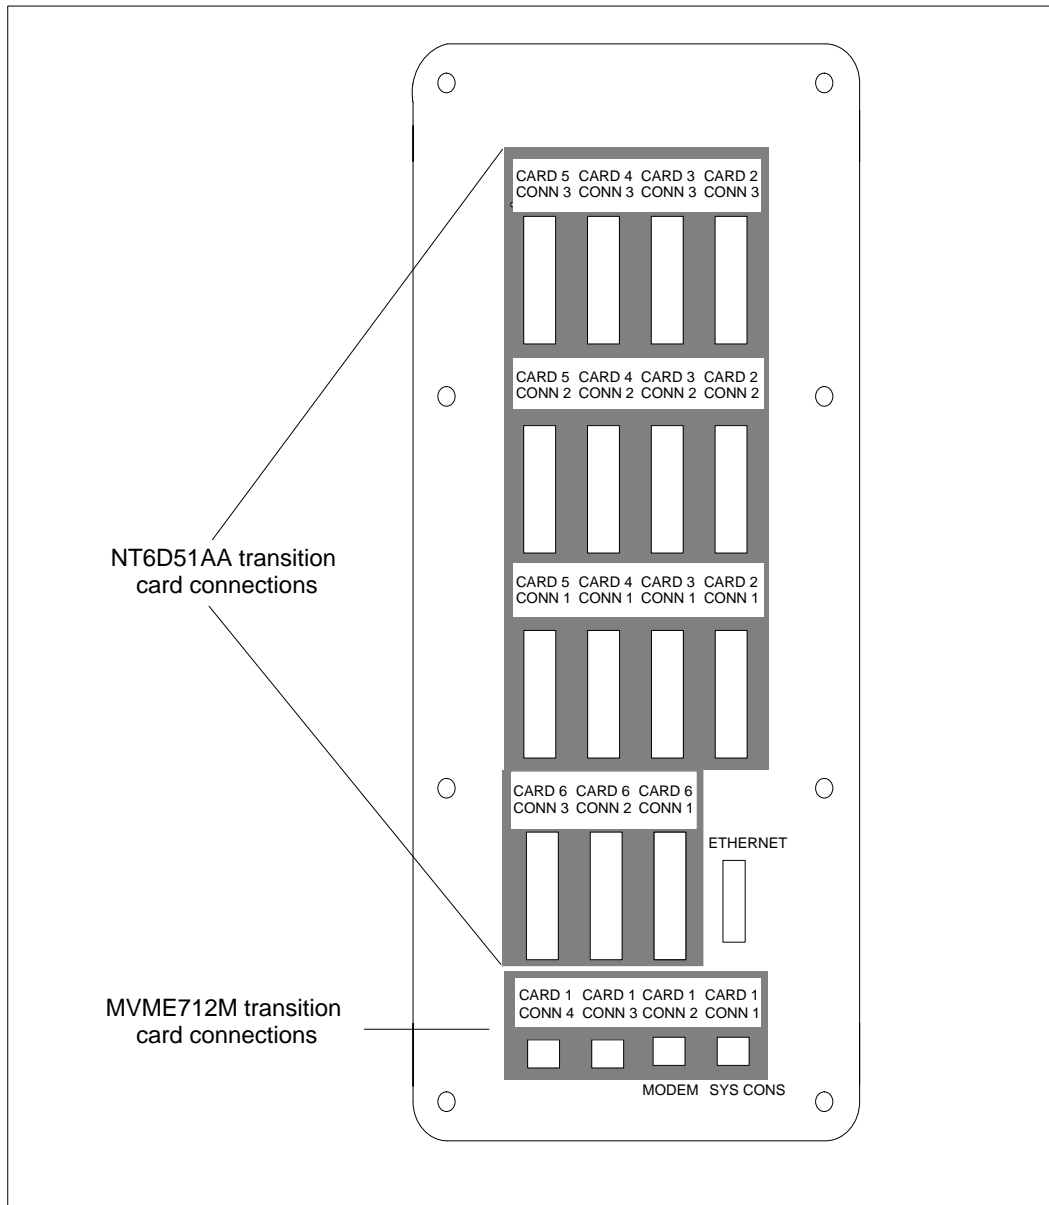

Input/output port assignments

There are five versions of the SNN/SNN-E hardware platform based on the number of MVME332XTS/XT cards configured on the system. An SNN/SNN-E system can be configured with anywhere from one to five MVME332XTS/XT cards.

Note: Card 1, Conn 1 on the generic I/O panel connects to the system console.

Each MVME332XTS/XT, or I/O card, has a maximum of three ports that can be connected to multiport cables as seen in the “VME multiport cable” subsection. Each multiport cable has three RS-232 serial port connectors labeled A, B, and C. The ports in the multiport cable can be connected to peripherals or a limited choice of other devices, except where noted below.

- Cable A of the multiport cable connected to Card 2, Conn 1 must be connected to the Meridian 1 for use with the High-Speed Link.
- Cable C of the multiport cable connected to Conn 3C of each card cannot be used, and should not be connected to any type of device. This is caused because each I/O card has only eight serial ports while the three multiport cables provide nine port connectors.
- If your system is equipped with the Configuration Control feature, you must use one of the cables to connect to the Meridian 1.
- If your system has NAC connectivity, you require a port for the Network Link. Bear in mind that the Network Link can only be assigned to a single port and reduces the number of printers or supervisor workstations by one.
- At least one supervisor workstation and one printer must be connected to any I/O card through the multiport cable.

Aside from these restrictions, you can attach the remainder of the cables to supervisor workstations, printers, or modems.

Note: The Configuration Control feature uses a Load Management Link that is also referred to as a Configuration Control Link.

Table 3-3 lists the assignable ports for the SNN/SNN-E hardware platform as they appear on the Meridian MAX Communication Port Assignment screen, and shows the type of device which can be connected to each port.

As you decide upon the device to connect to each port, enter the device name in the space provided. If you are assigning a supervisor workstation, remote login, or network link, you must specify the type of connection such as direct, dial-up at 2400 baud, and so on. This information is requested during the software installation.

Figure 3-7 shows the Generic Input/Output connector panel for the SNN/SNN-E hardware platform. It identifies the ports which are connected to the multiport cables. The other end of the cables are connected to the peripherals identified by you in Table 3-3.

Please note the following abbreviations:

- HSL (High-Speed Link)
- LML (Load Management Link)
- NL [Network Link (NetLink)]
- PRT (printer)
- SW (supervisor workstation)

Please note the following abbreviations for connection type:

- DC (direct connection)
- 24 (dial-up connection at 2400 baud)
- 96 (dial-up connection at 9600 baud)
- 96S (serial connection at 9600 baud)
- 192S (serial connection at 19 200 baud)

Note: The “Connection type” column in the following table lists all of the possible connections. Some connection types cannot be applied to some devices available. For example, the only connection type possible for a printer is direct connection.

Table 3-3 Communication port assignment sheet					
Card slot	Port	Cable	Devices available	Device selected	Connection type
2	CARD 2, CONN 1	A	HIGH-SPEED LINK (The HSL has a serial connection in which the user can select either 9600 baud or 19 200 baud.)	HSL	96S/192S
2	CARD 2, CONN 1	B	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 1	C	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 2	A	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 2	B	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 2	C	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 3	A	SW / PRT / LML / NL		DC / 24 / 96
2	CARD 2, CONN 3	B	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 1	A	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 1	B	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 1	C	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 2	A	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 2	B	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 2	C	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 3	A	SW / PRT / LML / NL		DC / 24 / 96
3	CARD 3, CONN 3	B	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 1	A	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 1	B	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 1	C	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 2	A	SW / PRT / LML / NL		DC / 24 / 96
—continued—					

Table 3-3 (continued) Communication port assignment sheet					
Card slot	Port	Cable	Devices available	Device selected	Connection type
4	CARD 4, CONN 2	B	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 2	C	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 3	A	SW / PRT / LML / NL		DC / 24 / 96
4	CARD 4, CONN 3	B	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 1	A	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 1	B	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 1	C	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 2	A	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 2	B	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 2	C	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 3	A	SW / PRT / LML / NL		DC / 24 / 96
5	CARD 5, CONN 3	B	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 1	A	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 1	B	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 1	C	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 2	A	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 2	B	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 2	C	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 3	A	SW / PRT / LML / NL		DC / 24 / 96
6	CARD 6, CONN 3	B	SW / PRT / LML / NL		DC / 24 / 96
—end—					

Cables

Internal input/output cables


Meridian MAX internal cables are used to interconnect all devices which are not connected through the VME bus backplane, but still require input/output capability. Table 3-4 lists all of the internal I/O cables available. Figure 3-8 shows a cabling schematic for the SNN hardware platform. These figures identify the cables and devices which must be connected for the Meridian MAX Application Module.

Table 3-4
Internal input/output cables

ENG code	Application	Cable and connector style	From	To
NT7D52AA	VME XSM cable carries the PSTAT signals from the power sense PCB to the power monitor PCB	3-pin connectors (twisted wire)	Power Sense Board (P1)	Power Monitor Board (P1 if module is on left, P2 if module is on right)
NT7D53AA	VME SCSI cable extends the SCSI from the floating connectors to the MSU	50 Telco at floating panel, 2 x 25 connectors at the drives	Floating plate (J3)	Tape Drive (J1) and Disk Drive (J1)
NT7D56AB	VME SCSI extension cable extends SCSI from P2 adapter to the external SCSI port through 712AM and to connector at MSU	2 x 25 connector at P2 and MVME712AM/M 50 Telco at MSU	P2 adapter (J3)	External SCSI port MSU (P3)
—continued—				

Table 3-4 (continued) Internal input/output cables				
ENG code	Application	Cable and connector style	From	To
NT7D56AC	VME SCSI extension cable extends SCSI from P2 adapter to the external SCSI port through 712M and to connector at MSU	2 x 25 connector at P2 and MVME712AM/M 50 Telco at MSU	P2 adapter (J3)	External SCSI port MSU (P3)
NT7D57AA	Carries I/O from ISI and ICC circuit cards to their transition modules	64-pin DIN connectors (flat ribbon)	MVME332XTS/XT (P2)	NT6D51AA (P2)
NT8D46AA	XSM Cable. Carries signals to the XSM from the power monitor PCB	40 pin	Power Monitor Board (J1, J2)	Backplane of module below, or XSM or AEM below
—end—				

Figure 3-8
Internal input/output cabling—SNN/SNN-E hardware platform

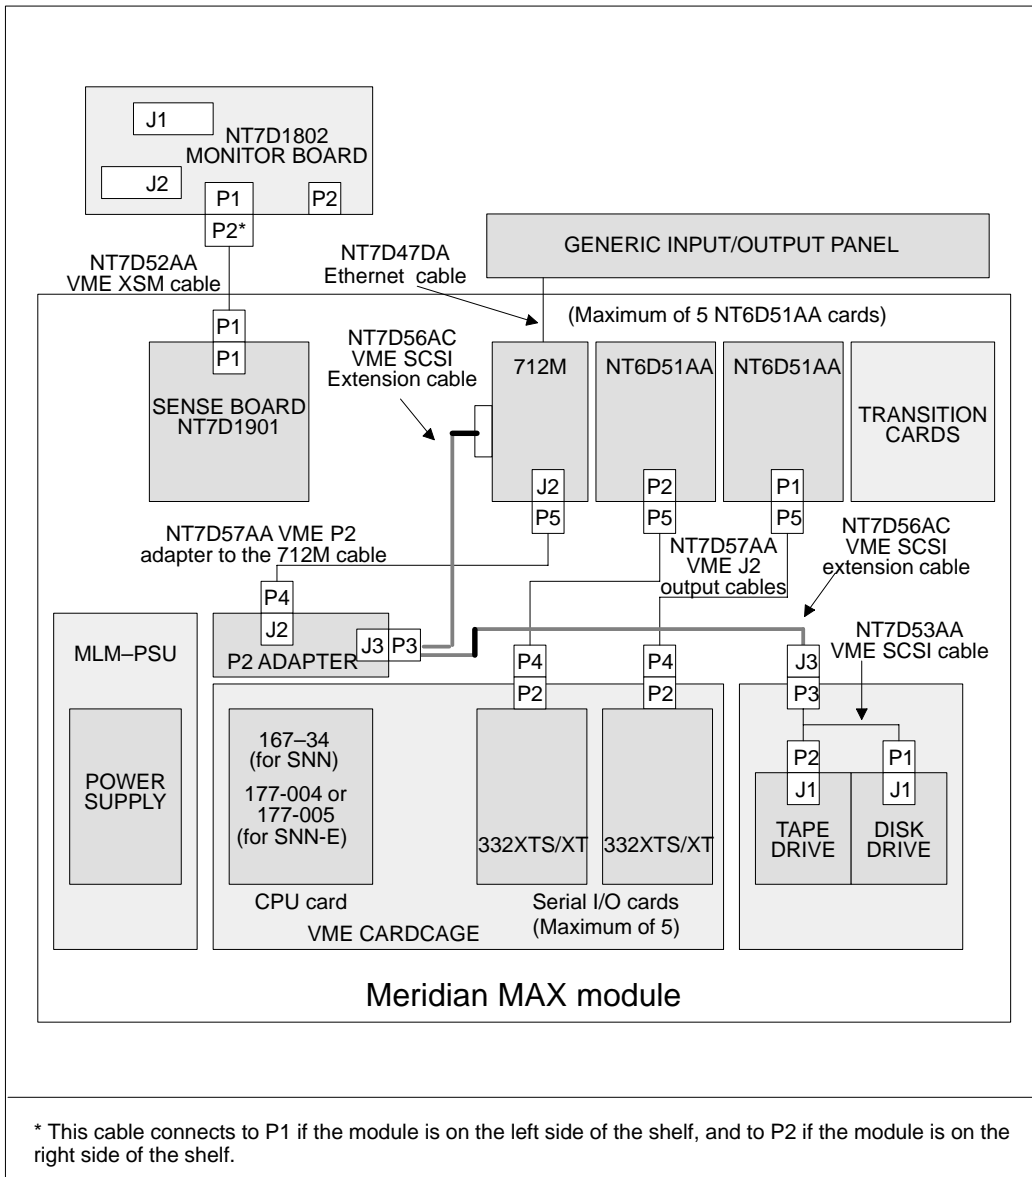

Interconnect input/output cables

Meridian MAX interconnect cables exit from the rear of the transition modules/cards and terminate on the Application Equipment Module's die-cast input/output panel through a custom input/output panel and radio-filtered connectors.

Table 3-5 lists all of the interconnect I/O cables. Figure 3-16 shows the cabling schematics for the SNN hardware platform, which identifies the cables and devices which must be connected for a system.

The term "input/output connector panel" refers to the "Generic I/O panel."

Table 3-5 Interconnect input/output cables			
ENG code	Application	Cable and connector style	Length
NT7D47DA	Carries input/output between the MVME712M transition card and the Input/Output connector panel (Ethernet)	15-pin (male) Ethernet to 15-pin (female) Ethernet	35.5 cm (14 inches)
NT7D58CA	Carries input/output between the Input/Output connector panel (Card 1, Conn 4) and the MVME712M transition board (Serial Port 4)	15-pin (female) high density D-sub to 25-pin (male) round subminiature D-style	35.5 cm (14 inches)
NT7D79BA	Carries input/output between the Input/Output connector panel (Card 1, Conn 1-3, modem and SDI Link) and the MVME712M transition board (Serial Ports 1, 2, and 3)	9-pin (male) to 25-pin (male) subminiature D-style	35.5 cm (14 inches)
NT7D95AA	Carries input/output between the Input/Output connector panel (Card 2-6, Conn 1-3) and the NT6D51AA transition board	25-pin (male) subminiature D-style to 25-pin (male) subminiature D-style	35.5 cm (14 inches)

External input/output cables

Meridian MAX external cables exit from the rear of the Application Module and terminate on the Universal Equipment Module's die-cast input/output panel through a custom input/output panel and radio-filtered connectors.

Table 3-6 lists all of the external I/O cables. Figure 3-16 shows the cabling schematic for the SNN/SNN-E hardware platform. It identifies the cables and devices that must be connected for a system.

Table 3-6 External input/output cables			
ENG code	Application	Cable and connector style	Length
NT1R03DB NT1R03DC NT1R03DF NT1R03DP NT1R03DV	Connects as input/output between modems and peripheral devices	DB-25 (male) connector to DB-25 (male) connector	61 cm (2 ft) 1.2 m (4 ft) 3 m (10 ft) 7.6 m (25 ft) 13.7 m (45 ft)
NT1R03EB NT1R03EC NT1R03EF NT1R03EP NT1R03EV	Connects as input/output between modems and peripheral devices	DB-25 (male) connector to DB-25 (female) connector	61 cm (2 ft) 1.2 m (4 ft) 3 m (10 ft) 7.6 m (25 ft) 13.7 m (45 ft)
NT7D47EA	Carries input/output between the Input/Output connector panel (Ethernet) and the customer-supplied transceiver	15-pin (male) connector with thumb screws to 15-pin (female) connector with sliding latch	3 m (10 ft)
—continued—			

Table 3-6 (continued) External input/output cables			
ENG code	Application	Cable and connector style	Length
NT7D58AB NT7D58AD NT7D58AF NT7D58AL NT7D58AT NT7D58AV	Carries input/output between the Input/Output connector panel and the SDI port. Used for SDI cards, QPC139, QPC841, and for terminals and printers (with A0351509 gender changer). This cable is also used to connect a Meridian MAX system to Option 11.	25-pin (male) subminiature D-style connector to 25-pin (male) subminiature D-style connector	61 cm (2 ft) 1.8 m (6 ft) 3 m (10 ft) 6.1 m (20 ft) 10.7 m (35 ft) 13.7 m (45 ft)
NT7D58BB NT7D58BD NT7D58BF NT7D58BL NT7D58BT NT7D58BV	Carries input/output between the Input/Output connector panel (Card 1, Conn 4) and the Meridian 1/SL-1	15-pin (male) high-density connector to 25-pin (female) connector	61 cm (2 ft) 1.8 m (6 ft) 3 m (10 ft) 6.1 m (20 ft) 10.7 m (35 ft) 13.7 m (45 ft)
NT7D61AB NT7D61AD NT7D61AF NT7D61AL NT7D61AT NT7D61AV	Carries input/output between the Input/Output connector panel and the Meridian MAX system console (with A0351509 gender changer)	25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector	61 cm (2 ft) 1.8 m (6 ft) 3 m (10 ft) 6.1 m (20 ft) 10.7 m (35 ft) 13.7 m (45 ft)
NT8D93AJ NT8D93AW	Carries input/output between the Input/Output connector panel and the XSDI port. Used for the XSDI card, NT8D41.	25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector	4.9 m (16 ft) 14.6 m (48 ft)
NT8D96AE	Carries input/output between the Input/Output connector panel and the peripheral devices connected to the Meridian MAX	Single DB-25 (male) at the I/O panel's end to three DB-25 (female) connectors	2.4 m (8 ft)
—continued—			

Table 3-6 (continued)**External input/output cables**

ENG code	Application	Cable and connector style	Length
NT7D99AA	Connects as input/output between Meridian MAX and dial-up modem, as well as between Meridian MAX and LDS modem	25-pin (male) subminiature D-style DB-25 connector to 25-pin (male) subminiature D-style DB-25 connector	3 m (10 ft)
—end—			

Figure 3-9 shows the cable arrangement for NT1R03Dx when supplying a connection between a modem and a peripheral device.

Figure 3-9
Cabling arrangement—modem connection cable NT1R03Dx

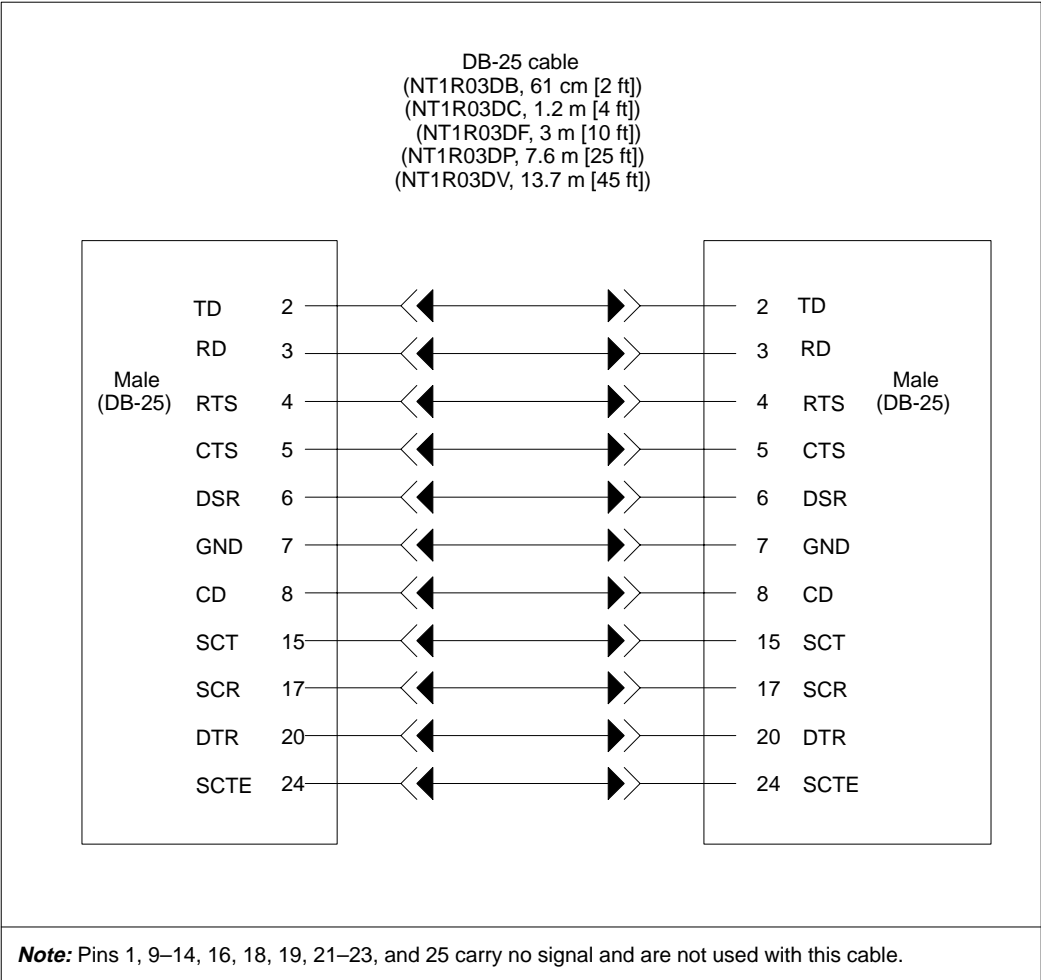


Figure 3-10 shows the cable arrangement for NT1R03Ex when supplying a connection between a modem and a peripheral device.

Figure 3-10
Cabling arrangement—modem connection cable NT1R03Ex

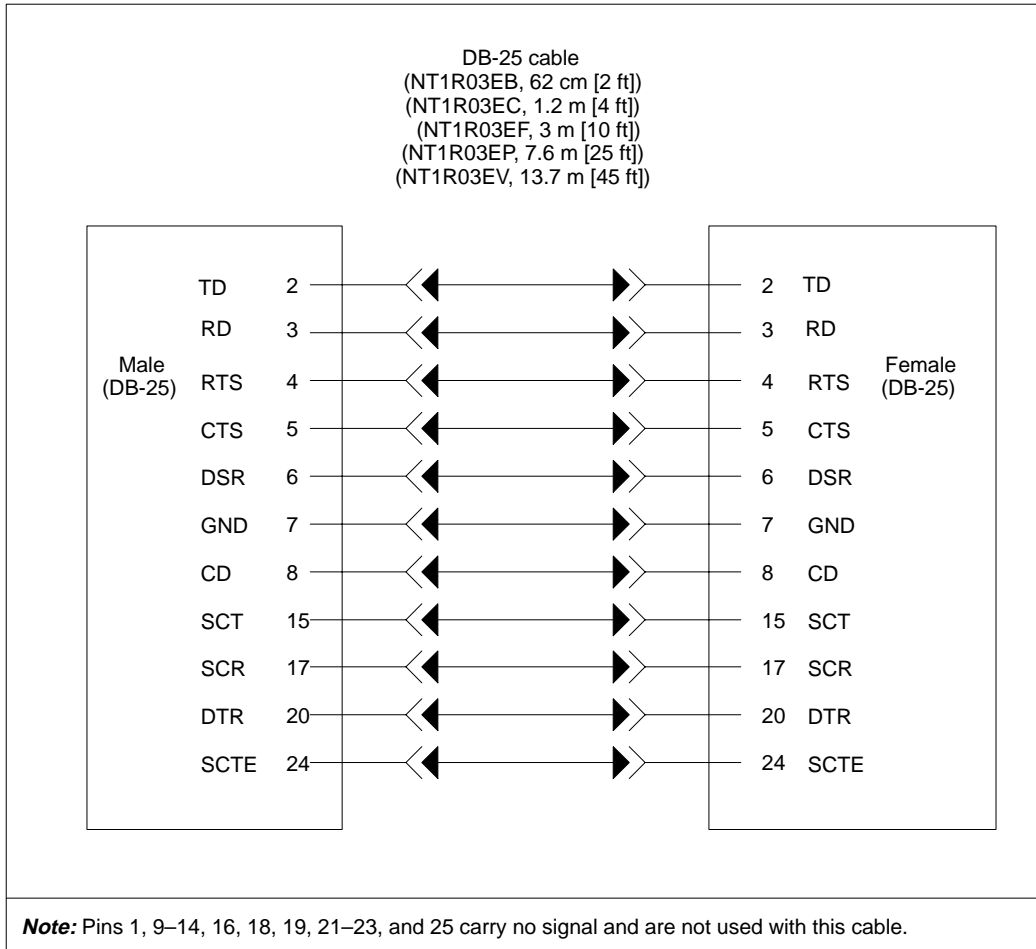


Figure 3-11 shows the cable arrangement for NT7D47EA when supplying an Ethernet connection for a LAN.

Figure 3-11
Cabling arrangement—Meridian MAX cable NT7D47EA used for LAN through Ethernet connection

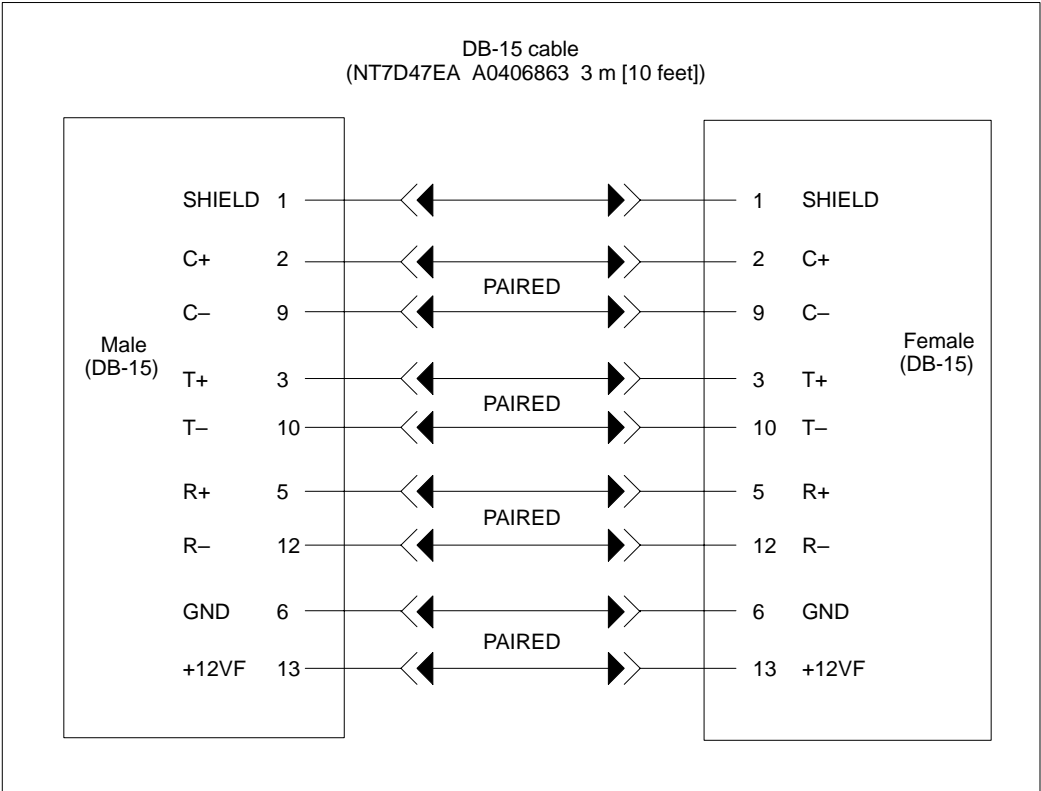


Figure 3-12 shows the cable arrangement for NT7D58Ax when supplying an HSL or LML connection between Meridian MAX and the Meridian 1 or Option 11. It can also be used for printer connections and terminal connections (with A0351509 gender changer).

Figure 3-12

Cabling arrangement—Meridian MAX cable NT7D58Ax used for High-Speed Link (HSL), and Load Management Link (LML) connections to Meridian 1; to Option 11; and for terminals (with the A0351509 gender changer) and printer connections

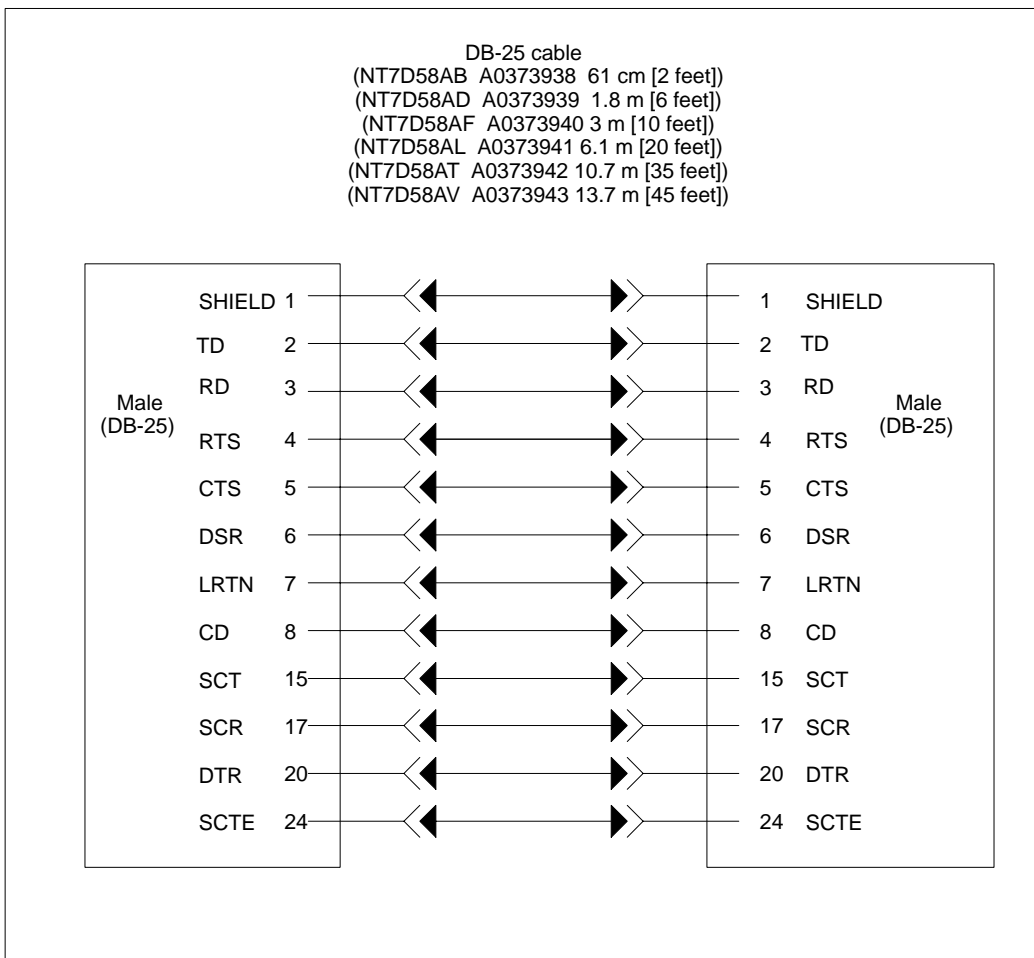


Figure 3-13 shows the cable arrangement for NT7D61Ax when it is used for the system console or system external modem.

Figure 3-13

Cabling arrangement—Meridian MAX cable NT7D61Ax used for the system console, or an SNN system external modem

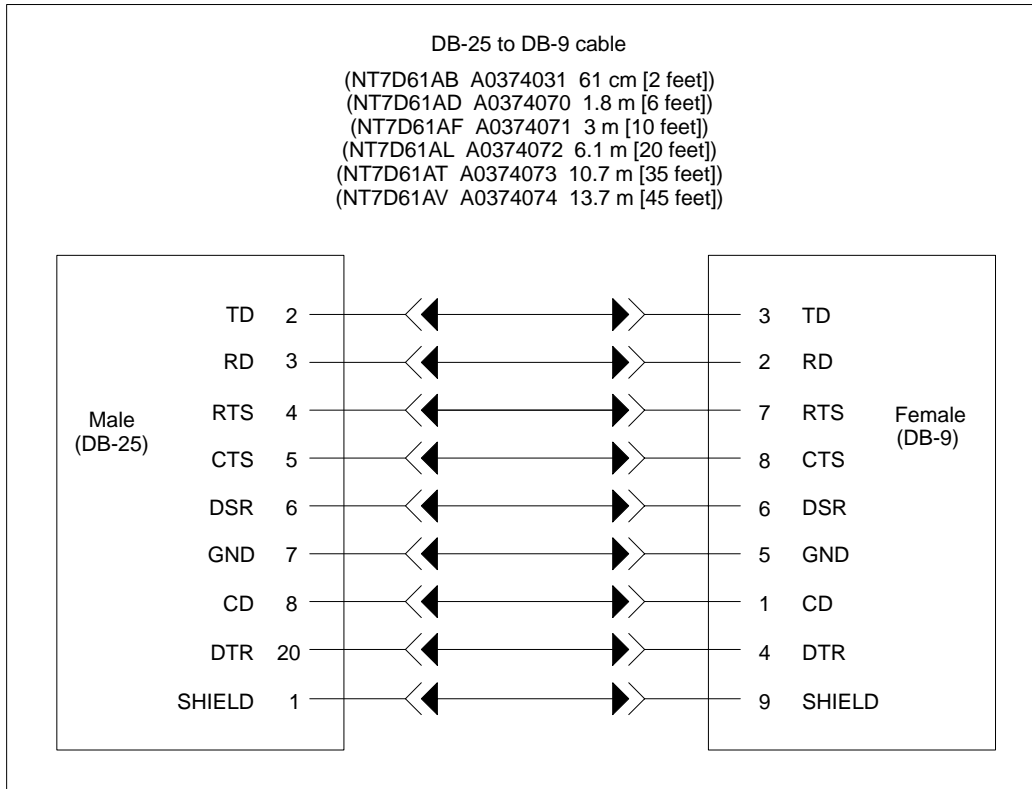


Figure 3-14 shows the cable arrangement for NT8D93Ax when supplying an HSL or LML connection between Meridian MAX and the Meridian 1.

Figure 3-14

Cabling arrangement—Meridian MAX cable NT8D93Ax used for High-Speed Link (HSL) and Load Management Link (LML) connections to Meridian 1

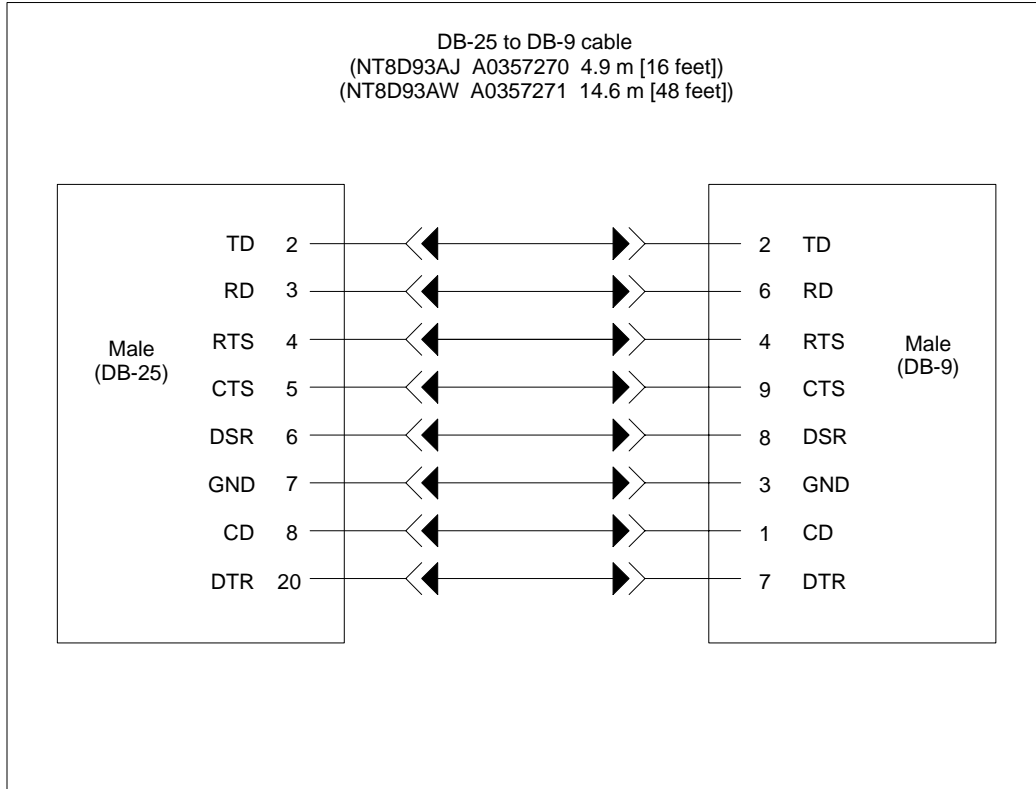


Figure 3-15 shows the cable NT7D99AA when it is used for a dial-up modem or a limited-distance modem.

Figure 3-15
Cabling arrangement—modem connection cable NT7D99AA to dial-up modem or limited-distance modem


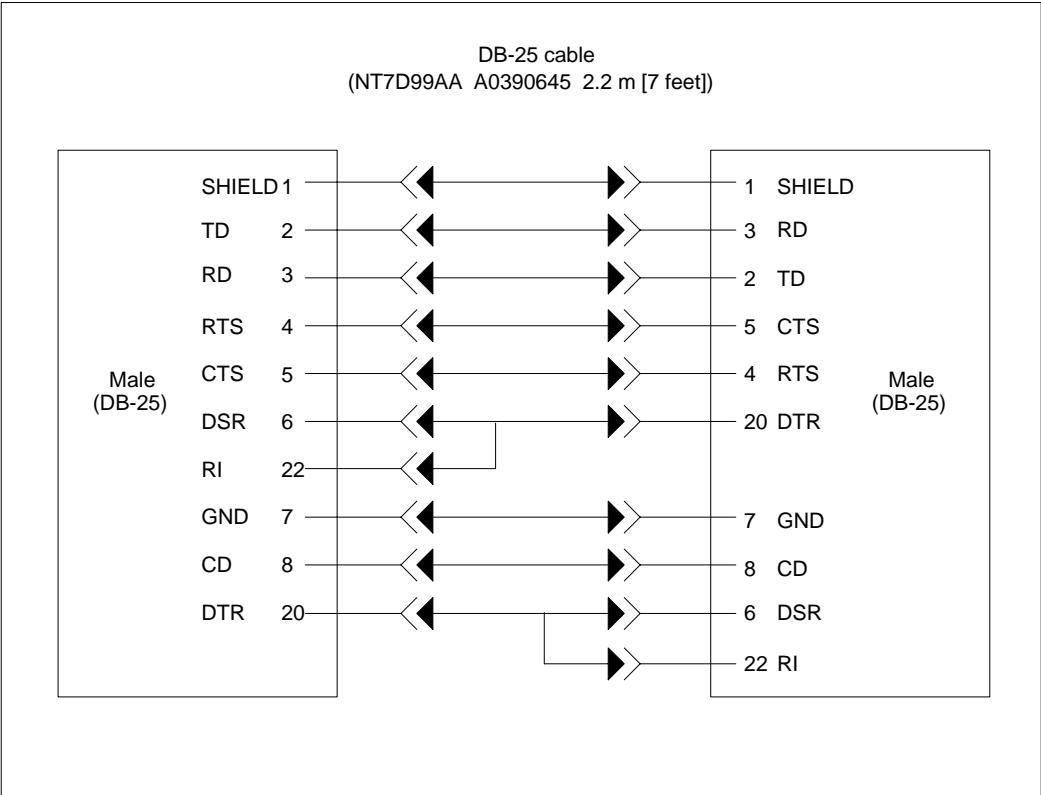


Figure 3-16
External input/output cabling—SNN/SNN-E hardware platform

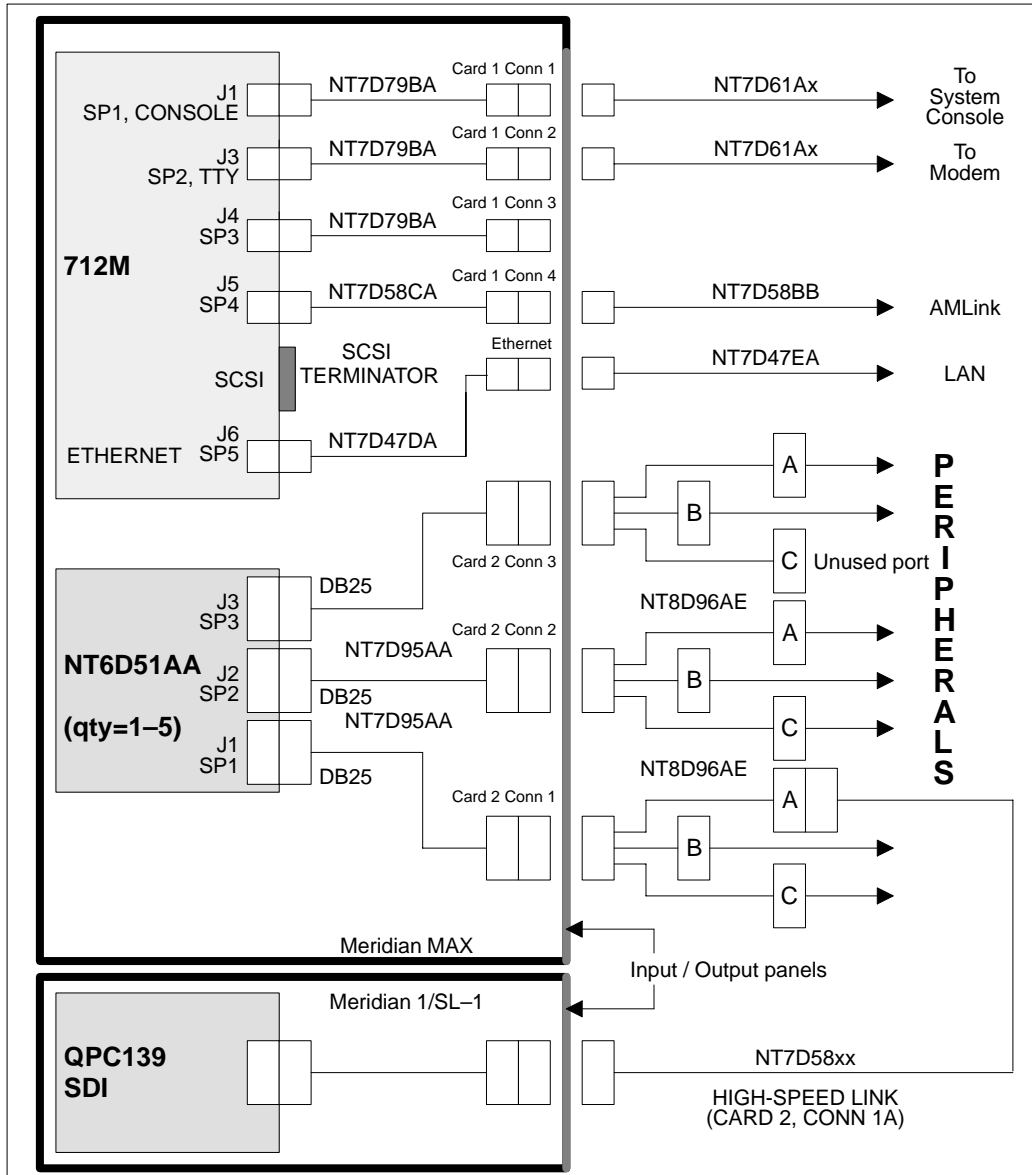

VME multiport cable


This cable, seen in Figure 3-17, connects the Meridian MAX module with each peripheral in the system. Each cable has a single male DB-25 plug at one end, and three female DB-25 plugs at the other end. The single DB-25 plug connects to a DB-25 socket on the Generic I/O panel. Each of the three DB-25 plugs at the other end are connected to a peripheral device. Refer to the correct port assignment chart when connecting peripherals to cables.

An RS-232 straight-through cable with male DB-25 connectors can extend the range between a Meridian MAX and a peripheral device. The RS-232 must be less than 13 meters (42 feet) long, and must use all 25 pins. For greater distances, refer to the “Modems” chapter. The cables from ACD-MAX 3.0 cannot be used by Meridian MAX.

Table 3-7 is the wiring table for the multiport cable. Note that all of the pins listed in the “From” column represent pins in the plug which connect to the Generic I/O panel. Pins listed in the “To” column are pins in the DB-25 sockets for the cables listed in the “Cable” column.

Table 3-7 VME multiport cable wiring							
From	To	Cable	Signal name	From	To	Cable	Signal name
2	2	A	TD	25	7	B	GND
3	3	A	RD	24	8	B	CD
4	4	A	RTS	23	20	B	DTR
5	5	A	CTS	14	2	C	TD
6	6	A	DSR	15	3	C	RD
7	7	A	GND	16	4	C	RTS
8	8	A	CD	17	5	C	CTS
20	20	A	DTR	18	6	C	DSR
9	2	B	TD	19	7	C	GND
10	3	B	RD	21	8	C	CD
11	4	B	RTS	22	20	C	DTR
12	5	B	CTS	1	1	A	SHIELD
13	6	B	DSR	1	1	B	SHIELD

Figure 3-17
VME multiport cable

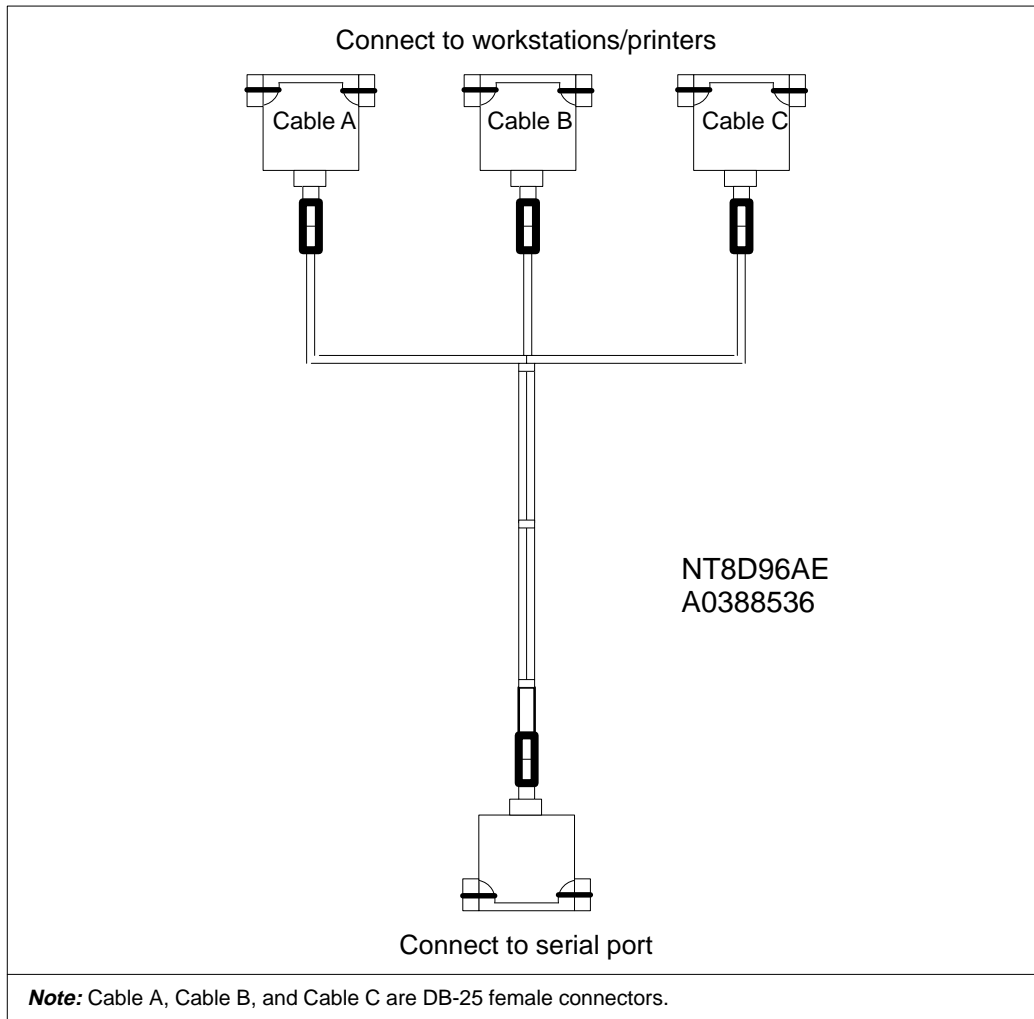

Hardware upgrades and replacements

As your operation and needs grow, so may your need to expand the system.

You can add MVME332XTS/XT eight-channel asynchronous boards to the Meridian MAX, provided that the maximum capacity for the system is not exceeded. With each additional MVME332XTS/XT card, the number of available ports increases by increments of eight.

The SNN/SNN-E hardware platform can support between 8 and 40 ports.

It is less likely that you may need to replace a component of the system. If this is required, the upgrade instructions given in this section permit you to make the replacement.

Note: All upgrades and replacements must be performed by qualified technicians.



CAUTION **Risk of equipment damage**

Use an antistatic wrist strap before you remove components from an antistatic bag. Failure to do so can result in damage to components.



CAUTION **Risk of data corruption**

Shut down the system from the maintenance menu, then secure the system before powering down the module.

If you are adding a module to your system, power down the column. Once the appropriate equipment is powered down, remove the column's faceplate and back plate for the appropriate shelf. See the "Meridian MAX power-down procedure" chapter for more information.

Adding MVME332XTS/XT cards to an SNN/SNN-E system

Before inserting any additional cards into the Meridian MAX, ensure that each card's switch settings match those given in Table 3-2. Procedure 3-4 details instructions on adding MVME332XTS/XT cards.

Procedure 3-4

To add MVME332XTS/XT cards to an SNN/SNN-E system

- 1 Perform a courtesy shutdown of the Meridian MAX software. Ensure that the I/O Port Reconfiguration on System Restart is enabled.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system running" chapter, "Shut down the system" section, for instructions on shutting down your Meridian MAX system.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system shutdown" chapter, "Restart and Power Down Utilities" section, for instructions to enable the I/O Reconfiguration on System Restart feature.
- 2 Secure the Meridian MAX system for power down.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and Administration programs: system shut down" chapter, "Restart and Power Down Utilities" section, "Secure the System for Power Down" subsection, for more information.
- 3 Remove the front and rear panels of the Application Equipment Module (AEM).
- 4 Power down the Application Module (AM). The circuit breaker (CB) is located at the left of the AEM.
- 5 To remove an existing MVME332XTS/XT card, locate the existing card that needs switch settings verified or that needs to be replaced. Use a Phillips screwdriver to remove the top and bottom retaining screws which keep the card in place. Press up on the card's top release lever while pressing down on the bottom card release lever. When enough pressure is applied, the card pushes itself out about a quarter of an inch. Carefully pull the card out of the slot and set it aside.
- 6 To add additional MVME332XTS/XT eight-channel asynchronous boards to Meridian MAX, remove the faceplates covering the empty card slots specified in Table 3-8.

Table 3-8 MVME332XTS/XT card slot placement		
Number of cards	Number of ports	Slot placement
1	8	2
2	16	2, 3
3	24	2, 3, 4
4	32	2, 3, 4, 5
5	40	2, 3, 4, 5, 6

- 7 Take each new MVME332XTS/XT card from its packaging and check the switch settings. Refer to the "MVME332XTS and MVME332XTS/XT eight-channel asynchronous board" section of this chapter for this information. Carefully align the card with the black plastic guides found along the top and bottom of the VME card cage. Keeping the new card level, slide the card into the card cage until the new card is flush with the faceplate of the AM. Press firmly on the screw at the center of the faceplate to ensure proper seating.

Note: If you are uncertain as to whether the card is in as far as it can go, simultaneously press up on the top latch and down on the bottom latch. If the card pops forward slightly, then the card was in as far as it could go.

- 8 Once the card is inserted into the card cage, use a screwdriver to tighten the top and bottom retaining screws to keep the card in place.

Note: Tightening the screws while the card is not in as far as it can go could result in stripping the screws.

- 9 At the back of the AEM, connect the three multiport cables to the I/O connector panel. Use the appropriate port assignment table to determine which peripherals to connect to the new cables.
- 10 If there are no further hardware upgrades to be performed, replace the AEM's back and front panels. Power up the AEM. The hardware upgrade is complete.

- 11 Perform an application upgrade to add the card.

To perform an application upgrade, refer to the *Meridian MAX 8 Upgrade Guide* (NTP 553-4001-210), "Software upgrades and reinstallations" chapter.

Replacing the CPU card

Use this procedure to replace the MVME167-34 card in the SNN hardware platform or the MVME177-005 card in the SNN-E hardware platform.

Note: If you change the CPU card, you must make the LAN aware of the card's Media Access Control address. This is done by "pinging" a known device on your LAN while the Meridian MAX is in product mode. LAN connections to the Meridian MAX may not work properly if this address is not known to the LAN. For more information on the ping process, refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "LAN link diagnostic tools" chapter, "Ping" section.

Procedure 3-5

To replace the CPU card

- 1 Shut down the Meridian MAX software. Ensure that the I/O Port Reconfiguration on System Restart is enabled.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and Administration programs: system running" chapter, "Shut down the system" section, for instructions on shutting down your Meridian MAX system.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and Administration programs: system shutdown" chapter, "Restart and Power Down Utilities" section, for instructions to enable the System Restart feature.
- 2 Power down the Application Module (AM). The circuit breaker (CB) is located at the left of the AEM.
- 3 Locate the existing CPU card that needs to be replaced. Use a Phillips screwdriver to remove the top and bottom retaining screws which keep the card in place. Press up on the card's top release lever while pressing down on the bottom card release lever. When enough pressure is applied, the card pushes itself out about a quarter of an inch. Carefully pull the card out of the slot and set it aside.
- 4 Take the replacement card from its packaging. Since jumpers are set and tested in the factory, it is not necessary to change the jumper settings on the cards.
- 5 Carefully align the card with the black plastic guides found along the top and bottom of the VME card cage. Keeping the card level, slide the card into the card cage until the card is flush with the faceplate of the AM. Press firmly on the screw at the center of the faceplate to ensure proper seating.

3-48 Hardware installation: Application Module (SNN/SNN-E)

Note: If you are uncertain as to whether the card is in as far as it can go, simultaneously press up on the top latch and down on the bottom latch. If the card pops forward slightly, then the card was in as far as it could go.

- 6 Once the card is inserted into the card cage, use a screwdriver to tighten the top and bottom retaining screws to keep the card in place.
Tightening the screws while the card is not fully inserted could result in stripping the screws.

Figure 3-18
MVME167-34 single-board computer card


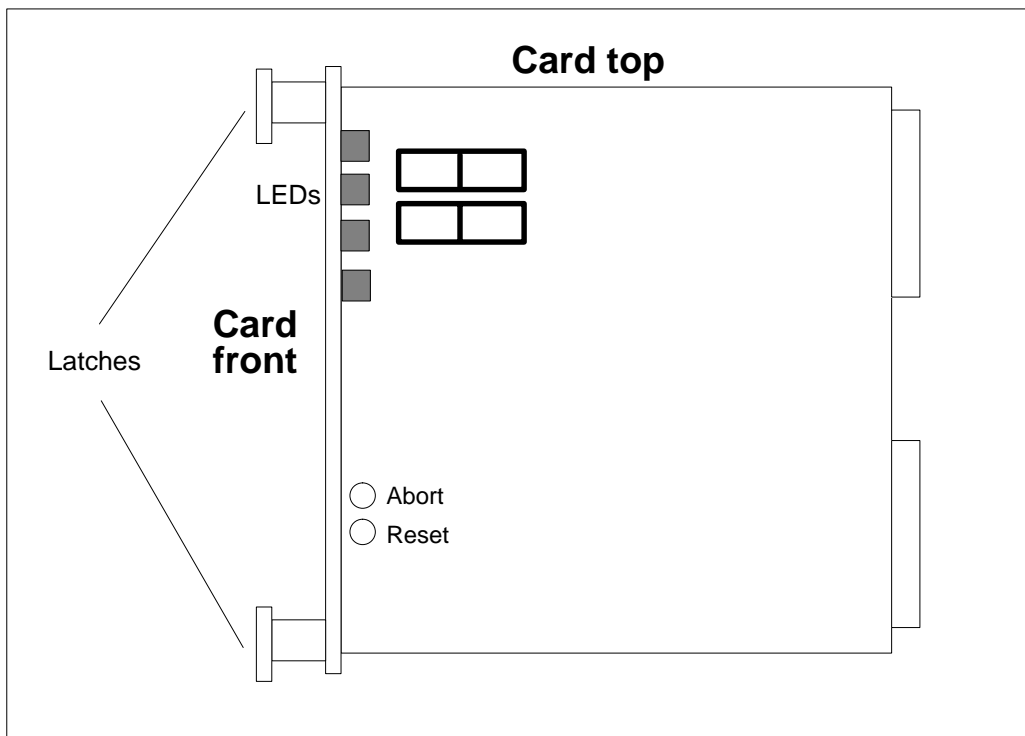


Figure 3-19
MVME177-005 single-board computer card

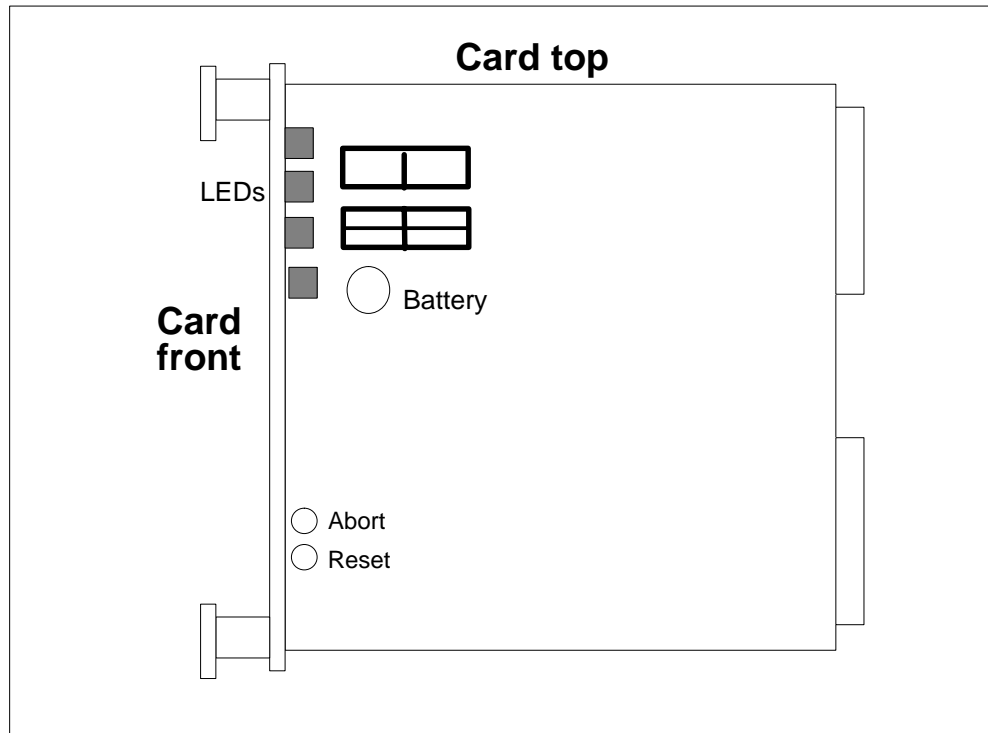

Configuring the CPU card

Once the upgrade or replacement is completed, follow Procedure 3-6 to configure the CPU card.

Procedure 3-6

To replace the CPU card

- 1 If the Meridian MAX is already powered down, go to Step 4.

If the Meridian MAX is not powered down, shut down the Meridian MAX software.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system running" chapter, "Shut down the system" section, for instructions on shutting down your Meridian MAX system.

- 2 Secure the Meridian MAX 8 for power down.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and Administration programs: system shut down" chapter, "Restart and Power Down Utilities" section, "Secure the System for Power Down" subsection, for more information.

- 3 Power down your system by flipping the power switch located to the left of the AEM to the OFF position. Wait approximately 20 seconds.
- 4 Flip the power switch to the ON position.

The system displays the following at the maintenance console. (The CPU card being configured [MVME167 or MVME177] appears in the message instead of "xxx".) Your system messages may differ.

Copyright Motorola Inc. 1988 - 1994, All Rights Reserved

MVMExxx Debugger/Diagnostics Release Version 2.2 - 01/14/94

COLD Start

Local Memory Found =xxxxxxx (&xxxxxxx)

Note: (The "xxxxxxx (&xxxxxxx)" will be 04000000 (&67108864) for SNN-E, 02000000 (&33554432) for SNN, and 01000000 (&16777216) for IPE/IPE-E.)

- 5 If your card was preset in the factory, go to Step 8.

If your card was not preset in the factory, the following message appears:

Autoboot in progress... To abort hit <BREAK>

- 6 Press the {BREAK} key.

Note: {F5} on the VT520 and VT420 is equivalent to the {BREAK} key.

--Break Detected--

The following menu may be shown. If it does not appear, go to Step 8.

- 1) Continue System Start Up
- 2) Select Alternate Boot Device
- 3) Go to System Debugger
- 4) Initiate Service Call
- 5) Display System Test Errors
- 6) Dump Memory to Tape

Enter Menu #:

- 7** Enter **3** to select the “Go to System Debugger” option.
- 8** The system displays one of the following prompts:
- ```
167-Bug>
177-Bug>
```
- 9** Enter **env** to configure the system environment.
- The default values that appear when the system is powered on are in effect at this moment. They may differ if the card was configured at the factory or at the site. Regardless, only the following recommended values should be entered.
- ```
Bug or System environment [B/S] = ?
```
- 10** Enter **b** for bug.
- The system displays the following prompt:
- ```
Field Service Menu Enable [Y/N] = ?
```
- 11** Enter **n** to reject the Field Service Menu.
- The system displays the following prompt:
- ```
Remote Start Method Switch [G/M/B/N] = ?
```
- 12** Enter **b**.
- The system displays the following prompt:
- ```
Probe System for Supported I/O controllers [Y/N] = ?
```
- 13** Enter **y** to probe the system for supported I/O controllers.
- The system displays the following prompt:
- ```
Negate VMEbus SYSFAIL* Always [Y/N] ?
```
- 14** Enter **n** to reject the Negate VMEbus SYSFAIL* Always prompt.
- The system displays the following prompt:
- ```
Local SCSI Bus Reset on Debugger Startup [Y/N] = ?
```
- 15** Enter **y** to start up the local SCSI bus reset on the debugger.
- The system displays the following prompt:
- ```
Local SCSI Bus Negotiations Type [A/S/N]      = ?
```
- 16** Enter **a** to set the local SCSI bus negotiations type.
- The system displays the following prompt:
- ```
Ignore CFGA Block on a Hard Disk Boot [Y/N] = ?
```

- 17** Enter **y** to ignore the CFGA block on a hard disk boot.  
The system displays the following prompt:  
`Auto Boot Enable [Y/N] = ?`
- 18** Enter **y** to enable the auto boot.  
The system displays the following prompt:  
`Auto Boot at power-up only [Y/N] = ?`
- 19** Enter **n** to disable auto boot at power-up only.  
The system displays the following prompt:  
`Auto Boot Controller LUN = ?`
- 20** To skip the following default prompts, go to Step 24.  
To continue, using the following default prompts, enter **00**.  
The system displays the following prompt:  
`Auto Boot Device LUN = ?`
- 21** Enter **00**.  
The system displays the following prompt:  
`Auto Boot Abort Delay = ?`
- 22** Enter **15**.  
The system displays the following prompt:  
`Auto Boot Default String [NULL for an empty string] = ?`
- 23** Press **{RETURN}**.  
The system displays the following prompt:  
`ROM Boot Enable [Y/N] = ?`
- 24** Enter a period (.).  
The system displays the following prompt:  
`Update Non-Volatile RAM (Y/N) = ?`
- 25** Enter **y**.  
The system displays the following prompt:  
`Reset local System (CPU) (Y/N) = ?`
- 26** Power down your system by flipping the power switch located to the left of the AEM to the OFF position. Wait about 20 seconds, then power on the system and install your Meridian MAX 8 software.

---

## Chapter 4: Hardware installation: Intelligent Peripheral Equipment module

---

### A word about warranties

It is extremely important that you read and understand the warranties issued for your Meridian MAX peripheral devices. Each warranty details what you can and cannot do with the warranted item.

While the utmost care has been taken to ensure that the procedures described in this NTP do not void any of the warranties, it is still possible for an instruction to be in conflict with a warranty when a warranty changes after the publication of this NTP. If you find such a condition, inform your dealer or Nortel service representative of the problem.

#### **ATTENTION**

Under no circumstances should you void your warranty for the sake of following any instruction given in this (or any other) document. Be sure to register your warranties with the appropriate companies (usually the manufacturers) where required.

## Overview

The Meridian MAX Intelligent Peripheral Equipment (IPE) and Intelligent Peripheral Equipment-Enhanced (IPE-E) are ACD-MIS products that address the needs of the small call center market. They are designed to function within the Meridian 1 environment. The IPE and IPE-E have so many similarities that they are referred in this document as IPE/IPE-E.

The IPE platform is not available as a new system. It is only supported as an upgrade system (for example, call centres with existing IPE systems upgrading to Meridian MAX 8).

For an IPE platform with a 1 Gbyte hard drive to be recognized as an IPE-E platform, an appropriate keycode must be used. There are two versions of the Meridian MAX IPE/IPE-E—one for the Option 11 and one for the Option 21–81.

Table 4-1 lists the equipment and materials required for a Meridian MAX IPE/IPE-E installation.

| <b>Table 4-1<br/>Meridian MAX IPE/IPE-E installation equipment and material list</b> |                                                                                                                                                                 |
|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Equipment</b>                                                                     | <b>Contents</b>                                                                                                                                                 |
| Meridian MAX IPE-E<br>Option 11                                                      | Meridian IPE-E Module (A0669467)<br>Containing:<br>SMM167 CPU card<br>1 Gbyte Seagate ST31255N hard disk drive<br>600 Mbyte TEAC MT-2ST/F50B-000 cassette drive |
| —continued—                                                                          |                                                                                                                                                                 |

| <b>Table 4-1 (continued)</b><br><b>Meridian MAX IPE/IPE-E installation equipment and material list</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Equipment</b>                                                                                       | <b>Contents</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Meridian MAX IPE<br>Option 11                                                                          | Meridian IPE Module (A0617009)<br>Containing:<br>SMM167 CPU card<br>240 Mbyte Fujitsu M2614 M2637S hard disk drive<br>600 Mbyte TEAC MT-2ST/F50B-000 cassette drive<br>* New Meridian IPE Modules (A0617009) shipped after<br>November 1995 contain a 1 Gbyte Seagate ST31230 hard<br>disk drive and supports 250 Mbyte database sizes.<br><br>Meridian MAX IPE Module (NT1R02AA)<br>Containing:<br>SMM167 CPU card<br>180 Mbyte Seagate ST1201N hard disk drive<br>155 Mbyte TEAC MT-2ST/N50 cassette       |
| Meridian IPE-E<br>Option 21–81                                                                         | Meridian IPE Module (A0669468)<br>Containing:<br>SMM167 CPU card<br>1 Gbyte Seagate ST31055N hard disk drive<br>600 Mbyte TEAC MT-2ST/F50B-000 cassette drive                                                                                                                                                                                                                                                                                                                                                |
| Meridian MAX IPE<br>Option 21–81                                                                       | Meridian IPE Module (A0617010)<br>Containing:<br>SMM167 CPU card<br>240 Mbyte Fujitsu M2614 M2637S hard disk drive<br>600 Mbyte TEAC MT-2ST/F50B-000 cassette drive<br>* New Meridian IPE Modules (A0617010) shipped after<br>November 1995 contain a 1 Gbyte Seagate ST31230 hard<br>disk drive and supports 250 Mbyte database sizes.<br><br>Meridian MAX IPE Module (NT1R02BA)<br>Containing:<br>SMM167 CPU card<br>180 Mbyte Seagate ST1201N hard disk drive<br>155 Mbyte TEAC MT-2ST/N50 cassette drive |
| —continued—                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

| <b>Table 4-1 (continued)</b><br><b>Meridian MAX IPE/IPE-E installation equipment and material list</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Equipment</b>                                                                                       | <b>Contents</b>                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Cables                                                                                                 | Meridian MAX IPE/IPE-E shielded four-port cable with Ethernet (NT1R03AA)<br>Meridian MAX IPE/IPE-E shielded four-port cable (NT1R03BA)<br>Meridian MAX IPE/IPE-E extension cable for Option 11 (NT1R03CA)<br>(For other extension cables, refer to the "Cables" section of this chapter.)                                                                                                                                               |
| Workstations<br>(any combination)                                                                      | VDT-type (DEC VT520, DEC VT420, DEC VT320, DEC VT220, or HP700/32 or terminals which are 100% compatible)<br>PC (connected directly or through a modem) to the Meridian MAX and running Reflection 4+ for DOS terminal emulator. All PCs supported by Reflection are supported by Meridian MAX.<br>PC directly connected or connected through a LAN to the Meridian MAX and running Meridian Terminal Emulator (MTE)                    |
| Reports printer<br>(any combination)                                                                   | HP RuggedWriter printer<br>HP LaserJet series II printer<br>HP LaserJet series III printer<br>HP LaserJet series 4 printer<br>HP LaserJet series 4 Plus printer<br>HP LaserJet series 5Si MX<br>HP PaintJet 3630 printer<br>HP DeskJet printer<br>HP DeskJet 500 printer<br>HP DeskJet 560C printer (with serial-parallel converter)<br>HP DeskJet 660C printer (with serial-parallel converter)<br>DEC LA195 (Epson-mode only) printer |
| —continued—                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                         |

| Table 4-1 (continued)<br>Meridian MAX IPE/IPE-E installation equipment and material list |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Equipment                                                                                | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Modems                                                                                   | NetComm SmartModem M7F<br>Gandalf LDS 120E<br>Develcon DS511A<br>Ven-Tel 2400 Plus II<br>Ven-Tel 9600 Plus<br>Racal VI2422PA<br>UDS EC224A/D<br>UDS 2440<br>US Robotics Sportster 28,800 Data/Fax                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Software                                                                                 | Meridian MAX Operating System tape cassette including the<br>Motorola UNIX System V/68 R3V8 Operating System<br>and a Standalone System Interactive Diagnostics (SSID)<br>package<br>Meridian MAX Application Software tape cassette including the<br>Motorola Network Services Extension (NSE) package for<br>the V/68 R3V8 OS<br>UNIFY Version 5, Version UNI5.0.5.2.0 RDBMS<br>Grafman 3.10<br>Z-Modem protocol software<br>Meridian Terminal Emulator (MTE) 5.32 or lower for DOS if<br>using personal computers as workstations (optional)<br>Meridian Terminal Emulator (MTE) for Windows if using<br>personal computers as workstations (optional). This may<br>be Version 6, 7, or 8 (optional).<br>Reflection 4+ version 3.0 for DOS (or higher) if using<br>personal computers as workstations (customer provided) |
| —continued—                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



| Table 4-1 (continued)<br>Meridian MAX IPE/IPE-E installation equipment and material list |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Equipment                                                                                | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Documentation                                                                            | <p>P0853407 <i>Meridian MAX 8 Supervisor's User Guide</i><br/> P0853414 <i>Meridian MAX 8 MSI/MEI Protocol Reference Guide</i><br/> P0853413 <i>MTE 8 User Guide</i><br/> 553-4001-210 <i>Meridian MAX 8 Upgrade Guide</i> (P0853412)</p> <p>A0662798 (includes the following set of NTPs):<br/> 553-4001-111 <i>Meridian MAX 8 Installation Guide</i><br/> 553-4001-811 <i>Meridian MAX 8 Maintenance and Diagnostics Guide</i><br/> 553-3201-200 <i>Application Equipment Module Installation Guide</i></p> |
| Miscellaneous equipment                                                                  | Serial-parallel converter for printers (A0621070)                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Miscellaneous supplies                                                                   | <p>*Use Order Code A0352271 to order a blank 150 Mybte data cassette tape for the Meridian MAX IPE Module (NT1R02AA/BA)</p> <p>*Use Order Code A0605411 to order a blank 600 Mybte data cassette tape for the Meridian IPE-E Option 11 (A0669467), Meridian IPE Option 11 (A0617009), Meridian IPE-E Option 21-81 (A0669467), or Meridian IPE Option 21-81 (A0617010)</p> <p>* A minimum of three blank data cassette tapes is required.</p>                                                                  |
| —end—                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## Faceplate components

There are four light-emitting diodes (LEDs) and two buttons on the Meridian MAX IPE/IPE-E module faceplate shown in Figure 4-1 and Figure 4-2. These diagrams also show the front of the Meridian MAX IPE/IPE-E module containing a 600 Mbyte cassette tape drive.

Figure 4-2 shows an illustration of the front of the Meridian MAX IPE module containing a 155 Mbyte cassette tape drive.

**Note 1:** The 600 Mbyte tape drive in the IPE/IPE-E has been rotated 180 degrees in the Meridian MAX 8 compared to the tape drive released with earlier versions of Meridian MAX IPE. This is shown in Figure 4-1.

**Note 2:** A Meridian MAX IPE/IPE-E containing a 600 Mbyte cassette tape drive uses a tape ejector button. A Meridian MAX IPE containing a 155 Mbyte cassette tape drive uses a tape latch.

The LEDs show the following conditions:

- **PWR** This green LED lights continuously, indicating power is running to the Meridian MAX IPE/IPE-E.
- **RUN** This yellow LED lights almost continuously but flickers when the system processor has stopped.
- **SCSI (Small Computer System Interface)** The intensity of this yellow LED varies depending on system use. Heavy communication between devices is indicated by a solid bright light, while a dimmer flickering light indicates less data movement.
- **FAIL** This red LED lights when a hardware failure has occurred on the CPU card. The LED also lights for a 7- to 10-minute duration when the SMM167 card on-board diagnostics is enabled during bootup.



**CAUTION**

**Risk of system interruption**

*Do not press* the abort or reset button while applications are running. Shut down the system software before pressing the abort or reset buttons. This information is provided in the “Meridian MAX power-down procedure” chapter.

The buttons produce the following conditions and should not be pressed unless under the direction of Nortel support personnel:

- **ABORT** This button halts the Meridian MAX IPE/IPE-E system.
- **RESET** This button reinitializes the Meridian MAX IPE/IPE-E system. The system performs a self test and then reboots.




**CAUTION**


**Risk of equipment damage**

Use an antistatic wrist strap before you remove components from an antistatic bag. Failure to do so results in damage to components.

**Figure 4-1**  
**Meridian MAX IPE/IPE-E module containing a 600 Mbyte tape drive—front view**

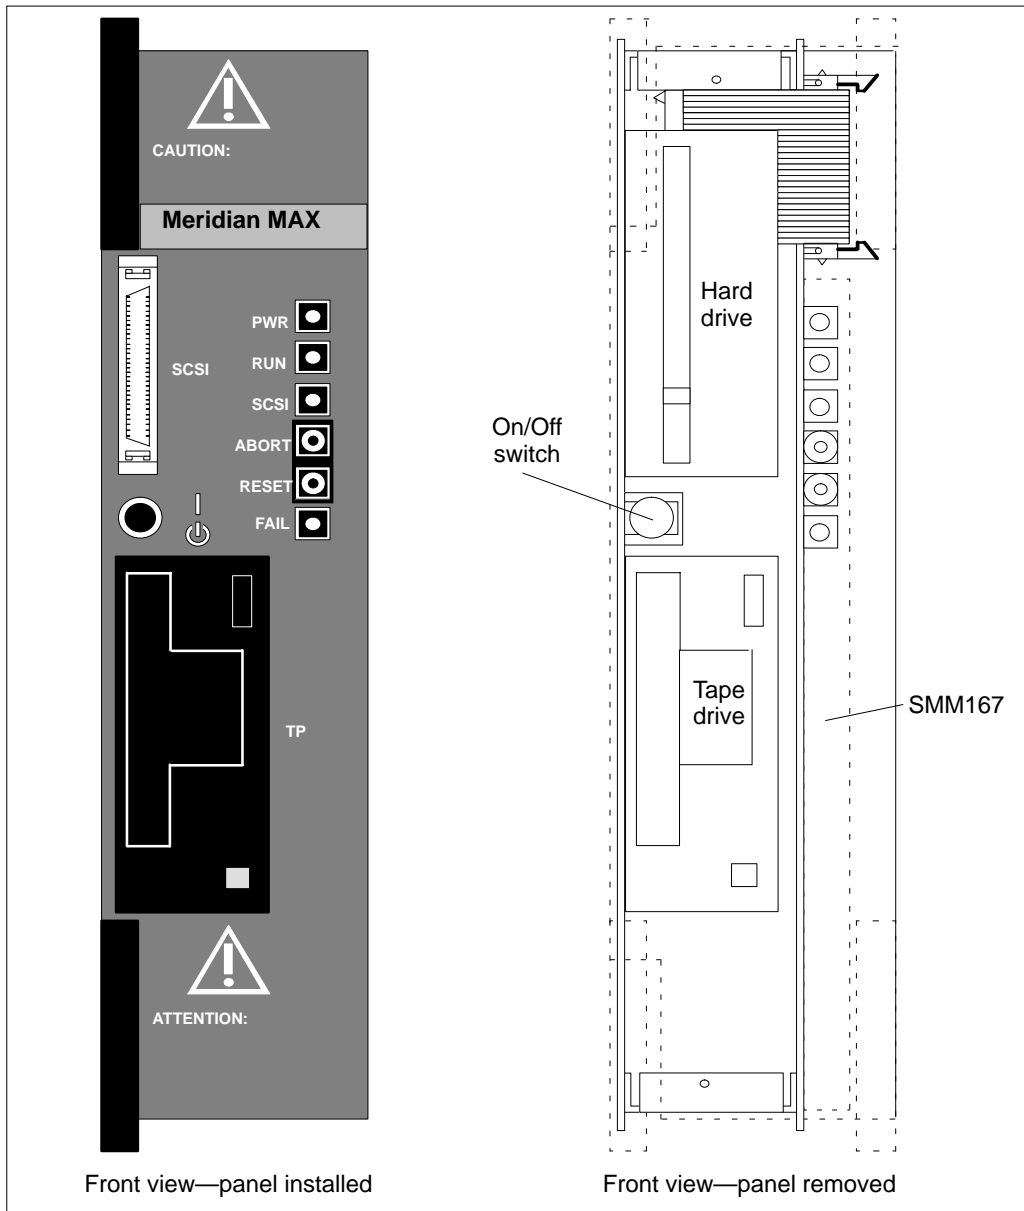

**Figure 4-2**  
**Meridian MAX IPE module containing a 155 Mbyte cassette tape drive—front view**

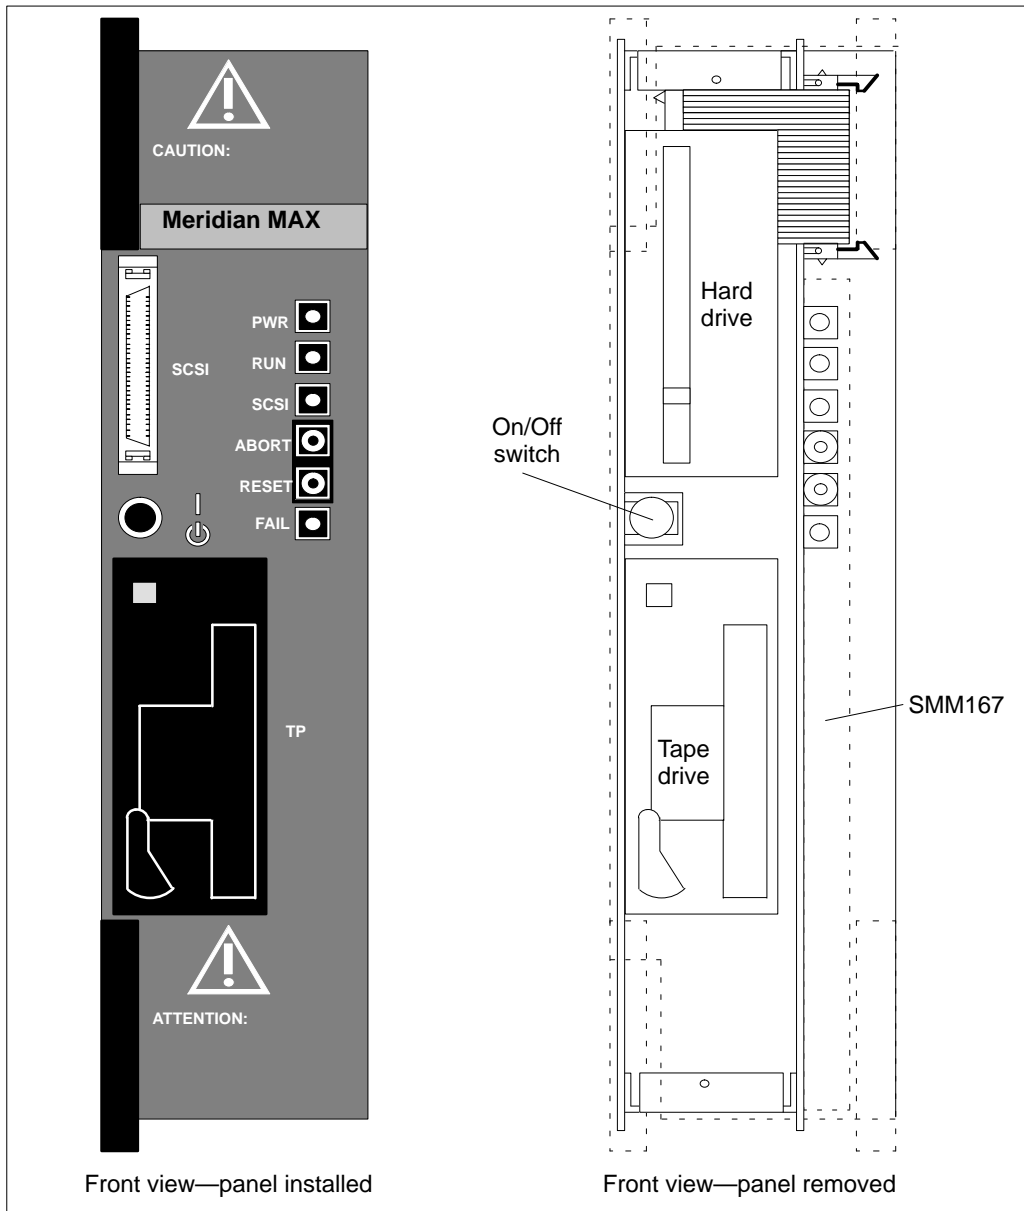


## Hardware layout


Figure 4-3 shows a simplified overview of the hardware layout for the Meridian MAX IPE/IPE-E Option 11 module installation. For more information on the configurations available, refer to the “Capacities” section in the “Site preparation” chapter.

Figure 4-4 shows a simplified overview of the hardware layout for the Meridian MAX IPE/IPE-E Option 21–81 module installation. These figures are intended to show how the equipment is interconnected. The actual layout of your site may be quite different (see the “Site layout” section of the “Site preparation” chapter).

**Figure 4-3**  
**Meridian MAX IPE/IPE-E installation overview—Option 11**

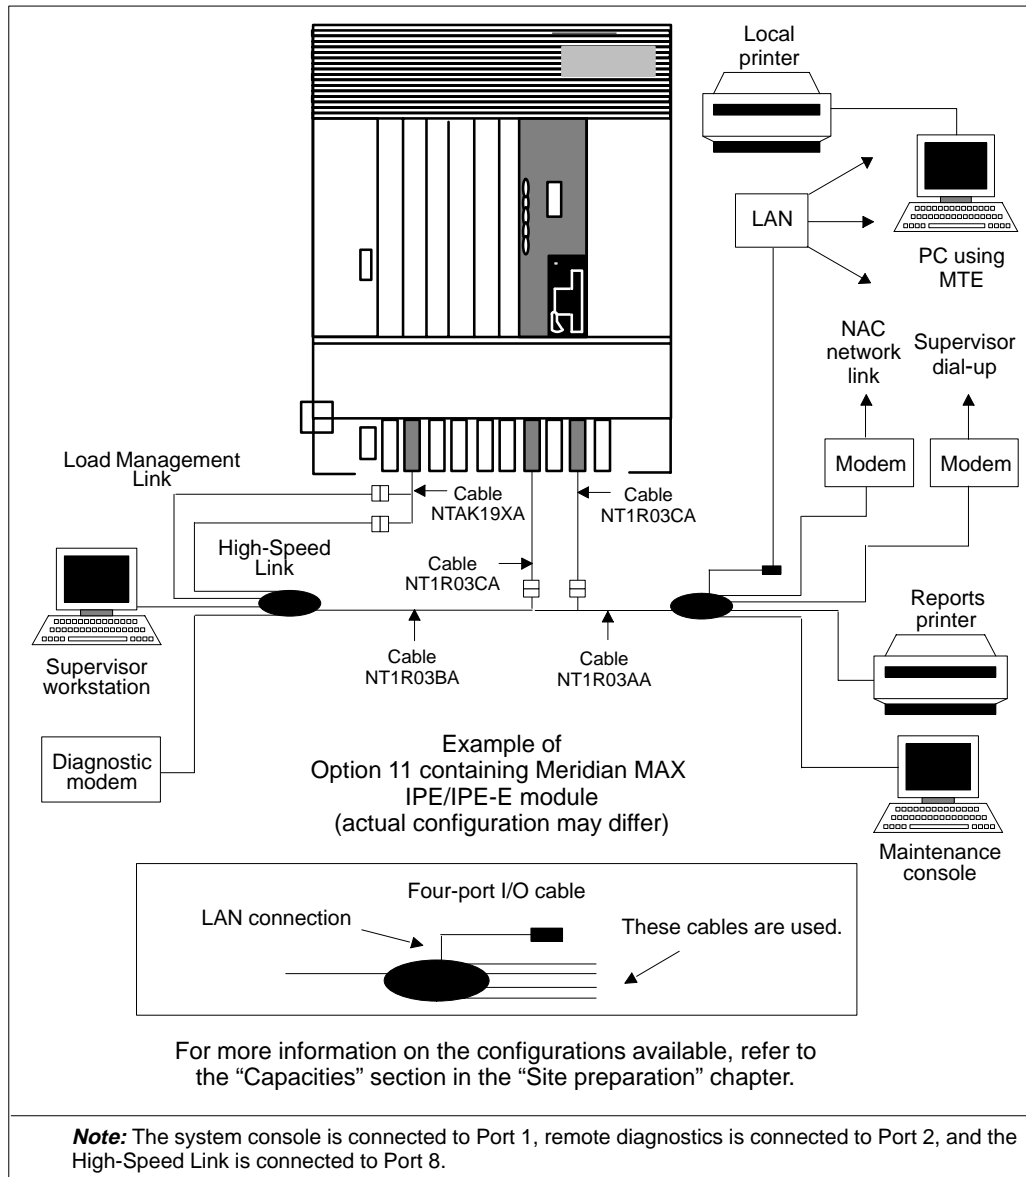

**Figure 4-4**  
**Meridian MAX IPE/IPE-E installation overview—Option 21-81**

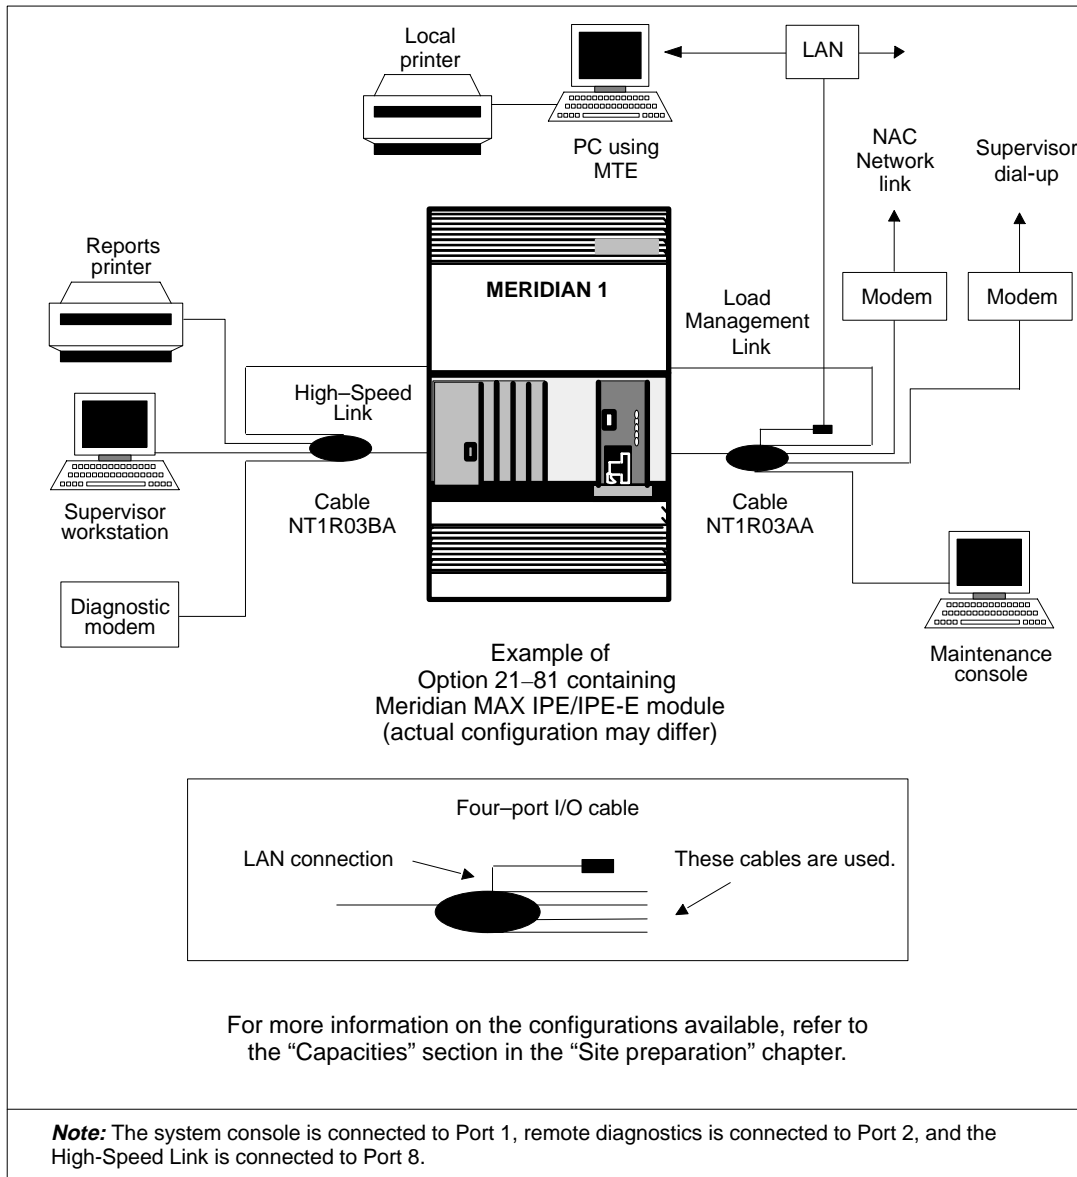



## Meridian MAX IPE/IPE-E module—Option 11

If you have obtained a new Meridian MAX IPE/IPE-E system, the module is already assembled. It is necessary for you to insert the module into the Option 11.

When you remove the front panel of the main cabinet of the Option 11 or the front panel of an expansion cabinet, there are a number of slots, numbered 2 to 9 in the main cabinet and 11 to 20 in the expansion cabinet, where the Meridian MAX IPE/IPE-E module can be inserted. Slots 10–12 in the main cabinet are reserved for Meridian Mail and cannot be used for Meridian MAX IPE/IPE-E. The Meridian MAX IPE/IPE-E module occupies any three consecutive slots. Its slot placement is determined by the slot positions of existing applications already installed in either of the Option 11 cabinets. The slot placements of future applications for your system are also a consideration when deciding the slot placement for your Meridian MAX IPE/IPE-E.

When the slot placement has been determined, slowly slide the module along the slots into the cabinet, making sure the latches at the top and bottom of the module are in an unlatched position, until it is firmly in place. Make sure the latches at the top and bottom of the module are secured.

### Input/output cables

#### Main cabinet

Two shielded four-port cables are used to connect the Meridian MAX IPE/IPE-E to its supervisor workstation, printers, and other peripheral devices. Cable A (NT1R03AA) has a 50-pin key telephone connector on one end and four DB-25 female connectors on the other, as well as an additional Ethernet port, shown in Figure 4-14. Cable B (NT1R03BA) is identical to Cable A except that it has no additional Ethernet port, shown in Figure 4-14. Each of the eight female DB-25 connectors can connect to a peripheral device. Cable A services Ports 1, 3, 5, and 7. Cable B services Ports 2, 4, 6, and 8. Refer to the Communication Port Assignment Sheet (Table 4-4) when connecting peripherals to cables.

Underneath the main cabinet of the Option 11 is a connector panel with 10 numbered connector ports. Each connector port connects to the corresponding numbered slot directly above, inside the main cabinet. The key telephone connectors of each four-port cable are connected here. These connectors are held in place by a removable connector panel bar.

The connector panel assignment for Cable A (NT1R03AA) and Cable B (NT1R03BA) in the Option 11 is shown in Table 4-2. The connector panel assignment depends on the desired slot placement of the Meridian MAX IPE/IPE-E module.

Before connecting the four-port cables, connect one extension cable (NT1R03CA) to each connector, then connect each four-port cable. Make sure the connectors are secure. This allows the front panel on the Option 11 to be closed without interference from too many dangling cables. For example, if your Meridian MAX IPE/IPE-E module occupies slots 7, 8, and 9, connect one end of an NT1R03CA extension cable to connector J9 while connecting Cable A to the other end of the extension cable. Connect a second NT1R03CA extension cable to connector J7, attaching Cable B to the other end of the second extension cable. Connector J8 is not used.

Replace the connector panel bar making sure the padded side is placed against the back of the connectors.

| <b>Table 4-2</b>                                                            |              |          |
|-----------------------------------------------------------------------------|--------------|----------|
| <b>Option 11 peripheral cable connector assignment sheet (main cabinet)</b> |              |          |
| <b>Module slot combinations</b>                                             | <b>Cable</b> |          |
|                                                                             | <b>A</b>     | <b>B</b> |
| 2-4                                                                         | J4           | J2       |
| 3-5                                                                         | J5           | J3       |
| 4-6                                                                         | J6           | J4       |
| 5-7                                                                         | J7           | J5       |
| 6-8                                                                         | J8           | J6       |
| 7-9                                                                         | J9           | J7       |

### **Expansion cabinet**

If you are installing your Meridian MAX IPE/IPE-E module into an Option 11 expansion cabinet, the process is very similar to an installation in the main cabinet.

Two shielded four-port cables are used to connect the Meridian MAX IPE/IPE-E to its supervisor workstation, printers, and other peripheral devices. Cable A (NT1R03AA) has a 50-pin key telephone connector on one end and four DB-25 female connectors on the other, as well as an additional Ethernet port, shown in Figure 4-14. Cable B (NT1R03BA) is identical to Cable A except that it has no additional Ethernet port, shown in Figure 4-14. Each of the eight DB-25 connectors can connect to a peripheral device. Cable A services Ports 1, 3, 5, and 7. Cable B services Ports 2, 4, 6, and 8. Refer to the Communication Port Assignment Sheet (Table 4-4) when connecting peripherals to cables.

Underneath the expansion cabinet of the Option 11 is a connector panel with 10 numbered connector ports. Each connector port connects to the corresponding numbered slot directly above, inside the expansion cabinet. The key telephone connectors of each four-port cable are connected here. These connectors are held in place by a removable connector panel bar.

The connector panel assignment for Cable A (NT1R03AA) and Cable B (NT1R03BA) in the Option 11 is shown in Table 4-3. The connector panel assignment depends on the desired slot placement of the Meridian MAX IPE/IPE-E module.

Before connecting the four-port cables, connect one extension cable (NT1R03CA) to each connector, then connect each four-port cable. Make sure the connectors are secure. This allows the front panel on the Option 11 to be closed without interference from too many dangling cables. For example, if your Meridian MAX IPE/IPE-E module occupied slots 14, 15, and 16, connect one end of an NT1R03CA extension cable to connector J16 while connecting Cable A to the other end of the extension cable. Connect a second NT1R03CA extension cable to connector J14, attaching Cable B to the other end of the second extension cable. Connector J15 is not used.

Replace the connector panel bar making sure the padded side is placed against the back of the connectors.

**Note:** Because the Option 11 expansion cabinet can be placed above, below, beside, or even in another room from the main cabinet, Port 8 on Cable B may not reach the port on the NTAK19BA cable configured for the High-Speed Link. If that is the case, Port 8 can be extended using NT1R03Dx or NT1R03Ex extension cables, where x indicates the length of the cable.

| Table 4-3<br>Option 11 peripheral cable connector assignment sheet (expansion cabinet) |       |     |
|----------------------------------------------------------------------------------------|-------|-----|
| Module slot combinations                                                               | Cable |     |
|                                                                                        | A     | B   |
| 11-13                                                                                  | J13   | J11 |
| 12-14                                                                                  | J14   | J12 |
| 13-15                                                                                  | J15   | J13 |
| 14-16                                                                                  | J16   | J14 |
| 15-17                                                                                  | J17   | J15 |
| 16-18                                                                                  | J18   | J16 |
| 17-19                                                                                  | J19   | J17 |
| 18-20                                                                                  | J20   | J18 |

### Input/output port assignments

There are eight ports available for various peripheral devices, but three of them are configured for a specific peripheral. Port 1 is configured for the Console Port; Port 2 is configured for the Diagnostic Modem; and Port 8 is configured for the High-Speed Link. The remaining peripherals can be configured on any of Ports 3 to 7.

**Note:** The Configuration Control feature uses a Load Management Link that is also referred to as a Configuration Control Link.

Table 4-4 provides a chart which lists all of the assignable ports and shows the type of device which can be connected to each port. As you decide upon the device to connect to each port, enter the device name in the space provided. If you are assigning a Supervisor Workstation or Network Link, you must specify the type of connection: Direct, Dial-up at 2400 baud, or Dial-up at 9600 baud. This information will be requested during the software installation.

Please note the following abbreviations:

- LML (Load Management Link)
- NL [Network Link (NetLink)]
- PRT (Printer)
- SW (Supervisor Workstation)

Please note the following abbreviations for connection type:

- DC (Direct Connection)
- 24 (Dial-up connection at 2400 baud)
- 96 (Dial-up connection at 9600 baud)
- 96S (Serial connection at 9600 baud)
- 192S (Serial connection at 19 200 baud)

**Note:** The “Connection type” column in the following table lists all of the possible connections. Some connection types cannot be applied to some devices available. For example, the only connection type possible for a printer is direct connection. Ensure that you do not select an inappropriate connection type.

| <b>Table 4-4</b><br><b>Option 11 communication port assignment sheet</b> |       |                     |                  |                 |
|--------------------------------------------------------------------------|-------|---------------------|------------------|-----------------|
| Port                                                                     | Cable | Devices available   | Device selected  | Connection type |
| 1                                                                        | A     | CONSOLE PORT        | CONSOLE PORT     | N/A             |
| 2                                                                        | B     | DIAGNOSTIC MODEM    | DIAGNOSTIC MODEM | N/A             |
| 3                                                                        | A     | SW / PRT / LML / NL |                  | DC / 24 / 96    |
| 4                                                                        | B     | SW / PRT / LML / NL |                  | DC / 24 / 96    |
| 5                                                                        | A     | SW / PRT / LML / NL |                  | DC / 24 / 96    |
| 6                                                                        | B     | SW / PRT / LML / NL |                  | DC / 24 / 96    |
| 7                                                                        | A     | SW / PRT / LML / NL |                  | DC / 24 / 96    |
| 8                                                                        | B     | HIGH-SPEED LINK     | HIGH-SPEED LINK  | 96S/192S        |

## Meridian MAX IPE/IPE-E module—Option 21–81

If you have obtained a new Meridian MAX IPE/IPE-E system for the Option 21-81, the module is already assembled. It is necessary for you to insert the module into the Peripheral Equipment (PE) slots of either the Common Equipment/Peripheral Equipment (CE/PE) cabinet or the Intelligent Peripheral Equipment (IPE) cabinet.

**Note:** If your CE/PE or IPE cabinet is not properly configured for 24-port cards, rerouting of the backplane cabling is necessary. See the “Cable rerouting for Option 21–81 CE/PE and IPE/IPE-E modules” section for more information.

When you remove the front panel of the CE/PE or IPE cabinet of the Option 21–81, there are a number of slots, numbered 0 to 9 in the CE/PE cabinet and 0 to 15 in the IPE cabinet, where the Meridian MAX IPE/IPE-E module can be inserted. The Meridian MAX IPE/IPE-E module occupies any four consecutive slots. Its slot placement is determined by the slot positions of existing applications already installed in either the CE/PE or IPE cabinets. The slot placements of future applications for your system are also a consideration when deciding the slot placement for your Meridian MAX IPE/IPE-E.

When the slot placement has been determined and the internal backplane and I/O panel cables have been rerouted, slowly slide the module along the slots into the cabinet, making sure the latches at the top and bottom of the module are in an unlatched position, until it is firmly in place. Make sure the latches at the top and bottom of the module are secured.

### Input/output cables

#### Common/Peripheral Equipment (CE/PE) cabinet

Two shielded four-port cables are used to connect the Meridian MAX IPE/IPE-E to its supervisor workstation, printers, and other peripheral devices. Cable A (NT1R03AA) has a 50-pin key telephone connector on one end and four DB-25 female connectors on the other, as well as one unused port reserved for future use, shown in Figure 4-14. Cable B (NT1R03BA) is identical to Cable A except that it has only four DB-25 female connectors, shown in Figure 4-14.

Each of the eight DB-25 connectors can connect to a peripheral device. Cable A services Ports 1, 3, 5, and 7. Cable B services Ports 2, 4, 6, and 8.

Refer to the Communication Port Assignment Sheet (Table 4-11) when connecting peripherals to cables.

Inside the back of the CE/PE cabinet, to the left of the backplane cover, is the NT8D11 CE/PE cabinet I/O panel, as shown in Figure 4-9. The key telephone connectors of each four-port cable are connected to this panel. The connectors on the panel are labeled with a letter between A and L. Each lettered connector is connected to a corresponding slot at the front of the Option 21-81.

Connect the four-port cables to the CE/PE cabinet connectors. Make sure the connectors are secure. Table 4-5 shows to which connectors on the I/O panel Cable A (NT1R03AA) and Cable B (NT1R03BA) connect depending on the slot placement of the Meridian MAX IPE/IPE-E in the Option 21-81. For example, if your Meridian MAX IPE/IPE-E module occupied slots 4, 5, 6, and 7, Cable A connects to connector H and Cable B connects to connector E.

| <b>Table 4-5</b><br><b>CE/PE cabinet peripheral cable connector assignment sheet</b> |              |          |
|--------------------------------------------------------------------------------------|--------------|----------|
| <b>Module slot combinations</b>                                                      | <b>Cable</b> |          |
|                                                                                      | <b>A</b>     | <b>B</b> |
| 0-3                                                                                  | D            | A        |
| 1-4                                                                                  | E            | B        |
| 2-5                                                                                  | F            | C        |
| 3-6                                                                                  | G            | D        |
| 4-7                                                                                  | H            | E        |
| 5-8                                                                                  | K            | F        |
| 6-9                                                                                  | L            | G        |

#### **Intelligent Peripheral Equipment (IPE) cabinet**

Two shielded four-port cables are used to connect the Meridian MAX IPE/IPE-E to its supervisor workstation, printers, and other peripheral devices. Cable A (NT1R03AA) has a 50-pin key telephone connector on one end and four DB-25 female connectors on the other, as well as one unused port reserved for future use, shown in Figure 4-14. Cable B (NT1R03BA) is identical to Cable A except that it has only four DB-25 female connectors, shown in Figure 4-14.



**4-22 Hardware installation: Intelligent Peripheral Equipment module**

Each of the eight DB-25 connectors can connect to a peripheral device. Cable A services Ports 1, 3, 5, and 7. Cable B services Ports 2, 4, 6, and 8. Refer to the Communication Port Assignment Sheet (see Table 4-11) when connecting peripherals to cables.

Inside the back of the IPE cabinet, on the left and right of the backplane cover, are the NT8D37 IPE cabinet I/O panels, as shown in Figure 4-10. The key telephone connectors of each four-port cable are connected to these panels. The connectors on the panel are labeled with a letter between A and U. Each lettered connector is connected to a corresponding slot at the front of the Option 21–81.

Connect the four-port cables to the IPE cabinet connectors. Make sure the connectors are secure. Table 4-6 shows to which connectors on the I/O panel Cable A (NT1R03AA) and Cable B (NT1R03BA) connect depending on the slot placement of the Meridian MAX IPE/IPE-E in the Option 21–81. For example, if your Meridian MAX IPE/IPE-E module occupies slots 4, 5, 6, and 7, Cable A connects to connector H and Cable B connects to connector E.

| <b>Table 4-6<br/>IPE cabinet peripheral cable connector assignment sheet</b> |              |          |
|------------------------------------------------------------------------------|--------------|----------|
| <b>Module Slot Combinations</b>                                              | <b>Cable</b> |          |
|                                                                              | <b>A</b>     | <b>B</b> |
| 0-3                                                                          | D            | A        |
| 1-4                                                                          | E            | B        |
| 2-5                                                                          | F            | C        |
| 3-6                                                                          | G            | D        |
| 4-7                                                                          | H            | E        |
| 8-11                                                                         | N            | K        |
| 9-12                                                                         | R            | L        |
| 10-13                                                                        | S            | M        |
| 11-14                                                                        | T            | N        |
| 12-15                                                                        | U            | R        |

### **Cable rerouting for Option 21–81 CE/PE, IPE/IPE-E modules**

In a standard configuration, the Meridian MAX IPE/IPE-E module can be placed in any peripheral slot on the Option 21–81 CE/PE or IPE modules. This is possible when the slots are fully cabled to accommodate 24 tip and ring pairs per slot. If your system is running a software release prior to Meridian 1 X11 Release 18, you need to reroute cables inside the CE/PE or IPE module.

In the standard backplane configuration of the NT8D11 CE/PE and NT8D37 IPE modules, using a software release prior to Meridian 1 X11 Release 18, some slots on the backplane are fully cabled to accommodate 24 tip and ring pairs (3 cable connectors). Most of the backplane slots, however, accommodate 16 pairs (2 cable connectors). By adding and reconfiguring cable ends in the backplane slots, 24 pairs can be connected to each backplane slot. Once the rerouting process is done, the CE/PE or IPE cabinet can support the Meridian MAX IPE/IPE-E module.

**Note:** When backplane slots are reconfigured for expanded cabling, the labeling for NT8D11 CE/PE and NT8D37 IPE modules must be changed at the MDF to reflect the change in the backplane slots.

Cables are designated by the letter of the I/O panel (A, B, C, and so forth) where the 50-pin cable connector is attached. Each cable has three 20-pin connectors (16 positions are used) designated 1, 2, or 3, which attach to the backplane. Using the designations described, the backplane ends of the first cable are referred to as A-1, A-2, and A-3.

The location of the cable connectors on the backplane are designated by the slot number (L0 through L9 for NT8D11, L0 through L15 for NT8D37) and the shroud row (1, 2, 3). Using these designations, the slot positions in the first slot are referred to as L0-1, L0-2, and L0-3.

### **Cable rerouting for NT8D11 CE/PE module**

In the standard seven-cable configuration for the backplane in the NT8D11 CE/PE module, cables D, G, and L are not used. Those cables are used in the 10-cable fully expanded configuration.

Cabling for the first four PE slots can be expanded using one NT8D81AA cable/filter assembly. Cabling for all of the PE slots can be expanded using three NT8D81AA cable/filter assemblies.


#### 4-24 Hardware installation: Intelligent Peripheral Equipment module

**Note:** The first PE slot is already fully cabled for 24 pairs, so no change is required for that slot.

Table 4-7 lists cable connections *before* cable expansion. Figure 4-5 shows the backplane slots *before* cable expansion.

| Table 4-7<br>NT8D11 cable connections (standard configuration)      |      |      |                             |  |   |
|---------------------------------------------------------------------|------|------|-----------------------------|--|---|
| Backplane slots-shroud rows                                         |      |      | I/O panel/cable designation |  |   |
| L0-1                                                                | L0-2 | L0-3 |                             |  | A |
| L1-1                                                                | L1-2 | L2-1 |                             |  | B |
| L2-2                                                                | L3-1 | L3-2 |                             |  | C |
| L4-1                                                                | L4-2 | L5-1 |                             |  | E |
| L5-2                                                                | L6-1 | L6-2 |                             |  | F |
| L7-1                                                                | L7-2 | L8-1 |                             |  | H |
| L8-2                                                                | L9-1 | L9-2 |                             |  | K |
| <b>Note:</b> Cables D, G, and L are not used in this configuration. |      |      |                             |  |   |

**Figure 4-5**  
NT8D11 backplane cable designations (standard configuration)

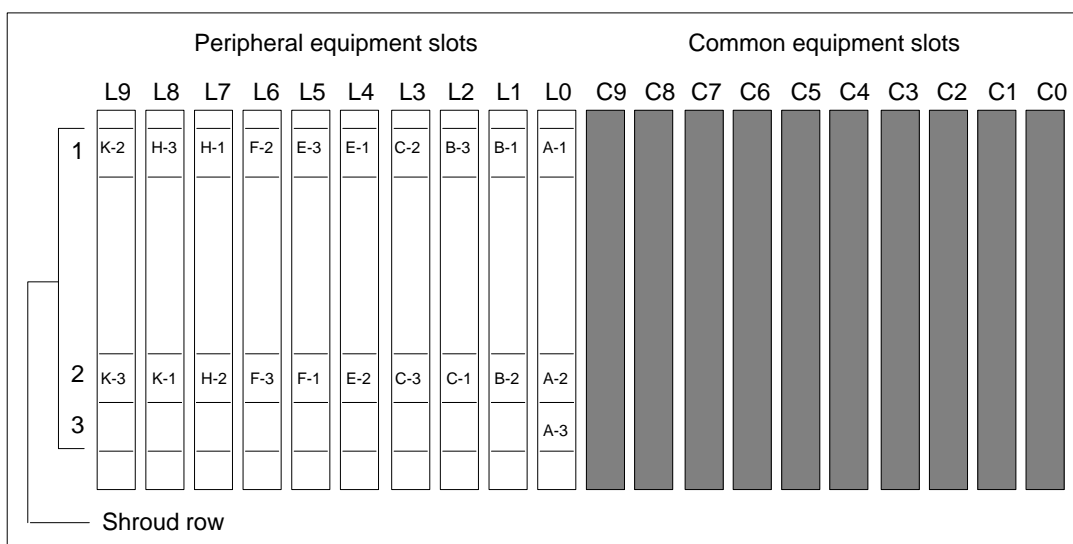

**NT8D11 backplane cable expansion—first four PE slots only**

- 1 Leave cable A as is in slot position L0.
- 2 Move cable end B-3 to slot position L1-3.
- 3 Remove cable C from the backplane, and connect cable ends C-1, C-2, and C-3 to slot positions L2-1, L2-2, and L2-3.
- 4 Add cable D to the I/O panel by connecting cable ends D-1, D-2, and D-3 to slot positions L2-1, L2-2, and L2-3.  
Cables E, F, H, and K remain the same. Cable positions G and L are open for further expansion.
- 5 If you are cabling peripheral devices to the Option 21-81 through an MDF, label the MDF to show one cable for the first and fourth PE slots (L0 and L3).

**NT8D11 backplane cable expansion—all PE slots**


- 1 Leave cable A as is in slot position L0.
- 2 Move cable end B-3 to slot position L1-3.
- 3 Remove cable C from the backplane, and connect cable ends C-1, C-2, and C-3 to slot positions L2-1, L2-2, and L2-3.
- 4 Add cable D to the I/O panel by connecting cable ends D-1, D-2, and D-3 to slot positions L3-1, L3-2, and L3-3.
- 5 Move cable end E-3 to slot position L4-3.
- 6 Remove cable F from the backplane and connect cable ends F-1, F-2, and F-3 to slot positions L5-1, L5-2 and L5-3.
- 7 Add cable G to the I/O panel by connecting cable ends G-1, G-2, and G-3 to slot positions L6-1, L6-2, and L6-3.
- 8 Move cable end H-3 to slot position L7-3.
- 9 Remove cable K from the backplane, and connect cable ends K-1, K-2, and K-3 to slot positions L8-1, L8-2 and L8-3.
- 10 Add cable L to the I/O panel by connecting cable ends L-1, L-2, and L-3 to slot positions L9-1, L9-2, and L9-3.
- 11 If you are cabling peripheral devices to the Option 21-81 through an MDF, label the MDF to show one cable for each PE slot.

#### 4-26 Hardware installation: Intelligent Peripheral Equipment module

Table 4-8 lists cable connections for a fully expanded configuration. Figure 4-6 shows the backplane slots in a fully expanded configuration.

| <b>Table 4-8<br/>NT8D11 cable connections (fully expanded configuration)</b> |                                       |
|------------------------------------------------------------------------------|---------------------------------------|
| <b>From backplane slots—shroud rows</b>                                      | <b>To I/O panel/cable designation</b> |
| L0-1,2,3                                                                     | A                                     |
| L1-1,2,3                                                                     | B                                     |
| L2-1,2,3                                                                     | C                                     |
| L3-1,2,3                                                                     | D (new cable)                         |
| L4-1,2,3                                                                     | E                                     |
| L5-1,2,3                                                                     | F                                     |
| L6-1,2,3                                                                     | G (new cable)                         |
| L7-1,2,3                                                                     | H                                     |
| L8-1,2,3                                                                     | K                                     |
| L9-1,2,3                                                                     | L (new cable)                         |

**Figure 4-6**  
**NT8D11 backplane cable designs (fully expanded configuration)**

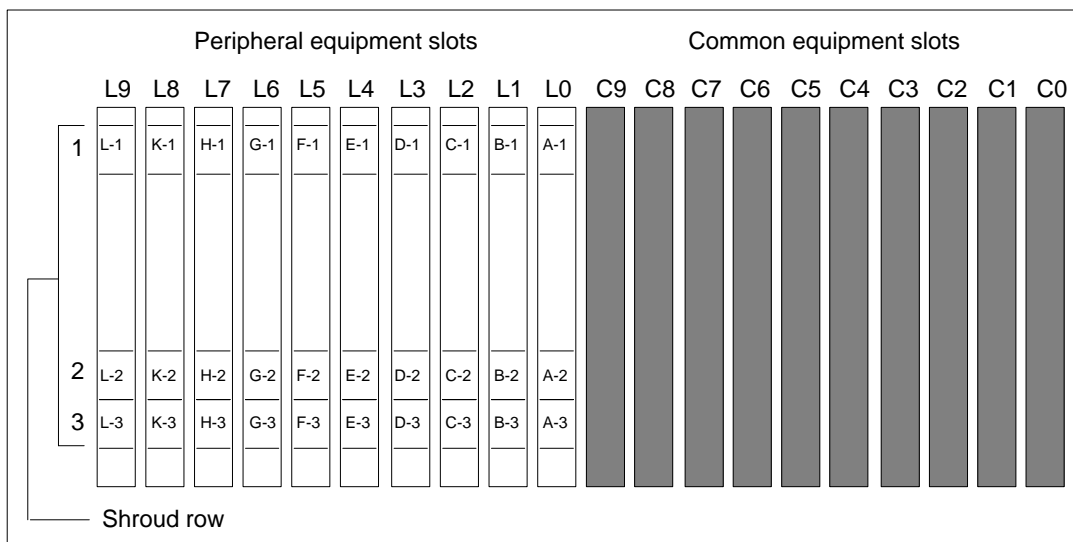

**Cable rerouting for NT8D37 IPE module**

In the standard 11-cable configuration for the backplane in the NT8D37 IPE/IPE-E module, cables D, H, N, and U are not used. Those cables are used in the 16-cable fully expanded configuration.

Cabling for each segment can be expanded using one NT8D81AA cable/filter assembly. Cabling for the entire backplane can be expanded using four NT8D81AA cable/filter assemblies.


**Note:** Backplane slots 0, 4, 8, and 12 (for cables A, E, K, and R) are already fully cabled for 24 pairs, so no change is required for those slots.

Table 4-9 lists cable connections *before* cable expansion. Figure 4-7 shows the backplane slots *before* cable expansion.

| Table 4-9<br>NT8D37 cable connections (standard configuration)          |       |       |                             |  |  |  |
|-------------------------------------------------------------------------|-------|-------|-----------------------------|--|--|--|
| Backplane slots—shroud rows                                             |       |       | I/O panel/cable designation |  |  |  |
| L0-1                                                                    | L0-2  | L0-3  | A                           |  |  |  |
| L1-1                                                                    | L1-2  | L2-1  | B                           |  |  |  |
| L2-2                                                                    | L3-1  | L3-2  | C                           |  |  |  |
| L4-1                                                                    | L4-2  | L4-3  | E                           |  |  |  |
| L5-1                                                                    | L5-2  | L6-1  | F                           |  |  |  |
| L6-2                                                                    | L7-1  | L7-2  | G                           |  |  |  |
| L8-1                                                                    | L8-2  | L8-3  | K                           |  |  |  |
| L9-1                                                                    | L9-2  | L10-1 | L                           |  |  |  |
| L10-2                                                                   | L11-1 | L11-2 | M                           |  |  |  |
| L12-1                                                                   | L12-2 | L12-3 | R                           |  |  |  |
| L13-1                                                                   | L13-2 | L14-1 | S                           |  |  |  |
| L14-2                                                                   | L15-1 | L15-2 | T                           |  |  |  |
| <b>Note:</b> Cables, D, H, N, and U are not used in this configuration. |       |       |                             |  |  |  |

#### 4-28 Hardware installation: Intelligent Peripheral Equipment module

**Figure 4-7**  
**NT8D37 backplane cable designations (standard configuration)**

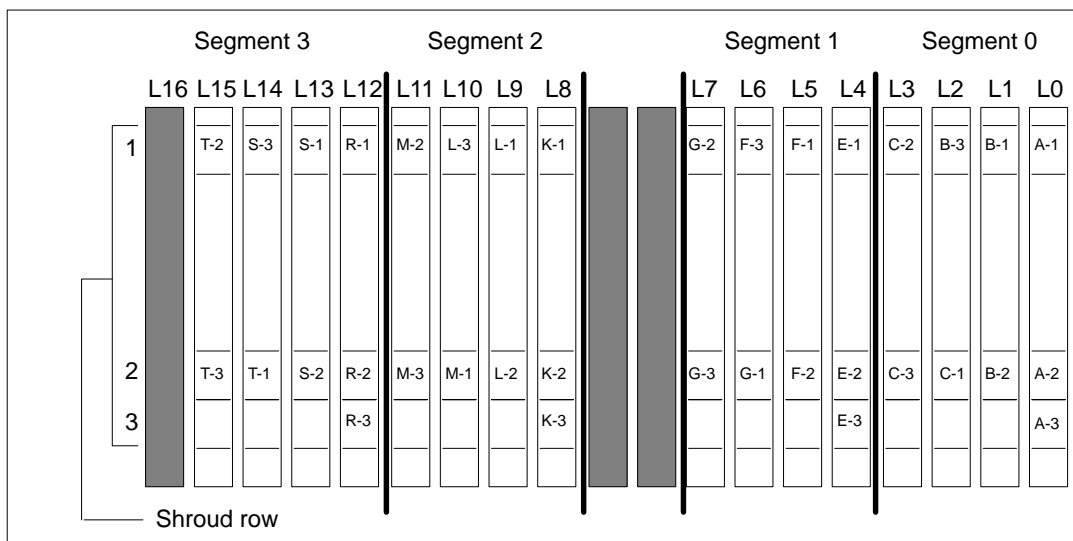

#### **NT8D37 backplane cable expansion—segment 0**

- 1 Leave cable A as is in slot position L0.
- 2 Move cable end B-3 to slot position L1-3.
- 3 Remove cable C from the backplane, and connect cable ends C-1, C-2, and C-3 to slot positions L2-1, L2-2, and L2-3.
- 4 Add cable D to the I/O panel by connecting cable ends D-1, D-2, and D-3 to slot positions L3-1, L3-2, and L3-3.

#### **NT8D37 backplane cable expansion—segment 1**

- 1 Leave cable E as is in slot position L4.
- 2 Move cable end F-3 to slot position L5-3.
- 3 Remove cable G from the backplane, and connect cable ends G-1, G-2, and G-3 to slot positions L6-1, L6-2, and L6-3.
- 4 Add cable H to the I/O panel by connecting cable ends H-1, H-2, and H-3 to slot positions L7-1, L7-2, and L7-3.

**NT8D37 backplane cable expansion—segment 2**

- 1 Leave cable K as is in slot position L8.
- 2 Move cable end L-3 to slot position L9-3.
- 3 Remove cable M from the backplane, and connect cable ends M-1, M-2, and M-3 to slot positions L10-1, L10-2, and L10-3.
- 4 Add cable N to the I/O panel by connecting cable ends N-1, N-2, and N-3 to slot positions L11-1, L11-2, and L11-3.

**NT8D37 backplane cable expansion—segment 3**

- 1 Leave cable R as is in slot position L12.
- 2 Move cable end S-3 to slot position L13-3.
- 3 Remove cable T from the backplane, and connect cable ends T-1, T-2, and T-3 to slot positions L14-1, L14-2, and L14-3.
- 4 Add cable U to the I/O panel by connecting cable ends U-1, U-2, and U-3 to slot positions L15-1, L15-2, and L15-3.


Table 4-10 lists cable connections for a fully expanded configuration.  
Figure 4-8 shows the backplane slots in a fully expanded configuration.

| <b>Table 4-10</b><br><b>NT8D37 cable connections (fully expanded configuration)</b> |                                       |
|-------------------------------------------------------------------------------------|---------------------------------------|
| <b>From backplane slots—shroud rows</b>                                             | <b>To I/O panel/cable designation</b> |
| L0-1,2,3                                                                            | A                                     |
| L1-1,2,3                                                                            | B                                     |
| L2-1,2,3                                                                            | C                                     |
| L3-1,2,3                                                                            | D (new cable)                         |
| L4-1,2,3                                                                            | E                                     |
| L5-1,2,3                                                                            | F                                     |
| L6-1,2,3                                                                            | G                                     |
| L7-1,2,3                                                                            | H (new cable)                         |
| L8-1,2,3                                                                            | K                                     |
| L9-1,2,3                                                                            | L                                     |
| L10-1,2,3                                                                           | M                                     |
| L11-1,2,3                                                                           | N (new cable)                         |
| L12-1,2,3                                                                           | R                                     |
| L13-1,2,3                                                                           | S                                     |
| L14-1,2,3                                                                           | T                                     |
| L15-1,2,3                                                                           | U (new cable)                         |



**4-30** Hardware installation: Intelligent Peripheral Equipment module

**Figure 4-8**  
**NT8D37 backplane cable designations (fully expanded configuration)**

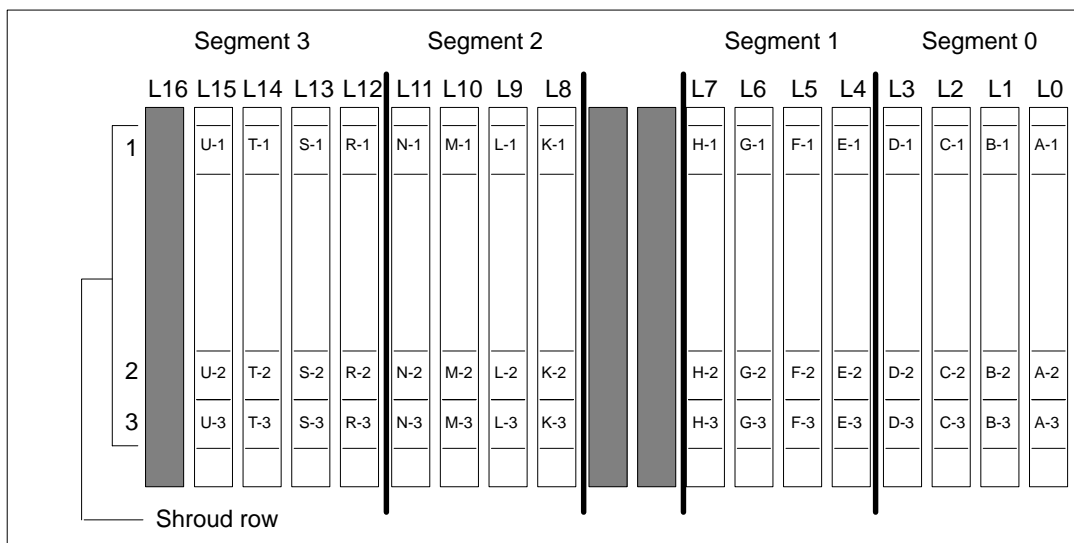

## Input/output port assignments

There are eight ports available for various peripheral devices, but three of them are configured for a specific peripheral. Port 1 is configured for the Console Port; Port 2 is configured for the Diagnostic Modem; and Port 8 is configured for the High-Speed Link. The remaining peripherals can be configured on any of Ports 3 to 7.

**Note:** The Configuration Control feature uses a Load Management Link that is also referred to as a Configuration Control Link.

Table 4-11 provides you with a chart which lists all of the assignable ports and shows the type of device which can be connected to each port. As you decide upon the device to connect to each port, enter the device name in the space provided. If you are assigning a Supervisor Workstation, Remote Login, or Network Link, you must specify the type of connection: Direct, Dial-up at 2400 baud, or Dial-up at 9600 baud. This information will be requested during the software installation.

Please note the following abbreviations:

- LML (Load Management Link)
- NL [Network Link (NetLink)]
- PRT (Printer)
- SW (Supervisor Workstation)

Please note the following abbreviations for Connection Type:

- DC (Direct Connection)
- 24 (Dial-up connection at 2400 baud)
- 96 (Dial-up connection at 9600 baud)
- 96S (Serial connection at 9600 baud)
- 192S (Serial connection at 19 200 baud)

**Note:** The “Connection type” column in the following table lists all of the possible connections. Some connection types cannot be applied to some available devices. For example, the only connection type possible for a printer is direct connection. Ensure that you do not select an inappropriate connection type.

| <b>Table 4-11</b><br><b>Option 21–81 communication port assignment sheet</b> |              |                          |                        |                        |
|------------------------------------------------------------------------------|--------------|--------------------------|------------------------|------------------------|
| <b>Port</b>                                                                  | <b>Cable</b> | <b>Devices available</b> | <b>Device selected</b> | <b>Connection type</b> |
| 1                                                                            | A            | CONSOLE PORT             | CONSOLE PORT           | N/A                    |
| 2                                                                            | B            | DIAGNOSTIC MODEM         | DIAGNOSTIC MODEM       | N/A                    |
| 3                                                                            | A            | SW / PRT / LML / NL      |                        | DC / 24 / 96           |
| 4                                                                            | B            | SW / PRT / LML / NL      |                        | DC / 24 / 96           |
| 5                                                                            | A            | SW / PRT / LML / NL      |                        | DC / 24 / 96           |
| 6                                                                            | B            | SW / PRT / LML / NL      |                        | DC / 24 / 96           |
| 7                                                                            | A            | SW / PRT / LML / NL      |                        | DC / 24 / 96           |
| 8                                                                            | B            | HIGH-SPEED LINK          | HIGH-SPEED LINK        | 96S/192S               |

## **Cabling Option 11 and Option 21–81 to peripherals through a main distribution frame**

Peripheral devices do not always have to be connected directly to the Option 11 or Option 21–81. They can also be connected through a main distribution frame (MDF).

### **ATTENTION**

RS-232 cables that directly connect peripherals to the Meridian MAX must not exceed 15 meters (50 feet).

This length is based on an EIA RS-232C standard. Peripherals can be farther away if self-powered limited-distance (own power supply), or dial-up modems are used.

### **ATTENTION**

Cable connections between the LAN and the Meridian MAX must not exceed 50 meters (164 feet).

This connection is an IEEE standard 802.3.


To connect peripheral devices to an Option 11 or an Option 21-81 through an MDF, a 50-pin to 50-pin NT1R03Fx cable is used for ports 1, 3, 5, and 7, while a 50-pin to 50-pin NT1R03Gx cable is used for ports 2, 4, 6, and 8, where x denotes the length of the cable. Connect one end of each cable to the configured ports on the I/O connector panel of the Option 11 or the I/O panels on the Option 21–81.

Connect the other ends to the 50-pin connectors on the customer-provided shielded MDF.


The peripheral devices should be defined on the MDF at this point. The technician can use the NT1R03AA and NT1R03BA pin-out information in Tables 4-13 and 4-14 to wire the Option 11 or Option 21–81 to each peripheral device through the cross-connect panel.

The technician then connects each individual wire through the cross-connect panel directly to the correct peripheral device using the NT1R03AA and NT1R03BA pin-out information in Tables 4-13 and 4-14.

**Figure 4-9**  
**NT8D11 CE/PE cabinet input/output connector panel**

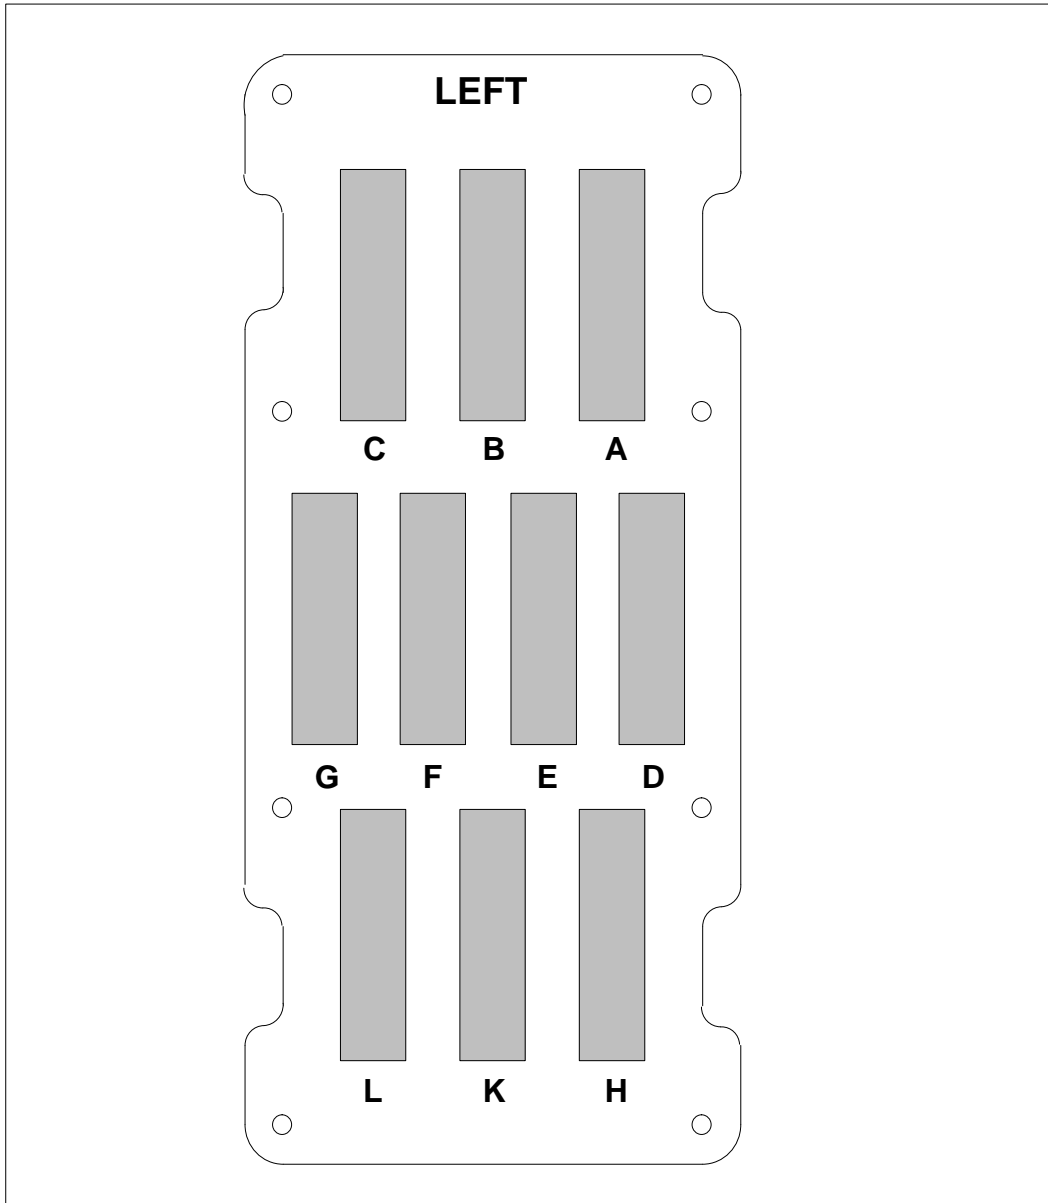

**Figure 4-10**  
**NT8D37 IPE cabinet I/O panels**

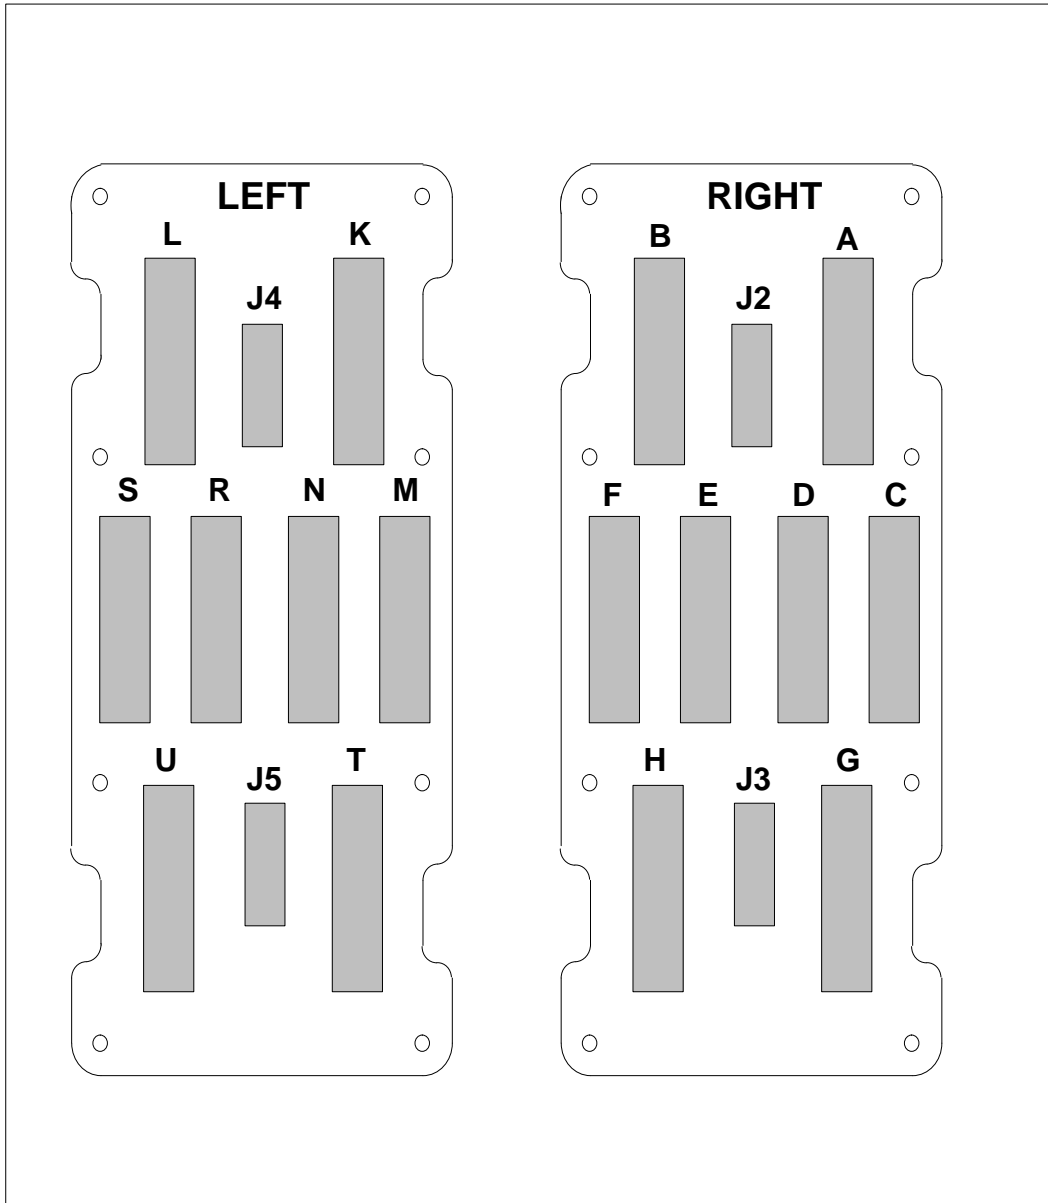

## Cables

### External input/output cables

Meridian MAX IPE/IPE-E external cables exit from the base of the Option 11 and the rear of the Option 21–81. Table 4-12 lists all of the external I/O cables and the devices to which they connect. For the gender of each peripheral device, see the individual section for each type of peripheral.


**Note:** The Configuration Control feature uses a Load Management Link that is also referred to as Configuration Control Link.

| Table 4-12<br>External input/output cables               |                                                                                                                                                  |                                                                                                                       |                                                                                                        |
|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| ENG code                                                 | Application                                                                                                                                      | Cable and connector style                                                                                             | Length                                                                                                 |
| NT1R03AA<br>NT1R03BA                                     | Carries input/output information between the Option 11 or Option 21-81 and its peripheral devices (The NT1R03AA also has Ethernet capabilities.) | 50-pin (female) key telephone connector to four DB-25 (female) connectors (NT1R03AA also has an Ethernet connection.) | Four connectors<br>76 cm (30 in)<br>69 cm (27 in)<br>61 cm (24 in)<br>53 cm (21 in)<br>in ladder shape |
| NT1R03CA                                                 | Extends the connection between the Option 11 and the NT1R03AA and NT1R03BA cables                                                                | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector                                      | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 m (25 ft)<br>13.7 m (45 ft)                         |
| NT1R03DB<br>NT1R03DC<br>NT1R03DF<br>NT1R03DP<br>NT1R03DV | Extension cable from NT1R03AA and NT1R03BA cables to peripheral devices, HSL port, or LML port                                                   | DB-25 (male) connector to DB-25 (male) connector                                                                      | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 m (25 ft)<br>13.7 m (45 ft)                         |
| —continued—                                              |                                                                                                                                                  |                                                                                                                       |                                                                                                        |


| <b>Table 4-12 (continued)</b><br><b>External input/output cables</b> |                                                                                                                        |                                                                                                      |                                                                                |
|----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| <b>ENG code</b>                                                      | <b>Application</b>                                                                                                     | <b>Cable and connector style</b>                                                                     | <b>Length</b>                                                                  |
| NT1R03EB<br>NT1R03EC<br>NT1R03EF<br>NT1R03EP<br>NT1R03EV             | Extension cable from NT1R03AA and NT1R03BA cables to peripheral devices                                                | DB-25 (male) connector to DB-25 (female) connector                                                   | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 m (25 ft)<br>13.7 m (45 ft) |
| NT1R03HF                                                             | Modem cable from NT1R03AA and NT1R03BA cables to modem                                                                 | DB-25 (male) connector to DB-25 (male) connector                                                     | 3 m (10 ft)                                                                    |
| NT1R03FP<br>NT1R03FV                                                 | MDF extension cable between the Option 11 and Option 21-81 and the NT1R03AA cable                                      | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector (with Ethernet tap) | 7.6 m (25 ft)<br>13.7 m (45 ft)                                                |
| NT1R03GP<br>NT1R03GV                                                 | MDF extension cable between the Option 11 and Option 21-81 and the NT1R03BA cable                                      | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector                     | 7.6 m (25 ft)<br>13.7 m (45 ft)                                                |
| NTAK19AA                                                             | Carries input/output information between the TDS/DTR card's HSL port on the Option 11 and Port 8 on the NT1R03BA cable | 50-pin key telephone connector to two DB-25 (male) connectors                                        | 1.8 m (6 ft)                                                                   |
| NTAK19BA                                                             | Carries input/output information between the SDI/DCH card's HSL port on the Option 11 and Port 8 on the NT1R03BA cable | 50-pin key telephone connector to four DB-25 (male) connectors                                       | 1.8 m (6 ft)                                                                   |
| NT8D93AJ<br>NT8D93AW                                                 | Carries input/output information between the HSL port on the Option 21-81 and Port 8 on the NT1R03BA cable             | 25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector        | 4.9 m (16 ft)<br>14.6 m (48 ft)                                                |
| —end—                                                                |                                                                                                                        |                                                                                                      |                                                                                |




**Figure 4-11**  
**Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03Dx straight through RS-232 extension cable used between NT1R03AA or NT1R03BA and peripheral devices, HSL port, or LML port**

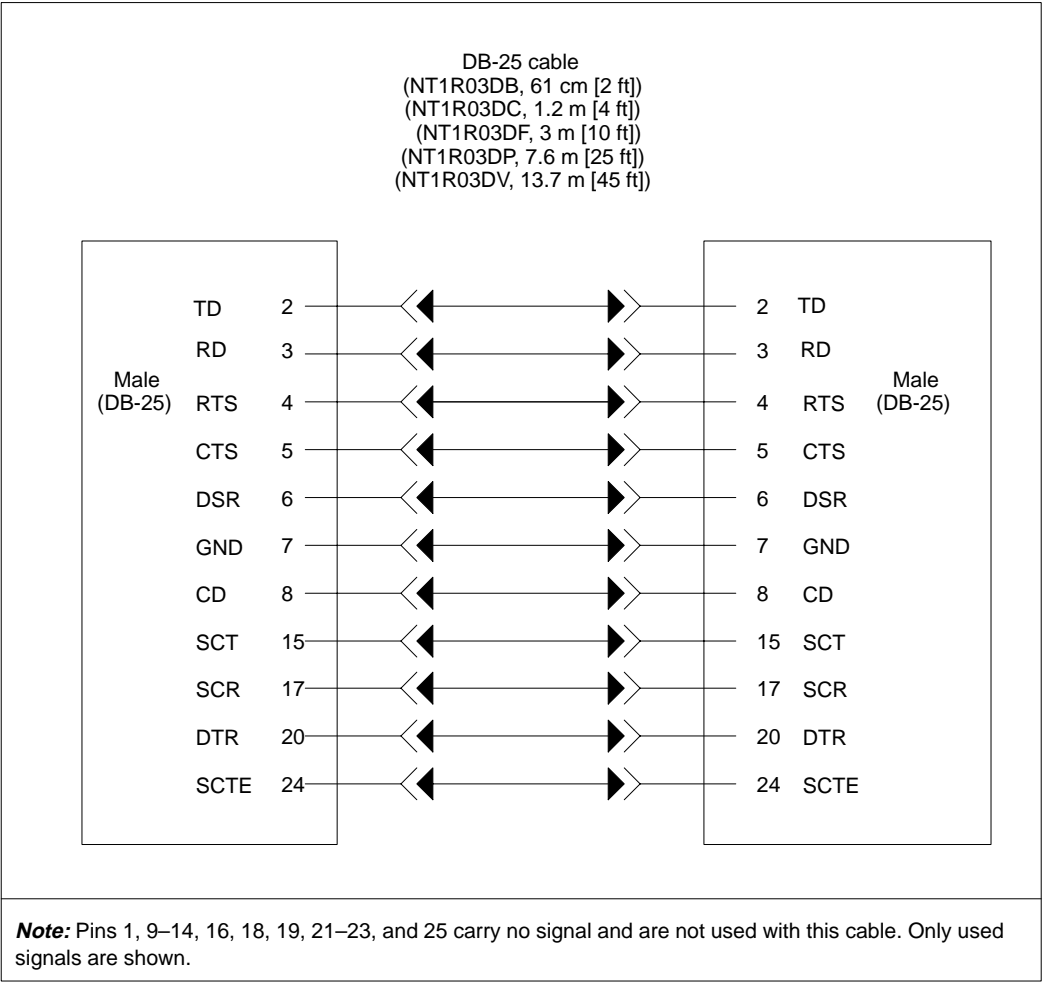

**Figure 4-12**  
**Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03Ex straight through RS-232 extension cable used between NT1R03AA or NT1R03BA and peripheral devices**

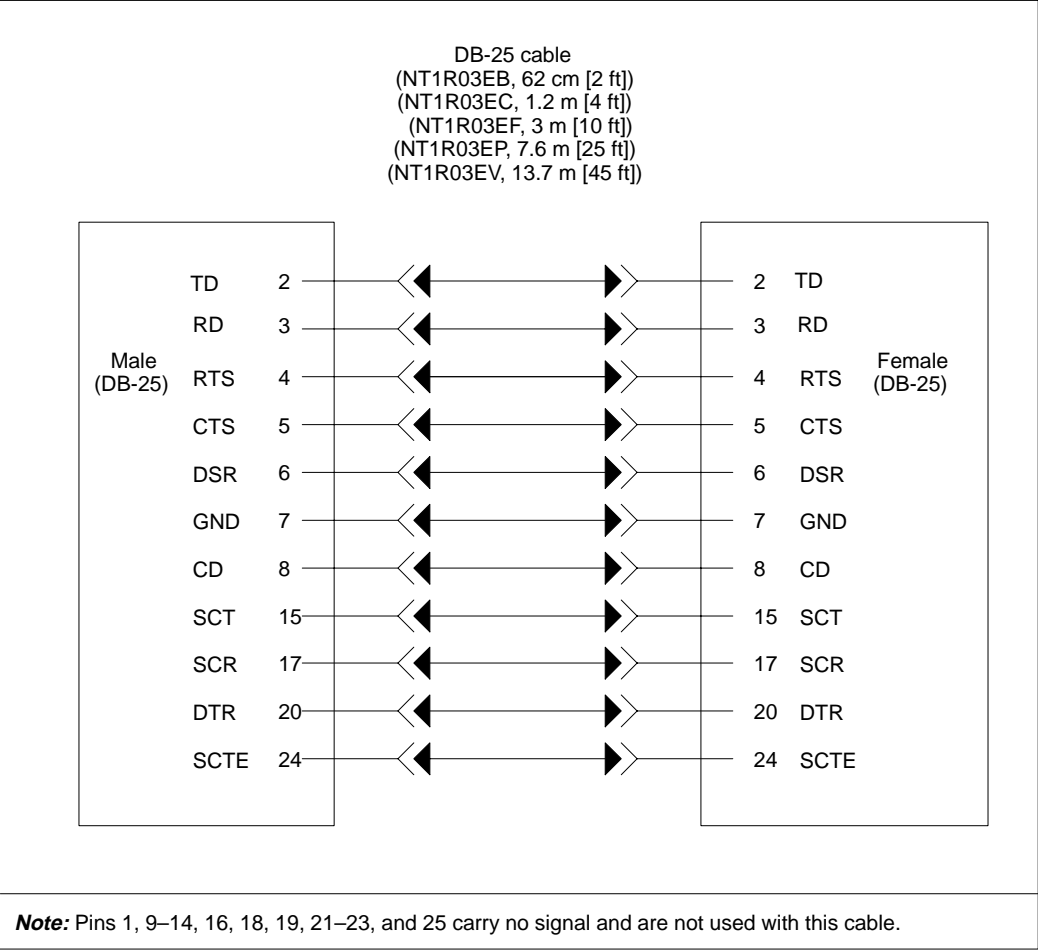

**Figure 4-13**  
**Cabling arrangement—Meridian MAX IPE/IPE-E NT1R03HF modem cable used between**  
**NT1R03AA or NT1R03BA and modems**

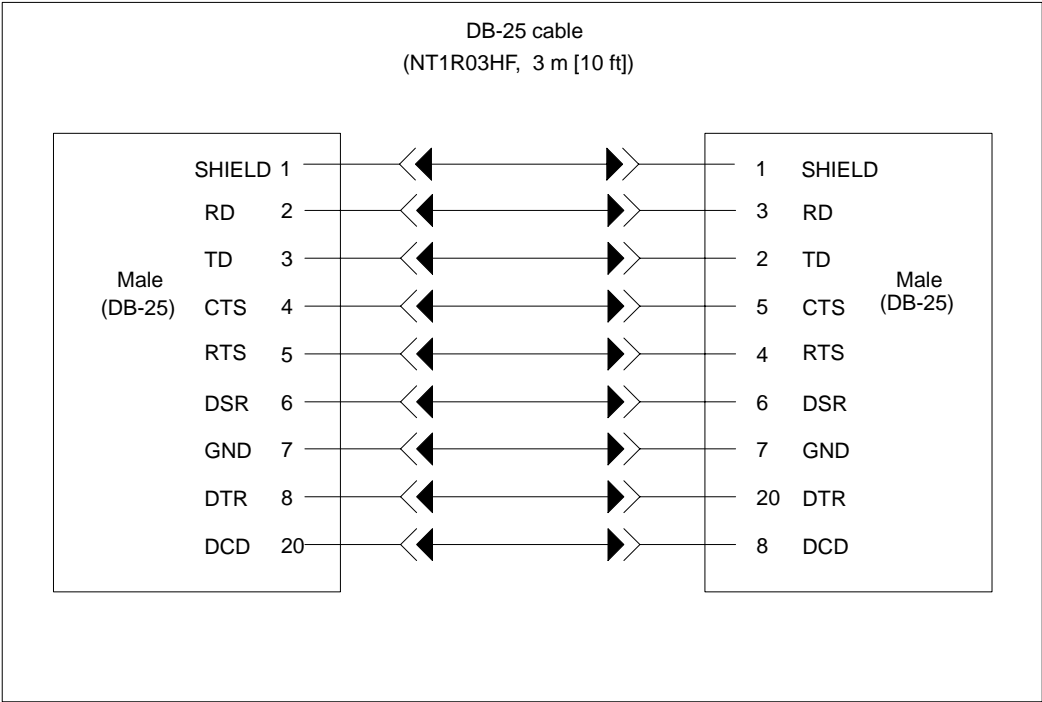


**NT1R03AA/NT1R03BA four-port I/O cable**

The NT1R03AA and NT1R03BA four-port I/O cables connect the Meridian MAX IPE/IPE-E module with each peripheral in the system. The NT1R03BA cable has a single 50-pin key telephone connector at one end, and four female DB-25 connectors at the other end, as shown in Figure 4-15. The NT1R03AA also has an additional port reserved for the LAN connection, as shown in Figure 4-14. The 50-pin key telephone connector connects to the DB-25 socket of an NT1R03CA extension cable that is connected at the base of the Option 11. The 50-pin key telephone connector can also connect to the Meridian MAX IPE/IPE-E module breakout panel at the rear of the Option 21–81 (see Figures 4-14 and 4-15). Each of the three DB-25 plugs at the other end are connected to a peripheral device. Refer to the correct port assignment chart when connecting peripherals to cables.

The RS-232 straight-through cable with male DB-25 connectors seen in Figures 4-11, 4-12, and 4-13 can extend the range between a Meridian MAX IPE/IPE-E and a peripheral device. The distance between a peripheral RS-232 device and an Option 11 or Option 21–81 must not exceed 15 meters (50 feet).


Table 4-13 is the wiring table for the NT1R03AA four-port I/O cable with the additional Ethernet connector. Table 4-14 is the wiring table for the NT1R03BA four-port I/O cable. Note that all of the pins listed in the FROM column represent pins in the 50-pin key telephone connector which connects to the Meridian MAX IPE/IPE-E module. Pins listed in the TO column are pins in the DB-25 sockets for the cables listed in the CABLE column.

**Figure 4-14**  
**NT1R03AA four-port I/O cable**

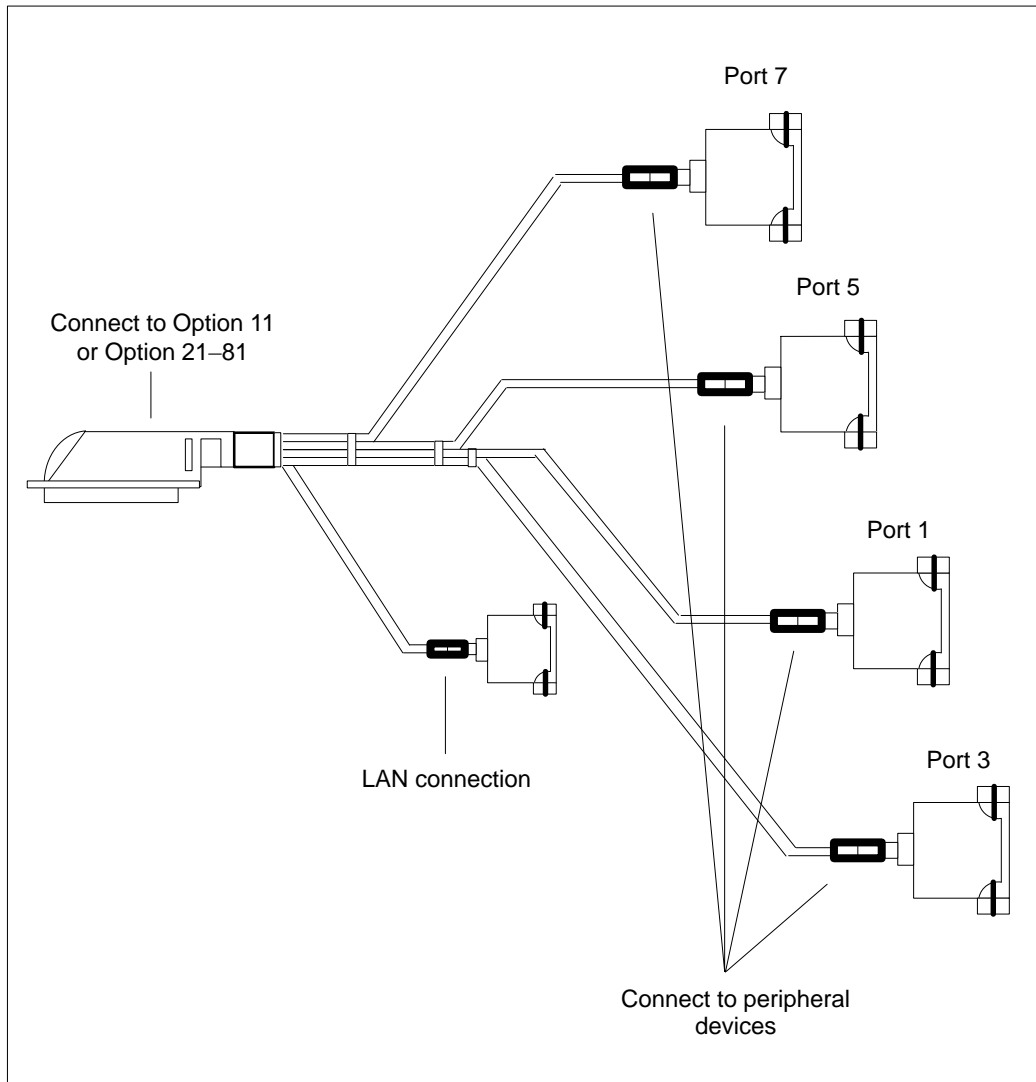

| Table 4-13<br>NT1R03AA 50-pin four-port cable wiring                                                                                                                                                                      |          |          |             |            |          |          |             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|-------------|------------|----------|----------|-------------|
| From DB-50                                                                                                                                                                                                                | To DB-25 | Port     | Signal name | From DB-50 | To DB-25 | Port     | Signal name |
| 1                                                                                                                                                                                                                         | 7        | 1        | GND1        | 26         | 8        | 1        | DCD1        |
| 2                                                                                                                                                                                                                         | 2        | 1        | TXD1        | 27         | 3        | 1        | RXD1        |
| 3                                                                                                                                                                                                                         | 4        | 1        | RTS1        | 28         | 5        | 1        | CTS1        |
| 4                                                                                                                                                                                                                         | 6        | 1        | DSR1        | 29         | 20       | 1        | DTR1        |
| 5                                                                                                                                                                                                                         | 7        | 3        | GND3        | 30         | 8        | 3        | DCD3        |
| 6                                                                                                                                                                                                                         | 2        | 3        | TXD3        | 31         | 3        | 3        | RXD3        |
| 7                                                                                                                                                                                                                         | 4        | 3        | RTS3        | 32         | 5        | 3        | CTS3        |
| 8                                                                                                                                                                                                                         | 6        | 3        | DSR3        | 33         | 20       | 3        | DTR3        |
| 9                                                                                                                                                                                                                         | 7        | 5        | GND5        | 34         | 8        | 5        | DCD5        |
| 10                                                                                                                                                                                                                        | 2        | 5        | TXD5        | 35         | 3        | 5        | RXD5        |
| 11                                                                                                                                                                                                                        | 4        | 5        | RTS5        | 36         | 5        | 5        | CTS5        |
| 12                                                                                                                                                                                                                        | 6        | 5        | DSR5        | 37         | 20       | 5        | DTR5        |
| 13                                                                                                                                                                                                                        | 15       | 5        | TXCI5       | 38         | 17       | 5        | RXCI5       |
| 14                                                                                                                                                                                                                        | 22       | 5        | RI5         | 39         | 24       | 5        | TXCO5       |
| 15                                                                                                                                                                                                                        | 7        | 7        | GND7        | 40         | 8        | 7        | DCD7        |
| 16                                                                                                                                                                                                                        | 2        | 7        | TXD7        | 41         | 3        | 7        | RXD7        |
| 17                                                                                                                                                                                                                        | 4        | 7        | RTS7        | 42         | 5        | 7        | CTS7        |
| 18                                                                                                                                                                                                                        | 6        | 7        | DSR7        | 43         | 20       | 7        | DTR7        |
| 19                                                                                                                                                                                                                        | 15       | 7        | TXCI7       | 44         | 17       | 7        | RXCI7       |
| 20                                                                                                                                                                                                                        | 22       | 7        | RI7         | 45         | 24       | 7        | TXCO7       |
| From DB-50                                                                                                                                                                                                                | To DB-15 | Port     | Signal name | From DB-50 | To DB-15 | Port     | Signal name |
| 21                                                                                                                                                                                                                        | 2        | Ethernet | C+          | 46         | 9        | Ethernet | C-          |
| 22                                                                                                                                                                                                                        | 3        | Ethernet | T+          | 47         | 10       | Ethernet | T-          |
| 23                                                                                                                                                                                                                        | 5        | Ethernet | R+          | 48         | 12       | Ethernet | R-          |
| 24                                                                                                                                                                                                                        | 6        | Ethernet | SG          | 49         | 13       | Ethernet | +12VF       |
| 25                                                                                                                                                                                                                        |          | FGND     | FGND        | 50         |          | FGND     | FGND        |
| <b>Note:</b> The cable wiring for the NT1R03AA Ethernet connector indicated at pins 21–24 and pins 46–49 on the DB-50 connector map onto pins 2, 3, 5, and 6, and pins 9, 10, 12, and 13 of the DB-15 Ethernet connector. |          |          |             |            |          |          |             |

**Figure 4-15**  
**NT1R03BA four-port I/O cable**

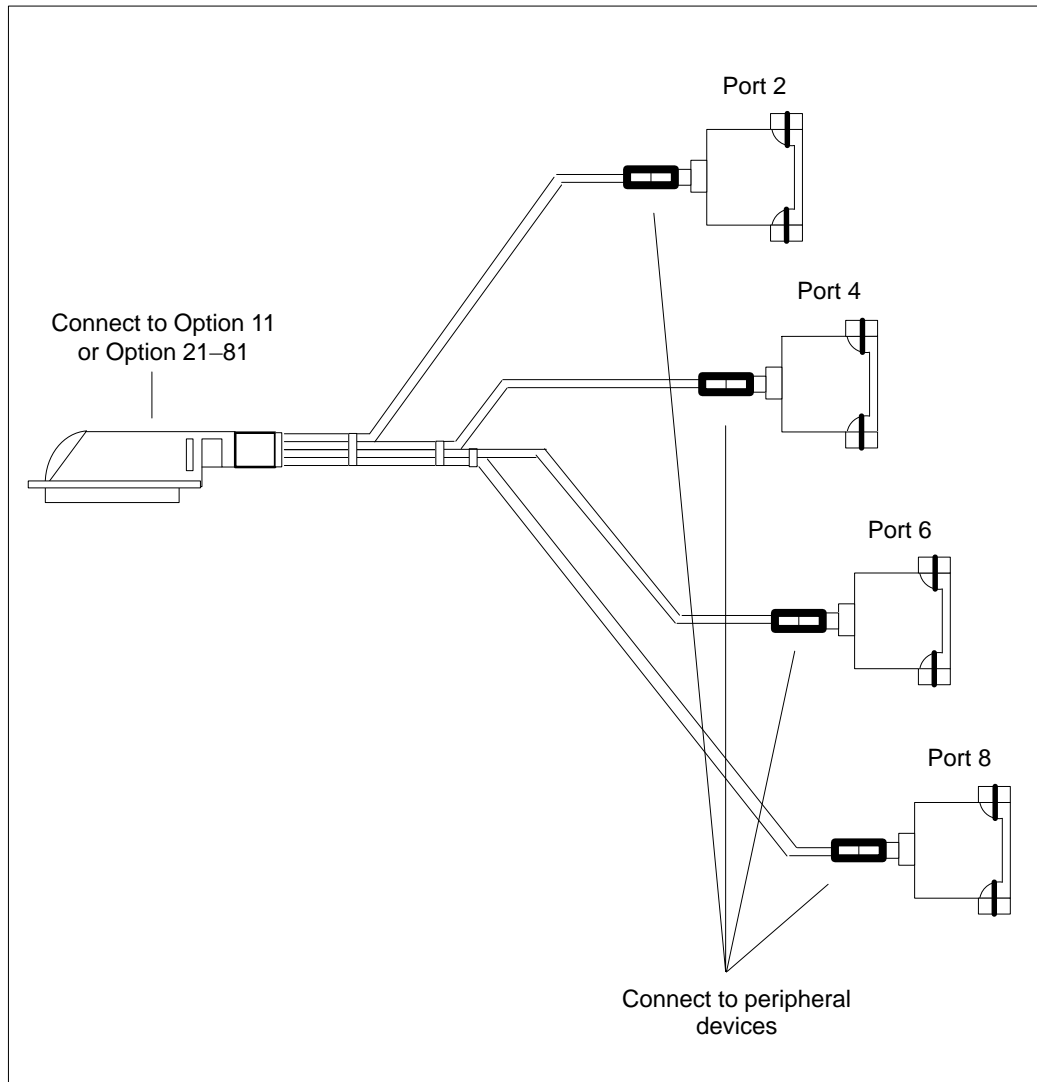

| <b>Table 4-14<br/>NT1R03BA 50-pin four-port cable wiring</b> |                     |             |                        |                       |                     |             |                        |
|--------------------------------------------------------------|---------------------|-------------|------------------------|-----------------------|---------------------|-------------|------------------------|
| <b>From<br/>DB-50</b>                                        | <b>To<br/>DB-25</b> | <b>Port</b> | <b>Signal<br/>name</b> | <b>From<br/>DB-50</b> | <b>To<br/>DB-25</b> | <b>Port</b> | <b>Signal<br/>name</b> |
| 1                                                            | 7                   | 2           | GND2                   | 26                    | 8                   | 2           | DCD2                   |
| 2                                                            | 2                   | 2           | TXD2                   | 27                    | 3                   | 2           | RXD2                   |
| 3                                                            | 4                   | 2           | RTS2                   | 28                    | 5                   | 2           | CTS2                   |
| 4                                                            | 6                   | 2           | DSR2                   | 29                    | 20                  | 2           | DTR2                   |
| 5                                                            | 7                   | 4           | GND4                   | 30                    | 8                   | 4           | DCD4                   |
| 6                                                            | 2                   | 4           | TXD4                   | 31                    | 3                   | 4           | RXD4                   |
| 7                                                            | 4                   | 4           | RTS4                   | 32                    | 5                   | 4           | CTS4                   |
| 8                                                            | 6                   | 4           | DSR4                   | 33                    | 20                  | 4           | DTR4                   |
| 9                                                            | 7                   | 6           | GND6                   | 34                    | 8                   | 6           | DCD6                   |
| 10                                                           | 2                   | 6           | TXD6                   | 35                    | 3                   | 6           | RXD6                   |
| 11                                                           | 4                   | 6           | RTS6                   | 36                    | 5                   | 6           | CTS6                   |
| 12                                                           | 6                   | 6           | DSR6                   | 37                    | 20                  | 6           | DTR6                   |
| 13                                                           | 15                  | 6           | TXCI6                  | 38                    | 17                  | 6           | RXCI6                  |
| 14                                                           | 22                  | 6           | RI6                    | 39                    | 24                  | 6           | TXCO6                  |
| 15                                                           | 7                   | 8           | GND8                   | 40                    | 8                   | 8           | DCD8                   |
| 16                                                           | 2                   | 8           | TXD8                   | 41                    | 3                   | 8           | RXD8                   |
| 17                                                           | 4                   | 8           | RTS8                   | 42                    | 5                   | 8           | CTS8                   |
| 18                                                           | 6                   | 8           | DSR8                   | 43                    | 20                  | 8           | DTR8                   |
| 19                                                           | 15                  | 8           | TXCI8                  | 44                    | 17                  | 8           | RXCI8                  |
| 20                                                           | 22                  | 8           | RI8                    | 45                    | 24                  | 8           | TXCO8                  |
| 21                                                           |                     |             | NC                     | 46                    |                     |             | NC                     |
| 22                                                           |                     |             | NC                     | 47                    |                     |             | NC                     |
| 23                                                           |                     |             | NC                     | 48                    |                     |             | NC                     |
| 24                                                           |                     |             | NC                     | 49                    |                     |             | NC                     |
| 25                                                           |                     | FGND        | FGND                   | 50                    |                     | FGND        | FGND                   |



## Hardware upgrades

A Meridian MAX IPE/IPE-E module for the Option 11 system can be upgraded in the field to a Meridian MAX IPE/IPE-E module for the Option 21–81 system. This is done by means of a Meridian MAX IPE/IPE-E hardware upgrade kit (A0600072) consisting of a new frame, faceplate, mounting hardware, labels, and documentation.

There is no need to reinstall the system software, since the same hard disk is used.

If you need to replace a component of the system, the upgrade instructions given in this section permit you to make the replacement.



### **CAUTION**

#### **Risk of equipment damage**

Use an antistatic wrist strap before you remove components from an antistatic bag. Failure to do so results in damage to components.

All upgrades must be performed by qualified technicians.



### **CAUTION**

#### **Risk of data corruption**

Shut down the system from the maintenance menu, then secure the system before powering down the module.

If you are adding a module to your system, power down the column. Once the appropriate equipment is powered down, remove the column's faceplate and back plate for the appropriate shelf.

See the “Meridian MAX power-down procedure” chapter for more information.

## Performing the hardware upgrade

Procedure 4-1 details instructions on performing a hardware upgrade.

### Procedure 4-1

#### To perform the hardware upgrade

- 1 Shut down the Meridian MAX software, then ensure that the power to the IPE module is turned off.  
  
Refer to the “Meridian MAX power-down procedure” chapter for instructions on how to shut down the Meridian MAX software.
- 2 Remove the Meridian MAX IPE/IPE-E module from the Option 11 or Option 21–81.  
  
Move the latches at the top and bottom of the module to the unlatched position. Slowly slide the module along the slots and remove it from the cabinet.
- 3 Lay the module on its side with the outside of the disk drive card facing up, as in Figure 4-17, and the faceplate of the Option 11 Meridian MAX IPE/IPE-E module facing you.
- 4 Remove the SCSI terminator from the faceplate of the Meridian MAX IPE/IPE-E.
- 5 Using a small Phillips screwdriver, unscrew the six screws located on the outside of the disk drive card as shown in Figure 4-17.  
  
These screws are indicated by arrows printed on the disk drive card. Set the screws and flat washers aside.
- 6 Hold the disk drive card by the edges. Push the disk drive card away from the faceplate, then lift it up and away.
- 7 To separate the disk drive card from the CPU card, disconnect the SCSI I/O cable from the CPU card at connector J14, as shown in Figure 4-16.  
  
Pull open the ejectors at either end of the SCSI cable plug on the CPU card and lift the connector out of the plug.
- 8 Disconnect the power cable from the CPU card at connector J5, as shown in Figure 4-16.
- 9 Turn the CPU card over and remove the Option 11 bracing support, as shown in Figure 4-16.  
  
This bracing support sits inside the module between the CPU and disk drive cards. Hold the support with one hand while removing the screw from the CPU board with the other.
- 10 Remove the six screws and flat washers securing the CPU card to the Meridian MAX IPE/IPE-E module frame, as shown in Figure 4-16.

- 11** Pull the CPU card away from the faceplate and lift.

The Option 21–81 Meridian MAX IPE/IPE-E module frame is identical in construction to the Option 11 module frame except that it is wider. The screw holes in the Option 21–81 module frame are in the same locations as the Option 11 module frame.
- 12** Place the CPU card against the Option 21–81 module frame, making sure the edge of the card is securely against the faceplate.


Make sure to line up the ABORT and RESET switches with the corresponding cutouts in the Meridian MAX IPE/IPE-E module frame.
- 13** Replace the six screws and flat washers, reattaching the CPU card to the Option 21–81 Meridian MAX IPE/IPE-E module frame as shown in Figure 4-16.
- 14** Insert the Option 21–81 bracing support shown in Figure 4-16.

This bracing support sits inside the module between the CPU and disk drive cards. Hold the support with one hand while inserting the screw into the CPU board with the other.
- 15** Turn the CPU card and frame over, and reconnect the disk drive card to the CPU card by connecting the power cable to the CPU card at connector J5, as shown in Figure 4-16.
- 16** Connect the disk drive card's SCSI I/O cable to the CPU card at connector J14, as shown in Figure 4-16. Make sure the SCSI plug's key bumps are lined up correctly and that the latches are closed.
- 17** With the faceplate of the Option 21-81 Meridian MAX IPE/IPE-E module facing you, hold the disk drive card by the edges. Close the module by lifting the disk drive card towards you and pulling it towards you until it is securely against the faceplate.
- 18** Reattach the disk drive card to the Meridian MAX IPE/IPE-E frame using the six original screws and flat washers, as shown in Figure 4-17.


These screw holes are indicated by arrows printed on the disk drive card.
- 19** Reattach the SCSI terminator to the SCSI port. Make sure the terminator is firmly in place.
- 20** Insert the upgraded Meridian MAX IPE/IPE-E module into the Option 11 or Option 21–81.

Slowly slide the module along the slots into the cabinet, making sure the latches at the top and bottom of the module are in an unlatched position, until it is firmly in place. Make sure the latches at the top and bottom of the module are secured.
- 21** Power on the Meridian MAX IPE/IPE-E module.


**Figure 4-16**  
**Meridian MAX IPE/IPE-E CPU card**

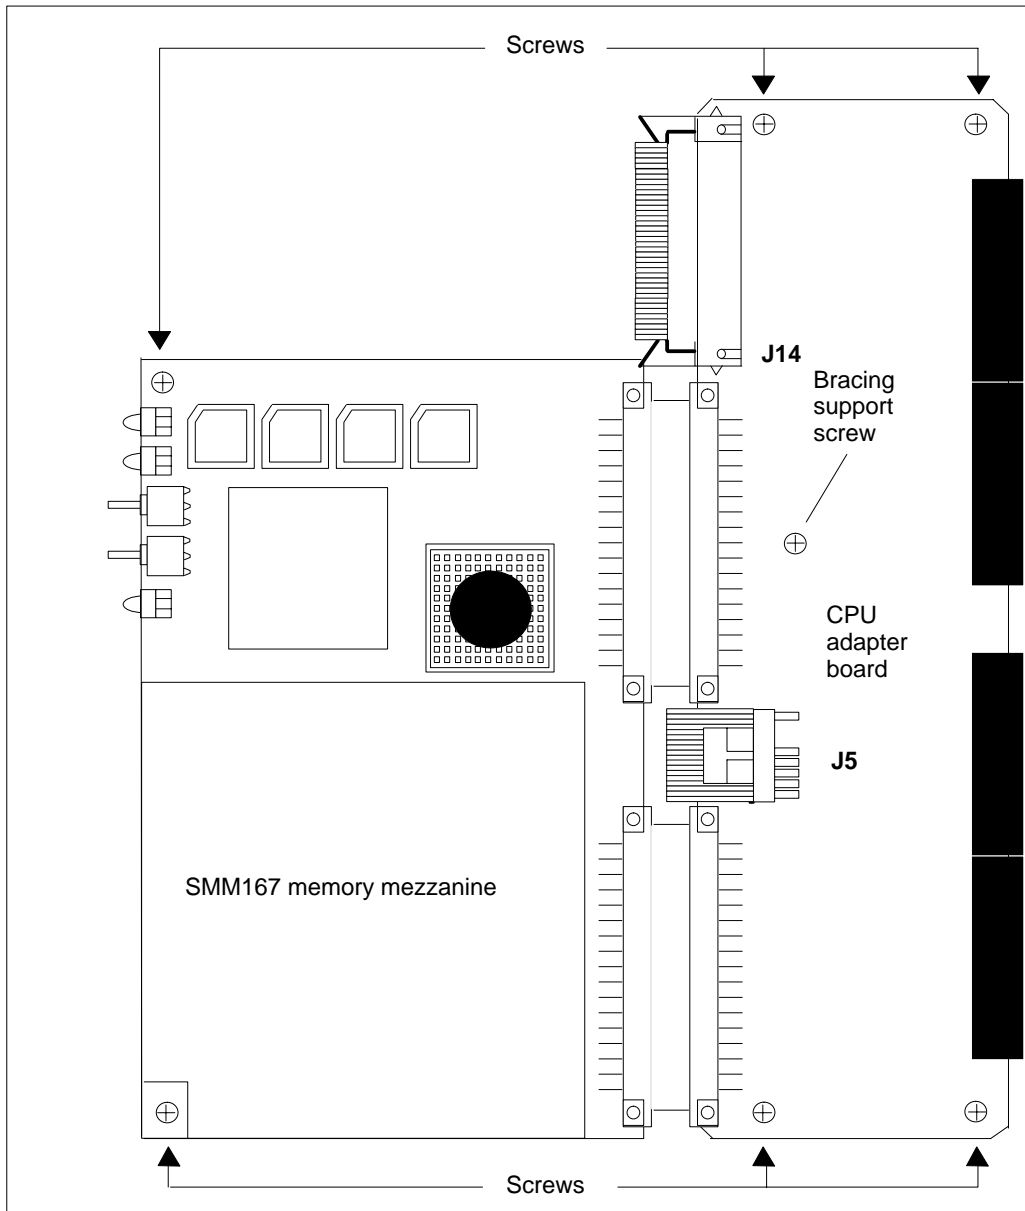

**Figure 4-17**  
**Meridian MAX IPE/IPE-E disk drive card: outside view**

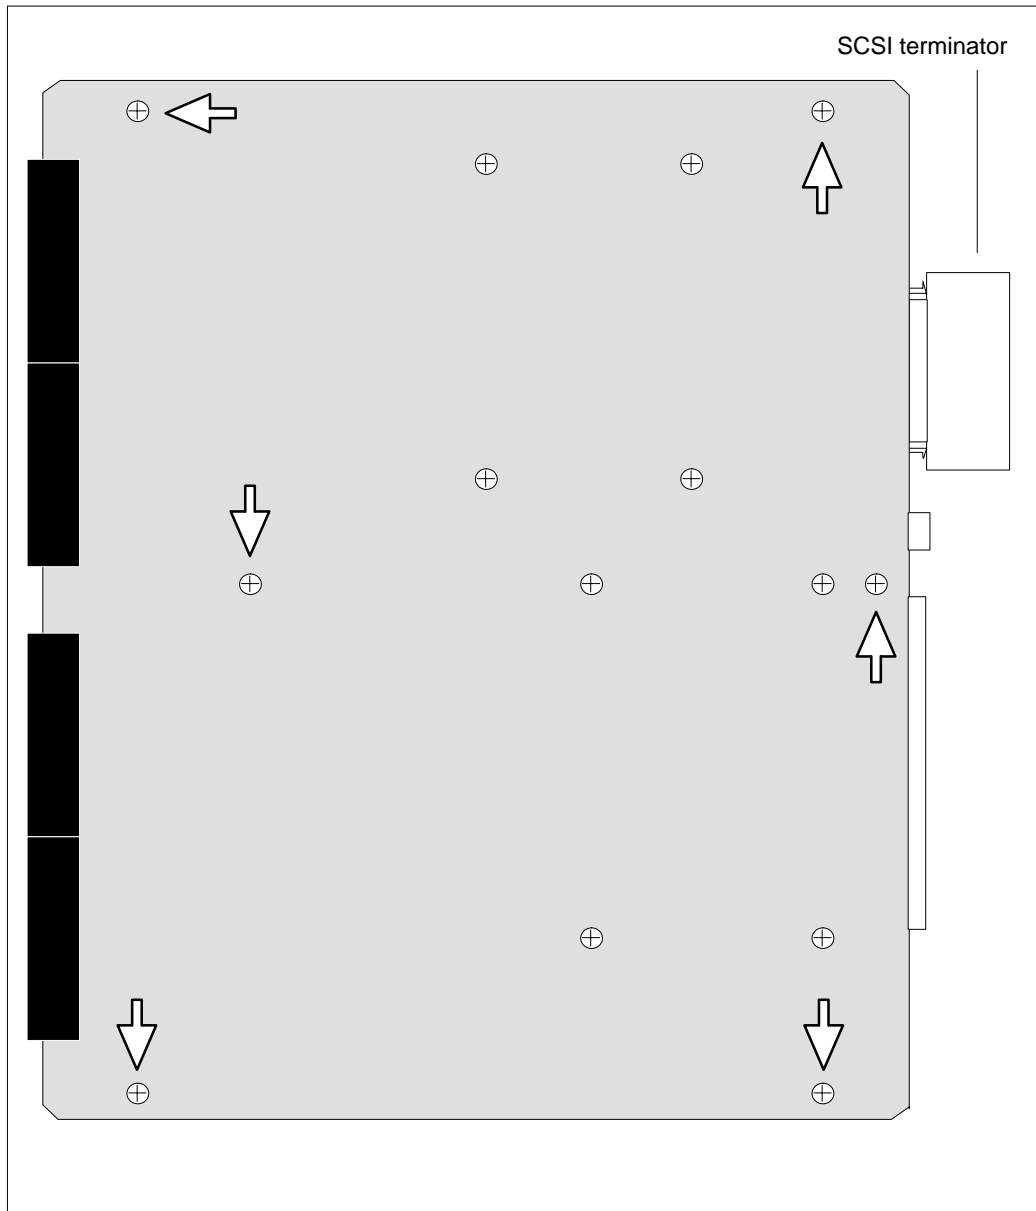

**Figure 4-18**  
**Meridian MAX IPE/IPE-E disk drive card: inside view**

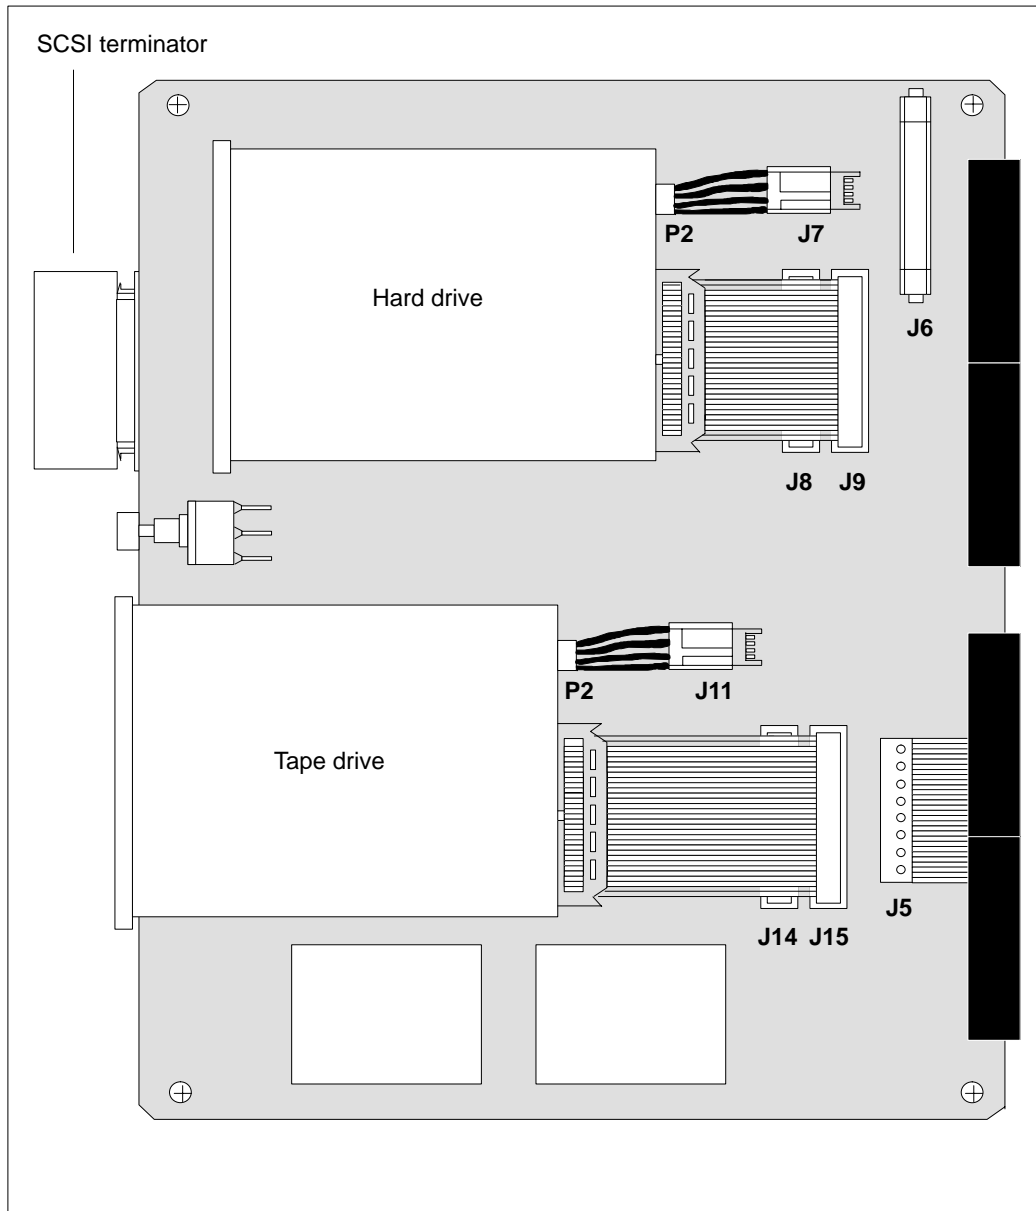

## Hardware replacements



### CAUTION

#### Risk of equipment damage

Use an antistatic wrist strap before you remove components from an antistatic bag. Failure to do so results in damage to components.

All replacements must be performed by qualified technicians.



### CAUTION

#### Risk of data corruption

Shut down the system from the maintenance menu, then secure the system before powering down the module.

If you are adding a module to your system, power down the column. Once the appropriate equipment is powered down, remove the column's faceplate and back plate for the appropriate shelf.

See the "Meridian MAX power-down procedure" chapter for more information.

Procedure 4-2 details instructions on performing a hardware replacement.

### Procedure 4-2

#### To perform the hardware replacement

- 1 Shut down the Meridian MAX software, then ensure that the power to the IPE module is turned off.  
Refer to the "Meridian MAX power-down procedure" chapter for instructions on how to shut down the Meridian MAX software.
- 2 Remove the Meridian MAX IPE/IPE-E module from the Option 11 or Option 21–81.  
Move the latches at the top and bottom of the module to the unlatched position. Slowly slide the module along the slots and remove it from the cabinet.

- 3 Insert the replacement Meridian MAX IPE/IPE-E module into the Option 11 or Option 21–81.

Slowly slide the module along the slots into the cabinet, making sure the latches at the top and bottom of the module are in an unlatched position, until it is firmly in place. Make sure the latches at the top and bottom of the module are secured.

- 4 Power on the Meridian MAX IPE/IPE-E module.

## Configuring the SMM167 card

Procedure 4-3 provides instructions on configuring the SMM167 for the Option 11 and Option 21 Meridian MAX IPE/IPE-E modules.

**Note:** If you change the SMM167 card, you must make the LAN aware of the card's Media Access Control address. This is done by "pinging" a known device on your LAN while the Meridian MAX is in product mode. LAN connections to the Meridian MAX may not work properly if this address is not known to the LAN. For more information on the ping process, refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "LAN link diagnostic tools" chapter, "Ping" section.

### Procedure 4-3 To configure the SMM167 card

- 1 Shut down the Meridian MAX software.  
Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system running" chapter, "Shut down the system" section, for instructions on shutting down your Meridian MAX system.
- 2 Secure the Meridian MAX 8 system for power down.  
Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and Administration programs: system shut down" chapter, "Restart and Power Down Utilities" section, "Secure the System for Power Down" subsection, for more information.
- 3 Power down your system by pressing the power button located at the front of the IPE module to the OFF position. Wait approximately 20 seconds, then press the power switch to the ON position.



#### 4-54 Hardware installation: Intelligent Peripheral Equipment module

---

The system displays the following messages at the maintenance workstation. Your system messages may differ.

Copyright Motorola Inc. 1989 - 1992, All Rights Reserved  
M4120 Debugger/Diagnostics Release Version 1.0 - 09/04/92

COLD Start

Local Memory Found =01000000 (&16777216)

MPU Clock Speed =25Mhz

- 4** If your SMM167 card was preset in the factory, go to Step 7.

If your card was not preset in the factory, the following message appears:

Autoboot in progress... To abort hit <BREAK>

- 5** Press the {BREAK} key.

**Note:** {F5} on the VT520 and VT420 is equivalent to the {BREAK} key.

--Break Detected--

The following menu may be shown. If it does not appear, go to Step 7.

- 1) Continue System Start Up
- 2) Select Alternate Boot Device
- 3) Go to System Debugger
- 4) Initiate Service Call
- 5) Display System Test Errors
- 6) Dump Memory to Tape

Enter Menu #:

- 6** Enter **3** to select the "Go to System Debugger" option.

- 7** The system displays the following prompt:

4120-Diag>

- 8** Enter **env** to configure the system environment.

The default values that appear when the system is powered on are in effect at this moment. They may differ if the card was configured at the factory or at the site. Regardless, only the following recommended values should be entered.

Bug or System environment [B/S] = ?

- 9** Enter **b** for bug.

The system displays the following prompt:

Field Service Menu Enable [Y/N] = ?

- 10** Enter **n** to reject the Field Service Menu.

The system displays the following prompt:

Probe System for Supported I/O controllers [Y/N] = ?

- 11** Enter **y** to probe the system for supported I/O controllers.

The system displays the following prompt:

Local SCSI Bus Reset on Debugger Startup [Y/N] = ?

- 12** Enter **y** to start up the local SCSI bus reset on the debugger.

The system displays the following prompt:

Ignore CFGA Block on a Hard Disk Boot [Y/N] = ?

- 13** Enter **y** to ignore the CFGA block on a hard disk boot.

The system displays the following prompt:

Auto Boot Enable [Y/N] = ?

- 14** Enter **y** to enable the auto boot.

The system displays the following prompt:

Auto Boot at power-up only [Y/N] = ?

- 15** Enter **n** to disable auto boot at power-up only.

The system displays the following prompt:

Auto Boot Controller LUN = ?

- 16** Enter a period (.).

The system displays the following prompt:

Update Non-Volatile RAM [Y/N] = ?


- 17** Enter **y**.

Wait for the next prompt to appear on your screen. When the prompt appears, power down your system by pressing the power button located on the faceplate of the IPE module. At this point, you may replace the SMM167 card if necessary (refer to the "Hardware replacements" section for more details), or power on the system and install your Meridian MAX software.

## SMM167 card jumper settings

Figure 4-19 describes the jumper settings for the Option 11 and Option 21–81 Meridian MAX IPE/IPE-E module CPU card. These settings are configured in the factory so no field configuration is required.

**Figure 4-19**  
**SMM167 card jumper settings**

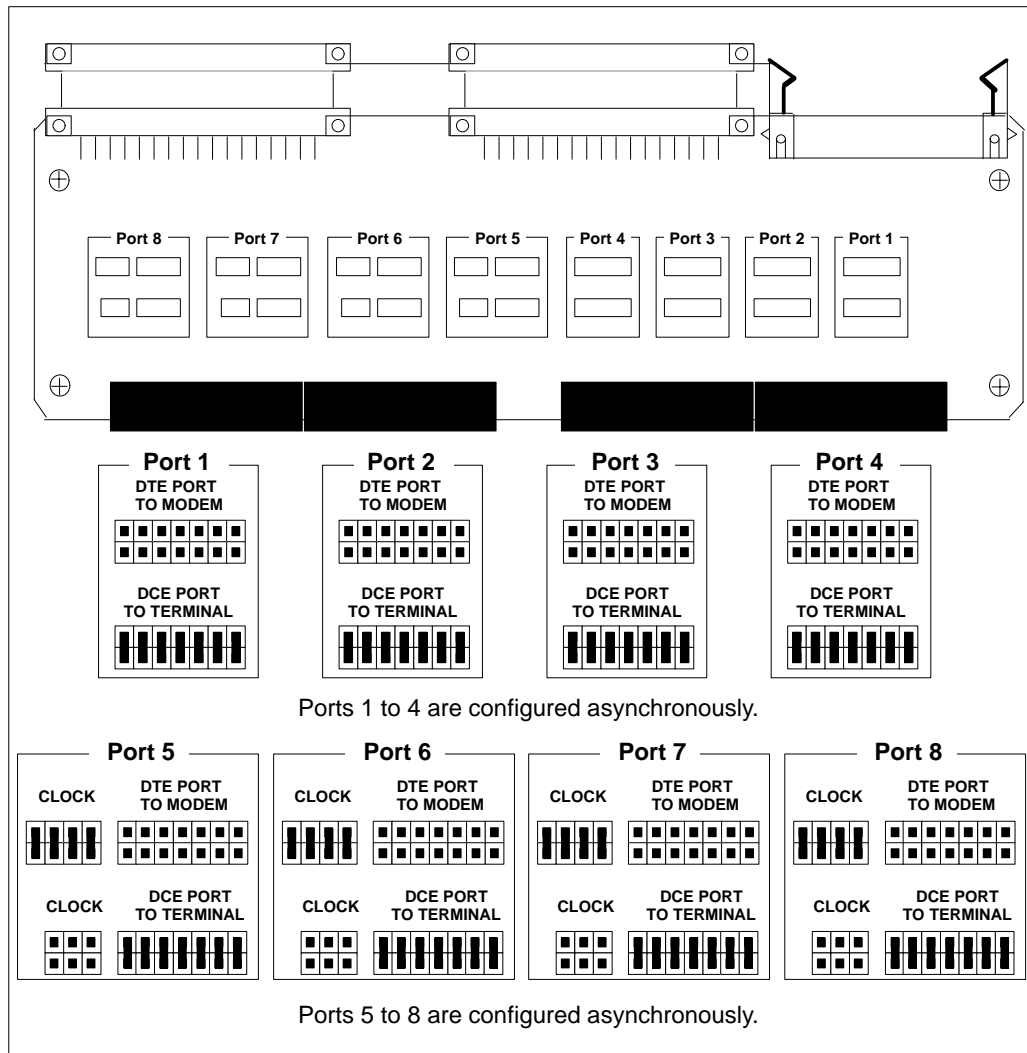

---

## Chapter 5: Modems

---

A modem may be used when a peripheral device or a Network Administration Center (NAC) system is located more than 15 meters (50 feet) from the Meridian MAX.

### Supported modems

There are a number of modems that can be used to connect a NAC system or peripheral device to the Meridian MAX. Table 5-1 lists each modem and the gender of its DB-25 serial port.

| <b>Table 5-1<br/>Modems—DB-25 serial port genders</b> |               |
|-------------------------------------------------------|---------------|
| <b>Modem type</b>                                     | <b>Gender</b> |
| Gandalf LDS 120E                                      | Female        |
| Develcon DS511A                                       | Female        |
| NetComm SmartModem M7F                                | Female        |
| Racal VI2422PA                                        | Female        |
| UDS 2440                                              | Female        |
| UDS EC224A/D                                          | Female        |
| Ven-Tel 2400 Plus II                                  | Female        |
| Ven-Tel 9600 Plus                                     | Female        |
| U.S. Robotics Sportster 28,800<br>Data/Fax            | Female        |

## 5-2 Modems

Table 5-2 lists the modems and the functions for which they can be used.

| <b>Table 5-2<br/>Modems and functions</b> |                         |                           |                           |                                |                     |
|-------------------------------------------|-------------------------|---------------------------|---------------------------|--------------------------------|---------------------|
| <b>Modem</b>                              | <b>Modem function</b>   |                           |                           |                                |                     |
|                                           | <b>Limited distance</b> | <b>Remote diagnostics</b> | <b>Dial-up supervisor</b> | <b>Remote supervisor login</b> | <b>Network link</b> |
| Gandalf LDS 120E                          | Yes                     |                           |                           | Yes                            | Yes                 |
| Develcon DS511A                           | Yes                     |                           |                           | Yes                            | Yes                 |
| NetComm Smart-Modem M7F                   |                         | Yes                       | Yes                       | Yes                            | Yes                 |
| Racal VI2422PA                            |                         | Yes                       | Yes                       | Yes                            | Yes                 |
| UDS 2440                                  |                         | Yes                       | Yes                       | Yes                            | Yes                 |
| UDS EC224A/D                              |                         | Yes                       | Yes                       |                                |                     |
| Ven-Tel 2400 Plus II                      |                         |                           | Yes                       | Yes                            | Yes                 |
| Ven-Tel 9600 Plus                         |                         |                           | Yes                       | Yes                            | Yes                 |
| U.S. Robotics Sportster 28,800 Data/Fax   |                         |                           | Yes                       | Yes                            | Yes                 |

A limited-distance modem is used when peripheral devices are connected to the Meridian MAX through a direct connection. If a direct connection cannot be supported, a dial-up modem is used to connect the peripheral device or NAC to the Meridian MAX through the public service telephone network (PSTN).

## Other modems

It may be possible to use other modems for dial-up supervisor displays, remote supervisor logins, or network links, provided that they support the correct subset of standard Hayes modem commands. A set of modem responses must also be supported. Table 5-3 shows the list of commands, and Table 5-4 shows the list of responses that must be supported.

| <b>Table 5-3<br/>Supported Hayes modem commands</b>                 |                            |
|---------------------------------------------------------------------|----------------------------|
| <b>Command</b>                                                      | <b>Usage</b>               |
| +++                                                                 | Escape sequence            |
| AT&C1                                                               |                            |
| AT&D0                                                               |                            |
| AT&D2                                                               |                            |
| AT&F                                                                | Recall factory settings    |
| AT&W                                                                | Write parameters           |
| ATDS1                                                               | Dial stored number         |
| ATDS=1*                                                             | Dial stored number         |
| ATDT...                                                             | Dial                       |
| ATE0                                                                | Echo off                   |
| ATH0                                                                | On hook                    |
| ATL0                                                                |                            |
| ATQ0                                                                | Result codes on            |
| ATS0=0                                                              | Auto answer ring number    |
| ATS2=128                                                            | Escape code character      |
| ATS64=1                                                             | Dial/answer sequence abort |
| ATX4                                                                | Extended feature set       |
| ATB1**                                                              | ITU – T answer sequence    |
| * This command is only used with the NetComm SmartModem M7F.        |                            |
| ** This command is only used with the U.S. Robotics 28.8 Sportster. |                            |

**Table 5-4**  
**Supported modem responses**

| Command | Response     |
|---------|--------------|
| 0       | OK           |
| 1       | RING         |
| 2       | CONNECT 1200 |
| 3       | CONNECT 2400 |
| 4       | CONNECT 4800 |
| 5       | CONNECT 9600 |
| 6       | CONNECT      |
| 7       | NO CARRIER   |
| 8       | MODEM ERROR  |
| 9       | NO DIAL TONE |
| 10      | BUSY         |
| 11      | NO ANSWER    |


Modem cables

Modems can be connected to the Meridian MAX using two modem cables: the NT7D99AA null modem cable and the NT7D61Ax cable.

Figure 5-1 shows the cabling arrangement for the NT7D99AA cable for use with dial-up supervisor, remote supervisor login, and network link.


Figure 5-2 shows the cabling arrangement for the NT7D61Ax cable for use with remote diagnostics.

**Figure 5-1**  
**Cabling arrangement—modem connection cable NT7D99AA for dial-up supervisor, remote supervisor login, and network link**

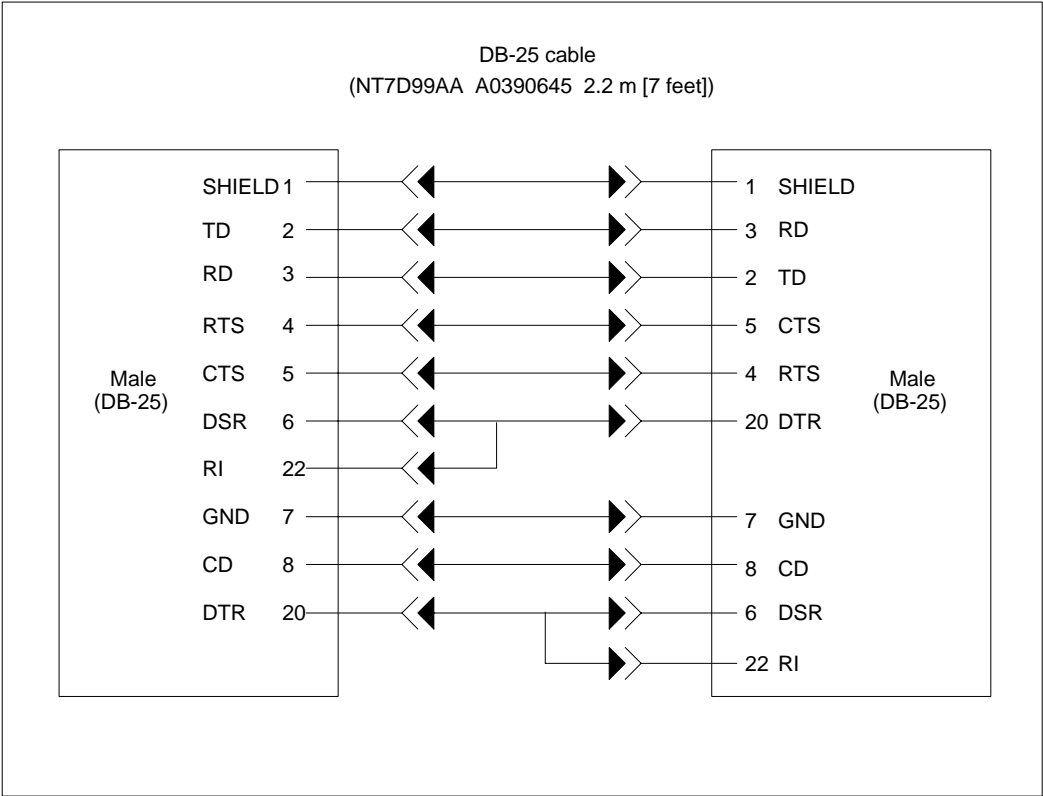



**Figure 5-2**  
**Cabling arrangement—modem connection cable NT7D61Ax for remote diagnostics**

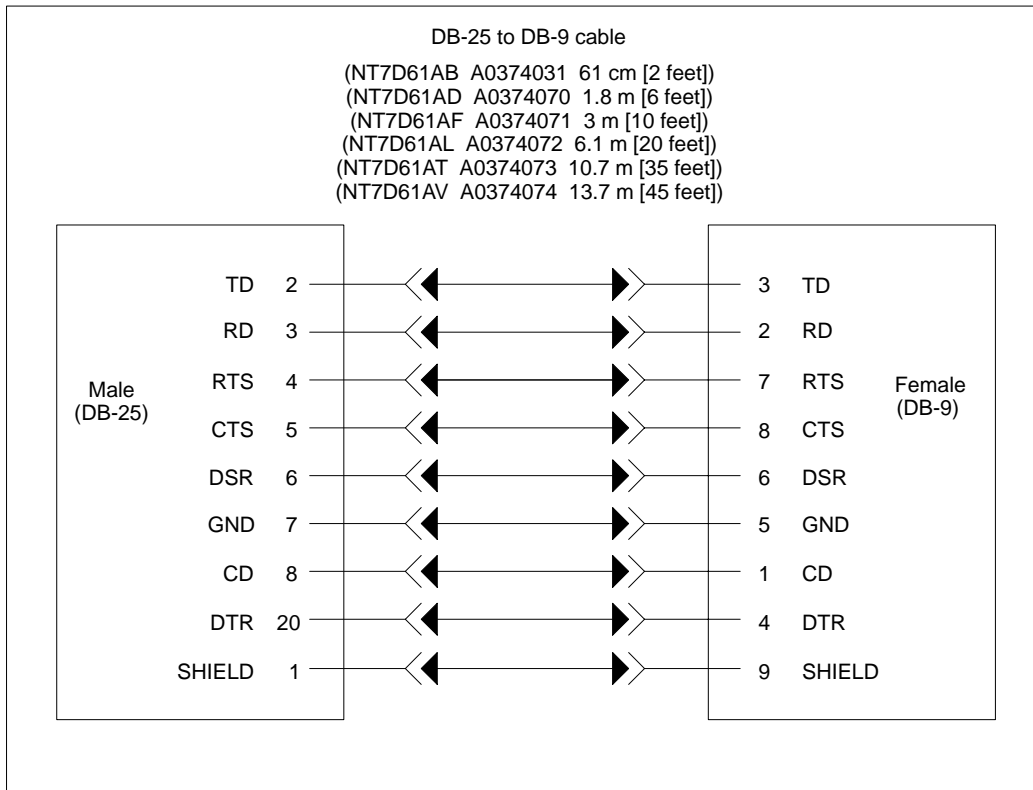

## Limited-distance modems

The following modems are supported for remote diagnostics:

- Gandalf LDS 120E
- Develcon DS 511A

If you need more than 15 meters (50 feet) between the Meridian MAX and any peripheral, you need to use a limited-distance modem. The limited-distance modem must be self-powered. The added range depends on the modem you obtain. Limited-distance modems are recommended for use inside buildings only.

The following settings are used for a limited-distance modem:

- 9600 baud rate
- 8 bits, No-parity, 1 stop bit

### **Gandalf LDS 120E and Develcon DS 511A limited distance**

The Gandalf LDS 120E and Develcon DS 511A limited-distance modems allow you to extend the distance between the SNN/SNN-E's VME multiport cable or the IPE/IPE-E's four-port I/O cable and any connected peripheral by up to a nominal distance of eight km (five miles). Other limited distance modems may not provide the eight km (five miles) distance. It is your responsibility to check with the particular manufacturer.

The Gandalf LDS 120E and Develcon DS 511A limited-distance modems can also be used for both the remote supervisor login and the network link. Refer to the "NAC Connectivity" section for more information.

For each peripheral requiring a limited-distance modem, you require either the null modem cable NT7D99AA (SNN/SNN-E) or NT1R03HF (IPE/IPE-E) connected between the modem and the multiport cable connected at the Meridian MAX.

If the peripheral device connected to the second modem is a female DTE connection, the NT1R03Dx cable must be used to connect this modem to the peripheral device. If the peripheral device connected to the second modem is a male DTE connection, the NT1R03Ex cable must be used to connect this modem to the peripheral device.

The switch on the back of the modem should be set to the "normal" position.

Figure 5-3 illustrates the hardware configuration required to use the Gandalf LDS 120E modem with an SNN/SNN-E.

**Figure 5-3**  
**Gandalf LDS 120E limited-distance modem hardware configuration (SNN/SNN-E)**

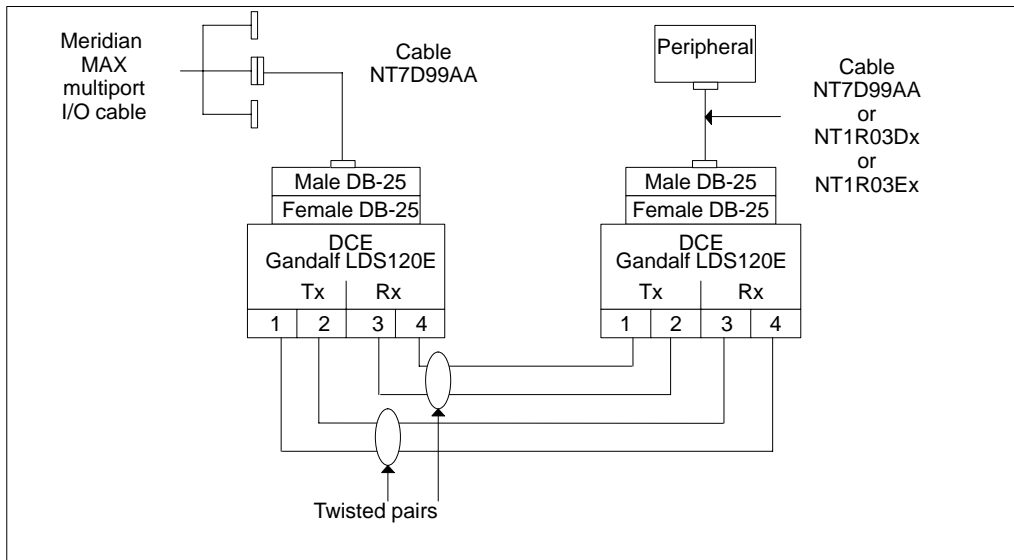


Figure 5-4 illustrates the hardware configuration required to use the Develcon DS 511A modem with an SNN/SNN-E.

**Figure 5-4**  
**Develcon DS 511A limited-distance modem hardware configuration (SNN/SNN-E)**

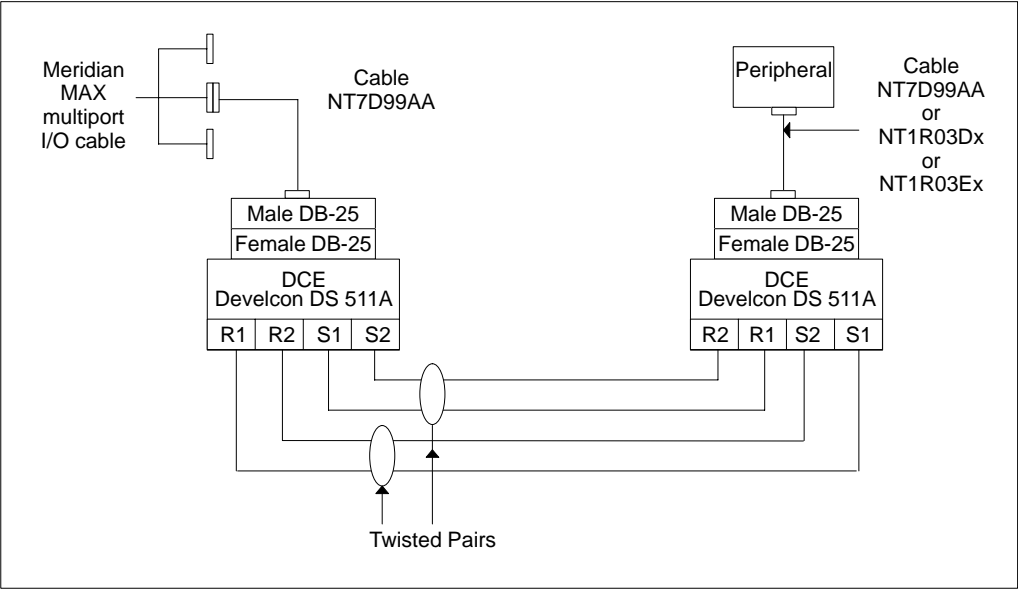


Figure 5-5 illustrates the hardware configuration required to use the Gandalf LDS 120E modem with an IPE/IPE-E system.

**Figure 5-5**  
**Gandalf LDS 120E limited-distance modem hardware configuration (IPE/IPE-E)**


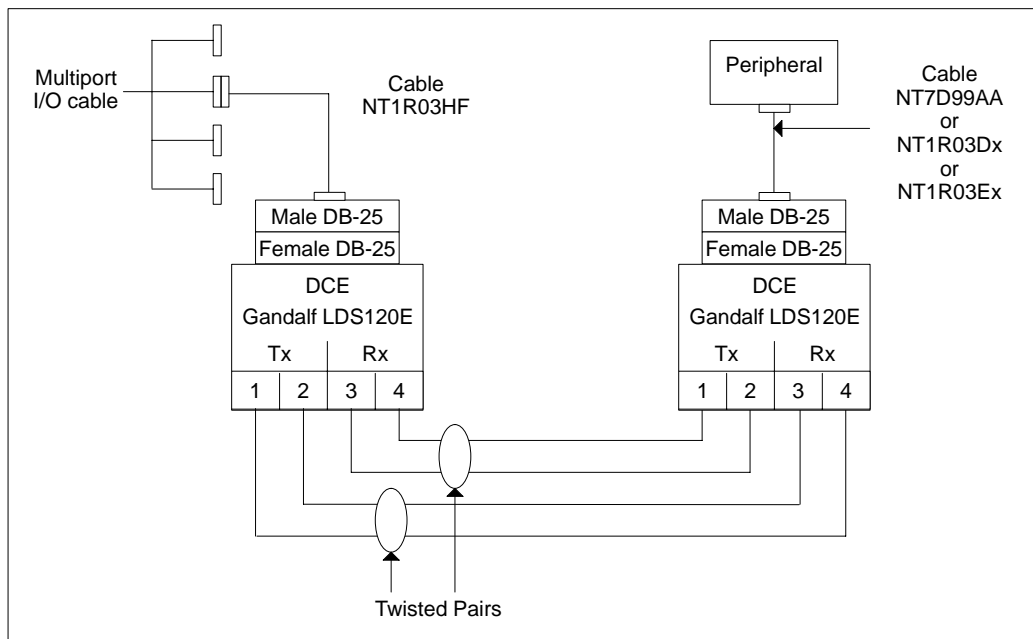


Figure 5-6 illustrates the hardware configuration required to use the Develcon DS 511A modem with an IPE/IPE-E system.

**Figure 5-6**  
**Develcon DS 511A limited-distance modem hardware configuration (IPE/IPE-E)**

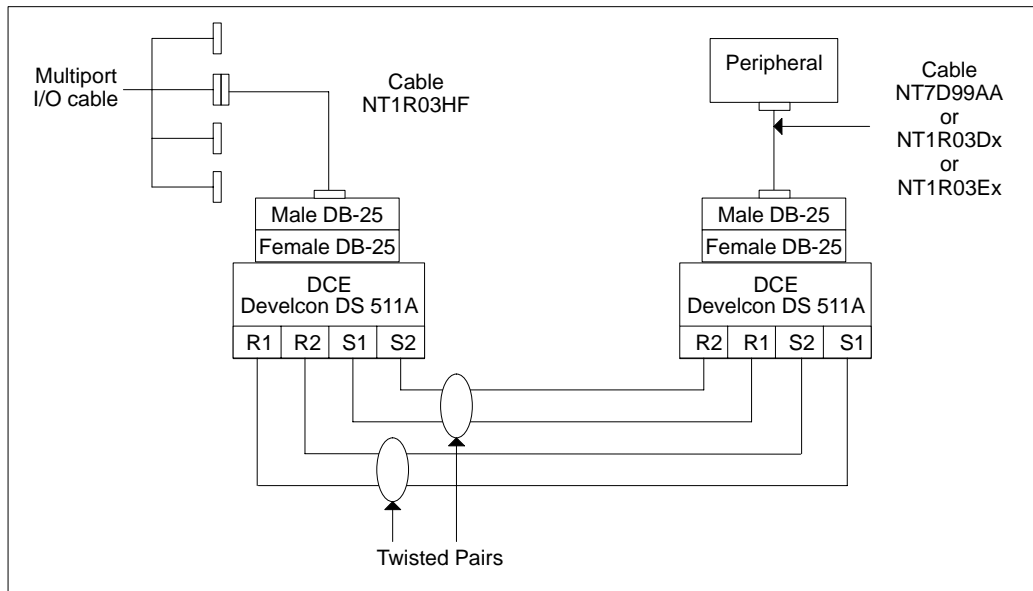

Once the modems are connected, turn on the power and ensure that the DCD lamp on each modem comes on. This lamp indicates that both Gandalf LDS 120E modems are active.

Please note that these instructions may vary depending on the equipment used at your site. Some peripherals connect to male DB-25 connectors, and others connect to female DB-25 connectors. The creation of the straight-through DB-25 cable and the 2-pair twisted cable is the responsibility of the user, and it is the user's responsibility to ensure that the correct connectors are attached.

Connect one end of the modem cable NT7D99AA to the VME multiport cable or one end of modem cable NT1R03HF to the four-port I/O cable port. Connect the other end to the female DB-25 socket on the first Gandalf LDS 120E or Develcon DS 511A modem.

The first Gandalf LDS 120E or Develcon DS 511A modem is connected to the second Gandalf LDS 120E or Develcon DS 511A modem with a 2-pair twisted cable of 24 AWG. This cable cannot exceed eight km (five miles). For the Develcon DS 511A modem, the cover casing must be removed before connecting the 2-pair twisted cable.

Figures 5-3 and 5-4 illustrate the 2-pair twisted cable connections for the two modems with an SNN/SNN-E. Figures 5-5 and 5-6 illustrate the 2-pair twisted cable connections for the two modems with an IPE/IPE-E system.

If the peripheral device is a female DTE connection, the second Gandalf LDS 120E or Develcon DS 511A modem is connected to the peripheral by using a straight-through NT1R03Dx cable. If the peripheral device is a male DTE connection, the second Gandalf LDS 120E or Develcon DS 511A modem is connected to the peripheral by using a straight-through NT1R03Ex cable.

If the peripheral device is DCE, the modem is connected to the peripheral device by the null modem cable NT7D99AA.

If the peripheral device is DTE, the second Gandalf LDS 120E or Develcon DS 511A modem is connected to the peripheral by using a straight-through NT1R03Dx cable.

A male DB-25 connector is attached to the second Gandalf LDS 120E modem or Develcon DS 511A modem's female DB-25 socket, and the appropriate DB-25 connector is attached to the peripheral.

The following settings are necessary for the Gandalf LDS 120E modem to be used:

- Termination: T (330 OHM)
- Internal Jumper Plugs: 4-wire mode, J13-J14 connected and J15-J16 connected
- Front Panel Push-button Switches: ALL OUT - TP - RL - DL - AL

**Table 5-5**  
**LDS 120E external DIP switch settings for point-to-point, full-duplex**

| Switch number | Switch setting |
|---------------|----------------|
| 1             | OPEN (OFF)     |
| 2             | CLOSED (ON)    |
| 3             | CLOSED (ON)    |
| 4             | CLOSED (ON)    |
| 5             | CLOSED (ON)    |
| 6             | NOT USED       |

**Table 5-6**  
**LDS 120E internal DIP switch settings for point-to-point, full-duplex**

| Switch number | Switch setting |
|---------------|----------------|
| 1             | CLOSED (ON)    |
| 2             | CLOSED (ON)    |
| 3             | CLOSED (ON)    |
| 4             | CLOSED (ON)    |
| 5             | CLOSED (ON)    |
| 6             | CLOSED (ON)    |

**Note:** Set the modem I/O port of the Meridian MAX IPE/IPE-E to direct (9600 baud) through the system console.



## Dial-up modems overview

Dial-up modems are used for the following functions:

- Remote diagnostics
- Dial-up supervisor
- Network link
- Remote supervisor login feature specific to the NAC option. For more information, refer to the *Meridian MAX 8 Supervisor's User Guide* (P0853407).

The same brand of dial-up modem must be used for either purpose. Ensure that each modem connected to the network is properly set up for its purpose.

This section recommends modems that have been tested with Meridian MAX when configured for remote diagnostics, supervisor dial-up, and network link, and for the remote supervisor login feature.

**Note:** Dial-up printers are not supported through the dial-up connection.

## Remote diagnostic modems

The remote diagnostic allows Nortel to diagnose your Meridian MAX whenever you experience difficulties. Often the solutions can be sent back through this link directly to your system. Consult your service contract for more details about the remote diagnostic service.

The following modems are supported for remote diagnostics:

- NetComm SmartModem M7F
- Racal VI2422PA
- UDS 2440
- UDS EC224A/D
- U.S. Robotics 28,800 Sportster

For the remote diagnostic modems, the following standards must be met:

- 1200 or 2400 baud rate
- auto-answer capability
- accessible from the public switch telephone network

The cable between the remote terminal and the diagnostic modem is a straight-through DB-25 serial cable NT1R03Dx (male to male) or NT1R03Ex (male to female). The type of cable used depends on the configuration defined by the user.

Figure 5-7 illustrates this connection for a Meridian MAX running on an SNN/SNN-E. Figure 5-8 illustrates this connection for a Meridian MAX running on an IPE/IPE-E.


For an SNN/SNN-E, the cable between the Meridian MAX I/O panel and the remote diagnostic modem is a DB-25 (male) to DB-9 (female) modem cable, NT7D61Ax. This cable is connected to the I/O panel at Card 1, Conn 2.

For an IPE/IPE-E system, the cable between the Meridian MAX multiport cable, NT1R03AA or NT1R03BA, and the remote diagnostic modem is a straight-through DB-25 (male) to DB-25 (male) modem cable, NT1R03HF. This cable is connected to the I/O panel at Port 2.


The modem settings at the Meridian MAX end must be done before connecting the modem to the Meridian MAX. This is accomplished by first connecting the modem to one of the workstations.

Refer to your specific modem setups. Once this is done, disconnect the modem and reconnect it to the Meridian MAX.

**Figure 5-7**  
**Connecting the remote diagnostics workstation with a Meridian MAX remote diagnostic modem (SNN/SNN-E)**

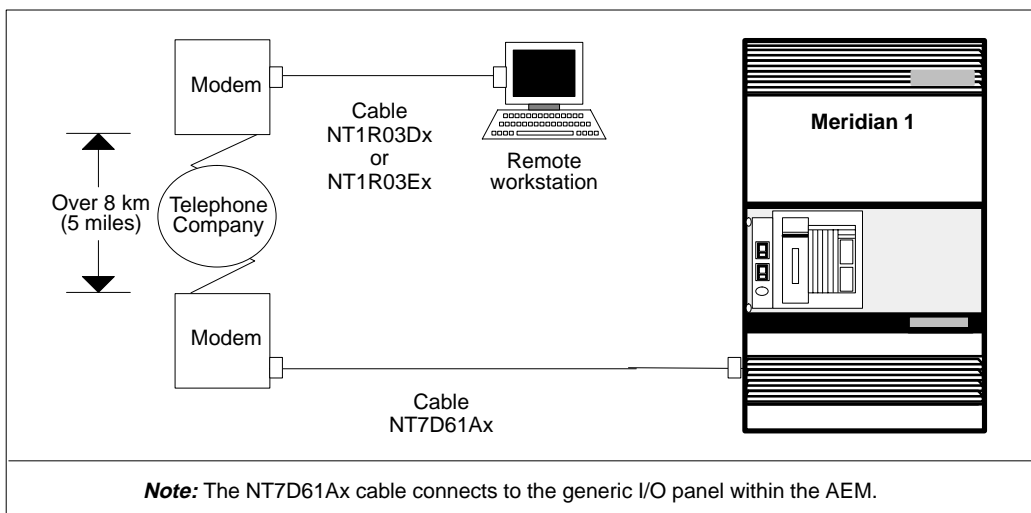

**Figure 5-8**  
**Connecting the remote dial-up workstation with a Meridian MAX remote diagnostic modem (IPE/IPE-E)**

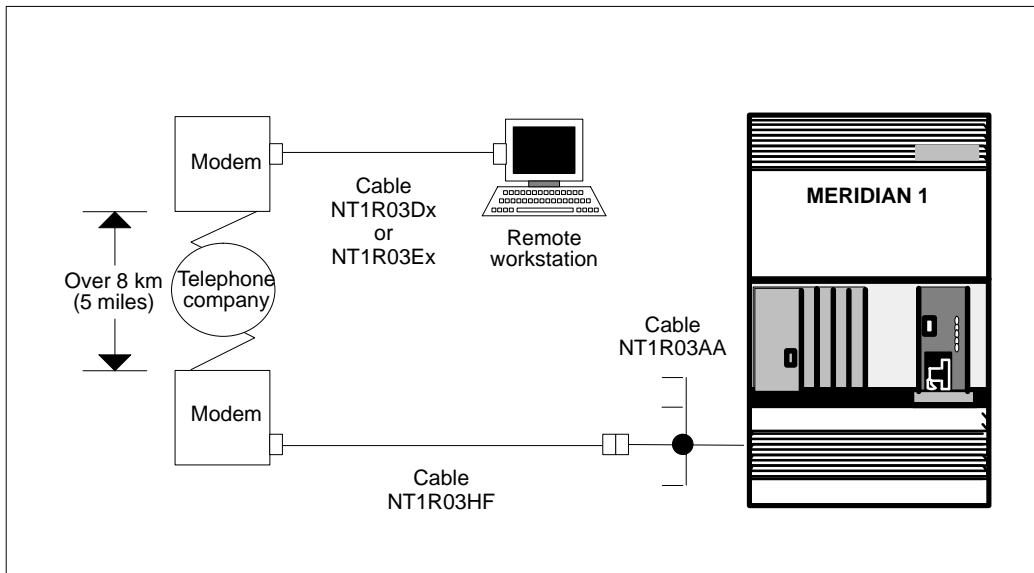


## NetComm SmartModem M7F

Figure 5-7 (SNN/SNN-E) and Figure 5-8 (IPE/IPE-E) illustrate the connection between the Meridian MAX remote diagnostics port and a remote workstation using the NetComm SmartModem M7F.

To properly set up the NetComm modem for remote diagnostics, ensure that the modem's switch settings match those shown in Figure 5-9. The same switch settings should be used at both the remote end and the Meridian MAX end.

**Note:** There are two buttons located on the front panel of the modem: Mode and Talk/Data. For use with the NetComm modem, the Talk/Data button should be pressed.

**Figure 5-9**  
**NetComm SmartModem M7F modem switch settings**

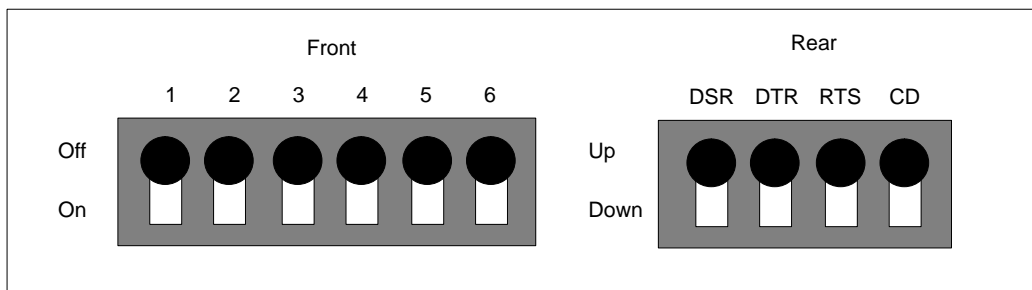

Complete the steps in Procedure 5-1 to configure the NetComm modem for remote diagnostics.

### Procedure 5-1

#### Configuring the NetComm SmartModem M7F for remote diagnostics

- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable. Set the workstation speed to 2400 baud.
- 2 Connect the workstation and the modem to their power sources.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **atz** followed by **{RETURN}**.  
*OK*

- 5 Enter **atz&f** followed by **{RETURN}**.  
*OK*
- 6 Enter **ats0=1** followed by **{RETURN}**.  
*OK*
- 7 Enter **at&d0** followed by **{RETURN}**.  
*OK*
- 8 Enter **at&c1** followed by **{RETURN}**.  
*OK*
- 9 Enter **atln3** followed by **{RETURN}**.  
*OK*
- 10 Enter **atlq3** followed by **{RETURN}**.  
*OK*
- 11 Enter **at&w** followed by **{RETURN}**.  
*OK*
- 12 Power down the workstation and the modem.
- 13 Disconnect the workstation from the modem.
- 14 For an SNN/SNN-E, connect the modem directly to the Meridian MAX I/O panel using an NT7D61Ax modem cable.  
  
For an IPE/IPE-E system, connect the modem to the Meridian MAX multiport cable, NT1R03AA or NT1R03BA, using an NT1R03HF modem cable.  
  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 15 Power up the modem.  
  
If your Meridian MAX is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

## Racal VI2422PA

If you use a Racal VI2422PA modem at one end of the line, you must use the Racal VI2422PA modem at the other end as well. Both modems must be set to the same speed.

Figures 5-7 (SNN/SNN-E) and 5-8 (IPE/IPE-E) illustrate the connection between the Meridian MAX remote diagnostics port and a remote workstation using a Racal VI2422PA modem.

Complete the steps in Procedure 5-2 to configure the Racal modem for remote diagnostics.

For more information on the Racal modem and its operation, refer to the *Racal VI2422PA Modem User's Guide*.

### Procedure 5-2

#### Configuring the Racal VI2422PA modem for remote diagnostics

- 1 Connect a workstation with data format 8N1 and speed 2400 to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 2 Connect the workstation and the modem to their power sources.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **at&f** followed by **{RETURN}**.  
OK
- 5 Enter **atq0** followed by **{RETURN}**.  
OK
- 6 Enter **atv1** followed by **{RETURN}**.  
OK
- 7 Enter **atx1** followed by **{RETURN}**.  
OK
- 8 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 9 Enter **at&c1** followed by **{RETURN}**.  
OK
- 10 Enter **at&d2** followed by **{RETURN}**.  
OK


- 11 Enter **ats2=128** followed by **{RETURN}**.  
*OK*
- 12 Enter **ate0** followed by **{RETURN}**.  
*OK*
- 13 The following command does not appear on the screen when you enter it:  
Enter **at&w** followed by **{RETURN}**.  
*OK*
- 14 Power down the workstation and the modem.
- 15 Disconnect the workstation from the modem.
- 16 For an SNN/SNN-E, connect the modem directly to the Meridian MAX I/O panel using an NT7D61Ax modem cable.  
  
For an IPE/IPE-E system, connect the modem to the Meridian MAX multiport cable, NT1R03AA or NT1R03BA, using an NT1R03HF modem cable.  
  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 17 Power up the modem.
- 18 Through the use of the Racal modem's front panel, choose option 1 and set the value to **1**. Choose option 13 and set the value to **2**.



## UDS 2440

Figure 5-10 shows the front and rear view of the UDS 2440 modem. This modem connects to the SNN/SNN-E's multiport cable using an NT7D99AA cable and the IPE/IPE-E's four-port I/O cable using the NT1R03HF cable.

**Figure 5-10**  
**UDS 2440 modem—front and rear view**

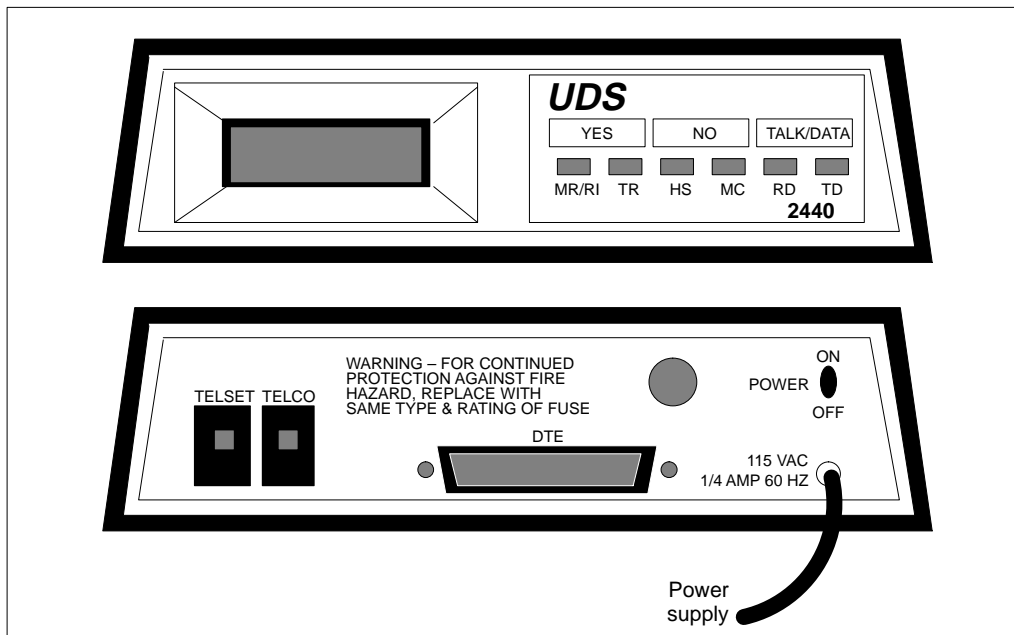

The UDS 2440 modem does not contain any internal switch settings. The configuration is done through the front panel buttons on the modem.

To configure the UDS 2440 modem for remote diagnostics using the modem's front panel buttons, perform Procedure 5-3.

**Procedure 5-3****Configuring the UDS 2440 modem through the front panel for remote diagnostics**

- 1 Connect the modem to a power source next to the Meridian MAX system. Ensure that the modem is not connected to the Meridian MAX system at this point.

- 2 Position the power switch on the rear panel of the modem to ON.

Press either the YES or NO button on the front of the modem panel for each response appearing in the LCD window.

If the wrong button is pressed, press the {**TALK/DATA**} button followed by the NO button. This action returns you to Step 2.

The LCD on the front panel displays the following:

####-## (For example, 3050-5C, appears for two seconds.)

OFFLINE

- 3 Press **NO**.

DIAL?

- 4 Press **NO**.

TEST?

- 5 Press **NO**.

AUTO ANS?

- 6 Press **NO**.

DATA OPTS?

- 7 Press **NO**.

OPTIONS?

- 8 Press **YES**.

RESET?

- 9 Press **YES**.

LOADING (appears for one second)

RESET?

- 10 Press **NO**.

FACTORY?

- 11 Press **YES**.

FACTORY 0?

- 12 Press **YES**.  
LOADING (appears for one second)  
FACTORY?
- 13 Press **NO**.  
SPKR OPTS?
- 14 Press **NO**.  
TELE OPTS?
- 15 Press **NO**.  
PIN OPTS?
- 16 Press **NO**.  
MSG OPTS?
- 17 Press **NO**.  
SECURITY OPTS?
- 18 Press **NO**.  
DISC OPTS?
- 19 Press **NO**.  
SREGS OPTS?
- 20 Press **NO**.  
OPTIONS?
- 21 Press **NO**.  
PROTOCOL?
- 22 Press **NO**.  
If SAVE? appears go to Step 23, if not go to Step 24.
- 23 Press **YES**.  
SAVING (appears for two seconds)
- 24 OFFLINE
- 25 Press **NO**.  
DIAL?
- 26 Press **NO**.  
TEST?

- 27** Press **NO**.  
AUTO ANS?
- 28** Press **YES**.  
AUTO ANS E
- 29** Press **YES**.  
RINGS?
- 30** Press **YES**.  
RING = 001
- 31** Press **YES**.  
AUTO ANS?
- 32** Press **NO**.  
DATA OPTS?
- 33** Press **NO**.  
OPTIONS?
- 34** Press **YES**.  
RESET?
- 35** Press **NO**.  
FACTORY?
- 36** Press **NO**.  
SPKR OPTS?
- 37** Press **NO**.  
TELE OPTS?
- 38** Press **NO**.  
PIN OPTS?
- 39** Press **YES**.  
DTR OPTS?
- 40** Press **YES**.  
DTR OPTS 0
- 41** Press **NO**.  
dtr opt 1
- 42** Press **NO**.

- dtr opt 2
- 43** Press **NO**.
- dtr opt 3
- 44** Press **YES**.
- DTR OPTS?
- 45** Press **NO**.
- DSR OPTS?
- 46** Press **YES**.
- DSR FORCED
- 47** Press **NO**.
- DSR normal
- 48** Press **YES**.
- DSR OPTS?
- 49** Press **NO**.
- CD OPTS?
- 50** Press **YES**.
- CD FORCED
- 51** Press **NO**.
- lo at disc
- 52** Press **NO**.
- cd normal
- 53** Press **YES**.
- CD OPTS?
- 54** Press **NO**.
- CTS OPTS?
- 55** Press **NO**.
- P 21 OPTS
- 56** Press **NO**.
- P 23 OPTS
- 57** Press **NO**.
- P 25 OPTS

- 58** Press **NO**.  
PIN OPTS?
- 59** Press **NO**.  
MSG OPTS
- 60** Press **NO**.  
SECURITY?
- 61** Press **NO**.  
DISC OPTS?
- 62** Press **NO**.  
SREGS?
- 63** Press **NO**.  
OPTIONS?
- 64** Press **NO**.  
PROTOCOL?
- 65** Press **NO**.  
SAVE?
- 66** Press **YES**.  
SAVING (appears for two seconds)  
OFFLINE
- 67** Connect the modem directly to the Meridian MAX I/O panel using an NT7D61Ax modem cable. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.  
  
If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

If you have a workstation, you can use an alternative method to set up the UDS 2440 modem. To properly configure the modem, perform the steps in Procedure 5-4.

**Procedure 5-4**

**Alternative procedure for configuring the UDS 2440 modem through a workstation for remote diagnostics**

- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 2 Connect the workstation and the modem to their power sources.
- 3 Power up the workstation and the modem.
- 4 Set the workstation baud rate to 2400. Refer to the "Workstation" section, "Video display terminal (VDT) workstation" subsection, for more information.  
Enter the following commands on the workstation keyboard.
- 5 Enter **atz** followed by **{RETURN}**.  
OK
- 6 Enter **at&f** followed by **{RETURN}**.  
OK
- 7 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 8 Enter **at&d3** followed by **{RETURN}**.  
OK
- 9 Enter **at&s1** followed by **{RETURN}**.  
OK
- 10 Enter **at&c1** followed by **{RETURN}**.  
OK
- 11 Enter **at&w** followed by **{RETURN}**.  
OK
- 12 Power down the workstation and the modem.
- 13 Disconnect the workstation from the modem.

- 14** For an SNN/SNN-E, connect the modem directly to the Meridian MAX I/O panel using an NT7D61Ax modem cable.

For an IPE/IPE-E system, connect the modem to the Meridian MAX multiport cable, NT1R03AA or NT1R03BA, using an NT1R03HF modem cable.

Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.

- 15** Power up the modem.


If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Meridian MAX representative.



### UDS EC224A/D 2400


Figure 5-11 shows the front and rear view of the UDS EC224A/D 2400 modem. The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the UDS EC224A/D 2400 modem is the modem cable NT7D61Ax. The cable connecting the Meridian MAX IPE/IPE-E's four-port I/O cable and the UDS EC224A/D 2400 modem is the modem cable NT1R03HF.

**Figure 5-11**  
UDS EC224A/D 2400 modem—front and rear view

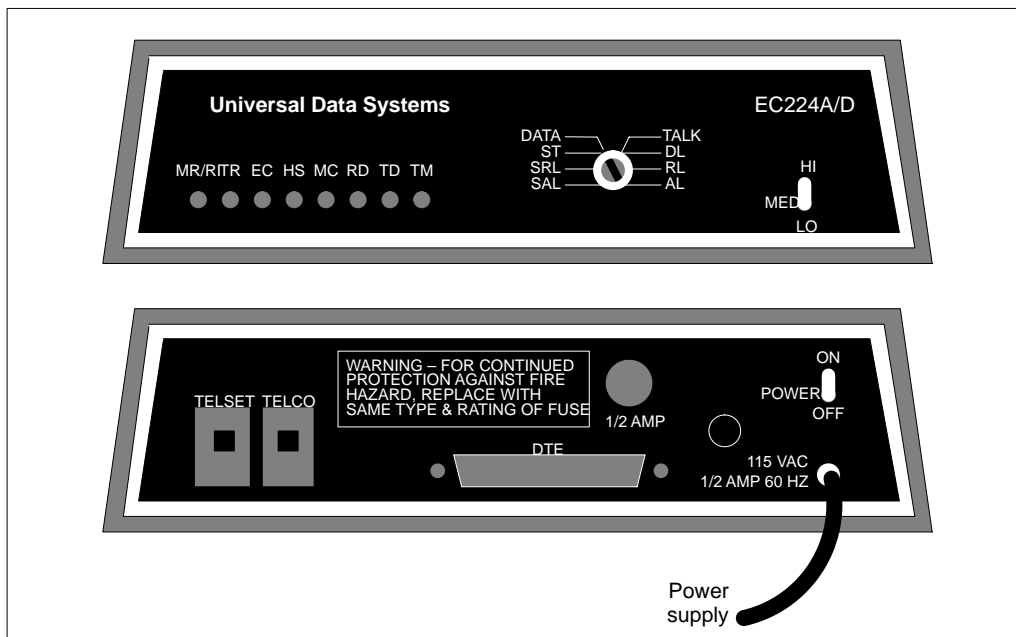

Remove the modem's cover and position the modem so that the front faceplate is facing you. In the front left corner of the modem are three switches. Make sure the switch settings match those shown in Figure 5-12.


**Figure 5-12**  
**UDS EC224A/D 2400 remote diagnostics modem switch settings**

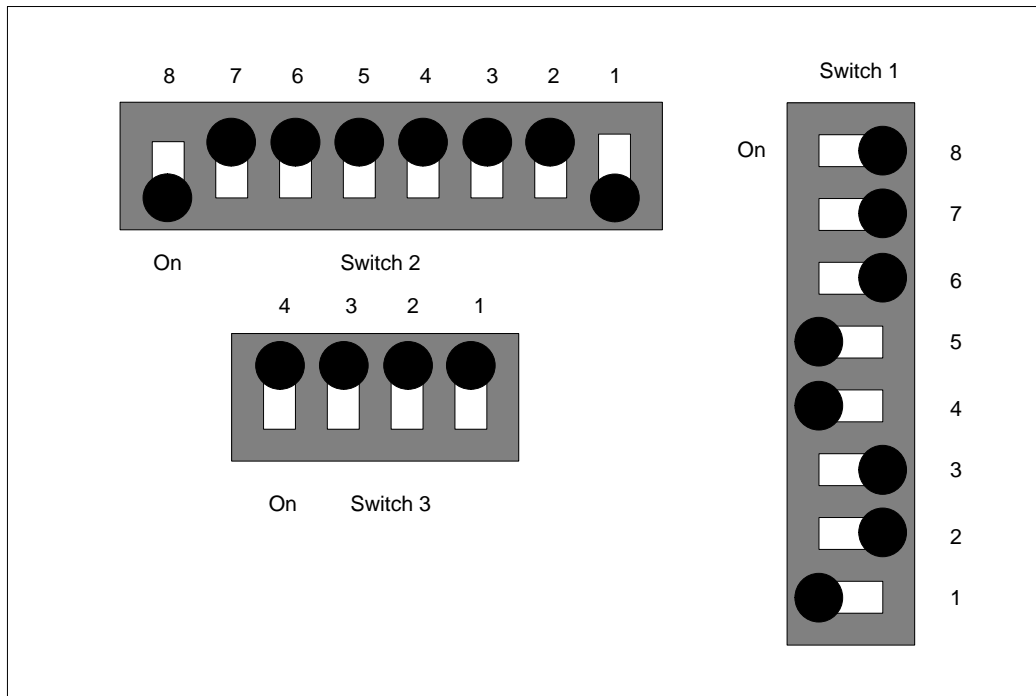

### U.S. Robotics 28.8 Sportster modem

The U.S. Robotics Sportster 28.8 modem has DIP switches on the rear panel (see Figure 5-13). These can be set using the configuration instructions in Procedure 5-5. The down position indicates On. The switches are numbered 1 to 8.

**Figure 5-13**  
Rear view of the U.S. Robotics 28.8 Sportster modem

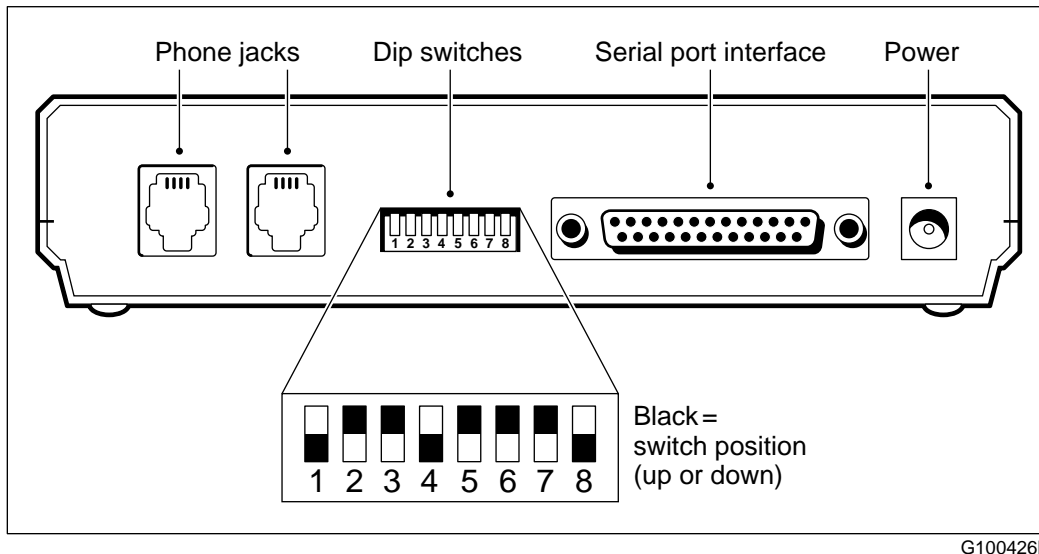


The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the U.S. Robotics modem is the modem cable NT7D99AA. The cable connecting the Meridian MAX IPE/IPE's four-port I/O cable and the U.S. Robotics modem is the modem cable NT1R03HF.


Refer to Procedure 5-5 to configure the U.S. Robotics 28.8 Sportster modem for use as a remote dial-up supervisor. It also applies to configuring the remote end.

**Procedure 5-5****Configuring the U.S. Robotics 28.8 Sportster modem's remote end for a remote dial-up supervisor**

- 1 Open the modem and ensure that the switch settings are correct. Compare them with the correct settings in Figure 5-14.
- 2 Set the workstation speed to 9600 baud.

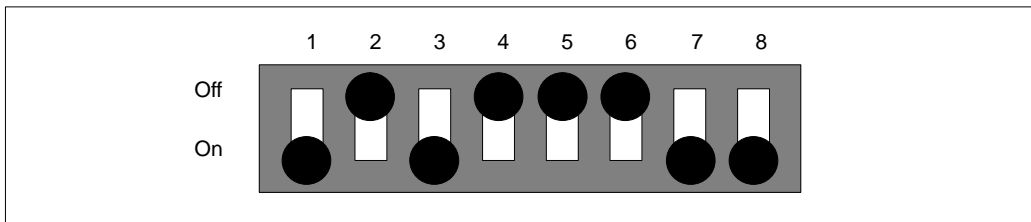**Figure 5-14****U.S. Robotics 28.8 Sportster modem switch settings for programming mode**

- 3 Connect a workstation to the modem with a straight-through cable (NT1R03Dx or NT1R03Ex).
- 4 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 5 Power up the workstation and the modem.
- 6 On the workstation keyboard, enter **AT&B1&W&W1** followed by **{RETURN}**.  
*The system responds with OK.*
- 7 Power off the modem.
- 8 Configure the modem's switch settings as shown in Figure 5-15.

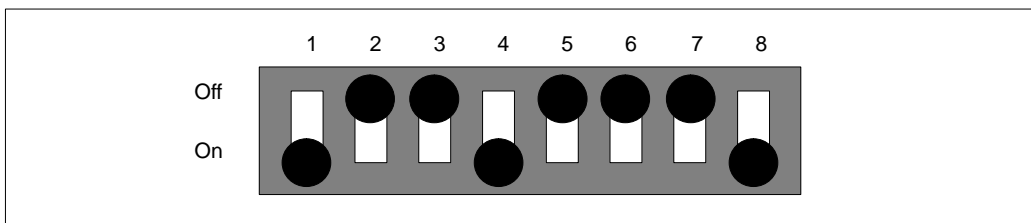**Figure 5-15****U.S. Robotics Sportster 28.8 modem switch settings for operating mode**

- 9** If you are configuring the remote end, use the Hayes AT command “atdt####” for touch-tone dialing, and “atdp####” for pulse dialing, to dial the required number.  
(where #### is the telephone number of the Meridian MAX modem)

## Dial-up supervisor modems

The following modems are supported modems for dial-up supervisor:

- NetComm SmartModem M7F
- Racal VI2422PA
- UDS 2440
- UDS EC224A/D
- Ven-Tel 9600 Plus
- Ven-Tel 2400 Plus II


The cable between the supervisor workstation and the modem is a straight-through DB-25 serial cable NT1R03Dx (male to male) or NT1R03Ex (male to female) cable. However, this depends on the configuration defined by the user. The cable between a PC running Reflection software or the Meridian Terminal Emulator (MTE) and the modem is a DB-25 to DB-9 serial cable (male to female) A0268901.

The cable between the Meridian MAX SNN/SNN-E and the dial-up supervisor modem is a modem cable NT7D99AA. Figure 5-16 illustrates this connection.


The cable between the Meridian MAX IPE/IPE-E and the dial-up supervisor modem is a modem cable NT1R03HF. Figure 5-17 illustrates this connection.

The settings for modems are found in Table 5-3. Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end. Before dialing, at the remote location, the user must configure the modem as shown in Table 5-3.

**Figure 5-16**  
**Connecting the remote dial-up workstation with a Meridian MAX dial-up supervisor**  
**modem (SNN/SNN-E)**

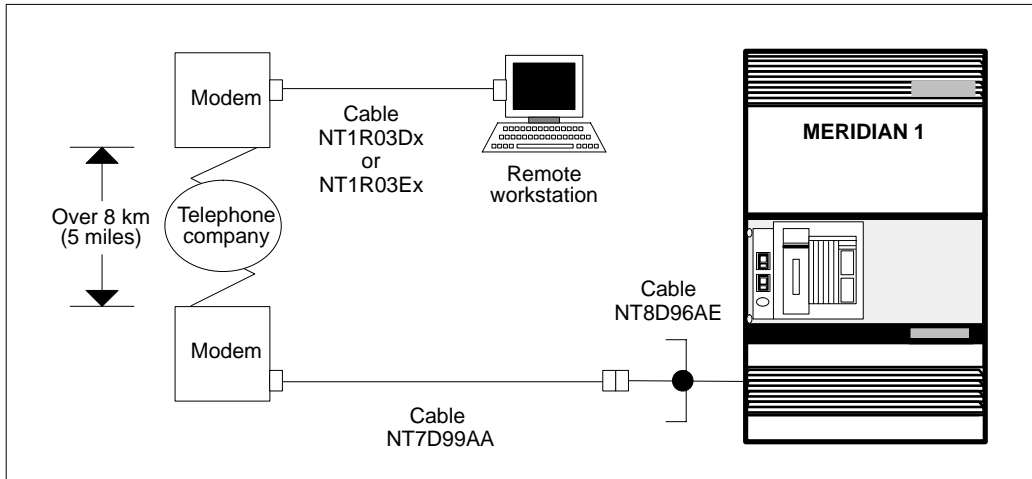

**Figure 5-17**  
**Connecting the remote dial-up workstation with a Meridian MAX dial-up supervisor**  
**modem (IPE/IPE-E)**

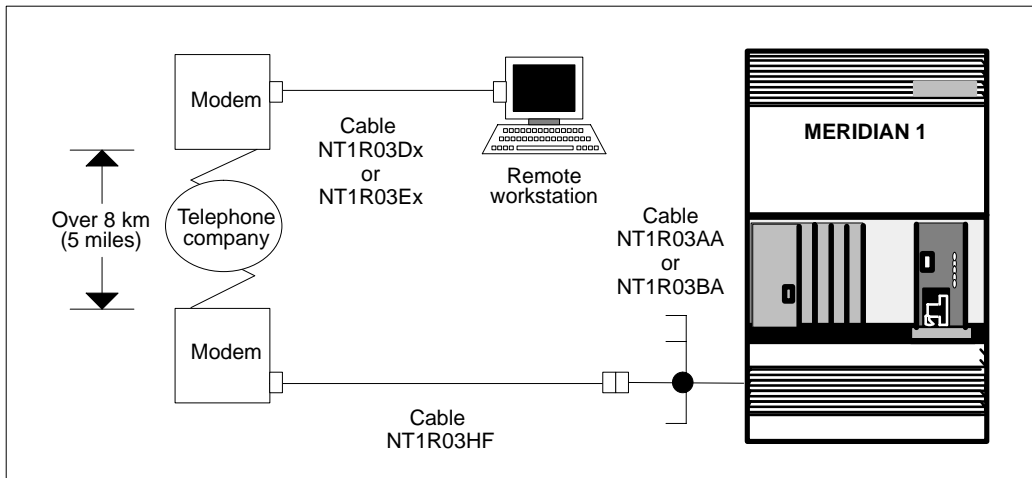

## NetComm SmartModem M7F

Figures 5-16 (SNN/SNN-E) and 5-17 (IPE/IPE-E) illustrate the connection between the Meridian MAX dial-up supervisor port and a remote workstation using the NetComm SmartModem M7F.

To properly set up the NetComm modem for dial-up supervisor, ensure that the modem's switch settings match those shown in Figure 5-18. The same switch settings should be used at both the remote end and the Meridian MAX end.


Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end.

The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the NetComm SmartModem M7F is the modem cable NT7D99AA.

The cable connecting the Meridian MAX IPE/IPE-E's VME multiport cable and the NetComm SmartModem M7F is the modem cable NT1R03HF.

**Note:** There are two buttons located on the front panel of the modem: Mode and Talk/Data. For use with the NetComm modem, the Talk/Data button should be pressed.

**Figure 5-18**  
**NetComm SmartModem M7F modem switch settings**

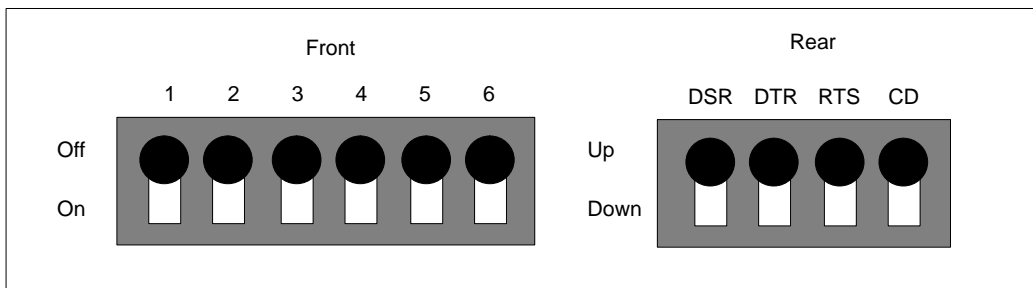



Complete the steps in Procedure 5-6 to configure the NetComm modem for remote diagnostics.

**Procedure 5-6**  
**Configuring the NetComm SmartModem M7F for dial-up supervisor—remote end**

- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 2 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **atz** followed by **{RETURN}**.  
OK
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 7 Enter **at&d0** followed by **{RETURN}**.  
OK
- 8 Enter **at&c1** followed by **{RETURN}**.  
OK
- 9 Enter **atln3** followed by **{RETURN}**.  
OK
- 10 Enter **atlq3** followed by **{RETURN}**.  
OK
- 11 Enter **at&w** followed by **{RETURN}**.  
OK
- 12 Use the Hayes AT command “atdt####” for touch-tone dialing, and “atdp####” for pulse dialing, to dial the required number.  
(where #### is the telephone number of the NAC modem)

## Racal VI2422PA

Figure 5-16 illustrates the connection between the Meridian MAX port configured for dial-up supervisor and a remote dial-up workstation using a Racal VI2422PA modem.

Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end. The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the Racal VI2422PA modem is the modem cable NT7D99AA. The cable connecting the Meridian MAX IPE/IPE-E's four-port I/O cable and the Racal VI2422PA modem is the modem cable NT1R03HF.

The Racal modem can be used for the dial-up supervisor, for the remote supervisor login, and as the modem for the network link. Regardless of the way it is used, the modem's set-up is identical:

- Connect the Racal modem to its power source.
- Connect the Racal modem to the Meridian MAX through the use of the NT9D9007 cable.
- Connect the Racal modem's RJ-45 TELCO socket to the telephone socket using the cable provided by Racal.
- Record the port that is assigned to the Racal mode.
- Power up the RACAL modem.
- Set Option 1 to "1".
- Set Option 13 to "2".

If you use a Racal modem at one end of the line, you must use the Racal modem at the other end as well. For example, a single network link could have a Racal modem at the NAC site and a Racal modem at the nodal Meridian MAX site. Both modems must be set to the same speed.

For more information on the Racal modem and its operation, refer to the *Racal VI2422PA Modem User's Guide*.

Complete the steps in Procedure 5-7 to configure the Racal VI2422PA modem at the remote location for dial-up supervisor.

**Procedure 5-7**

**Configuring the Racal VI2422PA dial-up supervisor modem—remote end**

- 1 Connect a workstation with data format 8N1 and speed 2400 to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 2 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **at&f** followed by **{RETURN}**.  
OK
- 5 Enter **at\*f0** followed by **{RETURN}**.  
OK
- 6 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 7 Enter **atq1** followed by **{RETURN}**.  
OK
- 8 Enter **ate0** followed by **{RETURN}**.  
OK
- 9 The following command will not appear on the screen when you enter it:  
Enter **at&w** followed by **{RETURN}**.  
OK
- 10 Through the use of the Racal modem's front panel, choose option 1 and set the value to 1. Choose option 13 and set the value to 2.
- 11 Use the Hayes AT command "atdt####" for touch-tone dialing, and "atdp####" for pulse dialing, to dial the required number.  
(where #### is the telephone number of the Meridian MAX modem)

## UDS 2440

Figure 5-10 shows the front and rear view of the UDS 2440 dial-up supervisor modem.

The UDS 2440 modem does not contain any internal switch settings. Complete Procedure 5-8 to configure the UDS 2440 modem for dial-up supervisor.

Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end.

The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the UDS 2440 modem is the modem cable NT7D99AA.

The cable connecting the Meridian MAX IPE/IPE-E's VME multiport cable and the UDS 2440 modem is the modem cable NT1R03HF.

### Procedure 5-8

#### Configuring the UDS 2440 modem for dial-up supervisor—remote end

- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable. Set the workstation speed to 2400 baud.
- 2 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 3 Power up the workstation and the modem.
- 4 Enter the following commands on the workstation keyboard, pressing **{ENTER}** after each command.
- 5 Enter **atz** followed by **{RETURN}**.  
OK
- 6 Enter **at&f** followed by **{RETURN}**.  
OK
- 7 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 8 Enter **at&d3** followed by **{RETURN}**.  
OK
- 9 Enter **at&s1** followed by **{RETURN}**.  
OK


- 10 Enter **at&c1** followed by **{RETURN}**.  
OK
- 11 Enter **at&w** followed by **{RETURN}**.  
OK
- 12 Use the Hayes AT command “atdt####” for touch-tone dialing, and  
“atdp####” for pulse dialing, to dial the required number.  
(where #### is the telephone number of the NAC modem)

## UDS EC224A/D 2400

Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end. The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the UDS EC224A/D 2400 modem is the modem cable NT7D99AA. The cable connecting the Meridian MAX IPE/IPE-E's four-port I/O cable and the UDS EC224A/D 2400 modem is the modem cable NT1R03HF.


Figure 5-19 shows the remote dial-up supervisor workstation modem's front and rear view.

**Figure 5-19**  
UDS EC224A/D 2400 modem—front and rear view

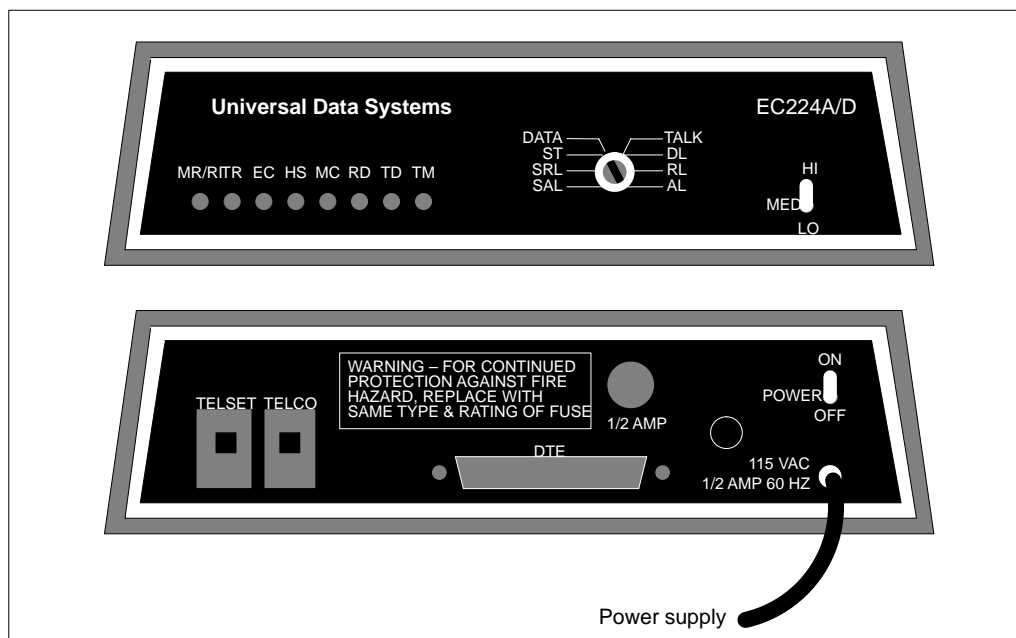

Remove the modem's cover and position the modem so that the front faceplate is facing you. In the front left corner of the modem are three switches. Make sure the switch settings match those shown in Figure 5-20.

**Figure 5-20**  
**UDS EC224A/D 2400 remote dial-up supervisor modem switch settings**

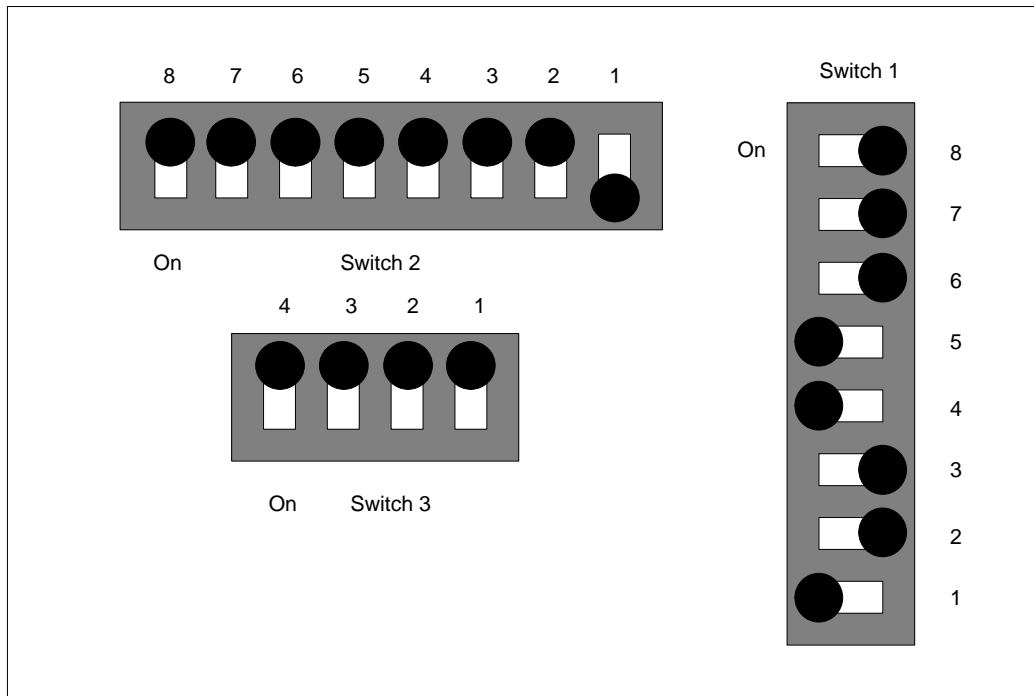

Complete the steps in Procedure 5-9 to configure the UDS EC224A/D 2400 modem at the remote location for dial-up supervisor.

**Procedure 5-9**  
**Configuring the UDS EC224A/D 2400 dial-up supervisor**  
**modem—remote end**

- 1 Open the modem and ensure that the switch settings are correct. Compare them with the correct settings in Figure 5-20.
- 2 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 3 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 4 Power up the workstation and the modem.
- 5 Set the front panel toggle switch to HI.


- 6 Set the front panel rotary switch to DATA.
- 7 Enter the following commands on the workstation keyboard.
- 8 Enter **at&f** followed by **{RETURN}**.  
OK
- 9 Enter **ats2=128** followed by **{RETURN}**.  
OK
- 10 Enter **at&c1** followed by **{RETURN}**.  
OK
- 11 Enter **at&d2** followed by **{RETURN}**.  
OK
- 12 Enter **atv1** followed by **{RETURN}**.  
OK
- 13 Enter **atx1** followed by **{RETURN}**.  
OK
- 14 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 15 Enter **atq0** followed by **{RETURN}**.  
OK
- 16 Enter **ate0** followed by **{RETURN}**.  
OK  
The following command will not appear on the screen when you enter it:
- 17 Enter **at&w** followed by **{RETURN}**.  
OK
- 18 Use the Hayes AT command "atdt#####" for touch-tone dialing, and "atdp#####" for pulse dialing, to dial the required number.  
(where ##### is the telephone number of the Meridian MAX modem)




**Ven-Tel 2400 Plus II**

Figure 5-21 and Figure 5-22 show the front and rear view of the Ven-Tel 2400 Plus II modem. Figure 5-23 shows how to open the modem. Figure 5-24 shows the switch locations.


**Figure 5-21**  
**Ven-Tel 2400 Plus II modem—front view**

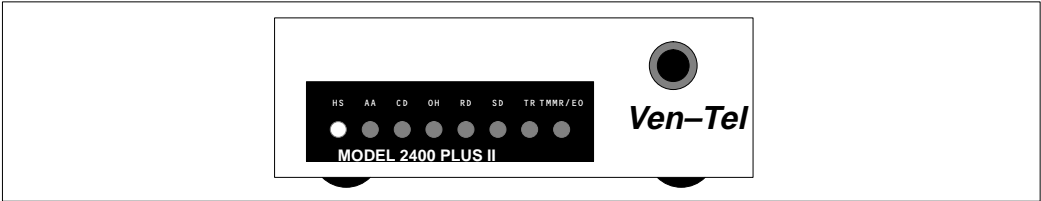


**Figure 5-22**  
**Ven-Tel 2400 Plus II modem—rear view**

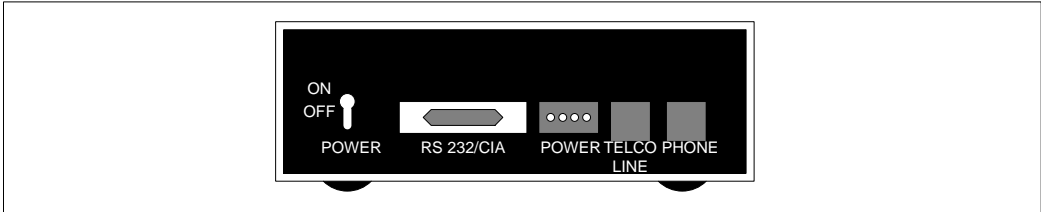

**Figure 5-23**  
**Ven-Tel 2400 Plus II modem—opening the modem**

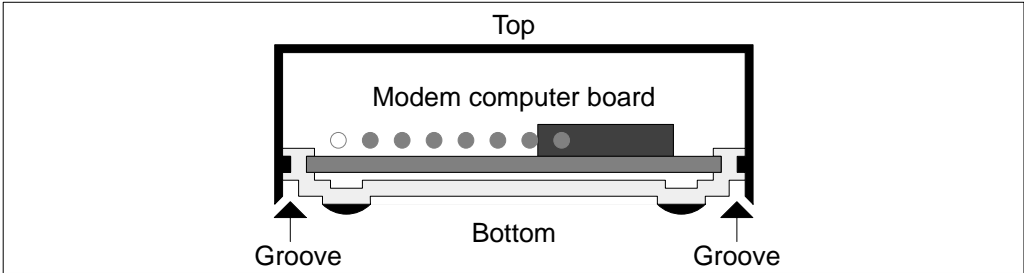


**Figure 5-24**  
**Ven-Tel 2400 Plus II modem—switch locations**

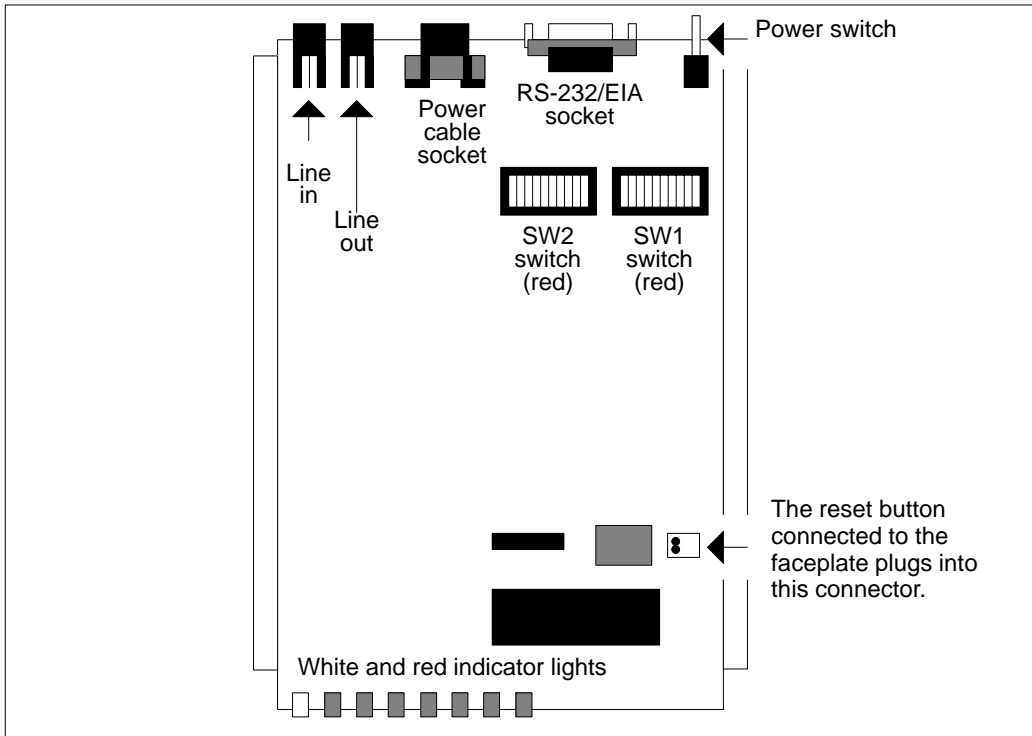

Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end. The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the Ven-Tel 2400 Plus II modem is the modem cable NT7D99AA. The cable connecting the Meridian MAX IPE/IPE-E's four-port I/O cable and the Ven-Tel 2400 Plus II modem is the modem cable NT1R03HF.

To properly set up the Ven-Tel 2400 Plus II modem for use as a dial-up supervisor modem, refer to Figure 5-25 and ensure that the modem's switch settings are correct. The same switch settings should be used at both the remote end and the MAX end.

**Figure 5-25**  
**Ven-Tel 2400 Plus II remote dial-up supervisor modem switch settings**

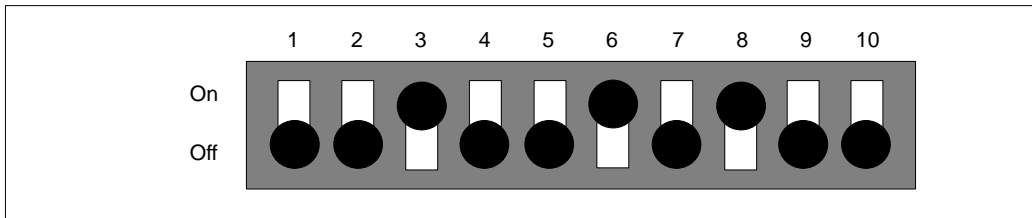

Complete the steps in Procedure 5-10 to configure the Ven-Tel 2400 Plus II modem for dial-up supervisor.

**Procedure 5-10**  
**Configuring the Ven-Tel 2400 Plus II dial-up supervisor**  
**modem—remote end**

- 1 Open the modem as in Figure 5-23, and ensure that the switch settings are correct. Figure 5-24 shows the switch locations on the modem. Compare them with the correct settings in Figure 5-25.
- 2 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 3 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 4 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **ats2=128** followed by **{RETURN}**.  
OK
- 7 Enter **at&c1** followed by **{RETURN}**.  
OK
- 8 Enter **at&d2** followed by **{RETURN}**.  
OK
- 9 Enter **atv1** followed by **{RETURN}**.  
OK

- 10** Enter **atx1** followed by **{RETURN}**.

OK

- 11** Enter **ats0=1** followed by **{RETURN}**.

OK

- 12** Enter **atq0** followed by **{RETURN}**.

OK

- 13** Enter **ate0** followed by **{RETURN}**.

OK

The following command will not appear on the screen when you enter it:

- 14** Enter **at&w** followed by **{RETURN}**.

OK


- 15** Use the Hayes AT command "atdt####" for touch-tone dialing, and "atdp####" for pulse dialing, to dial the required number.

(where #### is the telephone number of the Meridian MAX modem)


### **Ven-Tel 9600 Plus (with power pack model # L5730-01)**

Figure 5-26 shows the front view of the Ven-Tel 9600 Plus modem and Figure 5-27 shows the rear view. Figure 5-28 shows how to open the modem. Figure 5-29 shows the switch locations.


**Figure 5-26**  
**Ven-Tel 9600 Plus modem—front view**

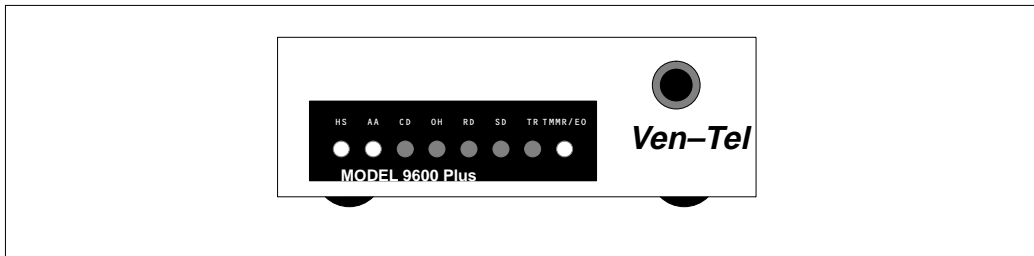


**Figure 5-27**  
**Ven-Tel 9600 Plus modem—rear view**

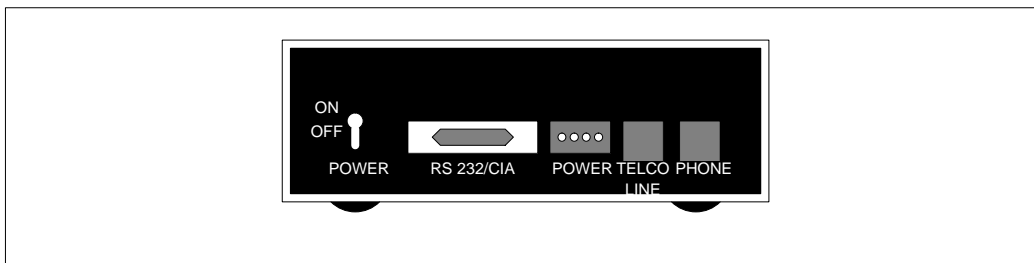


**Figure 5-28**  
**Ven-Tel 9600 Plus modem—opening the modem**

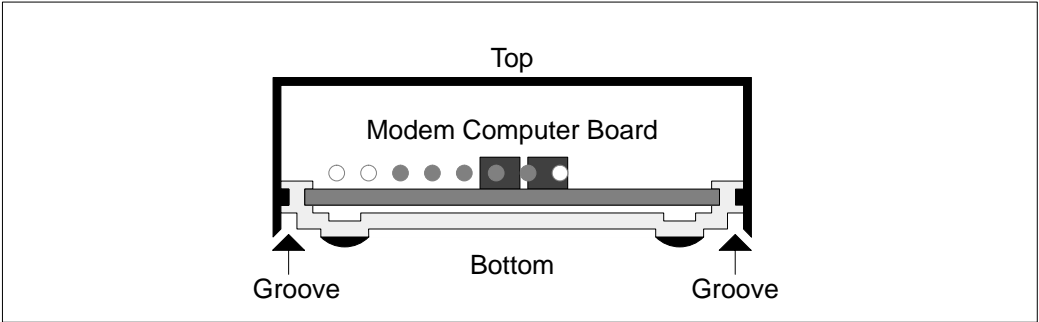

**Figure 5-29**  
**Ven-Tel 9600 Plus modem—switch locations and settings**

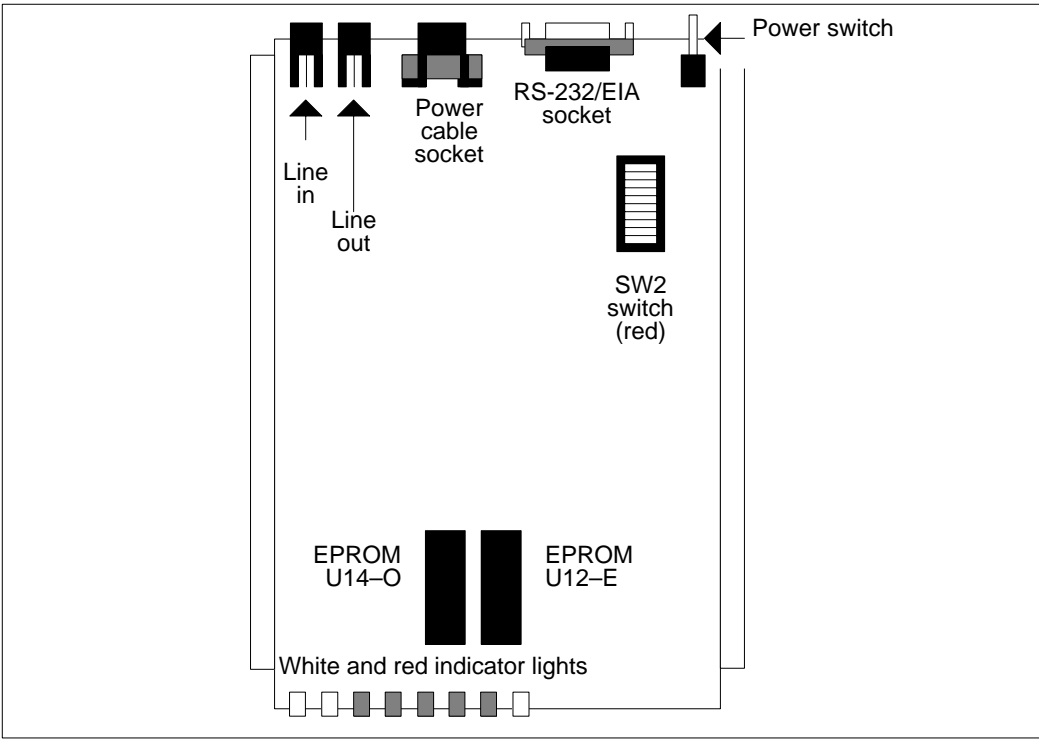

**Figure 5-30**  
**Ven-Tel 9600 Plus remote dial-up supervisor, remote supervisor login, and network link**  
**modem switch settings**

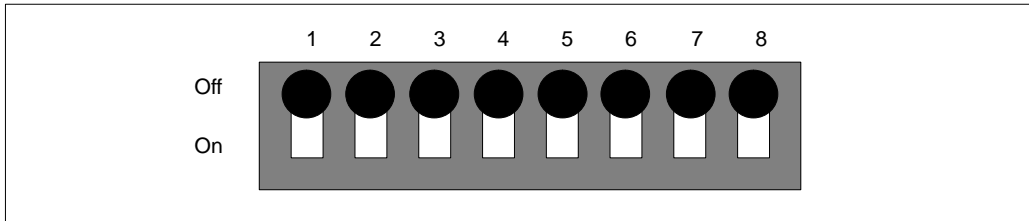

Meridian MAX automatically configures remote supervisor modems connected at the Meridian MAX end. The cable connecting the Meridian MAX SNN/SNN-E's VME multiport cable and the Ven-Tel 9600 Plus modem is the modem cable NT7D99AA. The cable connecting the Meridian MAX IPE/IPE-E's four-port I/O cable and the Ven-Tel 9600 Plus modem is the modem cable NT1R03HF.

To properly set up the Ven-Tel 9600 Plus modem for use as a dial-up supervisor modem, refer to Figure 5-30 and ensure that the modem's switch settings are correct. The same switch settings should be used at both the remote end and the MAX end.

Make sure power pack model number L5730-01 is used.

Complete the steps in Procedure 5-11 to configure the Ven-Tel 9600 Plus modem for dial-up supervisor.

**Procedure 5-11**  
**Configuring the Ven-Tel 9600 Plus dial-up supervisor modem—remote end**

- 1 Open the modem and ensure that the switch settings are correct. Compare them with the correct settings in Figure 5-30. Set the workstation speed to 9600 baud.
- 2 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable.
- 3 Connect the workstation and the modem to their power sources. Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.

- 4 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **ats2=128** followed by **{RETURN}**.  
OK
- 7 Enter **at&c1** followed by **{RETURN}**.  
OK
- 8 Enter **at&d2** followed by **{RETURN}**.  
OK
- 9 Enter **atv1** followed by **{RETURN}**.  
OK
- 10 Enter **atx1** followed by **{RETURN}**.  
OK
- 11 Enter **ats0=1** followed by **{RETURN}**.  
OK
- 12 Enter **atq0** followed by **{RETURN}**.  
OK
- 13 Enter **ate0** followed by **{RETURN}**.  
OK  
The following command will not appear on the screen when you enter it:
- 14 Enter **at&w** followed by **{RETURN}**.  
OK
- 15 Use the Hayes AT command "atdt####" for touch-tone dialing, and "atdp####" for pulse dialing, to dial the required number.  
(where #### is the telephone number of the Meridian MAX modem)



## NAC connectivity

Network Administration Center (NAC) is a computerized system which allows organizations with multiple sites (known as “nodes”) to monitor and supervise all sites from one central location. Using NAC connectivity, each Meridian MAX system can become a node on the NAC system.

NAC currently functions on two hardware platforms. NAC 2 functions on the Application Module (AM) platform while NAC 1 functions on the HP Vectra platform.

NAC 2 and NAC 1 both support full Meridian MAX 8 functionality. The exception is that NAC 2 reports contain the Enhanced Day/Night Call Abandoned data.

Figure 5-31 shows a simplified overview of the network connectivity between a NAC 2 system and its various MAX nodes using modems.

Figure 5-32 shows a simplified overview of the network connectivity between a NAC 1 system and its various MAX nodes using modems.

NAC connectivity supports the following functions:


- Remote supervisor login
- Network link

Both remote supervisor login and network link require a separate modem connection. Your site’s layout may be different.


Your NAC system can connect to Meridian MAX in four ways:

- Limited distance
- Dial-up
- T1 connection
- Direct connection

**Figure 5-31**  
**NAC 2 network connectivity overview**

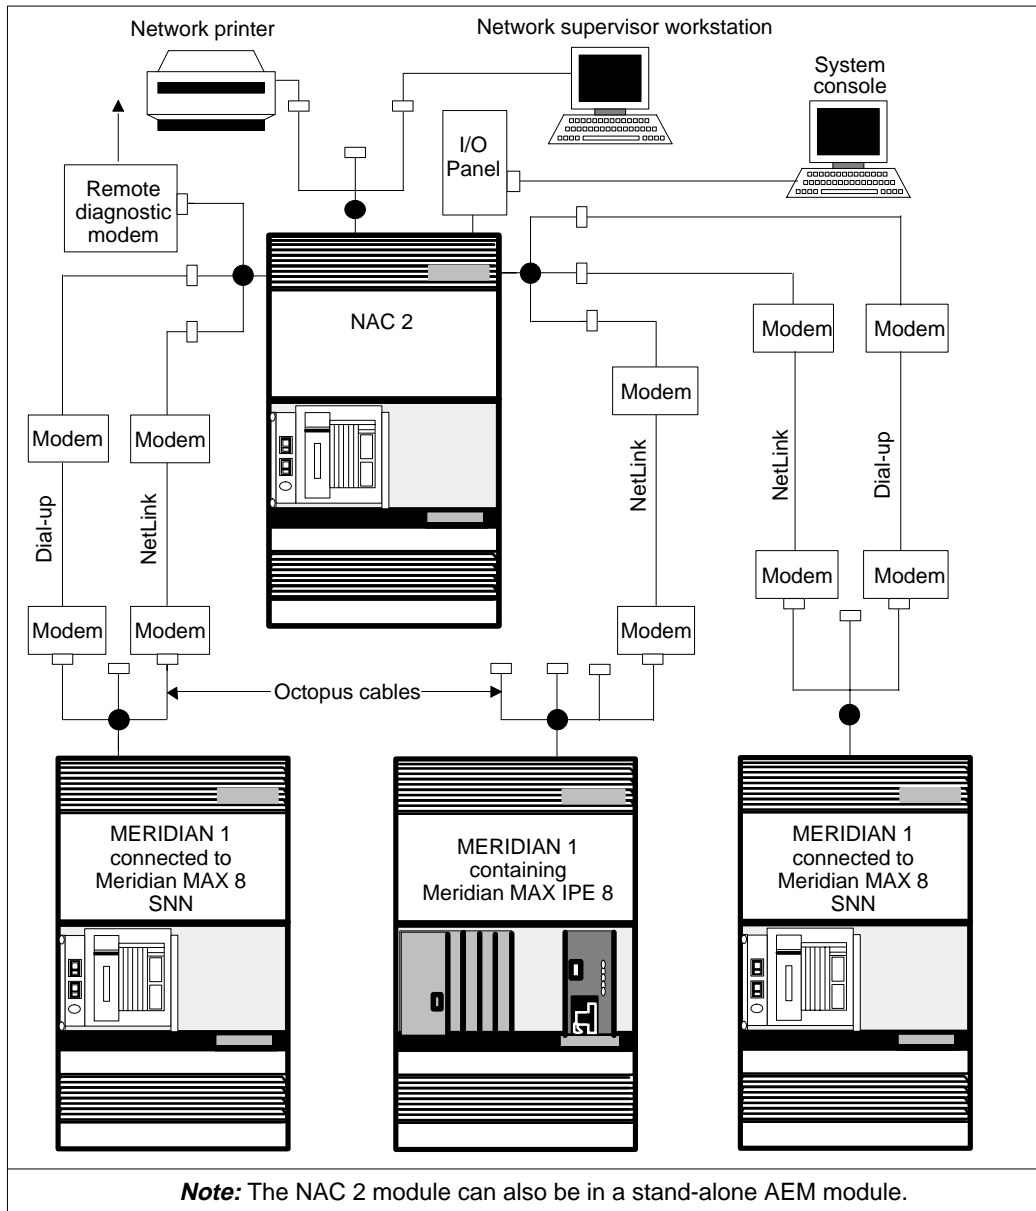

**Figure 5-32**  
**NAC 1 network connectivity overview**

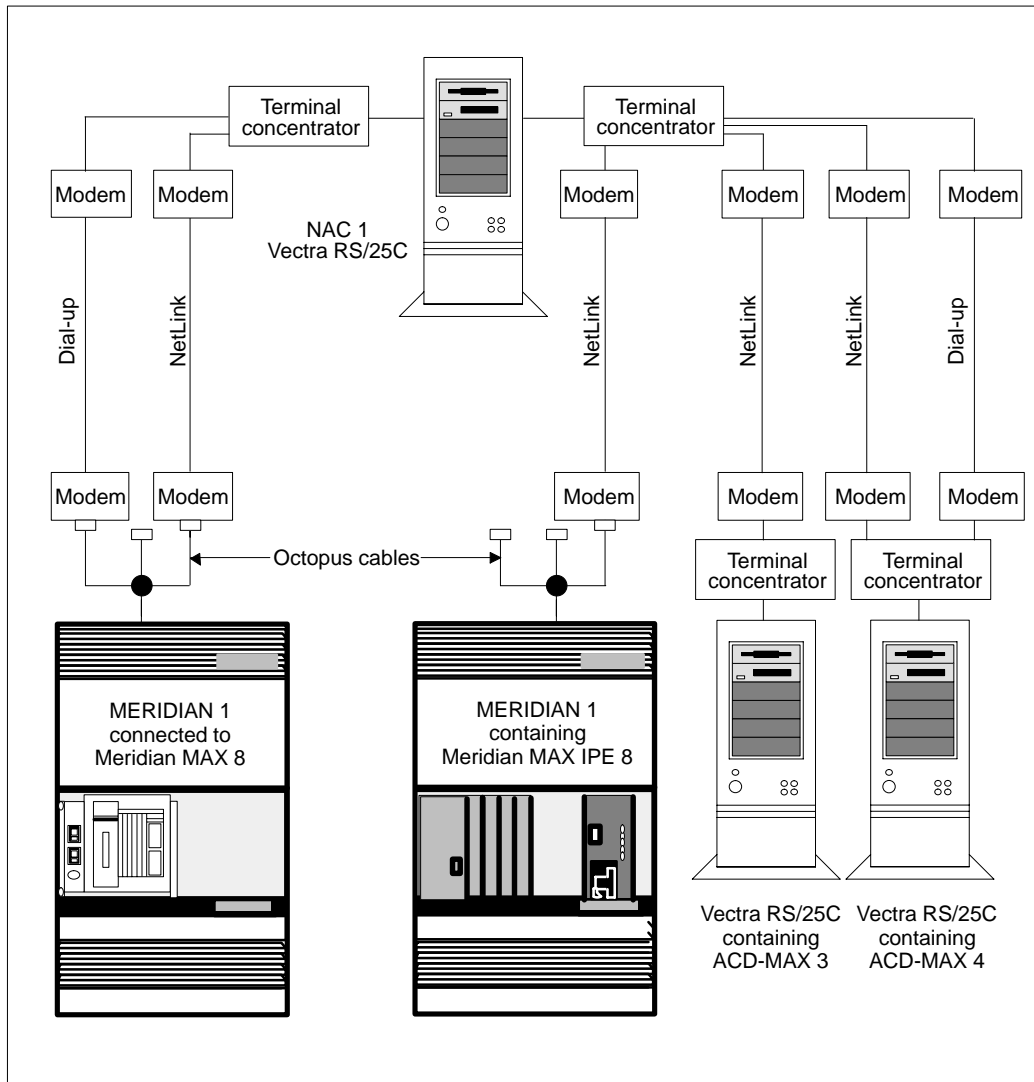

---

## Limited distance modems for NAC connectivity

Limited distance modems extend workstation and printer connections when used for a remote supervisor login or a network link.

### Remote supervisor login and network link

The following modems are supported for limited distance connections using a remote supervisor login or a network link:

- Gandalf LDS 120E
- Develcon DS 511A

#### Gandalf LDS 120E and Develcon DS 511A

The Gandalf LDS 120E and Develcon DS 511A limited distance modems can be used for both the remote supervisor login and the network link. This modem allows you to extend the distance between a NAC system and a Meridian MAX to a nominal distance of eight km (five miles). Other limited-distance modems may not provide the eight km (five miles) distance. It is your responsibility to check with the particular manufacturer.

#### ATTENTION

RS-232 cables that directly connect peripherals to the Meridian MAX must not exceed 15 meters (50 feet).

This length is based on an EIA RS-232C standard. Peripherals can be farther away if self-powered limited-distance (own power supply), or dial-up modems are used.

#### ATTENTION

Cable connections between the LAN and the Meridian MAX must not exceed 50 meters (164 feet).

This connection is an IEEE standard 802.3.

For NAC 2, each remote supervisor login and network link requiring a limited-distance modem needs a straight-through NT1R03Dx cable and the modem cable NT7D99AA (SNN/SNN-E) or NT1R03HF (IPE/IPE-E) at the Meridian MAX end and at the NAC end.

Figure 5-33 illustrates the hardware configuration required to use the Gandalf LDS 120E modem for network link and remote supervisor login with a NAC 2 system.

Figure 5-34 illustrates the hardware configuration required to use the Develcon DS 511A modem for network link and remote supervisor login with a NAC 2 system.


For NAC 1, each remote supervisor login and network link requiring a limited-distance modem needs a straight-through NT1R03Dx cable, the modem cable NT7D99AA (SNN/SNN-E) or NT1R03HF (IPE/IPE-E), and the NT9D8001 cable illustrated in Figure 5-37.

Figure 5-35 illustrates the hardware configuration required to use the Gandalf LDS 120E modem for network link and remote supervisor login with a NAC 2 system.


Figure 5-36 illustrates the hardware configuration required to use the Develcon DS 511A modem for network link and remote supervisor login with a NAC 2 system.


**Figure 5-33**

**NAC 2 Gandalf LDS 120E limited-distance modem hardware configuration for remote supervisor login or network link**

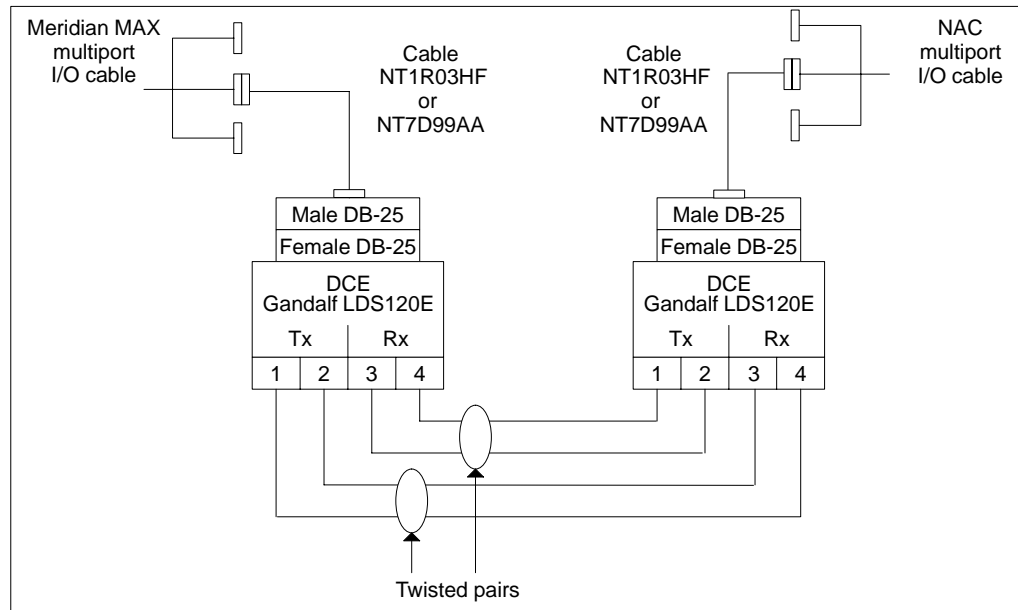


**Figure 5-34**  
**NAC 2 Develcon DS 511A limited-distance modem hardware configuration for remote supervisor login or network link**

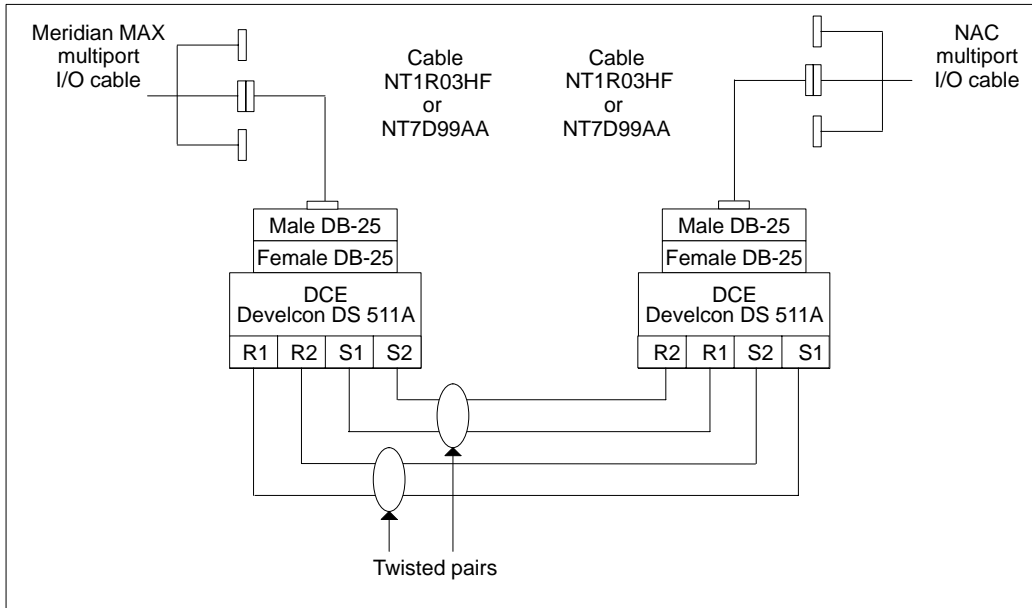

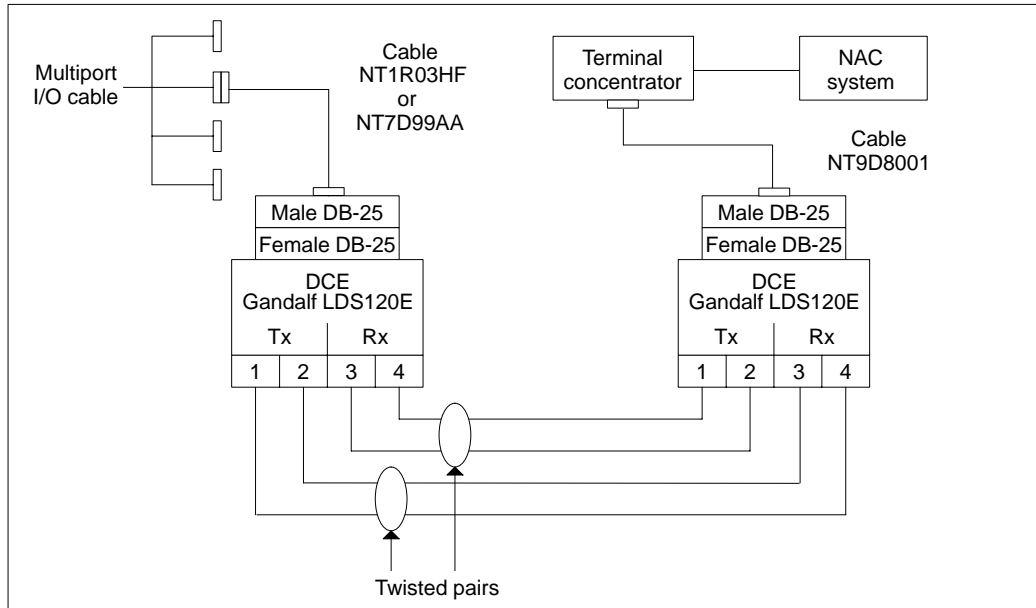
**Figure 5-35****NAC 1 Gandalf LDS 120E limited-distance modem hardware configuration for network link or remote supervisor login**



**Figure 5-36**  
**NAC 1 Develcon DS 511A limited-distance modem hardware configuration for network link or remote supervisor login**

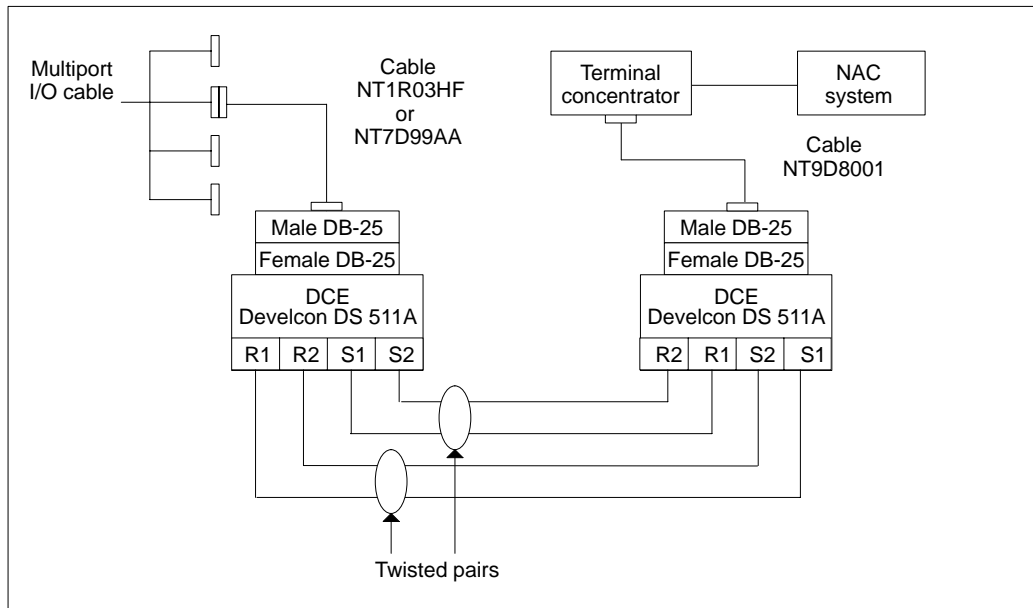

**Figure 5-37**  
**Cabling arrangement—modem connection cable NT9D8001**

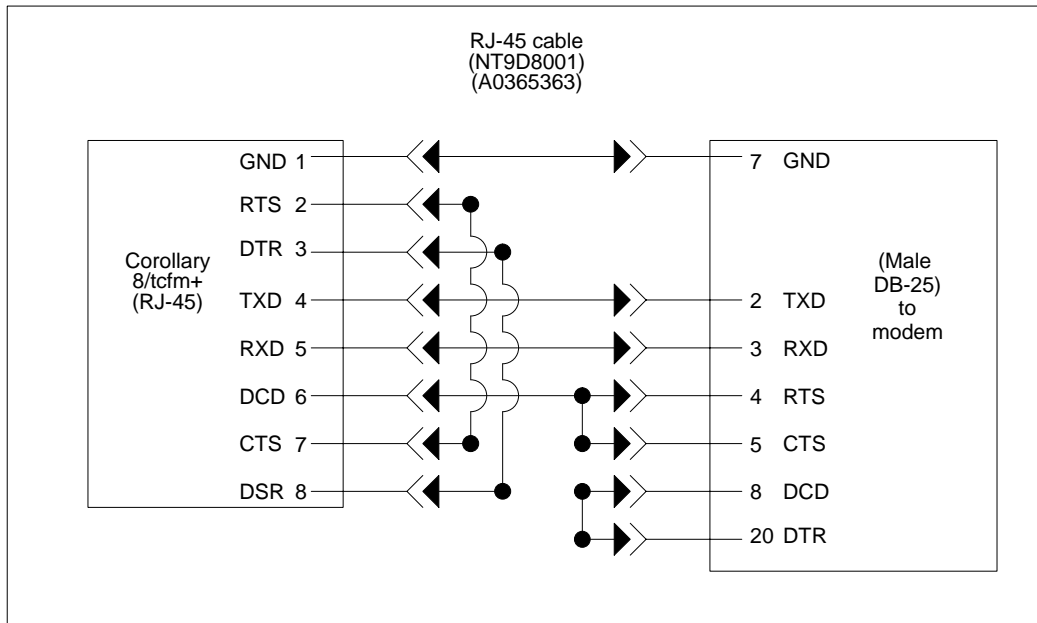

Connect one end of the NT7D99AA (SNN/SNN-E) to the VME multiport cable or the NT1R03HF (IPE/IPE-E) modem cable to the four-port I/O cable port, then connect the other end to the female DB-25 socket on the first Gandalf LDS 120E or Develcon DS 511A modem. The first Gandalf LDS 120E or Develcon DS 511A modem is connected to the second Gandalf LDS 120E or Develcon DS 511A modem with a 2-pair twisted cable of 24 AWG. This cable cannot exceed eight km (five miles).

For a NAC 2 system, the second Gandalf LDS 120E or Develcon DS 511A modem is connected to the NAC's VME multiport cable port using an NT7D99AA modem cable, with one DB-25 connector attached to the second Gandalf LDS 120E or Develcon DS 511A modem's female DB-25 socket, and the second male DB-25 connector attached to the NAC's VME multiport cable.

For a NAC 1 system, the second Gandalf LDS 120E or Develcon DS 511A modem is connected to the terminal concentrator through the NT9D8001 cable. A male DB-25 connector is attached to the second Gandalf LDS 120E or Develcon DS 511A modem's female DB-25 socket, with the RJ-45 connector attached to the terminal concentrator.

**Gandalf LDS 120E modem settings**

The following settings are necessary for the Gandalf LDS 120E modem to be used:

- Termination: T (330 OHM)
- Internal Jumper Plugs: 4-wire mode, J13-J14 connected and J15-J16 connected
- Front Panel Push-button Switches: ALL OUT - TP - RL - DL - AL

Table 5-7 lists the external DIP switch settings for point-to-point, full-duplex for the Gandalf LDS 120E. Table 5-8 lists the internal DIP switch settings for point-to-point, full-duplex.

| <b>Table 5-7</b><br><b>LDS 120E external DIP switch settings for point-to-point, full-duplex</b> |                       |
|--------------------------------------------------------------------------------------------------|-----------------------|
| <b>Switch number</b>                                                                             | <b>Switch setting</b> |
| 1                                                                                                | OPEN (OFF)            |
| 2                                                                                                | CLOSED (ON)           |
| 3                                                                                                | CLOSED (ON)           |
| 4                                                                                                | CLOSED (ON)           |
| 5                                                                                                | CLOSED (ON)           |
| 6                                                                                                | NOT USED              |

**Table 5-8**  
**LDS 120E internal DIP switch settings for point-to-point, full-duplex**

| Switch number | Switch setting |
|---------------|----------------|
| 1             | CLOSED (ON)    |
| 2             | CLOSED (ON)    |
| 3             | CLOSED (ON)    |
| 4             | CLOSED (ON)    |
| 5             | CLOSED (ON)    |
| 6             | CLOSED (ON)    |

Once the modems are connected, turn on the power and ensure that the DCD lamp on each modem comes on. This will indicate that both Gandalf LDS 120E modems are active.

Please note that these instructions may vary depending on the equipment used at your site.

#### **NAC 2 end**

The cable between the NAC, running with a Meridian MAX SNN/SNN-E, and the limited-distance modem is modem cable NT7D99AA. Figure 5-38 illustrates this connection.

The cable between the NAC, running with a Meridian MAX IPE/IPE-E, and the limited distance modem is modem cable NT7D99AA. Figure 5-40 illustrates this connection.

Refer to the “Modems” section of the “Hardware installation” chapter of the *Network Administration Center (NAC) 2.0 Installation Guide* (NTP 553-4011-110) for further information.

#### **NAC 1 end**

The RJ-45 end of the NT9D8001 cable is connected to the corollary terminal concentrator at the NAC end. The other end of the cable is a DB-25 male connector, which is attached to a limited-distance modem.

Figures 5-39 and 5-41 illustrate this connection.


Refer to the “Modems” section of the “Hardware installation” chapter of *Network Administration Center (NAC) 1.0 Installation* (NTP 553-4011-100) for further information.

**Meridian MAX end**


The cable between the Meridian MAX, running on an SNN/SNN-E, and the limited-distance modem is modem cable NT7D99AA. Figure 5-39 illustrates this connection.

The cable between the Meridian MAX, running on an IPE/IPE-E module, and the limited-distance modem is modem cable NT1R03HF. Figure 5-41 illustrates this connection.


**Figure 5-38**  
**Connecting NAC 2 with a Meridian MAX node—limited-distance connection (SNN/SNN-E)**

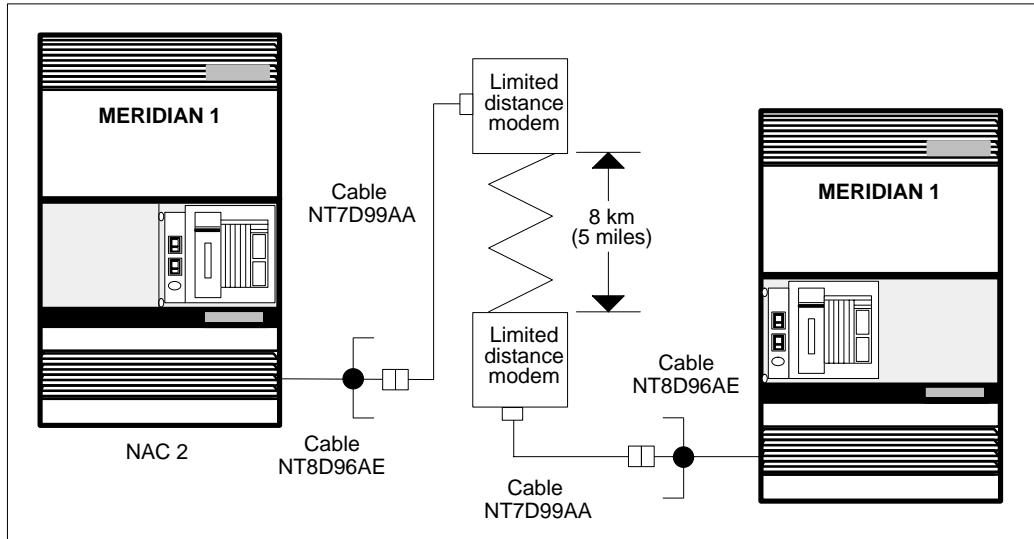


**Figure 5-39**  
**Connecting NAC 1 with a Meridian MAX node—limited-distance connection (SNN/SNN-E)**

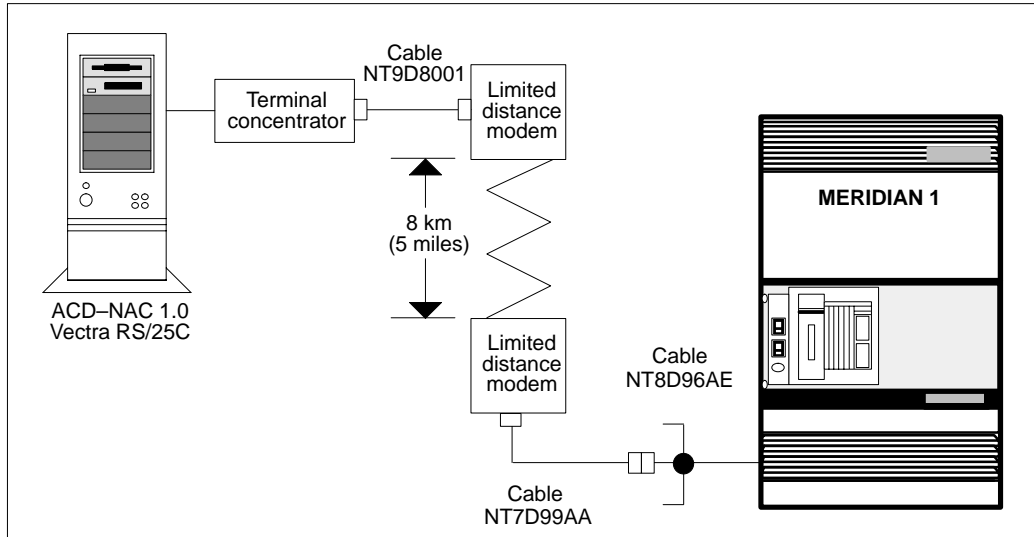

**Figure 5-40**  
Connecting the NAC 2 with a Meridian MAX node—limited-distance connection (IPE/IPE-E)

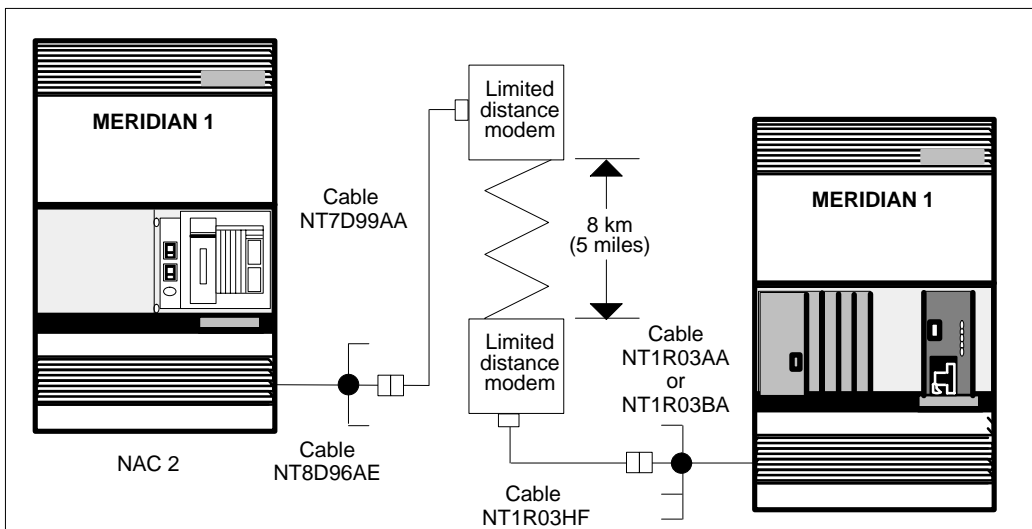

**Figure 5-41**  
Connecting the NAC 1 with a Meridian MAX node—limited-distance connection (IPE/IPE-E)

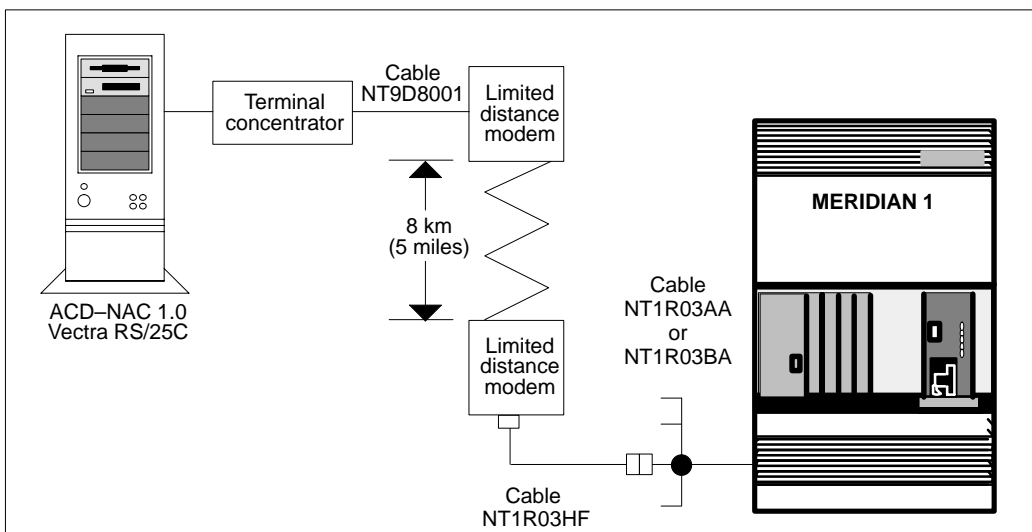

## Dial-up modems for NAC connectivity

If the NAC system is beyond eight km (five miles) of the Meridian MAX SNN/SNN-E's VME multiport cable or the IPE/IPE-E's four-port I/O cable, then the dial-up connection method can be used. Dial-up modems can be used with both the remote supervisor login and network link.

All modems for NAC connectivity to Meridian MAX are cabled in the same fashion. This is outlined as follows.

### NAC 2 end

The cable between the NAC, running a Meridian MAX SNN/SNN-E, and the dial-up modem is a modem cable NT7D99AA. Figure 5-42 illustrates this connection.

The cable between the NAC, running a Meridian MAX IPE/IPE-E system, and the dial-up modem is a modem cable NT7D99AA. Figure 5-44 illustrates this connection.

Refer to the "Modems" section of the "Hardware installation" chapter of *Network Administration Center (NAC) 2.0 Installation* (NTP 553-4011-110) for further information.

### NAC 1 end

The RJ-45 end of the NT9D9007 cable is connected to the corollary terminal concentrator at the NAC end. The other end of the cable is a DB-25 male connector, which is attached to a dial-up modem.

Figures 5-43 and 5-45 illustrate this connection.

Figure 5-46 shows the cabling arrangement for the NT9D9007 cable.

Refer to the "Modems" section of the "Hardware installation" chapter of *Network Administration Center (NAC) 1.0 Installation* (NTP 553-4011-100) for further information.


### Meridian MAX end

The cable between the Meridian MAX SNN/SNN-E and the dial-up modem is a modem cable NT7D99AA. Figure 5-43 illustrates this connection.


The cable between the Meridian MAX IPE/IPE-E and the dial-up modem is a modem cable NT1R03HF. Figure 5-45 illustrates this connection.




**Figure 5-42**  
Connecting the NAC 2 with a Meridian MAX node—dial-up connection (SNN/SNN-E)

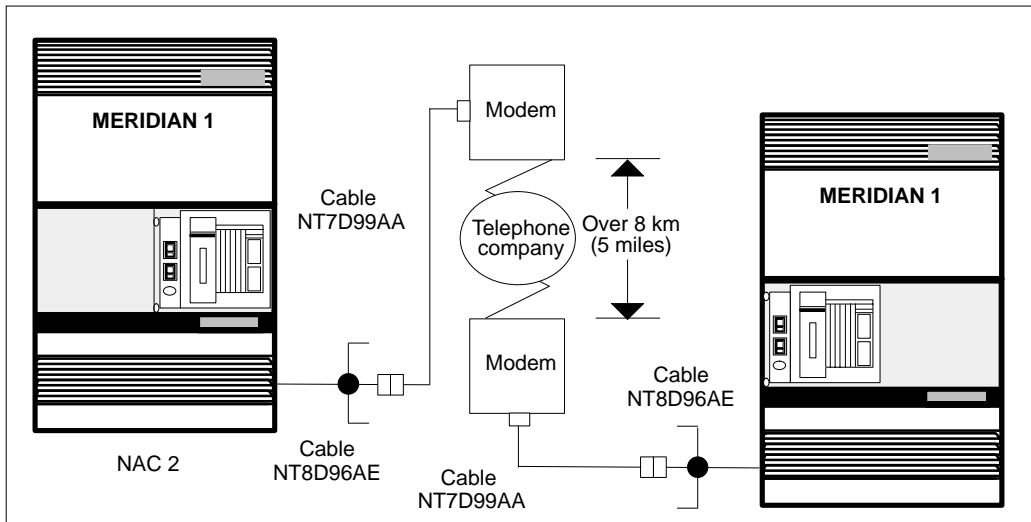


**Figure 5-43**  
Connecting the NAC 1 with a Meridian MAX node—dial-up connection (SNN/SNN-E)

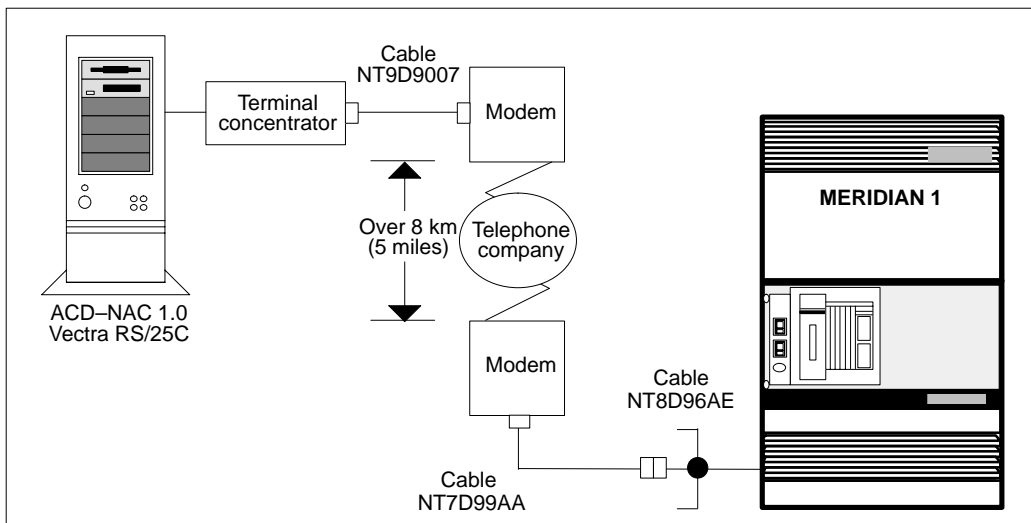


**Figure 5-44**  
**Connecting the NAC 2 with a Meridian MAX node—dial-up connection (IPE/IPE-E)**

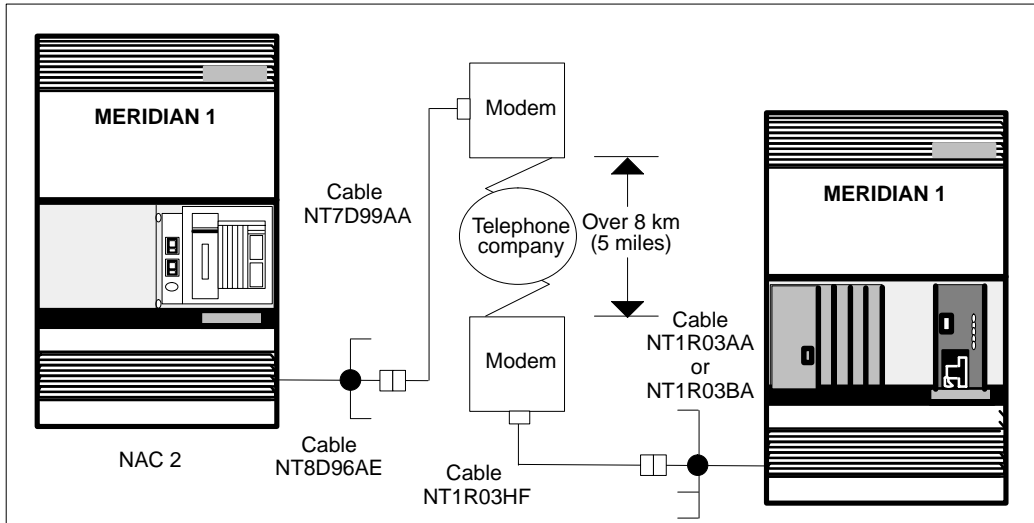

**Figure 5-45**  
**Connecting the NAC 1 with a Meridian MAX node—dial-up connection (IPE/IPE-E)**

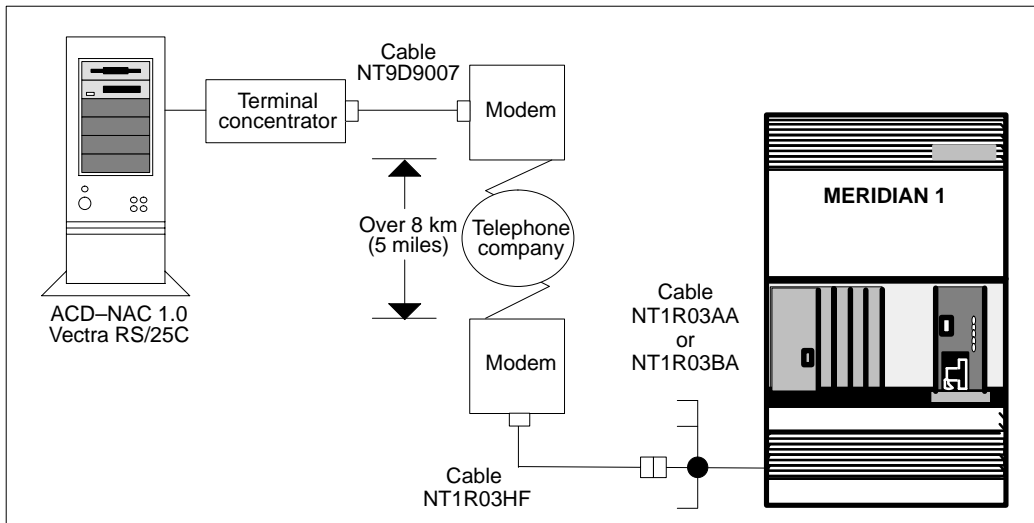

**Figure 5-46**  
**Cabling arrangement—direct connection cable NT9D9007**

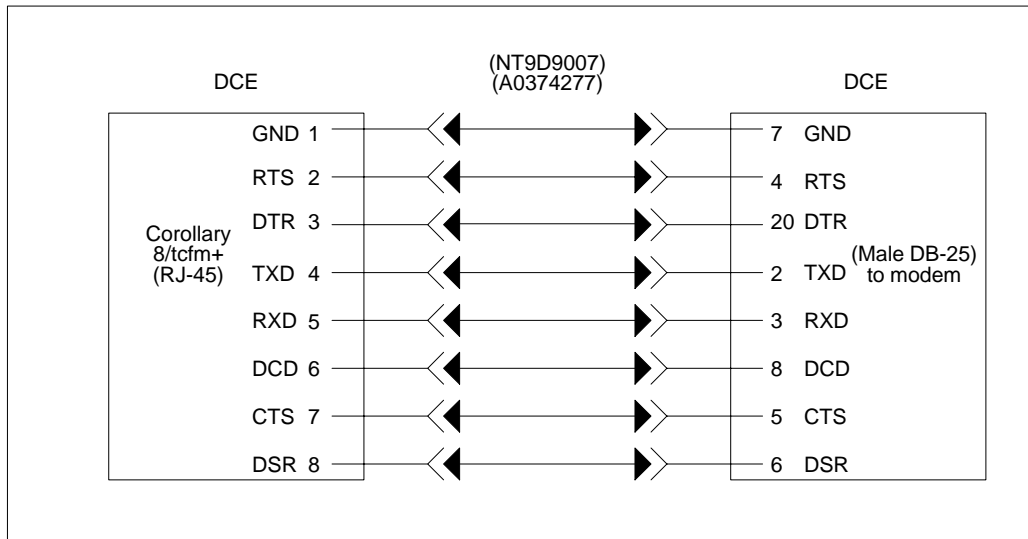

### Remote supervisor login

The following modems can be used for remote supervisor logins:

- NetComm SmartModem M7F
- UDS 2440
- Ven-Tel 2400 Plus II
- Ven-Tel 9600 Plus
- Racal VI2422PA
- UDS EC224 A/D
- U.S. Robotics 28.8 Sportster modem


Both the NAC and Meridian MAX ends of the remote supervisor login connection send Hayes AT modem initialization strings.

#### NetComm SmartModem M7F

To properly set up the NetComm modem for remote supervisor login, ensure that the modem's switch settings match those shown in Figure 5-47. The same switch settings should be used at both the remote end and the Meridian MAX end.

**Note:** There are two buttons located on the front panel of the modem: Mode and Talk/Data. For use with the NetComm modem, the Talk/Data button should be pressed.

**Figure 5-47**  
**NetComm SmartModem M7F modem switch settings**

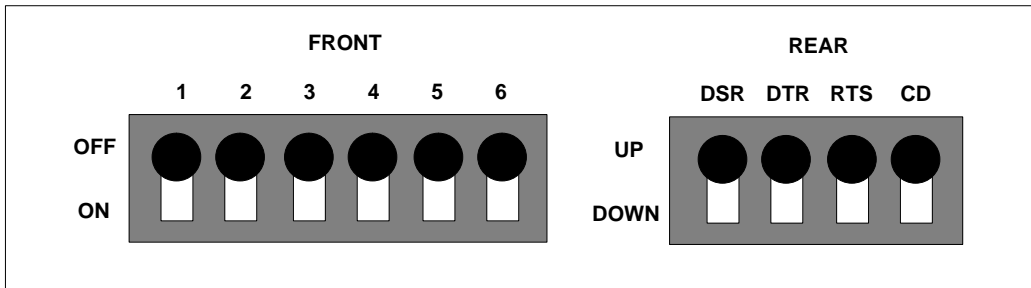

#### UDS 2440


Figure 5-10 shows the front and rear view of the UDS 2440 dial-up supervisor modem. This modem connects to the SNN/SNN-E's multiport cable using an NT7D99AA cable. This modem connects to the IPE/IPE-E's multiport cable using an NT1R03HF cable.

No internal switch settings are required to configure the UDS 2440 modem for remote supervisor login. Refer to the "Dial-up supervisor modem" section, "UDS 2440" subsection, for more information.

#### Ven-Tel 2400 Plus II

To properly set up the Ven-Tel 2400 Plus II modem for use as a remote supervisor login, ensure that the switch settings match those shown in Figure 5-48.


**Figure 5-48**  
**Ven-Tel 2400 Plus II remote supervisor login modem switch settings**

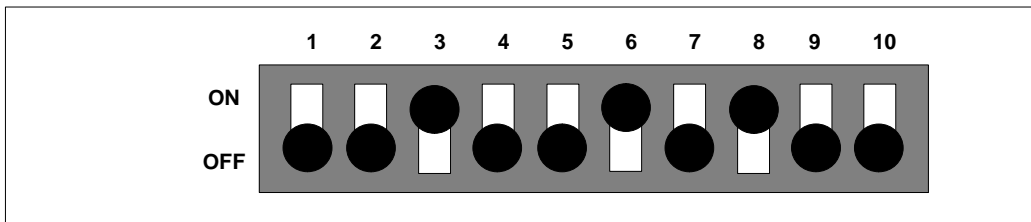

### **Ven-Tel 9600 Plus**

To properly set up the Ven-Tel 9600 Plus modem for use as a remote supervisor login, ensure that the switch settings match those shown in Figure 5-49.

**Figure 5-49**  
**Ven-Tel 9600 Plus remote supervisor login modem switch settings**

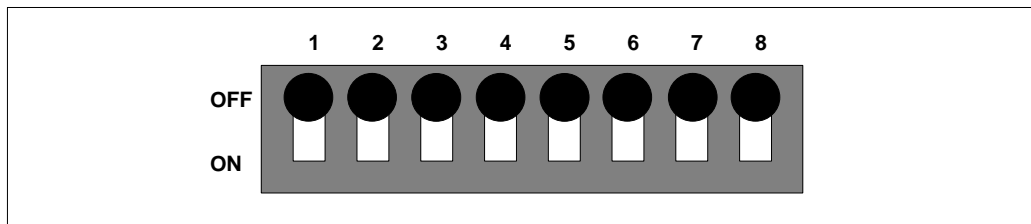


### **Racal VI2422PA**

There are no internal switch settings required to configure the Racal VI2422PA modem for use as a remote supervisor login.

### **UDS EC224A/D 2400**


To properly set up the UDS EC224 A/D modem for use as a remote supervisor login, ensure that the switch settings match those shown in Figure 5-50.

**Figure 5-50**  
**UDS EC224A/D 2400 remote supervisor login modem switch settings**

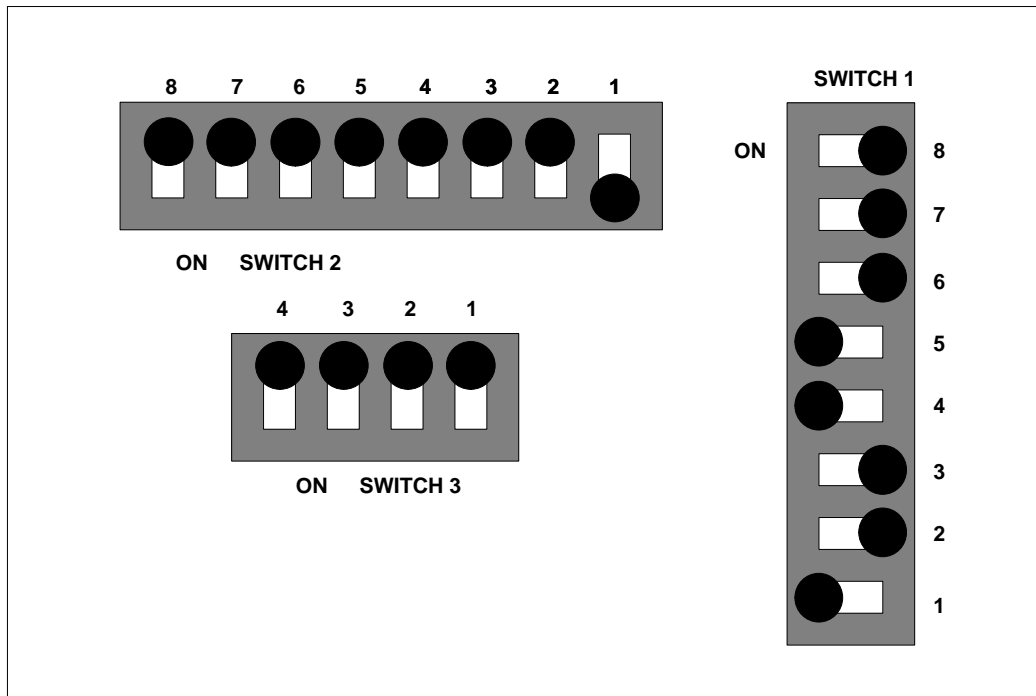

**U.S. Robotics 28.8 Sportster modem**

To properly set up the U.S. Robotics 28.8 Sportster modem for use as a remote supervisor login, ensure that the switch settings match those shown in Figure 5-51.

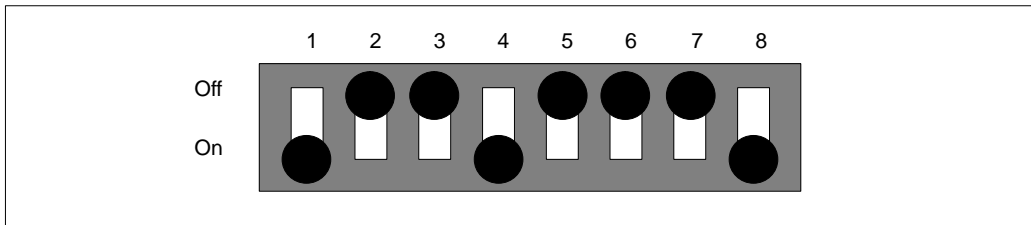**Figure 5-51****U.S. Robotics 28.8 Sportster remote supervisor login modem switch settings****Network link**

The following modems can be used for network link:


- NetComm SmartModem M7F
- UDS 2440
- Ven-Tel 2400 Plus II
- Ven-Tel 9600 Plus
- Racal VI2422PA
- U.S. Robotics 28.8 Sportster modem

**NetComm SmartModem M7F**

To properly set up the NetComm modem for network link, ensure that the modem's switch settings match those shown in Figure 5-52. The same switch settings should be used at both the remote end and the Meridian MAX end.

**Note:** There are two buttons located on the front panel of the modem: Mode and Talk/Data. For use with the NetComm modem, the Talk/Data button should be pressed.

**Figure 5-52**  
**NetComm SmartModem M7F modem switch settings**

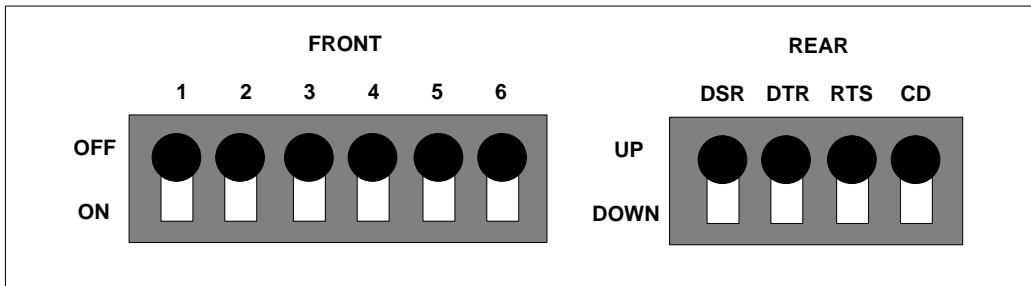

Complete the steps in Procedure 5-12 to configure the NetComm modem for network link.

**Procedure 5-12**  
**Configuring the NetComm SmartModem M7F for network link**

- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable. Set the workstation speed to 2400 baud.
- 2 Connect the workstation and the modem to their power sources.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **atz** followed by **{RETURN}**.  
OK
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **at&d0** followed by **{RETURN}**.  
OK
- 7 Enter **at&c1** followed by **{RETURN}**.  
OK
- 8 Enter **atln3** followed by **{RETURN}**.  
OK
- 9 Enter **atlq3** followed by **{RETURN}**.  
OK



- 10 Enter **at&z1=t#####** followed by **{RETURN}**.  
##### must be replaced with the correct telephone number for the NAC node.  
OK
- 11 Enter **at&w** followed by **{RETURN}**.  
NONE
- 12 Power down the workstation and the modem.
- 13 Disconnect the workstation from the modem.
- 14 Make sure the modem at the NAC site is properly connected and powered up. The NAC initiates the signal that connects the modems.  
The Meridian MAX modem dials the NAC telephone number as recorded during Step 10.  
  
The connection between the NAC site and the Meridian MAX site is confirmed when the Carrier Detect (CD) LED remains constantly on.
- 15 For an SNN/SNN-E system, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.  
For IPE/IPE-E systems, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.  
  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 16 Power up the modem.  
  
If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

**UDS 2440**

Figure 5-10 shows the front and rear view of the UDS 2440 network link modem. This modem connects to the SNN/SNN-E's multiport cable using an NT7D99AA cable.

The UDS 2440 modem does not contain any internal switch settings. Complete Procedure 5-13 to configure the UDS 2440 modem for network link.

**Procedure 5-13****Configuring the UDS 2440 modem for network link**


- 1 Connect a workstation to the modem with a straight-through NT1R03Dx or NT1R03Ex cable. Set the workstation speed to 2400 baud.
- 2 Connect the workstation and the modem to their power sources.
- 3 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4 Enter **atz** followed by **{RETURN}**.  
OK
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **at&d3** followed by **{RETURN}**.  
OK
- 7 Enter **at&s1** followed by **{RETURN}**.  
OK
- 8 Enter **at&c1** followed by **{RETURN}**.  
OK
- 9 Enter **at&z0=t#####** followed by **{RETURN}**.  
##### must be replaced with the correct telephone number for the NAC node.  
OK
- 10 Enter **at&w** followed by **{RETURN}**.  
OK
- 11 Power down the workstation and the modem.
- 12 Disconnect the workstation from the modem.

- 13 For an SNN/SNN-E system, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.  
For IPE/IPE-E systems, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 14 Power up the modem.  
If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

### Ven-Tel 2400 Plus II

To properly set up the Ven-Tel 2400 Plus II modem for use as a network link, ensure that the switch settings match those shown in Figure 5-53, and follow the instructions given in Procedure 5-14.

**Figure 5-53**  
**Ven-Tel 2400 Plus II network link modem switch settings**

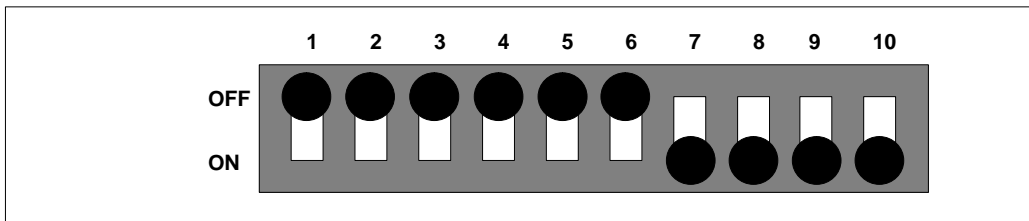

### Procedure 5-14

#### Configuring the Ven-Tel 2400 Plus II modem for network link

- 1 Open the modem and ensure that the switch settings are correct as shown in Figure 5-53. Set the workstation speed to 2400 baud.
- 2 Connect a workstation to the modem with a straight-through NT1R03Ex cable.
- 3 Connect the workstation and the modem to their power sources.
- 4 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 5 Enter **at&f** followed by **{RETURN}**.  
OK

- 
- 6 Enter **at&d0** followed by **{RETURN}**.  
OK
  - 7 Enter **at&c1** followed by **{RETURN}**.  
OK
  - 8 Enter **atln1** followed by **{RETURN}**.  
OK
  - 9 Enter **atlg1** followed by **{RETURN}**.  
OK
  - 10 Enter **atlq1** followed by **{RETURN}**.  
OK
  - 11 Enter **atlx1** followed by **{RETURN}**.  
OK
  - 12 Enter **atlj1** followed by **{RETURN}**.  
OK
  - 13 Enter **atlc1** followed by **{RETURN}**.  
OK
  - 14 Enter **ats64=1** followed by **{RETURN}**.  
OK
  - 15 Enter **ats0=1** followed by **{RETURN}**.  
OK
  - 16 Enter **at&z1=t#####** followed by **{RETURN}**.  
##### must be replaced with the correct telephone number for the NAC node.  
OK
  - 17 Enter **atq1** followed by **{RETURN}**.  
NONE
  - 18 Enter **ate0** followed by **{RETURN}**.  
NONE
- The following command will not appear on the screen when you enter it.

**5-82** Modems

---

- 19** Enter **at&w** followed by **{RETURN}**.

NONE

- 20** Power down the workstation and the modem.

- 21** Disconnect the workstation from the modem.

- 22** Make sure that the modem at the NAC site is properly connected and powered up. The NAC initiates the signal that connects the modems.

The Meridian MAX modem will dial the NAC telephone number as recorded during Step 16.

The connection between the NAC site and the Meridian MAX site is confirmed when the carrier detect (CD) LED remains constantly on.

- 23** For an SNN/SNN-E system, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.

For IPE/IPE-E systems, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.

Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.

- 24** Power up the modem.


If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

**Ven-Tel 9600 Plus**

To properly set up the Ven-Tel 9600 Plus modem for use as a network link, ensure that the switch settings match those shown in Figure 5-54, and follow the instructions given in Procedure 5-15.

Make sure power pack model # L5730-01 is used.

**Figure 5-54**  
**Ven-Tel 9600 Plus network link modem switch settings**

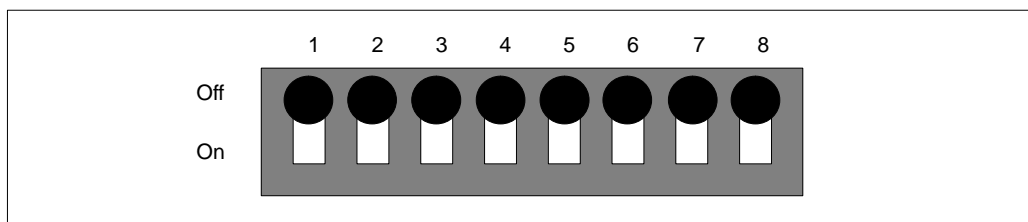**Procedure 5-15****Configuring the Ven-Tel 9600 Plus modem for network link**

- 1 Open the modem and ensure that the switch settings are correct as shown in Figure 5-54. Set the workstation speed to 9600 baud.
- 2 Connect a workstation to the modem with a straight-through NT1R03Ex cable.
- 3 Connect the workstation and the modem to their power sources.
- 4 Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 5 Enter **at&f** followed by **{RETURN}**.  
OK
- 6 Enter **at%f2** followed by **{RETURN}**.  
OK
- 7 Enter **at&d0** followed by **{RETURN}**.  
OK
- 8 Enter **at&c1** followed by **{RETURN}**.  
OK
- 9 Enter **atln3** followed by **{RETURN}**.  
OK

**5-84** Modems

---

- 10** Enter **atq3** followed by **{RETURN}**.  
OK
- 11** Enter **ats64=1** followed by **{RETURN}**.  
OK
- 12** Enter **ats0=1** followed by **{RETURN}**.  
OK
- 13** Enter **at&z1=t#####** followed by **{RETURN}**.  
##### must be replaced with the correct telephone number for the Meridian MAX node.  
OK
- 14** Enter **atq1** followed by **{RETURN}**.  
OK
- 15** Enter **ate0** followed by **{RETURN}**.  
OK
- 16** The following command does not appear on the screen when you enter it.  
Enter **at&w1&y1** followed by **{RETURN}**.  
NONE
- 17** Power down the workstation and the modem.
- 18** Disconnect the workstation from the modem.
- 19** Make sure the modem at the NAC site is properly connected and powered up. The NAC initiates the signal that connects the modems.  
The Meridian MAX modem will dial the NAC telephone number as recorded during Step 13.  
  
The connection between the NAC site and the Meridian MAX site is confirmed when the carrier detect (CD) LED remains constantly on.
- 20** For an SNN/SNN-E system, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.  
For IPE/IPE-E systems, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.  
  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.

**21** Power up the modem.

If your Meridian MAX system is powered up and fully functional, you should see the LED labeled "TR" light up on the front panel of the modem. If the "TR" LED does not light up, retry this procedure. If the light still does not appear, contact your Nortel representative.

**Racal VI2422PA**

There are no internal switch settings required to configure the Racal VI2422PA modem for use as a network link.

To properly set up the Racal VI2422PA modem for use as a network link, follow the instructions given in Procedure 5-16.

**Procedure 5-16****Configuring the Racal VI2422PA modem for network link**

- 1** Connect a workstation with data format 8N1 and speed 2400 baud to the modem with a straight-through NT1R03Ex cable.
- 2** Connect the workstation and the modem to their power sources.
- 3** Power up the workstation and the modem, then enter the following commands on the workstation keyboard.
- 4** Enter **at&f** followed by **{RETURN}**.  
OK
- 5** Enter **at\*f0** followed by **{RETURN}**.  
OK
- 6** Enter **at&zt#####** followed by **{RETURN}**.  
##### must be replaced with the correct telephone number for the NAC node.  
OK
- 7** Enter **atq1** followed by **{RETURN}**.  
NONE
- 8** Enter **ate0** followed by **{RETURN}**.  
NONE
- 9** The following command does not appear on the screen when you enter it.  
Enter **at&w** followed by **{RETURN}**.  
NONE



**5-86** Modems

---


- 10** Power down the workstation and the modem.
- 11** Disconnect the workstation from the modem.
- 12** For an SNN/SNN-E system, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.  
For IPE/IPE-E systems, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.  
Make sure the modem is connected to the telephone system with an RJ-11 cable/connector.
- 13** Power up the modem.
- 14** Through the use of the Racal modem's front panel, choose option 1 and set the value to **1**. Choose option 13 and set the value to **2**.
- 15** Make sure the modem at the NAC site is properly connected and powered up. The NAC initiates the signal that connects the modems.  
The Meridian MAX modem dials the NAC telephone number as recorded during Step 6.  
The connection between the NAC site and the Meridian MAX site is confirmed when the carrier detect (CD) LED remains constantly on.

**U.S. Robotics 28.8 Sportster modem**

Follow Procedure 5-17 to configure the U.S. Robotics 28.8 Sportster modem for a network link.

**Figure 5-55**

**U.S. Robotics 28.8 Sportster network link modem switch settings for programming mode**

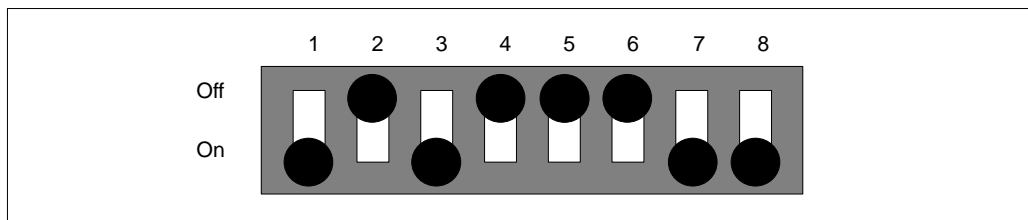**Procedure 5-17****Configuring the U.S. Robotics 28.8 Sportster modem for network link**


- 1 Configure the modem switch setting as shown in Figure 5-55.
- 2 Set the workstation speed to 9600 baud.
- 3 Connect the workstation to the modem with a straight-through cable (NT1R03Dx or NT1R03Ex).
- 4 Connect the workstation and the modem to their power sources. Ensure that the modem is connected to the telephone system with an RJ-11 cable/connector.
- 5 Power up the workstation and the modem.
- 6 At the workstation keyboard, enter **AT&F** followed by **{RETURN}**.  
*The system responds with*  
*OK*
- 7 Enter **AT\*B1** followed by **{RETURN}**.  
*OK*
- 8 Enter **AT&Z1=T#####** followed by **{RETURN}**.  
The ##### must be replaced with the correct telephone number for the Meridian MAX node.  
*OK*
- 9 Enter **ATE0** followed by **{RETURN}**.  
*OK*

## 5-88 Modems

- 10 Enter **AT&W1&Y1** followed by **{RETURN}**.  
This command does not appear on the screen.  
OK
- 11 Power off the modem.
- 12 Configure the modem's switch settings as shown in Figure 5-56.

Figure 5-56

U.S. Robotics Sportster 28.8 modem switch settings for operating mode

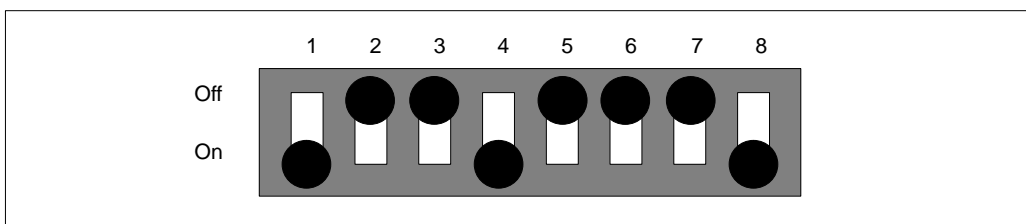

- 13 Disconnect the modem from the workstation.
- 14 Ensure that the modem at the NAC site is properly connected and powered up.  
The NAC initiates the signal that connects the modems.  
The Meridian MAX modem dials the NAC telephone number as recorded during step 8.  
The connection between the NAC site and the Meridian MAX site is confirmed when the carrier detect (CD) LED remains constantly on.
- 15 For an SNN/SNN-E, connect the modem directly to the Meridian MAX multiport cable using an NT7D99AA modem cable.  
For an IPE/IPE-E, connect the modem directly to the Meridian MAX multiport cable using an NT1R03HF modem cable.  
Ensure that the modem is connected to the telephone system with an RJ-11 cable/connector.
- 16 Power up the modem.  
If your Meridian MAX system is powered up and functional, the LED labeled "TR" will light up on the front panel of the modem. If the "TR" LED does not light up, repeat this procedure. If the light still does not appear, contact your Nortel representative.

---

## T1 connection for NAC connectivity

The NAC system can be connected to a Meridian MAX node through digital lines such as a T1 digital line. During the system's installation, the network link port on the NAC and the Meridian MAX must be configured as direct connection ports. On the NAC system, the network link baud rate should be set to 9600 through the Network Definition screen.

The T1 ports (Data Module or DSU) for the network link should be set up as follows:

- asynchronous
- full duplex
- 9600 baud
- 8 data bits, no parity, 1 stop bit
- T1 network delay must be less than 0.5 second
- RS-232/C
- DCE or DTE (DCE is recommended)

If the T1 port for the network link provides a DB-25 interface, then the network link is connected as follows:

- If the T1 port is configured as DCE, then the modem cable NT7D99AA (SNN/SNN-E) or NT1R03HF (IPE/IPE-E) is used to connect the T1 port to the IPE/IPE-E four-port I/O cable or the SNN/SNN-E VME multiport cable's network link port on the Meridian MAX.
- If the T1 port is configured as DTE, then the terminal cable NT1R03Dx is used to connect the T1 port to the IPE/IPE-E four-port I/O cable or SNN/SNN-E VME multiport cable's network link port on the Meridian MAX.

Note that it is desirable to have both ports of the T1 link configured as DCE. Setting up both ports as DTE is not recommended.

If the T1 data bank does not provide a DB-25 interface, then a patch panel or similar equipment should be installed to provide the required RS-232/C interface. In this case, the T1 connection will be from the patch panel to the corollary terminal concentrator in the NAC or the four-port cable in the Meridian MAX systems.

Due to the wide variety of T1 equipment available, it is important that the T1 administrator be consulted before installing the network link.

## Direct connection for NAC connectivity

If the NAC system is within 15 meters (50 feet) of the four-port I/O cable used by a Meridian MAX nodal system, then you can use the direct connection method.

Because Meridian MAX and NAC 2 both run on the Application Module (AM) hardware platform, the two systems may be installed in the same Application Equipment Module (AEM).

### NAC 2 end

The cable between the NAC, running with a Meridian MAX SNN/SNN-E, and the VME multiport cable is modem cable NT7D99AA. Figure 5-57 illustrates this connection.

The cable between the NAC, running with a Meridian MAX IPE/IPE-E system, and the four-port I/O cable port is modem cable NT7D99AA. Figure 5-59 illustrates this connection.

Refer to the “Modems” section of the “Hardware installation” chapter of the *Network Administration Center (NAC) 2 Installation Guide* (NTP 553-4011-110) for further information.

### NAC 1 end

The RJ-45 end of the NT9D9007 cable is connected to the corollary terminal concentrator at the NAC end.


Figure 5-46 shows the cabling arrangement for the NT9D9007 cable.

### Meridian MAX end


If Meridian MAX is connected to a NAC 2 system, one DB-25 end of the NT7D99AA cable is connected to the NT8D96AE multiport cable (SNN/SNN-E) or the NT1R03AA/BA cable (IPE/IPE-E) at the Meridian MAX end. Figures 5-57 and 5-59 illustrate these connections.

If Meridian MAX is connected to a NAC 1 system, the DB-25 end of the NT9D9007 cable is connected to the NT8D96AE multiport cable (SNN/SNN-E) or the NT1R03AA/BA cable (IPE/IPE-E) at the Meridian MAX end. Figures 5-58 and 5-60 illustrate these connections.


**Figure 5-57**  
Connecting the NAC 2 to a Meridian MAX node—direct connection (SNN/SNN-E)

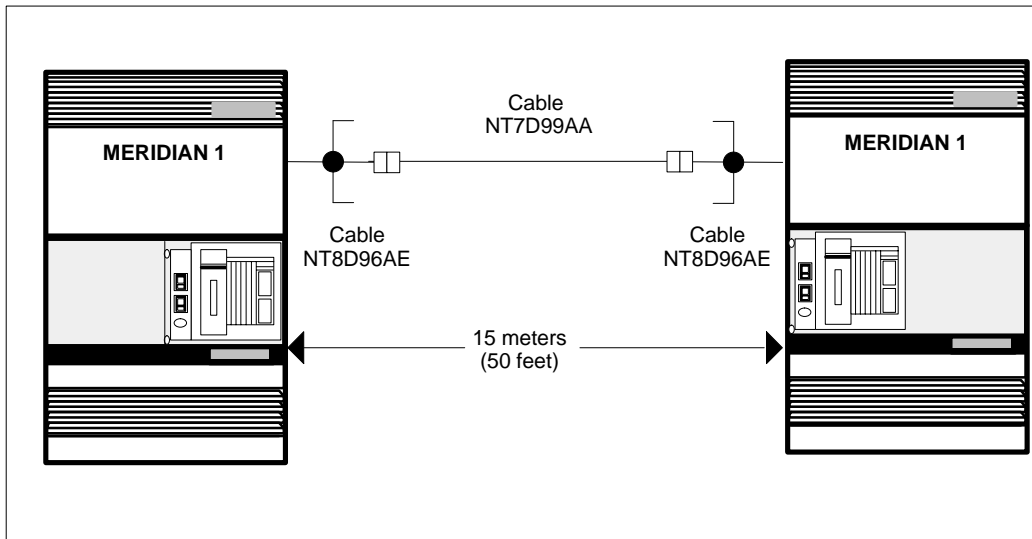


**Figure 5-58**  
Connecting the NAC 1 to a Meridian MAX node—direct connection (SNN/SNN-E)

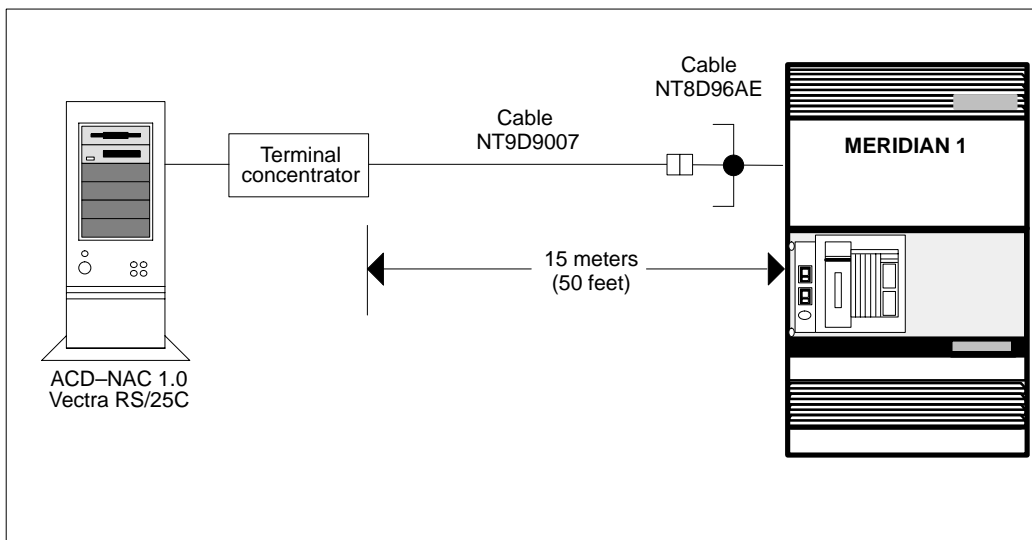

**Figure 5-59**  
Connecting the NAC 2 to a Meridian MAX node—direct connection (IPE/IPE-E)

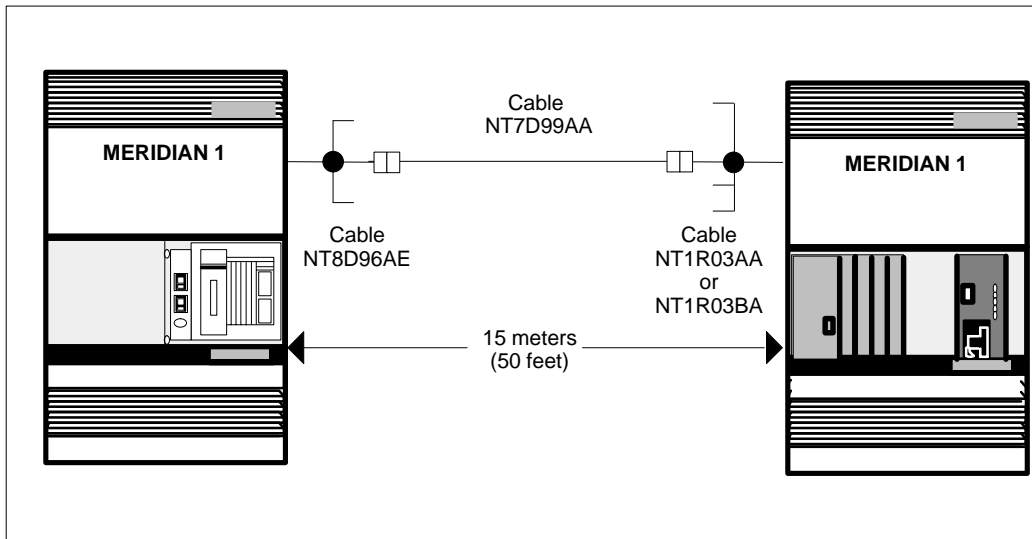

**Figure 5-60**  
Connecting the NAC 1 to a Meridian MAX node—direct connection (IPE/IPE-E)

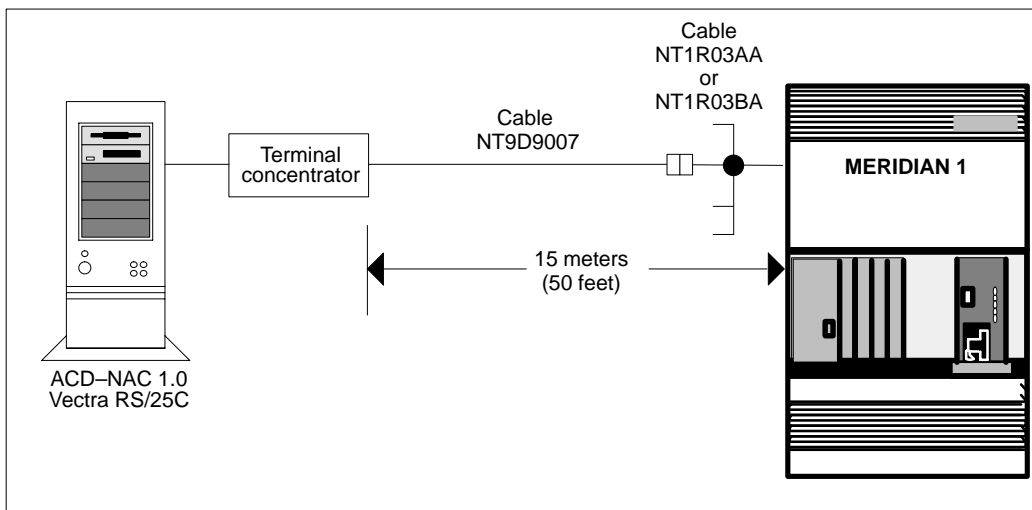

---

## Chapter 6: Workstations

---

### Overview

Workstations are used by the network supervisors to control the operation of the Meridian MAX.

Workstations available for the Meridian MAX can be separated into two categories: personal computers (PCs) and video display terminals (VDTs). Table 6-1 lists each type of workstation and the gender of its serial port.

**Note:** The maintenance console controls the installation and upgrade procedures, as well as the maintenance and administration programs. This console supports DEC VT520, VT420, VT220, HP 700/32, or 100%-compatible display terminals. If your workstation is being used as a system console, a female-to-female gender changer, A0351509, is required.

| <b>Table 6-1<br/>Workstations—serial port genders</b>                |                    |
|----------------------------------------------------------------------|--------------------|
| <b>Workstation type</b>                                              | <b>Gender</b>      |
| PC (running Reflection 4+ for DOS or the Meridian Terminal Emulator) | Male DB-25 or DB-9 |
| DEC VT520, VT420, VT220, HP700/32 (or 100%-compatible models)        | Male DB-25         |

PCs supported by the Meridian MAX are the IBM PS/2, IBM AT (and 100% compatibles) with the following:

- AT-style keyboard
- 512 kbytes of RAM



- Paradise EGA or VGA card with 256 kbytes of memory
- two floppy disk drives or one floppy disk drive and hard disk (3.5 in. or 5.25 in. disk drives can be used)
- serial communications port
- PC-DOS/MS-DOS Version 5.0 or higher
- Reflection 4+ for DOS
- Meridian Terminal Emulator (MTE) for DOS (Version 5.32) or Windows (Version 6, 7, or 8)

The VDTs supported by the Meridian MAX are the DEC VT520, VT420, VT220, and 100% compatibles.

Unpack and assemble the workstation (PC) by following the installation instructions given in the manufacturer's user manual. Perform all setup and diagnostic routines to ensure the viability of the equipment. This includes formatting the hard disk (if present) as the DOS start-up drive.

Connect the workstation to the NT8D96AE cable for the Application Module or the NT1R03AA or NT1R03BA cable for the IPE/IPE-E module. Refer to the "Cables" section of the "Hardware installation: Application Module (SNN/SNN-E)" chapter or "Hardware installation: Intelligent Peripheral Equipment module" for more information on these cables.

Install the Reflection 4+ or MTE software to the hard disk (if present). Reflection 4+ and MTE can be used on the same Meridian MAX but not on the same PC. Before you start or restart the Meridian MAX, and each time you power up the PC, you must follow the instructions described in the "Reflection 4+" section or the "Meridian Terminal Emulator" section.

To configure your workstation, refer to the "Workstation, HSL, and LML configuration" chapter, "Workstation configuration" section.

## Reflection 4+

When this document mentions Reflection 4+, it refers to Reflection 4+ for DOS.

To use a PC to run Meridian MAX 8, you must install either Reflection 4+ for DOS or MTE. Only MTE, not Reflection 4+, can be used if you are connected to a LAN. Refer to your Reflection 4+ user's manual for installation instructions.

**Note:** If you require international support, Reflection 4+ Release 4.1 or higher is recommended. Only these versions have full international support. Release 3.4 to 4.0 have partial support. Any release below 3.4 does not have international support.

### **PC without hard disk running Reflection 4+ for DOS**

If you are using a PC without a hard disk, power up the PC and insert the DOS operating system disk in Drive A. When the PC boots up, insert the Reflection 4+ operating disk in Drive B, and select Drive B. Enter **R4** to start the Reflection 4+ program.

### **PC with hard disk running Reflection 4+ for DOS**

If you are using a PC with a hard disk, power up the PC. When the PC boots up, switch to the directory which contains the Reflection 4+ program, and enter **R4** to start the program.

## Meridian Terminal Emulator

MTE allows you to access Meridian MAX supervisor sessions through your PC. The PC can be an IBM PC, a 100%-compatible AT, or a higher PC.

**Note:** MTE can be used in a DOS or Windows environment. To use it in a Windows environment, you must have MTE 6, 7, or 8. The Windows environment is described only briefly in this chapter. For details, refer to the *MTE 8 User Guide* (P0853413).

### ATTENTION

In this chapter, MTE is described only in a DOS environment. However, Windows and OS/2 offer a DOS full-screen mode or a DOS window mode. MTE can be run in these modes in OS/2 2.1 or DOS under Windows 3.1, with the limitations outlined in this chapter in the “MTE 5.32 or lower with Windows 3.1” and “MTE 5.32 or lower with OS/2 2.1” sections.

It is important to note that these modes are not supported by Nortel. The Supervisor Display Access (SDA) feature should not be used with MTE.

### MTE features

In a DOS or Windows environment, MTE has all the functionality of Reflection 4+ with the following capabilities:

- Print data to an ASCII file.
- Print to a local printer attached to your PC.
- Connect to Meridian MAX through a local area network (LAN), a modem, or a serial (RS-232) port.
- Customize the colors of the elements on your supervisor screens.

In a Windows environment, MTE can also be used to do the following:

- Copy text from your Meridian MAX supervisor screens to your Windows clipboard.
- Run Meridian MAX supervisor sessions simultaneously with the MAXcaster forecasting tool.
- Open two Meridian MAX supervisor sessions on a PC running Windows NT or Windows 95.

- Change the size of the font used in the Meridian MAX supervisor screens.
- MTE also provides multiple language support and allows frequently used key sequences to be automated using programmable buttons.

### **MTE installation requirements — DOS environment**

The minimum requirements to use MTE in a DOS environment are

- Microsoft MS-DOS (Version 5 or higher)
- MTE 5.32 or lower
- EGA or VGA card with 256 kbytes and a color monitor
- minimum 384 kbytes of RAM
- a LAN connection (if using a network)
- one serial (RS-232) communication port for connection to the Meridian MAX
- one parallel or serial port for attaching a local printer (optional)
- one 5.25" or 3.5" floppy disk drive

### **MTE installation requirements — Windows environment**

The minimum requirements to use MTE in a Windows environment are

- Meridian MAX 5.27
- MTE 6 or higher
- Windows Release 3.1 (with a 386 DX 20 MHz IBM-compatible PC), or Windows NT Release 3.51 (with a 486 DX 33 MHz IBM-compatible PC)

MTE 7 and higher also work with Windows 95 (with a 486 DX 33 MHz IBM-compatible PC).

- a VGA card with a color monitor
- 1 Mbyte of available RAM
- 2 Mbytes of available hard disk space
- modem, one serial (RS-232) communication port for connection to the Meridian MAX, or a LAN connection (if using a network). If you are using a LAN connection, you must also have WinSock 1.1 compliant network operating software.

**Note:** If you are upgrading from MTE 5.32 or lower, your FTP software must be a minimum of PC/TCP Release 3.0 (OnNet Release 1.1) installed with the Windows VxD kernel.

### **MTE direct (RS-232) connection**

MTE can connect directly to the Meridian MAX with a serial RS-232 using the COM 1 or COM 2 port on a PC. An unused COM port may be used to connect to any other serial device, such as a mouse or serial printer. MTE is required for a direct connection under Windows 3.1 or OS/2 2.1. If a mouse is using the only COM port in the OS/2 environment, the mouse must be disconnected and the mouse driver must be disabled in the OS/2 CONFIG.SYS file.

### **Installing MTE 5.32 or lower in DOS**

Follow Procedure 6-1 to install MTE 5.32 or lower in a DOS environment.

#### **Procedure 6-1**

##### **To install MTE in a DOS environment**

- 1 Insert the MTE distribution disk in the disk drive.
- 2 Enter the letter of the disk drive containing the distribution disk followed by **install**.

For example, enter a:\install

- 3 Press **{RETURN}**.

*The system displays the following message:*

Please enter the source directory [A:\] :

*The default source directory is shown in square brackets.*

- 4 Press **{RETURN}** to accept the default source directory. To indicate a source directory other than the default, enter the letter of the appropriate disk drive followed by **{RETURN}**.

For example, enter D:\

*The system displays the following message if the default (A:\) is used:*

The source directory is A:\.

Please enter the destination directory [C:\MTE] :

*The source directory appears in the first line. This may be the default directory or the new directory you assigned. The default destination directory is shown in square brackets on the second line. This is the directory where the MTE files will be transferred.*

- 5 Press **{RETURN}** to accept the default destination directory. To indicate a destination directory other than the default, enter the appropriate disk drive and directory followed by **{RETURN}**.

For example, enter D:\MTE.

*The system displays the following message:*

Please enter the number corresponding to the version of MTE that you wish to install.

1. MTE for MAX 5.25 or lower.
2. MTE for MAX 5.26 or higher.

Which version do you wish to install [1,2] ?

- 6 Enter **2** followed by **{RETURN}**.

*The system displays the following message:*

You have selected to install MTE for MAX 5.26 or higher from directory A:\ to directory C:\MTE.  
Is this correct [Y,N] ?

The source directory and destination directory appear in the message. These may be the defaults or the new directories you assigned.

- 7 If the information is not correct, go to Step 8. If the information is correct, go to Step 11.
- 8 If the information is not correct, enter **N** followed by **{RETURN}**.

*The system displays the following message:*

Do you wish to quit [Y,N] ?

- 9 If you want to exit from the MTE installation program, enter **Y** followed by **{RETURN}**. It is not necessary to read the remaining steps.

or

If you want to continue with the MTE installation program, enter **N** followed by **{RETURN}**.

*The system displays the following:*

Please enter the source directory [A:\] :

- 10 Return to Step 4.

- 11 Enter **Y** followed by **{RETURN}** if the information is correct.

*The system displays the following message:*

```
1 file(s) copied
1 file(s) copied
MTE for MAX 5.26 or higher is now installed in C:\MTE.
```

The MTE program is installed.

## Starting and exiting MTE in DOS

Follow Procedure 6-2 to start MTE after it has been installed.

### Procedure 6-2

#### To start MTE

- 1 Display the DOS prompt.  
In Windows and OS/2, this requires going to the DOS full screen. This permits the graphical information to be properly displayed.
- 2 Change the DOS directory to the one in which you installed the MTE software.  
For example: CD C:\MTE
- 3 Enter **MTE** followed by **{RETURN}**.

Follow Procedure 6-3 to exit from MTE. This procedure is identical regardless of the operating environment being used.

### Procedure 6-3

#### To exit from MTE

- 1 Simultaneously press **{CONTROL}{ALT}{X}**.  
This key combination returns control to the DOS prompt.

## MTE 5.32 or lower with Windows 3.1

To use MTE in a Windows environment, you should have MTE 6 or higher. With the limitations outlined in this section, however, you can also use MTE 5.32 or lower to access Meridian MAX under Windows 3.1 in a DOS full-screen mode or a DOS window mode.

**Note:** Although Windows 3.1 supports concurrent execution of more than one application, it is recommended that no other application be running while MTE is operating. MTE may crash if other applications are running at the same time. Running MTE under Windows can also cause protection violation errors and workstation lockups.

### PIF file settings

To run MTE under DOS in Windows, it is recommended that you create PIF files using the Microsoft Windows PIF Editor. Figure 6-1 and Figure 6-2 provide the recommended settings for the general and advanced PIF files. For more information on the PIF files, refer to the Microsoft Windows user guides.

**Figure 6-1**  
MTE 5.32 set-up screen—LAN connection – general

The screenshot shows the 'MTE 5.32 set-up screen—LAN connection – general' window. It features a menu bar with 'File', 'Mode', and 'Help'. The main area contains the following settings:

- Program Filename:** C:\MTE\MTE.EXE
- Window Title:** Meridian Terminal Emulator
- Optional Parameters:** (empty field)
- Start-up Directory:** C:\MTE
- Video Memory:** Radio buttons for Text, Low Graphics, and High Graphics (selected).
- Memory Requirements:** KB Required (512) and KB Desired (640).
- EMS Memory:** KB Required (0) and KB Limit (1024).
- XMS Memory:** KB Required (0) and KB Limit (1024).
- Display Usage:** Radio buttons for Full Screen (selected) and Windowed.
- Execution:** Checkboxes for Background (checked), Exclusive, and Close Window on Exit (checked).
- Advanced...** button.

At the bottom, it says 'Press F1 for Help on Optional Parameters.'



**Figure 6-2**  
**MTE 5.32 set-up screen—LAN connection – advanced**

**Multitasking Options**  
 Background Priority:  Foreground Priority:   
☐ Detect Idle Time

**Memory Options**  
☐ EMS Memory Locked ☐ XMS Memory Locked  
☐ Uses High Memory Area ☒ Lock Application Memory

**Display Options**  
 Monitor Ports: ☐ Text ☐ Low Graphics ☐ High Graphics  
☒ Emulate Text Mode ☒ Retain Video Memory

**Other Options**  
☐ Allow Fast Paste ☐ Allow Close When Active  
 Reserve Shortcut Keys: ☐ Alt+Tab ☐ Alt+Esc ☐ Ctrl+Esc  
☐ PrtSc ☐ Alt+PrtSc ☐ Alt+Space  
☐ Alt+Enter  
 Application Shortcut Key:

Press F1 for Help on Priority.

### Minimum requirements

The minimum requirements for running MTE under DOS in Windows using a direct (RS-232) connection are

- 80386 PC
- 512 kbytes of free memory (for MTE)
- one serial (RS-232) port
- Windows 3.1 and a color VGA display

The minimum requirements for running MTE under DOS with Windows using a LAN connection are

- 80386 PC
- 512 kbytes of free memory (for MTE)
- FTP Software's PC/TCP Network Software for DOS and Windows version 2.1 or higher with a PC/TCP supported LAN card
- Windows 3.1 and a color VGA display

**Display**

Graphics in MTE, such as the initial graphical display and the graphical report preview, are quicker to view from a DOS full screen than a DOS window mode. The DOS window mode also may not be large enough to view the graphic displays at times.

Colors of graphical reports are different when previewing in a DOS window mode than in a DOS full screen.

**Limitations on multiple sessions**

It is not recommended that multiple sessions of MTE be run under Windows. However, the following limitations should be remembered if you choose to run multiple sessions:

- Only one MTE session can be used if local printing is required. Local printing does not work when there are multiple MTE sessions running on the same PC, which are connected to the same Meridian MAX through a LAN connection.
- When multiple MTE sessions are started from the same MTE directory, they share the same MTE.CFG file. Any changes made in the MTE set-up screen are not saved unless the [Save] key is pressed. The changes saved in one MTE session may overwrite the changes made by another concurrent MTE session. Changes to the MTE.CFG file do not affect any other active MTE sessions until they are terminated and restarted.
- When multiple sessions are used, multiple copies of MTE.EXE and MTE.CFG should be stored in different directories because there may be different MTE.CFG settings.
- When multiple sessions are used, the same MTE options, font, and programmable button definitions are shared between the sessions. If one of these components is changed in one MTE session, the changes apply to all other MTE sessions running on the same PC.

**MTE 5.32 or lower with OS/2 2.1**

MTE 5.32 or lower can be used, with some limitations, under OS/2 2.1 in a DOS window mode or a DOS full-screen mode.

**Minimum requirements**

The minimum requirements for running MTE with OS/2 using a direct (RS-232) connection are

- 80386 PC

- 512 kbytes of free memory (for MTE)
- one serial (RS-232) port
- OS/2 2.1
- color VGA display

The minimum requirements for running MTE with OS/2 using a LAN connection are

- 80386 PC
- 512 kbytes of free memory (for MTE)
- FTP Software's PC/TCP Network Software for OS/2 version 1.3 or higher with a PC/TCP-supported LAN card
- OS/2 2.1
- color VGA display

### **Display**

Colors of graphical reports are different when previewing in a DOS window mode than in a DOS full screen.

### **Limitations on multiple sessions**

It is not recommended that multiple sessions of MTE be run under OS/2. However, the following limitations should be remembered if you choose to run multiple sessions:

- The maximum number of MTE sessions are limited by available system resources in OS/2. If local printing is required, only one MTE session should be connected to the same Meridian MAX.
- When multiple MTE sessions are started from the same MTE directory, they share the same MTE.CFG file. Any changes made in the MTE set-up screen are not saved unless the [Save] key is pressed. The changes saved in one MTE session may overwrite the changes made by another concurrent MTE session. Changes to the MTE.CFG file do not affect any other active MTE sessions until they are terminated and restarted.
- When multiple sessions are used, multiple copies of MTE.EXE and MTE.CFG should be stored in different directories because there may be different MTE.CFG settings.

- When multiple sessions are used, the same MTE options, font, and programmable button definitions are shared between the sessions. If one of these components is changed in one MTE session, the changes apply to all other MTE sessions running on the same PC.

## MTE LAN connection

Meridian MAX 8 provides Ethernet and Ethernet 2 frame connectivity for supervisor workstations through the industry-standard TCP/IP protocol. Only FTP Software's PC/TCP software is supported.

### Customer-supplied hardware

On the Meridian MAX end of the LAN connection, an Ethernet IEEE 802.3 LAN connection is provided by using a 15-pin AUI connector from the I/O panel. A customer-supplied transceiver is then used to connect the AUI connector to the LAN.

Meridian MAX supports any of the following Ethernet backbones: 10Base-T, 10Base2, 10Base5, and 10Base-FL (fiber optics).

Table 6-2 lists the CISPR 22B compliant Ethernet transceivers that were tested and verified by Nortel. However, any transceiver that complies with the CISPR 22B standard, or any other country-specific requirements, is acceptable.

| <b>Table 6-2<br/>Ethernet transceivers</b> |                        |                                                   |
|--------------------------------------------|------------------------|---------------------------------------------------|
| <b>Transceiver model</b>                   | <b>LAN Environment</b> | <b>Mean Time Between Failures (MTBF) in hours</b> |
| BoseLAN BL-50 Revision 3                   | 10Base-T               | 250 000                                           |
| BoseLAN BL-55 Revision 1                   | 10Base5                | 250 000                                           |
| BoseLAN BL-70 Revision 2                   | 10Base-FL              | 250 000                                           |
| BoseLAN BL-80 Revision 2                   | 10Base2                | 250 000                                           |

### Required hardware for LAN connectivity

To have LAN connectivity, the following hardware resources must be available on each PC:

- IBM- or 100%-compatible PC AT or higher

- 6 Mbytes of free disk space for FTP Software's PC/TCP kernel or software, and for the Meridian Terminal Emulator (MTE) software, if MTE is to be installed on the hard disk
- 1 Mbyte of total memory (RAM) with minimum 384 kbytes of free memory (RAM)
- ODI-, NDIS-, or packet driver-compatible Ethernet LAN adapter card
- EGA or VGA card with 256 kbytes and color monitor

**Required software for LAN connectivity**

LAN connectivity is only supported for PC-based supervisor workstations running MTE. LAN supervisor workstations are available on Meridian MAX 5, 6, 7, and 8 SNN/SNN-E and IPE/IPE-E systems.

Depending on your hardware configuration, an SNN/SNN-E system can have a maximum of 60 LAN-based supervisor workstations, and an IPE/IPE-E system can have up to 20. The total number of configured direct connections plus the number of active LAN sessions cannot exceed 60 (SNN/SNN-E) or 20 (IPE/IPE-E).

To run on a LAN, MTE 5.32 or lower requires one of the FTP Software's PC/TCP network products. The following list identifies the minimum versions of FTP Software's PC/TCP software products which can be used with MTE 5.32 or lower:

- FTP Software's PC/TCP network kernel for DOS, versions 2.05, 2.10, 2.20, 2.30, or 3.0 (OnNet 1.1)
- FTP Software's PC/TCP Network Software for DOS, versions 2.05, 2.10, 2.20, 2.30, or 3.0 (OnNet 1.1)
- FTP Software's PC/TCP Network Software for DOS and Windows, versions 2.10, 2.20, 2.30, or 3.0 (OnNet 1.1)
- FTP Software's PC/TCP Network Software for OS/2 version 1.3

The *FTP Software's PC/TCP User's Guide* references used in this chapter are based on Version 2.2.

**ATTENTION**

Use FTP Software's PC/TCP network kernel or PC/TCP network software only. If your system has LAN connectivity, you must use either FTP Software's PC/TCP network kernel or PC/TCP network software for DOS, versions 2.05, 2.10, 2.20, 2.30, or 3.0 (OnNet 1.1).

PC/TCP kernel is the minimum requirement for Meridian MAX LAN connectivity. The PC/TCP and the network interface cards must be purchased separately. If you wish to take advantage of other PC/TCP applications, the complete PC/TCP networking software is required. Other LAN O/S versions of TCP/IP also do not work with MTE.

FTP Software's PC/TCP network kernel or network software provide the LAN interface for the supervisor's PC and support multiple types of LAN cards. Meridian MAX 8 provides Ethernet and Ethernet 2 frame connectivity for supervisor workstations through the industry-standard TCP/IP protocol. LAN connectivity is also supported in a Token Ring environment through use of a protocol converter. The Meridian MAX system has no specific hardware dependency on the type of protocol converter used.

**Guidelines for installing PC/TCP**

The following guidelines should be observed when installing PC/TCP OnNet 1.1 for DOS/Windows and the PC/TCP Network Software 3.0 for DOS/Windows:

- The PC/TCP software must be installed through DOS (TSR kernel) and not Windows (VxD kernel).
- The PC/TCP software offers applications such as FTP, network printing, connection over modems, exchanging messages, and so on. These applications do not need to be installed to operate MTE.
- When installing the PC/TCP, you are prompted to enter a selection regarding network connectivity. When this option appears, you must select the DOS and Windows (TSR kernel) option to allow the software to work properly with MTE.

### Configuring a PC in a LAN environment

Perform Procedure 6-4 when configuring each PC connected to the Meridian MAX in a LAN environment.

#### Procedure 6-4

##### To set up a PC for using MTE 5.32 or lower in a LAN environment

- 1 Install the PC network interface card in the PC according to the network interface card manual.
- 2 Install any software drivers specifically for the PC network interface card according to the network interface card manual.
- 3 Connect the PC to the network. Contact your LAN administrator for more details.
- 4 Run diagnostics on the PC network interface card as outlined in the network interface card user's manual. If the diagnostics fail, try different card settings (IRQ, DMA, I/O base address), or replace the card. For details, refer to the user guide for the PC network interface card.
- 5 Determine the PC's unique IP address on the LAN. Contact the LAN administrator for the unique address for your PC.
- 6 Install FTP Software's PC/TCP software onto the PC according to FTP Software's *PC/TCP Installation Guide*.
- 7 Use the ping program included with FTP Software's PC/TCP software, to determine whether you can make a connection to the Meridian MAX system. For example, if the MAX IP address were 47.235.11.15, you would enter: ping 47.235.11.15.
- 8 If the ping fails, refer to *Meridian MAX 8 Maintenance and Diagnostics* (NTP 553-4001-811), "Fault isolation checklist" chapter.
- 9 Install the MTE software.
- 10 Start the MTE software, and press both left and right **{SHIFT}** keys simultaneously to enter the set-up screen.
  - a. Choose LAN for the value in the *CONNECTION TYPE* field.
  - b. Enter the Meridian MAX Hostname or IP address in the *HOST NAME OR IP ADDRESS* field.
  - c. Save these settings. For more information, refer to the "Starting and exiting MTE" section.
- 11 Exit the set-up screen. MTE connects to the Meridian MAX, and the login screen is displayed.

**Meridian MAX setup**

Perform Procedure 6-5 to configure Meridian MAX in a LAN environment.

**Procedure 6-5****To configure Meridian MAX in a LAN environment**

- 1 Ensure that your system has the LAN connectivity option enabled. For more information, refer to *Meridian MAX 8 Maintenance and Diagnostics* (NTP 553-4001-811), "Maintenance and administration programs: system shutdown" chapter, "System parameters" subsection.
- 2 Set the Meridian MAX IP address and Hostname. For more information, refer to *Meridian MAX 8 Maintenance and Diagnostics* (NTP 553-4001-811), "Maintenance and administration programs: system shutdown" chapter, "System parameters" subsection.
- 3 Physically connect the Meridian MAX to the LAN.

**Packet buffers**

Before you can use MTE on your LAN, you must ensure that the hardware (the PC's network interface card) and FTP Software's PC/TCP network software are installed and operating correctly.

If you are using MTE on the LAN and experience poor response times, or if you are losing your connection to the Meridian MAX, you may need to increase the number of packet buffers that are set aside for the PC/TCP kernel.

The PC/TCP kernel is a DOS Terminate and Stay Resident (TSR) program which manages your PC's access to the LAN. Packet buffers are storage areas that the PC/TCP kernel uses for sending or receiving information across the LAN.

FTP Software's *PC/TCP User's Guide* outlines the steps required to increase the number of packet buffers. The recommended number of packet buffers for Meridian MAX is 10. This information is outlined in the "Tuning PC/TCP" section of FTP Software's *PC/TCP User's Guide*.

The following steps provide an overview of how to set the number of packet buffers. These steps assume that the location of the FTP Software's PC/TCP software is included in your DOS path.



To increase the number of packet buffers, perform Procedure 6-6.

**Procedure 6-6**  
**To increase the number of packet buffers**

- 1 Unload the PC/TCP kernel.  
Enter **inet unload {RETURN}**.
- 2 Restart the kernel.  
Enter **<kernel> -p 10 {RETURN}**.

For example, if your PC/TCP kernel is "ethdrv," enter the following at the DOS prompt: **ethdrv -p 10**.

- 3 Change to the DOS directory where you installed the MTE software.

For example  
CD C:\MERIDIAN

- 4 Start MTE.  
Enter **MTE {RETURN}**.
- 5 If you still experience problems, repeat steps 1 to 4, and increase the number of packets by one each time until the performance improves.

## **Common LAN functionality**

### **Meridian MAX connectivity**

A 15-pin AUI connector is provided to connect the Meridian MAX to the LAN. A customer provided-transceiver is required for connecting to 10Base-5, 10Base-T, or 10Base-2 cabling.

Connecting the Meridian MAX to the LAN is done through an Ethernet or Ethernet 2 frame connection between your local LAN Ethernet port and

- on the SNN hardware platform, the I/O panel's Ethernet connection on the NT7D47EA cable
- on the IPE hardware platform, the LAN connection on the NT1R03AA four-port I/O cable

### **Token Ring environment**

For Token Ring environments, the following items are required:

- Token Ring Adapter LAN Card with an ASI, NDIS, ODI, or packet driver
- Protocol converter

**IP Addresses**

An IP address is a unique identifier for a device connected on the LAN. The Meridian MAX system requires a unique IP address, as does each PC running MTE. In order to use MTE on a LAN, you need to obtain the IP address for your PC and the Meridian MAX system. This can be obtained from your network administrator.

The IP address is in the format *a.b.c.d*, where *a* falls within the range of 0 to 223 (excluding 127), and *b*, *c*, and *d* fall within the range of 0 to 254.

FTP Software's *PC/TCP User's Guide*, "Using IP Addresses" section, explains the numbering scheme for IP addresses. You must adhere to the IP addressing scheme.

Once Meridian MAX has a configured IP address, the address can be entered in the *Host Name or IP Address* field on the MTE set-up screen.

**Subnet mask**

The subnet mask is a 32-bit number used by the network software on a local machine to determine which bits belong to the network or to the host parts of the internet address. This is either the system default or a value assigned by your network administrator. By modifying this number, your network efficiency can be improved. If the system IP address is changed, the default subnet mask changes as well.

The subnet mask is of the form *a.b.c.d* where *a*, *b*, *c*, and *d* are in the range of 0 to 255.

**Default router/gateway address**

In a networked environment, routers (or gateways) provide connectivity between two networks. The default router/gateway address is used to specify the router or gateway used with Meridian MAX. This is either the system default or an address assigned by your network administrator.

The default router/gateway address is of the format *a.b.c.d*, where *a* is in the range of 0 to 223, and *b*, *c*, and *d* are in the range of 0 to 254.

**Hostnames**

A Hostname is the name assigned to the Meridian MAX system by the LAN administrator, that provides an alternate to the IP Address. For more information, refer to the FTP Software *PC/TCP User's Guide*, "Using Hostnames" section.

If you are using hostnames on PCs running FTP Software's PC/TCP software, you need to add the Meridian MAX Hostname to the PC/TCP configuration. Refer to the FTP Software's *PC/TCP User's Guide*, "Creating A Local Hostname Table" section.

Once Meridian MAX has a configured Hostname, the Hostname can be entered in the *Host Name or IP Address* field on the MTE set-up screen.

#### **Network interface cards**

FTP Software's PC/TCP software supports various Ethernet and Token Ring LAN adapter cards. Any network interface cards that are compliant with Industry Standard Open Driver Specifications (Packet Driver, NDIS, ODI, and ASI) should work. Ensure that your network interface cards are supported or qualified by your network operating system.

Contact FTP Software to verify the type of adapter cards and drivers that are required for your particular LAN environment.

Consult your LAN administrator to determine what equipment is available in your network.

## Keyboard language configuration on PCs

If you are using a language-specific keyboard, you must inform MS-DOS as to which keyboard you are using. The following example applies to both Reflection 4+ and MTE.

### **AUTOEXEC.BAT changes**

The following example shows the changes to the AUTOEXEC.BAT file in order to support a language-specific keyboard.

The following example assumes a German keyboard is being used as specified by the GR option to the KEYB command:

```
C:\DOS\KEYB GR
```

Refer to your MS-DOS user guide for the language code for your keyboard.

## Code Page 850 configuration

To provide international support (ISO Latin 1) for MTE, some minor modifications are required to your PC configuration. These changes affect the MS-DOS files named CONFIG.SYS and AUTOEXEC.BAT. In order to make these changes, you require a text editor such as the MS-DOS editor.

MS-DOS comes with different character sets called code pages. Code pages are similar to the character sets used in the DEC terminals.

Each code page consists of 256 characters and is assigned a number that corresponds to a particular country or language. MTE requires your PC to be configured with Code Page 850 which is a multilingual character set.

If you are using a language-specific keyboard, you need to inform MS-DOS which keyboard you are using. Refer to the “Keyboard language configuration on PCs” section for instructions.

The example changes shown below assume that MS-DOS has been installed in the C:\DOS sub-directory and that the files DISPLAY.SYS and COUNTRY.SYS are located in the C:\DOS subdirectory.

### **CONFIG.SYS changes**

The following example shows the changes to the CONFIG.SYS file needed to support the DOS Code Page 850 on a PC.

In this example, the PC is running the code for Germany (country code 049). For your specific country code, refer to your MS-DOS user guide.

```
DEVICEHIGH = C:\DOS\DISPLAY.SYS CON:=(ega,850)
COUNTRY = 049,850,C:\DOS\COUNTRY.SYS
```

### **AUTOEXEC.BAT changes**

The following example shows the changes to the AUTOEXEC.BAT file in order to support the DOS Code Page 850 on a PC.

```
C:\DOS\MODE CON CP PREPARE=((850) C:\DOS\EGA.CPI)
C:\DOS\NLSFUNC C:\DOS\COUNTRY.SYS
CHCP 850
```

## **Video display terminal workstations**

Five types of video display terminal (VDT) workstations are supported for Meridian MAX:

- DEC VT520
- DEC VT420 (North American model)
- DEC VT420 (Worldwide model)
- DEC VT220
- HP 700/32

**Note:** To differentiate between the North American and Worldwide models of the VT420, view your workstation's set-up directory. If there is a keyboard option, you are using the worldwide model. If there is no keyboard option, you are using the North American model.

Other models may be used but they must be 100% compatible with one of the models listed. Setups may differ slightly depending on the version of the workstation.

**Note:** Printer setups are not supported for the DEC and HP VDTs. Local printers are only supported on PCs running the Meridian Terminal Emulator (MTE).

To configure your VDT, refer to the "Workstation, HSL, and LML configuration" chapter, "Workstation configuration" section.

## DEC VT520 or 100% compatible

Follow Procedure 6-7 to set up the DEC VT520 workstation.

### Procedure 6-7

#### To set up a VT520 or 100%-compatible terminal

- 1 Power on the terminal.
- 2 Enter set-up mode by pressing the **{SET-UP}** key located on the top row of function keys. If no key is marked **{SET-UP}**, press the third key from the left on the top row.

*The main set-up window is displayed (see Figure 6-3).*

**Figure 6-3**

**VT520 terminal main set-up window**

|                                  |   |
|----------------------------------|---|
| <b>Actions</b>                   | ▷ |
| Session                          | ▷ |
| Display                          | ▷ |
| Terminal type                    | ▷ |
| (ASCII emulation)                | ▷ |
| Keyboard                         | ▷ |
| Communication                    | ▷ |
| Modem                            | ▷ |
| Printer                          | ▷ |
| Tabs . . .                       | ▷ |
| Set-Up language                  | ▷ |
| <hr/>                            |   |
| <input type="checkbox"/> On-line |   |
| Save settings                    |   |
| Restore settings                 |   |
| Exit Set-Up                      |   |

- 3 Use the up and down arrow keys to highlight the set-up feature which is to be changed (for example, Actions).
- 4 When the set-up feature is highlighted, use Table 6-3 to select the appropriate settings.

**Table 6-3**  
**Navigating the set-up windows**

| If                                                    | then                                                                                                                                                                                |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| a solid triangle appears beside the set-up feature    | use the right arrow key to automatically display the pop-up window of associated settings. See Figure 6-4 for an example.                                                           |
| a box appears beside the set-up feature               | press {RETURN} to toggle the setting for the selected feature on or off. A diagonal line appears in the box when the setting is on.                                                 |
| three dots ( . . . ) appear beside the set-up feature | press {RETURN} to display the associated pop-up window. When all fields have been completed, move the cursor to [OK] or [Cancel], and press {RETURN} again to activate your choice. |

**Figure 6-4**  
**VT520 terminal - sample feature pop-up window**

|                                                                                                                                                                                                                                                                       |                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Actions</b><br>Session<br>Display<br>Terminal type<br>(ASCII emulation)<br>Keyboard<br>Communication<br>Modem<br>Printer<br>Tabs . . .<br>Set-Up language<br><hr/> <input checked="" type="checkbox"/> On-line<br>Save settings<br>Restore settings<br>Exit Set-Up | Clear display<br>Clear communications<br>Reset this session<br>Restore factory defaults<br><hr/> Clock<br>Calculator<br>Show character sets<br>Banner message . . . |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Note:** Options shown in parentheses are dimmed on the screen.

- 5 Configure the terminal to match mandatory settings in Table 6-4. If no setting is specified, select the parameter which best suits your environment.

- 6 Press {**SET-UP**} again to exit set-up mode.

**Table 6-4**  
**VT520 set-up values**

| Set-up feature | First level              | Mandatory setting or description                        |
|----------------|--------------------------|---------------------------------------------------------|
| Actions        | Clear display            | Press { <b>RETURN</b> } to clear the display.           |
|                | Clear communications     | Press { <b>RETURN</b> } to clear communications.        |
|                | Reset this session       | Press { <b>RETURN</b> } to reset this session.          |
|                | Restore factory defaults | Press { <b>RETURN</b> } to restore the factory default. |
|                | Clock                    | Press { <b>RETURN</b> } to set the VT520 clock.         |
|                | Calculator               | Press { <b>RETURN</b> } to use the VT520 calculator.    |
|                | Show character sets      | Press { <b>RETURN</b> } to display character sets.      |
|                | Banner message . . .     | Press { <b>RETURN</b> } to set the banner message.      |
| Session        | Select session           | Session 1                                               |
|                | Session name . . .       | Optional user text                                      |
|                | Pages per session . . .  | 04 pages maximum                                        |
|                | Soft char sets/session   | Two each S1 and S2                                      |
|                | Save settings for all    |                                                         |
|                | Restore settings for all |                                                         |
|                | Copy settings from       |                                                         |
|                | Update session           | When available                                          |
|                |                          |                                                         |
| Display        | Lines per screen         | 24, 25, or 26                                           |
|                | Lines per page           | 24 lines X 04 pages                                     |
|                | Review previous lines    | OFF                                                     |
|                | Columns per page         | 80 columns, Clear on change                             |
|                | Status display           | Local status                                            |
| —continued—    |                          |                                                         |



**Table 6-4 (continued)**  
**VT520 set-up values**

| Set-up feature      | First level             | Mandatory setting or description           |
|---------------------|-------------------------|--------------------------------------------|
| Display (continued) | Scrolling mode          | Jump                                       |
|                     | Screen background       | Dark                                       |
|                     | Cursor display          | Block, Blink                               |
|                     | Cursor coupling         | Set to "Vertical" and "Page"               |
|                     | Cursor direction        | Left to right                              |
|                     | Copy direction          | Left to right                              |
|                     | Zero                    | Select style of zero you want to display.  |
|                     | Auto Wrap               |                                            |
|                     | New line mode           |                                            |
|                     | Lock user preferences   |                                            |
|                     | Show control characters |                                            |
|                     | CRT saver               | 15 minutes                                 |
|                     | Energy saver            | 15 minutes                                 |
|                     | Overscan                |                                            |
|                     | Framed windows          |                                            |
|                     | Screen alignment        |                                            |
| Terminal type       | Emulation mode          | VT520 VT420 VT320 VT220                    |
|                     | Terminal ID to host     | VT520                                      |
|                     | VT default char set     | ISO Latin-1                                |
|                     | PC Term character set   | PC International (437)                     |
|                     | (7-bit NCRS characters) |                                            |
|                     | Transmit 7-bit control  |                                            |
| (ASCII emulation)   |                         |                                            |
| Keyboard            | VT Keyboard language    | Select appropriate language—North American |
| —continued—         |                         |                                            |

**Table 6-4 (continued)**  
**VT520 set-up values**

| Set-up feature          | First level             | Mandatory setting or description                                                                                                                        |
|-------------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard<br>(continued) | (PC Keyboard language)  |                                                                                                                                                         |
|                         | Define key . . .        | Use Define Key Editor screen to set the following:<br>F1=Hold Ignore Alt<br>F2=Print ,< and .> Keys<br>F3=Setup <> Key<br>F4=Session '~ Key<br>F5=Break |
|                         | Save key definitions    |                                                                                                                                                         |
|                         | Recall key definitions  |                                                                                                                                                         |
|                         | Lock key definitions    |                                                                                                                                                         |
|                         | Caps lock function      | Caps lock                                                                                                                                               |
|                         | Keyclick volume         | High                                                                                                                                                    |
|                         | Warning bell volume     | High                                                                                                                                                    |
|                         | Margin bell volume      | OFF                                                                                                                                                     |
|                         | Keyboard encoding       | Character (ASCII)                                                                                                                                       |
|                         | Auto Repeat             | Fast (30/sec)                                                                                                                                           |
|                         | Data processing keys    |                                                                                                                                                         |
|                         | Application cursor keys |                                                                                                                                                         |
|                         | Application keypad mode |                                                                                                                                                         |
|                         | (Map PC keyboard to VT) |                                                                                                                                                         |
|                         | Ignore missing keyboard |                                                                                                                                                         |
| Communication           | Port select . . .       | See Figure 6-5.                                                                                                                                         |
|                         | Word size               | 8 bits                                                                                                                                                  |
|                         | Parity                  | None                                                                                                                                                    |
|                         | Stop bits               | 1 bit                                                                                                                                                   |
|                         | Transmit speed          | 9600 baud                                                                                                                                               |
|                         | Receive speed           | Transmit speed                                                                                                                                          |
| —continued—             |                         |                                                                                                                                                         |

**Table 6-4 (continued)**  
**VT520 set-up values**

| Set-up feature               | First level              | Mandatory setting or description |
|------------------------------|--------------------------|----------------------------------|
| Communication<br>(continued) | Transmit flow control    | XON/XOFF                         |
|                              | Receive flow control     | XON/XOFF or XPC                  |
|                              | Flow control threshold   | Low (64)                         |
|                              | Transmit rate limit      | 150 cps                          |
|                              | Fkey rate limit          | 150 cps                          |
|                              | Ignore Null character    | ON                               |
|                              | Local echo               |                                  |
|                              | Half duplex              |                                  |
|                              | Auto answerback          | OFF                              |
|                              | Answerback message . . . | Enter the answerback message.    |
|                              | Answerback concealed     |                                  |
|                              |                          |                                  |
| Modem                        | Enable modem control     |                                  |
|                              | (Disconnect delay)       |                                  |
|                              | (Modem high speed)       |                                  |
|                              | (Modem low speed)        |                                  |
| Printer                      | Port select . . .        | See Figure 6-5.                  |
|                              | Print mode               | Normal                           |
|                              | Printer type             | DEC ANSI                         |
|                              | DEC/ISO char sets        | National only                    |
|                              | (PC character sets)      |                                  |
|                              | Print extent             | Full page                        |
|                              | Print terminator         | None                             |
|                              | Serial print speed       | 4800 baud                        |
|                              | 2-way communication      | OFF                              |
| —continued—                  |                          |                                  |

**Table 6-4 (continued)**  
**VT520 set-up values**

| Set-up feature      | First level           | Mandatory setting or description                  |
|---------------------|-----------------------|---------------------------------------------------|
| Printer (continued) | Transmit flow control | XON/XOFF                                          |
|                     | Receive flow control  | XON/XOFF                                          |
|                     | Word size             | 8 bits                                            |
|                     | Parity                | None                                              |
|                     | Stop bits             | 1 bit                                             |
| Tabs                | Tabs Set-Up Screen    |                                                   |
| Set-Up language     |                       | User dependent                                    |
| On-line             |                       | ON                                                |
| Save settings       |                       | When settings are complete, push <Enter> to save. |
| Restore settings    |                       |                                                   |
| Exit Set-Up         |                       |                                                   |
| —end—               |                       |                                                   |

**Figure 6-5**  
**Port selection for VT520**

| S1                                    | S2                                    | S3                                    | S4                                    |
|---------------------------------------|---------------------------------------|---------------------------------------|---------------------------------------|
| <b>Comm</b>                           | <b>Comm</b>                           | <b>Comm</b>                           | <b>Comm</b>                           |
| <input type="radio"/>                 | <input type="radio"/>                 | <input checked="" type="radio"/> Off  | <input checked="" type="radio"/> Off  |
| <input checked="" type="radio"/> com1 | <input type="radio"/>                 |                                       |                                       |
| <input type="radio"/>                 | <input checked="" type="radio"/> com2 |                                       |                                       |
| <input type="radio"/>                 | <input type="radio"/>                 |                                       |                                       |
| <b>Print</b>                          | <b>Print</b>                          | <b>Print</b>                          | <b>Print</b>                          |
| <input checked="" type="radio"/> none | <input checked="" type="radio"/> none | <input checked="" type="radio"/> none | <input checked="" type="radio"/> none |
| <input type="radio"/>                 | <input type="radio"/>                 | <input type="radio"/>                 | <input type="radio"/>                 |
| <input type="radio"/>                 | <input type="radio"/>                 | <input type="radio"/>                 | <input type="radio"/>                 |

### **DEC VT420 or 100% compatible (North American model)**

Follow Procedure 6-8 to set up the DEC VT420 (North American model) workstation.

#### **Procedure 6-8**

##### **To set up a VT420 or 100%-compatible terminal (North American model)**

- 1 Refer to the vendor's manual for installation instructions.
- 2 The video display terminal (VDT) is connected to the SNN's VME multiport cable or the IPE's four-port I/O cable using an NT8D96AE (SNN) or NT1R03Ex (IPE) (male to female) cable. Refer to the appropriate port assignment table for valid port assignments.
- 3 Power on the terminal and press the **{SET-UP}** key.  
The VDT manual contains instructions on setting up the workstation's options.
- 4 Follow the settings in Figure 6-6 to configure a DEC VT420 North American model.  
*Each directory shown in these figures has its own screen and displays the correct setting for each field. If any of the fields shown differ from those on your screen, cursor to the field and press **{RETURN}** until the correct information is displayed.*
- 5 To move to the next set-up screen, cursor to *To Next Set-up* and press **{RETURN}**.
- 6 Move the cursor to *To Directory* and press **{RETURN}**.
- 7 Move the cursor to *Save* and press **{RETURN}**.
- 8 To exit after saving the settings, press the **{SET-UP}** key.

**Figure 6-6**  
**DEC VT420 workstation (North American model) Version 1.3 or greater set-up**

|                              |                        |                            |                    |            |          |     |  |  |  |
|------------------------------|------------------------|----------------------------|--------------------|------------|----------|-----|--|--|--|
| <b>Set-Up Directory</b>      |                        |                            |                    |            |          |     |  |  |  |
| Global                       | Display                | General                    | Comm               | Printer    | Keyboard | Tab |  |  |  |
| Clear Display                | Clear Comm             | Reset Session              | Recall             | Save       |          |     |  |  |  |
| Default                      | Screen Align           |                            |                    |            |          |     |  |  |  |
| Enable Sessions              | Disable Sessions       | Exit                       |                    |            |          |     |  |  |  |
| <b>Global Directory</b>      |                        |                            |                    |            |          |     |  |  |  |
| To Next Set-Up               | To Directory           |                            |                    |            |          |     |  |  |  |
| On Line                      | S1 = Comm1             | CRT Saver                  | Printer Shared     |            |          |     |  |  |  |
| 70 Hz                        |                        |                            |                    |            |          |     |  |  |  |
| <b>Display Set-Up</b>        |                        |                            |                    |            |          |     |  |  |  |
| To Next Set-Up               | To Directory           | 80 Columns                 | Interpret Controls |            |          |     |  |  |  |
| No Auto Wrap                 | Jump Scroll            | Dark Screen                |                    |            |          |     |  |  |  |
| No Cursor                    | Block Cursor Style     | No Status Display          |                    |            |          |     |  |  |  |
| Cursor Blink                 | 6X24 pages             | 24 Lines/Screen            |                    |            |          |     |  |  |  |
| Vertical Coupling            | Page Coupling          | No Auto Resize Screen      |                    |            |          |     |  |  |  |
| <b>General Set-Up</b>        |                        |                            |                    |            |          |     |  |  |  |
| To Next Set-Up               | To Directory           | VT400 Mode, 8 Bit Controls | VT420 ID           |            |          |     |  |  |  |
| User Defined Keys Unlocked   | User Features Unlocked |                            |                    |            |          |     |  |  |  |
| Numeric Keypad               | Normal Cursor Keys     | No New Line                |                    |            |          |     |  |  |  |
| UPSS ISO Latin-1             | When Available Update  |                            |                    |            |          |     |  |  |  |
| <b>Communications Set-Up</b> |                        |                            |                    |            |          |     |  |  |  |
| To Next Set-Up               | To Directory           | Transmit = 9600            | Receive = Transmit |            |          |     |  |  |  |
| XOFF at 128                  | 8 Bits, No Parity      | 1 Stop Bit                 | No Local Echo      |            |          |     |  |  |  |
| Data Leads Only              | Limited Transmit       |                            |                    |            |          |     |  |  |  |
| No Auto Answerback           | Answerback=            | Not Concealed              |                    |            |          |     |  |  |  |
| <b>Keyboard Set-Up</b>       |                        |                            |                    |            |          |     |  |  |  |
| To Next Set-Up               | To Directory           | Caps Lock                  |                    |            |          |     |  |  |  |
| No Auto Repeat               | Keyclick High          | Margin Bell Off            | Warning Bell High  |            |          |     |  |  |  |
| Character Mode               | <X> Delete             | Local Compose              | Ignore Alt         |            |          |     |  |  |  |
| F1 = Hold                    | F2 = Print             | F3 = Set-Up                | F4 = Session       | F5 = Break |          |     |  |  |  |
| ,< and .> Keys               | <> Key                 | '~ Key                     |                    |            |          |     |  |  |  |

### **DEC VT420 or 100% compatible (Worldwide model)**

Follow Procedure 6-4 to set up the DEC VT420 (Worldwide model) workstation.

#### **Procedure 6-9**

##### **To set up a VT420 or 100%-compatible terminal (Worldwide model)**

- 1 Refer to the vendor's manual for installation instructions.
- 2 The video display terminal (VDT) is connected to the SNN's VME multiport cable or the IPE's four-port I/O cable using an NT8D96AE (SNN) or NT1R03Ex (IPE) (male to female) cable. Refer to the appropriate port assignment table for valid port assignments.
- 3 Power on the terminal and press the **{SET-UP}** key.  
The VDT manual contains instructions on setting up the workstation's options.
- 4 Follow the settings in Figure 6-7 to configure a DEC VT420 Worldwide model.

*Each directory shown in these figures has its own screen and displays the correct setting for each field. If any of the fields shown differ from those on your screen, cursor to the field and press **{RETURN}** until the correct information is displayed.*

- 5 To move to the next set-up screen, cursor to *To Next Set-up* and press **{RETURN}**.
- 6 Move the cursor to *To Directory* and press **{RETURN}**.
- 7 Move the cursor to *Save* and press **{RETURN}**.
- 8 To exit after saving the settings, press the **{SET-UP}** key.

**Figure 6-7**  
**DEC VT420 workstation (Worldwide model) set-up**

|                              |                           |                            |                    |
|------------------------------|---------------------------|----------------------------|--------------------|
| <b>Set-Up Directory</b>      |                           |                            |                    |
| Global                       | Display                   | General                    | Comm               |
| Printer                      | Keyboard                  | Tab                        |                    |
| Clear Display                | Clear Comm                | Reset Session              | Recall             |
| Save                         |                           |                            |                    |
| Set-Up = English*            | North American Keyboard** | Default                    |                    |
| Enable Sessions              | Disable Sessions          | Exit                       | Screen Align       |
| <b>Global Set-Up</b>         |                           |                            |                    |
| To Next Set-Up               | To Directory              |                            |                    |
| On Line                      | S1 = Comm1                | CRT Saver                  |                    |
| Comm1 = RS-232***            | 70 Hz                     | Printer Shared             |                    |
| <b>Display Set-Up</b>        |                           |                            |                    |
| To Next Set-Up               | To Directory              | 80 Columns                 | Interpret Controls |
| No Auto Wrap                 | Jump Scroll               | Dark Screen                |                    |
| No Cursor                    | Block Cursor Style        | No Status Display          |                    |
| Cursor Blink                 | 6X24 pages                | 24 Lines/Screen            |                    |
| Vertical Coupling            | Page Coupling             | No Auto Resize Screen      |                    |
| <b>General Set-Up</b>        |                           |                            |                    |
| To Next Set-Up               | To Directory              | VT400 Mode, 8 Bit Controls |                    |
| User Defined Keys Unlocked   | User Features Unlocked    | 8-bit Characters           |                    |
| Numeric Keypad               | Normal Cursor Keys        | No New Line                |                    |
| UPSS ISO Latin-1             | VT420 ID                  |                            |                    |
| When Available Update        |                           |                            |                    |
| <b>Communications Set-Up</b> |                           |                            |                    |
| To Next Set-Up               | To Directory              | Transmit = 9600            | Receive = Transmit |
| XOFF at 128                  | 8 Bits, No Parity         | 1 Stop Bit                 | No Local Echo      |
| Data Leads Only              | Disconnect, 2 s Delay     | Limited Transmit           |                    |
| No Auto Answerback           | Answerback=               | Not Concealed              |                    |
| Modem High Speed = Ignore    | Modem Low Speed = ignore  |                            |                    |
| <b>Keyboard Set-Up</b>       |                           |                            |                    |
| To Next Set-Up               | To Directory              | Typewriter Keys            | Caps Lock          |
| No Auto Repeat               | Keyclick Off              | Margin Bell Off            | Warning Bell High  |
| Character Mode               | <X> Delete                | Local Compose              | Ignore Alt         |
| F1 = Hold                    | F2 = Print                | F3 = Set-Up                | F4 = Session       |
| F5 = Break                   |                           |                            |                    |
| ,< and .> Keys               | <> Key                    | ~ Key                      |                    |

**Note:** \* This setting specifies the DEC set-up language and does not affect the Meridian MAX screens.  
 \*\* Change this setting to match the keyboard language you are using.  
 \*\*\* This setting depends on the port you are using on the back of the terminal. Refer to your terminal guide for more information.



## DEC VT220 or 100% compatible

Follow Procedure 6-10 to set up the DEC VT220 workstation.

### Procedure 6-10

#### To set up a VT220 or 100%-compatible terminal

- 1 Refer to the vendor's manual for installation instructions.
- 2 The video display terminal (VDT) is connected to the SNN's VME multiport cable or the IPE's four-port I/O cable using an NT8D96AE (SNN) or NT1R03Ex (IPE) (male to female) cable. Refer to the appropriate port assignment table for valid port assignments.
- 3 Power on the terminal and press the **{SET-UP}** key.  
The VDT manual contains instructions on setting up the workstation's options.
- 4 Follow the settings in Figure 6-8 to configure a DEC VT220 VDT.  
*Each directory shown in Figure 6-8 has its own screen and displays the correct setting for each field. If any of the fields shown differ from those on your screen, cursor to the field and press **{RETURN}** until the correct information is displayed.*
- 5 To move to the next set-up screen, cursor to *To Next Set-up* and press **{RETURN}**.
- 6 Move the cursor to *To Directory* and press **{RETURN}**.
- 7 Move the cursor to *Save* and press **{RETURN}**.
- 8 To exit after saving the settings, press the **{SET-UP}** key.

**Figure 6-8**  
**DEC VT220 workstation set-up**

**Set-up Directory**

Display General Comm Printer Keyboard Tab  
 On Line Clear Display Clear Comm Reset Terminal Recall Save  
 Set-Up English North American Keyboard Default Exit

**Display Setup**

To Next Set-Up To Directory 80 Columns Interpret Controls  
 No Auto Wrap Jump Scroll Light Text, Dark Screen  
 No Cursor Block Cursor Style

**General Setup**

To Next Set-Up To Directory VT200 Mode, 8 Bit Controls  
 User Defined Keys Unlocked User Features Unlocked Multinational  
 Numeric Keypad Normal Cursor Keys No New Line

**Communications Setup**

To Next Set-Up To Directory Transmit=9600 Receive=Transmit  
 XOFF at 128 8 Bits, No Parity 1 Stop Bit Local Echo  
 EIA Port, Data Leads Only Disconnect, 2 s Delay Limited Transmit

**Keyboard Setup**

To Next Set-Up To Directory Typewriter Keys Caps Lock  
 No Auto Repeat No Keyclick No Margin Bell Warning Bell Break  
 No Auto Answerback Answerback= Not Concealed

## HP 700/32 or 100% compatible

Perform Procedure 6-11 to set up an HP 700/32 or 100%-compatible workstation.

### Procedure 6-11

#### To set up an HP 700/32 workstation

- 1 Refer to the vendor's manual for installation instructions.
- 2 Power on the terminal and press the **{Set-Up}** key. Refer to your HP 700/32 user's manual for instructions on setting up the workstation's options.

To move to the next set-up screen, press **{Next Screen}**. To move to the previous set-up screen, press **{Prev Screen}**.

- 3 Ensure that the options match the following Global settings:

#### GLOBAL

|                       |                    |
|-----------------------|--------------------|
| •Host Port            | 1                  |
| •Background           | Dark               |
| •Screen Saver         | 15 Min             |
| •Refresh Rate         | 72 Hz              |
| •Key Click            | No                 |
| •Keyboard             | U.S. *             |
| •Message Translations | English            |
| •Setup Translations   | English **         |
| •Clear Display        | (not applicable)   |
| •Clear Comm           | (not applicable)   |
| •ROM revision         | 5181-5672-3014 *** |

\* Change this setting to match the keyboard language you are using.

\*\* This setting specifies the language of the HP 700/32 set-up screens, but does not affect the Meridian MAX screens.

\*\*\* This setting depends upon the version of terminal you are using.

- 4 To save the Global settings, press the **[SAVE MENU]** key.

- 5 Ensure that the options match the following User settings:

**USER**

|                        |           |
|------------------------|-----------|
| •Smooth Scroll         | Jump      |
| •Cursor Type           | Blink Box |
| •Cursor                | Off       |
| •2nd Message Line      | Off       |
| •Message Line          | Off       |
| •Status Line           | Off       |
| •On Line               | Yes       |
| •Local Echo            | Off       |
| •Auto Wrap             | Off       |
| •Auto Linefeed         | Off       |
| •Display Ctrl Codes    | Off       |
| •Display Width         | 80        |
| •Display Width Allowed | 80 or 132 |
| •Char Cell Height      | 16 Dots   |
| •Clr on Width Change   | Yes       |
| •Aux Mode              | Off       |
| •Aux To Host           | No        |
| •Print Terminator=FF   | No        |
| •Logical Page Size     | 24        |
| •Number of Pages       | 1         |

- 6 To save the User settings, press the **[SAVE MENU]** key.

- 7 Ensure that the options match the following Emulation settings:

**EMULATION**

|                       |                  |
|-----------------------|------------------|
| •Emulation            | VT320            |
| •Terminal Id          | VT220            |
| •Control Codes        | 8-Bit            |
| •Characters Mode      | 8-Bit            |
| •Preferred Char Set   | ISO 8859-1 Latin |
| •Keypad Mode          | Numeric          |
| •Cursor Keys          | Normal           |
| •Print Scroll Region  | Off              |
| •User Features Locked | No               |
| •User Keys Locked     | No               |
| •Data Processing Keys | No               |

- 8 To save the Emulation settings, press the **[SAVE MENU]** key.

- 9 Ensure that the options match the following Port 1 settings:

**PORT 1**

|                   |             |
|-------------------|-------------|
| •Communication    | Full Duplex |
| •Data Length      | 8 bits      |
| •Parity           | None        |
| •Stop Bits        | 1           |
| •Xmit Baud        | 9600        |
| •Recv Baud        | =Xmit       |
| •Xmit Pace        | Xon/Xoff    |
| •Recv Pace        | Xoff at 128 |
| •Limited Transmit | On          |
| •DSRI             | No          |
| •CTS              | Ignore      |
| •CD               | Ignore      |
| •Break Duration   | 170 ms      |
| •Disconnect Delay | 2 sec       |
| •Aux Printer Type | National    |

- 10 To save the Port 1 settings, press the **[SAVE MENU]** key.

- 11 Ensure that the options match the following KeyBrd Menu settings:

**KEYBRD Menu**

|                     |                  |
|---------------------|------------------|
| •Lock Key           | Caps Lock        |
| •Kbd Lock Enable    | Yes              |
| •Save Tabs          | Yes              |
| •Auto Repeat        | No               |
| •Margin Bell        | No               |
| •Warning Bell       | Yes              |
| •Auto Answerback    | No               |
| •Answerback=        | [blank]          |
| •Conceal Answerback | No               |
| •Clear All Tabs     | (not applicable) |
| •Set 8 Column Tabs  | (not applicable) |
| •Tab Setting        | (not applicable) |

- 12 To save the Keybrd Menu settings, press the **[SAVE MENU]** key.

- 13 To exit the set-up screen, press the **{Set-Up}** key.

---

## Chapter 7: Printers

---

The following printers can be used by the Meridian MAX:

- DEC LA195 (does not support international languages)
- HP RuggedWriter
- HP LaserJet series II
- HP LaserJet series III
- HP LaserJet series 4
- HP LaserJet series 4 Plus
- HP LaserJet series 5Si MX
- HP PaintJet 3630
- HP DeskJet
- HP DeskJet 500
- HP DeskJet 560C (with serial-parallel converter)
- HP DeskJet 660C (with serial-parallel converter)

Although not supported by Nortel, the Meridian MAX can also work with printers with the following settings:

- XON/XOFF
- 9600 baud
- a serial connector available for the Meridian MAX
- no parity
- 8 data bits
- 1 stop bit

The serial port gender of each printer is a female DB-25 with the exception of the LaserJet 4 Plus. The LaserJet 4 Plus serial port gender is a female DB-9 requiring a 25- to 9-pin serial cable adapter. This adapter can be obtained through HP or one of its distributors.

Obtain the installation instructions from the user's manual for your printer. Ensure that the settings for your printer(s) are correct as described here.

**Note 1:** Before a printer can be fully disconnected, the printer must be taken off line, and powered off, and the serial interface connector removed. Before a printer is connected and powered up, ensure that the interface is connected and secured, the power cord is installed, the printer is powered on, and the printer is online.

**Note 2:** Before a printer can be unplugged, the printer must be taken off line and then powered off. When plugging in the printer, insert the plug, power on the printer, and put the printer back online.

### Installing a local printer

Local printing provides you with the ability to send a report to a printer locally attached to a supervisor's PC workstation running Meridian Terminal Emulator (MTE).

Use Procedure 7-1 to install a local printer. Before beginning, make sure your PC is connected to the Meridian MAX system.

**Note:** Local printers are not assigned through the Meridian MAX Communication Port Assignment screen. Local printers appear on the port assignment screen after they are assigned through the local printer control window shown in Figure 7-2. Local printers should only be used for small print jobs such as ad hoc printing.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system shutdown" chapter, "Configure Meridian MAX system" section, "MAX Hardware Configuration" subsection, for more information on the Meridian MAX Communication Port Assignment screen.

**Procedure 7-1**  
**To install a local printer**

- 1 Decide which printer you want to use as your local printer.
- 2 Decide if you want to connect the printer to the PC through a serial RS-232 connection or through a parallel connection.  
  
For a serial connection you need either a DB-9 female to DB-25 male cable, or a DB-25 female to DB-25 male cable.  
  
For a parallel connection, you need a DB-25 female to Centronics cable (also known as a PC parallel printer cable).
- 3 Configure your printer based on the individual configuration procedures.  
Refer to the subsection on your selected printer in the “Printers” chapter.

If you are running MTE 5.32 or lower, use Procedure 7-2 to set up local printing.

If you are running MTE 8, refer to the *MTE 8 User Guide* (P0853413) for information on setting up a local printer with MTE 8.

**Procedure 7-2**  
**To set up local printing with MTE 5.32 or lower**

- 1 Install and start the MTE software.  
  
Refer to the “Workstations” chapter, “Meridian Terminal Emulator” section, “Meridian Terminal Emulator (MTE) 5.32 or lower” subsection, for the software installation procedure for MTE 5.32 or lower.
- 2 Notify MTE that a local printer is being used by pressing both left and right **{SHIFT}** keys simultaneously. This displays the terminal set-up screen shown in Figure 7-1.




**Figure 7-1**  
**Meridian Terminal Emulator set-up screen**

| TERMINAL SETUP SCREEN - V05.07 |        |    |        |                 |    |    |       |
|--------------------------------|--------|----|--------|-----------------|----|----|-------|
| CONNECTION SETUP               |        |    |        | PRINTER SETUP   |    |    |       |
| CONNECTION TYPE: SERIAL        |        |    |        | PORT : LPT3     |    |    |       |
| SERIAL PORT SETUP              |        |    |        | BAUD RATE : N/A |    |    |       |
| PORT : COM1                    |        |    |        | STOP BITS : N/A |    |    |       |
| BAUD RATE : 9600               |        |    |        | PARITY : N/A    |    |    |       |
| LAN CONNECTION SETUP           |        |    |        |                 |    |    |       |
| HOST NAME OR                   |        |    |        |                 |    |    |       |
| IP ADDRESS : N/A               |        |    |        |                 |    |    |       |
| TERMINAL SETUP SCREEN          |        |    |        |                 |    |    |       |
| LANGUAGE : English             |        |    |        |                 |    |    |       |
| F1                             | F2     | F3 | F4     | F5              | F6 | F7 | F8    |
| NEXT                           | PREV   |    | SAVE   |                 |    |    | EXIT  |
| CHOICE                         | CHOICE |    | CONFIG |                 |    |    | SETUP |

- 3 Use your arrow keys to cursor to the Port field under Printer Setup. Press **[NEXT CHOICE]** to choose the type of connection you wish to use.  
  
If you want a serial connection, choose either COM1 or COM2. Set Baud Rate to 9600, Stop Bits to 1, and Parity to NONE. These are the default values and should not be changed.  
  
If you want a parallel connection, choose either LPT1 or LPT2.
- 4 Press **[SAVE CONFIG]** to save your changes.
- 5 Press **[EXIT SET-UP]** to exit the set-up screen.
- 6 Notify Meridian MAX that the PC has a local printer by logging in to the system as a supervisor and pressing **{CTRL}{P}** to display the local printer control window, as shown in Figure 7-2.

**Figure 7-2**  
**Local printer control window**

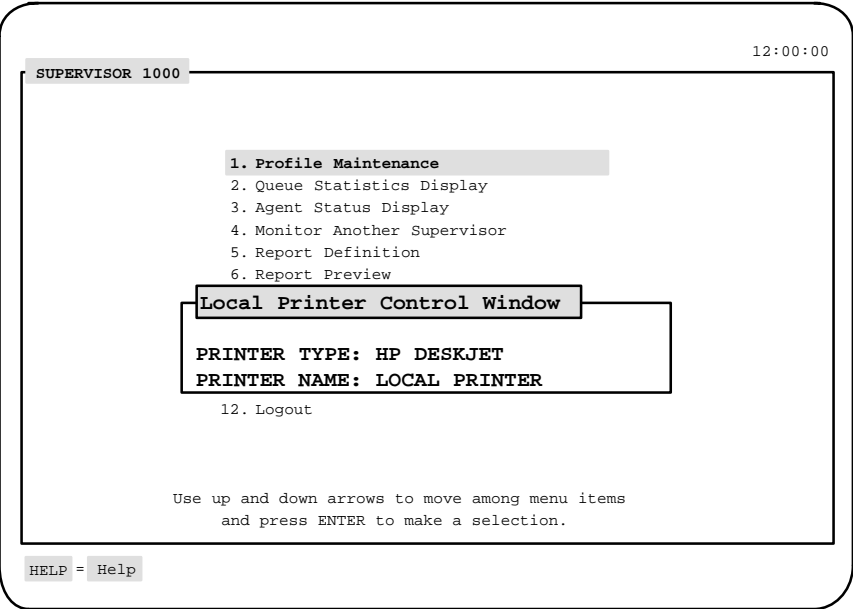

- 7 Enter a printer type by selecting a printer from the [Options] menu. Type in a printer name of your choice. This name appears on all printer menus. Select “Save changes and exit” from the [Commands] menu.



**CAUTION**  
**Risk of printer interruption**


If a new local printer is added, all print jobs on all printers are stopped and reprinted in their entirety after the new printer is added. To avoid printer interruptions, add local printers during off-hours or when the printers are in minimal use.

- 8 At this point, a warning pop-up notice appears notifying you that print jobs on all printers are stopped and reprinted in their entirety after your local printer is added. The system prompts you to proceed. Enter **y**.

### Serial-parallel converter

A serial-parallel converter (A0621070) is required for printers that use parallel connections instead of serial connections. The converter uses a 36-pin parallel connector at one end to connect to the printer, and a 25-pin female connector at the other end to connect to the serial cable. The converter requires no external power supply because it is powered by the RS-232 interface. Figure 7-3 shows the correct DIP switch settings for use with the Meridian MAX.

**Figure 7-3**  
**Serial-parallel converter DIP switch settings**

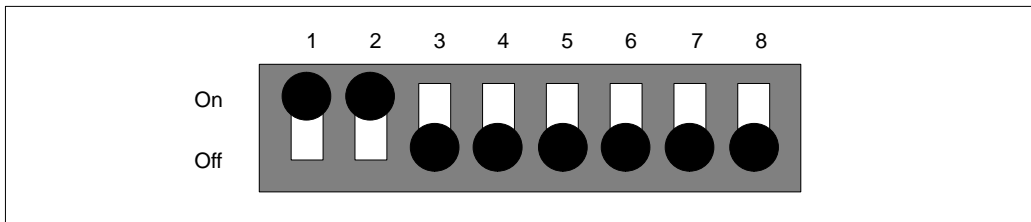

**Note:** To avoid service interruptions, never use pencils or other graphite tools when changing the position of the DIP switches. Flakes of graphite can enter the switch and damage the printer.


## DEC LA195

The DEC LA195 is a dot-matrix printer. This printer can be configured in Epson mode as configured in the VuePrint Menu System. Epson mode does not support the international character set but provides faster printing of reports. Table 7-1 lists the correct system setup for use with the Meridian MAX system. Figure 7-4 shows the correct DIP switch settings for use with the Meridian MAX.

| <b>Table 7-1<br/>DEC LA195 system set-up</b> |                |
|----------------------------------------------|----------------|
| <b>Function</b>                              | <b>Setting</b> |
| <b>Install 1:</b>                            |                |
| Ribbon                                       | Normal         |
| A.S.F.                                       | Off            |
| Emulation                                    | Epson          |
| <b>Print style:</b>                          |                |
| Font                                         | Draft          |
| Emphasized                                   | Off            |
| Pitch                                        | 10 CPI         |
| Font lock                                    | Off            |
| <b>Page layout:</b>                          |                |
| Quarter                                      | Off            |
| Line spacing                                 | 6 LPI          |
| Form length                                  | Letter         |
| Page skip                                    | Off            |
| <b>Print mode:</b>                           |                |
| Text dir                                     | Bi-dir         |
| Graphic dir                                  | Uni-dir        |
| AGM mode                                     | Off            |
| —continued—                                  |                |

| Table 7-1 (continued)<br>DEC LA195 system set-up |         |
|--------------------------------------------------|---------|
| Function                                         | Setting |
| <b>Character:</b>                                |         |
| Slash zero                                       | Off     |
| Character set                                    | Italics |
| Intl char set                                    | USA     |
| Character set                                    | Set 1   |
| Code page                                        | USA     |
| <b>Install 2:</b>                                |         |
| Tear off                                         | On      |
| Paper out                                        | Enable  |
| Auto CR                                          | On      |
| Auto LF                                          | Off     |
| Copy mode                                        | Off     |
| Envelope                                         | Off     |
| Language                                         | English |
| —end—                                            |         |

**Figure 7-4**  
**DEC LA195 DIP switch settings**

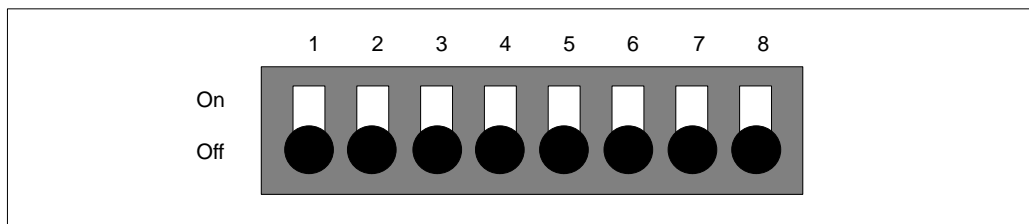


## HP RuggedWriter

The RuggedWriter is a dot-matrix printer. This printer can be configured in HP PCL mode or in Epson mode as configured in the Bank B switches. HP PCL mode provides ISO Latin-1 international support as well as higher quality graphics. Epson mode does not support the international character set but provides faster printing of reports. Table 7-2 shows the correct option settings, and Figure 7-5 shows the correct DIP switch settings.

| <b>Table 7-2<br/>RuggedWriter option switch settings</b> |                |               |                        |
|----------------------------------------------------------|----------------|---------------|------------------------|
| <b>Function</b>                                          | <b>Setting</b> | <b>Switch</b> | <b>Switch position</b> |
| Bank A switches:                                         |                |               |                        |
| Pitch                                                    | 10 cpi         | 1             | Down                   |
| Default MAX                                              | –8             | 2             | Down                   |
| Character set                                            |                | 3             | Down                   |
|                                                          |                | 4             | Down                   |
|                                                          |                | 5             | Down                   |
| Paper path                                               | z-fold         | 6             | Down                   |
| Page length                                              | 11 inches      | 7             | Down                   |
| Print quality                                            | Draft          | 8             | Down                   |
| Bank B switches:                                         |                |               |                        |
| Command set                                              | EPSON          | 1             | Up                     |
|                                                          | HP PCL         | 1             | Down                   |
| RAM allocation                                           | Buffer         | 2             | Down                   |
| Perforation skip                                         | Disabled       | 3             | Down                   |
| Handshaking                                              | XON / XOFF     | 4             | Down                   |
| Parity                                                   | None           | 5             | Down                   |
|                                                          |                | 6             | Down                   |
| Baud                                                     | 9600           | 7             | Down                   |
|                                                          |                | 8             | Down                   |

**Figure 7-5**  
**RuggedWriter DIP switch settings**

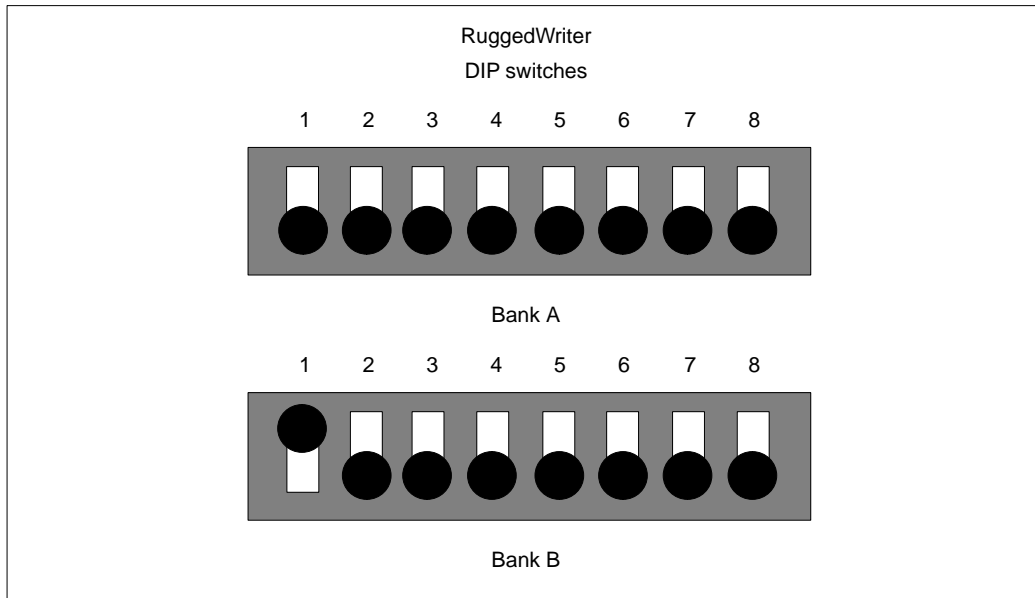

## HP LaserJet series II, III, 4, 4 Plus, and 5Si MX

The LaserJet series II, III, 4, 4 Plus, and 5Si MX are laser printers. Table 7-3 shows the option settings for the LaserJet series II. Table 7-4 shows the option settings for the LaserJet series III. Table 7-5 shows the option settings for the LaserJet series 4. Table 7-6 shows the option settings for the LaserJet series 4 Plus. Table 7-7 shows the option settings for the LaserJet series 5Si MX.

Use the {Menu} key on the front panel to check/set the options. Switch the printer off-line, then press the {Menu} key to access the first group of settings. Hold the {Menu} key down for about five seconds (when the printer is off-line) to access the second group of settings. Press the {+} or {-} key until the correct setting appears to change an option. Press the {Enter/Reset Menu} key to save a selection. Press the {Menu} key to continue. Press the {On-line} key to exit the menu.

**Note 1 :** The HP LaserJet 4 Plus requires a specific HP cable when connecting the printer to a 9-pin serial connector. Contact Hewlett-Packard for more information regarding this cable.

**Note 2:** To connect a LaserJet series 5Si MX printer to the Meridian MAX, you must select the LaserJet series 4 option from the Meridian MAX menu.

**Note 3:** If you wish to connect another type of HP LaserJet series 5 printer to the Meridian MAX, verify with your HP distributor that it will be compatible.



|                                                                 |
|-----------------------------------------------------------------|
| <b>Table 7-3<br/>LaserJet series II printer option settings</b> |
| <b>Press {Menu} key to view Printing menu</b>                   |
| COPIES = 01                                                     |
| MANUAL FEED = OFF                                               |
| FONT SOURCE = 1                                                 |
| FONT NUMBER = 00                                                |
| FORM = 066 LINES                                                |
| <b>Hold {Menu} key five seconds to view Configuration menu</b>  |
| SYM SET = IBM – US                                              |
| AUTO CONT = OFF                                                 |
| I/O = SERIAL                                                    |
| BAUD RATE = 9600                                                |
| ROBUST XON = ON                                                 |
| DTR POLARITY = HI                                               |

|                                                                        |
|------------------------------------------------------------------------|
| <b>Table 7-4</b><br><b>LaserJet series III printer option settings</b> |
| <b>Press {Menu} key to view Printing menu</b>                          |
| COPIES = 1                                                             |
| FONT SOURCE = 1                                                        |
| FONT NUMBER = 00                                                       |
| PAPER = LETTER                                                         |
| ORIENTATION = P                                                        |
| FORM = 066 LINES                                                       |
| MANUAL FEED = OFF                                                      |
| SYM SET = ROMAN8                                                       |
| <b>Hold {Menu} key five seconds to view Configuration menu</b>         |
| AUTO CONT = OFF                                                        |
| I/O = SERIAL                                                           |
| SERIAL = RS-232                                                        |
| BAUD RATE = 9600                                                       |
| ROBUST XON = ON                                                        |
| DTR POLARITY = HI                                                      |
| RET = DARK                                                             |
| PAGEPROTECT = OFF                                                      |

|                                                                      |
|----------------------------------------------------------------------|
| <b>Table 7-5</b><br><b>LaserJet series 4 printer option settings</b> |
| <b>Press {Menu} key to view Printing menu</b>                        |
| COPIES = 1                                                           |
| PAPER = LETTER                                                       |
| ORIENTATION = P                                                      |
| FORM = 66                                                            |
| MANUAL FEED = OFF                                                    |
| RET = DARK                                                           |
| <b>Press {Menu} key once to view PCL menu</b>                        |
| FONT SOURCE = I                                                      |
| FONT NUMBER = 45                                                     |
| SYM SET = ISO L1                                                     |
| PAGEPROTECT = OFF                                                    |
| RESOLUTION = 300                                                     |
| *TIMEOUT = 15                                                        |
| <b>Press {Menu} key twice to view Configuration menu</b>             |
| MP TRAY = CLASS                                                      |
| LOCK = NONE                                                          |
| CLR WARN = ON                                                        |
| AUTO CONT = ON                                                       |
| DENSITY = 3                                                          |
| LOW TONER = ON                                                       |
| <b>Press {Menu} key three times to view Printing menu</b>            |
| SERIAL = RS-232                                                      |
| PACING = XON/XOFF                                                    |
| BAUD RATE = 9600                                                     |
| ROBUST XON = ON                                                      |
| DTR POLARITY = HI                                                    |

|                                                                           |
|---------------------------------------------------------------------------|
| <b>Table 7-6</b><br><b>LaserJet series 4 Plus printer option settings</b> |
| <b>Press {Menu} key to view Printing menu</b>                             |
| COPIES = 1                                                                |
| PAPER = LETTER                                                            |
| ORIENTATION = P                                                           |
| FORM = 60                                                                 |
| MANUAL FEED = OFF                                                         |
| RET = MEDIUM                                                              |
| ECONOMODE = OFF                                                           |
| <b>Press {Menu} key once to view PCL menu</b>                             |
| FONT SOURCE = I                                                           |
| FONT NUMBER = 0                                                           |
| PITCH = 10.00                                                             |
| SYM SET = ROMAN -8                                                        |
| <b>Press {Menu} key twice to view Job menu</b>                            |
| RESOLUTION = 600                                                          |
| IO TIMEOUT = 15                                                           |
| PWRSAVE MODE = 30 MIN                                                     |
| <b>Press {Menu} key three times to view Configuration menu</b>            |
| MP TRAY = CLASS                                                           |
| LOCK = NONE                                                               |
| CLR WARN = ON                                                             |
| AUTO CONT = OFF                                                           |
| DENSITY = 3                                                               |
| LOW TONER = CONT                                                          |
| —continued—                                                               |

|                                                                                       |
|---------------------------------------------------------------------------------------|
| <b>Table 7-6 (continued)</b><br><b>LaserJet series 4 Plus printer option settings</b> |
| <b>Press {Menu} key four times to view Memory configuration menu</b>                  |
| IO BUFFER = AUTO                                                                      |
| <b>Press {Menu} key five times to view Parallel menu</b>                              |
| HIGH SPEED = YES                                                                      |
| ADV FNCTNS = OFF                                                                      |
| <b>Press {Menu} key six times to view Serial menu</b>                                 |
| PACING = XON/XOFF                                                                     |
| BAUD RATE = 9600                                                                      |
| ROBUST XON = ON                                                                       |
| DTR POLARITY = HI                                                                     |
| —end—                                                                                 |


|                                                                           |
|---------------------------------------------------------------------------|
| <b>Table 7-7</b><br><b>LaserJet series 5Si MX printer option settings</b> |
| <b>Press {Menu} key to view Job Control menu</b>                          |
| PAPER DESTINATION = TOP                                                   |
| ORIENTATION = PORTRAIT                                                    |
| AUTO CONTINUE = ON                                                        |
| TONER LOW = STOP                                                          |
| BINDING = LONG EDGE                                                       |
| <b>Press {Menu} key once to view Print Quality menu</b>                   |
| ECONOMODE = OFF                                                           |
| RESOLUTION = 600 DOTS PER INCH                                            |
| ENHANCEMENT = ON                                                          |
| PRINT DENSITY = 3                                                         |
| <b>Press {Menu} key twice to view IO menu</b>                             |
| PARALLEL IO SPEED = HIGH                                                  |
| IO TIMEOUT = 15 SEC                                                       |

## HP PaintJet 3630, DeskJet, DeskJet 500, DeskJet 560C, and DeskJet 660C

The PaintJet 3630, DeskJet, Deskjet 500, DeskJet 560C, and DeskJet 660C are inkjet printers. The DeskJet 660C printer does not contain DIP switches. Figure 7-6 shows the correct DIP switch settings for the PaintJet 3630, DeskJet, Deskjet 500, and DeskJet 560C printers.

**Note:** The DeskJet 560C and 660C must be used with a serial-parallel converter. See the “Serial-parallel converter” section for more details.

**Figure 7-6**  
**HP PaintJet 3630, DeskJet, DeskJet 500, DeskJet 560C, and DeskJet 660C DIP switch settings**

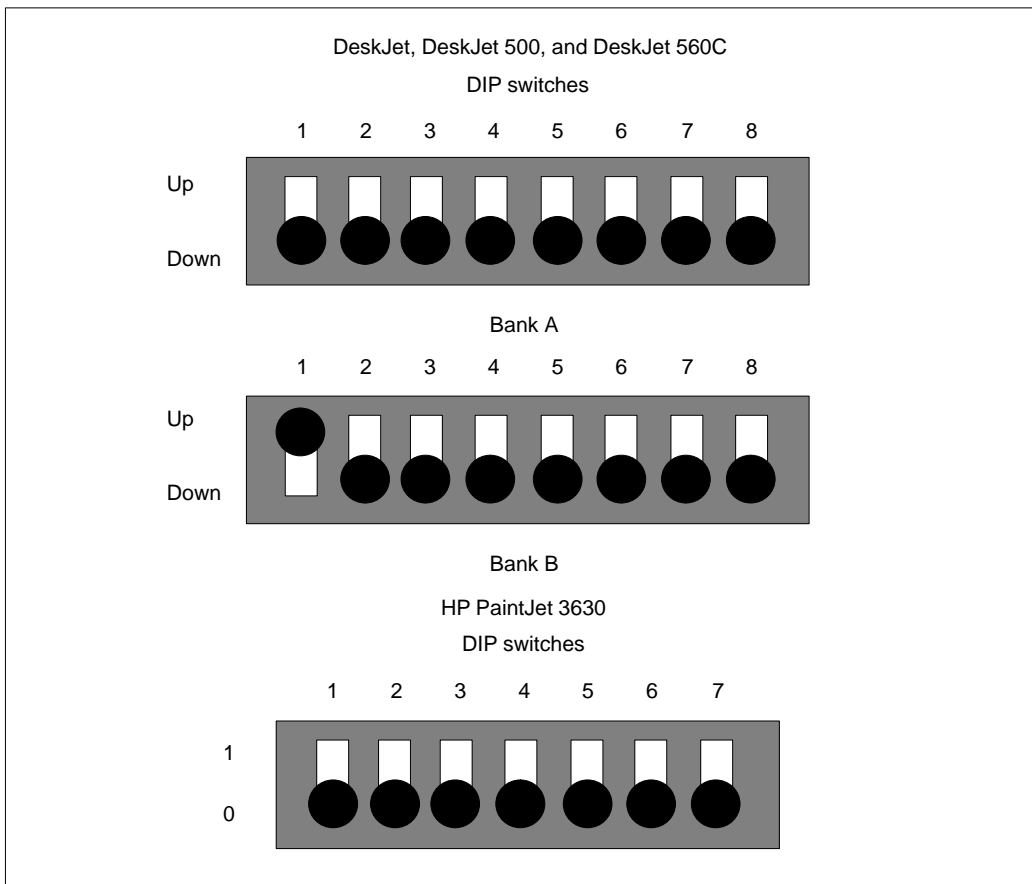

---

## Chapter 8: Meridian 1 circuit card configuration

---

### SDI configurations for Meridian MAX Meridian MAX Application Module

Because there are several different SDI packs that can be connected to the Meridian MAX's High-Speed Link, detailed configuration instructions for the SDI packs are required.

The HSL is implemented by connecting the NT6D51AA transition module on the Meridian MAX to a supported SDI pack on the MSL1. The following SDI packs are supported: QPC139, QPC841, and the NT8D41. Each type of SDI pack requires a specific HSL cable which then connects to the NT6D51AA through a multiport cable (NT8D96AE). Detailed instructions for configuring the HSL connections are provided below.

The Meridian MAX NT6D51AA transition module does not require configuration. It is configured as a DCE device; that is, it behaves like a modem. Consequently, all SDI ports must be configured as DTE devices.

The QPC139 Serial Data Interface (SDI) operates as a DTE device. Set the QPC139's "Output Device" to "DCE mode (modem)". The Port 1 jumper plug is set to location A13. The Port 2 jumper plug is set to location A25.

The QPC841 Serial Data Interface (SDI) operates as a DTE device. Set the QPC841's "DTE/DCE mode selection" to "DCE mode (modem)."

- Port 1 SW8 is set all to OFF.
- Port 1 SW9 is set all to ON.
- Port 2 SW6 is set all to OFF.



## 8-2 Meridian 1 circuit card configuration

---

- Port 2 SW7 is set all to ON.
- Port 3 SW4 is set all to OFF.
- Port 3 SW5 is set all to ON.
- Port 4 SW2 is set all to OFF.
- Port 4 SW3 is set all to ON.

The High-Speed Link (HSL) cable or Load Management Link (LML) cable used with the QPC841 SDI and the QPC139 SDI link is part number NT1R03Dx, where x can be B, D, F, L, T, V, depending on the length of the cable. This cable connects the Meridian MAX to the Meridian 1 and can be used as the High-Speed Link or Load Management Link. Refer to the “Hardware installation: Intelligent Peripheral Equipment (IPE) module” chapter, “Cables” section, to see the cabling arrangement for the NT1R03Dx cable.

**Note:** The Configuration Control feature uses a Load Management Link that is also referred to as a Configuration Control Link.

The NT8D41 Serial Data Interface (XSDI) operates as a DTE device. Set the NT8D41’s “DTE/DCE mode selection” to “DCE mode (modem).”

- Port 1 SW5 is set all to OFF.
- Port 1 SW6: dipswitches 1, 3-6 are set to ON; dipswitch 2 is set to OFF.
- Port 2 SW7 is set all to OFF.
- Port 2 SW8: dipswitches 1, 3-6 are set to ON; dipswitch 2 is set to OFF.

The High-Speed Link (HSL) cable or Load Management Link (LML) cable used with the NT8D41 SDI is part number NT8D93Ax, where x can be J or W depending on the length of the cable. This cable connects the Meridian MAX to the Meridian 1 and can be used as the High-Speed Link or Load Management Link. Refer to the “Hardware installation: Application Module (SNN/SNN-E)” chapter, “Cables” section, for the cabling arrangement for the NT8D93Ax cable.

## Meridian MAX IPE/IPE-E module

### Option 11

When connecting to Option 11, ensure that the Option 11 system is equipped with either a TDS/DTR two-port serial I/O card (NTAK03BA) and a connecting two-port serial cable (NTAK19AA), or an SDI/DCH four-port serial I/O card (NTAK02AA) and a connecting four-port serial cable (NTAK02BA). They are used to interface both the HSL and LML between the Option 11 and the Meridian MAX IPE/IPE-E four-port I/O cable. For a direct connection, the distance between the serial cable used by Option 11 and the four-port I/O cable used by the Meridian MAX IPE/IPE-E must not exceed 15 meters (50 feet). Otherwise, limited distance modems must be used.

### Option 21–81

Because there are several different SDI packs that can be connected to the Meridian MAX IPE-E High-Speed Link, detailed configuration instructions for the SDI packs are required.

The HSL is implemented by connecting the NT1R03BA cable (Port 8) on the Meridian MAX IPE/IPE-E to a supported SDI pack on the Meridian 1. The following SDI packs are supported: QPC139, QPC841, and NT8D41. Each type of SDI pack requires a specific HSL cable which then connects to the NT1R03BA cable (Port 8). Detailed instructions for configuring the HSL connections are provided below.

The Meridian MAX IPE/IPE-E HSL port does not require configuration because it is preconfigured as a DCE port. Consequently, all SDI ports must be configured as DTE ports in order for the two ports to communicate.

The QPC139 Serial Data Interface (SDI) operates as a DTE device. Set the QPC139's Output Device to Modem. The Port 1 jumper plug is set to location A13. The Port 2 jumper plug is set to location A25. Refer to *SL-1 Circuit Card Installation and Testing* (NTP 553-3001-211) for more information.

#### 8-4 Meridian 1 circuit card configuration

---

The QPC841 Serial Data Interface (SDI) operates as a DTE device. Set the QPC841 DTE/DCE mode selection to DCE mode (modem).

- Port 1 SW8 is set all to OFF.
- Port 1 SW9 is set all to ON.
- Port 2 SW6 is set all to OFF.
- Port 2 SW7 is set all to ON.
- Port 3 SW4 is set all to OFF.
- Port 3 SW5 is set all to ON.
- Port 4 SW2 is set all to OFF.
- Port 4 SW3 is set all to ON.

The High-Speed Link (HSL) cable or Load Management Link (LML) cable used with the QPC841 SDI and the QPC139 SDI link is referred to as part number NT1R03Dx, where x can be B, C, F, P, or V depending on the length of the cable. This cable connects the Meridian MAX to the Meridian 1 and can be used as the High-Speed Link or Load Management Link.

**Note:** The Configuration Control feature uses a Load Management Link that is also referred to as a Configuration Control Link.

The NT8D41 Serial Data Interface (XSDI) operates as a DTE device. Set the NT8D41 DTE/DCE mode selection to DCE mode (modem).

- Port 1 SW5 is set all to OFF.
- Port 1 SW6: dipswitches 1, 3-6 are set to ON; dipswitch 2 is set to OFF.
- Port 2 SW7 is set all to OFF.
- Port 2 SW8: dipswitches 1, 3-6 are set to ON; dipswitch 2 is set to OFF.

The High-Speed Link (HSL) cable or Load Management Link (LML) cable used with the NT8D41 SDI is referred to as part number NT8D93Ax, where x can be J or W, depending on the length of the cable. This cable connects the Meridian MAX IPE/IPE-E to the Meridian 1 and can be used as the High-Speed Link or Load Management Link.

## Configuring the Meridian 1 NT6D80 MSDL card for use with the High-Speed Link or the Load Management Link

To configure the Multi-purpose Serial Data Link card (MSDL) for use with the High-Speed Link (HSL) or the Load Management Link (LML) on the Meridian 1, follow the steps in Procedure 8-1.

Before configuring your MSDL card on the Meridian 1 for use with the HSL or LML, contact your Meridian 1 administrator to ensure the following criteria is met:

- Switch settings on the MSDL card must be correct for HSL and LML configuration.
- Port 0 on the MSDL card is an asynchronous port. It must be available for the configuration of the HSL or the LML. The HSL and LML must be configured on separate MSDL cards.

### Procedure 8-1

#### To configure the Meridian 1 NT6D80 MSDL card for use with the High-Speed Link or the Load Management Link

- 1 If there are no MSDL cards installed on your current system, refer to the *Circuit Card Installation and Testing Guide* (NTP 553-3001-211) for information on installing MSDL circuit cards, and continue with this procedure.

If MSDL cards are already installed on your current system, go to Step 11.

- 2 Configure the MSDL card using the Meridian 1 maintenance terminal. Use the document *X11 System Management Applications Guide* (NTP 553-3001-301) and the following guidelines. For prompts not listed, press {ENTER} to select the default value.

**Note:** Ensure “Caps Lock” on your keyboard is set to “on”.

Enter **LD 22** to access Overlay program 22 to verify that MSDL (222) and MSDL SDI (227) software is loaded on your system.

The system displays the following prompt:

REQ

- 3 Enter **PRT** to access the program's print function.

The system displays the following prompt:

TYPE

## 8-6 Meridian 1 circuit card configuration

---

- 4 Enter **PKG** to print the X11 software packages equipped on the Meridian 1. If these packages are not equipped on your system, contact your distributor.  
The system displays the following prompt:  
REQ
- 5 Enter **\*\*\*\*** to exit Overlay program 22.
- 6 Check your system for existing MSDL cards that can be used for HSL and LML. Verify that the switch settings of the MSDL card number (DNUM) do not conflict with other I/O devices.
- 7 At this point, your Meridian MAX HSL or LML cable, NT7D58Ax, should be disconnected from the MSDL card's NTND27 cable. Once the card is configured for the HSL or LML, the cables can be connected.
- 8 If you have a new MSDL card, go to Step 11.  
If you have an existing TTY configured on Port 0 of the MSDL card that you want to use for the HSL or LML, use Overlay program 37 to disable that TTY port. Contact your Meridian 1 administrator for assistance.  
Enter **LD 37** to access Overlay program 37 to disable the TTY port.
- 9 Enter **DIS TTY xx**. The available TTY is represented by xx.
- 10 Enter **\*\*\*\*** to exit Overlay program 37.
- 11 Enter **LD 17** to access Overlay program 17 to define the HSL or the LML on Port 0 of the MSDL card.  
The system displays the following prompt:  
REQ
- 12 Enter **CHG** to change the configuration on Port 0.  
The system displays the following prompt:  
TYPE
- 13 Enter **CFN** to access the configuration record.  
The system displays the following prompt:  
ADAN
- 14 Enter **NEW TTY xx** to add a new MSDL TTY port, or enter **CHG TTY xx** to change an existing MSDL TTY port. The device number is represented by xx.  
The system displays the following prompt:  
CTYP
- 15 Enter **MSDL**.

The system displays the following:

PORT 0

DES

**Note:** Port 0 is the only port which may be configured as an HSL or LML.

- 16** Label the port by entering a name of up to 16 alphanumeric characters in length.

The system displays the following prompt:

BPS

- 17** Enter **9600** to set the baud rate.

The system displays the following prompt:

PARY

- 18** Enter **NONE** to set the parity type.

The system displays the following prompt:

BITL

- 19** Enter **8** to set the data bit length.

The system displays the following prompt:

PARM

- 20** Enter **R232 DTE** to set the interface and transmission mode.

The system displays the following prompt:

FUNC

- 21** Enter **{RETURN}** to set the MSDL card function.

The system displays the following prompt:

USER

- 22** Enter **HSL** to designate the port and set the output message types for HSL, or enter **ACD** to designate the port and set the output message types for LML.

If you designate the port for the HSL, go to Step 26.

If you designate the port for the LML, the system displays the following prompt:

CUST

- 23 Enter **zz**. The customer number of the Meridian MAX node is represented by zz.  
The system displays the following prompt:  
SSUP
- 24 Enter **YES**.  
The system displays the following prompt:  
APRT
- 25 Enter **NO**.
- 26 The system displays the following prompt:  
ADAN DATA SAVED  
ADAN
- 27 Enter **\*\*\*\*** to exit Overlay program 17.
- 28 Enter **LD 48** to access Overlay program 48 to disable all other applications running on the MSDL card.
- 29 Enter **DIS MSDL xx ALL** to disable all ports on the MSDL card. The device number is represented by xx.  
  
A red light appears on the MSDL card. At this point, the card can be removed to check the DIP switch settings. Ensure that the settings are set correctly for RS-232 and that the MSDL card is reinstalled correctly before continuing with this procedure. Refer to the *Circuit Card Installation and Testing Guide* (NTP 553-3001-211) for information on MSDL DIP switch settings and MSDL card installation.
- 30 Enter **ENL MSDL xx FDL** to download the resident memory on the Meridian 1 to the MSDL firmware. The device number is represented by xx.
- 31 Enter **ENL MSDL xx ALL** to reenable all ports on the MSDL card. The device number is represented by xx.
- 32 Enter **\*\*\*\*** to exit Overlay program 48.
- 33 Connect your Meridian MAX HSL or LML cable, NT7D58Ax to the NTND27 MSDL faceplate cable.
- 34 Check the Meridian MAX Error Log for indication of an HSL or LML connection. Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), "Maintenance and administration programs: system running" chapter, "Diagnostics" section, for more information on the Meridian MAX Error Log.

---

## Chapter 9: Meridian MAX system configuration

---

During a software installation procedure, you will be referred to this chapter to assign the Meridian MAX ports, adjust the system parameters, and define the capacity configurations.

All the sections in this chapter should be completed in the following order:

- 1 Assign the ports.  
Refer to the “Assigning the ports” section.
- 2 Assign the system parameters.  
Refer to the “Adjusting the system parameters” section.
- 3 Assign the MSI or MEI links.  
Refer to the “Assigning MSI or MEI links” section.
- 4 Assign the capacity configurations.  
Refer to the “Setting the capacity configurations” section.
- 5 Return to your previous software installation procedure.



## Assigning the ports

Port assignment must be completed during a software installation or operating modes procedure.

### Fixed port assignments

Table 9-1 provides a list of predefined ports on the SNN/SNN-E and IPE/IPE-E platforms. These ports cannot be changed.

| Table 9-1<br>Meridian MAX ports |                         |                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Platform                        | Maximum number of ports | Predefined ports                                                                                                                                                                                                                                                                                                                                                |
| SNN/SNN-E                       | 8/16/24/32/40           | Card 2, Connection 1A is permanently assigned to the High-Speed Link and cannot be changed by the user. The LAN connection is located at the Ethernet port on the I/O panel.                                                                                                                                                                                    |
| IPE/IPE-E                       | 8                       | The High-Speed Link is fixed on Port 8, the console port is fixed on Port 1, and the diagnostic modem is fixed on Port 2. The maintenance console and remote diagnostics modem may also be used as a supervisor display through Supervisor Display Access (SDA).<br><br>The LAN connection is located at the Ethernet port on the NT1R03AA four-port I/O cable. |

### Required port assignments

Not all ports must be assigned. However, certain devices must be configured to the Meridian MAX. Table 9-2 provides a list of these other devices.

| Table 9-2<br>Required ports assignments |                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Devices                                 | Comments                                                                                                                                                                                                                                                                                           |
| Supervisor workstations and printers    | If there are no active LAN supervisor sessions, a minimum of one supervisor workstation and one printer must be assigned on the Meridian MAX.                                                                                                                                                      |
| Load Management Link                    | If the Meridian MAX has Configuration Control, the Load Management Link must be assigned. Only one Load Management Link is allowed per system. This device can be assigned to any port except the High-Speed Link port on the SNN/SNN-E systems, or on ports 1, 2, and 8 on the IPE/IPE-E systems. |
| Network Link                            | If the Meridian MAX has NAC Connectivity enabled, the Network Link must be assigned. Only one Network Link is allowed per system. The device may be assigned to any port except the High Speed Link port on the SNN/SNN-E systems, or ports 1, 2, and 8 on the IPE/IPE-E systems.                  |

### Retained port assignments

All port assignments are retained if:

- you are performing an upgrade without a hardware platform change and the new ports are equal to or greater than the number of ports on the previous system

All ports must be reassigned if

- you are performing an installation upgrade that involves a change in hardware platform
- the number of available ports on the new system is less than the number of available ports on the old system

If you want to change your port assignments after the installation is complete, you must alter the port assignments through maintenance. Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” or “Maintenance and administration programs: system shutdown” chapters, “Configure Meridian MAX System” section, “MAX Hardware Configuration” subsection, for more information.

## Port assignment procedure

Perform the procedures in this chapter only if you were referred to it by a software installation or operating modes procedure. For operating modes, only the port assignment section is required. Once you have completed the procedures, return to the software installation or operating modes procedure you were performing.


### Procedure 9-1

#### To assign Meridian MAX ports

- 1 Ensure that you have completed your software installation procedure up until the point where the Meridian MAX Hardware and System Parameters menu appears and you are referred to this chapter.

**Figure 9-1**

**Meridian MAX Hardware and System Parameters**

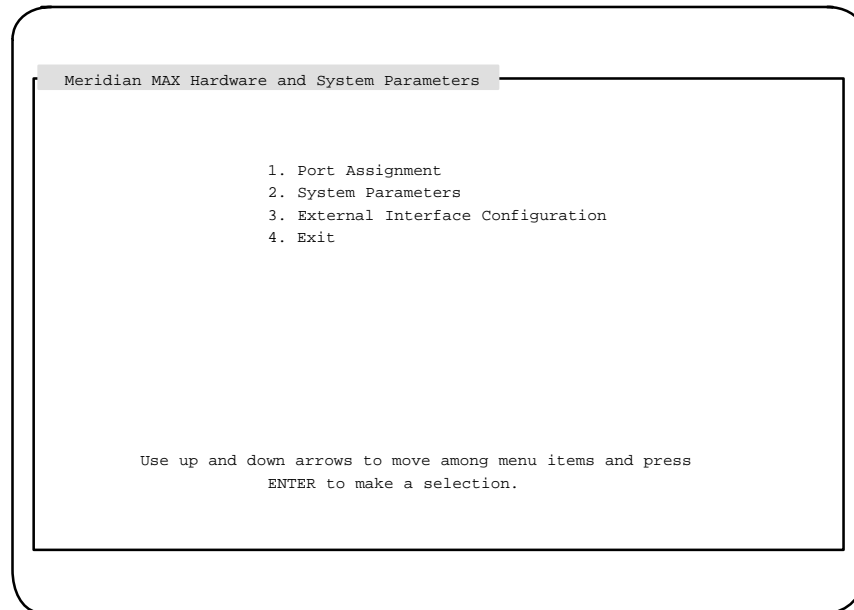

**Note:** The External Interface Configuration feature only appears on this menu if the MSI option or MEI option, or both, are enabled.

- 2 To enter your port assignments, enter **1**, followed by **{RETURN}** or highlight the field using the cursor keys, followed by **{RETURN}**.  
*The Meridian MAX Communication Port Assignment screen appears.*

**Figure 9-2**  
**Meridian MAX Communication Port Assignment**

Unassigned Displays/Printers: #

Meridian MAX Communication Port Assignment

| Port           | Device          | Connect | Baud | Name/Comment |
|----------------|-----------------|---------|------|--------------|
| Card 2, Conn1A | High Speed Link | Direct  | 9600 |              |
| Card 2, Conn1B |                 |         |      |              |
| Card 2, Conn1C |                 |         |      |              |
| Card 2, Conn2A |                 |         |      |              |
| Card 2, Conn2B |                 |         |      |              |
| Card 2, Conn2C |                 |         |      |              |
| Card 2, Conn3A |                 |         |      |              |
| Card 2, Conn3B |                 |         |      |              |
| Card 3, Conn1A |                 |         |      |              |
| Card 3, Conn1B |                 |         |      |              |
| Card 3, Conn1C |                 |         |      |              |
| Card 3, Conn2A |                 |         |      |              |
| Card 3, Conn2B |                 |         |      |              |
| Card 3, Conn2C |                 |         |      |              |
| Card 3, Conn3A |                 |         |      |              |
| Card 3, Conn3B |                 |         |      |              |

PF1 = Commands PF2 = Options REMOVE = Erase field F6 = Update default printers

*The screen shown in this procedure is only an example of an SNN system with no ports assigned.*

- 3 Complete the Meridian MAX Communication Port Assignment screen using the “Fields” and “Function keys” sections described at the end of this procedure.
- 4 When the screen is finished, press **{PF1}** and select the “Save changes and exit” command.  
*The communication port assignment information is saved. The Meridian MAX Hardware and System Parameters screen appears.*
- 5 Go to the “Adjusting the system parameters” section.

## Function keys

### PF1=Commands

The following commands are available after pressing [Commands]:

#### Exit (without saving changes)

This command returns the system to the Meridian MAX Hardware and System Parameters menu without saving any changes.

#### Save changes and exit

This command saves the changes and returns the system to Meridian MAX Hardware and System Parameters menu.

### PF1=Select no command

This function key removes the Commands pop-up window from the screen.

### PF2=Options

This function key displays a description or list of valid entries for the field. Press this key when the cursor is on the *Device* field to view a pop-up menu of the devices available for your system.

### PF2=Select no options

This function key removes the Options pop-up menu from the screen.

### Remove=Erase field

This function key removes the contents of a field. To delete an existing entry, move the cursor to the line on which the device is located. Press {REMOVE} and the device is removed.

### F6=Update default printers

This function key allows you to view or change the default printers. When all of the peripherals are assigned to ports, press {F6}. The system displays the Customer Default Printer Information pop-up window which contains the Customer Default Tabular Printer name and the Customer Default Graphic Printer name. To modify the *Customer Default Tabular Printer* field, highlight this field and press {PF2} to select the name of the printer you want to use as the default tabular printer. This printer is now the destination for all tabular reports whenever the default output device is selected. To modify the *Customer Default Graphic Printer* field, highlight this field and press {PF2} to select the name of the printer you want to use as the default graphic printer. This printer is now the destination for all graphic reports whenever the default output device is selected.

## Fields

### Unassigned Displays/Printers

This field, which appears at the top of the screen, indicates the number of available printers and displays that may be assigned to available ports. This number is represented by the number sign (#) in the sample screens.

### Port

This field lists the ports.

For an SNN/SNN-E system, the ports are listed according to their card number, and connection number and letter. The card number refers to the card slot number in which the card is located. The card number begins at Card 2, Connection 1A because the CPU resides in the first card slot. The connection number refers to the port connection on the generic Input/Output panel. The connection letter refers to the specific port to which the devices are attached. An SNN/SNN-E system can have 8, 16, 24, 32, or 40 ports. If the system has more than 16 ports, all of the ports cannot be viewed on a single screen. Use the up and down arrow keys to scroll the screen to view the rest of the ports.

For an IPE/IPE-E system, the ports are listed numerically. In an IPE/IPE-E system, a maximum of eight ports can be assigned.

Not every port has to be assigned but you must assign at least one printer and one supervisor workstation.

### Device

This field is used to assign devices to the ports. To assign a device, move the cursor to the next available *Device* field and press **{PF2}** to view a pop-up menu of the devices available for your system. The following screen is an example. Your system's menu may differ.

**Figure 9-3**  
**Device options on the Meridian MAX Communication Port Assignment screen**

Unassigned Displays/Printers: #

Meridian MAX Communication Port Assignment

| Port           | Device          | Conn | Dir |
|----------------|-----------------|------|-----|
| Card 2, Conn1A | High Speed Link |      |     |
| Card 2, Conn1B |                 |      |     |
| Card 2, Conn1C |                 |      |     |
| Card 2, Conn2A |                 |      |     |
| Card 2, Conn2B |                 |      |     |
| Card 2, Conn2C |                 |      |     |
| Card 2, Conn3A |                 |      |     |
| Card 2, Conn3B |                 |      |     |
| Card 3, Conn1A |                 |      |     |
| Card 3, Conn1B |                 |      |     |
| Card 3, Conn1C |                 |      |     |
| Card 3, Conn2A |                 |      |     |
| Card 3, Conn2B |                 |      |     |
| Card 3, Conn2C |                 |      |     |
| Card 3, Conn3A |                 |      |     |
| Card 3, Conn3B |                 |      |     |

**Device**

- 1.High Speed Link
- 2.Load Management Link
- 3.Network Link

**DISPLAYS**

- 4.MTE on PC
- 5.Reflection 4+ on PC
- 6.VT420 or Compatible
- 7.VT220 or Compatible
- 8.Unknown Display

**PRINTERS**

9. HP DeskJet
10. HP DeskJet 560C
11. HP LaserJet
12. HP PaintJet
13. HP RuggedWriter-Epson
14. HP RuggedWriter-PCL
15. Data Stream
16. DEC LA195-Epson

PF2 = Select no option      F6 = Update default printers

The following list contains important notes regarding the *Device* field:

- Refer to Table 9-1 for a list of predefined ports on the Meridian MAX. Refer to Table 9-2 for a list of other devices which must be assigned to the ports.
- If your system is an IPE/IPE-E, the *Device* field can have up to seven different entries: Load Management Link, supervisor display, printer, console port, diagnostic modem, network link, and High-Speed Link.
- If your system is an SNN/SNN-E, the *Device* field can have up to five different entries: Load Management Link, supervisor display, printer, network link, and High-Speed Link.
- In Meridian MAX 8, the diagnostic modem port speed has been increased from 2400 baud to 9600 baud. The diagnostic modem port speed can only be modified by continuously hitting the {BREAK} key when the modem connects. The maximum speed is 9600 baud. The diagnostic modem is used by personnel providing remote support.

The diagnostic modem is connected to the second serial port on the CPU card. This port is only shown on the display if you have an IPE/IPE-E platform.

- If you are using a VT520 display, select VT420 when you press **{PF2}** while in the *Device* field.
- If you are using an HP DeskJet 660C printer, select HP DeskJet 560C when you press **{PF2}** while in the *Device* field.
- Each time a printer is selected, a message appears at the bottom of the screen asking the installer to enter a printer name for the assigned port in the *Name/Comment* field. Enter a unique name in the *Name/Comment* field that identifies the printer. For example, if a tabular printer is assigned, the name TabPrint could be used. Every printer must have a unique name.
- The default printer must be assigned before you are allowed to exit this screen.
- Printer models are listed when you press **{PF2}** while in the *Device* field. Select the model appropriate to the printer connected to the assigned port.
- An arrow appears on the right-hand side of the pop-up menu if all of the devices could not fit onto the screen. Use the up and down arrow keys to move through the menu. Select the desired device from the list presented. To enter a selection, either move the cursor to the selection and press **{RETURN}**, or enter the corresponding selection number and press **{RETURN}**. If a device name is dimmed, it cannot be selected.

### **Connect**

This field provides the connection type for each device. This entry must be selected from one of the choices that appear in a pop-up window. The choices for this field are “Direct,” “Modem,” and “To PC.” Depending upon the device assigned, this field may be filled in automatically by the system.



**Baud**

This field indicates the baud rate. Each time an unknown display or network link is selected, a baud rate must also be assigned. The choices are 2400 or 9600. You can, however, change the baud rate of the High-Speed Link port from 9600 to 19 200 and vice versa while the system is shut down. The default baud rate of the High-Speed Link is 9600. For other devices, the baud rate is assigned automatically by the system (except for the network link and unknown displays). The baud rate for the Meridian MAX High-Speed Link must match the baud rate of the High-Speed Link on the Meridian 1.

**Name/Comment**

This field displays the name given to an assigned printer, or comments made on other devices configured on the system. Press **{PF3}** to edit the *Name/Comment* field for a specific device.

## Adjusting the system parameters

After the ports have been assigned, the system parameters must be defined or modified.

### System parameters procedure

Perform this procedure to assign the system parameters. This is done after the ports are assigned.


#### Procedure 9-2

##### To assign system parameters

- 1 Display the Meridian MAX Hardware and System Parameters menu.

**Figure 9-4**

**Meridian MAX Hardware and System Parameters**

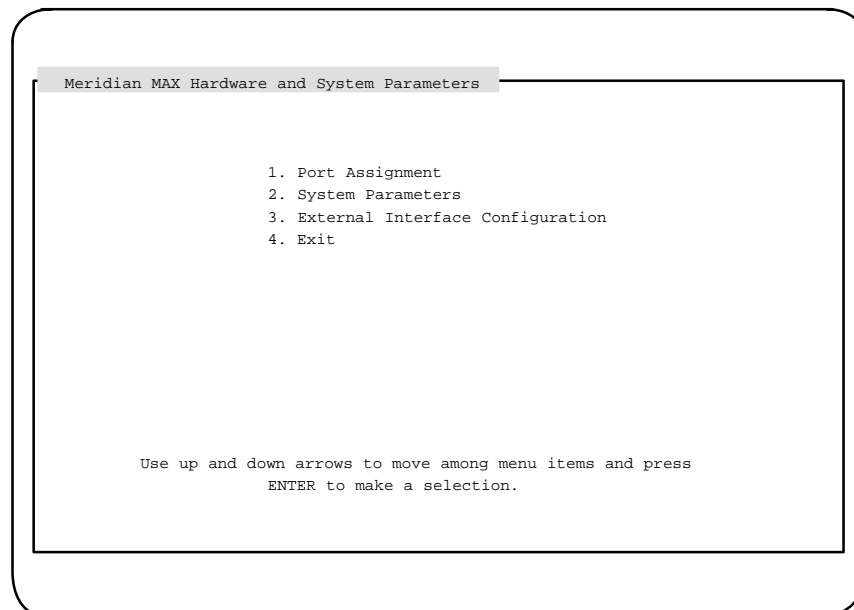

**Note:** The External Interface Configuration feature only appears on this menu if the MSI option, or MEI option, or both, are enabled.

- 2 To assign system parameters, enter **2**, followed by **{RETURN}** or highlight the field using the cursor keys, followed by **{RETURN}**.

*The Meridian MAX System Parameters screen appears.*

**Figure 9-5**  
**Meridian MAX System Parameters**

Meridian MAX System Parameters

|                                    |   |                  |
|------------------------------------|---|------------------|
| Customer Name                      | : | Northern Telecom |
| System Administrator Password      | : | sysadmin         |
| Meridian 1 Network Node Address    | : | 888              |
| NAC to MAX Login Password          | : | ntacdmax         |
|                                    |   |                  |
| MAX Hostname                       | : | MAX02            |
| MAX IP Address                     | : | 47.235.5.92      |
|                                    |   |                  |
| MAX Subnet Mask                    | : | Default          |
| MAX Default Router/Gateway Address | : | Default          |

PF1 = Commands PF2 = Options PF3 = Edit field Remove = Erase field

*All of the fields shown on this screen will only appear if your system has NACD, NAC, and LAN connectivity options enabled. If these are not enabled, only the Customer Name and System Administrator Password fields will appear.*

- 3 Complete the Meridian MAX System Parameters using the “Fields” and “Function keys” sections described at the end of this procedure.
- 4 When the screen is finished, press **{PF1}** and select the “Save changes and exit” command.

*The system parameters are saved. The Meridian MAX Hardware and System Parameters screen appears.*

- 5 If MSI or MEI is enabled on your system, go to the “Assigning MSI or MEI links” section. Otherwise, go to the “Setting the capacity configurations” section.

## Function keys

### **PF1=Commands**

The following commands are available after pressing [Commands]:

#### **Exit (without saving changes)**

This command returns the system to the Meridian MAX Hardware and System Parameters menu without saving any changes.

#### **Save changes and exit**

This command saves the changes and returns the system to Meridian MAX Hardware and System Parameters menu.

### **PF1=Select no command**

This function key removes the Commands pop-up window from the screen.

### **PF2=Options**

This function key displays a description or list of valid entries for the field.

### **PF2=Select no options**

This function key removes the Options pop-up window from the screen.

### **PF3=Edit field**

This function key allows you to edit the contents of a field.

### **Remove=Erase field**

This function key removes the contents of a field.

## Fields

### **Customer Name**

This field shows the name of your organization.

### **System Administrator Password**

This field shows the password used by the system administrator to log in to the system.

### **Meridian 1 Network Node Address**

This field shows the Home Location Code for the Meridian 1. It only appears if your system has Network Automatic Call Distribution (NACD).

It is used in reports showing network call traffic. If it is necessary to query the Meridian 1 for the Meridian 1 network node address, load Overlay 21 on the Meridian 1, and print the Customer Data Block.

The value of the Home Location Code is the value you should enter for the Meridian 1 network node address on the System Parameters screen. If your system has NAC, the Meridian 1 network node address is used by NAC for logging on. On the NAC's Network Definition/Installation screen, the *Node Address* field must match the *Meridian 1 Network Node Address* field in the Meridian MAX system.

The Meridian 1 network node address can only contain numbers and decimals. It must also match the node address assigned to the Meridian 1. If no address was assigned to the Meridian 1, the default value is **338**.

#### **NAC to MAX Login Password**

This field shows the password required for the NAC supervisor to log in to the MAX. The password shown must match the password used on the NAC.

This field only appears if your system has NAC connectivity enabled.

#### **MAX Hostname**

This field shows the name assigned to your Meridian MAX. This field only appears if your system has at least one LAN session defined, or the MSI option or MEI option enabled.

#### **MAX IP Address**

This field shows the LAN address assigned by your LAN administrator to your Meridian MAX. Only numeric characters and decimal points can be used in this field.

The IP address is in the format *a.b.c.d*, where *a* falls within the range of 0 to 223 (excluding 127), and *b*, *c*, and *d* fall within the range of 0 to 254.

This field only appears if your system has at least one LAN session defined, or the MSI option or MEI option enabled.

#### **MAX Subnet Mask**

This field shows the subnet mask of the network. This field is either the system default or a value assigned by your network administrator.

If the system IP address is changed, the default subnet mask changes as well.

The subnet mask is in the format *a.b.c.d*, where *a*, *b*, *c*, and *d* fall within the range of 0 to 255.

The subnet mask is a 32-bit number used by the network software on a local machine to determine which bits belong to the network or to the host parts of the internet address. An improper subnet mask can result in high collision rates and reduced network efficiency.



**CAUTION**  
**Risk of high collision rates and reduced network efficiency**

An improper subnet mask can result in high collision rates and reduced network efficiency.

If the system default is not used, ensure that the subnet mask entered has been obtained from your network administrator.

The MAX subnet mask is not needed to connect to the network. If the subnet mask needs to be changed, obtain the mask from your LAN administrator.

This field only appears if your system has at least one LAN session defined, the MSI option enabled, or the MEI option enabled.

**MAX Default Router/Gateway Address**

This field shows the address of the default router currently connected to the Meridian MAX. This field is either the system default or an address assigned by your network administrator.

The address is in the format *a.b.c.d*, where *a* falls within the range of 0 to 223 (excluding 127), and *b*, *c*, and *d* fall within the range of 0 to 254.

In a networked environment, routers (or gateways) provide connectivity between two networks.

The MAX Default Router/Gateway Address is not needed to connect to the network. If the router/gateway address needs to be changed, obtain the address from your LAN administrator.

This field only appears if your system has at least one LAN session defined, or the MSI option or MEI option enabled.

## Assigning MSI or MEI links

For each MEI and MSI link, you must enter the port number which the third party vendor will use to connect to the Meridian MAX. You must also enable or disable the links. This is done on the Meridian MAX External Interface Configuration screen.

For more information on MSI and MEI, refer to the *Meridian MAX 8 MSI/MEI Protocol Reference Guide* (P0853414).

### MSI or MEI link procedure


Perform this procedure after assigning the ports and setting the system parameters.

#### Procedure 9-3

##### To assign the MSI or MEI links

- 1 Display the Meridian MAX Hardware and System Parameters menu.

**Figure 9-6**  
**Meridian MAX Hardware and System Parameters**

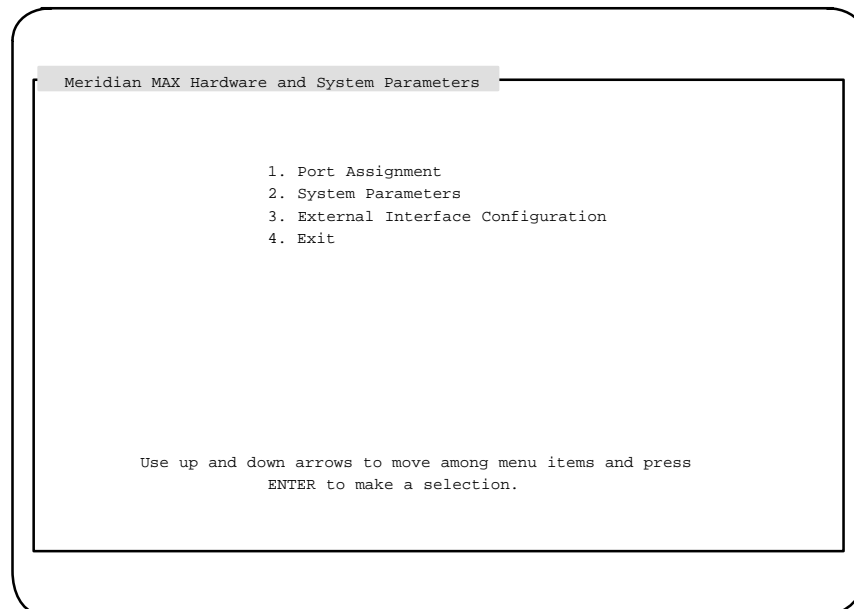

**Note:** The External Interface Configuration feature only appears on this menu if the MSI option or MEI option, or both, are enabled.

- 2 To assign the MSI or MEI links, enter **3**, followed by **{RETURN}** or highlight the field using the cursor keys, followed by **{RETURN}**.

*The Meridian MAX External Interface Configuration screen appears.*

**Figure 9-7**  
**Meridian MAX External Interface Configuration**

| Link Type   | Port Number | Enabled/Disabled |
|-------------|-------------|------------------|
| MSI         | 44247       | Disabled         |
| MEI-Network | 45555       | Enabled          |
| MEI-Observe | 44300       | Enabled          |
| MEI-Observe | 44301       | Enabled          |
| MEI-Observe | 44302       | Enabled          |

PF1 = Commands   PF2 = Options   Remove = Erase field

*All of the fields appear only if your system has MSI and the maximum number of MEI options installed.*

*If you are entering this screen for the first time during a new installation, default values are assigned to the Port Number fields of each link.*

- 3 Complete the Meridian MAX External Interface Configuration screen using the “Fields” and “Function keys” sections described at the end of this procedure.
- 4 When the screen is finished, press **{PF1}** and select the “Save changes and exit” command.  
*The settings are saved. The Meridian MAX Hardware and System Parameters screen appears.*
- 5 Go to the “Setting the capacity configurations” section.



## Function keys

### **PF1=Commands**

The following commands are available after pressing [Commands]:

#### **Exit (without saving changes)**

This command returns the system to the Meridian MAX Hardware and System Parameters menu without saving any changes.

#### **Save changes and exit**

This command saves the changes and returns the system to Meridian MAX Hardware and System Parameters menu.

### **PF1=Select no command**

This function key removes the Commands pop-up window from the screen.

### **PF2=Options**

This function key displays a description or list of valid entries for a field.

### **PF2=Select no options**

This function key removes the Options pop-up window from the screen.

### **Remove=Erase field**

This function key removes the contents of a field.

## Fields

### **Link Type**

This field shows whether MSI or MEI links are installed on your system. These links transmit data from the Meridian MAX to the third-party vendor application.

Up to four MEI connections and one MSI connection are allowed to the Meridian MAX at any time. The MSI and MEI connections are logical LAN connections, however; there is only one physical LAN port. Of the four MEI connections, only one MEI-Network connection is allowed at any time. The remaining three can be MEI-Observe connections.

MEI-Network messages are designed for third-party vendor applications wishing to route calls through the public switched network on a real-time basis. The MEI-Observe messages are designed for vendors wishing to monitor agent performance.

**Port Number**

This field shows the port number which the third-party vendor will use to connect to the Meridian MAX. The port numbers must be in the range of 44 245 to 50 000. Each link from the same Meridian MAX to a third-party vendor must have different port numbers. The same port numbers, however, can be used on different Meridian MAX systems linked to third-party vendors.

**Enabled/Disabled**

This field enables or disables the link from the Meridian MAX to the third-party vendor application.

## Setting the capacity configurations

The Capacity Configuration feature is described in five parts:

- Introducing the Capacity Configuration feature
- Estimating time to completing operations and maintenance routines
- Configuring the system database
- Basic Capacity Configuration procedure
- Advanced Capacity Configuration procedure

### Introducing the Capacity Configuration feature

The Capacity Configuration feature allows you to customize your Meridian MAX system parameters, making the most efficient use of your system database storage and system memory. You can control the amount of historical data storage, as well as the amount of ACD data that is being presented on the real-time statistics displays. This information is displayed on the Basic Capacity Configuration screen and the Advanced Capacity Configuration screen.

#### **ATTENTION**

Consult with your vendor's telecommunication engineer before attempting to configure the system database. If the system is configured incorrectly, a subsequent system reconfiguration could take between 15 minutes and 14 hours depending on database size. It typically takes between one to three hours.

Ensure you receive the completed and approved Capacity Configuration worksheets from the telecommunication engineer, who has determined your configuration requirements using the MAX Capacity Configuration Calculator. This preparation must be done before starting your software installation. Failure to take this preparation before configuring the system database could result in an improper configuration and an extended installation time. Because of the large number of interdependent field values that affect database storage, the telecommunication engineer must be consulted.

**Functionality**

Capacity Configuration allows you to

- configure the Meridian MAX to the desired and expected ACD data acquisition workload, and the ACD historical data database storage capacity
- define basic desired or predicted Capacity Configuration parameters
- utilize your available hardware resources more efficiently
- monitor the ACD data acquisition and storage capacity usage patterns online to more accurately define the Meridian MAX Capacity Configuration parameters

**Historical database**

As an increasing amount of data is saved in the Meridian MAX database, the historical database tables may become full. Meridian MAX has two conditions under which the a historical database table is considered full.

- 1 The first condition occurs when one or more database tables reach the expected disk space limit for the Meridian MAX. In this case, Meridian MAX deletes the oldest data stored in its memory. The deleted data could be a day of daily data or interval data, a week of weekly data, or a month of monthly data. The current data is not lost.

The dates of the data stored in the tables always remains consistent. For example, if the two oldest dates of data are deleted from one table, the data for those dates are removed from all tables.

- 2 The second condition occurs when the following criteria is reached simultaneously:
  - The database table is full.
  - The oldest data is within the minimal data duration, as defined in the Capacity Configuration. The minimal data duration includes two days of interval and agent event log data, and one day, one week, or one month of daily, weekly, or monthly data, respectively.

In this case, Meridian MAX cannot store even the latest data into the historical database.

Under these conditions, the Meridian MAX system administrator or system operator should reconfigure the Meridian MAX Capacity Parameters more accurately, and as soon as possible.

**Impact of Meridian MAX 8 on the historical database**

Most of the features introduced in Meridian MAX 8 require a small amount of extra disk space and memory. Three of the features, however, do require additional historical database storage space. If your historical database disk is at or near its storage limit, you may need to reduce some of your other capacity configuration parameters to accommodate these new features.

Depending on the capacity configuration parameters, the three features and the additional space they require include the following:

- Nine-Digit DNIS Reporting (0.1 Mbyte to 1 Mbyte)
- DNIS-CCR Treatment Reporting (2 Mbyte to 15 Mbyte)
- Agent Activity Code Reporting (60 Mbyte to 500 Mbyte without MQA, and 200 Mbyte to 1400 Mbyte with MQA)

**Factors influencing midnight routines**

The time for the midnight routines (excluding midnight backup) depends on the database size of the interval data collected for one day, the system's processor, and the demand on input/output devices. The call rate is a major factor. This value varies depending on the capacity configuration parameters.

Interval data means historical data records kept for each 30-minute interval. Interval data records typically occupy 50 percent of the historical database size. The amount of the interval data is the single largest factor contributing to the time for the midnight routines (excluding midnight backup).

The midnight backup time depends largely on the disk space occupied by the historical database.

## Configuring the system database

The Capacity Configuration feature can be used to

- configure a new historical database
- configure a historical database using a previously existing Meridian MAX database
- reconfigure the historical database through the Meridian MAX 8 maintenance and administration programs

Your Meridian MAX database should only need to be configured once. This can be done during the initial software installation, an installation upgrade, or an application upgrade.

A well-planned database configuration (completed before the system software installation) and a provision for system growth are essential to maximize your system's efficiency. Not taking these measures could result in the need for a system database reconfiguration which, depending on its size, can take between 15 minutes to 14 hours.

### Configuring a new system database

If you are configuring a new historical database, you need to receive the completed and approved Capacity Configuration worksheets from your telecommunications engineer. These worksheets instruct you as to the values which should be entered on your Basic Capacity Configuration and Advanced Capacity Configuration screens.

### Modifying system capacities

Once you enter the Capacity Configuration feature, you should further modify your system capacities. The system displays the Basic Capacity Configuration screen. Pressing the {F6} function key allows you to access the Advanced Capacity Configuration screen. Both screens display the transferred values from the previous Meridian MAX historical database in their respective fields.

At this point, you are still able to affect changes to your Meridian MAX 8 capacity configuration. The value for each field can be altered by moving the cursor to the field you want to change and entering the new value. Use your completed and approved Basic Capacity Configuration worksheet, seen in Table 9-3, and Advanced Capacity Configuration worksheet, seen in Table 9-4, to modify the values in any affected field.

**Note:** While changing the field values, closely monitor the amount of available disk space. This value changes with every modification to the screens. Ensure that the amount of “Expected” disk space does not exceed the amount of “Available” disk space.

### **System reconfiguration**

If you must reconfigure your Meridian MAX 8 system, this process can be done through the maintenance and administration programs.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system shutdown” chapter, for more information.

### **Capacity Configuration worksheets**

Use the Basic Capacity Configuration worksheet and the Advanced Capacity Configuration worksheet when you create your Meridian MAX 8 system database. Obtain the completed worksheets from your telecommunications engineer.

First, enter the system capacities of your current Meridian MAX system database into the “Actual Value” column. Second, determine field values that allow for future system growth. Enter this number in the “Expansion Value” column and use it as the capacity configuration parameter for your Meridian MAX system.

The amount of period data on a printed report depends on the amount of daily data. The amount of shift data on a printed report depends on the amount of interval data.

| Table 9-3<br>Basic Capacity Configuration worksheet |                         |              |                 |
|-----------------------------------------------------|-------------------------|--------------|-----------------|
| Field name                                          | Subfield name           | Actual value | Expansion value |
| M1 Positions                                        | N/A                     |              |                 |
| M1 Supervisors                                      | N/A                     |              |                 |
| Agent ID                                            | N/A                     |              |                 |
| DNIS                                                | N/A                     |              |                 |
| Activity Code                                       | N/A                     |              |                 |
| Avg. Calls per Hour                                 | N/A                     |              |                 |
| Queues                                              | ACD-DNs                 |              |                 |
|                                                     | CDNs                    |              |                 |
|                                                     | IVR/MAIL                |              |                 |
| ACD Trunk Level Reporting                           | N/A                     |              |                 |
| Routes                                              | RAN                     |              |                 |
|                                                     | ACD Auto Terminate (AT) |              |                 |
|                                                     | ACD Non AT              |              |                 |
| ACD Trunks                                          | Auto Terminate (AT)     |              |                 |
|                                                     | Non AT Trunks           |              |                 |
| Operation Hours                                     | Agent Shifts Per Day    |              |                 |
|                                                     | Hours Per Day           |              |                 |
|                                                     | Days Per Week           |              |                 |
| —continued—                                         |                         |              |                 |



| Table 9-3 (continued)<br>Basic Capacity Configuration worksheet |                       |              |                 |
|-----------------------------------------------------------------|-----------------------|--------------|-----------------|
| Field name                                                      | Subfield name         | Actual value | Expansion value |
| Storage Duration                                                | Interval Data (days)  |              |                 |
|                                                                 | Daily Data (days)     |              |                 |
|                                                                 | Weekly Data (weeks)   |              |                 |
|                                                                 | Monthly Data (months) |              |                 |
|                                                                 | Event Log Data (days) |              |                 |
| —end—                                                           |                       |              |                 |

**Note:** Before any changes can be saved in the Basic Capacity Configuration screen, the user is required to view the Advanced Capacity Configuration screen by pressing {F6}. Once this screen is viewed and any additional changes are made, return to the Basic Capacity Configuration screen to save all of the changes.

| Table 9-4<br>Advanced Capacity Configuration worksheet |                         |              |                 |
|--------------------------------------------------------|-------------------------|--------------|-----------------|
| Field name                                             | Subfield name           | Actual value | Expansion value |
| ACD Queue Operations (per int.)                        | Dest. Qs per CDN        |              |                 |
|                                                        | Dest. Qs per ACD-DN     |              |                 |
|                                                        | Rem. Src. Qs per ACD-DN |              |                 |
|                                                        | Primary Answering Qs    |              |                 |
| —continued—                                            |                         |              |                 |

| Table 9-4 (continued)<br>Advanced Capacity Configuration worksheet |                        |              |                 |
|--------------------------------------------------------------------|------------------------|--------------|-----------------|
| Field name                                                         | Subfield name          | Actual value | Expansion value |
| Trunk Reassignment (per int.)                                      | AT Trunk to Queue      |              |                 |
|                                                                    | Qs Receiving Transfers |              |                 |
| Position Reassignment (per int.)                                   | Pos. to Supervisor     |              |                 |
|                                                                    | Pos. to Queue          |              |                 |
| Activity Code Usage (per int.)                                     | Activity Codes per Q   |              |                 |
| Qs Logged in per Agent                                             | N/A                    |              |                 |
| Agent Events (per day)                                             | Logins per Agent       |              |                 |
|                                                                    | Walkaways per Agent    |              |                 |

**Note:** Once any changes have been made in the Advanced Capacity Configuration screen, the user is required to return to the Basic Capacity Configuration screen where the changes can then be saved.

**9-28 Meridian MAX system configuration**


---

**Basic Capacity Configuration procedure**

Perform this procedure after assigning the ports, setting the system parameters, and assigning the MSI and MEI links.

**Procedure 9-4****To assign the basic capacity configurations**

- 1 Follow the procedures described in this chapter to assign the ports, system parameters, MSI links, and MEI links.
- 2 Display the Meridian MAX Hardware and System Parameters menu.

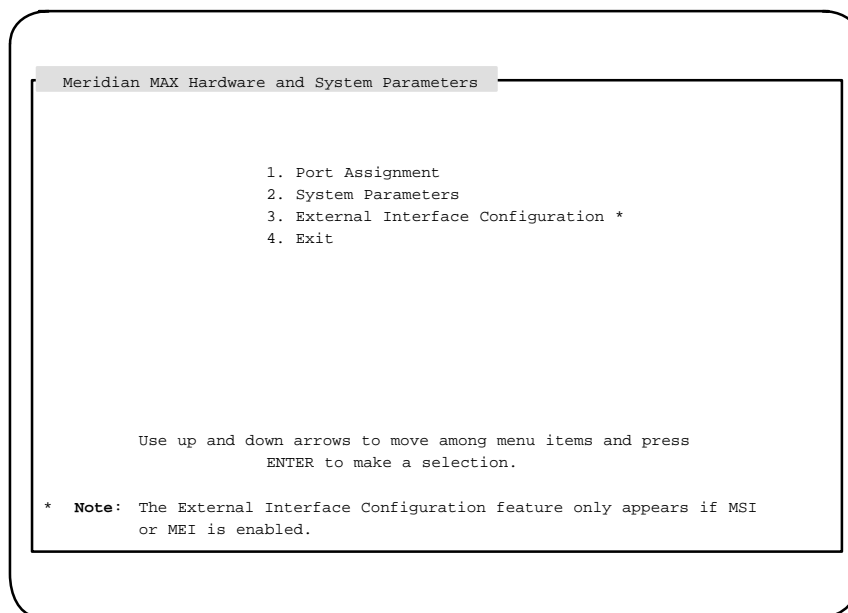**Figure 9-8****Meridian MAX Hardware and System Parameters**

- 3 Enter 4, followed by **{RETURN}** to exit.
- 4 If you are performing an operating mode procedure (such as switching from Training to Precutover, or from Precutover to Product), return to that operating mode.
- 5 Wait for the system to display the Basic Capacity Configuration screen.  
*This is only a sample. Your values may differ.*

**Figure 9-9**  
**Basic Capacity Configuration**

| Basic Capacity Configuration |              |               |                       | Eff. Date 1996/07/06 | NEW     |
|------------------------------|--------------|---------------|-----------------------|----------------------|---------|
| M1 Positions                 | Expected 800 | Measured 1200 |                       |                      |         |
| M1 Supervisors               | 50           | 100           |                       |                      |         |
| Agent IDs                    | 1500         | 2400          |                       |                      |         |
| DNIS                         | 200          | 500           |                       |                      |         |
| Activity Codes               | 100          | 500           |                       |                      |         |
| Avg. Calls per Hour          | 9000         | 20000         |                       |                      |         |
|                              |              |               | Disk Space            |                      |         |
|                              |              |               | Available 460 MB      |                      |         |
|                              |              |               | Expected 345 MB       |                      |         |
| Queues ( 110)                |              | 240           |                       | Expected             | Maximum |
| ACD-DNs                      | 80           |               | Operation Hours       |                      |         |
| CDNs                         | 20           |               | Agent Shifts Per Day  | 2                    | 5       |
| IVR/MAIL                     | 10           |               | Hours Per Day         | 14                   | 24      |
| Routes ( 251)                |              | 256           | Days Per Week         | 5                    | 7       |
| RAN                          | 20           |               | Storage Duration      |                      |         |
| ACD Auto Term (AT)           | 120          |               | Interval Data (days)  | 8                    |         |
| ACD Non AT                   | 111          |               | Daily Data (days)     | 31                   |         |
| ACD Trunk Level Rpt          | OFF          |               | Weekly Data (weeks)   | 56                   |         |
| ACD Trunks (1800)            |              | 1800          | Monthly Data (months) | 36                   |         |
| Auto Termin (AT)             | 600          |               | Event Log Data (days) | 4                    |         |
| Non AT                       | 1200         |               |                       |                      |         |

Help = Help PF1 = Commands PF2 = Options Remove = Erase field PF6 = Advanced Capacity

- 6 Complete the Basic Capacity Configuration screen using the “Fields” and “Function keys” sections described at the end of this procedure.

The Basic Capacity Configuration screen displays limits or maximums for the various capacity configuration parameters. These limits are either configured by the user, or imposed by the hardware or by the purchased options.

**Note 1:** When configuring Meridian MAX 8, allow for a larger system database. Meridian MAX 8 uses more database space for a given configuration than previous releases of Meridian MAX.

**Note 2:** If you change your terminal type by pressing {CONTROL}{T}, all unsaved changes on the screen are lost. If you do not want to lose your changes, choose the same terminal type after pressing {CONTROL}{T}.

- 7 After the Basic Capacity Configuration screen is completed, press {PF6} to display the Advanced Capacity Configuration screen.
- 8 Go to the “Advanced Capacity Configuration” procedure.

## Function keys

### PF1 = Commands

The following commands are available after pressing [Commands]:

#### **Exit (without saving changes)**

This command exits without saving changes.

#### **View Current Configuration**

If enabled, this command displays the Basic Capacity Configuration screen of the current configuration when the Meridian MAX is shut down.

#### **Restart with Initial Values**

This command restores the starting values of a new configuration in the “Expected” column and restarts the editing session. This option is available only if a new configuration is displayed on the screen.

#### **Return to New Configuration**

This command returns you to the new configuration of the Basic Capacity Configuration screen. This option is available only when viewing the current configuration, and Meridian MAX is shut down.

#### **Print Current Configuration**

This command prints a report of the “Current” configuration to the default printer. This option is available only when viewing the current configuration.

#### **Save Configuration and Exit**

This command saves the new configuration and exits. This selection is only available if a new configuration is shown on the screen.

### PF2 = Options

This function key shows valid field ranges.

#### **Remove = Erase field**

This function key resets an entered value in the selected field to the minimum value allowed.

### PF6 = Advanced Capacity

This key changes the display to the Advanced Capacity Configuration screen of the new configuration.

**PF7 = Validate fields**

This key validates the field values. If there are any errors, a window appears in the upper right-hand corner of the screen, describing the error. Once the error is corrected, the error pop-up window disappears or another error message appears. If there are no errors, the following message is displayed at the bottom of the screen: "Validation is complete. There are 0 errors."

Whenever you press the [Validate fields] key during an upgrade or capacity reconfiguration, the following message appears:

```
Checking for any potential loss of data...
```

If no potential loss of data occurs, the system continues.

If a potential loss of data does occur, the following message appears in a pop-up window:

```
Warning-Potential Data Loss The new configuration will retain
 XX of YY days of existing interval data
 XX of YY days of existing daily data
 XX of YY weeks of existing weekly data
 XX of YY months of existing monthly data
 XX of YY days of existing event log data
```

(where XX represents the number of the data units that will be retained, and YY represents the number of data units currently stored in the database)

This message is followed by another message that explains what fields need to be adjusted to avoid data loss. For example, the following message explains the potential trunk data loss:

```
If you do not wish to lose data, please adjust storage duration
fields, avg. calls per hour or trunk level report. If trunk
level report is OFF, you may also adjust the number of routes.
If it is ON, you may adjust the number of trunks, the trunk
reassignment percentage, the number of call transfers received
per queue or the number of primary answering queues.
```

For more information, refer to the Meridian MAX Maintenance and Diagnostics Guide.

Press ENTER to continue.

---

**9-32** Meridian MAX system configuration

---

Press **{RETURN}** to return to the Basic Capacity Configuration screen. Change the fields listed in the message and repeat the validation until no data loss occurs.

**Column headings****Expected**

This column shows the expected or required capacity for your system. This column is filled with default values for a new installation, or from the previous expected values for a Meridian MAX upgrade or a capacity reconfiguration. During a new configuration these values can be changed. The values become view-only once the new configuration is saved. It is recommended that you enter the maximum capacity you expect each of these fields to reach by the end of one year.

**Measured/Maximum**

If you select the “Current” configuration view (if enabled), this column shows the measured values of the current Capacity Configuration parameters which are the capacity maximums reached in a previous Meridian MAX operation.

**Note:** Detailed field descriptions for the Basic Capacity Configuration screen’s measured values are shown in Table 9-5.

If you are configuring a new system, this column shows the “*Maximum*” values of the capacities set by the system. You cannot change the values in this column.

For fields where no artificial maximum applies, a blank is displayed. Queues, routes, and trunks only have a maximum for their totals, not for their components.

**Hint**

This column appears next to the Storage Duration fields only when the expected disk space exceeds the amount of available disk space. This column is used to indicate suggested values for each storage duration field that would reduce the expected disk space to a size that would fall within the amount of available disk space if possible. Once that is done, the “Hint” column disappears.

**Note:** As the field values for the storage duration are changed, the suggested values for the others in the “Hint” column can change as well to indicate that further modification is needed.

## Fields

### **Eff. Date**

This field shows the date on which the configuration occurs. This field can be viewed but not changed.

### **New/Current**

This field shows the configuration status of the Basic and Advanced Capacity Configuration screens. If you are configuring a new capacity, the field displays NEW. If you are viewing a current configuration, the field displays CURRENT.

### **Disk Space**

These fields show the disk space measured in megabytes (1 048 576 bytes). It is recommended that you keep a careful eye on these fields as you adjust the other fields on the screen to ensure that the system does not become overburdened.

#### **Available**

This field shows the amount of disk space available to store historical data. The disk capacity is 460 Mbytes for the SNN/SNN-E, 250 Mbytes for IPE-E, and 90 Mbytes for the IPE.

#### **Expected**

This field shows the forecasted disk space required by the configuration entered on this screen. Each time a field is changed, this expected disk space is automatically changed to show the amount of disk space the change will require.

### **M1 Positions**

This field shows the total number of agent and supervisor positions defined on the Meridian 1 that are reported on by Meridian MAX. The range for this value is from one to the maximum number of positions defined as the system limit. It is recommended that you set this to the maximum number of expected positions.

The number of M1 positions must not exceed the number of agent IDs.

### **M1 Supervisors**

This field shows the total number of supervisors defined on the Meridian 1 that are reported on by Meridian MAX. It is recommended that you increase the current number of supervisors by 20 percent and enter the total in this field. This is done to anticipate growth.



## 9-34 Meridian MAX system configuration

---

The total of the *M1 Supervisors* field and the *Agent IDs* field cannot exceed the figure entered in the *M1 Positions* field. This is because the *M1 Supervisors* field and the *Agent IDs* field are subsets of the *M1 Positions* field.

### **Agent IDs**

This field shows the total number of agents. The range for this value is from one to the maximum number of agents defined as the system limit if Meridian MAX is in agent-ID mode. It is recommended that this be set to the expected maximum.

If Meridian MAX is in position mode, the number of agents cannot be edited and is set to be equal to the number of positions.

### **DNIS**

This field shows the total number of Dialed Number Identification Services (DNIS). The range for this value is from one to the maximum number of DNIS defined as the system limit. It is recommended that you enter a figure which anticipates growth in the system.

### **Activity Codes**

This field shows the total number of activity codes expected to be used. The range for this value is from one to the maximum number of activity codes defined as the system limit. It is recommended that you enter a reasonable number which anticipates growth. Remember to allow for wrong numbers.

The number of activity codes used at each queue is defined on the Advanced Capacity Configuration screen.

### **Avg. Calls per Hour**

This field shows the average number of simple calls received per hour by the Meridian 1 over a 24-hour period. The range for this value is from two to the maximum number of calls per hour defined as the system limit. The average number of calls per hour must be an even number. It is recommended that this field be set high enough to take into consideration the busiest hour expected on the busiest day along with future increases in call rates.

### **Queues**

This field shows the total number of ACD-DN, CDN, and IVR queues with RPRT set to “Yes” on the Meridian 1. The value in the round brackets, next to the “Queue” heading, is the total number of queues specified in the three fields. If one of the queue values is changed, the total number is updated.

The total number of queues must be greater than zero and cannot exceed the maximum number of queues allowed.

It is recommended that each of the queue fields show a 20 percent increase over the number of queues being currently used. Do not overestimate these figures because they use a large amount of disk storage space.

**ACD-DNs**

This is the number of ACD queues. The range for this value is from one to the maximum number of ACD queues minus the total number of CDN and IVR queues.

**CDNs**

This is the number of CDN queues. The range for this value is from zero to the maximum number of ACD queues minus the number of ACD-DN and IVR queues. If zero is entered, no CDN report is generated by the Meridian MAX.

**IVR/MAIL**

This is the number of IVR queues. The range for this value is from zero to the maximum number of ACD queues minus the number of ACD-DN and CDN queues.

**Routes**

This field shows the total number of routes excluding the internal route. This total includes RAN, ACD AT, and ACD Non AT routes. The value in the round brackets, which appears next to the "Route" heading, is the total number of ACD routes specified in the three fields. If one of the route values is changed, the total number is updated.

It is recommended that each of these fields be increased to anticipate for growth.

The total number of routes must be greater than zero.

**RAN**

This field shows the number of RAN routes. The range for this value is from zero to the maximum number of routes minus the number of ACD Auto Terminate (AT) and ACD Non AT routes.

**ACD Auto Term (AT)**

This field shows the number of ACD AT routes. The range for this value is from zero to the maximum number of routes minus the number of RAN and ACD Non AT routes.

---

**9-36** Meridian MAX system configuration

---

The number of AT routes must be less than or equal to the number of AT trunks. Also, the number of AT routes and the number of AT trunks must both be equal to zero or both be greater than zero.

**ACD Non AT**

This field shows the number of ACD Non AT routes. The range for this value is from zero to the maximum number of routes minus the number of RAN and ACD AT routes. The number of ACD Non AT routes must be less than or equal to the number of Non AT trunks. The number of ACD Non AT routes and the number of Non AT trunks must both be equal to zero or both be greater than zero.

**ACD Trunk Level Rpt**

This field indicates whether the ACD trunk level detailed reporting is turned on or off.

It is recommended that the ACD Trunk Level Reporting field be turned off. This saves disk space and also improves the performance of the Meridian MAX system. If an error message appears in the system error log indicating that the process table is full, the system load is too high. Trunk Level Reporting should then be turned off if it is not already so.

*Note:* Data will be lost if the Trunk Level Reporting is turned off at this point.

**ACD Trunks**

This field shows the total number of trunks. This total includes ACD AT and ACD Non AT trunks. The value in the round brackets, which appears next to the “ACD Trunks” heading, is the total number of ACD trunks specified. If one of the trunk values is changed, the total number is updated.

The total number of ACD trunks must be greater than zero.

**Auto Termin (AT)**

This field shows the number of ACD AT trunks. The range for this value is from zero to the maximum number of trunks minus the number of ACD Non AT trunks.

The number of ACD AT trunks must be greater than or equal to the number of ACD AT routes. Also, the number of ACD AT routes and the number of AT trunks must both be equal to zero or both be greater than zero.

**Non AT**

This field shows the number of ACD Non AT trunks. The range for this value is from zero to the maximum number of ACD trunks minus the number of ACD AT trunks.

The number of Non AT trunks and the number of ACD Non AT routes must both be equal to zero or both be greater than zero.

**Operation Hours**

These fields show the operation time parameter group. Keep in mind that these settings use a large amount of disk storage space.

**Agent Shifts Per Day**

This field shows the number of agent shifts (agent rotations) per day. The range for this value is from one to five.

**Hours Per Day**

This field shows the number of operation hours per day. This value is used to determine the number of intervals per day. The range for this value is from 1 to 24.

**Days Per Week**

This field shows the number of workdays per week. The range for this value is from one to seven.

**Note:** To ensure that Meridian MAX collects all the calls which are abandoned, set the *Hours Per Day* field to 24 and the *Days Per Week* field to 7.

**Storage Duration**

These fields show the length of time to be used by the system to collect data for reports. If seven is entered in the “*Daily Data*” field, it indicates that data should be collected for the previous seven days. If seven is entered in the “*Weekly Data*” field, it indicates data should be collected for the previous seven weeks. These values are used when reports are created, for example in the Report Definition feature of the Meridian MAX.

**Interval Data**

This field shows the number of days for interval data storage. This value is greater than or equal to two.

**Daily Data**

This field shows the number of days for daily data storage. This value is greater than or equal to one.

**9-38 Meridian MAX system configuration**

---

Period reports are based on daily data. Set this value to, at least, the number of days in your longest period. If this value is not set correctly, your period reports may not reflect the correct values.

**Weekly Data**

This field shows the number of weeks for weekly data storage. This value is greater than or equal to one.

**Monthly Data**

This field shows the number of months for monthly data storage. This value is greater than or equal to one.

**Event Log Data**

This field shows the number of days for agent event log data storage. This value is greater than or equal to two.

**Advanced Capacity Configuration procedure**

Perform this procedure after completing the Basic Capacity Configuration procedure.

**Procedure 9-5****To assign the advanced capacity configurations**

- 1 Follow the procedure described in this chapter to assign the basic capacity configurations.

After the Basic Capacity Configuration procedure is finished, the Advanced Capacity Configuration screen is displayed. This is only a sample. Your values may differ.

**Figure 9-10**  
**Advanced Capacity Configuration**

| Advanced Capacity Configuration  |     |     |                           | Eff. Date 1996/07/06 | NEW |
|----------------------------------|-----|-----|---------------------------|----------------------|-----|
| Queue Operations (per int.)      |     |     |                           |                      |     |
| Dest. Qs per CDN                 | 4   | 4   |                           |                      |     |
| Dest. Qs per ACD-DN              | 5   | 5   |                           |                      |     |
| Rem. Src. Qs per ACD-DN          | 2   | 2   |                           |                      |     |
| Primary Answering Qs             | 50  | 50  |                           |                      |     |
|                                  |     |     | Disk Space                |                      |     |
|                                  |     |     | Available 90 MB           |                      |     |
|                                  |     |     | Expected 88 MB            |                      |     |
| Trunk Reassignment (per int.)    |     |     |                           |                      |     |
| AT Trunk to Queue                | 20% | 20% |                           |                      |     |
| Qs Receiving Transfers           | 2   | 2   |                           |                      |     |
|                                  |     |     | Agent Events (per day)    |                      |     |
|                                  |     |     | Logins per Agent 4 4      |                      |     |
|                                  |     |     | Walkaways per Agent 10 10 |                      |     |
| Position Reassignment (per int.) |     |     |                           |                      |     |
| Pos. to Supervisor               | 10% | 10% |                           |                      |     |
| Pos. to Queue                    | 10% | 10% |                           |                      |     |
| Activity Code Usage (per int.)   |     |     |                           |                      |     |
| Activity Codes per Q             | 10  | 10  |                           |                      |     |
| Agent Activity Code Rpt          | OFF |     |                           |                      |     |
| Qs logged in per Agent           | 3   | 5   |                           |                      |     |

Help = Help   PF1 = Commands   PF2 = Options   Remove = Erase field   F20 = >>

- 2 Complete the Advanced Capacity Configuration screen using the "Fields" and "Function keys" sections described at the end of this procedure.
- 3 After the Advanced Capacity Configuration screen is completed, press {PF1} and select the "Return to Basic Capacity Configuration Screen" option.
- 4 Press {PF1} and select the "Save configuration and exit" option.

When you choose this command during an installation upgrade, the following message appears. If you are performing a new installation, go to Step 6.

Checking for any potential loss of data...

If no potential loss of data occurs, the system continues. Go to Step 6.

If a potential loss of data does occur, the following message appears in a pop-up window.

Warning-Potential Data Loss The new configuration will retain

**9-40 Meridian MAX system configuration**

---

XX of YY days of existing interval data  
 XX of YY days of existing daily data  
 XX of YY weeks of existing weekly data  
 XX of YY months of existing monthly data  
 XX of YY days of existing event log data

(where XX represents the number of the data units that will be retained, and YY represents the number of data units currently stored in the database)

This message is followed by another message that explains which fields need to be adjusted to avoid data loss. For example, the following message explains the potential trunk data loss:

If you do not wish to lose data, please adjust storage duration fields, avg. calls per hour or trunk level report. If trunk level report is OFF, you may also adjust the number of routes. If it is ON, you may adjust the number of trunks, the trunk reassignment percentage, the number of call transfers received per queue or the number of primary answering queues.

Do you wish to proceed with the new configuration? (y/n)

- 5** If you do not wish to continue with the new configuration, enter **n**, followed by **{RETURN}**.

*The Basic Capacity Configuration screen returns with the Commands pop-up menu. Change the fields listed in the message until you are allowed to save and exit without potential data loss.*

If you do wish to proceed with the new configuration, enter **y**, followed by **{RETURN}**.

The following message appears:

Press ENTER to continue.

Press **{RETURN}**. The following pop-up message appears:

You are saving a new capacity configuration that requires a database reconfiguration right after. This can take up to 15 minutes. If you do not wish to reconfigure the database now, please choose 'Exit without Saving' to lose your changes and re-enter them later.

For more information, refer to the Meridian MAX Maintenance and Diagnostics Guide.

Do you wish to proceed with the database reconfiguration?  
 (y/n)

If you do not want to proceed with the database reconfiguration, enter **n**, followed by **{RETURN}**. The Basic Capacity Configuration screen returns with the Commands pop-up menu. Change the fields listed in the message until you are allowed to save and exit without potential data loss.

If you do want to proceed with the database configuration, enter **y**, followed by **{RETURN}**. The system will reconfigure the database and continue once the reconfiguration is complete.

- 6 Return to your software installation procedure.

## Function keys

### PF1 = Commands

The following commands are available after pressing [Commands]:

#### Return to the Basic Capacity Screen

If enabled, this command returns you to the Basic Capacity Configuration screen.

#### Restart with Initial Values

This command restores the starting values of a new configuration in the “Expected” column and restarts the editing session from the Basic Capacity Configuration screen. This option is available only if your system is not yet configured or if your system is configured but the system is down.

#### View Current Configuration

If enabled, this command displays the current Advanced Capacity Configuration screen when the Meridian MAX is shut down.

#### Return to New Configuration

If enabled, this command returns you to the new configuration of the Advanced Capacity Configuration screen when the system is shut down.

#### Print Current Configuration

This command prints a report of the current configuration to the default printer. This option is available only if the current Meridian MAX configuration is shown on the screen.

### PF2 = Options

This function key shows valid field ranges.



**Remove = Erase field**

This function key resets an entered value of the selected field to the minimum allowed value.

**F6 = Basic Capacity**

If enabled, this function key changes the display to the Basic Capacity Configuration screen.

**F7 = Validate fields**

This function key validates the field value. If there are any errors, a window appears in the upper right-hand corner of the screen describing the error. Once the error is corrected, the error pop-up window disappears or another error message appears. If there are no errors, the following message is displayed at the bottom of the screen: "Validation is complete. There are 0 errors."

Whenever you press the [Validate fields] key during an installation upgrade or capacity reconfiguration, the following message appears:

Checking for any potential loss of data...

If no potential loss of data occurs, the system continues.

If a potential loss of data does occur, the following message appears in a pop-up window:

```
Warning-Potential Data Loss The new configuration will retain
 XX of YY days of existing interval data
 XX of YY days of existing daily data
 XX of YY weeks of existing weekly data
 XX of YY months of existing monthly data
 XX of YY days of existing event log data
```

(where XX represents the number of the data units that will be retained, and YY represents the number of data units currently stored in the database)

This message is followed by another message that explains what fields need to be adjusted to avoid data loss. For example, the following message explains the potential trunk data loss:

```
If you do not wish to lose data, please adjust storage duration
fields, avg. calls per hour or trunk level report. If trunk
level report is OFF, you may also adjust the number of routes.
If it is ON, you may adjust the number of trunks, the trunk
reassignment percentage, the number of call transfers received
per queue or the number of primary answering queues.
```

For more information, refer to the Meridian MAX Maintenance and Diagnostics Guide.

Press ENTER to continue.

Press {RETURN} to return to the Advanced Capacity Configuration screen. Change the fields listed in the message and repeat the validation until no data loss occurs.

## Column headings

### **Expected**

This column shows the expected or required capacity for the configuration shown. The initial values in this column are calculated from the parameters entered in the Basic Capacity Configuration screen, for a new installation, or from the previous expected capacity values for a Meridian MAX upgrade or capacity reconfiguration.

### **Measured/Default**

If you select the “Current” configuration view (if enabled), this column shows the measured values of the current Capacity Configuration parameters.

**Note:** Detailed field descriptions for the Advanced Capacity Configuration screen’s measured values are shown in Table 9-6.

If you are configuring a new system, the “Default” column shows the default values for the expected limits. The values are preset or derived from the values entered on the Basic Capacity Configuration screen.

The system limits, though not seen in the previous screen, do exist for some of the “Expected” values. Press [Options] to see the valid ranges.

## Fields

### Eff. Date

This field shows the date on which the configuration occurs. This field can be viewed but not changed.

### Disk Space

These fields show the disk space measured in megabytes (1 048 576 bytes). It is recommended that you keep a careful eye on these fields as you adjust the other fields on the screen to ensure that the system does not become overburdened.

#### Available

This field shows the amount of disk space available to store historical data. The disk capacity is 460 Mbytes for the SNN/SNN-E, 250 Mbytes for IPE-E, and 90 Mbytes for the IPE.

#### Expected

This field shows the forecasted disk space required by the configuration entered on this screen. Each time a field is changed, this expected disk space is automatically changed to show the amount of disk space the change will require.

### Queue Operations (per int.)

These fields show the characteristics of ACD queue operations.

#### Dest. Qs per CDN

This field shows the average number of destination queues per CDN in an interval. The range for this value is from zero to the number of ACD-DNs and IVR queues. This field is available only if the CCR option is enabled.

The number of destination queues per CDN must be equal to zero when there is no CDN. The number of CDNs is expected to be greater than zero when CCR is enabled.

Before entering a value in this field, check the number of queues which have tried to send a call to a script. The number you enter in this field should be higher than this number of queues to allow for growth.

#### Dest. Qs per ACD-DN

This field shows the average number of local and remote destination ACD-DN and IVR queues per interval to which an ACD call may overflow as the result of a queue overflow, basic, enhanced, or network time overflow or interflow. The range for this value is from 0 to 20.

**Rem. Src. Qs per ACD-DN**

This field shows the average number of remote source ACD-DN and IVR queues per interval from which an ACD call may network time overflow to a local ACD-DN queue. The range for this value is from 0 to 50.

Before entering a value, check the number of remote sites and queues which have tried to target queues at your site. The number you enter in this field should be higher than this total to allow for growth.

**Primary Answering Qs**

This field shows the average number of primary entering queues (ACD queues to which all ACD calls are first directed in the Meridian 1 switch) in an interval. The range for this value is from zero to the total number of queues.

The number of primary answering queues must not exceed the total number of queues.

**Trunk Reassignment (per int.)**

These fields show the frequency in which trunks are reassigned. If you do not have the capability of moving trunks from queue to queue, ignore this section.

**AT Trunk to Queue**

This field shows the average percentage of auto terminate trunks reassigned to another queue in an interval. The range for this value is from 0 to 100 percent.

Before entering a value, look at the number and frequency that trunks are moved in a 30-minute period. The number you enter in this field should be higher than this figure to allow for growth.

**Qs receiving Transfers**

This field shows the average number of manual call transfers received by an ACD-DN queue from another ACD-DN queue in an interval. The number of queues receiving transfers must not exceed the total number of queues.

Before entering a value, find the number of calls which are normally transferred from a queue to a queue and anticipate for growth.

### **Position Reassignment (per int.)**

These fields show the frequency in which positions are reassigned. It is not necessary to frequently change these fields. Examine your busiest time period and note the frequency that positions are reassigned. Use this period to calculate your averages.

#### **Pos. To Supervisor**

This field shows the average percentage of positions reassigned to another supervisor in an interval. The range for this value is from 0 to 100 percent.

#### **Pos. To Queue**

This field shows the average percentage of positions reassigned to another queue in an interval. The range for this value is from 0 to 100 percent.

### **Activity Code Usage (per int.)**

This field shows the frequency that activity codes are used on the Meridian MAX.

#### **Activity Codes per Q**

This field shows the average number of activity codes you expect to be used per ACD-DN (excluding CDN queues) in an interval. The range for this value is from zero to the number of activity codes.

The number of activity codes per queue must not exceed the total number of activity codes defined on the Basic Capacity Configuration screen.

#### **Agent Activity Code Rpt**

One of these options is selected to indicate whether the activity code statistics are collected and sorted by agent.

#### **ON**

This option is selected if the activity codes are to be collected and sorted in reports by agent. Prior to Meridian MAX 8, the activity codes could only be sorted by queue.

If the number of activity code key combinations exceeds 10 000 in IPE/IPE-E or 25 000 in SNN/SNN-E, a warning message appears advising you to adjust the number of positions, activity codes per queue, or the number of queues logged in per agent.

The formula for calculating the number of activity code key combinations is

# of key combinations =  
# of positions x  
# of activity codes per queues x  
# queues logged in per agents

Depending on the capacity configuration parameters, more disk space will be required to store the agent information in the activity code database. This could range from 60 Mbytes to 500 Mbytes without MQA, and 200 Mbytes to 1400 Mbytes with MQA.

For example, if your system has 1200 positions, 150 queues, 10 activity codes per queue, and MQA disabled, you would require 269 Mbytes of additional space. If MQA was enabled, you would require 806 Mbytes of additional space.

More memory will also need to be allocated to the activity code statistics buffer.

#### **OFF**

This option is selected if the activity codes are to be sorted by queue, not by agent. If this option is off, the agent IDs in the activity code statistics are set to zero and less database space is allocated to the activity code table.

#### **Qs logged in per Agent**

This field shows an estimate of the average number of ACD-DNs serviced simultaneously per agent. This value does not limit the number of simultaneous logins per agent. The range for this value is from one to five. The default value for a new installation is three if the MQA feature is enabled. If MQA is disabled, the default value is one.

This field only appears if your system has MQA.

#### **Agent Events (per day)**

These fields show the agent event frequency.

##### **Logins per Agent**

This field shows the average number of login events per agent in a day. A login and a logout are together counted as one event. The range for this value is from 1 to 999.

**Walkaways per Agent**

This field shows the average number of walkaway events per agent in a day. A walkaway and a return are together counted as one event. The range for this value is from 0 to 999.

**Basic Capacity Configuration measured values**

Table 9-5 provides detailed information regarding measured value fields for the Basic Capacity Configuration screen.

| Table 9-5<br>Basic Capacity Configuration measured value field descriptions |                |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------|----------------|-----------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                  | Time           | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>M1 Positions</b>                                                         | Real-time data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the switch has more positions defined than the Meridian MAX system.</p> <p>Meridian MAX only collects data for the expected number of positions.</p> <p>However, the measured value indicates to the user how many positions are actually defined on the switch.</p> <p>Measured values are not determined by using historical data. They are determined by using real-time data.</p> |
| <b>M1 Supervisors</b>                                                       | Real-time data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the switch has more supervisors defined than the Meridian MAX system.</p>                                                                                                                                                                                                                                                                                                             |
| —continued—                                                                 |                |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |                      |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------|----------------------|-----------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time                 | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                                                         |                      |                 |                | <p>Meridian MAX only collects data for the expected number of supervisors.</p> <p>However, the measured value indicates to the user how many supervisors are actually defined on the switch.</p> <p>If a supervisor is added on the switch, this will not be reflected by Meridian MAX automatically.</p> <p>For the added or deleted supervisors to be detected by Meridian MAX, a configuration update or Meridian 1 initialization is required.</p> <p>Measured values are not determined by using historical data. They are determined by using real-time data.</p> |
| Agent ID                                                                                | System lifetime data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the number of Agent IDs used exceeds the expected number of Agent IDs.</p> <p>Meridian MAX only collects data for the expected number of Agent IDs.</p> <p>However, the measured value indicates to the user how many Agent IDs are actually used.</p>                                                                                                                                                                                     |
| —continued—                                                                             |                      |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |



| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |                  |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------------|------------------|-----------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time             | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                                                                         |                  |                 |                | <p>This number is updated at the end of every interval. It denotes the total number of agents used over the system lifetime.</p> <p>Agents are never deleted. If an agent logs out, the agent is not considered deleted. The agent still exists but is not operational. Therefore, the Agent ID number can only increase.</p>                                                                                                                                                                                                                                                                         |
| DNIS                                                                                    | Current day data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the total number of DNIS numbers used exceeds the expected number.</p> <p>Meridian MAX only collects data for the expected number of DNIS numbers.</p> <p>However, the measured value indicates to the user how many DNIS numbers are actually used.</p> <p>This number is updated at the end of every interval. It denotes the number of DNIS numbers used throughout the current day.</p> <p>The DNIS measured number is reset at midnight and the count restarts.</p> |
| —continued—                                                                             |                  |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |                  |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------|------------------|-----------------|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time             | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Activity Code                                                                           | Real-time data   | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the number of activity codes used exceeds the expected number. Meridian MAX only collects data for the expected number of activity codes. However, the measured value indicates to the user how many activity codes are actually used. This number is updated at the end of every interval.</p> <p>It denotes the total number of activity codes used over the system lifetime.</p> |
| Avg. Calls per Hour                                                                     | Current day data | End of interval | Average        | <p>This value is updated at the end of each interval. It is the average number of simple calls that are received since midnight.</p> <p>At midnight, this value is reset.</p>                                                                                                                                                                                                                                                                                                                                    |
| Queues                                                                                  | Real-time data   | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the switch has more queues defined than the Meridian MAX.</p>                                                                                                                                                                                                                                                                                                                       |
| —continued—                                                                             |                  |                 |                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |      |             |                |                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------|------|-------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time | Update rate | Measured value | Comment                                                                                                                                                                                                                                                                                                                                                                                                                       |
| ACD-DNs                                                                                 |      |             |                | <p>Meridian MAX only collects data for the expected number of queues.</p> <p>However, the measured value indicates to the user how many queues are actually defined on the switch.</p> <p>This value is the total number of ACD-DNs + CDNs + IVR/Mail queues. It is updated at the end of each interval.</p> <p>Measured values are not determined by using historical data. They are determined by using real-time data.</p> |
|                                                                                         | N/A  | N/A         | N/A            | <p>The sum of the expected number of ACD-DNs and IVR/Mail queues indicates the maximum number of ACD-DNs or IVR/Mail queues for which Meridian MAX collects data.</p> <p>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.</p>                                                                                                             |
| CDNs                                                                                    | N/A  | N/A         | N/A            | This number indicates the maximum number of CDNs for which Meridian MAX collects data.                                                                                                                                                                                                                                                                                                                                        |
| —continued—                                                                             |      |             |                |                                                                                                                                                                                                                                                                                                                                                                                                                               |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |                |                 |                |                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------|----------------|-----------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time           | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                           |
| IVR/MAIL                                                                                |                |                 |                | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                                              |
|                                                                                         | N/A            | N/A             | N/A            | <p>The sum of the expected number of ACD-DNs and IVR/Mail queues indicates the maximum number of ACD-DNs or IVR/Mail queues for which Meridian MAX collects data.</p> <p>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.</p> |
| ACD Trunk Level Reporting                                                               | N/A            | N/A             | N/A            | <p>The values valid for this field are ON or OFF.</p> <p>Measured values are not determined by using historical data. They are determined by using real-time data.</p>                                                                                                                                            |
| Routes                                                                                  | Real-time data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>The measured value may exceed the expected value only if the switch has more routes defined than the Meridian MAX system.</p>                                                                                                                 |
| —continued—                                                                             |                |                 |                |                                                                                                                                                                                                                                                                                                                   |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |      |             |                |                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------|------|-------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time | Update rate | Measured value | Comment                                                                                                                                                                                                                                                                                                       |
| RAN                                                                                     |      |             |                | Meridian MAX only collects data for the expected number of routes.<br><br>However, the measured value indicates to the user how many routes are actually defined on the switch.<br><br>This value is the total sum of RAN routes, ACD Auto Terminate (AT) routes, and ACD Non AT routes.                      |
|                                                                                         | N/A  | N/A         | N/A            | This number indicates the maximum number of RAN routes for which Meridian MAX collects data.<br><br>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                      |
| ACD Auto Terminate (AT)                                                                 | N/A  | N/A         | N/A            | The sum of the expected number of ACD AT and ACD Non AT routes indicates the maximum number of ACD AT and ACD Non AT routes for which Meridian MAX collects data.<br><br>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size. |
| —continued—                                                                             |      |             |                |                                                                                                                                                                                                                                                                                                               |

| Table 9-5 (continued)<br>Basic Capacity Configuration measured value field descriptions |                |                 |                |                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------|----------------|-----------------|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                              | Time           | Update rate     | Measured value | Comment                                                                                                                                                                                                                                                                                                              |
| ACD Non AT                                                                              | N/A            | N/A             | N/A            | <p>The sum of the expected number of ACD AT and ACD Non AT routes indicates the maximum number of ACD AT and ACD Non AT routes for which Meridian MAX collects data.</p> <p>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.</p> |
| ACD Trunks                                                                              | Real-time data | End of interval | Exact number   | <p>The measured value is an exact number and not an average.</p> <p>This number is the total number of Auto Terminate (AT) trunks and Non AT Trunks.</p> <p>If trunk level reporting is turned off, the measured route number is used.</p>                                                                           |
| Auto Terminate (AT)                                                                     | N/A            | N/A             | N/A            | <p>The sum of the number of AT and Non AT trunks indicates the maximum number of AT or Non AT trunks for which Meridian MAX collects data.</p> <p>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.</p>                           |
| —continued—                                                                             |                |                 |                |                                                                                                                                                                                                                                                                                                                      |

| <b>Table 9-5 (continued)</b><br><b>Basic Capacity Configuration measured value field descriptions</b> |                      |                    |                       |                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------|----------------------|--------------------|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Field name</b>                                                                                     | <b>Time</b>          | <b>Update rate</b> | <b>Measured value</b> | <b>Comment</b>                                                                                                                                                                                                                                                                      |
| Non AT Trunks                                                                                         | N/A                  | N/A                | N/A                   | The sum of the number of AT and Non AT trunks indicates the maximum number of AT or Non AT trunks for which Meridian MAX collects data.<br><br>This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size. |
| <b>Operation Hours</b>                                                                                | N/A                  | N/A                | N/A                   |                                                                                                                                                                                                                                                                                     |
| Agent Shifts Per Day                                                                                  | N/A                  | N/A                | N/A                   | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                |
| Hours Per Day                                                                                         | N/A                  | N/A                | N/A                   | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                |
| Days Per Week                                                                                         | N/A                  | N/A                | N/A                   | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                |
| <b>Storage Duration</b>                                                                               | N/A                  | N/A                | N/A                   | These fields are updated every day at approximately 2 a.m. after the daily midnight backup.                                                                                                                                                                                         |
| Interval Data (days)                                                                                  | All stored intervals | Daily              | Exact number          | This number indicates the amount of interval data, measured in days, currently stored on the system.                                                                                                                                                                                |
| —continued—                                                                                           |                      |                    |                       |                                                                                                                                                                                                                                                                                     |

| <b>Table 9-5 (continued)</b><br><b>Basic Capacity Configuration measured value field descriptions</b> |                   |                    |                       |                                                                                                                |
|-------------------------------------------------------------------------------------------------------|-------------------|--------------------|-----------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Field name</b>                                                                                     | <b>Time</b>       | <b>Update rate</b> | <b>Measured value</b> | <b>Comment</b>                                                                                                 |
| Daily Data (days)                                                                                     | All stored days   | Daily              | Exact number          | This number indicates the amount of daily data, measured in days, currently stored on the system.              |
| Weekly Data (weeks)                                                                                   | All stored weeks  | Daily              | Exact number          | This number indicates the amount of weekly data, measured in weeks, currently stored on the system.            |
| Monthly Data (months)                                                                                 | All stored months | Daily              | Exact number          | This number indicates the amount of monthly data, measured in months, currently stored on the system.          |
| Event Log Data (days)                                                                                 | All stored days   | Daily              | Exact number          | This number indicates the amount of agent event logged data, measured in days, currently stored on the system. |
| —end—                                                                                                 |                   |                    |                       |                                                                                                                |



### Advanced Capacity Configuration measured values

Table 9-6 provides detailed information regarding measured value fields for the Advanced Capacity Configuration screen.

| Table 9-6<br>Advanced Capacity Configuration measured value field descriptions |                   |               |                |                                                                                                                                                                                                                                                                                           |
|--------------------------------------------------------------------------------|-------------------|---------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                     | Storage duration  | Update rate   | Measured value | Comment                                                                                                                                                                                                                                                                                   |
| Queue Operations (per int.)                                                    | N/A               | N/A           | N/A            |                                                                                                                                                                                                                                                                                           |
| Dest. Qs per CDN                                                               | All stored months | Once per week | Average        | The measured value provides the average number of target ACD-DNs per CDN to which calls are directed through CCR.<br>The period of time for which this measurement is taken is defined in the Storage Duration – Monthly Data field.<br>The measured value may exceed the expected value. |
| Dest. Qs per ACD-DN                                                            | N/A               | N/A           | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                      |
| Rem. Src. Qs per ACD-DN                                                        | N/A               | N/A           | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                      |
| Primary Answering Qs                                                           | All stored months | Once per week | Exact number   | The measured value provides the number of unique queues (ACD-DN, CDN, and IVR/Mail) to which all external calls are directed.                                                                                                                                                             |
| —continued—                                                                    |                   |               |                |                                                                                                                                                                                                                                                                                           |

| Table 9-6 (continued)<br>Advanced Capacity Configuration measured value field descriptions |                  |             |                |                                                                                                                                                                                                                                                                                                                                 |
|--------------------------------------------------------------------------------------------|------------------|-------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                                 | Storage duration | Update rate | Measured value | Comment                                                                                                                                                                                                                                                                                                                         |
|                                                                                            |                  |             |                | <p>The period of time for which this measurement is taken is defined in the Storage Duration – Monthly Data field.</p> <p>The expected value denotes the number of unique queues (ACD-DN, CDN, and IVR/Mail) per interval that would receive external calls. Therefore, the measured value could exceed the expected value.</p> |
| <b>Trunk Reassignment (per int.)</b>                                                       | N/A              | N/A         | N/A            |                                                                                                                                                                                                                                                                                                                                 |
| AT Trunk to Queue                                                                          | N/A              | N/A         | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                                                            |
| Qs Receiving Transfers                                                                     | N/A              | N/A         | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                                                            |
| <b>Position Reassignment (per int.)</b>                                                    | N/A              | N/A         | N/A            |                                                                                                                                                                                                                                                                                                                                 |
| Pos. to Supervisor                                                                         | N/A              | N/A         | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                                                                            |
| —continued—                                                                                |                  |             |                |                                                                                                                                                                                                                                                                                                                                 |

| <b>Table 9-6 (continued)</b><br><b>Advanced Capacity Configuration measured value field descriptions</b> |                      |               |                |                                                                                                                                                                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------|----------------------|---------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                                               | Storage duration     | Update rate   | Measured value | Comment                                                                                                                                                                                                                                                                           |
| Pos. to Queue                                                                                            | N/A                  | N/A           | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                              |
| <b>Activity Code Usage (per int.)</b>                                                                    | N/A                  | N/A           | N/A            |                                                                                                                                                                                                                                                                                   |
| Activity Codes per Q                                                                                     | All stored intervals | Once per week | Average        | <p>The measured value provides the average number of activity codes per ACD-DN per interval.</p> <p>The period of time for which this measurement is taken is defined in the Storage Duration – Interval Data field.</p> <p>The measured value may exceed the expected value.</p> |
| Agent Activity Code Reporting                                                                            | N/A                  | N/A           | N/A            | The values valid for this field are ON or OFF.                                                                                                                                                                                                                                    |
| <b>Qs Logged in per Agent</b>                                                                            | N/A                  | N/A           | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                              |
| <b>Agent Events (per day)</b>                                                                            | N/A                  | N/A           | N/A            |                                                                                                                                                                                                                                                                                   |
| Logins per Agent                                                                                         | N/A                  | N/A           | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size.                                                                                                                                              |
| —continued—                                                                                              |                      |               |                |                                                                                                                                                                                                                                                                                   |

| Table 9-6 (continued)<br>Advanced Capacity Configuration measured value field descriptions |                  |             |                |                                                                                                                                      |
|--------------------------------------------------------------------------------------------|------------------|-------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Field name                                                                                 | Storage duration | Update rate | Measured value | Comment                                                                                                                              |
| Walkaways per Agent                                                                        | N/A              | N/A         | N/A            | This field has no measured value. Meridian MAX uses the expected number entered by the user to determine the expected database size. |
| —end—                                                                                      |                  |             |                |                                                                                                                                      |

---

## Chapter 10: Software installation overview

---

### A word about warranties

It is extremely important that you read and understand the warranties issued for your peripheral equipment. Each warranty details what you can and cannot do with the warranted item.

While the utmost care has been taken to ensure that the procedures described in this NTP do not void any of the warranties, it is still possible for an instruction to be in conflict with a warranty, such as warranty changes after the publication of this NTP. If you find such a condition, contact your dealer or Nortel service representative.

**Note:** Meridian 1 Option 114 (Security Package) is a prerequisite for Meridian MAX 8.

#### ATTENTION

Under no circumstances should you void your warranty for the sake of following any instruction given in this (or any other) document. Be sure to register your warranties with the appropriate companies (usually the manufacturers) where required.

#### ATTENTION

When entering a number in response to a prompt, use the upper row of keys (numbers) rather than the numeric keypad. If you want to use the numeric keypad, ensure that the keyboard indicator “NUM LOCK” is on. Otherwise, unpredictable results may occur.

## Meridian MAX 8 platforms

Table 10-1 lists the hardware platforms supported in Meridian MAX 8.

| Table 10-1<br>Meridian MAX 8 platform compositions                                               |             |             |                         |                        |
|--------------------------------------------------------------------------------------------------|-------------|-------------|-------------------------|------------------------|
| System type                                                                                      |             | CPU         | Mass Storage Unit (MSU) |                        |
| Abbreviation                                                                                     | Module type | Card type   | Hard drive              | Cassette drive         |
| SNN                                                                                              | Single      | MVME167-34  | 1 Gbyte                 | 600 Mbyte              |
| SNN-E                                                                                            | Single      | MVME177-005 | 2 Gbyte                 | 600 Mbyte              |
| IPE                                                                                              | IPE         | SMM167      | 180 Mbyte or 240 Mbyte* | 155 Mbyte or 600 Mbyte |
| IPE-E                                                                                            | IPE         | SMM167      | 1 Gbyte                 | 600 Mbyte              |
| * The 240 Mbyte hard disk is configured and recognized by the software as a 180 Mbyte hard disk. |             |             |                         |                        |

## Keycodes

During any Meridian MAX 8 installation, you are required to enter a 20-character alphanumeric keycode. This keycode represents your system options, system hardware, and Meridian 1/SL-1 serial number. Those options are then displayed on the screen for your verification during your installation.

All keycodes are obtained from your Nortel distributor, and any change in system options requires the generation of a new keycode. Once you have your updated keycode, your current application tape is used to update your system options. Any application tape can be used with any hardware platform provided the Meridian 1/SL-1 serial number is the same and you have a unique keycode for each system.

The following keycode information is displayed during your installation or upgrade for verification:

- Meridian 1/SL-1 serial number
- platform
- number of serial ports
- maximum number of position IDs
- number of LAN supervisor sessions
- Configuration Control (enabled/disabled)
- Formula Definition (enabled/disabled)
- NAC Connectivity (enabled/disabled)
- MSL-1 NACD MIS (enabled/disabled)
- CCR/EAR MIS (enabled/disabled)
- Data Stream Reporting (enabled/disabled)
- Meridian Terminal Emulator (MTE) (enabled/disabled)
- MAX Status Interface (MSI) (enabled/disabled)
- number of MAX Event Interface (MEI)-Network links
- number of MAX Event Interface (MEI)-Observe links
- Multiple Queue Assignment (MQA) (enabled/disabled)

**Note:** The MSI and MEI links must also be enabled through the Miscellaneous Options screen and the External Interface Configuration screen. For more information, refer to the *MSI/MEI Protocol Reference Guide* (P0853414).

## New software installations

If your operation has never used an ACD-MAX or Meridian MAX, you can only install a Meridian MAX 8 SNN-E or a Meridian MAX 8 IPE-E.

The SNN/SNN-E and IPE/IPE-E platforms have two types of new software installations—customer installed or factory installed. You perform the applicable procedure the first time you install the system. Refer to the “New software installations” chapter for more information.

## Software reinstallations and upgrades

### Reinstallations

A software reinstallation is performed when you need to reinstall existing Meridian MAX 8 software, if, for example, a problem arises with an installation. If a problem does occur, the system asks you to attempt the installation again. Determine whether hardware is causing the problem (for example, missing or improperly connected equipment), and correct these problems before restarting the installation. If there is a problem with installing a factory-installed software site, the customer-installed software procedure should be used. If no hardware problem exists, then restart the installation. If the problem persists, contact your distributor or Nortel support group for assistance.

If you need to perform a reinstallation, refer to the *Meridian MAX 8 Upgrade Guide* (NTP 553-4001-210), “Software upgrades and reinstallations” chapter.

### Upgrades

As your operation grows, you may require greater Meridian MAX functionality and capacity. This growth can be accommodated through hardware and software upgrades within Meridian MAX 8. System functionality can be increased through software upgrades, once the necessary hardware changes are complete.

A software upgrade is performed when you want to install new Meridian MAX 8 software that changes the system’s features and functionality.

A software upgrade can be performed in two ways:

- 1 The first is within the same Meridian MAX platform, such as upgrading a current SNN-E system to an SNN-E system with more features and functionality.



- 2 The second is between Meridian MAX 8 platforms, such as upgrading an IPE system's software to an SNN system's software, providing you completed the necessary hardware changes during an installation upgrade.

### **Upgrading from Meridian MAX 3 through 7**

If you are currently running one of the following systems, refer to the *Meridian MAX 8 Upgrade Guide* (NTP 553-4001-210) for the specific upgrade procedure to upgrade to a Meridian MAX 8:

- a Meridian MAX 3 or 4 single- or dual-module system
- a Meridian MAX IPE 4.6 system
- a Meridian MAX 5, 6, 7 system

### **Upgrading from ACD-MAX 3 and 4 systems**

If you are currently running an ACD-MAX 3 or 4 system, you must first upgrade to a Meridian MAX 6 before upgrading to Meridian MAX 8. Contact your Nortel representative for more information.

### **Load new software release**

As new releases of Meridian MAX 8 software are developed, you can purchase an updated version of the software and install it onto your Meridian MAX 8. To install the software, you perform the load new software release procedure. Refer to the *Meridian MAX 8 Upgrade Guide* (NTP 553-4001-210), "Loading a new software release" chapter for more information.

## Reentry points

Meridian MAX 8 software has four installation reentry points for the SNN/SNN-E and IPE/IPE-E hardware platforms. If a software installation must be aborted at some point, the installation can be restarted from the last successfully completed section of the installation. For example, if an installation had to be aborted after the OS files had been copied to the hard disk, but before the application files were copied, the installer can skip over the successfully copied OS files and go to the point just before the application files were copied.

**Note:** The system only displays the reentry points available for your installation. You cannot skip steps that were not successfully completed.

Check your error log and system messages when the software installation procedure is complete to ensure no errors were reported. If you want to use a reentry point, check that no errors were reported within the steps you want to skip. If you are unsure, restart the installation from the beginning. If the errors persist, contact your Nortel distributor.

If an error message appears on the screen, perform a graceful shutdown of the system. The system provides prompts and messages for the shutdown.



### **CAUTION**

#### **Risk of data corruption**

If the system is shut down improperly, unpredictable results may occur.

The reentry points for a Meridian MAX are

- 1 from the beginning
- 2 prior to copying the OS files to the hard disk
- 3 prior to copying the Meridian MAX application files to the hard disk
- 4 prior to booting from the hard disk

## Installation tapes

The installation procedure uses two cassette tapes. Care must be taken to avoid damaging the tapes, as their fragility can result in tape errors during the installation procedure. Also, ensure that installation tapes are set to write-protected before using them. Keep tapes away from excessive heat or electromagnetic radiation.

Figure 10-1 shows the correct method for inserting a cassette tape into the 600 Mbyte tape drive of a Meridian MAX 6 or 7 IPE, Meridian MAX 8 SNN-E, or any Meridian MAX SNN.

The 600 Mbyte tape drive in the IPE/IPE-E has been rotated 180 degrees for systems shipped with the Meridian MAX 8 compared to the tape drive released with earlier versions of Meridian MAX IPE. This is shown in Figure 10-2.

Figure 10-3 shows the correct method for inserting and locking a cassette tape into the 155 Mbyte tape drive of any Meridian MAX IPE. Make certain the arrow on the label points towards the drive, and that the notch in the cassette tape is pointing down. After the tape is inserted in the 155 Mbyte tape drive, you must also rotate the tape drive latch clockwise until the latch handle is horizontal.

When following instructions within the procedures regarding cassette tapes, this document refers to the tapes by functional application names, rather than by the labels you see on the different tapes.

Table 10-2 cross references the tape application name used within a procedure and the label on the tape.

| <b>Table 10-2<br/>Tape names</b>            |                                |
|---------------------------------------------|--------------------------------|
| <b>Tape name used in procedure</b>          | <b>Tape label</b>              |
| Generic Operating System tape (Tape 1 of 2) | System V68 R3V8<br>OS_MAX_R8.x |
| Meridian MAX Application tape (Tape 2 of 2) | Meridian MAX R8.x              |

To insert or remove a cassette tape from the Meridian MAX module's tape drive, the front panel may be removed for short periods of time. If you do not need to access the module shortly afterwards, make certain that the front panel (and rear panel, if using Option 21-81) is properly replaced. You must always close and properly latch all panels while the Meridian MAX module is powered on. This procedure ensures that the temperature within the cabinet remains reasonably constant and within the operating temperatures of the equipment.

**Note:** If the cassette tape is inserted incorrectly into the 600 Mbyte tape drive, the tape automatically ejects. Reinsert the tape correctly with the tape arrow pointing toward the drive. Once the tape drive is running (the tape drive light is lit), you cannot eject the tape.




**CAUTION**

**Risk of data corruption**


Do not power off a module without first performing the system shutdown procedure. The Meridian MAX module must not be powered off without first shutting down the system. The shutdown process synchronizes the information currently in system memory with the information on the hard drive. Only in extenuating circumstances should the module be powered off without first shutting down.

**Figure 10-1**


**Inserting a cassette into the 600 Mbyte tape drive of a Meridian MAX 6 or 7 IPE, Meridian MAX 8 SNN-E, or any Meridian MAX SNN**

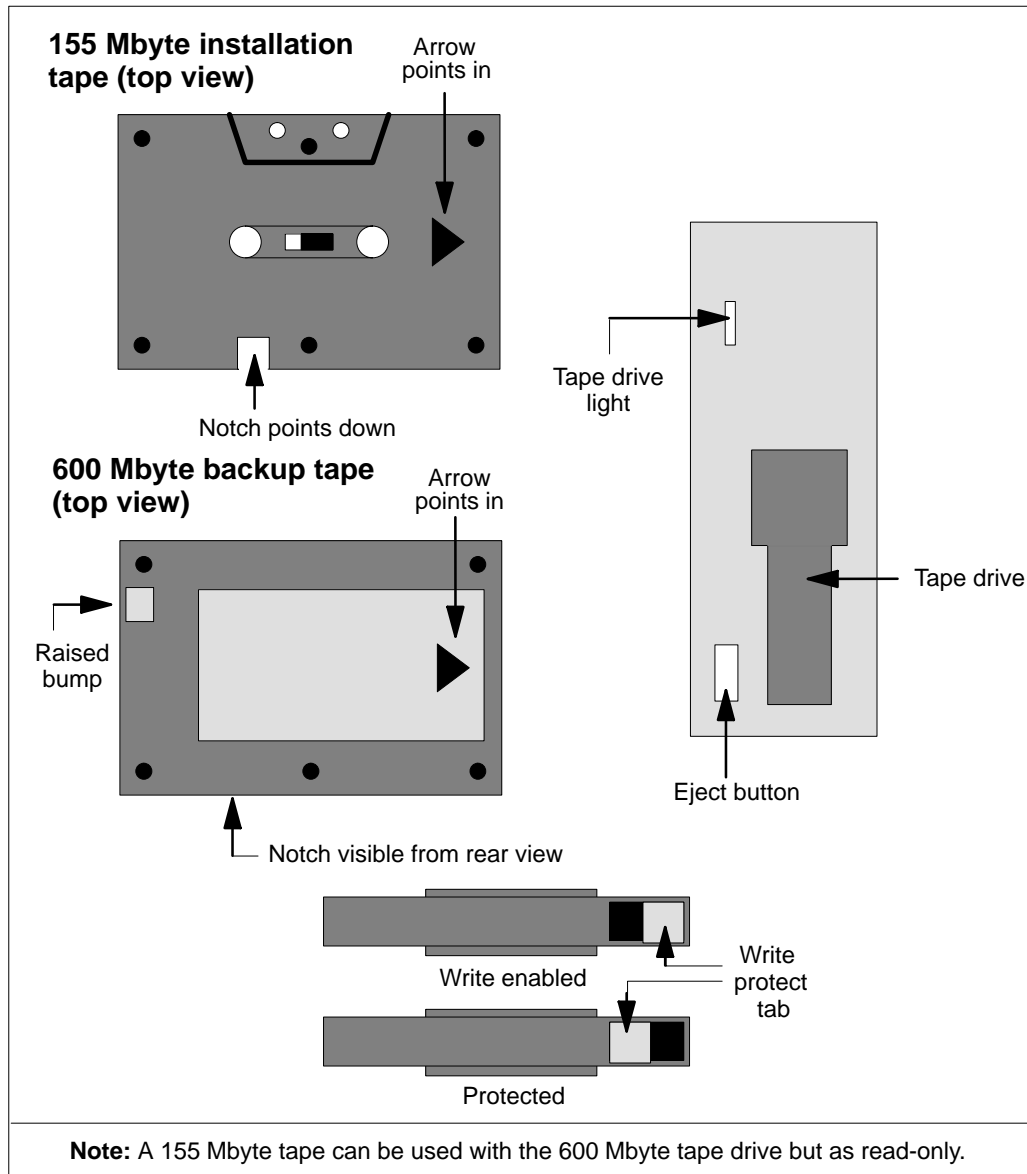

**Figure 10-2**  
**Inserting a cassette into the 600 Mbyte tape drive of a Meridian MAX IPE/IPE-E 8**

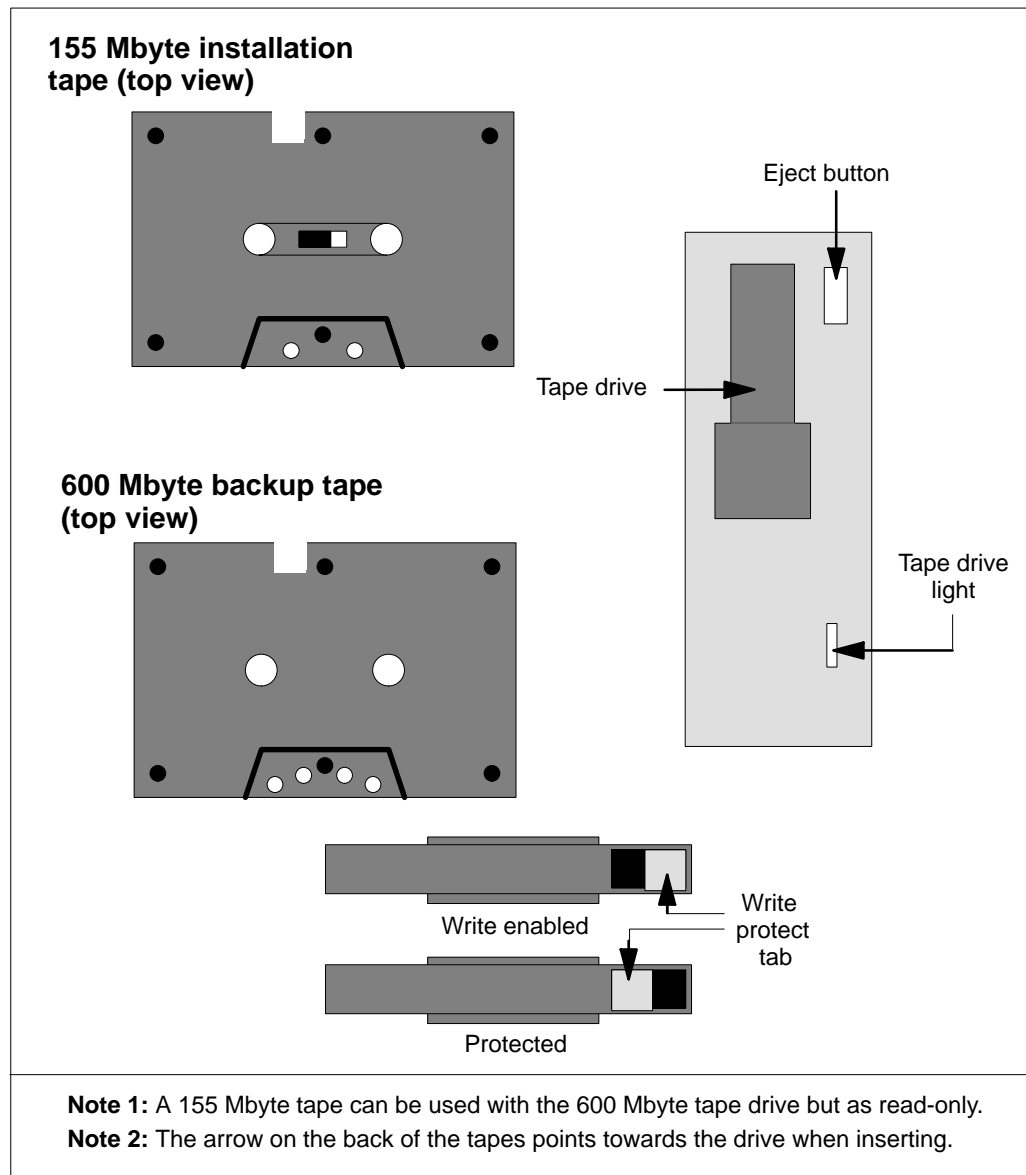

**Figure 10-3**  
**Inserting a cassette into the 155 Mbyte tape drive of a Meridian MAX IPE**

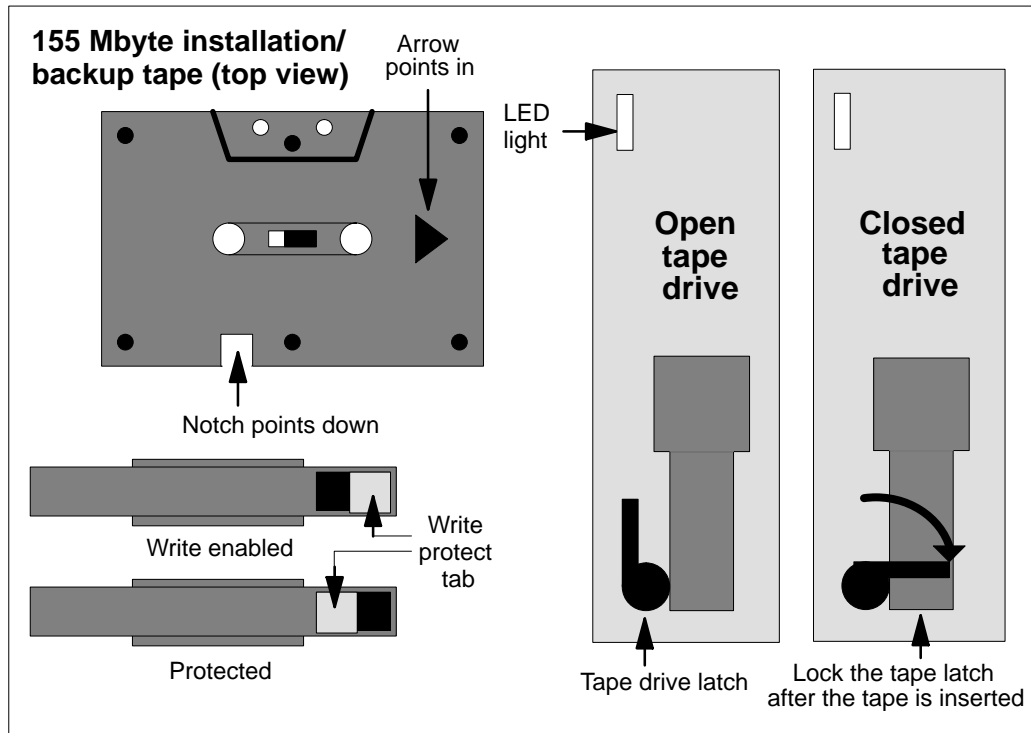

### Cleaning the tape drive

The tape drive should be replaced when you receive repeated errors when attempting to write to tape. You should also consider replacing the tape drive if the light on the front of the tape drive is out, or if you cannot hear or see the tape spinning.

The tape cartridge cavity should be cleaned after an initial pass with a new tape cartridge or whenever dust or debris is visible inside the cartridge cavity. It should also be cleaned after about 100 hours of operation or every three to six months depending on utilization.

To clean the tape drive, you must use the cleaning kit (Number TZ-380) provided through Teac America Inc. This kit can be obtained by contacting your Nortel distributor.

---

## Chapter 11: New software installations

---

You must perform a new installation if your hardware has never been used with a Meridian MAX product.

Two types of new software installation procedures exist for the SNN/SNN-E and IPE/IPE-E: customer installed and factory installed.

To distinguish factory-installed software from customer-installed software, power up the Meridian MAX 8. If the console login prompt appears, then the system has factory-installed software. If the system does not boot up, it has customer-installed software.

Follow Procedure 11-1 if your system has SNN/SNN-E or IPE/IPE-E customer-installed software.

Follow Procedure 11-2 if your system has SNN/SNN-E or IPE/IPE-E factory-installed software.



## Customer-installed software

To perform the following procedure, you need the Meridian MAX 8 Generic Operating System tape (Tape 1 of 2) and the Application tape (Tape 2 of 2).

### Procedure 11-1

#### New installation of the Meridian MAX 8 customer-installed software

- 1 Before beginning the software installation, ensure that the CPU card has been configured correctly.

If you are installing SNN/SNN-E software, refer to the "Hardware installation: Application Module (SNN/SNN-E)" chapter. If you are installing IPE/IPE-E software, refer to the "Hardware installation: Intelligent Peripheral Equipment module" chapter.

- 2 Make sure the power is turned off.

- 3 Insert the Meridian MAX 8 Operating System tape (Tape 1 of 2).

- 4 Power up the module.

If you are installing SNN/SNN-E software, the power switch is located on the left-hand side of the AEM module. The upper switch controls the power for the module in the left side of the Meridian 1, while the lower switch controls the power for the module in the right side.

If you are installing IPE/IPE-E software, the power button is located above the tape drive.

The system displays the copyright and hardware configuration information. Your system messages may differ.

Copyright Motorola Inc. 1988 - 1995, All Rights Reserved

xxxxxxx Debugger/Diagnostics Release Version 1.2 - 02/28/95

**Note:** (The "xxxxxxx" will be MVME177 for SNN-E, MVME167 for SNN, and M4120 for IPE/IPE-E.)

COLD Start

Local Memory Found =xxxxxxx (&xxxxxxx)

**Note:** (The "xxxxxxx (&xxxxxxx)" will be 04000000 (&67108864) for SNN-E, 02000000 (&33554432) for SNN, and 01000000 (&16777216) for IPE/IPE-E.)

MPU Clock Speed =xxMhz

**Note:** (The "xx" will be 50 Mhz for SNN-E, 33 Mhz for SNN, and 25 Mhz for IPE/IPE-E.)

Autoboot in progress... To abort hit <BREAK>

- 5 Press **{BREAK}** to stop the hard disk load and begin the tape load.

**Note:** {F5} on the VT520 and VT420 is equivalent to the {BREAK} key.

The system displays the following prompt.

```
--Break Detected--
```

```
xxx-Bug>
```

**Note:** (The "xxx" will be 177 for SNN-E, 167 for SNN, and 4120 for IPE/IPE-E.)

- 6 Wait for the tape to rewind. The tape drive light turns off when the tape is rewound.

At the previous prompt, enter **bo 0,40** followed by **{RETURN}**.

```
Booting from: xxxxxx, Controller 0, Drive 40
```

**Note:** (The "xxxxxx" will be VME177 for SNN-E, VME167 for SNN, and M4120 for IPE/IPE-E.)

```
Loading: Operating System
```

```
Volume: V/68
```

```
IPL loaded at: $001F0000
```

```
MVMETAPE IPL Version 1.0
```

There is a one- to two-minute delay before the system continues with the following:

```

```

```
System V/68 Release R3V8 xxxxxx Version 950119
```

**Note:** (The "xxxxxx" will be M68060 for SNN-E and M68040 for SNN or IPE/IPE-E.)

```
Real mem = xxxxxxxx
```

**Note:** (The "xxxxxx" will be 65011712 for SNN-E, 31457280 for SNN, and 14680064 for IPE/IPE-E.)

```
Avail mem = xxxxxxxx
```

**Note:** (The "xxxxxx" will be 63111168 for SNN-E, 29859840 for SNN, and 13230080 for IPE/IPE-E.)

```
Buffers = 60
```

```

```

## 11-4 New software installations

---

Copyright (c) 1984-1995 Motorola Inc. All rights reserved

INIT: SINGLE USER MODE

\*\*\*

Control Key Assignments: erase = DEL kill = ^u intr = ~  
quit = ^x

\*\*\*

The following message shows the SCSI configuration:

xxx SCSI configuration

**Note:** (The "xxx" will be 177 for SNN-E, and 167 for SNN or IPE/IPE-E.)

| Device | Addr | Vers | Revision | Serial# | Blocks  | Size  | Vendor  | Description |
|--------|------|------|----------|---------|---------|-------|---------|-------------|
| -----  | ---- | ---- | -----    | -----   | -----   | ----- | -----   | -----       |
| Disk   | 00   | 0002 | 8770...  | .....   | 2054325 | 0512  | SEAGATE | ST11200N    |
| Tape   | 40   | 0001 | RV J...  | .....   | 0000000 | 0000  | TEAC    | MT-2ST/F50B |

This configuration is only an example. Your system may differ.

Enter the correct date and time [mmddhhmmyyyy]:

- 7** Enter the correct date and time, followed by **{RETURN}**.

The first pair of numbers represent the month, the second pair of numbers represent the day, the third pair of numbers represent the hour in the 24-hour time cycle, the fourth pair of numbers represent the minutes, and the last four numbers represent the year. For example, if 051212211996 is entered, the system asks you the following question:

Is the date Wed May 12 12:21:00 1996 correct? (y or n)

- 8** If the date and/or time you entered is incorrect, enter **n**, followed by **{RETURN}**. The system then returns you to Step 7. If the date and time you entered are correct, enter **y**, followed by **{RETURN}**. The system continues.

\*\*\*> From this point on, many system messages will be  
timestamped. (TIME)

The word TIME in parentheses indicates a time message displayed by your system.

- 9** The system prompts you to enter your 20-character alphanumeric keycode followed by your Meridian 1/SL-1 serial number. These characters are represented by the pound key (#) followed by **{RETURN}**.

Please enter the first four characters of the keycode,  
or 'q' to quit: ####

Please enter the next four characters of the keycode,  
or 'q' to quit: ####

Please enter the next four characters of the keycode,  
or 'q' to quit: ####

Please enter the next four characters of the keycode,  
or 'q' to quit: ####

Please enter the last four characters of the keycode,  
or 'q' to quit: ####

Please enter the Meridian 1/SL-1 serial number that  
corresponds to this keycode, or 'q' to quit: #####

- 10** If the system is unable to decrypt the keycode, you are prompted to reenter the keycode or abort the procedure. If the problem persists, the system aborts the procedure and prompts you to contact your Nortel service representative.

If the keycode is decrypted successfully, the system continues with the following:

The following options were encoded in the keycode that you entered. Please verify that the options are correct:

| Option                     |   | Setting |
|----------------------------|---|---------|
| -----                      |   | -----   |
| Serial Number              | : | #####   |
| Platform                   | : | SNN*    |
| Number of Serial Ports     | : | 40      |
| Max. Position IDs          | : | 1200    |
| LAN Supervisor Sessions    | : | 25      |
| Num of MEI-Network Link(s) | : | 1       |
| Num of MEI-Observe Link(s) | : | 3       |
| Configuration Control [CC] | : | ENABLED |
| Formula Definition [FD]    | : | ENABLED |
| NAC Connectivity [NAC]     | : | ENABLED |
| MSL-1 NACD MIS [NACD]      | : | ENABLED |

## 11-6 New software installations

---

```
CCR/EAR MIS [CCR] : ENABLED
Datastream Reporting [DSR] : ENABLED
M1 Terminal Emulator [MTE] : ENABLED
Multiple Queue Assgn. [MQA] : ENABLED
MAX Status Interface [MSI] : DISABLED
```

Are the options correct? (y/n)

This configuration is an example. Your system options may differ.

Note that for an SNN/SNN-E system, the total number of configured, directly connected workstations plus the number of connected LAN supervisor sessions cannot exceed 60. For an IPE/IPE-E system, the number cannot exceed 20.

\* If a keycode for an IPE system is used in an IPE-E hardware configuration, a warning message appears. Action is not required because Meridian MAX automatically enters the proper platform associated with the keycode. Continue with the procedure after reading the warning message. This also occurs if an IPE-E keycode is used in an IPE platform.

- 11** If the options are incorrect, enter **n**. The system prompts you to reenter the keycode or abort the procedure. If the problem persists, the system aborts the procedure. Contact your Nortel service representative.

If the system configuration is correct, enter **y**.

If the MQA option or NACD option, or both, are enabled, a warning message appears.

If you wish to proceed, enter **y**.

- 12** If the configuration is recognized, the system displays the message shown in Step 14.

If the hard disk drive type cannot be identified, the system displays the following message:

```
The system has detected an unknown disk drive type: xxxxxx xxxx
```

**Note:** (The "xxxxxx xxxx" describes the model of the hard disk drive which has been detected.)

Please enter the correct drive type from the choices listed below, or type "q" to abort the installation.

1. 2.0 GB
2. 1.2 GB (Seagate 94601)  
1.2 GB (CDC 94601)
3. 1.0 GB (Seagate ST11200N)  
1.0 GB (Seagate ST11200N ST3123)
4. 240 MB (Fujitsu M2614 M2637S)
5. 240 MB (Seagate ST3283N)
6. 180 MB (Fujitsu M2614S)
7. 172 MB (CDC ST1201N)  
172 MB (Seagate ST1201N)  
172 MB (CDC 94315-200S)  
172 MB (Seagate 94315-200S)

Enter a number from 1 to 7, or enter q to quit:

- 13** Select an entry which is the most appropriate for your Meridian MAX system.
- 14** Your system configuration is displayed. The following configuration is only an example. Your system configuration will differ depending on your platform.

MAX has detected that you are running the following hardware configuration:

|            |                             |
|------------|-----------------------------|
| System     | : Meridian MAX 8 SNN        |
| CPU        | : 167 Card                  |
| Memory     | : 32 MB                     |
| Hard Disk  | : 1.0 GB (Seagate ST11200N) |
| Tape Drive | : 600 MB (Teac MT-2ST/F50B) |

## 11-8 New software installations

---

If this configuration does not match your configuration, or if this configuration is not the configuration ordered, please type "n" to the following question. The installation will abort. Please call your service representative for further assistance.

---> Do you wish to install the hardware configuration specified above (y/n) ?

- 15** If you want to abort the installation, enter **n**, followed by **{RETURN}**. If you want to install the hardware configuration, enter **y**, followed by **{RETURN}**.
- 16** The system displays the Meridian MAX Software Installation Menu. Since this procedure is a new installation, enter **1**, followed by **{RETURN}**.

The Meridian MAX Software Installation Menu

-----

- 1 New Installation
- 2 Installation Upgrade
- 3 Application Upgrade

--->Enter a number to select the type of installation/upgrade desired, or enter q to quit :

- 17** The system continues.

Will perform a New Installation.

---> Do you wish to restart a previously-aborted installation (y/n)?

- 18** If you do not want to restart a previously aborted installation, enter **n**, followed by **{RETURN}**. Go to Step 20.
- If you want to restart a previously aborted installation, enter **y**, followed by **{RETURN}**. The system continues.

\*\*\*> Determining whether the new installation can be re-started...

The system displays the Meridian MAX Installation/Upgrade Restart Menu.

**Note:** Only those reentry points that have been verified by your system are shown in the Meridian MAX Installation/Upgrade Restart Menu.

The Meridian MAX Installation/Upgrade Restart Menu

-----  
Restart Meridian MAX new installation from one of the following stages:

- 1 From the Beginning
- 2 Just Before Copying OS Files to Hard Disk
- 3 Just Before Copying MAX Application Files to Hard Disk
- 4 Just Before Booting From Hard Disk

--> Enter a number to select the stage from which to install, or enter q to quit:

- 19** If you want to quit, enter **q**, followed by **{RETURN}**. The installation is aborted and a prompt appears to allow you to restart the installation.  
If you want to restart the installation from the beginning, enter **1**, followed by **{RETURN}**. The system displays the following message:

You have chosen to start the Meridian MAX new installation from the beginning.

If you want to restart the installation just before the OS files are copied to the hard disk, enter **2**, followed by **{RETURN}**. The system displays the following message:

You have chosen to start the Meridian MAX new installation at the point where the OS files are about to be copied to the hard drive.

If you want to restart the installation just before the Meridian MAX application files are copied to the hard disk, enter **3**, followed by **{RETURN}**. The system displays the following message:

You have chosen to start the Meridian MAX new installation at the point where the application files are about to be copied to the hard drive.



If you want to restart the installation just before the Meridian MAX system boots from the hard disk, enter **4**, followed by **{RETURN}**. The system displays the following message:

You have chosen to start the Meridian MAX new installation at the point where the system is about to be booted from the hard disk for the first time.

**20** The system continues.

```
---> Will the MAX system be in Agent-ID mode or
 Position-ID mode? (MAX must be in the same mode as
 the Meridian 1/SL-1.)
```

Please enter either 'a' or 'p' :

If your Meridian MAX is in Agent-ID mode or has MQA enabled, enter **a**, followed by **{RETURN}**. If the system is in Position-ID mode, enter **p**, followed by **{RETURN}**.

**Note:** If your Meridian MAX has MQA enabled, ensure that your Meridian 1 is also in Agent-ID mode.

The system continues with the following prompt:

Please verify that the Meridian 1/SL-1 is in the same mode as MAX.

Is the Meridian 1/SL-1 in XXXXX-ID mode (y/n)?

**Note:** (The "xxxxx" is either agent or position, depending upon which you entered at the beginning of this step.)

**21** If the Meridian 1 is in the same mode as the Meridian MAX, enter **y**, followed by **{RETURN}**.

```
WARNING: Meridian MAX new installation requires
 overwriting the hard disk. This means that
 FILES AND DATA ON THE DISK WILL BE
 DESTROYED.
```

```
---> Do you wish to begin Meridian MAX new installation
 (y, n, q, ?) [q]:
```

**22** If you want to begin the installation, enter **y**, followed by **{RETURN}**. The system continues.

```
***> Beginning new installation (TIME)
***> Checking tape in drive... (TIME)
***> Retensioning tape (in background) (TIME)
```

If you chose not to restart a previously aborted installation or chose reentry point 1 in Step 19 (to restart the installation from the beginning), go to Step 23.

If you chose reentry point 2 in Step 19 (to restart the installation just before copying the OS files to the hard disk), go to Step 24.

If you chose reentry point 3 in Step 19 (to restart the installation just before copying the application files to the hard disk), the system displays the following messages:

```
***> Mounting root file system as /root (TIME)
***> Mounting the usr file system as /root/usr (TIME)
***> Installing MAX-specific configuration files (TIME)
***> Setting permissions on installation disk's root
 directory (TIME)
```

Go to Step 25.

If you chose reentry point 4 in Step 19 (to restart the installation just before booting from the hard disk for the first time), the system displays the following messages:

```
***> Mounting root file system as /root (TIME)
***> Mounting the usr file system as /root/usr (TIME)
```

The system has been reset to perform the installation again, starting from the first boot from the hard disk. Please perform the following steps:

1. Remove the tape from the tape drive.
2. Turn off the power for the module.
3. Wait 20 seconds for the power to reset.
4. Turn on the power for the module.

```

```

Please reboot the system now.

```

```

Go to Step 29.

- 23** \*\*\*\*\*
- Stage 1 – Formatting Hard Drive and Creating File Systems  
\*\*\*\*\*
- \*\*\*> Formatting root file system's disk drive (TIME)  
This will take about xx minutes...
- Note:** (The "xx" will be 10 with IPE, 20 with IPE-E or SNN, and 30 with SNN-E.)
- \*\*\*> Writing slice table to /dev/rdisk/mxxx\_00s7 (TIME)
- Note:** (The "xxx" will be 177 with SNN-E and 167 with SNN or IPE/IPE-E.)
- \*\*\*> Creating the root file system (TIME)
- \*\*\*> Labeling the root file system (TIME)
- \*\*\*> Creating the swap file system (TIME)
- \*\*\*> Labeling the swap file system (TIME)
- \*\*\*> Creating the usr file system (TIME)
- \*\*\*> Labeling the usr file system (TIME)
- \*\*\*> Installing boot-loader on root file system's disk drive (TIME)
- 24** \*\*\*\*\*
- Stage 2 – Copying OS Files to Hard Disk  
\*\*\*\*\*
- The following two messages only appear if no reentry point was used, or if reentry point 1 was chosen:
- \*\*\*> Mounting root file system as /root (TIME)
- \*\*\*> Making the /tmp directory (TIME)
- \*\*\*> Making the /usr directory (TIME)
- \*\*\*> Mounting usr file system as /root/usr (TIME)
- \*\*\*> Waiting for tape to complete retensioning (TIME)
- \*\*\*> Copying files; this will take from 10 to 20 minutes depending upon your system configuration... (TIME)
- \*\*\*> Making the root file system lost+found directory (TIME)

Reserving xxx entries

**Note:** (The “xxx” will be 128 with IPE and 224 with SNN/SNN-E, or IPE-E.)

\*\*\*> Making the usr file system lost+found directory  
(TIME)

Reserving xxxxx entries

**Note:** (The “xxx” will be 704 with IPE and 1312 with SNN/SNN-E or IPE-E.)

The following message only appears if no reentry point was used, or if reentry point 1 was chosen:

\*\*\*> Installing /etc/badtracks/mxxx\_00 bad spot list  
(TIME)

**Note:** (The “xxx” will be 177 with SNN-E and 167 with SNN or IPE/IPE-E.)

\*\*\*> Creating sysadm(lm) package information file (TIME)

\*\*\*> Setting up the new operating system (TIME)

\*\*\*> Creating root and usr file system associated device nodes (TIME)

\*\*\*> Installing MAX-specific configuration files (TIME)

\*\*\*> Setting permissions on installation disk's root directory (TIME)

- 25** \*\*\*\*\*  
Stage 3 – Copying MAX Application Files to Hard Disk  
\*\*\*\*\*

Please remove the OS tape from the tape drive and put in the Meridian MAX Application Tape.

- 26** Remove the OS tape from the tape drive and insert the application tape (Tape 2 of 2).

Wait for the tape to rewind. The tape drive light turns off when the tape is rewound.

---> Did you insert the application tape in the tape drive (y/n)?

- 27** If you followed the instructions given in Step 26 and the tape drive light is off, enter **y**, followed by **{RETURN}**.

The system continues.

## 11-14 New software installations

---

```
***> Checking tape in drive... (TIME)

***> Copying files; this will take from 10 to 20 minutes
 depending upon your system configuration... (TIME)

28 *****
 Stage 4 - Preparing to Reboot from Hard Disk

***> Unmounting all mounted file systems (TIME)

***> Synchronizing the installation disk (TIME)

The Meridian MAX product has been installed on the hard
disk.

You may now remove the tape from the tape drive.

* You must REBOOT the system and allow it to autoboot from
* the hard disk. Please power off the system now.
*

* Please allow 20 seconds between turning the power off and
* on again to allow the power to reset.

**** REBOOT THE SYSTEM ****

29 After you turn off the power for the module, wait 20 seconds, and turn
the power on again. The system automatically reboots. Your system
messages may differ.

Copyright Motorola Inc. 1988 - 1996, All Rights Reserved

xxxxxxx Debugger/Diagnostics Release Version 1.1 - 01/11/96

Note: (The "xxxxxxx" will be MVME177 with SNN-E, MVME167 with
SNN, and M4120 with IPE/IPE-E.)

COLD START

Local Memory Found =xxxxxxx (&xxxxxxxxxxx)

Note: (The "xxxxxxxx (&xxxxxxxxxxx)" will be 04000000 (&62108864) for
SNN-E, 02000000 (&33554432) with SNN, and 01000000
(&16777216) with IPE/IPE-E.)

MPU Clock Speed =xxMhz

Note: (The "xx" will be 50 Mhz with SNN-E, 33 Mhz with SNN, and
25 Mhz with IPE/IPE-E.)
```

Autoboot in progress... To abort hit <BREAK>

Booting from: xxxxxx, Controller 0, Drive 0

**Note:** (The "xxxxxx" will be VME177 with SNN-E, VME167 with SNN, and M4120 with IPE/IPE-E.)

Loading: Operating System

Volume: \$00000000

IPL loaded at: \$001F0000

VME Disk IPL Version 52.2

\*\*\*

erase = DEL kill = ^u intr = ^c quit = ^x

\*\*\*

**Note:** The previous message indicates that the keys {CONTROL} {C} pressed simultaneously cause a system interruption which terminates the current process. The {DEL} key deletes and backspaces one character.

xxx SCSI configuration

**Note:** (The "xxx" will be 177 with SNN-E, and 167 with SNN or IPE/IPE-E.)

| Device | Addr | Vers | Revision | Serial# | Blocks  | Size  | Vendor  | Description |
|--------|------|------|----------|---------|---------|-------|---------|-------------|
| -----  | ---- | ---- | -----    | -----   | -----   | ----- | -----   | -----       |
| Disk   | 00   | 0002 | 8770...  | .....   | 2054325 | 0512  | SEAGATE | ST11200N    |
| Tape   | 40   | 0001 | RV J...  | .....   | 0000000 | 0000  | TEAC    | MT-2ST/F50B |

This configuration is only an example. Your system may differ.

Enter <CR> to pause in a single user shell before init.

Default boot sequence continuing...

The system is coming up. Please wait.

Node name set to MAX00.

Updating serial devices for current CPU

mount -f S51K /dev/usr /usr

Checking for system dump messages ...

Checking for system dump

## 11-16 New software installations

---

Expreserve notification performed.

Downloading MVME332XT Line Disciplines.

**Note:** (The previous prompt only appears on SNN/SNN-E platforms.)

Error logging started.

OSM Logging Started.

\*\*\*> Configuring port devices... (TIME)

\*\*\*> Finished configuring port devices. (TIME)

Transport Provider daemon started.

Internet services provided.

portmap started.

Stream Error logging started.

netspec "tcpip" not set up.

Network Commands: rwalld

routed started.

NFS Startup...

ONC daemons:

NFS daemons:

Lock manager:

NFS Startup complete.

Line printer scheduler started.

Module ID = MAX00

MAX Configuration = 1 Module(s)

\*\*\*> Setting up directories and file permissions...(TIME)

\*\*\*> Creating the System database - please wait...(TIME)

System database created.

\*\*\*> Loading MAX 8 system data files...

Loading data files for training mode...

Data files loaded

- 30** The system displays the language options installed on your system. The language options listed below are provided as an example only. Your system language options may differ.

```
***> Your current language options are:
```

```
Default: English
```

```
Secondary: French
```

```
---> Would you like to change your secondary language
(y/n)?
```

- 31** If the language options displayed by the system are correct and you do not want to change them, enter **n**, followed by **{RETURN}**. Go to Step 35.

If the language options displayed by the system are not correct and you want to change them, enter **y**, followed by **{RETURN}**.

- 32** The system displays the available system secondary language options. For example:

```
***> Available system secondary language options:
```

- 1. French
- 2. German
- 3. Spanish
- 4. Japanese

```
---> Please select the MAX secondary language by entering its
number:
```

**Note:** Changing the secondary language only affects the Meridian MAX supervisor screens. All installation screens as well as all maintenance and administration screens remain in English.

- 33** Enter the number associated with the secondary language option you want to install, followed by **{RETURN}**.

The system then displays the current system language options and the following message:

```
---> Are the language options correct (y/n)?
```

- 34** If the language options displayed are not correct and you want to change them, enter **n**, followed by **{RETURN}**. Go to Step 32.

If the language options displayed are correct, enter **y**, followed by **{RETURN}**.



- 35** \*\*\*> Creating USER LANGUAGE database – please wait... (TIME)  
USER LANGUAGE database created.
- > Which customer number would you like this MAX site to use?
- 36** Enter the number between 0 and 99 (inclusive) that corresponds to the customer number assigned to your Meridian 1 switch, followed by **{RETURN}**.
- \*\*\*> Customer number changed to ##  
(Where ## is the customer number you entered.)
- 37** The system displays the Meridian MAX Hardware and System Parameters screen.
- Refer to the “Meridian MAX system configuration” chapter for instructions on how to assign your system ports, Meridian MAX system parameters, and external interface link ports.
- 38** When you have completed the system capacity configuration screens, the system continues with the installation.
- \*\*\*> Historical Data database update starts.
- \*\*\*> Creating the MAX 8 Historical Data database for training mode.
- This process takes approximately 5 minutes to execute.
- Creating a new database (TIME)
- \*\*\*> End of Historical Data database update.
- \*\*\*> Loading data files for training mode...  
Historical Data database loaded.
- \*\*\*> Setting the time to Thu Jun 22 12:00 1989 for Training mode.
- Loading System Language Strings ...  
Loading System Language Strings completed.
- Starting MAX OSM Logger, Please Wait ...  
OSM Logging Stopped.
- MAX OSM Logging Started.
- Meridian MAX release 08.xx  
Meridian MAX Training Mode

Please login as precut for more details.

The system is ready.

Console Login:

- 39** Before logging in, ensure that the installation was successful. Review the Meridian MAX error log for any fatal messages.

Log in as **maint** and refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “Diagnostics” section, “View MAX error log” subsection, for more information.
- 40** Ensure that the correct system options were enabled.

Refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “View/Modify Meridian MAX Options” section, “Current Options Display” subsection, for more information.
- 41** If the system was installed correctly, go to Step 42.

If the system was not installed correctly, you must reinstall it. Ensure that no errors occurred within the steps you want to skip. If you are unsure, restart the reinstallation from the beginning. If the errors persist, contact your Nortel distributor.
- 42** Insert a new blank tape into the tape drive for daily backups. Ensure that the write-protect tab on the blank cartridge tape is set to write-enabled to allow the system to write information on the tape. The importance of backups is explained in the *Meridian MAX 8 Installation Guide* (NTP 553-4001-111), “Software installation overview” chapter, “Backups” section.
- 43** Log in as **precut**.

Refer to the “Operating modes” chapter for the correct procedure to switch from Training mode to Precutover mode. Refer to the “Operating modes” chapter, “Switching from Training mode to Precutover mode” procedures, for further instructions on how to transfer from Training mode to Precutover mode.

## Factory-installed software

To perform the following procedure, you need the Meridian MAX 8 Generic Operating System tape (Tape 1 of 2) and the Application tape (Tape 2 of 2).

Follow Procedure 11-2 if your system has SNN/SNN-E or IPE/IPE-E factory-installed software.

### Procedure 11-2

#### New installation of the Meridian MAX 8 factory-installed software

- 1 Before beginning the software installation, ensure that the CPU card has been configured correctly.

If you are installing SNN/SNN-E software, refer to the "Hardware installation: Application Module (SNN/SNN-E)" chapter. If you are installing IPE/IPE-E software, refer to the "Hardware installation: Intelligent Peripheral Equipment module" chapter.

- 2 Power up the module.

If you are installing SNN/SNN-E software, the power switch is located on the left-hand side of the AEM module. The upper switch controls the power for the module in the left side of the Meridian 1, while the lower switch controls the power for the module in the right side.

If you are installing IPE/IPE-E software, the power button is located above the tape drive.

*The system displays the copyright and hardware configuration information. Your system messages may differ.*

Copyright Motorola Inc. 1988 - 1995, All Rights Reserved

xxxxxxx Debugger/Diagnostics Release Version 1.2 - 02/28/95

**Note:** (The "xxxxxxx" will be MVME177 for SNN-E, MVME167 for SNN, and M4120 for IPE/IPE-E.)

COLD Start

Local Memory Found =xxxxxxx (&xxxxxxx)

**Note:** (The "xxxxxxx (&xxxxxxx)" will be 04000000 (&67108864) for SNN-E, 02000000 (&33554432) for SNN, and 01000000 (&16777216) for IPE/IPE-E.)

MPU Clock Speed =xxMhz

**Note:** (The "xx" will be 50 Mhz for SNN-E, 33 Mhz for SNN, and 25 Mhz for IPE/IPE-E.)

Autoboot in progress... To abort hit <BREAK>

Booting from xxxxxx, Controller 0, Device 0

**Note:** (The "xxx" will be VME177 for SNN-E, VME167 for SNN, and M4120 for IPE/IPE-E.)

Loading: Operating System

Volume: \$00000000

IPL loaded at: \$001F0000

VME Disk IPL Version 52.2

\*\*\*

erase = DEL    kill = ^u    intr = ^c    quit = ^x

\*\*\*

**Note:** The previous message indicates that the {CONTROL}{C} keys pressed simultaneously cause a system interruption which terminates the current process. The {DEL} key deletes and backspaces one character.

xxx SCSI configuration

**Note:** (The "xxx" will be 177 for SNN-E, and 167 for SNN or IPE/IPE-E.)

| Device | Addr | Vers | Revision | Serial# | Blocks  | Size  | Vendor  | Description |
|--------|------|------|----------|---------|---------|-------|---------|-------------|
| -----  | ---- | ---- | -----    | -----   | -----   | ----- | -----   | -----       |
| Disk   | 00   | 0002 | 8770...  | .....   | 2054325 | 0512  | SEAGATE | ST11200N    |
| Tape   | 40   | 0001 | RV J...  | .....   | 0000000 | 0000  | TEAC    | MT-2ST/F50B |

This configuration is only an example. Your system may differ.

Enter <CR> to pause in a single user shell before init.

Default boot sequence continuing...

The system is coming up. Please wait.

Node name set to MAX00.

Updating serial devices for current CPU

mount -f S51K /dev/usr /usr

Checking for system dump messages...

## 11-22 New software installations

---

Checking for system dump

Expreserve notification performed.

Downloading MVME332XT Line Disciplines.

**Note:** (The previous prompt only appears on SNN/SNN-E platforms.)

Error logging started.

OSM Logging Started.

port-hold Started.

Transport Provider daemon started.

Internet services provided.

portmap started.

Stream Error logging started.

netspec "tcpip" not set up.

Network Commands: rwalld

routed started.

NFS Startup...

ONC daemons:

NFS daemons:

Lock manager:

NFS Startup complete.

Line printer scheduler started.

Loading System Language Strings ...

Loading System Language Strings completed.

Starting MAX OSM Logger, Please Wait ...

OSM Logging Stopped.

MAX OSM Logging Started.

Meridian MAX release 08.xx

Meridian MAX Training Mode

Please login as precut for more details.

The system is ready.

Console Login:

**3** Using the Maintenance console, log in as **maint**.


The system will display the following:

Password:

**4** Enter the maintenance password.

*The system displays the Maintenance and Administration Menu that appears while the system is active.*


**Figure 11-1**  
**Maintenance and Administration menu—system running**

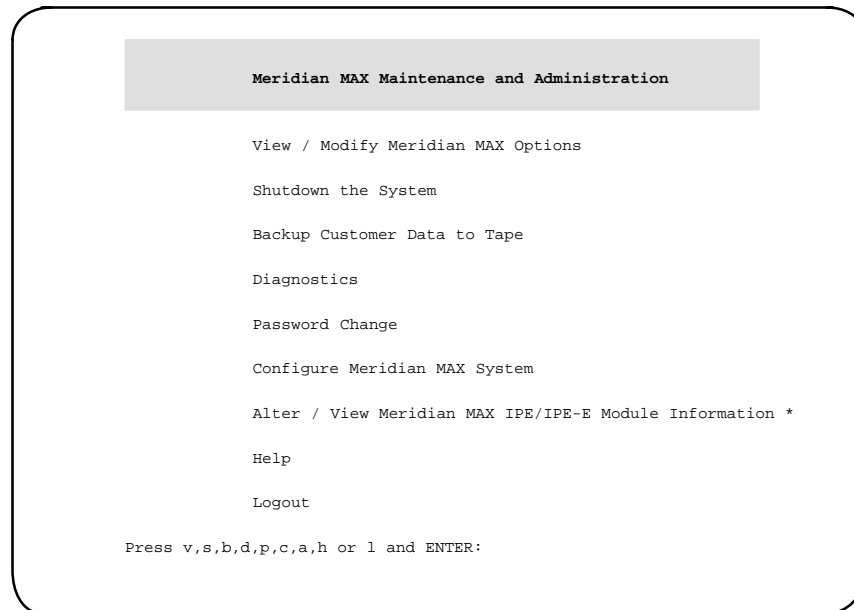

**Note:** \* This field is only available on the IPE/IPE-E hardware platform.

- 5 Enter **s**, followed by **{RETURN}**, to shut down the system.  
*The screen goes blank for several seconds. Then the system asks you to confirm your choice:*  
  
Press **y** and ENTER to confirm system shutdown.  
  
(Just ENTER to quit)
- 6 Enter **y**, followed by **{RETURN}**, to confirm the shutdown of the system.  
*The system displays the Meridian MAX Maintenance and Administration Menu that appears while the system is inactive.*

**Figure 11-2**  
**Maintenance and Administration menu—system shutdown**

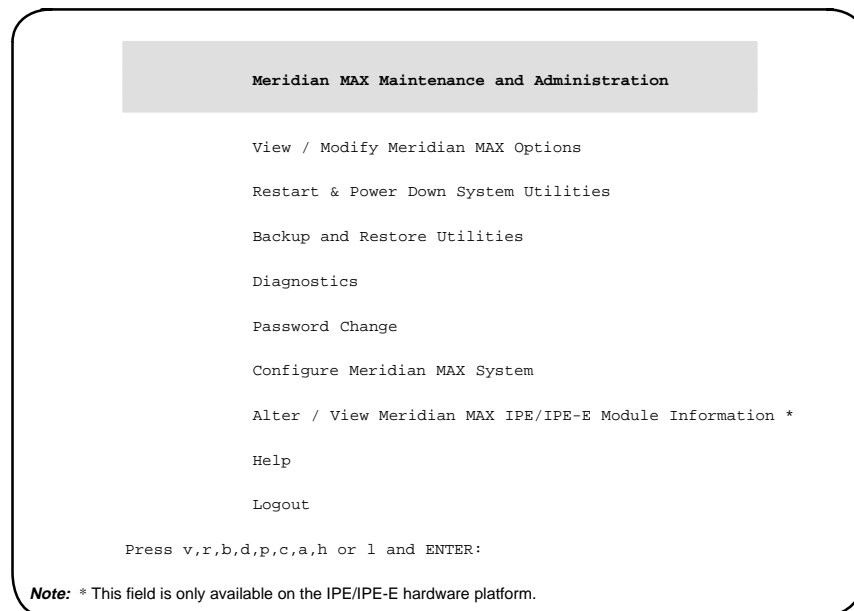

- 7 Enter **v**, followed by **{RETURN}**, for the View/Modify Meridian MAX Options menu.
- 8 Enter **c**, followed by **{RETURN}**, to select Current Options Display.  
This Meridian MAX Options screen displays the options selected for your site. This screen is a sample.

Note that for an SNN/SNN-E system, the total number of configured direct connections plus the number of active LAN sessions cannot exceed 60 supervisor sessions. For an IPE/IPE-E system, the number cannot exceed 20.

**Figure 11-3**  
**Meridian MAX Options screen**

Meridian MAX Options


|                             |           |                  |        |
|-----------------------------|-----------|------------------|--------|
| Product Release             | :08.0x    | Software Version | :08.xx |
| Hardware Platform           | :SNN      | Database Version | :08.00 |
| Meridian 1 Serial #         | :12345    | Customer Number  | :0     |
| Combined Call Abandon       | :DISABLED | Agent-ID mode    | :YES   |
| Num Of Serial Ports         | :40       |                  |        |
| Max. Position IDs           | :1200     |                  |        |
| LAN Supervisor Sessions     | :25       |                  |        |
| Num of MEI-Network Links(s) | :1        |                  |        |
| Num of MEI-Observe Link(s)  | :3        |                  |        |
| Configuration Control [CC]  | :ENABLED  |                  |        |
| Formula Definition [FD]     | :ENABLED  |                  |        |
| NAC Connectivity [NAC]      | :ENABLED  |                  |        |
| MSL-1 NACD MIS [NACD]       | :ENABLED  |                  |        |
| CCR/EAR MIS [CCR]           | :ENABLED  |                  |        |
| Datastream Reporting [DSR]  | :ENABLED  |                  |        |
| M1 Terminal Emulator [MTE]  | :ENABLED  |                  |        |
| Multiple Queue Assgn. [MQA] | :ENABLED  |                  |        |
| MAX Status Interface [MSI]  | :DISABLED |                  |        |

Press ENTER to return to menu.

- 9 Compare the *Customer Number* field with the customer number you want your system to have.  
Press **{RETURN}** to return to the View/Modify Meridian MAX Options menu.
- 10 Enter **q**, followed by **{RETURN}**, to return to the Meridian MAX Maintenance and Administration menu.
- 11 If the *Customer Number* field is correct, go to Step 18.  
If the *Customer Number* field is incorrect, enter **v**, followed by **{RETURN}**.  
*The system displays the View/Modify Meridian MAX Options menu.*



**Figure 11-4**  
**View/Modify Meridian MAX Options**

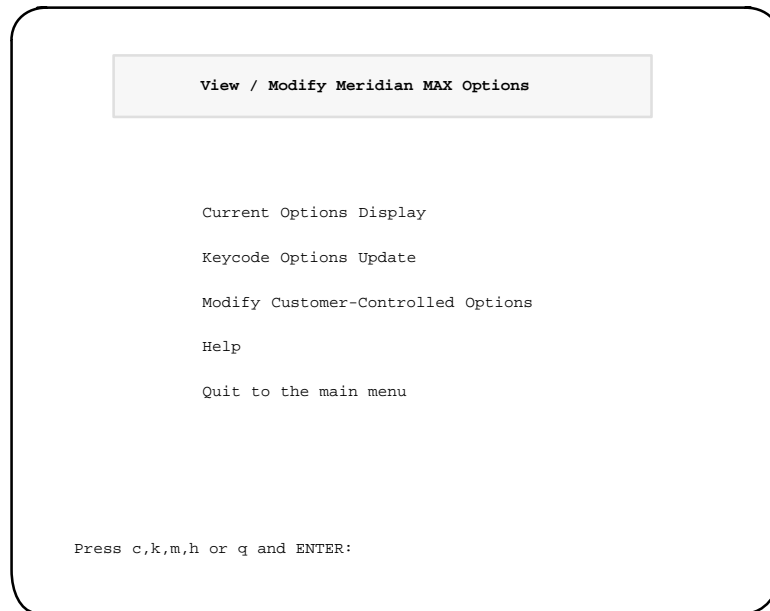

- 12** Enter **m**, followed by **{RETURN}** for the Modify Customer-Controlled Options menu.

*The system displays the following screen.*

**Figure 11-5**  
**Modify Customer-Controlled Options screen**

Modify Customer-Controlled Options

Agent-ID mode

System Customer Number

Combined Call Abandon Reporting Feature

Help

Quit to View / Modify MAX Options menu

Press a,s,c,h or q and ENTER:

- 13** Enter **s**, followed by **{RETURN}** to assign a new customer number for this Meridian MAX site.

\*\*\*> The system customer number is #

(where # represents the current customer number)

Press y and ENTER to change the customer number.  
(Just ENTER to quit)

- 14** Enter **y**, followed by **{RETURN}**.

The system displays the following question:

---> Which customer number would you like this MAX site  
to use?

- 15 Enter a number between 0 and 99 (inclusive) that corresponds to the customer number assigned to your Meridian 1 switch, followed by **{RETURN}**.

*The system displays the following:*

```
***> Customer number changed to ##
```


(where ## is the customer number you entered)

The system returns to the Modify Customer-Controlled Options screen.

- 16 Enter **q** and press **{RETURN}** to return to the View/Modify Meridian MAX Options menu.
- 17 Enter **q** and press **{RETURN}** to return to the Meridian MAX Maintenance and Administration menu.
- 18 Enter **r** and press **{RETURN}**.

*The system displays the Restart and Power Down System Utilities menu.*

**Figure 11-6**  
**Restart and Power Down Utilities**

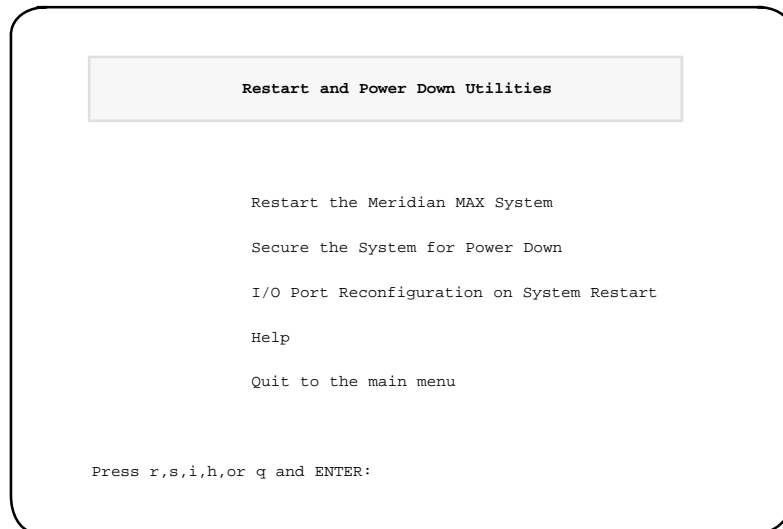

- 19 Enter **r**, followed by **{RETURN}**.

*The system begins the Restart the Meridian MAX System utility.*

Press **y** and **ENTER** to confirm system restart. (Just **ENTER** to quit)

- 20** Enter **y**, followed by **{RETURN}**.

*The system displays the following message:*

The operating system will shut down and restart, and then MAX will restart.

Please wait for system to reboot.

*The system displays a number of messages as it shuts down. After shutdown, the system automatically reboots.*

Console Login:

- 21** Before logging in, ensure that the installation was successful. Review the Meridian MAX error log for any fatal messages.
- Log in as **maint** and refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “Diagnostics” section, “View MAX Error Log” subsection, for more information.
- 22** Ensure that the correct system options were enabled.
- Log in as **maint** and refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “View/Modify Meridian MAX Options” section, “Current Options Display” subsection, for more information.
- 23** If the system was installed correctly, go to Step 24.
- If the system was not installed correctly, you must reinstall it. Ensure no errors occurred within the steps you want to skip. If you are unsure, restart the reinstallation from the beginning. If the errors persist, contact your Nortel distributor.
- 24** Insert a new blank tape into the tape drive for daily backup. Ensure that the write-protect tab on the blank cartridge tape is set to write enabled to allow the system to write information on the tape. The importance of backups is explained in the “Software installation overview” chapter, “Backups” section.
- 25** Log in as **precut** to view the Meridian MAX Training Mode screen.
- Refer to the “Operating modes” chapter, “Switching from Training mode to Precutover mode” procedures, for further instructions on how to transfer from Training mode to Precutover mode.

---

## Chapter 12: Workstation, HSL, and LML configuration

---

For every Meridian MAX, a workstation and High-Speed Link must be configured. A Load Management Link must be configured if your system has Configuration Control enabled.

Single Terminal Access (STA) provides integrated access to operation, administration, and maintenance (OA&M) functions for the systems it monitors. One terminal allows you to access the Meridian 1 and up to three other applications, including Meridian MAX.

Table 12-1 lists the workstation, High-Speed Link, and Load Management Link configuration procedures in this chapter.

| <b>Table 12-1</b><br><b>Configuration procedures</b>                                  |                |
|---------------------------------------------------------------------------------------|----------------|
| Workstation configuration                                                             | Procedure 12-1 |
| Configuring the Meridian 1 NT6D80 MSDL card for use with Single Terminal Access (STA) | Procedure 12-2 |
| Configuring the High-Speed Link on the Meridian 1                                     | Procedure 12-3 |
| Configuring the Load Management Link on the Meridian 1                                | Procedure 12-4 |
| Configuring the High-Speed Link on the Option 11                                      | Procedure 12-5 |
| Configuring the Load Management Link on the Option 11                                 | Procedure 12-6 |

## Workstation configuration

Refer to the “Workstations” chapter for more details on the two types of supported workstations: VDTs and PCs.

Refer to the “Workstations” chapter, “Personal computer workstations” section, for instructions on how to install MTE using DOS or Windows and Reflection 4+.

If you are using a workstation that was not previously configured, perform Procedure 12-1.

### Procedure 12-1

#### To perform the hardware upgrade

- 1 If you have set up your PC workstation as in the “Workstations” chapter, “Personal computer workstations” section, and Reflection 4+ or the Meridian MAX Terminal Emulator is loaded on your PC, press **{CONTROL}{T}** to begin the procedure. If you are using a supervisor dial-up, the following prompt appears:

REMINDER: If you have invoked this feature to change your terminal configuration during an active supervisor dial-up session, your new selection will NOT take effect. To change the terminal configuration during an active dial-up session, you must log off and dial-up again to select the new configuration.

If you are dialing in for the first time, however, you may freely select your terminal configuration now and it will be properly activated for this dial-up session.

Please press <ENTER> to continue...

- 2 Press **{RETURN}**.

- 3 The system continues.

The terminal type for this port is unknown.

Please choose a terminal type from the following list:

1. DEC vt220 monochrome and compatibles
2. DEC vt420 monochrome and compatibles
3. PC running Reflection 4-PLUS terminal emulation
4. PC running Meridian Terminal Emulator

Selection -->

Specify the type of terminal you are using. If you are using a VT220 workstation, select **1**. If you are using a VT520 or VT420 workstation, then select **2**. If you are using a PC workstation running Reflection 4+, enter **3** and go to Step 5. If you are using a PC running the Meridian Terminal Emulator, enter **4**, and go to Step 14.

- 4** If you selected a VT220, VT420, or VT520 as your terminal type, a menu listing the keyboard types appears. Enter the number that corresponds to your keyboard type, followed by **{RETURN}**.

Select your keyboard type from the following list:

```
>>> 1. North American Keyboard
 2. United Kingdom Keyboard
 3. Flemish Keyboard
 4. Canadian French Keyboard
 5. Danish Keyboard
 6. Finnish Keyboard
 7. German Keyboard
 8. Dutch Keyboard
 9. Italian Keyboard
 10. Swiss French Keyboard
 11. Swiss German Keyboard
 12. Swedish Keyboard
 13. Norwegian Keyboard
 14. French/Belgian Keyboard
 15. Spanish Keyboard
 16. Portuguese Keyboard
```

Selection -->

Go to Step 19.

- 5** If your workstation is a PC running Reflection 4+, the system continues with the following prompt:

Select your keyboard type from the following list:

```
 1. AT style keyboard (10 function keys on left)
>>> 2. Enhanced keyboard (12 function keys along top)
Selection -->
```

Specify the type of keyboard you are using.

## 12-4 Workstation, HSL, and LML configuration

---

- 6 The system then asks you to choose a color scheme with the following prompt:  

```
Select the desired color scheme from the following list:

>>> 1. Color -- black background
 2. Color -- blue background
Selection -->
```
- 7 Specify the color scheme you want. The following prompt then appears:  

```
About to start transfer of an appropriate Reflection
4-PLUS configuration file from Meridian MAX to your PC...
The transfer should take approximately 15 - 30
seconds. Please press <ENTER> to begin...
```
- 8 Press **{RETURN}** to begin transferring the appropriate Reflection 4+ terminal configuration file from Meridian MAX to your workstation.
- 9 If the transfer of the configuration is successful, the system displays the following prompts. If the transfer of the configuration is unsuccessful, go to Step 12.  

```
Transfer of configuration file was successful.
From now on, use the following command when starting
Reflection:
 R4 MERIDIAN.CFG
If there are any key labels currently displayed at the
bottom of the screen, please press <Ctrl>+<Alt>+N to clear
them.
```
- 10 If there are no function key descriptions on the screen, then ignore this message. If the bottom screen portion shows the function key descriptions, then press **{CONTROL}{ALT}{N}** simultaneously. This action clears the descriptions from the screen.  

```
Please press <ENTER> to continue...
```
- 11 Press **{RETURN}** to complete the workstation's configuration. At the end of the process, the system displays the Supervisor Logon screen. Go to Step 19.



- 12 The system displays the following prompt for an unsuccessful file transfer:

```
!!! Transfer of configuration file failed. !!!
Select an action from the following list:
>1. Retry the transfer operation
 2. Ignore the failure (a configuration file is available)
 3. Select a different terminal type
 4. NAC Remote Supervisor Login (a configuration file is
 available)
Selection -->
```

- 13 If you enter **1**, the system takes you to the prompts shown for Step 7, after which successive steps follow.

Select **2** if the meridian.cfg file is already on the PC workstation, then go to Step 19.

If you select **3**, return to the prompts shown in Step 1, after which successive steps follow.

Select **4** if you are using the NAC Remote Login feature, then go to Step 19.

- 14 If your workstation is a PC running MTE using DOS, press both left and right **{SHIFT}** keys simultaneously to access the terminal emulator configuration setup screen.

If your workstation is a PC running MTE 6 using Windows, refer to the *Meridian Terminal Emulator 6 User Guide* (P0815602), "Setting session options" section, to access the session option screen.

If your workstation is a PC running MTE 7 using Windows, refer to the *Meridian Terminal Emulator 7 User Guide* (P0821303), "Setting session options" section, to access the session option screen. You can also use the MTE 7 online help for instructions on setting your session options.

The Communication and Printer Port Parameters Configuration screen appears.

- 15 The selection chosen for the *Connection Type* field determines the accessibility of the *Serial Port Setup* and *LAN Connection Setup* fields.

To change this field, cursor to the *Connection Type* field past the colon, and press **{F1}** for next choice or **{F2}** for previous choice. These two keys toggle between the LAN and Serial selections.

Serial is the default value for this field and indicates that your terminal is directly connected to your Meridian MAX. If you select Serial as your connection type, your screen looks like the following sample screen. Some differences may occur, depending on your selections.

**Figure 12-1**  
**Terminal setup screen**

**TERMINAL SETUP SCREEN - V05.XX**

**CONNECTION SETUP**

CONNECTION TYPE: SERIAL

**SERIAL PORT SETUP**

PORT : COM1  
BAUD RATE : 9600

**LAN CONNECTION SETUP**

HOST NAME OR  
IP ADDRESS : N/A

**TERMINAL SETUP SCREEN**

LANGUAGE : ENGLISH

**PRINTER SETUP**

PORT : LPT1  
BAUD RATE : 9600  
STOP BITS : 1  
PARITY : NONE

F1  
NEXT  
CHOICE

F2  
PREV  
CHOICE

F3

F4  
SAVE  
CONFIG

F5

F6

F7

F8  
EXIT  
SETUP

If you select LAN as your connection type, your screen looks like the sample screen. Some differences may occur depending on your selections.

- 16 The communication port parameters that can be set are listed in this step. Options shown in bold italics are the default settings. These fields are only available when the connection type is set to Serial.

**Note:** The baud rate setting should not be changed from the default, unless you are using a dial-up connection. This parameter is used by the Meridian MAX to communicate with the supervisor displays.

| <u>Parameter</u> | <u>Options</u>          |
|------------------|-------------------------|
| Port:            | <b>COM1</b> , COM2      |
| Baud Rate:       | 2400, 4800, <b>9600</b> |

The *Host Name or IP Address* field is only available when the connection type is set to LAN. This entry is either the name given to the MAX or the address of the MAX on the LAN. To edit this field, cursor to it and press the **{F3}** key. Press it again when you are done entering the Host Name or the IP Address. The **{F1}** and **{F2}** keys disappear when you cursor to this field.

- 17** The printer port parameters that can be set are listed in this step. Options shown in bold italics are the default settings. The *Baud Rate*, *Stop Bits*, and *Parity* fields are only available when the *Port* field is set to COM1 or COM2.

|            |                                         |
|------------|-----------------------------------------|
| Port:      | <b>LPT1</b> , LPT2, LPT3, COM1, COM2    |
| Baud Rate: | 2400, 4800, 9600 (serial printers only) |
| Stop Bits: | 1, 2 (serial printers only)             |
| Parity:    | NONE, EVEN, ODD (serial printers only)  |

- 18** To save the changes made to the default configuration, press the **[SAVE CONFIG]** function key.

A file named MTE.CFG is created in the current directory.

Each time the MTE program is started, it looks for this file in the current directory. If it is found, the information stored there is used as the starting configuration.

If this file is not found, or the format of the file is incorrect, the default configuration (as seen in steps 16 and 17) is used.

To start MTE, change the DOS directory to the one in which you installed the MTE software. For example, CD C:\MERIDIAN.

Enter **MTE** followed by **{RETURN}**.

- 19** The Supervisor Login screen appears. For instructions on setting up your VT220, VT420, VT520, or HP workstation, refer to the "Workstations" chapter.
- 20** To exit MTE, simultaneously press **{CONTROL}{ALT}{X}**. This key combination returns control to DOS.

## 12-8 Workstation, HSL, and LML configuration

---

To exit Reflection 4+, log out from Meridian MAX. Wait until the login screen is completely redrawn. Enter **{CONTROL}{ALT}{X}**. The DOS prompt appears.

If you wish to reconfigure your terminal while Meridian MAX is running, press **{CONTROL}{T}** simultaneously at any time to display the configuration prompt. If your terminal selection remains unchanged, you are returned to the Meridian MAX feature you were using prior to reconfiguring the workstation. If your terminal selection is changed during Procedure 12-1, you are logged out, and the Supervisor Login screen appears.

***Note:*** If you are running your display session from a supervisor dial-up connection, pressing **{CONTROL}{T}** does not change your terminal configuration. If you want to reconfigure the terminal for your dial-up session, you must log off, hang up the connection, and dial back in again. When you reconnect, the configuration prompt is displayed and the new terminal configuration you choose takes effect.

## Configuring the Meridian 1 NT6D80 MSDL card for use with Single Terminal Access

Single Terminal Access (STA), available with X11 Release 19 and greater, provides integrated access to operation, administration, and maintenance (OA&M) functions for the systems it monitors. By reducing the number of physical devices needed to administer a Meridian 1 system and its subsystems, one terminal allows you to access the Meridian 1 and up to three other applications including Meridian MAX.

To configure the Multi-purpose Serial Data Link (MSDL) card for use with Single Terminal Access (STA) on the Meridian 1, follow the steps in Procedure 12-2.

Before configuring your MSDL card on the Meridian 1 for use with STA, the following criteria must be met:

- Switch settings on the MSDL card must be correct for Meridian MAX as well as other applications using STA.
- Port 0 on the MSDL card must be available for the configuration of an STA administration terminal which acts like a switchboard between the multiple applications.
- At least two ports must be available to configure your STA administration terminal as well as Meridian MAX on your MSDL card.

### Procedure 12-2

#### To configure the Meridian 1 NT6D80 MSDL card for use with Single Terminal Access

- 1 If there are no MSDL cards installed on your current system, refer to the *Circuit Card Installation and Testing Guide* (NTP 553-3001-211) for information on installing MSDL circuit cards.

If MSDL cards are already installed on your current system, continue with this procedure.

- 2 Configure the MSDL card using the Meridian 1 maintenance terminal. Use the document *X11 System Management Applications Guide* (NTP 553-3001-301) and the following guidelines. For prompts not listed, press {ENTER} to select the default value.

**Note:** Ensure “Caps Lock” on your keyboard is set to “on”.

Enter **LD 22** to access Overlay program 22 to verify that MSDL (222), MSDL SDI (227), and STA (228) software is loaded on your system.

*The system displays the following prompt:*

REQ

- 3 Enter **PRT** to access the program's print function.

*The system displays the following prompt:*

TYPE

- 4 Enter **PKG** to print the X11 software packages equipped on the Meridian 1. If these packages are not equipped on your system, contact your distributor.

*The system displays the following prompt:*

REQ

- 5 Enter \*\*\*\* to exit Overlay program 22.
- 6 Check your system for an existing MSDL card that can be used for STA. Having an MSDL card with several free ports would allow you optimum use of the STA feature. Verify that the switch settings of the MSDL card number (DNUM) do not conflict with other I/O devices and that all DIP switch settings are set correctly for RS-232. Refer to the *Circuit Card Installation and Testing Guide* (NTP 553-3001-211) for information on MSDL switch settings.
- 7 Set up a VT220 or 100%-compatible terminal for STA. The set-up parameters vary depending on terminal type. Refer to the *X11 System Management Applications Guide* (NTP 553-3001-301) for the correct set-up parameters for your terminal.
- 8 Connect an NTND27 cable to Port 0 on the MSDL card. Use a 25-pin straight-through cable to connect the NTND27 cable to the VT220 used for the STA administration terminal.
- 9 To create a link between the STA administration terminal and Meridian MAX, connect an NTND27 cable to one of the other selected ports on the same MSDL card.

For a Meridian MAX SNN/SNN-E or SEE, connect a null modem adapter between this cable and the NT7D61Ax cable which runs to the Meridian MAX AM's I/O panel (J7 on the I/O subpanel or SYS CONS on the Universal or Generic I/O panel).

For a Meridian MAX IPE/IPE-E, connect a null modem adapter between this cable and the NT1R03Dx or NT7D58Ax cable which runs to Port 1 on the Meridian MAX IPE/IPE-E.

- 10 Enter **LD 17** to access Overlay program 17 to configure a TTY on the MSDL SDI.  
*The system displays the following prompt:*  
REQ
- 11 Enter **CHG** to change the current configuration on the MSDL card.  
*The system displays the following prompt:*  
TYPE
- 12 Enter **CFN** to access the configuration record.  
*The system displays the following prompt:*  
ADAN
- 13 Enter **NEW TTY xx** to add an MSDL TTY port. The device number is represented by xx.  
*The system displays the following prompt:*  
CTYP
- 14 Enter **MSDL** to specify the card type.  
If you have an Option 81 system, continue with this procedure. If you do not, go to Step 16.  
*The system displays the following prompt:*  
GRP
- 15 Enter **0** to specify the network group number for Option 81 systems.
- 16 The system displays the following prompt:  
DNUM
- 17 Enter **xx** to add an MSDL TTY port. The xx represents the device number of the I/O ports.  
*The system displays the following prompt:*  
PORT
- 18 Enter **0** to specify the port as Port 0.  
*The system displays the following prompt:*  
DES

- 19 Enter **STA\_ADMIN** to designate Port 0 for the STA administration terminal.  
*The system displays the following prompt:*  
BPS
- 20 Enter **9600** to set the baud rate.  
*The system displays the following prompt:*  
PARY
- 21 Enter **NONE** to set the parity type.  
*The system displays the following prompt:*  
STOP
- 22 Enter **1** to set the number of stop bits.  
*The system displays the following prompt:*  
BITL
- 23 Enter **8** to set the data bit length.  
*The system displays the following prompt:*  
PARM
- 24 Enter **R232 DCE** to set the interface and transmission mode.  
*The system displays the following prompt:*  
FUNC
- 25 Enter **ABD FCL LME** to set the MSDL card functions.  
*The system displays the following prompt:*  
USER
- 26 Enter **MTC SCH BUG** to set the output message types.  
*The system displays the following prompt:*  
XSM
- 27 Enter **NO** to set the SDI port for the system monitor.  
*The system displays the following prompt:*  
TTYLOG
- 28 Enter **{RETURN}** to set the log buffer size.
- 29 Enter **\*\*\*\*** to exit Overlay program 17.



- 30 Enter **LD 22** to access Overlay program 22 to verify the configuration changes made in Overlay program 17.
- 31 Enter **LD 48** to access Overlay program 48 to verify that the MSDL is enabled.
- 32 Enter **STAT MSDL xx** to verify that the MSDL port is enabled. The device number is represented by xx.
- 33 Enter **\*\*\*\*** to exit Overlay program 48.  
The TTY just created must be in a disabled state. If the TTY needs to be disabled, continue with this procedure. If the TTY is already disabled, go to Step 38.
- 34 Enter **LD 37** to access Overlay program 37 to disable the TTY port.
- 35 Enter **DIS TTY xx**. The available TTY is represented by xx.  
*The system displays the following prompt:*  
xx TTY (Y/N)
- 36 Enter **Y** to disable the TTY.
- 37 Enter **\*\*\*\*** to exit Overlay program 37.
- 38 Enter **LD 17** to access Overlay program 17 to configure the TTY port as the STA administration port as well as to set up additional ports for system monitors.  
*The system displays the following prompt:*  
REQ
- 39 Enter **CHG** to change the current configuration on the MSDL card.  
*The system displays the following prompt:*  
TYPE
- 40 Enter **CFN** to access the configuration record.  
*The system displays the following prompt:*  
ADAN
- 41 Enter **NEW STA xx** to add an MSDL TTY port. The device number is represented by xx.  
*The system displays the following prompt:*  
TTY

- 42** Enter **xx** to specify the number of the predefined MSDL SDI TTY from Step 41.

*If you have an Option 81 system, the system displays the following prompts:*

CTYP MSDL  
GRP

Go to Step 43.

*If you have a system other than an Option 81, the system displays the following prompts:*

CTYP MSDL  
DNUM

Go to Step 44.

- 43** Enter **0** to specify the network group number for Option 81 systems.  
*The system displays the following prompts where the device number is represented by xx:*

DNUM xx  
ADMIN PORT 0  
LANGUAGE ENGLISH  
ADDITIONAL PORT

- 44** Enter the MSDL port number you have designated to connect to Meridian MAX. This entry could be either P1, P2, or P3 depending on the selected MSDL port.

If you need to delete one of the additional ports you have added, place an x before the port number such as XP2.

- 45** Enter **\*\*\*\*** to exit Overlay program 17.
- 46** Enter **LD 22** to access Overlay program 22 to verify the configuration changes made in Overlay program 17.
- 47** Enter **LD 48** to access Overlay program 48 to enable the STA port.
- 48** Enter **ENL STA xx** to enable the STA port. The device number is represented by xx.
- 49** Enter **STAT STA xx** to verify that the MSDL port is enabled. The device number is represented by xx.
- 50** Enter **\*\*\*\*** to exit Overlay program 48.
- 51** At this point, the STA main menu appears on your STA administration terminal screen. If the screen does not appear immediately, press **{RETURN}** several times and the screen should appear.

- 52 Press **{PF7}** at the STA main menu to change the port configuration. You are prompted to enter a port number. Enter the port number of the MSDL port you cabled to the Meridian MAX console port in Step 9.
- 53 At the login prompt, enter your name. For a password, enter the Meridian 1 password.
- 54 Use the up/down arrow keys to move from field to field, and the left/right arrow keys to select the entry. Your completed port configuration should match the following:

|                  |                                                                                        |
|------------------|----------------------------------------------------------------------------------------|
| Port Type        | System                                                                                 |
| Port Name        | MAX                                                                                    |
| Baud Rate        | 9600                                                                                   |
| Data Bits        | 8                                                                                      |
| Stop Bits        | 1                                                                                      |
| Interface        | RS-232 DCE                                                                             |
| Emulation        | EM100 (VT100)                                                                          |
| Connect Sequence | CTRL-R (Read the directions under the function keys on how to enter this information.) |
| Logout Seq       |                                                                                        |

- 55 Press **{PF7}** to proceed to the “*Port Maintenance Menu*.”
- 56 Select “*Enable port*” using the up/down arrow keys, and press **{RETURN}** to enable the Meridian MAX port.
- 57 STA is now available to monitor Meridian MAX as well as the Meridian 1. On the STA main menu, there is a function key assigned to the Meridian MAX and Meridian 1. To access Meridian MAX, press the assigned function key and press **{RETURN}** several times to get a response.

Press **{ESC}** and then type STA to return to the STA main menu from Meridian MAX. Press **{CNTRL}{R}** to refresh the screen when needed.

## Configuring the High-Speed Link on the Meridian 1

To configure the High-Speed Link on the Meridian 1, follow the steps in Procedure 12-3.

### Procedure 12-3

#### To configure the High-Speed Link on the Meridian 1

- 1 Check the options on the Serial Data Interface (SDI) circuit pack. Follow the instructions in the document *Circuit Card Installation and Testing* (NTP 553-3001-211) for the type of SDI circuit pack being used.

Check the High-Speed Link cable. If the Meridian 1 High-Speed Link port is configured as DCE, use the NT7D99AA null modem cable. If it is configured as DTE, use the NT7D61 or the NT7D58 straight cable. Refer to the "Hardware installation: Application Module (SNN/SNN-E)" chapter for more information.

If your Meridian 1 switch is running X11 Release 18 or lower, the Meridian MAX port needs to be set for the following:

Port Address: **x**

Enter a value for **x**. The range is 0 to 15.

- 2 Interface: **xxx**

The SDI port should be configured as a Data Terminal Equipment (DTE) device. Since the High-Speed Link port on the Meridian MAX is configured as a DCE (Data Communications Equipment) device, you only need a straight-through RS-232 connection between the SDI port and the Meridian MAX port.

Arrange the port for a modem interface (DTE to DCE).

- 3 Data Transfer Rate:  
Enter **9600** baud as the data transfer rate (baud rate).

**Note:** The baud rate of the Meridian MAX High-Speed Link must match the baud rate of the Meridian 1 High-Speed Link.

If your Meridian 1 switch is running X11 Release 18, go to Step 16.

- 4 Configure the Meridian 1 database for Meridian MAX. Use document *X11 Features and Services* (NTP 553-3001-305) and the following guidelines. For prompts not listed, press {ENTER} to select the default value. In the configuration data block (Overlay program 17), define the following values.

REQ **CHG**

**TYPE CFN**

CFN is the configuration record.

**IOTB YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

**ADAN aaa TTY x**

The address **x** must be the same as the physical address set on the SDI circuit pack. The value for **aaa** must be NEW or CHG (for example, NEW TTY 2).

**ESDI NO****CDNO x**

**x** is the SDI card number. The range for **x** is 0 to 15.

**DENS xxxx**

DENS refers to the density of the SDI card being used. SDEN is a single-density SDI card (for example, QPC139), DDEN is a double density SDI card (for example, QPC841), and 4DEN is a quad density SDI card (for example, NT8D41). For more information, see the *X11 Input/Output Guide* (NTP 553-3001-400).

**5 USER HSL**

Configure the user as HIGH-SPEED LINK (HSL).

**6 MGCR xx**

**xx** is the number of call registers to be used for Meridian MAX. The range for **xx** is 26 to 255.

**Note:** Also in Overlay 17, the value of NCR (system call registers) must be increased by the amount set for MGCR.

**7 DCUS x**

**x** is the number of customers; **x** must be greater than 0. Meridian MAX can only serve one customer.

**8 MAGT x**

**x** is the number of agents that can be assigned on the Meridian 1. The range is 1 to 1200.

**9** Install the link. Refer to the document *System Options 21, 51, 61, 71 System Installation Procedures* (NTP 553-3001-210) for installation instructions.**10** If your system is a Meridian MAX - IPE/IPE-E, connect one end of the High-Speed Link cable to Cable B, Port 8 on the Meridian MAX - IPE/IPE-E, and the other end to the SDI card.

If your system is a Meridian MAX 8 SNN/SNN-E, connect one end of the High-Speed Link cable to Cable A, Port 1, on the Meridian MAX, and the other end to the SDI card.

**12-18** Workstation, HSL, and LML configuration

---

- 11** Load Overlay program 48. Enter

**LD 48**

- 12** Enable the TTY port assigned to the High-Speed Link. Enter

**ENL SDI HIGH**

- 13** Enable the High-Speed Link. Enter

**ENL HSL**

- 14** Check the status of the High-Speed Link. Enter

**STAT HSL**

NRDY should be the system response. Immediately log out of the Overlay and TTY or the link will not come up. When the link is up, the TTY will display ADD000.

- 15** You have configured the High-Speed Link.

- 16** If your Meridian 1 switch is running X11 Release 18, configure the Meridian 1 database for Meridian MAX. Use document *X11 Features and Services* (NTP 553-3001-305) and the following guidelines. For prompts not listed, press {ENTER} to select the default value. In the configuration data block (Overlay program 17), define the following values:

**REQ CHG**

**TYPE CFN**

CFN is the configuration record.

- 17** ADAN **aaa TTY x**

The address **x** must be the same as the physical address set on the SDI circuit pack. The value for **aaa** must be NEW or CHG (for example, NEW TTY 2).

- 18** CTYP **xxxx**

**xxxx** is the SDI card number. The possible values for **x** are SDI, SDI2, SDI4, and XSDI.

- 19** DNUM **x**

DNUM is the device number printed automatically. The range for **x** is 0 to 15.

- 20** USER **HSL**

Configure the user as HIGH-SPEED LINK (HSL).

- 21** MGCR **xx**

**xx** is the number of call registers to be used for Meridian MAX. The range for **xx** is 26 to 255. The recommended setting is 20 for IPE and 25 for SNN/SNN-E.

**Note:** Also in Overlay 17, the value of NCR (system call registers) must be increased by the amount set for MGCR.

**22 DCUS x**

**x** is the number of customers; **x** must be greater than 0. Meridian MAX can only serve one customer.

**23 MAGT x**

**x** is the number of agents that can be assigned on the Meridian 1. The range is 1 to 1200. Increments of 10 are preferred, such as 10, 20, 30, and so on.

**24** You have configured the High-Speed Link.

## Configuring the Load Management Link on the Meridian 1

To configure the Load Management Link on the Meridian 1, follow the steps in Procedure 12-4.

### Procedure 12-4

#### To configure the Load Management Link on the Meridian 1

- 1 Check the options on the Serial Data Interface (SDI) circuit pack. Follow the instructions in *Circuit Card Installation and Testing* (NTP 553-3001-211) for the type of SDI circuit pack being used.  
  
Check the High-Speed Link cable. If the Meridian 1 High-Speed Link port is configured as DCE, use the NT7D99AA null modem cable. If it is configured as DTE, use the NT7D61 or the NT7D58 straight cable. Refer to the "Hardware installation: Application Module (SNN/SNN-E)" chapter for more information.

If your Meridian 1 switch is running X11 Release 18 or lower, the Meridian MAX port needs to be set for the following:

Port Address: **x**  
The range for **x** is 1 to 15.

- 2 Interface: **xxx**  
Arrange the port for a modem interface (DTE to DCE).
- 3 Data Transfer Rate:  
Enter **9600** baud as the data transfer rate (baud rate).  
  
If your Meridian 1 switch is running X11 Release 18, go to Step 10.
- 4 When upgrading from an ACD C1 or C2 package (the ACD reporting system), all data specifically related to Management reports, ACD printers, and Supervisor terminals (except senior supervisor terminals already using Load Management Link) must be deleted from the current Meridian 1 database prior to programming the database to support the Meridian MAX reporting system.

If you are not upgrading from an ACD C1 or C2 package, go to Step 6.

The programming is the same as that for the D package options which enable the ADS block.

- 5 To remove the Schedule Block (SCB) load Overlay 23. Remove any devices defined at the STIO prompt from every queue. You must remove them in each ACD-DN block.  
  
To "out" or "remove" devices from the STIO prompt, for each queue, set the following prompts as shown:

TYPE **ACD**



ACDN **xxxx**

**xxxx** is the queue number.

STIO **X**

**Note:** An upper case **X** means “remove” or “out.”

To “out” or “remove” the printer from the PRIO prompt:

TYPE **SCB**

PRIO **X**

To disable any input/output devices with user ACD:

Load Overlay 37. Enter **LD 37**.

DIS TTY **xx**

**xx** is the TTY port number.

To disable all ACD devices (printers and supervisor terminals, except the senior supervisor which is used with Meridian MAX), use the following 2 guidelines. For prompts not listed, press **{ENTER}** to select the default value:

Load Overlay 17. Enter **LD 17**.

REQ **CHG**

TYPE **CFN**

CFN is the configuration record.

IOTB **YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

ADAN **OUT TTY xx**

USER **ACD**

SSUP **NO**

Before adding the ADS block, you must “out” or “remove” the SCB:

Load Overlay 23. Enter **LD 23**.

REQ **OUT**

TYPE **SCB**

CUST **0**

- 6** Skip to Step 7 if a senior supervisor was programmed in the switch as YES in previous ACD applications.

Configure the Meridian 1 database for Meridian MAX. Use document *X11 Features and Services* (NTP 553-3001-305) and these guidelines.

**12-22** Workstation, HSL, and LML configuration

---

In the configuration data block (Overlay program 17), define the Load Management Link:

**REQ CHG**

**TYPE CFN**

CFN is the configuration record.

**IOTB YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

**ADAN aaa TTY x**

The address **x** must be the same as the physical address set on the SDI circuit pack, and **aaa** must be NEW or CHG (for example, NEW TTY 2).

**ESDI NO**

**CDNO x**

**x** is the SDI card number. The range for **x** is 0 to 15.

**DENS xxxx**

DENS refers to the density of the SDI card being used. SDEN is a single-density SDI card (for example, QPC139), DDEN is a double-density SDI card (for example, QPC841), and 4DEN is a quad-density SDI card (for example, NT8D41). For more information, see the *X11 Input/Output Guide* (NTP 553-3001-400).

**USER ACD**

USER is the SDI port user. Configure the user as Automatic Call Distribution (ACD).

**CUST xx**

**xx** is the customer number. The range for **xx** is 0 to 99.

**SSUP YES**

Device assigned to be used by senior supervisor/load manager.

**APRT NO**

ACD printer must be set to **NO**.

**7** In Overlay program 23, define the following values:

**TYPE ADS**

**CUST 0**

**AID YES**

If **YES**, the switch is in Agent ID mode. If **NO**, the switch is in Position ID mode.

**IDLB xxxx**

This value is the Agent ID number lower boundary. The range for **xxxx** is 0001 to 9999.

**LOG xxx**

**xxx** is the maximum number of agents that can be logged in simultaneously on the Meridian 1 switch. The range is 1 to 999.

**8 Load Overlay 37. Enter LD 37.**

Wait for the IOD000 response, then enter

**STAT TTY x**

The range for **x** is 1 to 15.

If the system's response is ENBL, then the port is enabled. If the system's response is DSBL then enter

**ENL TTY x**

The range for **x** is 1 to 15.

**9 You have configured the Load Management Link.****10 If your Meridian 1 is running X11 Release 18, configure the Meridian 1 database for Meridian MAX. Use document *X11 Features and Services* (NTP 553-3001-305) and these guidelines. In the configuration data block (Overlay program 17), define the Load Management Link:****REQ CHG****TYPE CFN**

CFN is the configuration record.

**ADAN aaa TTY x**

The address **x** must be the same as the physical address set on the SDI circuit pack, and **aaa** must be NEW, CHG or OUT (for example, NEW TTY 2).

**11 CTYP x**

**x** is the SDI card number. The possible values for **x** are SDI, SDI2, SDI4, XSDI.

**DNUM x**

DNUM is the device number printed automatically. The range for **x** is 0 to 15.

**USER ACD**

USER is the SDI port user. Configure the user as Automatic Call Distribution (ACD).

**CUST 0**

**12-24** Workstation, HSL, and LML configuration

---

**12 SSUP YES**

Device assigned to be used by senior supervisor/load manager.

**APRT NO**

ACD printer must be set to **NO**.

**MGCR xx**

**xx** is the number of call registers to be used for Meridian MAX. The range for **xx** is 26 to 255.

**Note:** Also in Overlay 17, the value of NCR (system call registers) must be increased by the amount set for MGCR.

**DCUS x**

**x** is the number of customers; **x** must be greater than 0. Meridian MAX can only serve one customer.

**MAGT x**

**x** is the number of agents that can be assigned on the Meridian 1. The range is 1 to 1200. Increments of 10 are preferred, such as 10, 20, 30, and so on.

**13** You have configured the Load Management Link.

## Configuring the High-Speed Link on the Option 11

To configure the High-Speed Link on the Option 11, follow the steps in Procedure 12-5.

### Procedure 12-5

#### To configure the High-Speed Link on the Option 11

- 1 Check the options on the Serial Data Interface (SDI) circuit pack. Follow the instructions for Circuit Card Installation and Testing in the *Option 11 Installation Guide* (NTP 553-3011-210) for the type of SDI circuit pack being used. The Meridian MAX port needs to be set for the following:

Port Address: **x**

The range for **x** is 1 to 15.

Interface: **xxx**

Arrange the port for a modem interface. For a direct connection, use DTE.

Data Transfer Rate:

Enter **9600** baud as the data transfer rate (baud rate).

- 2 Before you can “out” or “remove” the TTY, you must first disable it in Load 48.

Load Overlay 48. Enter **LD 48**.

#### **DIS ESDI x**

**x** is the port where the High-Speed Link will be configured.

- 3 Configure the Option 11 database for Meridian MAX. Use document *X11 Features and Services* (NTP 553-3001-305) and the following guidelines. For prompts not listed, press {ENTER} to select the default value. In the configuration data block (Overlay program 17), define the following values:

**REQ CHG**

**TYPE CFN**

CFN is the configuration record.

**IOTB YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

**ADAN aaa TTY x**

**x** is the TTY port, and **aaa** must be NEW or CHG (for example, NEW TTY 2).

**12-26** Workstation, HSL, and LML configuration

---

**CDNO x**

**x** must match the slot number on the Option 11 where the card is located.

**PORT x**

The range for **x** is 0 to 1.

**BPS 9600****USER HSL**

Configure the user as HIGH SPEED LINK (HSL).

**CUST xx**

**xx** is the customer number. The range for **xx** is 0 to 99.

**MGCR xx**

**xx** is the number of call registers to be used for Meridian MAX. The range for **xx** is 26 to 255.

**Note:** Also in Overlay 17, the value of NCR (system call registers) must be increased by the amount set for MGCR.

**DCUS x**

**x** is the number of customers; **x** must be greater than 0. Meridian MAX can only serve one customer.

**MAGT x**

**x** is the number of agents that can be assigned on the Meridian 1. The range is 1 to 1200.

- 4** Install the link. Refer to the document *Option 11 Installation Guide* (NTP 553-3011-210) for installation instructions.
- 5** If your system is a Meridian MAX - IPE/IPE-E, connect one end of the High-Speed Link cable to Cable B, Port 8, on the Meridian MAX - IPE/IPE-E, and the other end to the SDI card.  
  
If your system is a Meridian MAX 8 SNN/SNN-E, connect one end of the High-Speed Link cable to Cable A, Port 1, on the Meridian MAX, and the other end to the SDI card.
- 6** Load Overlay program 48. Enter **LD 48**.
- 7** Enable the TTY port assigned to the High-Speed Link. Enter  
**ENL SDI HIGH**
- 8** Enable the High-Speed Link. Enter  
**ENL HSL**

- 9** Check the status of the High-Speed Link. Enter

**STAT HSL**

NRDY should be the system response. Immediately log out of the Overlay and TTY or the link will not come up. When the link is up, the TTY will display ADD000.

## Configuring the Load Management Link on the Option 11

To configure the Load Management Link on the Meridian 1, follow the steps in Procedure 12-6.

### Procedure 12-6

#### To configure the Load Management Link on the Option 11

- 1 Check the options on the Serial Data Interface (SDI) circuit pack. Follow the instructions for Circuit Card Installation and Testing in the *Option 11 Installation Guide* (NTP 553-3011-210) for the type of SDI circuit pack being used. The Meridian MAX port needs to be set for the following:

Port Address: **x**

The range for **x** is 1 to 15.

Interface: **xxx**

Arrange the port for a modem interface. For a direct connection, use DTE.

Data Transfer Rate:

Enter **9600** baud as the data transfer rate (baud rate).

- 2 If you are upgrading from an ACD C1 or C2 package (the ACD reporting system), all data specifically related to management reports, ACD printers, and Supervisor terminals must be deleted from the current Meridian 1 database prior to programming the database to support the Meridian MAX reporting system.

If you are not upgrading from an ACD C1 or C2 package, go to Step 6.

The programming is the same as that for the D package options which enable the ADS block.

- 3 To remove the Schedule Block (SCB) load Overlay 23. Remove any devices defined at the STIO prompt from every queue. You must remove them in each ACD-DN block.

To “out” or “remove” devices from the STIO prompt:

TYPE **ACD**

ACDN **xxxx**

**xxxx** is the queue number.

STIO **X**

**Note:** An upper case **X** means “remove” or “out.”



To “out” or “remove” the printer from the PRIO prompt:

TYPE **SCB**

PRIO **X**

- 4 Before you can “out” or “remove” the TTY, you must first disable it in Load 48.

Load Overlay 48. Enter **LD 48**.

**DIS ESDI x**

**x** is the port where the High-Speed Link will be configured.

- 5 To disable all ACD devices (supervisor terminals and printers), except the senior supervisor which is used with Meridian MAX, use the following guidelines. For prompts not listed, press {**ENTER**} to select the default value:

Load Overlay 17. Enter **LD 17**.

REQ **CHG**

TYPE **CFN**

CFN is the configuration record.

IOTB **YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

ADAN **OUT TTY xx**

CDNO **x**

**x** must match the slot number on the Option 11 where the card is located.

PORT **x**

The range for **x** is 0 to 1.

BPS **9600**

USER **ACD**

CUST **xx**

**xx** is the customer number.

SSUP **YES** (unless a senior supervisor is programmed here)

MGCR **xx**

**xx** is the number of call registers to be used for Meridian MAX. The range for **x** is 26 to 255.

DCUS **x**

**x** is the number of customers; **x** must be greater than 0. Meridian MAX can only serve one customer.

Before adding the ADS block, you must “out” or “remove” the SCB:

Load Overlay 23. Enter **LD 23**.

**REQ OUT**

**TYPE SCB**

**CUST 0**

- 6** Configure the Option 11 database for Meridian MAX. In the configuration data block (Overlay program 17), define the Load Management Link:

**TYPE CFN**

CFN is the configuration record.

**IOTB YES**

The IOTB prompt appears only in X11 releases prior to Release 18.

**ADAN aaa TTY x**

**x** must be the port and **aaa** must be NEW or CHG (for example, NEW TTY 2).

**CDNO x**

**PORT x**

The range for **x** is 0 to 1.

**BPS 9600**

The SDI port user:

**USER ACD**

Configure the user as Automatic Call Distribution (ACD).

**CUST xx**

**xx** is the customer number.

**SSUP YES**

Device assigned to be used by senior supervisor/load manager.

**APRT NO**

ACD printer must be set to NO.

- 7** In Overlay program 23, define the following values:

**TYPE ADS**

**CUST 0**

**AID YES**

If YES, the switch is in Agent ID mode. If NO, the switch is in Position ID mode.

**IDLB xxxx**

Agent ID number lower boundary. The range for **xxxx** is 0001 to 9999.

**IDUB xxxx**

Agent ID number upper boundary. The range for **xxxx** is the IDLB to 9999.

**LOG xxx**

**xxx** is the maximum number of agents that can be logged in simultaneously on the Meridian 1 switch. The range is 1 to 999.

**8 Load Overlay 37. Enter LD 37.**

Wait for the IOD000 response, then enter

**STAT TTY x**

The range for **x** is 1 to 15.

If the system's response is ENBL, then the port is enabled. If the system's response is DSBL, then enter

**ENL TTY x**

The range for **x** is 1 to 15.

---

## Chapter 13: Operating modes

---

Meridian MAX has three modes of operation: training, precutover, and product (upgraded systems do not come with the training mode).

Training mode is the first mode entered when a new system is installed. This operating mode allows supervisors to train on the system.

Precutover mode is the second mode you can use to set up your system.

Product mode is the actual running Meridian MAX system.

| <b>Table 13-1<br/>Operating modes procedures</b>       |                    |
|--------------------------------------------------------|--------------------|
| <b>Description of software installation procedures</b> | <b>Procedure #</b> |
| Switching the default language                         | Procedure 13-1     |
| Switching from training mode to precutover mode        | Procedure 13-2     |
| Switching from precutover mode to product mode         | Procedure 13-3     |

## Changing the default language

The default language of a Meridian MAX supervisor session is English. To change the default language from English to the other installed language on your system, follow the steps described in Procedure 13-1. This procedure can also be used to change your default language back to English.

### Procedure 13-1

#### To change the default language


- 1 Log in to the Meridian MAX as Supervisor 0 (zero) in precutover mode, Supervisor 11 or 22 in training mode, or any supervisor with access to the Parameter Administration feature in product mode.
- 2 Select the Parameter Administration feature from the main menu.
- 3 Select the Miscellaneous Options feature from the Parameter Administration menu.
- 4 Select the *Default Language* field on the Miscellaneous Options screen.
- 5 Press **{PF2}** to display the choices for the *Default Language* field. Use the up and down cursor keys to select the language you want as your default language, and press **{RETURN}**. This language appears in the *Default Language* field.
- 6 Press **{PF1}** to display the commands. Select the Save changes and exit command and press **{RETURN}**. The system saves your changes and returns you to the main menu.
- 7 Return to the main menu and log out of the Meridian MAX. The next time you log in to the system, the new default language you chose is used by the system.

## Training mode

The training mode allows supervisors and other users to be trained in a simulated Meridian MAX call-processing environment. Once training is completed, Meridian MAX can be converted into the precutover mode.

When the system is booted up after the hardware installation (and software if your system has customer-installed software), a number of operational messages, the release number, and a Meridian MAX training mode message is displayed. When training ends, enter **precut** at the maintenance console login prompt, and the password provided by your Nortel distributor. The training mode menu, shown in Figure 13-1, is displayed.

**Figure 13-1**  
**Meridian MAX Training Mode menu**

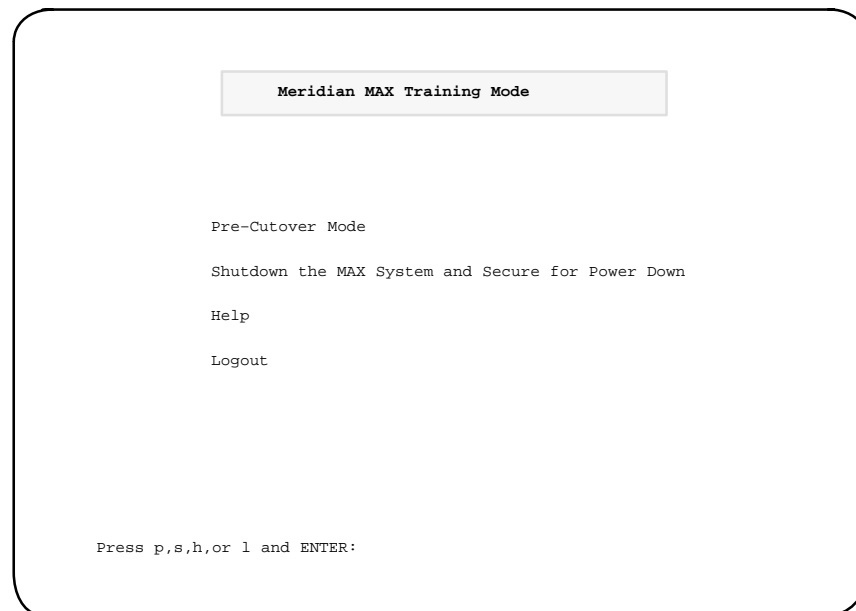

A menu is provided by the system. Detailed information on the menu items, as well as information regarding the default supervisor's ID in training mode, is available from the help facility. To view the help text, press **{h}**, followed by **{RETURN}**.

The supervisor workstations can be used in the training mode as soon as Meridian MAX starts up. You must select or define the workstation type, or both, before using the workstation for the first time after a system restart. Workstations remain active until either the system is shut down or precutover mode is selected from the system console.

### Precutover mode

Before switching to precutover mode, ensure the following are ready:

- 1 The High-Speed Link is connected between the Meridian MAX and the Meridian 1.
- 2 The Meridian 1 is configured for the High-Speed Link (Procedure 12-3 for Option 21-81 or Procedure 12-5 for Option 11) and Load Management Link (Procedure 12-4 for Option 21-81 or Procedure 12-6 for Option 11).
- 3 Supervisors and agents are trained and ready to use the Meridian MAX.
- 4 All workstations are logged out.

Switching to precutover mode is an irreversible change (unless a new installation is performed again).

To switch from training to precutover mode, follow Procedure 13-2.

In the precutover mode, the Meridian MAX database can be built in preparation for actual Meridian MAX operations. Once the Meridian MAX database is set up, you can convert to the product mode. This is the operational mode where typical Meridian MAX operations occur.

## Training mode to precutover mode

Follow Procedure 13-2 if you are switching from training mode to precutover mode.

### Procedure 13-2

#### To switch from training mode to precutover mode

- 1 Enter **precut** as the login ID when you log in to the maintenance terminal.

Console Login:

Once you have entered **precut**, followed by a **{RETURN}** response, the system displays:

Password:

- 2 Enter the password to log on. This password is supplied by your Nortel distributor.

Once you have entered the password, the system displays copyright and hardware configuration information. Your system messages may differ.

SYSTEM V/68 Release R3V8 Version 960918 xxxxxx

**Note:** (The "xxxxxxx" will be M68040 for SNN, IPE, and IPE-E. It will be M68060 for SNN-E.)

xxxxxx

**Note:** (The "xxxxx" will be a specific Meridian MAX system name or MAX00.)

Copyright (c) 1984 AT&T

Copyright (c) 1985-1992 Motorola, Inc.

All Rights Reserved

\*\*\*


erase = DEL kill = ^u intr = ^c quit = ^x

\*\*\*

The system displays the Meridian MAX Training Mode menu.



**Figure 13-2**  
**Meridian MAX Training Mode menu**

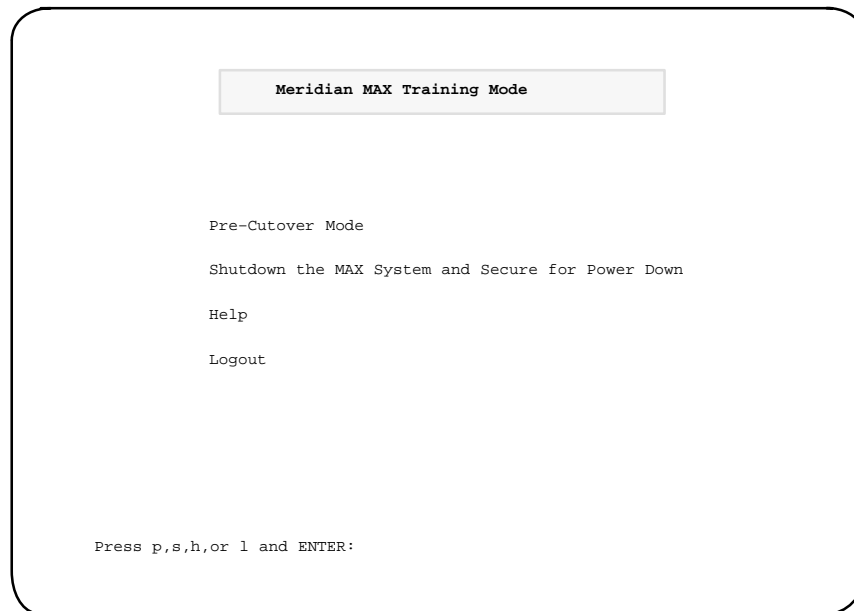

- 3 Enter **p** to select "*Pre-Cutover Mode*" from the menu.

The system then displays:

The MAX system is currently running in XXXXX-ID mode. MAX must be in the same mode as the Meridian 1/SL-1.

**Note:** (The "xxxxxx" will be current mode of your Meridian MAX, either Agent or Position.)

Please verify that the Meridian 1/SL-1 is in the same mode as MAX.

Is the Meridian 1/SL-1 in XXXXX-ID mode (y/n)?

**Note:** (The "xxxxxx" will be the current mode of your Meridian MAX.)

- 4 If your Meridian MAX and the Meridian 1 are not in the same mode, enter **n** to quit, followed by **{RETURN}**. The main menu is displayed.  
If you have verified that your Meridian MAX and the Meridian 1 are running in the same mode, enter **y**, followed by **{RETURN}**.

The system continues.

WARNING: Going to Pre-Cutover mode is an irreversible process. You can only return to training mode by reloading the Meridian MAX software from the original tape. All supervisor activity should be halted before doing this transition.

Press 'y' and ENTER to confirm transition in to Pre-Cutover mode.

Just press ENTER to remain in Training mode.

**5** Enter y, followed by {RETURN}.

The system continues.

Meridian MAX terminating...

Signal forces mapa\_logger termination

cron aborted: SIGTERM

\*\*\*> Creating the system database - please wait...(TIME)  
system database created.

\*\*\*> Loading MAX 8 system data files...  
Loading data files for precut mode...  
Data files loaded

\*\*\*> Historical Data database update starts.

\*\*\*> Creating the MAX 8 Historical Data database for precut mode.

This process takes approximately 5 minutes to execute.

Creating a new database (TIME)

\*\*\*> End of Historical Data database update.

**6** The system displays the Meridian MAX Hardware and System Parameters screen.

Refer to the "Meridian MAX system configuration" chapter for instructions on how to configure the system's ports.

**7** When you have completed the port configuration, the system continues.

\*\*\*> Creating USER LANGUAGE database - please wait (TIME)  
USER LANGUAGE database created.

INIT: New run level: 6

## 13-8 Operating modes

---

The system is coming down. Please wait.

System services are now being stopped.

NFS Shutdown: [NFS Shutdown Complete]

The system is down.

NOTICE: System Reboot Requested (0)

- 8 The system reboots and displays the copyright and hardware configuration information. Your system messages may differ.

Copyright Motorola Inc. 1988 - 1993, All Rights Reserved

xxxxxxx Debugger/Diagnostics Release Version 1.2 - 02/28/93

**Note:** (The "xxxxxxx" will be MVME177 for SNN-E, MVME167 for SNN, and M4120 for IPE/IPE-E.)

COLD Start

Local Memory Found =xxxxxxx (&xxxxxxx)

**Note:** (The "xxxxxxx (&xxxxxxx)" will be 04000000 (&67108864) for SNN-E, 02000000 (&33554432) for SNN, and 01000000 (&16777216) for IPE/IPE-E.)

MPU Clock Speed =xxMhz

**Note:** (The "xx" will be 50 Mhz for SNN-E, 33 Mhz for SNN, and 25 Mhz for IPE/IPE-E.)

Autoboot in progress... To abort hit <BREAK>

Booting from: xxxxxx, Controller 0, Drive 0

**Note:** (The "xxxxxx" will be VME177 for SNN-E, VME167 for SNN, and M4120 for IPE/IPE-E.)

Loading: Operating System

Volume: \$00000000

IPL loaded at: \$001F0000

VME Disk IPL Version 52.2

\*\*\*

erase = DEL    kill = ^u    intr = ^c    quit = ^x

\*\*\*

**Note:** The previous message tells you that the **{CONTROL} {C}** keys pressed simultaneously cause a system interruption which terminates the current process. The **DEL** key deletes and backspaces one character.

xxx SCSI configuration

**Note:** (The “xxx” will be 177 for SNN-E, and 167 for SNN or IPE/IPE-E.)

| Device | Addr | Vers | Revision | Serial# | Blocks  | Size  | Vendor  | Description |
|--------|------|------|----------|---------|---------|-------|---------|-------------|
| -----  | ---- | ---- | -----    | -----   | -----   | ----- | -----   | -----       |
| Disk   | 00   | 0002 | 8770...  | .....   | 2054325 | 0512  | SEAGATE | ST11200N    |
| Tape   | 40   | 0001 | RV J...  | .....   | 0000000 | 0000  | TEAC    | MT-2ST/F50B |

This configuration is an example. Your system configuration may differ.

Enter <CR> to pause in a single user shell before init.

Default boot sequence continuing...

The system is coming up. Please wait.

Node name set to xxxxx.

**Note:** (The “xxxxx” will be a specific Meridian MAX system name or MAX00.)

mount -f S51K /dev/usr /usr

Checking for system dump messages ...

Checking for system dump

Expreserve notification performed.

Downloading MVME332XT Line Disciplines.

**Note:** (The previous prompt only appears on SNN/SNN-E platforms.)

Error logging started.

OSM logging started.

port\_hold started.

Transport Provider daemon started.

Internet services provided.

portmap started.

Stream Error logging started.

netspec “tcpip” not set up.

### 13-10 Operating modes

---

```
Network Commands: rwalld
routed started.
NFS Startup...
ONC daemons:
NFS daemons:
Lock manager:
NFS Startup complete.
Line printer scheduler started.
Loading System Language Strings...
Loading System Language Strings completed.
Starting MAX OSM Logger, Please Wait ...
OSM logging stopped.
MAX OSM Logging Started.
Meridian MAX Release 08.xx
 Meridian MAX Precut Mode
 Please login as precut for more detail.
The system is ready.
Console Login:
```

**9** The system is now ready for precutover mode.


When you log in as **precut**, the precutover mode menu screen is displayed (see Figure 13-3).

Refer to Procedure 13-3 to transfer from the precutover mode to the product mode.

## Product mode

When the system is booted up after the transition from training mode to precutover mode is completed, enter **precut** at the maintenance console login prompt, then enter the password provided by your Nortel distributor. The precutover mode menu, as shown in Figure 13-3, is displayed.

**Figure 13-3**  
**Meridian MAX Pre-Cutover Mode menu**

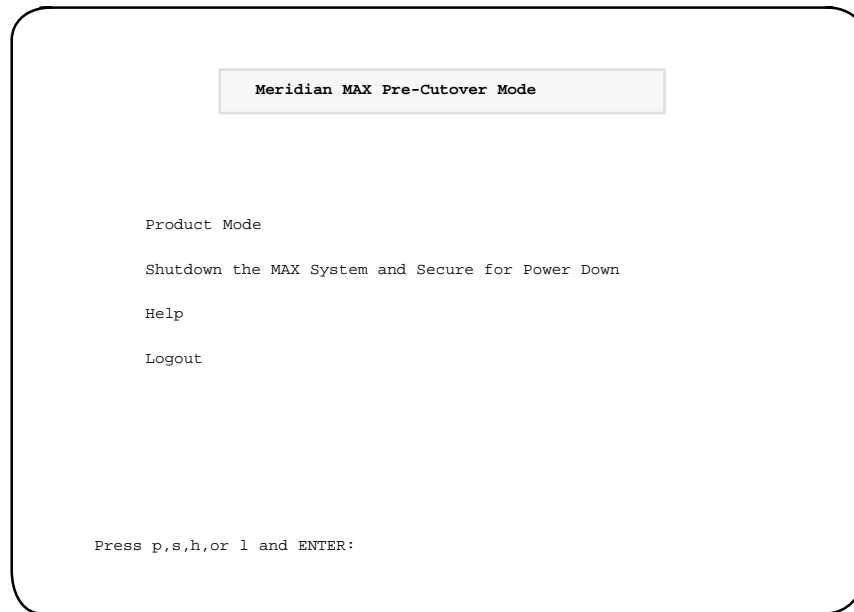

A menu of choices is provided by the system. Press **h**, followed by **{RETURN}**, to obtain detailed information from the help facility on the items in the menu, as well as the default supervisor's ID information.

Before switching to product mode, ensure that the following are ready:

- 1 The High-Speed Link is connected between the Meridian MAX and the Meridian 1. (The link does not come up until Meridian MAX is in product mode.)
- 2 The Meridian 1 is configured for the High-Speed Link.
- 3 Supervisors and agents are trained and ready to use the Meridian MAX.

- 4 All workstations are logged out.
- 5 The Meridian MAX database is set up correctly.

To switch from precutover to product mode, follow Procedure 13-3.

The product mode is the normal mode for operation. Once in product mode, your Meridian MAX is completely installed.

### Precutover mode to product mode

Follow Procedure 13-3 to switch from precutover mode to product mode.

#### Procedure 13-3

##### To switch from precutover mode to product mode

- 1 Enter **precut** as the login ID when you log in to the maintenance terminal.

Console login:

Once you have entered your response, the system displays:

Password:

- 2 Enter the password to log on. This password is supplied by your Nortel distributor.

Once you have entered the password, the system displays copyright and hardware configuration information.

SYSTEM V/68 Release R3V8 Version 960918 xxxxxx

**Note:** (The "xxxxxxx" will be M68040 for SNN, IPE, and IPE-E. It will be M68060 for SNN-E.)

xxxxxx

**Note:** (The "xxxxx" will be a specific Meridian MAX system name or MAX00.)

Copyright (c) 1984 AT&T

Copyright (c) 1985-1992 Motorola, Inc.

All Rights Reserved

\*\*\*


erase = DEL    kill = ^u    intr = ^c    quit = ^x

\*\*\*

**Note:** The previous message tells you that the **{CONTROL}{C}** keys pressed simultaneously cause a system interruption which terminates the current process. The DEL key deletes and backspaces one character.

The system displays the Meridian MAX precutover Mode menu.

**Figure 13-4**  
**Meridian MAX Pre-Cutover Mode menu**

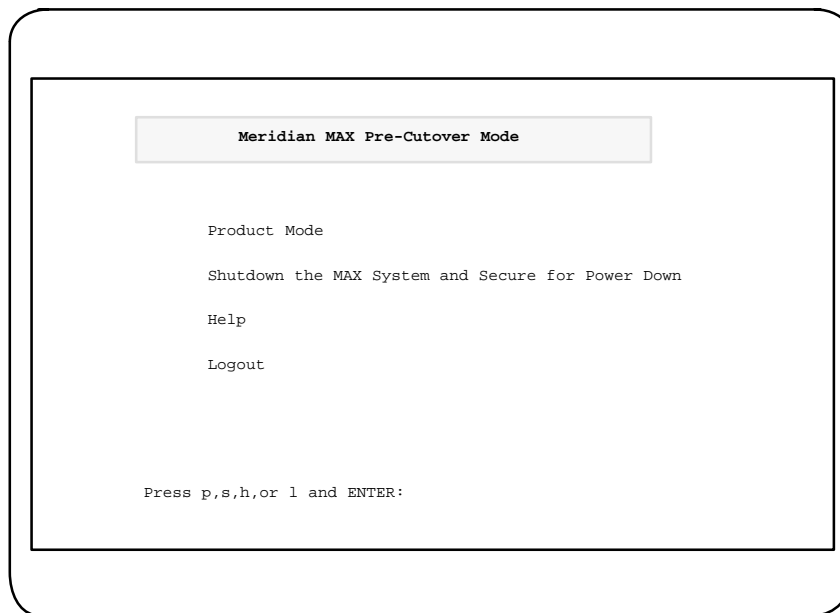

- 3 Enter **p** to select “*Product Mode*” from the menu.

The system then displays:

The MAX system is currently running in XXXXX-ID mode. MAX must be in the same mode as the Meridian 1/SL-1.

**Note:** (The “xxxxxxx will be the current mode of your Meridian MAX, either Agent or Position).

Please verify that the Meridian 1/SL-1 is in the same mode as MAX.

Is the Meridian 1/SL-1 in XXXXX-ID mode (y/n)?

**Note:** (The “xxxxxxx will be the current mode of your Meridian MAX.)



## 13-14 Operating modes

---

- 4 If your Meridian MAX and Meridian 1 are not in the same mode, enter **n** to quit, followed by **{RETURN}**. The main menu is displayed.  
If you have verified that your Meridian MAX and the Meridian 1 are running in the same mode, enter **y**, followed by **{RETURN}**.
- 5 If you are working on an SNN/SNN-E platform, go to Step 11.  
If you are working on an IPE/IPE-E platform, go to Step 6.
- 6 The Alter / View Meridian MAX IPE/IPE-E Information screen appears.

**Figure 13-5**

**Alter/View Meridian MAX IPE/IPE-Enhanced Module Information screen**

**Alter / View Meridian MAX - IPE/IPE-Enhanced Module Information**

All the information below must be entered before you can enter "Product Mode"

Meridian 1 Option Type : # \*

The card slots occupied by the Meridian MAX - IPE/IPE-Enhanced Module on the

Meridian 1 Switch (TN format) :

|   |   |      |
|---|---|------|
| 0 | 0 | 4    |
| 0 | 0 | 5    |
| 0 | 0 | 6    |
| 0 | 0 | 7 ** |

Press y and Enter to change any/all of the information above.

(Just Enter to quit):

\* # is the Option Type number

\*\* This card slot number would only appear if you are using Option 21–81 because it occupies four slots in the Meridian 1 switch.

The information in this screen is already in the system and is displayed for confirmation.

- 7 If the information is correct, press **{RETURN}**. Go to Step 11.  
If the information is incorrect, type **y**, followed by **{RETURN}**.

### Figure 13-6

#### Identifying the Meridian 1 option type

(Just Enter to quit):

- Once you have entered the new Meridian 1 Option Type, the following appears at the bottom of the screen:

**Note:** (The “xx” will be the new Meridian 1 Option Type.)

- 9 The following screen appears:

**Figure 13-7**  
**Identifying the starting slot location**

```
The card slots occupied by the Meridian MAX - IPE/IPE-Enhanced Module on
the Meridian 1 switch
(TN format) are : UNKNOWN

The Starting TN is the format 'lll s cc' , where

 lll (loop number) = 0-159
 s (shelf number) = 0-3
 cc (card number) = 0-18

Please enter the new starting location of the Meridian MAX - IPE/IPE-E
Enhanced Module
(TN format).
(Just press ENTER to quit):
```

- 10 Enter the starting slot location for the Meridian MAX - IPE/IPE-E, followed by **{RETURN}**.

Be sure to insert a space between each digit of the slot number (for example, 0 0 4).

**Note:** If you have an Option 11, the three consecutive slots are needed. If you have an Option 21–81, four consecutive slots are required.

Once you have entered the starting slot location, the following message appears at the bottom of the screen:

```
The starting location of the Meridian MAX -
IPE/IPE-Enhanced Module on the Meridian 1 switch is changed
to xxx x xx
```

The system then returns to the Alter / View Meridian MAX IPE/IPE-Enhanced Module Information screen shown in Step 6.

**11** The system continues.

WARNING: Cutting over to Product mode is an irreversible process. You can only return to training/pre-cutover mode by reloading the Meridian MAX software from the original tape. All supervisor activity should be halted before doing this transition.

Press 'y' and ENTER to confirm cutting over to Product mode.

Just press ENTER to remain in Pre-cutover mode.

**12** Enter y, followed by {RETURN}, to convert to product mode.

The system displays:

Meridian MAX terminating...

Signal forces mapa\_logger termination

cron aborted: SIGTERM

INIT: New run level: 6

The system is coming down. Please wait.

System services are now being stopped.

NFS shutdown: [NFS Shutdown Complete]

The system is down.

NOTICE: System Reboot Requested (0)

**Note:** Your system messages may differ.

Copyright Motorola inc. 1988 - 1993, All Rights Reserved

xxxxxxx Debugger/Diagnostics Release Version 1.2 - 02/28/93

**Note:** (The "xxxxxxx" will be MVME177 for SNN-E, MVME167 for SNN, and M4120 for IPE/IPE-E.)

COLD Start

Local Memory Found =xxxxxxx (&xxxxxxx)

**Note:** (The "xxxxxxx (&xxxxxxx)" will be 04000000 (&67108864) for SNN-E, 02000000 (&33554432) for SNN, and 01000000 (&16777216) for IPE/IPE-E.)

MPU Clock Speed =xxMhz

**Note:** (The "xx" will be 50 Mhz for SNN-E, 33 Mhz for SNN, and 25 Mhz for IPE/IPE-E.)

## 13-18 Operating modes

---

Autoboot in progress... To abort hit <BREAK>

Booting from: xxxxxx, Controller 0, Drive 0

**Note:** (The "xxxxxx" will be VME177 for SNN-E, VME167 for SNN, and M4120 for IPE/IPE-E.)

Loading: Operating System

Volume: \$00000000

IPL loaded at: \$001F0000

VME Disk IPL Version 52.2

\*\*\*

erase = DEL    kill = ^u    intr = ^c    quit = ^x

\*\*\*

**Note:** The previous message tells you that the {CONTROL} {C} keys pressed simultaneously cause a system interruption which terminates the current process. The DEL key deletes and backspaces one character.

xxx SCSI configuration

**Note:** (The "xxx" will be 177 for SNN-E, and 167 for SNN or IPE/IPE-E.)

| Device | Addr | Vers | Revision | Serial# | Blocks  | Size  | Vendor  | Description |
|--------|------|------|----------|---------|---------|-------|---------|-------------|
| -----  | ---- | ---- | -----    | -----   | -----   | ----- | -----   | -----       |
| Disk   | 00   | 0002 | 8770...  | .....   | 2054325 | 0512  | SEAGATE | ST11200N    |
| Tape   | 40   | 0001 | RV J...  | .....   | 0000000 | 0000  | TEAC    | MT-2ST/F50B |

This configuration is an example. Your system configuration may differ.

Enter <CR> to pause in a single user shell before init.

Default boot sequence continuing...

The system is coming up. Please wait.

Node name set to xxxxx.

**Note:** (The "xxxxx" will be a specific Meridian MAX system name or MAX00.)

mount -f S51K /dev/usr /usr

Checking for system dump messages ...

Checking for system dump...

Expreserve notification performed.

Downloading MVME332XT Line Disciplines.

**Note:** (The previous prompt only appears on SNN/SNN-E platforms.)

Error logging started.

OSM logging started.

port\_hold started.

Transport Provider daemon started.

Internet services provided.

portmap started.

Stream Error logging started.

netspec "tcpip" not set up.

Network Commands: rwalld

routed started.

NFS Startup...

ONC daemons:

NFS daemons:

Lock manager:

NFS Startup complete.

Line printer scheduler started.

Loading System Language Strings...

Loading System Language Strings completed.

Starting MAX OSM Logger, Please wait...

OSM Logging stopped.

MAX OSM logging started.

Meridian MAX Release 08.xx

The system is ready.

Console login:

The system is now in product mode. You can log in to the system.

- 13** To verify that all purchasable options and customer-controlled options are correct, log in as **maint**, and refer to the *Meridian MAX 8 Maintenance and Diagnostics Guide* (NTP 553-4001-811), “Maintenance and administration programs: system running” chapter, “View/Modify Meridian MAX Options” section, “Current Option Display” subsection, for more information.

---

## Chapter 14: Meridian MAX power-down procedure

---

The Meridian MAX is designed to work most effectively when the system is left on at all times. If there is no overruling, site-specific reason for turning off the Meridian MAX system, it is recommended that the system be left on.

**CAUTION****Risk of data corruption**

Do not power off a module without first performing the system shutdown procedure.

The Meridian MAX module must not be powered off without first shutting down the system. The shutdown process synchronizes the information currently in system memory with the information on the hard drive. Only in extenuating circumstances should the module be powered off without first shutting down.

If you must turn the system off, follow these steps.

**Procedure 14-1****Powering down the system**

- 1 Log on as “maint” and enter the maintenance password as required.
- 2 Select **s** to shut down the Meridian MAX software.
- 3 Select the “*Restart & Power Down System Utilities*” option from the main maintenance menu.



## 14-2 Meridian MAX power-down procedure

---

- 4 At the Restart and Power Down Utilities submenu, select *"Secure the system for Power Down"* option.
- 5 Once the system displays "NOTICE: System secured for powering down," turn off the power to the Meridian MAX module.

---

## Chapter 15: Meridian MAX installation checklist

---

This checklist provides a handy reference for installing your Meridian MAX. All items on the checklist correspond to sections and chapters of this document unless otherwise indicated.

### Site preparation

Plan out the site for your system's hardware. Be sure to take into account the power and environmental requirements. For more information, refer to the "Site Preparation" chapter.

**Site Preparation completed ?** \_\_\_\_\_

### Hardware installation

Register your peripheral equipment warranties. For more information, refer to the "Hardware installation: Application Module (SNN/SNN-E)" or "Hardware installation: Intelligent Peripheral Equipment module" chapters, "A word about warranties" section.

**Peripheral equipment warranties registered ?** \_\_\_\_\_

Install the Meridian MAX module. For more information, refer to either "Hardware installation: Application Module" or "Hardware installation: Intelligent Peripheral Equipment (IPE) module" chapters, depending on your hardware platform.

**Meridian MAX module installed ?** \_\_\_\_\_

Install the multiport cables. For more information, refer to either the “Hardware installation: Application Module” chapter, or the “Hardware installation: Intelligent Peripheral Equipment (IPE) module” chapter, “Cables” section, depending on your hardware platform.

**Multiport cables installed ?** \_\_\_\_\_

Install the printers. Ensure that the settings are correct. For more information, refer to the “Printers” chapter.

**Printer(s) installed ?** \_\_\_\_\_

Install the workstations. Ensure that the PCs are configured and VDTs are set up. For more information, refer to the “Workstations” chapter.

**Workstation(s) installed ?** \_\_\_\_\_

Connect the hardware to the power source(s). (Do not power up the hardware.)

**Power cable(s) installed ?** \_\_\_\_\_

Connect all modems, if required. Refer to the “Modems” chapter.

**MAX Status Interface (MSI) installed ?** \_\_\_\_\_

Install and enable the MAX Status Interface (MSI), if required. Refer to the *MSI/MEI Protocol Reference Guide* (P0853414).

**MAX Event Interface (MEI) installed ?** \_\_\_\_\_

Install and enable the MAX Event Interface (MEI), if required. Refer to the *MSI/MEI Protocol Reference Guide* (P0853414).

**Network link modem(s) installed ?** \_\_\_\_\_

**Limited-distance modem(s) installed ?** \_\_\_\_\_

**Remote diagnostic modem installed ?** \_\_\_\_\_

**Supervisor dial-up modem(s) installed ?** \_\_\_\_\_

**Hardware installation completed ?** \_\_\_\_\_

## Software installation

Providing you have completed the hardware installation, proceed with the software installation. If you performed a new SNN/SNN-E or IPE/IPE-E software installation, refer to the “New software installations” chapter. If you installed a more recent issue of your existing software, refer to the “Loading a new software release” chapter. If you performed a software reinstallation or upgrade, refer to the “Software reinstallations and upgrades” chapter.

**Capacity Configuration worksheets completed ?** \_\_\_\_\_

Ensure that the Capacity Configuration worksheets are completed and approved. For more information, refer to the “Meridian MAX system configuration” chapter.

**Software installed (if necessary) ?** \_\_\_\_\_

Ensure that the workstations are configured for the system. For more information, refer to the “Workstation, HSL, and LML configuration” chapter.

**Workstation Configuration completed ?** \_\_\_\_\_

**Software Installation completed ?** \_\_\_\_\_

## Operating modes

Make sure that all supervisors and system administrators have had the opportunity to learn to use the system while in the training mode. For more information, refer to the “Operating modes” chapter, “Training mode” section.

**Training completed ?** \_\_\_\_\_

Switch from training mode to precutover mode. For more information, refer to the “Operating modes” chapter, “Precutover mode” section .

**Precutover Mode started ?** \_\_\_\_\_

Make certain that the system database is established while in the precutover mode. For more information, refer to the “Operating modes” chapter, “Precutover mode” section.

**System database completed ?** \_\_\_\_\_

Switch from precutover mode to product mode. For more information, refer to the “Operating modes” chapter, “Product mode” section.

**Product Mode started ?** \_\_\_\_\_

Make sure that you insert a backup tape into the tape drive. For more information, refer to the “Software installation overview” chapter, “Backups” section.

**Backup tape inserted ?** \_\_\_\_\_

## Chapter 16: Field replaceable parts

Field replaceable parts for Meridian MAX running on an Application Module (AM) are listed in Table 16-1.

| <b>Table 16-1<br/>Recommended spare parts for Meridian MAX Application Module</b> |                     |
|-----------------------------------------------------------------------------------|---------------------|
| <b>Name used in document</b>                                                      | <b>Part number</b>  |
| MVME147SA-1 CPU                                                                   | A0351919            |
| MVME167-34 CPU                                                                    | A0386049            |
| MVME177-005 CPU                                                                   | A0696008            |
| MVME332-XTS 8-channel asynchronous board                                          | A0376918            |
| MVME332-XT 8-channel asynchronous board                                           | A0376918            |
| MVME712M transition card                                                          | A0601182            |
| MVME712AM transition card                                                         | A0351167            |
| Transition card for MVME332-XT board                                              | NT7D51AA (A0387982) |
| 2 Gbyte disk drive and 600 Mbyte tape drive unit                                  | NT7D62EA (A0658263) |
| 1 Gbyte disk drive and 600 Mbyte tape drive unit                                  | NT7D62CA (A0404821) |
| 172 Mbyte disk drive and 155 Mbyte tape drive unit                                | NT7D62AB (A0387828) |
| 1 Gbyte disk drive and 155 Mbyte tape drive unit                                  | NT7D62AC (A0401542) |
| AC power supply                                                                   | NT7D64AA (A0374109) |
| DC power supply                                                                   | NT7D64DC (A0374110) |
| —continued—                                                                       |                     |

## 16-2 Field replaceable parts

| <b>Table 16-1 (continued)</b><br><b>Recommended spare parts for Meridian MAX Application Module</b> |                                                                             |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| <b>Name used in document</b>                                                                        | <b>Part number</b>                                                          |
| Active SCSI terminator for SNN-E                                                                    | A0658493                                                                    |
| Passive SCSI terminator for SNN                                                                     | A0379673                                                                    |
| Miscellaneous equipment                                                                             | Serial-parallel converter for printers (A0621070)                           |
| Supplies                                                                                            | Minimum of three blank cassette tapes<br>600 Mbyte cassette tape (A0605411) |
| —end—                                                                                               |                                                                             |

Field replaceable parts for Meridian MAX running on an IPE/IPE-E are listed in Table 16-2.

| <b>Table 16-2</b><br><b>Recommended spare parts for Meridian MAX IPE/IPE-E module</b>                |                    |
|------------------------------------------------------------------------------------------------------|--------------------|
| <b>Name used in document</b>                                                                         | <b>Part number</b> |
| Meridian MAX IPE Option 11 Field Replaceable Unit (1 Gbyte hard drive and 600 Mbyte tape drive)      | A0617009           |
| Meridian MAX IPE Option 21–81 Field Replaceable Unit (1 Gbyte hard drive and 600 Mbyte tape drive)   | A0617010           |
| Meridian MAX IPE-E Option 11 Field Replaceable Unit (1 Gbyte hard drive and 600 Mbyte tape drive)    | A0669467           |
| Meridian MAX IPE-E Option 21–81 Field Replaceable Unit (1 Gbyte hard drive and 600 Mbyte tape drive) | A0669468           |

**Note:** Prior to November 1995, the first two items in Table 16-2 were shipped with a 155 Mbyte tape drive and a 180 Mbyte hard drive or a 600 Mbyte tape drive and a 240 Mbyte hard drive. After November 1995, they were shipped with a 600 Mbyte tape drive and a 1 Gbyte hard drive. Only the last two IPE-E items in this table can now be ordered for new systems.

Miscellaneous equipment used with Meridian MAX running on an Application Module (AM) or an IPE/IPE-E module are listed in Table 16-3.

| <b>Table 16-3<br/>Miscellaneous spare parts for Meridian MAX</b> |                                                      |
|------------------------------------------------------------------|------------------------------------------------------|
| <b>Name used in document</b>                                     | <b>Part number</b>                                   |
| Meridian Terminal Emulator (MTE) 5.32 Software Package (for DOS) | NT1R75AA (A0406758)                                  |
| Meridian Terminal Emulator (MTE) 7 Software Package              | Contact your Nortel distributor for the part number. |
| Meridian Terminal Emulator (MTE) 8 Software Package              | Contact your Nortel distributor for the part number. |
| Power Monitor Mounting Bracket Kit                               | NT7D18KA (A0405826)                                  |

The part numbers for interconnect AM cables are listed in Table 16-4.

| <b>Table 16-4<br/>Interconnect cables and part numbers for Application Module (AM)</b> |                                                                                                                                  |                                                                                |                  |
|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|------------------|
| <b>ENG Code</b>                                                                        | <b>Application</b>                                                                                                               | <b>Cable and connector style</b>                                               | <b>Length</b>    |
| NT7D47DA                                                                               | Carries input/output between the MVME712M transition card and the Input/Output connector panel (Ethernet)                        | 15-pin (male) Ethernet to 15-pin (female) Ethernet                             | 35.5 cm (14 in.) |
| NT7D58CA                                                                               | Carries input/output between the Input/Output connector panel (Card 1, Conn 4) and the MVME712M transition board (Serial Port 4) | 15-pin (female) high-density D-sub to 25-pin (male) round subminiature D-style | 35.5 cm (14 in.) |
| —continued—                                                                            |                                                                                                                                  |                                                                                |                  |



## 16-4 Field replaceable parts

| <b>Table 16-4 (continued)</b><br><b>Interconnect cables and part numbers for Application Module (AM)</b> |                                                                                                                                                                   |                                                                          |                  |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|------------------|
| <b>ENG Code</b>                                                                                          | <b>Application</b>                                                                                                                                                | <b>Cable and connector style</b>                                         | <b>Length</b>    |
| NT7D79BA                                                                                                 | Carries input/output between the Input/Output connector panel (Card 1, Conn 1-3, modem and SDI Link) and the MVME712M transition board (Serial Ports 1, 2, and 3) | 9-pin (male) to 25-pin (male) subminiature D-style                       | 35.5 cm (14 in.) |
| NT7D95AA                                                                                                 | Carries input/output between the Input/Output connector panel (Card 2-6, Conn 1-3) and the NT6D51AA transition board                                              | 25-pin (male) subminiature D-style to 25-pin (male) subminiature D-style | 35.5 cm (14 in.) |
| —end—                                                                                                    |                                                                                                                                                                   |                                                                          |                  |

The part numbers for external AM cables are listed in Table 16-5.

| <b>Table 16-5</b><br><b>External cables and part numbers for Application Module (AM)</b> |                                                                |                                                    |                                                                                |
|------------------------------------------------------------------------------------------|----------------------------------------------------------------|----------------------------------------------------|--------------------------------------------------------------------------------|
| <b>ENG Code</b>                                                                          | <b>Application</b>                                             | <b>Cable and Connector style</b>                   | <b>Length</b>                                                                  |
| NT1R03DB<br>NT1R03DC<br>NT1R03DF<br>NT1R03DP<br>NT1R03DV                                 | Connects as input/output between modems and peripheral devices | DB-25 (male) connector to DB-25 (male) connector   | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 m (25 ft)<br>13.7 m (45 ft) |
| NT1R03EB<br>NT1R03EC<br>NT1R03EF<br>NT1R03EP<br>NT1R03EV                                 | Connects as input/output between modems and peripheral devices | DB-25 (male) connector to DB-25 (female) connector | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 m (25 ft)<br>13.7 m (45 ft) |
| —continued—                                                                              |                                                                |                                                    |                                                                                |

| <b>Table 16-5 (continued)</b><br><b>External cables and part numbers for Application Module (AM)</b> |                                                                                                                                                                                                                                                           |                                                                                               |                                                                                                  |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| <b>ENG Code</b>                                                                                      | <b>Application</b>                                                                                                                                                                                                                                        | <b>Cable and Connector style</b>                                                              | <b>Length</b>                                                                                    |
| NT7D47EA                                                                                             | Carries input/output between the Input/Output connector panel (Ethernet) and the customer-supplied transceiver                                                                                                                                            | 15-pin (male) connector with thumb screws to 15-pin (female) connector with sliding latch     | 3 m (10 ft)                                                                                      |
| NT7D58AB<br>NT7D58AD<br>NT7D58AF<br>NT7D58AL<br>NT7D58AT<br>NT7D58AV                                 | Carries input/output between the Input/Output connector panel and the SDI port. Used for SDI cards, QPC139, QPC841, and for terminals and printers (with A0351509 gender changer). This cable is also used to connect a Meridian MAX system to Option 11. | 25-pin (male) subminiature D-style connector to 25-pin (male) subminiature D-style connector  | 61 cm (2 ft)<br>1.8 m (6 ft)<br>3 m (10 ft)<br>6.1 m (20 ft)<br>10.7 m (35 ft)<br>13.7 m (45 ft) |
| NT7D58BB<br>NT7D58BD<br>NT7D58BF<br>NT7D58BL<br>NT7D58BT<br>NT7D58BV                                 | Carries input/output between the Input/Output connector panel (Card 1, Conn 4) and the Meridian 1/SL-1                                                                                                                                                    | 15-pin (male) high-density connector to 25-pin (female) connector                             | 61 cm (2 ft)<br>1.8 m (6 ft)<br>3 m (10 ft)<br>6.1 m (20 ft)<br>10.7 m (35 ft)<br>13.7 m (45 ft) |
| NT7D61AB<br>NT7D61AD<br>NT7D61AF<br>NT7D61AL<br>NT7D61AT<br>NT7D61AV                                 | Carries input/output between the Input/Output connector panel and the Meridian MAX system console (with A0351509 gender changer)                                                                                                                          | 25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector | 61 cm (2 ft)<br>1.8 m (6 ft)<br>3 m (10 ft)<br>6.1 m (20 ft)<br>10.7 m (35 ft)<br>13.7 m (45 ft) |
| NT8D93AJ<br>NT8D93AW                                                                                 | Carries input/output between the Input/Output connector panel and the XSDI port. Used for the XSDI card, NT8D41.                                                                                                                                          | 25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector | 4.9 m (16 ft)<br>14.6 m (48 ft)                                                                  |
| —continued—                                                                                          |                                                                                                                                                                                                                                                           |                                                                                               |                                                                                                  |

## 16-6 Field replaceable parts

| <b>Table 16-5 (continued)</b><br><b>External cables and part numbers for Application Module (AM)</b> |                                                                                                                        |                                                                                                          |               |
|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|---------------|
| <b>ENG Code</b>                                                                                      | <b>Application</b>                                                                                                     | <b>Cable and Connector style</b>                                                                         | <b>Length</b> |
| NT8D96AE                                                                                             | Carries input/output between the Input/Output connector panel and the peripheral devices connected to the Meridian MAX | Single DB-25 (male) at the I/O panel's end to three DB-25 (female) connectors                            | 2.4 m (8 ft)  |
| NT7D99AA                                                                                             | Connects as input/output between Meridian MAX and dial-up modem, as well as between Meridian MAX and LDS modem.        | 25-pin (male) subminiature D-style DB-25 connector to 25-pin (male) subminiature D-style DB-25 connector | 3 m (10 ft)   |
| —end—                                                                                                |                                                                                                                        |                                                                                                          |               |

The part numbers for external IPE cables are listed in Table 16-6.

| <b>Table 16-6</b><br><b>External cables and part numbers for IPE/IPE-E</b> |                                                                                                                                                  |                                                                                                                       |                                                                                                        |
|----------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| <b>ENG Code</b>                                                            | <b>Application</b>                                                                                                                               | <b>Cable and Connector style</b>                                                                                      | <b>Length</b>                                                                                          |
| NT1R03AA<br>NT1R03BA                                                       | Carries input/output information between the Option 11 or Option 21–81 and its peripheral devices (The NT1R03AA also has Ethernet capabilities.) | 50-pin (female) key telephone connector to four DB-25 (female) connectors (NT1R03AA also has an Ethernet connection.) | Four connectors<br>76 cm (30 in)<br>69 cm (27 in)<br>61 cm (24 in)<br>53 cm (21 in)<br>in ladder shape |
| NT1R03CA                                                                   | Extends the connection between the Option 11 and the NT1R03AA and NT1R03BA cables                                                                | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector                                      | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 (25 ft)<br>13.7 m (45 ft)                           |
| —continued—                                                                |                                                                                                                                                  |                                                                                                                       |                                                                                                        |

| <b>Table 16-6 (continued)</b><br><b>External cables and part numbers for IPE/IPE-E</b> |                                                                                                                        |                                                                                                      |                                                                              |
|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| <b>ENG Code</b>                                                                        | <b>Application</b>                                                                                                     | <b>Cable and Connector style</b>                                                                     | <b>Length</b>                                                                |
| NT1R03DB<br>NT1R03DC<br>NT1R03DF<br>NT1R03DP<br>NT1R03DV                               | Extension cable from NT1R03AA and NT1R03BA cables to peripheral devices, HSL port, or LML port                         | DB-25 (male) connector to DB-25 (male) connector                                                     | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 (25 ft)<br>13.7 m (45 ft) |
| NT1R03EB<br>NT1R03EC<br>NT1R03EF<br>NT1R03EP<br>NT1R03EV                               | Extension cable from NT1R03AA and NT1R03BA cables to peripheral devices                                                | DB-25 (male) connector to DB-25 (female) connector                                                   | 61 cm (2 ft)<br>1.2 m (4 ft)<br>3 m (10 ft)<br>7.6 (25 ft)<br>13.7 m (45 ft) |
| NT1R03HF                                                                               | Modem cable from NT1R03AA and NT1R03BA cables to modem                                                                 | DB-25 (male) connector to DB-25 (male) connector                                                     | 3 m (10 ft)                                                                  |
| NT1R03FP<br>NT1R03FV                                                                   | MDF Extension cable between the Option 11 and Option 21–81 and the NT1R03AA cable                                      | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector (with Ethernet tap) | 7.6 (25 ft)<br>13.7 m (45 ft)                                                |
| NT1R03GP<br>NT1R03GV                                                                   | MDF Extension cable between the Option 11 and Option 21–81 and the NT1R03BA cable                                      | 50-pin (female) key telephone connector to 50-pin (male) key telephone connector                     | 7.6 (25 ft)<br>13.7 m (45 ft)                                                |
| NTAK19AA                                                                               | Carries input/output information between the TDS/DTR card's HSL port on the Option 11 and Port 8 on the NT1R03BA cable | 50-pin key telephone connector to two DB-25 (male) connectors                                        | 1.8 m (6 ft)                                                                 |
| —continued—                                                                            |                                                                                                                        |                                                                                                      |                                                                              |

**16-8** Field replaceable parts

| <b>Table 16-6 (continued)</b><br><b>External cables and part numbers for IPE/IPE-E</b> |                                                                                                                        |                                                                                               |                                 |
|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|---------------------------------|
| <b>ENG Code</b>                                                                        | <b>Application</b>                                                                                                     | <b>Cable and Connector style</b>                                                              | <b>Length</b>                   |
| NTAK19BA                                                                               | Carries input/output information between the SDI/DCH card's HSL port on the Option 11 and Port 8 on the NT1R03BA cable | 50-pin key telephone connector to four DB-25 (male) connectors                                | 1.8 m (6 ft)                    |
| NT8D93AJ<br>NT8D93AW                                                                   | Carries input/output information between the HSL port on the Option 21-81 and Port 8 on the NT1R03BA cable             | 25-pin (male) subminiature D-style connector to 9-pin (female) subminiature D-style connector | 4.9 m (16 ft)<br>14.6 m (48 ft) |
| —end—                                                                                  |                                                                                                                        |                                                                                               |                                 |

---

## Chapter 17: List of terms

---

### **ACD**

Automatic call distribution (ACD) provides a means of automatically distributing a company or organization's incoming calls among a number of answering positions (ACD agents). Automatic call distribution is useful in operations where callers want a service rather than a specific person. Calls are serviced in the order they arrive and distributed so that the workload at each answering position is approximately equal.

### **ACD configuration**

The ACD configuration includes the assignments in the Meridian MAX system of agents to queues, of queues to a supervisor, of trunks to routes, and of routes to queues. It also includes the parameters that control recorded announcements, call overflow and interflow, and night service.

### **ACD-DN**

An automatic call distribution - directory number (ACD-DN) is the queue where incoming calls wait until they are answered. Calls are answered in the order in which they entered the queue.

### **Agent**

An agent is a person who answers ACD calls. An agent should be able to provide all the information needed for an ACD call.

### **AM**

The application module (AM) is the card cage that resides within the Application Equipment Module (AEM). The AM supports VME-based application products, such as Meridian MAX. Two AMs can fit into each AEM. Each AM has its own power supply.

## 17-2 List of terms

---

**Application layer**

This is a layer within a network communication model. Application programs generate messages to be sent to other applications within the network.

**Application module**

The application module houses the components for the SNN or SNN-E platform.

**Application upgrade**

An application upgrade is the software upgrade procedure you perform when you are installing new features or functionality onto your existing Meridian MAX system without changing the hardware or the operating system.

**CDN**

A Control Directory Number (CDN) is a special Directory Number (DN) configured in a Meridian 1 system to which no agents are assigned.

**Configuration Control**

The Configuration Control feature enables a system administrator to make changes to the configuration of the ACD system so that it works more efficiently.

**Configuration Control Link**

*See Load Management Link.*

**Custom Calculator**

Custom Calculator, also referred to as Formula Definition, is an option that allows new formulas to be defined for use in custom reporting and custom displays. These formulas can be used in graphic and tabular report definitions.

**Data link layer**

This is a layer within a network communication model. It takes application layer messages and sends them over the network.

**Default router/gateway address**

In the network environment, routers (also called gateways) are used to provide connectivity between two networks.

**DID**

Direct Inward Dialed

**DN key**

The directory number (DN) key is the agent's link to the Meridian 1. The agent can make and answer non-ACD calls using the DN key.

**DNIS number**

In situations where customers can dial one of several telephone numbers, the dialed number information service (DNIS) allows the Meridian MAX system to keep track of the last three or four digits of the telephone number dialed. In this way, one ACD queue can receive calls from several different phone numbers, and agents know which number was dialed and answer each call appropriately.

**Formula Definition**

*See Custom Calculator.*

**HDC**

Historical Data Collection task. This is a task within MAX that collects data from the Meridian 1 and writes the data to the Historical Database.

**HSL**

High Speed Link. This is the 9600 or 19 200 baud link that connects the Meridian 1 with the Meridian MAX. The Meridian 1 sends call traffic messages to the Meridian MAX through this link.

**Installation upgrade**

An installation upgrade is a Meridian MAX system upgrade that changes the Meridian MAX hardware or software, or both. For example, if you change from a Meridian MAX 4 single-module system to a Meridian MAX 8 SNN, both hardware and software change. If you perform an installation upgrade from a Meridian MAX 6 SNN system to a Meridian MAX 8 SNN system, only the software needs to be upgraded.

**Interflow**

When an ACD-DN cannot handle all the calls coming in, a supervisor can manually activate the interflow feature. This feature allows new calls to the ACD-DN to be rerouted to a predefined destination within the ACD system or to an external number.



**IPE**

A Meridian MAX 8 hardware platform. The Intelligent Peripheral Equipment (IPE) module consists of the following components:

- SMM167 CPU card
- 180 Mbyte or 240 Mbyte hard disk drive
- 155 Mbyte or 600 Mbyte cassette tape drive

**IPE-E**

A hardware platform introduced in Meridian MAX 8. The Intelligent Peripheral Equipment-Enhanced (IPE-E) module consists of the following components:

- SMM167 CPU card
- 1 Gbyte hard disk drive
- 600 Mbyte cassette tape drive

**IPE/IPE-E**

A combination of abbreviations to indicate that the feature being described applies to both the IPE platform and the IPE-E platform.

**LAN**

Local area network

**Load Management Link**

The link through which the Meridian 1 and the Meridian MAX communicate. This link allows the supervisor to send Load Management commands to the switch.

**Load new software release**

When the Meridian MAX release which your system is installed with updates its software, you can perform a “load new software release” procedure. For example, if you are currently running Meridian MAX 8 SNN Release 07.21 and you need to upgrade to Meridian MAX 8 SNN Release 07.25, you can perform this procedure.

**Management reports**

Management reports show detailed information on various aspects of an ACD operation. These reports offer valuable information on how well the system configuration is working.

**MAX**

Micro-auxiliary processor

**MEI**

MAX Event Interface (MEI) allows Meridian MAX to send real-time, event-related data to a third-party vendor application. Two types of protocol data can be sent: MEI-Network for applications wishing to route calls through the public switched network, and MEI-Observe for applications wishing to ensure that agents are adhering to specified standards.

**Meridian 1**

Meridian 1 is the private branch exchange (PBX) that handles the calls to and from the organization's ACD system. It routes calls to the various queues and provides the framework for all the ACD features available through Meridian MAX.

**MQA**

Multiple Queue Assignment (MQA) allows agents to service up to five queues simultaneously. At login, agents can define priorities within the queues and assign themselves to a specific supervisor. They are also able to log in to any telephone set, allowing workstations to be shared and changed between agents.

**MSI**

MAX Status Interface (MSI) allows Meridian MAX to send queue-based statistical data across the LAN to a central real-time load management system. The central system uses the data received from the Meridian MAX and other vendors' ACD systems to manage network traffic.

**MTE**

Meridian Terminal Emulator (MTE) software is a terminal emulator package designed to run on IBM, or 100%-compatible AT or higher, PCs. MTE contains all the functionality of Reflection 4+. It also provides additional features such as local printing to a PC-based supervisor workstation, LAN connectivity for supervisor workstations, and color customization of supervisor workstation screen elements.

**MVME**

Motorola Versa-Module Eurocard

**NAC**

Network Administration Center (NAC) is a computerized system that allows organizations with multiple MAX sites, called nodes, to monitor and supervise all sites from one central location.

**NACD**

Network Automatic Call Distribution (NACD) is an option that allows calls to be overflowed to an ACD-DN in another node in the ACD network.

**Node**

A Meridian MAX or ACD-MAX system that functions as part of a Network Administration Center (NAC) system.

**Overflow**

Meridian MAX allows several different overflow thresholds to be defined. When an overflow threshold on a particular ACD-DN is reached, calls are routed automatically to an overflow queue where they can then be answered by the next ACD-DN that is defined to receive these overflowed calls and is in a position to accept them.

**Platform upgrade**

A platform upgrade is an upgrade that involves changes to both Meridian MAX system hardware and software. For example, an upgrade from an ACD-MAX system to a Meridian MAX system is a platform upgrade.

**Primary queue**

The first queue the agent logs in to while working with MQA enabled.

**SDA**

Supervisor Display Access (SDA) is a feature specific to Meridian MAX IPE/IPE-E that allows you to access another supervisor display through the system console port or remote diagnostics modem port.

**SEE system**

A Meridian MAX hardware platform consisting of

- Single application module
- Existing MVME147SA-1 CPU card
- Existing mass storage unit (MSU) containing a 172 Mbyte or 240 Mbyte hard disk and a 155 Mbyte cassette tape drive

***Note:*** Meridian MAX 7 or higher does not support the SEE hardware platform.

**SNN**

A Meridian MAX 8 hardware platform. The SNN module consists of the following components:

- Single-module system
- New MVME167-34 CPU card
- New mass Storage Unit (MSU) containing a 1 Gbyte hard disk and a 600 Mbyte cassette drive

**SNN-E**

A new SNN-Enhanced platform introduced in Meridian MAX 8. The SNN-E module consists of the following components:

- single-module system
- MVME177-005 CPU card
- Mass Storage Unit (MSU) containing a 2 Gbyte hard disk and a 600 Mbyte cassette drive

**SNN/SNN-E**

A combination of abbreviations to indicate that the feature being described applies to both the SNN platform and the SNN-E platform.

**Statistics group**

All the data from the PBX switch is collected into logical groups.

**Subnet mask**

The subnet mask is a 32-bit number used by the network software on a local machine to determine which bits belong to the network or to the host parts of an internet address. An improper subnet mask can result in high collision rates and reduced network efficiency.

**Supervisor**

The supervisor is the person who manages agent and queue performance.

**System administrator**

The system administrator is responsible for overseeing the functions of the Meridian MAX system, including its staff and facilities. In addition to the functions available to supervisors, the system administrator is usually responsible for the definition of management reports and the printing schedule for these reports. Based on the information these reports provide, the system administrator can reconfigure the system to best use the system's equipment and personnel.

**Thresholds**

Meridian MAX allows the definition of several different thresholds that pertain to different objectives of your organization. For instance, thresholds can be defined for the maximum length of time a customer's call should wait in queue, how long an agent should spend on each call, and how many calls should be waiting in a queue before other queues should start accepting the overflow.

**Trunk routes**

Trunks are the physical links, or circuits, that enable telephone communication. A trunk route carries calls from outside the ACD system to an agent or ACD queue.

**VME**

Versa-Module Eurocard

## Index

---

### A

Application Module, 3-17–3-26  
   cables, 3-27–3-43  
   external input/output  
     NT1R03Dx cabling arrangement, 3-34  
     NT1R03Ex cabling arrangement, 3-35  
     NT7D58Ax cabling arrangement, 3-36, 3-37  
     NT7D61Ax cabling arrangement, 3-38  
     NT8D93Ax cabling arrangement, 3-39  
     NT8D99AA cabling arrangement, 3-40  
   input/output, external, 3-31–3-41  
   input/output, interconnect, 3-30  
   input/output, internal, 3-27–3-29  
   VME multi-port cable, 3-42–3-43  
 equipment and material list, 3-2  
 hardware replacements, 3-44–3-52  
   configuring the MVME167–34 card, 3-49–3-52  
   configuring the MVME177–004 card, 3-49–3-52  
   replacing the MVME167–34 card, 3-47–3-49  
   replacing the MVME177-004 card, 3-47–3-49

hardware upgrades, 3-44–3-52  
   adding MVME332XTS/XT cards to a system, 3-45–3-46  
 input/output panels, 3-21–3-22  
 input/output port assignments, 3-23–3-26  
 installation, 3-18–3-26  
 overview, 3-1–3-7  
 tape label, 3-21–3-26  
 Automatic backup, 1-5

### C

Cables  
   Application Module, 3-27–3-43  
   external input/output  
     NT1R03Dx cabling arrangement, 3-34  
     NT1R03Ex cabling arrangement, 3-35  
     NT7D58Ax cabling arrangement, 3-36, 3-37  
     NT7D61Ax cabling arrangement, 3-38  
     NT8D93Ax cabling arrangement, 3-39  
     NT8D99AA cabling arrangement, 3-40  
   input/output, external, 3-31–3-41

- input/output, interconnect, 3-30
  - input/output, internal, 3-27–3-29
  - VME multi-port cable, 3-42–3-43
  - IPE module, 4-36–4-45
    - external input/output
      - NT1R03Dx cabling arrangement, 4-38
      - NT1R03Ex cabling arrangement, 4-39
      - NT1R03HF cabling arrangement, 4-40
    - input/output, external, 4-36–4-40
    - NT1R03AA four-port I/O cable, 4-41–4-45
    - NT1R03BA four-port I/O cable, 4-41–4-45
  - Option 11
    - cabling to peripherals through a Main Distribution Frame (MDF), 4-33–4-35
    - input/output, 4-14–4-17
  - Option 21–81
    - cabling to peripherals through a Main Distribution Frame (MDF), 4-33–4-35
    - input/output, 4-20–4-22
    - rerouting for CE/PE and IPE modules, 4-23–4-30
  - NT9D8001, cabling arrangement, 5-63
  - NT9D9007, cabling arrangement, 5-72
  - Cables and part numbers, Intelligent Peripheral Equipment (IPE) module, 16-6, 16-7, 16-8
  - Calls per hour, 2-16–2-18
  - Capacities
    - hardware-dependent, 2-9–2-18
      - Application Module, 2-10
      - IPE/IPE-E module, 2-13–2-18
    - platform, 2-8
  - Capacity Configuration, 9-20–9-62
    - configuring the system database, 9-23–9-27
      - modifying system capacities, 9-23–9-24
      - new system database, 9-23
      - system reconfiguration, 9-24–9-27
    - functionality, 9-21
    - historical database, 9-21–9-22
      - Meridian MAX 8, 9-22
    - worksheets, 9-24–9-30
  - cleaning the tape drive, 10-11–10-12
  - Code Page 850, Meridian Terminal Emulator (MTE), international language support, 6-21–6-22
  - Configuration, port assignment, 9-2–9-10
  - Connector panels
    - Application Module, generic input/output, 3-22
    - IPE module
      - CE/PE cabinet input/output, 4-34
      - IPE cabinet input/output, 4-35
- ## D
- DEC LA195i, printer, 7-7–7-8
  - Default router/gateway address, 9-15–9-62
  - Develcon DS 511A, limited distance connection, 5-57–5-68
  - Dialing plans, 2-19–2-22
    - seven-digit CDP, 2-19–2-20
    - NACD routing tables with CDP and UDP, 2-21–2-22
    - UDP, 2-20

## E

Equipment and material list, Meridian  
MAX IPE/IPE-E, 4-2

## F

Field replaceable parts, 16-1  
Application Module, 16-1, 16-2  
IPE module, 16-2

## G

Gandalf LDS 120E, limited distance  
connection, 5-57–5-68  
DIP switch settings, 5-64–5-65  
Meridian MAX end, 5-66–5-68  
NAC 1 end, 5-65–5-66  
NAC 2 end, 5-65

## H

Hardware  
dependent capacities, 2-9–2-18  
Application Module. *See* Capacities  
IPE/IPE-E module. *See* Capacities  
installation checklist, 15-1–15-2  
overview, 1-3–1-4  
platform, 2-8  
platforms, 1-1, 10-2  
replacements  
Application Module, 3-44–3-52  
configuring the MVME167–34  
card, 3-49–3-52  
configuring the MVME177–004  
card, 3-49–3-52  
replacing the MVME167–34 card,  
3-47–3-49

replacing the MVME177-004 card,  
3-47–3-49  
IPE module, 4-52–4-56  
configuring the SMM167 card,  
4-53–4-55  
SMM167 card jumper settings, 4-56  
upgrades  
Application Module, 3-44–3-52  
adding MVME332XTS/XT cards to  
a system, 3-45–3-46  
IPE module, 4-46–4-51  
performing the hardware upgrade,  
4-47–4-51

Hewlett-Packard printers, 7-1–7-18

DeskJet, 7-18  
DeskJet 500, 7-18  
DeskJet 560C, 7-18  
DeskJet 660C, 7-18  
LaserJet series 4 Plus, 7-11–7-17  
LaserJet series II, 7-11–7-17  
LaserJet series III, 7-11–7-17  
LaserJet series IV, 7-11–7-17  
PaintJet 3630, 7-18  
Rugged Writer, 7-9–7-10

High-Speed Link (HSL), configuration  
Meridian 1, 12-16  
Option 11, 12-25

## I

Installation checklist, 15-1

Installation checklists

hardware installation, 15-1–15-2  
operating modes, 15-3–15-4  
site preparation, 15-1  
software installation, 15-3

Installation tapes, software, 10-7–10-12



**18-4** Index

---

International language support  
 keyboard configuration, 6-21  
 Meridian Terminal Emulator (MTE),  
 Code Page 850, 6-21–6-22

IPE module  
 cables, 4-36– 4-45  
   external input/output  
     NT1R03Dx cabling arrangement,  
     4-38  
     NT1R03Ex cabling arrangement,  
     4-39  
     NT1R03HF cabling arrangement,  
     4-40  
   input/output, external, 4-36– 4-40  
   NT1R03AA four-port I/O cable,  
     4-41– 4-45  
   NT1R03BA four-port I/O cable,  
     4-41– 4-45  
 hardware replacements, 4-52– 4-56  
 hardware upgrades, 4-46– 4-51  
   performing the hardware upgrade,  
     4-47– 4-51  
 LEDs, 4-7  
 Option 11, 4-14– 4-19  
   input/output cables, 4-14– 4-17  
   input/output port assignments, 4-18–  
     4-19  
 Option 21–81, 4-20– 4-35  
   input/output cables, 4-20– 4-22  
   input/output port assignments, 4-31–  
     4-32

IPE/IPE-E module  
 Option 11, SDI configurations, 8-3  
 Option 21–81, SDI configurations,  
 8-3–8-8

**K**

Keycodes, 10-2

**L**

LAN connectivity  
 customer-supplied hardware, 6-13–6-20  
   Meridian Terminal Emulator (MTE)  
     5.32 or lower, 6-13–6-18  
 functionality, 6-18–6-20  
   default router/gateway address,  
     6-19–6-20  
   hostnames, 6-19–6-20  
   IP addresses, 6-19–6-20  
   Meridian MAX connectivity,  
     6-18–6-20  
   Meridian MAX setup, 6-17–6-20  
   network interface cards, 6-20  
   subnet mask, 6-19–6-20  
   token ring environment, 6-18–6-20  
 installing PC/TCP, 6-15–6-38  
 packet buffers, 6-17–6-18

Load Management Link (LML),  
 configuration  
   Meridian 1, 12-20  
   Option 11, 12-28

Load new software release, 10-5

Local Area Network (LAN), local  
 printers, maximums, 2-10, 2-13

Local printers, maximums, 2-10, 2-13

Local printing, installation, 7-2–7-18

**M**

Main Distribution Frame (MDF), IPE  
 module  
   Option 11, cabling to peripherals, 4-33–  
     4-35  
   Option 21–81, cabling to peripherals,  
     4-33– 4-35

- 
- Mass Storage Unit (MSU), installation, 3-20–3-21
  - Mean Time Between Failures (MTBF), 1-6–1-8
  - Meridian MAX
    - power-down procedure, 14-1
    - system configuration, 9-1–9-62
    - system performance, 1-4–1-5
    - system reliability, 1-5–1-8
  - Meridian MAX 7 SNN, new software
    - installation
      - customer-installed, 11-2–11-30
      - factory-installed, 11-20–11-30
  - Meridian Terminal Emulator (MTE), 6-4
    - configuration, Code Page 850, 6-21–6-22
    - installation requirements
      - DOS, 6-5–6-38
      - Windows, 6-5–6-6
    - LAN connection, 6-13–6-38
    - MTE 5.32 or lower
      - exiting MTE, 6-8
      - installation, 6-6–6-8
      - installing PC/TCP, 6-15–6-38
      - starting MTE, 6-8
    - MTE 5.32 or lower with O/S 2.1, 6-11–6-20
      - minimum requirements, 6-11–6-20
      - multiple session limitations, 6-12–6-20
    - MTE 5.32 or lower with Windows 3.1, 6-8
      - minimum requirements, 6-10–6-38
      - multiple session limitations, 6-11–6-38
      - PIF file settings, 6-9–6-38
    - packet buffers, 6-17–6-18
    - RS-232 connection, 6-6–6-38
  - Meridian Terminal Emulator (MTE) 5.32 or lower
    - customer-supplied hardware, 6-13–6-18
    - PC setup, 6-16
  - Modems, 5-1–5-7
    - cables, 5-5–5-6
    - dial-up, 5-14
      - dial-up supervisor, 5-35–5-53
        - NetComm SmartModem M7F, 5-37–5-38
        - Racal VI2422PA, 5-39–5-40
        - U.S. Robotics 28.8 Sportster, 5-32–5-34
        - UDS 2440, 5-41–5-42
        - UDS EC224A/D 2400, 5-43–5-57
        - Ven-Tel 2400 Plus II, 5-46–5-49
        - Ven-Tel 9600 Plus, 5-50–5-53
      - remote diagnostic, 5-15–5-34
        - NetComm SmartModem M7F, 5-18–5-19
        - Racal VI2422PA, 5-20–5-21
        - UDS 2440, 5-22–5-29
        - UDS EC224A/D 2400, 5-30–5-34
    - limited-distance, 5-7–5-13
      - Develcon DS511A, 5-7–5-13
      - Gandalf LDS 120E, 5-7–5-13
  - MSDL configurations for HSL and LML, 8-5–8-8
  - Multiple Queue Assignment (MQA), requirements, 2-7
  - MVME167–34 card
    - configuration, 3-49–3-52
    - replacements, 3-47–3-49
  - MVME167–34 or MVME177-004 SBC card, LEDs, 3-8
  - MVME177-004 card, replacements, 3-47–3-49
  - MVME177–004 card, configuration, 3-49–3-52
  - MVME332XTS/XT eight-channel asynchronous boards, 3-13–3-16
    - adding cards to a system, 3-45–3-46
-

**18-6** Index

---

S1 switch settings, 3-13  
switch locations, 3-14

MVME712M transition card, jumper  
switch settings, 3-12

**N**

NAC connectivity, 5-54– 5-57  
dial-up modems  
    Meridian MAX end, 5-69  
    NAC 1 end, 5-69  
    NAC 2 end, 5-69  
dial-up connection, 5-69– 5-88  
network link, 5-76– 5-88  
    NetComm SmartModem M7F,  
        5-76– 5-78  
    Racal VI2422PA, 5-85– 5-88  
    U.S. Robotics 28.8 Sportster  
        modem, 5-87– 5-88  
    UDS 2440, 5-79– 5-80  
    Ven-Tel 2400 Plus II, 5-80– 5-82  
    Ven-Tel 9600 Plus, 5-83– 5-85  
remote supervisor login, 5-72– 5-76  
    NetComm SmartModem M7F,  
        5-72– 5-73  
    Racal VI2422PA, 5-74  
    UDS 2440, 5-73  
    UDS EC224A/D 2400, 5-74– 5-76  
    US Robotics 28.8 Sportster modem,  
        5-76  
    Ven-Tel 2400 Plus II, 5-73  
    Ven-Tel 9600 Plus, 5-74  
direct connection, 5-90– 5-92  
    Meridian MAX end, 5-90– 5-92  
    NAC 1 end, 5-90  
    NAC 2 end, 5-90  
limited distance connection, 5-57– 5-68  
remote supervisor login or network  
link  
    Develcon DS 511A, 5-57– 5-68  
    Gandalf LDS 120E, 5-57– 5-68

T1 connection, 5-89– 5-90

NetComm SmartModem M7F  
dial-up supervisor modem, 5-37– 5-38  
network link, 5-76– 5-78  
remote diagnostics modem, 5-18– 5-19  
remote supervisor login, 5-72– 5-73

**O**

Operating modes  
installation checklist, 15-3– 15-4  
precutover, 13-4– 13-10  
product, 13-11– 13-20  
training, 13-3– 13-4

Option 11, SDI configurations, 8-3

Option 21–81, SDI configurations,  
8-3–8-8

Overview  
Application Module, 3-1–3-7  
hardware, 1-3–1-4  
IPE module, 4-2– 4-13  
software, 1-4

**P**

Port assignment, 9-2– 9-10  
retained from upgrades, 9-3

Position Sizing, 2-8–2-9

Power  
failure, 1-5  
requirements, 2-1–2-3

Power supply, installation, 3-20–3-52

Power-down procedure, 14-1

Precutover mode, 13-4– 13-10

Printers  
DEC LA195i, 7-7–7-8

Hewlett-Packard, 7-1–7-18  
 DeskJet, 7-18  
 DeskJet 500, 7-18  
 DeskJet 560C, 7-18  
 DeskJet 660C, 7-18  
 LaserJet series 4 Plus, 7-11–7-17  
 LaserJet series 5Si MX, 7-11–7-17  
 LaserJet series II, 7-11–7-17  
 LaserJet series III, 7-11–7-17  
 PaintJet 3630, 7-18  
 Rugged Writer, 7-9–7-10  
 serial-parallel converter, 7-6  
 site layout, 2-7

Product mode, 13-11–13-20

## R

Racal VI2422PA  
 dial-up supervisor modem, 5-39–5-40  
 network link, 5-85–5-88  
 remote diagnostics modem, 5-20–5-21  
 remote supervisor login, 5-74  
 Reentry points, software installation, 10-6  
 Reflection 4+, 6-3–6-4  
 installation  
   with hard disk, 6-3–6-4  
   without hard disk, 6-3  
 Replacements, hardware  
   Application Module, 3-44–3-52  
   IPE module, 4-52–4-56  
     configuring the SMM167 card, 4-53–4-55  
     SMM167 card jumper settings, 4-56  
 Requirements  
   environmental, 2-4  
     Meridian MAX application module, 2-4  
     Meridian MAX IPE/IPE-E module, 2-4

power, 2-1–2-3  
 X11 software packaging, 2-5

## S

SDI configurations, 8-1–8-4  
   Application Module, 8-1–8-2  
   IPE/IPE-E module, 8-3–8-8  
     Option 11, 8-3  
     Option 21–81, 8-3–8-8  
 Serial-parallel converter, 7-6  
 Single board computer cards  
   MVME 167-34A, 3-8–3-10  
   MVME 177-004, 3-8–3-10  
 Single Terminal Access (STA),  
   configuration, 12-9–12-15  
 Site layout, 2-6–2-7  
   Meridian Terminal Emulator (MTE), 2-7  
   printer location, 2-7  
   static electricity precautions, 2-7  
   supervisor location, 2-6  
 SMM167 card  
   configuring the SMM167 card, 4-53–4-55  
   jumper settings, 4-56  
 Software  
   configuration  
     High-Speed Link (HSL), 12-16, 12-25  
     Load Management Link (LML), 12-20, 12-28  
   installation, new SNN or IPE, 10-4  
   installation checklist, 15-3  
   installation reentry points, 10-6  
   installation tapes, 10-7–10-12

**18-8** Index

---

installation upgrades  
     from ACD-MAX 3 and 4 systems, 10-5  
     from Meridian MAX 3 through 7, 10-5  
     retained port assignments, 9-3  
 load new release, 10-5  
 new installation of Meridian MAX 7 SNN  
     customer-installed, 11-2– 11-19  
     factory-installed, 11-20– 11-30  
 operating modes  
     precutover, 13-4– 13-10  
     product, 13-11– 13-20  
     training, 13-3– 13-4  
 overview, 1-4  
 reinstallations and upgrades, within Meridian MAX 7, 10-4  
 Static electricity precautions, 2-7  
 Subnet mask address, 9-14– 9-62  
 System  
     performance, 1-4– 1-5  
     reliability, 1-5– 1-8  
         automatic backup, 1-5  
         mean time between failures (MTBF), 1-6– 1-8  
         power failure, 1-5  
 System configuration, 9-1– 9-62

**T**

tape drive, cleaning, 10-11– 10-12  
 Training mode, 13-3– 13-4  
 Transition cards, 3-11– 3-12  
     MVME712M, 3-11  
     NT6D51AA, 3-11– 3-17

**U**

U.S. Robotics 28.8 Sportster, dial-up supervisor modem, 5-32– 5-34  
 U.S. Robotics 28.8 Sportster modem, network link, 5-87– 5-88  
 UDS 2440  
     dial-up supervisor modem, 5-41– 5-42  
     network link, 5-79– 5-80  
     remote diagnostics modem, 5-22– 5-29  
     remote supervisor login, 5-73  
 UDS EC224A/D 2400  
     dial-up supervisor modem, 5-43– 5-45  
     remote diagnostics modem, 5-30– 5-34  
     remote supervisor login, 5-74– 5-76  
 Upgrades, hardware  
     Application Module, 3-44– 3-52  
     IPE module, 4-46– 4-51  
         performing the hardware upgrade, 4-47– 4-51  
 US Robotics 28.8 Sportster modem, remote supervisor login, 5-76

**V**

Ven-Tel 2400 Plus II  
     dial-up supervisor modem, 5-46– 5-49  
     network link, 5-80– 5-82  
     remote supervisor login, 5-73  
 Ven-Tel 9600 Plus  
     dial-up supervisor modem, 5-50– 5-53  
     network link, 5-83– 5-85  
     remote supervisor login, 5-74  
 VT520 terminal, Main Set-Up window, 6-23

---

## W

- Warranties, 3-1, 4-1, 10-1
- Worksheets, basic and advanced capacity configuration, 9-24–9-30
- Workstations, 6-1
  - configuration, 12-2–12-8
  - HP 700/32 VDT, set-up, 6-36–6-40
  - personal computer
    - keyboard configuration, 6-21–6-22
  - Meridian Terminal Emulator (MTE), 6-4
    - installation requirements, 6-5–6-38
    - MTE 5.32 or lower with O/S 2.1, 6-11–6-20
    - MTE 5.32 or lower with Windows 3.1, 6-8
  - Reflection 4+, 6-3–6-4
    - PC with hard disk, 6-3–6-4
    - PC without hard disk, 6-3–6-4
  - Single Terminal Access (STA), configuration, 12-9–12-15
  - video display terminal (VDT), 6-22–6-38
    - VT220 or 100% compatible, 6-34–6-35
    - VT420 or 100% compatible (North American model), 6-30–6-31
    - VT420 or 100% compatible (Worldwide model), 6-32–6-33
    - VT520 or 100% compatible, 6-23–6-29

Electronic Private Automatic Branch Exchange and  
Business Communication Systems

## Meridian MAX

### Installation Guide

Toronto Information Products  
Nortel  
522 University Avenue, 12th Floor  
Toronto, Ontario, Canada  
M5G 1W7

© 1997 Northern Telecom  
All rights reserved

Information is subject to change without notice.  
Northern Telecom reserves the right to make  
changes in design or components as progress in  
engineering and manufacturing may warrant.

Nortel, Meridian, Meridian MAX, Meridian MAX - IPE,  
ACD-MAX, Meridian 1, SL-1, and Meridian Terminal  
Emulator are trademarks of Northern Telecom.  
Compaq is a trademark of Compaq Computer  
Corporation. DEC, VT220, VT420, and VT520 are  
trademarks of Digital Equipment Corporation. HP, HP  
Vectra, RuggedWriter, DeskJet, LaserJet, and  
PaintJet are trademarks of Hewlett-Packard  
Company. IBM, PC, AT, and IBM PS/2 are  
trademarks of International Business Machines  
Incorporated. Windows and MS/DOS are trademarks  
of Microsoft Corporation. Ven-Tel and the Ven-Tel  
logo are trademarks of Ven-Tel Incorporated. TEAC  
is a trademark of TEAC Corporation. UDS and  
SYSTEM V/68 are trademarks of Motorola  
Incorporated. UNIX is a registered trademark of  
AT&T. Reflection is a registered trademark of Walker  
Richer & Quinn, Inc. Ethernet is a registered  
trademark of Xerox. Gandalf is a registered  
trademark of Gandalf Technologies Inc. Racal is a  
registered trademark of Racal Data Communications  
Incorporated.

Printed in the United States of America

Publication number: 553-4001-111  
Product release: 8  
Document release: Standard 1.0  
Date: March 1997

Printed in the United States of America

**NORTEL**  
NORTHERN TELECOM