



SHERIFF

TWG-1


OPERATION MANUAL

Nintendo

3. POINTS AND METHODS OF ADJUSTMENT

3-1 Setting of number of appearing sheriffs

The number of sheriffs can be set for from 3 to 6.
 The setting is made with the switches on I/O P.C.
 Board according to the diagram below.


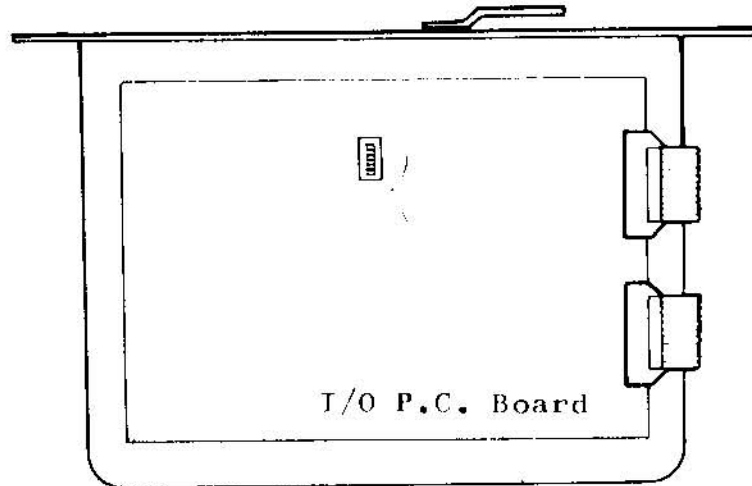


Number of Sheriff	Switch	
	A	B
3	OFF	OFF
4	ON	OFF
5	OFF	ON
6	ON	ON

NOTE:

Keep the switch H always at the ON position.


Switches C - G are not connected, therefore have no function.

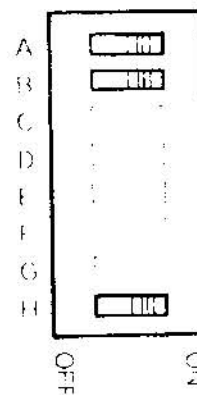

The switch is OFF (Bottom view)


3-2 Sound P.C. Board


Sound volume can be adjusted by the semi-fixed variable resistor, VR1, VR2 and VR3 on the Sound P.C. Board. The sound controlled by each semi-fixed variable resistor is shown in the chart below. Turning the VR in the clockwise direction increases sound volume.

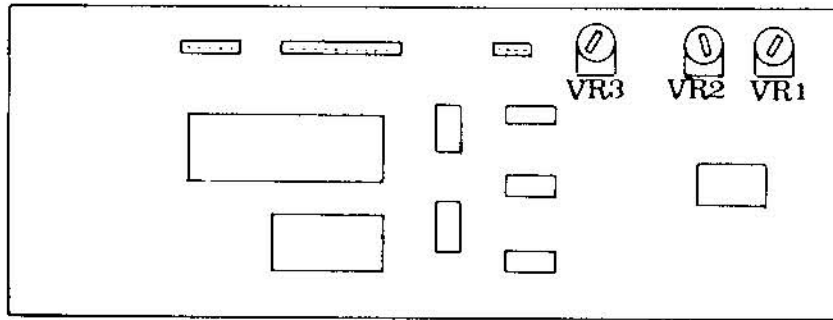


Kinds of sound	
VR1	Rogue advancing sound Condor appearing sound Game starting sound Sheriff falling-down sound Scean switching sound Bonus sound Extra score sound Condor disappearing sound Game ending sound
VR2	Sheriff pistol firing sound Rogue disappearing sound
VR3	VR1 VR2 consolidated sound adjustment Adjust consolidated sound on video monitor first.

* Turning the VR in the clockwise direction increases sound volume.

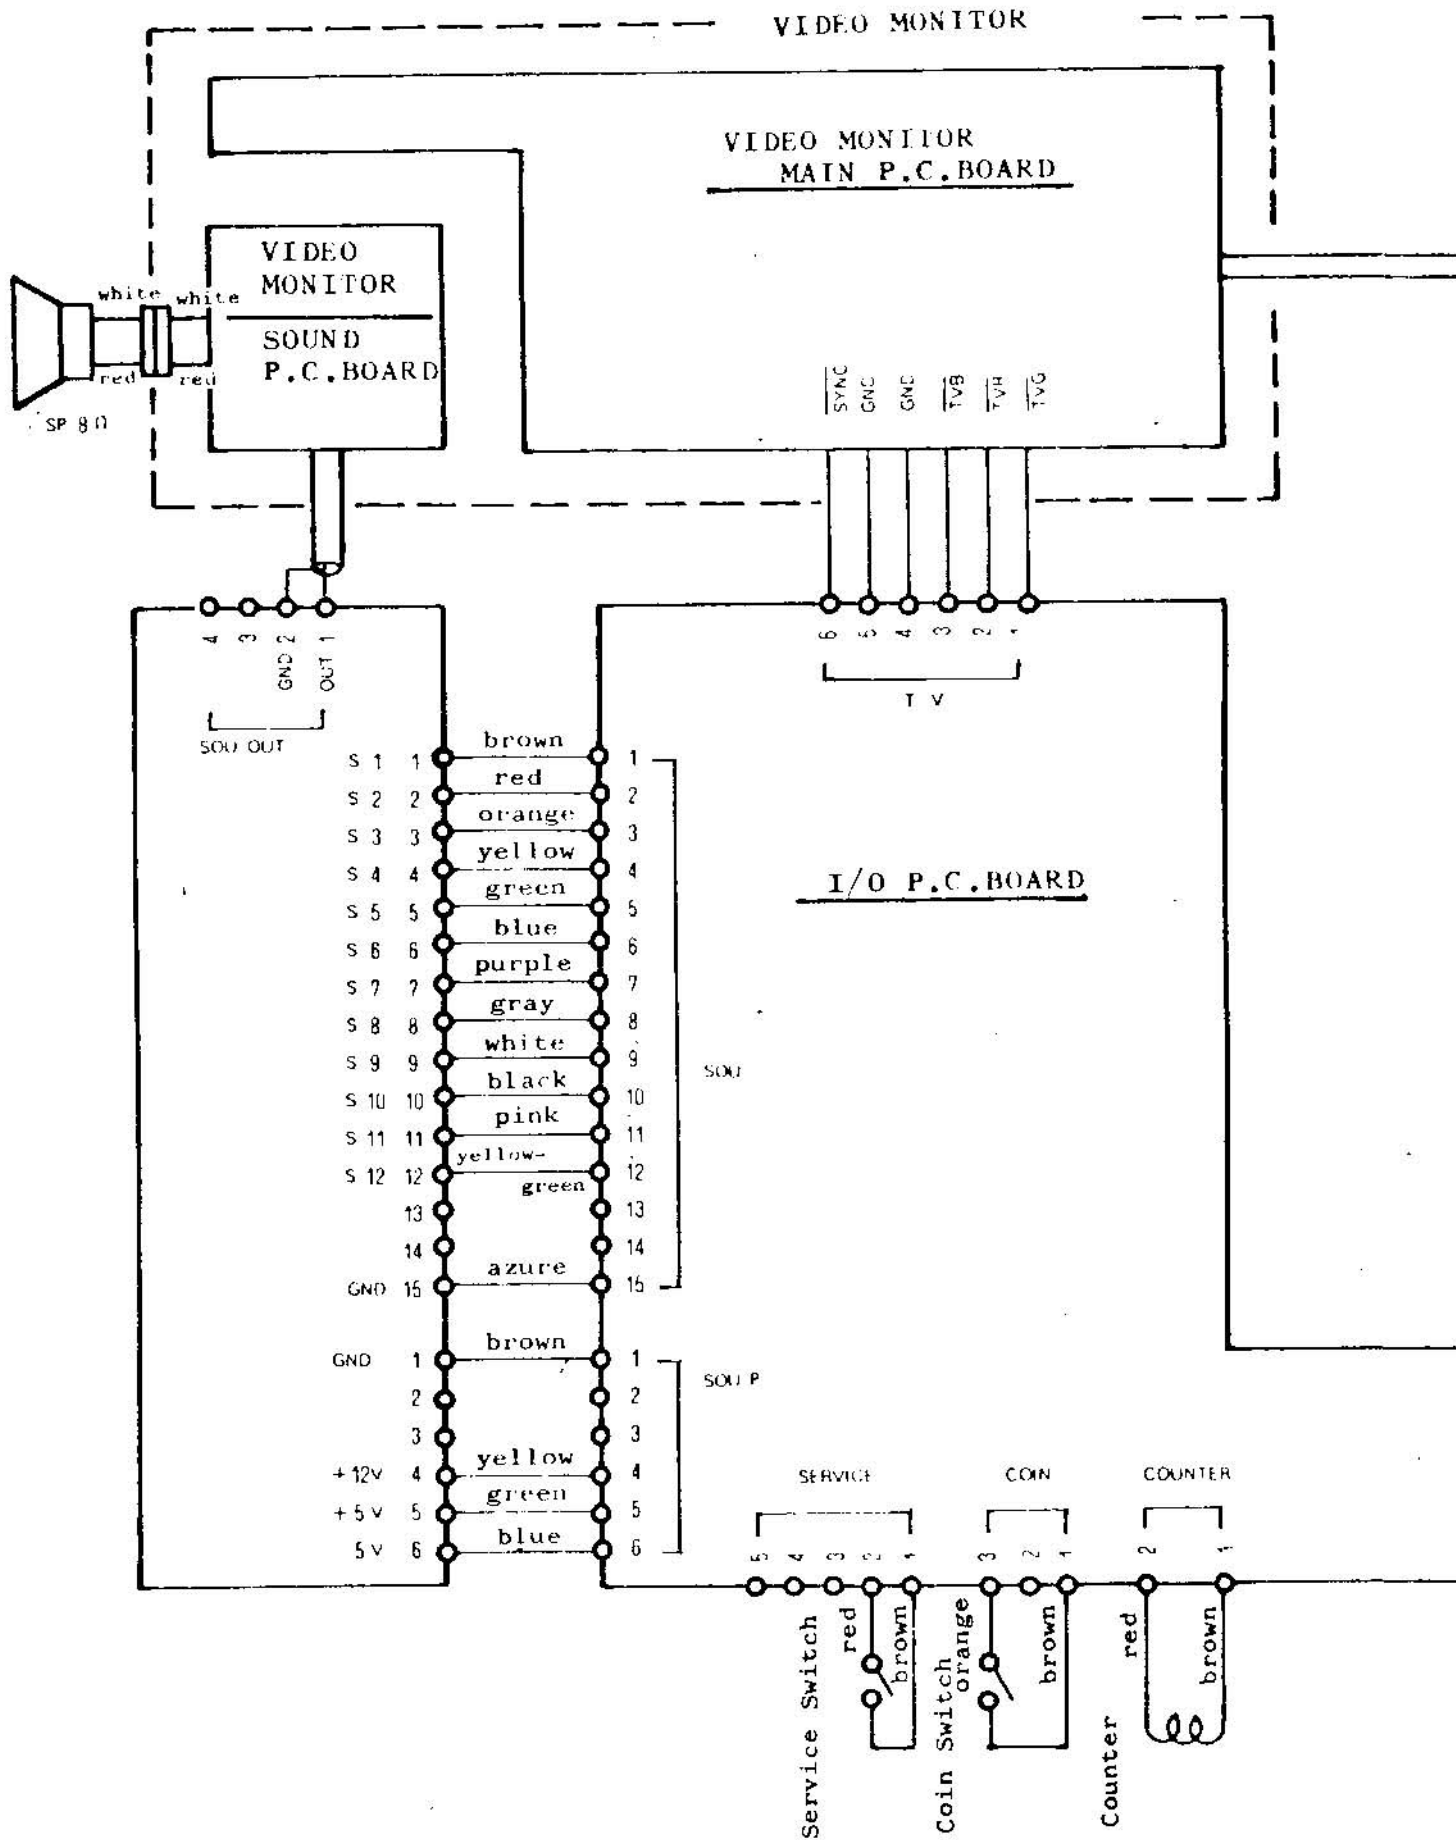

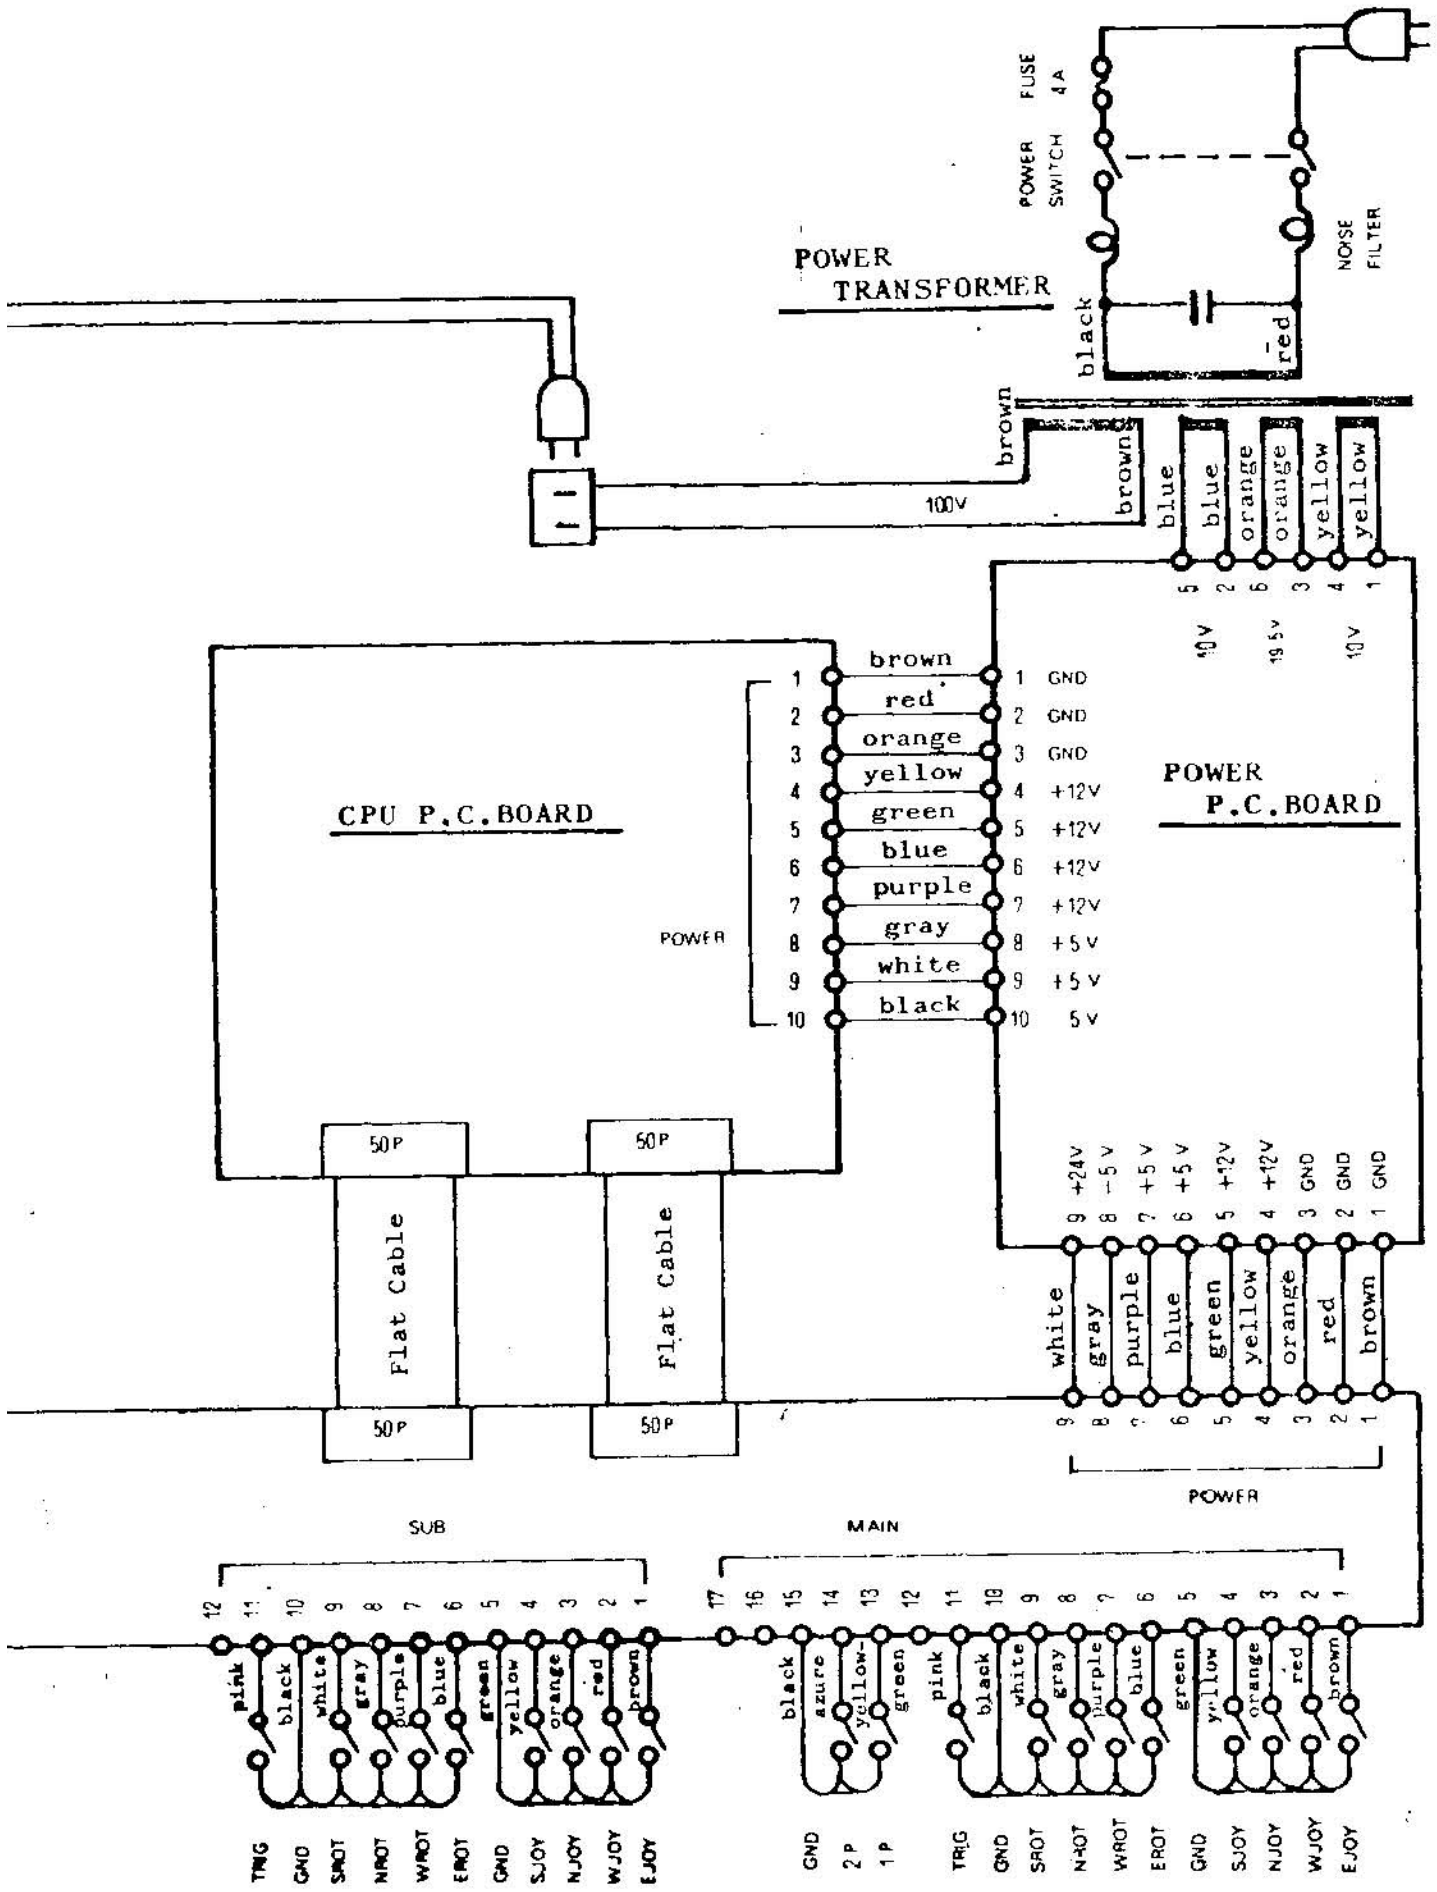


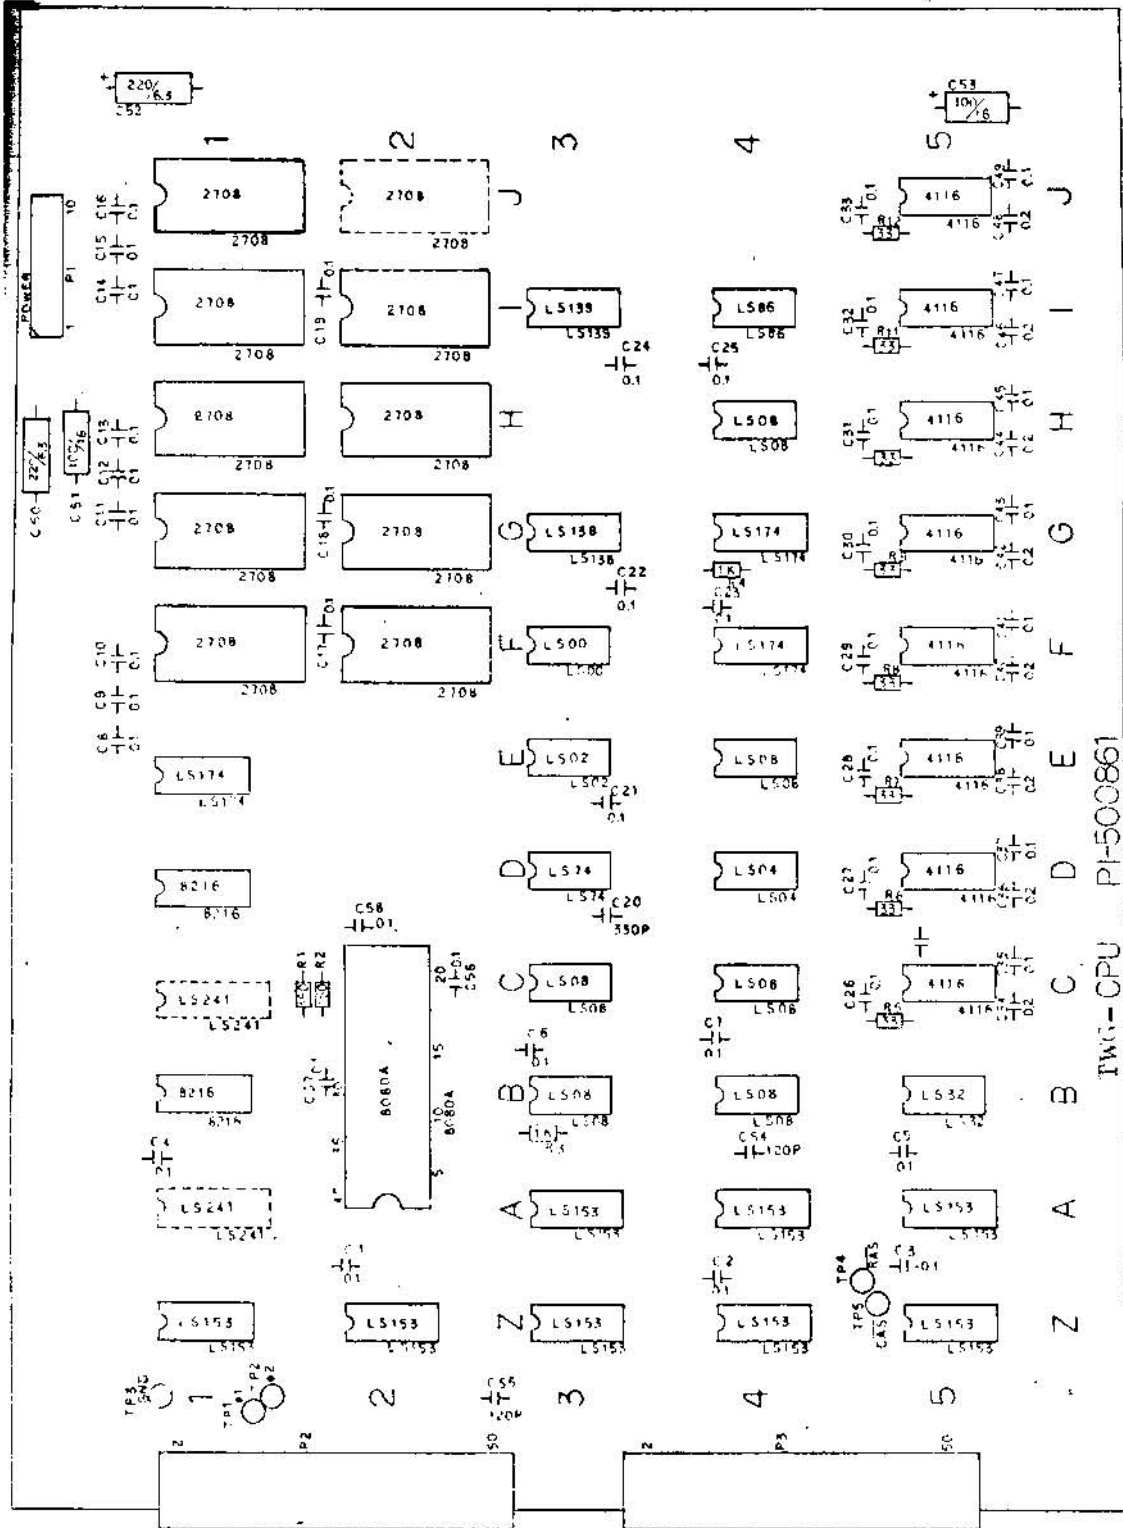

TWG-CPU PI-500861

品名	品番	材質	規格	備註
TWG-CPU PI-500861				
PARTS LOCATIONS				
製	検	入	出	庫
日	時	分	時	庫
Nintendo				
任天堂				

任天堂 株式会社

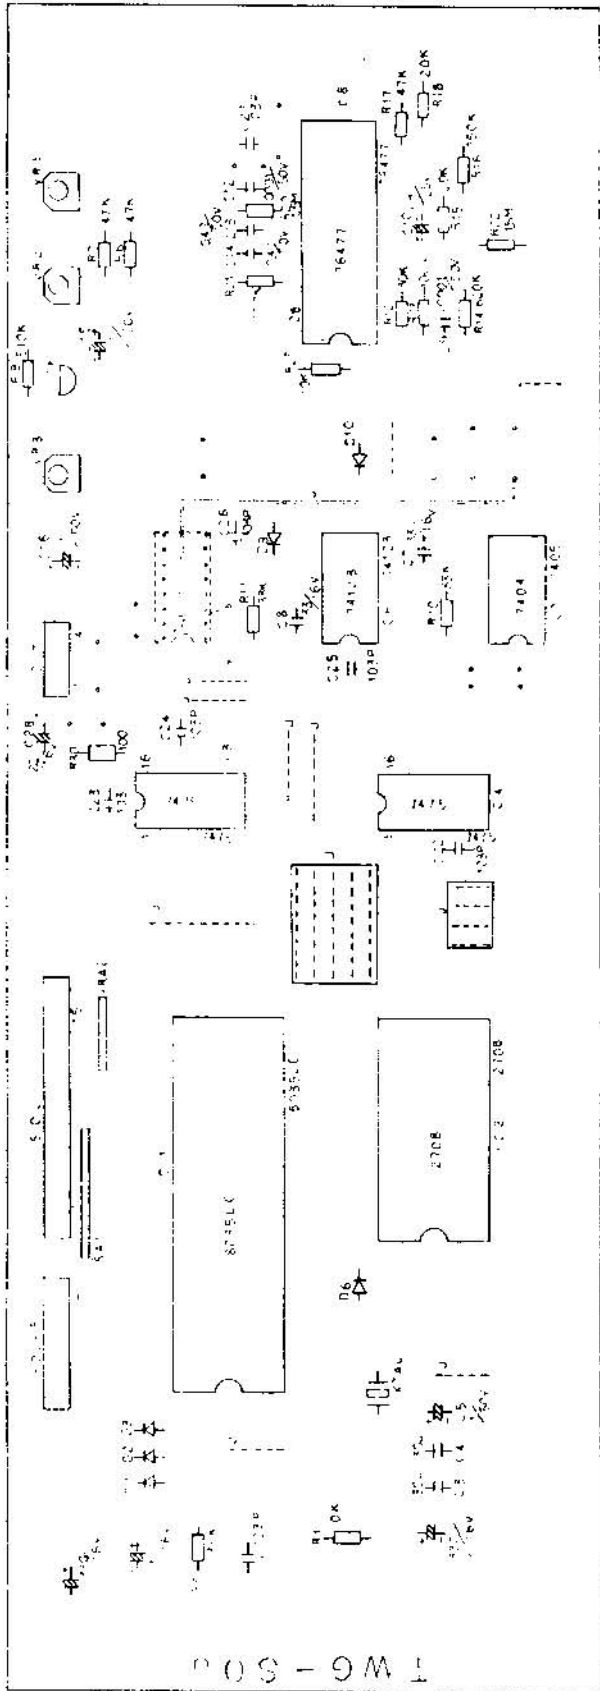

品名	機種	部番	寸法
サウンドボード	7475	7476	7477
サウンドボード	7478	7479	7480
サウンドボード	7481	7482	7483
サウンドボード	7484	7485	7486
サウンドボード	7487	7488	7489
サウンドボード	7490	7491	7492
サウンドボード	7493	7494	7495
サウンドボード	7496	7497	7498
サウンドボード	7499	7500	7501
サウンドボード	7502	7503	7504
サウンドボード	7505	7506	7507
サウンドボード	7508	7509	7510
サウンドボード	7511	7512	7513
サウンドボード	7514	7515	7516
サウンドボード	7517	7518	7519
サウンドボード	7520	7521	7522
サウンドボード	7523	7524	7525
サウンドボード	7526	7527	7528
サウンドボード	7529	7530	7531
サウンドボード	7532	7533	7534
サウンドボード	7535	7536	7537
サウンドボード	7538	7539	7540
サウンドボード	7541	7542	7543
サウンドボード	7544	7545	7546
サウンドボード	7547	7548	7549
サウンドボード	7550	7551	7552
サウンドボード	7553	7554	7555
サウンドボード	7556	7557	7558
サウンドボード	7559	7560	7561
サウンドボード	7562	7563	7564
サウンドボード	7565	7566	7567
サウンドボード	7568	7569	7570
サウンドボード	7571	7572	7573
サウンドボード	7574	7575	7576
サウンドボード	7577	7578	7579
サウンドボード	7580	7581	7582
サウンドボード	7583	7584	7585
サウンドボード	7586	7587	7588
サウンドボード	7589	7590	7591
サウンドボード	7592	7593	7594
サウンドボード	7595	7596	7597
サウンドボード	7598	7599	7600
サウンドボード	7601	7602	7603
サウンドボード	7604	7605	7606
サウンドボード	7607	7608	7609
サウンドボード	7610	7611	7612
サウンドボード	7613	7614	7615
サウンドボード	7616	7617	7618
サウンドボード	7619	7620	7621
サウンドボード	7622	7623	7624
サウンドボード	7625	7626	7627
サウンドボード	7628	7629	7630
サウンドボード	7631	7632	7633
サウンドボード	7634	7635	7636
サウンドボード	7637	7638	7639
サウンドボード	7640	7641	7642
サウンドボード	7643	7644	7645
サウンドボード	7646	7647	7648
サウンドボード	7649	7650	7651
サウンドボード	7652	7653	7654
サウンドボード	7655	7656	7657
サウンドボード	7658	7659	7660
サウンドボード	7661	7662	7663
サウンドボード	7664	7665	7666
サウンドボード	7667	7668	7669
サウンドボード	7670	7671	7672
サウンドボード	7673	7674	7675
サウンドボード	7676	7677	7678
サウンドボード	7679	7680	7681
サウンドボード	7682	7683	7684
サウンドボード	7685	7686	7687
サウンドボード	7688	7689	7690
サウンドボード	7691	7692	7693
サウンドボード	7694	7695	7696
サウンドボード	7697	7698	7699
サウンドボード	7700	7701	7702
サウンドボード	7703	7704	7705
サウンドボード	7706	7707	7708
サウンドボード	7709	7710	7711
サウンドボード	7712	7713	7714
サウンドボード	7715	7716	7717
サウンドボード	7718	7719	7720
サウンドボード	7721	7722	7723
サウンドボード	7724	7725	7726
サウンドボード	7727	7728	7729
サウンドボード	7730	7731	7732
サウンドボード	7733	7734	7735
サウンドボード	7736	7737	7738
サウンドボード	7739	7740	7741
サウンドボード	7742	7743	7744
サウンドボード	7745	7746	7747
サウンドボード	7748	7749	7750
サウンドボード	7751	7752	7753
サウンドボード	7754	7755	7756
サウンドボード	7757	7758	7759
サウンドボード	7760	7761	7762
サウンドボード	7763	7764	7765
サウンドボード	7766	7767	7768
サウンドボード	7769	7770	7771
サウンドボード	7772	7773	7774
サウンドボード	7775	7776	7777
サウンドボード	7778	7779	7780
サウンドボード	7781	7782	7783
サウンドボード	7784	7785	7786
サウンドボード	7787	7788	7789
サウンドボード	7790	7791	7792
サウンドボード	7793	7794	7795
サウンドボード	7796	7797	7798
サウンドボード	7799	7800	7801
サウンドボード	7802	7803	7804
サウンドボード	7805	7806	7807
サウンドボード	7808	7809	7810
サウンドボード	7811	7812	7813
サウンドボード	7814	7815	7816
サウンドボード	7817	7818	7819
サウンドボード	7820	7821	7822
サウンドボード	7823	7824	7825
サウンドボード	7826	7827	7828
サウンドボード	7829	7830	7831
サウンドボード	7832	7833	7834
サウンドボード	7835	7836	7837
サウンドボード	7838	7839	7840
サウンドボード	7841	7842	7843
サウンドボード	7844	7845	7846
サウンドボード	7847	7848	7849
サウンドボード	7850	7851	7852
サウンドボード	7853	7854	7855
サウンドボード	7856	7857	7858
サウンドボード	7859	7860	7861
サウンドボード	7862	7863	7864
サウンドボード	7865	7866	7867
サウンドボード	7868	7869	7870
サウンドボード	7871	7872	7873
サウンドボード	7874	7875	7876
サウンドボード	7877	7878	7879
サウンドボード	7880	7881	7882
サウンドボード	7883	7884	7885
サウンドボード	7886	7887	7888
サウンドボード	7889	7890	7891
サウンドボード	7892	7893	7894
サウンドボード	7895	7896	7897
サウンドボード	7898	7899	7900

Nintendo
 任天堂