


1. STOP

VERIFY ALL DIMENSIONS TO ENSURE THAT THIS PRINT IS 1 TO 1 SCALE.

2. MEASURE

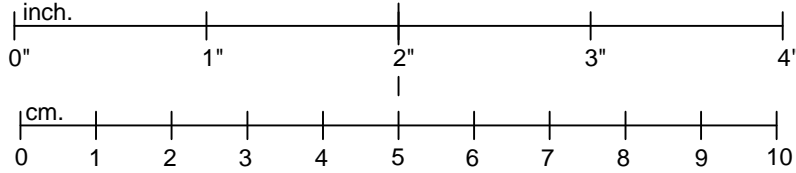


MEASURE WITH A RULER.


3. CUT

Document p/n:
250-0680-001
Page 1 of 1

THIS IS A PRECISION CUT-OUT TEMPLATE.
DO NOT SCALE OR ADJUST!

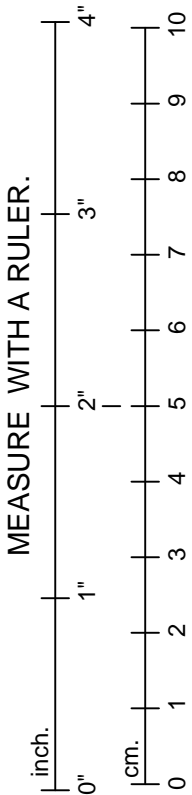

MEASURE WITH A RULER.

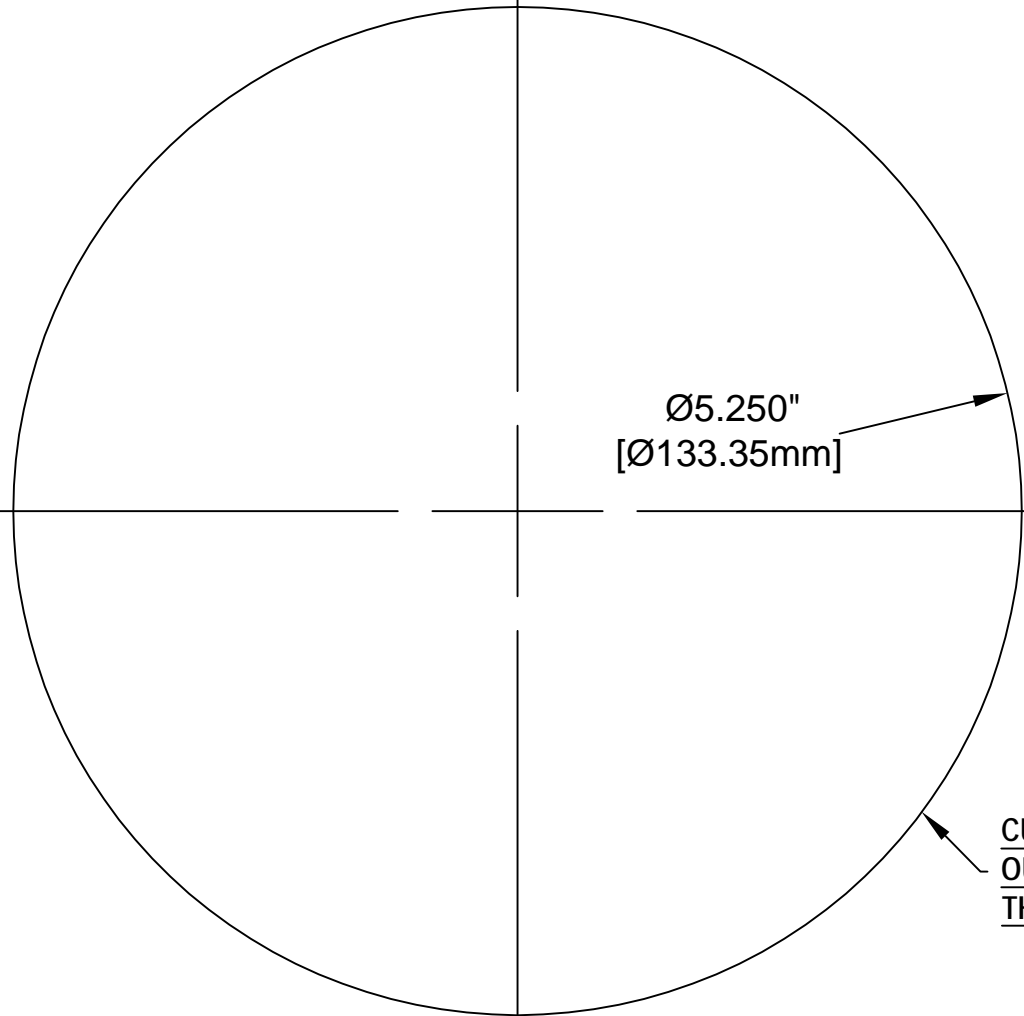

CUT TO THE OUTSIDE OF THE LINE.

ALTINEX, INC. IS NOT RESPONSIBLE FOR ANY DAMAGE TO A TABLE OR DESK.



ALTINEX, INC. MODEL NUMBERS:

TNP131 TNP131C
CNK231 CNK231C
CNK251 CNK251C

1. STOP

2. MEASURE

3. CUT