


## VS-1202S audio switching improvement.

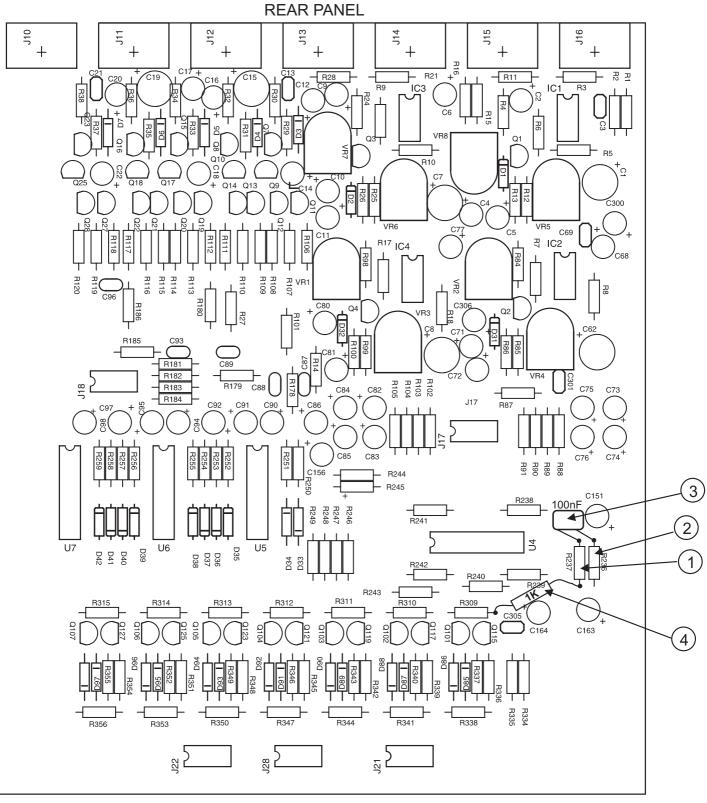

FRONT

- 1. Remove R237 From Board if it is present.
- 2. Remove R236 From Board, if it is present.
- 3. Solder a 100nF capacitor as shown.
- 4. Connect a 1K/5%/0.25W resistor as indicated in drawing, between R309 and R237. If there was a jumper at this location, remove it and replace with the 1K resistor.