





TVC PRO Component Mount

Installation Instructions

Parts List:

Item	Description	Quantity
1	Main Arm	1
2	Extension Bar	2
3	Clamp	2
4	1/4"-20 x 1/2" Set Screw	2
5	Cushion Pad	2
6	Cushion Strip - Wide	2
7	Cushion Strip - Narrow	2
8	Adjustment Knob	2
9	Hex Wrench	1
10	Plastic Flange	1
11	3/8" Washer	1
12	M8 x 30mm Screw	1
13	Plastic Washer	1

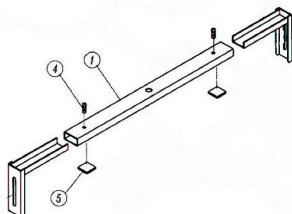
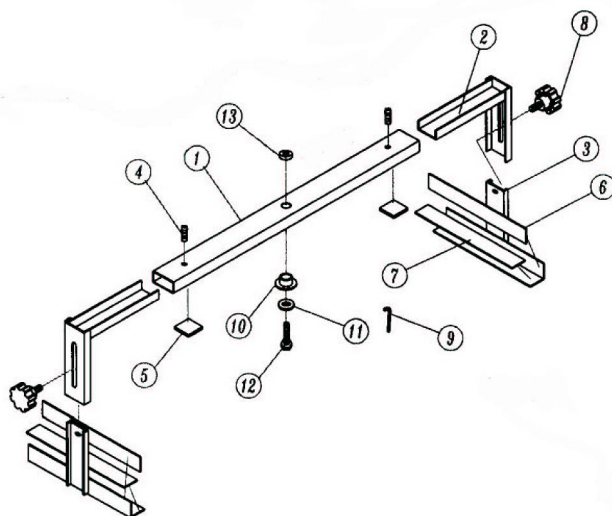


Step 1

Thread set screws (4) into holes on main arm (1).
Insert extension bars (2) into main arm.
Loosely secure set screws.
Apply self-adhesive cushion pads (5) to bottom side of main arm.

Step 2

Apply cushion strips (6 & 7) to clamp (3).
Place clamp on the inside channel of the extension bar, and loosely secure with adjustment knob (8).

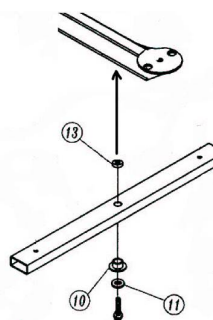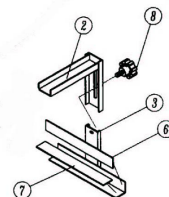

Step 3

Insert plastic flange (10) into center hole on bottom of main arm.
Place 3/8" washer (11) over attachment screw (12), and insert screw through center hole.
Place plastic washer (13) over end of attachment screw, and then thread screw into hole on bottom of TV mount support arm.
Position the main arm perpendicular to support arm, and then tighten screw securely with hex wrench (9).

Step 4

Set the mount width by sliding the extension bars until they grip the component (DVD, VCR, etc.) firmly, and then secure the clamps by tightening both set screws. (A) Slide the clamps up until the component is pushed firmly against the main arm, and then secure the adjustment knob (B) tightly.

Note: Make sure the component is supported while adjusting the mount.

