

FEC MODEL SMB121/A RACK KIT FOR SONY MONITOR MODEL SSM-121

ATTACH THE RIGHT AND LEFT SIDE PANELS TO THE BASE WITH 8-32 SCREWS SUPPLIED.

MOUNT THE SIDE PANEL/BASE ASSEMBLY ON THE CABINET MOUNTING RAILS WITH 10-32 X 5/8" BLACK OXIDE SCREWS AND 10-32 CAPTIVE NUTS (IF NECESSARY).

REMOVE THE FEET FROM THE BOTTOM OF THE MONITOR.

CENTER THE SCREW HOLES FOR THE MONITOR FEET OVER THE OBROUND HOLES IN THE BASE.

INSERT A #4 X 3/8" SELF TAPPING SCREW THROUGH THE ALIGNED HOLES.



ATTACH THE TRIM PANEL WITH 10-32 X 1" PAINTED HEAD SCREWS.

KIT HEIGHT: 7 RU (12.219")
 KIT DEPTH: 10.625"

HARDWARE:

- '8' 10-32 CAPTIVE NUTS
- '4' 10-32 X 5/8" BLK OXIDE SCREWS
- '4' 10-32 X 1" PAINTED HEAD SCREWS
- '6' 8-32 X 3/8" PAN HEAD SCREWS
- '4' #4 X 3/8" PH SHEET MTL. SCREWS

PARTS IDENTIFICATION

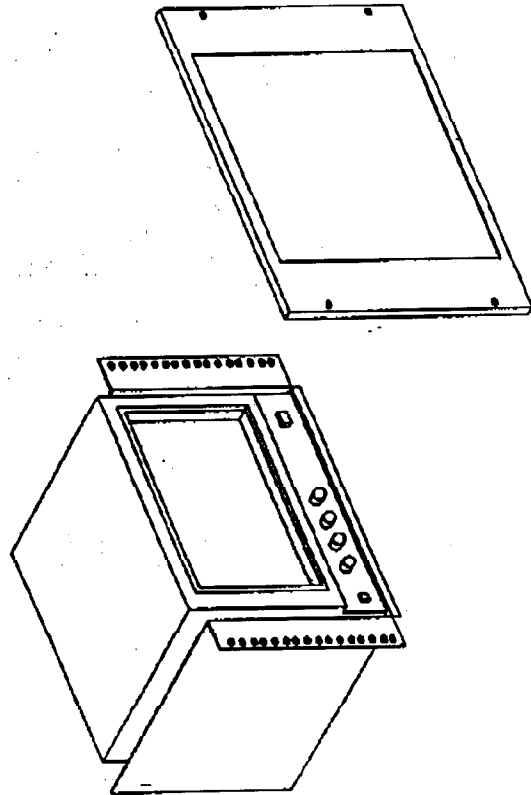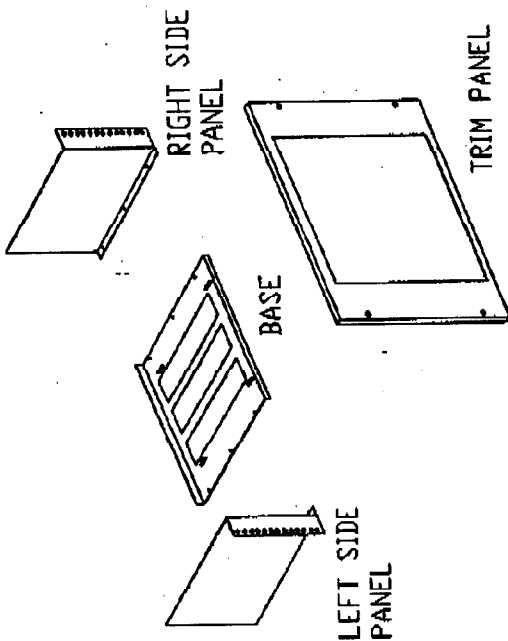

ASCB524
7/7/94

PHONE: (516) 371-6230
 FAX: (516) 371-6229

FEC PO BOX 266
 ALBERTSON, NY 11507