

## ADJ & I/O INSTRUCTION BANK PANIC

### OPTION SWITCH SETTING


OPTION	1	2	3	4	5	6	7	8	
1 COIN 1 CREDIT	OFF	OFF							COIN SW 1
1 COIN 2 CREDITS	ON	OFF							
2 COINS 1 CREDIT	OFF	ON							
3 COINS 1 CREDIT	ON	ON							
1 COIN 1 CREDIT			OFF						COIN SW 2
2 COINS 1 CREDIT			ON						
PLAYER 3				OFF					
4				ON					
EXTRA	70000, 200000, 500000 .....				OFF				
PLAYER	100000, 400000, 800000 .....				ON				
GAME EASY						OFF			
DIFFICULTY HARD						ON			
ADVERTISE OFF							OFF		
SOUND ON							ON		
TABLE TYPE								OFF	
UPRIGHT TYPE								ON	



834-5522

### I/O INSTRUCTION

COMPONENT SIDE	No.	No.	SOLDER SIDE
GND	A	1	GND
GND	B	2	GND
COIN SW2	C	3	GND (ONLY EXPORT)
1P RIGHT DOOR	D	4	2P RIGHT DOOR
1P CENTER DOOR	E	5	2P CENTER DOOR
	F	6	
1P START	H	7	2P START
1P LEFT DOOR	J	8	2P LEFT DOOR
	K	9	
	L	10	
1P LEFT	M	11	2P LEFT
1P RIGHT	N	12	2P RIGHT
COIN COUNTER 1	P	13	COIN SW 1
COIN COUNTER 2	R	14	SERVICE SW
RED	S	15	GREEN
BLUE	T	16	CMP SYNC
	U	17	
+ 5V	V	18	+ 5V
+ 5V	W	19	+ 5V
+ 12V	X	20	+ 12V
SPEAKER 1	Y	21	SPEAKER 2
SPEAKER GND	Z	22	SPEAKER GND

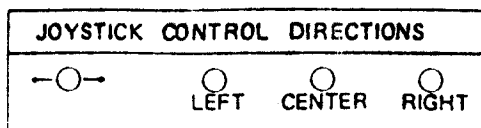

421-5677