


INITIAL SYSTEM SET-UP

APV 200




Audio Perfect™ Video 200

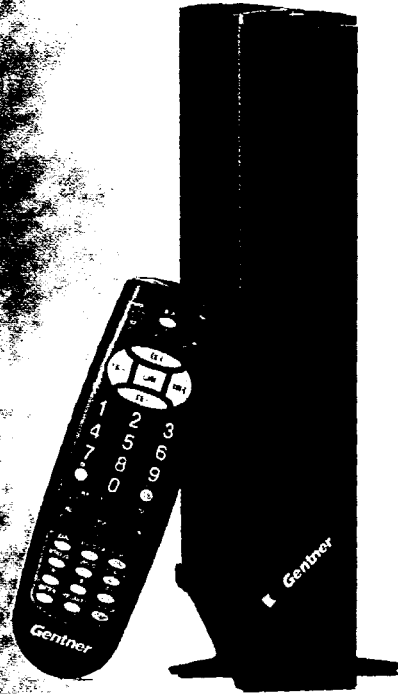

Perfect Communication through Technology, Service, and Education.™

# INITIAL INSTALLATION

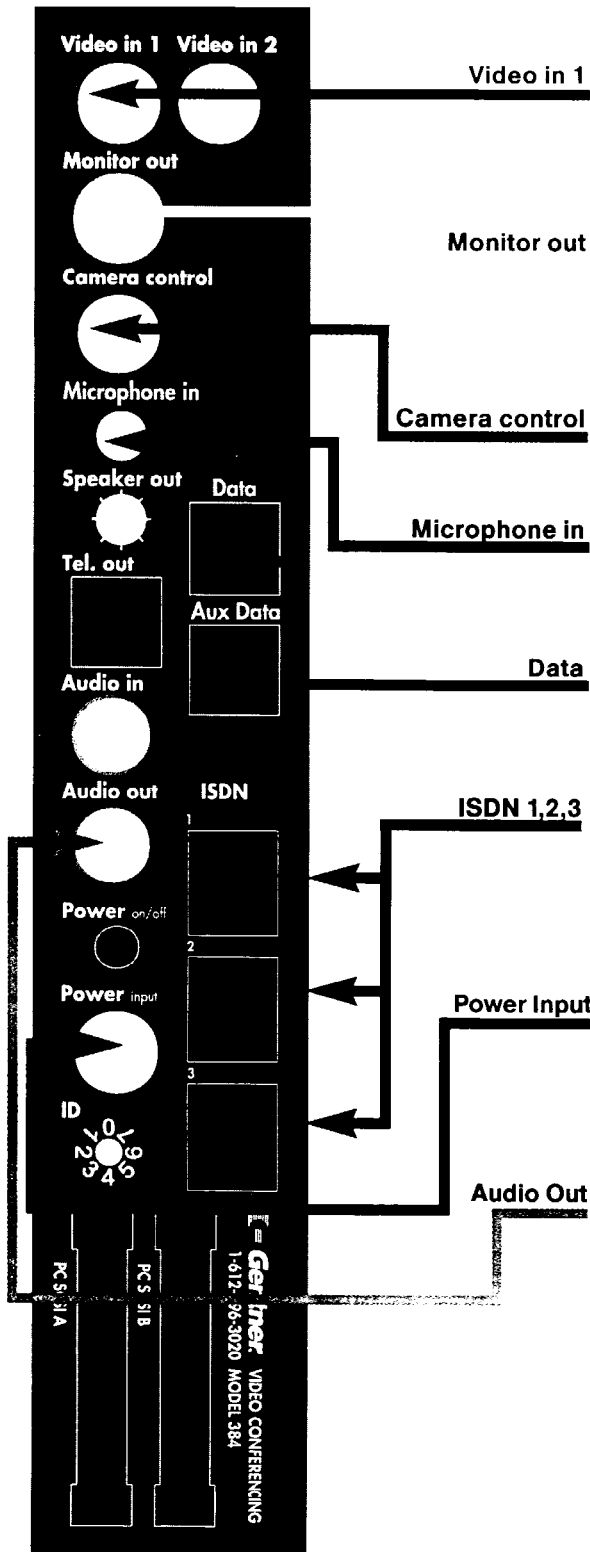

## MAKE THESE CONNECTIONS

**Video in 1**  
Main camera—Plug your S-Video or Composite cable in here and connect the other end to the back of the camera VIDEO OUT.

**Monitor out**  
External TV.—Plug your S-video or Composite cable in here and connect the other end to the back of the monitor VIDEO IN.

**Camera control**  
Plug the 2081A cable in here and connect the other end to the back of the camera, VISCA IN or RS232.

**Microphone in**  
External Microphone—Plug your microphone in here.

**Data**  
Data (optional)—Microsoft NetMeeting. Plug the 2091 cable in here and connect the other end to the serial port on the PC.

**ISDN 1,2,3**  
Connect each of your ISDN lines from the wall jack in here.


**Power Input**  
Plug the power supply box into the Power Input. Then plug the power cord into the power supply box and the other end into a grounded outlet.

**Audio Out**  
Connect to the audio input on your external TV, video monitor, or audio system. You may choose to connect an external speaker to the speaker out connection in place of using the audio out connection.

(COMPLETE IN ORDER).

1. Complete the above connections.
2. Turn on camera.
3. Turn on monitor.
4. Turn on APV200.


# REMOTE CONTROL FUNCTIONS

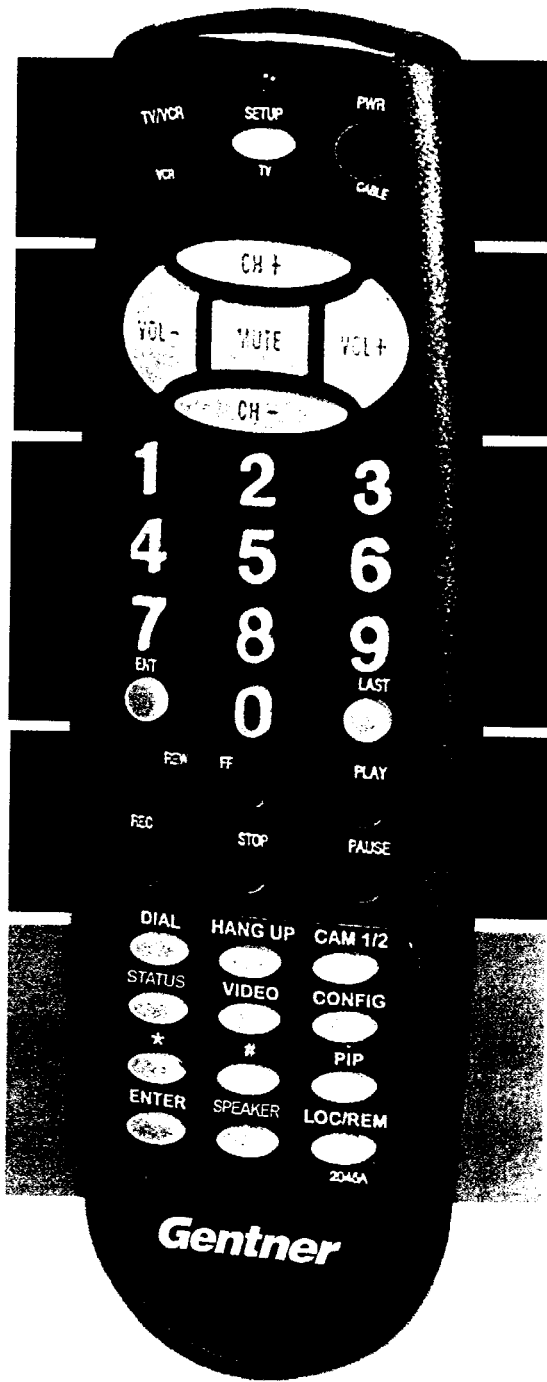



# MENU SET UP


Once you have your APV200 connected and turned on, there are a few menus that will need to have information entered before making a video call.

## GENERAL INFORMATION






If the remote control does not appear to work press the  button.

Turn on camera, TV, and the APV200 engine.

To scroll about within the menus press  or .

To select and change options in the menus press .

## NETWORK SET-UP

1. Press the  button on the remote control.
2. Scroll to **NETWORK** and select it.
3. Select **Line 1 setting**
4. If you have SPID numbers, enter your first SPID number in SPID 1. Once SPID 1 has been entered scroll down to the **SPID 2** and enter the second SPID if it is needed.
5. Scroll down to **Local number 1** and enter your local ISDN number. This is the number that a person would dial when the call is local. Scroll down and enter **Local number 2**. Both local numbers must be entered to receive bonded calls.
6. Press  to return to the **Network** menu.
7. Repeat the Network steps for the Line 2 and Line 3, making sure that the **Line status** is set to **Enabled**.
8. Scroll to **Network type**, scroll through the options until your Network type appears.
9. Scroll to **Switch vendor**, scroll through the options until your Switch vendor appears.
10. Press  to return to the **Configure** menu.
11. Scroll to **Control options** and select it.
12. Scroll to **Reset system**, press  .

When your APV200 has restarted, you are ready to begin calling.  
If you are using any composite cables please refer to your manual about black & white video.

# STEP - BY - STEP

## Congratulations!

You've bought the best video conferencing product available today.

This step-by-step instruction brochure was developed to help make your initial installation and set-up run as smoothly as possible. We recommend keeping this brochure near the product for future reference.

Please check that the following was received with your shipment:

