



MANUAL PART NUMBER: 400-0205-001

TBL100

TABLE BUDDY™

USER'S GUIDE

PRECAUTIONS / SAFETY WARNINGS 1

Please read this manual carefully before using your **TBL100**. Keep this manual handy for future reference. These safety instructions are to ensure the long life of your **TBL100** and to prevent fire and shock hazard. Please read them carefully and heed all warnings.

1.1. GENERAL

- There are no user serviceable parts inside. Only qualified ALTINEX service personnel must do all service on the **TBL100**.

1.2. INSTALLATION

- For best results, place **TBL100** on a flat, leveled surface in a dry area away from dust and moisture.
- To prevent fire or shock, do not expose this unit to rain or moisture.
- Do not place the **TBL100** in direct sunlight, near heaters or heat radiating appliances, or near any liquid.
- Exposure to direct sunlight, smoke, or steam can harm the **TBL100**.

1.3 CLEANING

- Clean surfaces with a dry cloth. Never use strong detergents or solvents, such as alcohol or thinner. Do not use a wet cloth or water to clean the unit.

1.4 FCC / CE NOTICE

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Any changes or modifications to the unit not expressly approved by ALTINEX, Inc. could void the user's authority to operate the equipment.

ABOUT YOUR TBL100 2

Designed for either temporary or permanent attachment to a table in a presentation system, the **TBL100** Table Buddy™ Interconnect Box provides a convenient way for a user to access multi-media input connections. It also allows for orderly cable management, passing signals from the back of the input plate around the edge of a table and down underneath it. The Table Buddy™ is completely configurable, with a variety of available connection plates to populate the front face of the unit.

When used with its integrated hand-tightened clamps, the **TBL100** Table Buddy™ attaches quickly and non-destructively to the edge of a presentation table or desk up to 1.5" (4 cm) thick, providing a convenient and functional table top input plate for practically any connection need. For permanent installation, the clamp can be removed and the Table Buddy™ can be permanently attached to the tabletop using wood screws.

The connector side of the **TBL100** Table Buddy™ can handle up to six (6) ALTINEX Sectional Plates, allowing for diverse input connector configurations. Available plates include combinations of audio, video, computer, and AC power connectors, providing extensive flexibility in a convenient package. These sectional plates are easy to install in the field, or can be custom pre-configured at ALTINEX to arrive in a ready-to-go package.

DESCRIPTION DIAGRAM

3

DIAGRAM 1


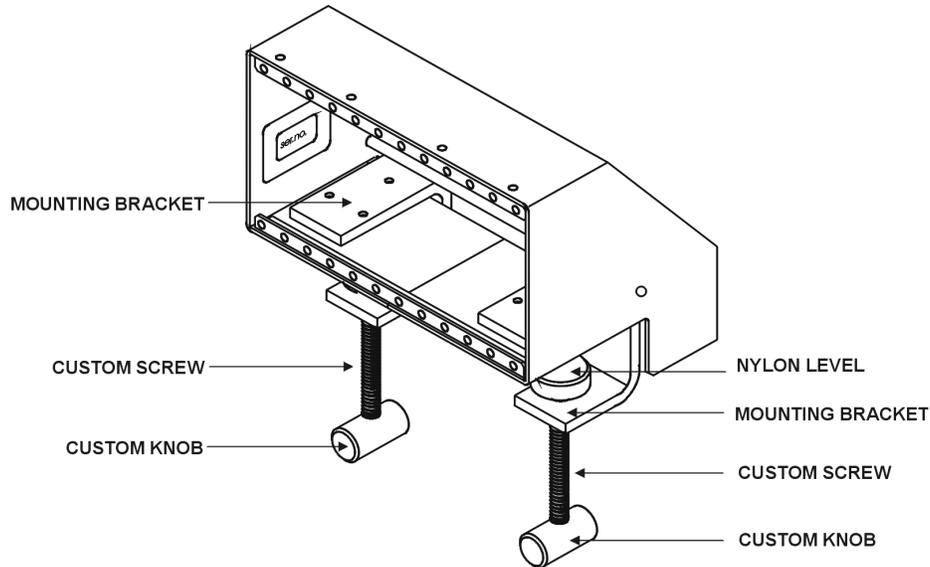


DIAGRAM 2

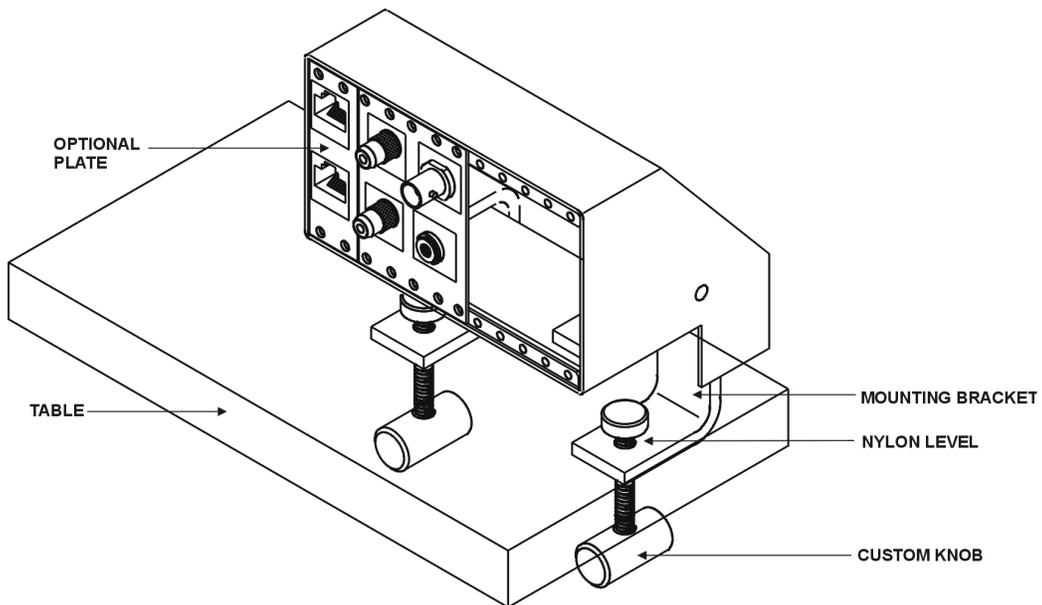

2

INSTALLING YOUR TBL100 4

- Step 1.** To secure the unit to a table, use the provided mounting brackets.
- Step 2.** Then insert the provided custom screws into the holes on the mounting brackets.
- Step 3.** Tighten the mounting brackets to the table using the nylon levels.
- Step 4.** Make necessary connections to the optional snap-in connector plates.

ALTINEX POLICY 5

5.1 LIMITED WARRANTY

ALTINEX warrants that its products and cables are free from defects in materials under normal use and service. This warranty is limited to repairing at company's factory any part or parts of the product, which upon company's examination shall disclose to be, thus defective. Products considered defective should be returned to company with transportation charges pre-paid within 2 years (90 days for cables) from date of shipment to the purchaser. The warranty is expressly instead of all other warranties expressed or implied. ALTINEX neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale of the products. This warranty shall not apply to any product that shall have been repaired or altered outside of company's factory in any way so as, in its judgment, to affect its stability or reliability, or that has been subject to misuse, negligence, or accident.

5.2 RETURN POLICY

It is very important to ALTINEX that you receive the products that you have ordered and that this product meets your expectations. In the unlikely event, that an ALTINEX product needs to be returned please follow the policy below:

ALTINEX will accept product returns for a period of 30 days from authorized ALTINEX dealers. Products must be returned in an unopened package.

If a product has been opened, the restocking fees will apply. For the restocking fee amount, please contact an ALTINEX Sales Representative.

If the product is in your possession for more than 30 days, the restocking fees will apply.

ALTINEX will not accept any returns on cables or custom products.

If your product is in warranty and needs service, contact the ALTINEX Sales Department for an RMA (Return Material Authorization). Products returned without an RMA number may experience a delay in service.

If your product is out of warranty and needs service, contact the ALTINEX Sales Department for an RMA (Return Material Authorization). Products returned without an RMA number may experience a delay in service. The service charges will be quoted to you before the actual repairs are done.

5.3 CONTACT INFORMATION

ALTINEX, INC.

592 Apollo Street
Brea, CA 92821 USA

TEL: 714-990-2300

TOLL FREE: 1-800-ALTINEX

WEB: www.altinex.com

E-MAIL: solutions@altinex.com

FAX: 714-990-3303