

ENGINE LUBRICATION & COOLING SYSTEMS

SECTION LC

GI

MA

EM

LC

EC

CONTENTS

| | | |
|---|--|----|
| PRECAUTIONS AND PREPARATION2 | Cooling Circuit.....9 | FE |
| Supplemental Restraint System (SRS) "AIR BAG".....2 | System Check.....9 | |
| Liquid Gasket Application Procedure.....2 | Water Pump.....11 | |
| Special Service Tools.....3 | Thermostat.....13 | CL |
| ENGINE LUBRICATION SYSTEM4 | Radiator.....14 | |
| Lubrication Circuit.....4 | Overheating Cause Analysis.....15 | MT |
| Oil Pressure Check.....5 | SERVICE DATA AND SPECIFICATIONS (SDS)16 | |
| Oil Pump.....6 | Engine Lubrication System.....16 | |
| ENGINE COOLING SYSTEM9 | Engine Cooling System.....16 | AT |

FA

RA

BR

ST

RS

BT

HA

EL



IDX

Supplemental Restraint System (SRS) "AIR BAG"

The Supplemental Restraint System "AIR BAG", used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and in the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation just before the harness connector for easy identification.

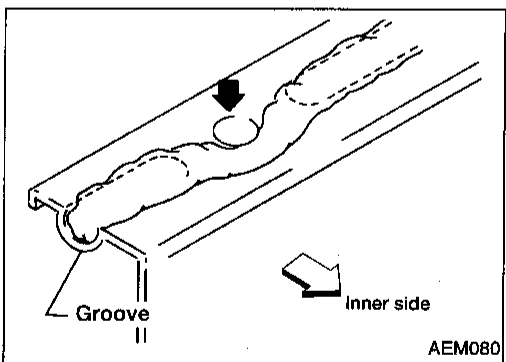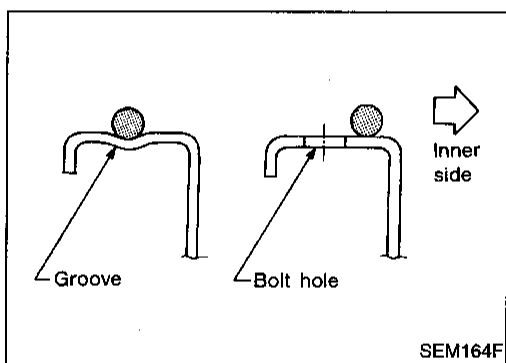




Liquid Gasket Application Procedure

- Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
- Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.)
 - For oil pan, be sure liquid gasket diameter is 3.5 to 4.5 mm (0.138 to 0.177 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
- Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
- Assembly should be done within 5 minutes after coating.
- Wait at least 30 minutes before refilling engine oil and engine coolant.

PRECAUTIONS AND PREPARATION

Special Service Tools



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
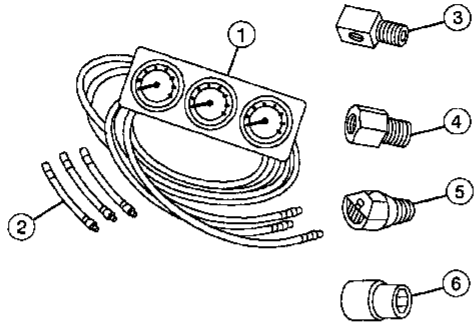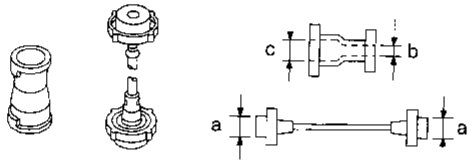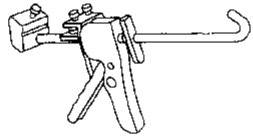
| Tool number (Kent-Moore No.) Tool name | Description |
|--|---|
| (J34301-C) Oil pressure gauge set ① (J34301-1) Oil pressure gauge ② (J34301-2) Hoses ③ (J34298) Adapter ④ (J34282-1) Adapter ⑤ (790-301-1230-A) 60° adapter ⑥ (J34301-15) Square socket |  <p style="text-align: right;">Measuring oil pressure</p> <p style="text-align: right;">Maximum measuring range: 1,379 kPa (14 kg/cm², 200 psi)</p> <p>AAT896</p> |
| EG17650301 (J33984-A) Radiator cap tester adapter |  <p style="text-align: right;">Adapting radiator cap tester to radiator filler neck</p> <p style="text-align: right;">a: 28 mm (1.10 in) dia. b: 31.4 mm (1.236 in) dia. c: 41.3 mm (1.626 in) dia.</p> <p>NT564</p> |
| WS39930000 (—) Tube presser |  <p style="text-align: right;">Pressing the tube of liquid gasket</p> <p>NT052</p> |

GI
 MA
 EM
LC
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

ENGINE LUBRICATION SYSTEM

Lubrication Circuit

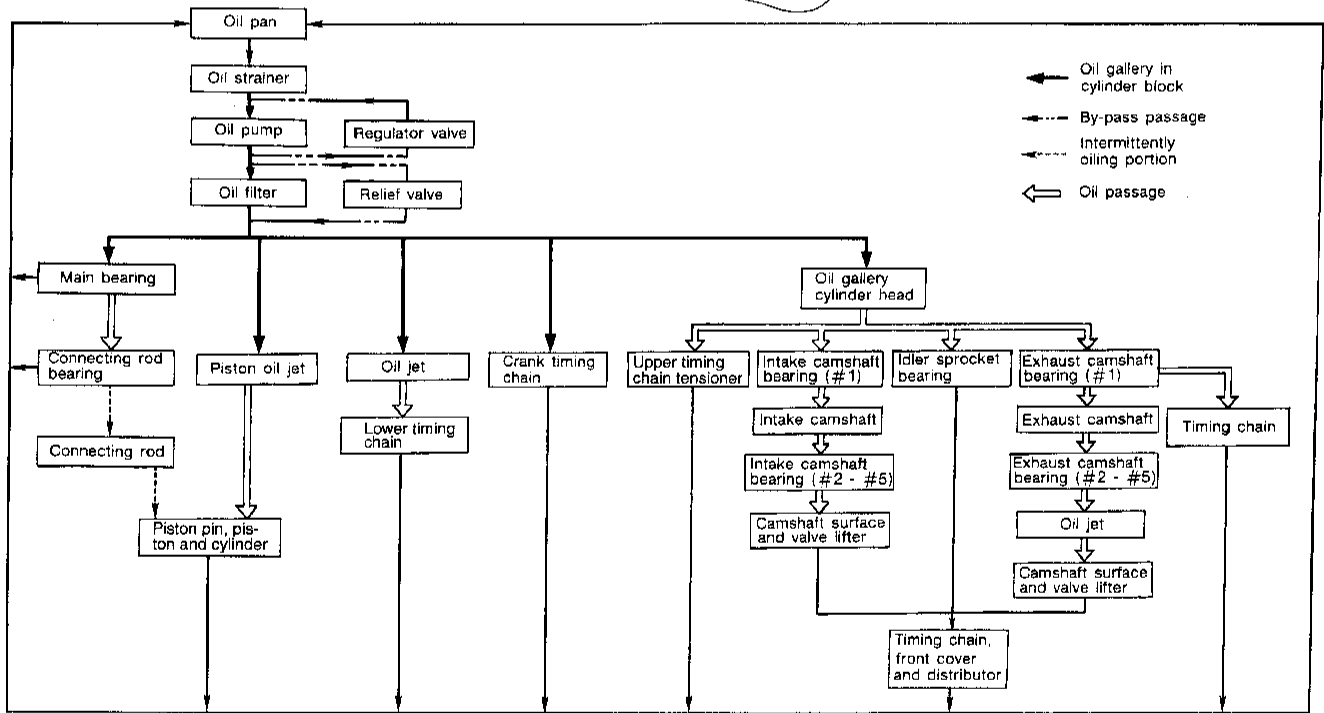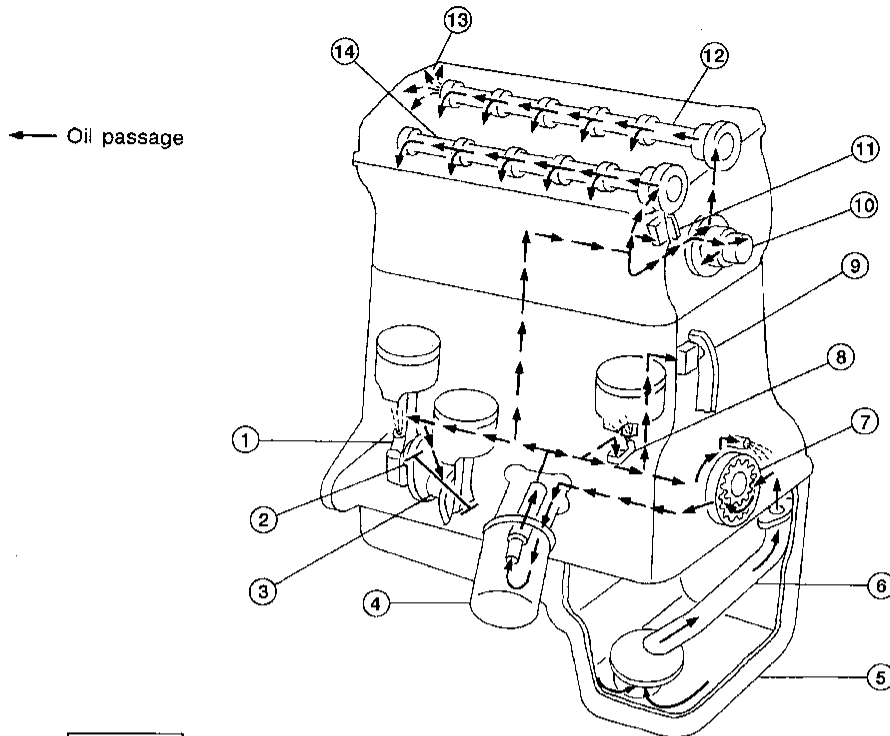

ALC067

- ① Connecting rod
- ② Connecting rod bearing
- ③ Main bearing
- ④ Oil filter
- ⑤ Oil pan


- ⑥ Oil strainer
- ⑦ Oil pump
- ⑧ Piston oil jet
- ⑨ Timing chain tensioner
- ⑩ Idler sprocket

- ⑪ Upper timing chain tensioner
- ⑫ Exhaust camshaft
- ⑬ Camshaft oil jet
- ⑭ Intake camshaft


Oil Pressure Check

WARNING:

- Be careful not to burn yourself, as the engine and oil may be hot.
- For M/T models, put gearshift lever in Neutral "N" position. For A/T models, put selector lever in Park "P" position.

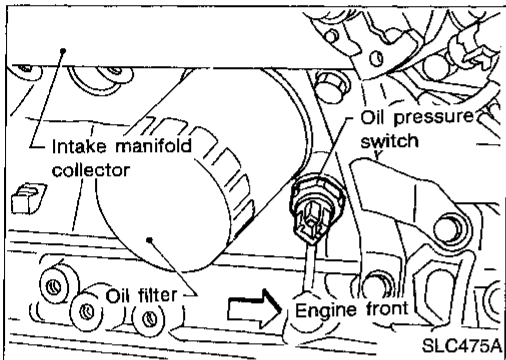

1. Check oil level.
2. Remove oil pressure switch.

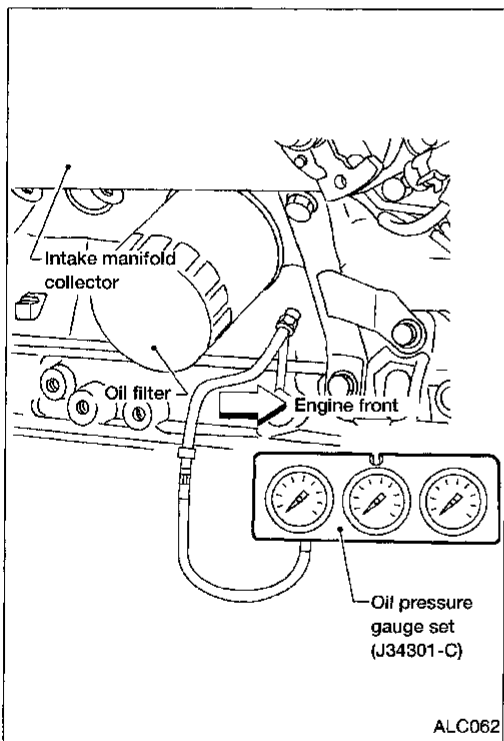


3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.

| Engine speed rpm | Approximate discharge pressure kPa (kg/cm ² , psi) |
|---------------------|--|
| Idle speed | More than 78 (0.8, 11) |
| 3,000 | 412 - 481 (4.2 - 4.9, 60 - 70) |

- If difference is extreme, check oil passage and oil pump for oil leaks.
6. Install oil pressure switch with sealant.

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ENGINE LUBRICATION SYSTEM

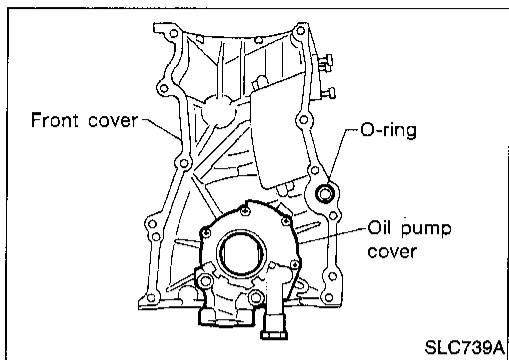


Oil Pump

REMOVAL

1. Remove front cover.
- Refer to EM section ("Removal", "TIMING CHAIN").
2. Remove oil pump cover.

DISASSEMBLY AND ASSEMBLY

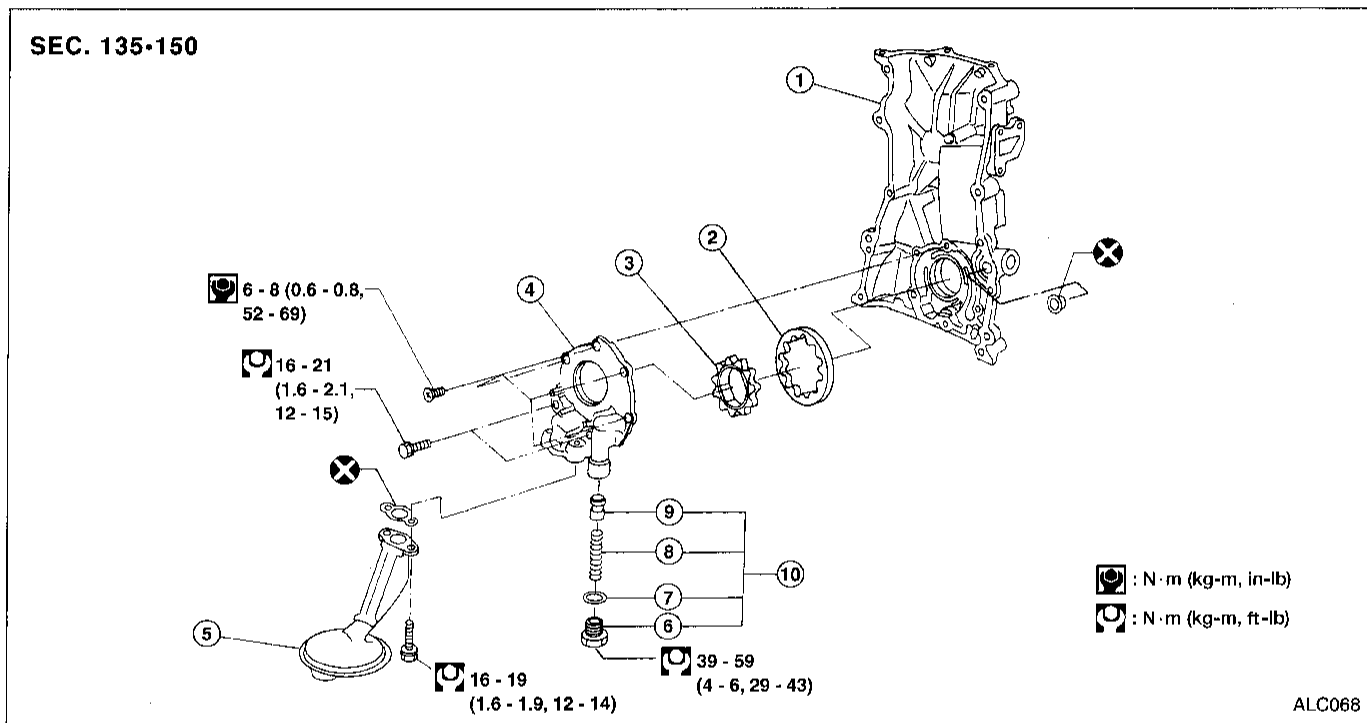

- | | | |
|------------------|----------------|----------------------------|
| ① Front cover | ⑤ Oil strainer | ⑧ Spring |
| ② Outer gear | ⑥ Cap | ⑨ Regulator valve |
| ③ Inner gear | ⑦ Washer | ⑩ Regulator valve assembly |
| ④ Oil pump cover | | |

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

OIL PUMP INSPECTION




Using a feeler gauge, check the following clearances.

Standard clearance:

Unit: mm (in)

| | | |
|--|-------|---------------------------------|
| Body to outer gear radial clearance ① | | 0.114 - 0.20 (0.0045 - 0.0079) |
| Inner gear to outer gear tip clearance ② | | 0.04 - 0.18 (0.0016 - 0.0071) |
| Cover to inner gear clearance ③ | | 0.05 - 0.09 (0.0020 - 0.0035) |
| Cover to outer gear axial clearance ④ | | 0.05 - 0.11 (0.0020 - 0.0043) |
| Inner gear to brazed portion clearance ⑤ | .. | 0.045 - 0.091 (0.0018 - 0.0036) |

- If the tip clearance (②) exceeds the limit, replace gear set.
- If body to gear clearances (①, ③, ④, ⑤) exceed the limit, replace front cover assembly.

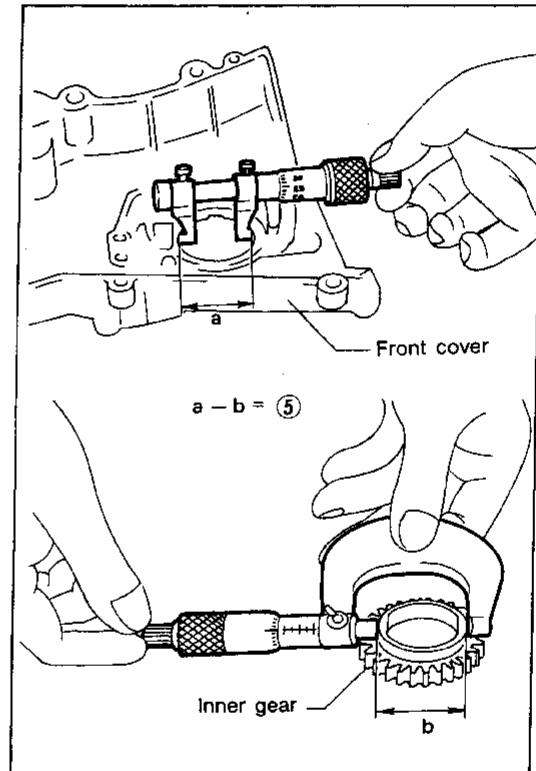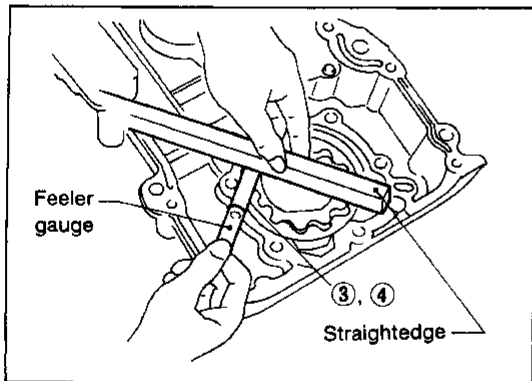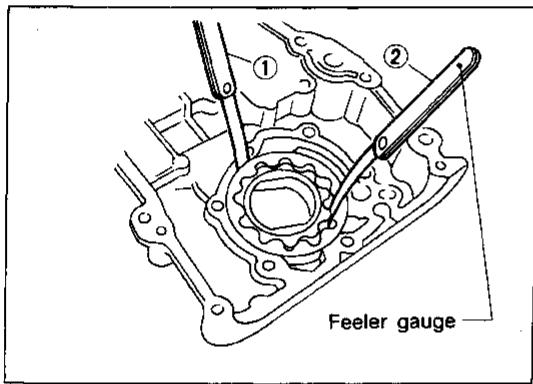


SLC741A

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)


REGULATOR VALVE INSPECTION

1. Visually inspect components for wear and damage.
 2. Check oil pressure regulator valve sliding surface and valve spring.
 3. Coat regulator valve with engine oil. Check that it falls smoothly into the valve hole by its own weight.
- **Replace regulator valve set or oil pump assembly, if damaged.**

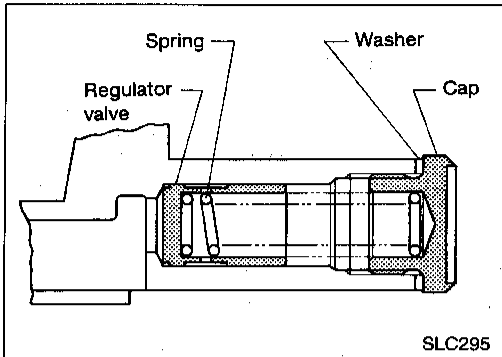

OIL PRESSURE RELIEF VALVE INSPECTION

Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball. If replacement is necessary, remove valve by prying it out with a suitable tool. Install a new valve by tapping it in place.

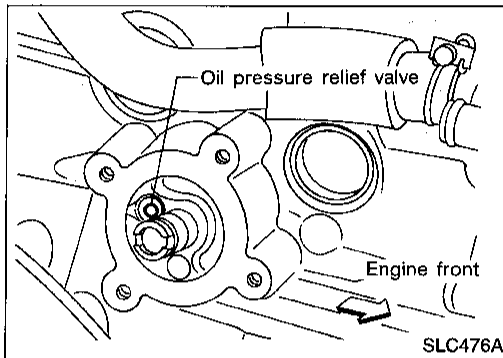


INSTALLATION

Install in the reverse order of removal.

- **Always replace oil seals and gaskets with new ones. Refer to EM section ("OIL SEAL REPLACEMENT").**
- **When installing oil pump, apply engine oil to inner and outer gears.**
- **Use a scraper to remove old liquid gasket from mating surface of front cover.**
- **Also remove traces of liquid gasket from mating surface of cylinder block.**

ENGINE COOLING SYSTEM

Cooling Circuit

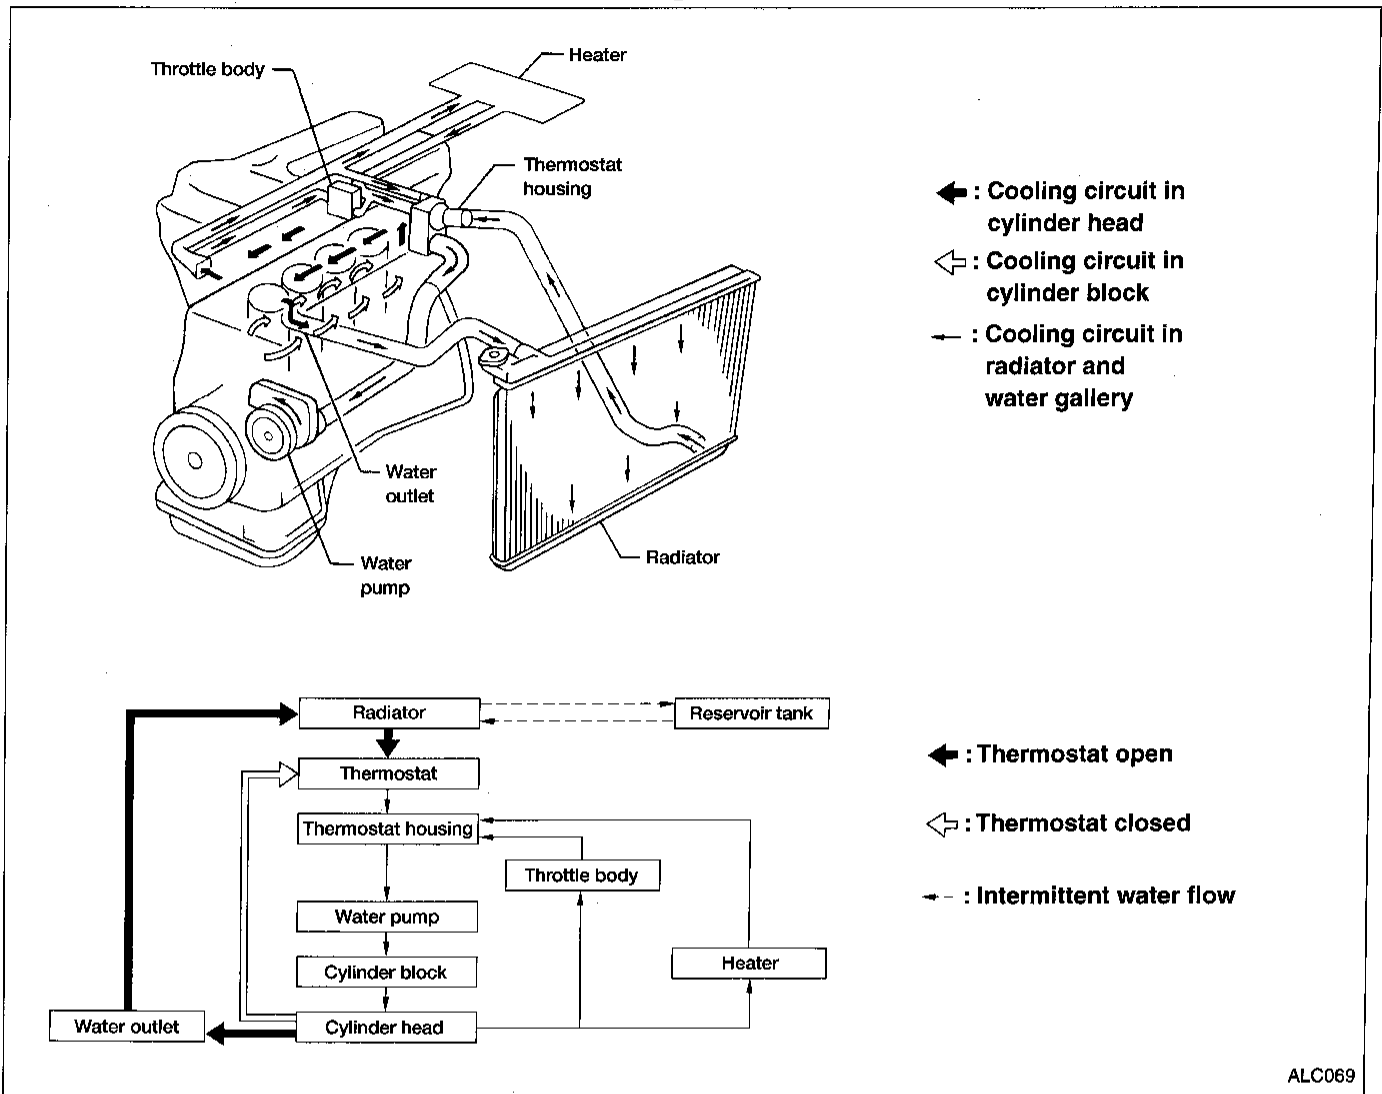

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

System Check

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator.

Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

CHECKING COOLING SYSTEM HOSES

Check hoses for the following:

- Improper attachment
- Leaks
- Cracks
- Damage
- Chafing
- Deterioration

CHECKING RADIATOR


Check radiator for mud or clogging. If necessary, clean radiator as follows.

- Be careful not to bend or damage the radiator fins.

ENGINE COOLING SYSTEM

System Check (Cont'd)

- When radiator is cleaned without removal, remove all surrounding parts such as cooling fan, radiator shroud and horns. Then tape the harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from the radiator.
 4. Blow air into the back side of radiator core vertically downward.
- Use compressed air lower than 5 kg/cm^2 and keep distance more than 30 cm (11.8 in).
5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

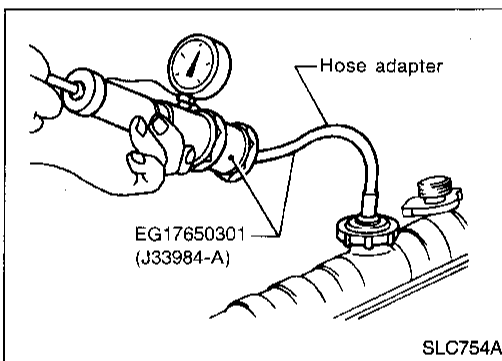

CHECKING COOLING SYSTEM FOR LEAKS


To check for leakage, apply pressure to the cooling system with a tester.

Testing pressure:

157 kPa (1.6 kg/cm², 23 psi)

CAUTION:

Higher pressure than specified may cause radiator damage.

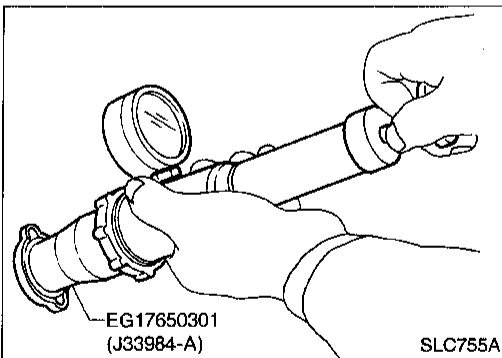

CHECKING RADIATOR CAP

To check radiator cap, apply pressure to cap with a tester.


Radiator cap relief pressure:

Standard

78 - 98 kPa (0.8 - 1.0 kg/cm², 11 - 14 psi)


Limit

59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)

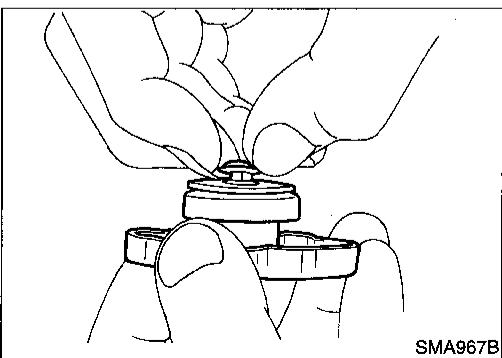

Pull the negative pressure valve to open it. Check that it closes completely when released.

Water Pump

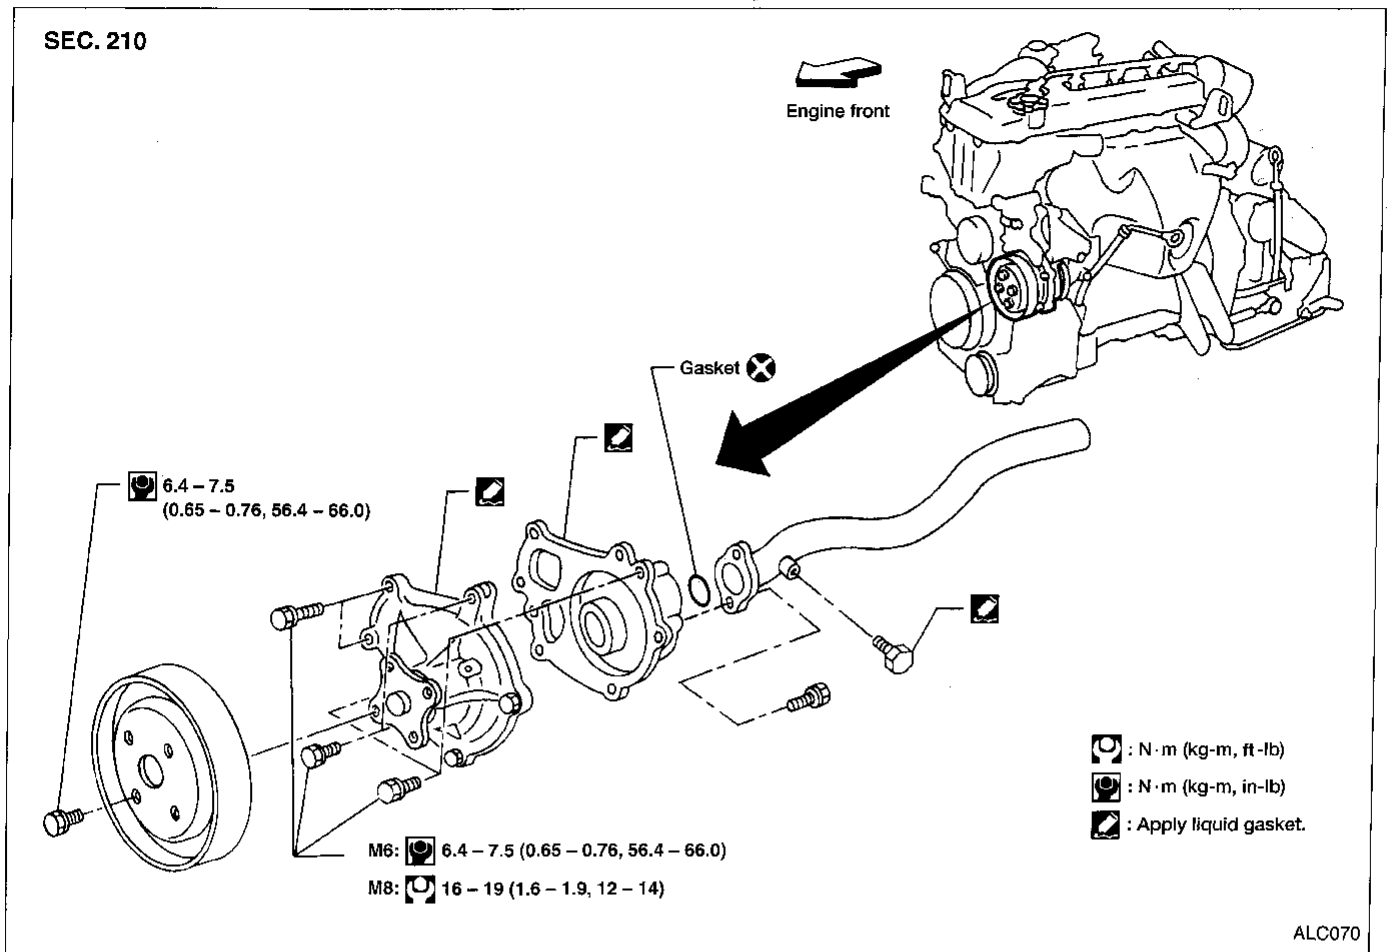

CAUTION:




- When removing water pump assembly, be careful not to get coolant on drive belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap pressure tester.

ENGINE COOLING SYSTEM

Water Pump (Cont'd)


REMOVAL

1. Drain coolant from drain plug on water pipe and radiator. Refer to MA section ("Changing Engine Coolant").
2. Remove right lower splash cover.
3. Remove generator and air conditioner compressor.
4. Remove two bolts from coolant tube (rear of water pump).
5. Remove water pump assembly.

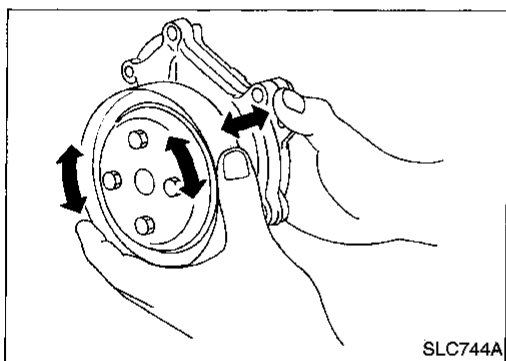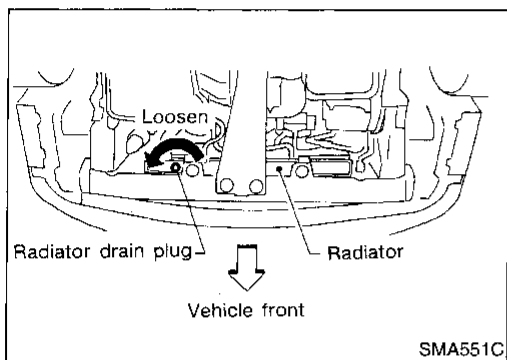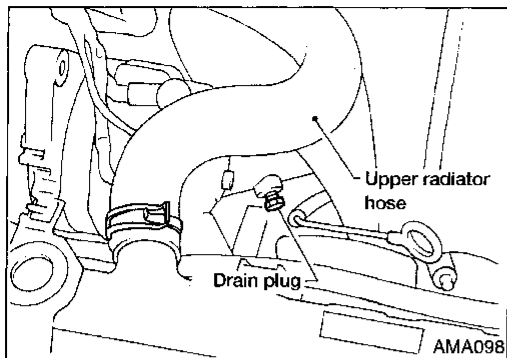


INSPECTION

- Check body assembly for rust or corrosion.
- Check for rough operation due to excessive end play.

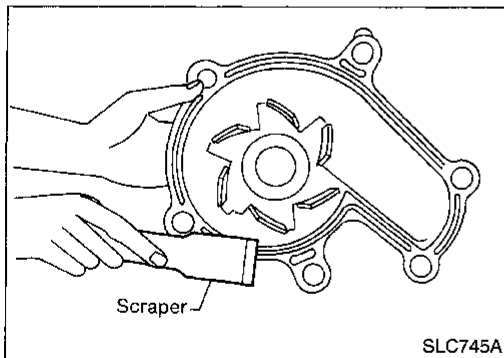

INSTALLATION

1. Use a scraper to remove old liquid gasket from water pump and water pump cover.
- **Also remove traces of liquid gasket from mating surface of cylinder block.**





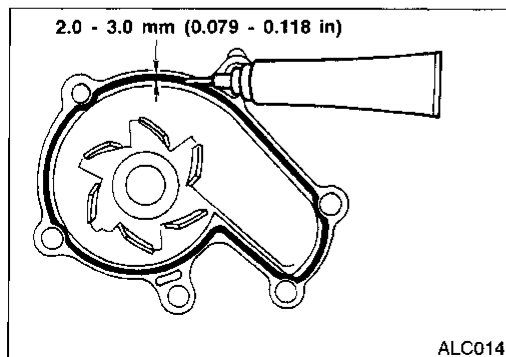


2. Apply a continuous bead of liquid gasket to mating surface of water pump and water pump cover (cylinder block side).
- **Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.**


When filling radiator with coolant, refer to MA section ("Changing Engine Coolant", "ENGINE MAINTENANCE"). When installing drive belts, refer to MA section ("Checking Drive Belts", "ENGINE MAINTENANCE").

Thermostat

SEC. 210

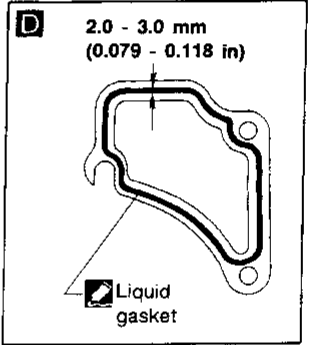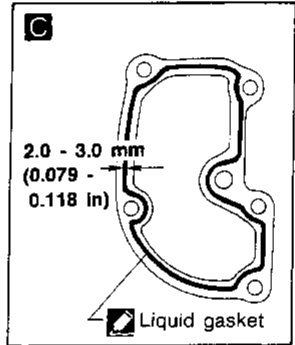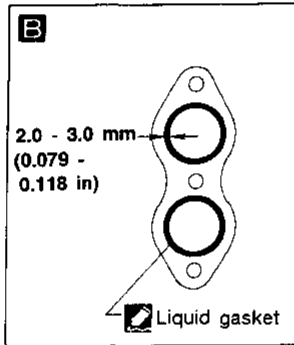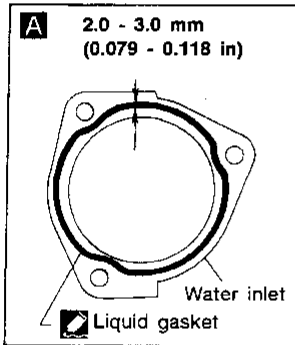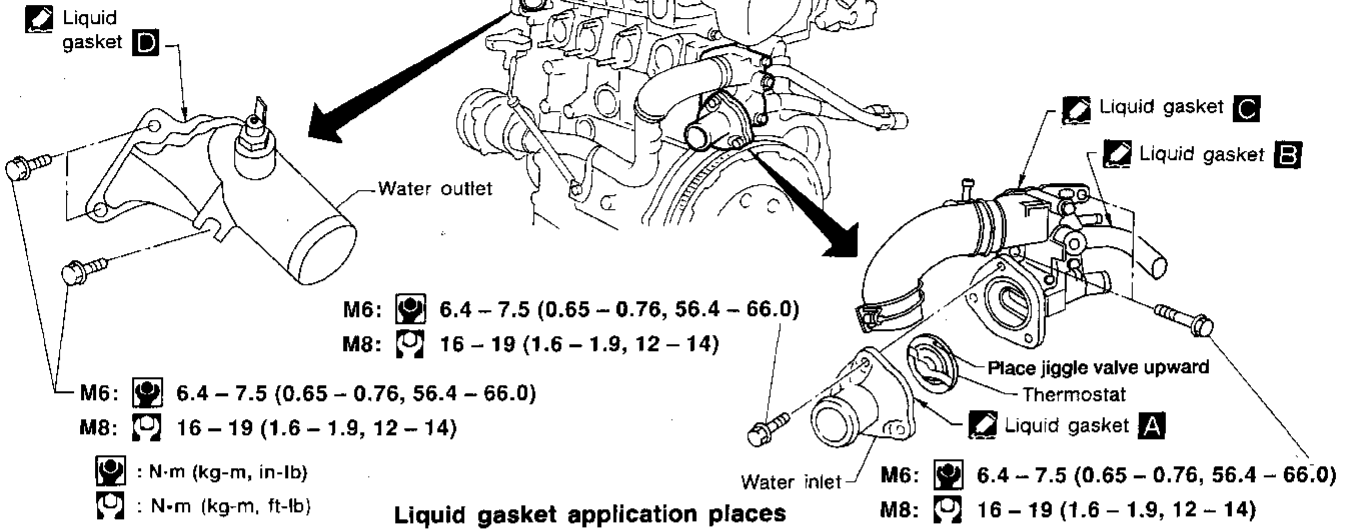

ALC071

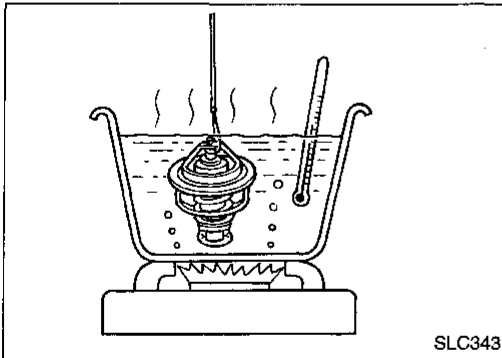

Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.

INSPECTION

1. Check valve seating condition at normal room temperatures. It should seat tightly.
2. Check valve opening temperature and valve lift.


| | | Standard |
|---------------------------|---------------|----------------------------|
| Valve opening temperature | °C (°F) | 76.5 (170) |
| Valve lift | mm/°C (in/°F) | More than 10/90 (0.39/194) |

3. Then check if valve is closed at 5°C (9°F) below valve opening temperature.

INSTALLATION

Install thermostat with jiggle valve or air bleeder at upper side.


- Apply a continuous bead of liquid gasket to mating surface of water inlet.
- After installation, run engine for a few minutes, and check for leaks.

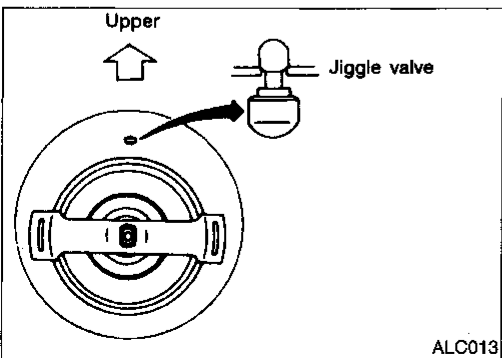

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Radiator

SEC. 214

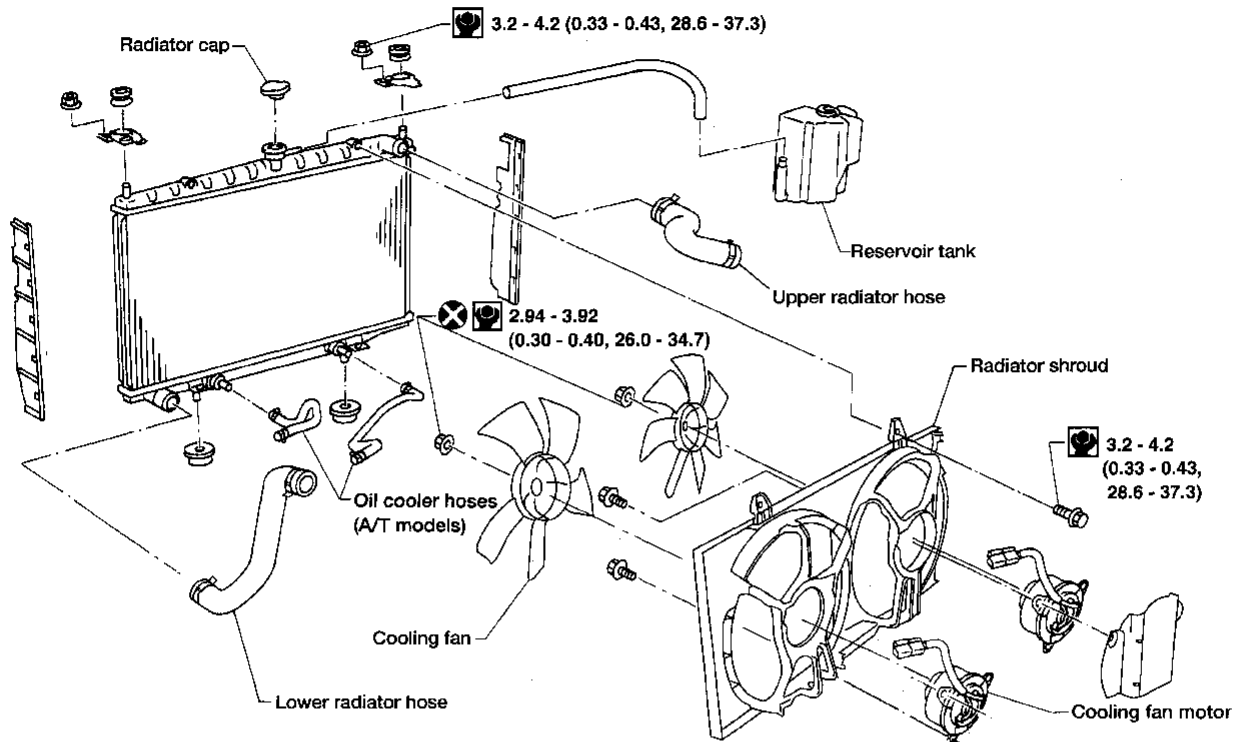

: N·m (kg-m, in-lb)

ALC096

Cooling fan control system

Cooling fans are controlled by the ECM.
For details, refer to EC section ("Overheat", "TROUBLE DIAGNOSIS FOR OVERHEAT").

Refilling engine coolant

For details on refilling engine coolant, refer to MA section ("Changing Engine Coolant").

ENGINE COOLING SYSTEM

Overheating Cause Analysis

| | Symptom | | Check items | | | |
|---|---------------------------------------|------------------------------------|--|---------------------------------------|----|----|
| Cooling system parts malfunction | Poor heat transfer | Water pump malfunction | Worn or loose drive belt | — | GI | |
| | | Thermostat stuck closed | — | | MA | |
| | | Damaged fins | Dust contamination or paper clogging | | — | EM |
| | | | Mechanical damage | | | LC |
| | Reduced air flow | Clogged radiator cooling tube | Excess foreign material (rust, dirt, sand, etc.) | — | EC | |
| | | Cooling fan does not operate | High resistance to fan rotation | | — | FE |
| | | | Damaged fan blades | | | CL |
| | Damaged radiator shroud | — | — | — | EC | |
| | Improper coolant mixture ratio | — | — | — | FE | |
| | Poor coolant quality | — | — | — | FE | |
| | Insufficient coolant | Coolant leaks | Cooling hose | Loose clamp | — | CL |
| | | | | Cracked hose | | MT |
| | | | Water pump | Poor sealing | — | AT |
| | | | Radiator cap | Loose | | — |
| | | | | Poor sealing | RA | |
| Radiator | | | O-ring for damage, deterioration or improper fitting | — | BR | |
| | | Cracked radiator tank | ST | | | |
| Reservoir tank | | Cracked radiator core | — | RS | | |
| | Cracked reservoir tank | BT | | | | |
| Overflowing reservoir tank | Exhaust gas leaks into cooling system | Cylinder head deterioration | — | HA | | |
| | | Cylinder head gasket deterioration | | EL | | |
| Except cooling system parts malfunction | — | Overload on engine | Abusive driving | High engine rpm under no load | — | ST |
| | | | | Driving in low gear for extended time | | RS |
| | | | | Driving at extremely high speed | | BT |
| | | | Powertrain system malfunction | — | HA | |
| | | | Installed improper size wheels and tires | | EL | |
| | Dragging brakes | — | EL | | | |
| | Improper ignition timing | | IDX | | | |
| | Blocked or restricted air flow | Blocked bumper | — | — | BT | |
| | | Blocked radiator grille | Installed car brassiere | | — | HA |
| | | | Mud contamination or paper clogging | | | EL |
| Blocked radiator | | — | EL | | | |
| Blocked condenser | | — | EL | | | |
| Installed large fog lamp | — | EL | | | | |

SERVICE DATA AND SPECIFICATIONS (SDS)

Engine Lubrication System

Oil pressure check

| Engine speed | Approximate discharge pressure kPa (kg/cm ² , psi) |
|--------------|--|
| Idle speed | More than 78 (0.8, 11) |
| 3,000 rpm | 412 - 481 (4.2 - 4.9, 60 - 70) |

Oil pump

| | Unit: mm (in) |
|--|------------------------------------|
| Body to outer gear radial clearance | 0.114 - 0.20 (0.0045 - 0.0079) |
| Inner gear to outer gear tip clearance | 0.04 - 0.18 (0.0016 - 0.0071) |
| Cover to inner gear clearance | 0.05 - 0.09 (0.0020 - 0.0035) |
| Cover to outer gear axial clearance | 0.05 - 0.11 (0.0020 - 0.0043) |
| Inner gear to brazed portion clearance | 0.045 - 0.091 (0.0018 - 0.0036) |

Engine Cooling System

Thermostat

| | | |
|---------------------------|---------------|-------------------------------|
| Valve opening temperature | °C (°F) | 76.5 (170) |
| Valve lift | mm/°C (in/°F) | More than 10/90 (0.39/194) |

Radiator

| | Unit: kPa (kg/cm ² , psi) |
|-----------------------|--------------------------------------|
| Cap relief pressure | |
| Standard | 78 - 98 (0.8 - 1.0, 11 - 14) |
| Limit | 59 - 98 (0.6 - 1.0, 9 - 14) |
| Leakage test pressure | 157 (1.6, 23) |