

ENGINE CONTROL SYSTEM

SECTION EC

GI
MA
EM
LC

CONTENTS

DIAGNOSTIC TROUBLE CODE INDEX2	ON BOARD DIAGNOSTIC SYSTEM
Alphabetical & P No. Index for DTC2	DESCRIPTION43
PRECAUTIONS AND PREPARATION6	Introduction43
Commercial Service Tools6	Two Trip Detection Logic43
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"7	Emission-related Diagnostic Information44
Precautions for On Board Diagnostic (OBD) System of Engine and A/T7	Malfunction Indicator Lamp (MIL)57
Engine Fuel & Emission Control System8	OBD System Operation Chart61
Precautions9	CONSULT66
System Chart11	Generic Scan Tool (GST)79
ENGINE AND EMISSION CONTROL OVERALL SYSTEM12	TROUBLE DIAGNOSIS — Introduction81
Circuit Diagram12	Introduction81
System Diagram14	Diagnostic Worksheet81
ECCS Component Parts Location16	TROUBLE DIAGNOSIS — Work Flow83
Vacuum Hose Drawing18	Work Flow83
ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION20	Description for Work Flow84
Multiport Fuel Injection (MFI) System20	TROUBLE DIAGNOSIS — Basic Inspection85
Electronic Ignition (EI) System22	Basic Inspection85
Air Conditioning Cut Control23	TROUBLE DIAGNOSIS — General Description87
Fuel Cut Control (at no load & high engine speed)24	Diagnostic Trouble Code (DTC) Inspection Priority Chart87
EVAPORATIVE EMISSION SYSTEM25	Fail-Safe Chart88
Description25	Symptom Matrix Chart89
Inspection26	CONSULT Reference Value in Data Monitor Mode92
Evaporative Emission Line Drawing (For California)29	Major Sensor Reference Graph in Data Monitor Mode95
POSITIVE CRANKCASE VENTILATION31	ECM Terminals and Reference Value97
Description31	TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT107
Inspection31	Description107
BASIC SERVICE PROCEDURE32	Common I/I Report Situations107
Fuel Pressure Release32	Diagnostic Procedure107
Fuel Pressure Check32	TROUBLE DIAGNOSIS FOR POWER SUPPLY108
Injector Removal and Installation33	Main Power Supply and Ground Circuit108
Fast Idle Cam (FIC) Inspection and Adjustment34	TROUBLE DIAGNOSIS FOR DTC P0100113
Direct Ignition System — How to Check Idle Speed and Ignition Timing34	Mass Air Flow Sensor (MAFS)113
Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment36	TROUBLE DIAGNOSIS FOR DTC P0105121
	Absolute Pressure Sensor (For California)121
	TROUBLE DIAGNOSIS FOR DTC P0110130
	Intake Air Temperature Sensor130
	TROUBLE DIAGNOSIS FOR DTC P0115136
	Engine Coolant Temperature Sensor (ECTS)136

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

CONTENTS (Cont'd)

TROUBLE DIAGNOSIS FOR DTC P0120	141	TROUBLE DIAGNOSIS FOR DTC P0141 (-B1),	
Throttle Position Sensor	141	P0161 (-B2)	224
TROUBLE DIAGNOSIS FOR DTC P0125	151	Rear Heated Oxygen Sensor Heaters (P0141:	
Engine Coolant Temperature (ECT) Sensor	151	Left bank), (P0161: Right bank)	224
TROUBLE DIAGNOSIS FOR DTC P0130 (-B1),		TROUBLE DIAGNOSIS FOR DTC P0171 (-B1),	
P0150 (-B2)	156	P0174 (-B2)	230
Front Heated Oxygen Sensors (Front HO2S)		Fuel Injection System Function (Lean side)	
(Circuit) (P0130: Left bank), (P0150: Right bank)...	156	(P0171: Left bank), (P0174: Right bank)	230
TROUBLE DIAGNOSIS FOR DTC P0131 (-B1),		TROUBLE DIAGNOSIS FOR DTC P0172 (-B1),	
P0151 (-B2)	163	P0175 (-B2)	237
Front Heated Oxygen Sensor (Lean shift		Fuel Injection System Function (Rich side)	
monitoring) (Front HO2S) (P0131: Left bank),		(P0172: Left bank), (P0175: Right bank)	237
(P0151: Right bank).....	163	TROUBLE DIAGNOSIS FOR DTC P0180	243
TROUBLE DIAGNOSIS FOR DTC P0132 (-B1),		Tank Fuel Temperature Sensor (For California)	243
P0152 (-B2)	169	TROUBLE DIAGNOSIS FOR DTC P0300 - P0308	248
Front Heated Oxygen Sensor (Rich shift		No. 1 - 8 Cylinder Misfire, Multiple Cylinder	
monitoring) (Front HO2S) (P0132: Left bank),		Misfire	248
(P0152: Right bank).....	169	TROUBLE DIAGNOSIS FOR DTC P0325 (-B1),	
TROUBLE DIAGNOSIS FOR DTC P0133 (-B1),		P0330 (-B2)	253
P0153 (-B2)	175	Knock Sensor (KS) (P0325: Left bank), (P0330:	
Front Heated Oxygen Sensor (Response		Right bank)	253
monitoring) (Front HO2S) (P0133: Left bank),		TROUBLE DIAGNOSIS FOR DTC P0335	256
(P0153: Right bank).....	175	Crankshaft Position Sensor (CKPS) (OBD)	256
TROUBLE DIAGNOSIS FOR DTC P0134 (-B1),		TROUBLE DIAGNOSIS FOR DTC P0340	261
P0154 (-B2)	184	Camshaft Position Sensor (CMPS).....	261
Front Heated Oxygen Sensor (High voltage)		TROUBLE DIAGNOSIS FOR DTC P0400	267
(Front HO2S) (P0134: Left bank), (P0154: Right		EGR Function (Close)	267
bank).....	184	TROUBLE DIAGNOSIS FOR DTC P0402	277
TROUBLE DIAGNOSIS FOR DTC P0135 (-B1),		EGRC-BPT Valve Function	277
P0155 (-B2)	190	TROUBLE DIAGNOSIS FOR DTC P0420 (-B1),	
Front Heated Oxygen Sensor Heater (P0135:		P0430 (-B2)	282
Left bank), (P0155: Right bank)	190	Three Way Catalyst Function (P0420: Left bank),	
TROUBLE DIAGNOSIS FOR DTC P0137 (-B1),		(P0430: Right bank).....	282
P0157 (-B2)	195	TROUBLE DIAGNOSIS FOR DTC P0440	285
Rear Heated Oxygen Sensor (Min. Voltage		Evaporative Emission (EVAP) Control System	
Monitoring) (Rear HO2S) (P0137: Left bank),		(Small Leak) (Negative Pressure) (For California) ..	285
(P0157: Right bank).....	195	TROUBLE DIAGNOSIS FOR DTC P0443	295
TROUBLE DIAGNOSIS FOR DTC P0138 (-B1),		Evaporative Emission (EVAP) Canister Purge	
P0158 (-B2)	203	Volume Control Valve (Circuit) (For California)	295
Rear Heated Oxygen Sensor (Max. Voltage		TROUBLE DIAGNOSIS FOR DTC P0446	301
Monitoring) (Rear HO2S) (P0138: Left bank),		Evaporative Emission (EVAP) Canister Vent	
(P0158: Right bank).....	203	Control Valve (Circuit) (For California)	301
TROUBLE DIAGNOSIS FOR DTC P0139 (-B1),		TROUBLE DIAGNOSIS FOR DTC P0450	306
P0159 (-B2)	211	Evaporative Emission (EVAP) Control System	
Rear Heated Oxygen Sensor (Response		Pressure Sensor (For California).....	306
Monitoring) (Rear HO2S) (P0139: Left bank),		TROUBLE DIAGNOSIS FOR DTC P0500	312
(P0159: Right bank).....	211	Vehicle Speed Sensor (VSS)	312
TROUBLE DIAGNOSIS FOR DTC P0140 (-B1),		TROUBLE DIAGNOSIS FOR DTC P0505	316
P0160 (-B2)	218	Idle Air Control Valve (IACV) — Auxiliary Air	
Rear Heated Oxygen Sensor (High voltage)		Control (AAC) Valve	316
(Rear HO2S) (P0140: Left bank), (P0160: Right		TROUBLE DIAGNOSIS FOR DTC P0510	322
bank).....	218	Closed Throttle Position Switch (For California)	322

CONTENTS (Cont'd)

TROUBLE DIAGNOSIS FOR DTC P0600, P1605327	TROUBLE DIAGNOSIS FOR DTC P1444412	
A/T Communication Line (P0600) and A/T	Evaporative Emission (EVAP) Canister Purge	
Diagnostic Communication Line (P1605).....327	Volume Control Valve (for California).....412	GI
TROUBLE DIAGNOSIS FOR DTC P0605330	TROUBLE DIAGNOSIS FOR DTC P1446419	
Engine Control Module (ECM)-ECCS Control	Evaporative Emission (EVAP) Canister Vent	
Module.....330	Control Valve (Close) (For California).....419	MA
TROUBLE DIAGNOSIS FOR DTC P1105332	TROUBLE DIAGNOSIS FOR DTC P1447424	
Manifold Absolute Pressure (MAP)/Barometric	Evaporative Emission (EVAP) Control System	
Pressure (BARO) Switch Solenoid Valve (For	Purge Flow Monitoring (For California).....424	EM
California).....332	TROUBLE DIAGNOSIS FOR DTC P1448431	
TROUBLE DIAGNOSIS FOR DTC P1110 (-B1),	Evaporative Emission (EVAP) Canister Vent	
P1135 (-B2)338	Control Valve (Open) (For California).....431	LC
Intake Valve Timing Control (P1110: Left bank),	TROUBLE DIAGNOSIS FOR DTC P1490437	
(P1135: Right bank).....338	Vacuum Cut Valve Bypass Valve (Circuit) (For	
TROUBLE DIAGNOSIS FOR DTC P1120345	California).....437	EC
Secondary Throttle Position Sensor (STPS).....345	TROUBLE DIAGNOSIS FOR DTC P1491442	
TROUBLE DIAGNOSIS FOR DTC P1125350	Vacuum Cut Valve Bypass Valve (For California)....442	FE
Tandem Throttle Position Sensor.....350	TROUBLE DIAGNOSIS FOR DTC P1492448	
TROUBLE DIAGNOSIS FOR DTC P1140 (-B1),	Evaporative Emission (EVAP) Canister Purge	
P1145 (-B2)351	Control Valve/Solenoid Valve (Circuit) (For	
Intake Valve Timing Control Position Sensor	California).....448	AT
(P1140: Left bank), (P1145: Right bank).....351	TROUBLE DIAGNOSIS FOR DTC P1493453	
TROUBLE DIAGNOSIS FOR DTC P1148 (-B1),	Evaporative Emission (EVAP) Canister Purge	
P1168 (-B2)357	Control Valve/Solenoid Valve (For California).....453	PD
Closed Loop Control.....357	TROUBLE DIAGNOSIS FOR DTC P1706460	
TROUBLE DIAGNOSIS FOR DTC P1210359	Park/Neutral Position Switch.....460	FA
Traction Control System (TCS) Signal Circuit.....359	TROUBLE DIAGNOSIS FOR ABS/TCS C/U	
TROUBLE DIAGNOSIS FOR DTC P1220362	SIGNAL465	RA
Fuel Pump Control Module (FPCM).....362	ABS/TCS Control Unit.....465	
TROUBLE DIAGNOSIS FOR DTC P1320368	TROUBLE DIAGNOSIS FOR ECM — ABS/TCS	
Ignition Signal.....368	COMM NG466	BR
TROUBLE DIAGNOSIS FOR DTC P1336376	ABS/TCS Communication Line.....466	
Crankshaft Position Sensor (CKPS) (OBD)	TROUBLE DIAGNOSIS FOR OVERHEAT469	
(COG).....376	Overheat.....469	ST
TROUBLE DIAGNOSIS FOR DTC P1400381	TROUBLE DIAGNOSIS FOR NON-DETECTABLE	
EGRC-solenoid Valve (For California) or EGR	ITEMS482	RS
Valve and EVAP Canister Purge Control	Injector.....482	
Solenoid Valve (Except for California).....381	Start Signal.....488	BT
TROUBLE DIAGNOSIS FOR DTC P1401386	Fuel Pump Control.....490	
EGR Temperature Sensor.....386	Power Steering Oil Pressure Switch.....494	
TROUBLE DIAGNOSIS FOR DTC P1402392	Electrical Load Signal.....499	HA
EGR Function (Open).....392	MIL & Data Link Connectors.....502	
TROUBLE DIAGNOSIS FOR DTC P1440401	SERVICE DATA AND SPECIFICATIONS (SDS)503	
Evaporative Emission (EVAP) Control System	General Specifications.....503	EL
(Small Leak) (Positive Pressure) (For California) ...401	Inspection and Adjustment.....503	

When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES" and "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".

IDX

DIAGNOSTIC TROUBLE CODE INDEX

Alphabetical & P No. Index for DTC

ALPHABETICAL INDEX FOR DTC

Items (CONSULT screen terms)	DTC*6		Reference page	Items (CONSULT screen terms)	DTC*6		Reference page
	CONSULT GST*2	ECM*1			CONSULT GST*2	ECM*1	
*COOLAN T SEN/CIRC	P0125	0908	EC-151	FR O2 SE HEATER-B1	P0135	0901	EC-190
A/T 1ST GR FNCTN	P0731	1103	AT-93	FR O2 SE HEATER-B2	P0155	1001	EC-190
A/T 2ND GR FNCTN	P0732	1104	AT-98	FRONT O2 SENSOR-B1	P0130	0303	EC-156
A/T 3RD GR FNCTN	P0733	1105	AT-102	FRONT O2 SENSOR-B1	P0133	0409	EC-175
A/T 4TH GR FNCTN	P0734	1106	AT-106	FRONT O2 SENSOR-B1	P0132	0410	EC-169
A/T COMM LINE	P0600	0504	EC-327	FRONT O2 SENSOR-B1	P0131	0411	EC-163
A/T DIAG COMM LINE	P1605	0804	EC-327	FRONT O2 SENSOR-B1	P0134	0412	EC-184
A/T TCC S/V FNCTN	P0744	1107	AT-118	FRONT O2 SENSOR-B2	P0153	0413	EC-175
ABS-TCS C/U SIGNAL	—	0107	EC-466	FRONT O2 SENSOR-B2	P0152	0414	EC-169
ABSL PRES SEN/CIRC	P0105	0803	EC-121	FRONT O2 SENSOR-B2	P0151	0415	EC-163
AIR TEMP SEN/CIRC	P0110	0401	EC-130	FRONT O2 SENSOR-B2	P0150	0503	EC-156
ATF TEMP SEN/CIRC	P0710	1208	AT-83	FRONT O2 SENSOR-B2	P0154	0509	EC-184
CAM POS SEN/CIR	P0340	0101	EC-261	FUEL SYS LEAN/BK1	P0171	0115	EC-230
CLOSED LOOP-B1	P1148	0307	EC-357	FUEL SYS LEAN/BK2	P0174	0210	EC-230
CLOSED LOOP-B2	P1168	0308	EC-357	FUEL SYS RICH/BK1	P0172	0114	EC-237
CLOSED TP SW/CIRC	P0510	0203	EC-322	FUEL SYS RICH/BK2	P0175	0209	EC-237
COOLANT T SEN/CIRC	P0115	0103	EC-136	FUEL TEMP SEN/CIRC	P0180	0402	EC-243
CPS/CIRC (OBD) COG	P1336	0905	EC-376	IACV/AAC VLV/CIRC	P0505	0205	EC-316
CPS/CIRCUIT (OBD)	P0335	0802	EC-256	IGN SIGNAL-PRIMARY	P1320	0201	EC-368
CYL 1 MISFIRE	P0301	0608	EC-248	INHIBITOR SW/CIRC	P0705	1101	AT-79
CYL 2 MISFIRE	P0302	0607	EC-248	INT/V TIM CONT-B1	P1110	0805	EC-338
CYL 3 MISFIRE	P0303	0606	EC-248	INT/V TIM CONT-B2	P1135	1301	EC-338
CYL 4 MISFIRE	P0304	0605	EC-248	INTK TIM S/CIRC-B1	P1140	1303	EC-351
CYL 5 MISFIRE	P0305	0604	EC-248	INTK TIM S/CIRC-B2	P1145	1304	EC-351
CYL 6 MISFIRE	P0306	0603	EC-248	KNOCK SEN/CIRC-B1	P0325	0304	EC-253
CYL 7 MISFIRE	P0307	0602	EC-248	KNOCK SEN/CIRC-B2	P0330	0212	EC-253
CYL 8 MISFIRE	P0308	0601	EC-248	L/PRESS SOL/CIRC	P0745	1205	AT-125
ECM	P0605	0301	EC-330	MAF SEN/CIRCUIT*3	P0100	0102	EC-113
ECM-ABSTCS COMM NG	—	0404	EC-466	MAP/BAR SW SOL/CIR	P1105	1302	EC-332
EGR SYSTEM	P0400	0302	EC-267	MULTI CYL MISFIRE	P0300	0701	EC-248
EGR SYSTEM	P1402	0514	EC-392	NATS MALFUNC	—	—	EC-59
EGR TEMP SEN/CIRC	P1401	0305	EC-386	NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	0505	—
EGRC SOLENOID/V	P1400	1005	EC-381	NO SELF DIAGNOSTIC FAILURE INDICATED	No DTC	Flashing*5	EC-57
EGRC-BPT VALVE	P0402	0306	EC-277	O/R CLTCH SOL/CIRC	P1760	1203	AT-143
ENGINE SPEED SIG*4	P0725	1207	AT-90	OVER HEAT	—	0208	EC-469
EVAP PURG FLOW/ MON	P1447	0111	EC-424	P-N POS SW/CIRCUIT	P1706	1003	EC-460
EVAP SMALL LEAK	P1440	0213	EC-401	PURG CONT/V & S/V	P1493	0312	EC-453
EVAP SMALL LEAK	P0440	0705	EC-285	PURG CONT/V S/V	P1492	0807	EC-448
EVAP SYS PRES SEN	P0450	0704	EC-306	PURG VOLUME CONT/V	P1444	0214	EC-412
FPCM/CIRCUIT	P1220	1305	EC-362				

DIAGNOSTIC TROUBLE CODE INDEX

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT screen terms)	DTC*6		Reference page
	CONSULT GST*2	ECM*1	
PURG VOLUME CONT/V	P0443	1008	EC-295
REAR O2 SENSOR-B1	P0137	0511	EC-195
REAR O2 SENSOR-B1	P0140	0512	EC-218
REAR O2 SENSOR-B1	P0139	0707	EC-211
REAR O2 SENSOR-B1	P0138	0510	EC-203
REAR O2 SENSOR-B2	P0158	0313	EC-203
REAR O2 SENSOR-B2	P0157	0314	EC-195
REAR O2 SENSOR-B2	P0160	0315	EC-218
REAR O2 SENSOR-B2	P0159	0708	EC-211
RR O2 SE HEATER-B1	P0141	0902	EC-224
RR O2 SE HEATER-B2	P0161	1002	EC-224
SFT SOL A/CIRC*3	P0750	1108	AT-129
SFT SOL B/CIRC*3	P0755	1201	AT-133
TACM SW SIGNALS	P1210	0106	EC-359
TANDEM TP SEN/CIRC	P1125	0110	EC-350
TCC SOLENOID/CIRC	P0740	1204	AT-114
THRTL POS SEN/ CIRC*3	P0120	0403	EC-141
TP SEN/CIRC A/T*3	P1705	1206	AT-137
TP SEN2/CIRCUIT	P1120	0406	EC-345
TW CATALYST SYS-B1	P0420	0702	EC-282
TW CATALYST SYS-B2	P0430	0703	EC-282
Unable to access ECCS	—	—	EC-88
VC CUT/V BYPASS/V	P1491	0311	EC-442
VC/V BYPASS/V	P1490	0801	EC-437
VEH SPD SEN/CIR AT*4	P0720	1102	AT-87
VEH SPEED SEN/CIRC	P0500	0104	EC-312
VENT CONTROL VALVE	P1446	0215	EC-419
VENT CONTROL VALVE	P1448	0309	EC-431
VENT CONTROL VALVE	P0446	0903	EC-301

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates after TCM (Transmission Control Module) enters the fail-safe mode in two consecutive trips, if both the "Revolution sensor" and the "Engine speed signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

NOTE: Regarding Y33 models, "-B1" indicates left bank and "-B2" indicates right bank.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

DIAGNOSTIC TROUBLE CODE INDEX

Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

DTC*6		Items (CONSULT screen terms)	Reference page	DTC*6		Items (CONSULT screen terms)	Reference page
CONSULT GST*2	ECM*1			CONSULT GST*2	ECM*1		
—	—	Unable to access ECCS	EC-88	P0180	0402	FUEL TEMP SEN/CIRC	EC-243
—	0107	ABS-TCS C/U SIGNAL	EC-466	P0300	0701	MULTI CYL MISFIRE	EC-248
—	0208	OVER HEAT	EC-469	P0301	0608	CYL 1 MISFIRE	EC-248
—	0404	ECM-ABSTCS COMM NG	EC-466	P0302	0607	CYL 2 MISFIRE	EC-248
—	—	NATS MALFUNC	EC-59	P0303	0606	CYL 3 MISFIRE	EC-248
No DTC	Flashing*5	NO SELF DIAGNOSTIC FAILURE INDICATED	EC-57	P0304	0605	CYL 4 MISFIRE	EC-248
P0000	0505	NO SELF DIAGNOSTIC FAILURE INDICATED	—	P0305	0604	CYL 5 MISFIRE	EC-248
P0100	0102	MAF SEN/CIRCUIT*3	EC-113	P0306	0603	CYL 6 MISFIRE	EC-248
P0105	0803	ABSL PRES SEN/CIRC	EC-121	P0307	0602	CYL 7 MISFIRE	EC-248
P0110	0401	AIR TEMP SEN/CIRC	EC-130	P0308	0601	CYL 8 MISFIRE	EC-248
P0115	0103	COOLANT T SEN/CIRC	EC-136	P0325	0304	KNOCK SEN/CIRC-B1	EC-253
P0120	0403	THRTL POS SEN/ CIRC*3	EC-141	P0330	0212	KNOCK SEN/CIRC-B2	EC-253
P0125	0908	*COOLAN T SEN/CIRC	EC-151	P0335	0802	CPS/CIRCUIT (OBD)	EC-256
P0130	0303	FRONT O2 SENSOR-B1	EC-156	P0340	0101	CAM POS SEN/CIR	EC-261
P0131	0411	FRONT O2 SENSOR-B1	EC-163	P0400	0302	EGR SYSTEM	EC-267
P0132	0410	FRONT O2 SENSOR-B1	EC-169	P0402	0306	EGRC-BPT VALVE	EC-277
P0133	0409	FRONT O2 SENSOR-B1	EC-175	P0420	0702	TW CATALYST SYS-B1	EC-282
P0134	0412	FRONT O2 SENSOR-B1	EC-184	P0430	0703	TW CATALYST SYS-B2	EC-282
P0135	0901	FR O2 SE HEATER-B1	EC-190	P0440	0705	EVAP SMALL LEAK	EC-285
P0137	0511	REAR O2 SENSOR-B1	EC-195	P0443	1008	PURG VOLUME CONT/V	EC-295
P0138	0510	REAR O2 SENSOR-B1	EC-203	P0446	0903	VENT CONTROL VALVE	EC-301
P0139	0707	REAR O2 SENSOR-B1	EC-211	P0450	0704	EVAPO SYS PRES SEN	EC-306
P0140	0512	REAR O2 SENSOR-B1	EC-218	P0500	0104	VEH SPEED SEN/CIRC	EC-312
P0141	0902	RR O2 SE HEATER-B1	EC-224	P0505	0205	IACV/AAC VLV/CIRC	EC-316
P0150	0503	FRONT O2 SENSOR-B2	EC-156	P0510	0203	CLOSED TP SW/CIRC	EC-322
P0151	0415	FRONT O2 SENSOR-B2	EC-163	P0600	0504	A/T COMM LINE	EC-327
P0152	0414	FRONT O2 SENSOR-B2	EC-169	P0605	0301	ECM	EC-330
P0153	0413	FRONT O2 SENSOR-B2	EC-175	P0705	1101	INHIBITOR SW/CIRC	AT-79
P0154	0509	FRONT O2 SENSOR-B2	EC-184	P0710	1208	ATF TEMP SEN/CIRC	AT-83
P0155	1001	FR O2 SE HEATER-B2	EC-190	P0720	1102	VEH SPD SEN/CIR AT*4	AT-87
P0157	0314	REAR O2 SENSOR-B2	EC-195	P0725	1207	ENGINE SPEED SIG*4	AT-90
P0158	0313	REAR O2 SENSOR-B2	EC-203	P0731	1103	A/T 1ST GR FNCTN	AT-93
P0159	0708	REAR O2 SENSOR-B2	EC-211	P0732	1104	A/T 2ND GR FNCTN	AT-98
P0160	0315	REAR O2 SENSOR-B2	EC-218	P0733	1105	A/T 3RD GR FNCTN	AT-102
P0161	1002	RR O2 SE HEATER-B2	EC-224	P0734	1106	A/T 4TH GR FNCTN	AT-106
P0171	0115	FUEL SYS LEAN/BK1	EC-230	P0740	1204	TCC SOLENOID/CIRC	AT-114
P0172	0114	FUEL SYS RICH/BK1	EC-237	P0744	1107	A/T TCC S/V FNCTN	AT-118
P0174	0210	FUEL SYS LEAN/BK2	EC-230	P0745	1205	L/PRESS SOL/CIRC	AT-125
P0175	0209	FUEL SYS RICH/BK2	EC-237	P0750	1108	SFT SOL A/CIRC*3	AT-129
				P0755	1201	SFT SOL B/CIRC*3	AT-133
				P1105	1302	MAP/BAR SW SOL/CIR	EC-332

DIAGNOSTIC TROUBLE CODE INDEX

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT screen terms)	Reference page
CONSULT GST*2	ECM*1		
P1110	0805	INT/V TIM CONT-B1	EC-338
P1120	0406	TP SEN2/CIRCUIT	EC-345
P1125	0110	TANDEM TP SEN/CIRC	EC-350
P1135	1301	INT/V TIM CONT-B2	EC-338
P1140	1303	INTK TIM S/CIRC-B1	EC-351
P1145	1304	INTK TIM S/CIRC-B2	EC-351
P1148	0307	CLOSED LOOP-B1	EC-357
P1168	0308	CLOSED LOOP-B2	EC-357
P1210	0106	TACM SW SIGNALS	EC-359
P1220	1305	FPCM/CIRCUIT	EC-362
P1320	0201	IGN SIGNAL-PRIMARY	EC-368
P1336	0905	CPS/CIRC (OBD) COG	EC-376
P1400	1005	EGRC SOLENOID/V	EC-381
P1401	0305	EGR TEMP SEN/CIRC	EC-386
P1402	0514	EGR SYSTEM	EC-392
P1440	0213	EVAP SMALL LEAK	EC-401
P1444	0214	PURG VOLUME CONT/V	EC-412
P1446	0215	VENT CONTROL VALVE	EC-419
P1447	0111	EVAP PURG FLOW/ MON	EC-424
P1448	0309	VENT CONTROL VALVE	EC-431
P1490	0801	VC/V BYPASS/V	EC-437
P1491	0311	VC CUT/V BYPASS/V	EC-442
P1492	0807	PURG CONT/V S/V	EC-448
P1493	0312	PURG CONT/V & S/V	EC-453
P1605	0804	A/T DIAG COMM LINE	EC-327
P1705	1206	TP SEN/CIRC A/T*3	AT-137
P1706	1003	P-N POS SW/CIRCUIT	EC-460
P1760	1203	O/R CLTCH SOL/CIRC	AT-143

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates after TCM (Transmission Control Module) enters the fail-safe mode in two consecutive trips, if both the "Revolution sensor" and the "Engine speed signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

NOTE: Regarding Y33 models, "-B1" indicates left bank and "-B2" indicates right bank.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT






HA

EL

IDX

PRECAUTIONS AND PREPARATION

Commercial Service Tools

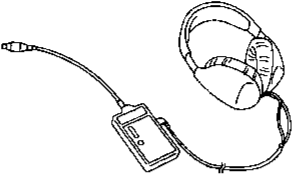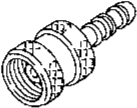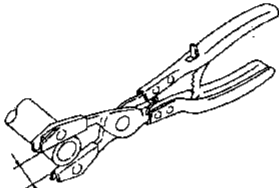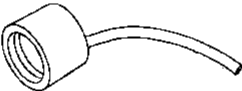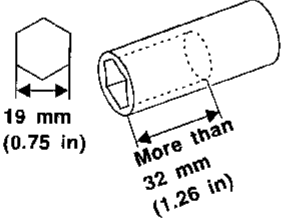Tool name (Kent-Moore No.)	Description
Leak detector (J41416)	<p>When distinguishing the EVAP leak portion.</p>  <p>NT703</p>
EVAP service port adapter (J41413-OBD)	<p>When applying positive pressure through EVAP service port.</p>  <p>NT704</p>
Hose clipper	<p>This tool is used to clamp the EVAP purge hose between the fuel tank and EVAP canister for DTC P1440 (EVAP small leak positive pressure).</p>  <p>Approx. 20 mm (0.79 in)</p> <p>NT720</p>
Fuel filler cap adapter	<p>Checking fuel tank vacuum relief valve opening pressure</p>  <p>NT653</p>
Socket wrench	<p>Removing and installing engine coolant temperature sensor</p>  <p>NT705</p>

PRECAUTIONS AND PREPARATION

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System "Air Bag" and "Seat Belt Pre-tensioner", used along with a seat belt, help to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.

In addition to the supplemental air bag modules for a frontal collision, the supplemental side air bag used along with the seat belt helps to reduce the risk or severity of injury to the driver and front passenger in a side collision. The supplemental side air bag consists of air bag modules (located in the outer side of front seats), satellite sensor, diagnosis sensor unit (which is one of components of supplemental air bags for a frontal collision), wiring harness, warning lamp (which is one of components of supplemental air bags for a frontal collision). Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses (except "Seat Belt Pre-tensioner" connector) can be identified with yellow harness connector (and with yellow harness protector or yellow insulation tape before the harness connectors).

Precautions for On Board Diagnostic (OBD) System of Engine and A/T

The ECM (ECCS control module) has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch "OFF" and disconnect the negative battery terminal before the repair or inspection work. The open/short circuit of the related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after the work. The loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure to connect the connector without water, grease, dirt, bent terminals, etc. in it.)
- Be sure to route and clamp the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after the work. The misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EGR system or the fuel injection system, etc.
- Be sure to erase the unnecessary (already fixed) malfunction information in the ECM and TCM (Transmission Control Module) before returning the vehicle to the customer.

Engine Fuel & Emission Control System

ECM

- Do not disassemble ECM (ECCS control module).
- Do not turn diagnosis test mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ECM value.


The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

WIRELESS EQUIPMENT

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
 - 1) Keep the antenna as far away as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls.
Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

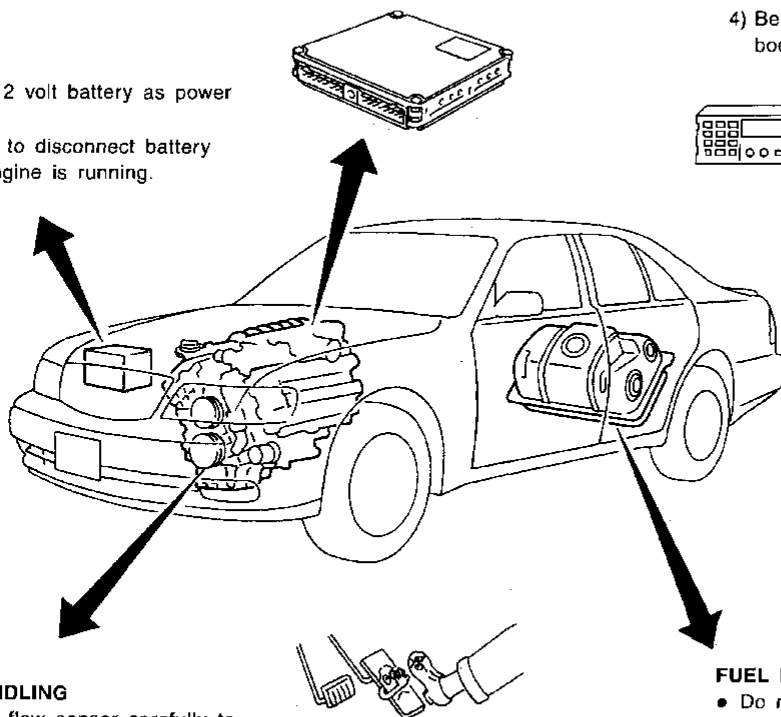

ECCS PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor or crankshaft position sensor (OBD).

WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.






FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.

ECM HARNESS HANDLING

- Securely connect ECM harness connectors.
Poor connection can cause extremely high (surge) voltage in coil and condenser, resulting in damage to ICs.
- Keep ECM harness at least 10 cm (3.9 in) from adjacent harness, to prevent ECM system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep ECM parts and harness dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

PRECAUTIONS AND PREPARATION

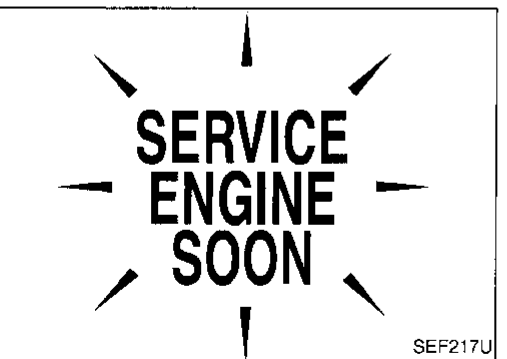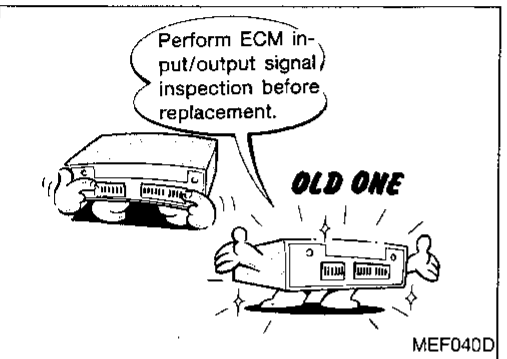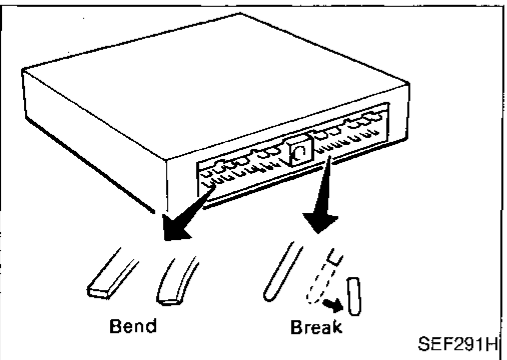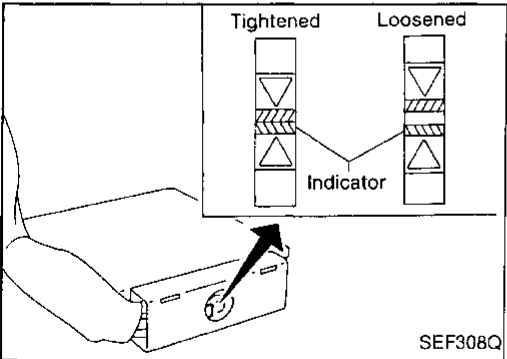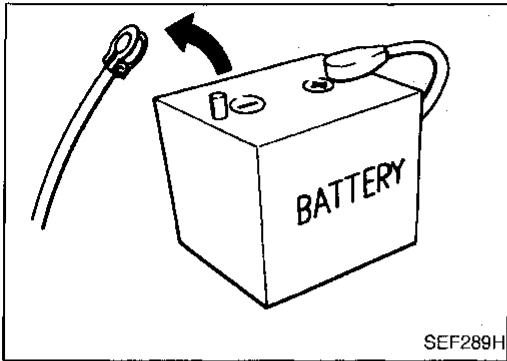

Precautions

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM. Because battery voltage is applied to ECM even if ignition switch is turned off.
- When connecting ECM harness connector, tighten securing bolt until the gap between the orange indicators disappears.
 ☞ : 3.0 - 5.0 N·m (0.3 - 0.5 kg·m, 26 - 43 in·lb)
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).
 Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Before replacing ECM, perform ECM input/output signal inspection and make sure whether ECM functions properly or not. (See page EC-97.)
- After performing each TROUBLE DIAGNOSIS, perform "OVERALL FUNCTION CHECK" or "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". The DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE" if the repair is completed. The "OVERALL FUNCTION CHECK" should be a good result if the repair is completed.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX


PRECAUTIONS AND PREPARATION

Precautions (Cont'd)

- When measuring ECM signals with a circuit tester, never bring the two tester probes into contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

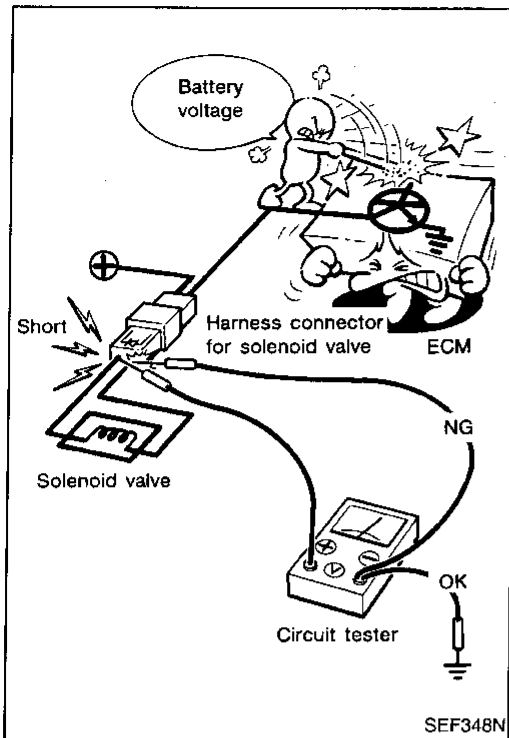


- Regarding model Y33, “-B1” indicates the left bank and “-B2” indicates the right bank as shown in the figure.

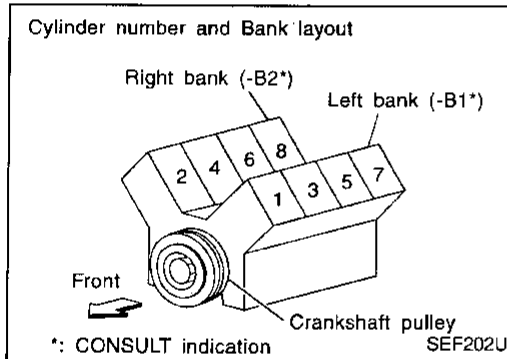

PRECAUTIONS AND PREPARATION

System Chart

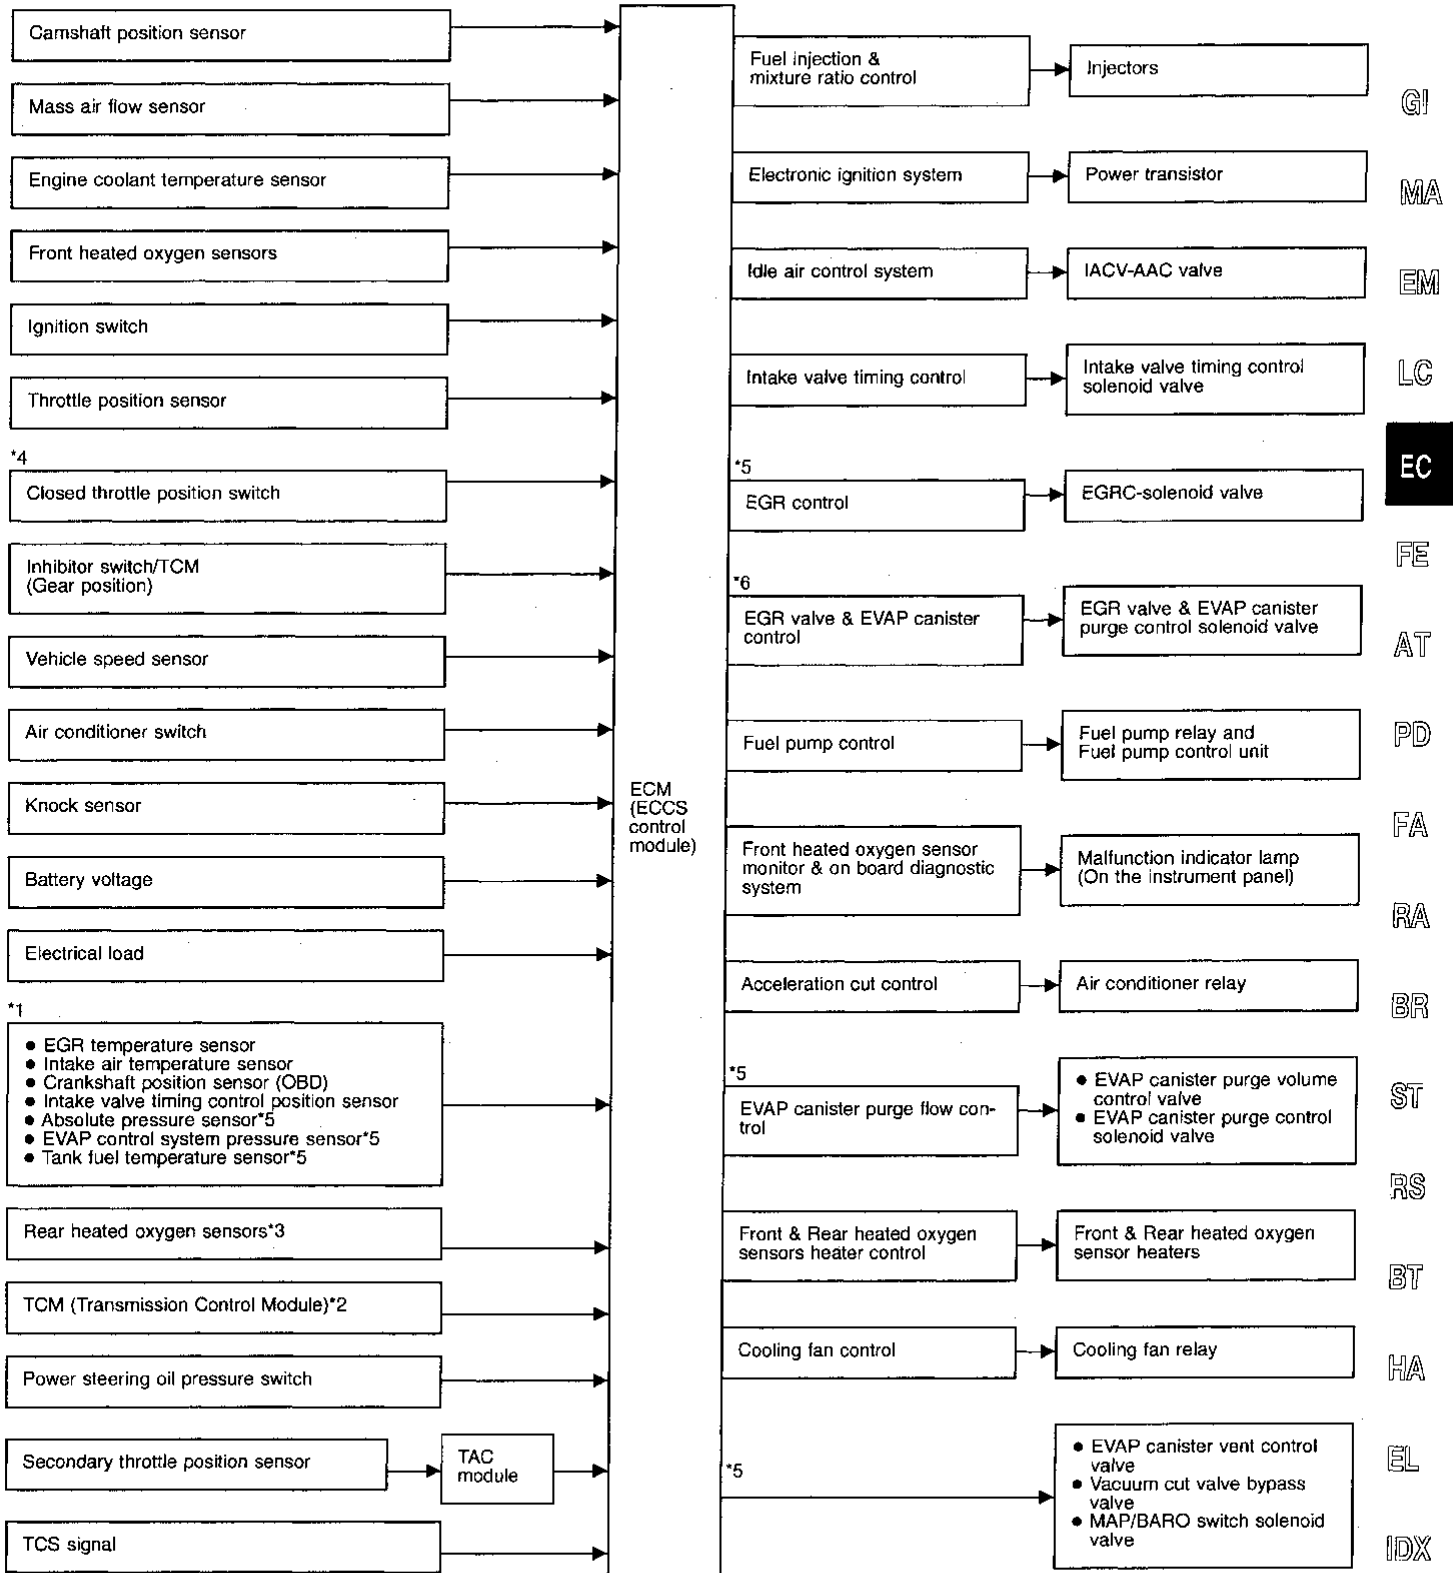

*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.

*2: The DTC related to A/T and gear position will be sent to ECM.

*3: This sensor is not used to control the engine system under normal conditions.


*4: This switch will operate in place of the throttle position sensor to control EVAP parts if the sensor malfunctions.

*5: For California

*6: Except for California


ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram

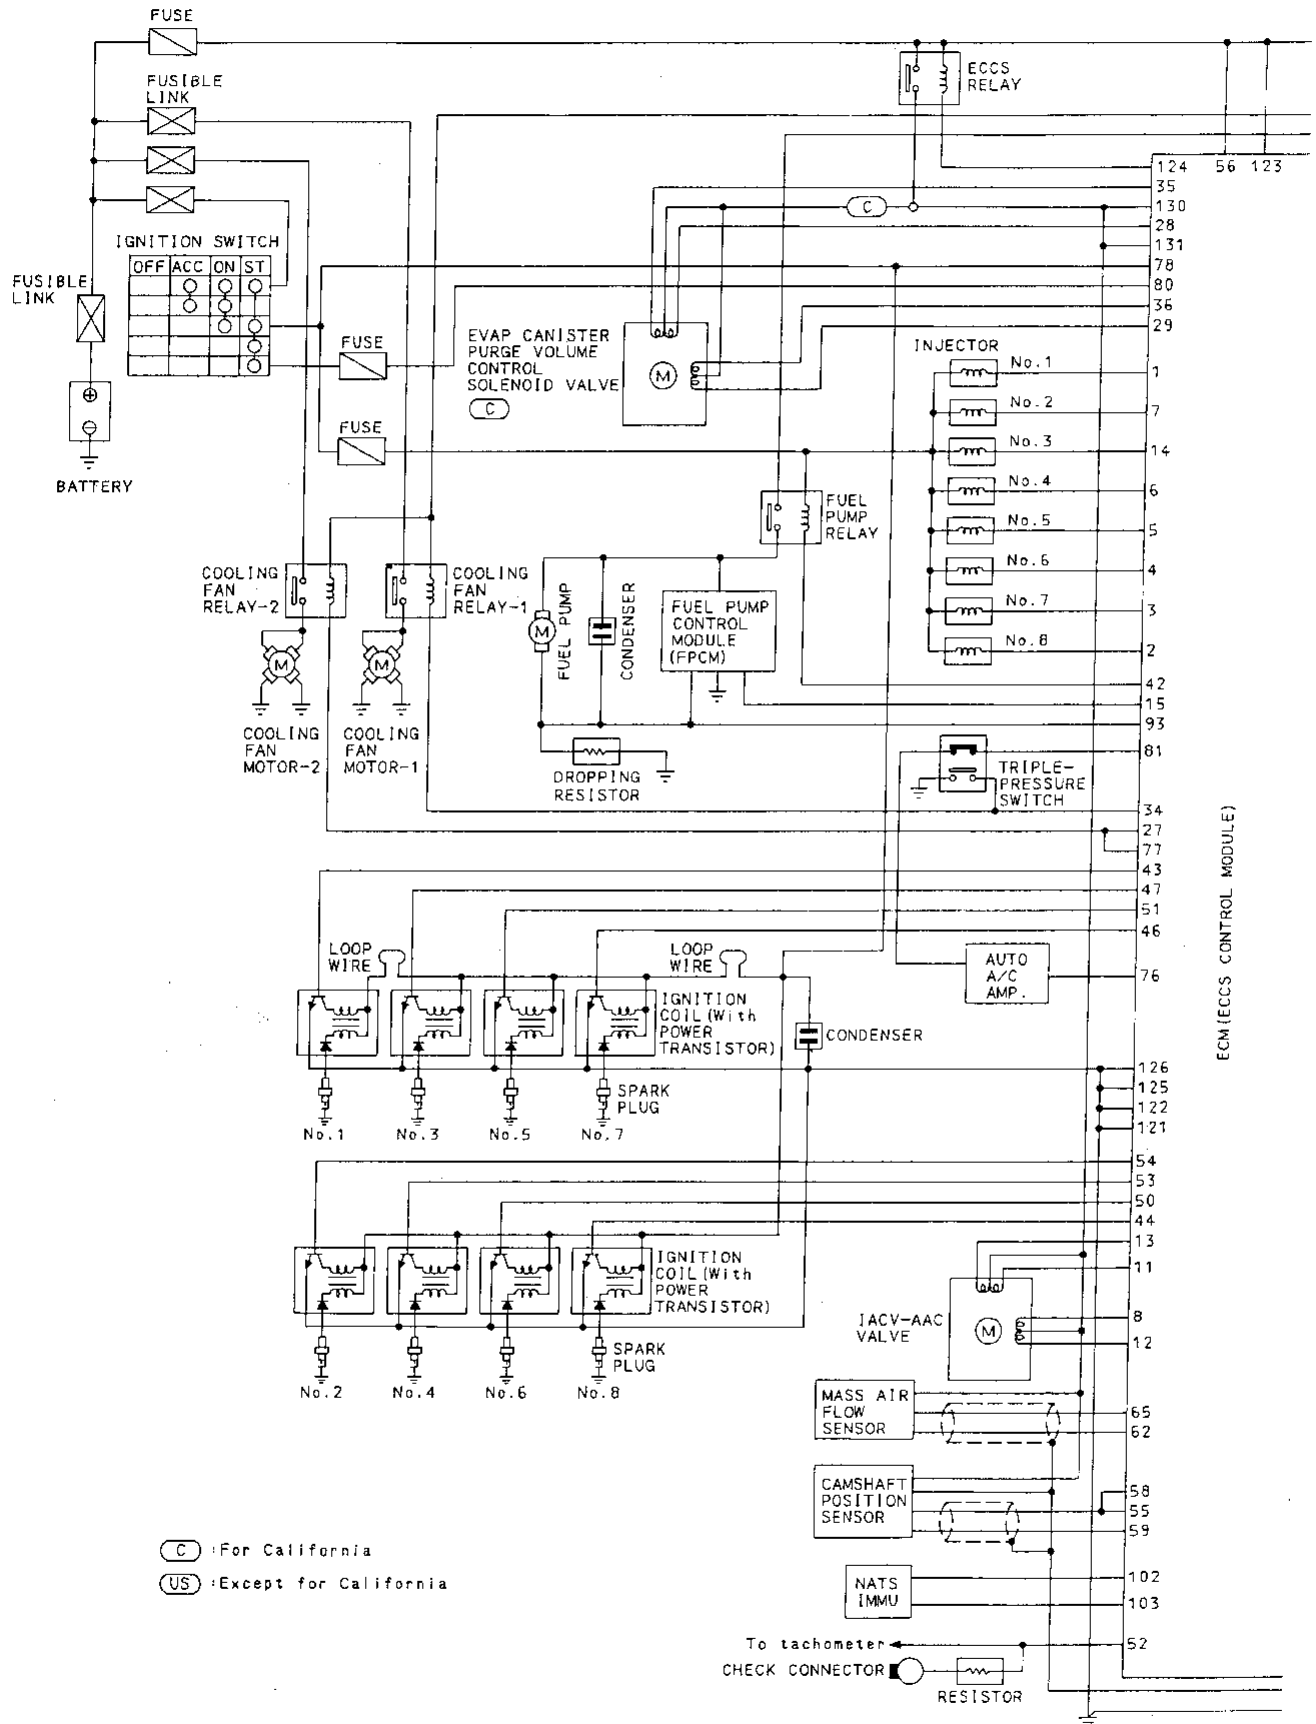

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram (Cont'd)

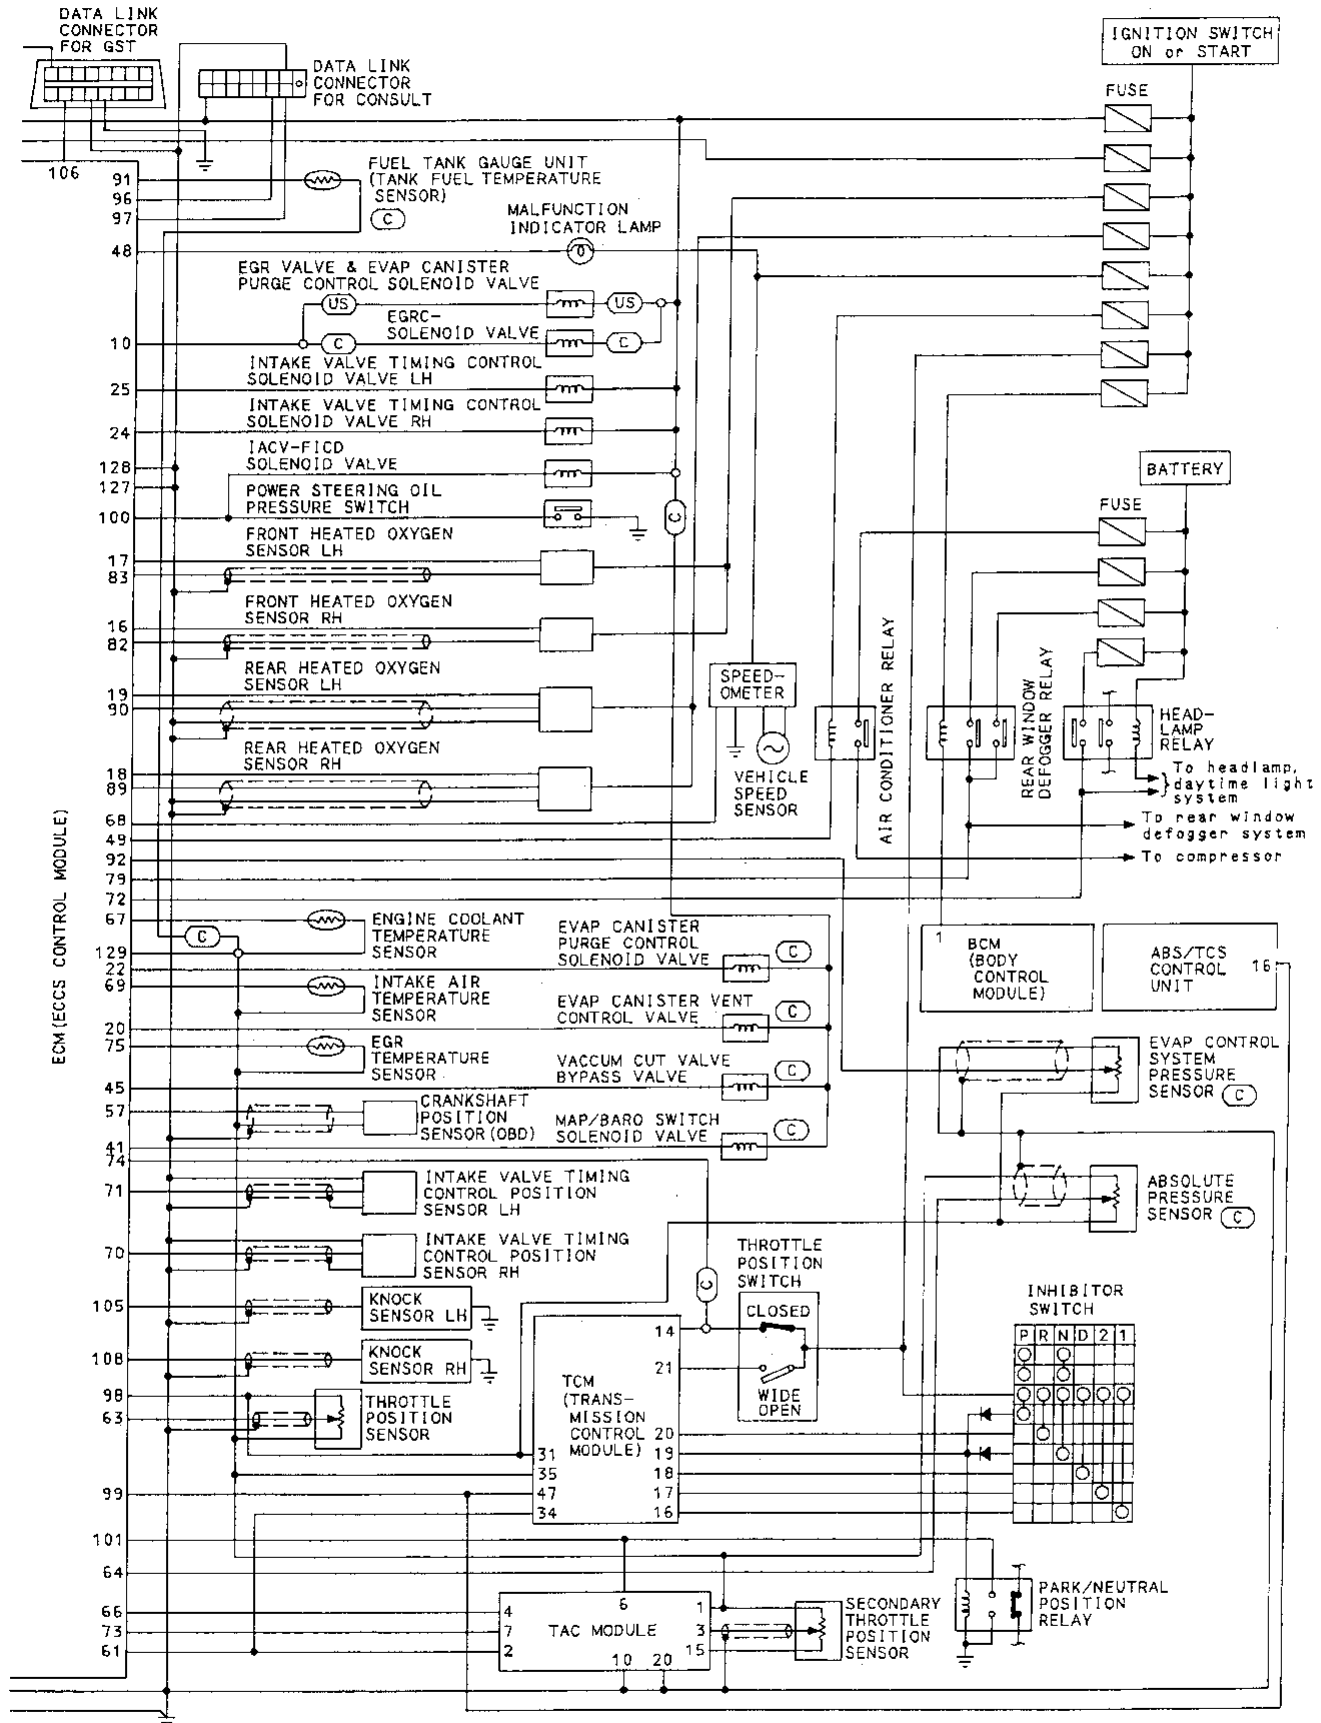


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

System Diagram

For California

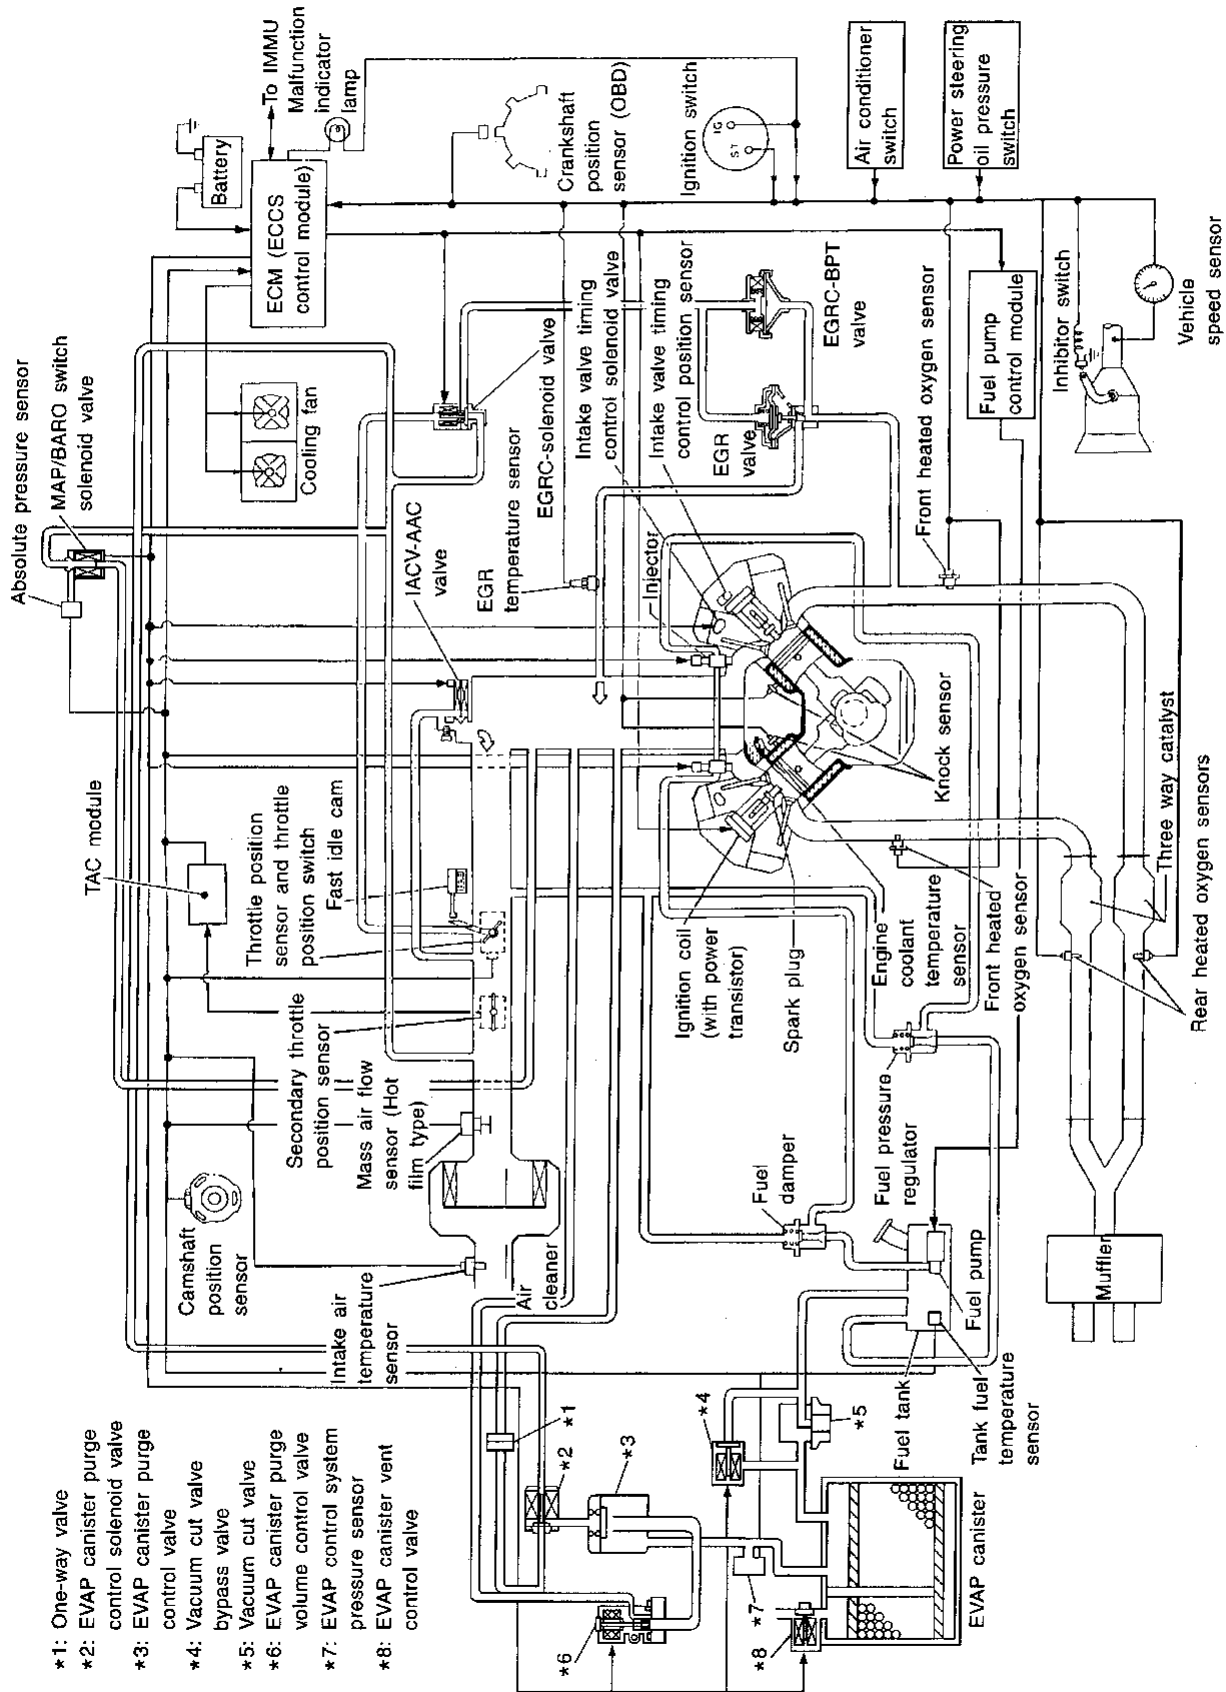


- *1: One-way valve
- *2: EVAP canister purge control solenoid valve
- *3: EVAP canister purge control valve
- *4: Vacuum cut valve bypass valve
- *5: Vacuum cut valve
- *6: EVAP canister purge volume control valve
- *7: EVAP control system pressure sensor
- *8: EVAP canister vent control valve

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

System Diagram (Cont'd)


Except for California

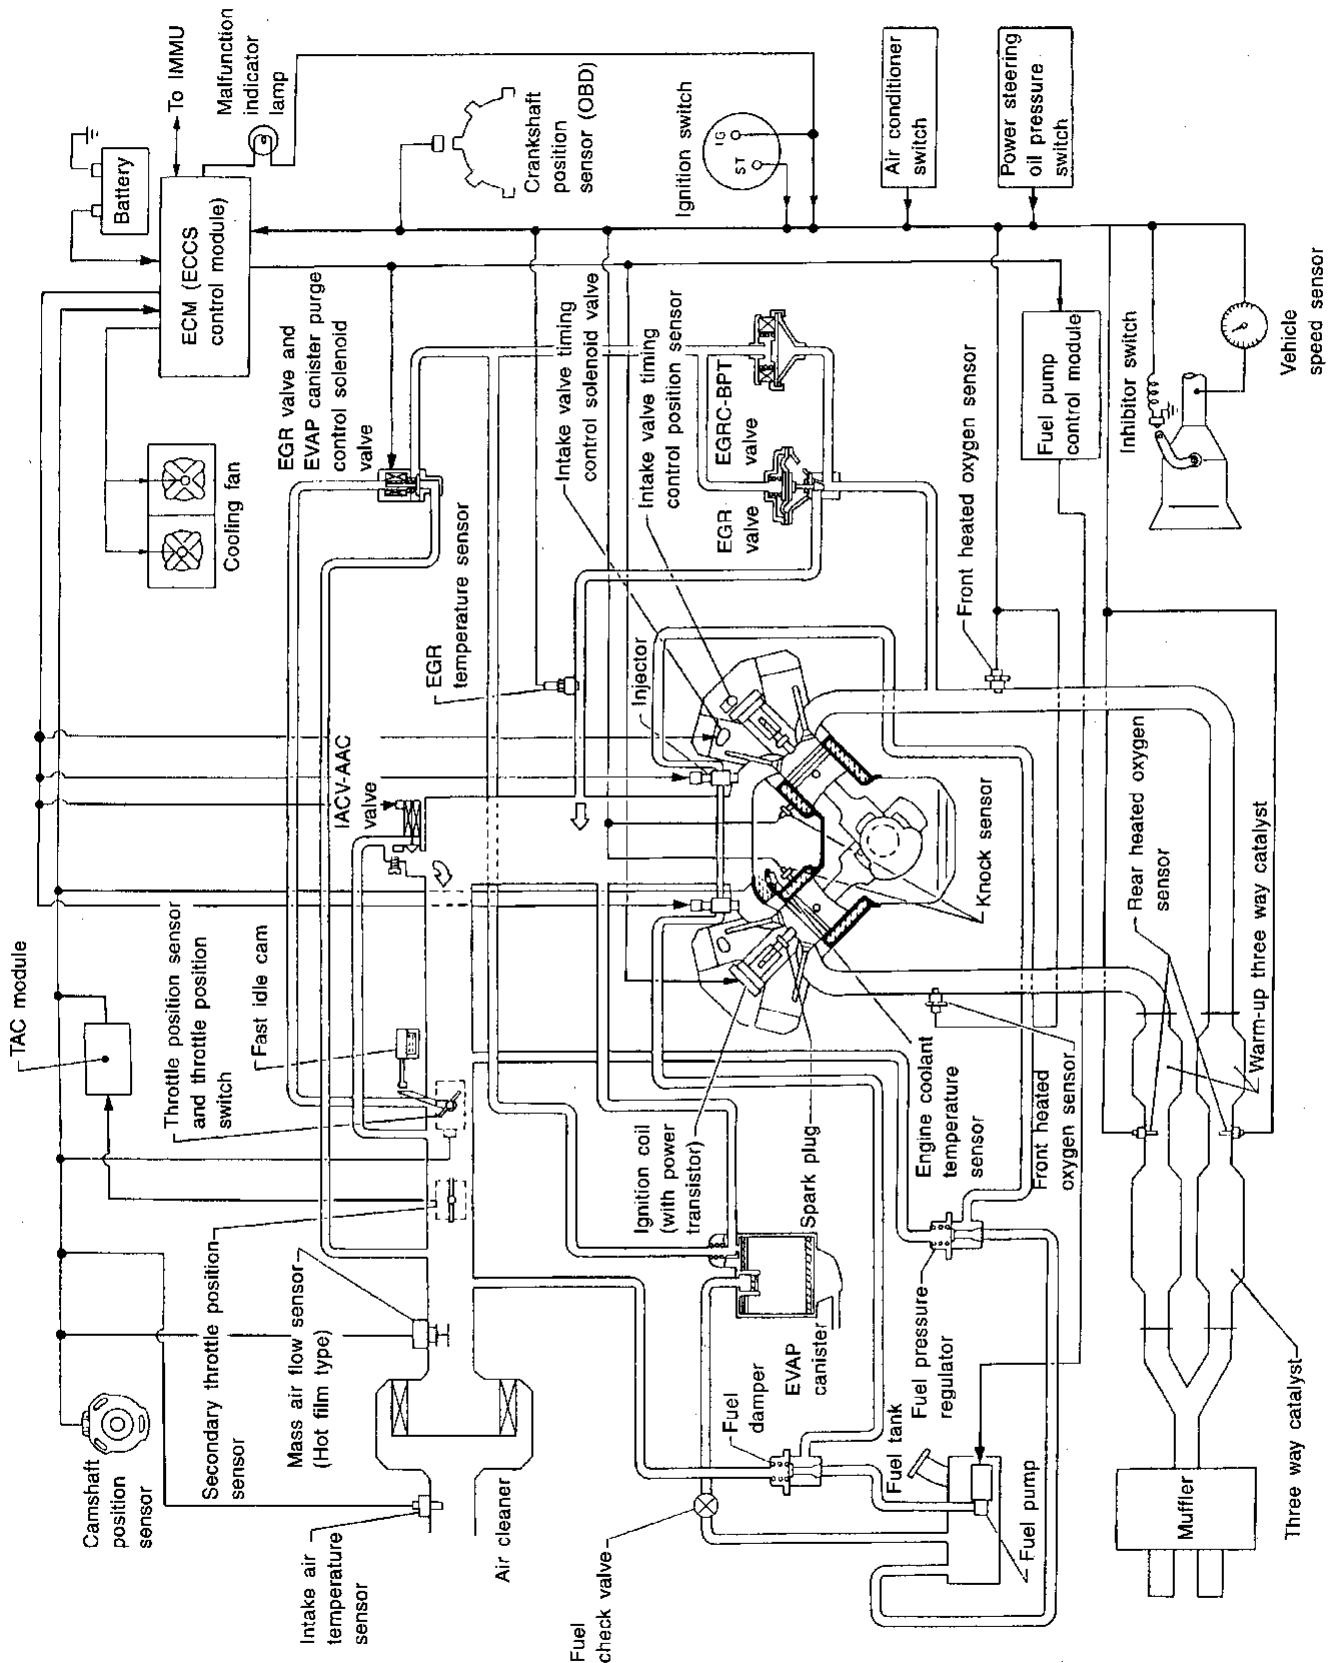

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- PS
- BT
- HA
- EL
- IDX

ENGINE AND EMISSION CONTROL OVERALL SYSTEM









ECCS Component Parts Location

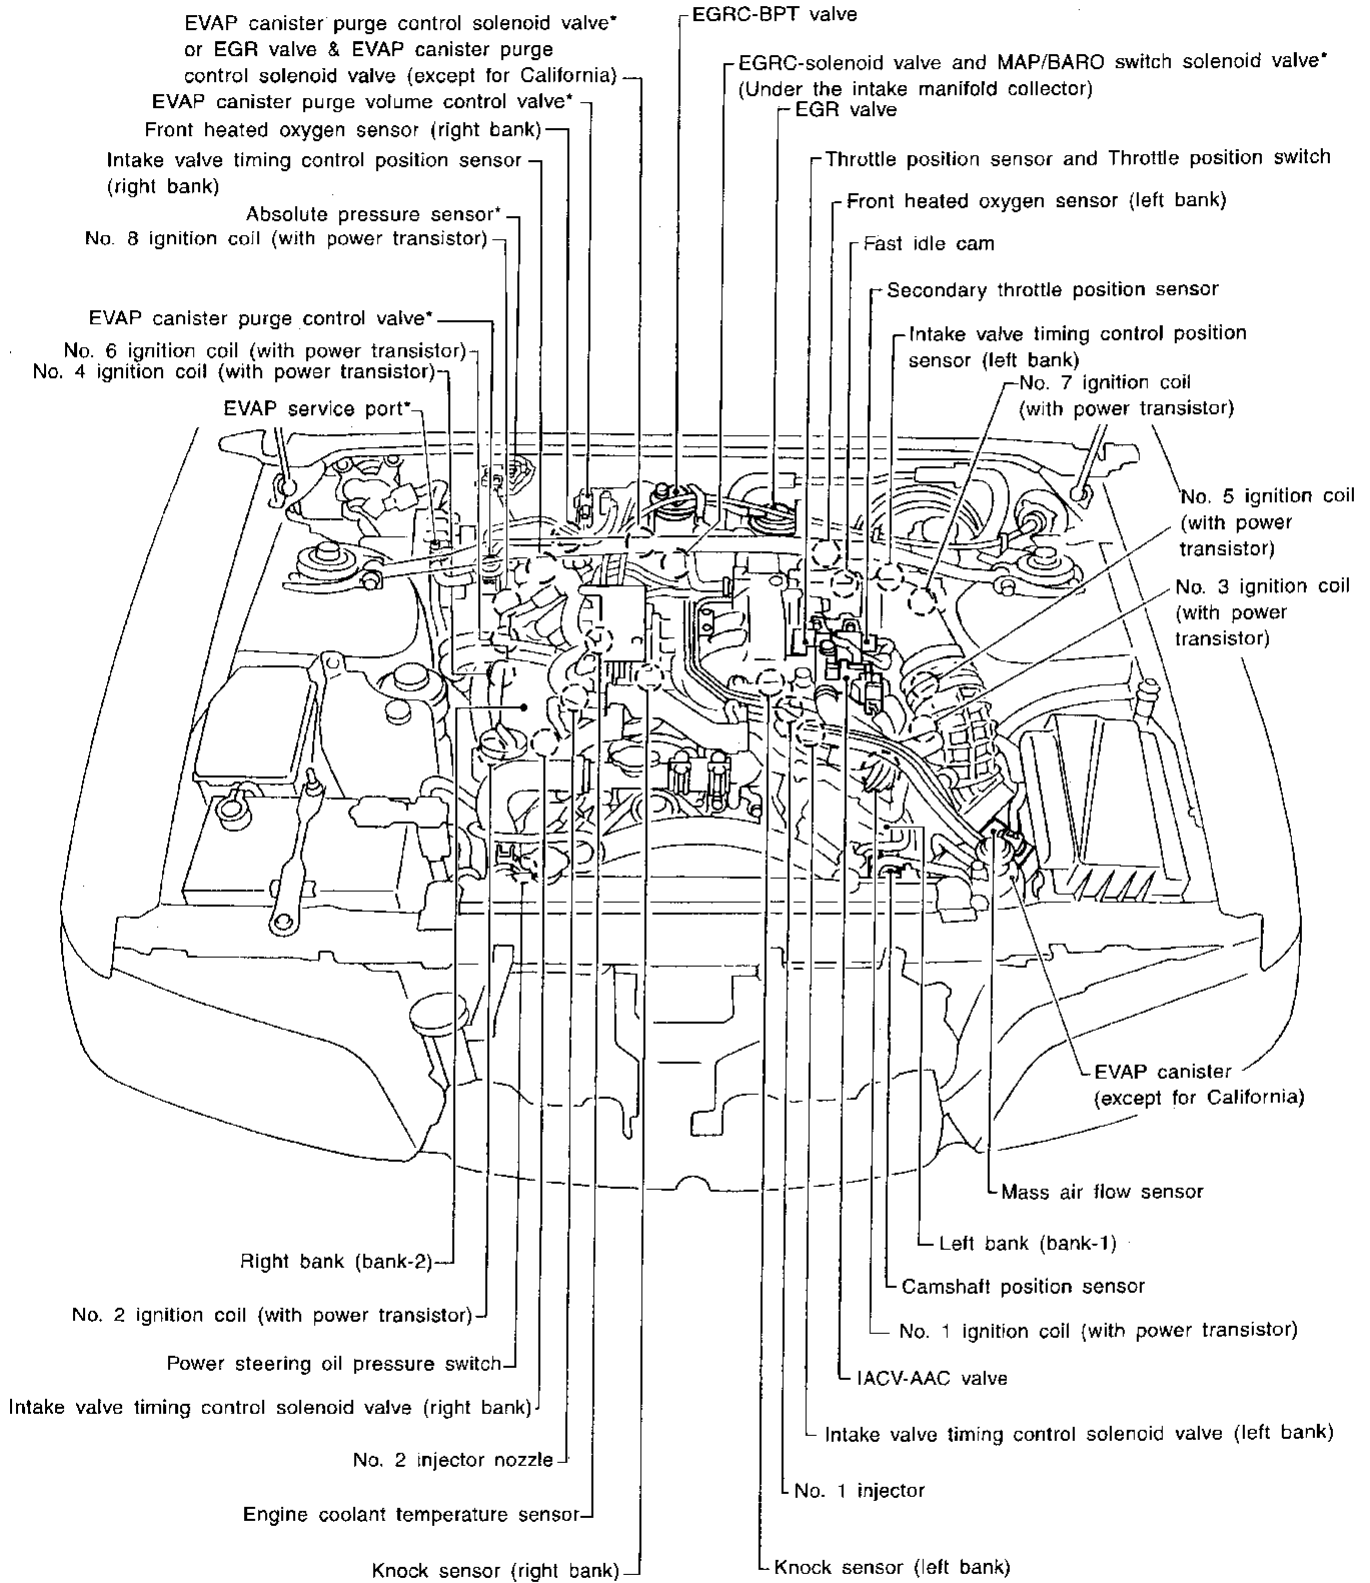

*: For California

ENGINE AND EMISSION CONTROL OVERALL SYSTEM


ECCS Component Parts Location (Cont'd)

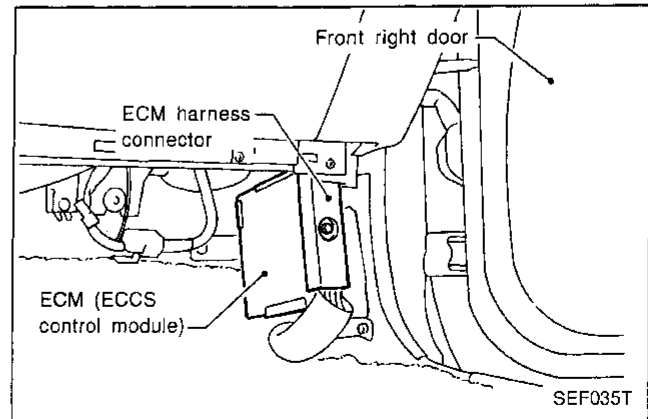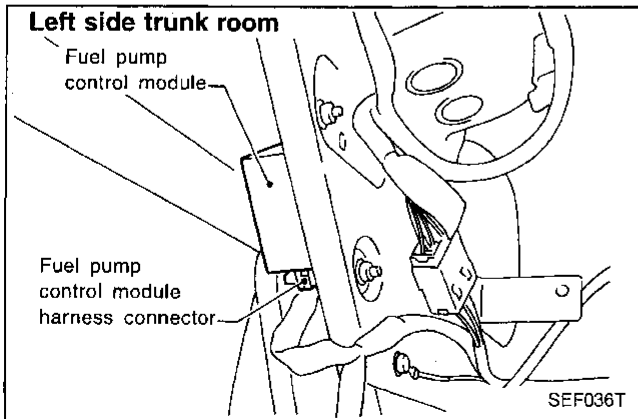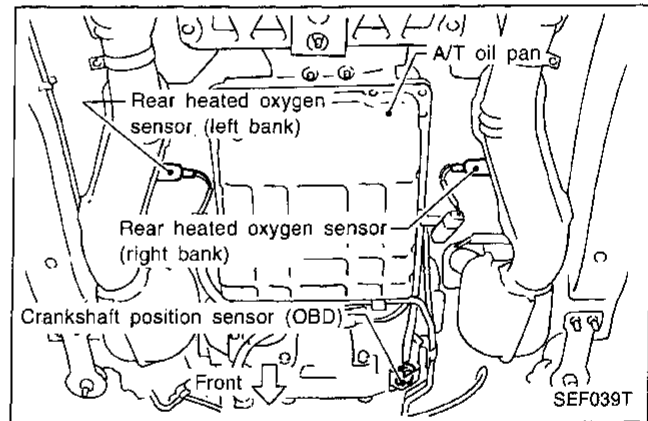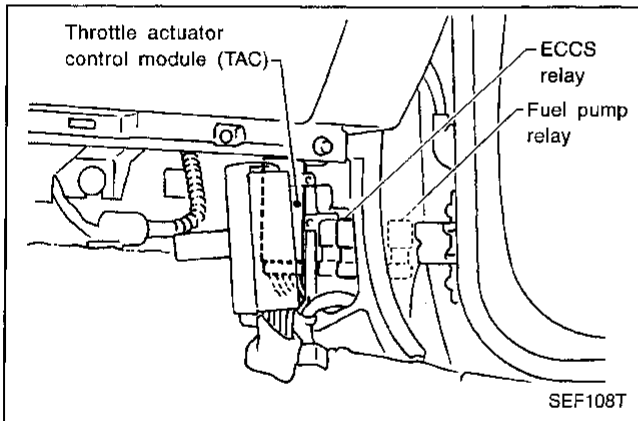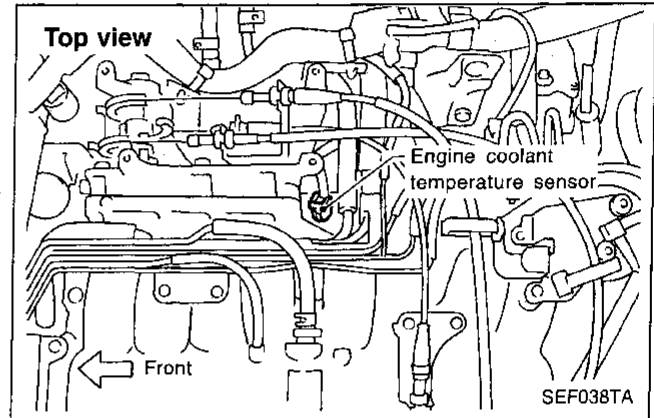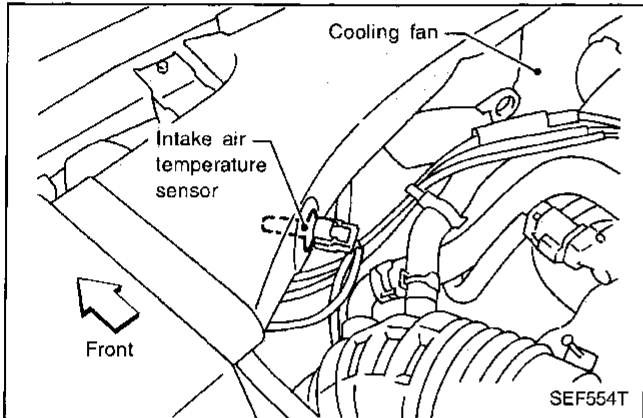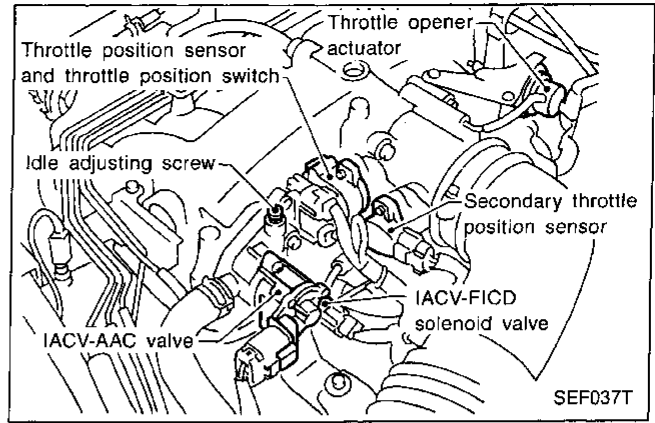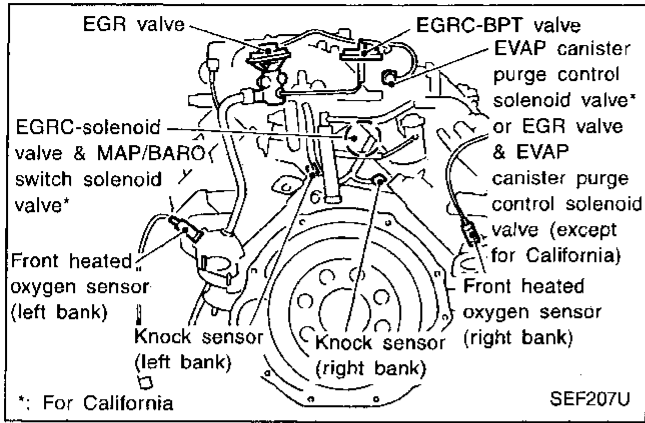

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

Vacuum Hose Drawing

For California

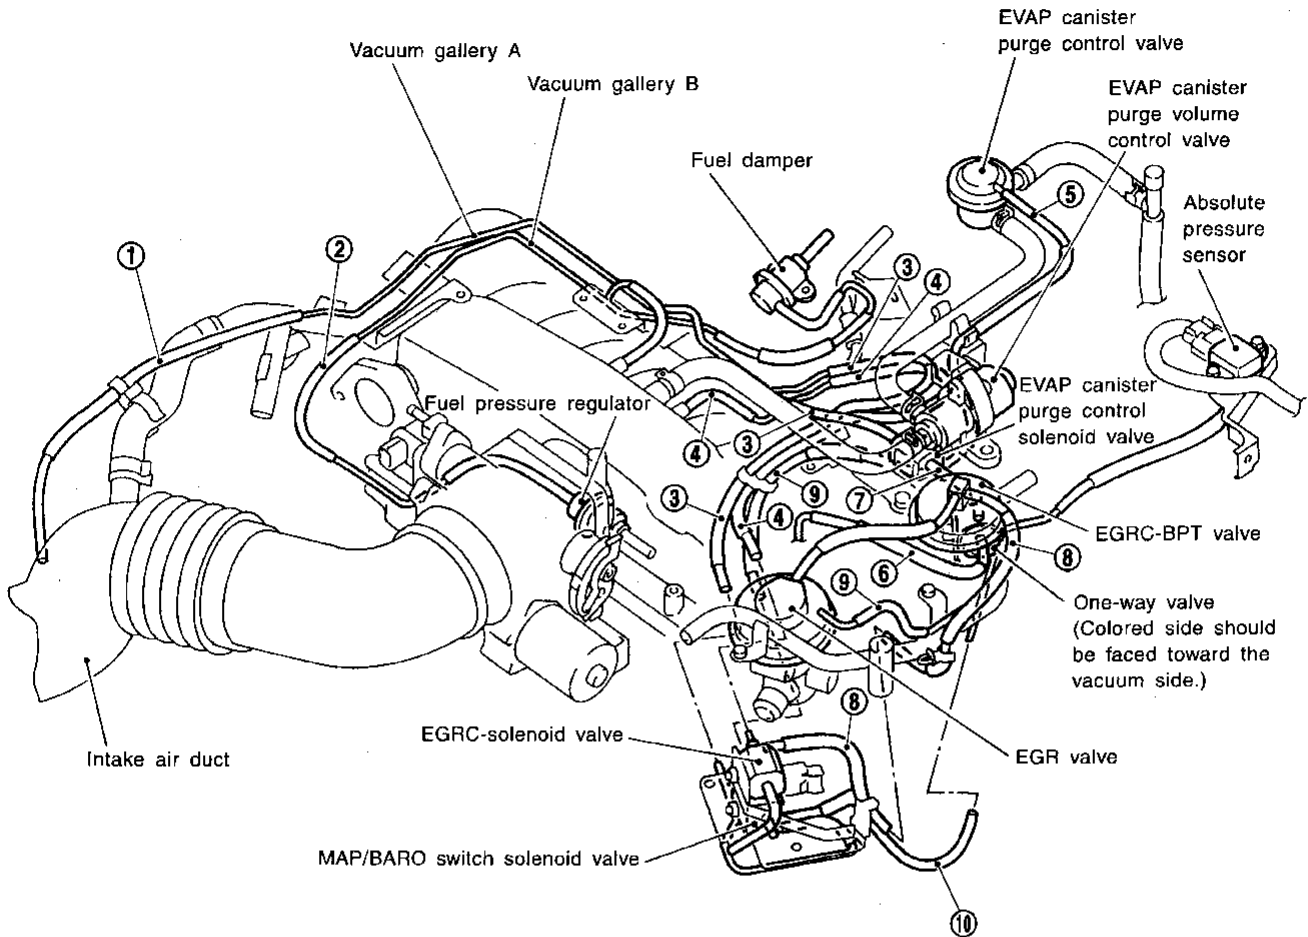

SEF208U

- | | |
|--|---|
| ① Intake air duct to vacuum gallery A | ⑥ Intake manifold collector to One-way valve |
| ② Fuel pressure regulator to vacuum gallery B | ⑦ One-way valve to EVAP canister purge control solenoid valve |
| ③ Vacuum gallery A to EGRC-solenoid valve, MAP/BARO switch solenoid valve and EVAP canister purge control solenoid valve | ⑧ EGRC-BPT valve to EGRC-solenoid valve |
| ④ Intake manifold collector to EGRC-solenoid valve | ⑨ Intake manifold collector to MAP/BARO switch solenoid valve |
| ⑤ EVAP canister purge control valve to EVAP canister purge control solenoid valve | ⑩ Absolute pressure sensor to MAP/BARO switch solenoid valve |


Refer to "System Diagram", EC-14, for vacuum control system.

Note: Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Vacuum Hose Drawing (Cont'd)

Except for California

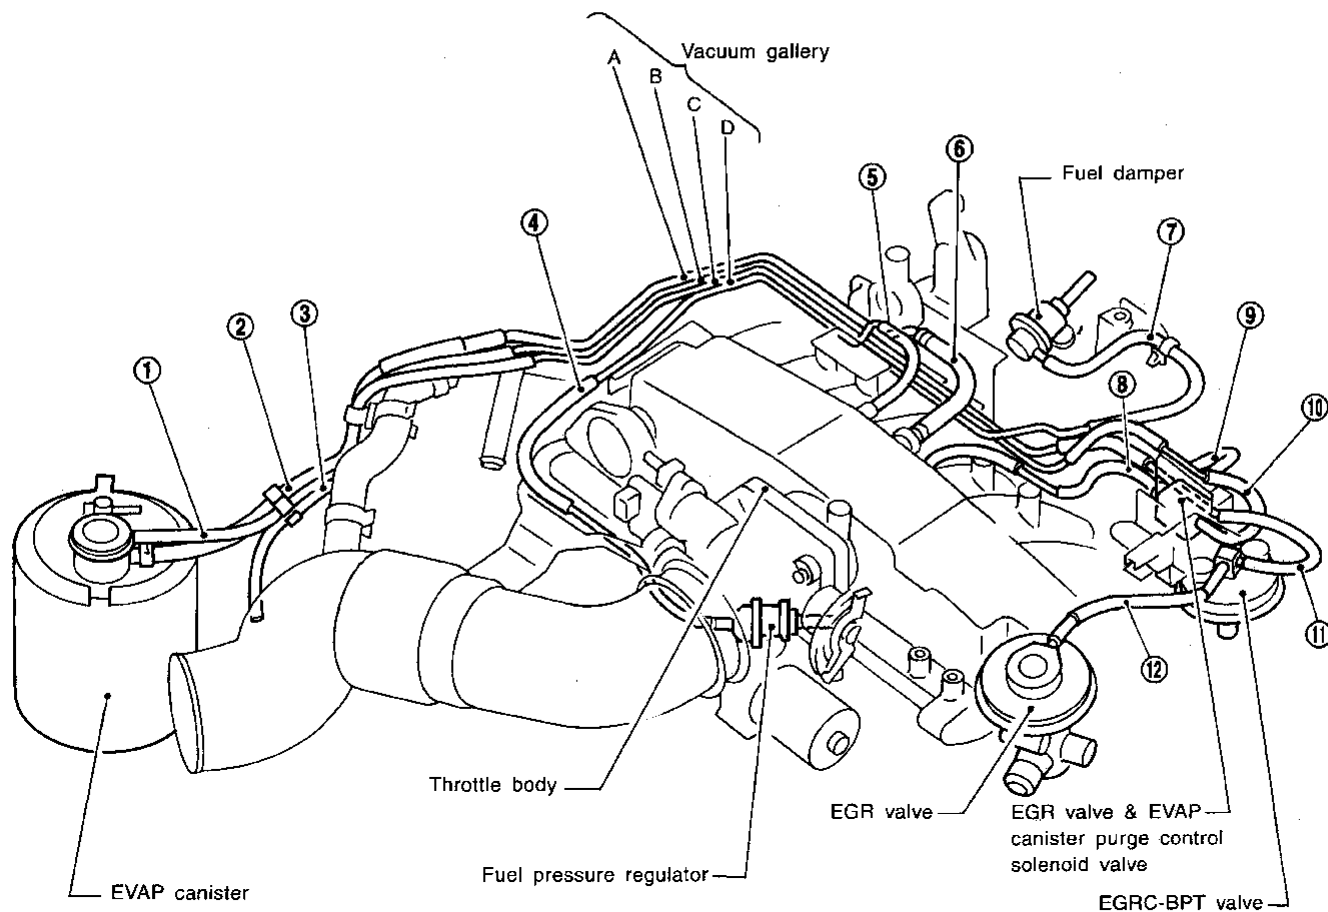

SEF209U


- | | |
|---|--|
| <ul style="list-style-type: none"> ① EVAP canister to vacuum gallery B ② EVAP canister to vacuum gallery A ③ Intake air duct to vacuum gallery C ④ Fuel pressure regulator to vacuum gallery D ⑤ Intake manifold collector to vacuum gallery D ⑥ Intake manifold collector to vacuum gallery A ⑦ Fuel damper to vacuum gallery D | <ul style="list-style-type: none"> ⑧ EGR valve and EVAP canister purge control solenoid valve to intake manifold collector ⑨ EGR valve and EVAP canister purge control solenoid valve to T-type vacuum pipe ⑩ EGR valve and EVAP canister purge control solenoid valve to vacuum gallery C via pipe and hose ⑪ EGRC-BPT valve to T-type vacuum pipe ⑫ EGRC-BPT valve to EGR valve |
|---|--|

Refer to "System Diagram", EC-15, for vacuum control system.

Note: Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

Multiport Fuel Injection (MFI) System

INPUT/OUTPUT SIGNAL LINE

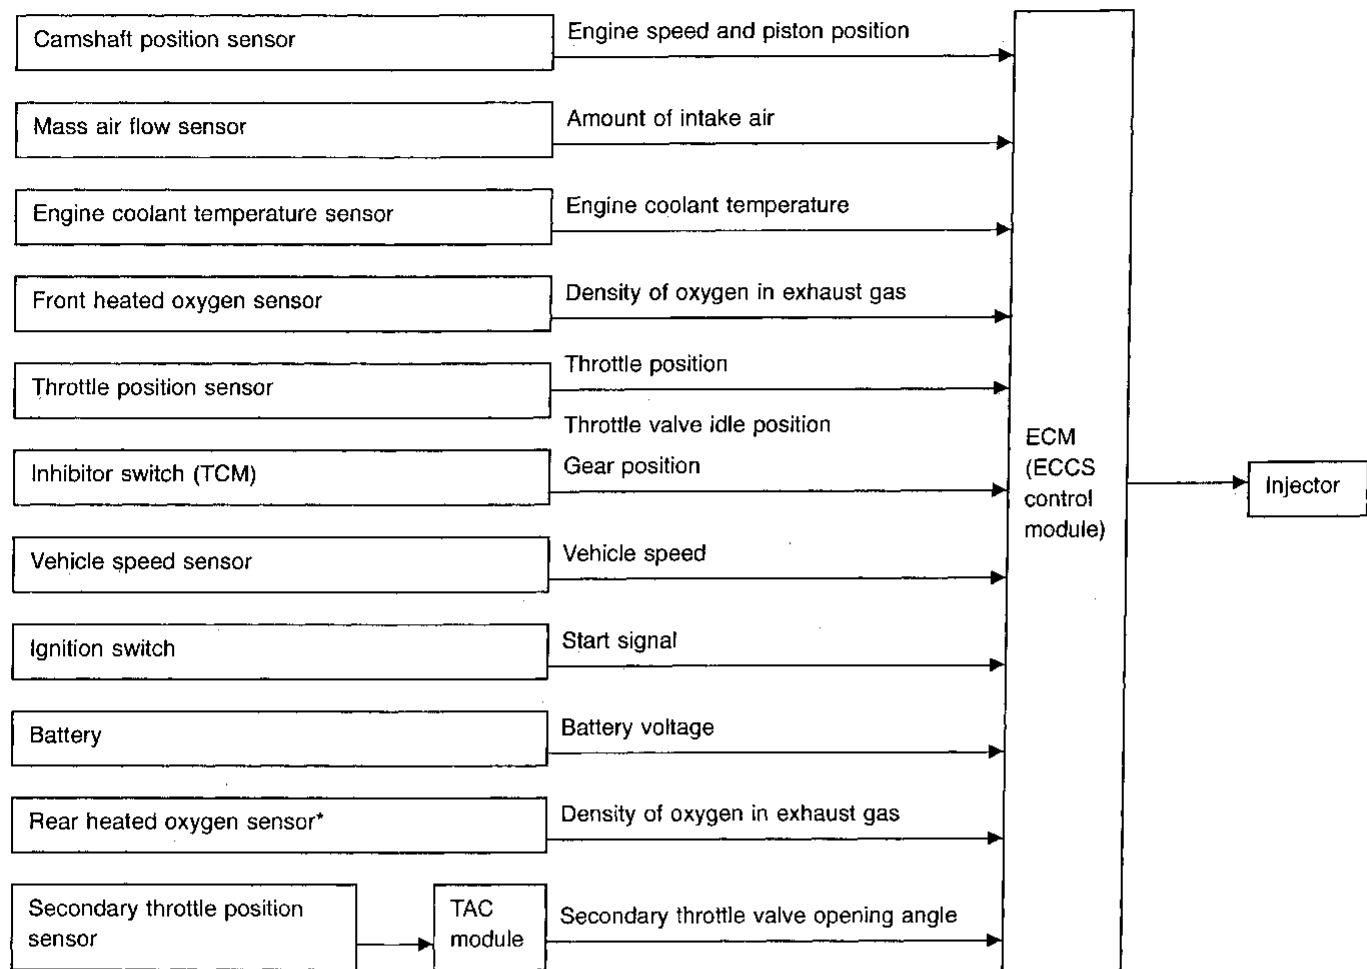

*: Under normal conditions, this sensor is not used to control the engine system.

BASIC MULTIPOINT FUEL INJECTION SYSTEM

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

The amount of fuel injected is compensated for to improve engine performance. This will be made under various operating conditions as listed below.


<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from "N" to "D"
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high speed operation
- Extremely high engine coolant temperature
- During TCS operation
- During high engine speed operation

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

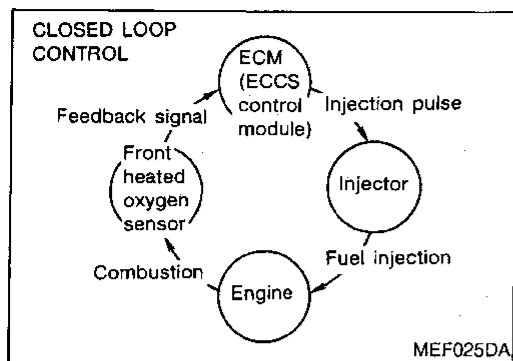

Multiport Fuel Injection (MFI) System (Cont'd)

MIXTURE RATIO FEEDBACK CONTROL

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a front heated oxygen sensor in the exhaust manifold to monitor if the engine is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about front heated oxygen sensor, refer to pages EC-156. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Rear heated oxygen sensor is located downstream of the three way catalyst. Even if the switching characteristics of the front heated oxygen sensor shift, the air-fuel ratio is controlled to stoichiometric by the signal from the rear heated oxygen sensor.

OPEN LOOP CONTROL

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of front heated oxygen sensor or its circuit
- Insufficient activation of front heated oxygen sensor at low engine coolant temperature
- High-engine coolant temperature
- During warm-up
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the front heated oxygen sensor. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both Manufacturing differences (i.e. mass air flow sensor hot film) and characteristic changes during operation (i.e. injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short-term fuel trim and long-term fuel trim.

"Short-term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the front heated oxygen sensor indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long-term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short-term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Multiport Fuel Injection (MFI) System (Cont'd)

FUEL INJECTION SYSTEM

Two types of systems are used.

Sequential multiport fuel injection system

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous multiport fuel injection system


Fuel is injected simultaneously into all six cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The six injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe mode (CPU) or crankshaft position sensor (REF) is operating.


FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

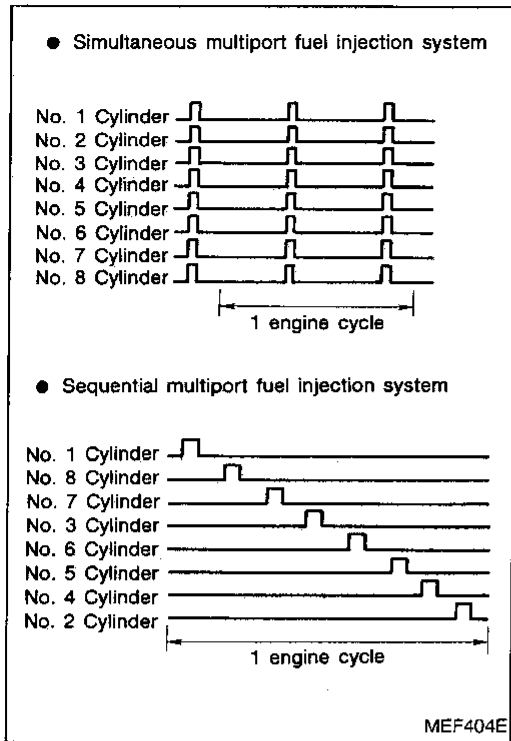

Electronic Ignition (EI) System

INPUT/OUTPUT SIGNAL LINE

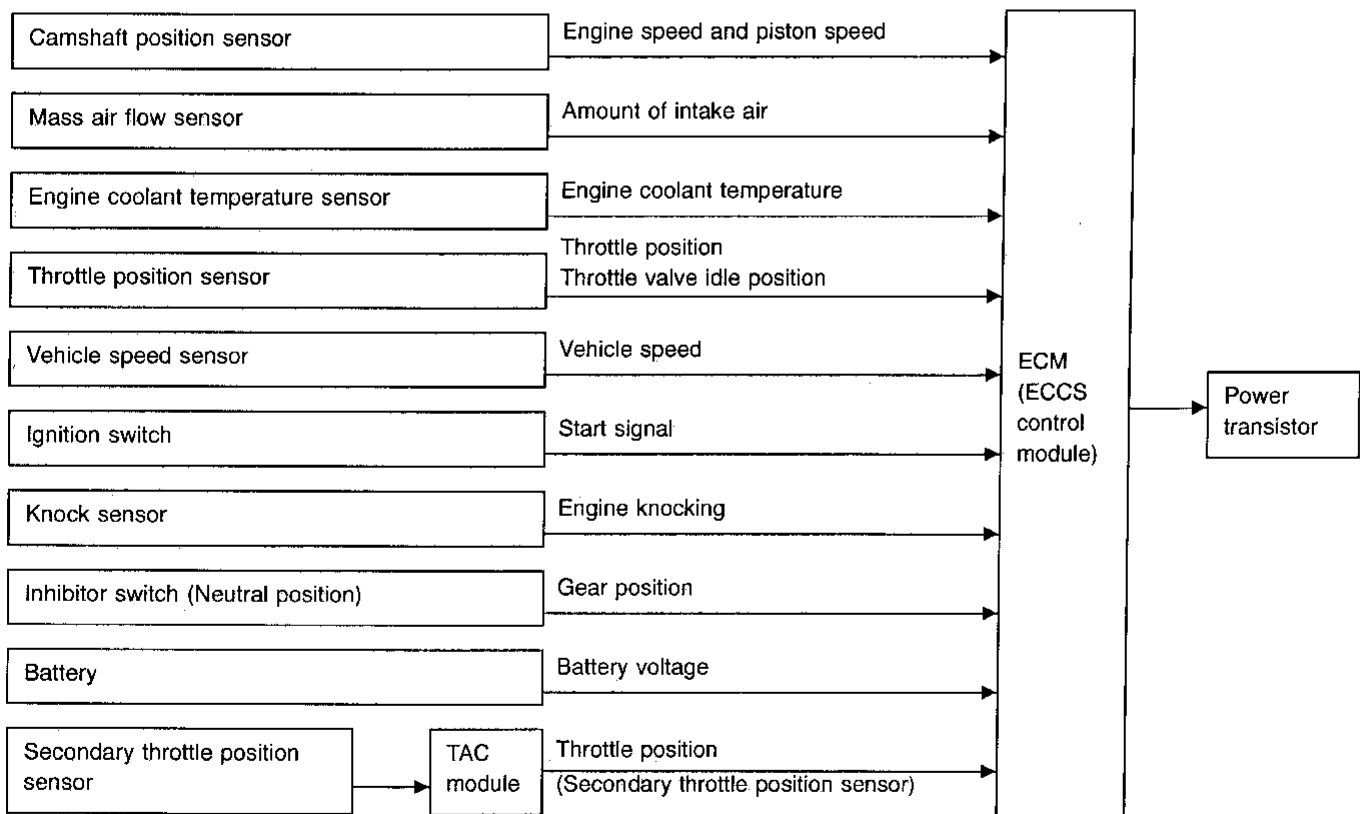

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION


Electronic Ignition (EI) System (Cont'd)

SYSTEM DESCRIPTION

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown below.

The ECM detects information such as the injection pulse width and camshaft position sensor signal. Responding to this information, ignition signals are transmitted to the power transistor.

e.g. N: 1,800 rpm, Tp: 1.50 msec
A °BTDC

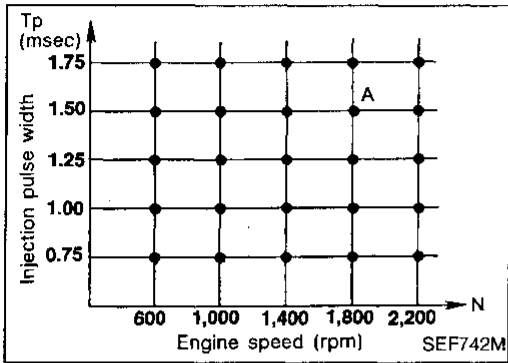

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.


- 1 At starting
- 2 During warm-up
- 3 At idle
- 4 Hot engine operation
- 5 At acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions.

If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM (ECCS control module). The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

INPUT/OUTPUT SIGNAL LINE

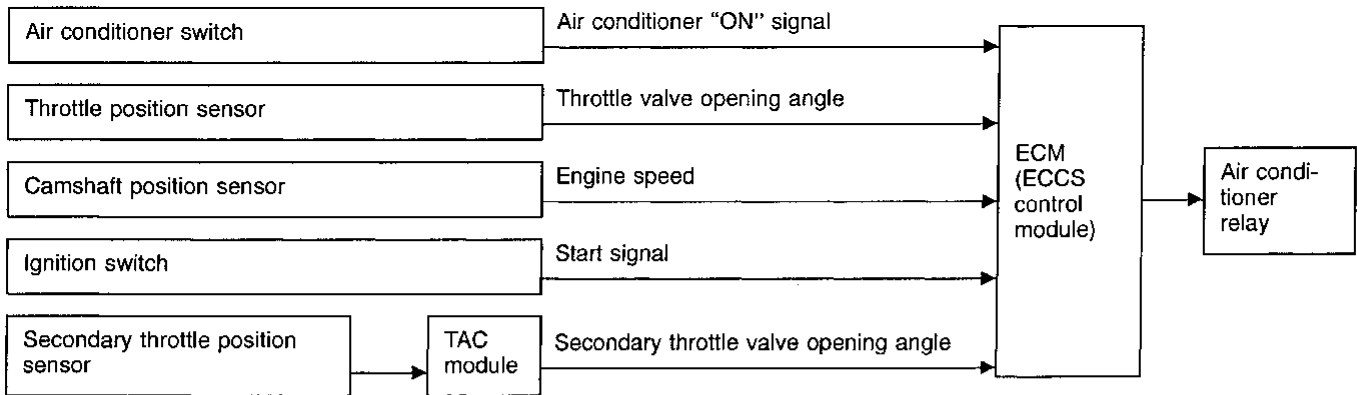

SYSTEM DESCRIPTION


This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- After a few seconds when the TCS has started operating.

Fuel Cut Control (at no load & high engine speed)

INPUT/OUTPUT SIGNAL LINE

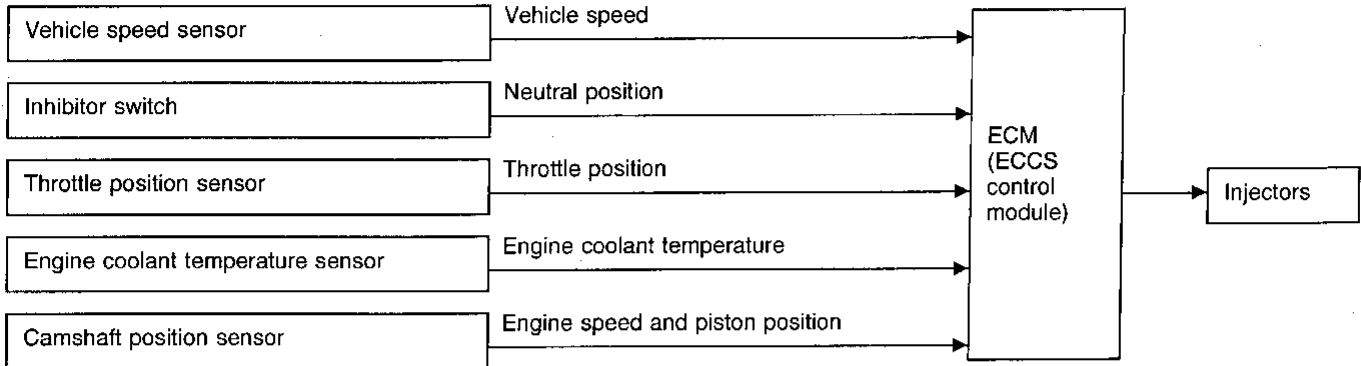

If the engine speed is above 1,400 rpm with no load (for example, in neutral and engine speed over 1,400 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.



Fuel cut will operate until the engine speed reaches 1,000 rpm, then fuel cut is cancelled.

NOTE:

This function is different than deceleration control listed under multiport fuel injection on EC-20.

EVAPORATIVE EMISSION SYSTEM

Description

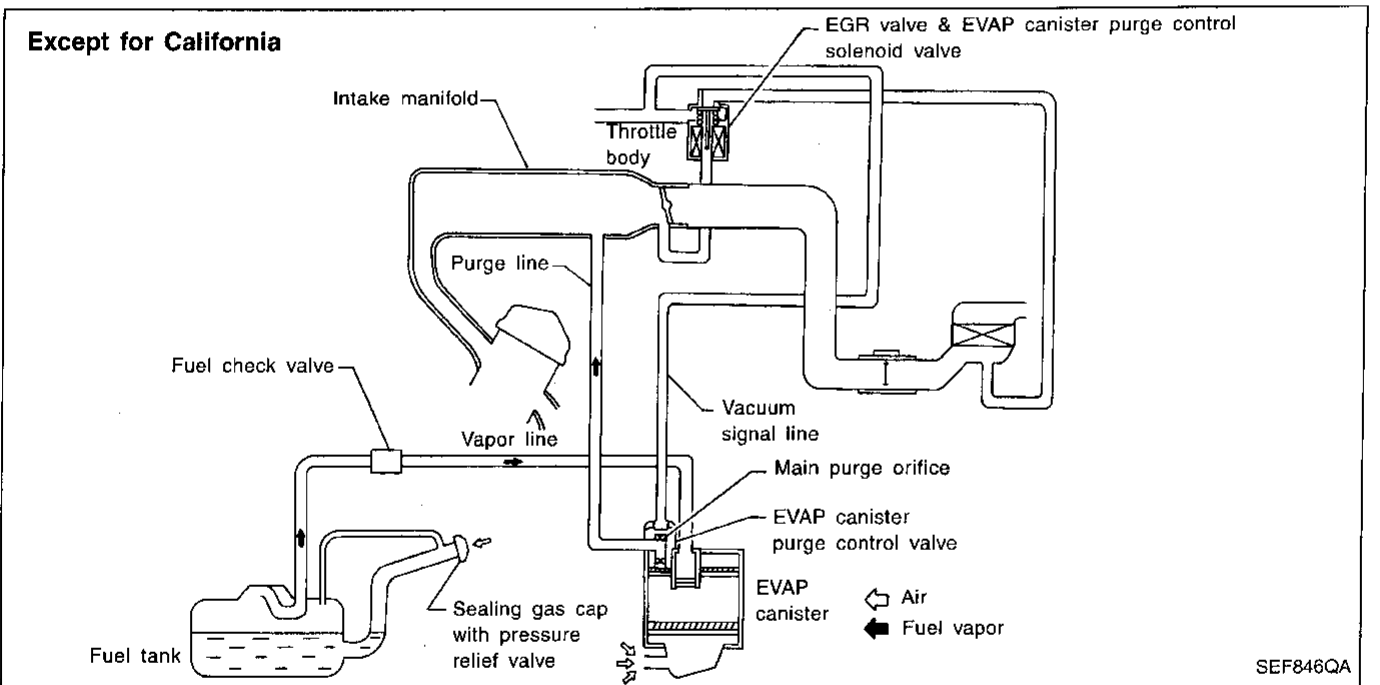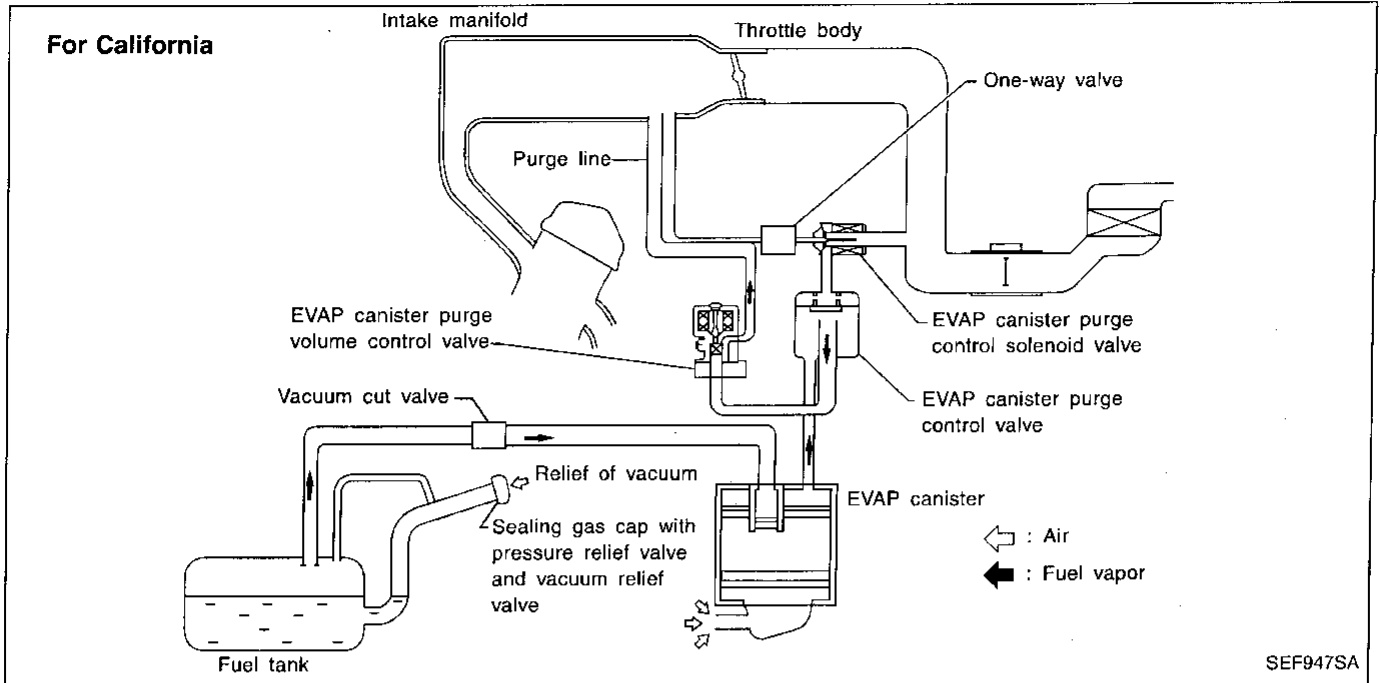

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor from sealed fuel tank is led into the EVAP canister when the engine is off. The fuel vapor is then stored in the EVAP canister. The EVAP canister retains the fuel vapor until the EVAP canister is purged by air.

When the engine is running, the air is drawn through the bottom of the EVAP canister. The fuel vapor will then be led to the intake manifold.

When the engine runs at idle, the EVAP canister purge control valve is closed. Only a small amount of vapor flows into the intake manifold through the constant purge orifice.

EVAPORATIVE EMISSION SYSTEM

Description (Cont'd)


As the engine speed increases and the throttle vacuum rises, the EVAP canister purge control valve opens. The vapor is sucked through both main purge and constant purge orifices.

Inspection

EVAP CANISTER (For California)

Check EVAP canister as follows:


1. Pinch the fresh air hose.
2. Blow air into port (A) and check that it flows freely out of port (B).

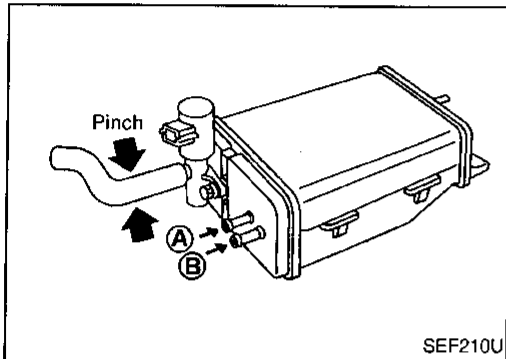

EVAP CANISTER (Except for California)

Check EVAP canister as follows:


1. Blow air in port (A) and check that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-100 to -150 mmHg, -3.94 to -5.91 inHg)]
3. Cover port (D) by hand.
4. Blow air in port (C) and check that air flows freely out of port (B).

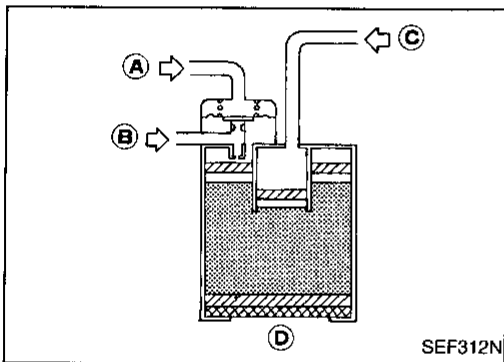

TIGHTENING TORQUE (For California)

Tighten EVAP canister as shown in the figure.


Make sure new O-ring is installed properly between EVAP canister and EVAP vent control valve.

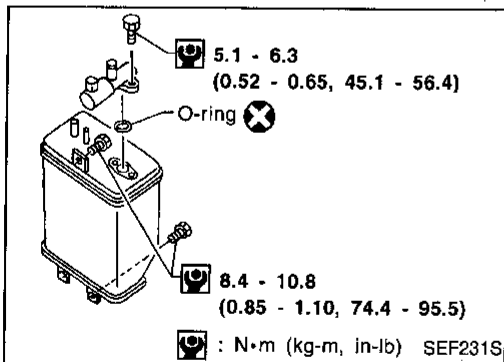

FUEL CHECK VALVE (Except for California)

Check valve operation

1. Blow air through connector on fuel tank side.
A considerable resistance should be felt and a portion of air flow should be directed toward the EVAP canister side.
2. Blow air through connector on EVAP canister side.
Air flow should be smoothly directed toward fuel tank side.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

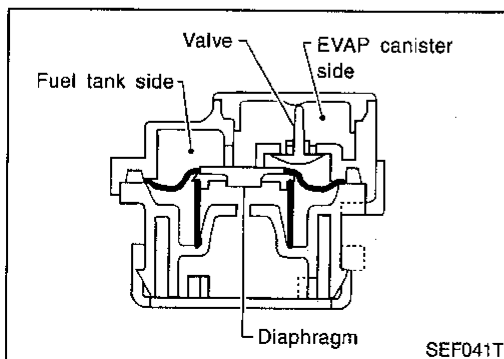

EVAPORATIVE EMISSION SYSTEM

Inspection (Cont'd)

FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

Pressure:

15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)



Vacuum:

-6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)

3. If out of specification, replace fuel filler cap as an assembly.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

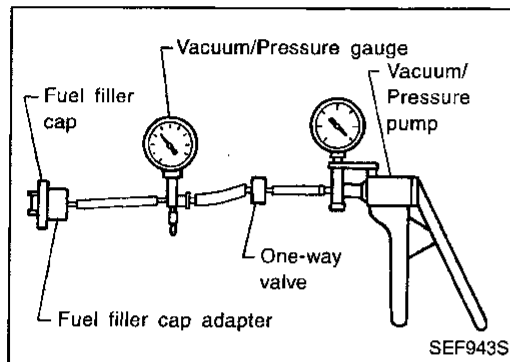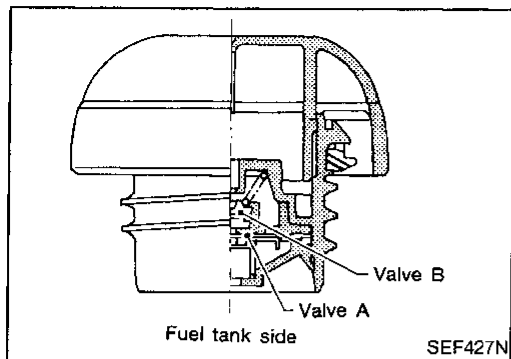

EGRC-SOLENOID VALVE (For California) OR EGR VALVE & EVAP CANISTER PURGE CONTROL SOLENOID VALVE (Except for California)

Refer to EC-381.

EVAP CANISTER PURGE CONTROL VALVE (For California)

Refer to EC-454.

VACUUM CUT VALVE AND VACUUM CUT VALVE BYPASS VALVE (For California)

Refer to EC-442.

EVAPORATIVE EMISSION (EVAP) CANISTER PURGE VOLUME CONTROL VALVE (For California)

Refer to EC-412.

EVAPORATIVE EMISSION (EVAP) CANISTER PURGE CONTROL SOLENOID VALVE (For California)

Refer to EC-454.

TANK FUEL TEMPERATURE SENSOR (For California)

Refer to EC-243.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL




IDX

EVAPORATIVE EMISSION SYSTEM

Inspection (Cont'd)

EVAP SERVICE PORT

Positive pressure is delivered to the EVAP system through the EVAP service port. If fuel vapor leakage in the EVAP system occurs, use a leak detector to locate the leak.

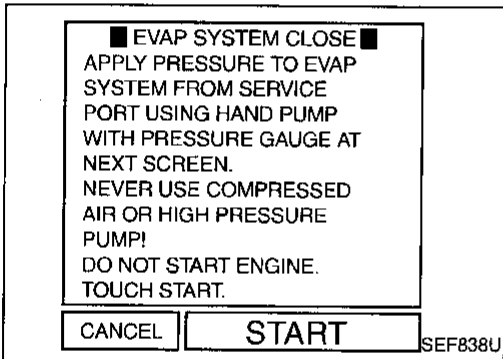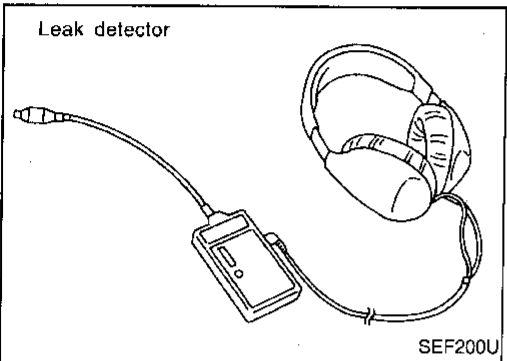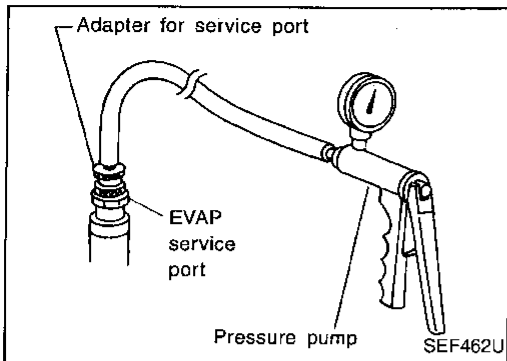

CAUTION:

- Never use compressed air or a high pressure pump.

NOTE:

- Improper installation of adapter to the service port may cause a leak.



1. Attach the adapter securely to the EVAP SERVICE port.
2. Also attach the pressure pump and hose.
3. Turn ignition switch "ON".
4. Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT MODE" with CONSULT.
5. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
6. Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
7. Remove adapter and hose with pressure pump.
8. Locate the leak using a leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.

OR

CAUTION:



- Never use compressed air or a high pressure pump.

NOTE:

- Improper installation of service port may cause a adapter to the leak.




1. Attach the adapter securely to the EVAP service port and pressure pump with pressure gauge to the EVAP service port.
2. Apply battery voltage to between the terminals of both EVAP canister vent control valve and vacuum cut valve bypass valve to make a closed EVAP system.
3. To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 - 2.76 kPa (0.014 - 0.028 kg/cm², 0.2 - 0.4 psi)
4. Remove adapter and hose with pressure pump.
5. Locate the leak using a leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.

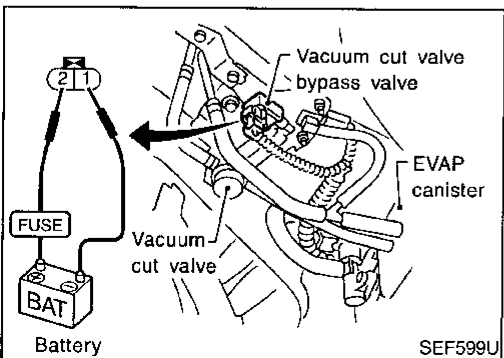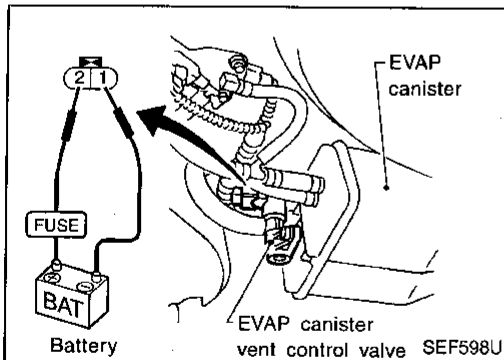

EVAPORATIVE EMISSION SYSTEM

Evaporative Emission Line Drawing (For California)

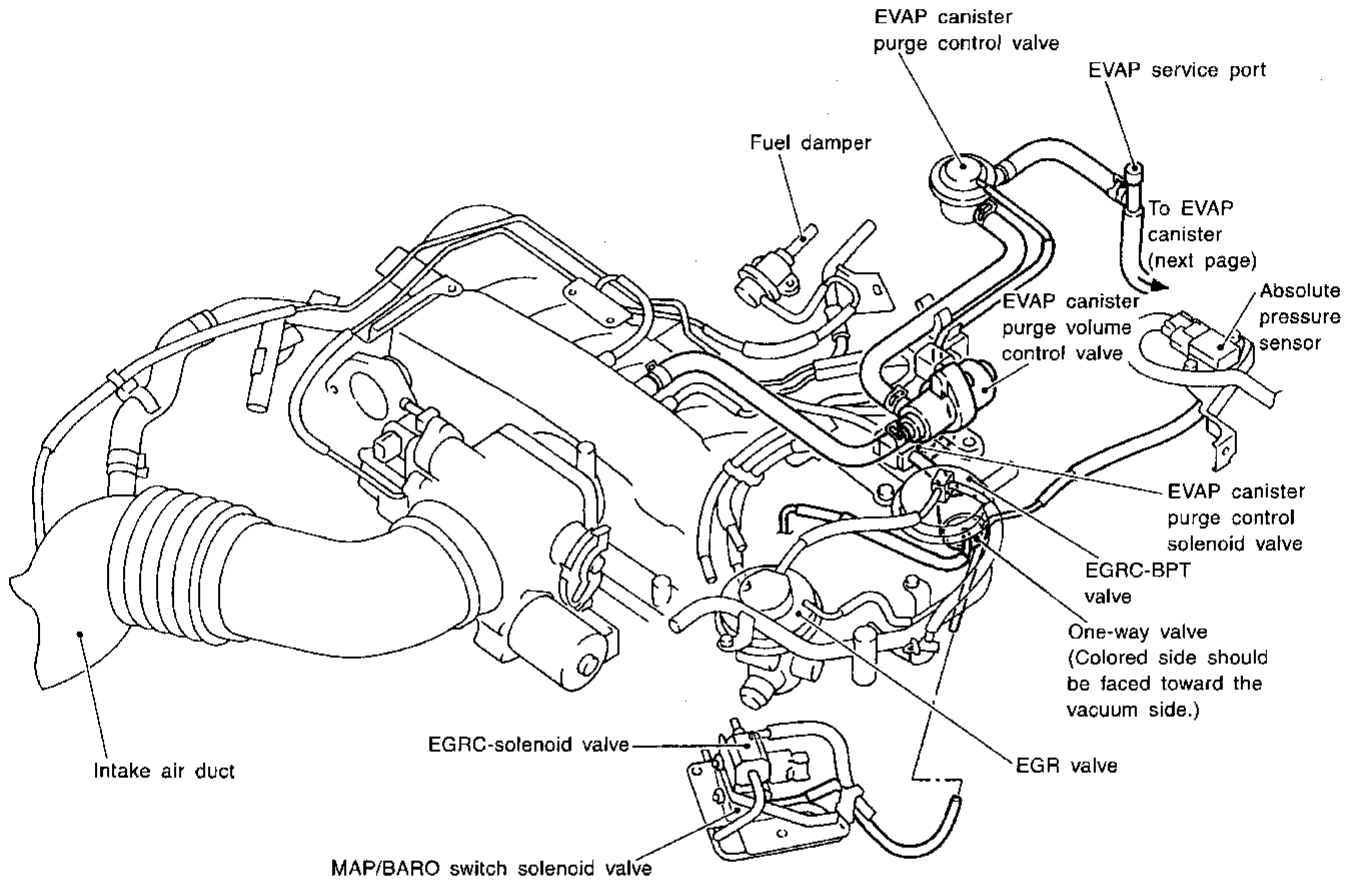



SEF211U

Note: Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

EVAPORATIVE EMISSION SYSTEM

Evaporative Emission Line Drawing (For California) (Cont'd)

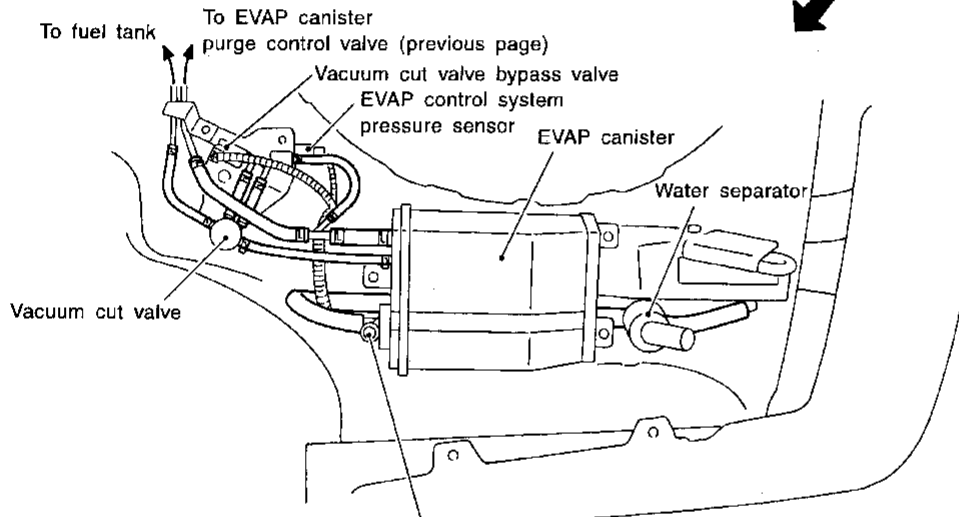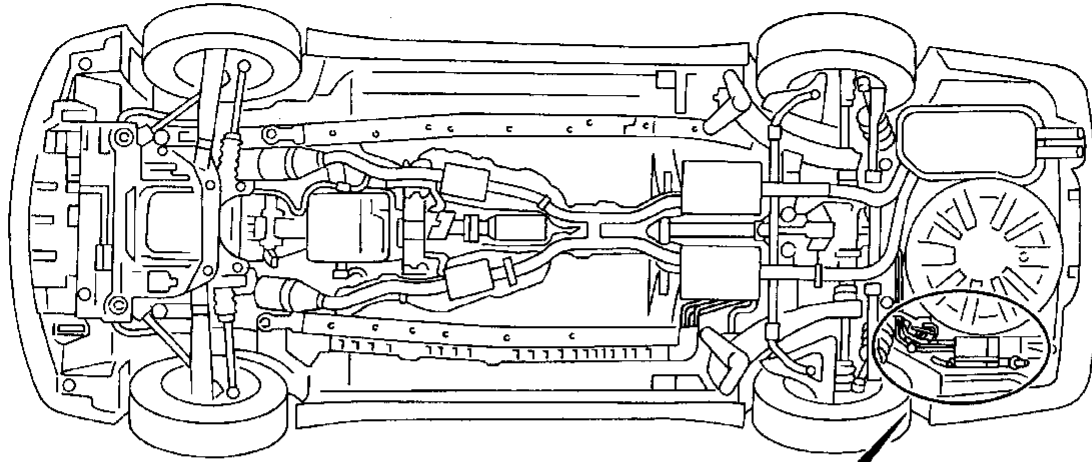

Top view

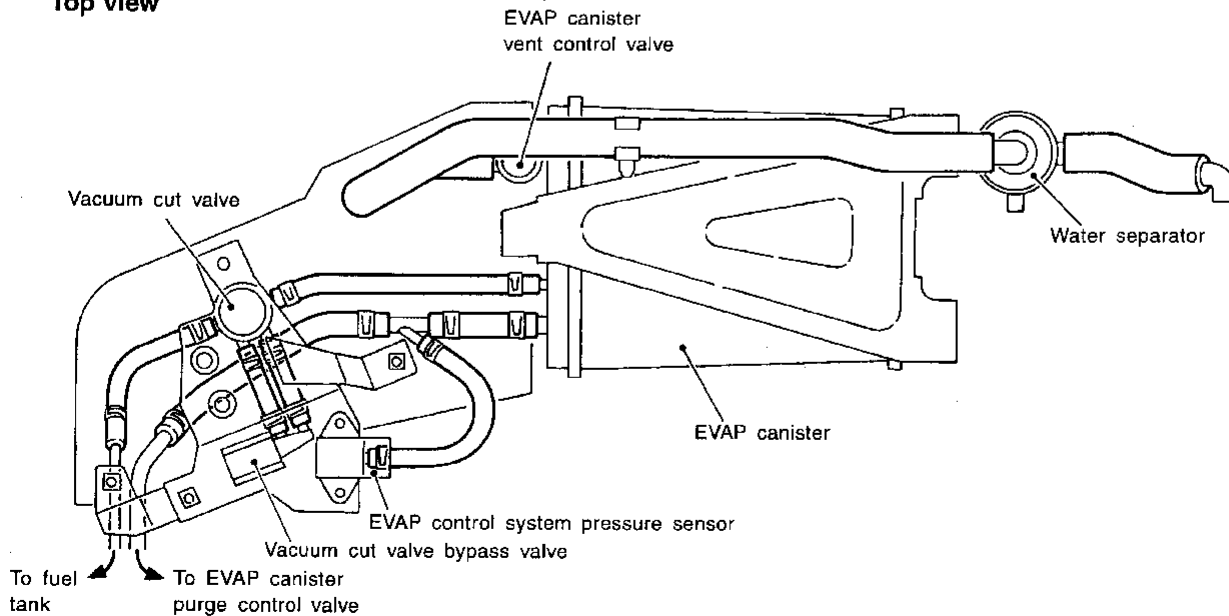

POSITIVE CRANKCASE VENTILATION

Description

This system returns blow-by gas to both the intake manifold and air cleaner.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.

During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.


Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is then drawn from the air cleaner, through the hose connecting air cleaner to rocker cover, into the crankcase.


Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve, and its flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by some of the flow will go through the hose connection to the air cleaner under all conditions.

GI
MA
EM

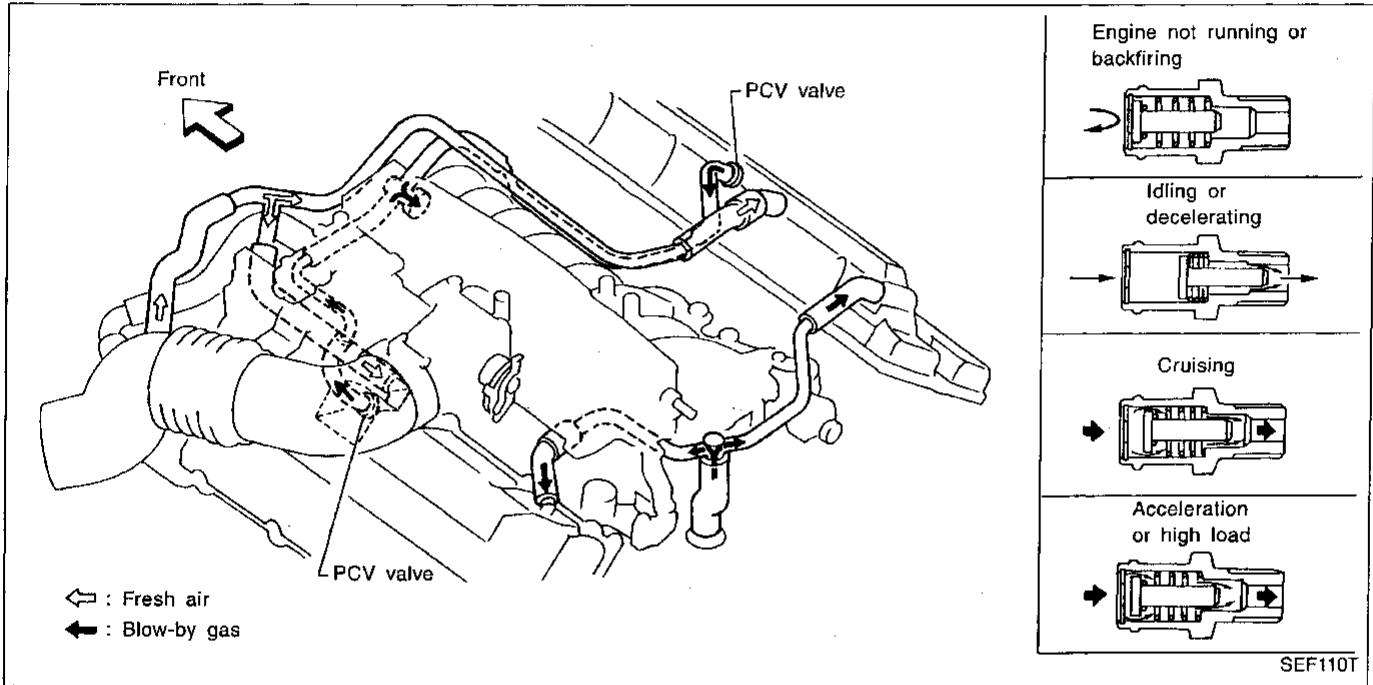

LC
EC
FE
AT
PD
FA
RA
BR

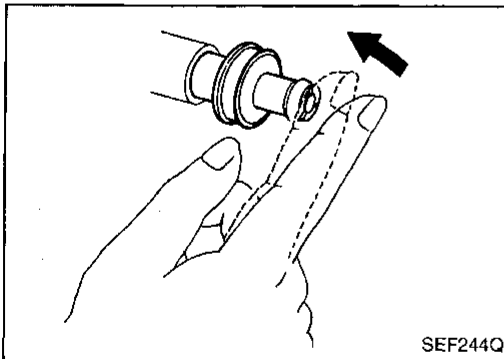


Inspection

PCV (Positive Crankcase Ventilation) VALVE

With engine running at idle, remove ventilation hose from PCV valve; if valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

ST
RS
BT
HA

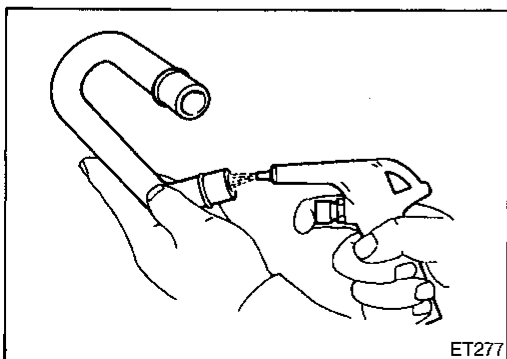


PCV HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

EL
IDX


BASIC SERVICE PROCEDURE

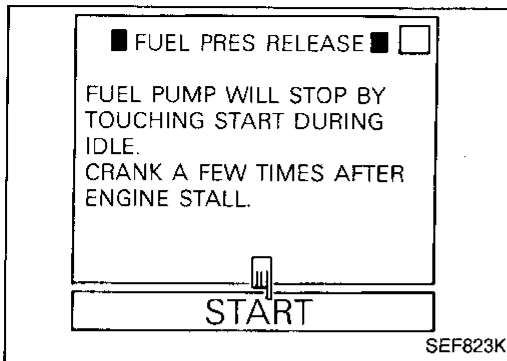


Fuel Pressure Release

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

1. Start engine.
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT.
(Touch "START" and after engine stalls, crank it two or three times to release all fuel pressure.)
3. Turn ignition switch off.

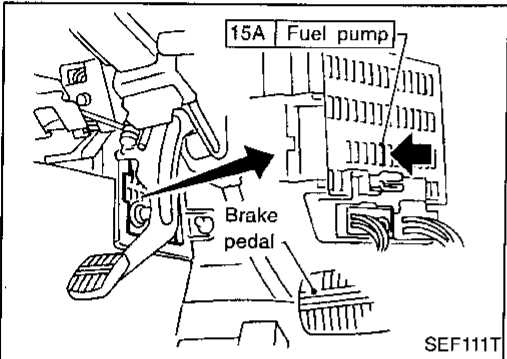

1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch off and reconnect fuel pump fuse.

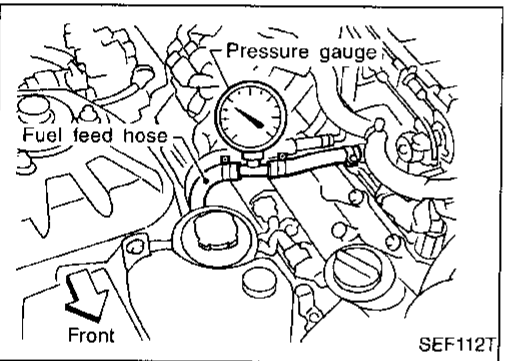

Fuel Pressure Check

- When reconnecting fuel line, always use new clamps.
- Make sure that clamp screw does not contact adjacent parts.
- Use a torque driver to tighten clamps.
- Use Pressure Gauge to check fuel pressure.

1. Release fuel pressure to zero, refer to previous page.
2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
3. Install pressure gauge between fuel filter and fuel tube.
4. Start engine and check for fuel leakage.
5. Read the indication of fuel pressure gauge.


At idling:

Approximately 235 kPa (2.4 kg/cm², 34 psi)

A few seconds after ignition switch is turned OFF to ON:


Approximately 294 kPa (3.0 kg/cm², 43 psi)

6. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
7. Plug intake manifold with a rubber cap.
8. Connect variable vacuum source to fuel pressure regulator.

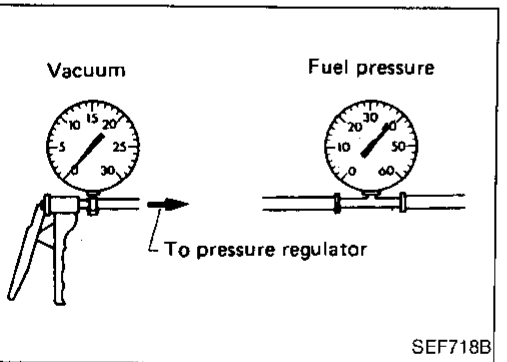


9. Start engine and read indication of fuel pressure gauge as vacuum is changed.


Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

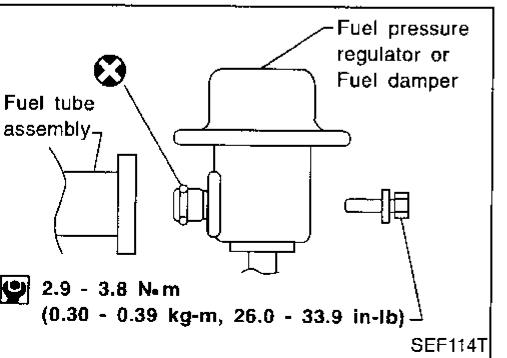

Injector Removal and Installation

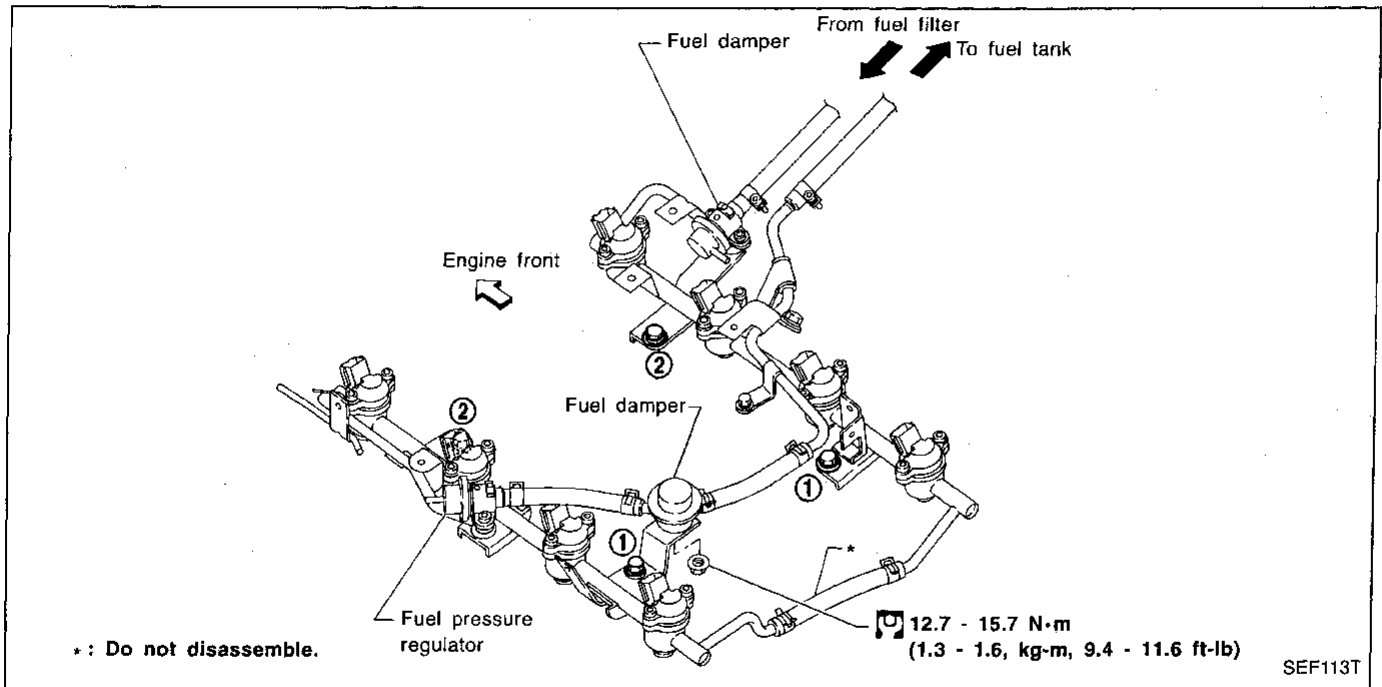


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

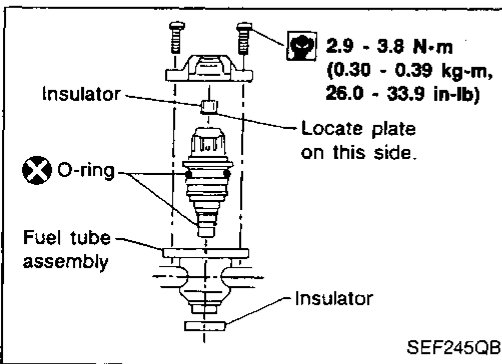

1. Release fuel pressure to zero, refer to previous page.
 2. Remove intake manifold collector. Refer to EM section ("TIMING CHAIN").
 3. Disconnect vacuum hose from pressure regulator.
 4. Disconnect fuel hoses from fuel tube assembly.
 - **Do not disassemble fuel tube assembly.**
 5. Disconnect injector harness connectors.
 6. Remove injectors with fuel tube assembly.
 - **Push injector tail piece.**
 - **Do not pull on the connector.**
 7. Push out any malfunctioning injector from fuel tube assembly.
 8. Replace or clean injector as necessary.
 9. Install injector to fuel tube assembly.
 - **Always replace O-rings with new ones.**
 - **Lubricate O-rings with a smear of engine oil.**
 10. Install injectors with fuel tube assembly to intake manifold. **Tighten in numerical order shown in the figure.**
 - a) First, tighten all bolts to 9.3 to 10.8 N·m (0.95 to 1.1 kg-m, 6.9 to 8.0 ft-lb).
 - b) Then, tighten all bolts to 21 to 26 N·m (2.1 to 2.7 kg-m, 15 to 20 ft-lb).
 11. Install fuel hoses to fuel tube assembly.
 12. Reinstall any parts removed in reverse order of removal.
- CAUTION:**
After properly connecting fuel hose to injector and fuel tube assembly, check connection for fuel leakage.

Fast Idle Cam (FIC) Inspection and Adjustment


1. Remove throttle body from engine.
2. Wait for at least 3 hours.
(This step is necessary to bring the temperature of the thermo-element to the room temperature)

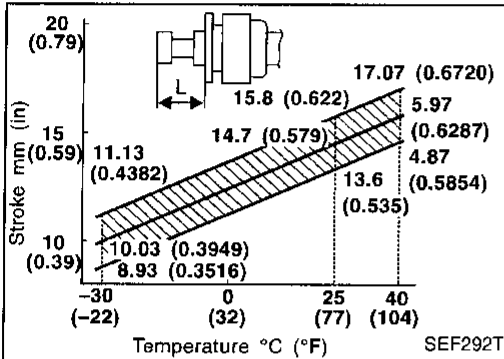

3. Measure thermo-element stroke (L) and room temperature.
4. Check thermo-element stroke (L) as shown in the figure.

CAUTION:
Do not adjust TAS.


L: Thermo-element stroke	Judgement
Within oblique line	Thermo-element is normal → Adjust FI cam (go to step 5).
Out of oblique line	Replace thermo-element → Adjust FI cam (go to step 2).

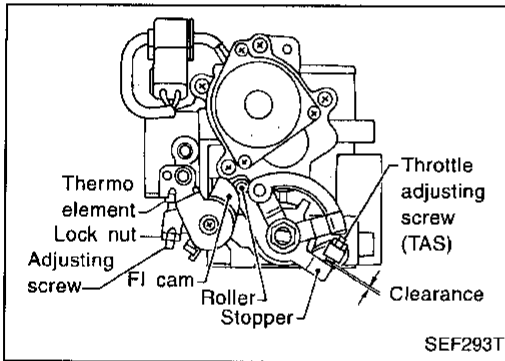

5. Measure clearance between stopper and throttle adjusting screw (TAS) as shown in the figure. If out of specification, adjust the clearance using adjusting screw.

CAUTION:
Do not adjust throttle adjusting screw (TAS).

6. After adjustment, tighten lock nut of adjusting screw.
⚙️ : 1.5 - 2.0 N·m (0.15 - 0.2 kg·m, 13.0 - 17.4 in·lb)
7. Reinstall throttle body.
8. After warming up engine, check that there is a clearance between FI cam and roller.

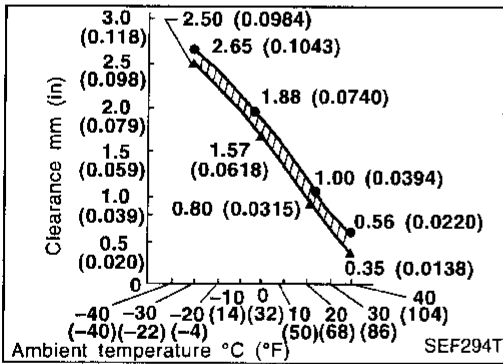

☆ MONITOR ☆ NO FAIL

CMPS-RPM (POS) 650rpm

RECORD

Direct Ignition System — How to Check Idle Speed and Ignition Timing

IDLE SPEED

- **Method A (Using CONSULT)**


Check idle speed in "DATA MONITOR" mode with CONSULT.

BASIC SERVICE PROCEDURE

Direct Ignition System — How to Check Idle Speed and Ignition Timing (Cont'd)

● Method B (Using check connector)

Check the idle speed using check connector as shown in the figure. (Check connector is located in the harness protector).

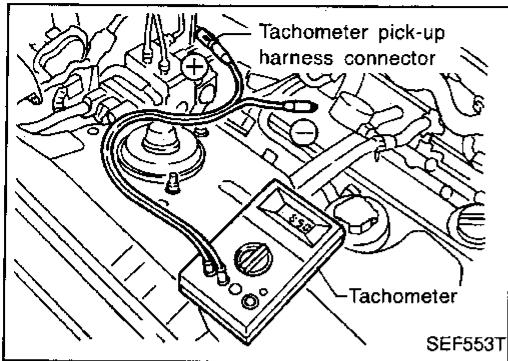


IGNITION TIMING

Any of the following two methods may be used.


● Method A

1. Attach timing light to loop wire as shown.
2. Check ignition timing.


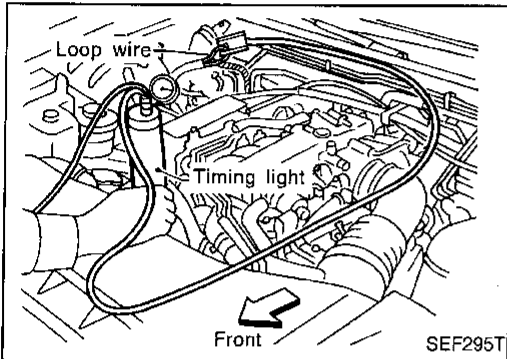


● Method B

1. Remove intake air duct.
2. Remove No. 1 ignition coil.

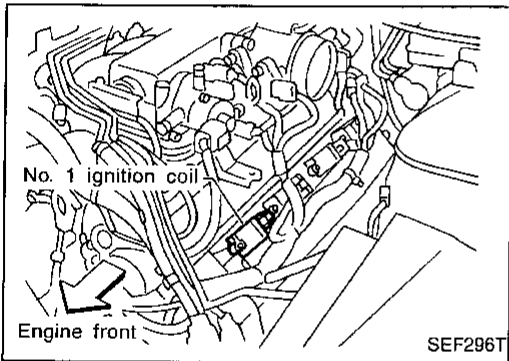

3. Connect No. 1 ignition coil and No. 1 spark plug with suitable high-tension wire as shown, and attach timing light clamp to this wire.
4. Install air duct.
5. Check ignition timing.

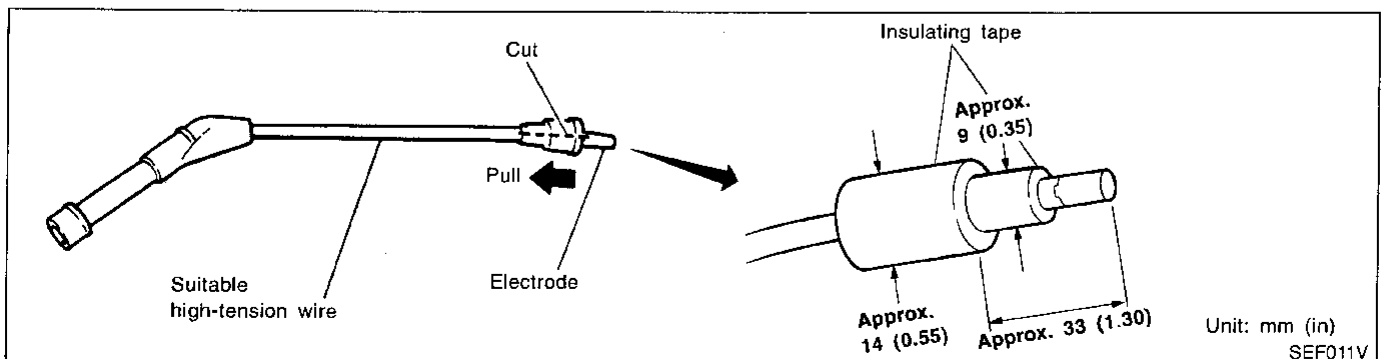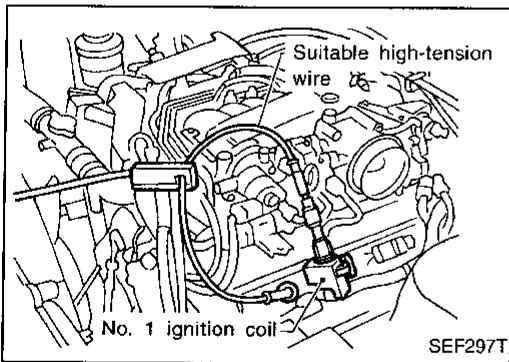

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment


PREPARATION

• Make sure that the following parts are in good order.

- (1) Battery
- (2) Ignition system
- (3) Engine oil and coolant levels
- (4) Fuses
- (5) ECM harness connector
- (6) Vacuum hoses
- (7) Air intake system
(Oil filler cap, oil level gauge, etc.)
- (8) Fuel pressure
- (9) Engine compression
- (10) EGR valve operation
- (11) Throttle valve
- (12) EVAP system







- On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
- When checking idle speed, ignition timing and mixture ratio of A/T models, shift lever to "N" position.
- When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
- Turn off headlamps, heater blower, rear window defogger.
- Keep front wheels pointed straight ahead.
- Make the check after the cooling fan has stopped.

Overall inspection sequence

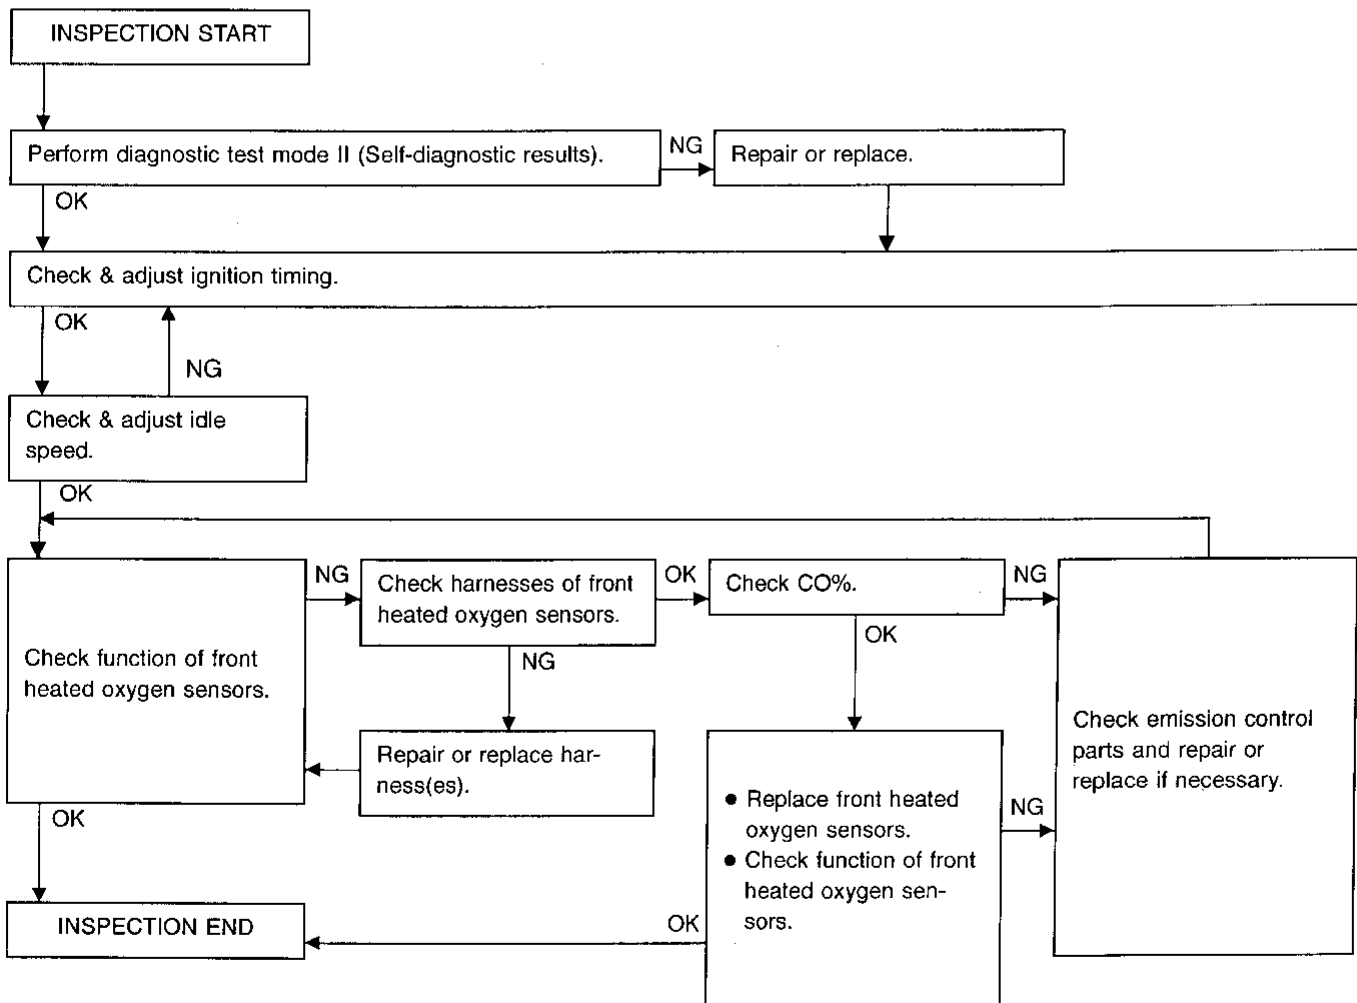

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

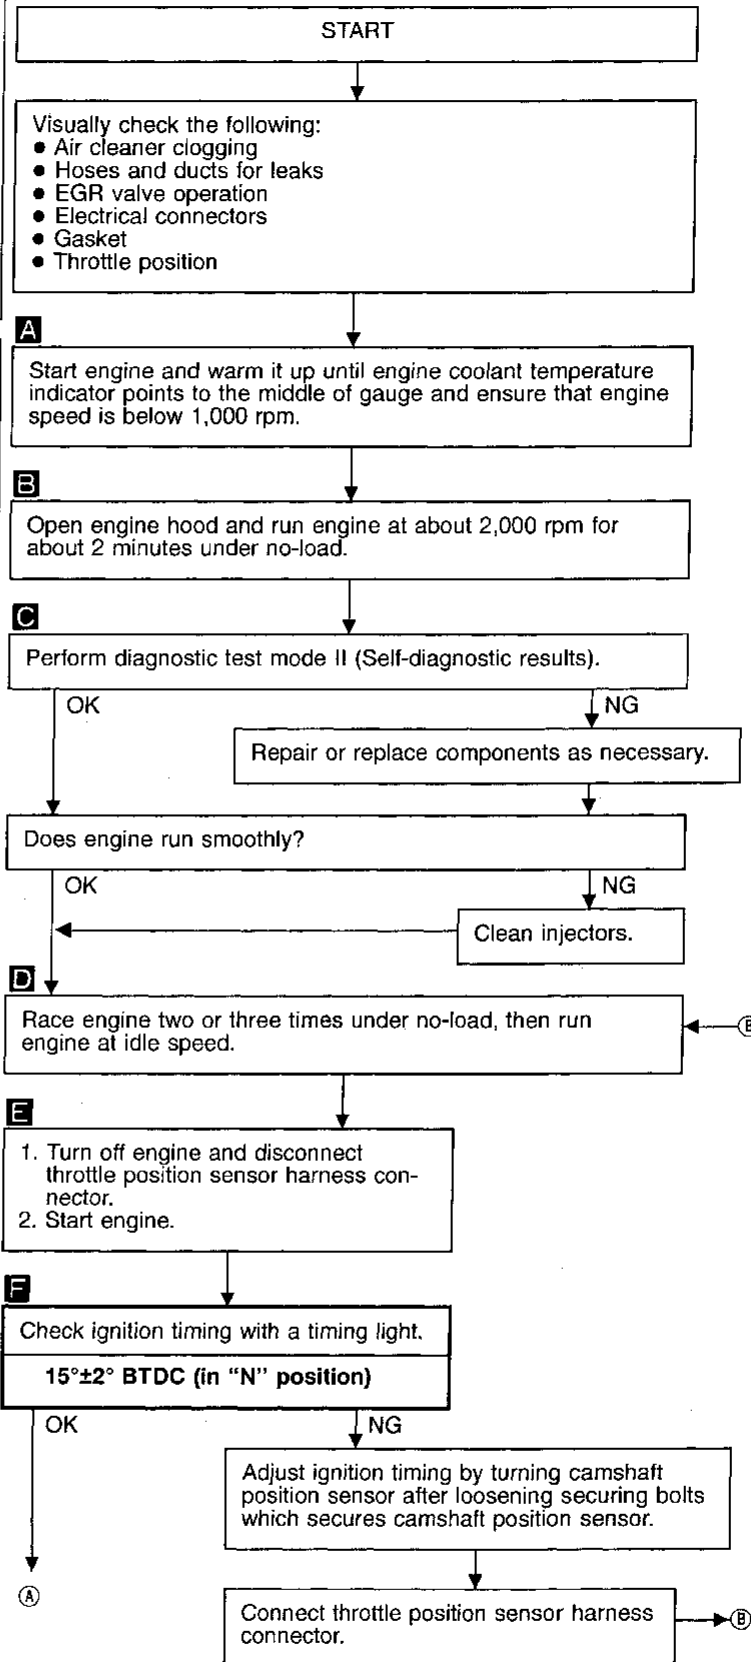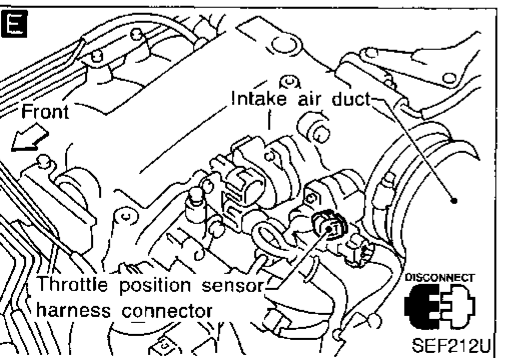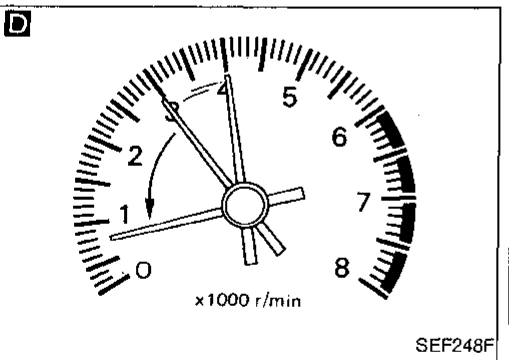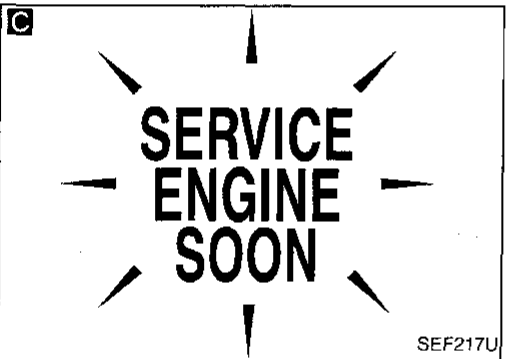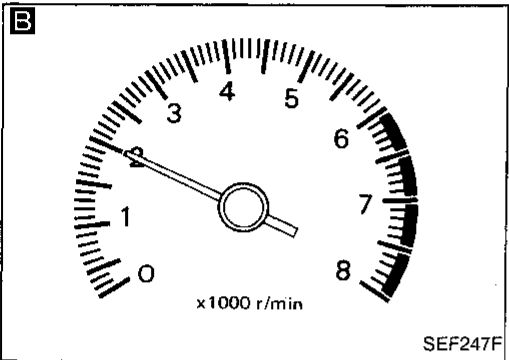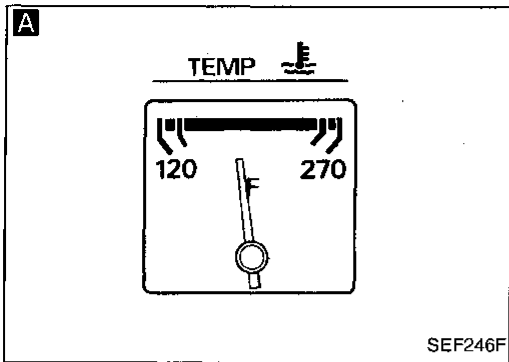

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

BASIC SERVICE PROCEDURE


Idle Speed/Idle Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

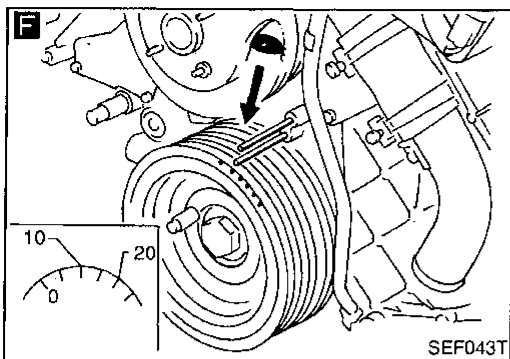


SEF043T

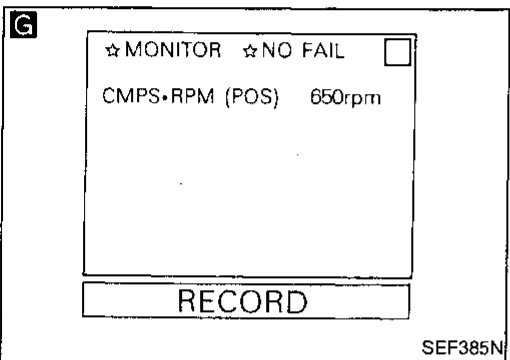


SEF385N

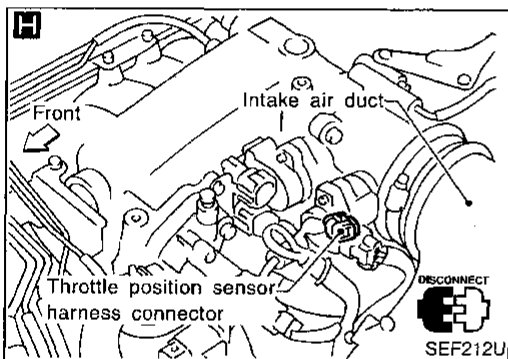


SEF212U

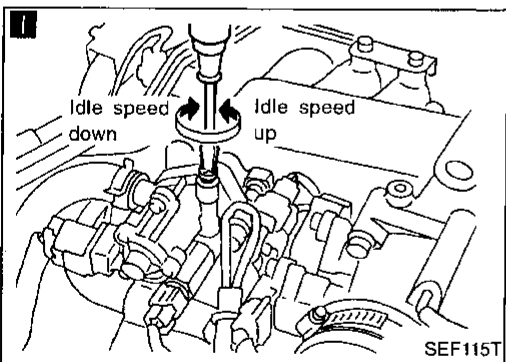

SEF115T

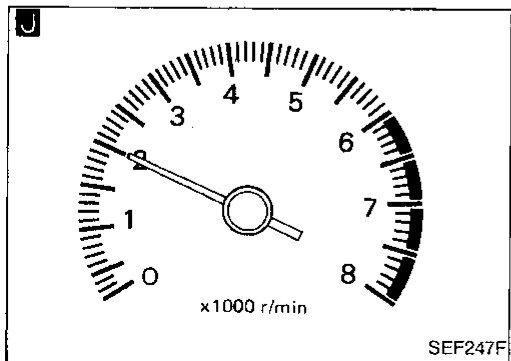


SEF247F

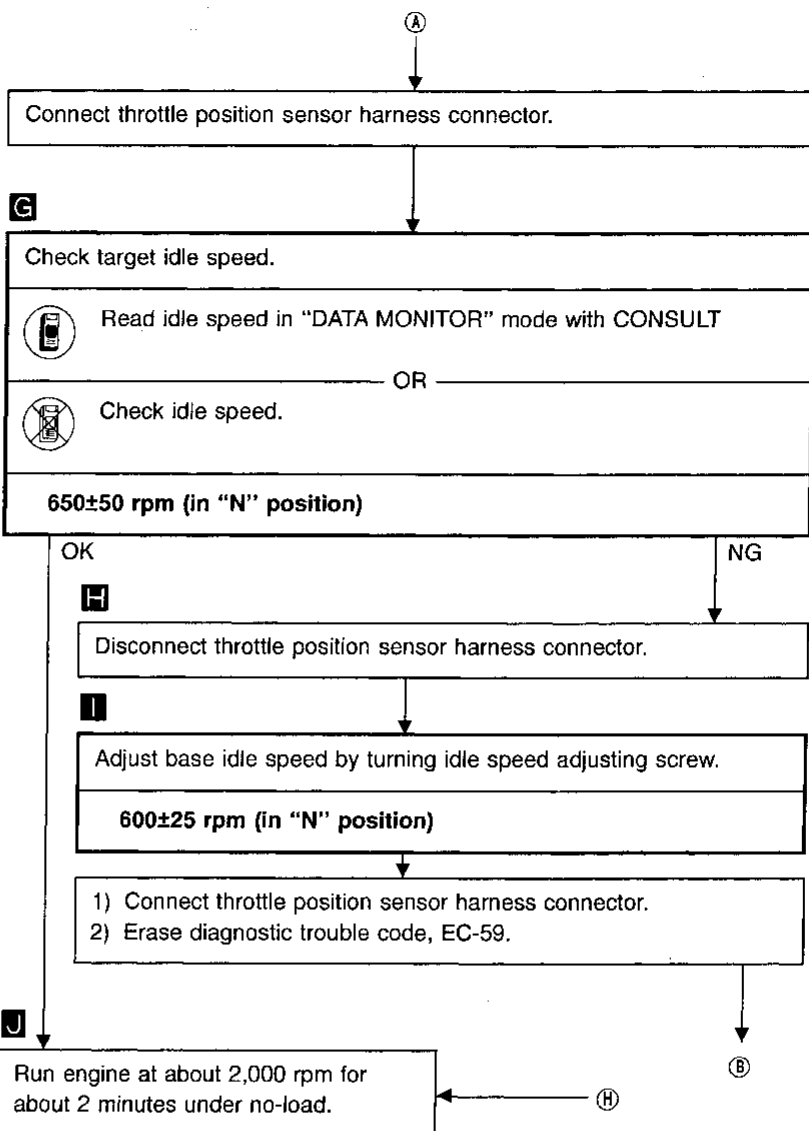

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

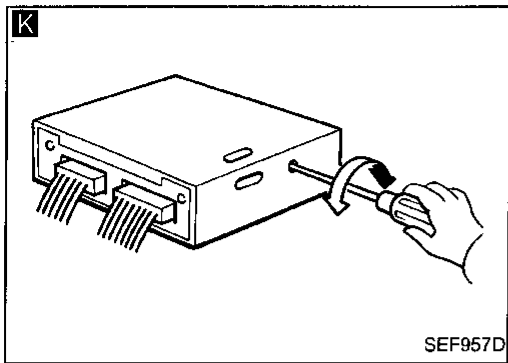


☆ MONITOR ☆ NO FAIL

CMPS•RPM (POS)	2000rpm
FR O2 MNTR-B1	RICH
FR O2 MNTR-B2	RICH

RECORD

SEF855Q

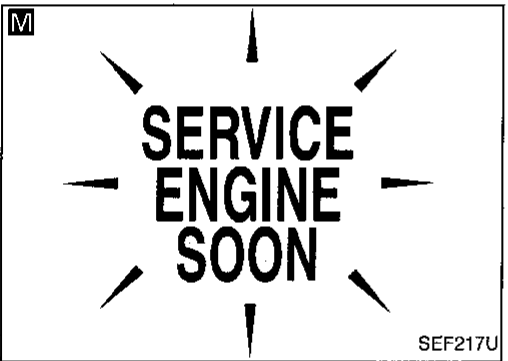


Ⓚ Set on board diagnostic system of ECM to Diagnostic Test Mode II (Front heated oxygen sensor monitor).

Ⓛ Ⓜ Check left bank front heated oxygen sensor signal.

- 1) See "FR O2 SEN MNTR-B1 and B2 (left and right sides)" in "Data monitor" mode.
- 2) Maintaining engine at 2,000 rpm under no-load (engine is warmed up sufficiently.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.
1 cycle: RICH → LEAN → RICH
2 cycles: RICH → LEAN → RICH → LEAN → RICH
 OR

Ⓜ Make sure that malfunction indicator lamp goes on and off more than 5 times during 10 seconds at 2,000 rpm.

Monitor does not fluctuate. Malfunction indicator lamp does not blink.

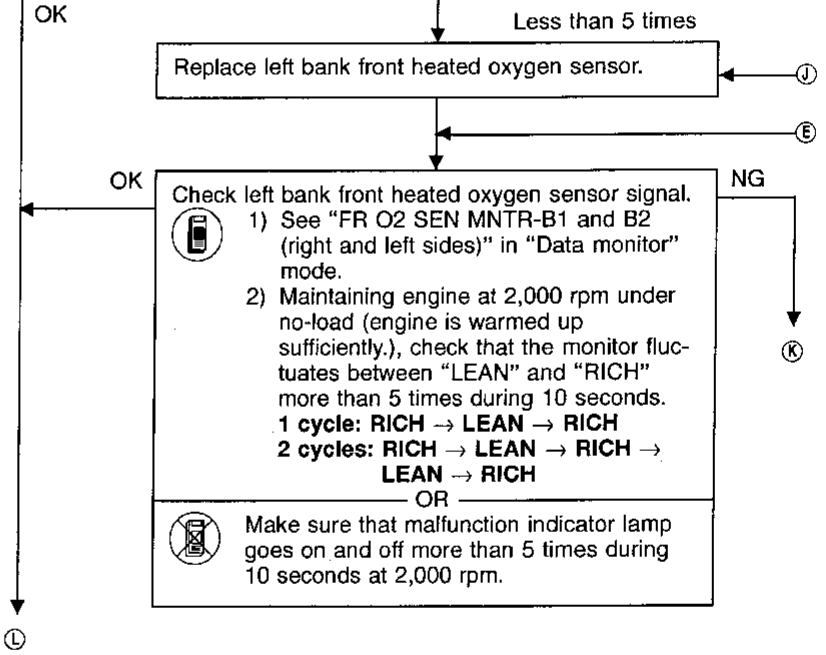

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

N

☆ MONITOR ☆ NO FAIL

CMPS•RPM (POS)	2000rpm
FR O2 MNTR-B1	RICH
FR O2 MNTR-B2	RICH


RECORD

SEF855Q

O



SERVICE ENGINE SOON

SEF217U

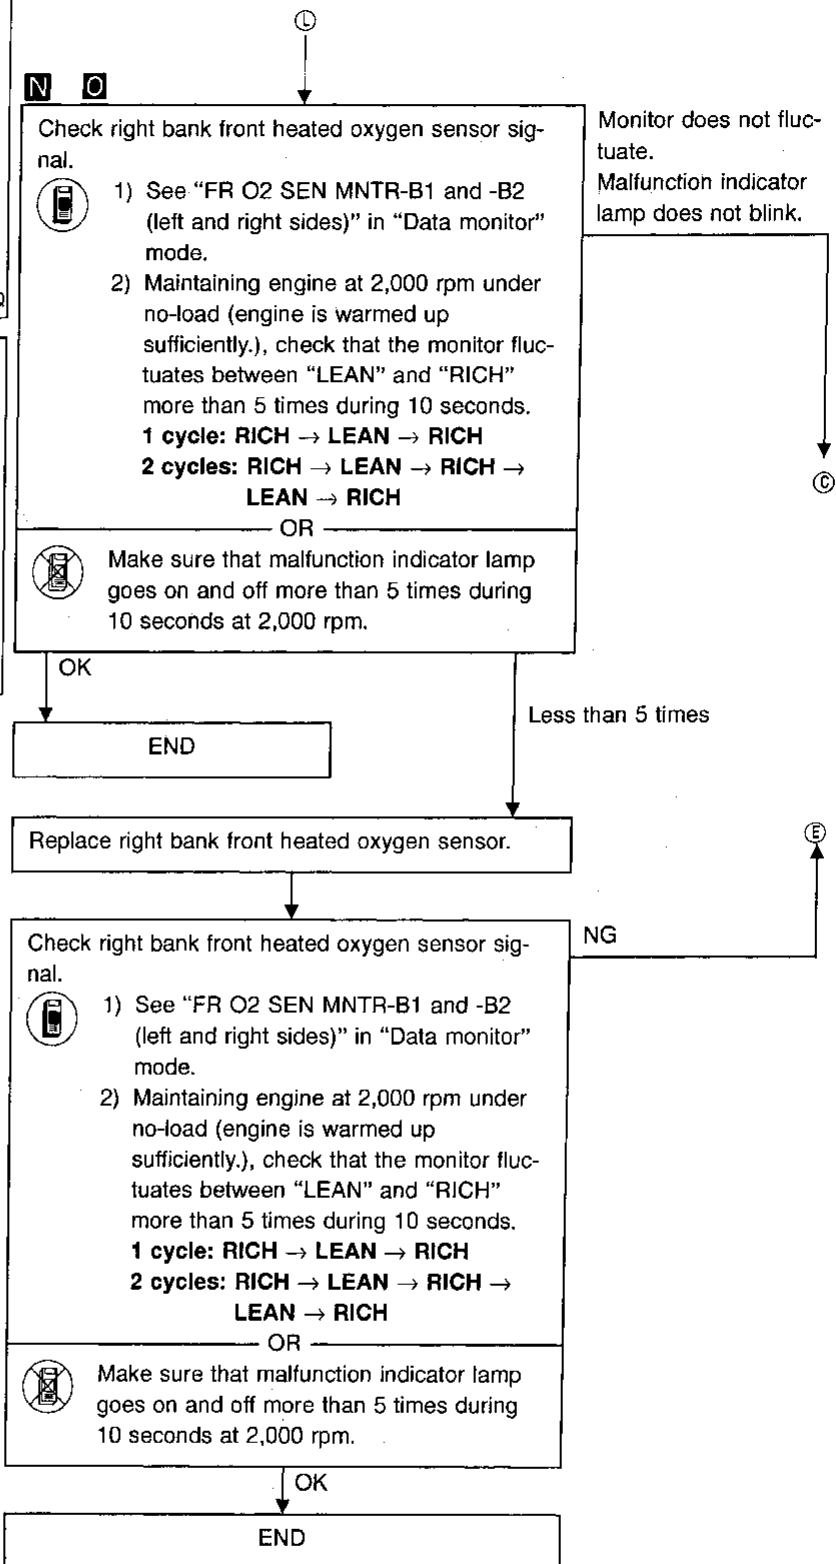

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

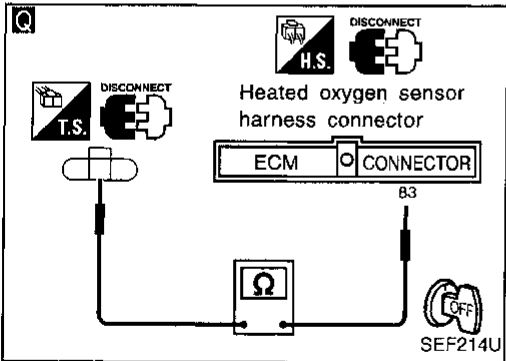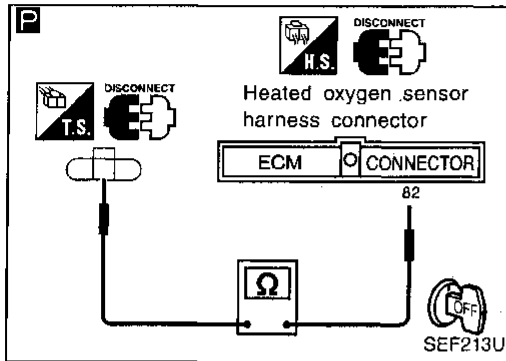

P

Check right bank front heated oxygen sensor harness:

- 1) Turn off engine and disconnect battery ground cable
- 2) Disconnect ECM harness connector from ECM.
- 3) Disconnect right bank front heated oxygen sensor harness connector.
- 4) Check for continuity between terminal No. 82 of ECM harness connector and harness connector for front heated oxygen sensor.

Continuity existsOK
Continuity does not existNG

OK

NG

Repair or replace ECM harness.

Connect ECM harness connector to ECM.

Q

Check left bank front heated oxygen sensor harness:

- 1) Turn off engine and disconnect battery ground cable
- 2) Disconnect ECM harness connector from ECM.
- 3) Disconnect left bank front heated oxygen sensor harness connector.
- 4) Check for continuity between terminal No. 83 of ECM harness connector and harness connector for front heated oxygen sensor.

Continuity existsOK
Continuity does not existNG

OK

NG

Repair or replace ECM harness.

Connect ECM harness connector to ECM.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

R

■ ACTIVE TEST ■ □

COOLANT TEMP 5°C

----- MONITOR -----

CMPS•RPM (POS) 1175rpm
 INJ PULSE-B2 2.7msec
 INJ PULSE-B1 2.7msec
 ING TIMING 10BTDC

Qu UP DWN Qd

SEF411S

R S

⑥

1) Select "ENG COOLANT TEMP" in "ACTIVE TEST" mode.
 2) Set "COOLANT TEMP" to 5°C (41°F) by touching "DWN" and "Qd".


OR

1) Disconnect engine coolant temperature sensor harness connector.
 2) Connect a resistor (4.4 kΩ) between terminals of engine coolant temperature sensor harness connector.

S

DISCONNECT

Engine coolant temperature sensor harness connector

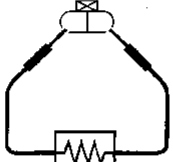

4.4 kΩ resistor

SEF858QA

T


Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.

U

Race engine two or three times under no-load, then run engine at idle speed.

T

TEMP

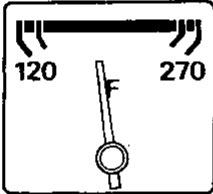

120 270

SEF246F

Check "CO" %.

Idle CO: 0.4 - 9.4% with engine running smoothly


After checking CO%,
 1) Disconnect the resistor from terminals of engine coolant temperature sensor.
 2) Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor.

OK

NG

Connect front heated oxygen sensor harness connectors to front heated oxygen sensors.

U

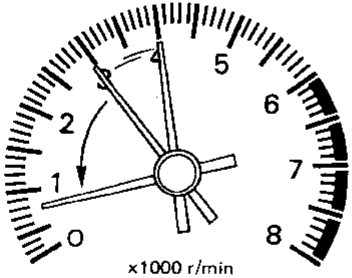

x1000 r/min

SEF248F

Check fuel pressure regulator.

← **K**

Check mass air flow sensor.

Check injector.
 Clean or replace if necessary.

Check engine coolant temperature sensor.

← **H**

Check ECM function* by substituting another known good ECM.

← **H**

*: ECM may be the cause of a problem, but this is rarely the case.

Note: If a vehicle contains a part which is operating outside of design specifications with no MIL illumination, the part shall not be replaced prior to emission testing unless it is determined that the part has been tampered with or abused in such a way that the diagnostic system cannot reasonably be expected to detect the resulting malfunction.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Introduction

The ECM (ECCS control module) has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

- Diagnostic Trouble Code (DTC)Mode 3 of SAE J1979
- Freeze Frame dataMode 2 of SAE J1979
- System Readiness Test (SRT) codeMode 1 of SAE J1979
- 1st Trip Diagnostic Trouble Code (1st Trip DTC).....Mode 7 of SAE J1979
- 1st Trip Freeze Frame data
- Test values and Test limitsMode 6 of SAE J1979

The above information can be checked using procedures listed in the table below.

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
Diagnostic test mode II (Self-diagnostic results)	○	○*1				
CONSULT	○	○	○	○	○	
GST	○	○*2	○		○	○

*1: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

*2: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.

The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode (Refer to EC-88.).

Two Trip Detection Logic

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not light up at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL lights up. The MIL lights up at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MIL and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

Items	MIL			DTC		1st trip DTC	
	1st trip		2nd trip lighting up	1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up					
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0308 (0701, 0608 - 0601) is being detected	X			X		X	
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0308 (0701, 0608 - 0601) has been detected		X		X		X	
Closed loop control — DTC: P1148 (0307), P1168 (0308)		X		X		X	
Fail-safe items (Refer to EC-88.)		X		X*1		X*1	
Except above			X		X	X	X

*1: Except "ECM".

Emission-related Diagnostic Information

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the first trip DTC did not reoccur, the first trip DTC will not be displayed. If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the first trip DTC and DTC are stored in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a first trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION". Refer to EC-55.




For malfunctions in which 1st trip DTCs are displayed, refer to EC-52. These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT.

1st trip DTC is specified in Mode 7 of SAE J1979. 1st trip DTC detection occurs without lighting up the MIL and therefore does not warn the driver of a problem. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.


When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in "Work Flow" procedure Step II, refer to page EC-83. Then perform "Diagnostic trouble code confirmation procedure" or "Overall function check" to try to duplicate the problem. If the malfunction is duplicated, the item requires repair.

How to read DTC and 1st trip DTC

DTC and 1st trip DTC can be read by the following methods.

1.  The number of blinks of the malfunction indicator lamp in the Diagnostic Test Mode II (Self-Diagnostic Results) Examples: 0101, 0201, 1003, 1104, etc.
These DTCs are controlled by NISSAN.
2.  CONSULT or GST (Generic Scan Tool) Examples: P0340, P1320, P0705, P0750, etc.
These DTCs are prescribed by SAE J2012.
 (CONSULT also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, Mode II and GST do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT can identify malfunction status as shown below. Therefore, using CONSULT (if available) is recommended.**

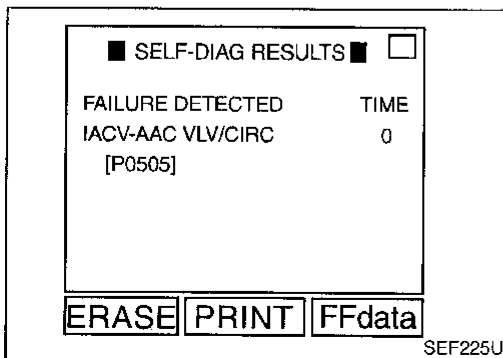


A sample of CONSULT display for DTC is shown at left. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT. Time data indicates how many times the vehicle was driven after the last detection of a DTC. If the DTC is being detected currently, the time data will be "0".

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

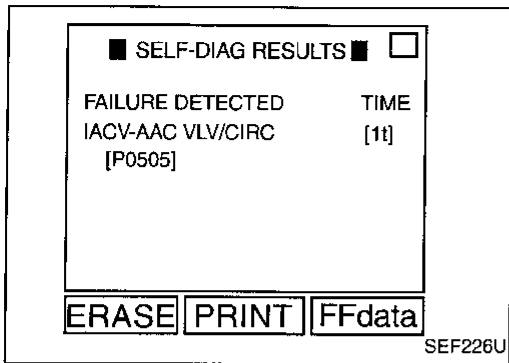

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and are displayed on CONSULT or GST. The 1st trip freeze frame data can only be displayed on the CONSULT screen, not on the GST. For details, see EC-69.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0308 (0701, 0608 - 0601) Fuel Injection System Function — DTC: P0171 (0115), P0172 (0114)
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze frame data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION". Refer to EC-55.

SYSTEM READINESS TEST (SRT) CODE

System Readiness Test (SRT) code is specified in Mode 1 of SAE J1979. It indicates whether the self-diagnostic tests for non-continuously monitored items have been completed or not.

Inspection/Maintenance (I/M) tests of the on board diagnostic (OBD) II system may become the legal requirement in some states/areas. All SRT codes must be set in this case. Unless all SRT codes are set, conducting the I/M test may not be allowed.

SRT codes are set after self-diagnosis has been performed two or more times. This occurs regardless of whether the diagnosis is in "OK" or "NG", and whether or not the diagnosis is performed in consecutive trips. The following table lists the five SRT items (30 test items) for the ECCS used in Y33 models.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION


Emission-related Diagnostic Information (Cont'd)

SRT items	Self-diagnostic test items	
Catalyst monitoring	<ul style="list-style-type: none"> ● Three way catalyst function (left bank) P0420 (0702) ● Three way catalyst function (right bank) P0430 (0703) 	
EVAP system monitoring	<ul style="list-style-type: none"> ● EVAP control system (Small leak — negative pressure) P0440 (0705) ● EVAP control system (Small leak — positive pressure) P1440 (0213) ● EVAP control system purge flow monitoring P1447 (0111) 	
Oxygen sensor monitoring	Left bank	<ul style="list-style-type: none"> ● Front heated oxygen sensor (Circuit) P0130 (0303) ● Front heated oxygen sensor (Lean shift monitoring) P0131 (0411) ● Front heated oxygen sensor (Rich shift monitoring) P0132 (0410) ● Front heated oxygen sensor (Response monitoring) P0133 (0409) ● Front heated oxygen sensor (High voltage) P0134 (0412)
	Right bank	<ul style="list-style-type: none"> ● Front heated oxygen sensor (Circuit) P0150 (0503) ● Front heated oxygen sensor (Lean shift monitoring) P0151 (0415) ● Front heated oxygen sensor (Rich shift monitoring) P0152 (0414) ● Front heated oxygen sensor (Response monitoring) P0153 (0413) ● Front heated oxygen sensor (High voltage) P0154 (0509)
	Left bank	<ul style="list-style-type: none"> ● Rear heated oxygen sensor (Min. voltage monitoring) P0137 (0511) ● Rear heated oxygen sensor (Max. voltage monitoring) P0138 (0510) ● Rear heated oxygen sensor (Response monitoring) P0139 (0707) ● Rear heated oxygen sensor (High voltage) P0140 (0512)
	Right bank	<ul style="list-style-type: none"> ● Rear heated oxygen sensor (Min. voltage monitoring) P0157 (0314) ● Rear heated oxygen sensor (Max. voltage monitoring) P0158 (0313) ● Rear heated oxygen sensor (Response monitoring) P0159 (0708) ● Rear heated oxygen sensor (High voltage) P0160 (0315)
Oxygen sensor heater monitoring	<ul style="list-style-type: none"> ● Front heated oxygen sensor heater (right bank) P0135 (0901) ● Rear heated oxygen sensor heater (right bank) P0141 (0902) ● Front heated oxygen sensor heater (left bank) P0155 (1001) ● Rear heated oxygen sensor heater (left bank) P0161 (1002) 	
EGR system monitoring	<ul style="list-style-type: none"> ● EGR function (close) P0400 (0302) ● EGR function (open) P1402 (0514) ● EGRC-BPT valve function P0402 (0306) 	

Together with the DTC, the SRT code is cleared from the ECM memory using the method described later (Refer to EC-59). In addition, if the ECCS components/system are repaired or if the battery terminals remain disconnected for more than 24 hours, all SRT codes may be cleared from the ECM memory.

How to display SRT code

1. Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT
For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT screen; for items whose SRT codes are not set, "INCMP" is displayed.
2. Selecting Mode 1 with GST (Generic Scan Tool)

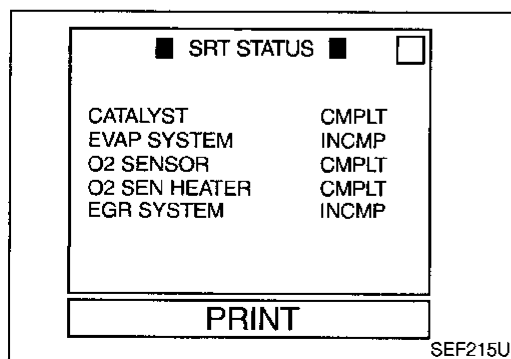

A sample of CONSULT display for SRT code is shown at left. "INCMP" means the self-diagnosis is incomplete and SRT is not set. "CMPLT" means the self-diagnosis is complete and SRT is set.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

How to set SRT code

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions. The most efficient driving pattern in which SRT codes can be properly set is explained on the next page. The driving pattern should be performed one or more times to set all SRT codes.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Driving pattern

Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. Refer to next page for more information and explanation of chart.

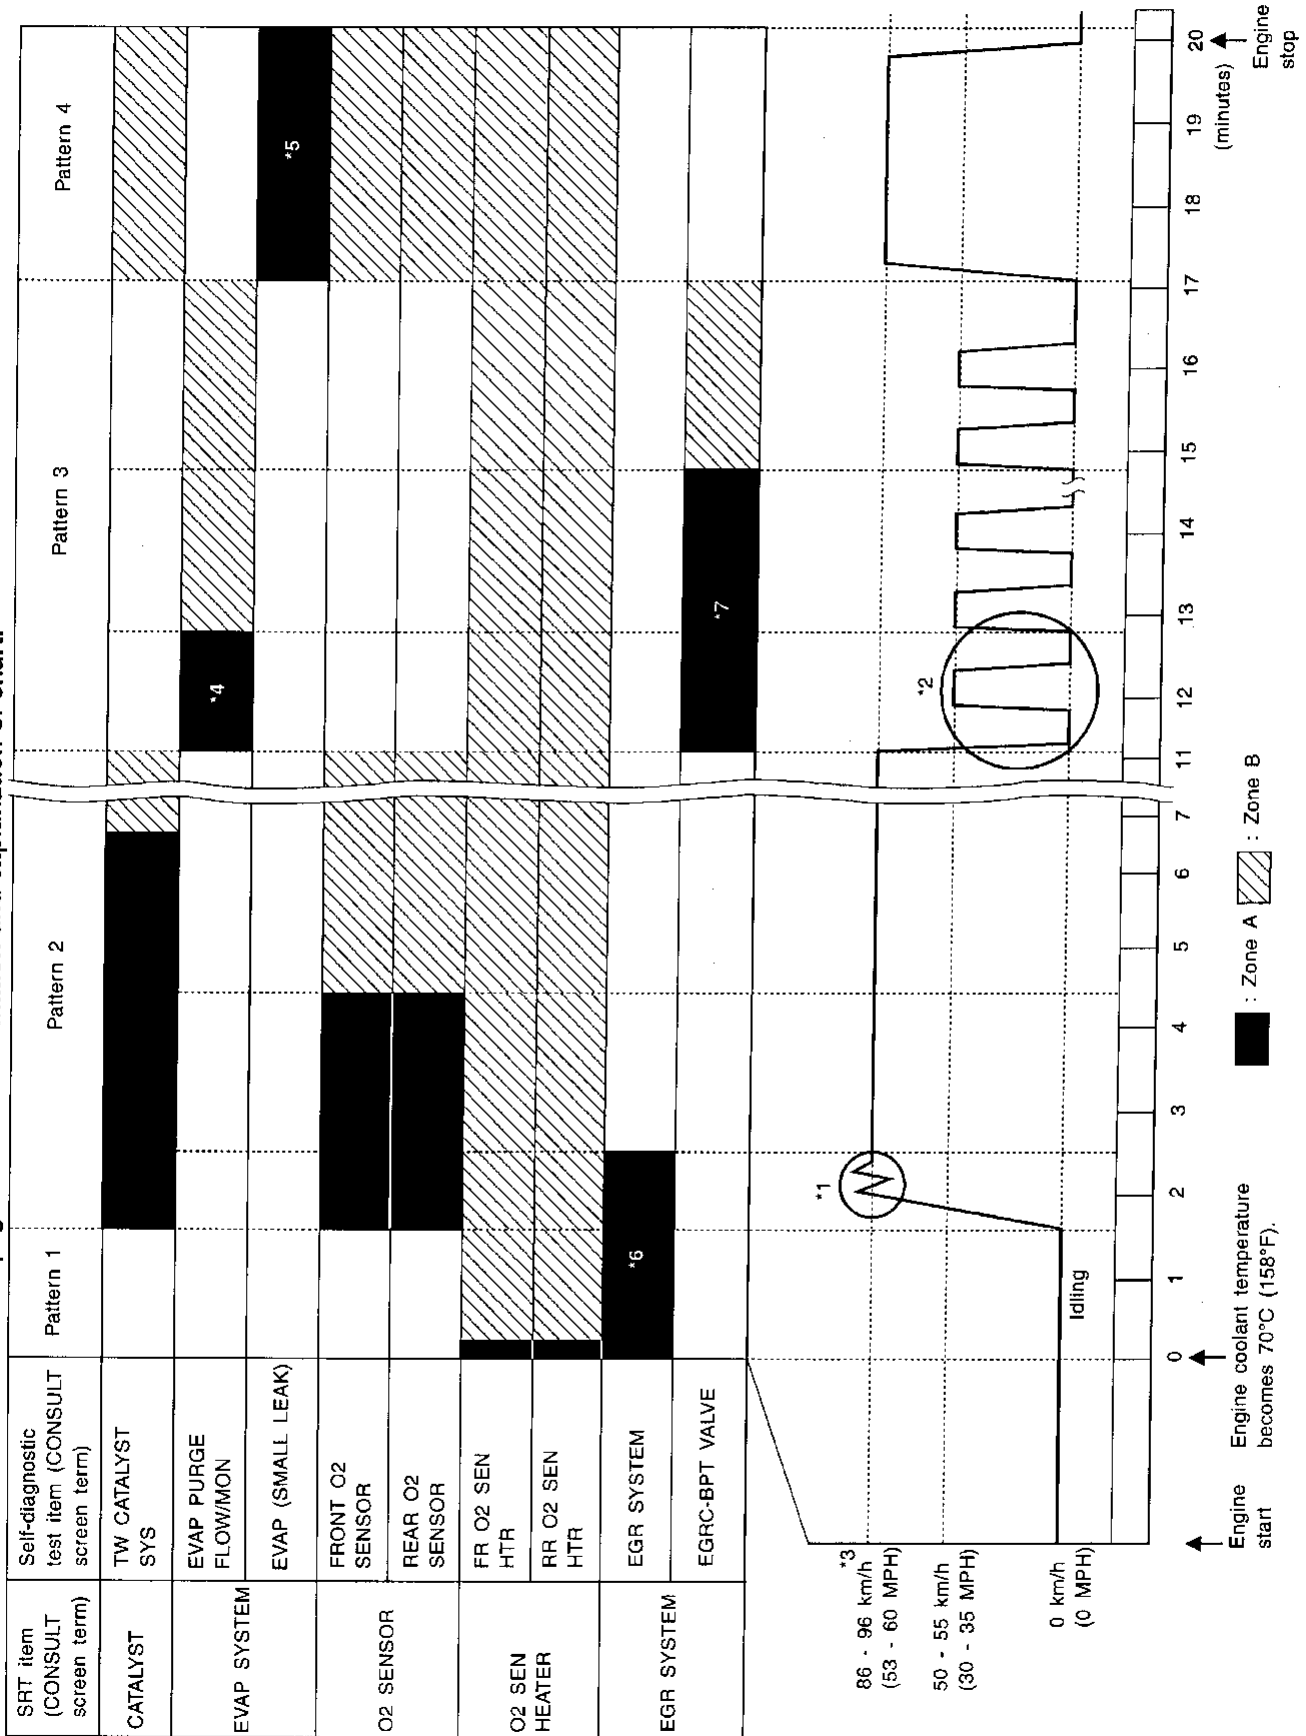

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.

Zone A refers to the range where the time required, for the diagnosis under normal conditions, is the shortest. Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.

Under different conditions [For example: ambient temperature is other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

- Pattern 1: • The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminals ⑥ and ⑫B is 3.0 - 4.3 V.)
- The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminals ⑥ and ⑫B is lower than 1.4 V.)
 - The engine is started at a tank fuel temperature warmer than 0°C (32°F) (where the voltage between the ECM terminal ④ and ground is less than 4.1V).

- Pattern 2: • When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.


- Pattern 3: • The driving pattern outlined in *2 must be repeated at least 3 times.

- Pattern 4: • Tests are performed after the engine has been operated for at least 17 minutes.
- The accelerator pedal must be held very steady during steady-state driving.
 - If the accelerator pedal is moved, the test must be conducted all over again.

- *1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

- *2: Operate the vehicle in the following driving pattern.
- 1) Decelerate vehicle to 0 km/h (0 MPH) and let it idle.
 - 2) Repeat driving pattern shown below at least 10 times.
 - **During acceleration, hold the accelerator pedal as steady as possible. (The THROTL POS SEN valve of CONSULT should be between 0.8 to 1.2 V.)**

- 3) Repeat steps and 2 until the EGR system SRT is set.

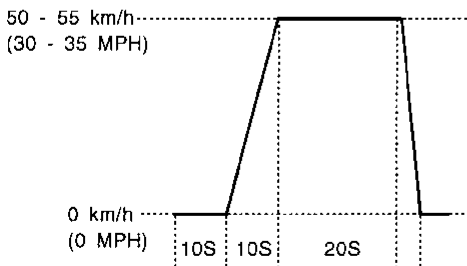

SEF414S

- *3: Checking the vehicle speed with CONSULT or GST is advised.
- *4: The driving pattern may be omitted when "PURG FLOW P1447" is performed using the "DTC WORK SUPPORT" mode with CONSULT.
- *5: The driving pattern may be omitted when "EVAP SML LEAK P0440" is performed using the "DTC WORK SUPPORT" mode with CONSULT.
- *6: The driving pattern may be omitted when all the following are performed using the "DTC WORK SUPPORT" mode with CONSULT.
 - "EGR SYSTEM P0400"
 - "EGR SYSTEM P1402"
- *7: The driving pattern may be omitted when all the following are performed using the "DTC WORK SUPPORT" mode with CONSULT.

Suggested transmission gear position for A/T models

Set the selector lever in the "D" position with "OD" ON.

Suggested maximum speed in each gear

Downshift to a lower gear if the engine is not running smoothly, or if you need to accelerate.

Do not exceed the maximum suggested speed (shown below) in any gear. For level road driving, use the highest gear suggested for that speed. Always observe posted speed limits, and drive according to the road conditions, which will ensure safe operation. Do not over-rev the engine when shifting to a lower gear as it may cause engine damage or loss of vehicle control.

Gear	km/h (MPH)
1st	50 (30)
2nd	95 (60)
3rd	145 (90)
4th	—
5th	—

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

TEST VALUE AND TEST LIMIT (GST only — not applicable to CONSULT)

The following is the information specified in Mode 6 of SAE J1979.

The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items (9 diagnoses).

These data (test limit) are specified by Test ID (TID) and Component ID (CID). These data can be displayed on the GST screen.

X: Applicable
—: Not applicable

SRT item (CONSULT display)	Self-diagnostic test item	TID	CID	Test limit	Display
CATALYST	Three way catalyst function (Left bank)	01H	01H	Max.	X
	Three way catalyst function (Right bank)	03H	02H	Max.	X
EVAP SYSTEM	EVAP control system (Small leak)	05H	03H	Max.	X
	EVAP control system purge flow monitoring	06H	83H	Min.	X
O2 SENSOR	Front heated oxygen sensor (Left bank)	09H	04H	Max.	X
		0AH	84H	Min.	X
		0BH	04H	Max.	X
		0CH	04H	Max.	X
		0DH	04H	Max.	X
	Front heated oxygen sensor (Right bank)	11H	05H	Max.	X
		12H	85H	Min.	X
		13H	05H	Max.	X
		14H	05H	Max.	X
		15H	05H	Max.	X
	Rear heated oxygen sensor (Left bank)	19H	86H	Min.	X
		1AH	86H	Min.	X
		1BH	06H	Max.	X
		1CH	06H	Max.	X
	Rear heated oxygen sensor (Right bank)	21H	87H	Min.	X
		22H	87H	Min.	X
23H		07H	Max.	X	
24H		07H	Max.	X	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

SRT item (CONSULT display)	Self-diagnostic test item	TID	CID	Test limit	Display	
O2 SENSOR HEATER	Front heated oxygen sensor heater (Left bank)	29H	08H	Max.	X	GI
		2AH	88H	Min.	X	MA
	Front heated oxygen sensor heater (Right bank)	2BH	09H	Max.	X	EM
		2CH	89H	Min.	X	
	Rear heated oxygen sensor heater (Left bank)	2DH	0AH	Max.	X	LC
		2EH	8AH	Min.	X	
	Rear heated oxygen sensor heater (Right bank)	2FH	0BH	Max.	X	EC
		30H	8BH	Min.	X	
EGR SYSTEM	EGR function	31H	8CH	Min.	X	FE
		32H	8CH	Min.	X	
		33H	8CH	Min.	X	AT
		34H	8CH	Min.	X	
		35H	0CH	Max.	X	PD
	EGRC-BPT valve function	36H	0CH	Max.	X	
		37H	8CH	Min.	X	FA

RA

BR

ST

RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

X: Applicable
—: Not applicable

Items (CONSULT screen terms)	DTC*4					Reference page
	CONSULT GST*2	ECM*1	SRT code	Test value/ Test limit	1st trip DTC	
NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	0505	—	—	—	—
MAF SEN/CIRCUIT	P0100	0102	—	—	X	EC-113
ABSL PRES SEN/CIRC	P0105	0803	—	—	X	EC-121
AIR TEMP SEN/CIRC	P0110	0401	—	—	X	EC-130
COOLANT T SEN/CIRC	P0115	0103	—	—	X	EC-136
THRTL POS SEN/CIRC	P0120	0403	—	—	X	EC-141
*COOLAN T SEN/CIRC	P0125	0908	—	—	X	EC-151
FRONT O2 SENSOR-B1	P0130	0303	X	X	X*3	EC-156
FRONT O2 SENSOR-B1	P0131	0411	X	X	X*3	EC-163
FRONT O2 SENSOR-B1	P0132	0410	X	X	X*3	EC-169
FRONT O2 SENSOR-B1	P0133	0409	X	X	X*3	EC-175
FRONT O2 SENSOR-B1	P0134	0412	X	X	X*3	EC-184
FR O2 SE HEATER-B1	P0135	0901	X	X	X*3	EC-190
REAR O2 SENSOR-B1	P0137	0511	X	X	X*3	EC-195
REAR O2 SENSOR-B1	P0138	0510	X	X	X*3	EC-203
REAR O2 SENSOR-B1	P0139	0707	X	X	X*3	EC-211
REAR O2 SENSOR-B1	P0140	0512	X	X	X*3	EC-218
RR O2 SE HEATER-B1	P0141	0902	X	X	X*3	EC-224
FRONT O2 SENSOR-B2	P0150	0503	X	X	X*3	EC-190
FRONT O2 SENSOR-B2	P0151	0415	X	X	X*3	EC-163
FRONT O2 SENSOR-B2	P0152	0414	X	X	X*3	EC-169
FRONT O2 SENSOR-B2	P0153	0413	X	X	X*3	EC-175
FRONT O2 SENSOR-B2	P0154	0509	X	X	X*3	EC-184
FR O2 SE HEATER-B2	P0155	1001	X	X	X*3	EC-190
REAR O2 SENSOR-B2	P0157	0314	X	X	X*3	EC-195
REAR O2 SENSOR-B2	P0158	0313	X	X	X*3	EC-203
REAR O2 SENSOR-B2	P0159	0708	X	X	X*3	EC-211
REAR O2 SENSOR-B2	P0160	0315	X	X	X*3	EC-218
RR O2 SE HEATER-B2	P0161	1002	X	X	X*3	EC-224
FUEL SYS LEAN/BK1	P0171	0115	—	—	X	EC-230
FUEL SYS RICH/BK1	P0172	0114	—	—	X	EC-237
FUEL SYS LEAN/BK2	P0174	0210	—	—	X	EC-230
FUEL SYS RICH/BK2	P0175	0209	—	—	X	EC-237
FUEL TEMP SEN/CIRC	P0180	0402	—	—	X	EC-243
MULTI CYL MISFIRE	P0300	0701	—	—	X	EC-248
CYL 1 MISFIRE	P0301	0608	—	—	X	EC-248
CYL 2 MISFIRE	P0302	0607	—	—	X	EC-248

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: These are not displayed with GST.

*4: 1st trip DTC No. is the same as DTC No.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

X: Applicable
—: Not applicable

Items (CONSULT screen terms)	DTC*4					Reference page	
	CONSULT GST*2	ECM*1	SRT code	Test value/ Test limit	1st trip DTC		
CYL 3 MISFIRE	P0303	0606	—	—	X	EC-248	GI
CYL 4 MISFIRE	P0304	0605	—	—	X	EC-248	MA
CYL 5 MISFIRE	P0305	0604	—	—	X	EC-248	
CYL 6 MISFIRE	P0306	0603	—	—	X	EC-248	EM
CYL 7 MISFIRE	P0307	0602	—	—	X	EC-248	
CYL 8 MISFIRE	P0308	0601	—	—	X	EC-248	LC
KNOCK SEN/CIRC-B1	P0325	0304	—	—	X	EC-253	
KNOCK SEN/CIRC-B2	P0330	0212	—	—	X	EC-253	EC
CPS/CIRCUIT (OBD)	P0335	0802	—	—	X	EC-256	
CAM POS SEN/CIR	P0340	0101	—	—	X	EC-261	
EGR SYSTEM	P0400	0302	X	X	X*3	EC-267	FE
EGRC-BPT VALVE	P0402	0306	X	X	X*3	EC-277	
TW CATALYST SYS-B1	P0420	0702	X	X	X*3	EC-282	AT
TW CATALYST SYS-B2	P0430	0703	X	X	X*3	EC-282	
EVAP SMALL LEAK	P0440	0705	X	X	X*3	EC-285	PD
PURG VOLUME CONT/V	P0443	1008	—	—	X	EC-295	
VENT CONTROL VALVE	P0446	0903	—	—	X	EC-301	FA
EVAPO SYS PRES SEN	P0450	0704	—	—	X	EC-306	
VEH SPEED SEN/CIRC	P0500	0104	—	—	X	EC-312	
IACV/AAC VLV/CIRC	P0505	0205	—	—	X	EC-316	RA
CLOSED TP SW/CIRC	P0510	0203	—	—	X	EC-322	
A/T COMM LINE	P0600	0504	—	—	—	EC-327	BR
ECM	P0605	0301	—	—	X	EC-330	
INHIBITOR SW/CIRC	P0705	1101	—	—	X	AT-79	ST
ATF TEMP SEN/CIRC	P0710	1208	—	—	X	AT-83	
VEH SPD SEN/CIR AT	P0720	1102	—	—	X	AT-87	RS
ENGINE SPEED SIG	P0725	1207	—	—	X	AT-90	
A/T 1ST GR FNCTN	P0731	1103	—	—	X	AT-93	
A/T 2ND GR FNCTN	P0732	1104	—	—	X	AT-98	BT
A/T 3RD GR FNCTN	P0733	1105	—	—	X	AT-102	
A/T 4TH GR FNCTN	P0734	1106	—	—	X	AT-106	HA
TCC SOLENOID/CIRC	P0740	1204	—	—	X	AT-114	
A/T TCC S/V FNCTN	P0744	1107	—	—	X	AT-118	EL
L/PRESS SOL/CIRC	P0745	1205	—	—	X	AT-125	
SFT SOL A/CIRC	P0750	1108	—	—	X	AT-129	IDX
SFT SOL B/CIRC	P0755	1201	—	—	X	AT-133	
MAP/BAR SW SOL/CIR	P1105	1302	—	—	X	EC-332	
INT/V TIM CONT-B1	P1110	0805	—	—	X	EC-338	

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: These are not displayed with GST.

*4: 1st trip DTC No. is the same as DTC No.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

X: Applicable
—: Not applicable

Items (CONSULT screen terms)	DTC*4					Reference page
	CONSULT GST*2	ECM*1	SRT code	Test value/ Test limit	1st trip DTC	
TP SEN2/CIRCUIT	P1120	0406	—	—	X	EC-345
TANDEM TP SEN/CIRC	P1125	0110	—	—	X	EC-350
INT/V TIM CONT-B2	P1135	1301	—	—	X	EC-338
INTK TIM S/CIRC-B1	P1140	1303	—	—	X	EC-351
INTK TIM S/CIRC-B2	P1145	1304	—	—	X	EC-351
CLOSED LOOP-B1	P1148	0307	—	—	X	EC-357
CLOSED LOOP-B2	P1168	0308	—	—	X	EC-357
TACM SW SIGNALS	P1210	0106	—	—	X	EC-359
FPCM/CIRCUIT	P1220	1305	—	—	X	EC-362
IGN SIGNAL-PRIMARY	P1320	0201	—	—	X	EC-368
CPS/CIRC (OBD) COG	P1336	0905	—	—	X	EC-376
EGRC SOLENOID/V	P1400	1005	—	—	X	EC-381
EGR TEMP SEN/CIRC	P1401	0305	—	—	X	EC-386
EGR SYSTEM	P1402	0514	X	X	X*3	EC-392
EVAP SMALL LEAK	P1440	0213	X	X	X	EC-401
PURG VOLUME CONT/V	P1444	0214	—	—	X	EC-412
VENT CONTROL VALVE	P1446	0215	—	—	X	EC-419
EVAP PURG FLOW/MON	P1447	0111	X	X	X*3	EC-424
VENT CONTROL VALVE	P1448	0309	—	—	X	EC-431
VC/V BYPASS/V	P1490	0801	—	—	X	EC-437
VC CUT/V BYPASS/V	P1491	0311	—	—	X	EC-442
PURG CONT/V S/V	P1492	0807	—	—	X	EC-448
PURG CONT/V & S/V	P1493	0312	—	—	X	EC-453
A/T DIAG COMM LINE	P1605	0804	—	—	X	EC-327
TP SEN/CIRC A/T	P1705	1206	—	—	X	AT-137
P-N POS SW/CIRCUIT	P1706	1003	—	—	X	EC-460
O/R CLTCH SOL/CIRC	P1760	1203	—	—	X	AT-143

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: These are not displayed with GST.




*4: 1st trip DTC No. is the same as DTC No.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

The emission-related diagnostic information can be erased by the following methods.

-  Selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT GI
-  Selecting Mode 4 with GST (Generic Scan Tool) MA
-  Changing the diagnostic test mode from Diagnostic Test Mode II to Mode I by turning the mode selector on the ECM (Refer to EC-58.) EM
- If the battery terminal is disconnected, the emission-related diagnostic information will be lost within 24 hours. LC
- Erasing the emission-related diagnostic information, using CONSULT or GST is easier and quicker than switching the mode selector on the ECM. EC

The following data are cleared when the ECM memory is erased.

1. Diagnostic trouble codes
2. 1st trip diagnostic trouble codes
3. Freeze frame data
4. 1st trip freeze frame data
5. System readiness test (SRT) codes
6. Test values
7. Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures. FE

How to erase DTC (With CONSULT) AT

Note: If the diagnostic trouble code is not for A/T related items (see EC-2), skip steps 2 through 4. PD

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again. FA
2. Turn CONSULT "ON" and touch "A/T".
3. Touch "SELF-DIAG RESULTS". RA
4. Touch "ERASE". [The DTC in the TCM (Transmission Control Module) will be erased.] And touch "BACK" twice. BR
5. Touch "ENGINE".
6. Touch "SELF-DIAG RESULTS".
7. Touch "ERASE". (The DTC in the ECM will be erased.) ST
- If DTCs are displayed for both ECM and TCM (Transmission Control Module), they need to be erased individually for both ECM and TCM (Transmission Control Module). RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

How to erase DTC (With CONSULT)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
ENGINE
A/T

2. Turn CONSULT "ON", and touch "A/T".

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
ECU PART NUMBER

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
FAILURE DETECTED
SHIFT SOLENOID/V A
ERASE
PRINT

4. Touch "ERASE". (The DTC in the TCM will be erased.)



SELECT SYSTEM
ENGINE
A/T

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
ACTIVE TEST
DTC CONFIRMATION
ECM PART NUMBER

6. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
FAILURE DETECTED
TIME
SFT SOL A/CIRC
[P0750]
0
ERASE
PRINT
FFdata

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SAT904I

How to erase DTC (With GST)

Note: If the diagnostic trouble code is not for A/T related items (see page EC-2), skip step 2.


1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with GST (Generic Scan Tool).

How to erase DTC (No Tools)

Note: If the diagnostic trouble code is not for A/T related items (see EC-2), skip step 2.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM. (See EC-58.)

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

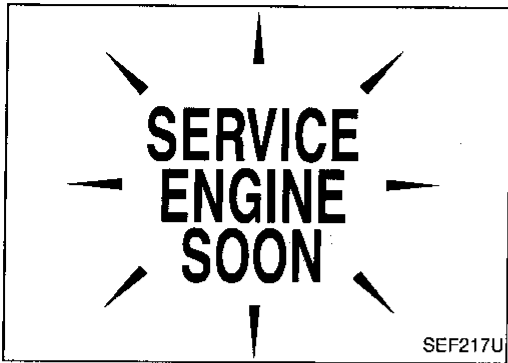

Malfunction Indicator Lamp (MIL)

The malfunction indicator lamp is located on the instrument panel.

1. The malfunction indicator lamp will light up when the ignition switch is turned ON without the engine running. This is for checking the blown lamp.
 - If the malfunction indicator lamp does not light up, see the WARNING LAMPS AND CHIME (BUZZER) in the EL section. (Or see EC-502.)
2. When the engine is started, the malfunction indicator lamp should go off.
 - If the lamp remains on, the on board diagnostic system has detected an engine system malfunction.

GI
MA
EM

ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following four functions.

LC

Diagnostic Test Mode I

1. BULB CHECK : This function checks the bulb for damage (blown, open circuit, etc.) of the malfunction indicator lamp. If the MIL does not come on, check MIL circuit and ECM test mode. (See next page.)
2. MALFUNCTION WARNING : This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (2 trip detection logic), the MIL will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MIL in the 1st trip.
 - "Misfire (possible three way catalyst damage)"
 - "Closed loop control"
 - Fail-safe mode

EC

FE

AT

PD

FA

Diagnostic Test Mode II

1. SELF-DIAGNOSTIC RESULTS : This function allows 1st trip DTCs to be read.
2. FRONT HEATED OXYGEN SENSOR MONITOR : This function allows the fuel mixture condition (lean or rich), monitored by front heated oxygen sensor, to be read.

RA

BR




MIL Flashing without DTC

If the ECM is in Diagnostic Test Mode II, the MIL may flash when the engine is running. In this case, check ECM test mode selector following "HOW TO SWITCH DIAGNOSTIC TEST MODES" on next page.

How to switch the diagnostic test (function) modes and details of the above functions are described later. (See page EC-58.)

ST

RS

Condition		Diagnostic Test Mode I	Diagnostic Test Mode II
Ignition switch in "ON" position 	Engine stopped 	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 	MALFUNCTION WARNING	FRONT HEATED OXYGEN SENSOR MONITOR

BT

HA


EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

HOW TO SWITCH DIAGNOSTIC TEST MODES

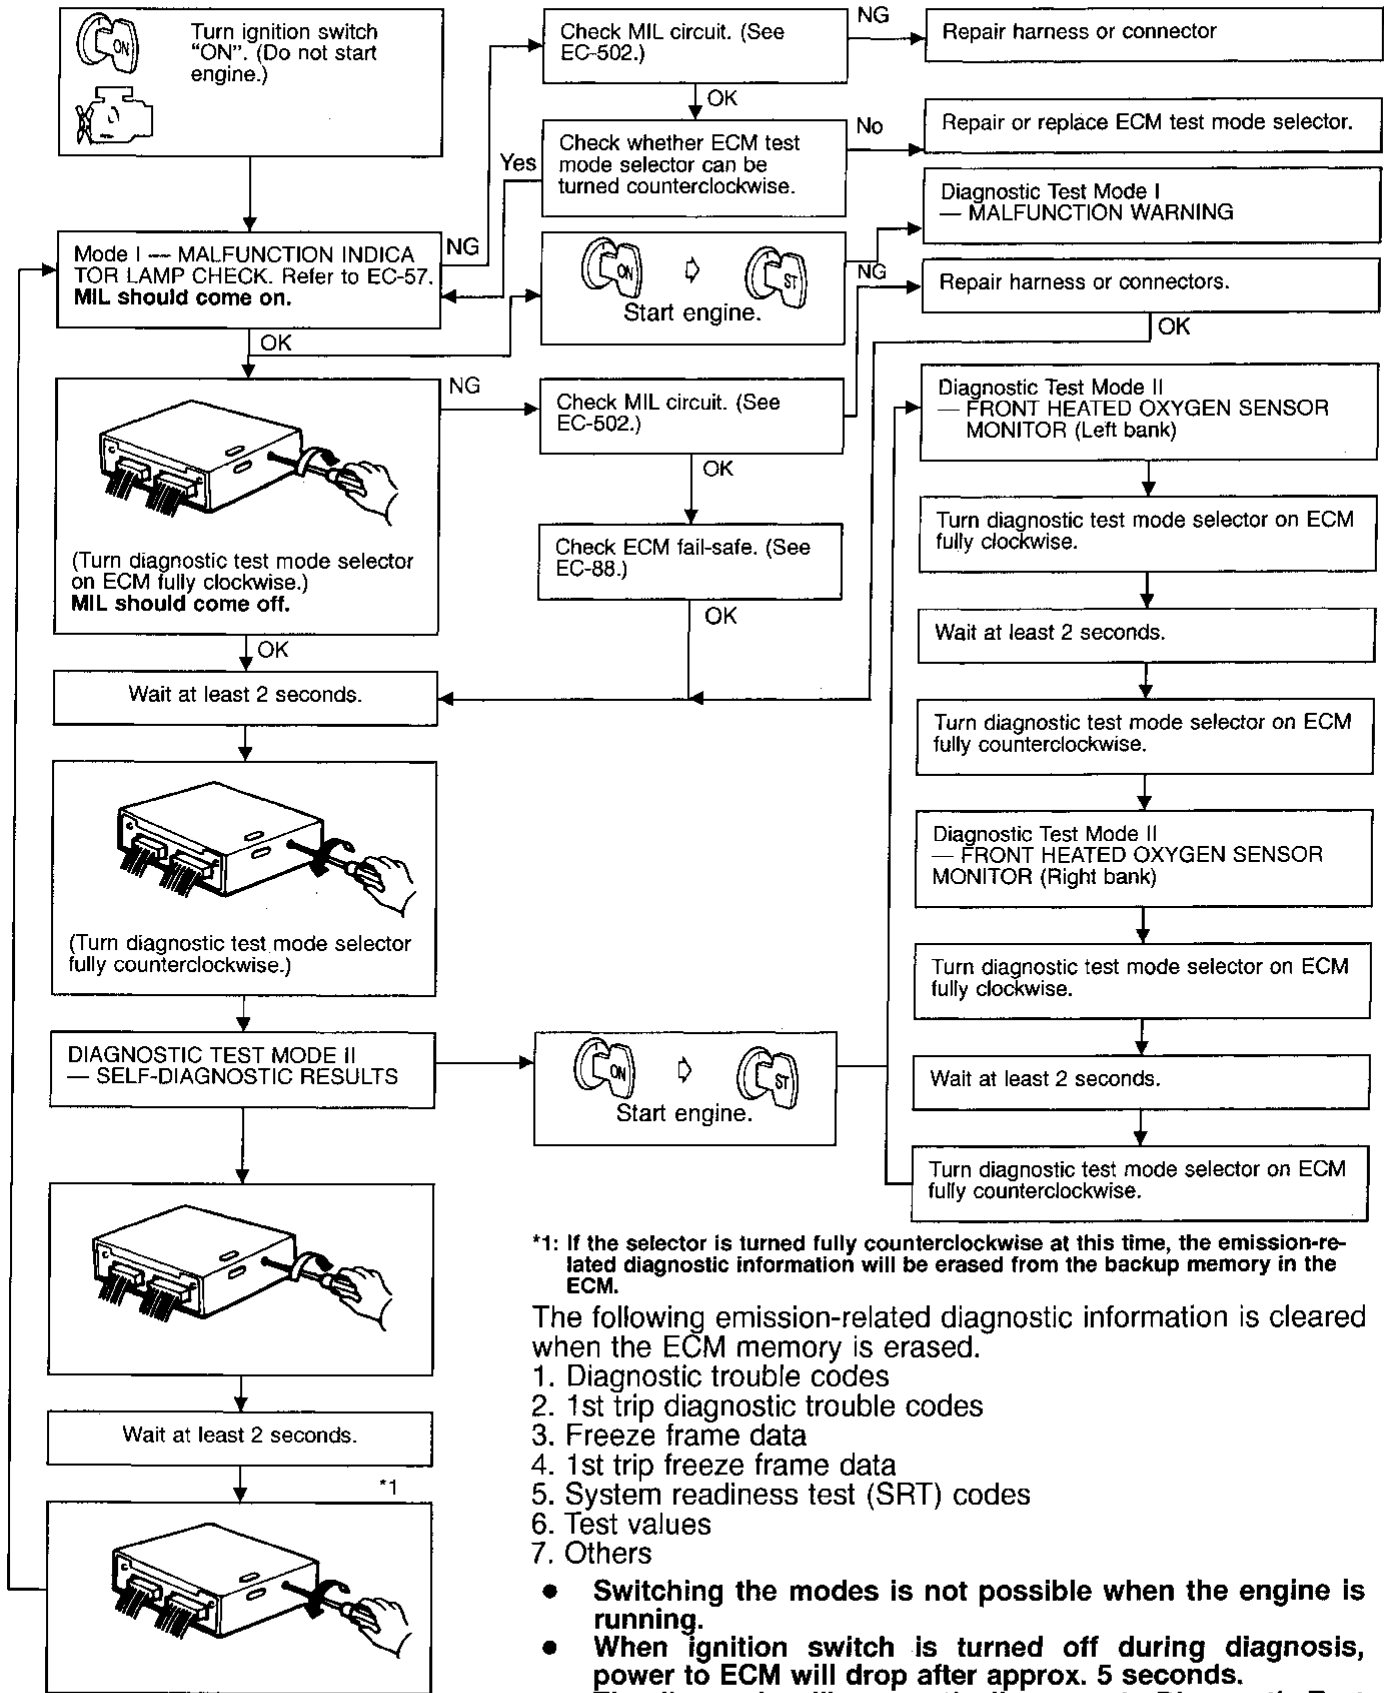

*1: If the selector is turned fully counterclockwise at this time, the emission-related diagnostic information will be erased from the backup memory in the ECM.

The following emission-related diagnostic information is cleared when the ECM memory is erased.

1. Diagnostic trouble codes
2. 1st trip diagnostic trouble codes
3. Freeze frame data
4. 1st trip freeze frame data
5. System readiness test (SRT) codes
6. Test values
7. Others

- Switching the modes is not possible when the engine is running.
- When ignition switch is turned off during diagnosis, power to ECM will drop after approx. 5 seconds. The diagnosis will automatically return to Diagnostic Test Mode I.
- Turn back diagnostic test mode selector to the fully counterclockwise position whenever vehicle is in use.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

DIAGNOSTIC TEST MODE I—BULB CHECK

In this mode, the MALFUNCTION INDICATOR LAMP on the instrument panel should stay ON. If it remains OFF, check the bulb. (See the WARNING LAMPS AND CHIME in the EL section. Or see EC-502.)

DIAGNOSTIC TEST MODE I—MALFUNCTION WARNING



MALFUNCTION INDICATOR LAMP	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction

- These Diagnostic Trouble Code Numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

DIAGNOSTIC TEST MODE II—SELF-DIAGNOSTIC RESULTS

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MALFUNCTION INDICATOR LAMP as shown below.

The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode 1 (Malfunction warning), all displayed items are 1st trip DTC's. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTC's or 1st trip DTC's. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the consult or GST. A DTC will be used as an example for how to read a code.

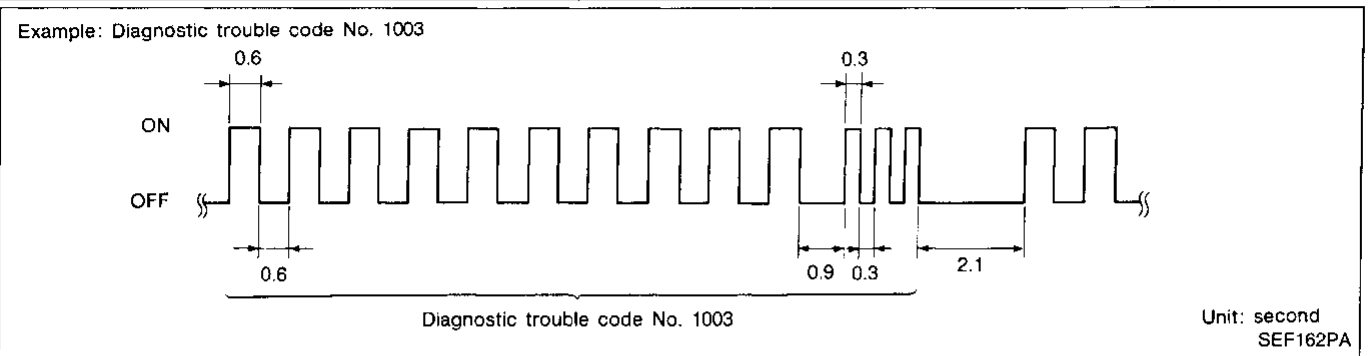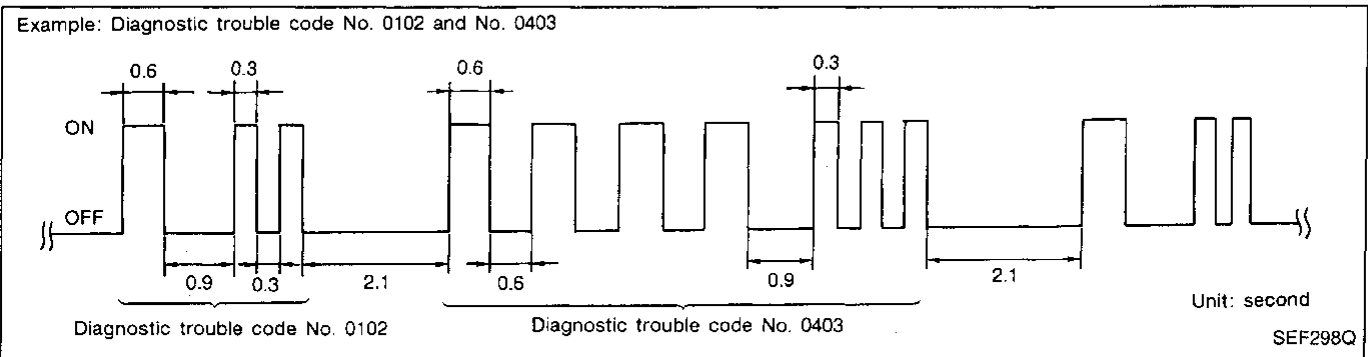

Long (0.6 second) blinking indicates the two LH digits of number and short (0.3 second) blinking indicates the two RH digits of number. For example, the malfunction indicator lamp blinks 10 times for 6 seconds (0.6 sec x 10 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "1003" and refers to the malfunction of the park/neutral position switch.

In this way, all the detected malfunctions are classified by their diagnostic trouble code numbers. The DTC "0505" refers to no malfunction. (See DIAGNOSTIC TROUBLE CODE INDEX, refer to page EC-2.)

HOW TO ERASE DIAGNOSTIC TEST MODE II (Self-diagnostic results)


The diagnostic trouble code can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "HOW TO SWITCH DIAGNOSTIC TEST MODES".)

- If the battery terminal is disconnected, the diagnostic trouble code will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

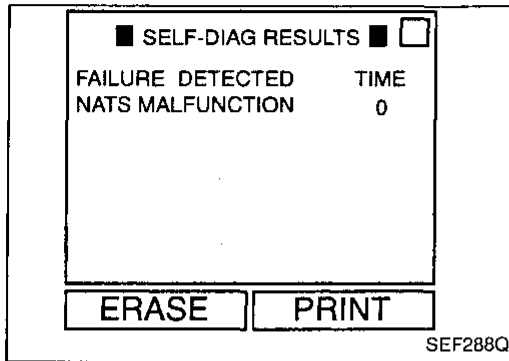

- If the security indicator lights up with the ignition switch in the "ON" position or "NATS MALFUNCTION" is displayed on "SELF-DIAG RESULTS" screen, perform self-diagnostic results mode with CONSULT using NATS program card (NATS-E960U). Refer to EL section.
- Confirm no self-diagnostic results of NATS is displayed before touching "ERASE" in "SELF-DIAG RESULTS" mode with CONSULT.
- When replacing ECM, initialization of NATS system and registration of all NATS ignition key IDs must be carried out with CONSULT using NATS program card (NATS-E960U).

Therefore, be sure to receive all keys from vehicle owner. Regarding the procedures of NATS initialization and NATS ignition key ID registration, refer to CONSULT operation manual, NATS.

NOTE:

NATS: IPPS (Infiniti Personal Protection System)

DIAGNOSTIC TEST MODE II—FRONT HEATED OXYGEN SENSOR MONITOR

In this mode, the MALFUNCTION INDICATOR LAMP displays the condition of the fuel mixture (lean or rich) which is monitored by the front heated oxygen sensor.

MALFUNCTION INDICATOR LAMP	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop control
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop control

*: Maintains conditions just before switching to open loop.

To check the front heated oxygen sensor function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MALFUNCTION INDICATOR LAMP comes ON more than 5 times every 10 seconds when measured at 2,000 rpm under no-load.


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

How to switch monitored sensor from left bank to right bank or vice versa

• The following procedure should be performed while the engine is running.

1. Turn diagnostic test mode selector on ECM fully clockwise.
2. Wait at least 2 seconds.
3. Turn diagnostic test mode selector on ECM fully counterclockwise.

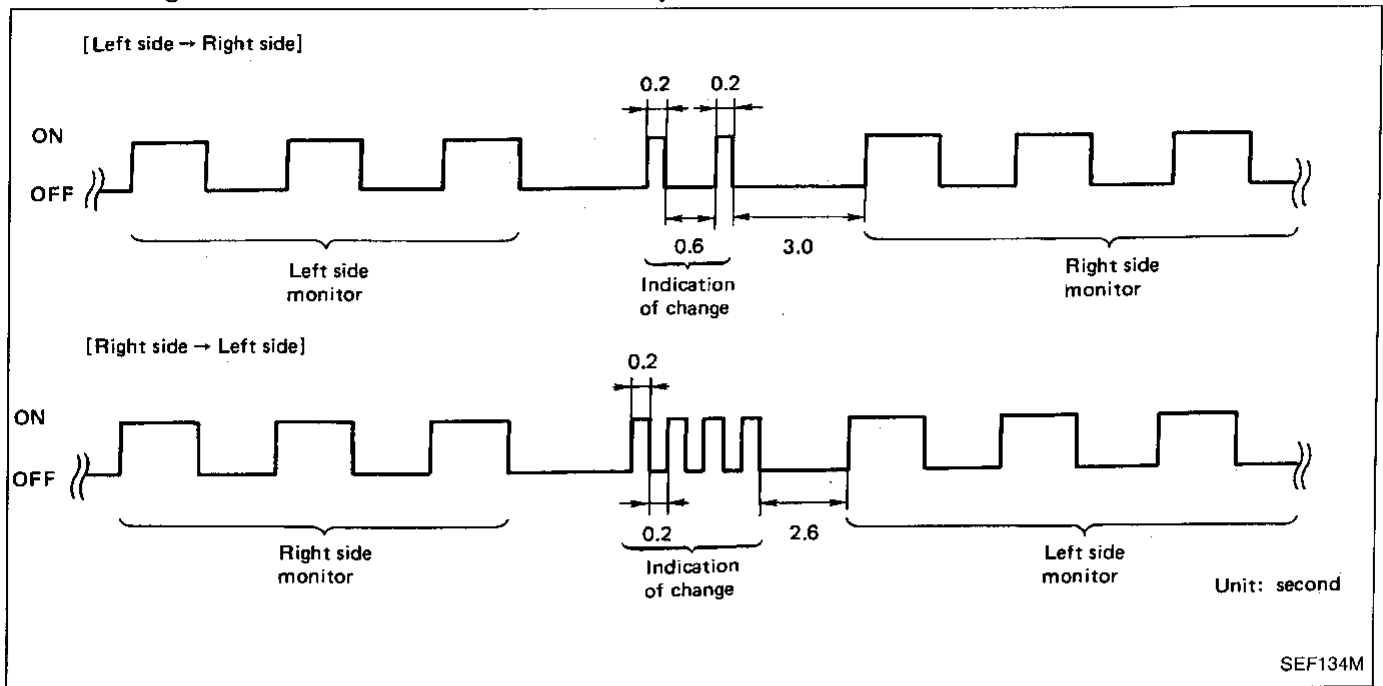

OBD System Operation Chart

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on. For details, refer to "Two Trip Detection Logic" on EC-43.
- The MIL will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel injection system). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" IN "SELF-DIAGNOSTIC RESULTS" mode of CONSULT will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in "OK" for the 2nd trip.

SUMMARY CHART

Items	Fuel Injection System	Misfire	Except the lefts
MIL (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

Details about patterns "A", "B", and "C" are on EC-63.


*1: Clear timing is at the moment OK is detected.

*2: Clear timing is when the same malfunction is detected in the 2nd trip.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

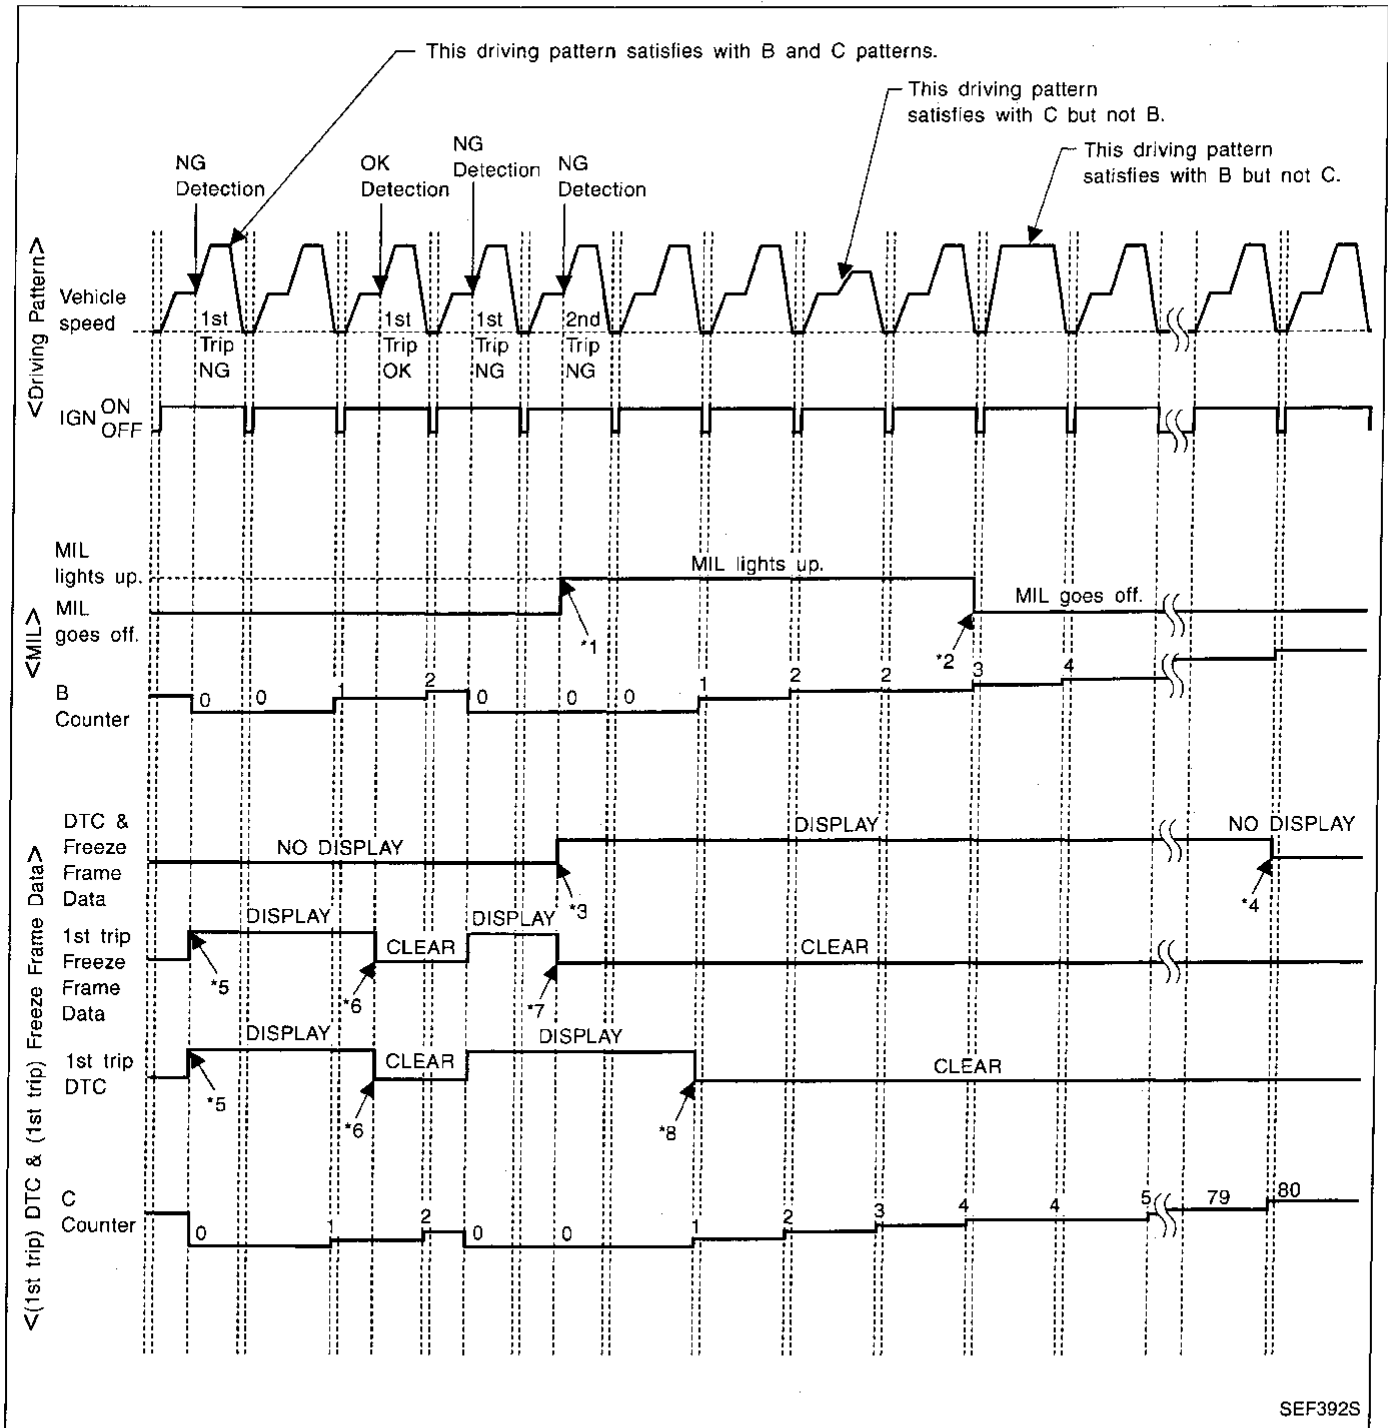

SEF392S

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- *8: 1st trip DTC will be cleared when vehicle is driven a time (pattern C) without the same malfunction after DTC is stored in ECM.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving pattern B>

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will reset when the malfunction is detected once regardless of the driving pattern.
- The B counter will count up times driving pattern B is satisfied without the malfunction.
- The MIL will go off when the B counter reaches 3. (*2 in "OBD SYSTEM OPERATION CHART")

<Driving pattern C>

Driving pattern C means the vehicle operation as follows:

(1) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), "T" should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), "T" should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than $\geq 70^\circ\text{C}$ (158°F)

- The C counter will be cleared when the malfunction is detected regardless of (1).
- The C counter will be counted up when (1) is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted a time without the same malfunction after DTC is stored in ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

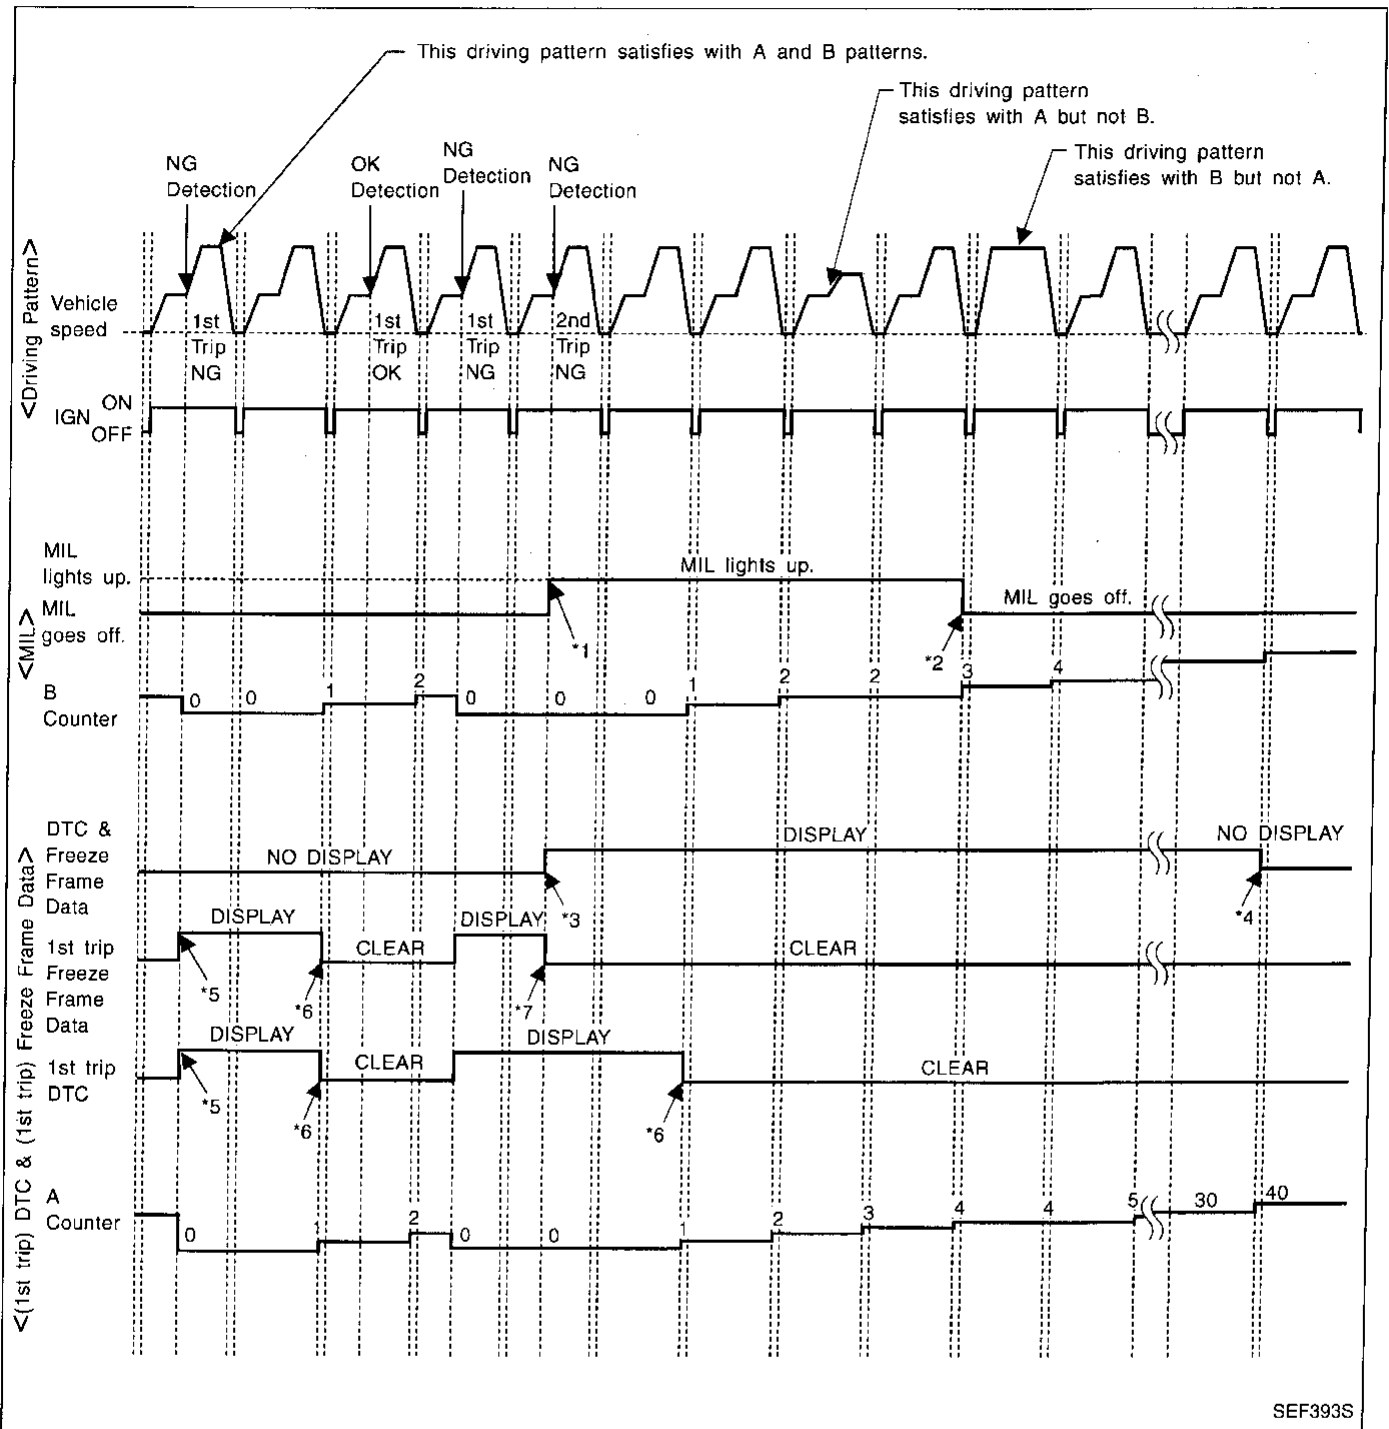

*1: When the same malfunction is detected in two consecutive trips, MIL will light up.

*2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.

*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

*6: 1st trip DTC will be cleared after vehicle is driven a time (pattern A) without the same malfunction.


*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving pattern A>

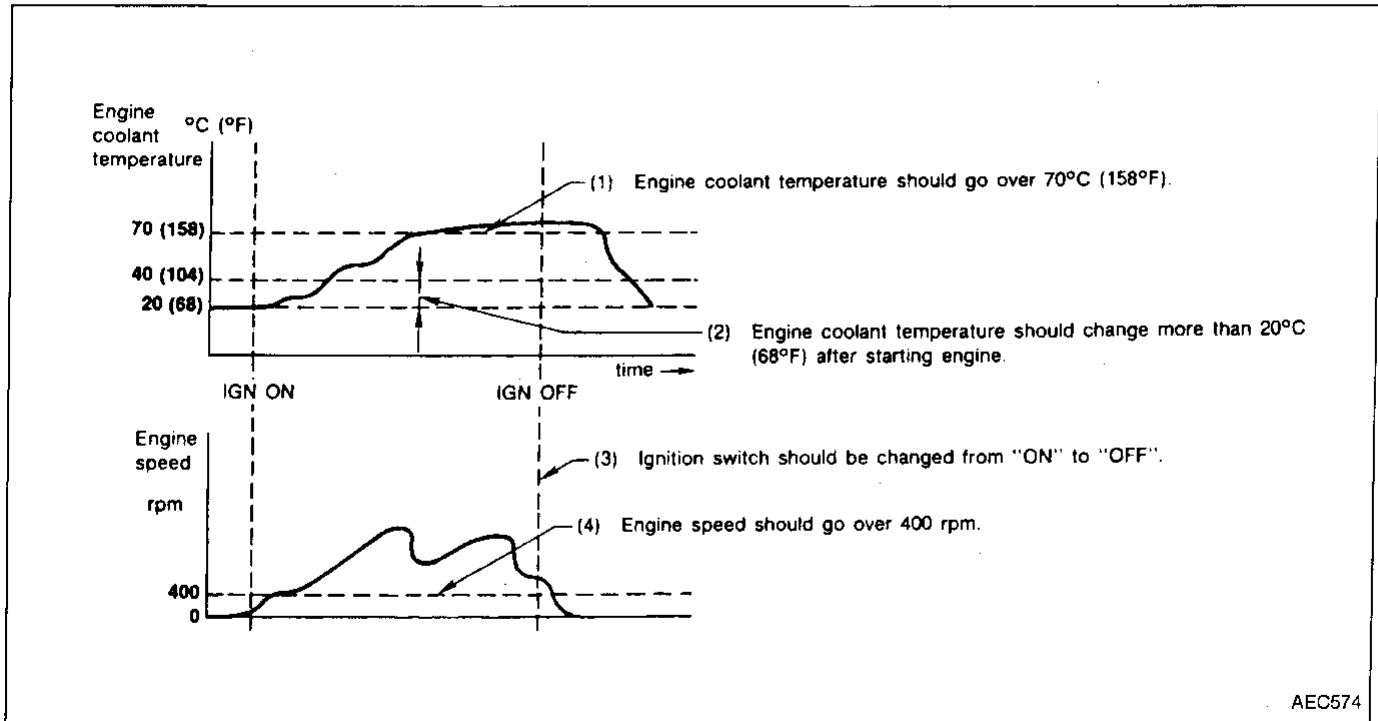

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving pattern B>

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (*2 in "OBD SYSTEM OPERATION CHART").

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

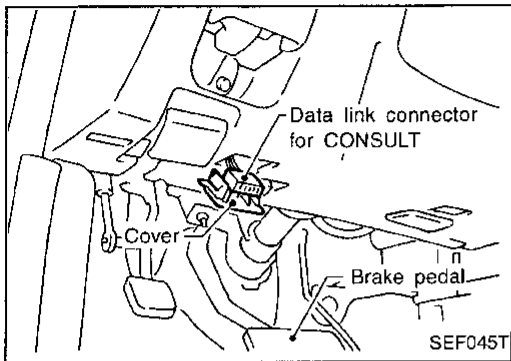


CONSULT

CONSULT INSPECTION PROCEDURE


1. Turn off ignition switch.
2. Connect "CONSULT" to data link connector for CONSULT. (Data link connector for CONSULT is located beside the hood lock release handle.)

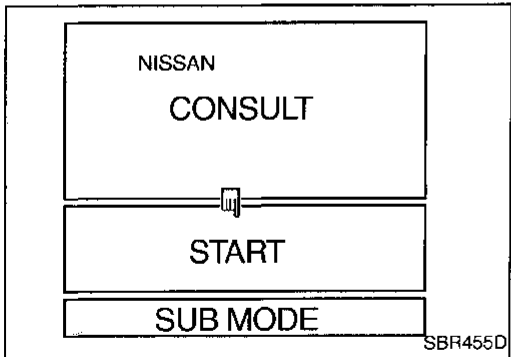

3. Turn on ignition switch.
4. Touch "START".

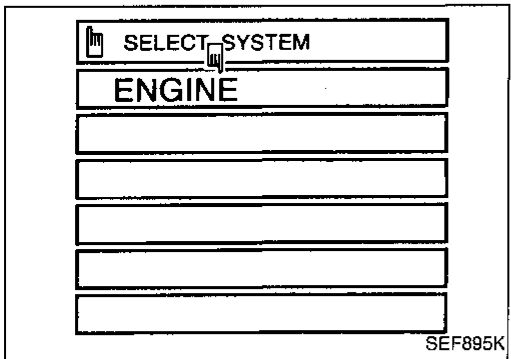


5. Touch "ENGINE".

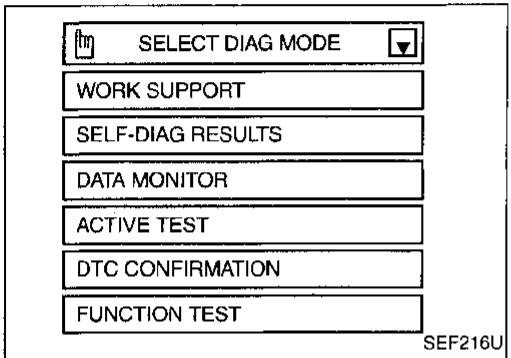

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT Operation Manual. This sample shows the display when using the UE0BD98 program card. Screen differs according to the program card used.

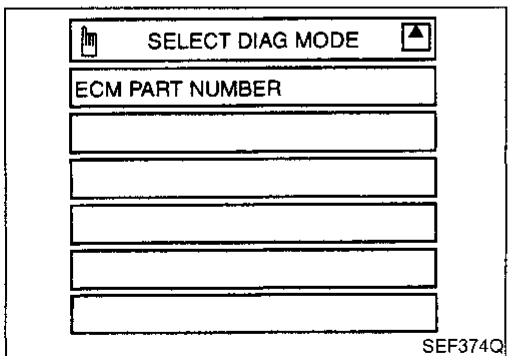

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

ECCS COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

Item		DIAGNOSTIC TEST MODE							
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS*1		DATA MONITOR	ACTIVE TEST	FUNCTION TEST	DTC CONFIRMATION	
				FREEZE FRAME DATA*2				SRT STATUS	DTC WORK SUP-PORT
ECCS COMPONENT PARTS	INPUT	Camshaft position sensor		X	X	X			
		Mass air flow sensor		X		X			
		Engine coolant temperature sensor		X	X	X	X		
		Front heated oxygen sensor		X		X		X	X
		Rear heated oxygen sensor		X		X		X	X
		Vehicle speed sensor		X	X	X		X	
		Throttle position sensor	X	X		X		X	
		Tank fuel temperature sensor		X		X	X		
		EVAP control system pressure sensor		X		X			
		Absolute pressure sensor		X		X			
		EGR temperature sensor		X		X			
		Intake air temperature sensor		X		X			
		Crankshaft position sensor (OBD)		X					
		Knock sensor		X					
		Ignition switch (start signal)				X		X	
		Closed throttle position switch		X					
		Closed throttle position switch (throttle position sensor signal)				X		X	
		Air conditioner switch				X			
		Park/Neutral position switch		X		X		X	
		Power steering oil pressure switch				X		X	
	Air conditioner switch				X				
	Battery voltage				X				
	Ambient air temperature switch				X				
	OUTPUT	Injectors				X	X	X	
		Power transistor (Ignition timing)		X (Ignition signal)		X	X	X	
		IACV-AAC valve	X	X		X	X	X	
		EVAP canister purge volume control valve		X		X	X		X
		Air conditioner relay				X			
Fuel pump relay		X			X	X	X		
EGRC-solenoid valve			X		X	X	X*3		
Front heated oxygen sensor heater			X		X			X	
Rear heated oxygen sensor heater			X		X			X	
EVAP canister purge control solenoid valve			X		X	X			
EVAP canister vent control valve			X		X	X			
Vacuum cut valve bypass valve			X		X	X		X	
MAP/BARO switch solenoid valve		X		X	X				
Calculated load value			X		X				

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-45.

*3: If this function test mode is not available, use "ACTIVE TEST" mode.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*1
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC confirmation	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.
Function test	Conducted by CONSULT instead of a technician to determine whether each system is "OK" or "NG".
ECM part numbers	ECM part numbers can be read.

*1 The following emission-related diagnostic information is cleared when the ECM memory is erased.

1. Diagnostic trouble codes
2. 1st trip diagnostic trouble codes
3. Freeze frame data
4. 1st trip freeze frame data
5. System readiness test (SRT) codes
6. Test values
7. Others

WORK SUPPORT MODE

WORK ITEM	CONDITION	USAGE
THRTL POS SEN ADJ	CHECK THE THROTTLE POSITION SENSOR SIGNAL. ADJUST IT TO THE SPECIFIED VALUE BY ROTATING THE SENSOR BODY UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● IGN SW "ON" ● ENG NOT RUNNING ● ACC PEDAL NOT PRESSED 	When adjusting throttle position sensor initial position
IGNITION TIMING ADJ	IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING "START". AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CRANKSHAFT POSITION SENSOR.	When adjusting initial ignition timing
IACV-AAC VALVE ADJ	SET ENGINE SPEED AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● ENGINE WARMED UP ● NO-LOAD 	When adjusting idle speed
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> ● FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS.	When releasing fuel pressure from fuel line
EVAP SYSTEM CLOSE	OPEN THE VACUUM CUT VALVE BYPASS VALVE AND CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE THE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● IGN SW "ON" ● ENGINE NOT RUNNING ● AMBIENT TEMPERATURE IS ABOVE 0°C (32°F). ● NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM ● TANK FUEL TEMP. IS MORE THAN 0°C (32°F). ● WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE" 	When detecting EVAP vapor leak point of EVAP system

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

SELF-DIAGNOSTIC MODE

DTC and 1st trip DTC

Regarding items of "DTC and 1st trip DTC", refer to "DIAGNOSTIC TROUBLE CODE INDEX" (See EC-2.).

Freeze frame data and 1st trip freeze frame data

Freeze frame data item*1	Description	
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> ECCS component part/control system has a trouble code, it is displayed as "PXXXX". [Refer to "Alphabetical & P No. Index for DTC (EC-2)."] 	GI MA EM
FUEL SYS-B1*2	<ul style="list-style-type: none"> "Fuel injection system status" at the moment a malfunction is detected is displayed. One mode in the following is displayed. "MODE 2": Open loop due to detected system malfunction "MODE 3": Open loop due to driving conditions (power enrichment, deceleration enrichment) "MODE 4": Closed loop - using heated oxygen sensor(s) as feedback for fuel control "MODE 5": Open loop - has not yet satisfied condition to go to closed loop 	LC EC
FUEL SYS-B2*2		FE
CAL/LD VALUE [%]	<ul style="list-style-type: none"> The calculated load value at the moment a malfunction is detected is displayed. 	
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> The engine coolant temperature at the moment a malfunction is detected is displayed. 	AT
S-FUEL TRM-B1 [%]	<ul style="list-style-type: none"> "Short-term fuel trim" at the moment a malfunction is detected is displayed. 	
S-FUEL TRM-B2 [%]	<ul style="list-style-type: none"> The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule. 	PD
L-FUEL TRM-B1 [%]	<ul style="list-style-type: none"> "Long-term fuel trim" at the moment a malfunction is detected is displayed. 	
L-FUEL TRM-B2 [%]	<ul style="list-style-type: none"> The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim. 	FA
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> The engine speed at the moment a malfunction is detected is displayed. 	RA
VEHICL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> The vehicle speed at the moment a malfunction is detected is displayed. 	BR
ABSOL PRESS [kPa] or [kg/cm ²] or [psi]	<ul style="list-style-type: none"> The absolute pressure at the moment a malfunction is detected is displayed. 	ST

*1: The items are the same as those of 1st trip freeze frame data.

*2: Regarding model Y33, "-B1" indicates left bank and "-B2" indicates right bank.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

DATA MONITOR MODE

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CMPS-RPM (POS) [rpm]	○	○	<ul style="list-style-type: none"> Indicates the engine speed computed from the POS signal (1° signal) of the crankshaft position sensor (POS). 	
MAS AIR/FL SE [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
FR O2 SEN-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the front heated oxygen sensor is displayed. 	
FR O2 SEN-B2 [V]	○			
RR O2 SEN-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the rear heated oxygen sensor is displayed. 	
RR O2 SEN-B2 [V]	○			
FR O2 MNTR-B1 [RICH/LEAN]	○	○	<ul style="list-style-type: none"> Display of front heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.
FR O2 MNTR-B2 [RICH/LEAN]	○	○		
RR O2 MNTR-B1 [RICH/LEAN]	○		<ul style="list-style-type: none"> Display of rear heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the amount of oxygen after three way catalyst is relatively large. LEAN ... means the amount of oxygen after three way catalyst is relatively small. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
RR O2 MNTR-B2 [RICH/LEAN]	○	○		
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. 	
THRTL/P SEN2 [V]	○		<ul style="list-style-type: none"> Secondary throttle position sensor signal voltage is displayed. 	
TANK F/TMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The fuel temperature judged from the tank fuel temperature sensor signal voltage is displayed. 	
EGR TEMP SEN [V]	○		<ul style="list-style-type: none"> The signal voltage of the EGR temperature sensor is displayed. 	
INT/A TEMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated. 	

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.
Regarding Y33 model, "-B1" indicates left bank and "-B2" indicates right bank.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks	
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal. 	GI
CLSD THL/P SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the throttle position sensor signal. 		MA
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal. 		EM
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position switch signal. 		LC
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure signal is indicated. 		EC
LOAD SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicate [ON/OFF] condition from the electrical load signal and/or lighting switch. ON ... rear defogger is operating. OFF ... rear defogger is not operating. 		FE
AMB TEMP SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicate [ON/OFF] condition from the ambient temperature signal. ON ... When the ambient temperature is lower than specified value. OFF ... When the ambient temperature is higher than specified value. 		AT
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch. 		PD
A/C PRESS SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicate [ON/OFF] condition of air conditioner pressure switch signal. ON ... A/C pressure is higher than specified value. OFF ... A/C pressure is lower than specified value. 		FA
INJ PULSE-B1 [msec]		○	<ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated. 	BR
INJ PULSE-B2 [msec]					ST
B/FUEL SCHDL [msec]		○	<ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 		RS
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. 	BT
IACV-AAC/V [step]		○	<ul style="list-style-type: none"> Indicates the idle air control valve (AAC valve) control value computed by ECM according to the input signals. 		HA
PURG VOL C/V [step]		○	<ul style="list-style-type: none"> Indicates the EVAP canister purge volume control valve computed by the ECM according to the input signals. The opening becomes larger as the value increases. 		EL
A/F ALPHA-B1 [%]			<ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control. 	IDX
A/F ALPHA-B2 [%]					
EVAP SYS PRES [V]			<ul style="list-style-type: none"> The signal voltage of EVAP control system pressure sensor is displayed. 		
AIR COND RLY [ON/OFF]			<ul style="list-style-type: none"> The air conditioner relay control condition (determined by ECM according to the input signal) is indicated. 		

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
FUEL PUMP RLY [ON/OFF]			<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 	
INT/V SOL-B1 INT/V SOL-B2 [ON/OFF]			<ul style="list-style-type: none"> The control condition of the intake valve timing control solenoid valve is indicated. ON ... Intake valve timing control is operating. OFF ... Intake valve timing control is not operating. 	
INT/V TIM-B1 INT/V TIM-B2 [deg]			<ul style="list-style-type: none"> Indicate [deg] of intake camshaft advanced angle. 	
COOLING FAN [HI/OFF]			<ul style="list-style-type: none"> The control condition of the cooling fan (determined by ECM according to the input signal) is indicated. HI ... High speed operation OFF ... Stop 	
EGRC SOL/V [ON/OFF] (flow/cut)			<ul style="list-style-type: none"> The control condition of the EGR valve & EVAP canister purge control solenoid valve (determined by ECM according to the input signal) is indicated. OFF ... EGR or EGR and EVAP canister purge operation is cut-off ON ... EGR or EGR and EVAP canister purge is operational 	<ul style="list-style-type: none"> EGRC-solenoid valve is for California models, and the EGR valve and EVAP canister purge control valve is for all but California models.
VENT CONT/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the EVAP canister vent control valve (determined by ECM according to the input signal) is indicated. ON ... Closed OFF ... Open 	
FR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of front heated oxygen sensor's heater determined by ECM according to the input signals. 	
FR O2 HTR-B2 [ON/OFF]				
RR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of rear heated oxygen sensor's heater determined by ECM according to the input signals. 	
RR O2 HTR-B2 [ON/OFF]				
VC/V BYPASS/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the vacuum cut valve bypass valve (determined by ECM according to the input signal) is indicated. ON ... Open OFF ... Closed 	
PURG CONT S/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the EVAP canister purge control solenoid valve (computed by the engine control module according to the input signals) is indicated. ON ... Canister purge is operational OFF ... Canister purge operation is cut-off 	
CAL/LD VALUE [%]			<ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. 	
ABSOL TH/P/S [%]			<ul style="list-style-type: none"> "Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor. 	
MASS AIRFLOW [g-m/s]			<ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass airflow sensor. 	
FPCM DR VOLT [V]			<ul style="list-style-type: none"> The voltage between fuel pump and FPCM is displayed. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
FPCM [LOW/HI]			<ul style="list-style-type: none"> The control condition of the fuel pump control module (FPCM) (determined by ECM according to the input signal) is indicated. LOW ... Low amount of fuel flow HI ... High amount of fuel flow 	
MAP/BARO SW/V [MAP/BARO]			<ul style="list-style-type: none"> The control condition of the MAP/BARO switch solenoid valve (determined by ECM according to the input signal) is indicated. MAP ... Intake manifold absolute pressure BARO ... Barometric pressure 	
ABSOL PRES/SE [V]			<ul style="list-style-type: none"> The signal voltage of the absolute pressure sensor is displayed. 	
VOLTAGE [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	<ul style="list-style-type: none"> Only "#" is displayed if item is unable to be measured. Figures with "#"s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

ACTIVE TEST MODE

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Fuel injectors Front heated oxygen sensor
IACV-AAC/V OPENING	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. Change the IACV-AAC valve opening step using CONSULT. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> Harness and connector IACV-AAC valve
ENG COOLANT TEMP	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the engine coolant temperature using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Engine coolant temperature sensor Fuel injectors
IGNITION TIMING	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Adjust ignition timing (by moving camshaft position sensor)
POWER BALANCE	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. A/C switch "OFF" Shift lever "N" Cut off each injector signal one at a time using CONSULT. 	Engine runs rough or dies.	<ul style="list-style-type: none"> Harness and connector Compression Injectors Ignition coil with power transistor Spark plugs
COOLING FAN	<ul style="list-style-type: none"> Ignition switch: ON Turn the cooling fan "ON" and "OFF" using CONSULT. 	Cooling fan moves and stops.	<ul style="list-style-type: none"> Harness and connector Cooling fan motor
FUEL PUMP RELAY	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> Harness and connector Fuel pump relay
EGRC SOLENOID VALVE	<ul style="list-style-type: none"> Ignition switch: ON Turn solenoid valve "ON" and "OFF" with CONSULT and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector EGR valve & EVAP canister purge control solenoid valve
VALVE TIMING SOL	<ul style="list-style-type: none"> Ignition switch: ON Turn solenoid valve "ON" and "OFF" with CONSULT and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Intake valve timing control solenoid valve
SELF-LEARNING CONT	<ul style="list-style-type: none"> In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen. 		
PURG VOL CONT/V	<ul style="list-style-type: none"> Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control valve opening step using CONSULT. 	Engine speed changes according to the opening step.	<ul style="list-style-type: none"> Harness and connector EVAP canister purge volume control valve
TANK F/TEMP SEN	<ul style="list-style-type: none"> Change the tank fuel temperature using CONSULT. 		
VENT CONT/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the VENT CONT/V "ON and OFF" with CONSULT and listen for operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness or connector EVAP canister vent control valve
VC/V BYPASS/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the VC/V BYPASS/V "ON and OFF" with CONSULT and listen for operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness or connector Vacuum cut bypass valve
PURG CONT S/V	<ul style="list-style-type: none"> Engine: Run engine at 2,000 rpm. Turn the EVAP canister purge control solenoid valve "ON" and "OFF" using CONSULT and listen for operating sound. 	EVAP canister purge control solenoid valve makes an operating sound. Check vacuum signal for EVAP canister purge control valve. VC ON ... Vacuum exists. VC OFF ... Vacuum does not exist.	<ul style="list-style-type: none"> Harness and connector EVAP canister purge control solenoid valve Vacuum hose
MAP/BARO SW/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the MAP/BARO switch solenoid valve between "MAP" and "BARO" using CONSULT and listen for operating sound. 	MAP/BARO switch solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector MAP/BARO switch solenoid valve
FPCM	<ul style="list-style-type: none"> Ignition switch: ON Select "LOW" and "HI" with CONSULT and check that "FPCM F/P VOLT" of CONSULT changes. 	"FPCM F/P VOLT" of CONSULT changes as follows; LOW ... Approx. 4.7V HI ... Approx. 0.4V	<ul style="list-style-type: none"> Harness and connector FPCM

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

DTC CONFIRMATION MODE

SRT STATUS mode

For details, refer to "SYSTEM READINESS TEST (SRT) CODE", EC-45.

DTC WORK SUPPORT mode

Test mode	Test item	Condition	Reference page
EVAPORATIVE SYSTEM	PURGE FLOW P1447	Refer to corresponding trouble diagnosis for DTC.	EC-424
	VC CUT/V BP/V P1491		EC-442
	PURG CN/V & S/V P1493		EC-454
	PURG VOL CN/V P1444		EC-412
	EVAP SML LEAK P0440		EC-285
	EVAP SML LEAK P1440		EC-401
FR O2 SENSOR	FR O2 SEN-B1 P0131		EC-163
	FR O2 SEN-B1 P0132		EC-169
	FR O2 SEN-B1 P0133		EC-175
	FR O2 SEN-B1 P0130		EC-156
	FR O2 SEN-B2 P0151		EC-163
	FR O2 SEN-B2 P0152		EC-169
	FR O2 SEN-B2 P0153		EC-175
	FR O2 SEN-B2 P0150		EC-156
RR O2 SENSOR	RR O2 SEN-B1 P0137		EC-195
	RR O2 SEN-B1 P0138		EC-203
	RR O2 SEN-B1 P0139		EC-211
	RR O2 SEN-B2 P0157		EC-195
	RR O2 SEN-B2 P0158		EC-203
	RR O2 SEN-B2 P0159		EC-211
EGR SYSTEM	EGR SYSTEM P0400	EC-267	
	EGRC-BPT/VLV P0402	EC-277	
	EGR SYSTEM P1402	EC-392	

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

FUNCTION TEST MODE

FUNCTION TEST ITEM	CONDITION	JUDGEMENT		CHECK ITEM (REMEDY)
SELF-DIAG RESULTS	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Displays the results of on board diagnostic system. 	—		Objective system
CLOSED THROTTLE POSI	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Throttle position sensor circuit is tested when throttle is opened and closed fully. ("IDLE POSITION" is the test item name for the vehicles in which idle is selected by throttle position sensor.) 	Throttle valve: opened	OFF	<ul style="list-style-type: none"> Harness and connector Throttle position sensor (Closed throttle position) Throttle position sensor (Closed throttle position) adjustment Throttle linkage Verify operation in DATA MONITOR mode.
		Throttle valve: closed	ON	
THROTTLE POSI SEN CKT	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Throttle position sensor circuit is tested when throttle is opened and closed fully. 	Range (Throttle valve fully opened — Throttle valve fully closed)	More than 3.0V	<ul style="list-style-type: none"> Harness and connector Throttle position sensor Throttle position sensor adjustment Throttle linkage Verify operation in DATA MONITOR mode.
PARK/NEUT POSI SW CKT	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Inhibitor circuit is tested when shift lever is manipulated. 	Out of N/P positions	OFF	<ul style="list-style-type: none"> Harness and connector Inhibitor switch Park/Neutral position relay Linkage or Inhibitor switch adjustment
		In N/P positions	ON	
FUEL PUMP CIRCUIT	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Fuel pump circuit is tested by checking the pulsation in fuel pressure when fuel tube is pinched. 	There is pressure pulsation on the fuel feed hose.		<ul style="list-style-type: none"> Harness and connector Fuel pump Fuel pump relay Fuel filter clogging Fuel level
VALVE TIMING S/V CIRCUIT	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Intake valve timing control solenoid circuit is tested by checking solenoid valve operating noise. 	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> Harness and connector Intake valve timing control solenoid.
EGRC SOL/V CIRCUIT*	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve circuit is tested by checking solenoid valve operating noise. 	The solenoid valve makes an operating sound every 3 seconds.		<ul style="list-style-type: none"> Harness and connector EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve
COOLING FAN CIRCUIT	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Cooling fan circuit is tested when cooling fan is rotated. 	The cooling fan rotates and stops every 3 seconds.		<ul style="list-style-type: none"> Harness and connector Cooling fan motor Cooling fan relay

*: If this function test mode is not available, use "ACTIVE TEST" mode.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

FUNCTION TEST ITEM	CONDITION	JUDGEMENT		CHECK ITEM (REMEDY)	
START SIGNAL CIRCUIT	<ul style="list-style-type: none"> Ignition switch: ON → START Start signal circuit is tested when engine is started by operating the starter. Battery voltage and water temperature before cranking, and average battery voltage, mass air flow sensor output voltage and cranking speed during cranking are displayed. 	Start signal: OFF → ON		<ul style="list-style-type: none"> Harness and connector Ignition switch 	GI MA EM
PW/ST SIGNAL CIRCUIT	<ul style="list-style-type: none"> Ignition switch: ON (Engine running) Power steering circuit is tested when steering wheel is rotated fully and then set to a straight line running position. 	Locked position	ON	<ul style="list-style-type: none"> Harness and connector Power steering oil pressure switch Power steering oil pump 	LC
		Neutral position	OFF		EC
VEHICLE SPEED SEN CKT	<ul style="list-style-type: none"> Vehicle speed sensor circuit is tested when vehicle is running at a speed of 10 km/h (6 MPH) or higher. 	Vehicle speed sensor input signal is greater than 4 km/h (2 MPH)		<ul style="list-style-type: none"> Harness and connector Vehicle speed sensor Electric speedometer 	FE AT
IGN TIMING ADJ	<ul style="list-style-type: none"> After warming up, idle the engine. Ignition timing is checked by reading ignition timing with a timing light and checking whether it agrees with specifications. 	The timing light indicates the same value on the screen.		<ul style="list-style-type: none"> Adjust ignition timing (by moving camshaft position sensor) Camshaft position sensor drive mechanism 	PD
MIXTURE RATIO TEST	<ul style="list-style-type: none"> Air-fuel ratio feedback circuit (injection system, ignition system, vacuum system, etc.) is tested by examining the front heated oxygen sensor output at 2,000 rpm under non-loaded state. 	Front heated oxygen sensor COUNT: More than 5 times during 10 seconds		<ul style="list-style-type: none"> INJECTION SYS (Injector, fuel pressure regulator, harness or connector) IGNITION SYS (Spark plug, ignition coil with power transistor harness or connector) VACUUM SYS (Intake air leaks) Front heated oxygen sensor circuit Front heated oxygen sensor operation Fuel pressure high or low Mass air flow sensor 	FA RA BR ST
					RS
POWER BALANCE	<ul style="list-style-type: none"> After warming up, idle the engine. Injector operation of each cylinder is stopped one after another, and resultant change in engine rotation is examined to evaluate combustion of each cylinder. (This is only displayed for models where a sequential multipoint fuel injection system is used.) 	Difference in engine speed is greater than 25 rpm before and after cutting off the injector of each cylinder.		<ul style="list-style-type: none"> Injector circuit (Injector, harness or connector) Ignition circuit (Spark plug, ignition coil with power transistor harness or connector) Compression Valve timing 	BT HA EL
IACV-AAC/V SYSTEM	<ul style="list-style-type: none"> After warming up, idle the engine. IACV-AAC valve system is tested by detecting change in engine speed when IACV-AAC valve opening is changed to 1 step, 25 steps and 102 steps. 	Difference in engine speed is greater than 150 rpm between when valve opening is at 102 steps and at 25 steps.		<ul style="list-style-type: none"> Harness and connector IACV-AAC valve Air passage restriction between air inlet and IACV-AAC valve IAS (Idle adjusting screw) adjustment 	IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT (Cont'd)

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (Recording vehicle data)

CONSULT has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

1. "AUTO TRIG" (Automatic trigger):

- The malfunction will be identified on the CONSULT screen in real time. In other words, DTC/1st trip DTC and malfunction item will be displayed at the moment the malfunction is detected by ECM. DATA MONITOR can be performed continuously until a malfunction is detected. However, DATA MONITOR cannot continue any longer after the malfunction detection.

2. "MANU TRIG" (Manual trigger):

- DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT screen even though a malfunction is detected by ECM. DATA MONITOR can be performed continuously even though a malfunction is detected.


Use these triggers as follows:

1. "AUTO TRIG"

- While trying to detect the DTC/1st trip DTC by performing the "DTC CONFIRMATION PROCEDURE", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
- While narrowing down the possible causes, CONSULT should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent. When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DTC CONFIRMATION PROCEDURE", the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to GI section, "Incident Simulation Tests" in "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".)


2. "MANU TRIG"

- If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

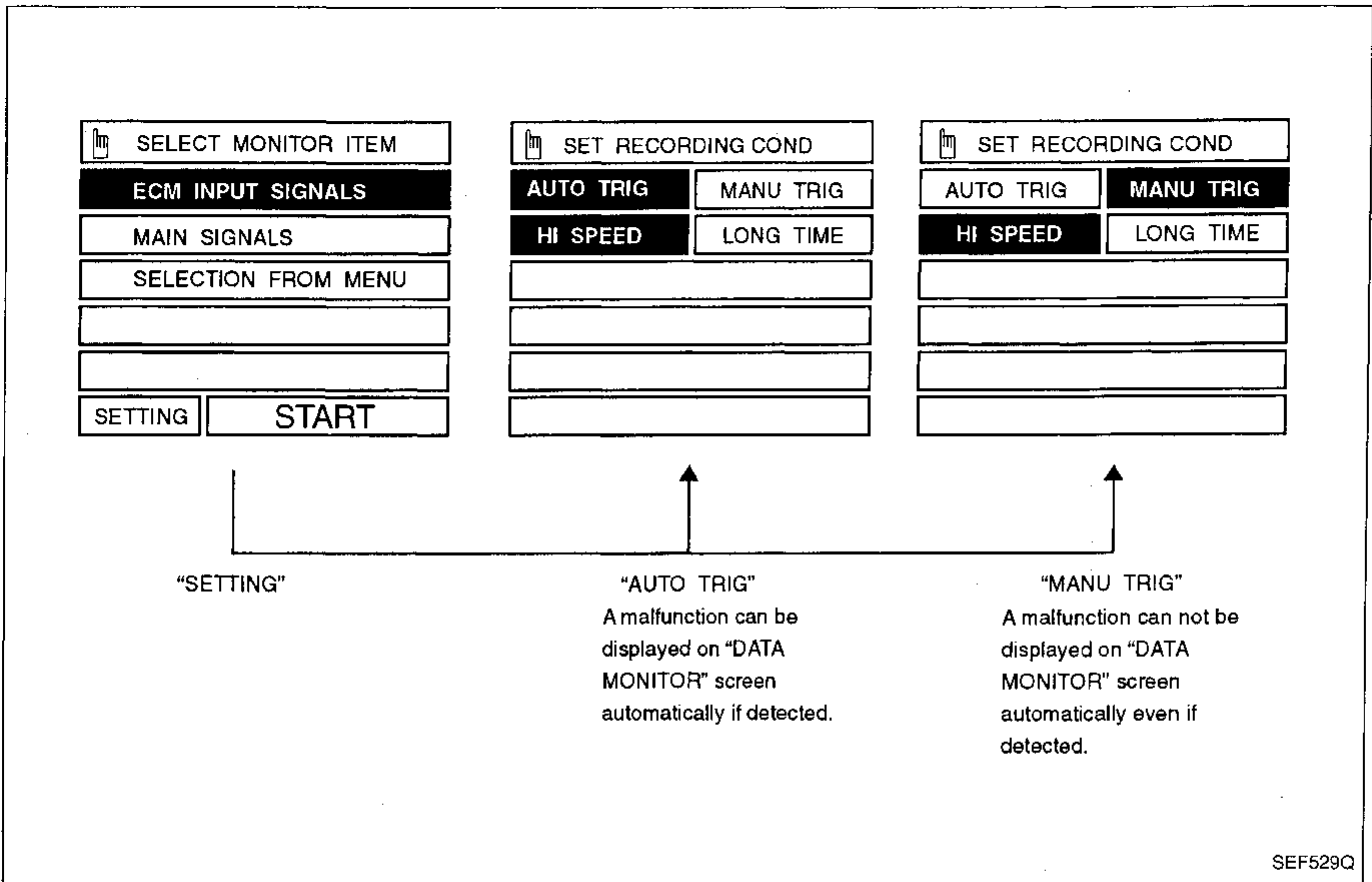

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Generic Scan Tool (GST): Sample

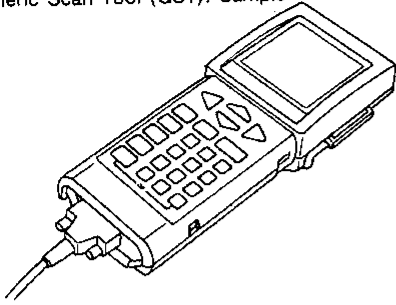

SEF139P

Generic Scan Tool (GST)

DESCRIPTION

Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has 7 different functions explained on the next page. ISO9141 is used as the protocol. The name "GST" or "Generic Scan Tool" is used in this service manual.

GI

MA

EM

GST INSPECTION PROCEDURE

1. Turn off ignition switch.
2. Connect "GST" to data link connector for GST. (Data link connector for GST is located under LH dash panel near the hood lock release handle.)

LC

EC

FE

AT

3. Turn ON ignition switch.
4. Enter the program according to instruction on the screen or in the operation manual.

PD

(*: Regarding GST screens in this section, sample screens are shown.)

FA

RA

BR

5. Perform each diagnostic mode according to each service procedure.

ST

For further information, see the GST Operation Manual of the tool maker.


RS

BT

HA

EL

IDX

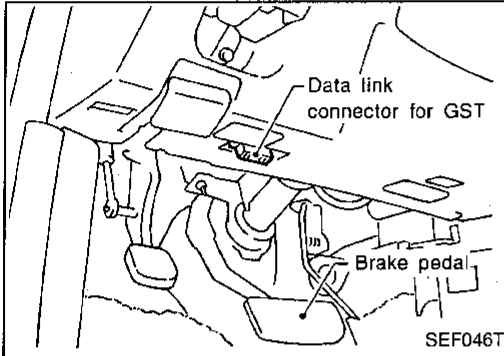

SEF046T

VTX GENERIC OBD II
PROGRAM CARD

Press [ENTER]

Sample screen*

SEF398S

OBD II FUNCTIONS

- F0: DATA LIST
- F1: FREEZE DATA
- F2: DTCs
- F3: SNAPSHOT
- F4: CLEAR DIAG INFO
- F5: O2 TEST RESULTS
- F6: READINESS TESTS**
- F7: ON BOARD TESTS
- F8: EXPAND DIAG PROT
- F9: UNIT CONVERSION

Sample screen*




SEF416S

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Generic Scan Tool (GST) (Cont'd)

FUNCTION

Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. [For details, refer to "Freeze Frame Data" (EC-69).]
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	This mode can close EVAP system in ignition switch "ON" position (Engine stopped). When this mode is performed, the following parts can be opened or closed. <ul style="list-style-type: none"> ● EVAP canister vent control open ● Vacuum cut valve bypass valve closed In the following conditions, this mode cannot function. <ul style="list-style-type: none"> ● Low ambient temperature ● Low battery voltage ● Engine running ● Ignition switch "OFF" ● Low fuel temperature ● Too much pressure is applied to EVAP system

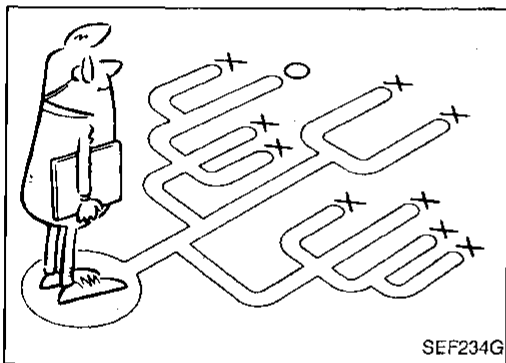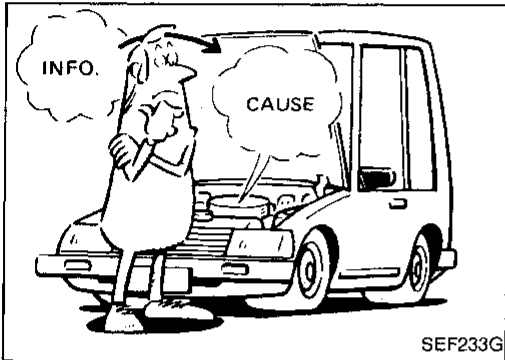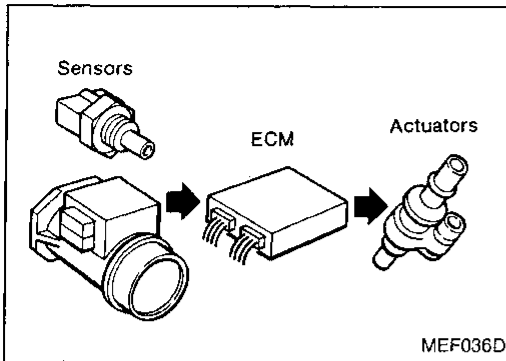

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

Introduction

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on EC-83.

Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example below should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

Diagnostic Worksheet

There are many operating conditions that lead to the malfunctions of engine components. A good knowledge of such conditions can make troubleshooting faster and more accurate.

In general, each customer may feel differently about a given problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one shown below in order to organize all the information for troubleshooting.

Some conditions may cause the malfunction indicator lamp to come on steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused engine misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere [for models with EVAP (SMALL LEAK)] diagnosis.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

TROUBLE DIAGNOSIS — Work Flow

Work Flow





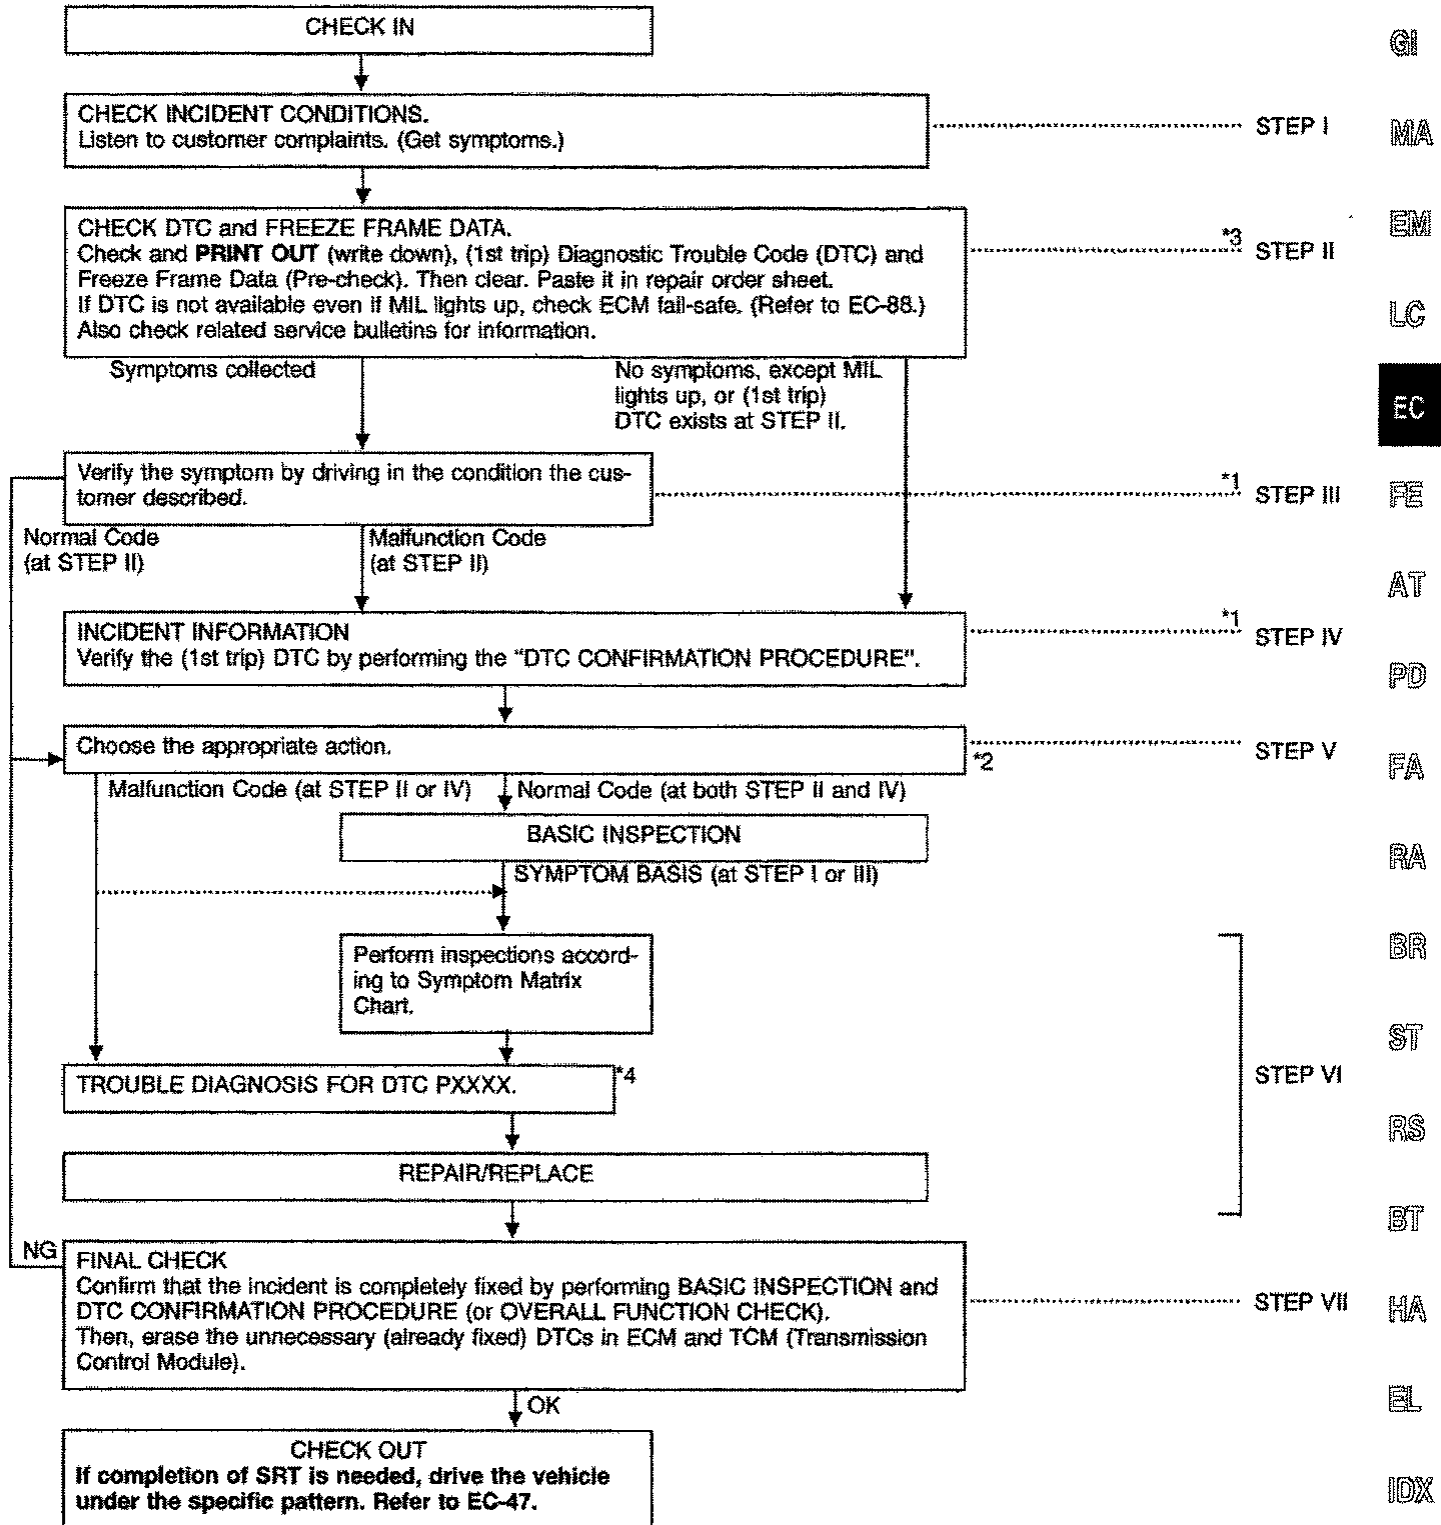


- *1: If the incident cannot be duplicated, see "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.
- *2: If the on board diagnostic system cannot be performed, check main power supply and ground circuit (See TROUBLE DIAGNOSIS FOR POWER SUPPLY, EC-108).
- *3: If time data of "SELF-DIAG RESULTS" is other than "0" or "1" refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT", EC-107.
- *4: If the malfunction part cannot be found, refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

TROUBLE DIAGNOSIS — Work Flow

Description for Work Flow

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-81.
STEP II	<p>Before confirming the concern, check and write down (print out using CONSULT or Generic Scan Tool) the Diagnostic Trouble Code (DTC) and the (1st trip) freeze frame data, then erase the code and the data. (Refer to EC-55.) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV.</p> <p>Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See page EC-89.)</p> <p>Also check related service bulletins for information.</p>
STEP III	<p>Try to confirm the symptom and under what conditions the incident occurs.</p> <p>The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results.</p> <p>If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.)</p> <p>If the malfunction code is detected, skip STEP IV and perform STEP V.</p>
STEP IV	<p>Try to detect the (1st trip) Diagnostic Trouble Code by driving in (or performing) the "DTC CONFIRMATION PROCEDURE". Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT or Generic Scan Tool.</p> <p>During the (1st trip) DTC verification, be sure to connect CONSULT to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results.</p> <p>If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.)</p> <p>In case the "DTC CONFIRMATION PROCEDURE" is not available, perform the "OVERALL FUNCTION CHECK" instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative.</p> <p>The "NG" result of the "OVERALL FUNCTION CHECK" is the same as the (1st trip) DTC detection.</p>
STEP V	<p>Take the appropriate action based on the results of STEP I through IV.</p> <p>If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX.</p> <p>If the normal code is indicated, proceed to the BASIC INSPECTION on next page. Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-89.)</p>
STEP VI	<p>Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT set in "DATA MONITOR (AUTO TRIG)" mode.</p> <p>Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT. Refer to EC-92.</p> <p>The "DIAGNOSTIC PROCEDURE" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the DIAGNOSTIC PROCEDURE. For details, refer to GI section ("HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", "Circuit Inspection").</p> <p>Repair or replace the malfunction parts.</p>
STEP VII	<p>Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint.</p> <p>Perform the "DTC CONFIRMATION PROCEDURE" and confirm the normal code (Diagnostic trouble code No. P0000 or 0505) is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one.</p> <p>Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission Control Module). (Refer to EC-55.)</p>

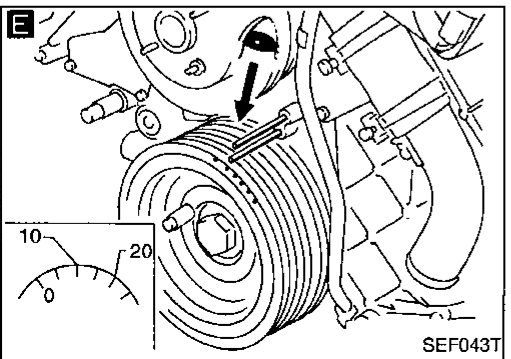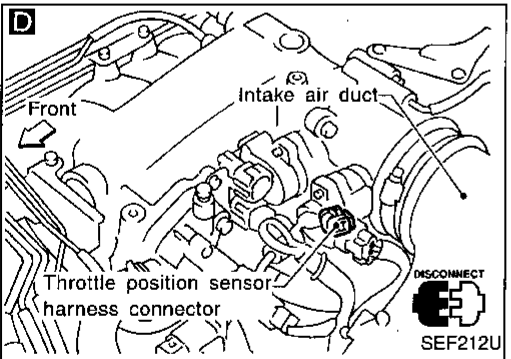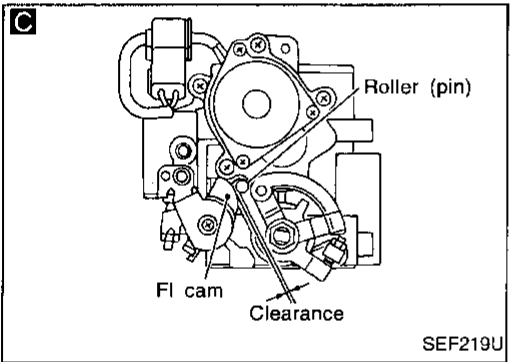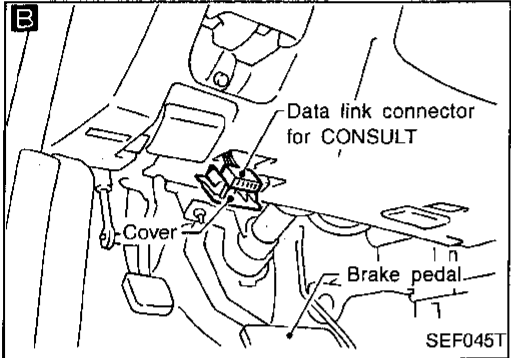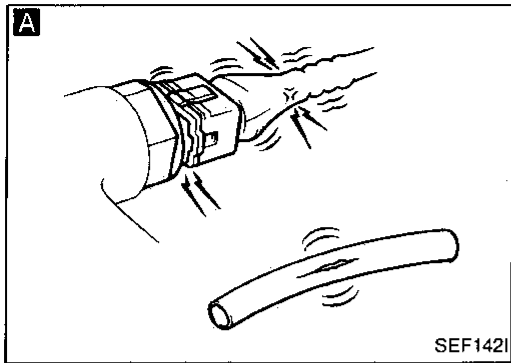

Basic Inspection

Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

A

BEFORE STARTING

1. Check service records for recent repairs of related problems, or the current need for scheduled maintenance.
2. Open engine hood and check the following:
 - Harness connectors for improper connections
 - Vacuum hoses for splits, kinks, or improper connections
 - Wiring for improper connections, pinches, or cuts

B

CONNECT CONSULT TO THE VEHICLE. Connect "CONSULT" to the data link connector for CONSULT and select "ENGINE" from the menu. (Refer to page EC-66.)

C

Warm up engine sufficiently and make sure there is clearance between FI cam and roller (pin).

NG → Check FI cam, refer to EC-34.

OK

D

Disconnect throttle position sensor harness connector. When disconnecting the throttle position sensor harness connector, does the engine speed drop?

No → If engine speed does not drop, check the following.
1. Check closed throttle position idle position, refer to next page.
2. Check throttle opener operation as follows: When the engine is running at idle speed, make sure that there is a clearance between throttle drum and the rod of throttle opener due to intake vacuum. If NG, check vacuum hose.

Yes

E

CHECK IGNITION TIMING. Check ignition timing at idle using timing light. (Refer to EC-34.)
Ignition timing:
15°±2° BTDC

NG → Adjust ignition timing by turning camshaft position sensor.

OK

F

CHECK BASE IDLE SPEED. Does engine speed fall to the following speed? (Refer to EC-34.)
600±50 rpm (in "N" position)

No → Adjust engine speed by turning idle adjusting screw.


Yes

(Go to A on next page.)

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX


TROUBLE DIAGNOSIS — Basic Inspection

Basic Inspection (Cont'd)

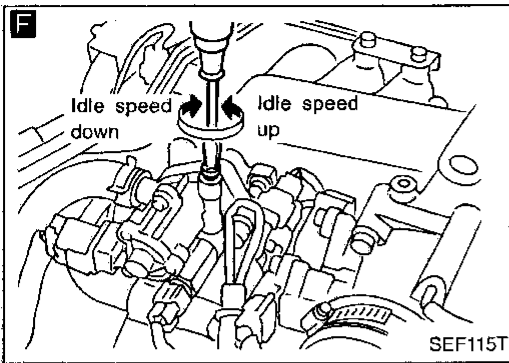

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
THRTL POS SEN	1.2V	
ENGINE SPEED	950rpm	
CLOSED THL/SW	ON	
RECORD		

SEF427T

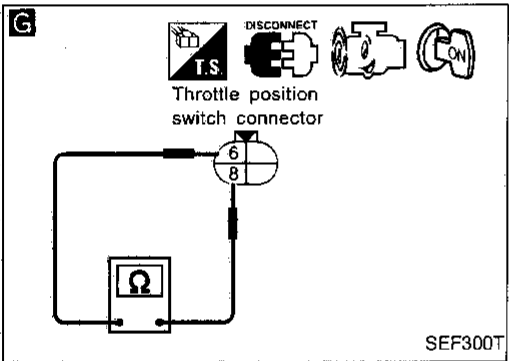

G

CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION.

1. Select "A/T", then "DATA MONITOR" mode with CONSULT.
2. Select "ENGINE SPEED" and "CLOSED THL/SW" from the menu.
3. Read "CLOSED THL/SW" signal under the following condition:
 - Rev up engine speed to 2,000 rpm.
 - Gradually reduce engine speed.**"CLOSED THL/SW" signal should turn "ON" at 825±150 rpm with transmission in N position.**

OR

1. Disconnect closed throttle position switch harness connector.
2. Check engine speed with circuit tester probing closed throttle position switch while gradually releasing accelerator pedal from 2,000 rpm.

Engine speed at the point throttle position switch OFF (No continuity) → ON (Continuity exists.): 825±150 rpm ("N" position)

NG → Adjust continuity signal by rotating throttle position sensor body.

RESET IDLE POSITION MEMORY.

1. Warm up engine sufficiently and stop.
 - Select "CLSD THL/P SW" in "DATA MONITOR" mode (manual trigger) with CONSULT before stopping engine.
2. Reconnect throttle position sensor harness connector and closed throttle position switch harness connector.
3. Turn ignition switch "ON".
4. Turn ignition switch "OFF" and wait at least 5 seconds.
5. Repeat steps 3. and 4. until "CLSD THL/P SW" in "DATA MONITOR" mode with CONSULT changes to "ON". Repeat steps 3. and 4. 20 times.

OK → Reconnect throttle position sensor harness connector and throttle position switch harness connector.

CHECK TARGET IDLE SPEED.

1. Read the engine idle speed in "DATA MONITOR" mode with CONSULT.
 - 650±50 rpm (in "N" position)
- OR
1. Check idle speed.
 - 650±50 rpm (in "N" position)

NG → Adjust idle speed. (See page EC-36.)

After this inspection, unnecessary diagnostic trouble code No. might be displayed.

- Erase the stored memory in ECM and TCM (Transmission Control Module). Refer to "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION" (EC-55) and "HOW TO ERASE DTC" in AT section.
- Erase the store memory in ABS/TCS control unit. Refer to "TROUBLE DIAGNOSIS FOR ABS/TCS C/U SIGNAL", EC-465 or refer to ("TROUBLE DIAGNOSIS", HOW TO ERASE SELF-DIAGNOSTIC RESULTS") in BR section.

INSPECTION END

TROUBLE DIAGNOSIS — General Description

Diagnostic Trouble Code (DTC) Inspection Priority Chart

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)			
1	<ul style="list-style-type: none"> ● ECM (P0605, 0301) ● Mass air flow sensor (P0100, 0102) ● Throttle position sensor (P0120, 0403) ● EGRC-solenoid (for California) or EGR valve & EVAP canister control solenoid valve (except for California) (P1400, 1005) ● A/T communication line (P0600, 0504), (P1605, 0804) 	<ul style="list-style-type: none"> ● Vehicle speed sensor (P0500, 0104) ● Intake air temperature sensor (P0110, 0401) ● Knock sensor (P0325, 0304), (P0330, 0212) ● Crankshaft position sensor (OBD) circuit (P0335, 0802) (P1336, 0905) ● Tank fuel temperature sensor (P0180, 0402) 	<ul style="list-style-type: none"> ● Engine coolant temperature sensor (P0115, 0103) (P0125, 0908) ● Ignition signal circuit (P1320, 0201) ● Park/Neutral position switch (P1706, 1003) ● Camshaft position sensor (P0340, 0101) 	GI MA EM LC EC FE
2	<ul style="list-style-type: none"> ● EGR temperature sensor (P1401, 0305) ● A/T related sensors, solenoid valves and switches (P0705 - P0725, 1101 - 1208) (P0740, 1108 - 1206) ● Absolute pressure sensor (P0105, 0803) ● MAP/BARO switch solenoid valve (P1105, 1302) ● Tandem throttle position sensor (P1125, 0110) ● Secondary throttle position sensor (P1120, 0406) 	<ul style="list-style-type: none"> ● Rear heated oxygen sensor (P0137 - P0140) (0150 - 0152, 0707), (P0157 - P0160) (0313 - 0315, 0708) ● Front heated oxygen sensor's heater (P0135, 0901) (P0155, 1001) ● Closed throttle position switch (P0510, 0203) ● Intake valve timing control position sensor circuit (P1140, 1303), (P1145, 1304) ● Front heated oxygen sensor (P0130 - P0134, 0303, 0409 - 0412) (P0150 - P0154, 0413 - 0415, 0503, 0509) 	<ul style="list-style-type: none"> ● Rear heated oxygen sensors heater (P0141, 0902), (P0161, 1002) ● EVAP control system pressure sensor (P0450, 0704) ● EVAP canister vent control valve (P0446, 0903) (P1446, 0215) (P1448, 0309) ● EVAP canister purge volume control valve (P1444, 0214) (P0443, 1008) ● EVAP control system purge flow monitoring (P1447, 0111) ● EVAP canister purge control valve/solenoid valve (P1493, 0312), (P1492, 0807) 	AT PD FA RA BR ST RS
3	<ul style="list-style-type: none"> ● EGR function (P0400, 0302) (P1402, 0514) ● EVAP control system (SMALL LEAK) (P0440, 0705) (P1440, 0213) ● EGRC-BPT valve function (P0402, 0306) ● IACV-AAC valve (P0505, 0205) 	<ul style="list-style-type: none"> ● TCS signal (P1210, 0106) ● Misfire (P0300 - P0308, 0701 - 0601) ● Closed loop control (P1148, 0307) (P1168, 0308) ● A/T function (P0731 - P0734, 1103 - 1106) (P0744, 1107) 	<ul style="list-style-type: none"> ● Fuel pump control module (FPCM) (P1220, 1305) ● Fuel injection system function (P0172, 0114), (P0171, 0115), (P0175, 0209), (P0174, 0210) ● Three way catalyst function (P0420, 0702) (P0430, 0703) ● Intake valve timing control function (P1110, 0805), (P1135, 1301) 	BT HA EL IDX

TROUBLE DIAGNOSIS — General Description

Fail-Safe Chart

The ECM enters fail-safe mode, if any of the following malfunctions are detected due to the open or short circuit.

When the ECM enters the fail-safe mode, the MIL illuminates.

DTC No.		Detected items	Engine operating condition in fail-safe mode	
CONSULT GST	ECM*			
P0100	0102	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.	
P0115	0103	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT displays the engine coolant temperature decided by ECM.	
			Condition	Engine coolant temperature decided (CONSULT display)
			Just as ignition switch is turned ON or Start	40°C (104°F)
			More than 4 minutes after ignition Start	80°C (176°F)
			Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
P0120	0403	Throttle position sensor circuit	Throttle position will be determined based on the amount of mass air flow and the engine speed. Therefore, acceleration will be poor.	
				Driving condition
			When engine is idling	Normal
			When accelerating	Poor acceleration
P1210	0106	TCS signal circuit	TCS does not operate. For details, refer to BR section ("TROUBLE DIAGNOSIS FOR TCS").	
Unable to access ECCS	Unable to access Diagnostic Test Mode II	ECM	ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates, i.e. if the ECM detects a malfunction condition in the CPU of ECM, the MALFUNCTION INDICATOR LAMP on the instrument panel lights to warn the driver. However, it is not possible to access ECCS and DTC cannot be confirmed.	
			Engine control with ECM fail-safe When the fail-safe system is operating, fuel injection, ignition timing, fuel pump operation, IACV-AAC valve operation and cooling fan operation are controlled under certain limitations.	
				ECM fail-safe operation
			Engine speed	Engine speed will not rise more than 3,000 rpm.
			Fuel injection	Simultaneous multiport fuel injection system
			Ignition timing	Ignition timing is fixed at the preset value.
			Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls.
			Cooling fans	Cooling fan relay "ON" (High speed condition) when engine is running, and "OFF" when engine stalls.
			Replace ECM, if ECM fail-safe condition is confirmed.	

*: In Diagnostic Test Mode II (Self-diagnostic results)

TROUBLE DIAGNOSIS — General Description

Symptom Matrix Chart

SYSTEM — Basic engine control system		SYMPTOM													Reference page		
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	OVERCOOLS		OVERCHARGING	BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	1P	1X	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		3	3			3				2	EC-490
	Fuel pressure regulator system	2	3	4	4	4	4	4	4	4		4					EC-32
	Injector circuit	1	1	2	2	2	2	2	2			2					EC-482
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4					EC-25
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1				EC-31
	Incorrect idle speed adjustment	3	3				1	1	1	1		1					EC-36
	IACV-AAC valve circuit	1	1	2	2	2	2	2	2	2		2					EC-316
	IACV-FICD solenoid circuit		3				2	3	3	2							EC-494
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1					EC-36
	Ignition circuit	1	1	2	3	2		2	3			2					EC-368
EGR	EGRC-solenoid valve (for California) EGR & EVAP canister purge control solenoid valve (Except for California) circuit	2	3	3	3	3		3				3					EC-381
	EGR system	2	1	2	3	3	3	2	3	3		3					EC-392, 392
Main power supply and ground circuit		2	3	3	3	3		2	2		3	3				3	EC-108
Cooling	Cooling fan circuit	3	3	3	3	3	3	3	3	3	1	2		1		3	EC-469
Air conditioner circuit		3	3	3	3	3	3	3	3	3		3				3	HA section

1 - 6: The numbers refer to the probability of the cause, 1 being the most likely.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS — General Description

Symptom Matrix Chart (Cont'd)

		SYMPTOM														Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	OVERCOOLS	OVERCHARGING	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	1P	1X	HA
SYSTEM — ECCS system	ECCS	Camshaft position sensor circuit	2	2	2	2	2	3	3	3						EC-261
	Mass air flow sensor circuit	1	1	2	3	2	2	2	2	2		2				EC-113
	Front heated oxygen sensor circuit	2	1	2	3	2		2	3			2				EC-184, 156
	Engine coolant temperature sensor circuit	1	1	3	3	3	3	2	3	3	2	3				EC-136, 151
	Throttle position sensor circuit		1	2		2	3	2	2	3		2				EC-141
	Incorrect throttle position sensor adjustment		2	3		3	1	3	3	1		3				EC-85
	Intake valve timing control system		3	3		3		3				3				EC-338, 351
	Vehicle speed sensor circuit		3	3		3						3				EC-312
	Knock sensor circuit	2	3	2	2	2	3	2				3				EC-253
	ECM	3	3	3	3	3	3	3	3	3	3	3				EC-330, 88
	Start signal circuit	2														EC-488
	Park/Neutral position switch circuit			3		3		3	3			3				EC-460
	FPCM	2	2	2		2		2								EC-362
	Power steering oil pressure switch circuit		2					3	3							EC-494

1 - 6: The numbers refer to the probability of the cause, 1 being the most likely.

TROUBLE DIAGNOSIS — General Description

Symptom Matrix Chart (Cont'd)

		SYMPTOM														Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	OVERCOOLS	OVERCHARGING		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	TP	TX	HA	
Fuel	Fuel tank	5															FE section
	Fuel piping	2		5	5	2		5	5			5					—
	Vapor lock		5														
	Valve deposit																
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5					
Air	Air duct	5															
Air cleaner																	
Air leakage from air duct (Mass air flow sensor — throttle body)	5	5	5		5		5	5			5						
Throttle body, Throttle wire	5			5		5			5	5							
Air leakage from intake manifold/Collector/Gasket																	
Cranking	Battery	1	1	1		1		1	1			1			1	1	EL section
	Alternator circuit																—
	Starter circuit	3															
	Theft warning circuit	4															
	Inhibitor switch	4															
Drive plate	6																
Engine	Cylinder head																—
	Cylinder head gasket										4						
	Cylinder block												6				
	Piston	6	6	6	6	6		6	6			6					
	Piston ring																
	Connecting rod																
	Bearing																
	Crankshaft													6			
Valve mechanism	Timing chain	6	6	6	6	6		6	6			6	6				—
	Camshaft	5	5	5	5	5		5	5			5					
	Intake valve	6	6	6	6	6		6	6			6	6				
	Exhaust valve																
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	5	5	5	5	5	5	5			5						EM section & FE section
	Three way catalytic converter																
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5			5	5				5	—
	Oil level (Low)/Filthy oil																
Cooling	Radiator/Hose/Radiator filler cap																—
	Thermostat						5			5				2			
	Water pump																
	Water gallery	5	5	5	5	5					4	5					
	Cooling fan						5			5					2		
	Coolant level (low)/Contaminated coolant																

1 - 6: The numbers refer to the probability of the cause, 1 being the most likely.

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS — General Description

CONSULT Reference Value in Data Monitor Mode

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
 - * Specification data may not be directly related to their components signals/values/operations.
- i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the crankshaft position sensor (POS) and other ignition timing related sensors.
- If the real-time diagnosis results are NG and the on board diagnostic system results are OK when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION		SPECIFICATION
CMPS-RPM (POS)	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT value. 		Almost the same speed as the CONSULT value.
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	1.0 - 1.7V
		2,500 rpm	Approx. 2.1V
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 		More than 82°C (180°F)
FR O2 SEN-B1	<ul style="list-style-type: none"> ● Engine: After warming up 	Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
FR O2 SEN-B2			LEAN ↔ RICH Changes more than 5 times during 10 seconds.
FR O2 MNTR-B1			
FR O2 MNTR-B2			
RR O2 SEN-B1	<ul style="list-style-type: none"> ● Engine: After warming up 	Revving engine from idle to 2,000 rpm quickly	0 - 0.3V ↔ 0.6 - 1.0V
RR O2 SEN-B2			LEAN ↔ RICH
RR O2 MNTR-B1			
RR O2 MNTR-B2			
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT value 		Almost the same speed as the CONSULT value
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 		11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve: fully closed	0.35 - 0.65V
		Throttle valve: fully opened	Approx. 4.0V
THRTL/P SEN2	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Throttle valve: fully closed	0.60 - 1.15V
		Throttle valve: fully open	4.3 - 4.7V
EGR TEMP SEN	<ul style="list-style-type: none"> ● Engine: After warming up 		Less than 4.5V
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 		OFF → ON → OFF
CLSD THL/P SW	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) 	Throttle valve: Idle position	ON
		Throttle valve: Slightly open	OFF
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Air conditioner switch: "OFF"	OFF
		Air conditioner switch: "ON" (Compressor operates.)	ON
P/N POSI SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever: "P" or "N"	ON
		Except above	OFF
PW/ST SIGNAL	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is turned	ON
AMB TEMP SW	<ul style="list-style-type: none"> ● Engine: Running 	Ambient air temperature more than 23.5°C	ON
		Ambient air temperature less than 20.5°C	OFF
LOAD SIGNAL	<ul style="list-style-type: none"> ● Engine: Running 	Rear window defogger or headlamp "ON"	ON
		Except above	OFF
A/C PRESS SW	<ul style="list-style-type: none"> ● Engine: Running 	A/C pressure is more than 1,422 - 1,618 kPa (14.5 - 16.5 kg/cm ² , 206 - 235 psi)	ON
		A/C pressure is less than 1,128 - 1,422 kPa (11.5 - 14.5 kg/cm ² , 164 - 206 psi)	OFF

Note: B1 indicates Left bank, B2 indicates Right bank.

TROUBLE DIAGNOSIS — General Description

CONSULT Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION		SPECIFICATION	
IGNITION SW	● Ignition switch: ON → OFF		ON → OFF	
INJ PULSE-B1	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	2.4 - 3.2 msec.	GI
INJ PULSE-B2		2,000 rpm	1.9 - 2.8 msec.	
B/FUEL SCHDL	ditto	Idle	1.0 - 1.6 msec	MA
		2,000 rpm	2.5 - 3.5 msec	
IGN TIMING	ditto	Idle	15° BTDC	EM
		2,000 rpm	More than 25° BTDC	
IACV-AAC/V	ditto	Idle	20 - 10 step	
		2,000 rpm	—	LC
A/F ALPHA-B1	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	50 - 159%	EC
A/F ALPHA-B2				
EVAP SYS PRES	● Ignition switch: ON		Approx. 3.4V	
AIR COND RLY	● Air conditioner switch: OFF → ON		OFF → ON	
FUEL PUMP RLY	● Ignition switch is turned to ON (Operates for 1 second) ● Engine running and cranking		ON	FE
	Except as shown above		OFF	
INT/V SOL-B1	● Engine is running ● Engine speed is more than 2,000 rpm ● Quickly depressed accelerator pedal. ● Vehicle speed is more than 4 km/h (2 MPH)		OFF → ON (Using "INT/V TIM-B1(-2)", the difference of degree between "OFF" and "ON" is approximately 20 deg.)	AT
INT/V SOL-B2				PD
INT/V TIM-B1	● Engine is running		Advanced angle (degree signal) of the intake camshaft should be displayed.	FA
INT/V TIM-B2				
COOLING FAN	● After warming up engine, idle the engine. ● Air conditioner switch: "OFF"	Engine coolant temperature is 94°C (201°F) or less	OFF	
		Engine coolant temperature is between 95°C (203°F) and 104°C (219°F) at vehicle speed less than 80 km/h (50 MPH)	HIGH	RA
		Engine coolant temperature is 105°C (221°F) or more	HIGH	BR
EGRC SOL/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "D" ● No-load	Idle	OFF	ST
		Revvng engine up from idle to 3,000 rpm	ON	RS
VENT CONT/V	● Ignition switch: ON		OFF	
FR O2 HTR-B1	● Engine speed: Idle		ON	
FR O2 HTR-B2	● Engine speed: Above 3,200 rpm		OFF	BT
RR O2 HTR-B1	● Engine speed: Idle		ON	
RR O2 HTR-B2	● Engine speed: Above 3,600 rpm		OFF	HA
VC/V BYPASS/V	● Ignition switch: ON		OFF	
PURG CONT S/V	● Engine: After warming up	Idle	OFF	
		2,000 rpm	ON	EL
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	13.0 - 32%	IDX
		2,500 rpm	13.0 - 25.5%	
ABSOL TH/P/S	● Ignition switch: ON (Engine stopped)	Throttle valve fully closed	0.0%	
		Throttle valve fully opened	Approx. 88%	

TROUBLE DIAGNOSIS — General Description

CONSULT Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
MASS AIRFLOW	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,500 rpm
FPCM	<ul style="list-style-type: none"> ● Within 16 seconds after starting engine, when engine coolant temperature is more than 100°C (212°F) 	HIGH → LOW
FPCM F/P VOLT	<ul style="list-style-type: none"> ● Within 16 seconds after starting engine, when engine coolant temperature is more than 100°C (212°F) 	Approx. 5V → Approx. 0.4V
MAP/BARO SW/V	<ul style="list-style-type: none"> ● For 5 seconds after starting engine 	BARO
	<ul style="list-style-type: none"> ● More than 5 seconds after starting engine 	MAP
ABSOL PRES/SE	<ul style="list-style-type: none"> ● Engine: After warming up 	For 5 seconds after starting engine
		More than 5 seconds after starting engine


Major Sensor Reference Graph in Data Monitor Mode

The following are the major sensor reference graphs in "DATA MONITOR" mode.
(Select "HI SPEED" in "DATA MONITOR" with CONSULT.)

THRTL POS SEN, ABSOL TH-P/S, CLSD THL/P SW

Below is the data for "THRTL POS SEN", "ABSOL TH-P/S" and "CLSD THL/P SW" when depressing the accelerator pedal with the ignition switch "ON".


The signal of "THRTL POS SEN" and "ABSOL TH-P/S" should rise gradually without any intermittent drop or rise after "CLSD THL/P SW" is changed from "ON" to "OFF".

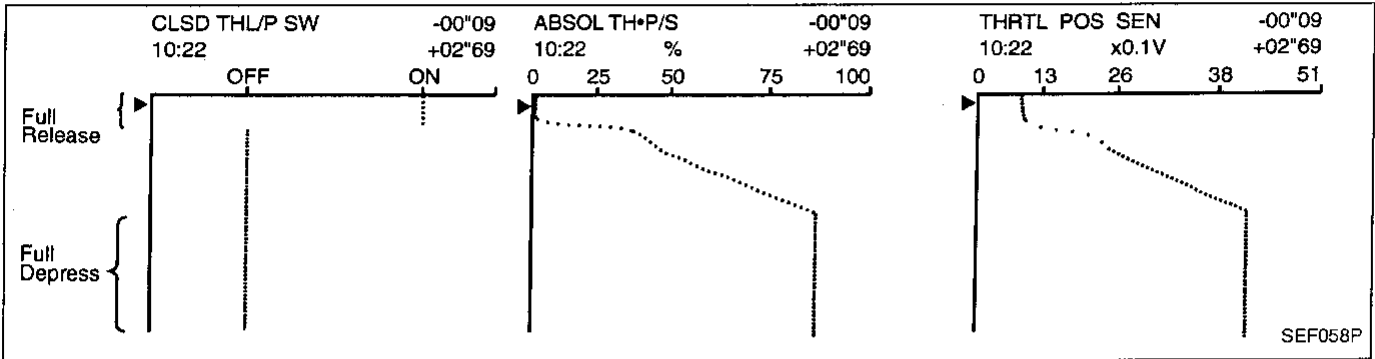

CMPS-RPM (POS), MAS AIR/FL SE, THRTL POS SEN, RR O2 SENSOR, FR O2 SENSOR, INJ PULSE


Below is the data for "CMPS-RPM (POS)", "MAS AIR/FL SE", "THRTL POS SEN", "RR O2 SENSOR", "FR O2 SENSOR" and "INJ PULSE" when revving engine quickly up to 4,800 rpm under no load after warming up engine to normal operating temperature.

Each value is for reference, the exact value may vary.

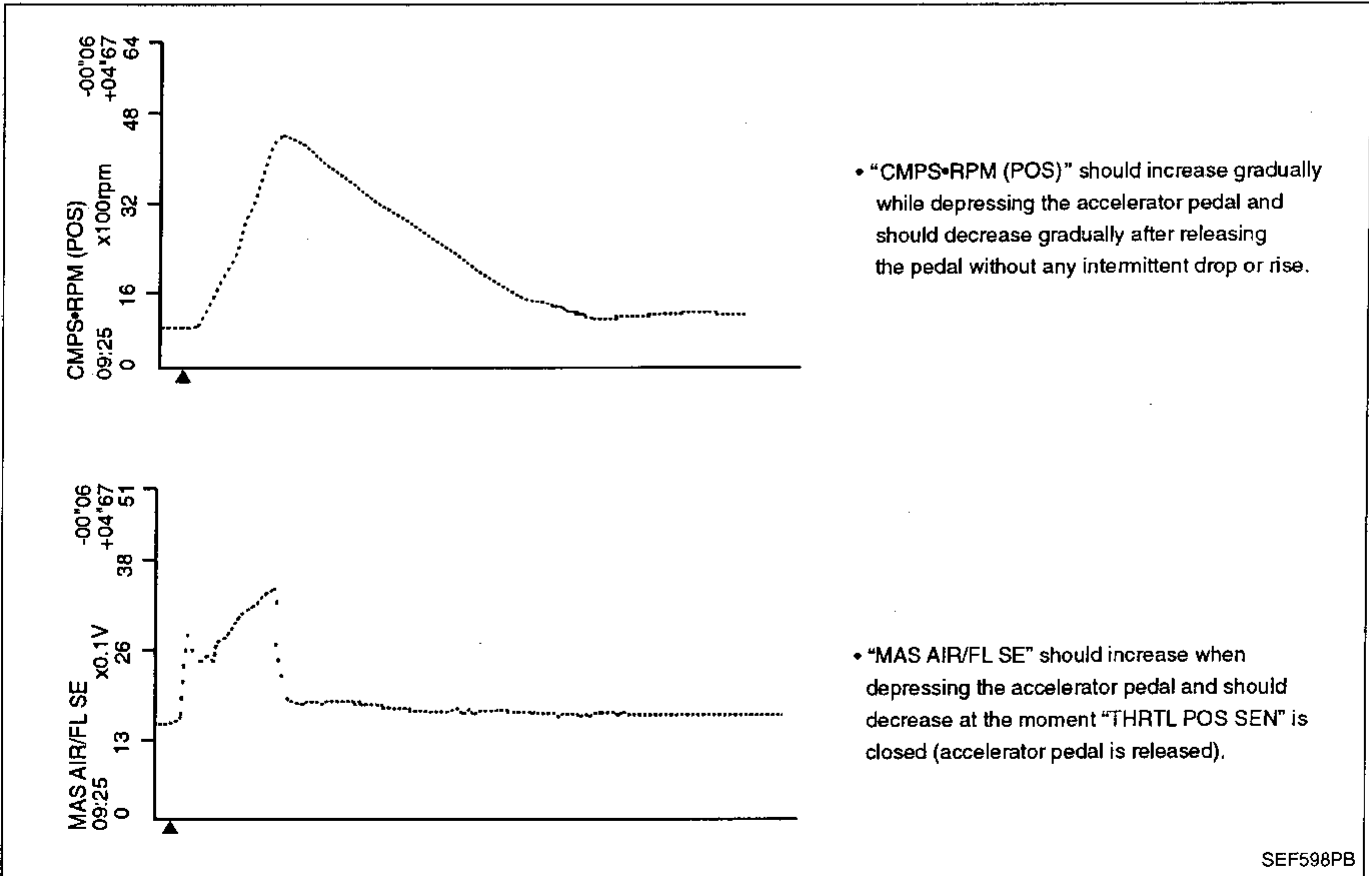


TROUBLE DIAGNOSIS — General Description


Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

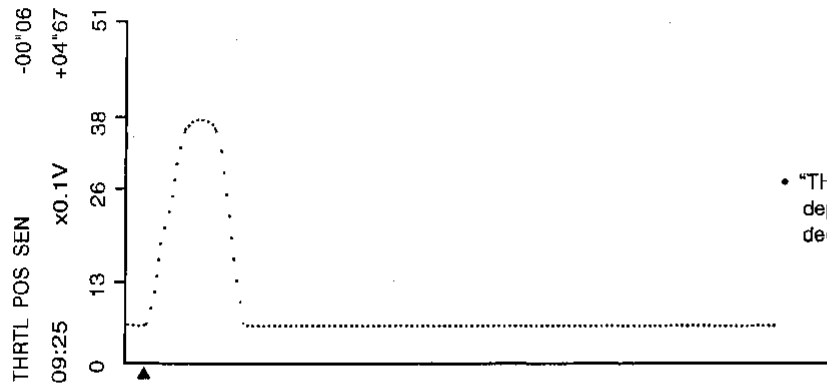


- "THRTL POS SEN" should increase while depressing the accelerator pedel and should decrease while releasing it.

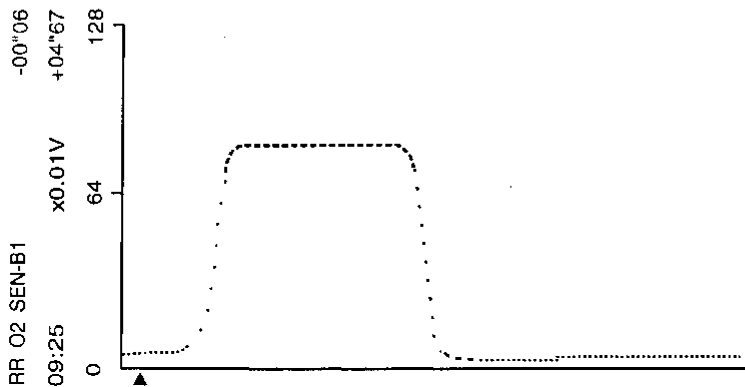


- "RR O2 SEN-B1" may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

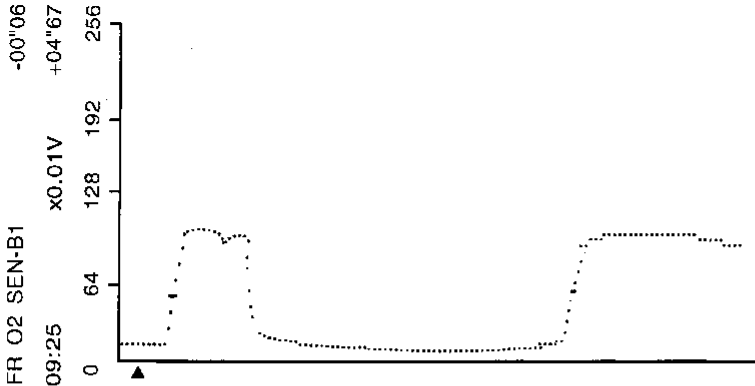

- "FR O2 SEN-B1" may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

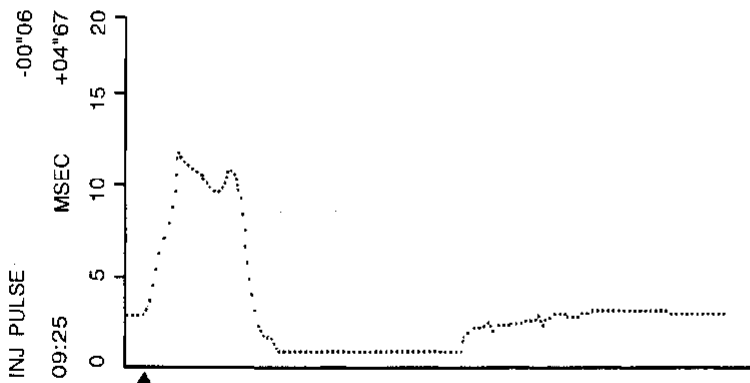

- "INJ PULSE" should increase when depressing the accelerator pedel and should decrease when the pedal is released.

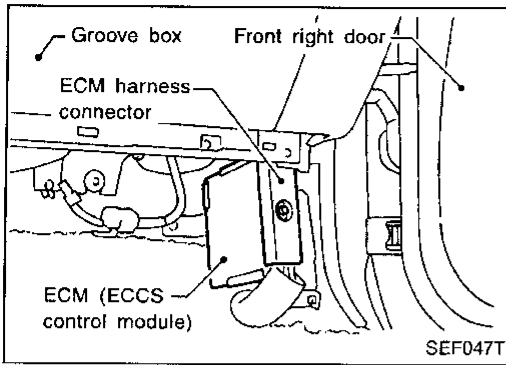

ECM Terminals and Reference Value

PREPARATION

1. ECM is located behind right side front pillar lower garnish. For this inspection, remove the glove box.


GI

MA

EM

2. Remove ECM harness protector.

LC

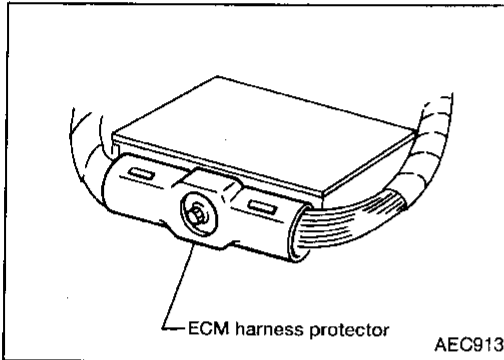**EC**

FE

AT

3. Perform all voltage measurements with the connectors connected. Extend tester probe as shown to perform tests easily.

PD

- Open harness securing clip to make resting easier.
- Use extreme care not to touch 2 pins at one time.
- Data is for comparison and may not be exact.


FA

RA

BR

ST

RS

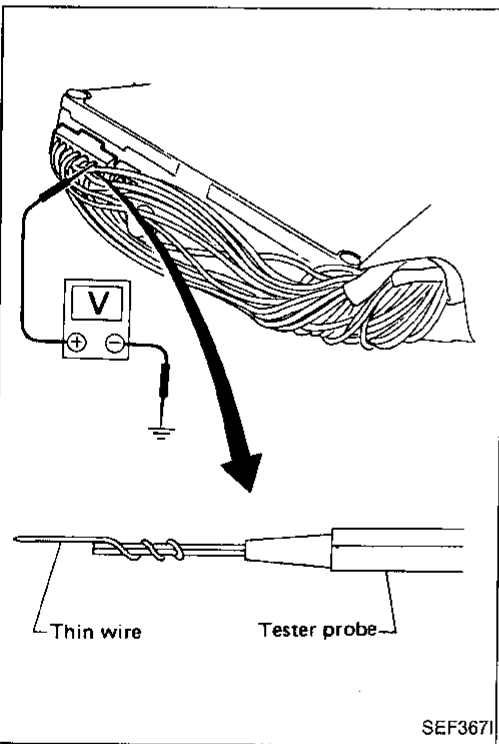


BT

HA

ECM HARNESS CONNECTOR TERMINAL LAYOUT

EL

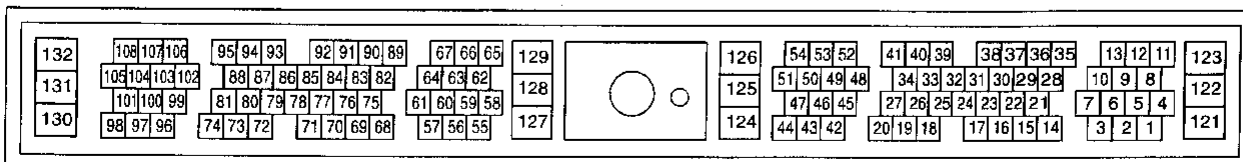

IDX



SEF218U

TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

ECM INSPECTION TABLE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

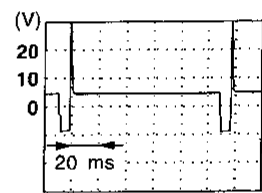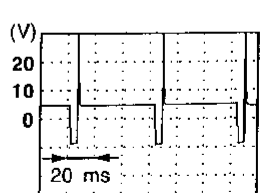TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
1	R/B	Injector No. 1	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V) 
2	R/W	Injector No. 8		
3	R/Y	Injector No. 7		
14	W/R	Injector No. 3		
4	PU/R	Injector No. 6	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is 2,000 rpm.	BATTERY VOLTAGE (11 - 14V) 
5	GY/L	Injector No. 5		
6	L/G	Injector No. 4		
7	R/L	Injector No. 2		
8	GY/L	IACV-AAC valve	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Idle speed	0.1 - 14V
10	L/Y	EGRC-solenoid valve* EGR valve & EVAP canis- ter purge control solenoid valve (except for Califor- nia)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Lift up drive wheels and rev engine from idle to 3,000 rpm in "D" position.	0 - 0.7V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V)
11	PU	IACV-AAC valve	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Idle speed	0.1 - 14V
12	G/Y			
13	Y	IACV-AAC valve	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Idle speed	0.1 - 14V
15	R/L	Fuel pump control module	<div style="border: 1px solid black; padding: 2px;">Engine is cranking.</div>	Approximately 0.4V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Idle speed	Approximately 10V
16	L/Y	Front heated oxygen sen- sor heater (right bank)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is below 3,200 rpm.	0 - 0.5V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)
17	G/W	Front heated oxygen sen- sor heater (left bank)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is below 3,200 rpm.	0 - 0.5V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)

*: For California

TROUBLE DIAGNOSIS — General Description





ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
18	Y/R	Rear heated oxygen sensor heater (Right bank)	Engine is running. └ Engine speed is below 3,600 rpm.	0 - 0.5V	GI
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)	MA
19	L	Rear heated oxygen sensor heater (left bank)	Engine is running. └ Engine speed is below 3,600 rpm.	0 - 0.5V	EM
			Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)	LC
20*	P/B	EVAP canister vent control valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)	EC
22*	Y	EVAP canister purge control solenoid valve	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)	FE
			Engine is running. └ Engine speed is 2,000 rpm	Approximately 0V	AT
24	BR/Y	Intake valve timing control solenoid valve (right bank)	Engine is running. └ Intake valve timing control solenoid is operating.	Approximately 0V	PD
25	BR	Intake valve timing control solenoid valve (left bank)	Engine is running. └ Intake valve timing control solenoid is not operating.	Battery voltage	FA
27 34	LG LG/R	Cooling fan relay-1 Cooling fan relay-2	Engine is running. └ Cooling fan is not operating.	BATTERY VOLTAGE (11 - 14V)	RA
			Engine is running. └ Cooling fan is operating.	0 - 1V	BR
28*	BR/Y	EVAP canister purge volume control valve	Engine is running.	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)	ST
29*	G		└ Idle speed		
35*	G/OR	EVAP canister purge volume control valve	Engine is running.	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)	RS
36*	L/B		└ Idle speed		
41*	W	MAP/BARO switch solenoid valve	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON"	Approximately 0V	HA
			Engine is running. └ For 5 seconds after starting engine		
			Engine is running. └ More than 5 seconds after starting engine	BATTERY VOLTAGE (11 - 14V)	EL
42	B/P	Fuel pump relay	Ignition switch "ON" └ For 5 second after turning ignition switch "ON"	0 - 1V	
			Engine is running.		
			Ignition switch "ON" └ 5 second after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)	IDX

*: For California

TROUBLE DIAGNOSIS — General Description





ECM Terminals and Reference Value (Cont'd)

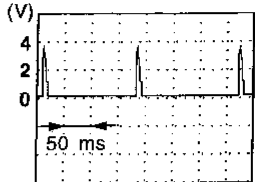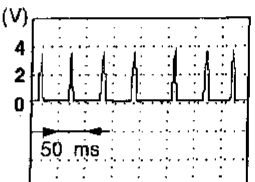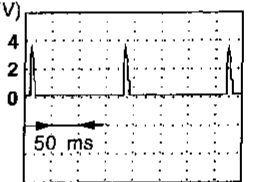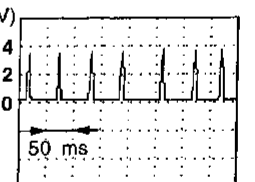TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
43 44 46	Y/R G/R L/R	Ignition signal (No. 1) Ignition signal (No. 8) Ignition signal (No. 7)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Idle speed	Approximately 0.38V 
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Engine speed is 2,000 rpm.	Approximately 0.55V 
45*	LG/B	Vacuum cut valve bypass valve	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Ignition switch "ON"</div>	BATTERY VOLTAGE (11 - 14V)
47 50 51	GY PU/W GY/R	Ignition signal (No. 3) Ignition signal (No. 6) Ignition signal (No. 5)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Idle speed	Approximately 0.38V 
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Engine speed is 2,000 rpm.	Approximately 0.55V 
48	PU/W	Malfunction indicator lamp	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Ignition switch "ON"</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Idle speed	BATTERY VOLTAGE (11 - 14V)
49	B/R	Air conditioner relay	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Both air conditioner switch and blower switch are "ON".	0 - 1V
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> ↳ Air conditioner switch is "OFF".	BATTERY VOLTAGE (11 - 14V)

*: For California





TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

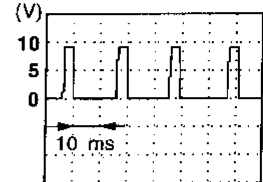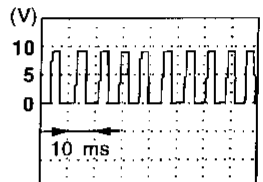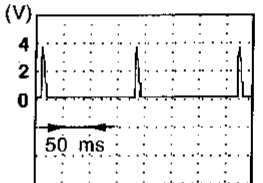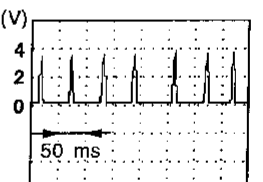TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
52	W/G	Tachometer	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Idle speed	Approximately 7V  SEF540T	GI MA EM LC
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 0 - 14V  SEF541T	EC FE AT
53 54	W/R R/L	Ignition signal (No. 4) Ignition signal (No. 2)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Idle speed	Approximately 0.38V  SEF538T	PD FA RA
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> └ Engine speed is 2,000 rpm.	Approximately 0.55V  SEF539T	BR ST RS BT
					HA EL IDX



TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

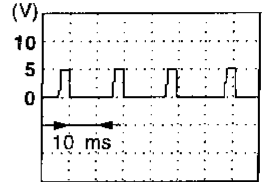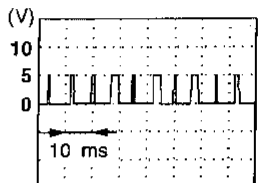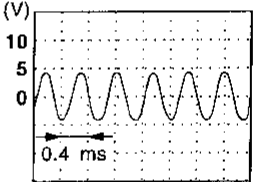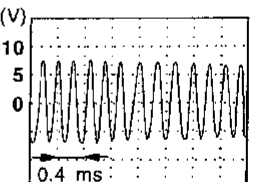TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
55 58	P	Crankshaft position sensor (REF)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 0.6 - 1.0V  SEF046V
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 0.8 - 0.9V  SEF544T
56	W/R	Power supply (Back-up)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Ignition switch "OFF"</div>	BATTERY VOLTAGE (11 - 14V)
57	B/R	Crankshaft position sensor (OBD)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 1.7V  SEF545T
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 0V  SEF546T

TROUBLE DIAGNOSIS — General Description




ECM Terminals and Reference Value (Cont'd)

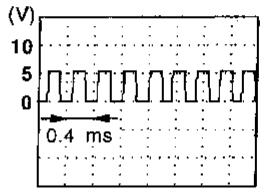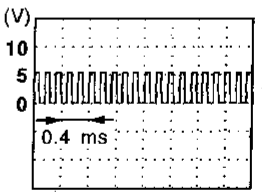TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
59	L	Camshaft position sensor (POS)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 2.5V 	GI MA EM
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 2.4V 	LC EC FE
61	LW	Throttle position sensor signal	<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> (Warm-up condition) └ Accelerator pedal released	Approximately 0.5V	AT
			<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> └ Accelerator pedal fully depressed	Approximately 4.2V	PD FA
62	B	Mass air flow sensor ground	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 0V	RA
63	G	Throttle position sensor	<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> (Warm-up condition) └ Accelerator pedal fully released	0.35 - 0.65V	BR
			<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> └ Accelerator pedal fully depressed	Approximately 4V	ST
64*	W/R	Absolute pressure sensor	<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> └ For 5 seconds after turning ignition switch "ON"	Approximately 4.4V	RS
			<div style="border: 1px solid black; padding: 2px;">Engine is running</div> └ For 5 seconds after starting engine	Approximately 1.2V	BT
65	W	Mass air flow sensor	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	1.0 - 1.4V	HA
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,500 rpm.	Approximately 2.1V	EL
66	L	Secondary throttle position sensor	<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> └ Approximately 3 seconds after ignition switch "ON" and thereafter	Approximately 3.4V	IDX
			<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div> └ Disconnect throttle motor harness connector. Fully close secondary throttle valve by hand.	Approximately 0.4V	

*: For California

TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

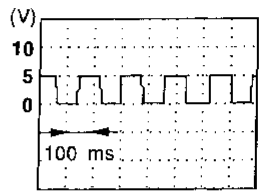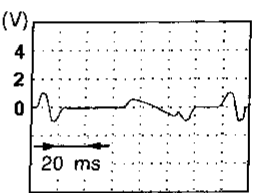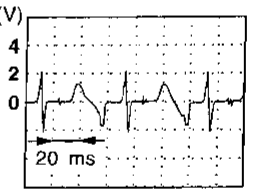TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
67	Y/B	Engine coolant temperature sensor	Engine is running.	0 - 4.8V Output voltage varies with engine coolant temperature.
68	P/L	Vehicle speed sensor	Engine is running. Jack up rear wheels and run engine at idle in "D" position.	Approximately 5.2V  SEF542T
69	W/PU	Intake air temperature sensor	Engine is running.	0 - 4.8V Output voltage varies with intake air temperature.
70 71	R/L L/W	Intake valve timing control position sensor (right bank)	Engine is running. Idle speed	Approximately 0V  SEF551T
		Intake valve timing control position sensor (left bank)	Engine is running. Engine speed is 2,000 rpm.	Approximately 0V  SEF552T
72	L/W	Headlamp switch	Engine is running. Headlamp switch is "OFF".	0V
			Engine is running. Headlamp switch is "ON".	Battery voltage
73	R	TCS signal	Ignition switch "ON"	Approximately 5V
			Ignition switch "ON" Disconnect throttle motor harness connector. Fully close secondary throttle valve by hand.	Approximately 0V
74	GY/L	Throttle position switch (Closed position)	Ignition switch "ON" (Warm-up condition) Accelerator pedal released	BATTERY VOLTAGE (11 - 14V)
			Ignition switch "ON" Accelerator pedal depressed	Approximately 0V

TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
75	W	EGR temperature sensor	Engine is running. (Warm-up condition) └ Idle speed	Less than 4.5V	GI
			Engine is running. (Warm-up condition) └ EGR system is operating.	0 - 1.0V	MA
76	L/R	Ambient air temperature switch	Engine is running. └ Ambient air temperature is more than 23.5°C (74°C)	Approximately 5V	EM
			Engine is running. └ Ambient air temperature is less than 20.5°C (69°F)	0V	LC
78	W/R	Ignition switch	Ignition switch "OFF"	0V	EC
			Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)	FE
79	L/R	Electrical load signal	Engine is running. └ Rear window defogger switch is "OFF". └ Headlamp switch is "OFF".	0V	AT
			Engine is running. └ Rear window defogger switch is "ON". └ Headlamp switch is "ON".	Battery voltage	PD
80	SB	Start signal	Ignition switch "ON"	Approximately 0V	FA
			Ignition switch "START"	BATTERY VOLTAGE (11 - 14V)	RA
81	G/B	Air conditioner pressure switch	Engine is running. └ At idle speed	Approximately 5V	BR
82	R	Front heated oxygen sensor (Right bank)	Engine is running. └ After warming up to normal operating temperature and engine speed is 2,000 rpm.	0 - Approximately 1.0V (periodically change)	ST
83	W	Front heated oxygen sensor (Left bank)			
89	W	Rear heated oxygen sensor (RH)	Engine is running. └ After warming up to normal operating temperature and engine speed is 2,000 rpm.	0 - Approximately 1.0V	RS
90	Y	Rear heated oxygen sensor (LH)			
91*	R/L	Tank fuel temperature sensor	Engine is running.	Approximately 0 - 4.8V Output voltage varies with fuel temperature.	BT
92*	W/R	EVAP control system pressure sensor	Ignition switch "ON"	Approximately 3.4V	HA
93	G/R	Fuel pump control module (FPCM) check	When cranking the engine	Approximately 0V	EL
			After starting the engine	Approximately 5V	
96	P	Data link connector for CONSULT	Engine is running.	Approximately 4 - 6V	IDX
97	BR/Y		└ Idle speed	Approximately 0V	
78	LG		└ Connect CONSULT and select DATA MONITOR mode.	Approximately 3.5V	

*: For California

TROUBLE DIAGNOSIS — General Description

ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
98	BR/W	Sensor's power supply	Ignition switch "ON"	Approximately 5V
99	R/L	A/T communication line (LAN)	Engine is running. └ Idle speed	Approximately 2V
100	G	Power steering oil pressure switch	Engine is running. └ Steering wheel is being turned.	0 - 1.5V
			Engine is running. └ Steering wheel is not being turned.	BATTERY VOLTAGE (11 - 14V)
101	G/OR	Inhibitor switch	Ignition switch "ON" └ Gear position is "N" or "P".	Approximately 0V
			Ignition switch "ON" └ Except the above gear position	Approximately 5V
105 108	W W	Knock sensor (LH) Knock sensor (RH)	Engine is running. └ Idle speed	2.0 - 3.0V
106	R	Data link connector for GST	Ignition switch "ON" └ GST is disconnected.	6 - 10V
121	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
122	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
123	W/L	Current return	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
124	W/B	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
125	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
126	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
127	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
128	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
129	B	Sensor's ground	Engine is running. (Warm-up condition) └ Idle speed	0V
130 131	R/G	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

*: For California

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

Description

Intermittent incidents (I/I) may occur. In many cases, the problem resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on DTC (1st trip) visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific problem area.

GI

MA

Common I/I Report Situations

EM


STEP in Work Flow	Situation
II	The CONSULT is used. The SELF-DIAG RESULTS screen shows time data other than "0" or "11".
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC data does not appear during the DTC CONFIRMATION PROCEDURE.
VI	The TROUBLE DIAGNOSIS for PXXXX does not indicate the problem area.

LC

EC

Diagnostic Procedure

FE

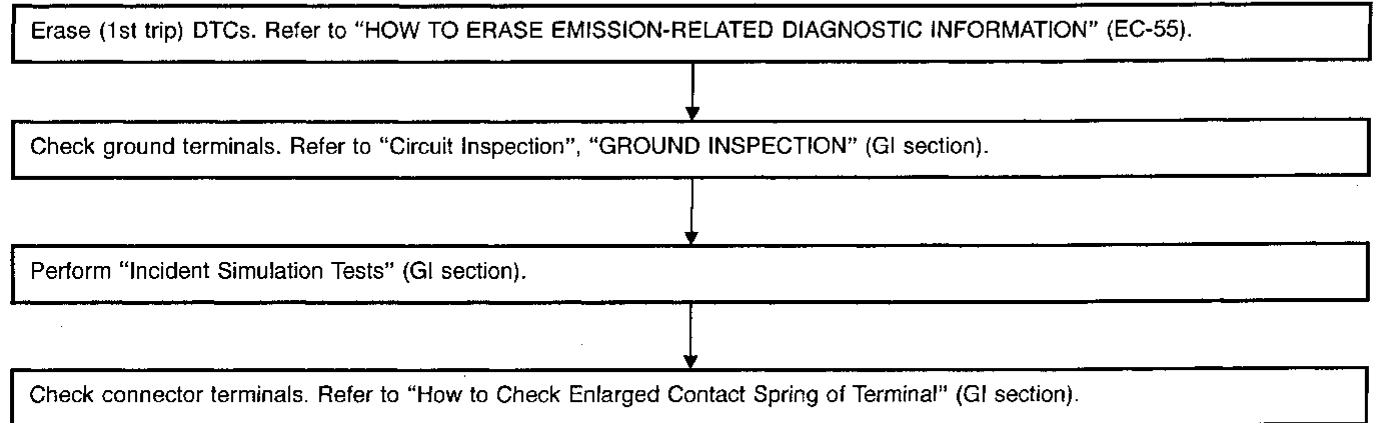

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX



TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit

EC-MAIN-01

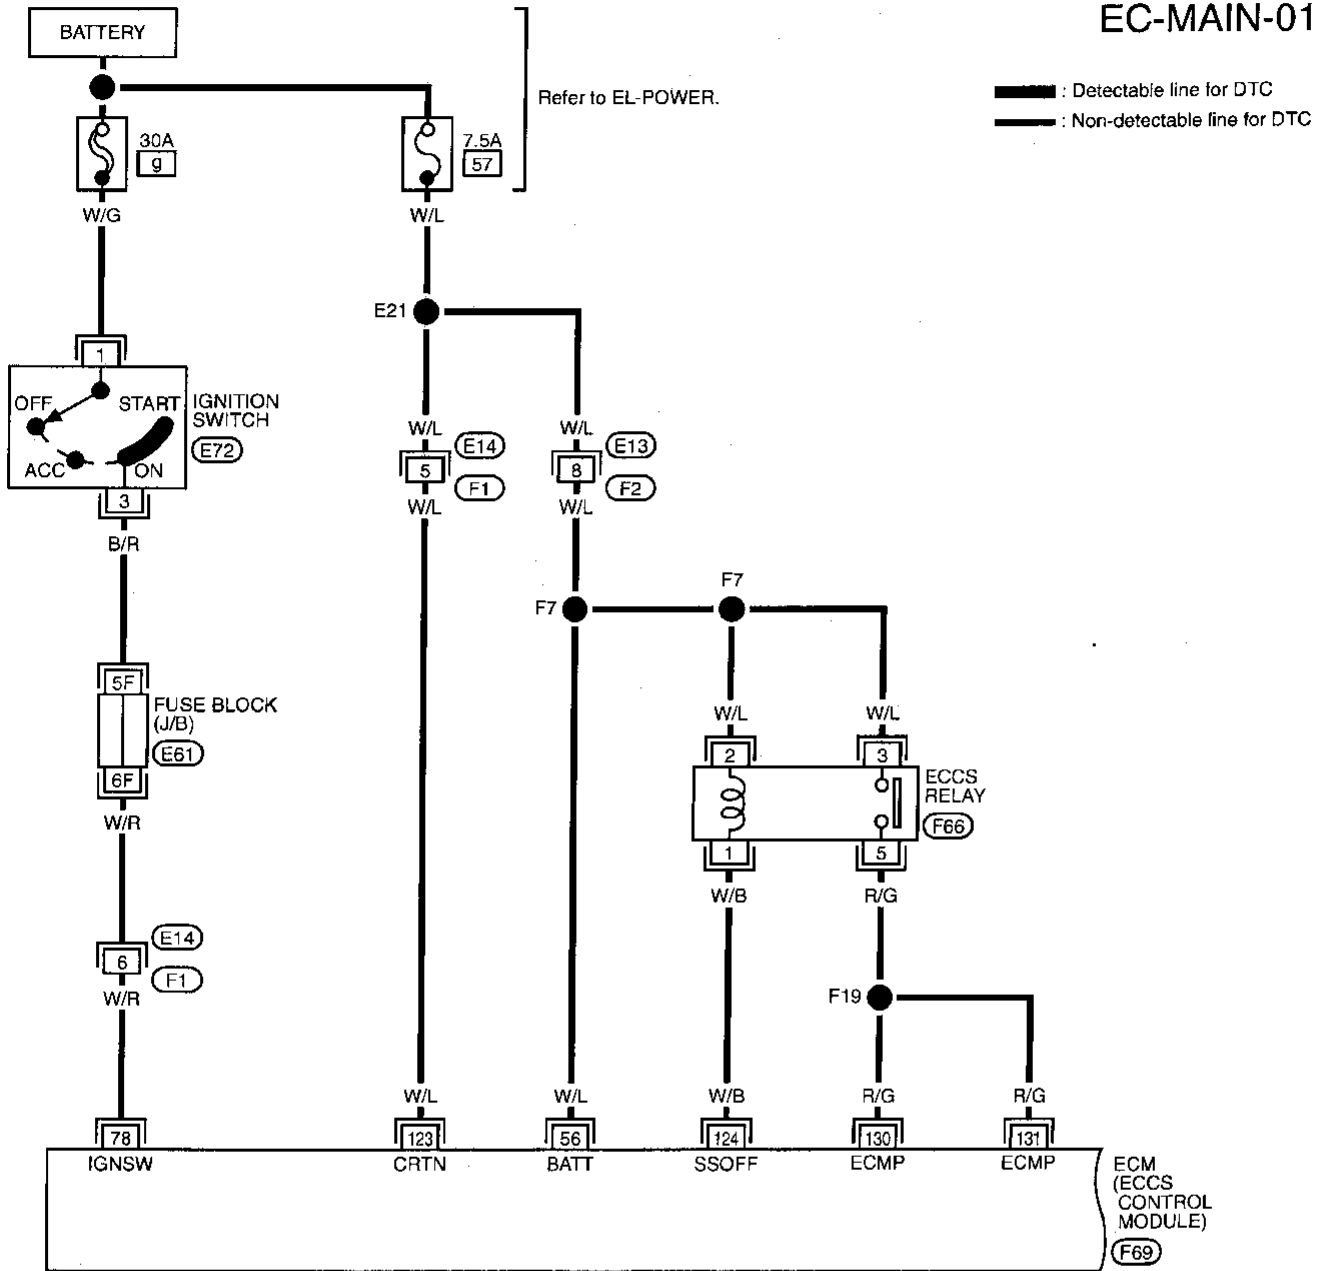

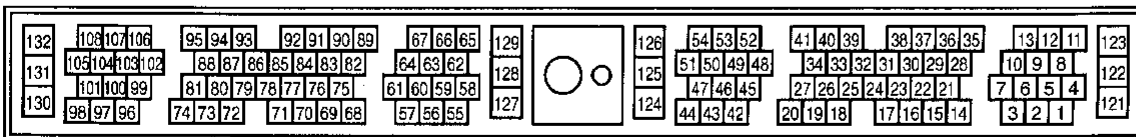

Refer to last page (Foldout page).




TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

EC-MAIN-02

 : Detectable line for DTC
 : Non-detectable line for DTC

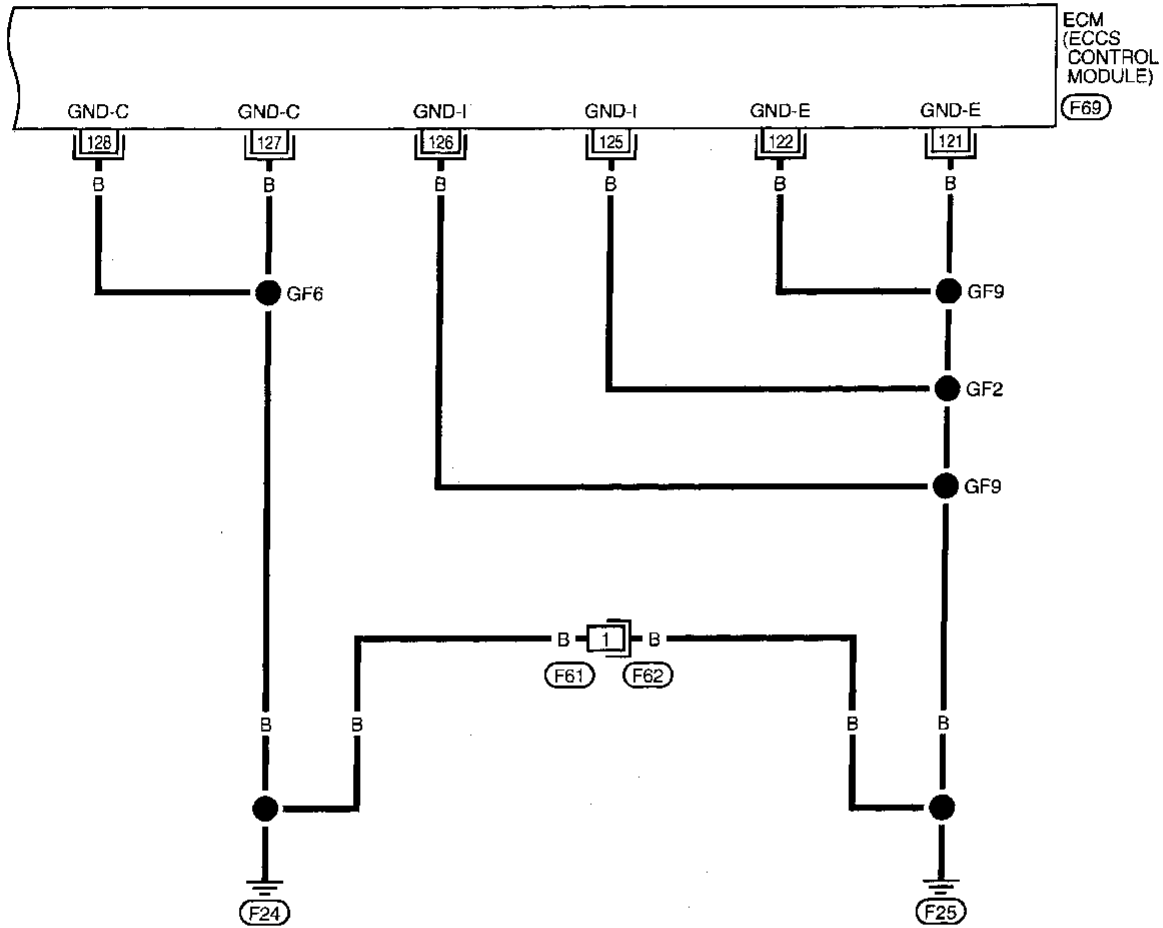

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

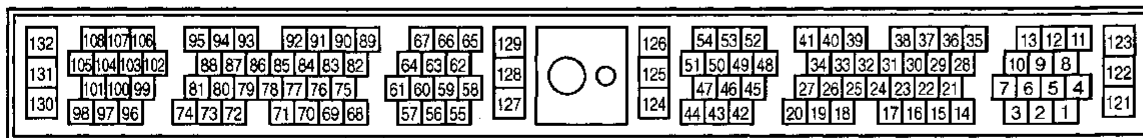

TEC237

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)






ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
56	W/L	Power supply (Back-up)	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
121	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
122	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
123	W/L	Current return	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
124	W/B	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
125	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
127	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
128	B	ECCS ground	Engine is running. └ Idle speed	Engine ground
130 131	R/G	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS FOR POWER SUPPLY


Main Power Supply and Ground Circuit (Cont'd)

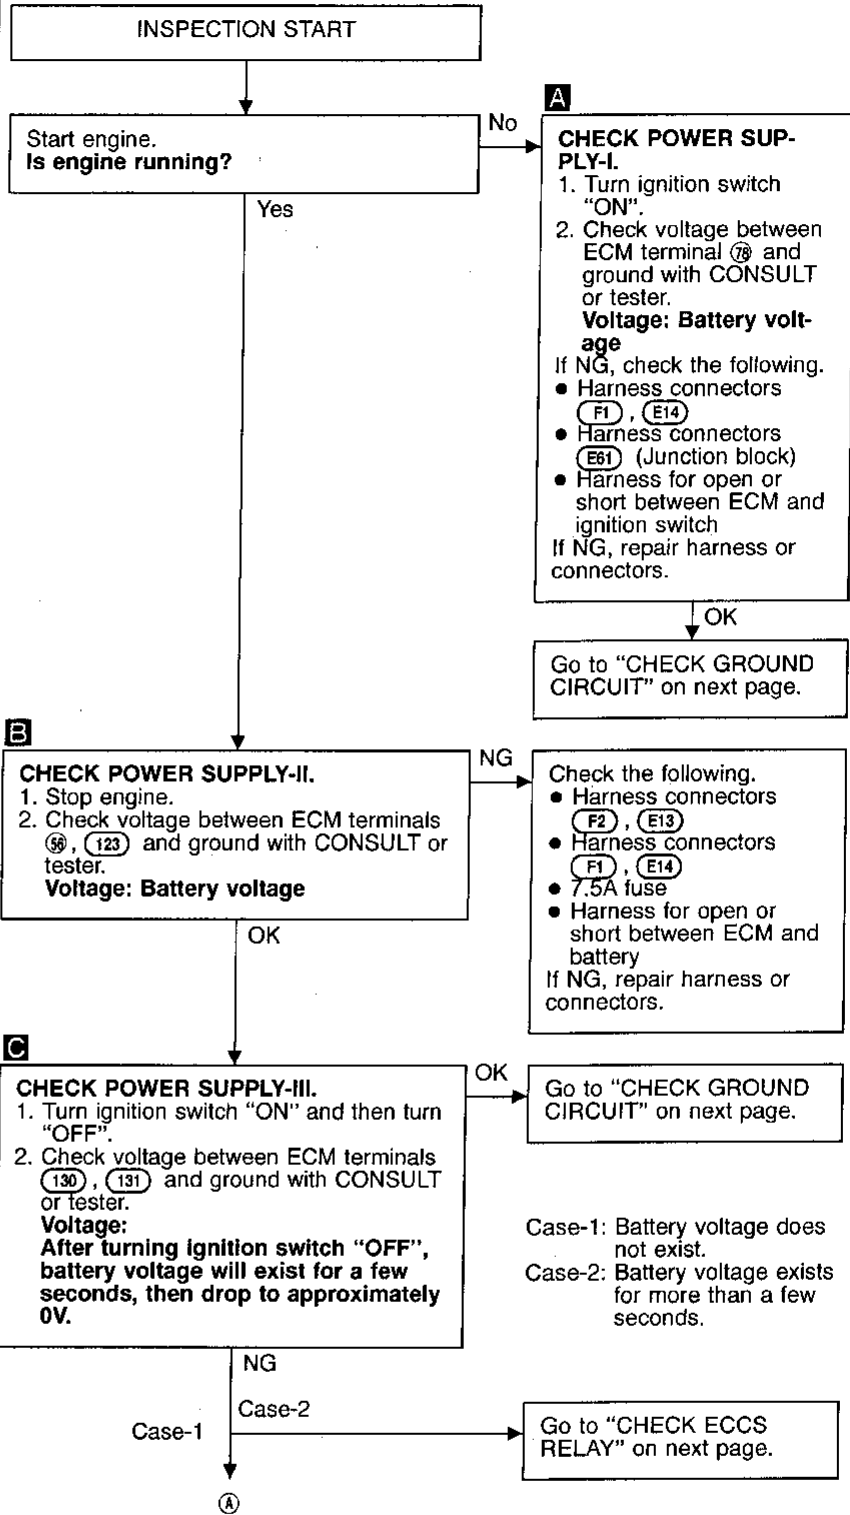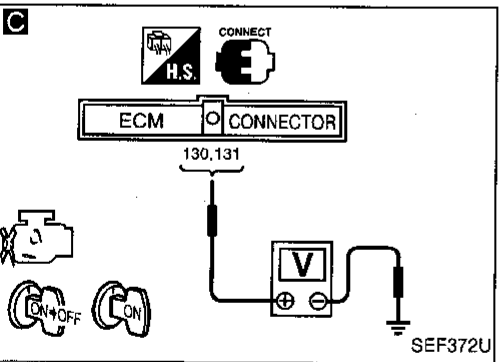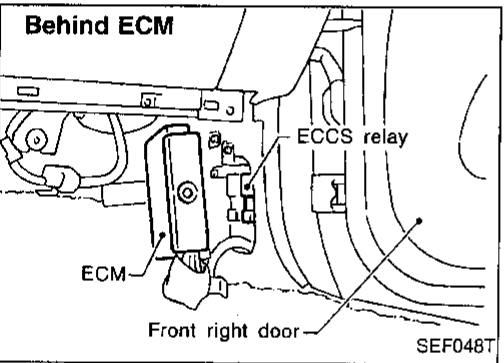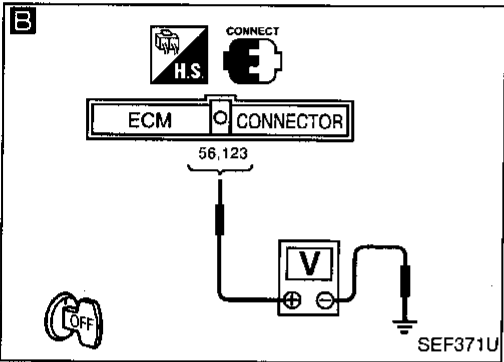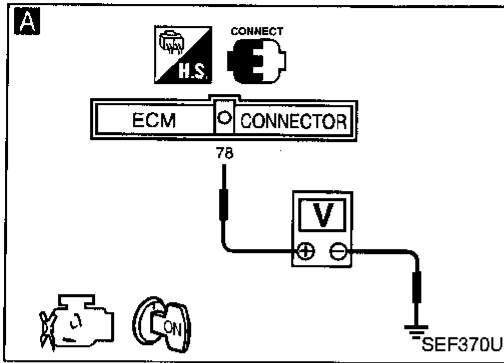

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

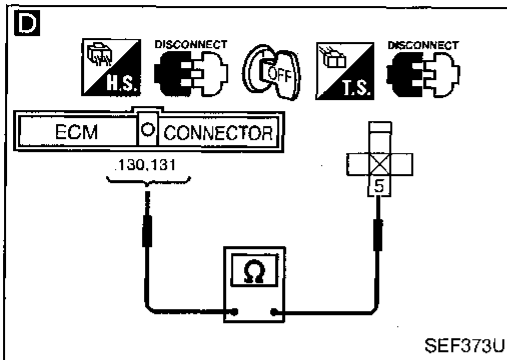


D

CHECK HARNESS CONTINUITY BETWEEN ECCS RELAY AND ECM.

1. Disconnect ECM harness connector.
2. Disconnect ECCS relay.
3. Check harness continuity between ECM terminals (130), (131) and terminal (5). **Continuity should exist.** If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

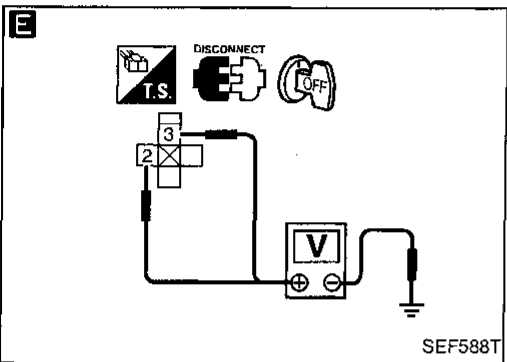

E


CHECK VOLTAGE BETWEEN ECCS RELAY AND GROUND.

1. Check voltage between terminals (2), (3) and ground with CONSULT or tester. **Voltage: Battery voltage**

NG → Check the following.

- Harness connectors (F2), (E13)
- Harness for open or short between Terminal (F2)

If NG, repair harness or connectors.

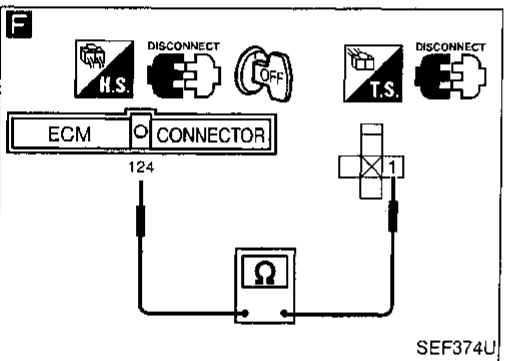


F

CHECK OUTPUT SIGNAL CIRCUIT.

1. Check harness continuity between ECM terminal (124) and relay terminal (1). **Continuity should exist.** If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

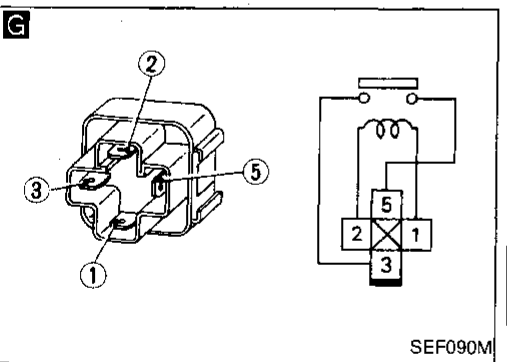


G

CHECK ECCS RELAY.

1. Apply 12V direct current between relay terminals (1) and (2).
2. Check continuity between relay terminals (3) and (5). **12V (1 - 2) applied: Continuity exists. No voltage applied: No continuity**

NG → Replace ECCS relay.

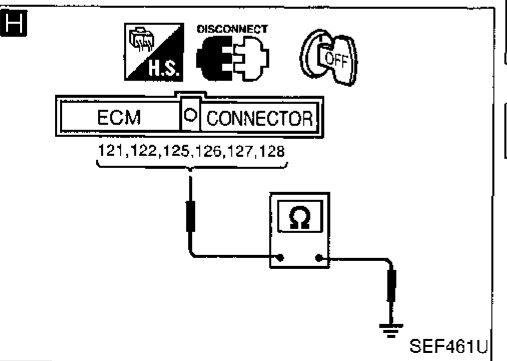

H

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminals (121), (122), (125), (126), (127), (128) and engine ground. **Continuity should exist.** If OK, check harness for short to ground and short to power.

NG → Check the following.


- Harness connectors (F61), (F62)
- Harness for open or short between engine grounds (F24) and (F25)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0100

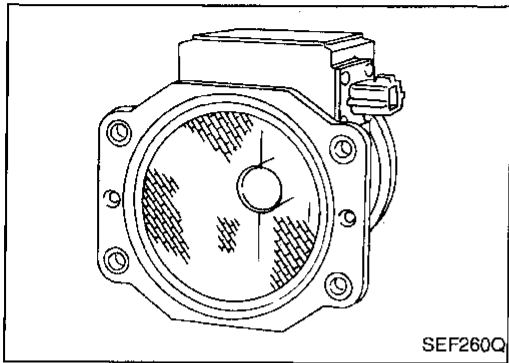

Mass Air Flow Sensor (MAFS)

COMPONENT DESCRIPTION

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to the hot film as air flow increases. This maintains the temperature of the hot film. The ECM detects the air flow by means of this current change.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAS AIR/FL SE	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	1.0 - 1.7V
	2,500 rpm	Approximately 2.1V
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	13.0 - 32%
	2,500 rpm	13.0 - 25.5%
MASS AIRFLOW	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	3.0 - 6.0 g-m/s
	2,500 rpm	12.9 - 25.3 g-m/s

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
65	W	Mass air flow sensor	Engine is running. (Warm-up condition) └ Idle speed	1.0 - 1.4V
			Engine is running. (Warm-up condition) └ Engine speed is 2,500 rpm.	Approximately 2.1V
62	B	Mass air flow sensor ground	Engine is running. (Warm-up condition) └ Idle speed	Approximately 0V

ON BOARD DIAGNOSTIC LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0100 0102	A) An excessively high voltage from the sensor is sent to ECM when engine is not running.*	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor
	C) A high voltage from the sensor is sent to ECM under light load driving conditions.	
	B) An excessively low voltage from the sensor is sent to ECM* when engine is running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air leaks ● Mass air flow sensor
	D) A low voltage from the sensor is sent to ECM under heavy load driving conditions.	

*: When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up. (Refer to EC-88.)

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,400 rpm due to the fuel cut.
--	---

TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Perform "Procedure for malfunction A" first.

If 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B".

If there is problem in "Procedure for malfunction B", perform "Procedure for malfunction C". If there is no problem on "Procedure for malfunction C", perform "Procedure for malfunction D".

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	0rpm	
COOLAN TEMP/S	25°C	
INT/A TEMP SE	25°C	
RECORD		

SEF698T

Procedure for malfunction A



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 6 seconds.

OR



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Select "MODE 7" with GST.

OR



- 1) Turn ignition switch "ON", and wait at least 6 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

Procedure for malfunction B



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait 5 seconds at most.

OR



- 1) Turn ignition switch "ON".
- 2) Start engine and wait 5 seconds at most.
- 3) Select "MODE 7" with GST.

OR



- 1) Turn ignition switch "ON".
- 2) Start engine and wait 5 seconds at most.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

If 1st trip DTC after move than 5 seconds, there may be a malfunction.


☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	650rpm	
MAS AIR FL/SE	1.5V	
RECORD		

SEF695T

TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

Procedure for malfunction C

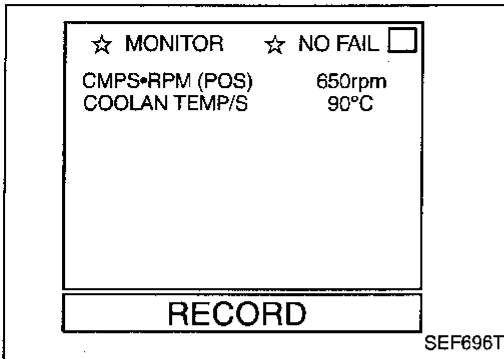

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Wait at least 10 seconds at idle speed.

GI



- OR
- 1) Turn ignition switch "ON".
 - 2) Start engine and warm it up to normal operating temperature.
 - 3) Wait at least 10 seconds at idle speed.
 - 4) Select "MODE 7" with GST.

MA

EM



- OR
- 1) Turn ignition switch "ON".
 - 2) Start engine and warm it up to normal operating temperature.
 - 3) Wait at least 10 seconds at idle speed.
 - 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
 - 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

Procedure for malfunction D

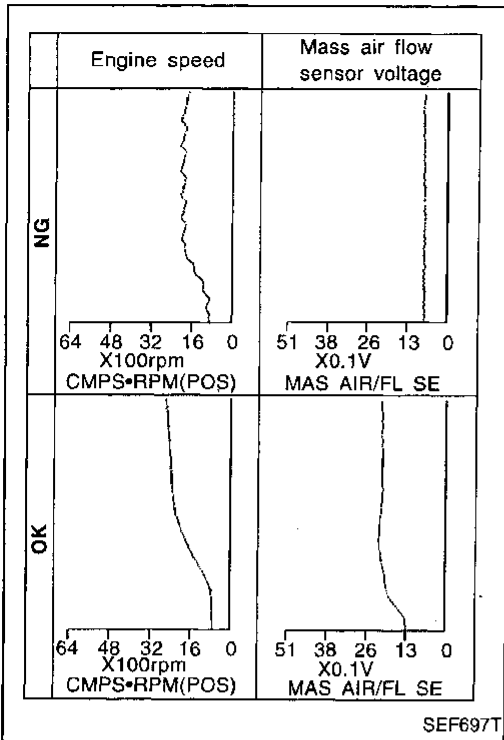

SEF697T



- 1) Turn ignition switch "ON".
- 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.

If engine cannot be started, go to "DIAGNOSTIC PROCEDURE, EC-118.

- 3) Select "DATA MONITOR" mode with CONSULT.
- 4) Check the voltage of MAS AIR/FL SE with "DATA MONITOR".
- 5) Increases engine speed to about 4,000 rpm.
- 6) Monitor the linear voltage rise in response to engine speed increases.

If NG, go to "DIAGNOSTIC PROCEDURE", EC-118.

If OK, go to following step.

- 7) Maintain the following conditions for at least 10 consecutive seconds.

CMPS•RPM (POS): More than 2,000 rpm

THRTL POS SEN: More than 3V

Selector lever: Suitable position

Driving location: Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Procedure for malfunction D



- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature.
- 3) Select "MODE 1" with GST.
- 4) Check the mass air flow with "MODE 1".
- 5) Check for linear mass air flow rise in response to increases to about 4,000 rpm in engine speed.


OR



- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature.
- 3) Check the voltage between ECM terminal 65 and ground.
- 4) Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

CALC LOAD	20%
COOLANT TEMP	95°C
SHORT FT #1	2%
LONG FT #1	0%
SHORT FT #2	4%
LONG FT #2	0%
ENGINE SPD	2637RPM
VEHICLE SPD	0MPH
IGN ADVANCE	41.0°
INTAKE AIR	41°C
MAF	14.1gm/sec
THROTTLE POS	3%

SEF534P

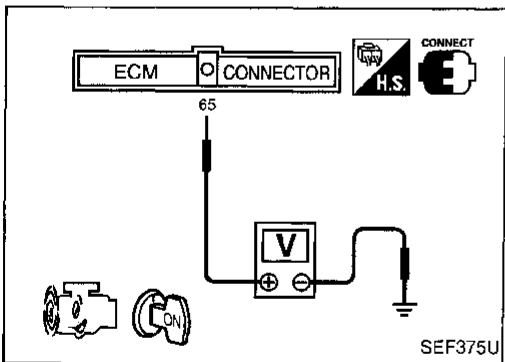


SEF375U

TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

EC-MAFS-01

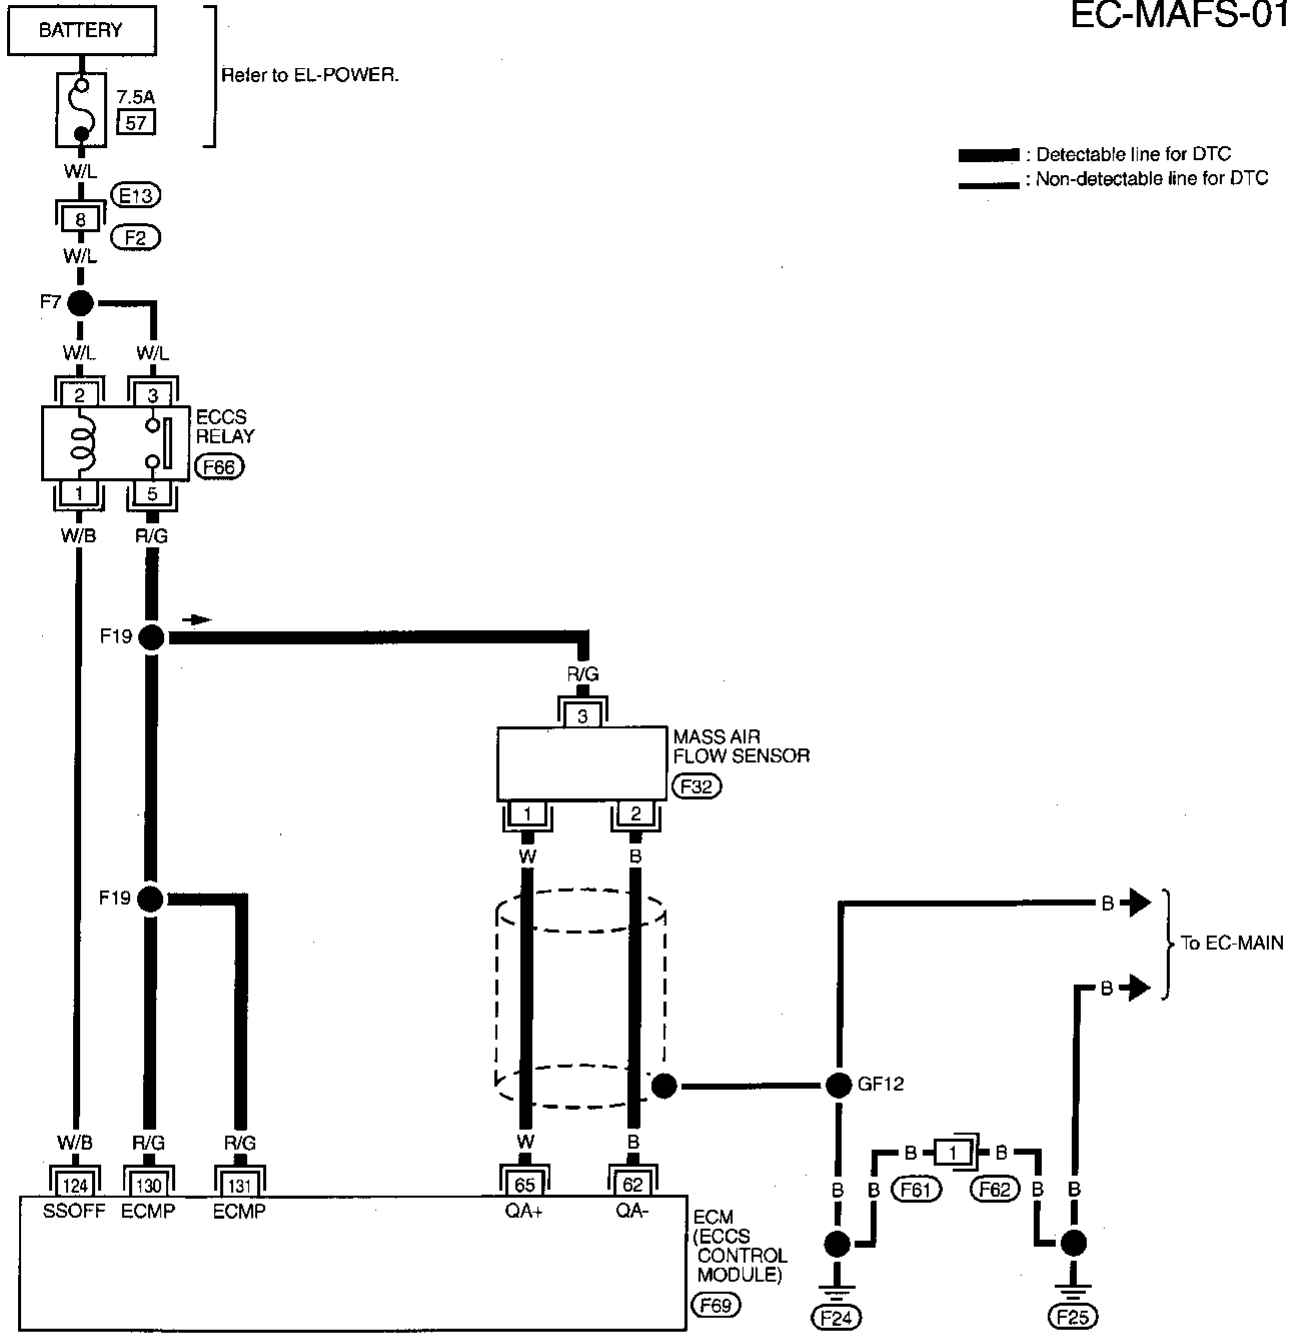

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST



RS

BT

HA

EL

IDX

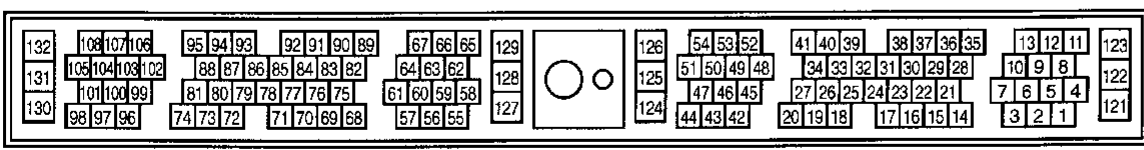







TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

DIAGNOSTIC PROCEDURE

If the trouble is duplicated after "Procedure for malfunction A or C, perform "Procedure A" below. If the trouble is duplicated after "Procedure for malfunction B or D", perform "Procedure B" on next page.






Procedure A

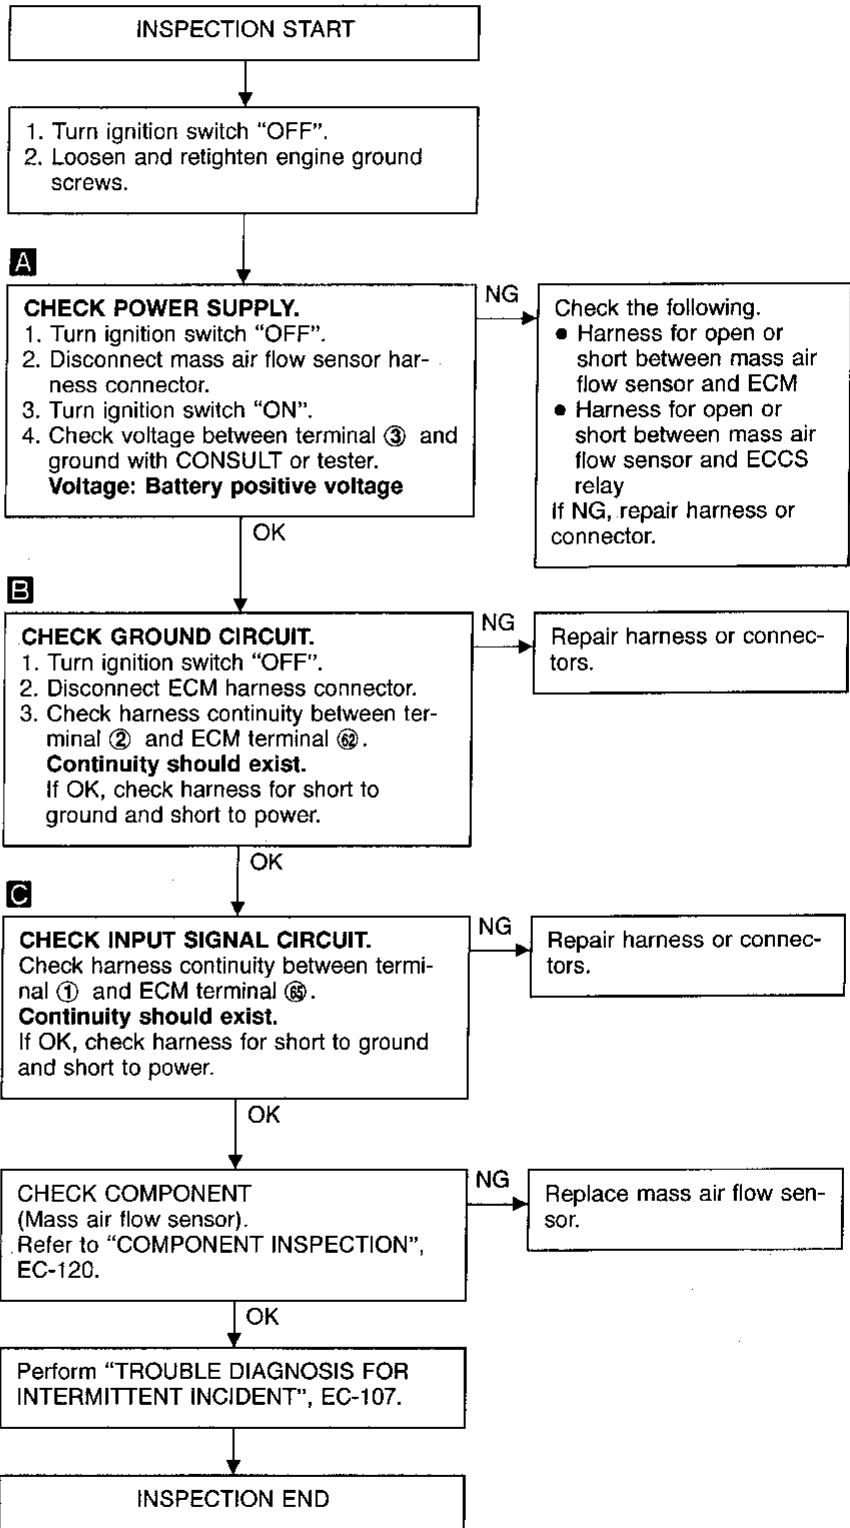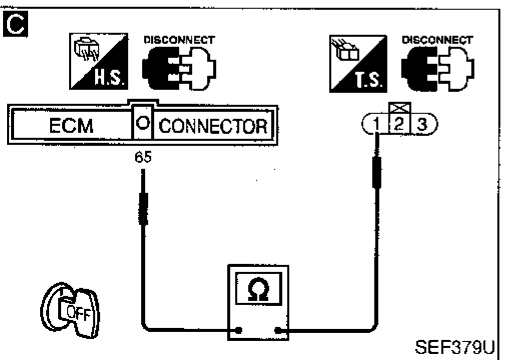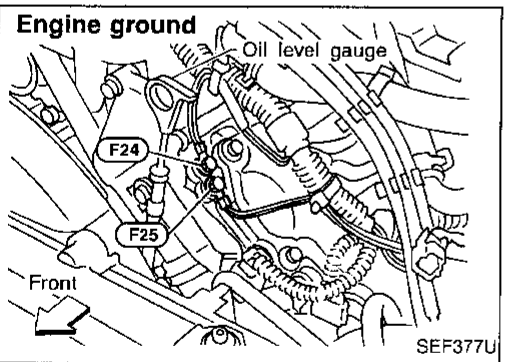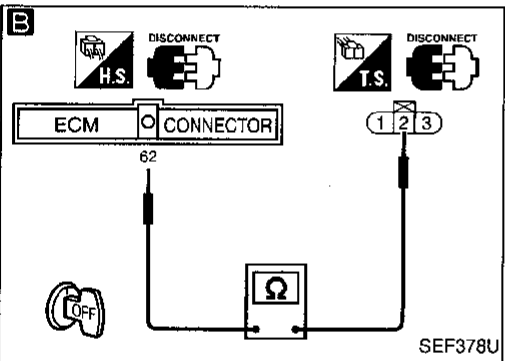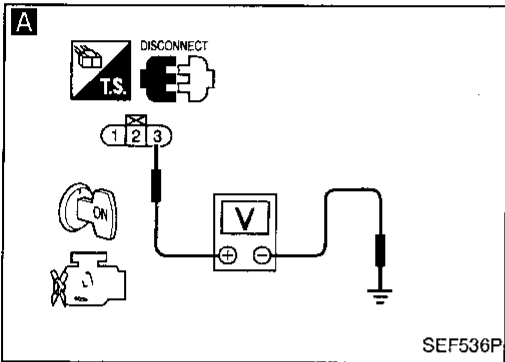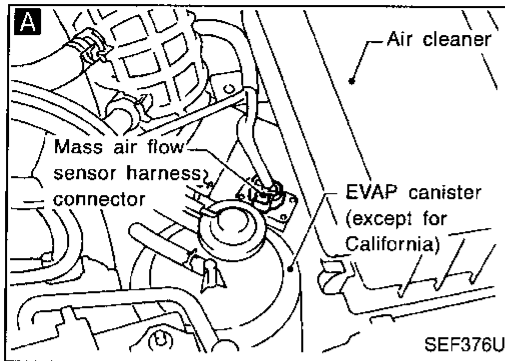

TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

Procedure B

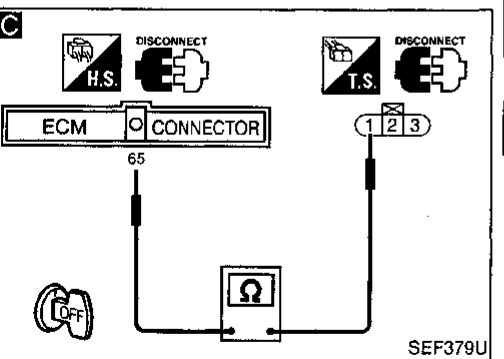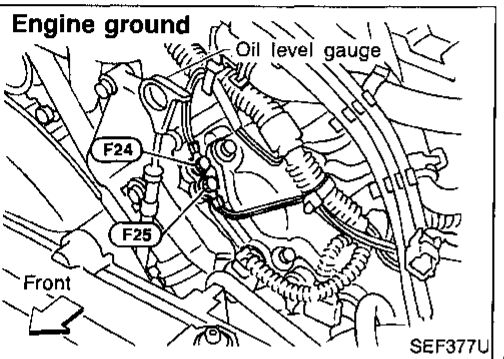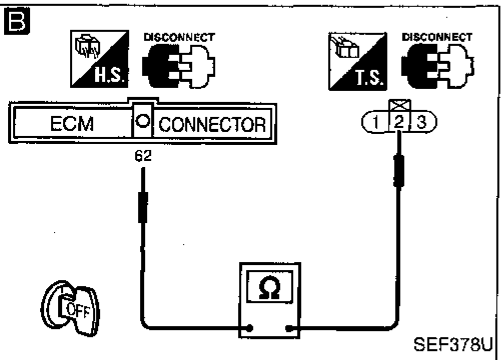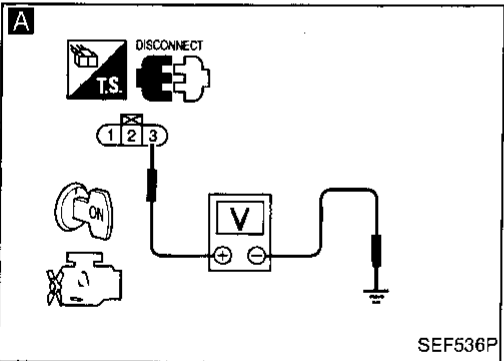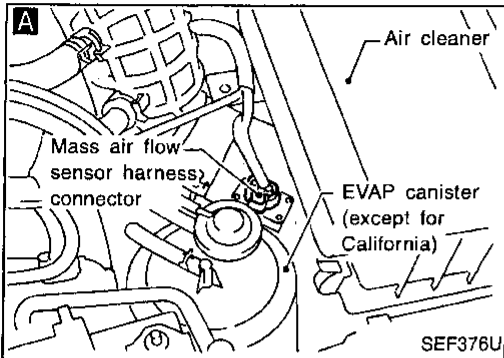

INSPECTION START

CHECK INTAKE SYSTEM
Check the followings for connection.
• Air duct
• Vacuum hoses
• Intake air passage between intake air duct to collector
If disconnected, reconnect the parts or repair.

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect mass air flow sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and ground with CONSULT or tester.
Voltage: Battery positive voltage

CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between terminal ② and ECM terminal ⑥.
Continuity should exist.
If OK, check harness for short to ground and short to power.

CHECK INPUT SIGNAL CIRCUIT.
Check harness continuity between terminal ① and ECM terminal ⑥.
Continuity should exist.
If OK, check harness for short to ground and short to power.

CHECK COMPONENT
(Mass air flow sensor).
Refer to "COMPONENT INSPECTION" on next page.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

NG → Reconnect or repair.

NG → Check the following.
• Harness for open or short between mass air flow sensor and ECM
• Harness for open or short between mass air flow sensor and ECCS relay
If NG, repair harness or connector.

NG → Repair harness or connectors.

NG → Repair harness or connectors.

NG → Replace mass air flow sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX



TROUBLE DIAGNOSIS FOR DTC P0100

Mass Air Flow Sensor (MAFS) (Cont'd)

COMPONENT INSPECTION

Mass air flow sensor


1. Turn ignition switch "ON".
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal (65) and (128) (ECM ground).

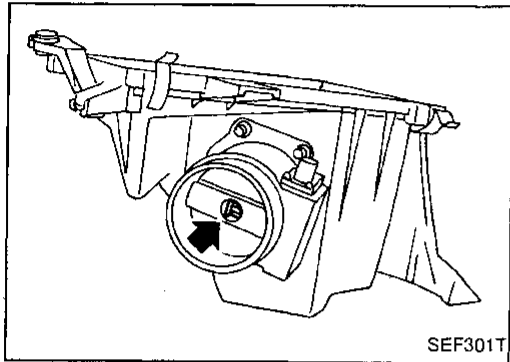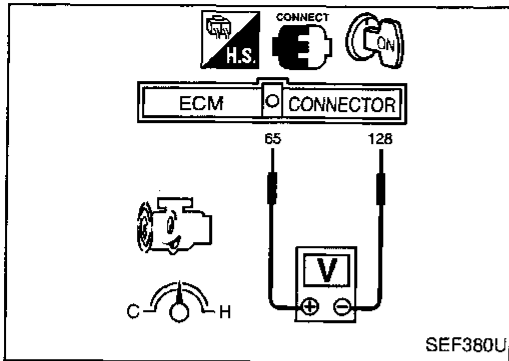

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7
2,500 rpm	Approximately 2.1
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0

*: Check for linear voltage rise in response to increase to about 4,000 rpm in engine speed.


4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot film for damage or dust.

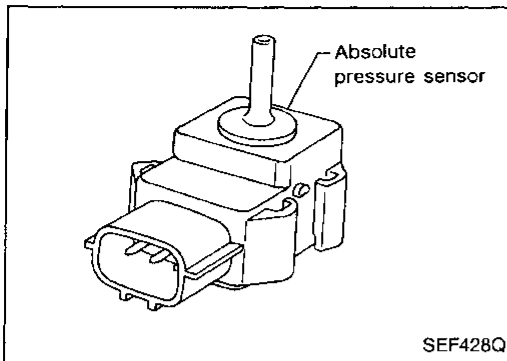

Absolute Pressure Sensor (For California)

COMPONENT DESCRIPTION

The absolute pressure sensor is connected to the MAP/BARO switch solenoid valve by a hose. The sensor detects ambient barometric pressure and intake manifold pressure and sends the voltage signal to the ECM. As the pressure increases, the voltage rises.

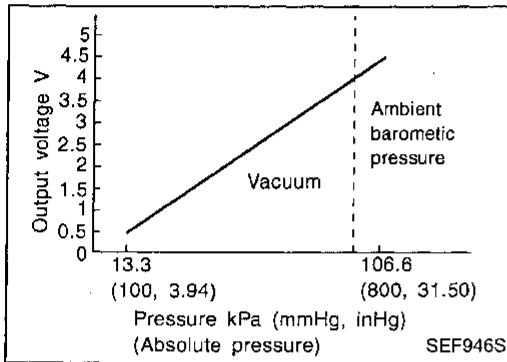

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0105 0803	A) An excessively low or high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (Absolute pressure sensor circuit is open or shorted.) • Absolute pressure sensor
	B) A high voltage from the sensor is sent to ECM under light load driving conditions.	<ul style="list-style-type: none"> • Hoses (Hoses between the intake manifold and absolute pressure sensor are disconnected or clogged.) • Intake air leaks • MAP/BARO switch solenoid valve • Absolute pressure sensor
	C) A low voltage from the sensor is sent to ECM under heavy load driving conditions.	<ul style="list-style-type: none"> • Absolute pressure sensor

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Perform "Procedure for malfunction A" first. If the 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B". If the 1st trip DTC is not confirmed on "Procedure for malfunction B", perform "Procedure for malfunction C".

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

Procedure for malfunction A

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 6 seconds.

OR



- 1) Turn ignition switch "ON" and wait at least 6 seconds.
- 2) Select "MODE 7" with GST.

OR



- 1) Turn ignition switch "ON" and wait at least 6 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	0rpm	
RECORD		

SEF888T

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	650rpm	
COOLAN TEMP/S	90°C	
RECORD		

SEF696T

Procedure for malfunction B

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 4) Start engine and let it idle.
- 5) Wait at least 15 seconds.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine.
- 4) Let engine idle and wait at least 15 seconds.
- 5) Select "MODE 7" with GST.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine.
- 4) Let engine idle and wait at least 15 seconds.
- 5) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	3000rpm	
VHCL SPEED SE	75km/h	
B/FUEL SCHDL	6ms	
ABSOL PRES/SE	4.4V	
RECORD		

SEF382U

Procedure for malfunction C

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
The voltage of "ABSOL PRES/SE" should be more than 1.74 [V].
If the check result is NG, go to "DIAGNOSTIC PROCEDURE", EC-125. If the check result is OK, go to following step.
- 3) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 4) Turn ignition switch "OFF" and wait at least 5 seconds.
- 5) Start engine and let it idle for at least 13 seconds.
- 6) Select "DATA MONITOR" mode with CONSULT.
- 7) Drive the vehicle at least 3 consecutive seconds under the following conditions,
B/FUEL SCHDL: More than 5.6 ms
CMPS-RPM (POS): 3,000 - 4,800 rpm
Selector lever: Suitable position
Driving pattern: Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

ENGINE SPD	0RPM
COOLANT TEMP	69°C
VEHICLE SPD	0MPH
IGN ADVANCE	3.0°
CALC LOAD	0.0%
MAP	101KPaA
MAF	0.25gm/s
THROTTLE POS	0.0%
INTAKE AIR	27°C
FUEL SYS #1	OL
FUEL SYS #2	UNUSED
SHORT FT #1	0.0%
LONG FT #1	0.0%
O2S B1 S1	0.000V
O2FT B1 S1	0.0%
O2S B1 S2	0.000V

SEF518R

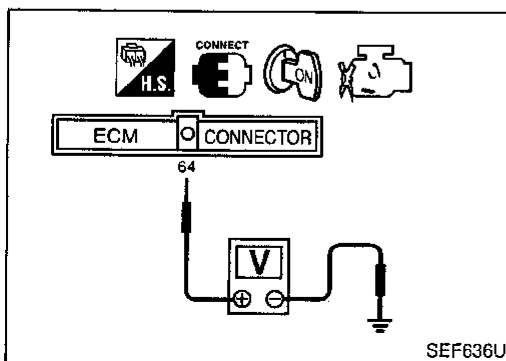

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the absolute pressure sensor circuit. During this check, a 1st trip DTC might not be confirmed.



- 1) Turn ignition switch "ON".
- 2) Select "MAP" in "MODE 1" with GST.
- 3) Make sure that the pressure of "MAP" is more than 46 kPa (0.47 kg/cm², 6.7 psi).

OR





- 1) Turn ignition switch "ON".
- 2) Make sure that the voltage between ECM terminal 64 and engine ground is more than 1.74 [V].

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

EC-AP/SEN-01

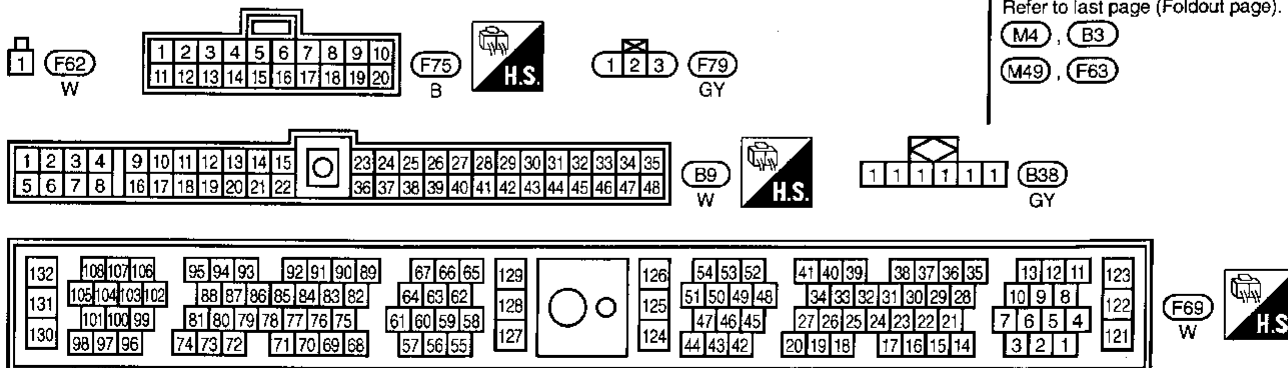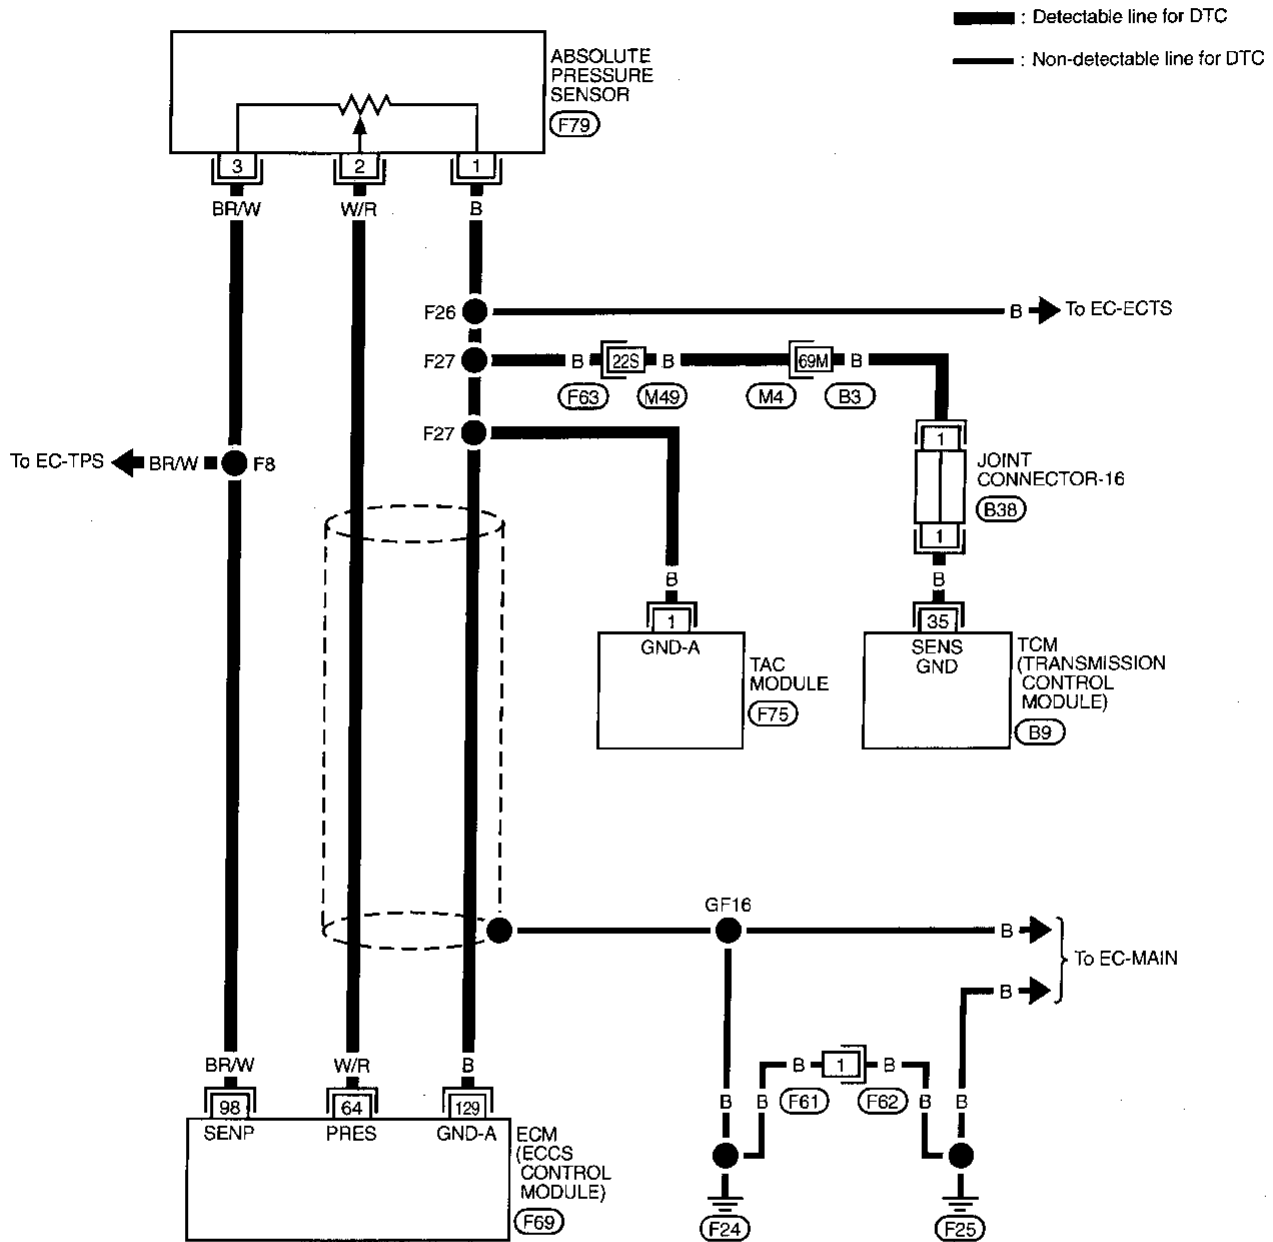






TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

If the trouble is duplicated after "Procedure for malfunction A or C", perform "Procedure A" below. If the trouble is duplicated after "Procedure for malfunction B", perform "Procedure B" on next page.

Procedure A

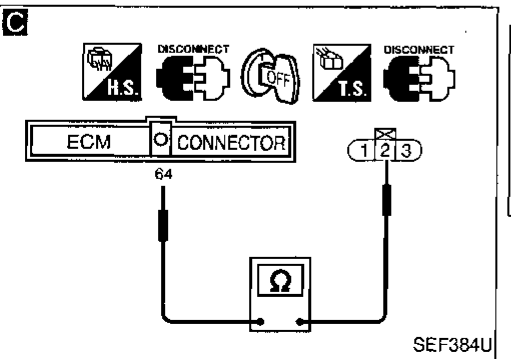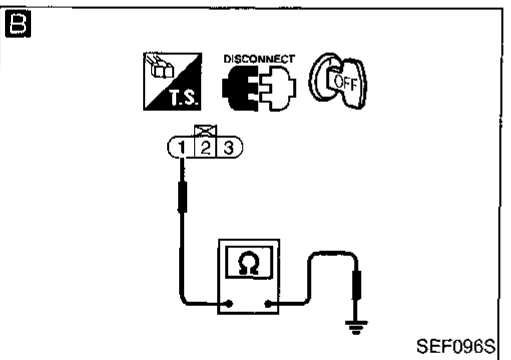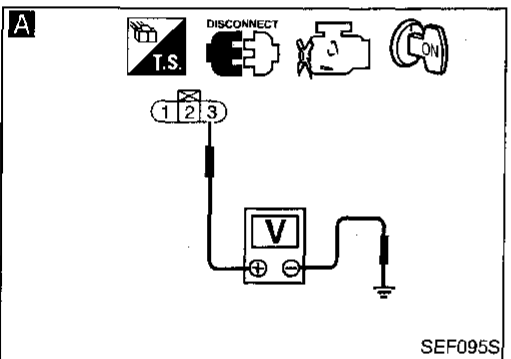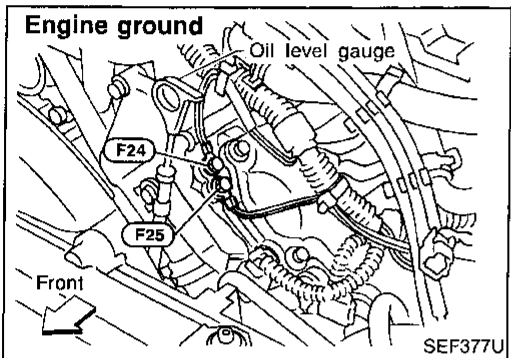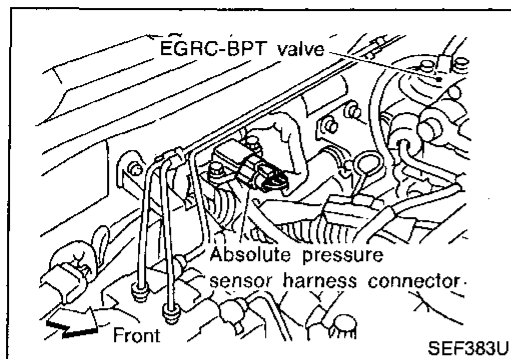

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A
CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect absolute pressure sensor harness connector.
3. Check sensor connector for water. **Water should not exist.**
If OK, go to step 4. If NG, repair or replace harness connector.
4. Turn ignition switch "ON".
5. Check voltage between terminal ③ and engine ground with CONSULT or tester. **Voltage: Approximately 5V**

NG
Check the following.
• Harness for open or short between ECM and absolute pressure sensor
If NG, repair or replace harness or connectors.

B
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground. **Continuity should exist.**
If OK, check harness for short to ground and short to power.

NG
Check the following.
• Harness connectors (F63, M49)
• Harness connectors (M4, B3)
• Joint connector-16
• Harness for open or short between ECM and absolute pressure sensor
• Harness for open or short between TCM (Transmission control module) and absolute pressure sensor
• Harness for open or short between absolute pressure sensor and TAC module
If NG, repair open circuit or short to ground or short to power in harness or connectors.

C
CHECK INPUT SIGNAL CIRCUIT.
1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ④ and terminal ②. **Continuity should exist.**
If OK, check harness for short to ground and short to power.


NG
Repair harness or connectors.

OK

Ⓐ

TROUBLE DIAGNOSIS FOR DTC P0105



Absolute Pressure Sensor (For California) (Cont'd)

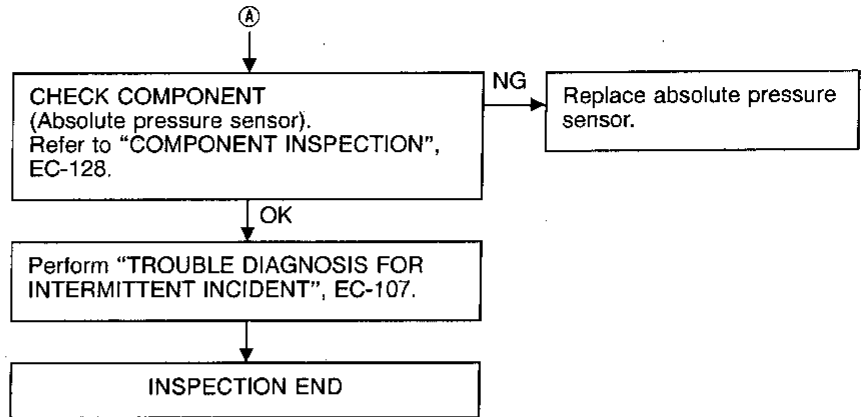

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

Procedure B

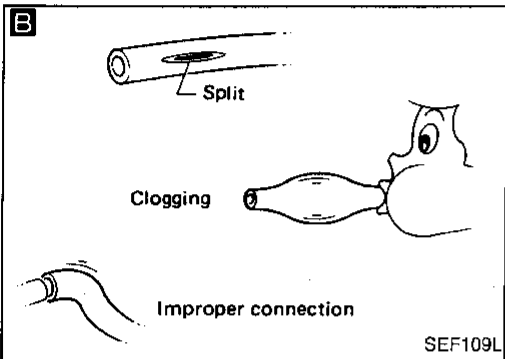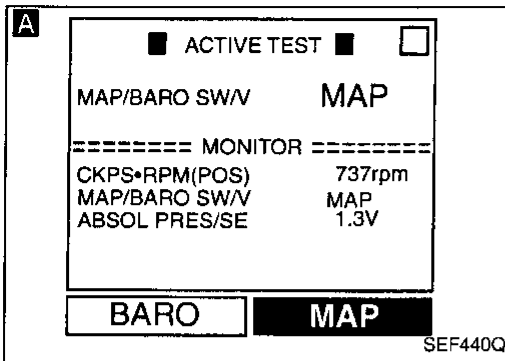

INSPECTION START

A

CHECK VACUUM SOURCE AND CIRCUIT TO ABSOLUTE PRESSURE SENSOR.

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Connect MAP/BARO switch solenoid valve and absolute pressure sensor with a rubber tube that has a vacuum gauge.
4. Turn ignition switch "ON".
5. Check vacuum gauge.
Vacuum should not exist.
6. Start engine and let it idle.
7. Check vacuum gauge.
Vacuum should exist.

NG → **CHECK VACUUM HOSE.**
Check vacuum hose for clogging, cracks, disconnection or improper connection.
If NG, repair or replace the hose.

OK ↓
Check vacuum port for clogging.
If NG, clean it.

OK ↓
CHECK COMPONENT
(Absolute pressure sensor).
Refer to "COMPONENT INSPECTION" on next page.

NG ↓
Replace absolute pressure sensor.

OK ↓
CHECK INTAKE SYSTEM.
Check intake system for air leaks.

B

CHECK HOSE BETWEEN ABSOLUTE PRESSURE SENSOR AND MAP/BARO SWITCH SOLENOID VALVE.

1. Turn ignition switch "OFF".
2. Check hose for clogging, cracks, disconnection or improper connection.





NG → Repair or reconnect hose.

OK ↓
A

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

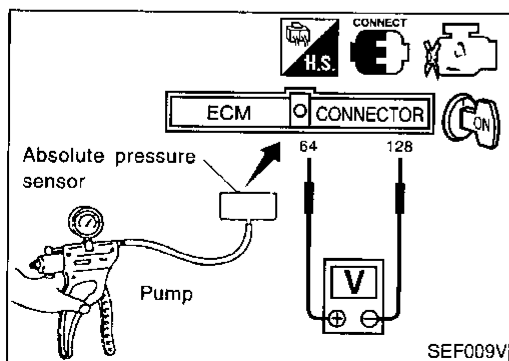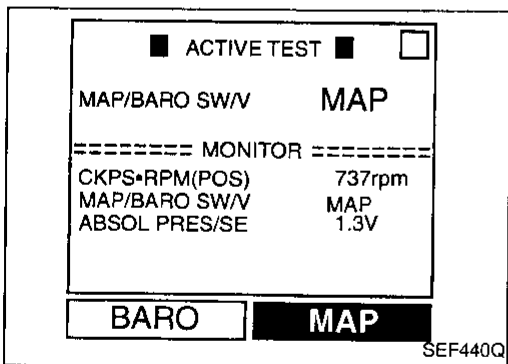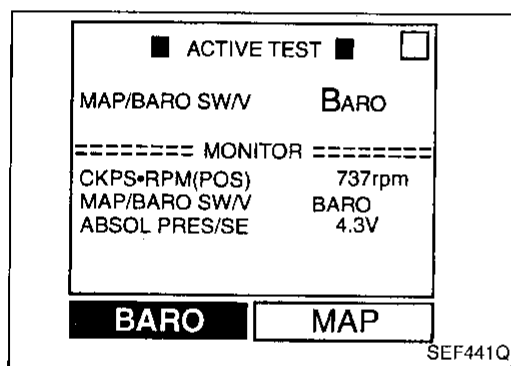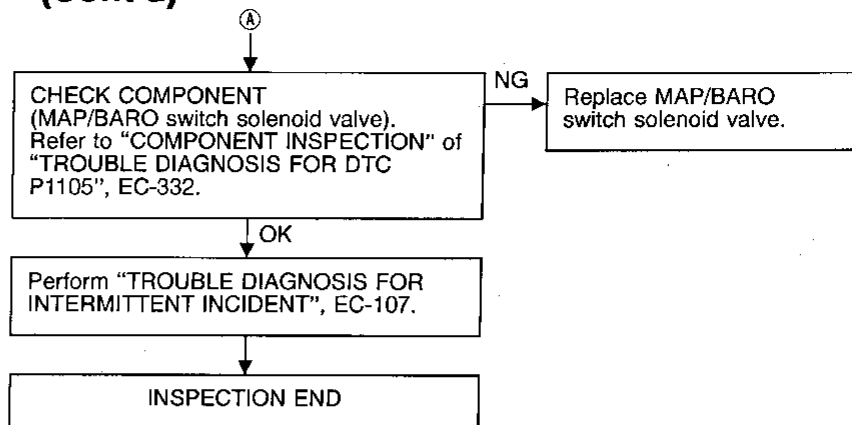

COMPONENT INSPECTION

Absolute pressure sensor

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

MAP/BARO	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

OR

2. Turn ignition switch "ON" and check output voltage between ECM terminals ⑥④ and ⑫② (ECM ground).
The voltage should be more than 2.6V.
3. Start engine and wait at least 5 seconds and check voltage between terminals ⑥④ and ⑫②.
The voltage should be less than the voltage in step 2.
If NG, go to step 4; if OK, inspection end.
4. Turn ignition switch "OFF".
5. Remove absolute pressure sensor with its harness connector connected.
6. Remove hose from absolute pressure sensor.
7. Turn ignition switch "ON" and check output voltage between terminal ⑥④ and ⑫② (ECM ground).
The voltage should be 3.2 to 4.8 V.
8. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.
The voltage should be 1.0 to 1.4 V lower than the value measured in step 7.

TROUBLE DIAGNOSIS FOR DTC P0105

Absolute Pressure Sensor (For California) (Cont'd)

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below 93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.
9. If NG, replace absolute pressure sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0110

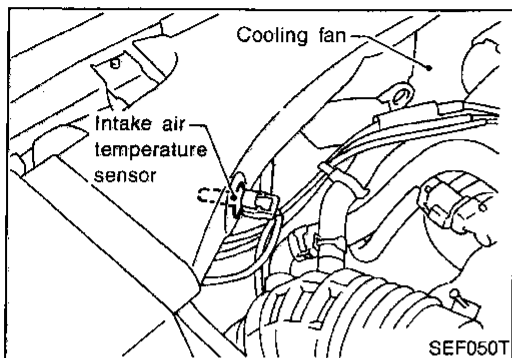


Intake Air Temperature Sensor

COMPONENT DESCRIPTION

The intake air temperature sensor is mounted to the intake air duct. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor, which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

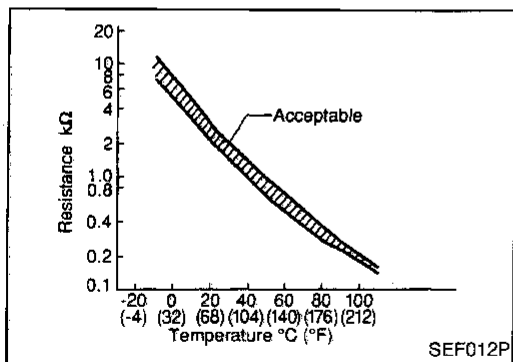

<Reference data>

Intake air temperature °C (°F)	Voltage* (V)	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
80 (176)	1.23	0.27 - 0.38

* These data are reference values and are measured between ECM terminal 69 (Intake air temperature sensor) and ECM terminal 128 (ECCS ground).

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0110 0401	A) An excessively low or high voltage from the sensor is sent to ECM. B) Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Intake air temperature sensor

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Perform "Procedure for malfunction A" first.

If 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B".

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

Procedure for malfunction A

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 5 seconds.

OR

- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select MODE 7 with GST.

☆ MONITOR ☆ NO FAIL

CMPS-RPM (POS) 0rpm

COOLAN TEMP/S 25°C

INT/A TEMP SE 25°C

RECORD

SEF698T

TROUBLE DIAGNOSIS FOR DTC P0110

Intake Air Temperature Sensor (Cont'd)

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform diagnostic test mode II (Self-diagnostic results) with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

☆ MONITOR	☆ NO FAIL
COOLAN TEMP/S	30°C
VHCL SPEED SE	75km/h
RECORD	

SEF629U

FUEL SYS #1	OPEN
FUEL SYS #2	OPEN
CALC LOAD	0%
COOLANT TEMP	31°C
SHORT FT #1	0%
LONG FT #1	0%
SHORT FT #2	0%
LONG FT #2	0%
ENGINE SPD	0RPM
VEHICLE SPD	0MPH
IGN ADVANCE	1.0°
INTAKE AIR	25°C

SEF549P

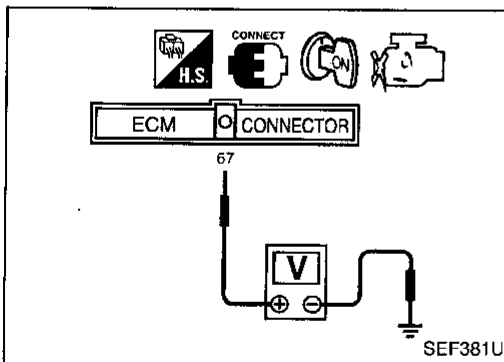

Procedure for malfunction B

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.



- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - (a) Turn ignition switch "ON".
 - (b) Select "DATA MONITOR" mode with CONSULT.
 - (c) Check the engine coolant temperature.
 - (d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 2) Turn ignition switch "ON".
- 3) Select "DATA MONITOR" mode with CONSULT.
- 4) Start engine and turn TCS switch "OFF".
- 5) Hold vehicle speed more than 70 km/h (43 MPH) for 100 consecutive seconds.

OR



- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - (a) Turn ignition switch "ON".
 - (b) Select MODE 1 with GST.
 - (c) Check the engine coolant temperature.
 - (d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 2) Start engine and turn TCS switch "OFF".
- 3) Hold vehicle speed more than 70 km/h (43 MPH) for 100 consecutive seconds.
- 4) Select MODE 7 with GST.

OR



- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - (a) Turn ignition switch "ON".
 - (b) Check voltage between ECM terminal 67 and ground.

Voltage: More than 1.0 (V)
 - (c) If the voltage is not more than 1.0 (V), turn ignition switch "OFF" and cool down engine.
- Perform the following steps before the voltage is below 1.0V.

TROUBLE DIAGNOSIS FOR DTC P0110

Intake Air Temperature Sensor (Cont'd)


- 2) Start engine and turn TCS switch "OFF".
- 3) Hold vehicle speed more than 70 km/h (43 MPH) for 100 consecutive seconds.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0110

Intake Air Temperature Sensor (Cont'd)

EC-IATS-01

: Detectable line for DTC
 : Non-detectable line for DTC

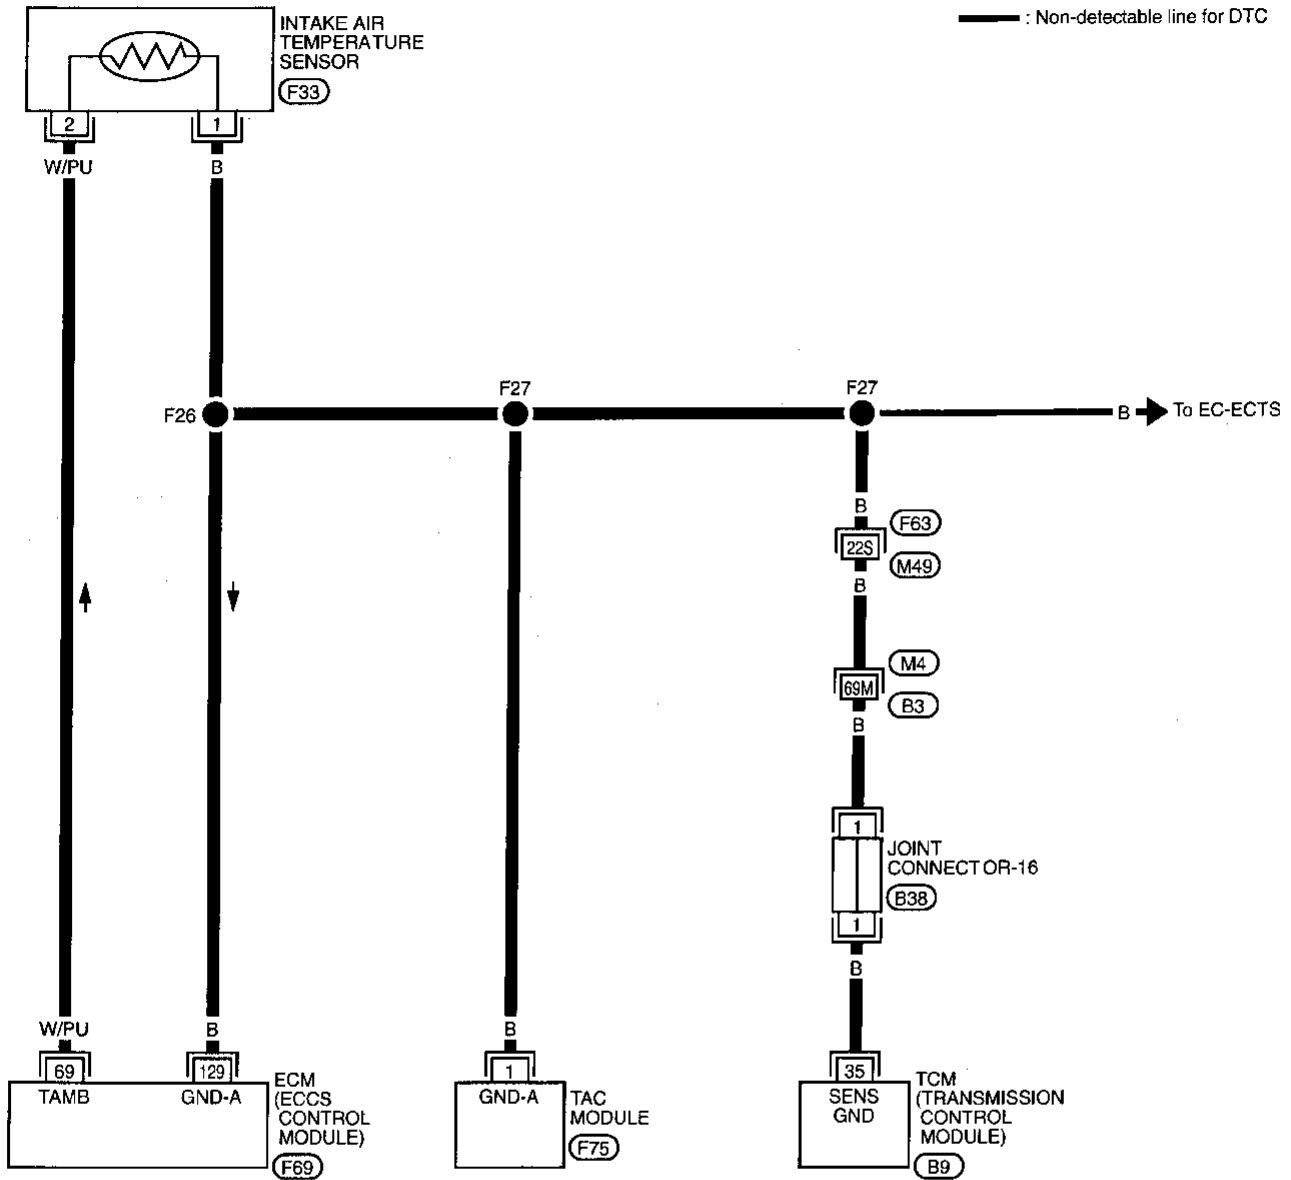

GI

MA

EM

LC

EC

FE

AT

PD

FA


RA

BR

ST

RS

BT

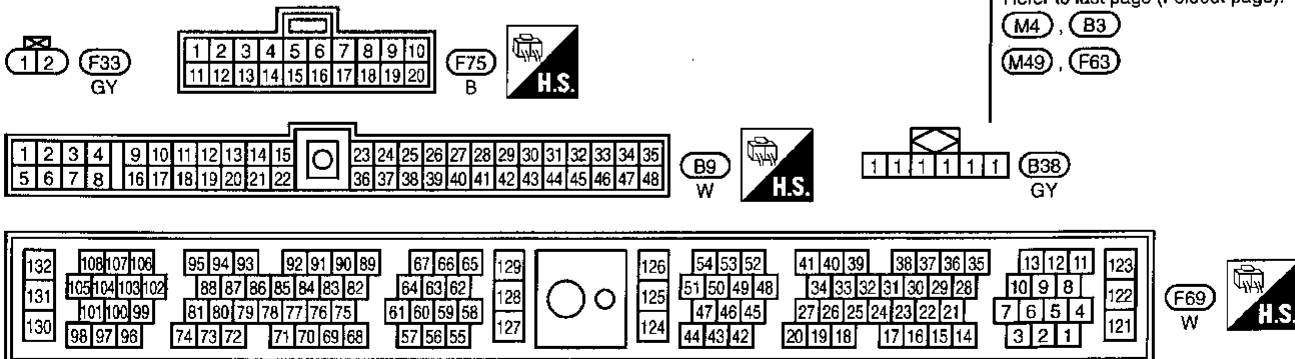

HA





EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0110

Intake Air Temperature Sensor (Cont'd)

DIAGNOSTIC PROCEDURE

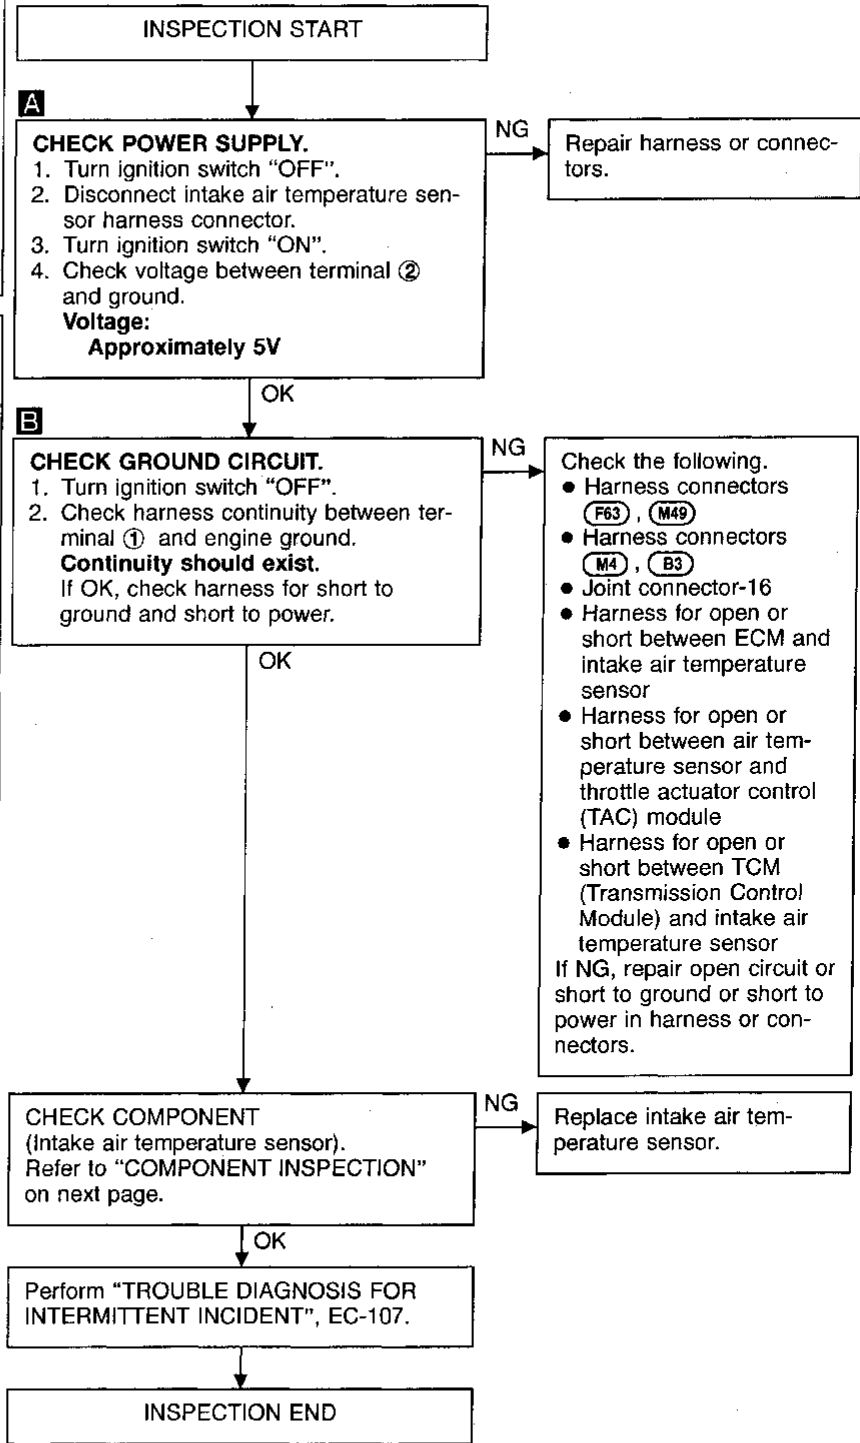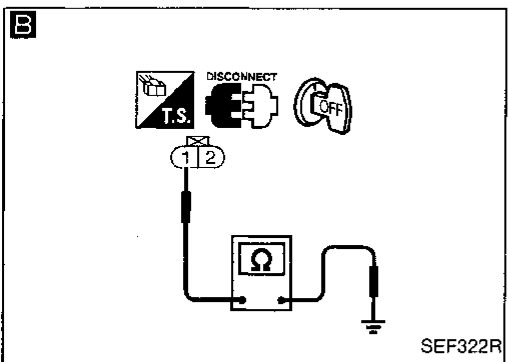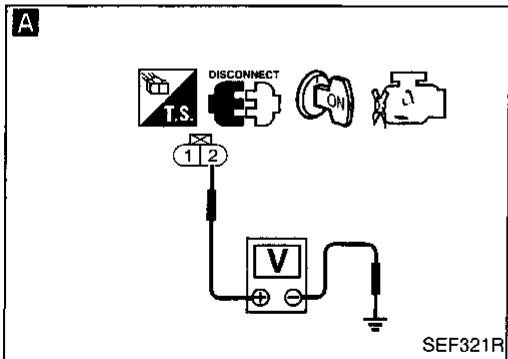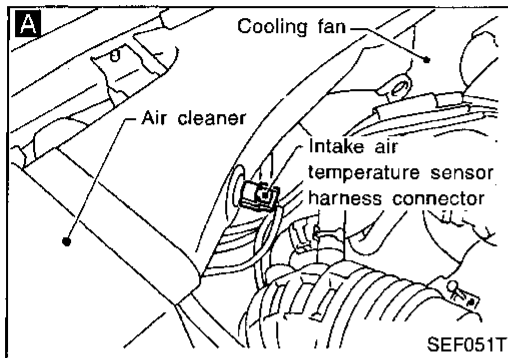



TROUBLE DIAGNOSIS FOR DTC P0110

Intake Air Temperature Sensor (Cont'd)

COMPONENT INSPECTION

Intake air temperature sensor

Check resistance as shown in the figure.

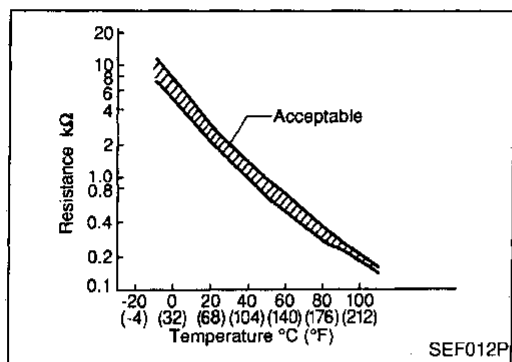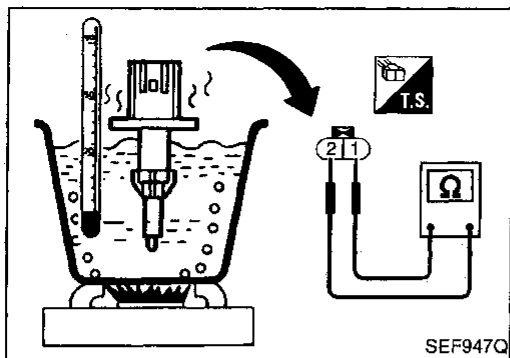

<Reference data>

Intake air temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

If NG, replace intake air temperature sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL



IDX

TROUBLE DIAGNOSIS FOR DTC P0115

Engine Coolant Temperature Sensor (ECTS)

COMPONENT DESCRIPTION

The engine coolant temperature sensor is located near the No. 2 injector. The sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

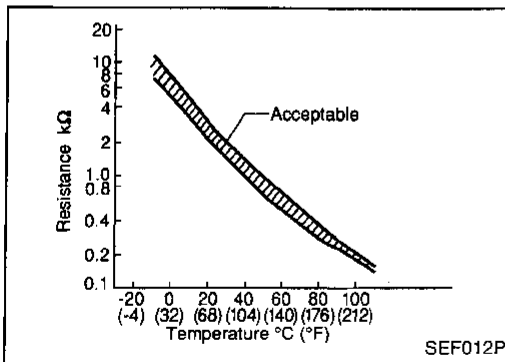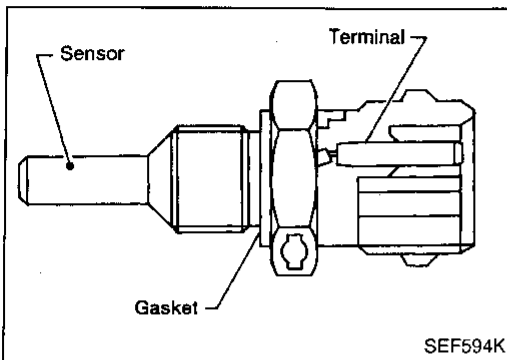

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	1.0	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal ⑥⑦ (Engine coolant temperature sensor) and ECM terminal ⑫⑧ (ECSS ground).

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0115 0103	<ul style="list-style-type: none"> An excessively high or low voltage from the sensor is sent to ECM.* 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Engine coolant temperature sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode	Condition	Engine coolant temperature decided (CONSULT DISPLAY)
Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT displays the engine coolant temperature decided by ECM.	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than 4 minutes after ignition Start	80°C (176°F)
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)

TROUBLE DIAGNOSIS FOR DTC P0115

Engine Coolant Temperature Sensor (ECTS) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 5 seconds.

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select "MODE 7" with GST.

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS-RPM (POS)		0rpm
COOLAN TEMP/S		25°C
INT/A TEMP SE		25°C
RECORD		



SEF698T

TROUBLE DIAGNOSIS FOR DTC P0115

Engine Coolant Temperature Sensor (ECTS) (Cont'd)

EC-ECTS-01





— : Detectable line for DTC
 — : Non-detectable line for DTC

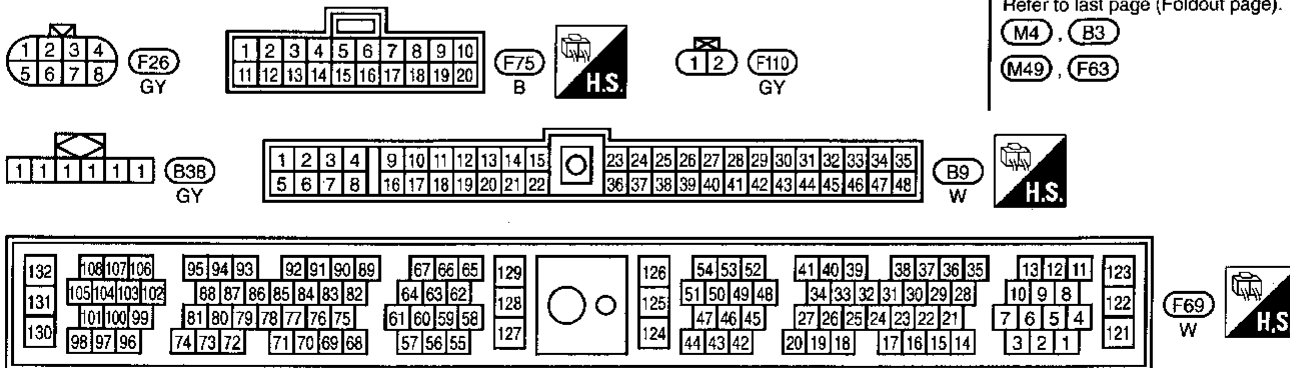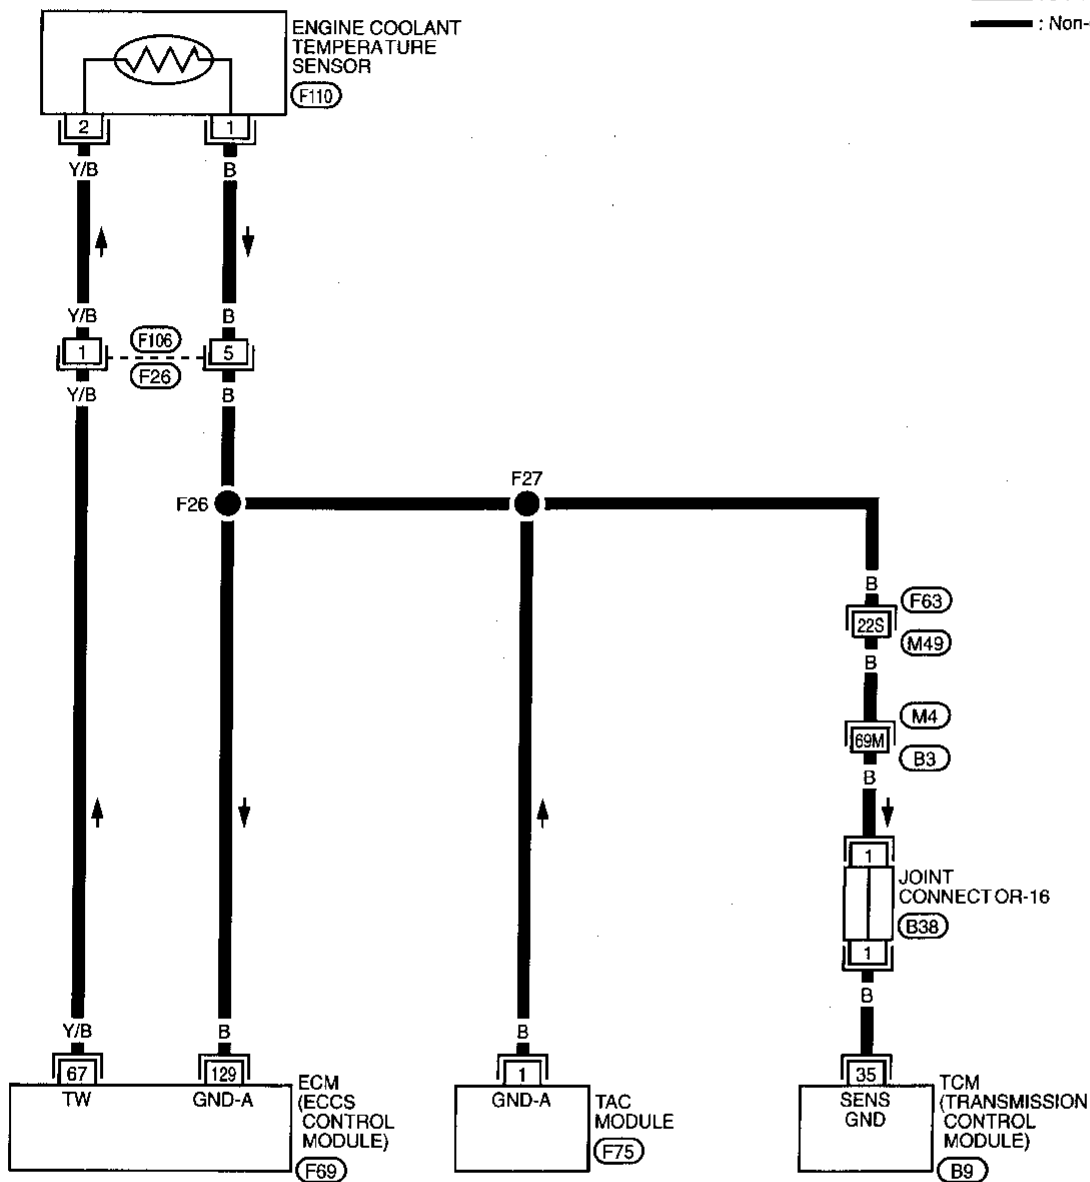

TROUBLE DIAGNOSIS FOR DTC P0115

Engine Coolant Temperature Sensor (ECTS) (Cont'd)

DIAGNOSTIC PROCEDURE

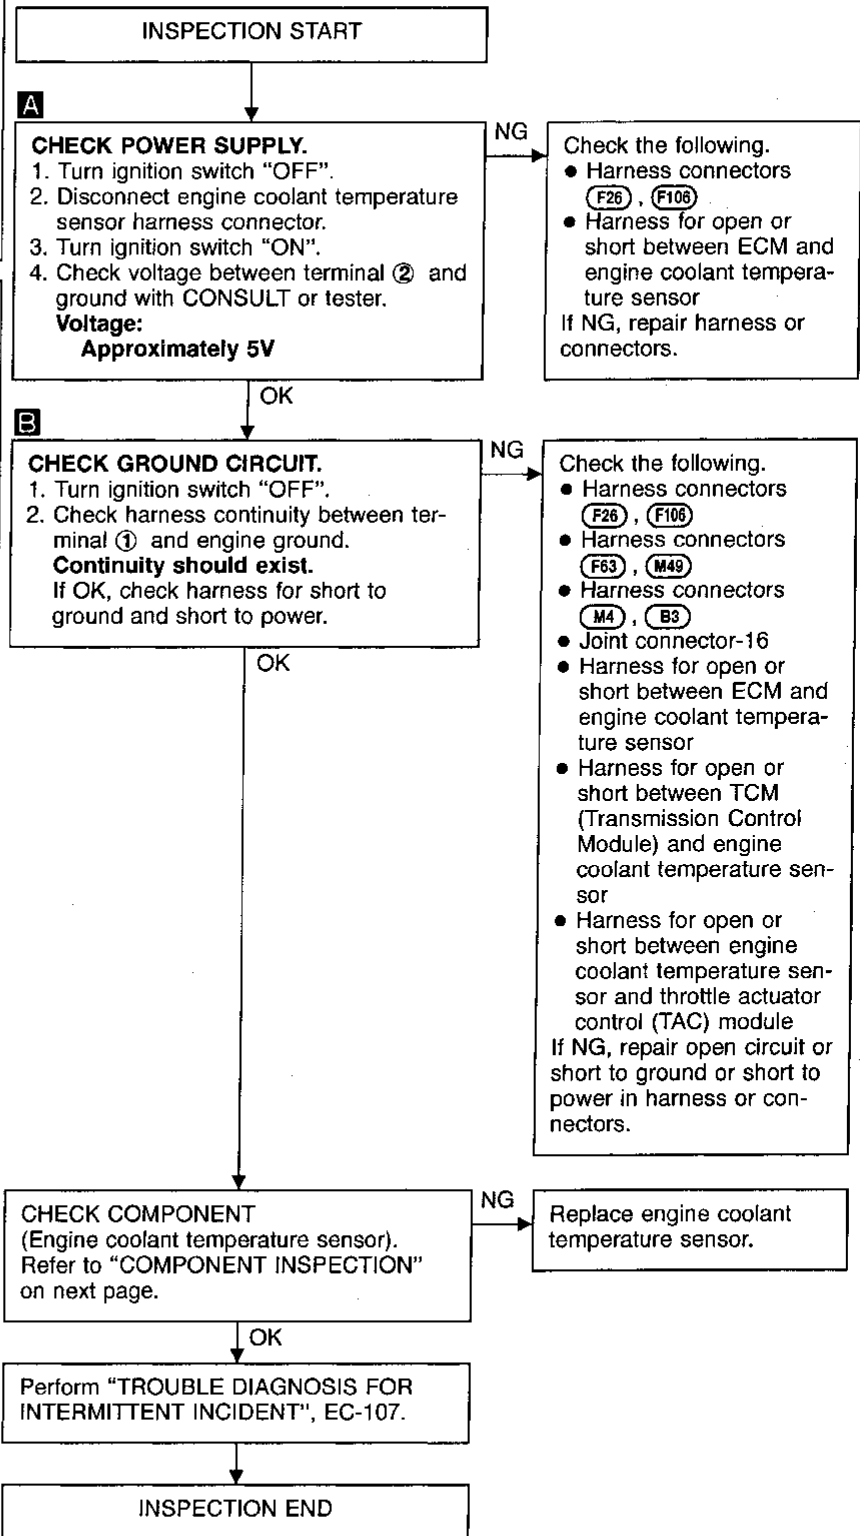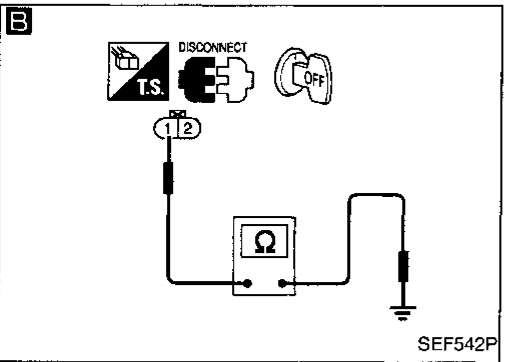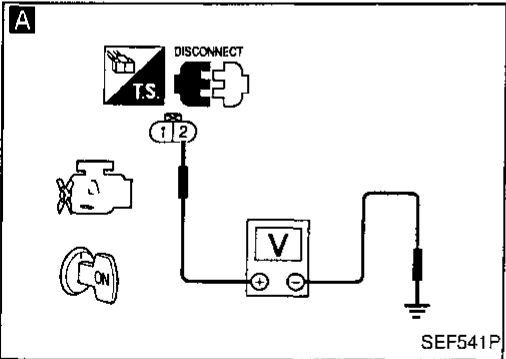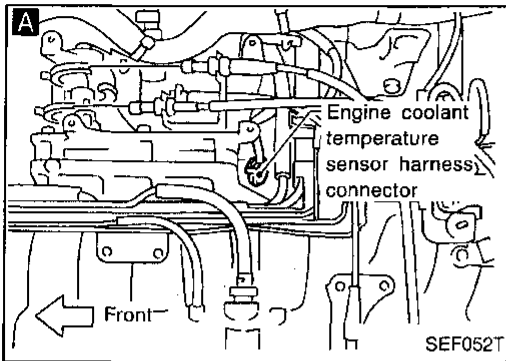

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX



TROUBLE DIAGNOSIS FOR DTC P0115

Engine Coolant Temperature Sensor (ECTS) (Cont'd)

COMPONENT INSPECTION

Engine coolant temperature sensor

Check resistance as shown in the figure.

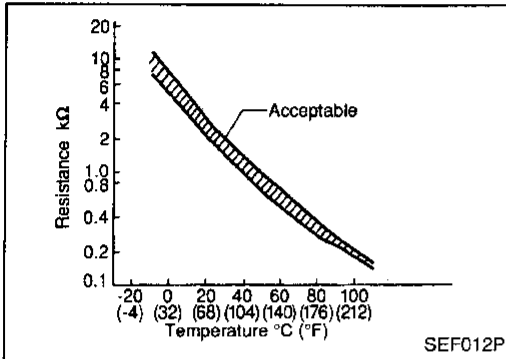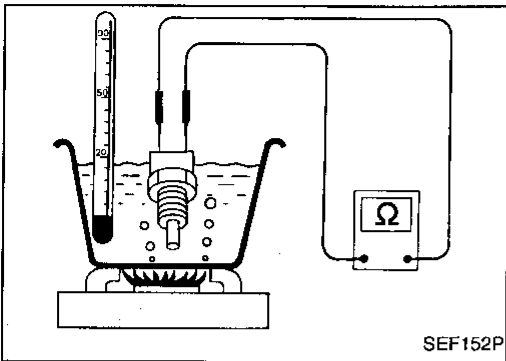

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.


Throttle Position Sensor

NOTE: If both DTC P0120 (0403) and DTC P0510 (0203) are displayed, perform TROUBLE DIAGNOSIS FOR DTC P0510 first (See EC-322.).

COMPONENT DESCRIPTION

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This one controls engine operation such as fuel cut. The throttle position sensor unit has a built-in "Wide open and closed throttle position switch".

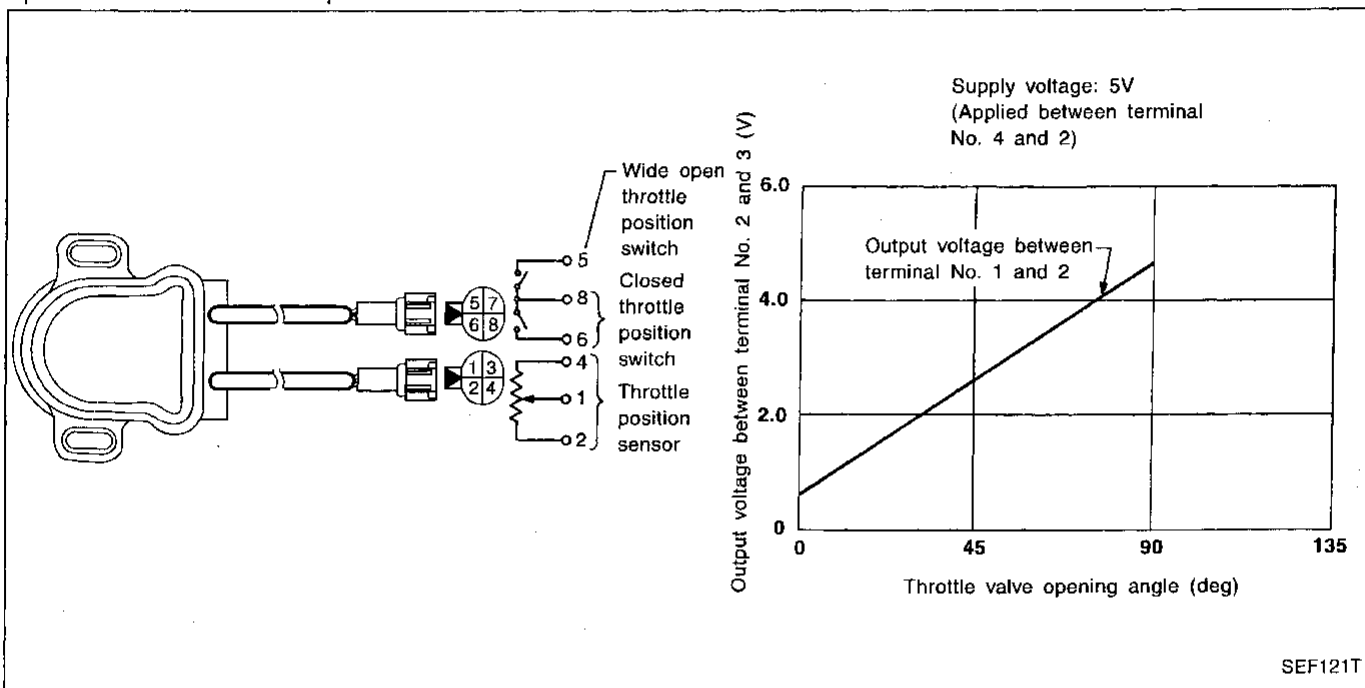

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL POS SEN	• Ignition switch: ON (Engine stopped)	Throttle valve: fully closed
		Throttle valve: fully opened
ABSOL TH-P/S	• Ignition switch: ON (Engine stopped)	Throttle valve fully closed
		Throttle valve fully opened

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (120) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
63	G	Throttle position sensor signal	Ignition switch "ON" (Warm-up condition) └ Accelerator pedal fully released	0.35 - 0.65V
			Ignition switch "ON" └ Accelerator pedal fully depressed	Approximately 4V
98	BR/W	Sensor's power supply	Ignition switch "ON"	Approximately 5V
129	B	Sensor's ground	Engine is running. (Warm-up condition) └ Idle speed	0V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0120 0403	A) An excessively low or high voltage from the sensor is sent to ECM.*	<ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Throttle position sensor
	B) A high voltage from the sensor is sent to ECM under light load driving condition.	<ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Throttle position sensor ● Fuel injector ● Camshaft position sensor ● Mass air flow sensor
	C) A low voltage from the sensor is sent to ECM under heavy load driving condition.	<ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Intake air leaks ● Throttle position sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode	Condition	Driving condition
Throttle position will be determined based on the amount of mass air flow and the engine speed. Therefore, acceleration will be poor.	When engine is idling	Normal
	When accelerating	Poor acceleration

Perform "Procedure for malfunction A" first. If the DTC cannot be confirmed, perform "Procedure for malfunction B". If there is no problem on "Procedure for malfunction B", perform "Procedure for malfunction C".

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Procedure for malfunction A

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS-RPM(POS)	650rpm	
MAS AIR/FL SE	1.31V	
COOLAN TEMP/S	84°C	
VHCL SPEED SE	6km/h	
THRTL POS SEN	0.50V	
B/FUEL SCHDL	1.0msec	
RECORD		

SEF604U

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: More than 4 km/h (2 MPH)

Selector lever: Suitable position except "P" or "N" position

OR



- 1) Start engine and maintain the following conditions for at least 5 consecutive seconds.

Vehicle speed: More than 4 km/h (2 MPH)

Selector lever: Suitable position except "P" or "N" position

- 2) Select "MODE 7" with GST.

OR



- 1) Start engine and maintain the following conditions for at least 5 consecutive seconds.

Vehicle speed: More than 4 km/h (2 MPH)

Selector lever: Suitable position except "P" or "N" position

- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS-RPM (POS)	650rpm	
COOLAN TEMP/S	90°C	
RECORD		

SEF696T

Procedure for malfunction B

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and let it idle for at least 10 seconds.

OR



- 1) Start engine and let it idle for at least 10 seconds.
- 2) Select "MODE 7" with GST.

OR



- 1) Start engine and let it idle for at least 10 seconds.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.



TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

Procedure for malfunction C

NOTE:


If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

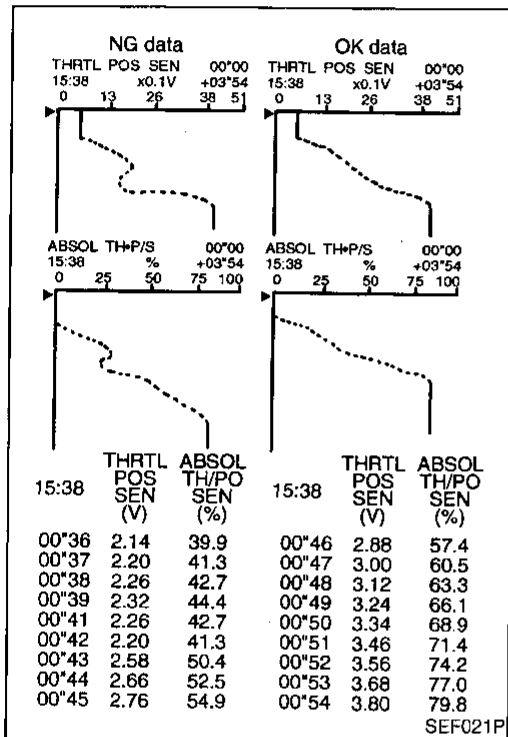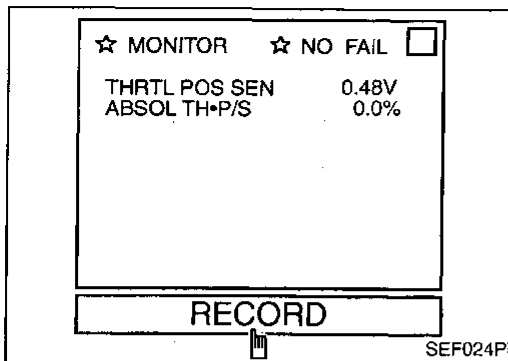

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT.
- 5) Select "THRTL POS SEN" and "ABSOL TH+P/S" in "DATA MONITOR" mode with CONSULT.
- 6) Press RECORD on CONSULT screen at the same time accelerator pedal is depressed.
- 7) Print out the recorded graph and check the following:
 - The voltage rise is linear in response to accelerator pedal depression.
 - The voltage when accelerator pedal is fully depressed is approximately 4V.
- 8) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT.
- 9) Maintain the following conditions for at least 10 consecutive seconds.


CMPS-RPM (POS): More than 2,000 rpm
MAS AIR/FL SE: More than 3V
COOLAN TEMP/S: More than 70°C (158°F)
Selector lever: Suitable position
Driving location: Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

OR

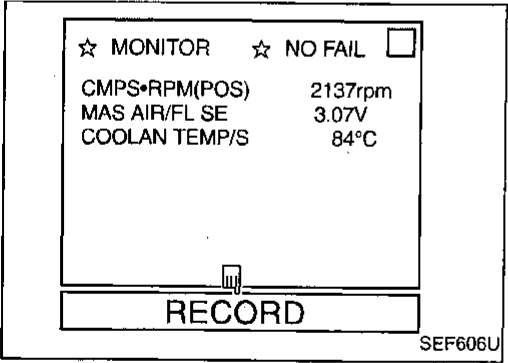

- 1) Maintain the following conditions for at least 10 consecutive seconds.
 - Gear position:** Suitable position
 - Engine speed:** More than 2,000 rpm
 - Voltage between ECM terminal 63 and 128 (ECM ground):** More than 3V
 - Voltage between ECM terminal 67 and 128 (ECM ground):** More than 4V

OR


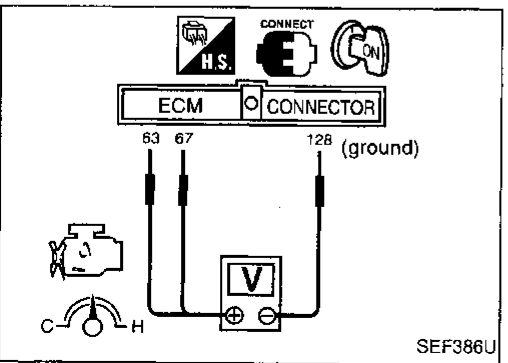


- 1) Maintain the following conditions for at least 10 consecutive seconds.
 - Gear position:** Suitable position
 - Engine speed:** More than 2,000 rpm
 - Voltage between ECM terminal 63 and 128 (ECM ground):** More than 3V
 - Voltage between ECM terminal 67 and 128 (ECM ground):** More than 4V
- 2) Stop the vehicle, turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "DIAGNOSTIC TEST MODE (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

EC-TPS-01

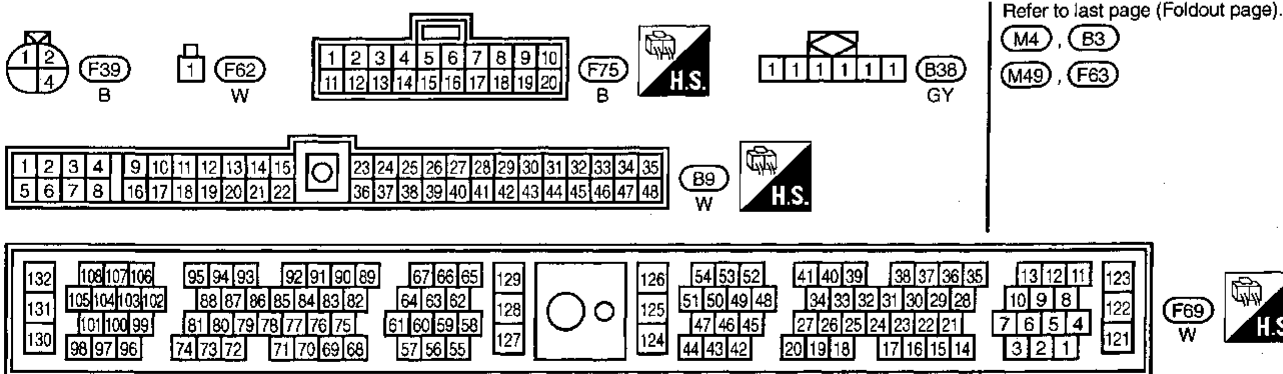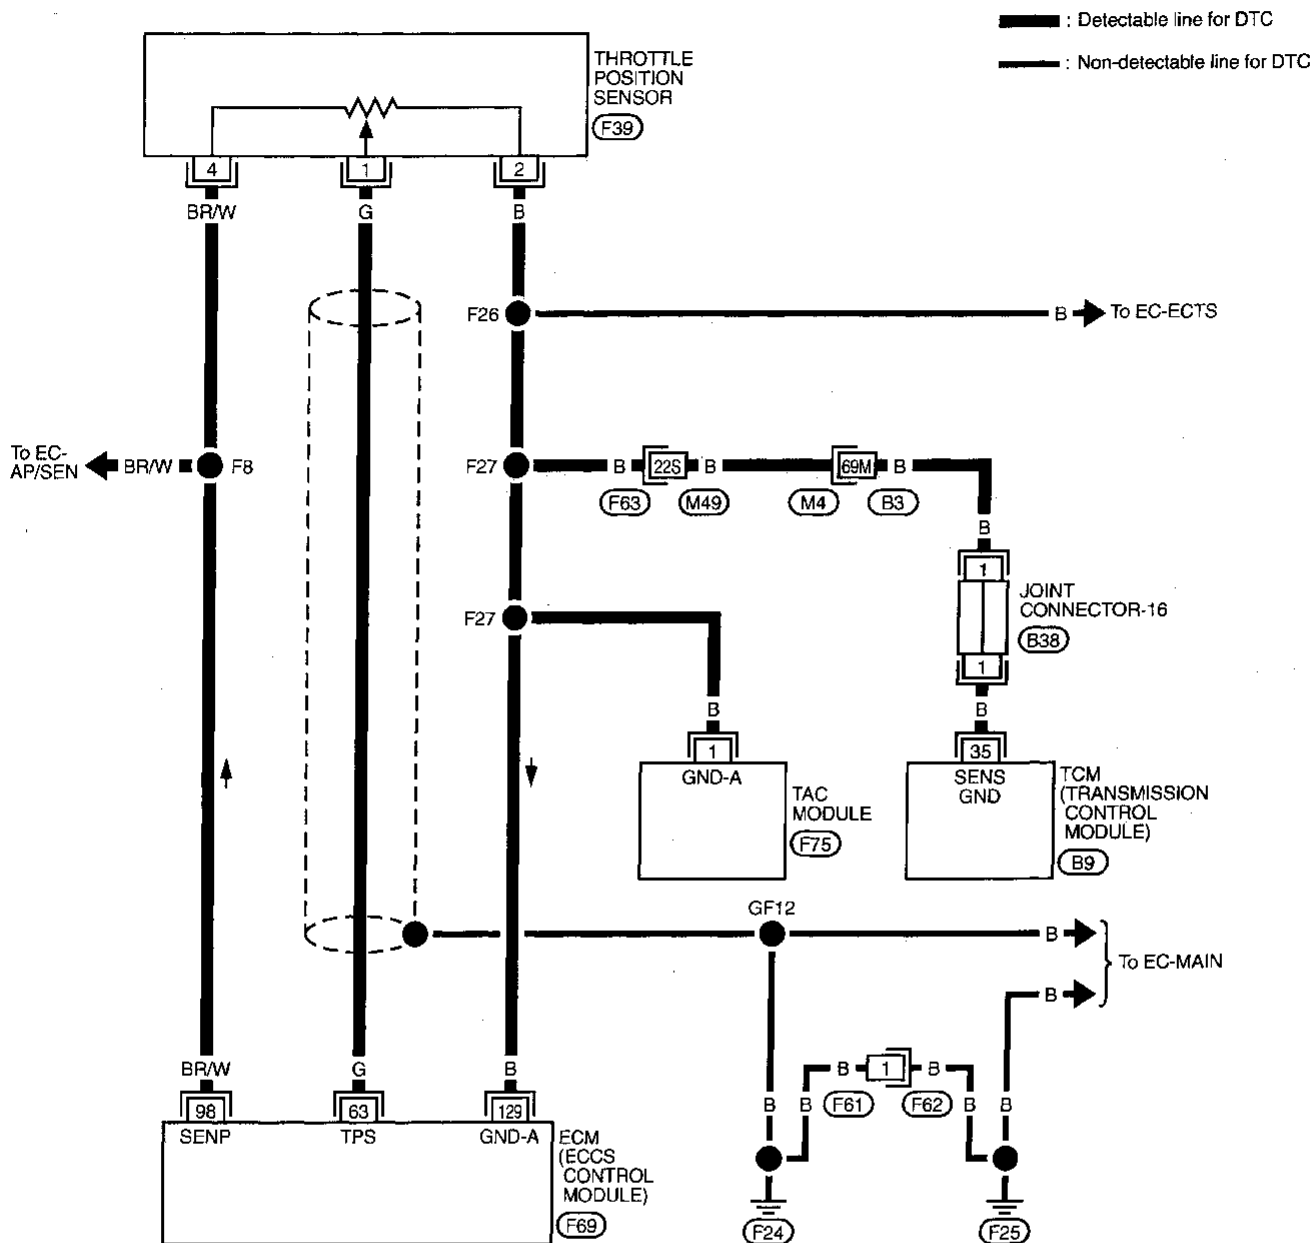

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

DIAGNOSTIC PROCEDURE

If the trouble is duplicated after "Procedure for malfunction A", perform "Procedure A" below. If the trouble is duplicated after "Procedure for malfunction B", perform "Procedure B" on the next page. If the trouble is duplicated after "Procedure for malfunction C", perform "Procedure C" on EC-149.

Procedure A

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

- A**
- CHECK POWER SUPPLY.**
1. Turn ignition switch "OFF".
 2. Disconnect throttle position sensor harness connector.
 3. Turn ignition switch "ON".
 4. Check voltage between terminal ④ and ground with CONSULT or tester.
- Voltage: Approximately 5V**

NG → Repair harness or connectors.

- B**
- CHECK GROUND CIRCUIT.**
1. Turn ignition switch "OFF".
 2. Loosen and retighten ground screw.
 3. Check harness continuity between terminal ② and engine ground.
- Continuity should exist.**
If OK, check harness for short to ground and short to power.

NG → Check the following.

- Joint connector-16
- Harness connectors (F63), (M49)
- Harness connectors (M4), (B3)
- Harness for open or short between throttle position sensor and ECM
- Harness for open or short between throttle position sensor and TCM (Transmission Control Module)
- Harness for open or short between throttle position sensor and throttle actuator control (TAC) module

If NG, repair open circuit or short to ground or short to power in harness or connectors.






- C**
- CHECK INPUT SIGNAL CIRCUIT.**
1. Disconnect ECM harness connector.
 2. Check harness continuity between ECM terminal ⑥ and terminal ①.
- Continuity should exist.**
If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

- CHECK COMPONENT**
(Throttle position sensor).
Refer to "COMPONENT INSPECTION", EC-150.


NG → Replace throttle position sensor. To adjust it, perform "BASIC INSPECTION", EC-85.

OK → A

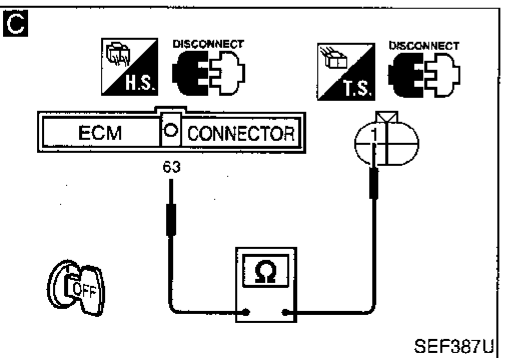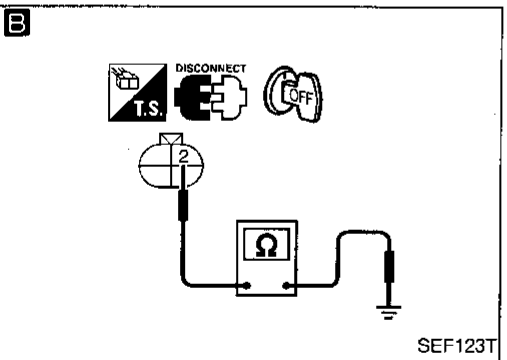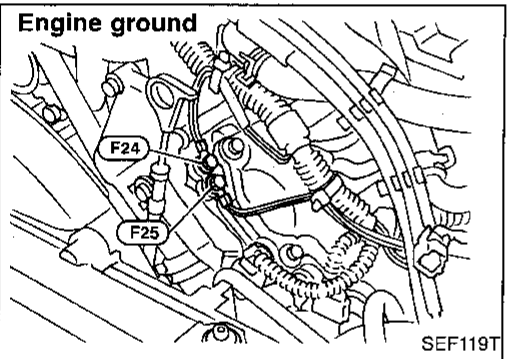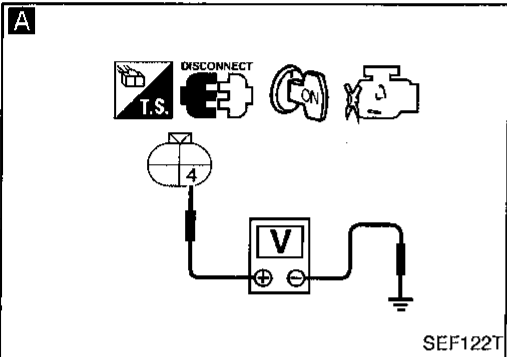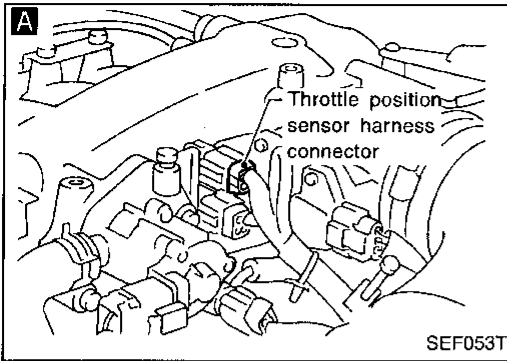

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

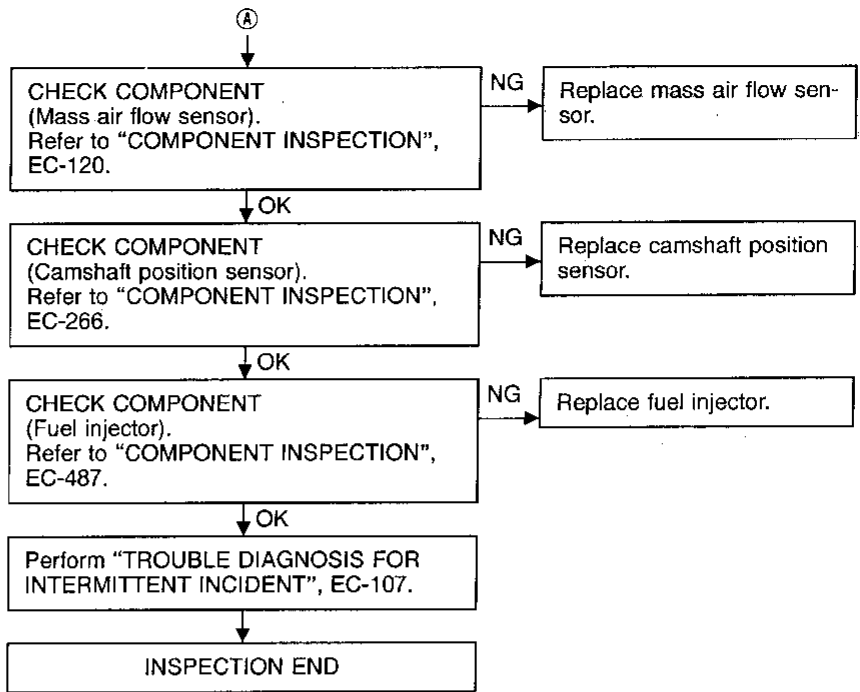

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT





HA

EL

IDX



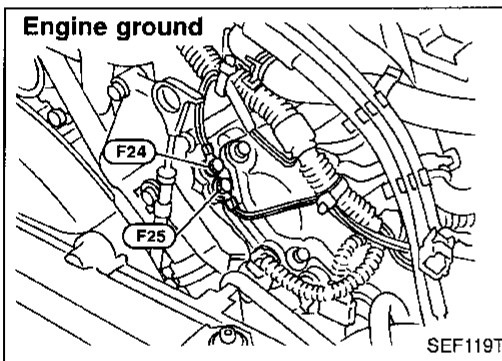


Procedure B

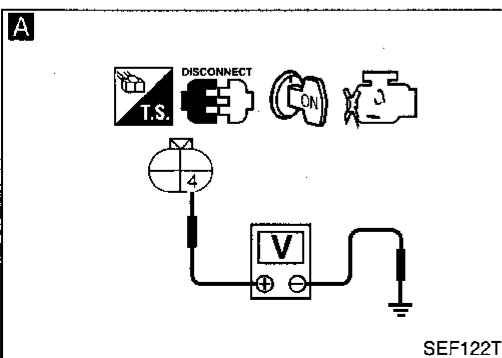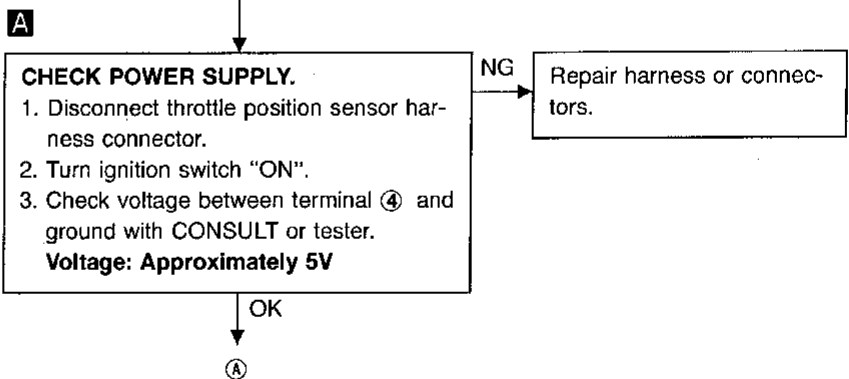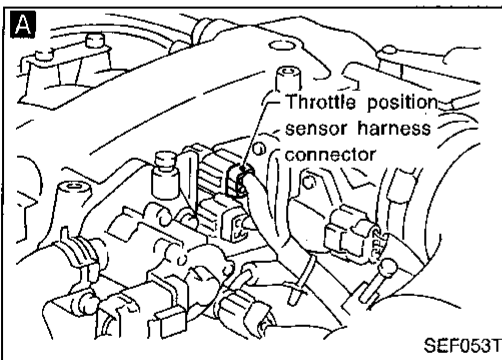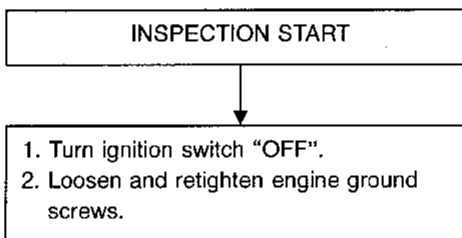

TROUBLE DIAGNOSIS FOR DTC P0120






Throttle Position Sensor (Cont'd)

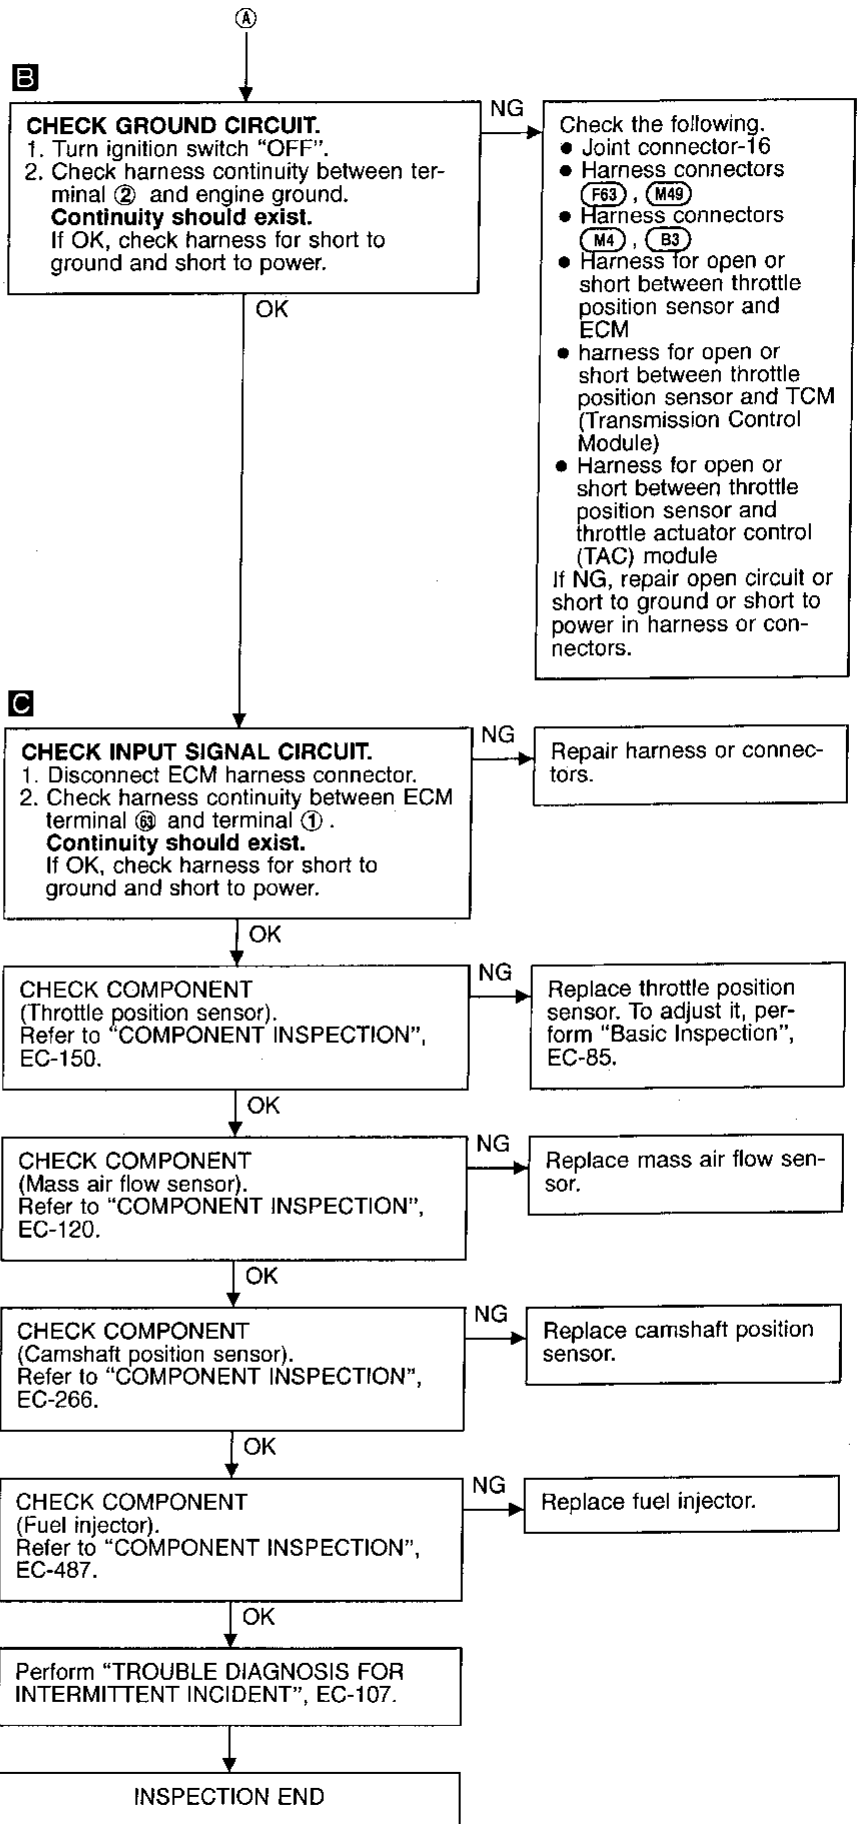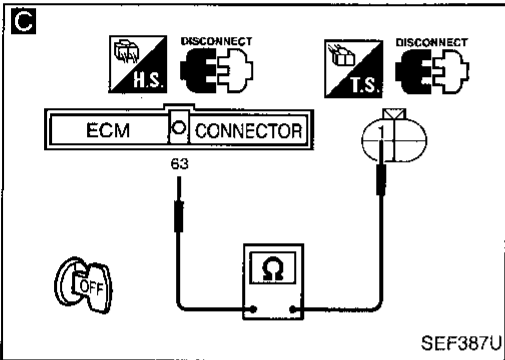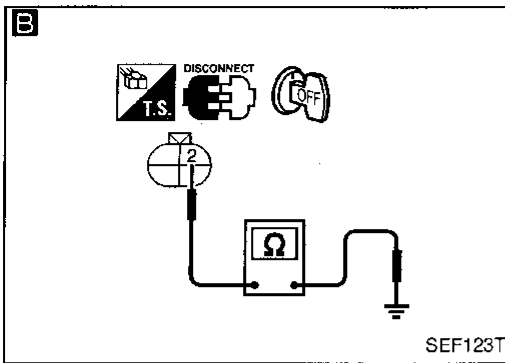

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)




Procedure C

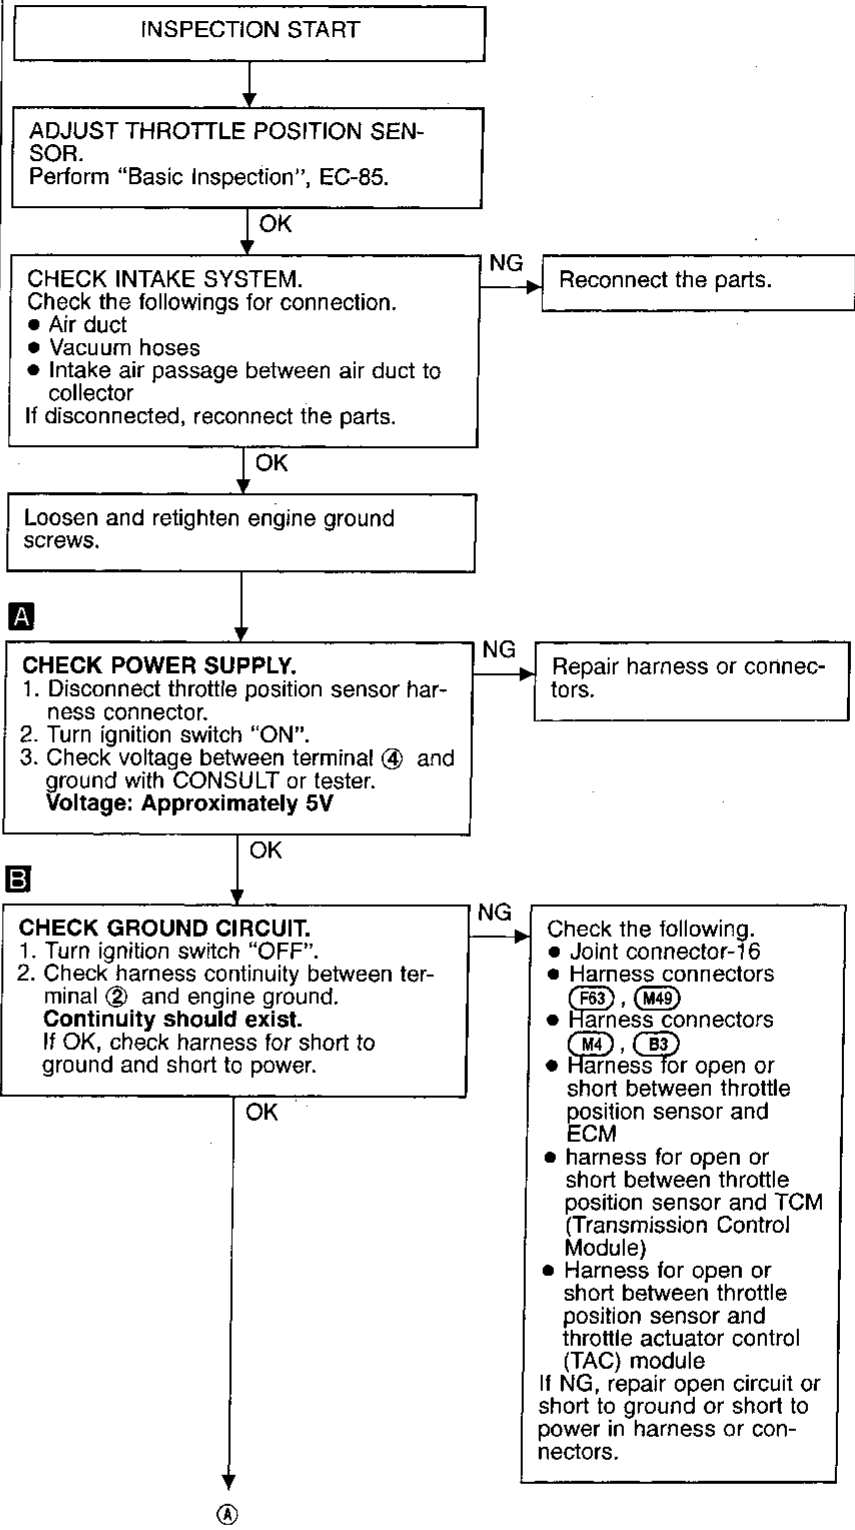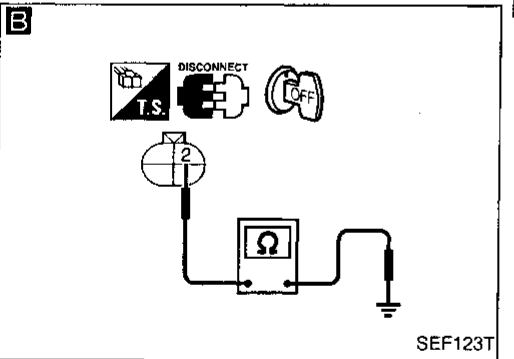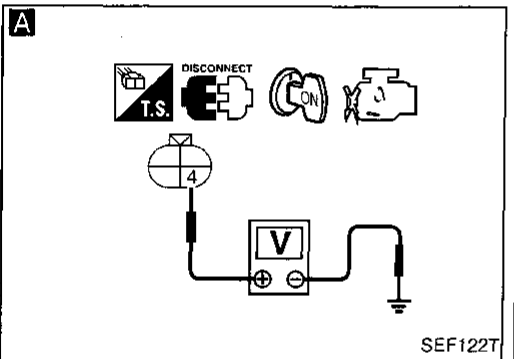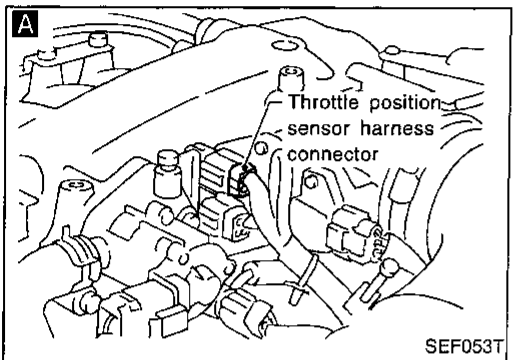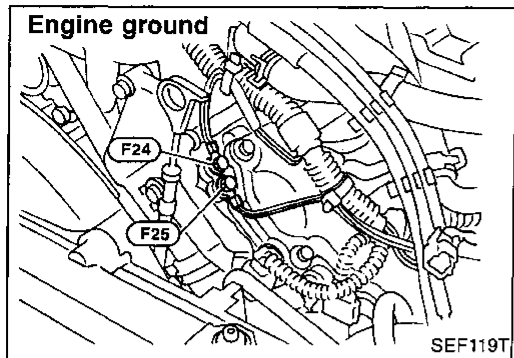

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0120

Throttle Position Sensor (Cont'd)

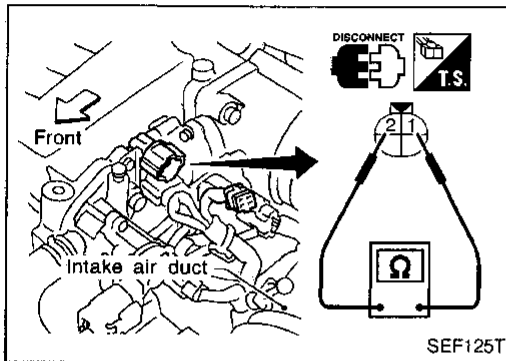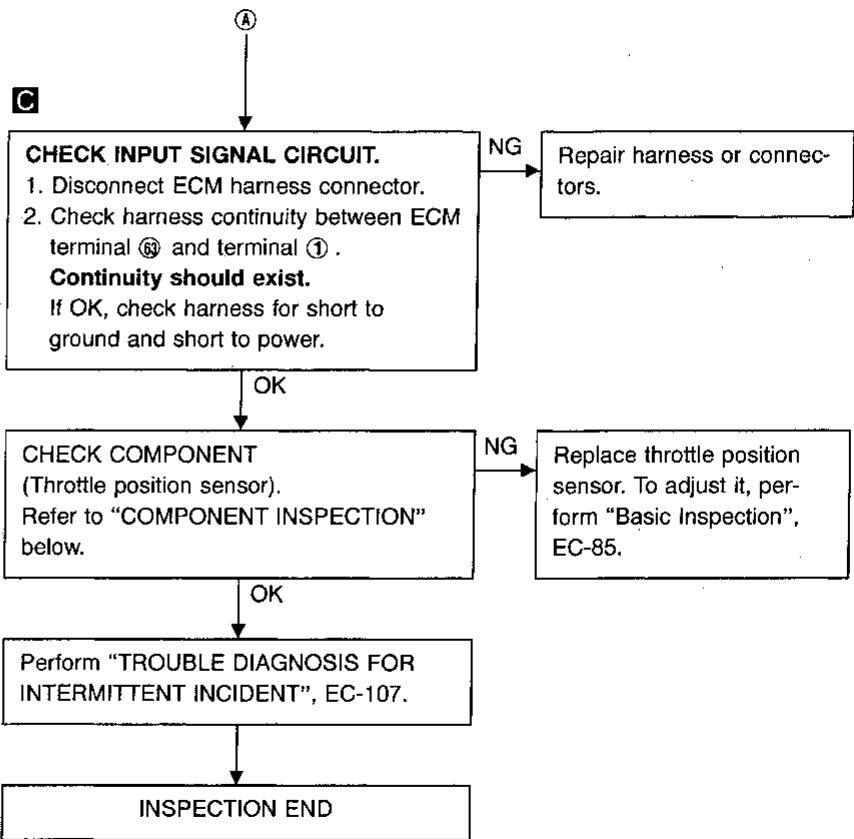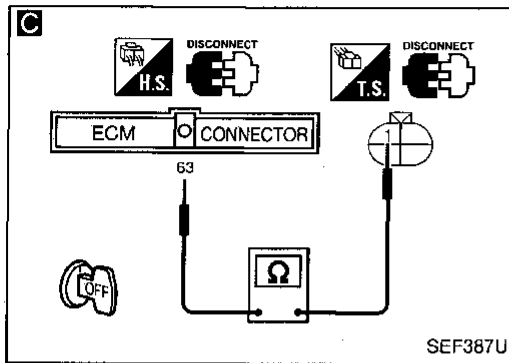

COMPONENT INSPECTION

Throttle position sensor


1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Disconnect throttle position sensor harness connector.
4. Make sure that resistance between terminals ② and ① changes when opening throttle valve manually.

Throttle valve conditions	Resistance at 25°C (77°F)
Completely closed	Approximately 0.6 kΩ
Partially open	0.6 - 4.0 kΩ
Completely open	Approximately 5 kΩ

If NG, replace throttle position sensor.

To adjust throttle position sensor, perform "BASIC INSPECTION", EC-85.


TROUBLE DIAGNOSIS FOR DTC P0125

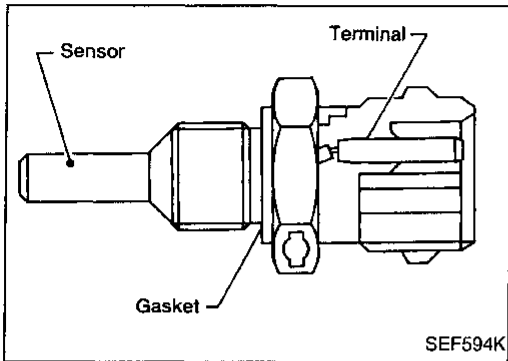

Engine Coolant Temperature (ECT) Sensor

COMPONENT DESCRIPTION

The engine coolant temperature sensor is located near the No. 2 injector. The sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

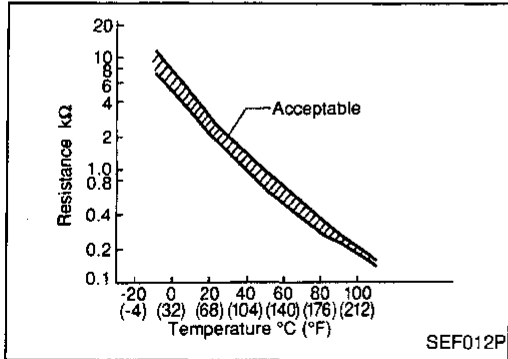

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	1.0	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal ⑦ (Engine coolant temperature sensor) and ECM terminal ①②⑧ (ECCS ground).

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0125 0908	<ul style="list-style-type: none"> • Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. • Engine coolant temperature is insufficient for closed loop fuel control. 	<ul style="list-style-type: none"> • Harness or connectors (High resistance in the circuit) • Engine coolant temperature sensor • Thermostat

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0125

Engine Coolant Temperature (ECT) Sensor (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Do not overheat engine.

NOTE:

- If both DTC P0115 (0103) and P0125 (0908) are displayed, first perform TROUBLE DIAGNOSIS FOR DTC P0115, EC-136.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT.
- 3) Start engine and run it for 20 minutes at idle speed.

If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 20 minutes, stop engine because the test result will be OK.

OR



- 1) Start engine and run it for 20 minutes at idle speed.
- 2) Select "MODE 7" with GST.

If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 20 minutes, stop engine because the test result will be OK.

OR



- 1) Start engine and run it for 20 minutes at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic result)" with ECM.

If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 20 minutes, stop engine because the test result will be OK.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	0rpm	
COOLAN TEMP/S	25°C	
INT/A TEMP SE	25°C	
RECORD		

SEF698T



TROUBLE DIAGNOSIS FOR DTC P0125

Engine Coolant Temperature (ECT) Sensor (Cont'd)




EC-ECTS-01

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT

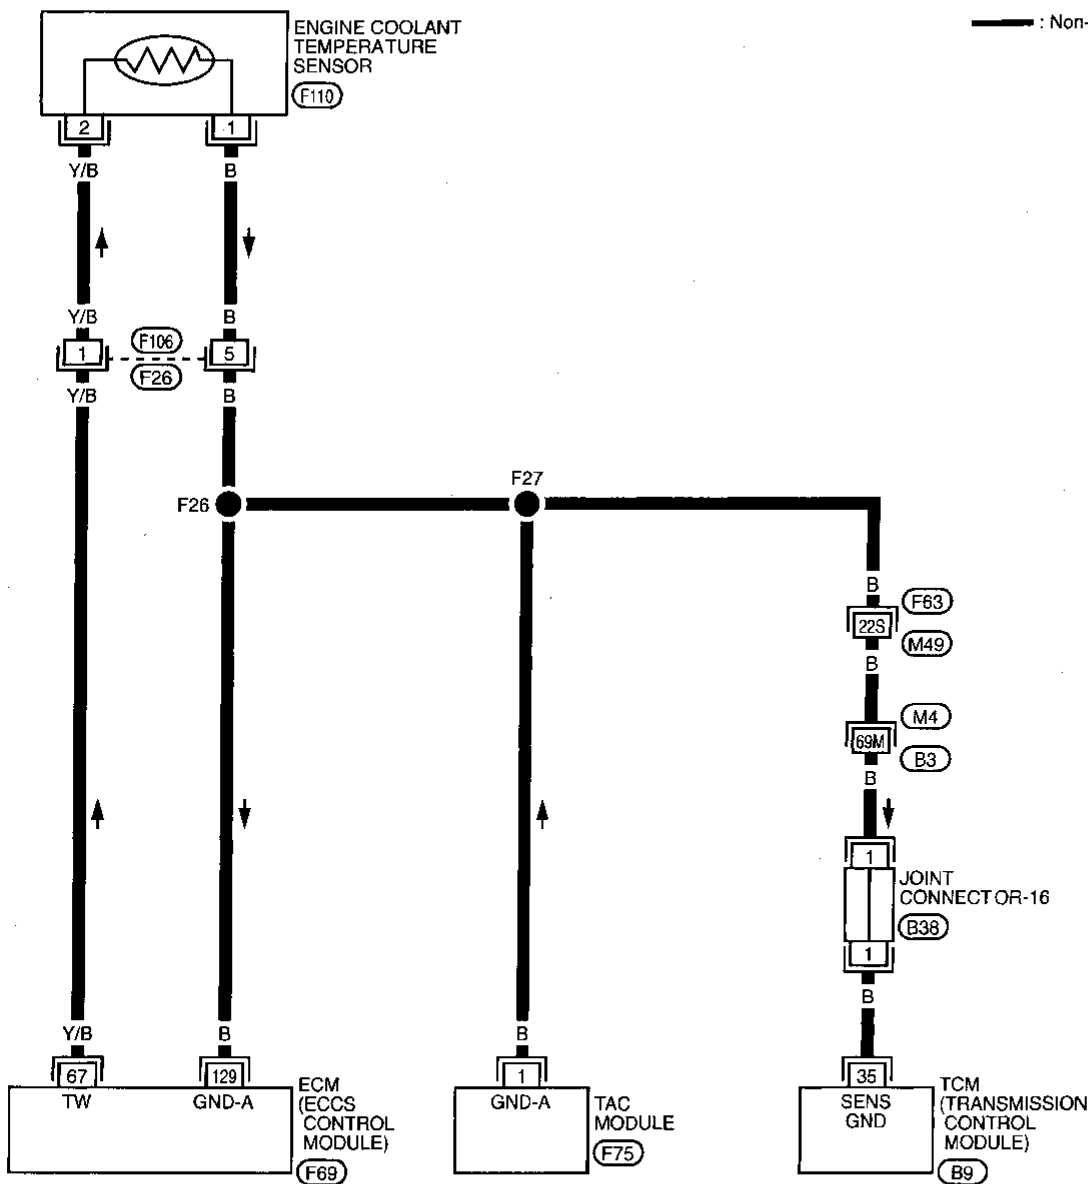

Refer to last page (Foldout page).


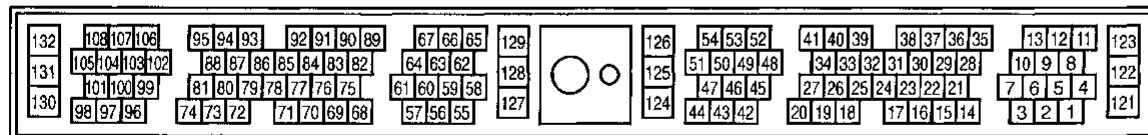




TEC241

TROUBLE DIAGNOSIS FOR DTC P0125

Engine Coolant Temperature (ECT) Sensor (Cont'd)

DIAGNOSTIC PROCEDURE

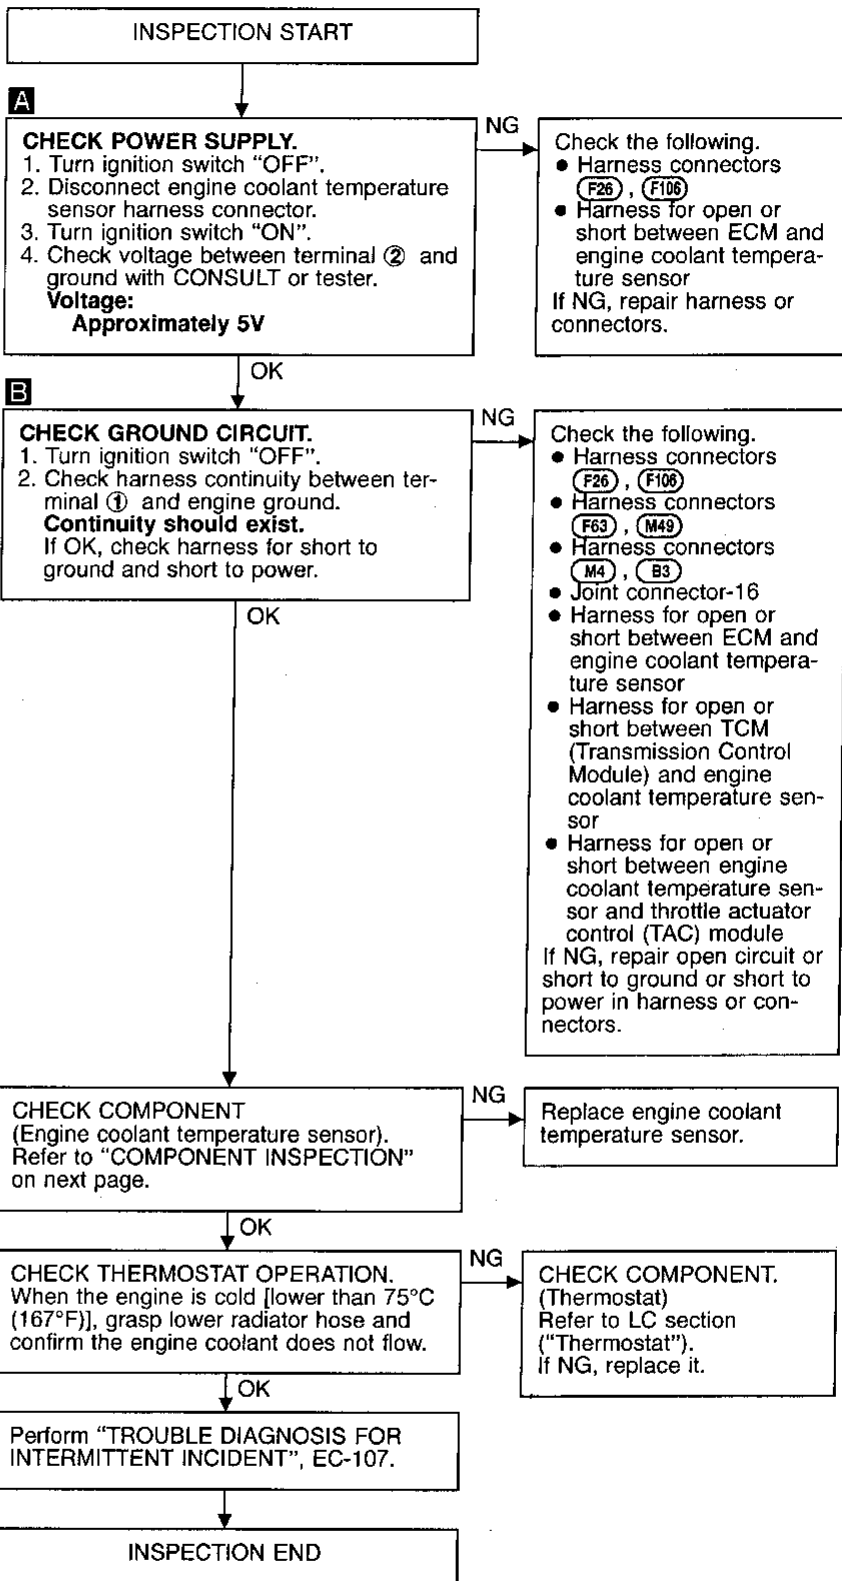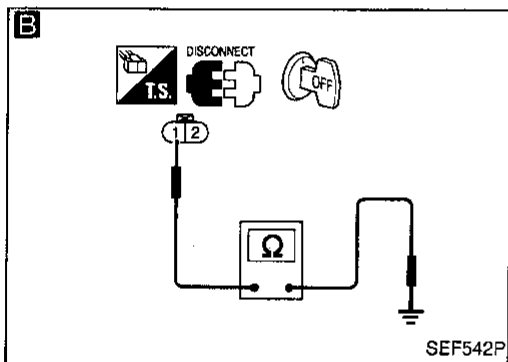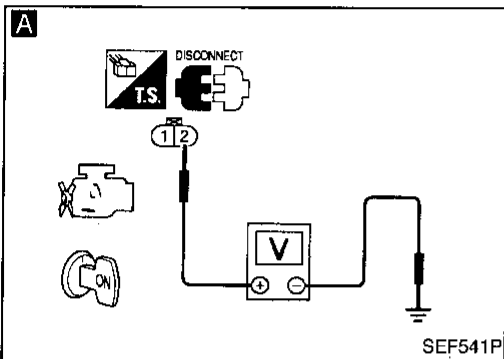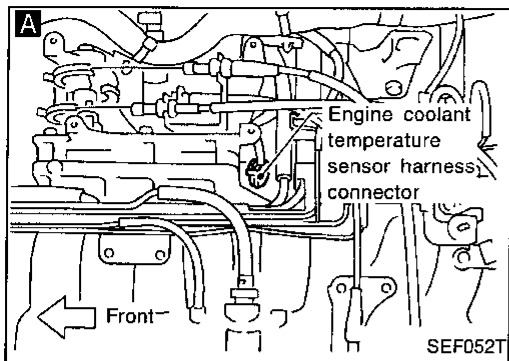


TROUBLE DIAGNOSIS FOR DTC P0125

Engine Coolant Temperature (ECT) Sensor (Cont'd)


COMPONENT INSPECTION

Engine coolant temperature sensor

Check resistance as shown in the figure.

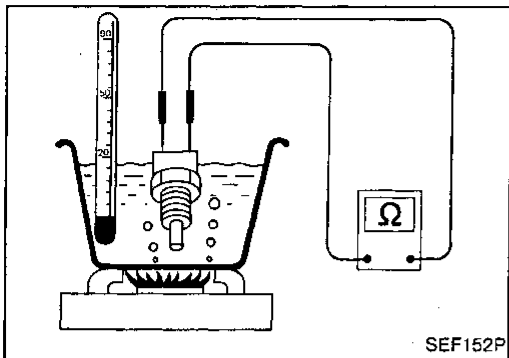

SEF152P

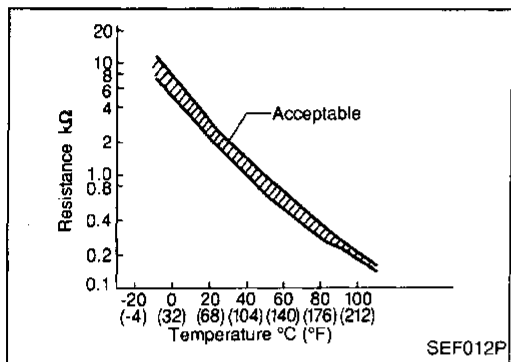

SEF012P

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

If NG, replace engine coolant temperature sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

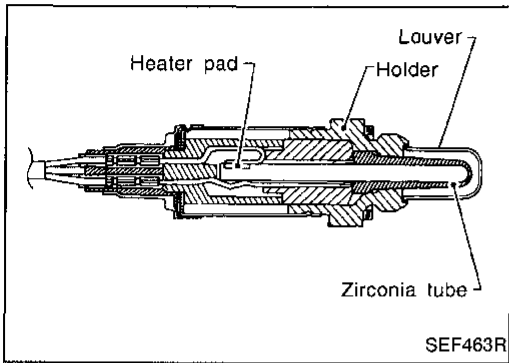

SEF463R

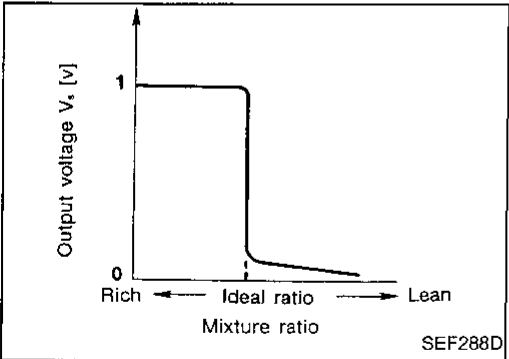

SEF288D

Front Heated Oxygen Sensors (Front HO₂S) (Circuit) (P0130: Left bank), (P0150: Right bank)

COMPONENT DESCRIPTION

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O ₂ SEN-B1 FR O ₂ SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
FR O ₂ MNTR-B1 FR O ₂ MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
82 (RH)	R	Front heated oxygen sensors	Engine is running.	0 - Approximately 1.0V (periodically change)
83 (LH)	W		After warming up to normal operating temperature and engine speed is 2,000 rpm.	

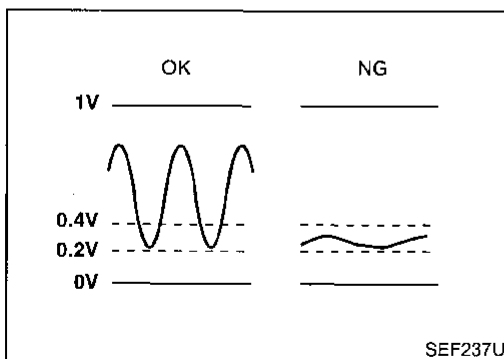

SEF237U




ON BOARD DIAGNOSIS LOGIC

Under the condition in which the front heated oxygen sensor signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0130, 0303 (Left bank)	<ul style="list-style-type: none"> The voltage from the sensor is constantly approx. 0.3V. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Front heated oxygen sensor
P0150, 0503 (Right bank)		

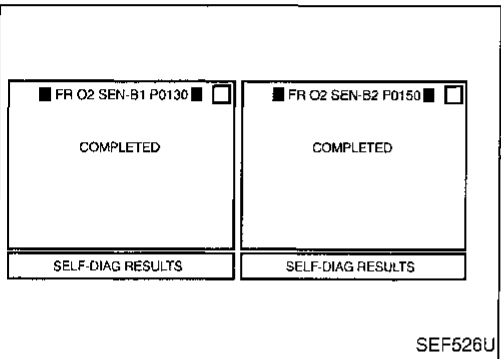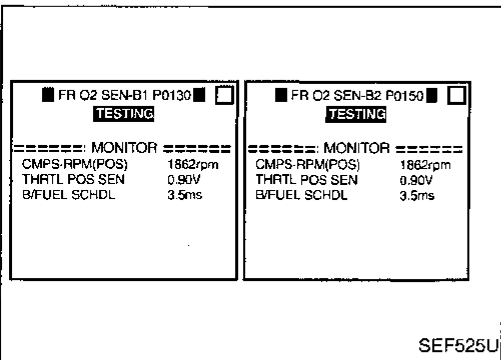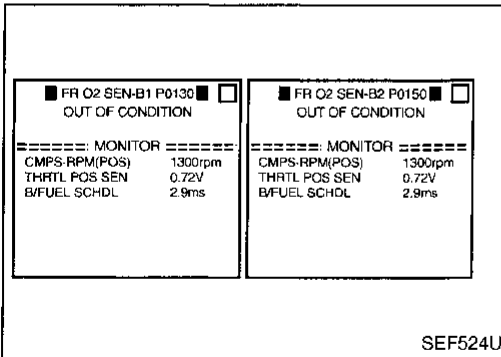

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- Never raise engine speed above 3,200 rpm during the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". If the engine speed limit is exceeded, retry the procedure from step 2).

TESTING CONDITION:

- Always drive vehicle at temperature of more than -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.



- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0130 (P0150)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine (TCS switch "OFF") and let it idle for at least 1.5 minutes.
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 10 to 60 seconds.)
CMPS-RPM (POS): 1,600 - 2,200 rpm
Vehicle speed: 70 - 100 km/h (43 - 62 MPH)
B/FUEL SCHDL: 1.4 - 5 ms
Selector lever: Suitable position


If "TESTING" is not displayed after 5 minutes, retry from step 2).

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-161.

During this test, P1148 may be stored in ECM.

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)

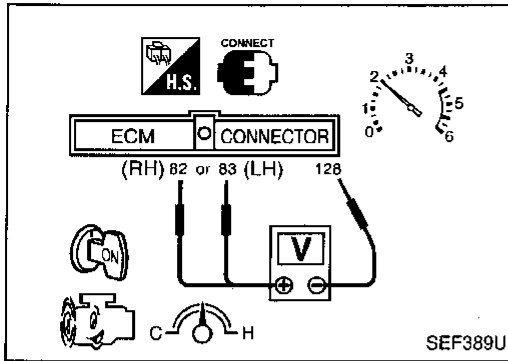

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 82 RH, 83 LH (sensor signal) and 128 (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage does not remain in the range of 0.2 - 0.4V.

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)

LEFT BANK

EC-FRO2LH-01

GI

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

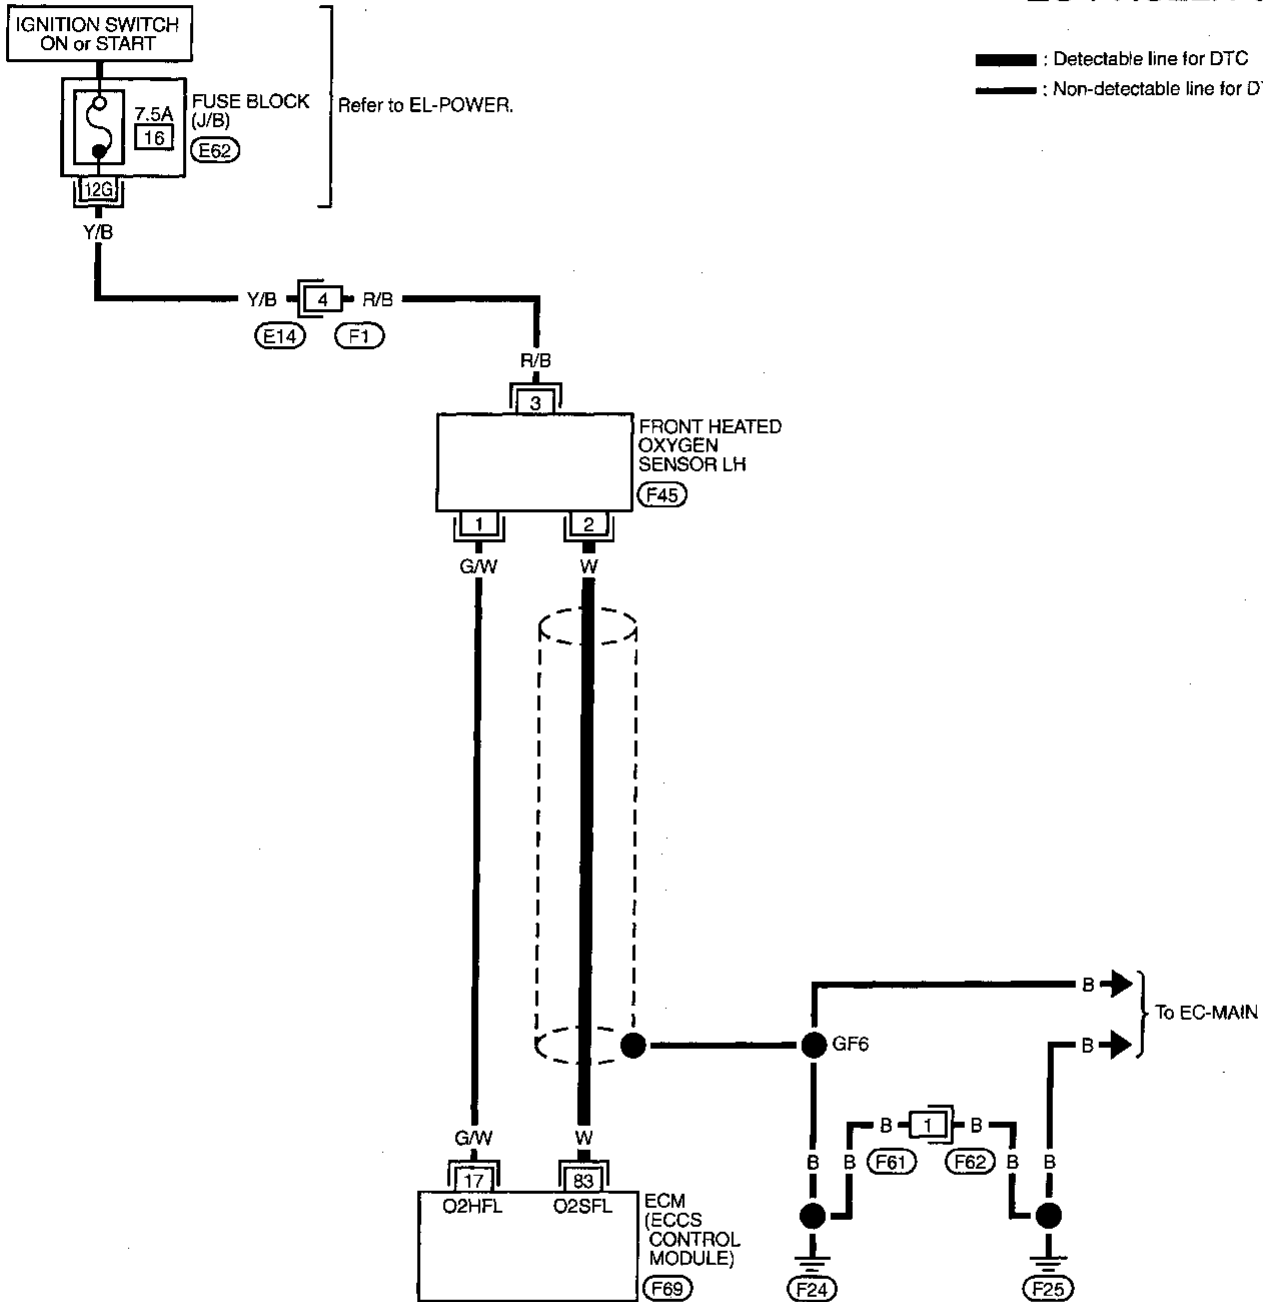

Refer to last page (Foldout page).

(E62)

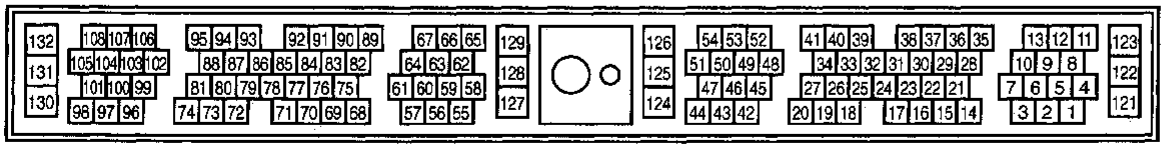


TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)



RIGHT BANK

EC-FRO2RH-01

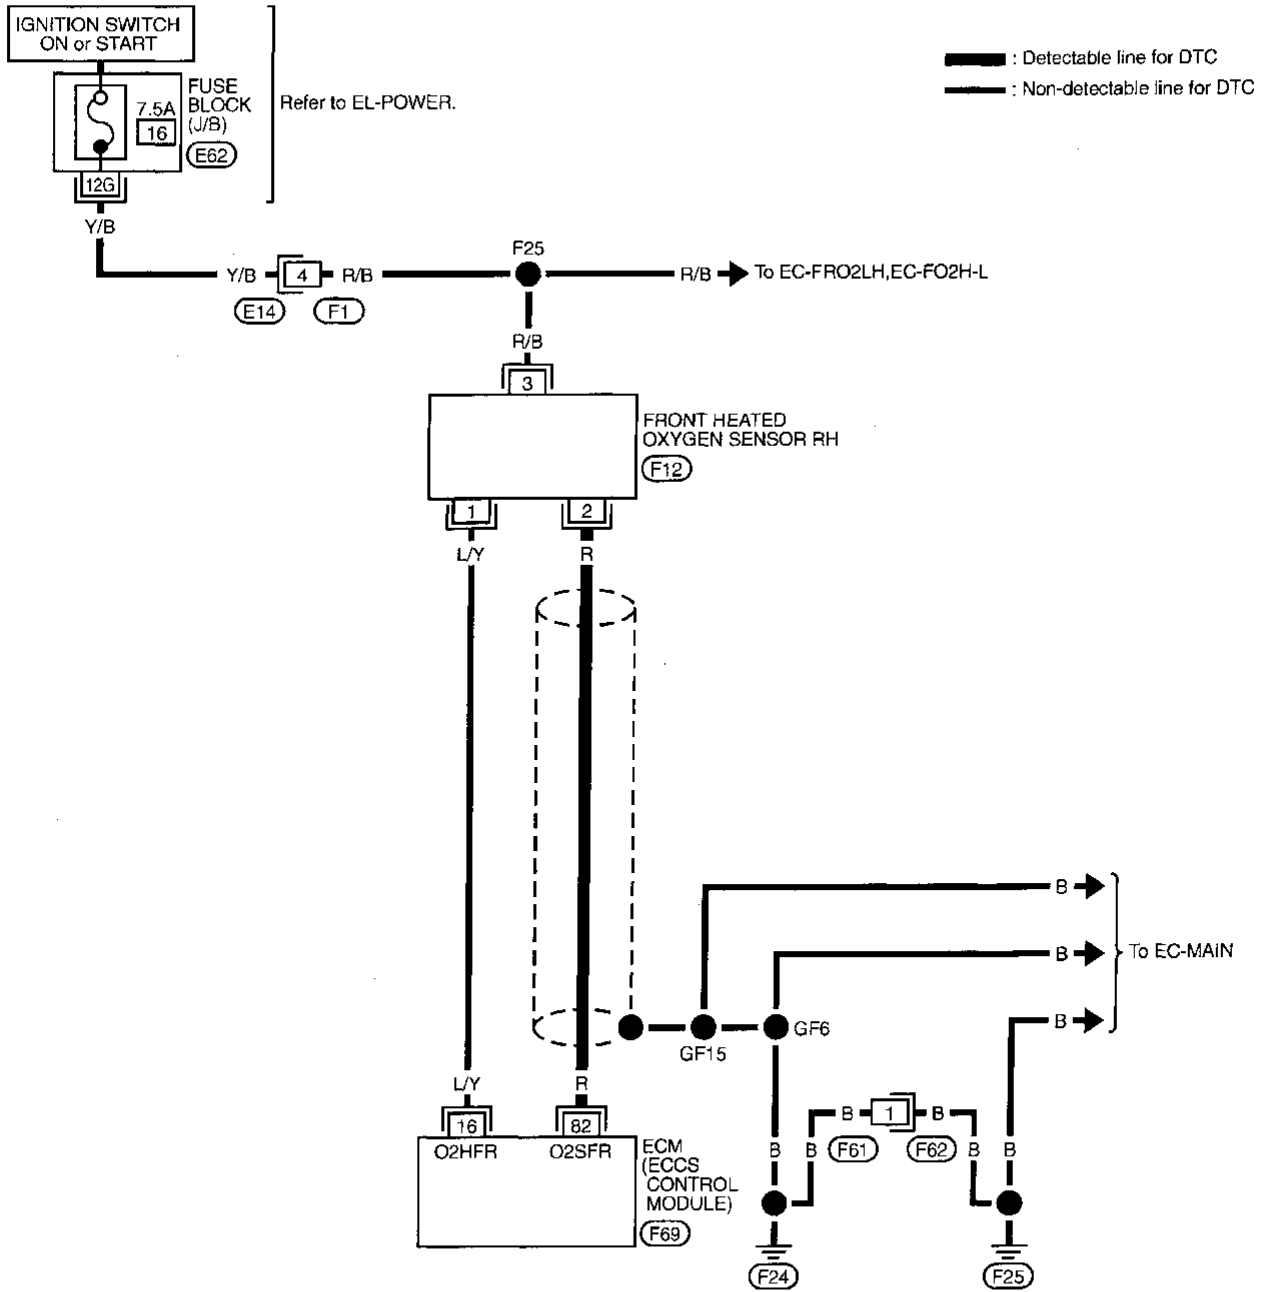

Refer to last page (Foldout page).

(E62)



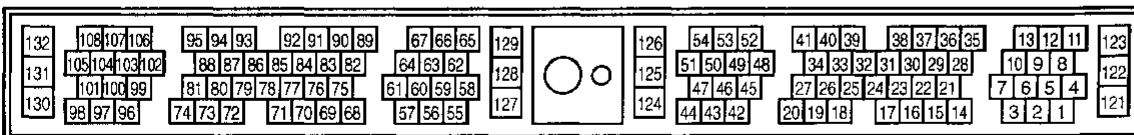



TEC247

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

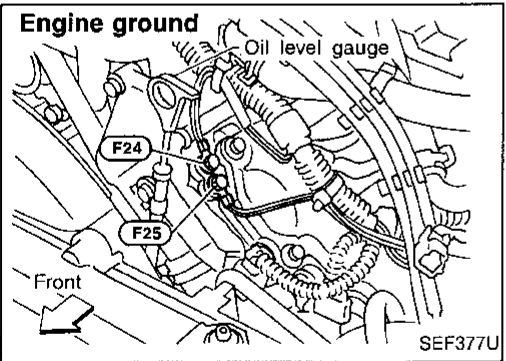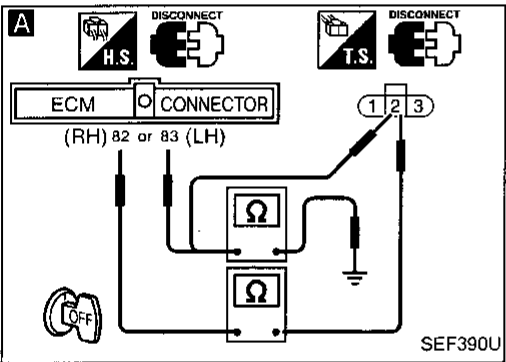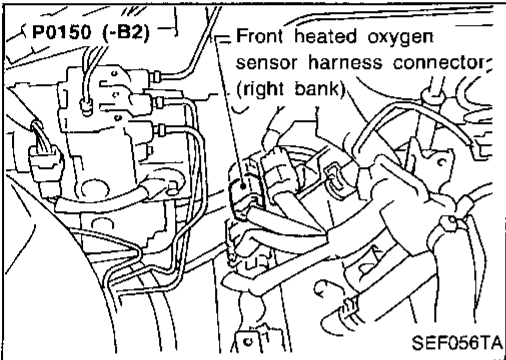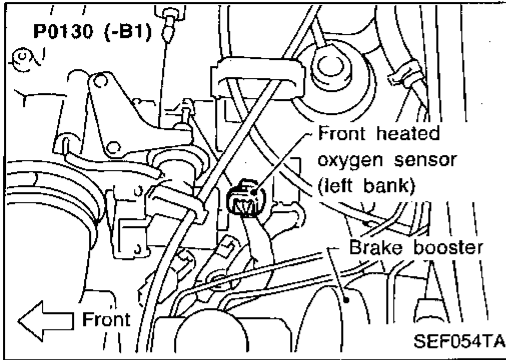

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A

CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect corresponding front heated oxygen sensor harness connector and ECM harness connector.
3. Check harness continuity between ECM and sensor terminals.

NG Repair harness or connectors.

P code	Terminals		Bank
	ECM	Sensor	
P0130	83	2	LH
P0150	82	2	RH

Continuity should exist.

4. Check harness continuity between ECM and sensor or ground.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0130	83	2 or ground	LH
P0150	82	2 or ground	RH

Continuity should not exist.

If OK, check harness for short to ground and short to power.

OK

CHECK COMPONENT (Front heated oxygen sensor). Refer to "COMPONENT INSPECTION" on next page.

NG Replace corresponding front heated oxygen sensor.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)

Front Heated Oxygen Sensors (Front HO2S) (Circuit) (P0130: Left bank), (P0150: Right bank) (Cont'd)

COMPONENT INSPECTION




Front heated oxygen sensor

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
 - 3) Hold engine speed at 2,000 rpm under no load during the following steps.
 - 4) Touch "RECORD" on CONSULT screen.
 - 5) Check the following.
 - "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.
- 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R


R = "FR O2 MNTR-B1 (-B2)", "RICH"
L = "FR O2 MNTR-B1 (-B2)", "LEAN"

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.35V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

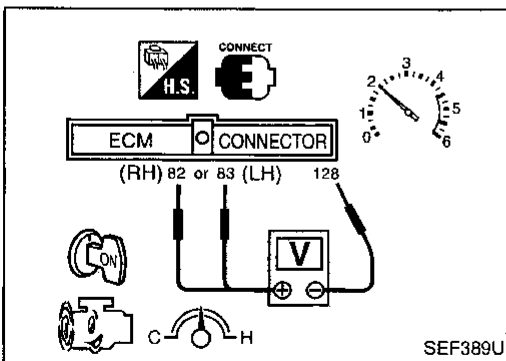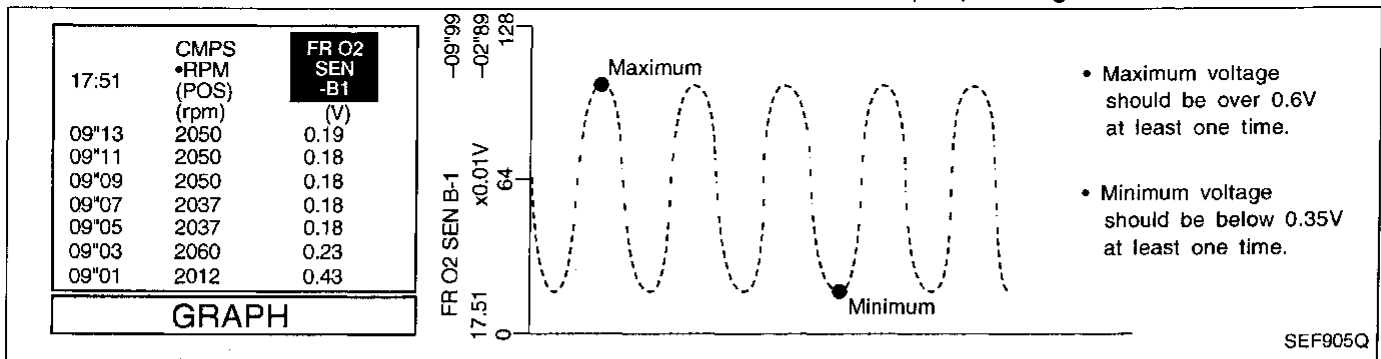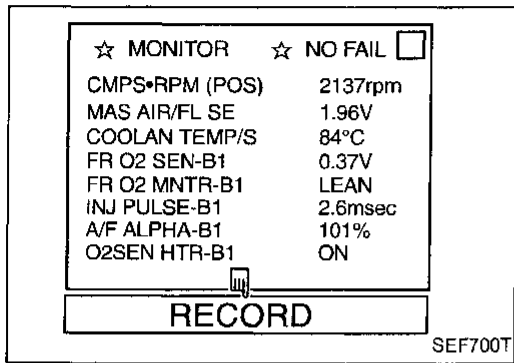


- OR
- 1) Start engine and warm it up to normal operating temperature.
 - 2) Set voltmeter probes between ECM terminal ⑧₂ RH, ⑧₃ LH (sensor signal) and ⑫₈ (ECM ground).
 - 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.35V at least one time.
 - The voltage never exceeds 1.0V.

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)

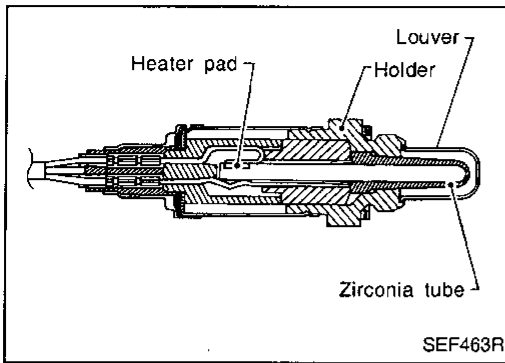

SEF463R

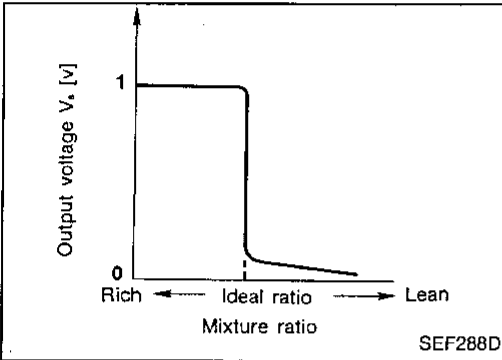

SEF288D

Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank)

COMPONENT DESCRIPTION

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

GI
MA
EM
LC
EC

FE
AT

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.


PD
FA
RA
BR

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
82 (RH)	R	Front heated oxygen sensor	Engine is running.	0 - Approximately 1.0V (periodically change)
83 (LH)	W		After warming up to normal operating temperature and engine speed is 2,000 rpm.	

ST
RS
BT
HA

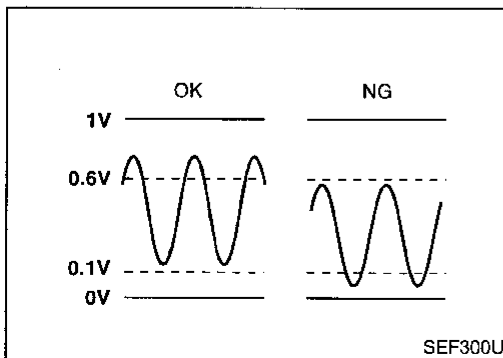

SEF300U

ON BOARD DIAGNOSIS LOGIC

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the "rich" output is sufficiently high and whether the "lean" output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)

Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0131 0411 (Left bank)	<ul style="list-style-type: none"> The maximum voltage from the sensor is not reached to the specified voltage. 	<ul style="list-style-type: none"> Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors Intake air leaks
P0151 0415 (Right bank)		

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:




- Before performing following procedure, confirm that battery voltage is more than 11V at idle.
- Never raise engine speed above 3,200 rpm during the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". If the engine speed limit is exceeded, retry the procedure from step 2).



- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0131 (P0151)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine (TCS switch "OFF") and let it idle for at least 1.5 minutes.
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds.)
CMPS-RPM (POS): 1,700 - 2,200 rpm
Vehicle speed: 78 - 100 km/h (48 - 62 MPH)
B/FUEL SCHDL: 2.2 - 5.5 ms
Selector lever: Suitable position


If "TESTING" is not displayed after 5 minutes, retry from step 2).

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-166.

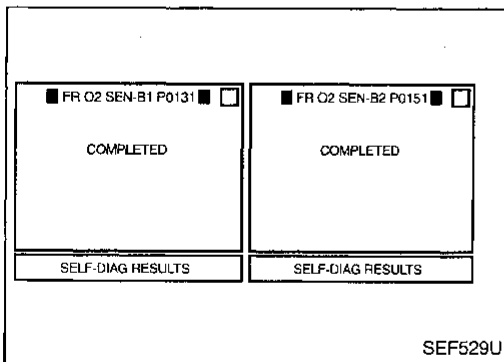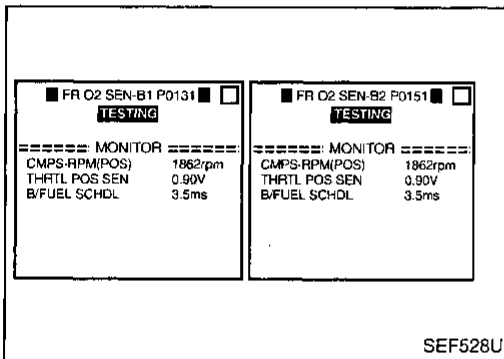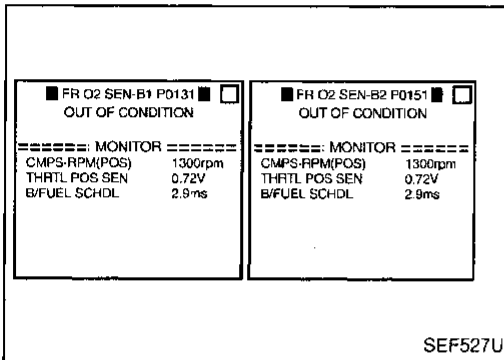

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)

Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank) (Cont'd)

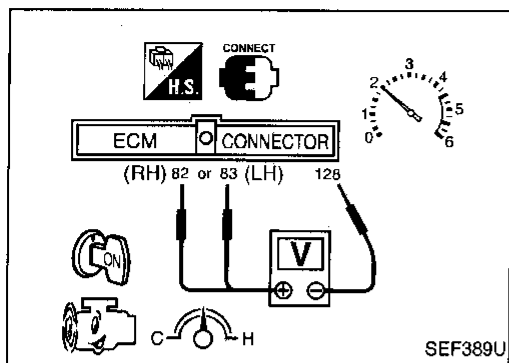

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 83 LH, 82 RH (sensor signal) and 128 (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.1V at least one time.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)


Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

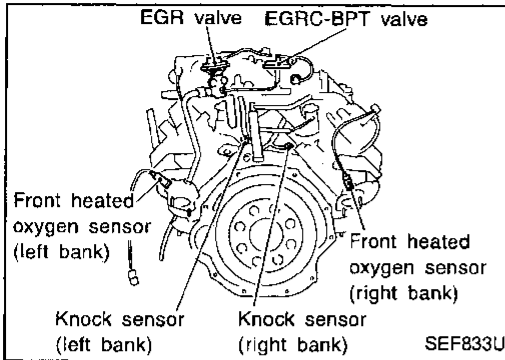

INSPECTION START


Loosen and retighten front heated oxygen sensor.
Tightening torque:
40 - 50 N·m
(4.1 - 5.1 kg-m, 30 - 37 ft-lb)

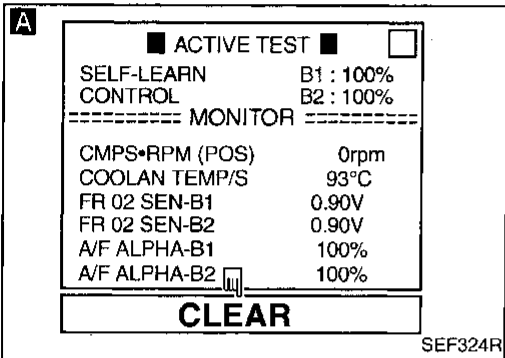

CLEAR THE SELF-LEARNING DATA

- Start engine and warm it up to normal operating temperature.
- Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
- Clear the self-learning control coefficient by touching "CLEAR".
- Run engine for at least 10 minutes at idle speed.
Are the 1st trip DTCs P0171, P0174 detected? Is it difficult to start engine?

Yes → Go to "TROUBLE DIAGNOSIS FOR DTC P0171, P0172", EC-230, 237.

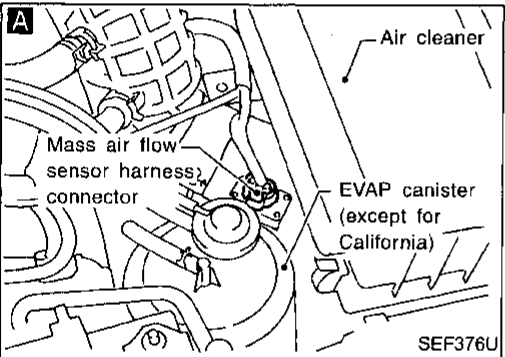

OR

- Turn ignition switch "OFF".
- Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
- Stop engine and reconnect mass air flow sensor harness connector.
- Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
- Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
- Run engine for at least 10 minutes at idle speed.
Are the 1st trip DTCs 0115, 0210 detected? Is it difficult to start engine?

No →
CHECK COMPONENT
(Front heated oxygen sensor heaters). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace corresponding front heated oxygen sensor.

OK →
CHECK COMPONENT
(Front heated oxygen sensors). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace corresponding heated oxygen sensor.

OK →
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107. Refer to "TROUBLE DIAGNOSIS FOR DTC P0130 (-B1), P0150 (-B2)" for circuit, EC-156.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)

Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank) (Cont'd)

COMPONENT INSPECTION

Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

Resistance: 2.3 - 4.3Ω at 25°C (77°F)


Check continuity between terminals ② and ①, ③ and ②.

Continuity should not exist.

If NG, replace the front heated oxygen sensor.

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

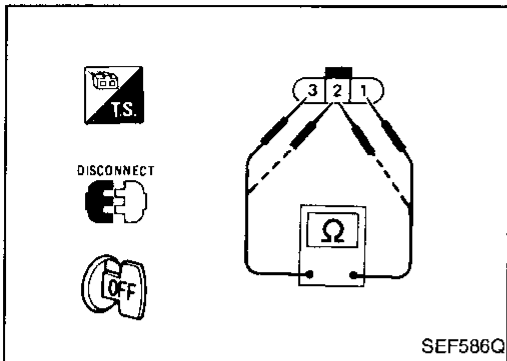

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

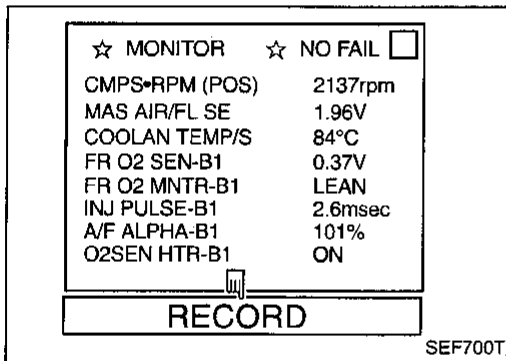

Front heated oxygen sensor



- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT screen.
- 5) Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.

5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R



R = "FR O2 MNTR-B1 (-B2)", "RICH"

L = "FR O2 MNTR-B1 (-B2)", "LEAN"

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.

TROUBLE DIAGNOSIS FOR DTC P0131 (-B1), P0151 (-B2)

Front Heated Oxygen Sensor (Lean shift monitoring) (Front HO2S) (P0131: Left bank), (P0151: Right bank) (Cont'd)

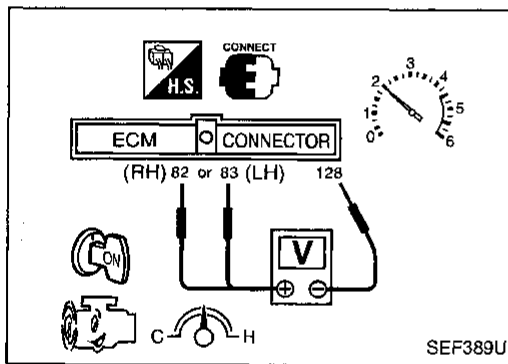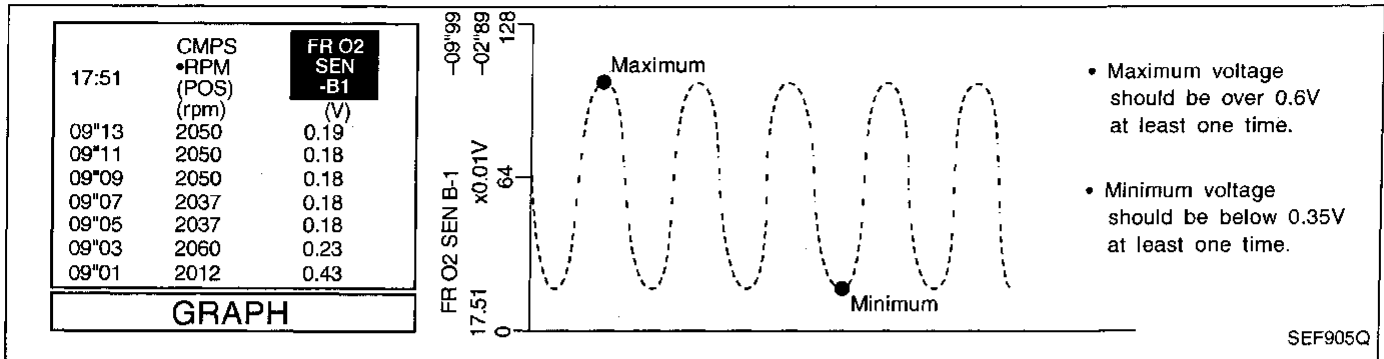


OR




- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal ⑧2 RH, ⑧3 LH (sensor signal) and ⑫⑧ (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.35V at least one time.
 - The voltage never exceeds 1.0V.

TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)

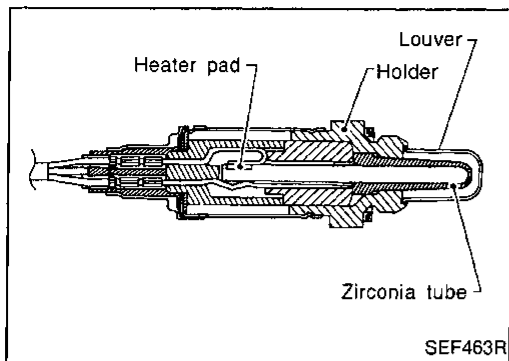

SEF463R

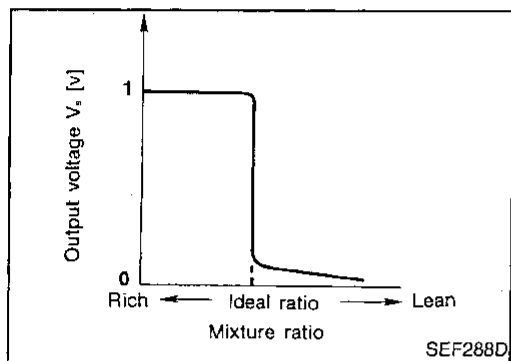

SEF288D

Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank)

COMPONENT DESCRIPTION

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

GI

MA

EM

LC

EC

FE

AT

PD

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2		0 - 0.3V ↔ 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm 	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

FA

RA

BR

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).


TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
82 (RH)	R	Front heated oxygen sensors	Engine is running.	0 - Approximately 1.0V (periodically change)
83 (LH)	W		After warming up to normal operating temperature and engine speed is 2,000 rpm.	

ST

RS

BT

HA

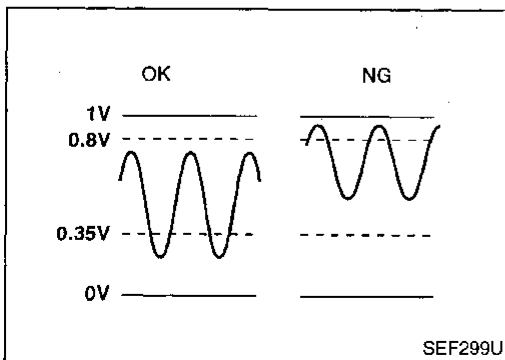

SEF299U

ON BOARD DIAGNOSIS LOGIC

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the "rich" output is sufficiently high. The "lean" output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.


EL

IDX


TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)

Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank) (Cont'd)


Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0132 0410 (Left bank)	<ul style="list-style-type: none"> The maximum and minimum voltages from the sensor are not around the specified voltages. 	<ul style="list-style-type: none"> Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors
P0152 0414 (Right bank)		

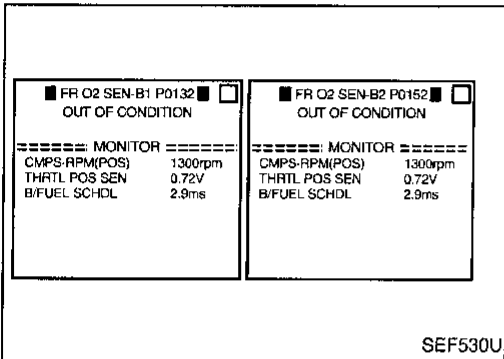

SEF530U

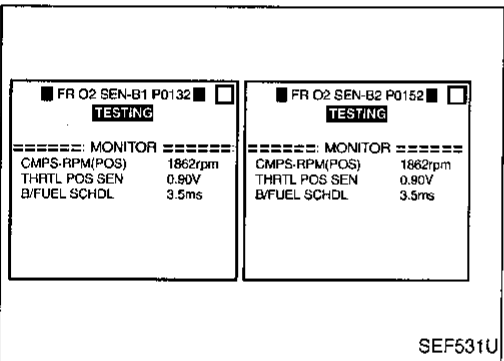

SEF531U

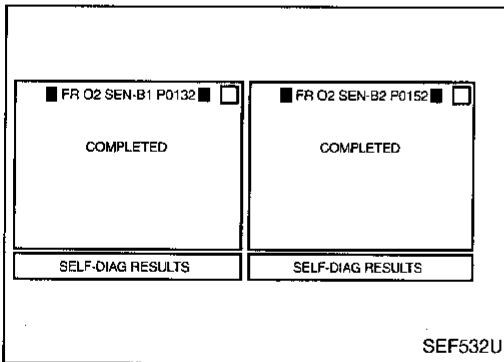

SEF532U

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Before performing following procedure, confirm that battery voltage is more than 11V at idle.
- Never raise engine speed above 3,200 rpm during the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". If the engine speed limit is exceeded, retry the procedure from step 2).



- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0132 (P0152)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine (TCS switch "OFF") and let it idle for at least 1.5 minutes.
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds.)
CMPS-RPM (POS): 1,700 - 2,200 rpm
Vehicle speed: 78 - 100 km/h (48 - 62 MPH)
B/FUEL SCHDL: 2.2 - 5.0 ms
Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-172.

TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)


Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank) (Cont'd)

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal ⑧② RH, ⑧③ LH (sensor signal) and ①②⑧ (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.8V at least one time.
 - The minimum voltage is below 0.35V at least one time.

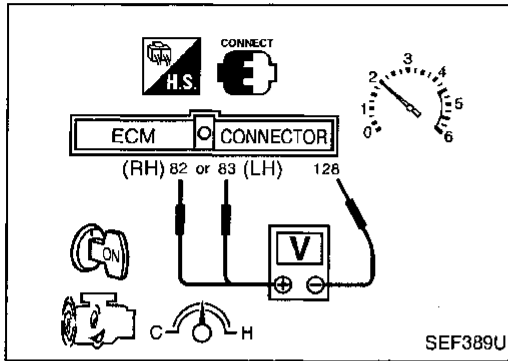

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)

Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

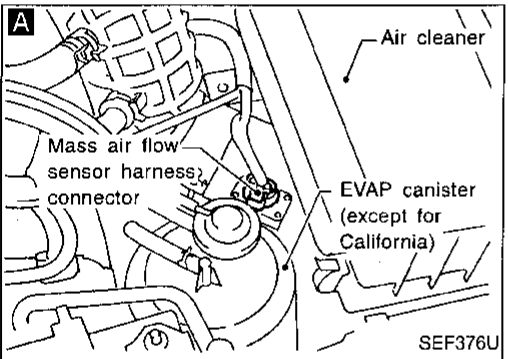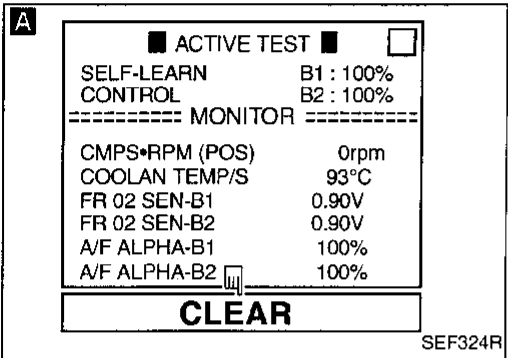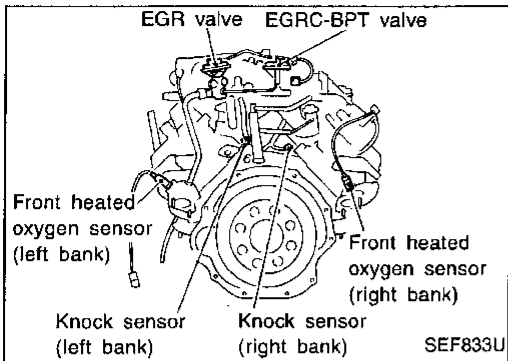

INSPECTION START

Loosen and retighten front heated oxygen sensor.

Tightening torque:
40 - 50 N·m (4.1 - 5.1 kg·m, 30 - 37 ft·lb)

A

CLEAR THE SELF-LEARNING DATA

1. Start engine and warm it up to normal operating temperature.
 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
 3. Clear the self-learning control coefficient by touching "CLEAR".
 4. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs P0172, P0175 detected? Is it difficult to start engine?**

Yes

Go to "TROUBLE DIAGNOSIS FOR DTC P0172, P0175", EC-237.

OR


2. Turn ignition switch "OFF".
 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
 4. Stop engine and reconnect mass air flow sensor harness connector.
 5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
 7. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs 0114, 0209 detected? Is it difficult to start engine?**

No


A

TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)

Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank) (Cont'd)

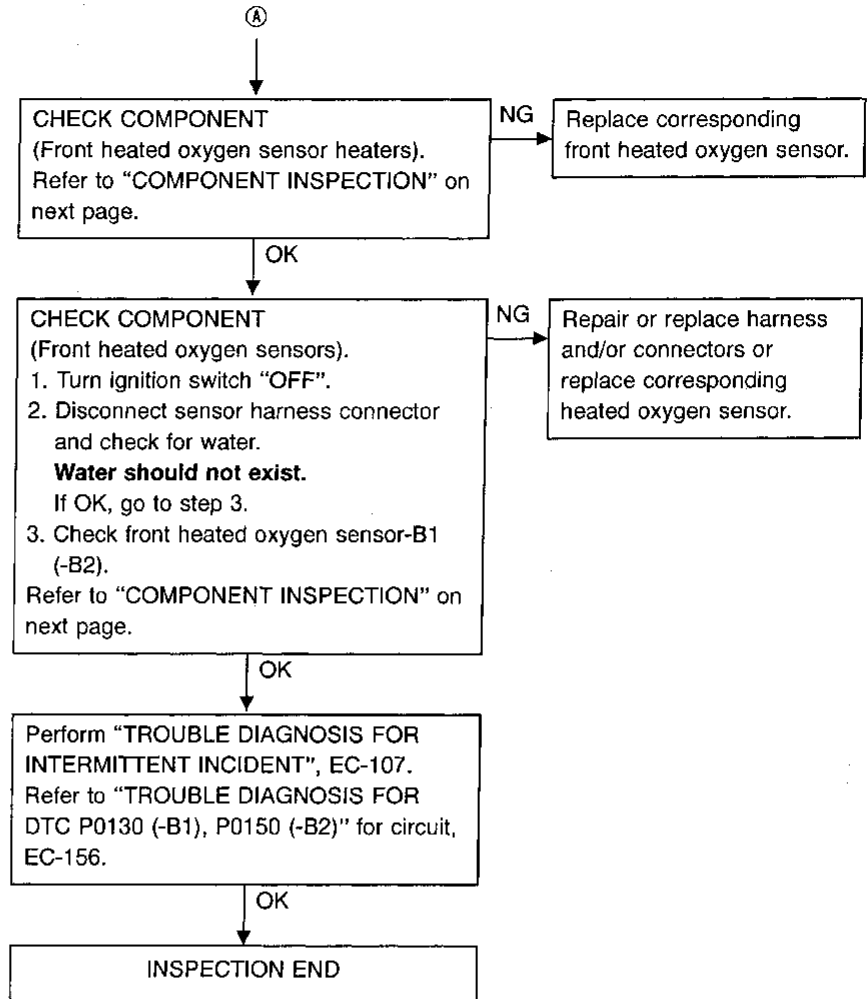

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR

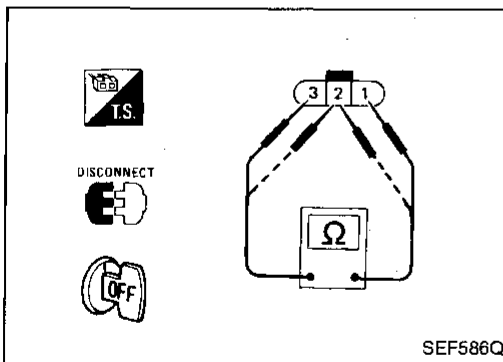

COMPONENT INSPECTION

Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

Resistance: 2.3 - 4.3Ω at 25°C (77°F)

Check continuity between terminals ② and ①, ③ and ②.

Continuity should not exist.

If NG, replace the front heated oxygen sensor.

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

ST
RS
BT
HA

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	2137rpm	
MAS AIR/FL SE	1.96V	
COOLAN TEMP/S	84°C	
FR O2 SEN-B1	0.37V	
FR O2 MNTR-B1	LEAN	
INJ PULSE-B1	2.6msec	
A/F ALPHA-B1	101%	
O2SEN HTR-B1	ON	

RECORD

SEF700T

Front heated oxygen sensor



- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT screen.

EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0132 (-B1), P0152 (-B2)

Front Heated Oxygen Sensor (Rich shift monitoring) (Front HO2S) (P0132: Left bank), (P0152: Right bank) (Cont'd)

- 5) Check the following.
- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.

5 times (cycles) are counted as shown below:



cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

R = "FR O2 MNTR-B1 (-B2)", "RICH"

L = "FR O2 MNTR-B1 (-B2)", "LEAN"

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.

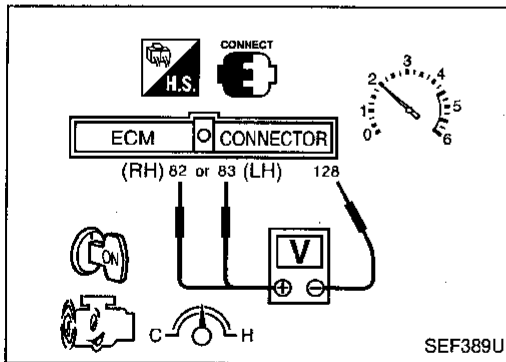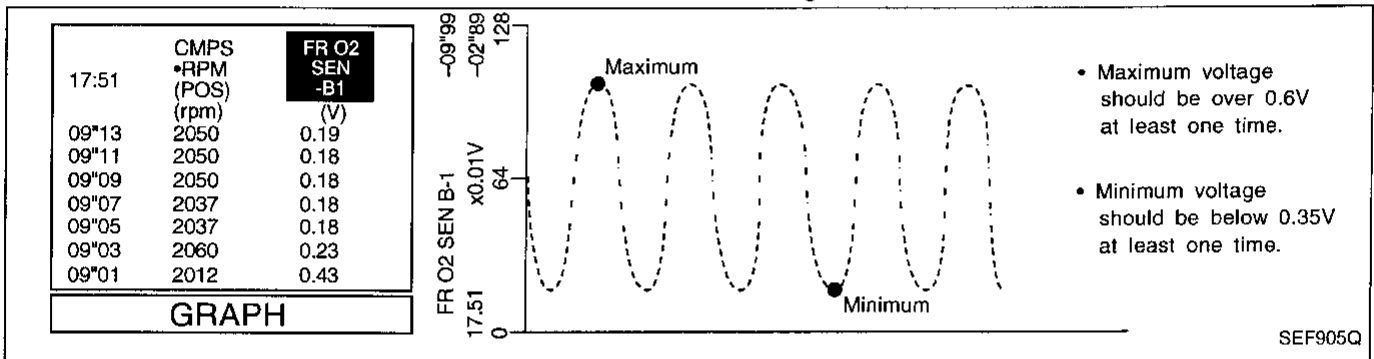


OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal ⑧2 RH, ⑧3 LH (sensor signal) and ⑫8 (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.35V at least one time.
 - The voltage never exceeds 1.0V.


TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

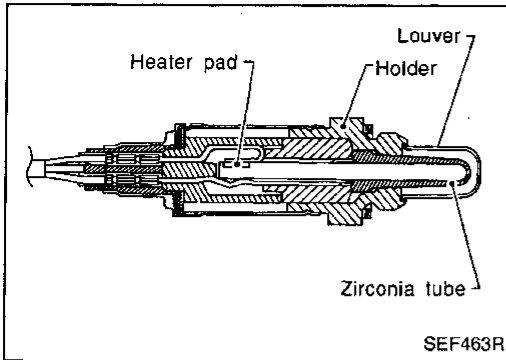

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank)

COMPONENT DESCRIPTION

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

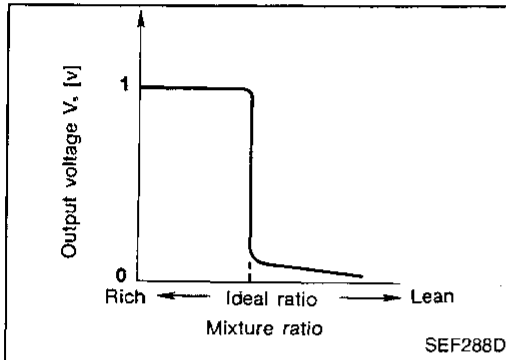

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
82 (RH)	R	Front heated oxygen sensor	Engine is running.	0 - Approximately 1.0V (periodically change)
83 (LH)	W		After warming up to normal operating temperature and engine speed is 2,000 rpm.	

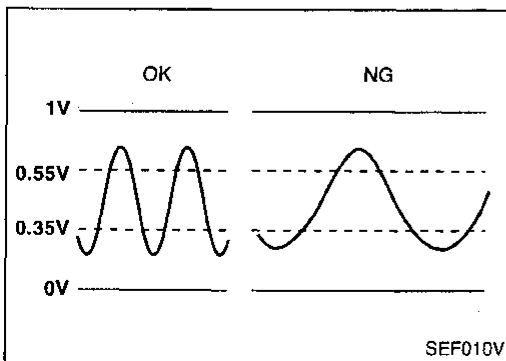




ON BOARD DIAGNOSIS LOGIC

To judge the malfunction of front heated oxygen sensor, this diagnosis measures front heated oxygen sensor cycling time. The time is compensated by engine operating (speed and load), fuel feedback control constant, and front heated oxygen sensor temperature index. Judgment is based on whether the compensated time (front heated oxygen sensor cycling time index) is inordinately long or not.

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0133 0409 (Left bank)	<ul style="list-style-type: none"> The cycle of the voltage signal from the sensor is more than the specified time. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors Intake air leaks Exhaust gas leaks PCV Mass air flow sensor
P0153 0413 (Right bank)		

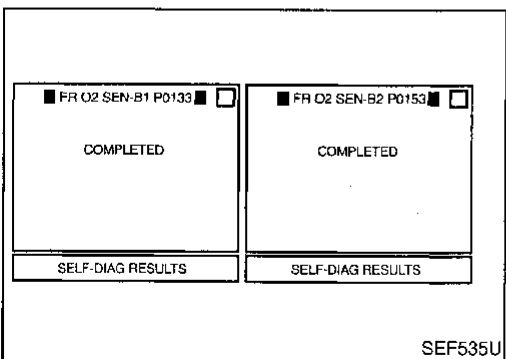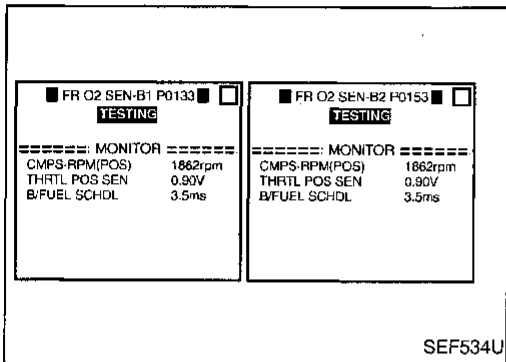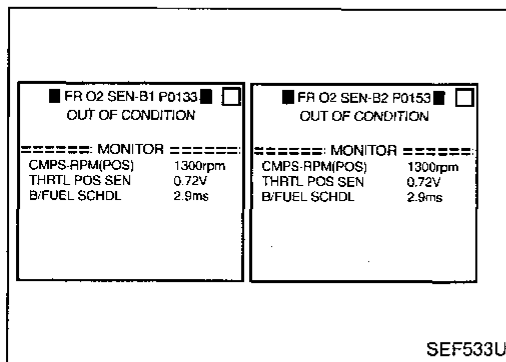

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Before performing following procedure, confirm that battery voltage is more than 11V at idle.
- Never raise engine speed above 3,200 rpm during the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". If the engine speed limit is exceeded, retry the procedure from step 2).



- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0133 (P0153)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine (TCS switch "OFF") and let it idle for at least 1.5 minutes.
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 40 to 50 seconds.)

Engine seed: 1,700 - 2,200 rpm

Vehicle speed: 78 - 100 km/h (48 - 62 MPH)

B/FUEL SCHDL: 2.2 - 5.0 ms

Selector lever: Suitable position

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)


If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-180.

GI

MA

EM

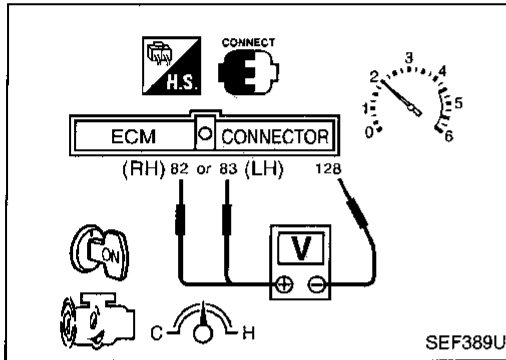

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

LC

EC

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 82 RH, 83 LH (sensor signal) and 128 (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)


Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

LEFT BANK


EC-FRO2LH-01

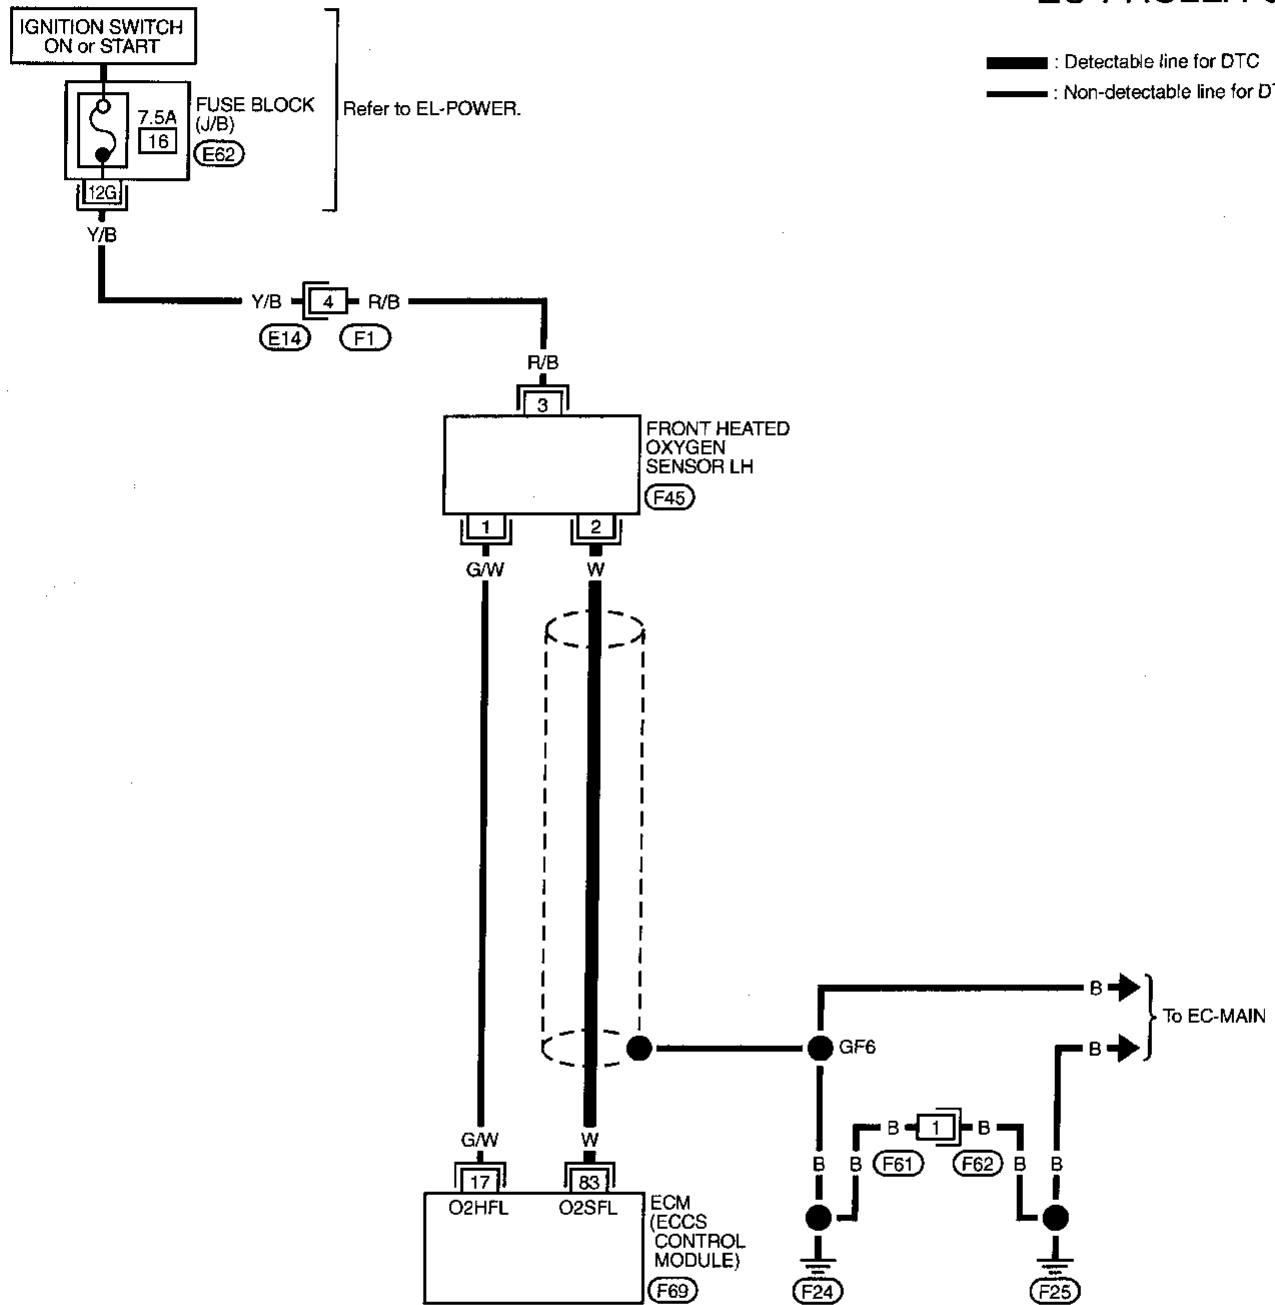

Refer to last page (Foldout page).



E62

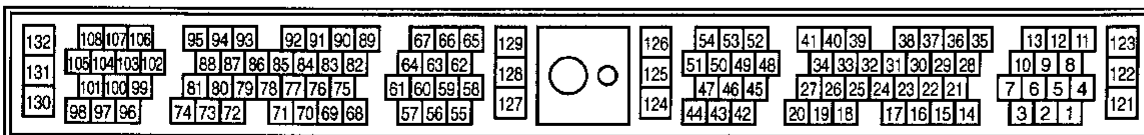


TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)



Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

RIGHT BANK

EC-FRO2RH-01

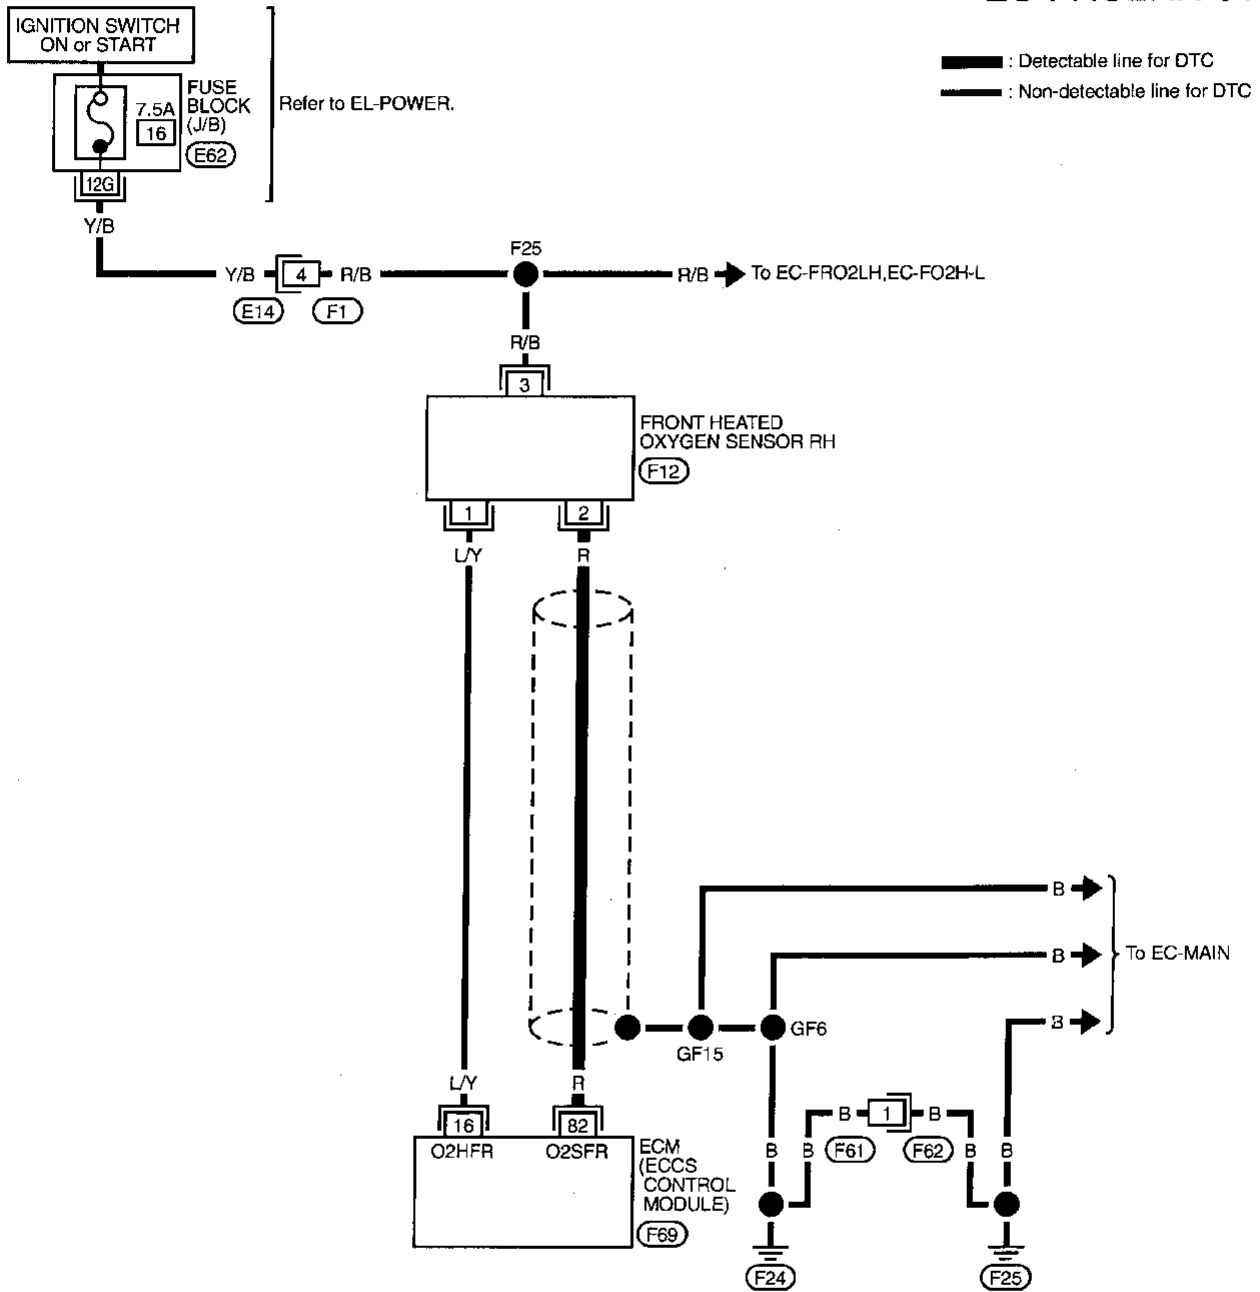

Refer to last page (Foldout page).

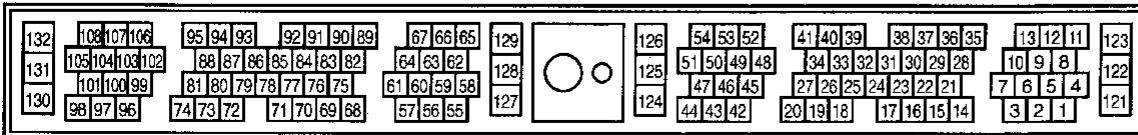






TEC247

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

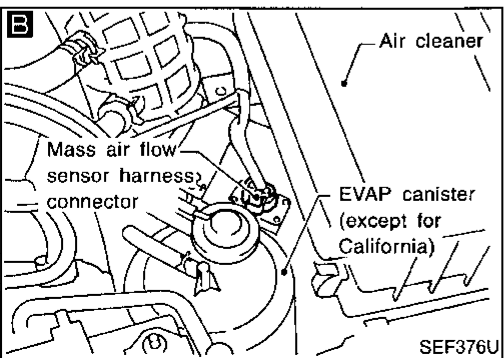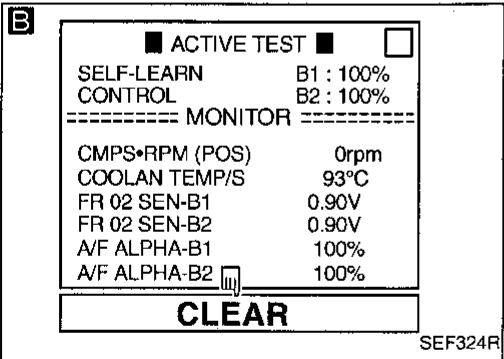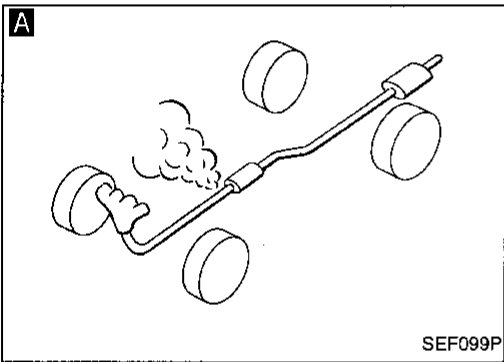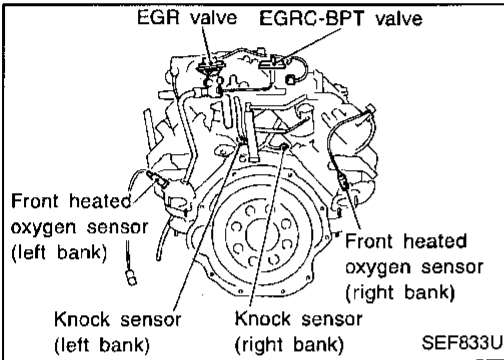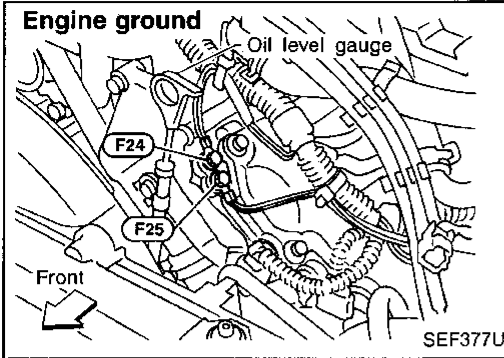

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

Loosen and retighten front heated oxygen sensor.

Tightening torque:
40 - 50 N·m (4.1 - 5.1 kg·m, 30 - 37 ft·lb)

A
CHECK EXHAUST AIR LEAK.
Start engine and run it at idle. Listen for an exhaust air leak before three way catalyst.

NG → Repair or replace.

OK

CHECK FOR INTAKE AIR LEAK.
Start engine and run it at idle. Listen for an intake air leak between the mass air flow sensor and the intake manifold.

NG → Repair or replace.

OK

B
CLEAR THE SELF-LEARNING DATA
1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.
Are the 1st trip DTCs P0171, P0174 or P0172, P0175 detected? Is it difficult to start engine?

OR

Yes → Go to "TROUBLE DIAGNOSIS FOR DTC P0171, P0172", P0174, P0175, EC-230, 237.




2. Turn ignition switch "OFF".
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
7. Run engine for at least 10 minutes at idle speed.
Are the 1st trip DTCs 0115, 0210 or D114, 0209 detected? Is it difficult to start engine?

No

A

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

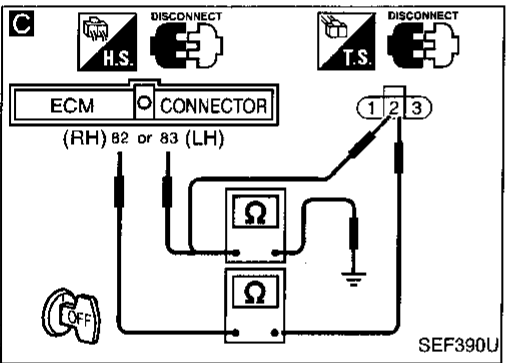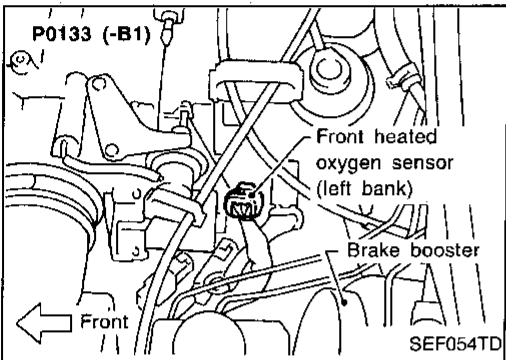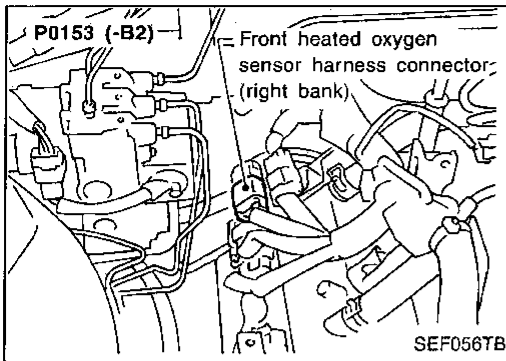

C

CHECK INPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect corresponding front heated oxygen sensor harness connector and ECM harness connector.
 3. Check harness continuity between ECM and sensor terminals.

P code	Terminals		Bank
	ECM	Sensor	
P0133	83	2	LH
P0153	82	2	RH

Continuity should exist.
 4. Check harness continuity between ECM and sensor or ground.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0133	83	2 or ground	LH
P0153	82	2 or ground	RH

Continuity should not exist.
 If OK, check harness for short to ground and short to power.

CHECK COMPONENT
 (Front heated oxygen sensor heaters). Refer to "COMPONENT INSPECTION" on next page.

CHECK COMPONENT
 (Mass air flow sensor). Refer to "COMPONENT INSPECTION", EC-120.

CHECK COMPONENT
 (PCV valve). Refer to "COMPONENT INSPECTION", EC-31.

CHECK COMPONENT
 (Front heated oxygen sensors). Refer to "COMPONENT INSPECTION" on next page.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

NG → Repair harness or connectors.

NG → Replace corresponding front heated oxygen sensor.

NG → Replace mass air flow sensor.


NG → Repair or replace PCV valve.

NG → Replace corresponding heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

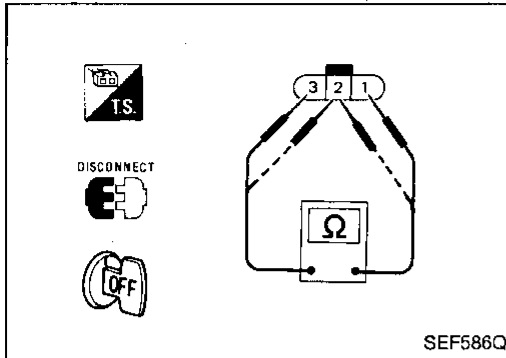

COMPONENT INSPECTION

Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

Resistance: 2.3 - 4.3Ω at 25°C (77°F)


Check continuity between terminals ② and ①, ③ and ②.

Continuity should not exist.

If NG, replace the front heated oxygen sensor.

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

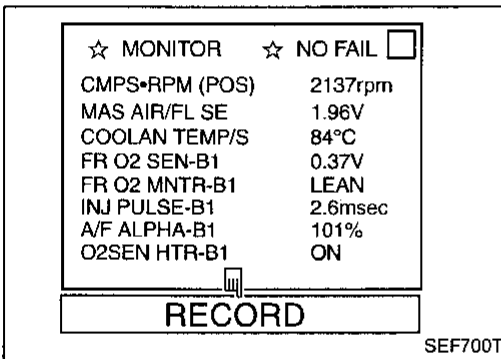

Front heated oxygen sensor



- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
- 3) Hold engine speed at 2,000 rpm under no load during the following steps.
- 4) Touch "RECORD" on CONSULT screen.
- 5) Check the following.
 - "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.

5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R



R = "FR O2 MNTR-B1 (-B2)", "RICH"

L = "FR O2 MNTR-B1 (-B2)", "LEAN"

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.


TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2)

Front Heated Oxygen Sensor (Response monitoring) (Front HO2S) (P0133: Left bank), (P0153: Right bank) (Cont'd)

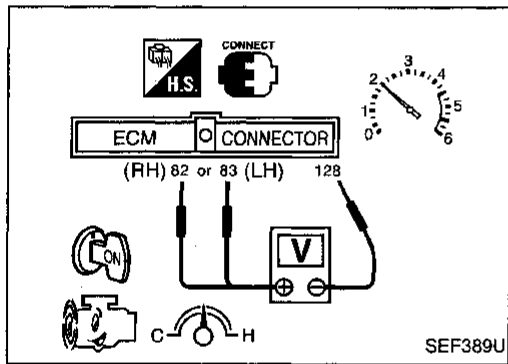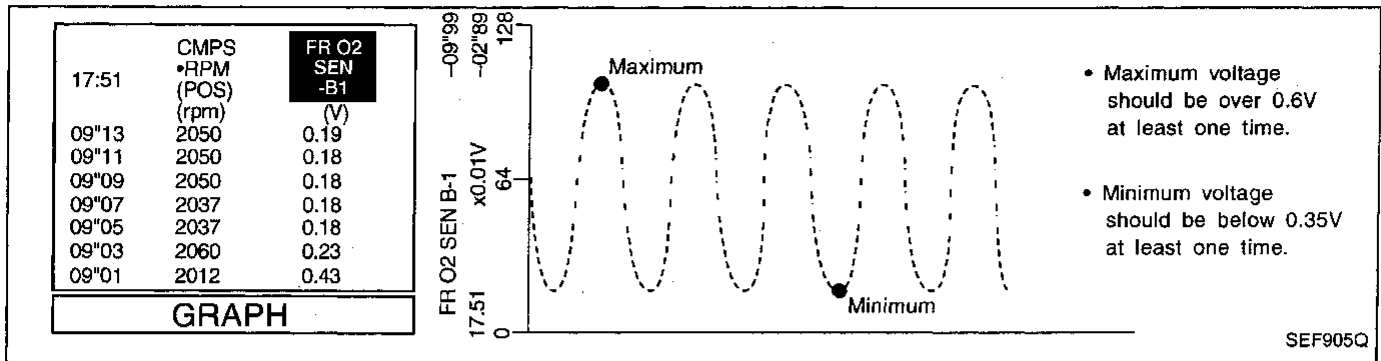

- OR
- 1) Start engine and warm it up to normal operating temperature.
 - 2) Set voltmeter probes between ECM terminal ⑧ RH, ⑨ LH (sensor signal) and ⑫ (ECM ground).
 - 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.35V at least one time.
 - The voltage never exceeds 1.0V.


TROUBLE DIAGNOSIS FOR DTC P0134 (-B1), P0154 (-B2)

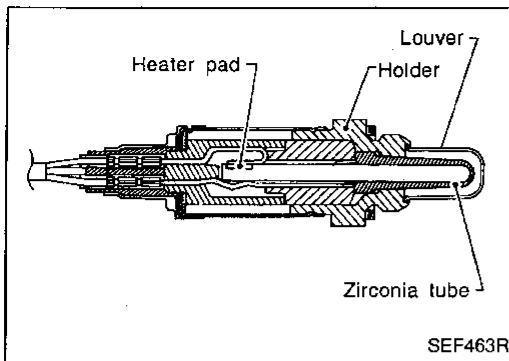

Front Heated Oxygen Sensor (High voltage) (Front HO2S) (P0134: Left bank), (P0154: Right bank)

COMPONENT DESCRIPTION

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

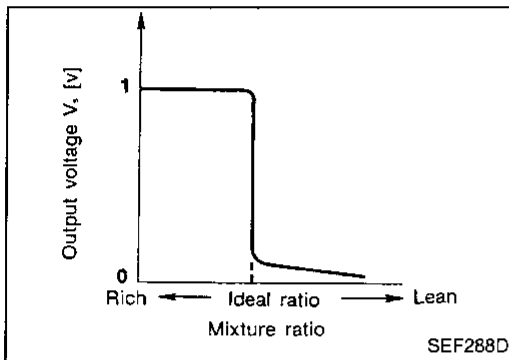

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	● Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (129) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
82 (RH)	R	Front heated oxygen sensor	Engine is running.	0 - Approximately 1.0V (periodically change)
83 (LH)	W		After warming up to normal operating temperature and engine speed is 2,000 rpm.	

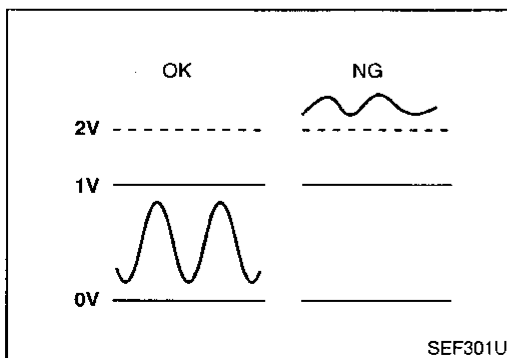

ON BOARD DIAGNOSIS LOGIC


To judge the malfunction, the diagnosis checks that the front heated oxygen sensor output is not inordinately high.

TROUBLE DIAGNOSIS FOR DTC P0134 (-B1), P0154 (-B2)

Front Heated Oxygen Sensor (High voltage) (Front HO2S) (P0134: Left bank), (P0154: Right bank) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0134 0142 (Left bank)	<ul style="list-style-type: none"> ● An excessively high voltage from the sensor is sent to ECM. 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Front heated oxygen sensor
P0154 0509 (Right bank)		

GI
MA
EM

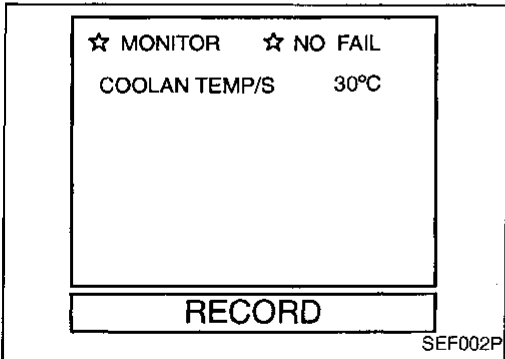

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

LC
EC



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT and wait at least 5 seconds.

FE
AT

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select "MODE 3" with GST.

PD

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

FA
RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P0134 (-B1), P0154 (-B2)


Front Heated Oxygen Sensor (High voltage) (Front HO2S) (P0134: Left bank), (P0154: Right bank) (Cont'd)

RIGHT BANK

EC-FRO2RH-01

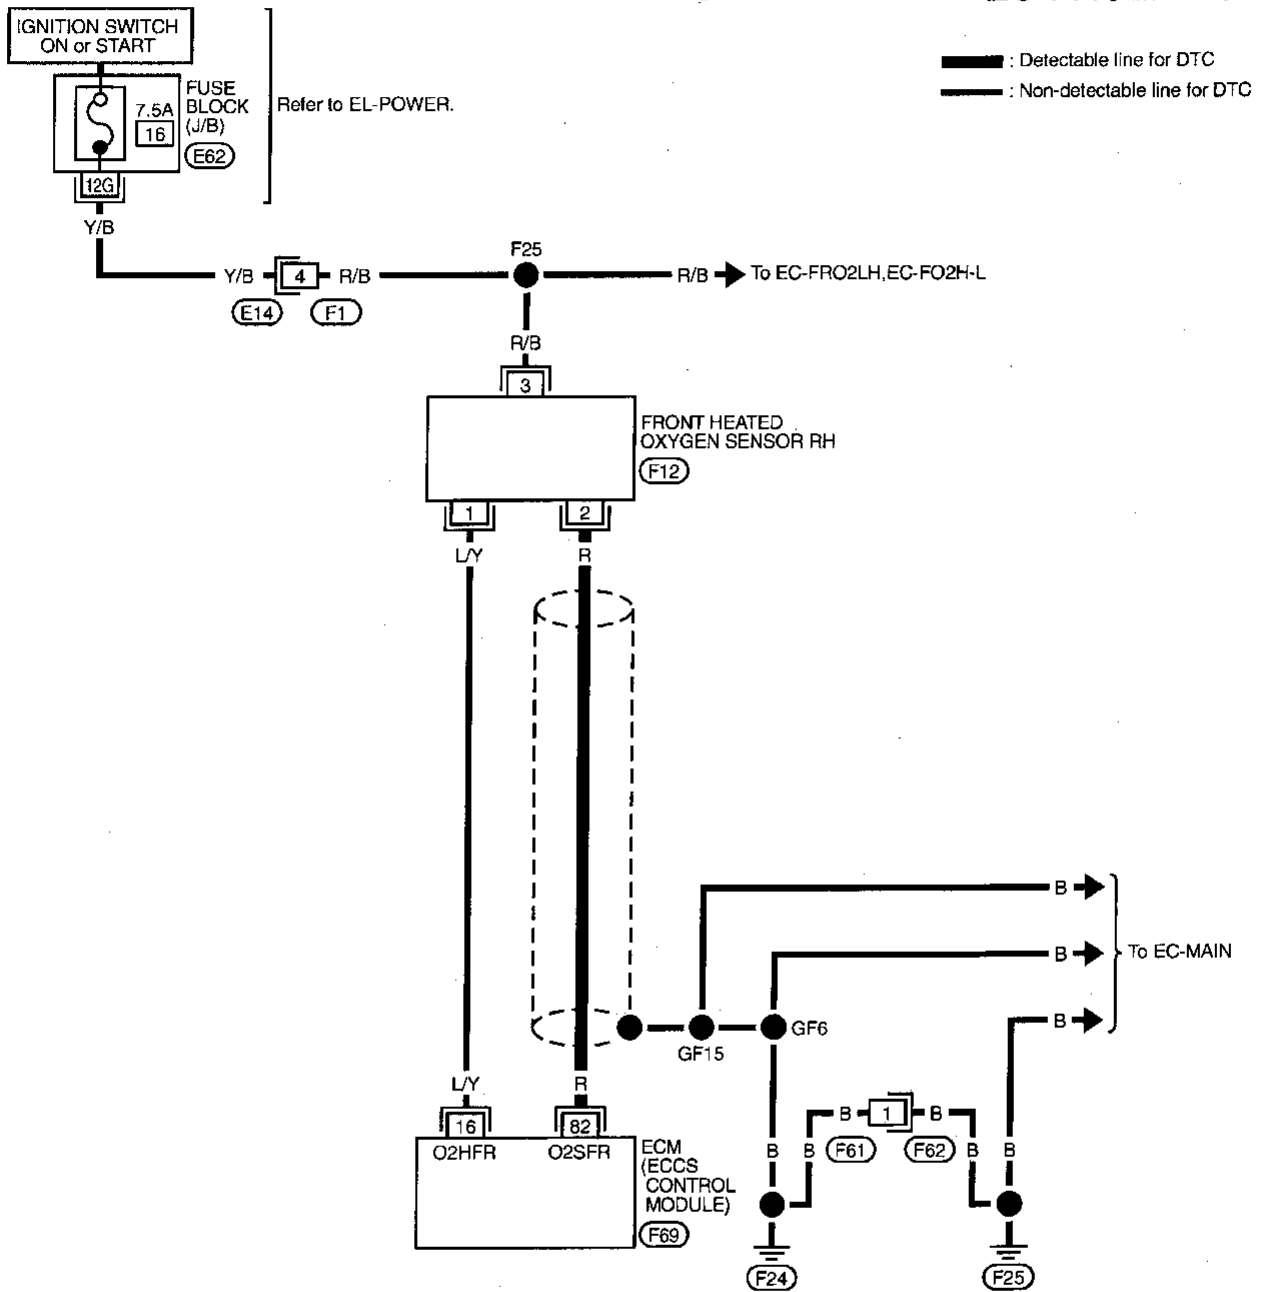


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX



Refer to last page (Foldout page).

(E62)

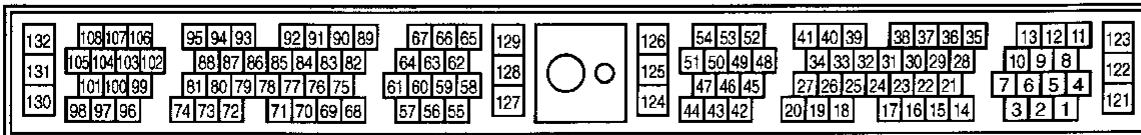

TEC247

TROUBLE DIAGNOSIS FOR DTC P0134 (-B1), P0154 (-B2)




Front Heated Oxygen Sensor (High voltage) (Front HO2S) (P0134: Left bank), (P0154: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

INSPECTION START

Loosen and retighten front heated oxygen sensor.

Tightening torque:
40 - 50 N·m (4.1 - 5.1 kg-m, 30 - 37 ft-lb)

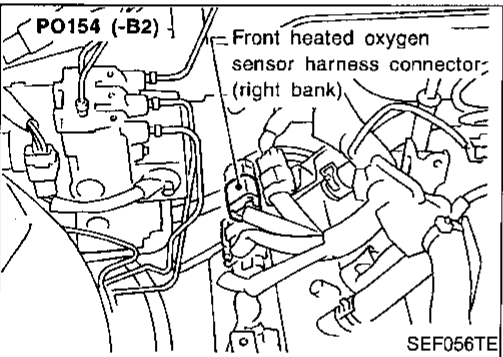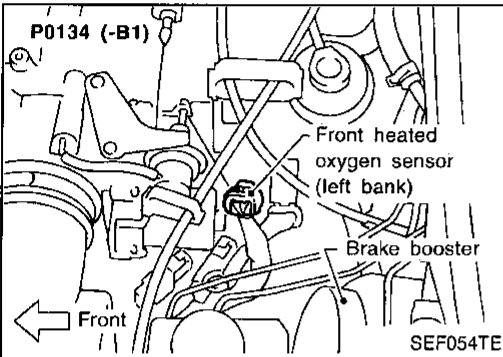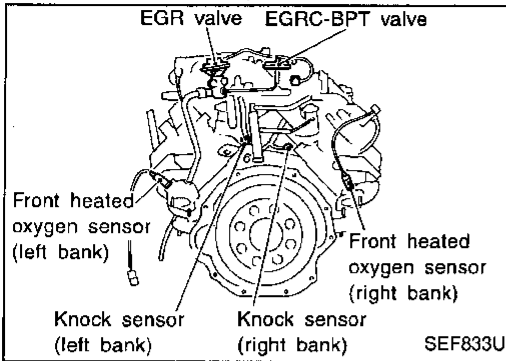

A
CHECK INPUT SIGNAL CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect corresponding front heated oxygen sensor harness connector and ECM harness connector.
3. Check harness continuity between ECM and sensor terminals.


P code	Terminals		Bank
	ECM	Sensor	
P0134	83	2	LH
P0154	82	2	RH

Continuity should exist.
4. Check harness continuity between ECM and sensor or ground.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0134	83	2 or ground	LH
P0154	82	2 or ground	RH

Continuity should not exist.
If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

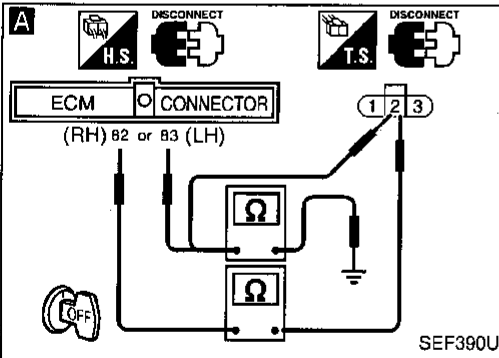

CHECK COMPONENT
(Front heated oxygen sensor).
1. Turn ignition switch "OFF".
2. Disconnect sensor harness connector and check for water.
Water should not exist.
If OK, go to step 3.
3. Check front heated oxygen sensor. Refer to "COMPONENT INSPECTION" on next page.

NG → Repair or replace harness and/or connectors or replace corresponding front heated oxygen sensor.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0134 (-B1), P0154 (-B2)

Front Heated Oxygen Sensor (High voltage) (Front HO2S) (P0134: Left bank), (P0154: Right bank) (Cont'd)

☆ MONITOR
☆ NO FAIL

CMPS•RPM (POS)	2137rpm
MAS AIR/FL SE	1.96V
COOLAN TEMP/S	84°C
FR O2 SEN-B1	0.37V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	2.6msec
A/F ALPHA-B1	101%
O2SEN HTR-B1	ON

RECORD

SEF700T

COMPONENT INSPECTION



Front heated oxygen sensor

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
 - 3) Hold engine speed at 2,000 rpm under no load during the following steps.
 - 4) Touch "RECORD" on CONSULT screen.
 - 5) Check the following.
 - "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds.
- 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |
 FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

R = "FR O2 MNTR-B1 (-B2)", "RICH"
 L = "FR O2 MNTR-B1 (-B2)", "LEAN"

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.35V at least once.
- The voltage never exceeds 1.0V.

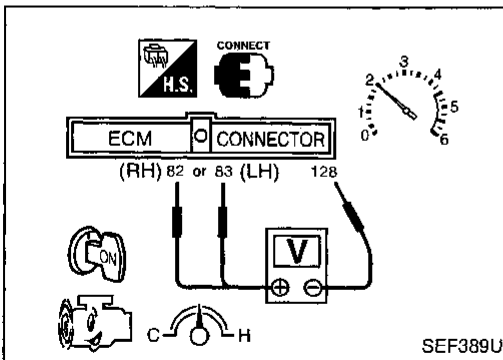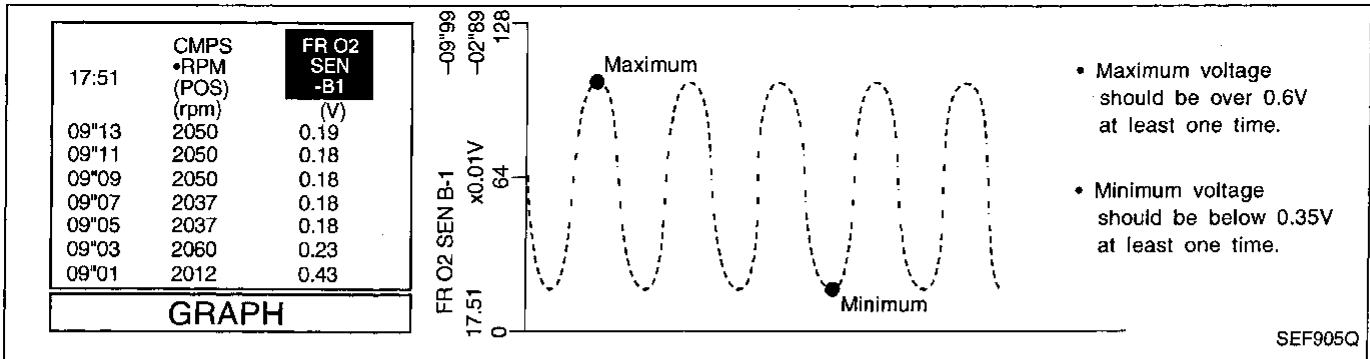

OR

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 82 RH, 83 LH (sensor signal) and 128 (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is below 0.35V at least one time.
 - The voltage never exceeds 1.0V.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0135 (-B1), P0155 (-B2)

Front Heated Oxygen Sensor Heater (P0135: Left bank), (P0155: Right bank)

SYSTEM DESCRIPTION

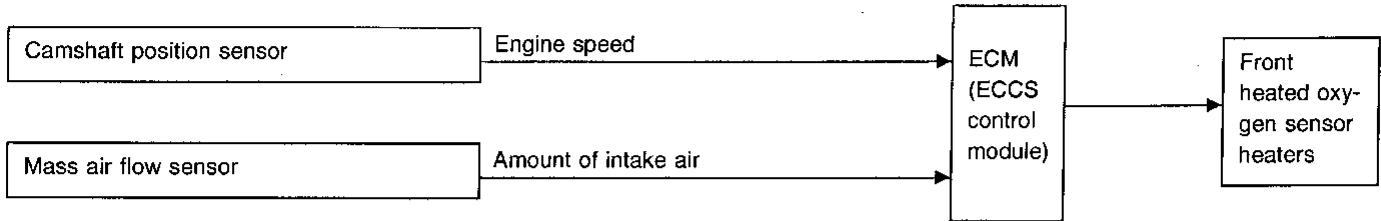

The ECM performs ON/OFF control of the front heated oxygen sensor heaters corresponding to the engine speed.

OPERATION

Engine speed rpm	Front heated oxygen sensor heaters
Above 3,200	OFF
Below 3,200	ON

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
O2 SEN HTR-B1 O2 SEN HTR-B2	<ul style="list-style-type: none"> Engine speed: Idle 	ON
	<ul style="list-style-type: none"> Engine speed: Above 3,200 	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
17 (LH)	G/W	Front heated oxygen sensor heaters (left bank)	Engine is running. Engine speed is below 3,200 rpm.	0 - 0.5V
16 (RH)	L/Y		Engine is running. Engine speed is above 3,200 rpm.	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0135 0901 (Left bank)	<ul style="list-style-type: none"> The current amperage in the front heated oxygen sensor heater circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the front heated oxygen sensor heater.) 	<ul style="list-style-type: none"> Harness or connectors (The front heated oxygen sensor heater circuit is open or shorted.) Front heated oxygen sensor heater
P0155 1001 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0135 (-B1), P0155 (-B2)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	650rpm	
MAS AIR/FL SE	1.28V	
COOLANT TEMP/S	90°C	
FR O2 SEN-B1	0.04V	
FR O2 SEN-B2	0.04V	
FR O2 MNTR-B1	LEAN	
FR O2 MNTR-B2	LEAN	
FR O2 HTR-B1	ON	
FR O2 HTR-B2	ON	
RECORD		

SEF630U

Front Heated Oxygen Sensor Heater (P0135: Left bank), (P0155: Right bank) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 6 seconds at idle speed.

OR



- 1) Start engine and run it for at least 6 seconds at idle speed.
- 2) Select "MODE 3" with GST.

OR



- 1) Start engine and run it for at least 6 seconds in idle condition.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

- When using GST, "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" should be performed twice as much as when using CONSULT or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT or ECM (Diagnostic Test Mode II) is recommended.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSIS FOR DTC P0135 (-B1), P0155 (-B2)

Front Heated Oxygen Sensor Heater (P0135: Left bank), (P0155: Right bank) (Cont'd)



LEFT BANK

EC-FO2H-L-01

— : Detectable line for DTC
 — : Non-detectable line for DTC

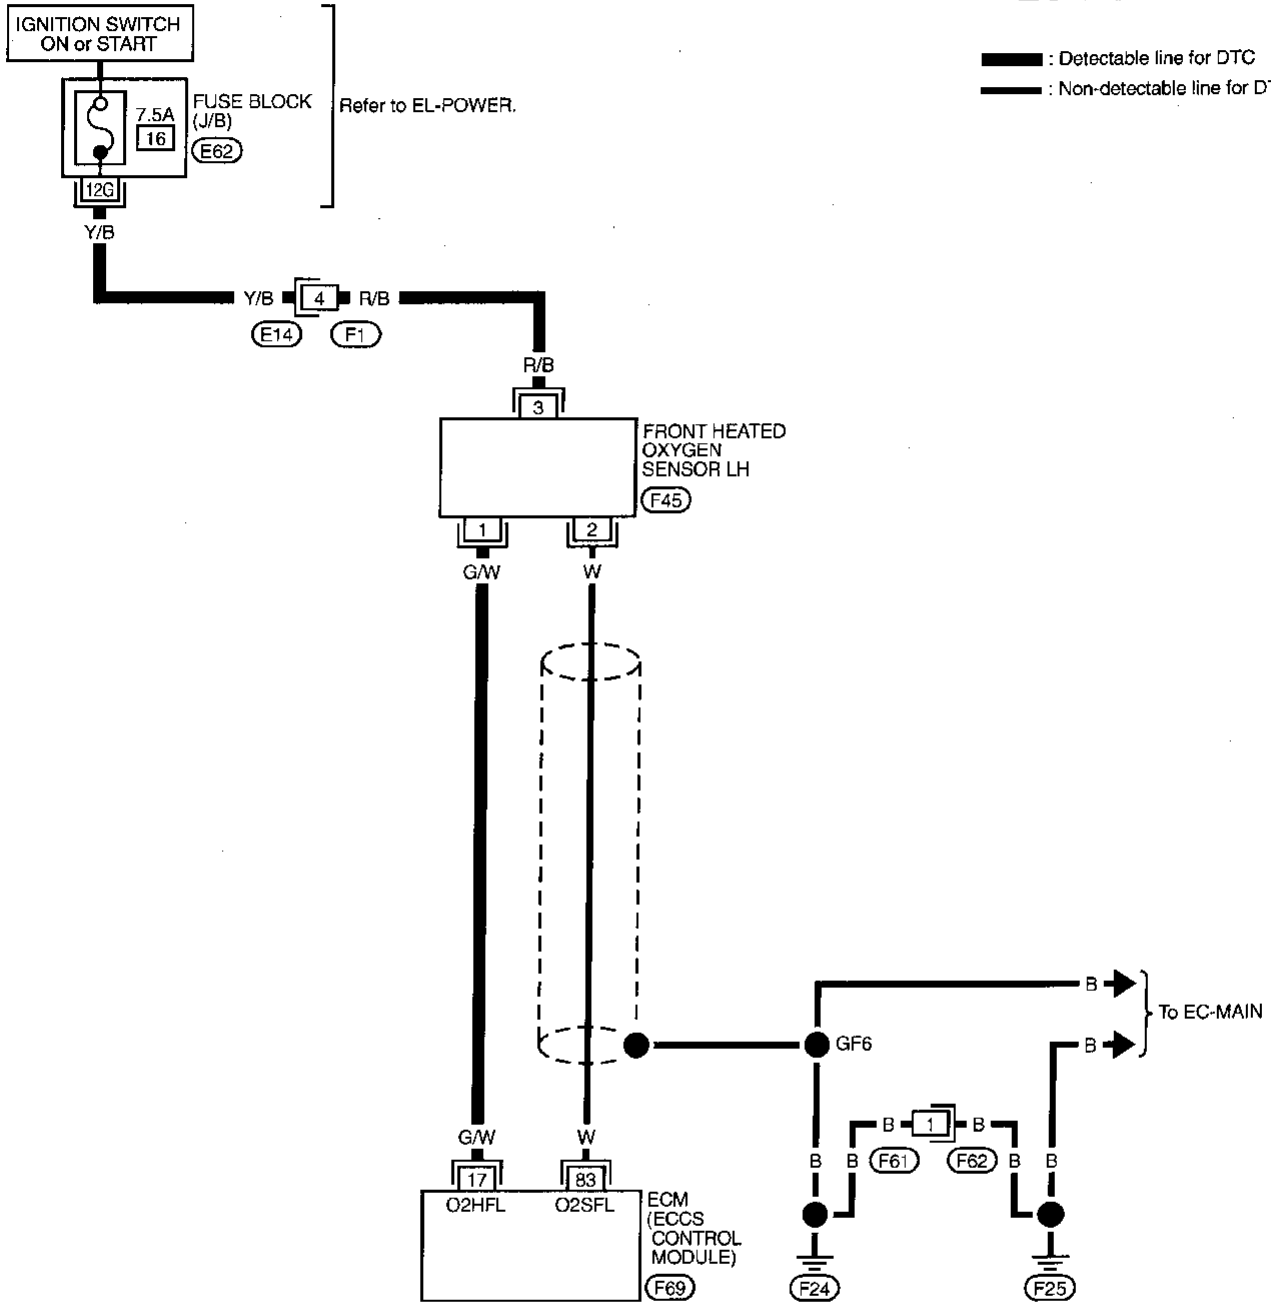

Refer to last page (Foldout page).

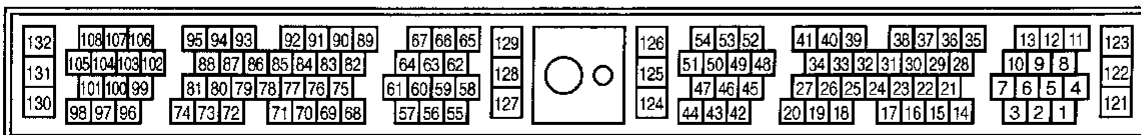


TROUBLE DIAGNOSIS FOR DTC P0135 (-B1), P0155 (-B2)


Front Heated Oxygen Sensor Heater (P0135: Left bank), (P0155: Right bank) (Cont'd)

RIGHT BANK


EC-FO2H-R-01

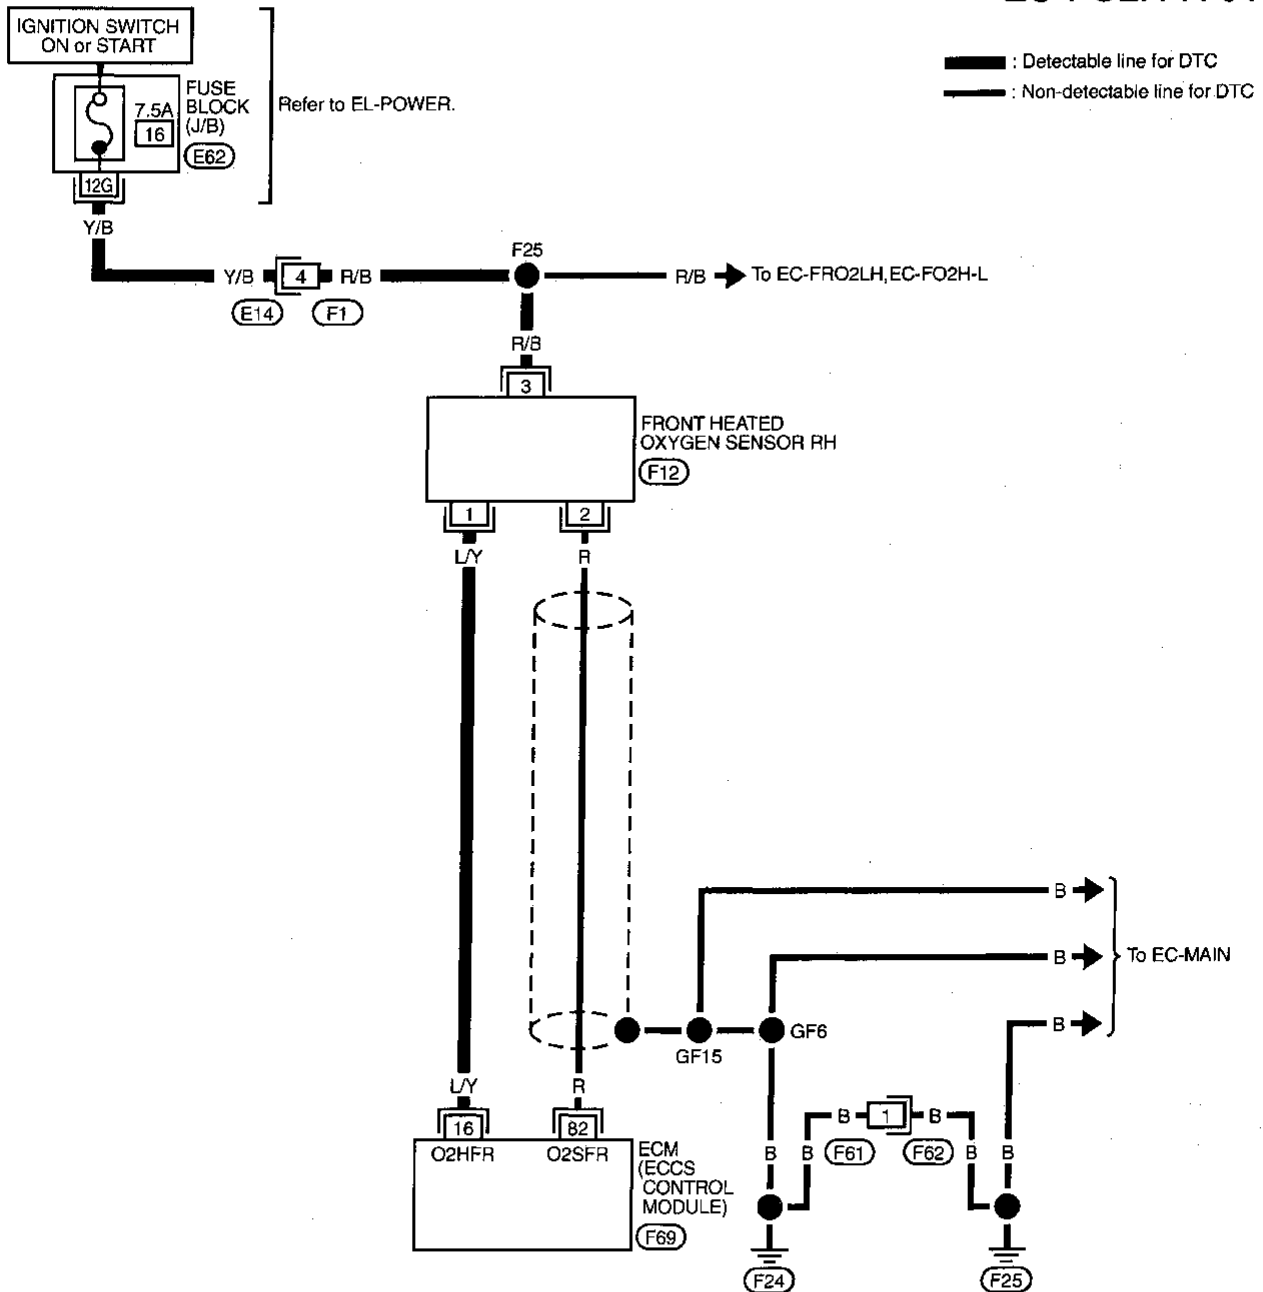

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX








Refer to last page (Foldout page).
 (E62)

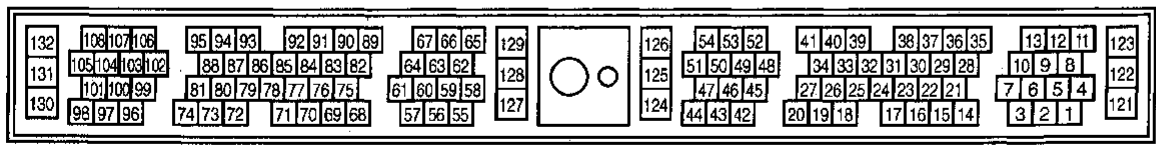

TROUBLE DIAGNOSIS FOR DTC P0135 (-B1), P0155 (-B2)

Front Heated Oxygen Sensor Heater (P0135: Left bank), (P0155: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

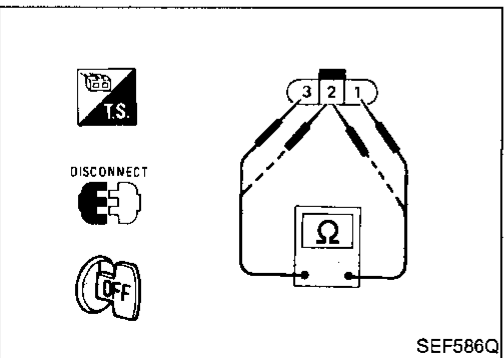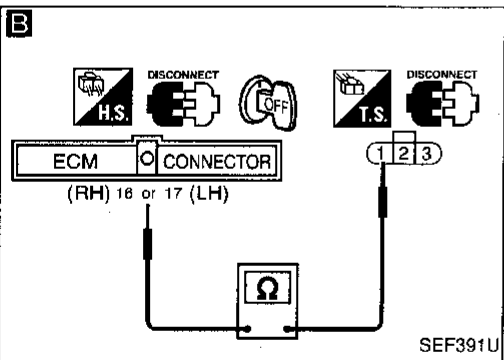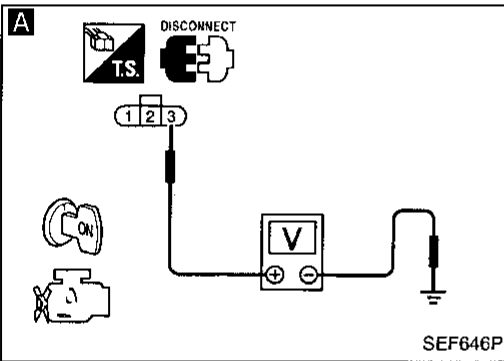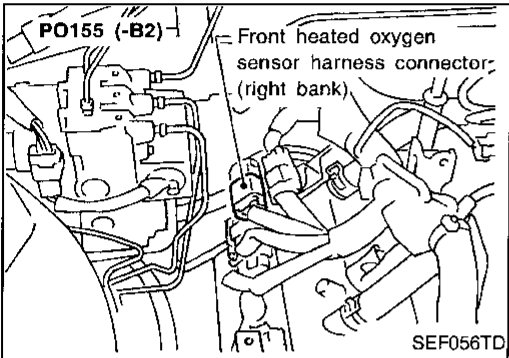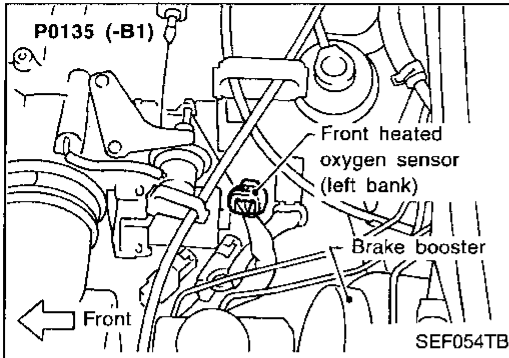

INSPECTION START

A

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect corresponding front heated oxygen sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and ground.

Voltage: Battery voltage

NG

Check the following.

- Harness connectors
- (F1), (E14)
- 7.5A fuse
- Harness for open or short between front heated oxygen sensor and fuse

If NG, repair harness or connectors.

B

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between terminal and sensor.

P code	Terminals		Bank
	ECM	Sensor	
P0135	17	1	LH
P0155	16	1	RH

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Repair harness or connectors.

CHECK COMPONENT (Front heated oxygen sensor heater). Refer to "COMPONENT INSPECTION" below.

NG

Replace front heated oxygen sensor (left bank).

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

COMPONENT INSPECTION

Front heated oxygen sensor heater

Check resistance between terminals ③ and ①.

Resistance: 2.3 - 4.3Ω at 25°C (77°F)

Check continuity between terminals ② and ①, ③ and ②.


Continuity should not exist.

If NG, replace the front heated oxygen sensor.

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

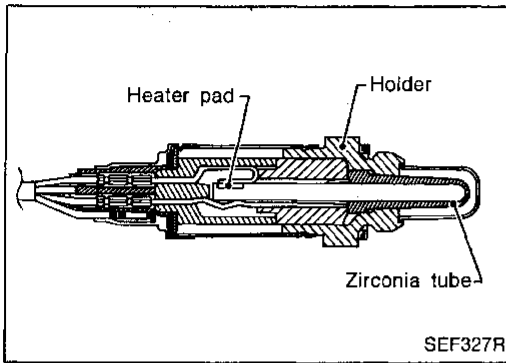

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank)

COMPONENT DESCRIPTION

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up 	Revsing engine from idle up to 2,000 rpm 0 - 0.3V ↔ 0.6 - 1.0V

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
89 (RH)	W	Rear heated oxygen sensors	Engine is running.	0 - Approximately 1.0V
90 (LH)	Y		After warming up to normal operating temperature and revving engine from idle up to 2,000 rpm.	

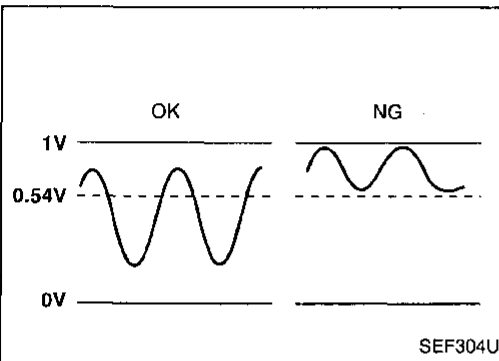

ON BOARD DIAGNOSIS LOGIC

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the minimum voltage of the sensor is sufficiently low during the various driving condition such as fuel-cut.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0137 0511 (Left bank)	<ul style="list-style-type: none"> The minimum voltage from the sensor is not reached to the specified voltage. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open.) Rear heated oxygen sensors Fuel pressure Injectors
P0157 0314 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- "COMPLETED" will appear on CONSULT screen when all tests "COND1", "COND2" and "COND3" are completed.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Never stop engine during this test. If the engine is stopped, reperform this test from step 2).
- Always perform at a temperature of more than -10°C (14°F).



Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "RR O2 SEN-B1 (-B2) P0137 (P0157)" of "REAR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- 4) Touch "START".
- 5) Start engine (TCS switch "OFF") and let it idle for at least 30 seconds.
- 6) Rev engine up to 2,000 rpm 2 or 3 times quickly under no load.
If "COMPLETED" appears on CONSULT screen, go to step 10).
If "COMPLETED" does not appear on CONSULT screen, go to the following step.
- 7) When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED" (It will take approximately 60 seconds.)

CMPS-RPM (POS): 1,400 - 2,200 rpm
Vehicle speed: 64 - 100 km/h (40 - 62 MPH)
B/FUEL SCHDL: 1.0 - 4.5 ms
Selector lever: Suitable position

NOTE:

- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" already appears at "COND2" on CONSULT screen before "Procedure for COND2" is conducted, it is unnecessary to conduct step 8).

Procedure for COND2

- 8) While driving release accelerator pedal completely with "OD" OFF from the above condition (step 7) until "INCOMPLETE" at "COND2" on CONSULT screen has turned to "COMPLETED". (It will take approximately 4 seconds.)

- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" already appears at "COND3" on CONSULT screen before "Procedure for COND3" is conducted, it is unnecessary to conduct step 9).

<p>■ RR O2 SEN-B1 P0137 ■ □</p> <p>COND1: OUT OF COND COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 925rpm THRRTL POS SEN 0.46V B/FUEL SCHDL 1.5ms</p>	<p>■ RR O2 SEN-B2 P0157 ■ □</p> <p>COND1: OUT OF COND COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 925rpm THRRTL POS SEN 0.46V B/FUEL SCHDL 1.5ms</p>
--	--

SEF548U

<p>■ RR O2 SEN-B1 P0137 ■ □</p> <p>COND1: TESTING COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>	<p>■ RR O2 SEN-B2 P0157 ■ □</p> <p>COND1: TESTING COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>
---	---

SEF549U

<p>■ RR O2 SEN-B1 P0137 ■ □</p> <p>COND1: COMPLETED COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>	<p>■ RR O2 SEN-B2 P0157 ■ □</p> <p>COND1: COMPLETED COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>
---	---

SEF550U

<p>■ RR O2 SEN-B1 P0137 ■ □</p> <p>COND1: COMPLETED COND2: COMPLETED COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1050rpm THRRTL POS SEN 0.51V B/FUEL SCHDL 1.0ms</p>	<p>■ RR O2 SEN-B2 P0157 ■ □</p> <p>COND1: COMPLETED COND2: COMPLETED COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1050rpm THRRTL POS SEN 0.51V B/FUEL SCHDL 1.0ms</p>
--	--

SEF551U

<p>■ RR O2 SEN-B1 P0137 ■ □</p> <p style="text-align: center;">COMPLETED</p>	<p>■ RR O2 SEN-B2 P0157 ■ □</p> <p style="text-align: center;">COMPLETED</p>
SELF-DIAG RESULTS	SELF-DIAG RESULTS

SEF553U

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)


Procedure for COND3

- 9) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT screen has turned to "COMPLETED". (It will take a maximum of approximately 6 minutes.)

NOTE:

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 10) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-200.

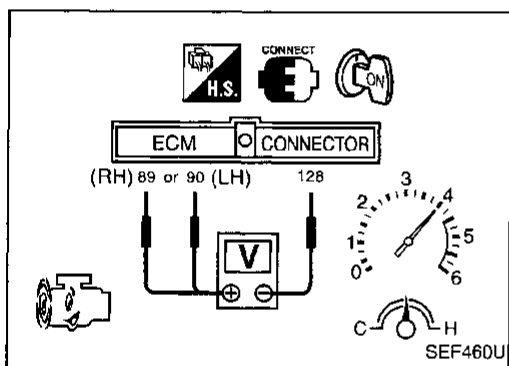

OR OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals 89 (RH), 90 (LH) (sensor signal) and 128 (ECM ground).
- 3) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.

(depress and release accelerator pedal as soon as possible)

The voltage should be below 0.54V at least once during this procedure.

If the voltage can be confirmed in step 3, step 4 is not necessary.

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.



The voltage should be below 0.54V at least once during this procedure.

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)


LEFT BANK

EC-RRO2LH-01

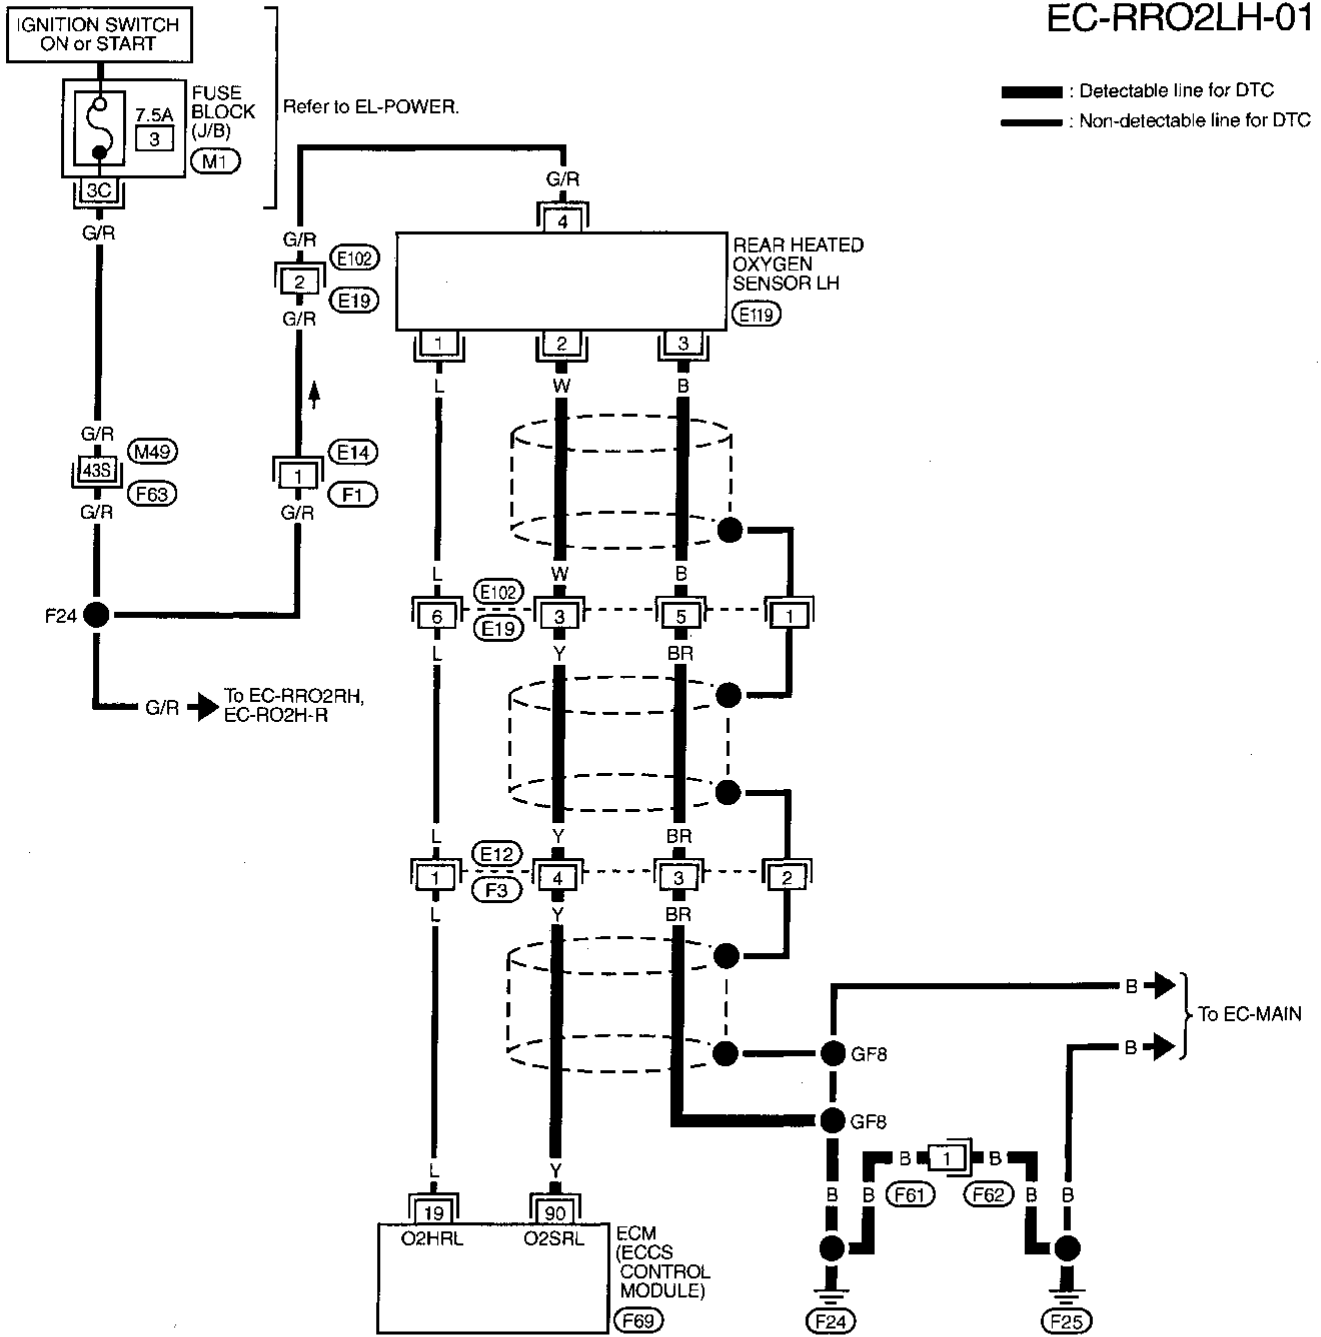

Refer to last page (Foldout page).

(M49), (F63)
(M1)

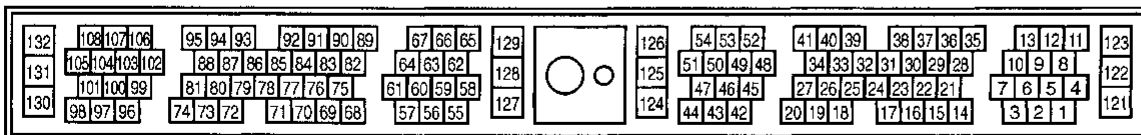

TEC245

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)

RIGHT BANK

EC-RR02H-01 GI

— : Detectable line for DTC
 — : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

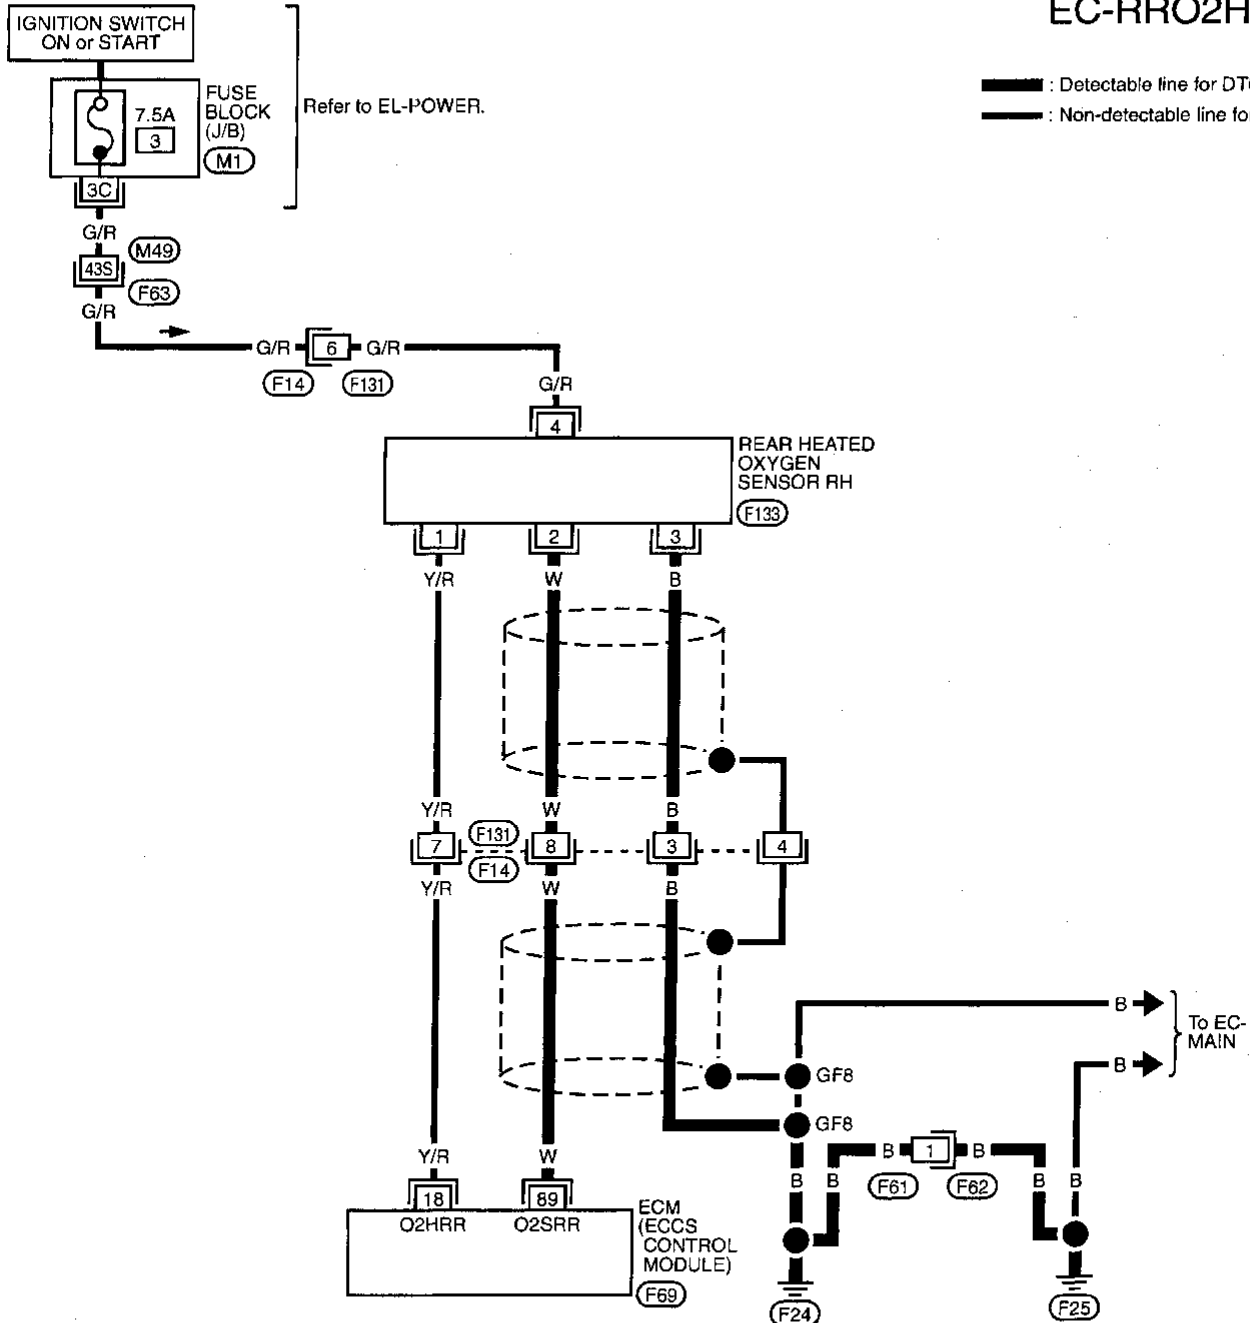

Refer to last page (Foldout page).

(M49) (F63)
 (M1)

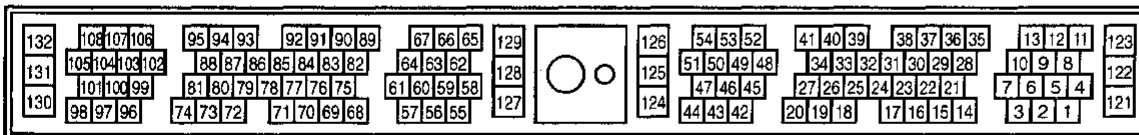





TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

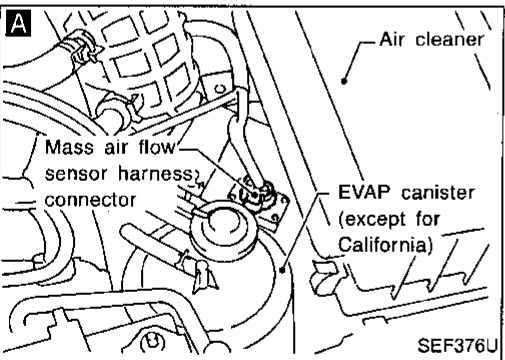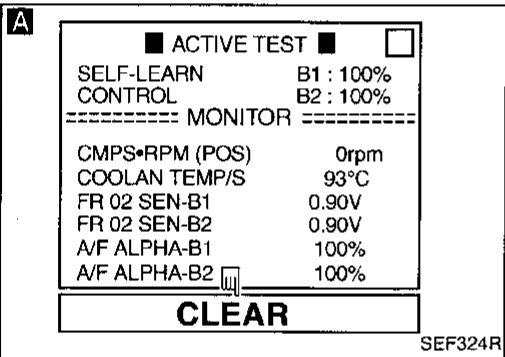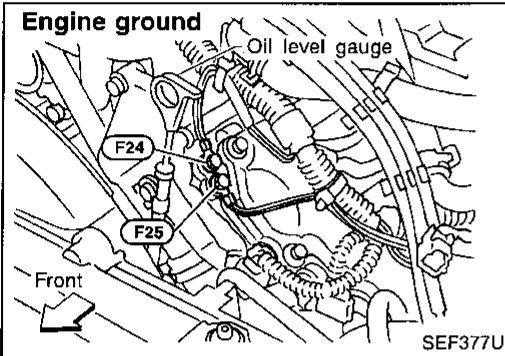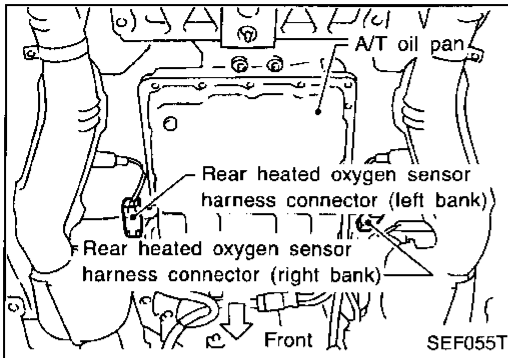

A

CLEAR THE SELF-LEARNING DATA

1. Start engine and warm it up to normal operating temperature.
 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
 3. Clear the self-learning control coefficient by touching "CLEAR".
 4. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs P0171, P0174 detected? Is it difficult to start engine?**

Yes

Go to "TROUBLE DIAGNOSIS FOR DTC P0171, P0172", EC-230, 237.

OR



2. Turn ignition switch "OFF".
 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
 4. Stop engine and reconnect mass air flow sensor harness connector.
 5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
 7. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs 0115, 0210 detected? Is it difficult to start engine?**

No

A

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)

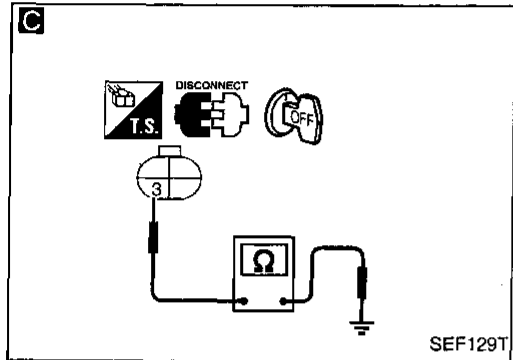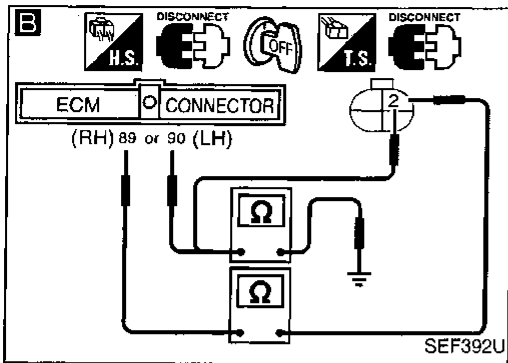

- B**
- CHECK INPUT SIGNAL CIRCUIT.**
1. Turn ignition switch "OFF".
 2. Disconnect corresponding rear heated oxygen sensor harness connector and ECM harness connector.
 3. Check harness continuity between ECM terminals and sensor.

P code	Terminals		Bank
	ECM	Sensor	
P0137	90	2	LH
P0157	89	2	RH

- Continuity should exist.**
4. Check harness continuity between ECM and sensor or ground terminals.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0137	90	2 or ground	LH
P0157	89	2 or ground	RH

- Continuity should not exist.**
- If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors (F3, E12) (LH) or (F14, F131) (RH)
 - Harness connectors (E19, E102) (LH)
- If NG, repair open circuit or short to ground or short to power in harness or connectors.

- C**
- CHECK GROUND CIRCUIT.**
1. Turn ignition switch "OFF".
 2. Loosen and retighten ground screws.
 3. Check harness continuity between terminal ③ and engine ground.
- Continuity should exist.**
- If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors (F3, E12) (LH) or (F14, F131) (RH)
 - Harness connectors (E19, E102) (LH)
 - Harness connectors (F62, F61)
 - Harness for open or short between rear heated oxygen sensor and engine ground
- If NG, repair open circuit or short to ground or short to power in harness or connectors.

- CHECK COMPONENT**
(Rear heated oxygen sensor).
Refer to "COMPONENT INSPECTION" on next page.



- NG
- Replace rear heated oxygen sensor.

ⓑ

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0137 (-B1), P0157 (-B2)

Rear Heated Oxygen Sensor (Min. Voltage Monitoring) (Rear HO2S) (P0137: Left bank), (P0157: Right bank) (Cont'd)

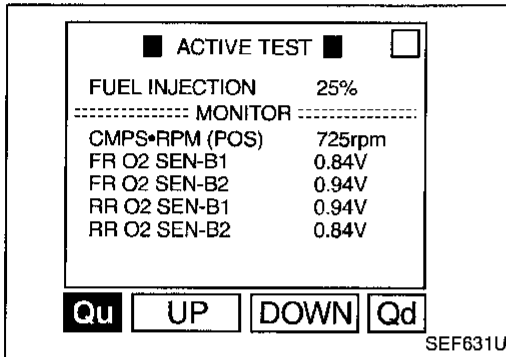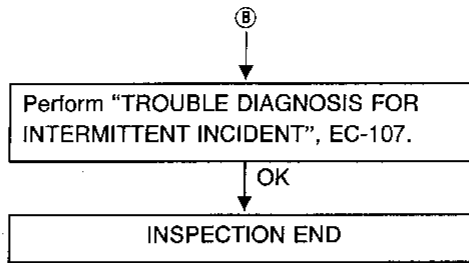



COMPONENT INSPECTION

Rear heated oxygen sensor


- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$. "RR O2 SEN-B1 (-B2)" should be above 0.48V at least once when the "FUEL INJECTION" is +25%. "RR O2 SEN-B1 (-B2)" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.

OR

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals ⓑ (RH), ⓐ (LH) (sensor signal) and 128 (ECM ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times. (depress and release accelerator pedal as soon as possible)
The voltage should be above 0.48V at least once. If the voltage is above 0.48V at step 3, step 4 is not necessary.
- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.
The voltage should be below 0.43V at least once.

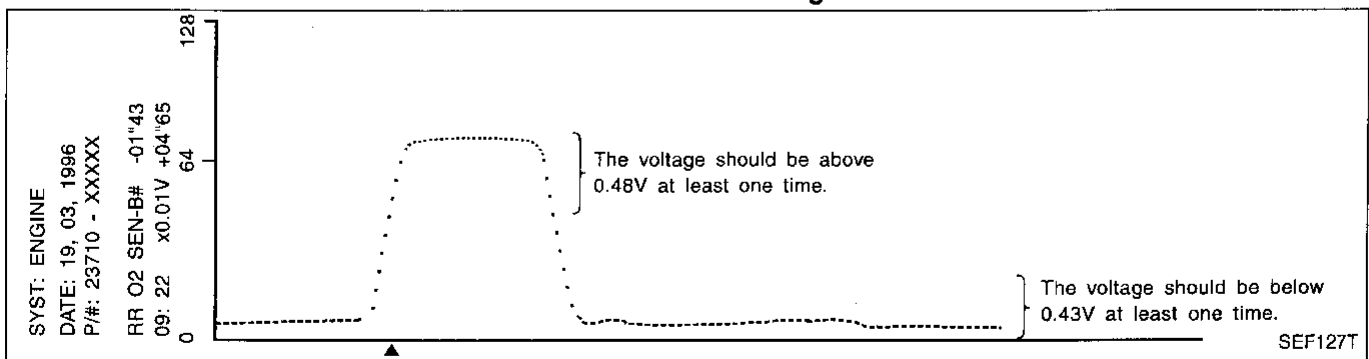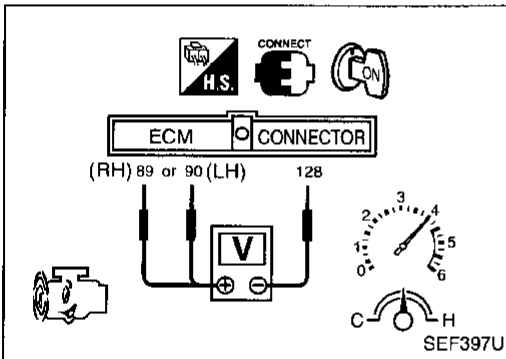

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

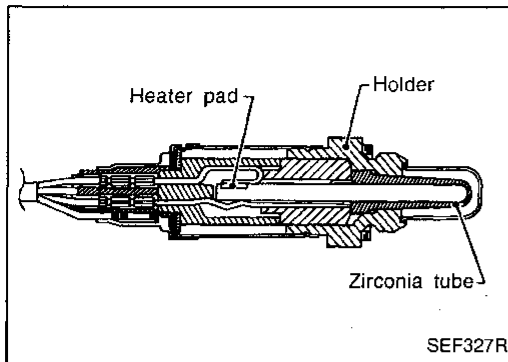

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank)

COMPONENT DESCRIPTION

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Revving engine from idle up to 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
90 (LH)	Y	Rear heated oxygen sensor	Engine is running.	0 - Approximately 1.0V
89 (RH)	W		After warming up to normal operating temperature and revving engine from idle up to 2,000 rpm.	

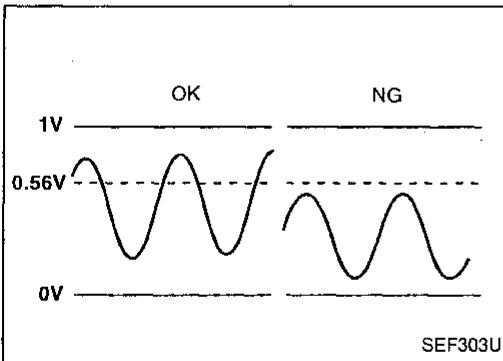

ON BOARD DIAGNOSIS LOGIC

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0138 (-B1) 0510 (Left bank)	<ul style="list-style-type: none"> The maximum voltage from the sensor is not reached to the specified voltage. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Rear heated oxygen sensor Fuel pressure Injectors Intake air leaks
P0158 (-B2) 0313 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- "COMPLETED" will appear on CONSULT screen when all tests "COND1", "COND2" and "COND3" are completed.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Never stop engine during this test. If the engine is stopped, reperform this test from step 2).
- Always perform at temperature of more than -10°C (14°F).



Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "RR O2 SEN-B1 (-B2) P0138 (P0158)" of "RR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- 4) Touch "START".
- 5) Start engine (TCS switch "OFF") and let it idle for at least 30 seconds.
- 6) Rev engine to 2,000 rpm 2 or 3 times quickly under no load.
If "COMPLETED" appears on CONSULT screen, go to step 10).
If "COMPLETED" does not appear on CONSULT screen, go to the following step.
- 7) When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 60 seconds.)

CMPS-RPM (POS): 1,400 - 2,200 rpm
Vehicle speed: 78 - 100 km/h (48 - 62 MPH)
B/FUEL SCHDL: 1 - 4 ms
Selector lever: Suitable position

NOTE:

- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" already appears at "COND2" on CONSULT screen before "Procedure for COND2" is conducted, it is unnecessary to conduct step 8).

Procedure for COND2

- 8) While driving, release accelerator pedal completely with "OD" OFF from the above condition [step 7] until "INCOMPLETE" at "COND2" on CONSULT screen is turned to "COMPLETED". (It will take approximately 4 seconds.)

NOTE:

- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" is already appears at "COND3" on CONSULT screen before "Procedure for COND3" is conducted, it is unnecessary to conduct step 9).

<p>■ RR O2 SEN-B1 P0138 ■ □</p> <p>COND1: OUT OF COND COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 925rpm THRRTL POS SEN 0.46V B/FUEL SCHDL 1.5ms</p>	<p>■ RR O2 SEN-B2 P0158 ■ □</p> <p>COND1: OUT OF COND COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 925rpm THRRTL POS SEN 0.46V B/FUEL SCHDL 1.5ms</p>
--	--

SEF554U

<p>■ RR O2 SEN-B1 P0138 ■ □</p> <p>COND1: TESTING COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>	<p>■ RR O2 SEN-B2 P0158 ■ □</p> <p>COND1: TESTING COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>
---	---

SEF555U

<p>■ RR O2 SEN-B1 P0138 ■ □</p> <p>COND1: COMPLETED COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>	<p>■ RR O2 SEN-B2 P0158 ■ □</p> <p>COND1: COMPLETED COND2: INCOMPLETE COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1975rpm THRRTL POS SEN 1.10V B/FUEL SCHDL 4.4ms</p>
---	---

SEF556U

<p>■ RR O2 SEN-B1 P0138 ■ □</p> <p>COND1: COMPLETED COND2: COMPLETED COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1050rpm THRRTL POS SEN 0.51V B/FUEL SCHDL 1.0ms</p>	<p>■ RR O2 SEN-B2 P0158 ■ □</p> <p>COND1: COMPLETED COND2: COMPLETED COND3: INCOMPLETE</p> <p>===== MONITOR =====</p> <p>CMPS-RPM(POS) 1050rpm THRRTL POS SEN 0.51V B/FUEL SCHDL 1.0ms</p>
--	--

SEF557U

<p>■ RR O2 SEN-B1 P0138 ■ □</p> <p>COMPLETED</p>	<p>■ RR O2 SEN-B2 P0158 ■ □</p> <p>COMPLETED</p>
SELF-DIAG RESULTS	SELF-DIAG RESULTS

SEF559U

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)


Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

Procedure for COND3

- 9) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT screen has turned to "COMPLETED". (It will take maximum of approximately 6 minutes.)

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 10) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-208.

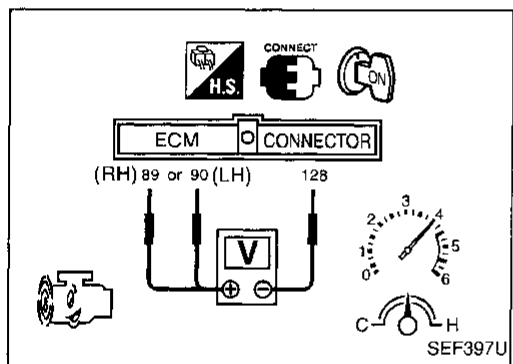

OR OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals ⑧ RH, ⑨ LH (sensor signal) and ⑫ (ECM ground).
- 3) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.

(depress and release accelerator pedal as soon as possible)

The voltage should be above 0.56V at least once during this procedure.

If the voltage can be confirmed in step 3, step 4 is not necessary.

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.

The voltage should be above 0.56V at least once during this procedure.



TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)


LEFT BANK

EC-RRO2LH-01

— : Detectable line for DTC
 — : Non-detectable line for DTC

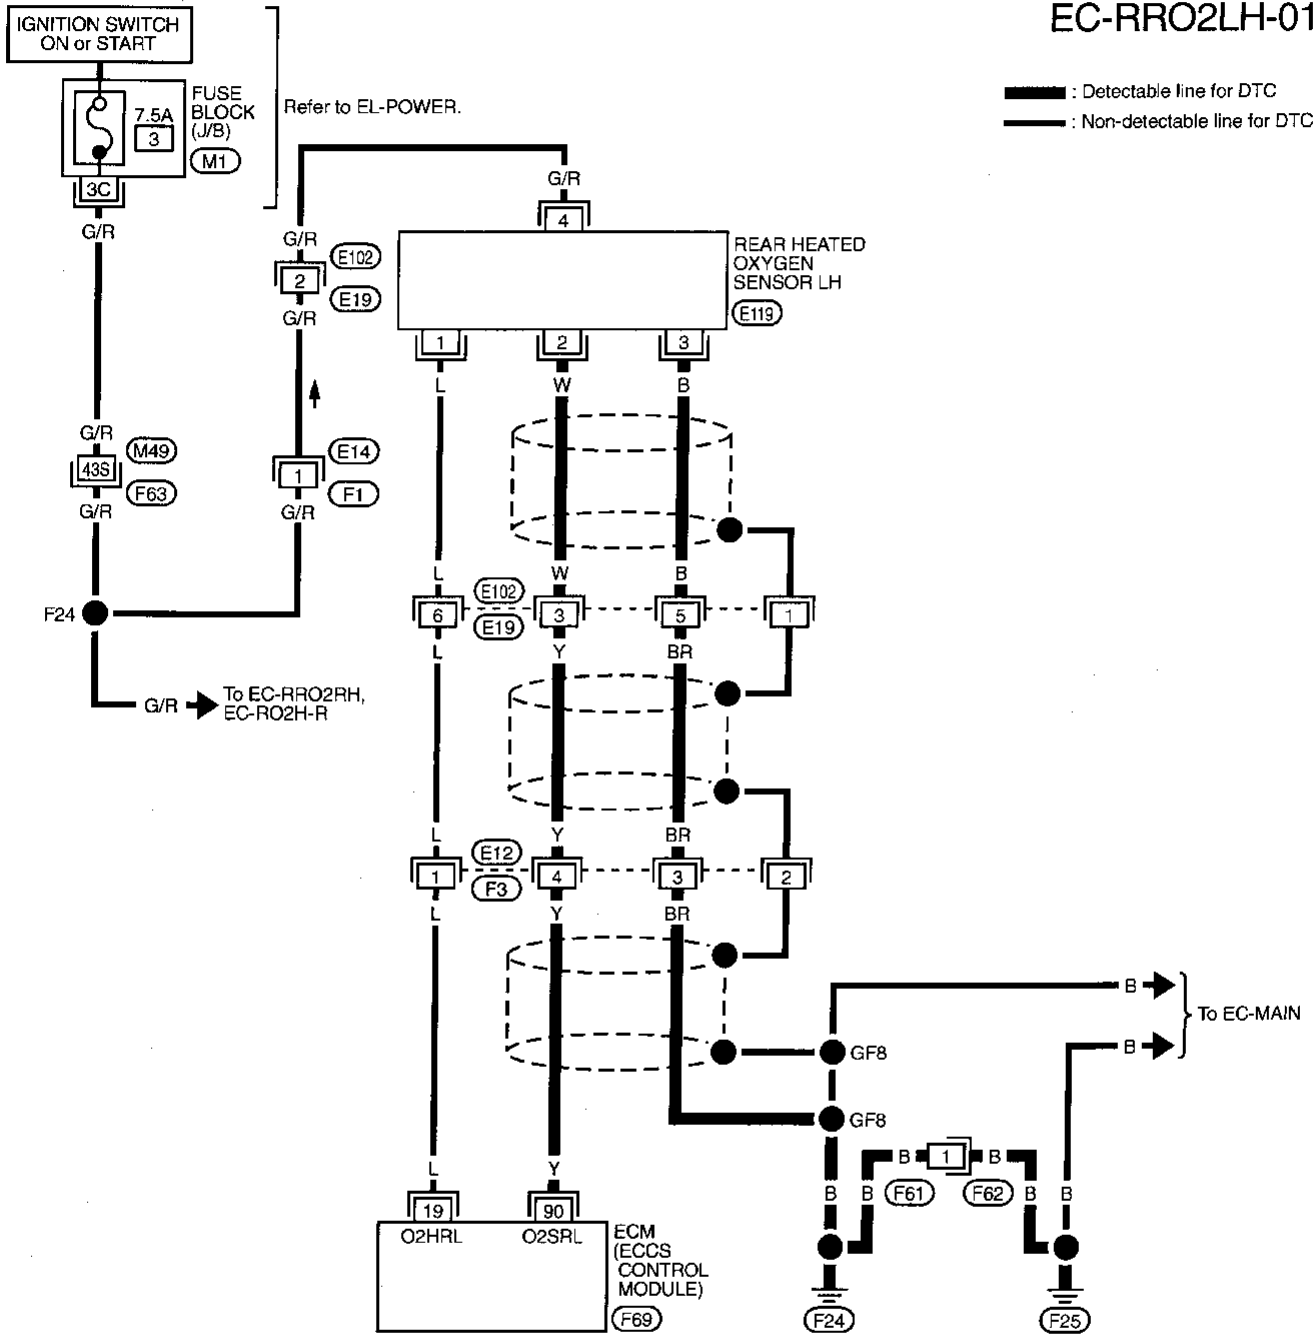

Refer to last page (Foldout page).
 (M49), (F63)
 (M1)

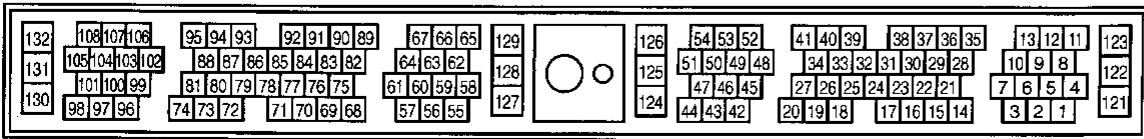

TEC245

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

RIGHT BANK

EC-RRO2H-01

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

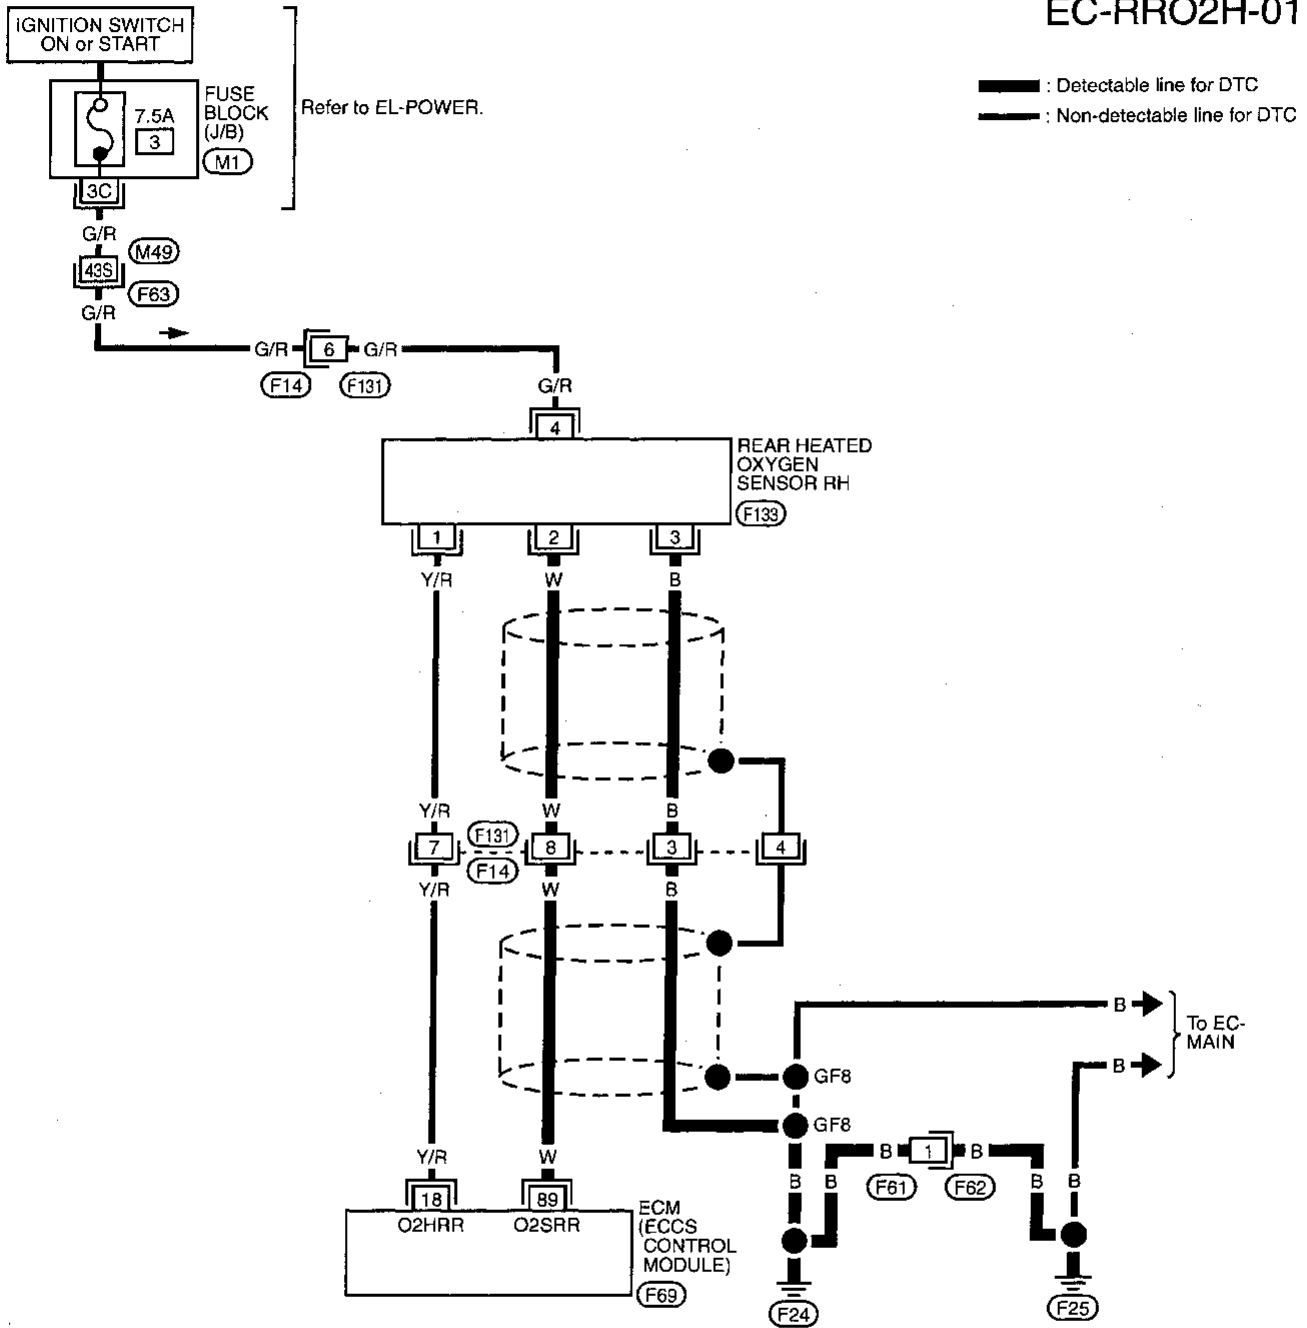

Refer to last page (Foldout page).

(M49), (F63)
(M1)




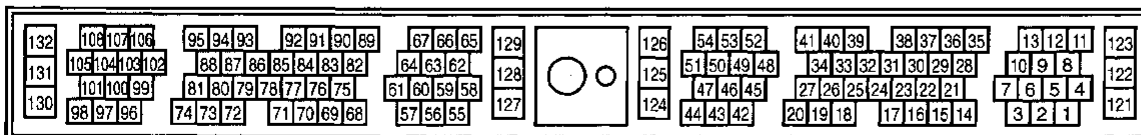


TEC251

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

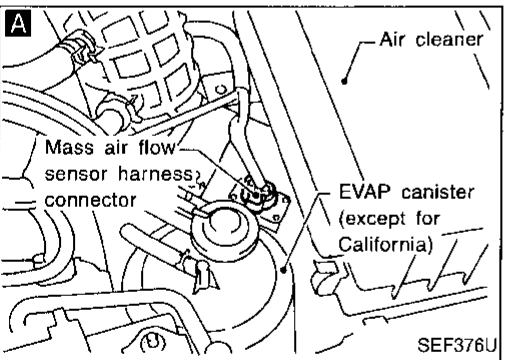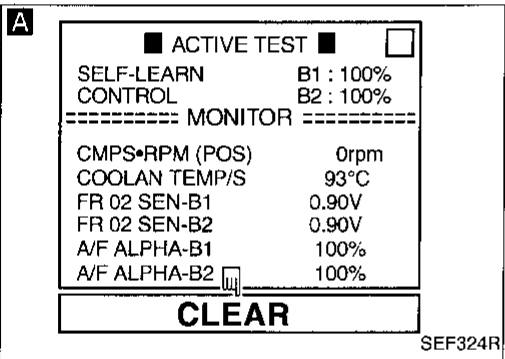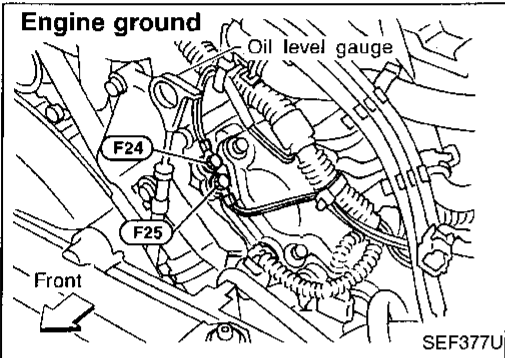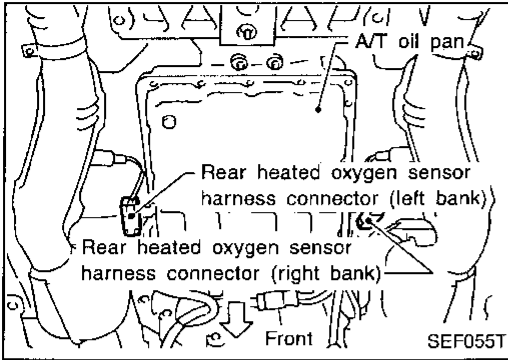

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A

CLEAR THE SELF-LEARNING DATA

1. Start engine and warm it up to normal operating temperature.
 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT.
 3. Clear the self-learning control coefficient by touching "CLEAR".
 4. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs P0171, P0174 detected? Is it difficult to start engine?**
- OR

Yes
Go to "TROUBLE DIAGNOSIS FOR DTC P0171, P0172", EC-230, 237.


A

2. Turn ignition switch "OFF".
 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.
 4. Stop engine and reconnect mass air flow sensor harness connector.
 5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
 7. Run engine for at least 10 minutes at idle speed.
- Are the 1st trip DTCs 0115, 0210 detected? Is it difficult to start engine?**


No
A

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

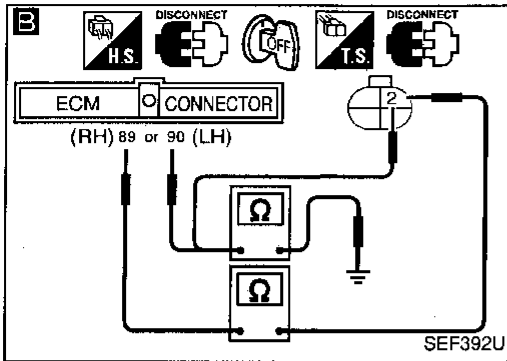

SEF392U

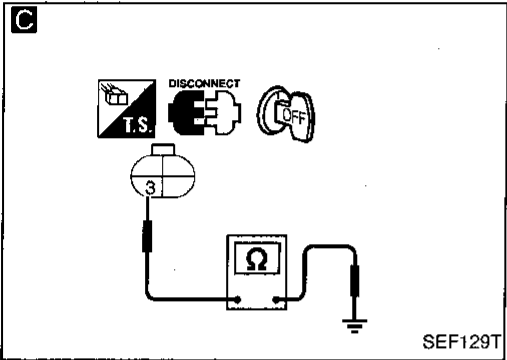

SEF129T

- B**
- CHECK INPUT SIGNAL CIRCUIT.**
1. Turn ignition switch "OFF".
 2. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.
 3. Check harness continuity between ECM terminals and sensor.

P code	Terminals		Bank
	ECM	Sensor	
P0138	90	2	LH
P0158	89	2	RH

- Continuity should exist.**
4. Check harness continuity between ECM and sensor or ground terminals.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0138	90	2 or ground	LH
P0158	89	2 or ground	RH

- Continuity should not exist.**
- If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors
 - F3, ○ E12 (LH) or ○ F14, ○ F131 (RH)
 - Harness connectors
 - E19, ○ E102 (LH)
- If OK, check harness for short to ground and short to power.

- OK
- C**
- CHECK GROUND CIRCUIT.**
1. Turn ignition switch "OFF".
 2. Loosen and retighten ground screws.
 3. Check harness continuity between terminal ③ and engine ground.
- Continuity should exist.**
- If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors
 - F3, ○ E12 (LH) or ○ F14, ○ F131 (RH)
 - Harness connectors
 - E19, ○ E102 (LH)
 - Harness connectors
 - F62, ○ F61
- Harness for open or short between rear heated oxygen sensor and engine ground
- If OK, check harness for short to ground and short to power.

OK

CHECK COMPONENT (Rear heated oxygen sensor). Refer to "COMPONENT INSPECTION" on next page.

NG

Replace rear heated oxygen sensor.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0138 (-B1), P0158 (-B2)

Rear Heated Oxygen Sensor (Max. Voltage Monitoring) (Rear HO2S) (P0138: Left bank), (P0158: Right bank) (Cont'd)

COMPONENT INSPECTION

Rear heated oxygen sensor

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.
 "RR O2 SEN-B1 (-B2)" should be above 0.48V at least once when the "FUEL INJECTION" is +25%.
 "RR O2 SEN-B1 (-B2)" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals ⑧⑨ (RH), ⑧⑩ (LH) (sensor signal) and ⑫⑮ (ECM ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
 (depress and release accelerator pedal as soon as possible)
The voltage should be above 0.48V at least once. If the voltage is above 0.48V at step 3, step 4 is not necessary.
- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.
The voltage should be below 0.43V at least once.

■ ACTIVE TEST ■ □


FUEL INJECTION	25%
----- MONITOR -----	
CMPS•RPM (POS)	725rpm
FR O2 SEN-B1	0.84V
FR O2 SEN-B2	0.94V
RR O2 SEN-B1	0.94V
RR O2 SEN-B2	0.84V

Qu
UP
DOWN
Qd

SEF631U

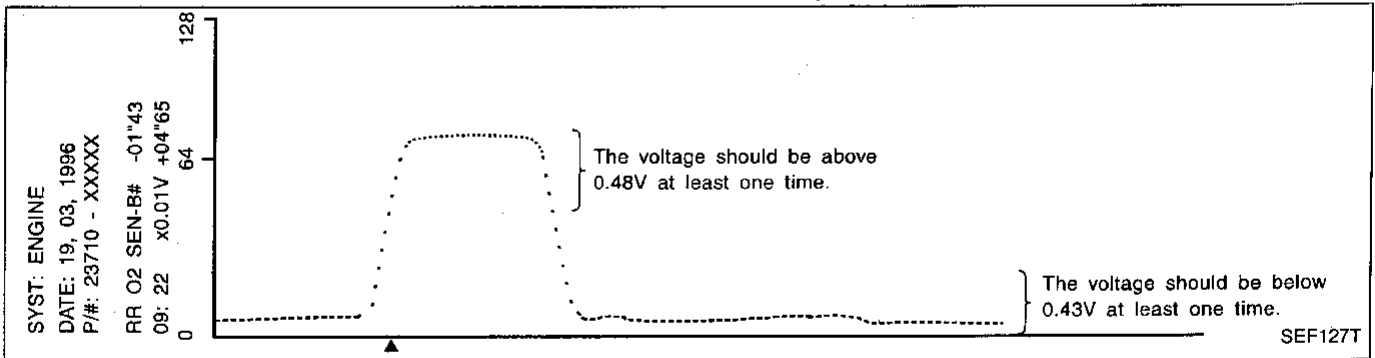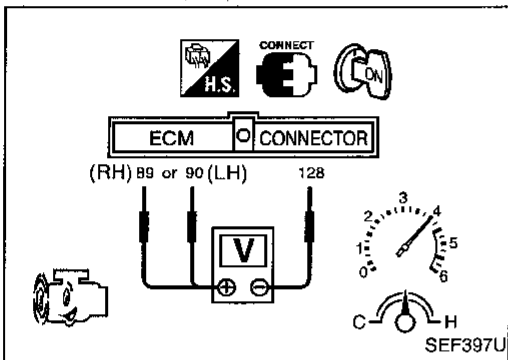

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

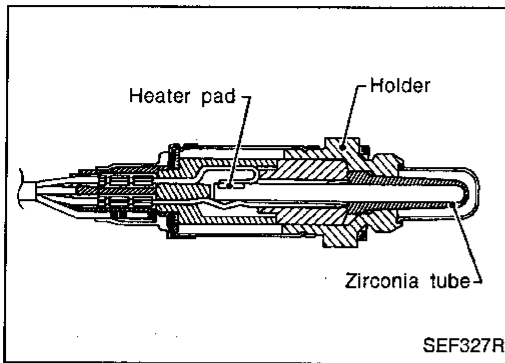

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank)

COMPONENT DESCRIPTION

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas on left and right bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the each rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Revving engine from idle up to 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
89 (RH)	W	Rear heated oxygen sensors	Engine is running.	0 - Approximately 1.0V
90 (LH)	Y		After warming up to normal operating temperature and revving engine from idle up to 2,000 rpm.	

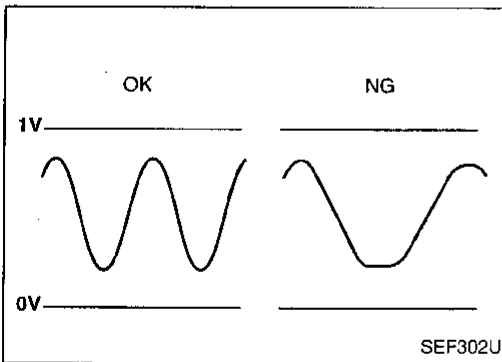

ON BOARD DIAGNOSIS LOGIC

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the switching response of the sensor's voltage is faster than specified during the various driving condition such as fuel-cut.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0139 0707 (Left bank)	<ul style="list-style-type: none"> It takes more time for the sensor to respond between rich and lean than the specified time. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Rear heated oxygen sensor Fuel pressure Injectors Intake air leaks
P0159 0708 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- "COMPLETED" will appear on CONSULT screen when all tests "COND1", "COND2" and "COND3" are completed.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Never stop engine during this test. If the engine is stopped, reperform this test from step 2).
- Always perform at temperature of more than -10°C (14°F).



Procedure for COND1

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "RR O2 SEN-B1 (-B2) P0139 (P0159)" of "REAR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT.
- 4) Touch "START".
- 5) Start engine (TCS switch "OFF") and let it idle for at least 30 seconds.
- 6) Rev engine up to 2,000 rpm 2 or 3 times quickly under no load.
If "COMPLETED" appears on CONSULT screen, go to the following step.
- 7) When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 60 seconds.)

CMPS-RPM (POS): 1,400 - 2,200 rpm
Vehicle speed: 78 - 100 km/h (48 - 62 MPH)
B/FUEL SCHDL: 1.0 - 4.5 ms
Selector lever: Suitable position

NOTE






- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" already appears at "COND2" on CONSULT screen before "Procedure for COND2" is conducted, it is unnecessary to conduct step 8).

Procedure for COND2

- 8) While driving, release accelerator pedal completely with "OD" OFF from the above condition [step 7)] until "INCOMPLETE" at "COND2" on CONSULT screen has turned to "COMPLETED". (It will take approximately 4 seconds.)

NOTE:

- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- If "COMPLETED" already appears at "COND3" on CONSULT screen before "Procedure for COND3" is conducted, it is unnecessary to conduct step 9).

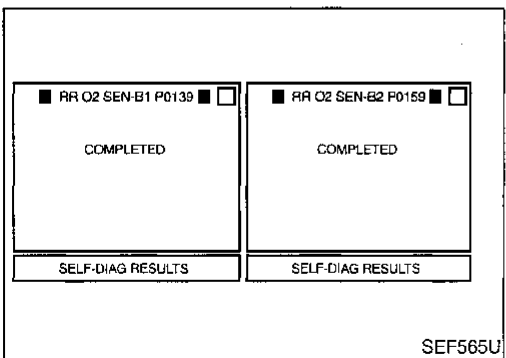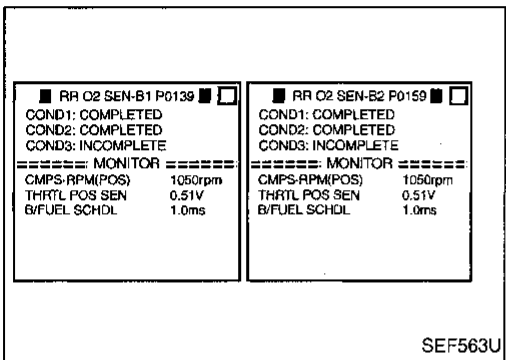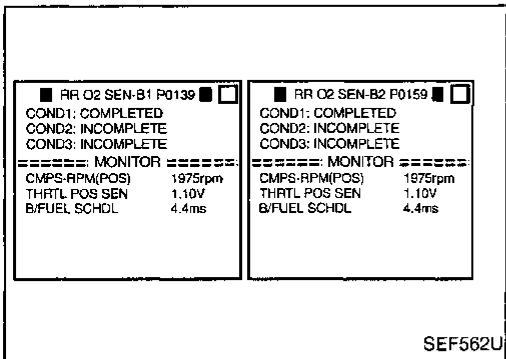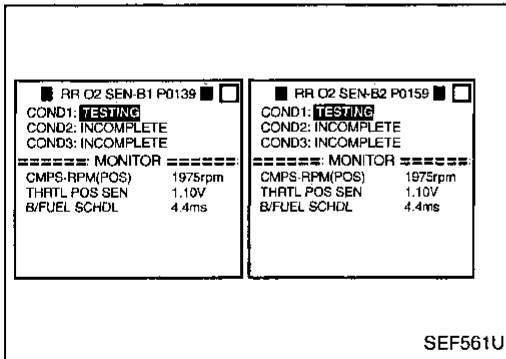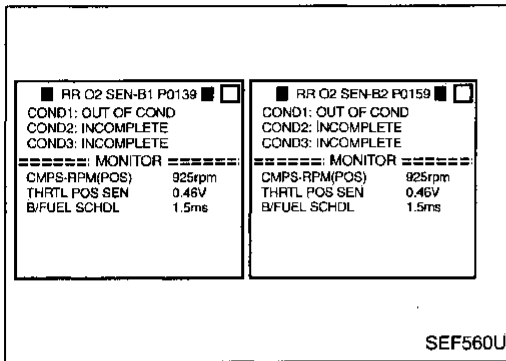

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)


Procedure for COND3

- 9) Stop vehicle and let it idle until "INCOMPLETE" of "COND3" on CONSULT screen has turned to "COMPLETED". (It will take a maximum of approximately 6 minutes.)

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 10) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".

If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-216.

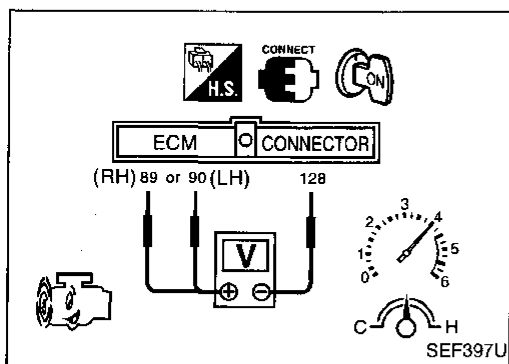

OR OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals 89 RH, 90 LH (sensor signal) and 128 (ECM ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times. (depress and release accelerator pedal as soon as possible)

The voltage should be changed at more than 0.06V for 1 second during this procedure.

If the voltage can be confirmed in step 3, step 4 is not necessary.

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.



The voltage should be changed at more than 0.06V for 1 second during this procedure.

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)


LEFT BANK

EC-RRO2LH-01

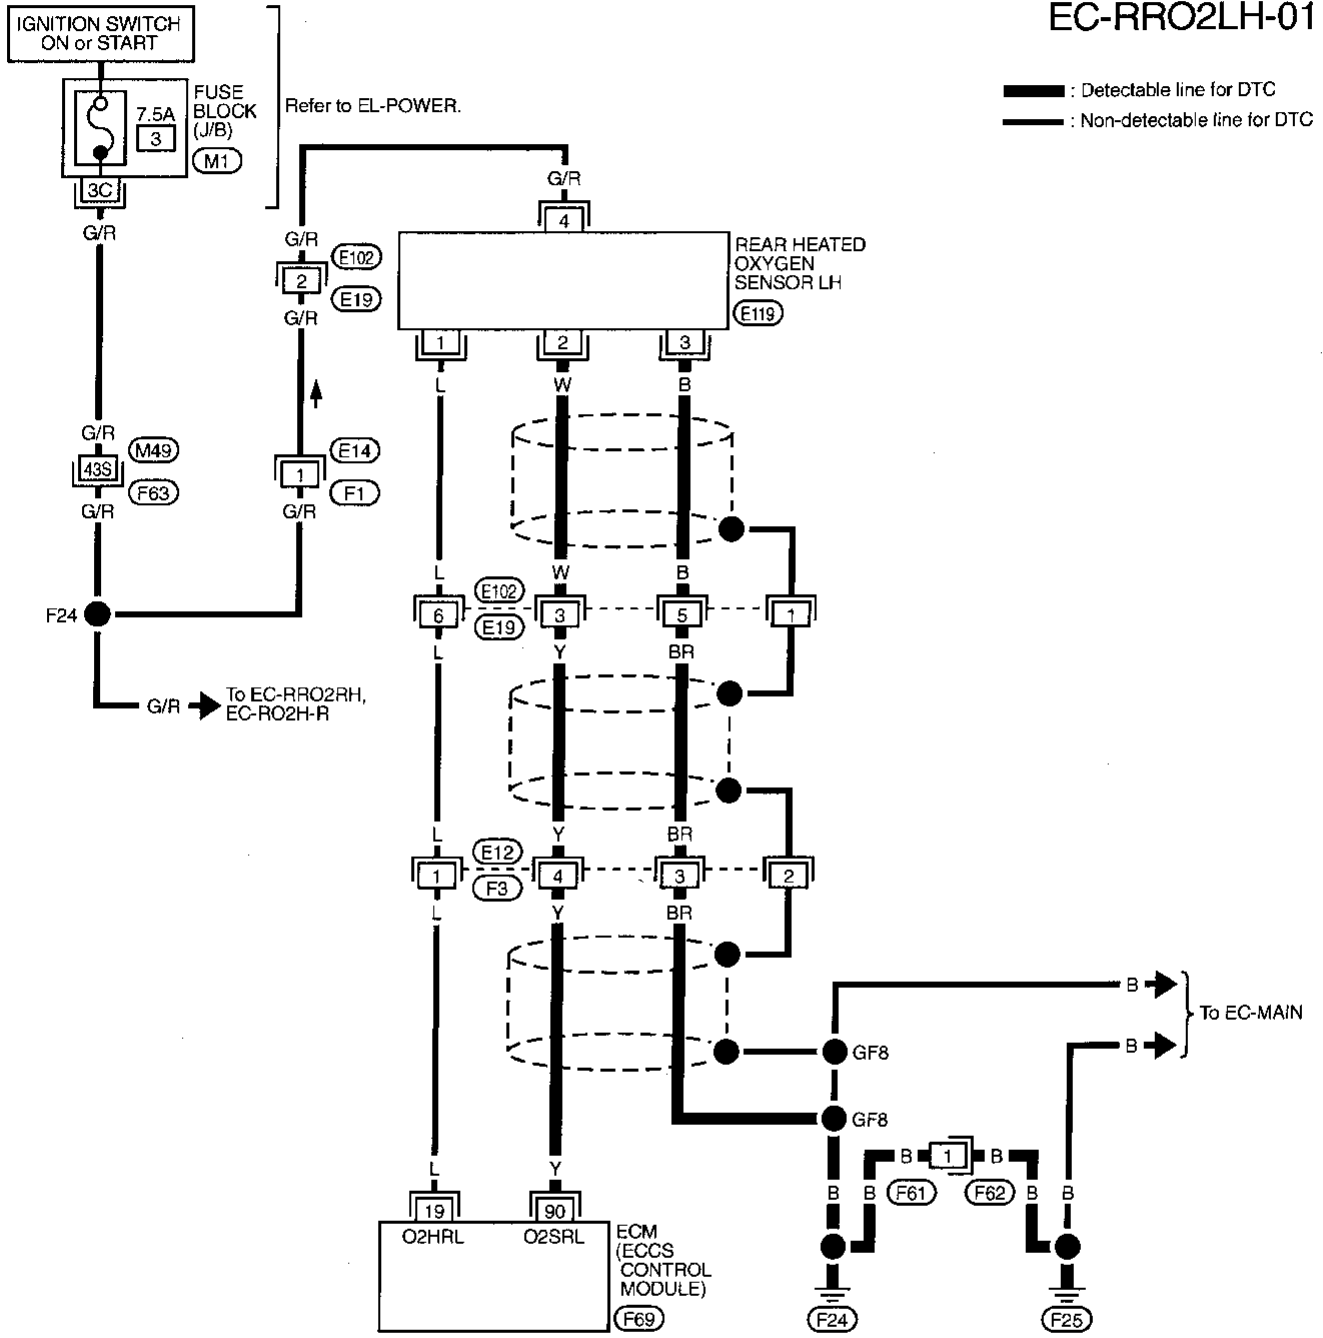

Refer to last page (Foldout page).

(M49), (F63)
(M1)

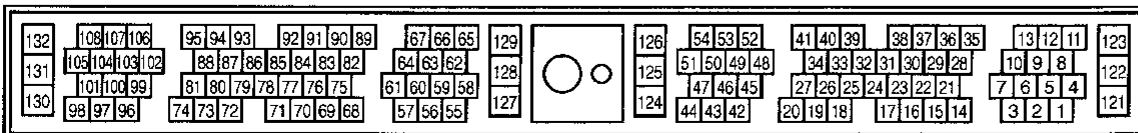


TEC245

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)


RIGHT BANK

EC-RR02H-01

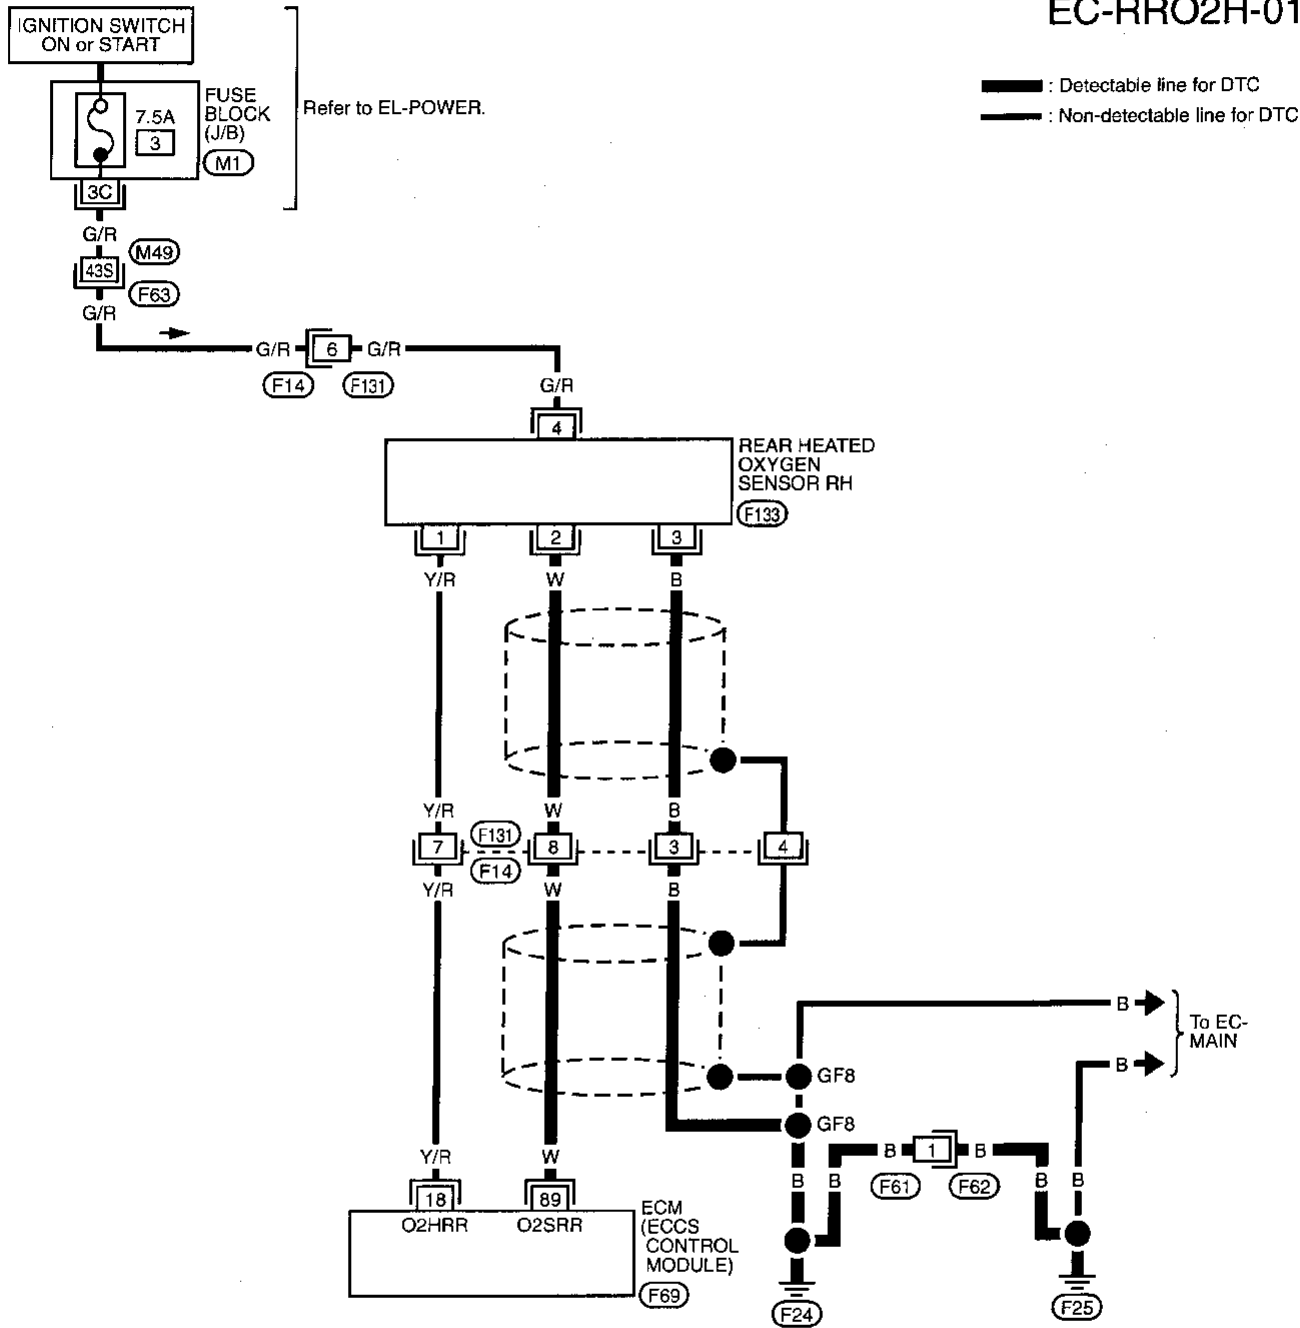

Refer to last page (Foldout page).





(M49) (F63)
(M1)

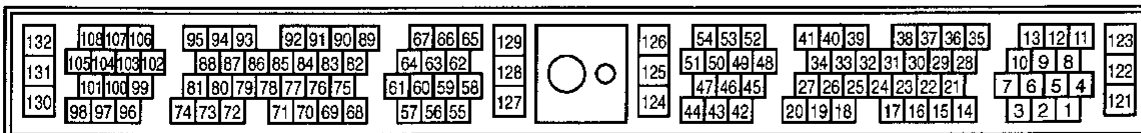

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)

Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

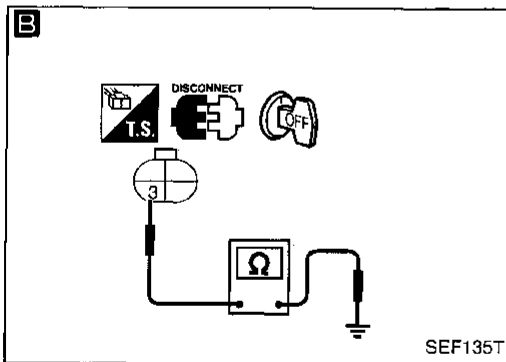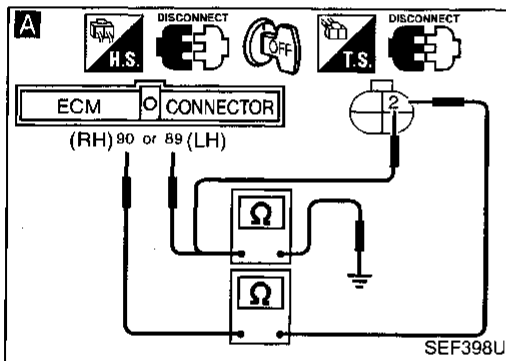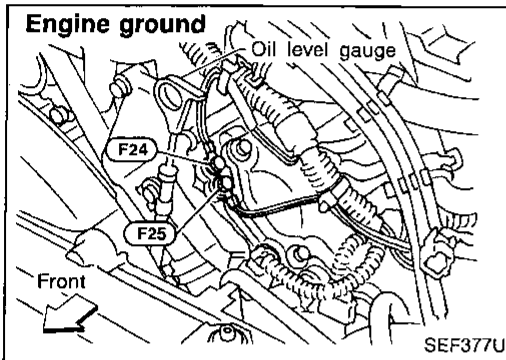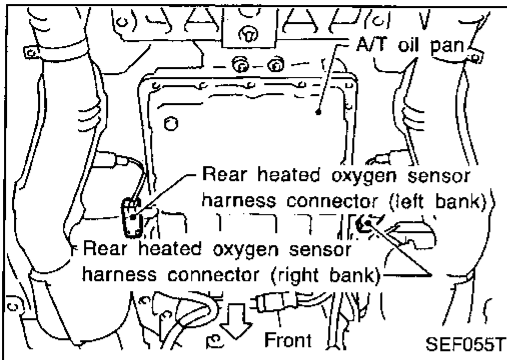

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A CHECK INPUT SIGNAL CIRCUIT.

1. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.
2. Check harness continuity between ECM and sensor terminals.

P code	Terminals		Bank
	ECM	Sensor	
P0139	90	2	LH
P0159	89	2	RH

- Continuity should exist.**
3. Check harness continuity between ECM sensor or ground terminals.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0139	90	2 or ground	LH
P0159	89	2 or ground	RH

- Continuity should not exist.**
- If OK, check harness for short to ground and short to power.

B CHECK GROUND CIRCUIT.

- Check harness continuity between terminal ③ and engine ground.
- Continuity should exist.**
- If OK, check harness for short to ground and short to power.

OK

CHECK COMPONENT (Rear heated oxygen sensor). Refer to "COMPONENT INSPECTION" on next page.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

OK

INSPECTION END

NG

Check the following.

- Harness connectors
 - F3 , ○ E12 (LH) or
 - F14 , ○ F131 (RH)
- Harness connectors
 - E19 , ○ E102 (LH)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

NG

Check the following.

- Harness connectors
 - F14 , ○ F131 (LH) or
 - F14 , ○ F131 (RH)
- Harness connectors
 - E19 , ○ E102 (LH)
 - F62 , ○ F61
- Harness for open or short between rear heated oxygen sensor and engine ground

If NG, repair open circuit or short to ground or short to power in harness or connectors.

NG

Replace rear heated oxygen sensor.

TROUBLE DIAGNOSIS FOR DTC P0139 (-B1), P0159 (-B2)


Rear Heated Oxygen Sensor (Response Monitoring) (Rear HO2S) (P0139: Left bank), (P0159: Right bank) (Cont'd)

COMPONENT INSPECTION

Rear heated oxygen sensor


<input checked="" type="checkbox"/> ACTIVE TEST <input type="checkbox"/>	
FUEL INJECTION	25%
----- MONITOR -----	
CMPS•RPM (POS)	725rpm
FR O2 SEN-B1	0.84V
FR O2 SEN-B2	0.94V
RR O2 SEN-B1	0.94V
RR O2 SEN-B2	0.84V

SEF631U

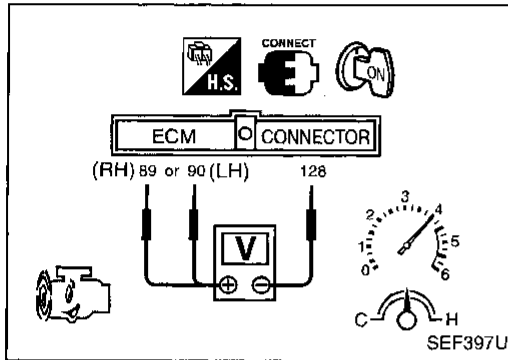


- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.
 "RR O2 SEN-B1 (-B2)" should be above 0.48V at least once when the "FUEL INJECTION" is +25%.
 "RR O2 SEN-B1 (-B2)" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.

- OR
- 1) Start engine and warm it up to normal operating temperature.
 - 2) Set voltmeter probes between ECM terminals ⑧ (RH), ⑩ (LH) (sensor signal) and ⑫ (ECM ground).
 - 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
 (depress and release accelerator pedal as soon as possible)
The voltage should be above 0.48V at least once. If the voltage is above 0.48V at step 3, step 4 is not necessary.
 - 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.
The voltage should be below 0.43V at least once.

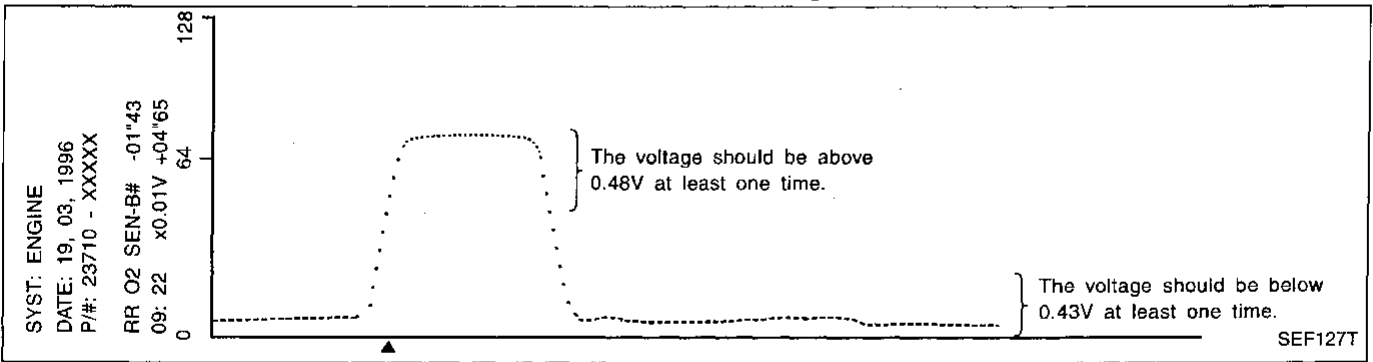

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

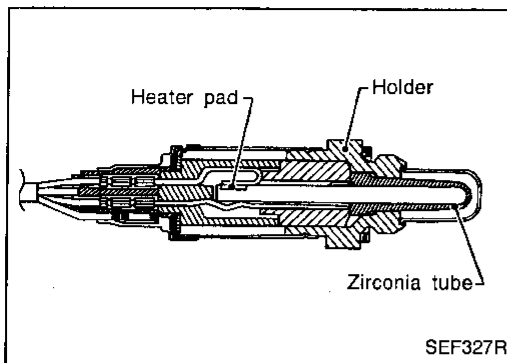

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank)

COMPONENT DESCRIPTION

The rear heated oxygen sensors (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas on left and right bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the each rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	● Engine: After warming up Revsing engine from idle up to 2,000 rpm	0 - 0.3V ↔ 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
89 (RH)	W	Rear heated oxygen sensors	Engine is running.	0 - Approximately 1.0V
90 (LH)	Y		After warming up to normal operating temperature and revving engine from idle up to 2,000 rpm.	

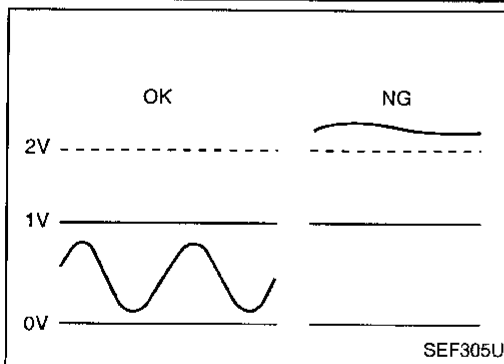

ON BOARD DIAGNOSIS LOGIC

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.


Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0140 0512 (Left bank)	● An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open.) ● Rear heated oxygen sensor
P0160 0315 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank) (Cont'd)

☆ MONITOR	☆ NO FAIL <input type="checkbox"/>
CMPS•RPM(POS)	2040rpm
COOLAN TEMP/S	82°C
VHCL SPEED SE	76km/h
B/FUEL SCHDL	2.5ms
RECORD	

SEF635U

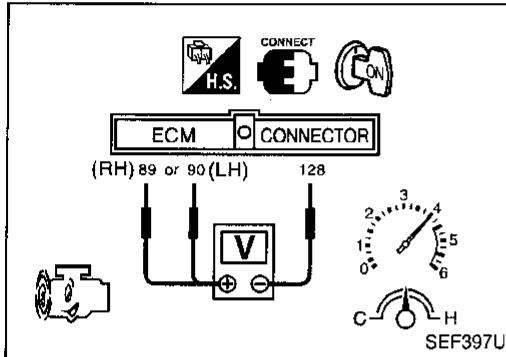

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Meet the following conditions once.
CMPS-RPM (POS): 1,400 - 2,200 rpm
VHCL SPEED SE: 78 - 100 km/h (48 - 62 MPH)
B/FUEL SCHDL: 1.0 - 4.5 ms
COOLAN TEMP/S: 70 - 100°C (158 - 212°F)
Selector lever: Suitable position
- 3) Stop vehicle with engine running.

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals ⑧ RH, ⑨ LH (sensor signal) and ⑫ (ECM ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

The voltage should be below 2V during this procedure.



TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank) (Cont'd)

LEFT BANK


EC-RRO2LH-01

— : Detectable line for DTC
— : Non-detectable line for DTC

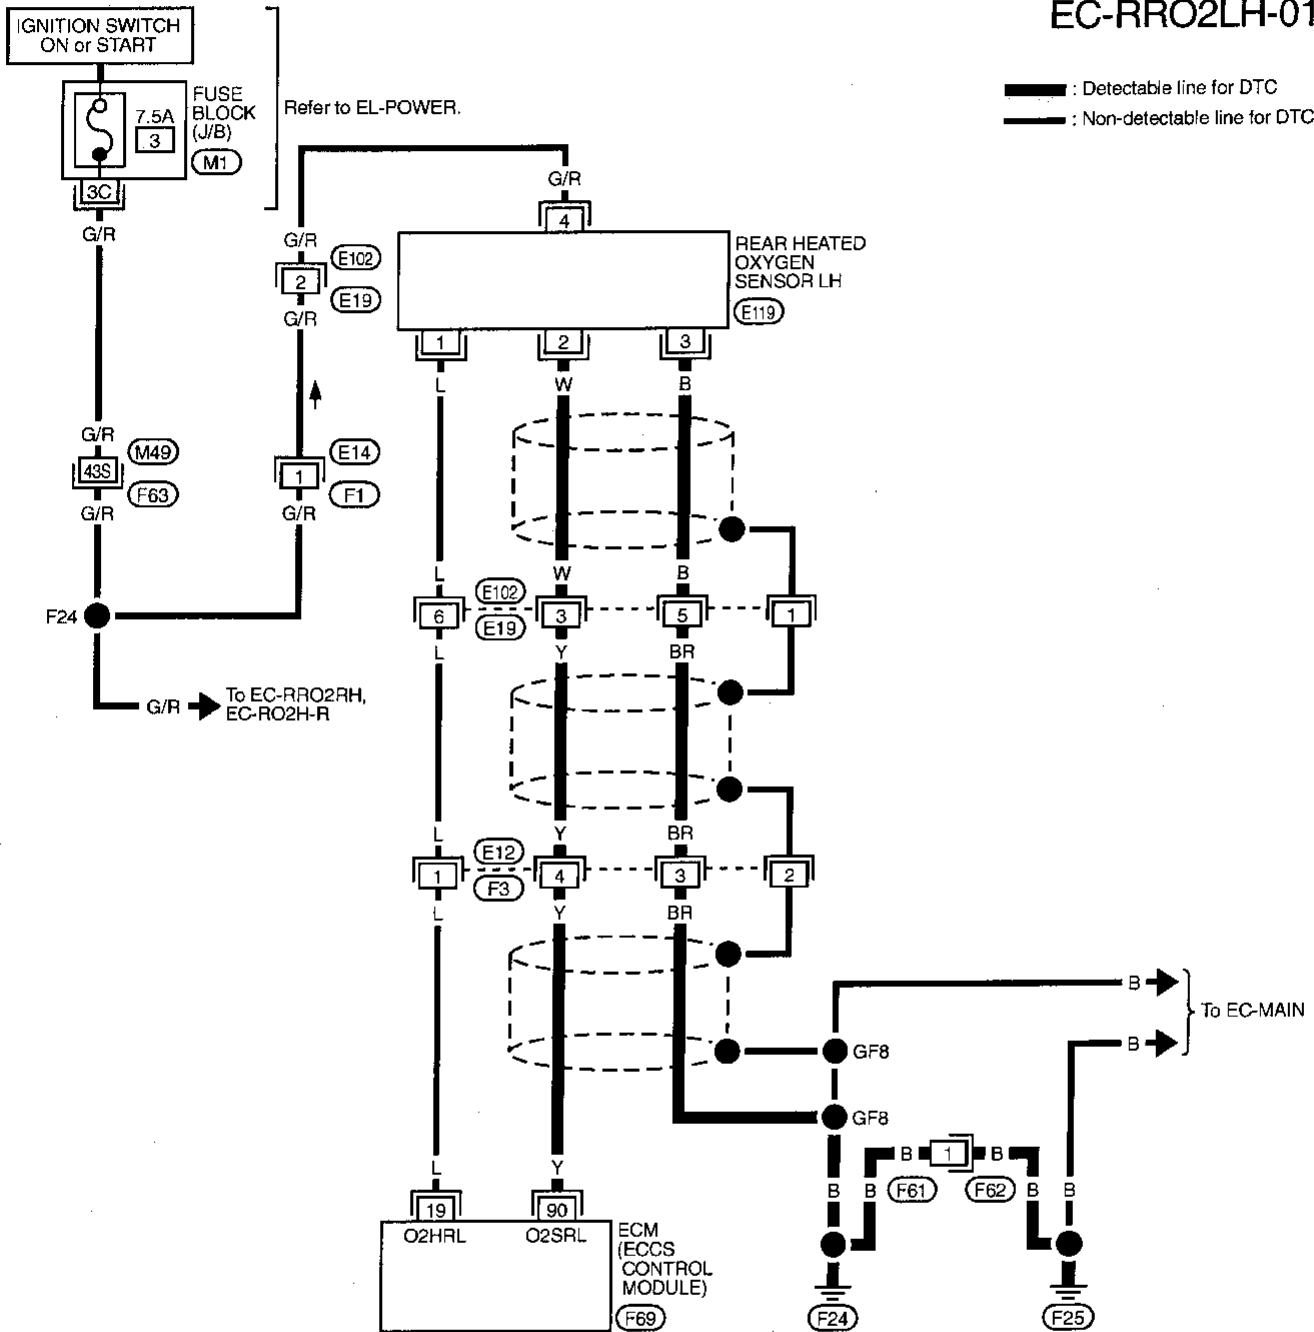

Refer to last page (Foldout page).

(M49), (F63)
(M1)

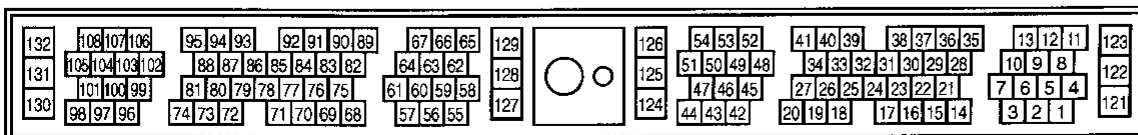

TEC245


TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank) (Cont'd)

RIGHT BANK


EC-RR02H-01

: Detectable line for DTC
 : Non-detectable line for DTC

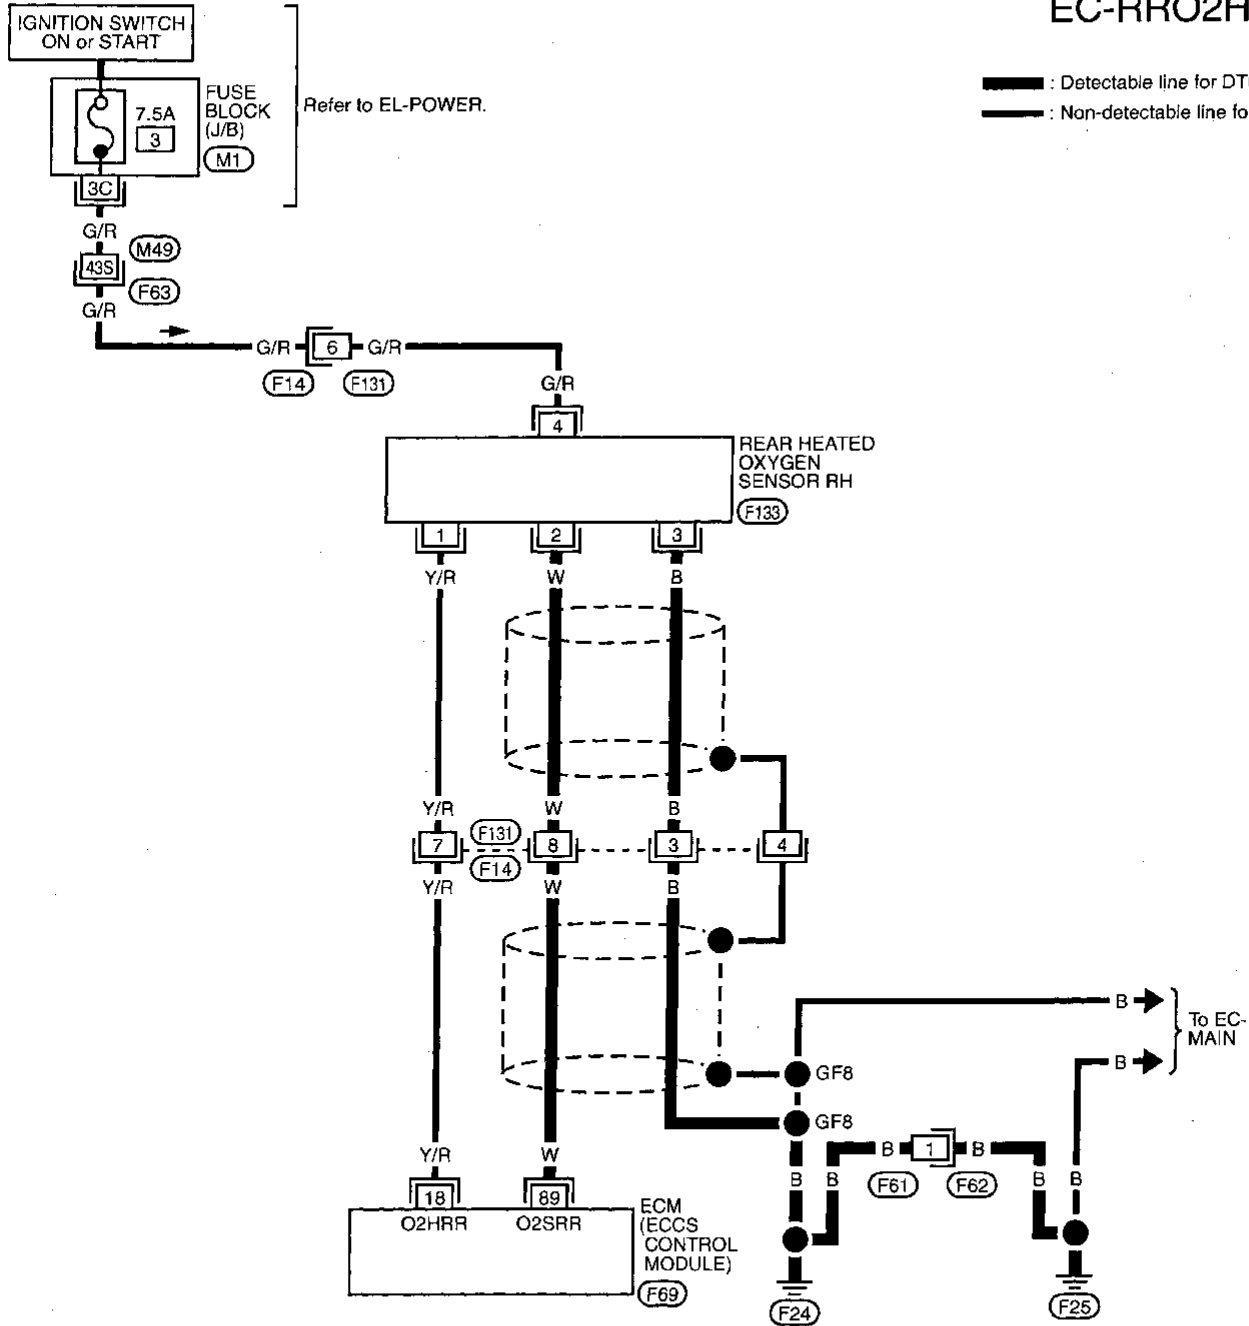

Refer to last page (Foldout page).

(M49) (F63)
(M1)




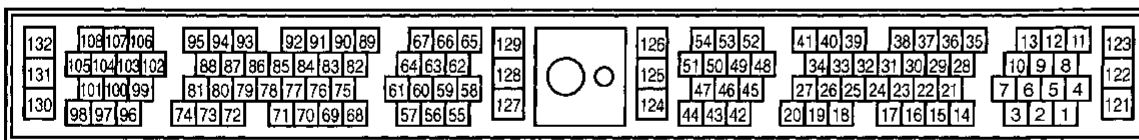


TEC251

TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

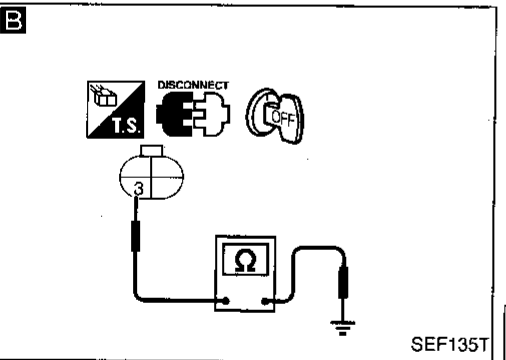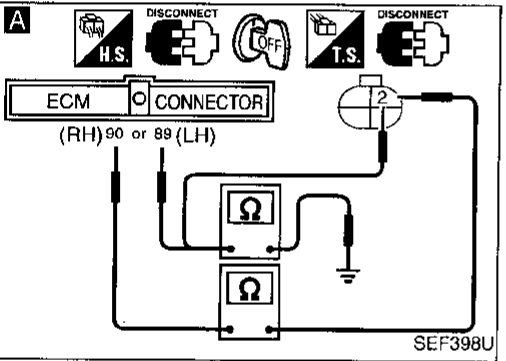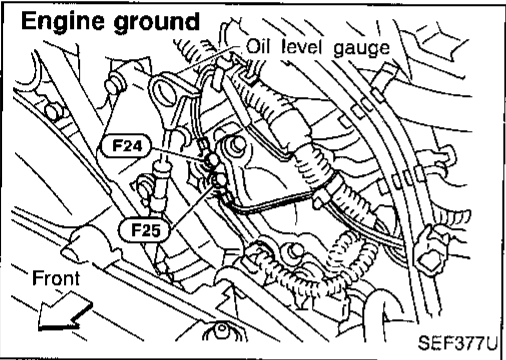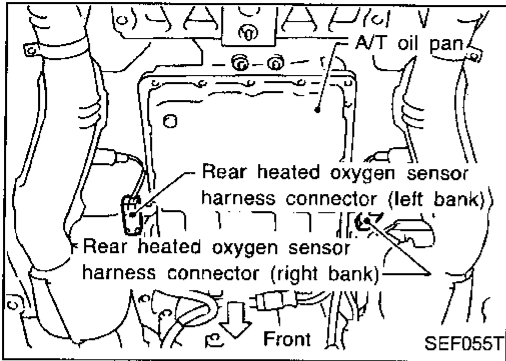

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A

CHECK INPUT SIGNAL CIRCUIT.

1. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.
2. Check harness continuity between ECM and sensor terminals.

P code	Terminals		Bank
	ECM	Sensor	
P0140	90	2	LH
P0160	89	2	RH

- Continuity should exist.**
3. Check harness continuity between ECM sensor or ground terminals.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0140	90	2 or ground	LH
P0160	89	2 or ground	RH

Continuity should not exist.
If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connectors (F14, F131) (LH) or (F14, F131) (RH)
- Harness connectors (E19, E102) (LH)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

B

- CHECK GROUND CIRCUIT.**
Check harness continuity between terminal ③ and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connectors (F14, F131) (LH) or (F14, F131) (RH)
- Harness connectors (E19, E102) (LH)
- Harness connectors (F62, F61)
- Harness for open or short between rear heated oxygen sensor and engine ground

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

CHECK COMPONENT

- (Rear heated oxygen sensor).
1. Turn ignition switch "OFF".
 2. Disconnect sensor harness connector and check for water.
Water should not exist.
If OK, go to step 3.
 3. Check rear heated oxygen sensor. Refer to "COMPONENT INSPECTION" on next page.

NG

Replace rear heated oxygen sensor.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

OK

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0140 (-B1), P0160 (-B2)

Rear Heated Oxygen Sensor (High voltage) (Rear HO2S) (P0140: Left bank), (P0160: Right bank) (Cont'd)

COMPONENT INSPECTION

Rear heated oxygen sensor




- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT.
- 3) Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.
"RR O2 SEN-B1 (-B2)" should be above 0.48V at least once when the "FUEL INJECTION" is +25%.
"RR O2 SEN-B1 (-B2)" should be below 0.43V at least once when the "FUEL INJECTION" is -25%.

OR

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminals 89 (RH), 90 (LH) (sensor signal) and (128) (ECM ground).
- 3) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

The voltage should be above 0.48V at least once.
If the voltage is above 0.48V at step 3, step 4 is not necessary.

- 4) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position.
The voltage should be below 0.43V at least once.

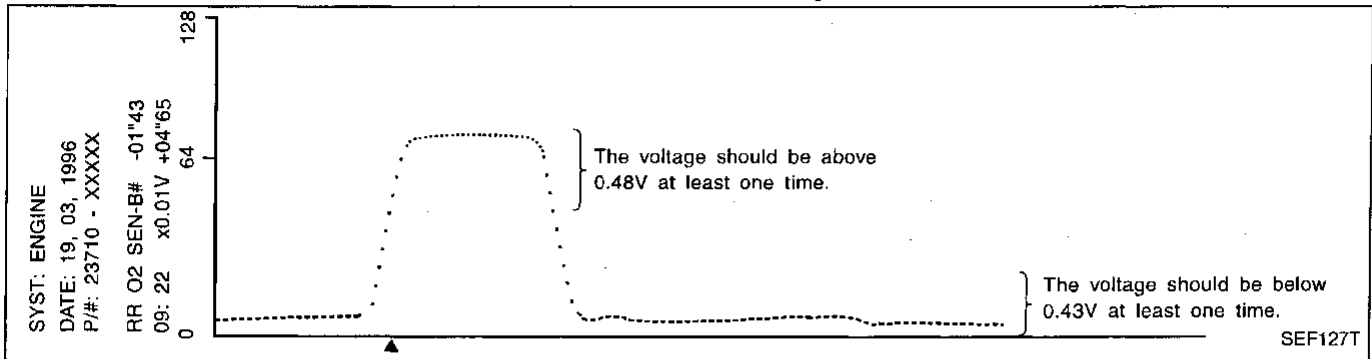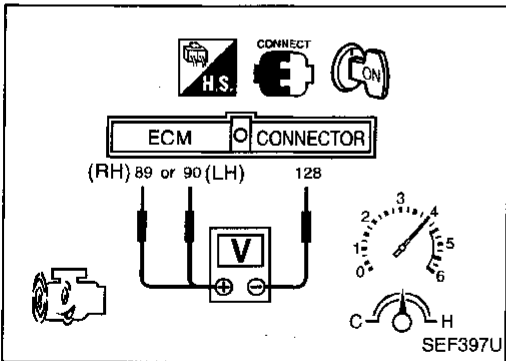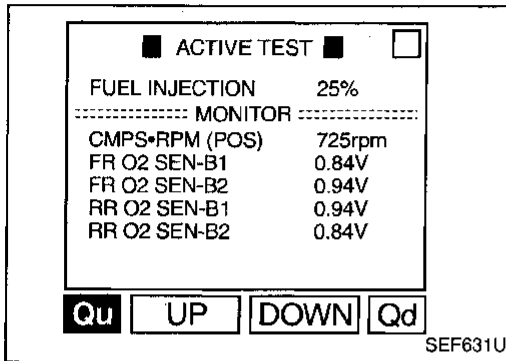


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)

Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank)

SYSTEM DESCRIPTION

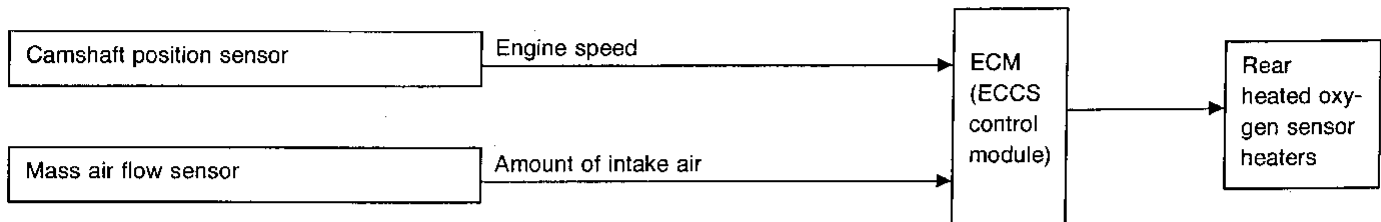

The ECM performs ON/OFF control of the rear heated oxygen sensor heaters corresponding to the engine speed.

OPERATION

Engine speed rpm	Rear heated oxygen sensor heaters
Above 3,600	OFF
Below 3,600	ON

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
O2 SEN HTR-B1	• Engine speed: Idle	ON
O2 SEN HTR-B2	• Engine speed: Above 3,600 rpm	OFF

ECM TERMINALS AND REFERENCE VALUE


Specification data are reference values, and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
18 (RH)	Y/R	Rear heated oxygen sensor heaters	Engine is running. └ Engine speed is below 3,600 rpm.	0 - 0.5V
19 (LH)	L		Engine is running. └ Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0141 0902 (Left bank)	<ul style="list-style-type: none"> The current amperage in the rear heated oxygen sensor heater circuit is out of the normal range. (The improper voltage drop signal is sent to ECM through the rear heated oxygen sensor heater.) 	<ul style="list-style-type: none"> Harness or connectors (The rear heated oxygen sensor heater circuit is open or shorted.) Rear heated oxygen sensor heater
P0161 1002 (Right bank)		

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)

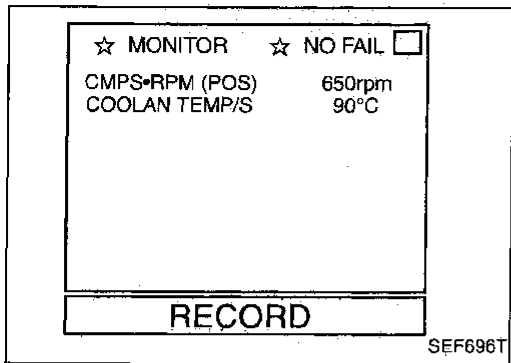

Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank) (Cont'd)


DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE


NOTE:


If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V.

- 
 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 6 seconds at idle speed.

- OR
- 
 1) Start engine and run it for at least 6 seconds at idle speed.
- 2) Select "MODE 3" with GST.

- OR
- 
 1) Start engine and run it for at least 6 seconds in idle condition.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

When using GST, "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" should be performed twice as much as when using CONSULT or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT or ECM (Diagnostic Test Mode II) is recommended.



GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)

Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank) (Cont'd)


LEFT BANK

EC-RO2H-L-01

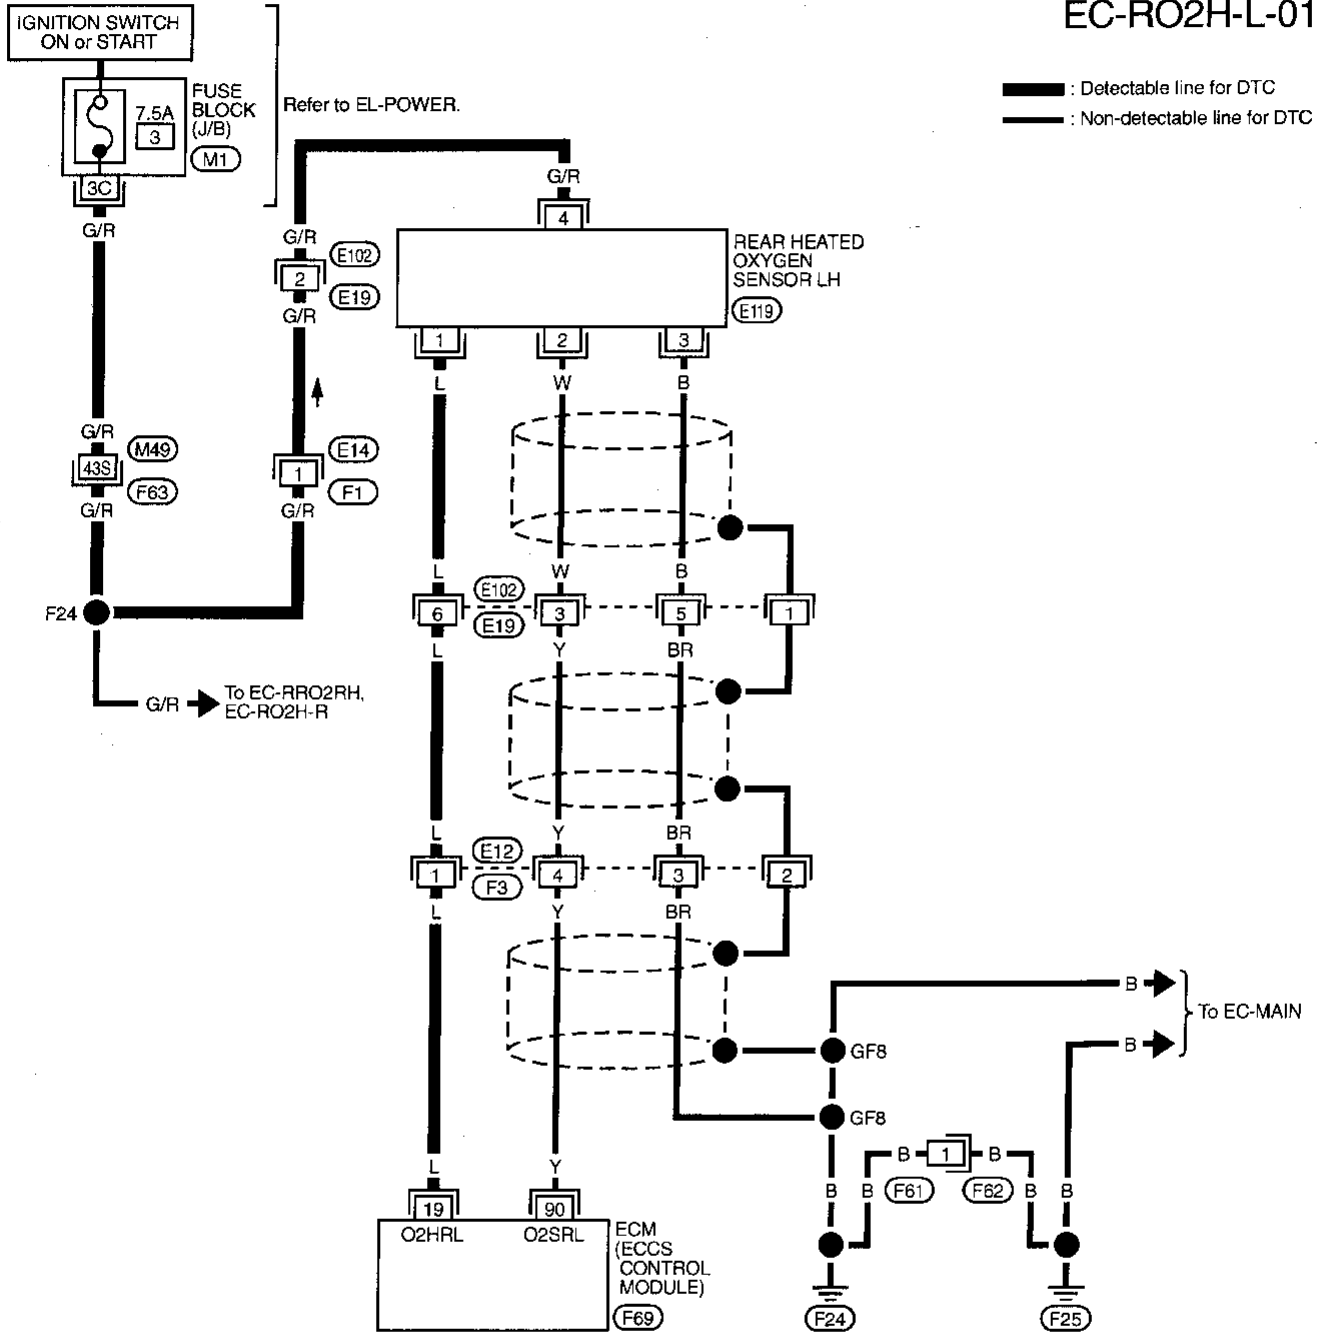

Refer to last page (Foldout page).

(M49), (F63)
(M1)

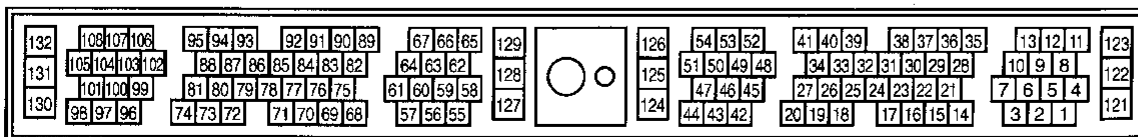


TEC246

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)



Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank) (Cont'd)

RIGHT BANK

EC-RO2H-R-01

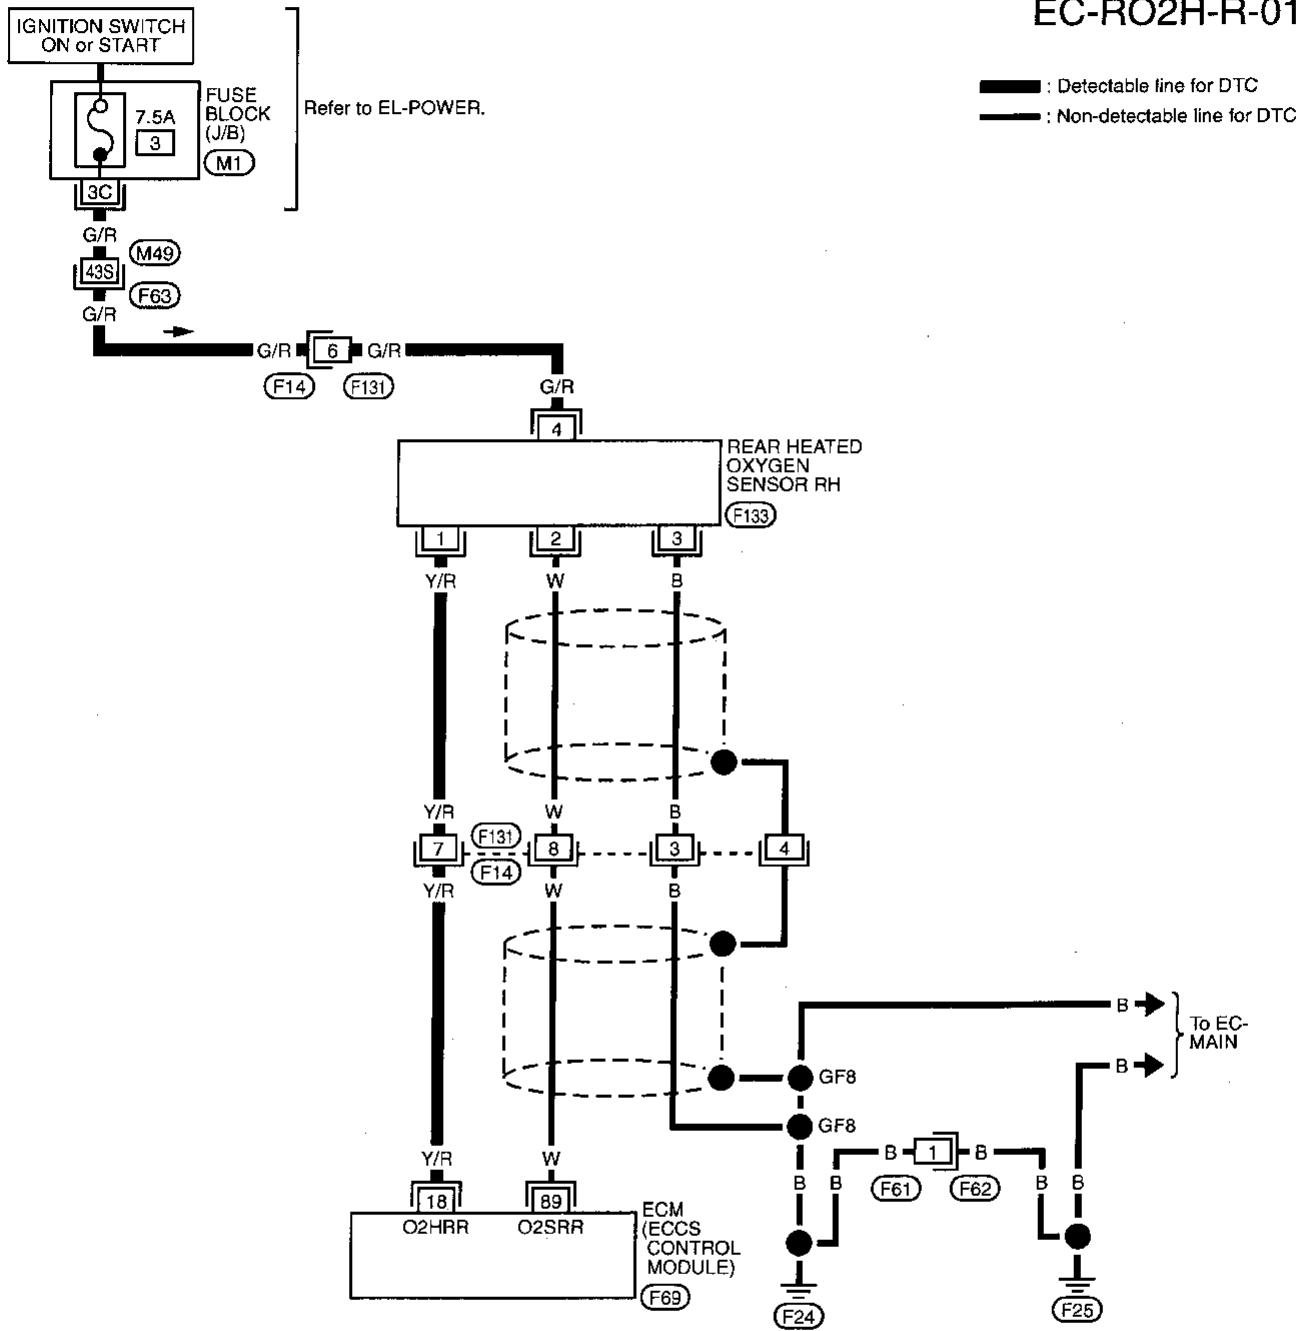

Refer to last page (Foldout page).


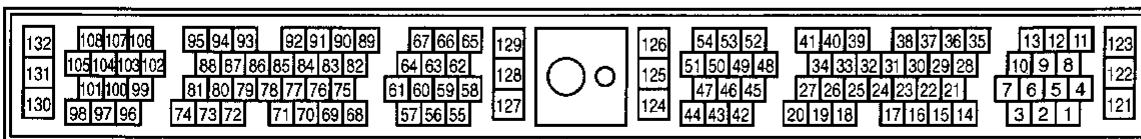



GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)

Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

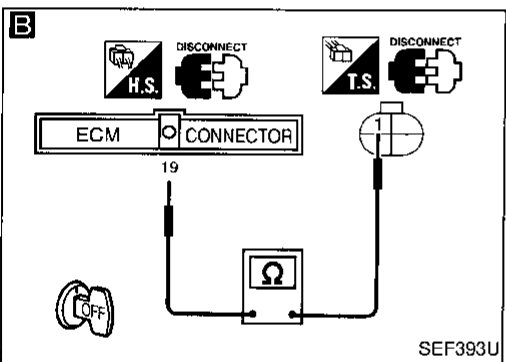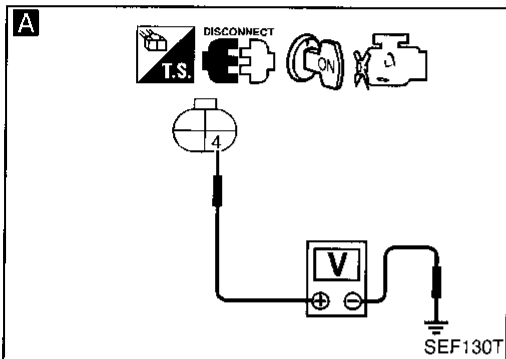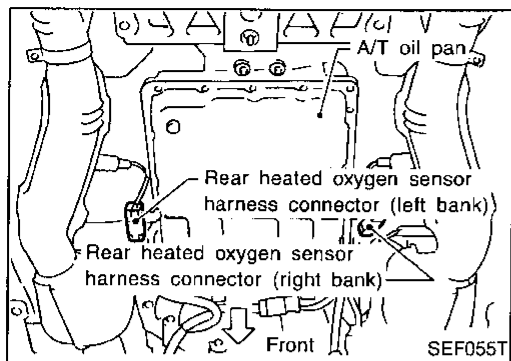

INSPECTION START

A

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect rear heated oxygen sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ④ and ground.

Voltage: Battery voltage

NG

Check the following.

- Harness connectors (E102), (E19) (LH) or (F14), (F131) (RH)
- Harness connectors (E14), (F1) (LH)
- Harness connectors (F63), (M49)
- 7.5A fuse
- Harness for open or short between front heated oxygen sensor and fuse

If NG, repair harness or connectors.

OK

B

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between terminal ① and ECM terminal ⑱.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connectors (F3), (E12) (LH) or (F14), (F131) (RH)
- Harness connectors (E19), (E102) (LH)
- Harness connectors (F62), (F61)
- Harness for open or short between sensor and ECM.

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

CHECK COMPONENT

(Rear heated oxygen sensor heater). Refer to "COMPONENT INSPECTION" on next page.

NG

Replace rear heated oxygen sensor.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0141 (-B1), P0161 (-B2)

Rear Heated Oxygen Sensor Heaters (P0141: Left bank), (P0161: Right bank) (Cont'd)

COMPONENT INSPECTION

Rear heated oxygen sensor heater

Check the following.


1. Check resistance between terminals ④ and ①.
Resistance: 2.3 - 4.3Ω at 25°C (77°F)
2. Check continuity.

Terminal No.	Continuity
② and ①, ③, ④	No
③ and ①, ②, ④	

If NG, replace the front heated oxygen sensor.

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

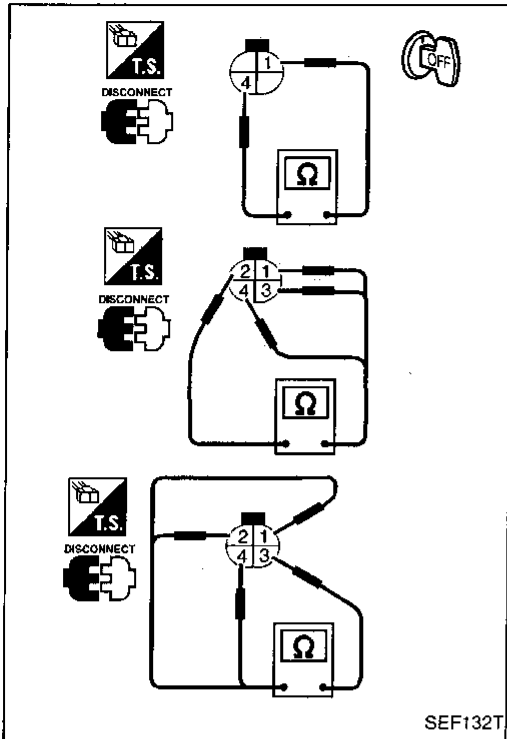

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank)

ON BOARD DIAGNOSIS LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

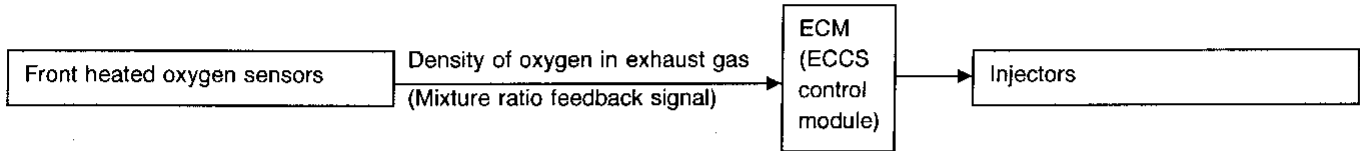

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0171 0115 (Left bank)	<ul style="list-style-type: none"> • Fuel injection system does not operate properly. • The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	<ul style="list-style-type: none"> • Intake air leaks • Front heated oxygen sensor • Injectors • Exhaust gas leaks • Incorrect fuel pressure • Lack of fuel • Mass air flow sensor
P0174 0210 (Right bank)		

ACTIVE TEST

SELF-LEARN CONTROL	B1 : 100%
	B2 : 100%

===== MONITOR =====

CMPS•RPM (POS)	0rpm
COOLAN TEMP/S	93°C
FR O2 SEN-B1	0.01V
FR O2 SEN-B2	0.01V
A/F ALPHA-B1	100%
A/F ALPHA-B2	100%

CLEAR

SEF329R

MONITOR NO FAIL

CMPS•RPM (POS)	2000rpm
FR O2 MNTR-B1	RICH
FR O2 MNTR-B2	RICH

RECORD

SEF855Q

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.




- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists.
- 7) If it is difficult to start engine at step 6), the fuel injection system has a malfunction.

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)

- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "DIAGNOSTIC PROCEDURE", EC-235. If engine does not start, visually check for exhaust and intake air leak.

OR

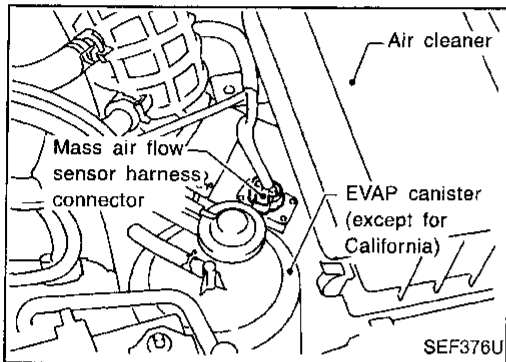

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0100.
- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "DIAGNOSTIC PROCEDURE", EC-235. If the engine does not start, visually check for exhaust and intake air leak.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart engine and run it at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Turn ignition switch "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. Make sure DTC 0102 is detected.
- 7) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 8) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. Make sure DTC 0505 is detected.
- 9) Start engine again and run it for at least 10 minutes at idle speed. The DTC 0115 should be detected at this stage, if a malfunction exists.
- 10) If it is difficult to start engine at step 9, the fuel injection system also has a malfunction.

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)


- 11) Crank engine while depressing accelerator pedal.
If engine starts, go to "DIAGNOSTIC PROCEDURE",
EC-235.
If the engine does not start, visually check for exhaust
and intake air leak.

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)


LEFT BANK

EC-FUELLH-01

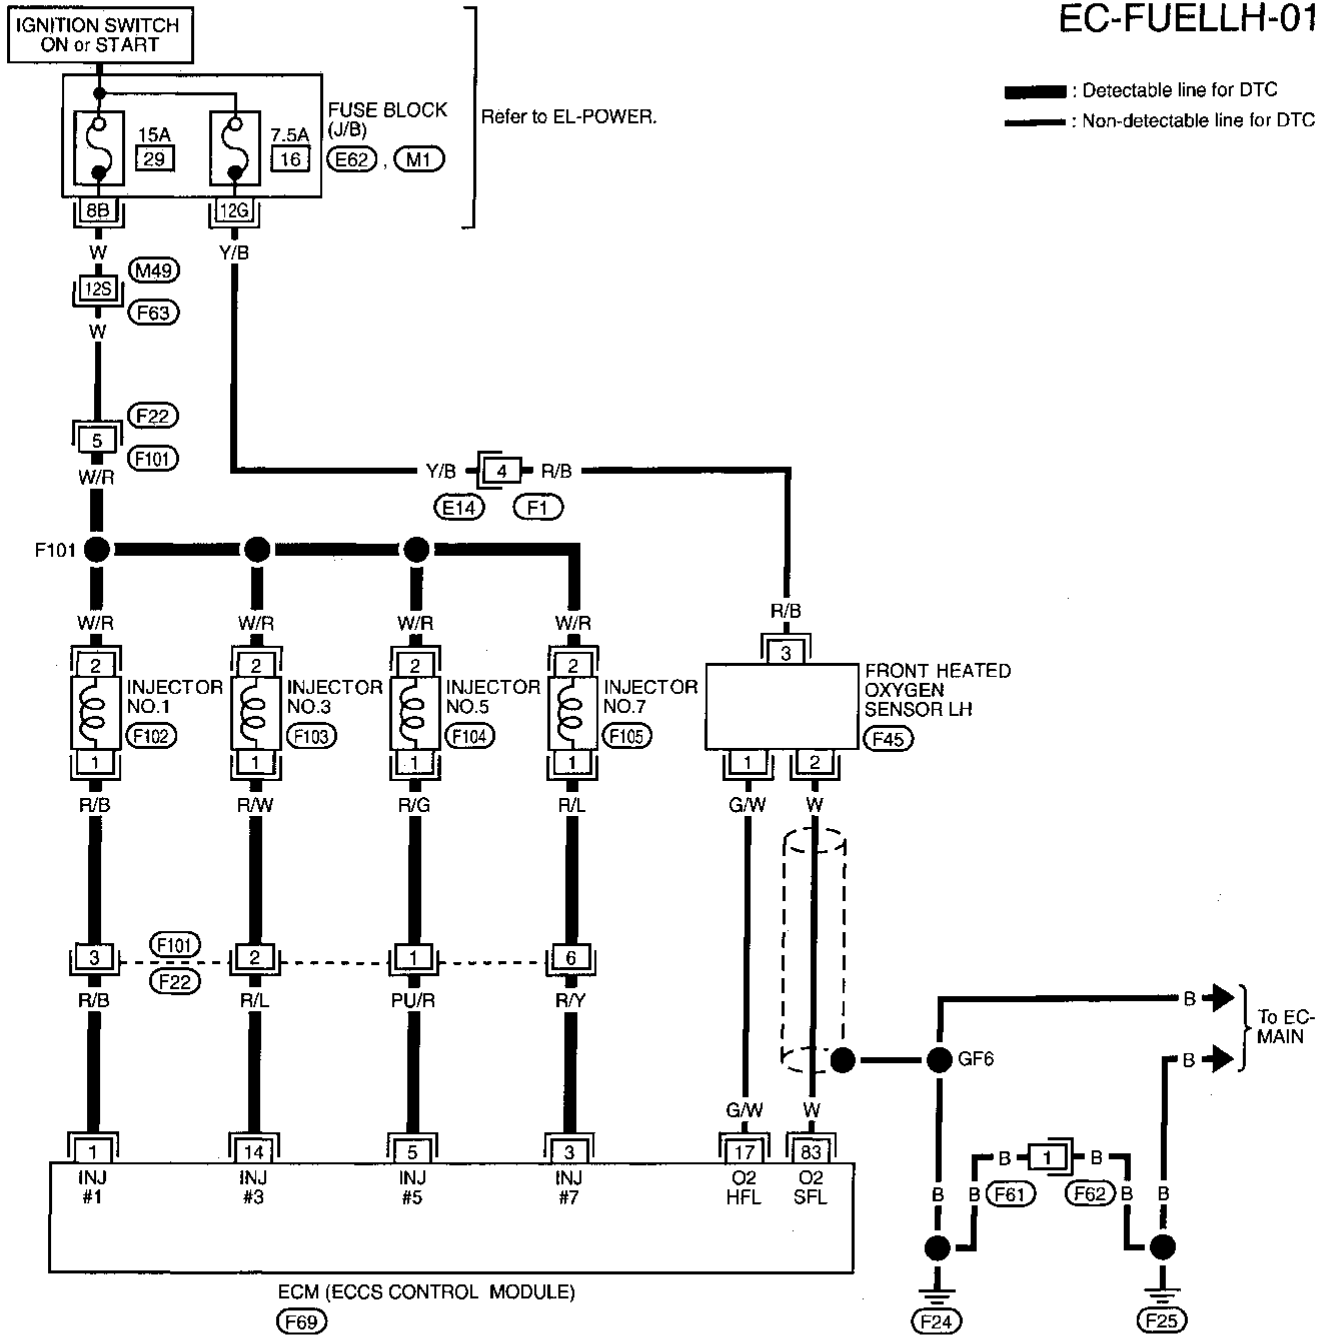

Refer to last page (Foldout page).

- (M49) (F63)
- (E62)
- (M1)

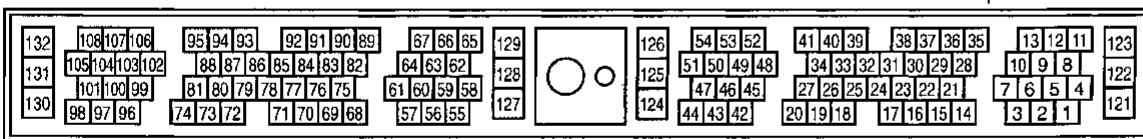



TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)

RIGHT BANK


EC-FUELRH-01

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

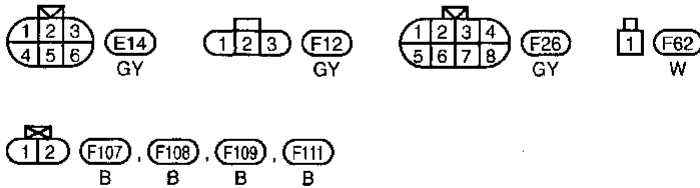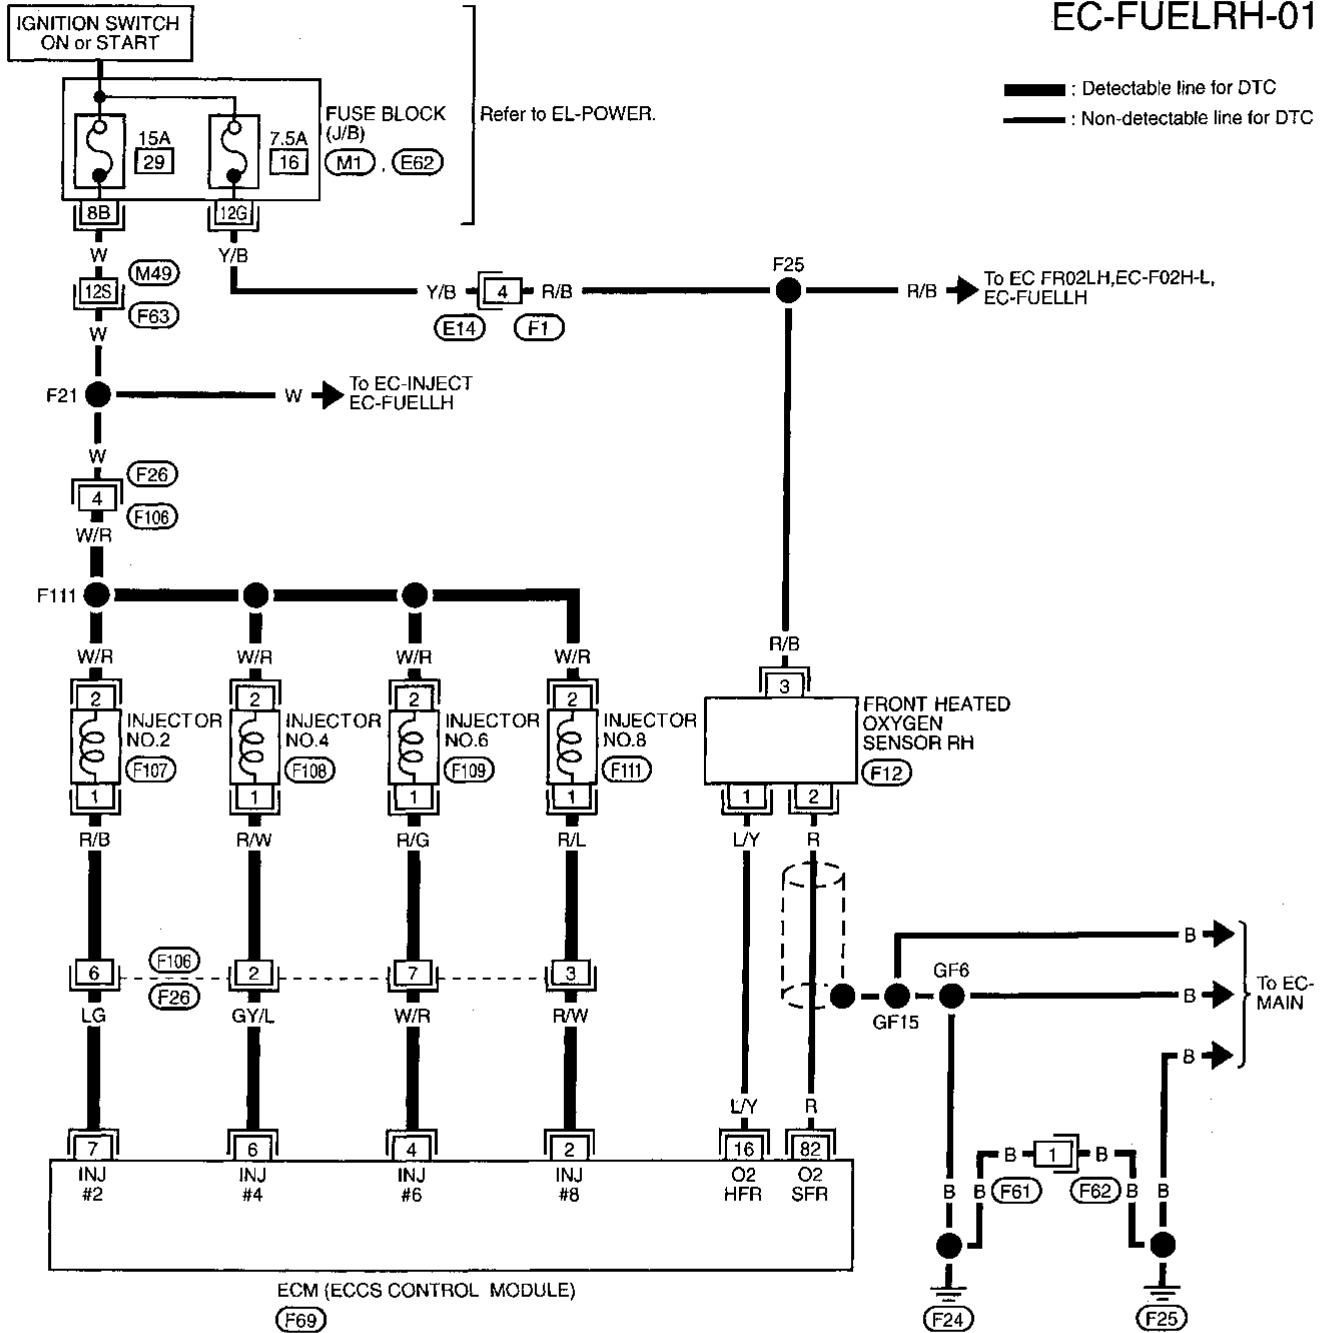

Refer to last page (Foldout page).

(M49) (F63)
 (E62)
 (M1)




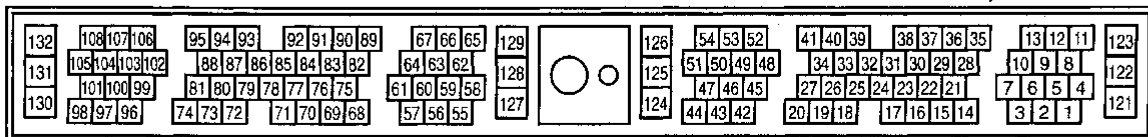


TEC254

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

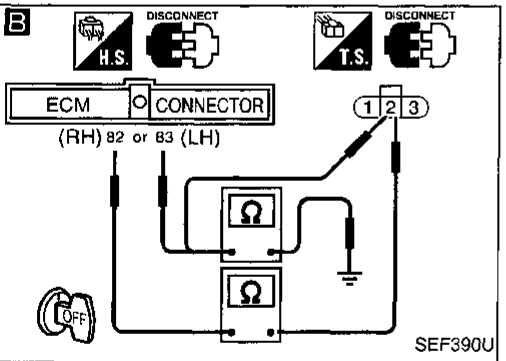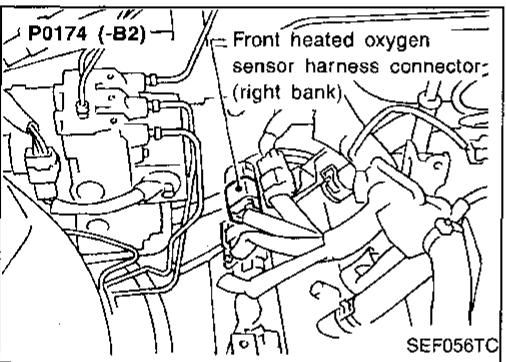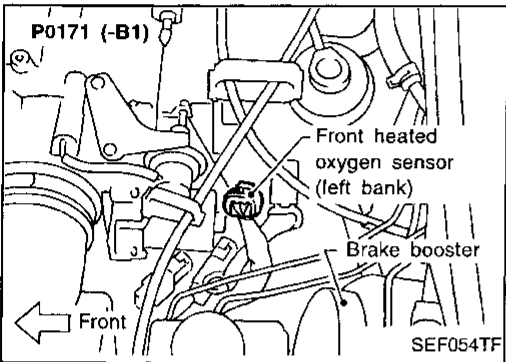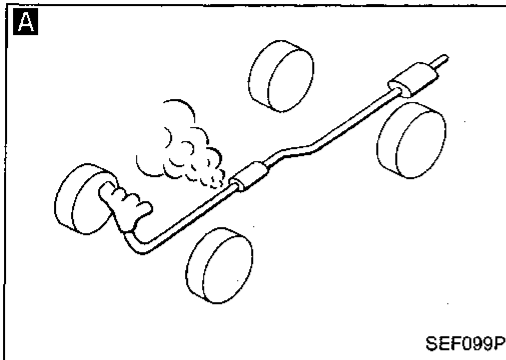

INSPECTION START

A CHECK EXHAUST AIR LEAK.
Start engine and run it at idle. Listen for an exhaust air leak before three way catalyst.

NG → Repair or replace.

CHECK FOR INTAKE AIR LEAK.
Start engine and run it at idle. Listen for an intake air leak between the mass air flow sensor and the intake manifold.

NG → Repair or replace.

B CHECK FRONT HEATED OXYGEN SENSOR.
1. Turn ignition switch "OFF".
2. Disconnect front heated oxygen sensor harness connector and ECM harness connector.
3. Check harness continuity between ECM and sensor terminals.

NG → Repair harness or connectors.

P code	Terminals		Bank
	ECM	Sensor	
P0171	83	2	LH
P0174	82	2	RH

Continuity should exist.
4. Check harness continuity between ECM and sensor or ground.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0171	83	2 or ground	LH
P0174	82	2 or ground	RH

Continuity should not exist.
If OK, check harness for short to ground and short to power.

CHECK FUEL PRESSURE.
1. Release fuel pressure to zero. Refer to EC-32.
2. Install fuel pressure gauge and check fuel pressure.
At idle:
Approx. 235 kPa (2.4 kg/cm², 34 psi)
A few seconds after ignition switch is turned OFF to ON:
Approx. 294 kPa (3.0 kg/cm², 43 psi)

NG → Check the following.
• Fuel pump and circuit Refer to EC-490.
• Fuel pressure regulator Refer to EC-32.
• Fuel lines Refer to EC-33.
• Fuel lines Refer to "ENGINE MAINTENANCE" in MA section.
• Fuel filter for clogging If NG, repair or replace.

CHECK MASS AIR FLOW SENSOR.
Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.
3.0 - 6.0 g·m/sec: at idling
12.9 - 25.3 g·m/sec: at 2,500 rpm
OR
Check "mass air flow" in MODE 1 with GST.
3.0 - 6.0 g·m/sec: at idling
12.9 - 25.3 g·m/sec: at 2,500 rpm
OR
Check mass air flow sensor output voltage, refer to EC-120.
Approximately 2.1V: at 2,500 rpm

NG → Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-113.

Ⓐ

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT




HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0171 (-B1), P0174 (-B2)

Fuel Injection System Function (Lean side) (P0171: Left bank), (P0174: Right bank) (Cont'd)

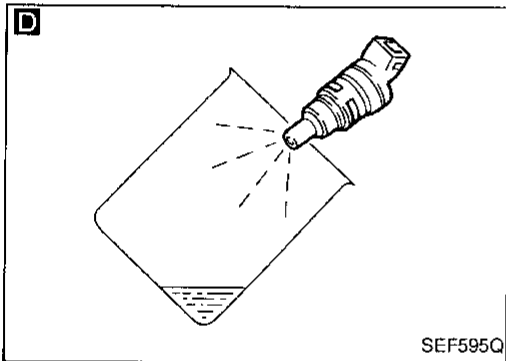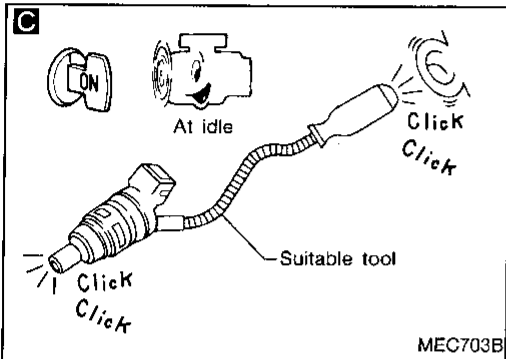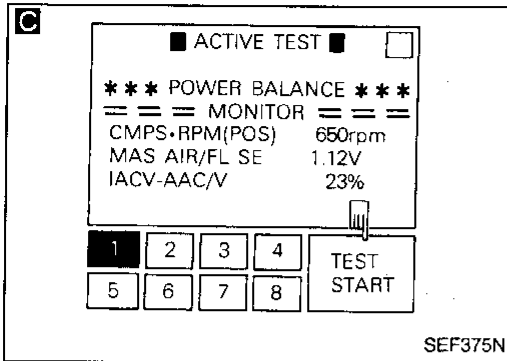

C

CHECK FUNCTION OF INJECTORS.

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
4. Make sure that each circuit produces a momentary engine speed drop.

OR

3. Listen to each injector operating sound.
Clicking noise should be heard.

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-482. Repair harness or connectors.

OK → Confirm that the engine is cooled down and there are no fire hazards near the vehicle.

1. Turn ignition switch "OFF".
2. Remove injector gallery assembly. Refer to EC-33. Keep fuel hose and all injectors connected to injector gallery. The injector harness connectors should remain connected.

D

1. Disconnect all ignition coil harness connectors.
2. Place pans or saucers under each injector.
3. Crank engine for about 3 seconds. Make sure that fuel sprays out vigorously from injectors.
Fuel should be sprayed evenly for each cylinder.

NG → Replace injectors from which fuel does not spray out. Always replace O-ring with new one.


OK → Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

Fuel Injection System Function (Rich side)
(P0172: Left bank), (P0175: Right bank)

ON BOARD DIAGNOSIS LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

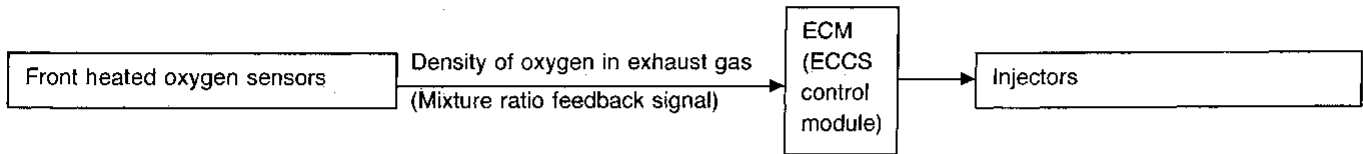

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0172 0114 (Left bank)	<ul style="list-style-type: none"> Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.) 	<ul style="list-style-type: none"> Front heated oxygen sensor Injectors Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor
P0175 0209 (Right bank)		

■ ACTIVE TEST ■

SELF-LEARN B1 : 100%
CONTROL B2 : 100%

===== MONITOR =====

CMPS•RPM (POS)	0rpm
COOLAN TEMP/S	93°C
FR O2 SEN-B1	0.90V
FR O2 SEN-B2	0.90V
A/F ALPHA-B1	100%
A/F ALPHA-B2	100%

CLEAR

SEF330R

☆ MONITOR ☆ NO FAIL

CMPS•RPM (POS)	2000rpm
FR O2 MNTR-B1	RICH
FR O2 MNTR-B2	RICH

RECORD

SEF855Q

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists.


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0172 (-B1), P0175 (-B2)

Fuel Injection System Function (Rich side) (P0172: Left bank), (P0175: Right bank) (Cont'd)

- 7) If it is difficult to start engine at step 6), the fuel injection system has a malfunction.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "DIAGNOSTIC PROCEDURE", EC-241. If engine does not start, remove ignition plugs and check for fouling, etc.

OR

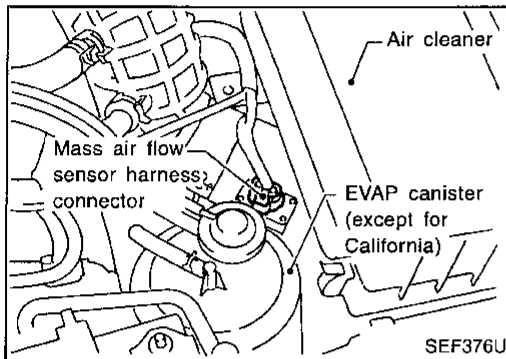

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0100.
- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "DIAGNOSTIC PROCEDURE", EC-241. If engine does not start, remove ignition plugs and check for fouling, etc.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector.
- 4) Then restart engine and run it for at least 3 seconds at idle speed.
- 5) Stop engine and reconnect mass air flow sensor harness connector.
- 6) Turn ignition switch "ON".
- 7) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. Make sure DTC 0102 is detected.
- 8) Erase the DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I.
- 9) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. Make sure DTC 0505 is detected.
- 10) Start engine again and run it for at least 10 minutes at idle speed.
The DTC 0114 should be detected at this stage, if a malfunction exists.
- 11) If it is difficult to start engine at step 10, the fuel injection system also has a malfunction.
- 12) Crank engine while depressing accelerator pedal. If engine starts, go to "DIAGNOSTIC PROCEDURE", EC-241. If engine does not start, remove ignition plugs and check for fouling, etc.

TROUBLE DIAGNOSIS FOR DTC P0172 (-B1), P0175 (-B2)



Fuel Injection System Function (Rich side) (P0172: Left bank), (P0175: Right bank) (Cont'd)

LEFT BANK

EC-FUELLH-01


- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

— : Detectable line for DTC
 — : Non-detectable line for DTC

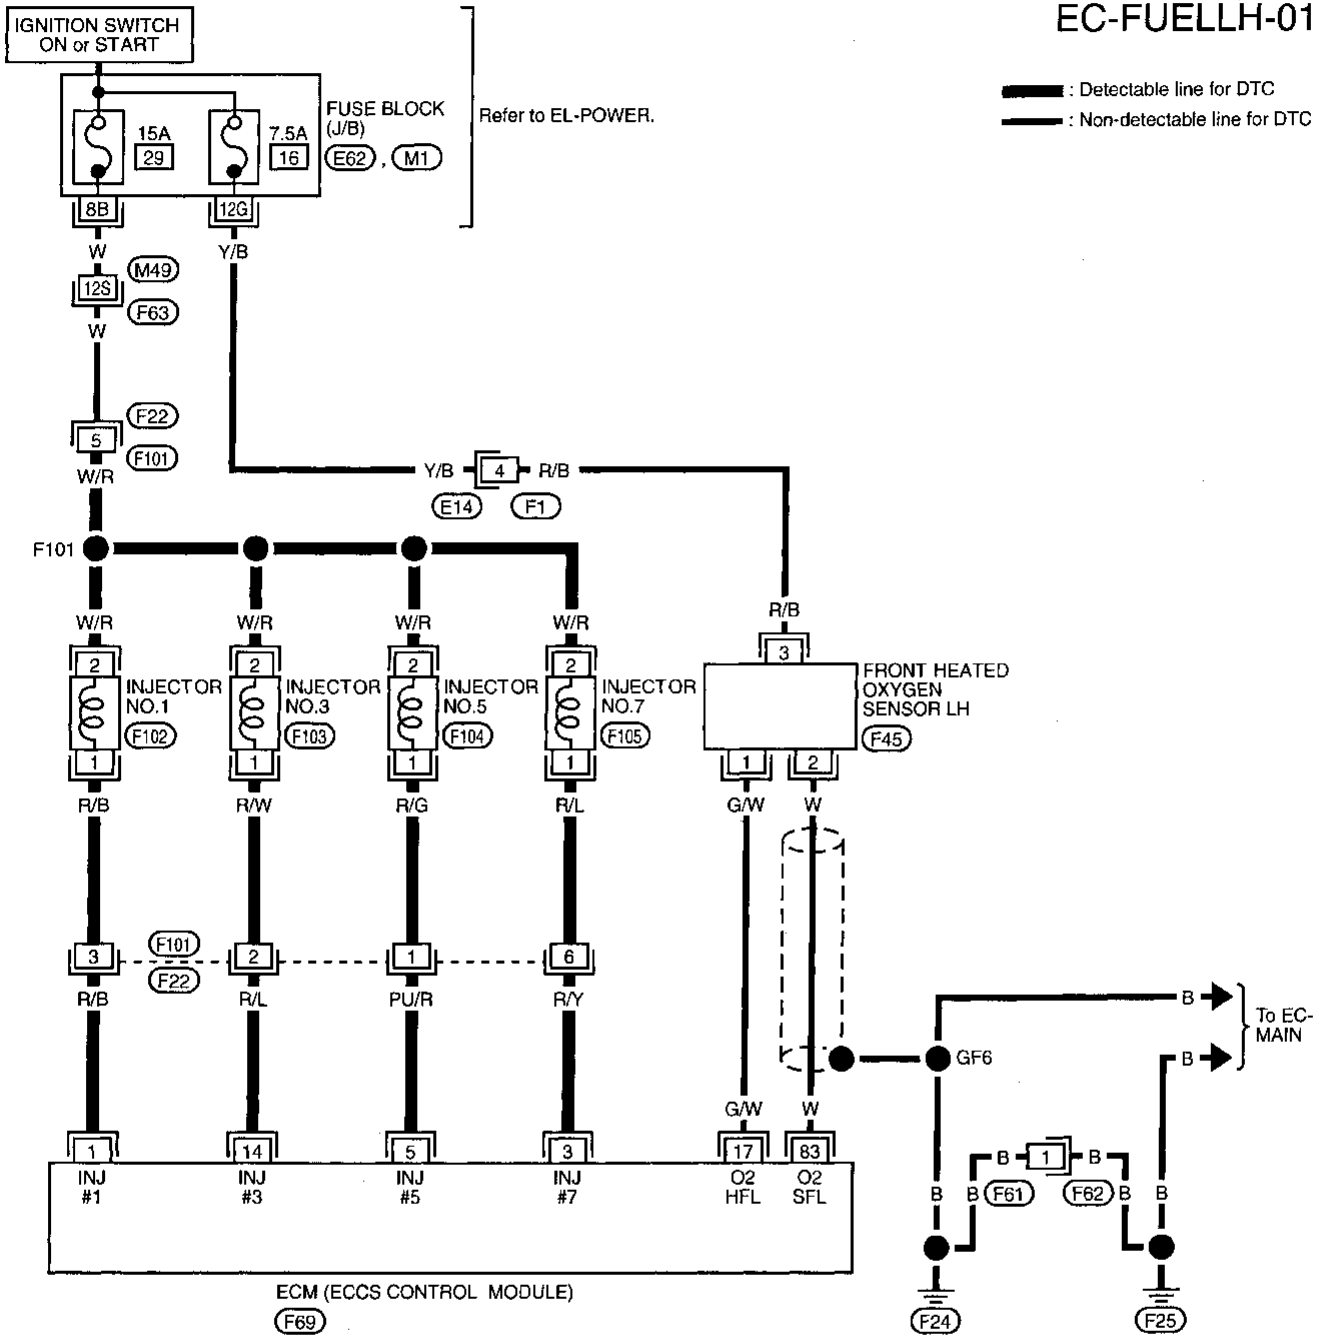

Refer to last page (Foldout page).

- M49, F63
- E62
- M1

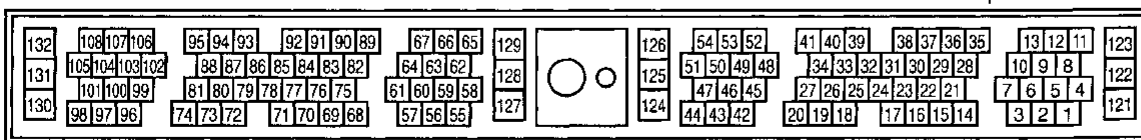


TROUBLE DIAGNOSIS FOR DTC P0172 (-B1), P0175 (-B2)


Fuel Injection System Function (Rich side) (P0172: Left bank), (P0175: Right bank) (Cont'd)

RIGHT BANK


EC-FUELRH-01

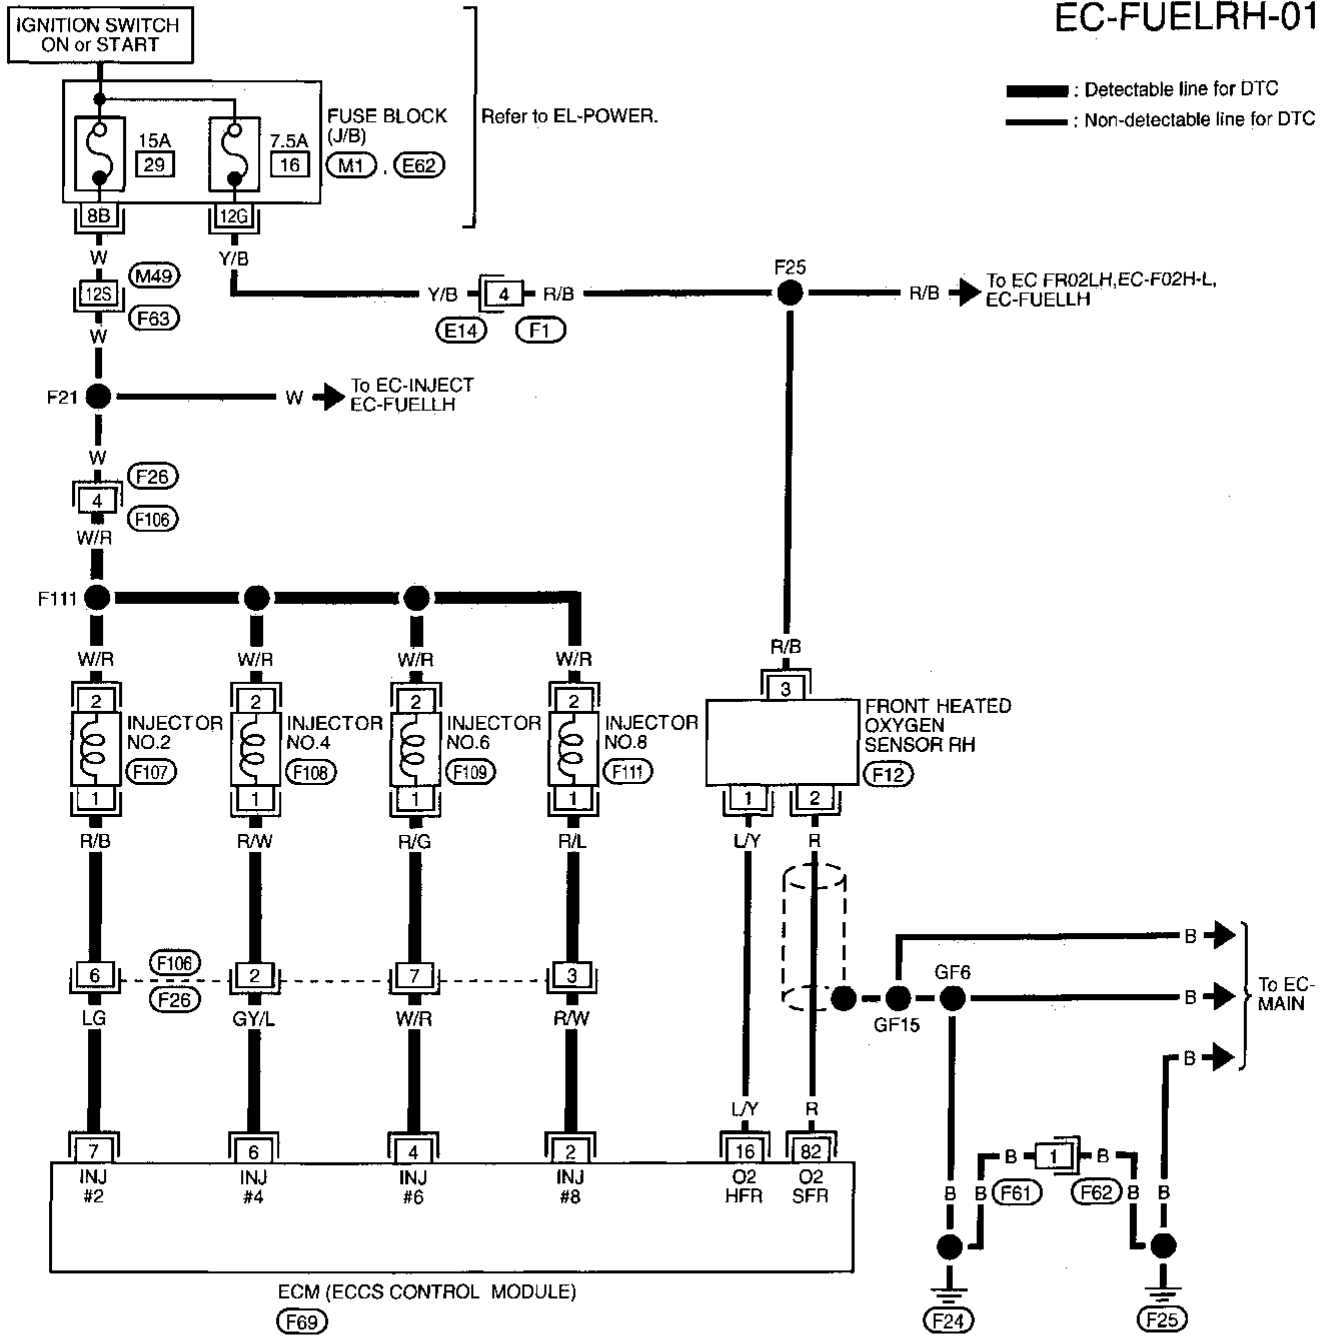

Refer to last page (Foldout page).

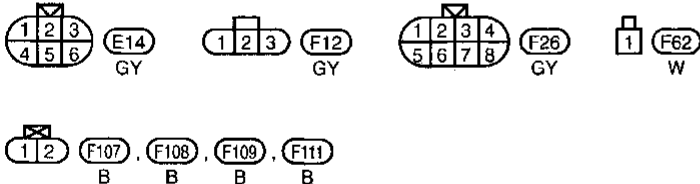

(M49) (F63)
(E62)
(M1)

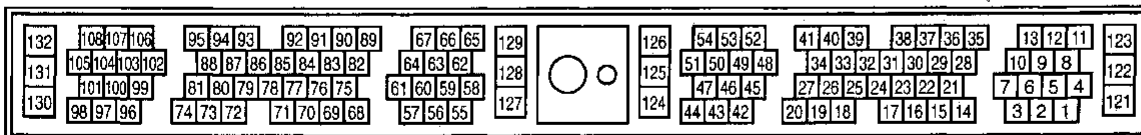


TEC254

TROUBLE DIAGNOSIS FOR DTC P0172 (-B1), P0175 (-B2)

Fuel Injection System Function (Rich side) (P0172: Left bank), (P0175: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

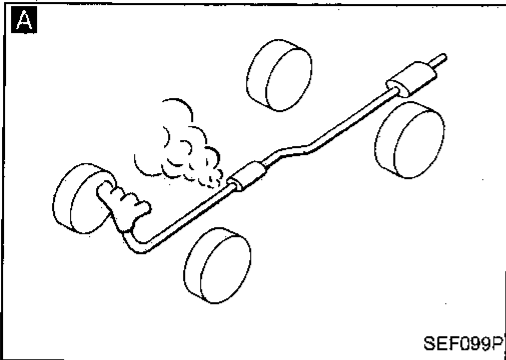


INSPECTION START

A
CHECK FOR EXHAUST AIR LEAK.
Start engine and run it at idle. Listen for an exhaust air leak before the three way catalyst.

NG → Repair or replace.

OK

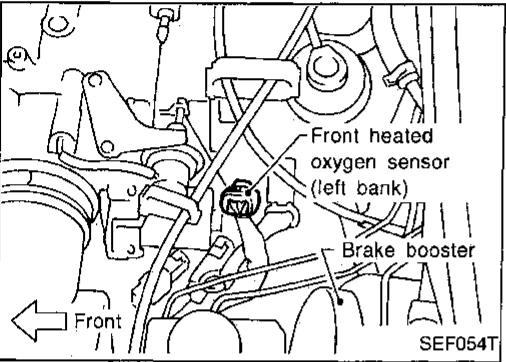

B
CHECK FRONT HEATED OXYGEN SENSOR.
1. Turn ignition switch "OFF".
2. Disconnect front heated oxygen sensor harness connector and ECM harness connector.
3. Check harness continuity between ECM and sensor terminals.


NG → Repair harness or connectors.

P code	Terminals		Bank
	ECM	Sensor	
P0172	83	2	LH
P0175	82	2	RH


Continuity should exist.
4. Check harness continuity between ECM and sensor or ground.

P code	Terminals		Bank
	ECM	Sensor or ground	
P0172	83	2 or ground	LH
P0175	82	2 or ground	RH

Continuity should not exist.
If OK, check harness for short to ground and short to power.

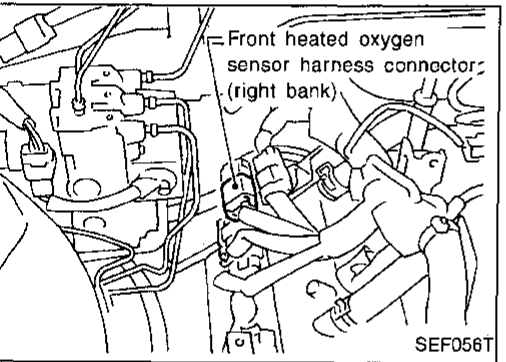

OK

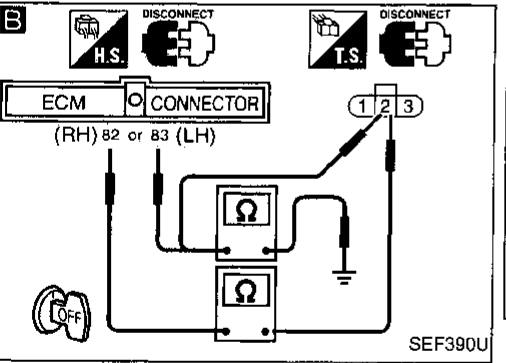

CHECK FUEL PRESSURE.
1. Release fuel pressure to zero. Refer to EC-32.
2. Install fuel pressure gauge and check fuel pressure.
At idle:
Approx. 235 kPa (2.4 kg/cm², 34 psi)
A few seconds after ignition switch is turned OFF to ON:
Approx. 294 kPa (3.0 kg/cm², 43 psi)

NG → Check the following.
• Fuel pump and circuit Refer to EC-490.
• Fuel pressure regulator Refer to EC-32.
If NG, repair or replace.



OK

Ⓐ

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0172 (-B1), P0175 (-B2)

Fuel Injection System Function (Rich side) (P0172: Left bank), (P0175: Right bank) (Cont'd)

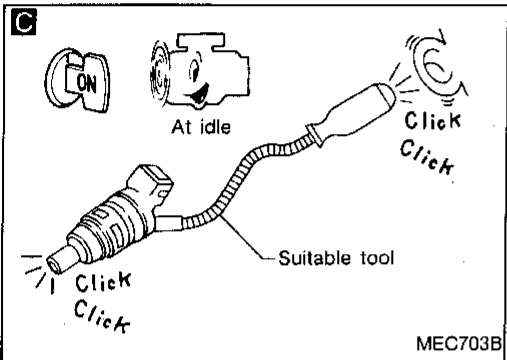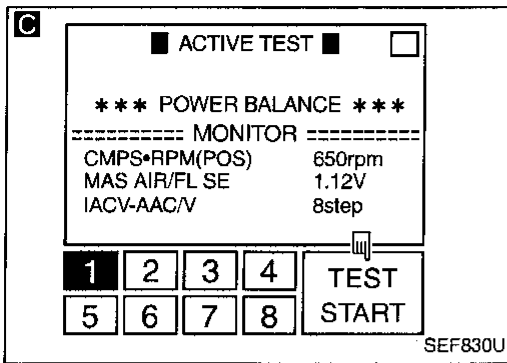

CHECK MASS AIR FLOW SENSOR.

Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.
3.0 - 6.0 g·m/sec: at idling
12.9 - 25.3 g·m/sec: at 2,500 rpm

OR

Check "mass air flow" in MODE 1 with GST.
3.0 - 6.0 g·m/sec: at idling
12.9 - 25.3 g·m/sec: at 2,500 rpm

OR

Check mass air flow sensor output voltage, refer to EC-120.
Approximately 2.1V: at 2,500 rpm

NG → Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-113.

CHECK FUNCTION OF INJECTORS.

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
4. Make sure that each circuit produces a momentary engine speed drop.

OR

3. Listen to each injector operating sound.
Clicking noise should be heard.

NG → Perform TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS, "Injectors", EC-482. Repair harness or connectors.

1. Remove injector assembly.
2. Refer to EC-33. Keep fuel hose, all injectors and injector harness connectors connected to injector gallery.

Confirm that the engine is cooled down and there are no fire hazards near the vehicle.



1. Disconnect all injector harness connectors.
2. Place pans or saucers under each injector.
3. Disconnect all ignition coil harness connectors.
4. Crank engine for about 3 seconds. Make sure fuel does not drip from injector.

Drips → Replace the injectors from which fuel is dripping.

Does not drip.
 Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P0180

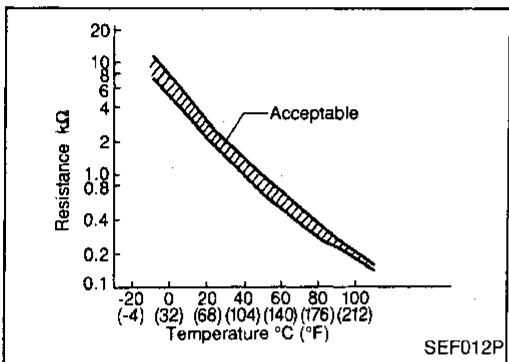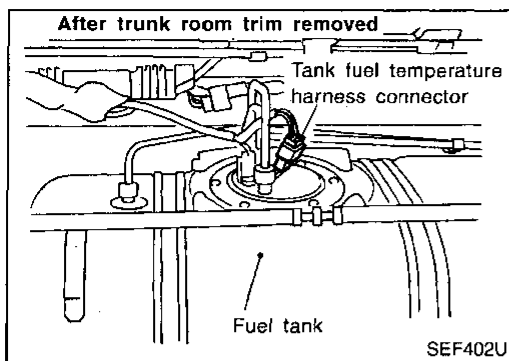

Tank Fuel Temperature Sensor (For California)

COMPONENT DESCRIPTION

The tank fuel temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.


<Reference data>

Fluid temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

*: These data are reference values and are measured between ECM terminal ⑨ (Tank fuel temperature sensor) and ECM terminal ⑫⑧ (ECCS ground).

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Causes)
P0180 0402	<ul style="list-style-type: none"> • An excessively high or low voltage is sent to ECM. • Rationally incorrect voltage is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor. 	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Tank fuel temperature sensor

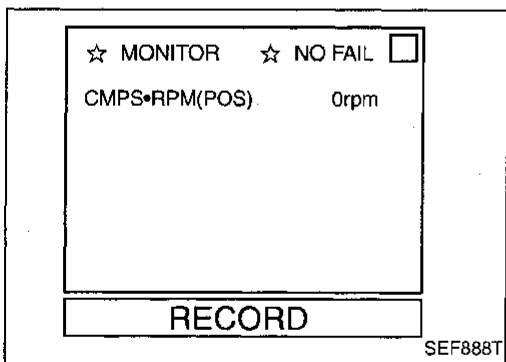

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.




- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 10 seconds.
If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-246.
If the result is OK, go to following step.
- 4) Cool engine down until "COOLAN TEMP/S" is less than 90°C (194°F). If "COOLAN TEMP/S" is already less than 90°C (194°F) before step 4), the result will be OK.
- 5) Wait at least 10 seconds.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0180

Tank Fuel Temperature Sensor (For California) (Cont'd)

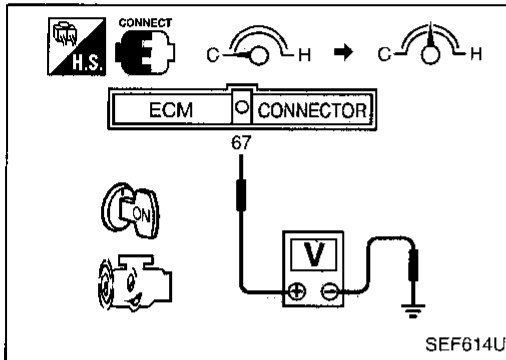

OR



- 1) Turn ignition switch "ON" and wait at least 10 seconds.
- 2) Select "MODE 7" with GST.
If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-246.
If the result is OK, go to following step.
- 3) Select "MODE 1" with GST and check for the engine coolant temperature.
- 4) Cool engine down until the engine coolant temperature is less than 90°C (194°F). If the temperature is already less than 90°C (194°F) before step 4), the result will be OK.
- 5) Wait at least 10 seconds.
- 6) Select "MODE 7" with GST.

OR




- 1) Turn ignition switch "ON" and wait at least 10 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-246.
If the result is OK, go to following step.
- 4) Cool engine down until the voltage between ECM terminal ⑥7 (Engine coolant temperature) and ground becomes more than 1.0V.
If the voltage is already more than 1.0V before step 4), the result will be OK.
- 5) Wait at least 10 seconds.
- 6) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 7) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.


TROUBLE DIAGNOSIS FOR DTC P0180

Tank Fuel Temperature Sensor (For California) (Cont'd)

EC-TFTS-01

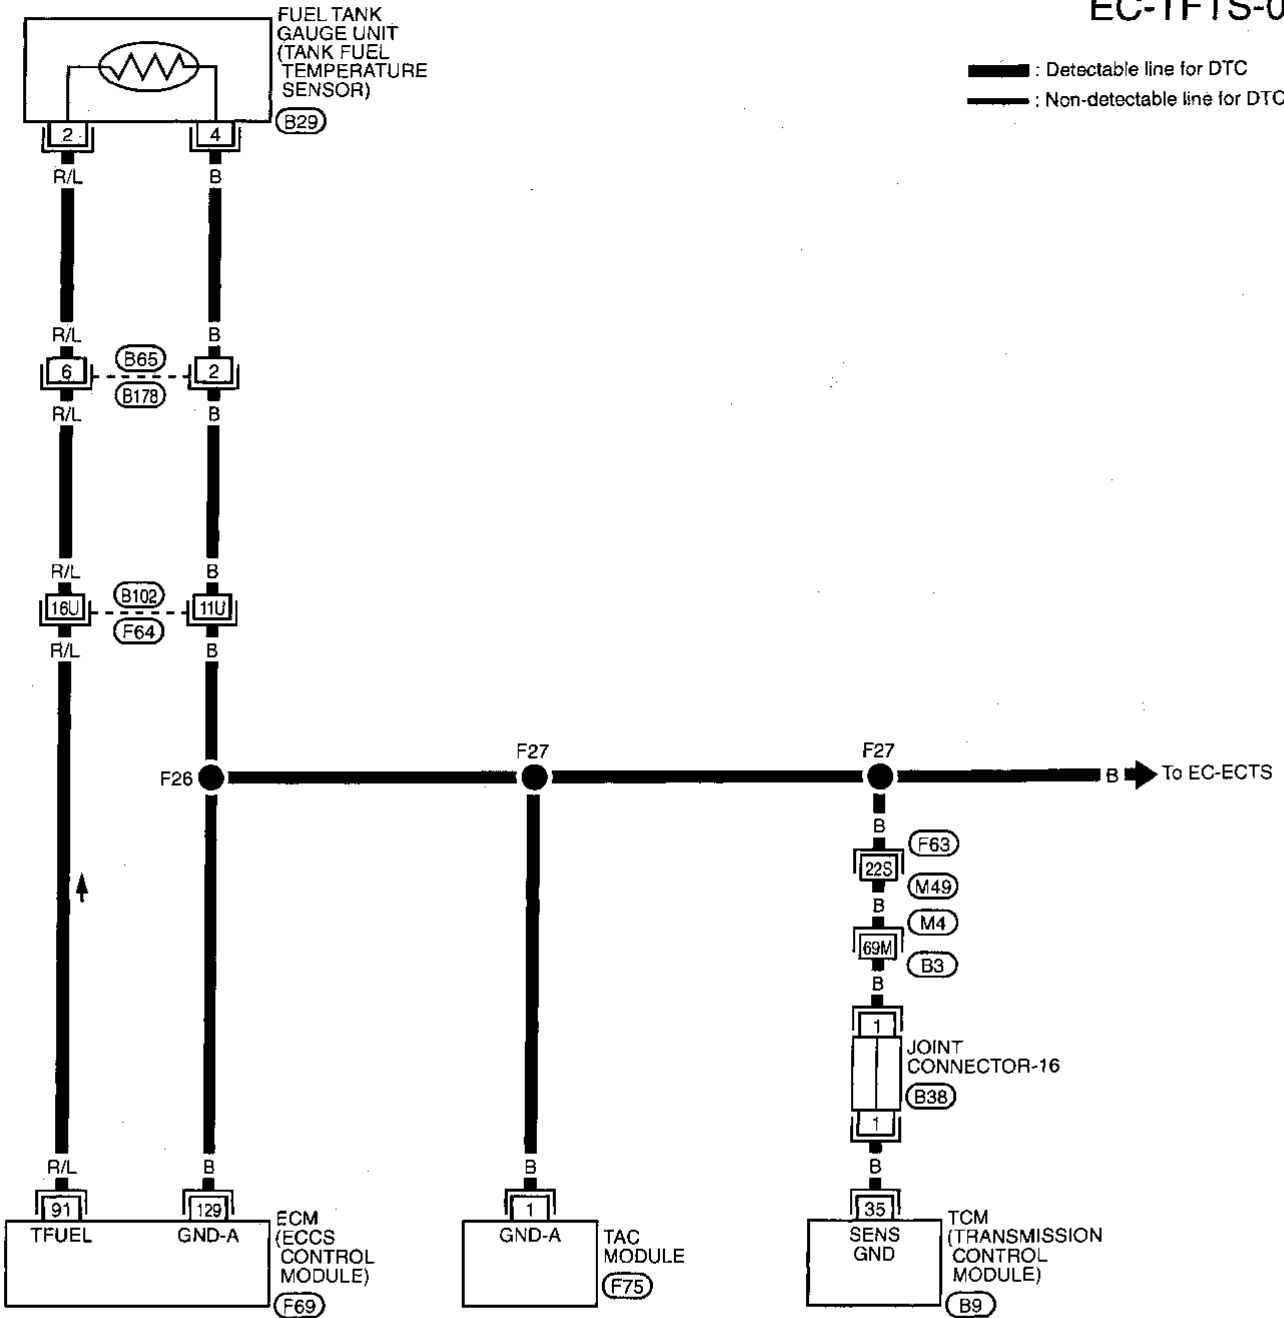

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA



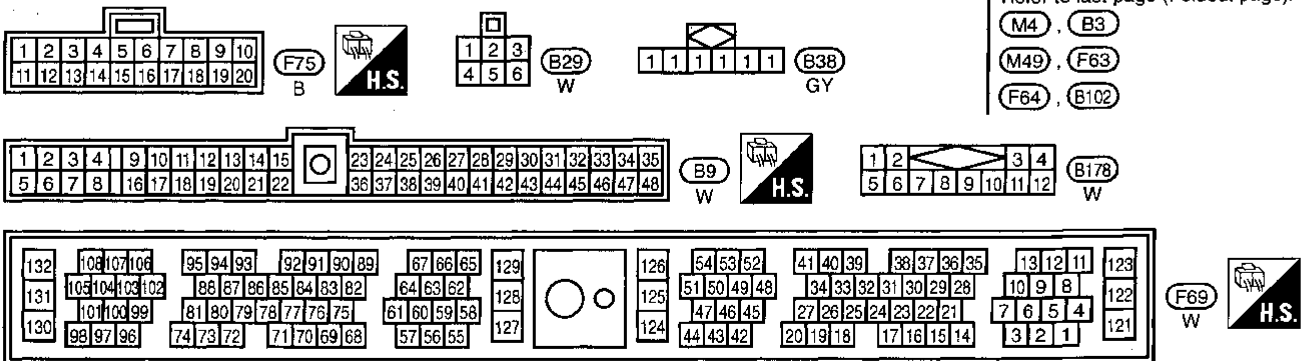


EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0180

Tank Fuel Temperature Sensor (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

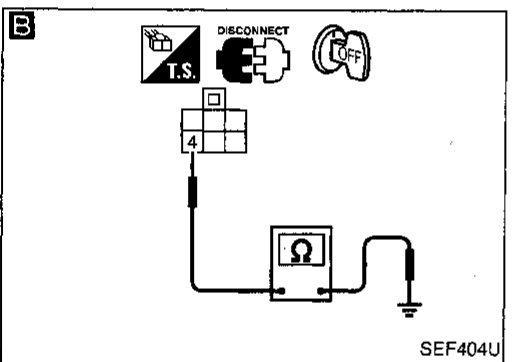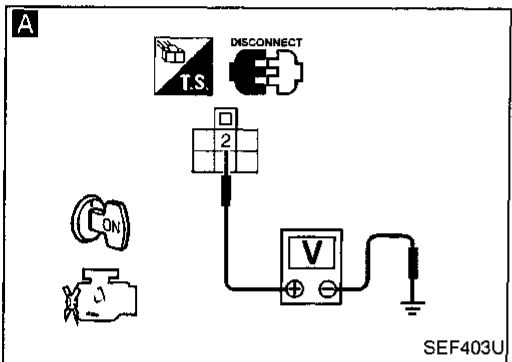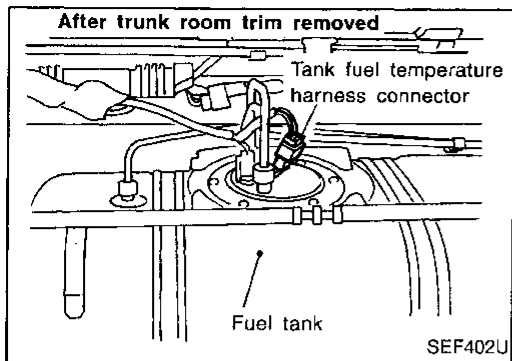

INSPECTION START

A

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect tank fuel temperature sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ② and ground with CONSULT or tester.

Voltage: Approximately 5V

NG

Check the following.

- Harness connectors (B65), (B181)
- Harness connectors (B102), (F64)
- Harness for open or short between ECM and tank fuel temperature sensor

If NG, repair harness or connector.

B

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ④ and body ground.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connectors (F64), (B102)
- Harness connectors (B178), (B65)
- Harness connectors (F63), (M49), (M4), (B3)
- Joint connector-16
- Harness for open or short between ECM and sensor
- Harness for open or short between TCM (Transmission control module) and sensor
- Harness for open or short between tank fuel temperature sensor and throttle actuator control (TAC) module

If NG, repair harness or connectors.

CHECK COMPONENT
(Tank fuel temperature sensor).
Refer to "COMPONENT INSPECTION" on next page.

NG

Replace tank fuel temperature sensor.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END


TROUBLE DIAGNOSIS FOR DTC P0180

Tank Fuel Temperature Sensor (For California) (Cont'd)

COMPONENT INSPECTION

Tank fuel temperature sensor

Check resistance by heating with hot water or heat gun as shown in the figure.

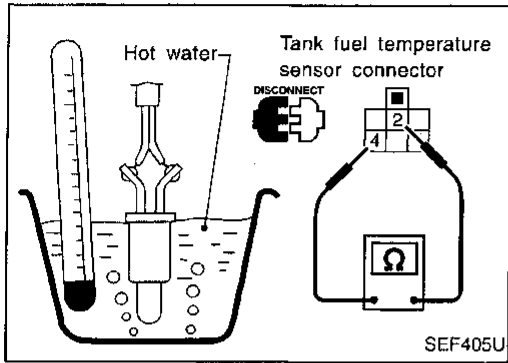

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

If NG, replace tank fuel temperature sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

No. 1 - 8 Cylinder Misfire, Multiple Cylinder Misfire

ON BOARD DIAGNOSIS LOGIC

If misfire occurs, the engine speed will fluctuate. If the fluctuation is detected by the crankshaft position sensor (OBD), the misfire is diagnosed.

The misfire detection logic consists of the following two conditions.



1. One Trip Detection Logic (Three Way Catalyst Damage)

When a misfire is detected which will overheat and damage the three way catalyst, the malfunction indicator lamp (MIL) will start blinking; even during the first trip. In this condition, ECM monitors the misfire every 200 engine revolutions.


If the misfire frequency decreases to a level that will not damage the three way catalyst, the MIL will change from blinking to lighting up.

(After the first trip detection, the MIL will light up from engine starting. If a misfire is detected that will cause three way catalyst damage, the MIL will start blinking.)

2. Two Trip Detection Logic (Exhaust quality deterioration)

When a misfire that will not damage the three way catalyst (but will affect exhaust emission) occurs, the malfunction indicator lamp will light up based on the second consecutive trip detection logic. In this condition, ECM monitors the misfire for each 1,000 revolutions of the engine.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0300 (0701)	• Multiple cylinders misfire.	<ul style="list-style-type: none"> • Improper spark plug • Insufficient compression • Incorrect fuel pressure • EGR valve • The injector circuit is open or shorted. • Injectors • Intake air leaks • The ignition secondary circuit is open or shorted. • Lack of fuel • Magnetized signal plate (drive plate)
P0301 (0608)	• No. 1 cylinder misfires.	
P0302 (0607)	• No. 2 cylinder misfires.	
P0303 (0606)	• No. 3 cylinder misfires.	
P0304 (0605)	• No. 4 cylinder misfires.	
P0305 (0604)	• No. 5 cylinder misfires.	
P0306 (0603)	• No. 6 cylinder misfires.	
P0307 (0602)	• No. 7 cylinder misfires.	
P0308 (0601)	• No. 8 cylinder misfires.	

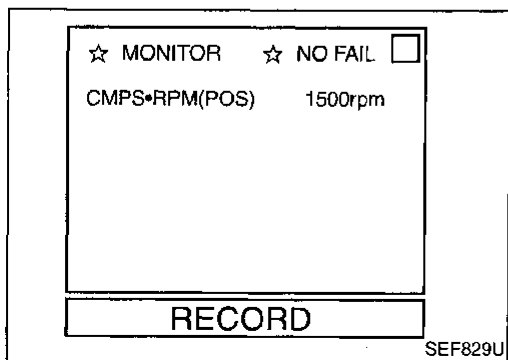

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE (Overall)

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



1) Turn ignition switch "ON", and select "DATA MONITOR" mode with CONSULT.

No. 1 - 8 Cylinder Misfire, Multiple Cylinder Misfire (Cont'd)

- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine again and drive at 1,500 - 3,000 rpm for at least 3 minutes.
Hold the accelerator pedal as steady as possible during driving.

GI

MA

Refer to the freeze frame data for the test driving conditions.

OR

EM



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine again and drive at 1,500 - 3,000 rpm for at least 3 minutes.
Hold the accelerator pedal as steady as possible during driving.

LC

EC

Refer to the freeze frame data for the test driving conditions.

FE

- 4) Select "MODE 3" with GST.

OR

AT



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine again and drive at 1,500 - 3,000 rpm for at least 3 minutes.
- 4) Turn ignition switch "OFF", wait at least 5 seconds, and then turn "ON".
Hold the accelerator pedal as steady as possible during driving.
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

PD

FA

RA

BR

ST

RS

BT

HA







EL

IDX





TROUBLE DIAGNOSIS FOR DTC P0300 - P0308

No. 1 - 8 Cylinder Misfire, Multiple Cylinder Misfire (Cont'd)

DIAGNOSTIC PROCEDURE

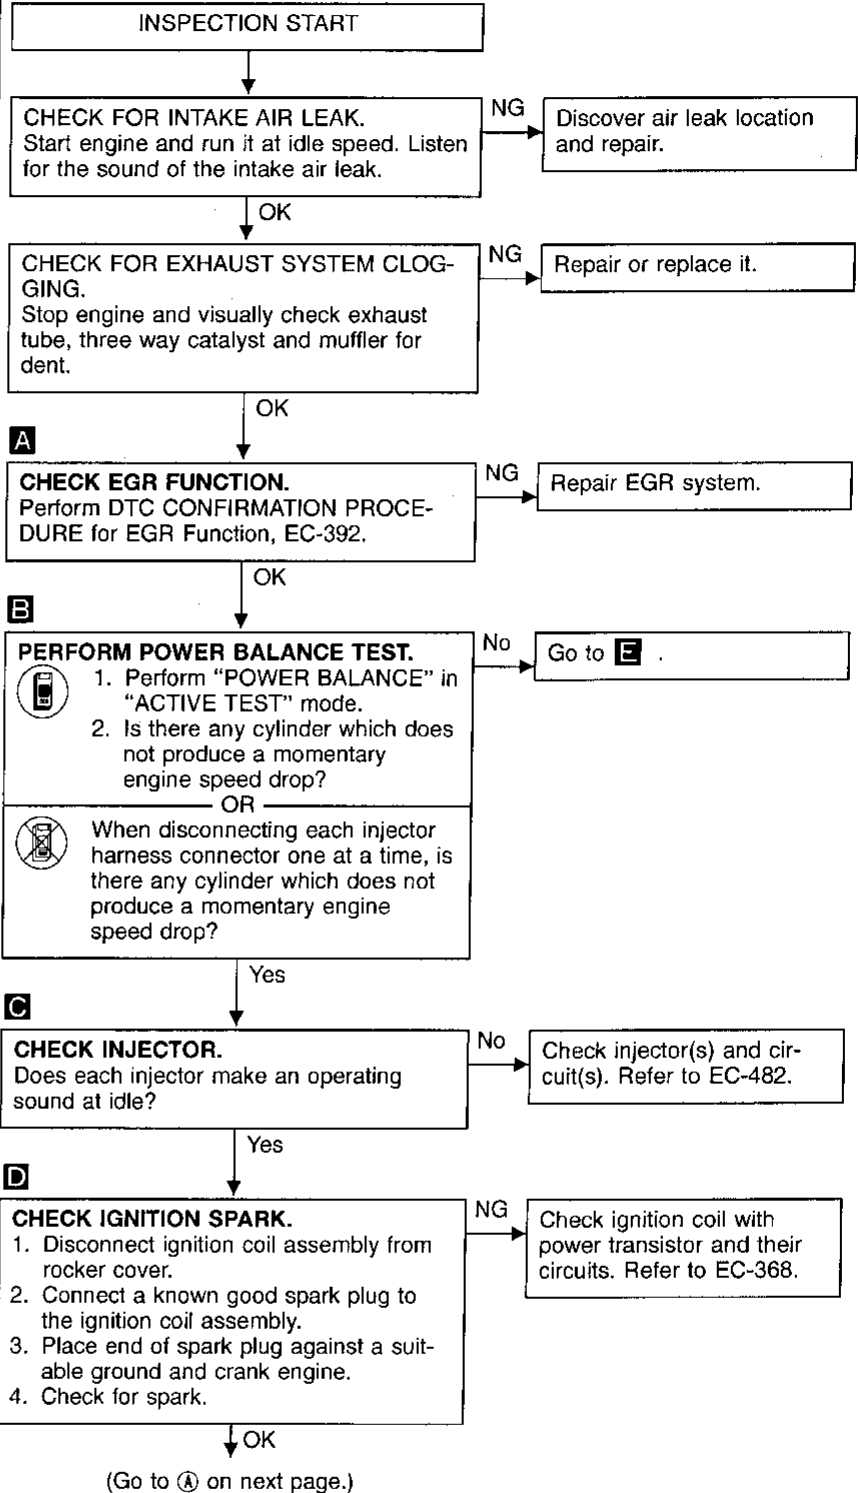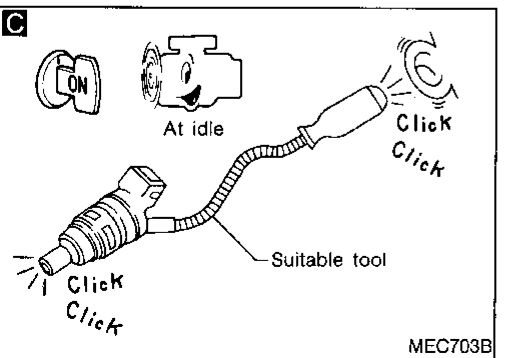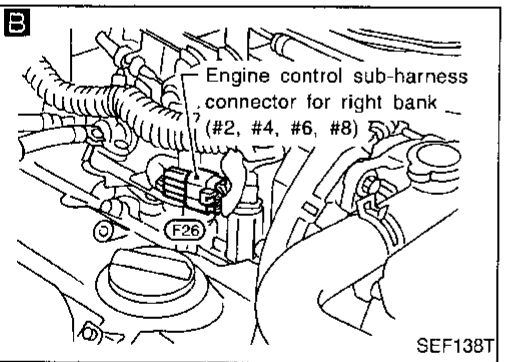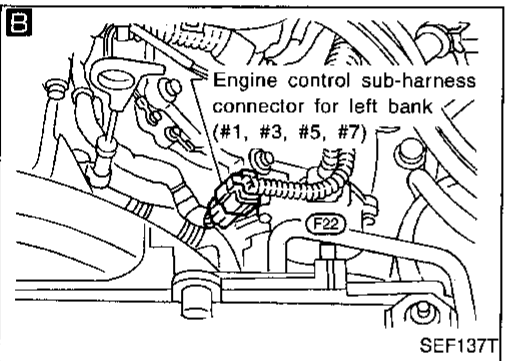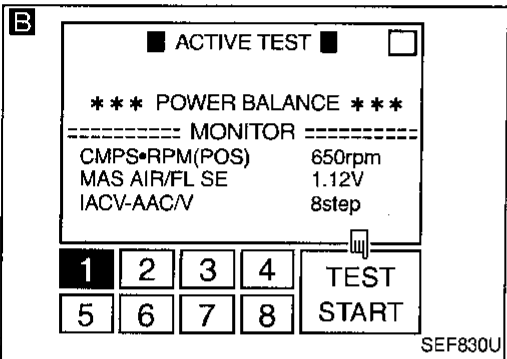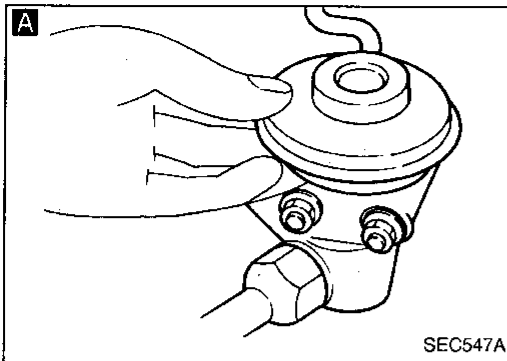

No. 1 - 8 Cylinder Misfire, Multiple Cylinder Misfire (Cont'd)

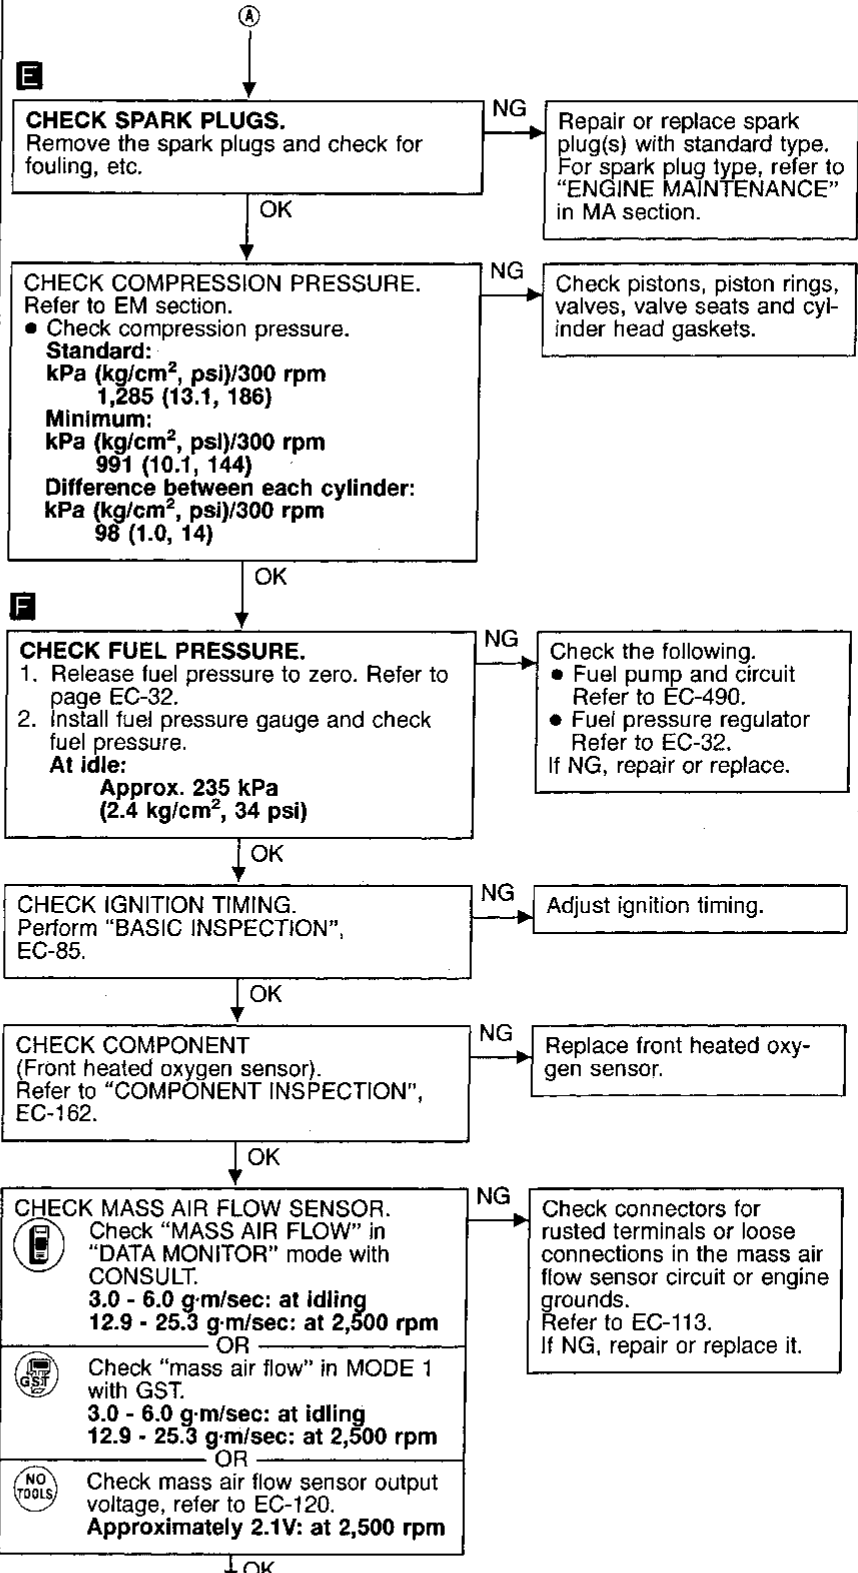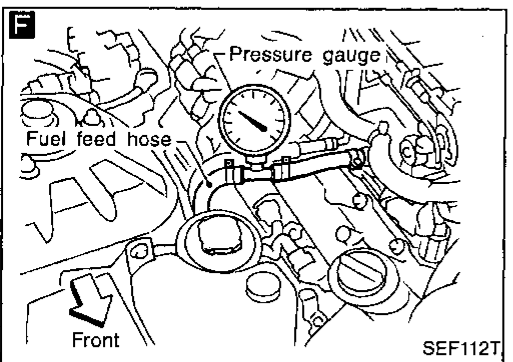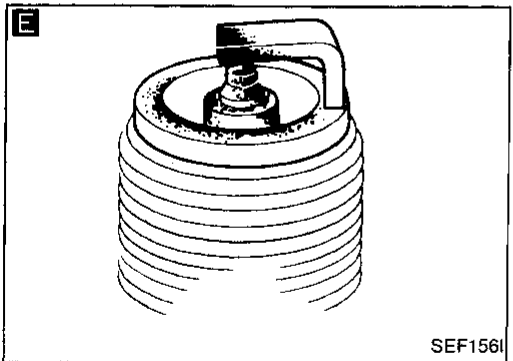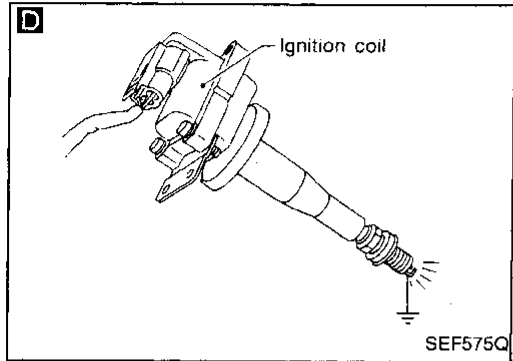


(Go to **B** on next page.)


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0300 - P0308

No. 1 - 8 Cylinder Misfire, Multiple Cylinder Misfire (Cont'd)

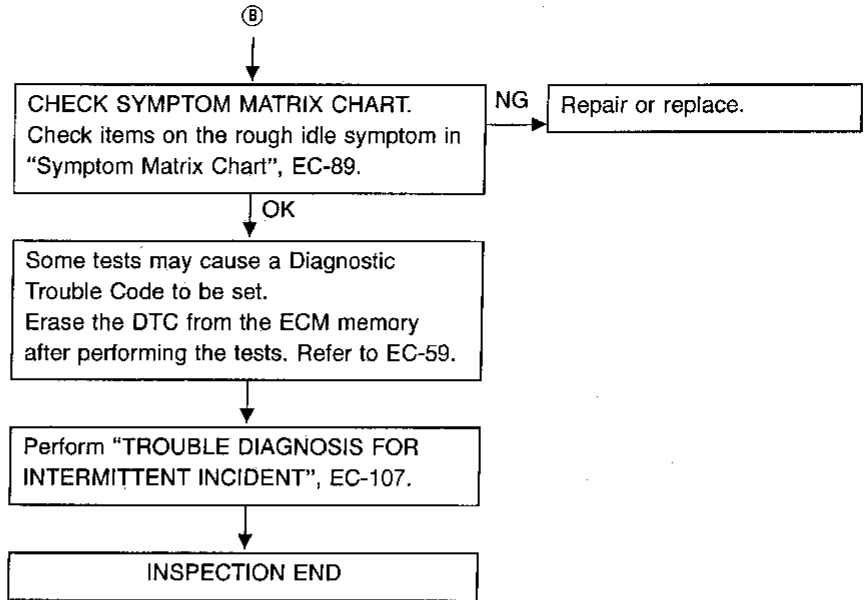

TROUBLE DIAGNOSIS FOR DTC P0325 (-B1), P0330 (-B2)

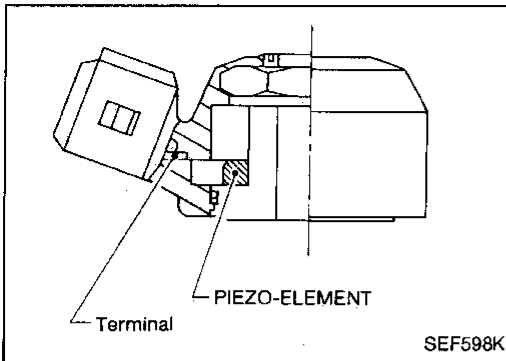

Knock Sensor (KS) (P0325: Left bank), (P0330: Right bank)

COMPONENT DESCRIPTION

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

* Freeze frame data is not stored in the ECM for the knock sensor. The MIL will not light for knock sensor malfunction.


ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
105	W	Knock sensor (RH)	Engine is running.	2.0 - 3.0V
108	W	Knock sensor (LH)	Idle speed	

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0325 0304 (Left bank)	<ul style="list-style-type: none"> An excessively low or high voltage from the knock sensor is sent to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The knock sensor circuit is open or shorted.) Knock sensor
P0330 0212 (Right bank)		

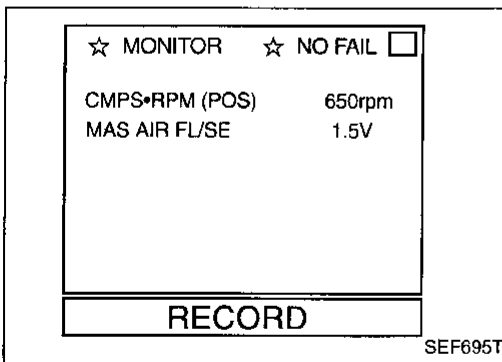

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

Before performing the following procedure, confirm that battery voltage is more than 10V.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 5 seconds at idle speed.

OR



- 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Select "MODE 3" with GST.

OR






- 1) Start engine and run it for at least 5 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0325 (-B1), P0330 (-B2)

Knock Sensor (KS) (P0325: Left bank), (P0330: Right bank) (Cont'd)






EC-KS-01

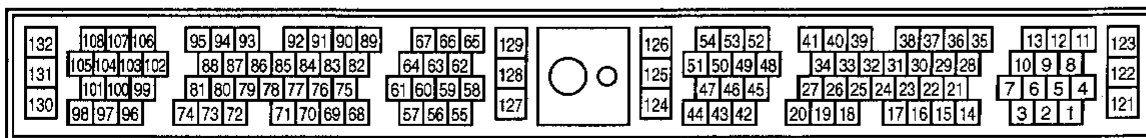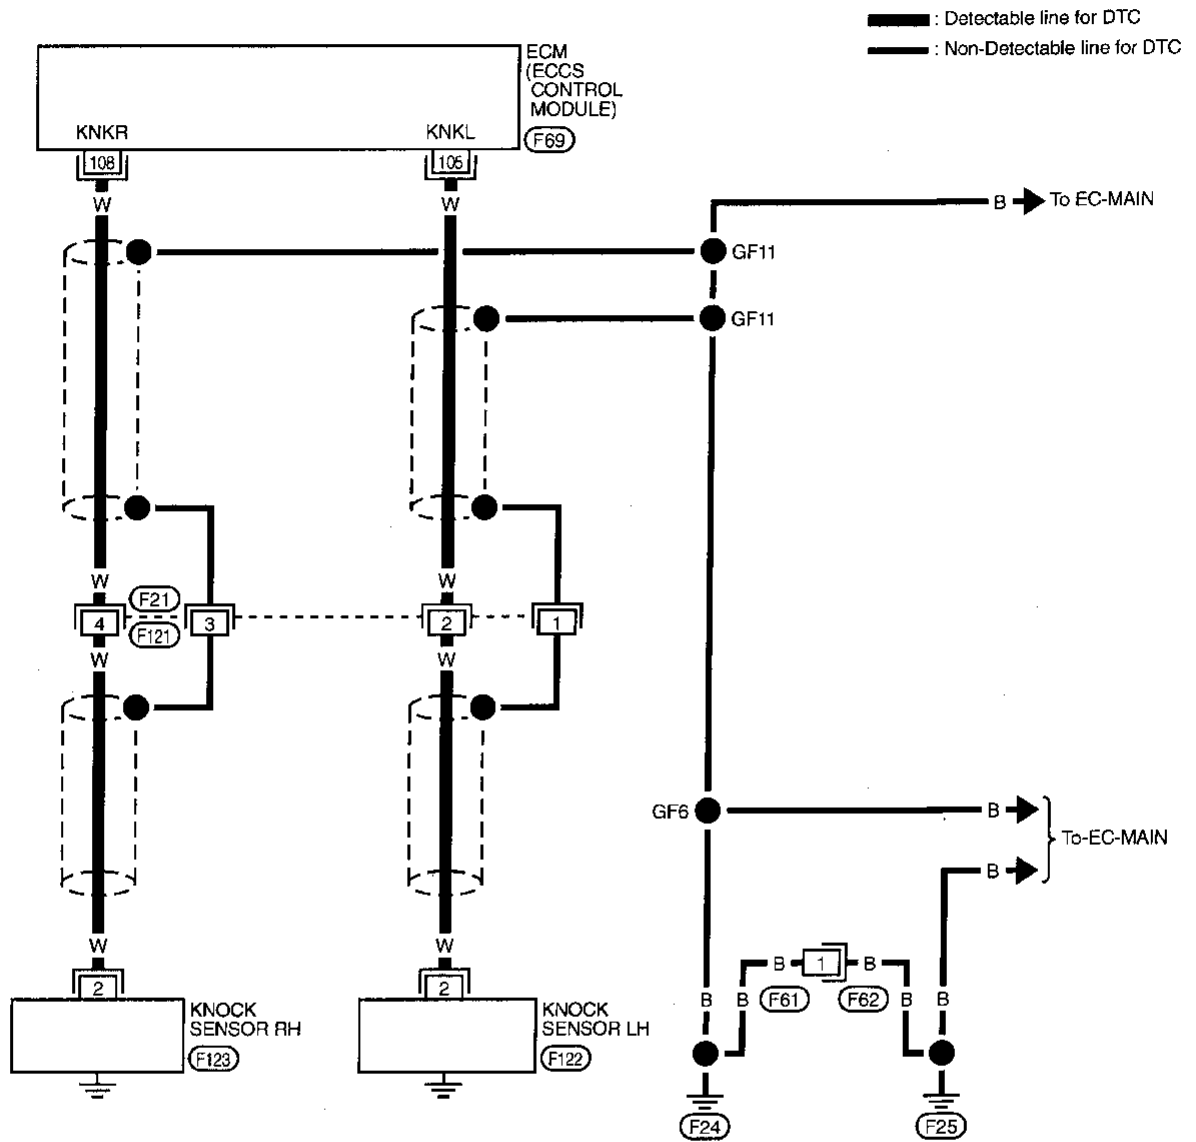

TROUBLE DIAGNOSIS FOR DTC P0325 (-B1), P0330 (-B2)

Knock Sensor (KS) (P0325: Left bank), (P0330: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

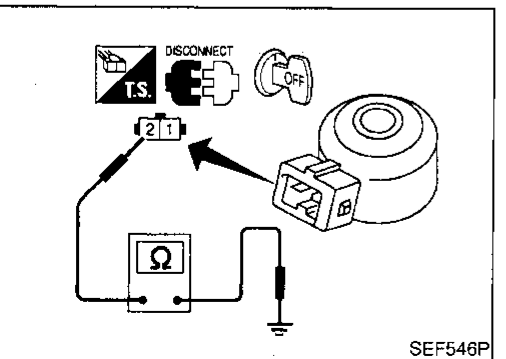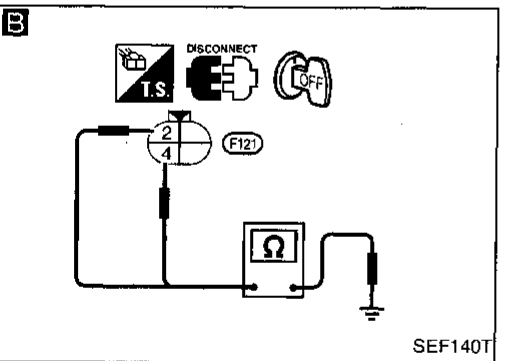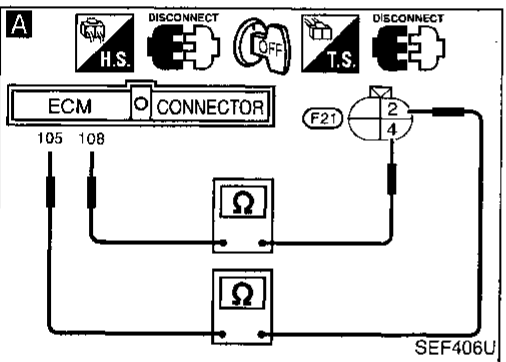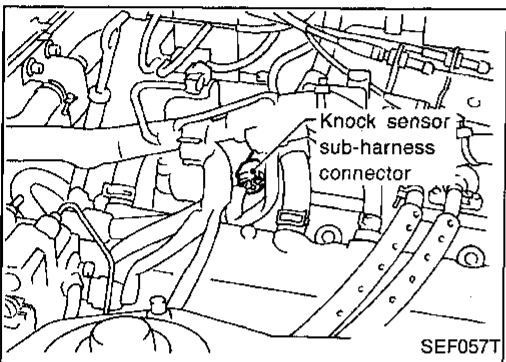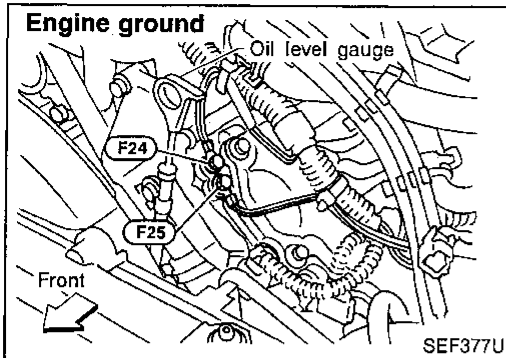

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A
CHECK INPUT SIGNAL CIRCUIT-1.
 1. Disconnect ECM harness connector and knock sensor sub-harness connector.
 2. Check harness continuity between terminal ④ (right bank), ② (left bank) and ECM terminal ⑩⑤ (left bank), ⑩⑧ (right bank).
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

B
CHECK INPUT SIGNAL CIRCUIT-2.
 Check harness continuity between terminal ④ (right bank), ② (left bank) and engine ground.
Continuity should exist.
 If OK, check harness for short to ground and short to power.
It is necessary to use an ohmmeter which can measure more than 10 MΩ.

NG → Check the following.
 • Harness for open or short between knock sensor sub-harness connector-2 and knock sensor
 If NG, repair open circuit or short to ground or short to power in harness or connectors.
 • As for knock sensor (COMPONENT INSPECTION), refer to below.
 If NG, replace knock sensor.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

COMPONENT INSPECTION

Knock sensor

1. Disconnect knock sensor harness connector.
2. Check resistance between terminal ② and ground.

Approximately 500 - 620 kΩ [at 25°C (77°F)]

- It is necessary to use an ohmmeter which can measure more than 10 MΩ.

CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use a new one.

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P0335

Crankshaft Position Sensor (CKPS) (OBD)

COMPONENT DESCRIPTION

The crankshaft position sensor (OBD) is located on the transaxle housing facing the gear teeth (cogs) of the drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.


When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.


Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system. It is used only for the on board diagnosis of misfire.

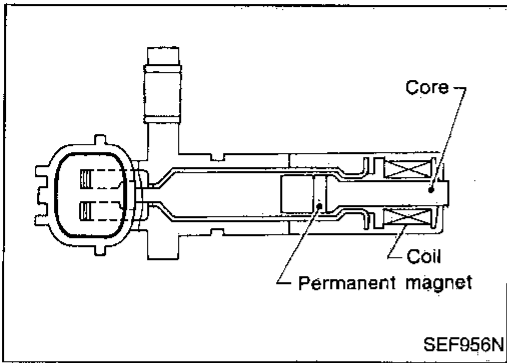

SEF956N

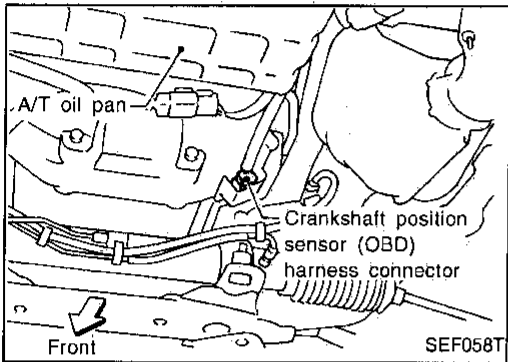

SEF058T

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (129) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
57	B/R	Crankshaft position sensor (OBD)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 1.7V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 0V

SEF545T

SEF546T

TROUBLE DIAGNOSIS FOR DTC P0335

Crankshaft Position Sensor (CKPS) (OBD) (Cont'd)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0335 0802	<ul style="list-style-type: none"> ● The proper pulse signal from the crankshaft position sensor (OBD) is not sent to ECM while the engine is running at the specified engine speed. 	<ul style="list-style-type: none"> ● Harness or connectors (The crankshaft position sensor (OBD) circuit is open.) ● Crankshaft position sensor (OBD) ● Dead (Weak) battery

GI

MA

EM

☆ MONITOR
☆ NO FAIL

CMPS•RPM (POS)	650rpm
MAS AIR FL/SE	1.5V

RECORD

SEF695T

LC

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

EC



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 15 seconds at idle speed.

FE

AT

OR



- 1) Start engine and run it for at least 15 seconds at idle speed.
- 2) Select "MODE 7" with GST.

PD

OR



- 1) Start engine and run it for at least 15 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

FA

RA

BR

ST

RS

BT

HA



EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0335

Crankshaft Position Sensor (CKPS) (OBD) (Cont'd)






EC-CKPS-01

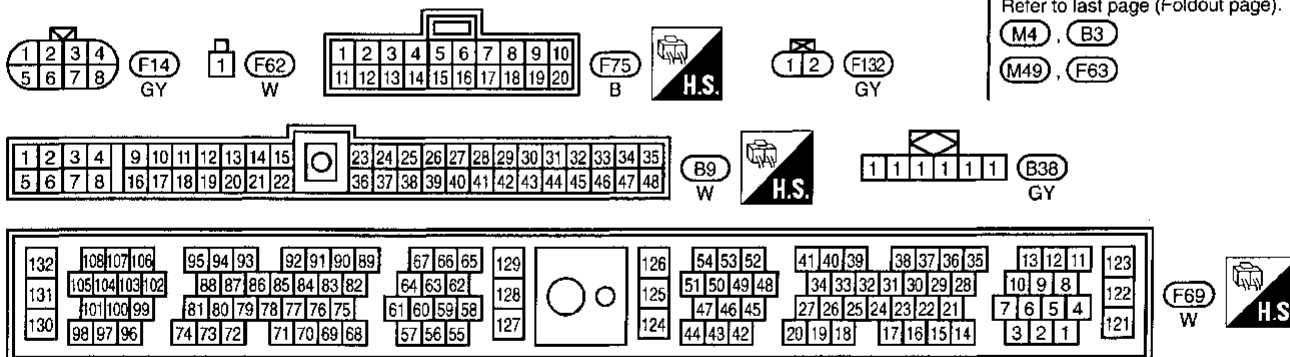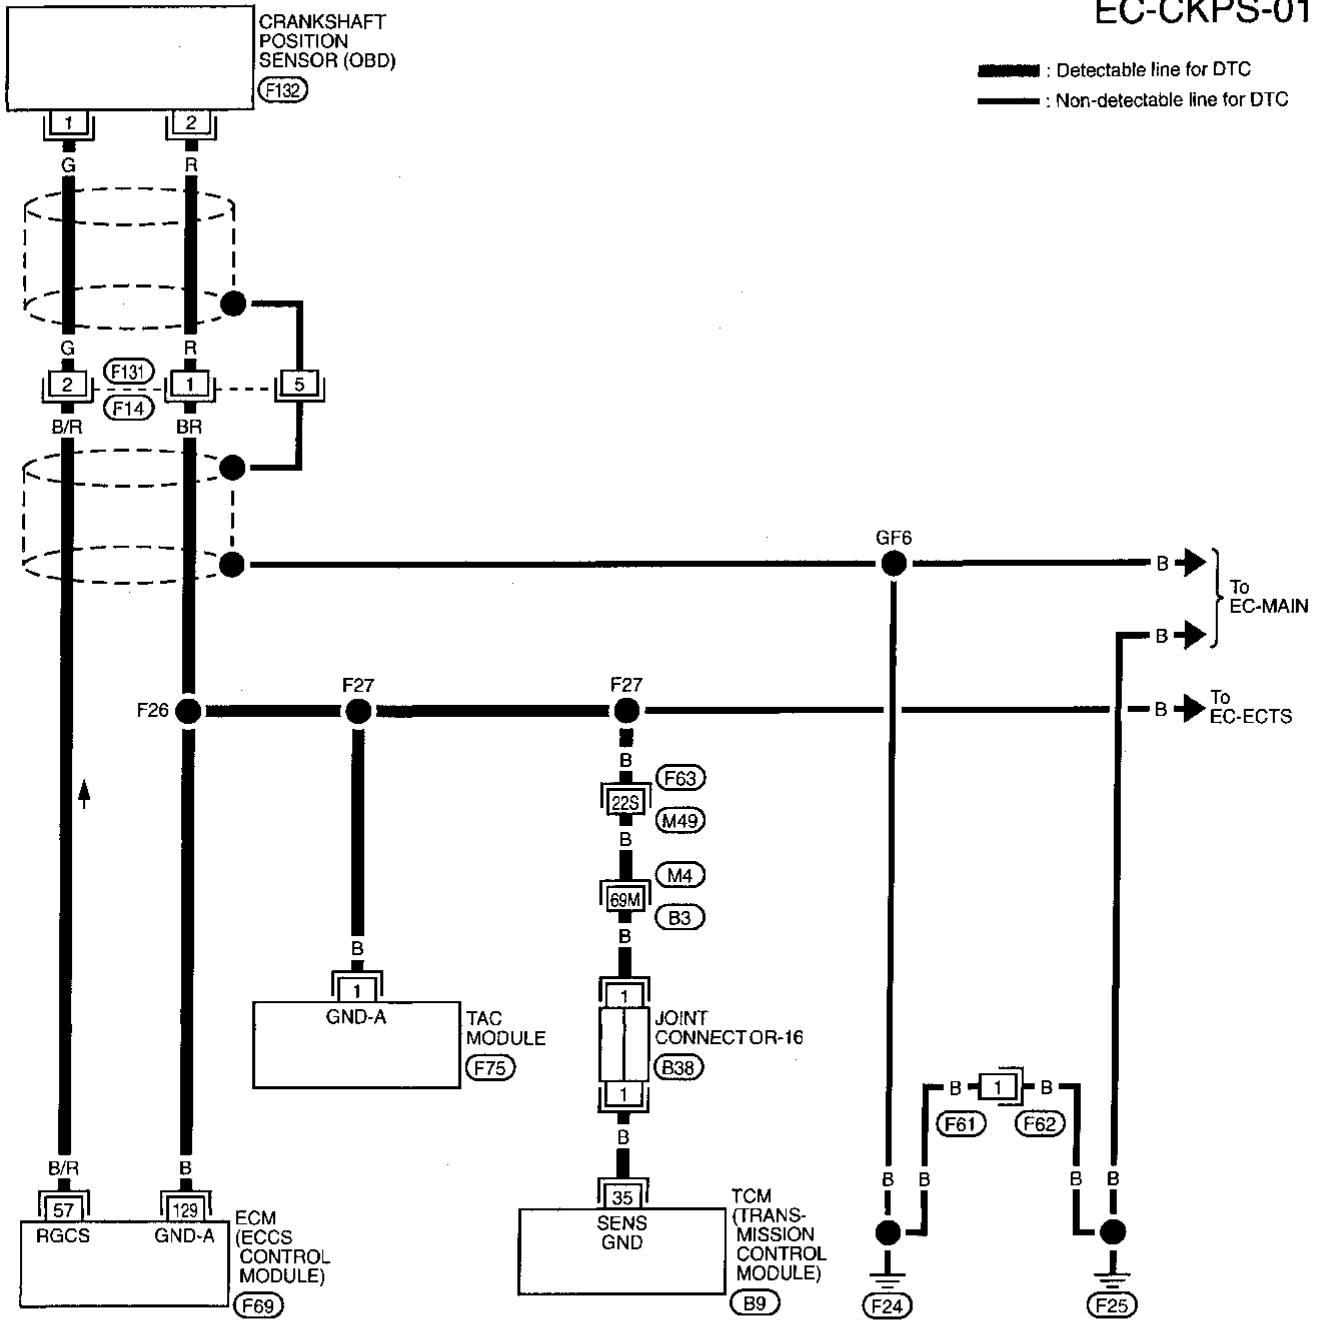

TROUBLE DIAGNOSIS FOR DTC P0335

Crankshaft Position Sensor (CKPS) (OBD) (Cont'd)

DIAGNOSTIC PROCEDURE

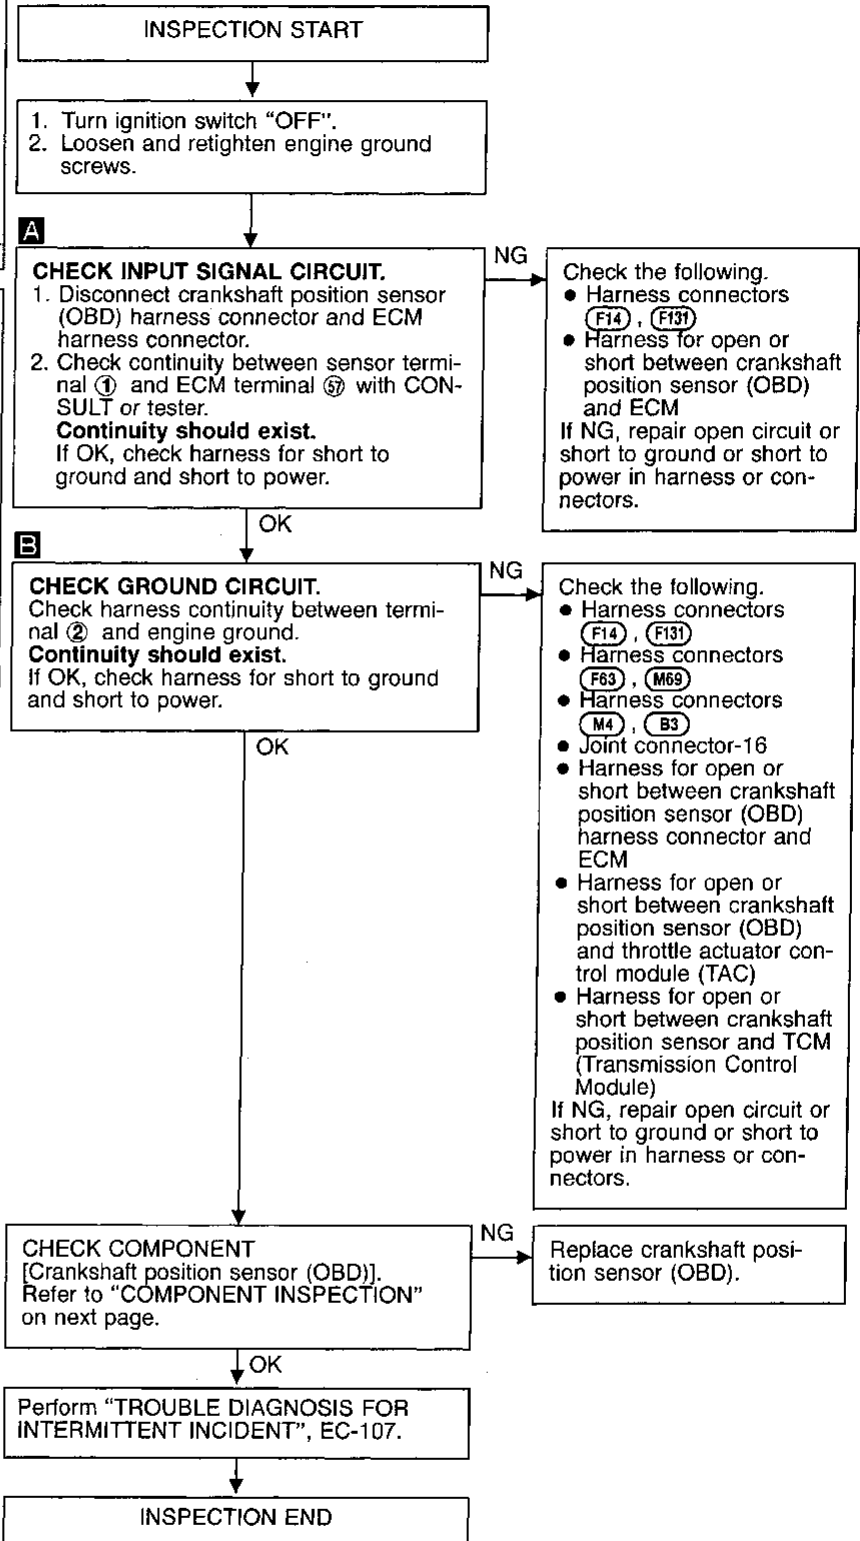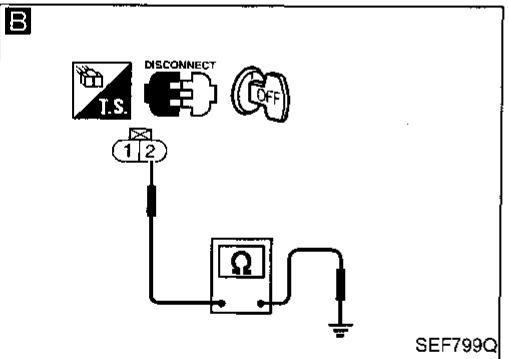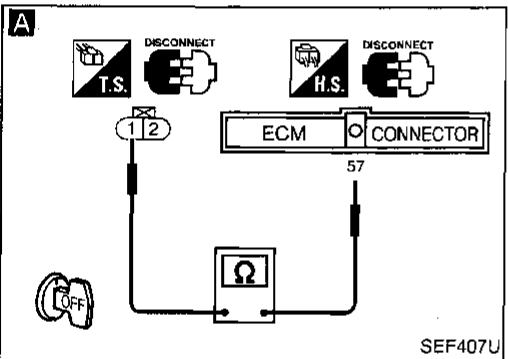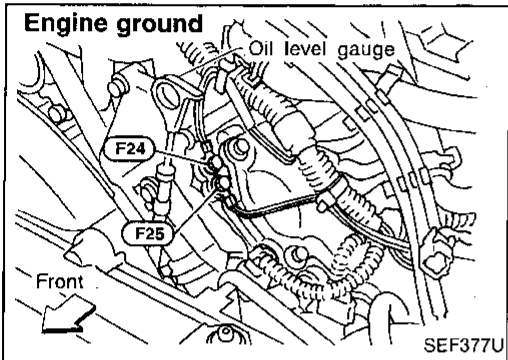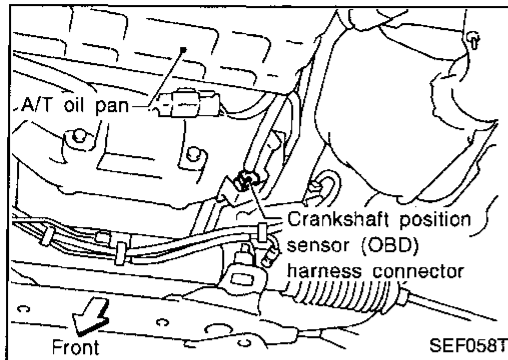

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX



TROUBLE DIAGNOSIS FOR DTC P0335

Crankshaft Position Sensor (CKPS) (OBD) (Cont'd)

COMPONENT INSPECTION

Crankshaft position sensor (OBD)



1. Disconnect crankshaft position sensor (OBD) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.

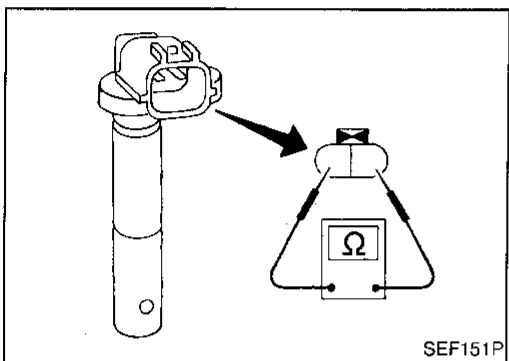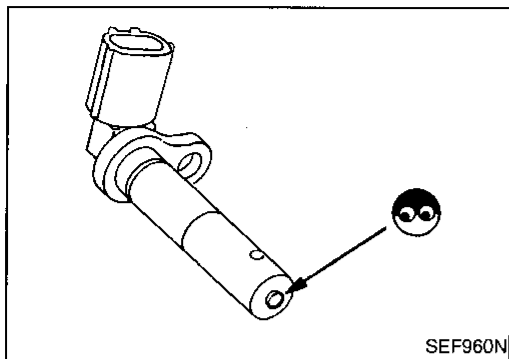

5. Check resistance as shown in the figure.

Resistance:

166.5 - 203.5Ω [at 20°C (68°F)]

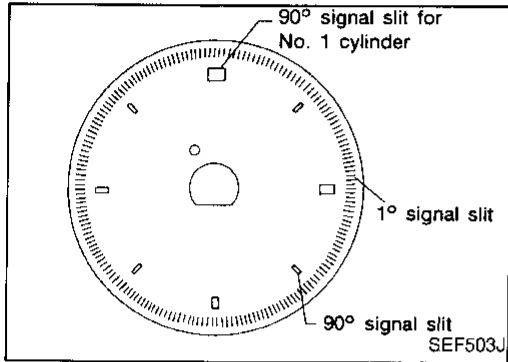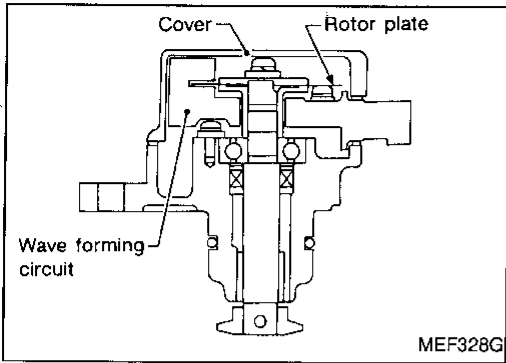

Camshaft Position Sensor (CMPS)

COMPONENT DESCRIPTION

The camshaft position sensor (CMPS) is a basic component of the ECCS. It monitors engine speed and piston position. It sends signals to the ECM to control fuel injection, ignition timing and other functions.

The camshaft position sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for 1° signal and 8 slits for 90° signal. Light Emitting Diodes (LED) and photo diodes are built into the wave-forming circuit.

When the rotor plate passes between the LED and the photo diode, the following happens:

Slits in the rotor plate continually cut the transmitted light to the photo diode from the LED. This generates rough-shaped pulses converted into on-off pulses by the wave forming circuit sent to the ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL





IDX

TROUBLE DIAGNOSIS FOR DTC P0340

Camshaft Position Sensor (CMPS) (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

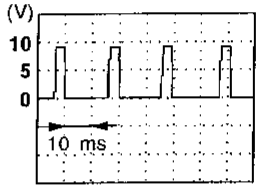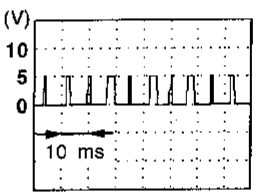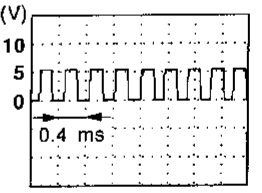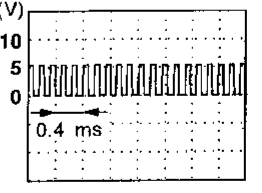TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
124	W/B	ECCS relay (Self-shutoff)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> <div style="border: 1px solid black; padding: 2px;">Ignition switch "OFF"</div> <ul style="list-style-type: none"> └ For a few seconds after turning ignition switch "OFF" 	0 - 1V
			<div style="border: 1px solid black; padding: 2px;">Ignition switch "OFF"</div> <ul style="list-style-type: none"> └ A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
55 58	P	Crankshaft position sensor (REF)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) <ul style="list-style-type: none"> └ Idle speed 	Approximately 0.6 - 1.0V  SEF540T
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) <ul style="list-style-type: none"> └ Engine speed is 2,000 rpm. 	Approximately 0.8 - 0.9V  SEF544T
59	L	Camshaft position sensor (POS)	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) <ul style="list-style-type: none"> └ Idle speed 	Approximately 2.5V  SEF547T
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) <ul style="list-style-type: none"> └ Engine speed is 2,000 rpm. 	Approximately 2.4V  SEF548T
130 131	R/G	Power supply for ECM	<div style="border: 1px solid black; padding: 2px;">Ignition switch "ON"</div>	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS FOR DTC P0340

Camshaft Position Sensor (CMPS) (Cont'd)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0340 0101	<ul style="list-style-type: none"> • Either 1° or 90° signal is not sent to ECM for the first few seconds during engine cranking. • Either 1° or 90° signal is not sent to ECM during engine running. • Either 1° or 90° signal is not in the normal pattern during engine running. 	<ul style="list-style-type: none"> • Harness or connectors (The camshaft position sensor circuit is open or shorted.) • Camshaft position sensor • Starter motor (Refer to EL section.) • Starting system circuit (Refer to EL section.) • Dead (Weak) battery

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

☆ MONITOR
☆ NO FAIL

CMPS•RPM (POS)	650rpm
MAS AIR FL/SE	1.5V

RECORD

SEF695T

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to "START" for at least 2 seconds.)

OR



- 1) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 2) Select "MODE 7" with GST.

OR






- 1) Start engine and run it for at least 2 seconds at idle speed.
(If engine does not run, turn ignition switch to "START" for at least 2 seconds.)
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0340

Camshaft Position Sensor (CMPS) (Cont'd)






EC-CMPS-01

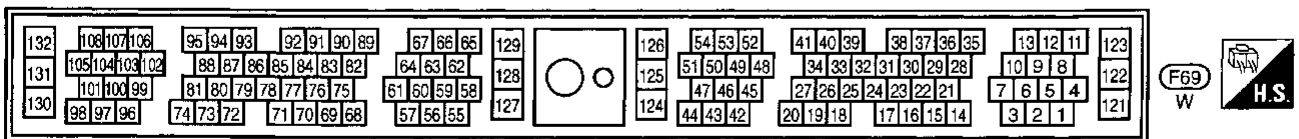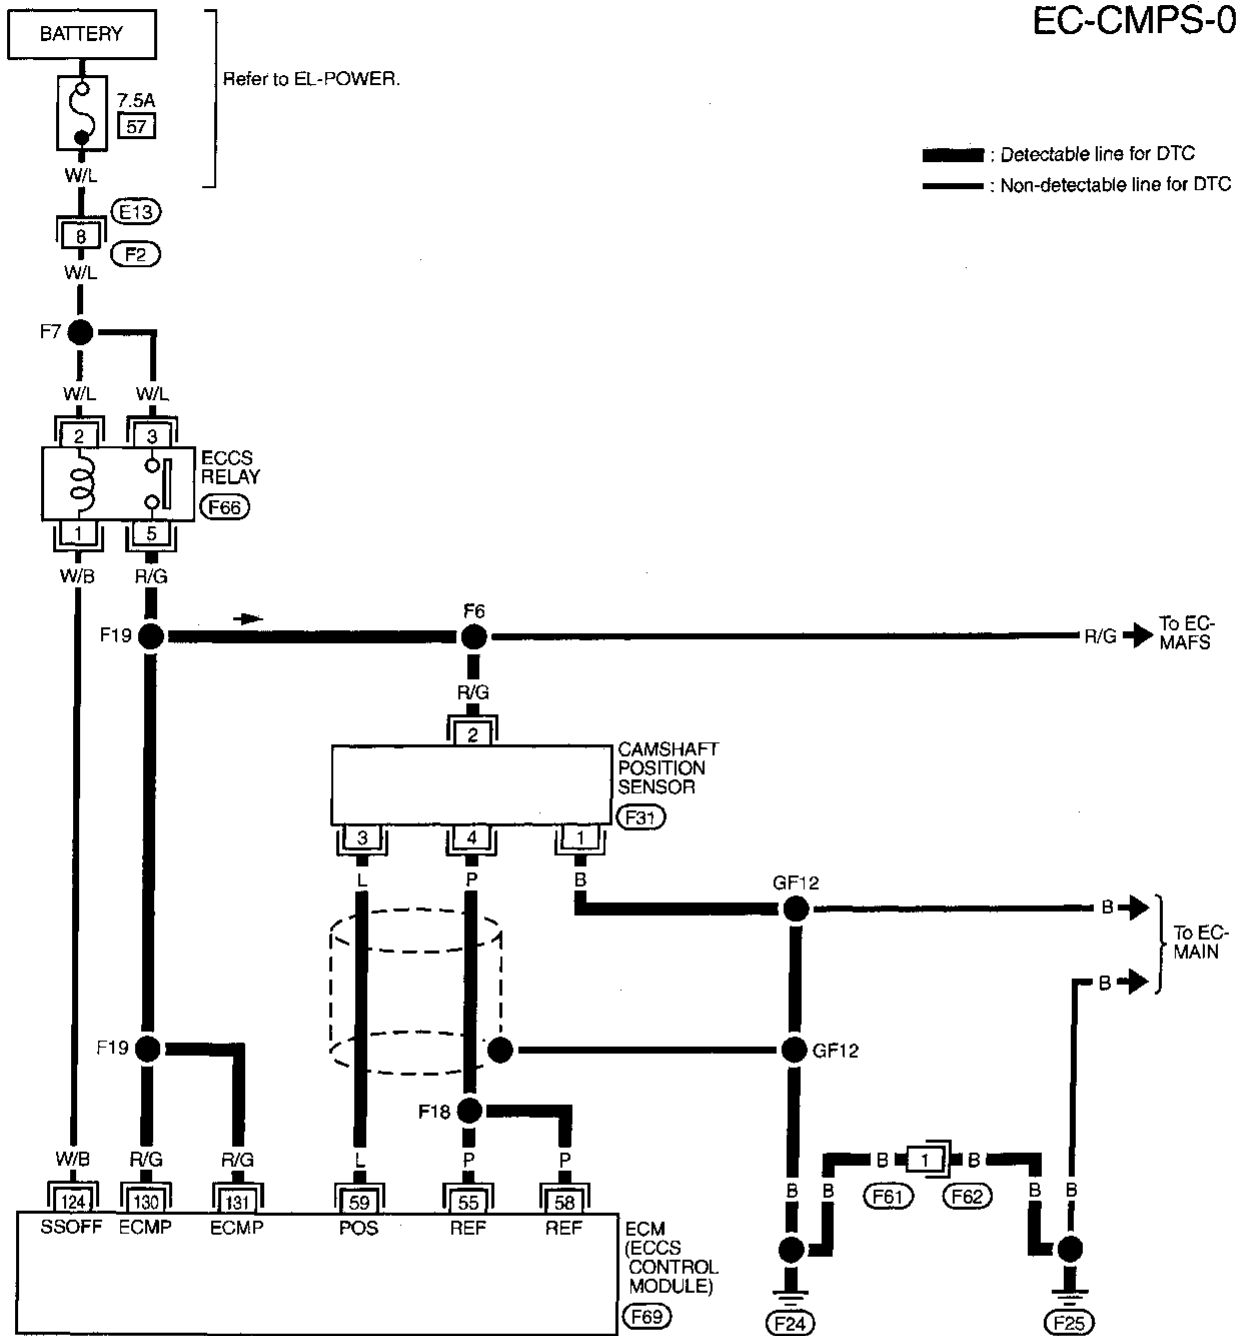

TROUBLE DIAGNOSIS FOR DTC P0340

Camshaft Position Sensor (CMPS) (Cont'd)

DIAGNOSTIC PROCEDURE

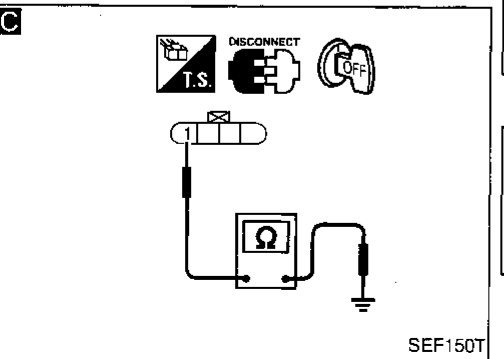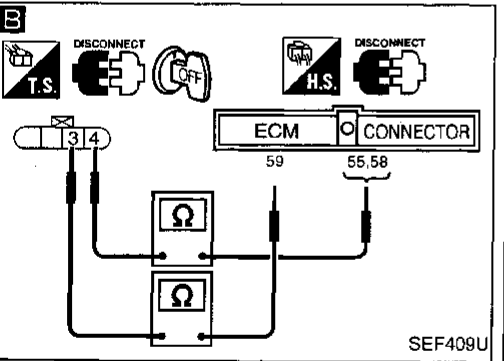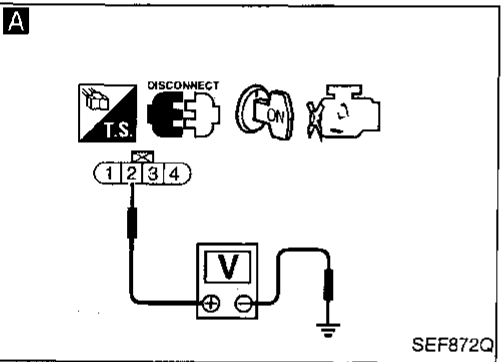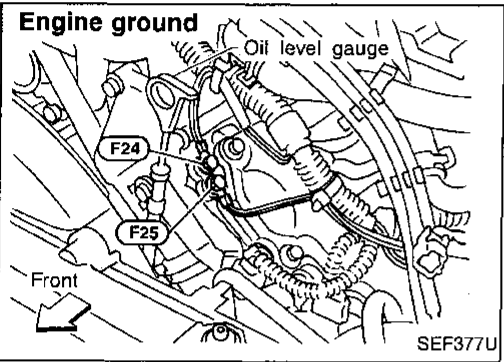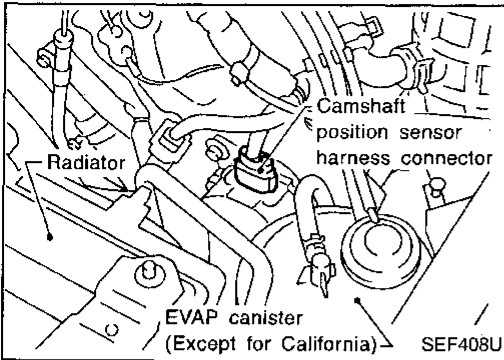

INSPECTION START

CHECK STARTING SYSTEM.
Does the engine turn over?
(Does the starter motor operate?)

No → Check starting system.
(Refer to EL section.)

Yes
1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

A
CHECK POWER SUPPLY.
1. Disconnect camshaft position sensor harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal ② and ground with CONSULT or tester.
Voltage: Battery voltage

NG → Repair harness or connector.

OK
B
CHECK INPUT SIGNAL CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect camshaft position sensor harness connector and ECM harness connector.
3. Check harness continuity between terminal ③ and ECM terminal ⑤⑨, terminal ④ and ECM terminals ⑤⑤, ⑤⑥.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

OK
C
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.
3. Check harness continuity between terminal ① and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
• Harness connectors
 (F61), (F62)
If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK
CHECK COMPONENT
[Camshaft position sensor].
Refer to "COMPONENT INSPECTION" on next page.



NG → Replace camshaft position sensor.

Ⓐ

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0340





Camshaft Position Sensor (CMPS) (Cont'd)

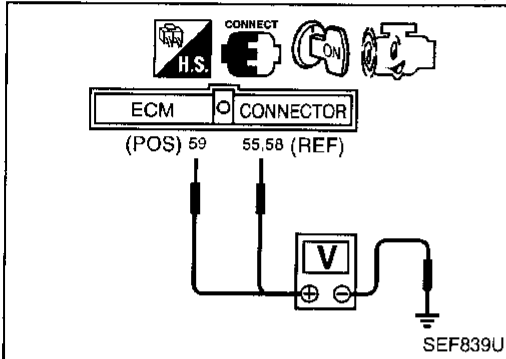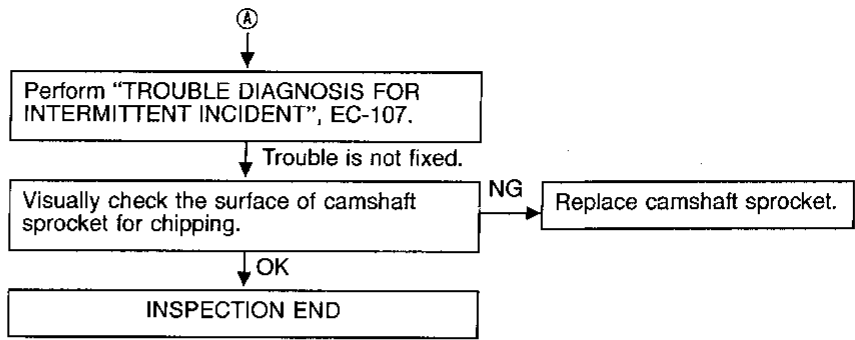

COMPONENT INSPECTION

Camshaft position sensor


1. Start engine.
2. Check voltage between ECM terminals 59 (POS) or 55, 58 (REF) and 128 (ECM ground) with DC range.

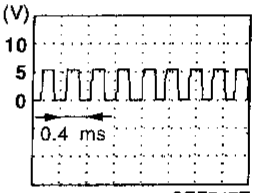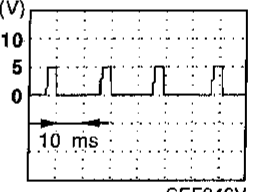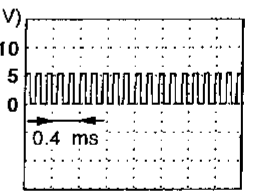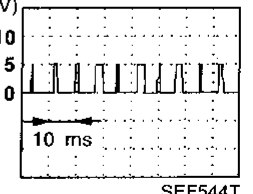Condition	Terminals	Voltage
Engine running at idle	59 and 128 (POS)	Approx. 2.5V 
	55, 58 and 128 (REF)	Approx. 0.7 - 1.2V 
Engine at 2,000 rpm	59 and 128 (POS)	
	55, 58 and 128 (REF)	

If NG, replace camshaft position sensor.



EGR Function (Close)

SYSTEM DESCRIPTION

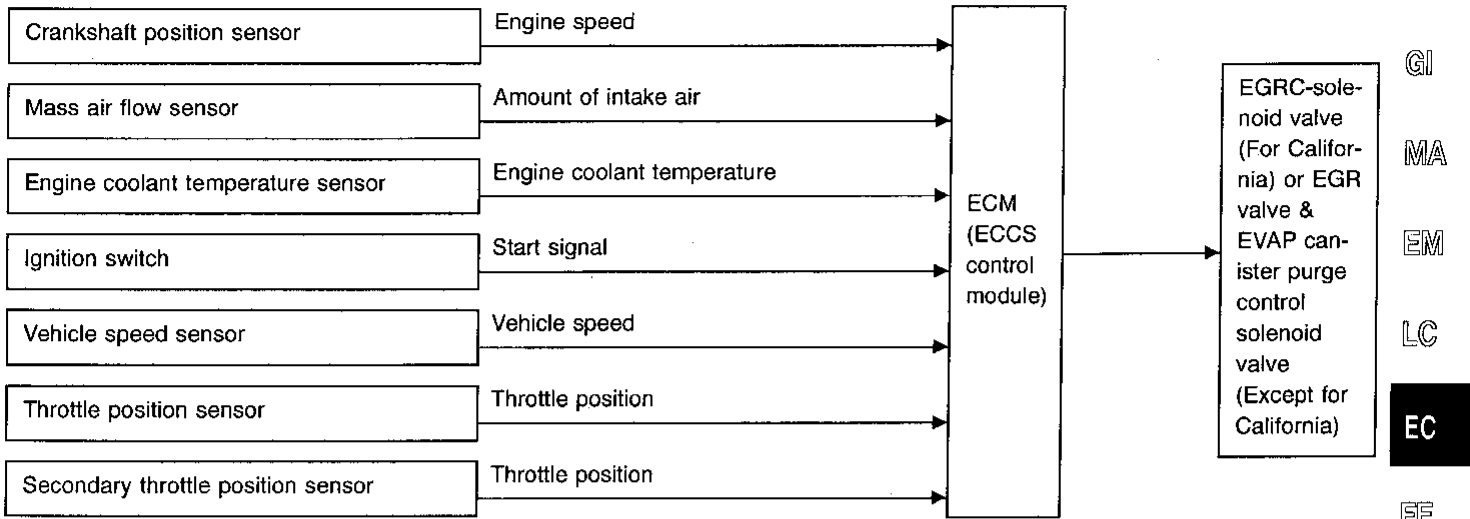

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve. When the ECM detects any of the following conditions, current flows through the solenoid valve. This causes the port vacuum to be discharged into the atmosphere. The EGR valve remain closed.

- Low engine coolant temperature
- Engine starting
- Engine stopped
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction
- Low vehicle speed
- TCS is operating

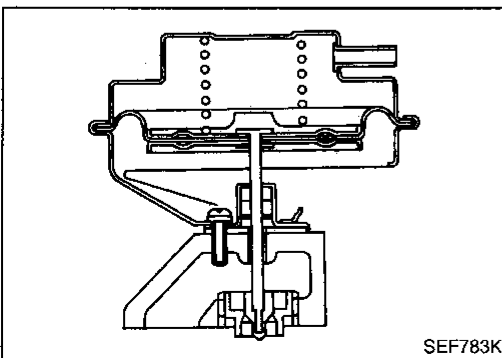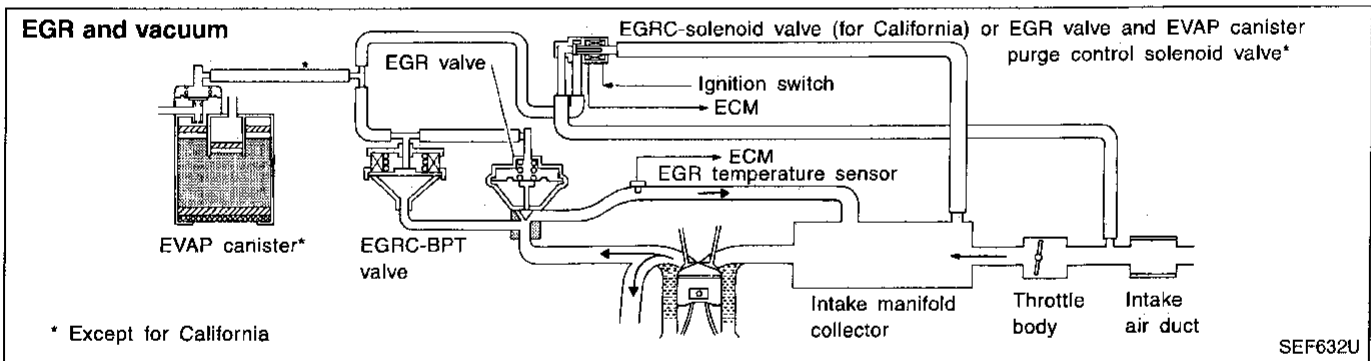

COMPONENT DESCRIPTION


Exhaust gas recirculation (EGR) valve

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

EGRC-solenoid valve (For California) or EGR valve and EVAP canister purge control solenoid valve (Except for California)

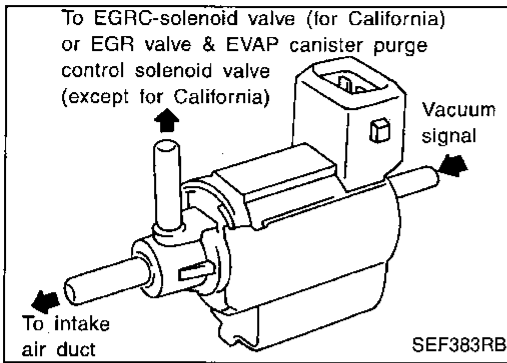

The EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. A plunger will then move to cut the vacuum signal (from the intake manifold collector to the EGR valve).

When the ECM sends an OFF signal, the vacuum signal passes through the solenoid valve. The signal then reaches the EGR valve and EVAP canister (Except for California).

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGR TEMP SEN	<ul style="list-style-type: none"> Engine: After warming up 	Less than 4.5V
EGRC SOL/V	<ul style="list-style-type: none"> Lift up drive wheels Engine: After warming up Air conditioner switch: "OFF" Shift lever: "D" No-load 	OFF
	<ul style="list-style-type: none"> Revving engine up from idle to 3,000 rpm 	ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
75	W	EGR temperature sensor	Engine is running. (Warm-up condition) └ Idle speed	Less than 4.5V
			Engine is running. (Warm-up condition) └ EGR system is operating.	0 - 1.0V
10	L/Y	EGRC-solenoid valve (For California) or EGR valve & EVAP canister purge control solenoid valve (Except for California)	Engine is running. (Warm-up condition) └ Lift up drive wheels and rev engine up from idle to 3,000 rpm in "D" position.	0 - 0.7V
			Engine is running. (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V)

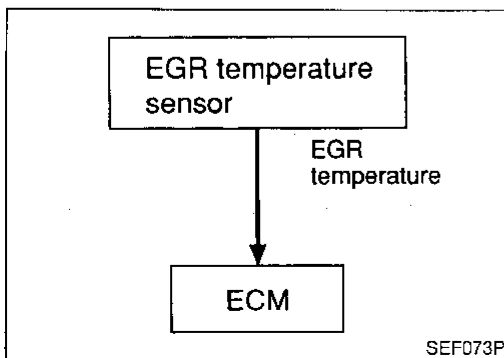

ON BOARD DIAGNOSIS LOGIC

If the absence of EGR flow is detected by EGR temperature sensor under the condition that calls for EGR, a low-flow malfunction is diagnosed.


If EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0400 0302	<ul style="list-style-type: none"> The exhaust gas recirculation (EGR) flow is excessively low during the specified driving condition. 	<ul style="list-style-type: none"> EGR valve stuck closed EGRC-BPT valve Vacuum hose EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California) EGR passage EGR temperature sensor Exhaust gas leaks

GI
MA
EM

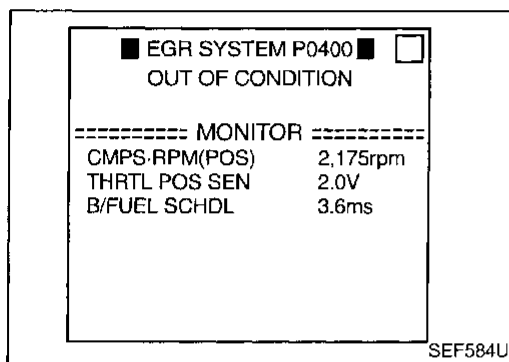

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE


CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- During the test, P0400 will not be stored in ECM even though "NG" is displayed on the CONSULT screen.

LC
EC

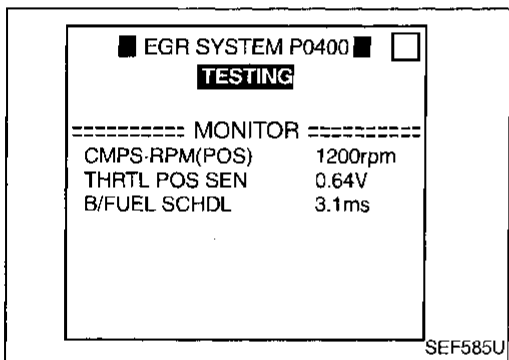

TESTING CONDITION:

Always perform the test at temperature of -10°C (14°F) or higher.



- Turn ignition switch "ON"
- Check "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT. Confirm COOLAN TEMP/S value is within the range listed below.


COOLANT TEMP/S: Less than 40°C (104°F)

If the value is out of range, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to lower the coolant temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- Turn ignition switch "ON" and select "EGR SYSTEM P0400" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine (TCS switch "OFF") and let it idle. When the engine coolant temperature reaches 70°C (158°F), immediately go to the next step.
- Accelerate vehicle to a speed of 40 km/h (25 MPH) once and then stop vehicle. If "COMPLETED" with "OK" appears on CONSULT screen, go to step 9). If "COMPLETED" does not appear on CONSULT screen, go to the following step.
- Check the output voltage of "THRTL POS SEN" at closed throttle position.
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions until "TESTING" changes to "COMPLETED". (It will take approximately 30 seconds or more.)

CMPS-RPM (POS): 1,200 - 2,200 rpm
Vehicle speed: 10 km/h (6 MPH) or more
B/FUEL SCHDL: 2.2 - 3.2 ms

PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

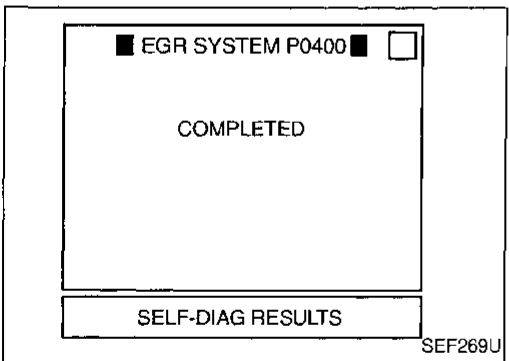

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

THRTL POS SEN: $(X + 0.34) - (X + 0.46)$ V

X = Voltage value measured at
step 7)

Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry
from step 2).

- 9) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-273.






TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

OVERALL FUNCTION CHECK

Use this procedure to check the overall EGR function. During this check, a 1st trip DTC might not be confirmed.

- 1) Lift up drive wheels.
Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 2) Shift to "D" position.
- 3) Check the EGR valve lifting when revving engine from idle up to 3,000 rpm.
EGR valve should lift up and down without sticking.
- 4) Check voltage between EGR temperature sensor harness connector terminal ① and ground at idle speed.
Less than 4.5V should exist.
- 5) Turn ignition switch "OFF".
- 6) Check harness continuity between EGR temperature sensor harness connector terminal ② and ECM terminal ⑫9.
Continuity should exist.
- 7) Perform "COMPONENTS INSPECTION", "EGR temperature sensor". Refer to EC-276.

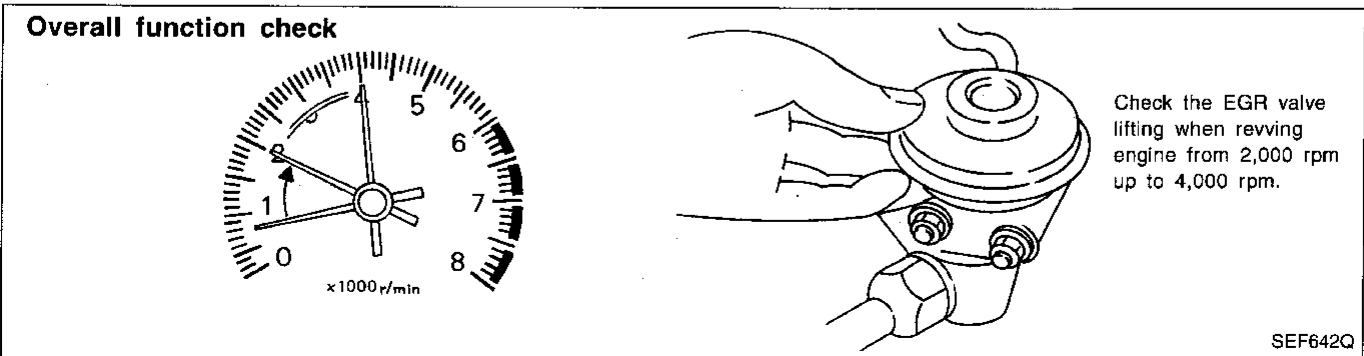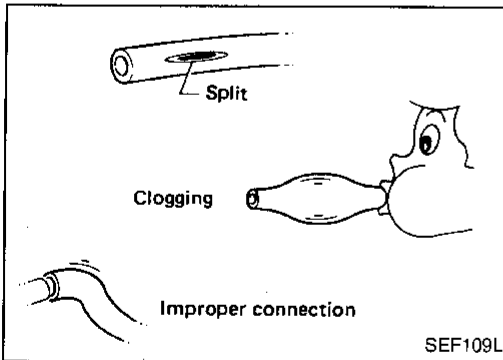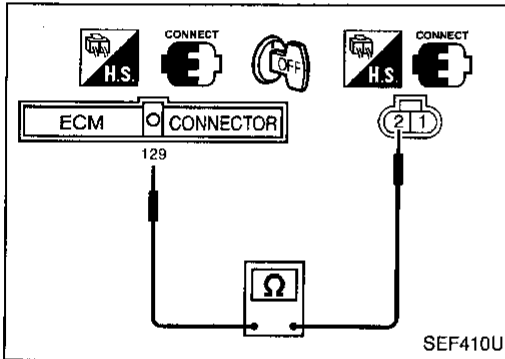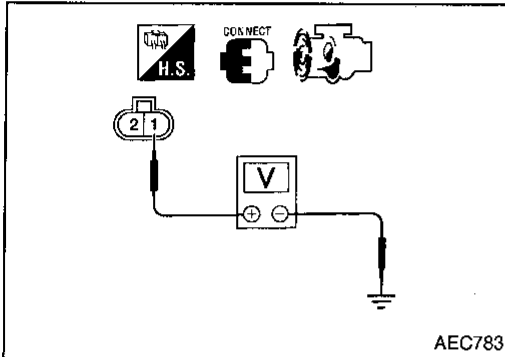
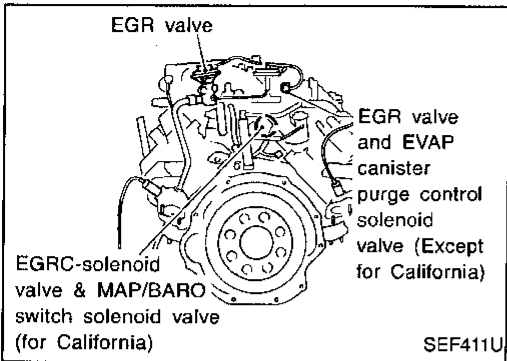


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)






EC-EGRC1-01

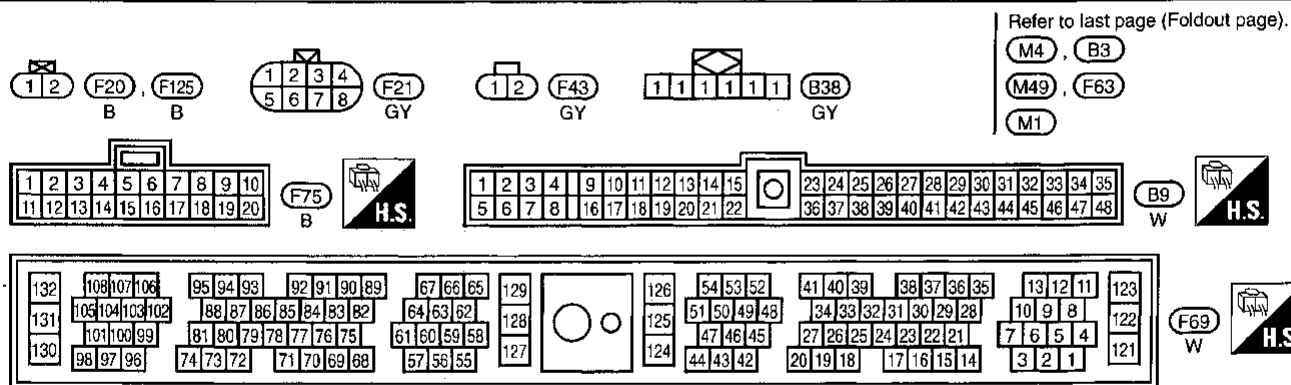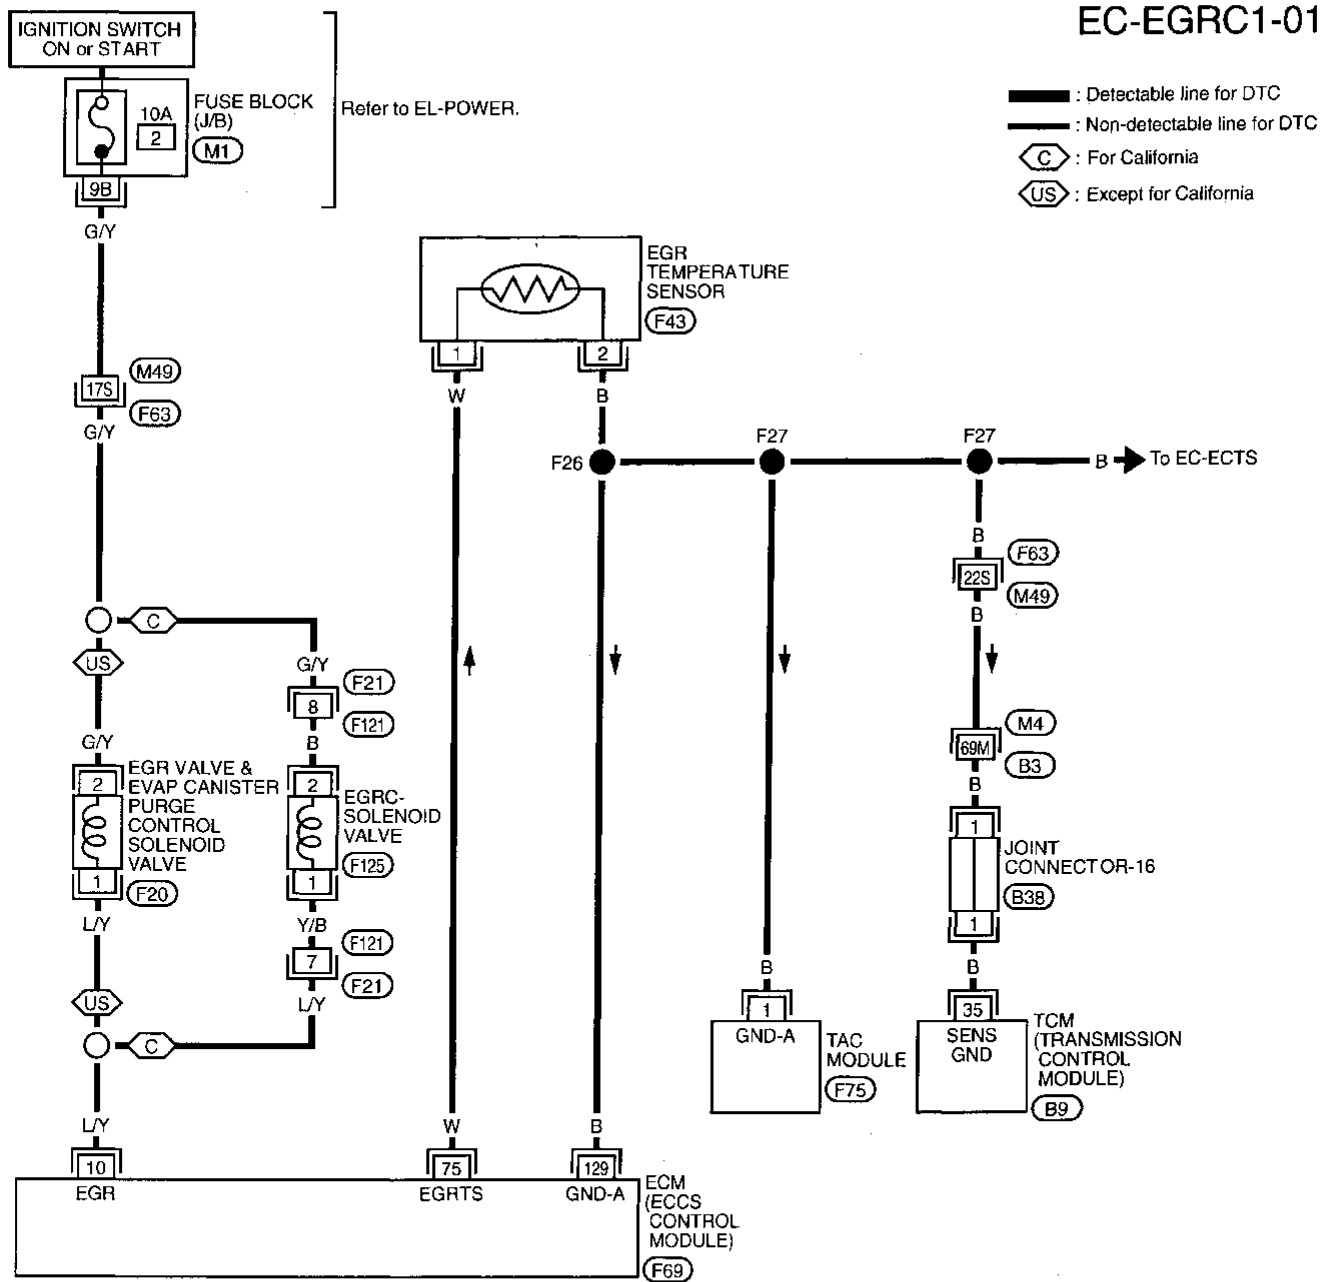

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

DIAGNOSTIC PROCEDURE

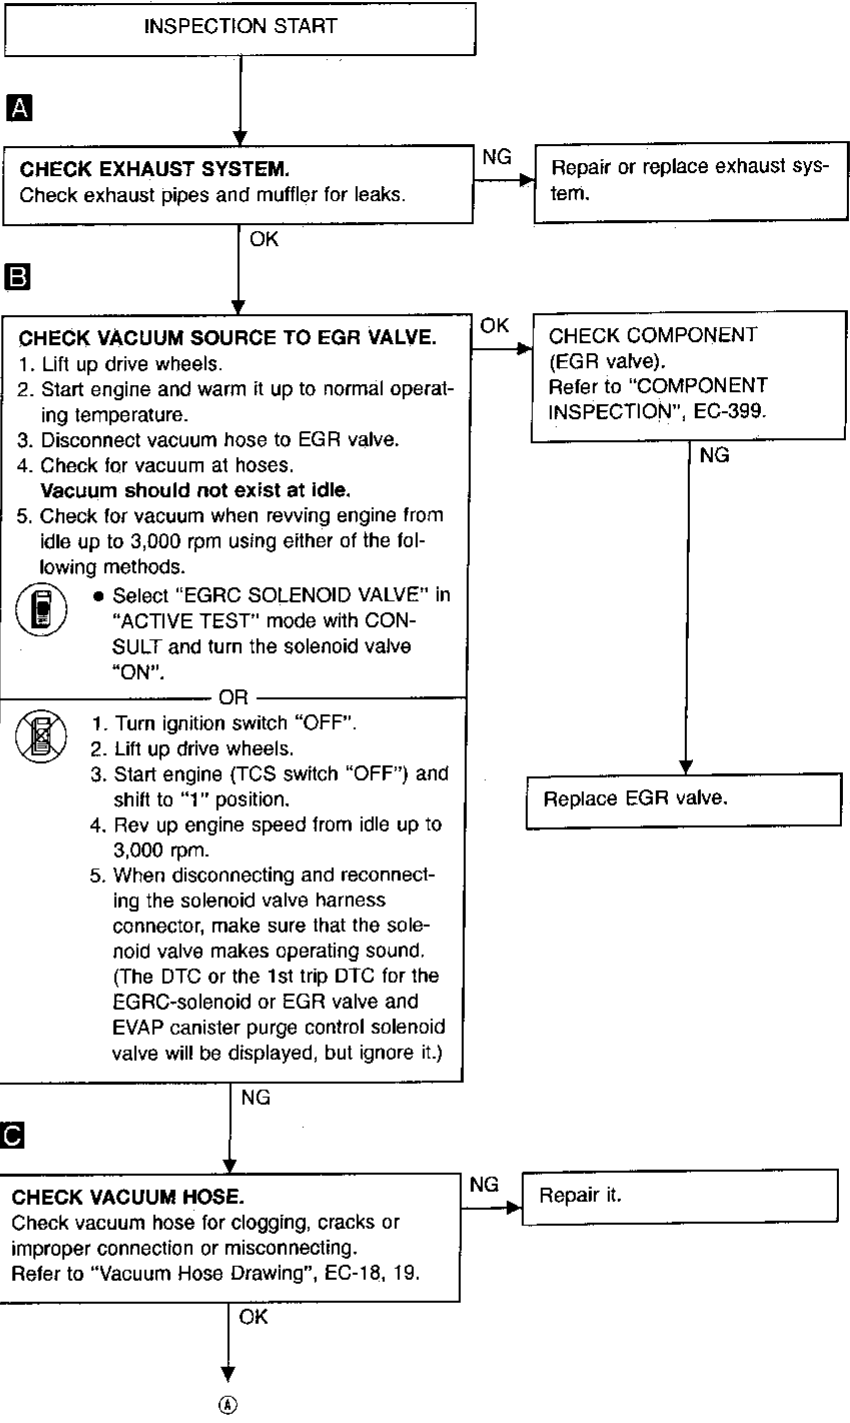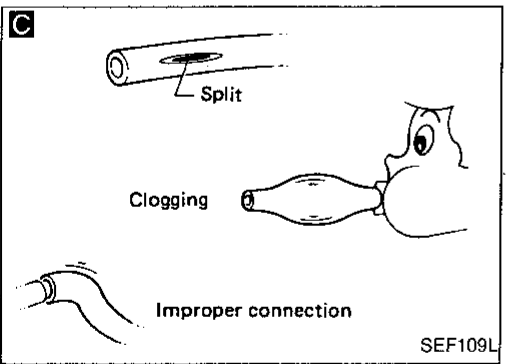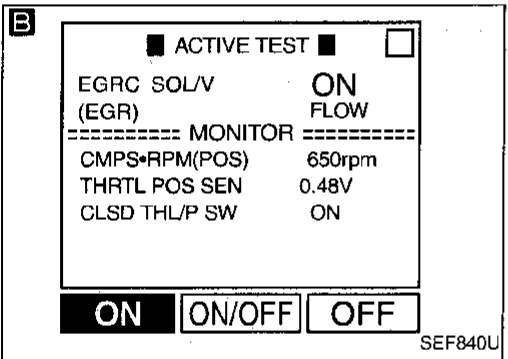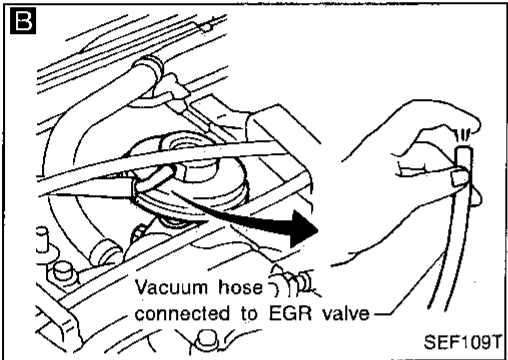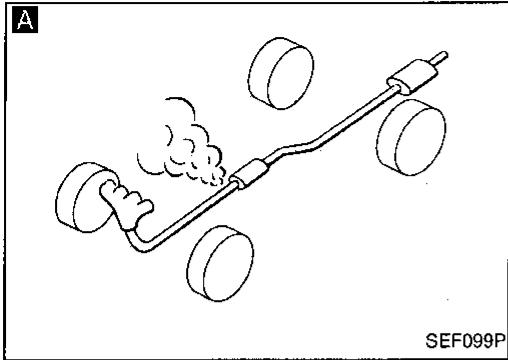

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

D

■ EGRC SOL/V CIRCUIT ■

DOES THE SOLENOID
VALVE MAKE
AN OPERATING SOUND
EVERY 3 SECONDS?

NEXT NO YES

MEF957D


D

■ ACTIVE TEST ■

EGRC SOL/V (EGR)	ON FLOW
----- MONITOR -----	
CMPS•RPM (POS)	0rpm
THRTL POS SEN	0.58V
CLSD THL/P SW	ON

ON ON/OFF OFF

SEF633U

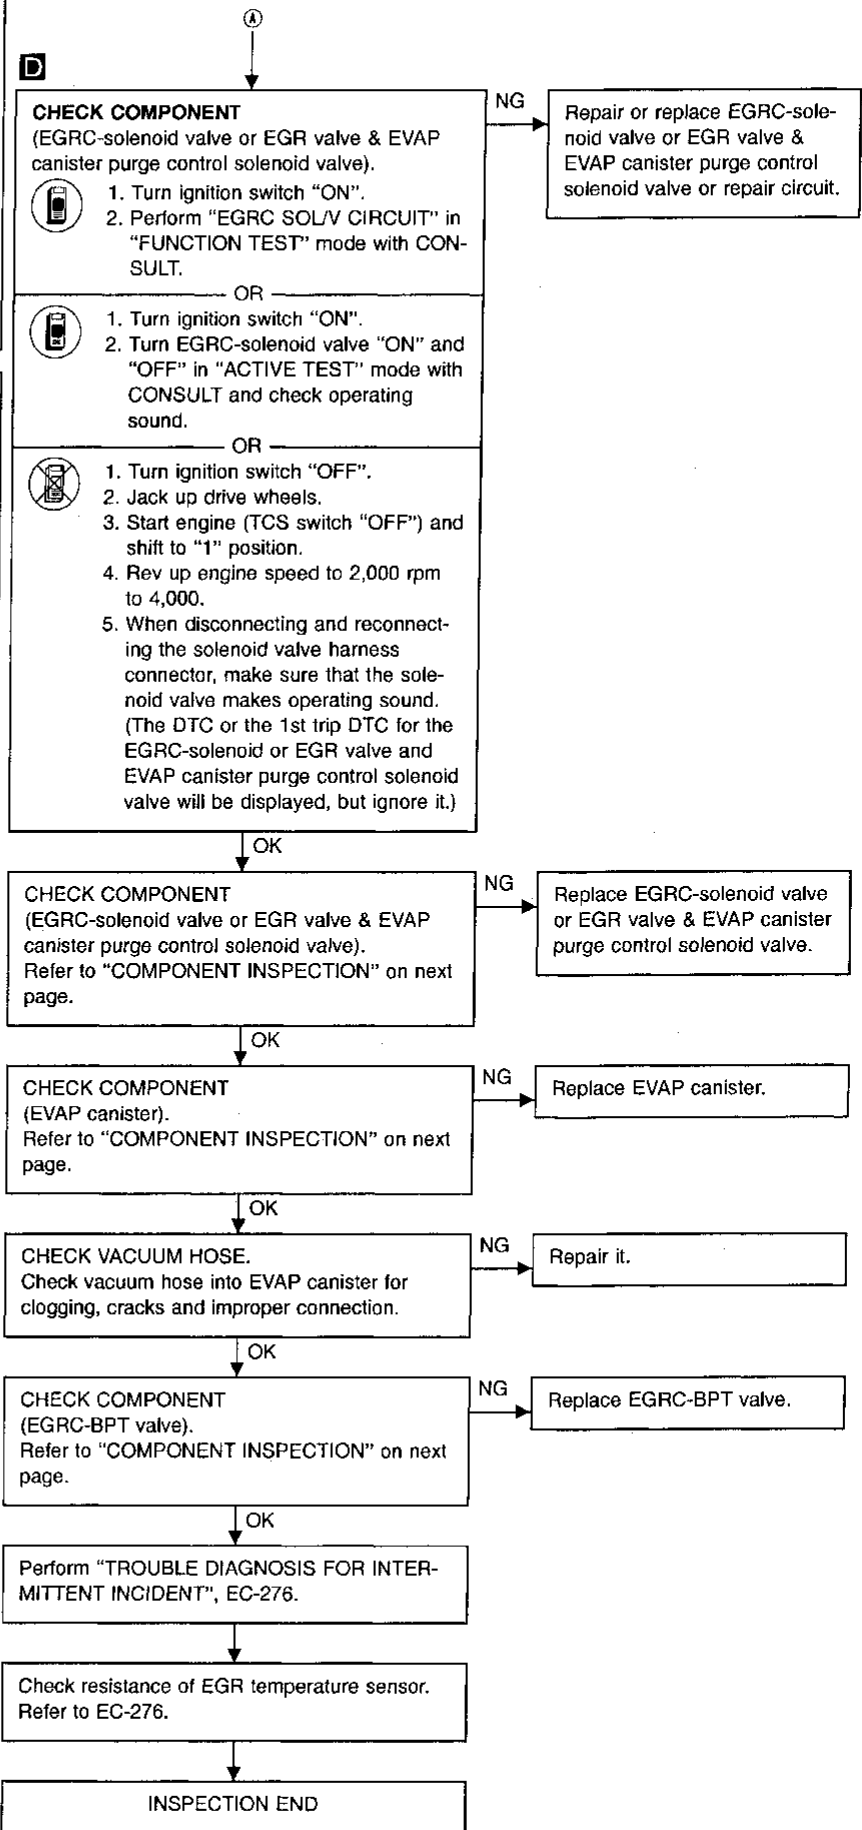

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)



COMPONENT INSPECTION

EGR valve

- Apply vacuum to EGR valve vacuum port with a hand vacuum pump.

EGR valve spring should lift.

- Check for sticking.
If NG, repair or replace EGR valve.

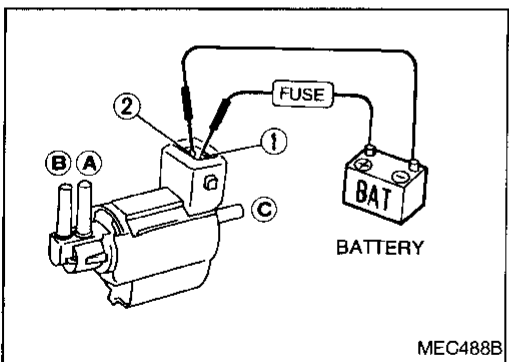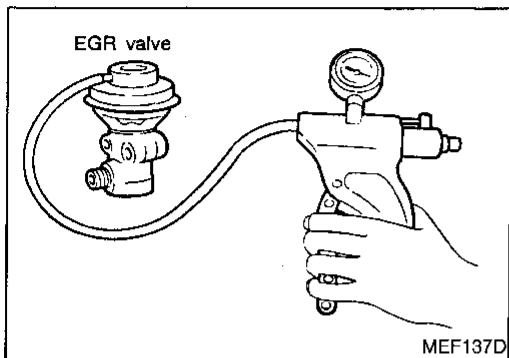


EGRC-solenoid valve (For California) or EGR valve & EVAP canister purge control solenoid valve (Except for California)

Check solenoid valve, following the table as shown below:

Conditions	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace the solenoid valve.

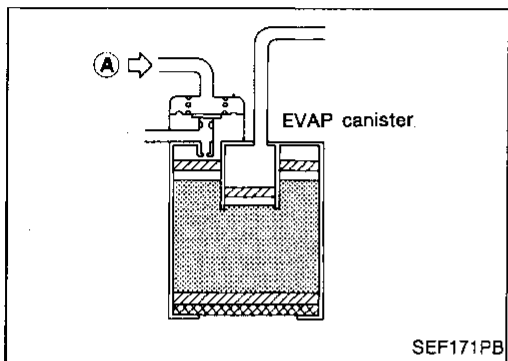

EVAP canister (Except for California)

Gently blow air from (A).

No leakage should exist.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P0400

EGR Function (Close) (Cont'd)

EGR temperature sensor


Check resistance change and resistance value.

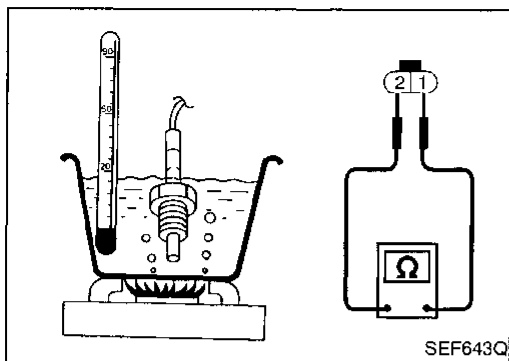


SEF643Q

EGR temperature °C (°F)	Voltage* (V)	Resistance (MΩ)
0 (32)	4.61	0.68 - 1.11
50 (122)	2.53	0.09 - 0.12
100 (212)	0.87	0.017 - 0.024

If NG, replace EGR temperature sensor.

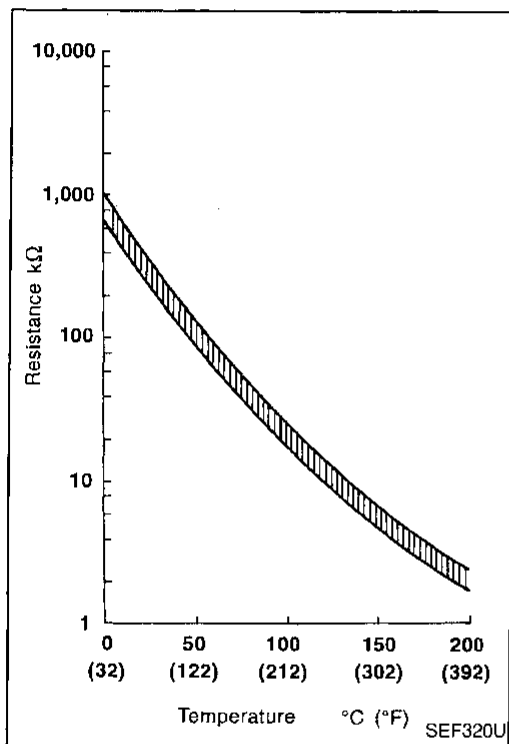

SEF320U

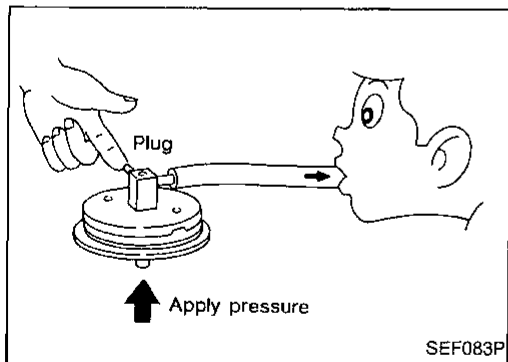


SEF083P

EGRC-BPT valve

1. Plug one of two ports of EGRC-BPT valve.
2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve.
3. If a leakage is noted, replace the valve.

EGRC-BPT Valve Function

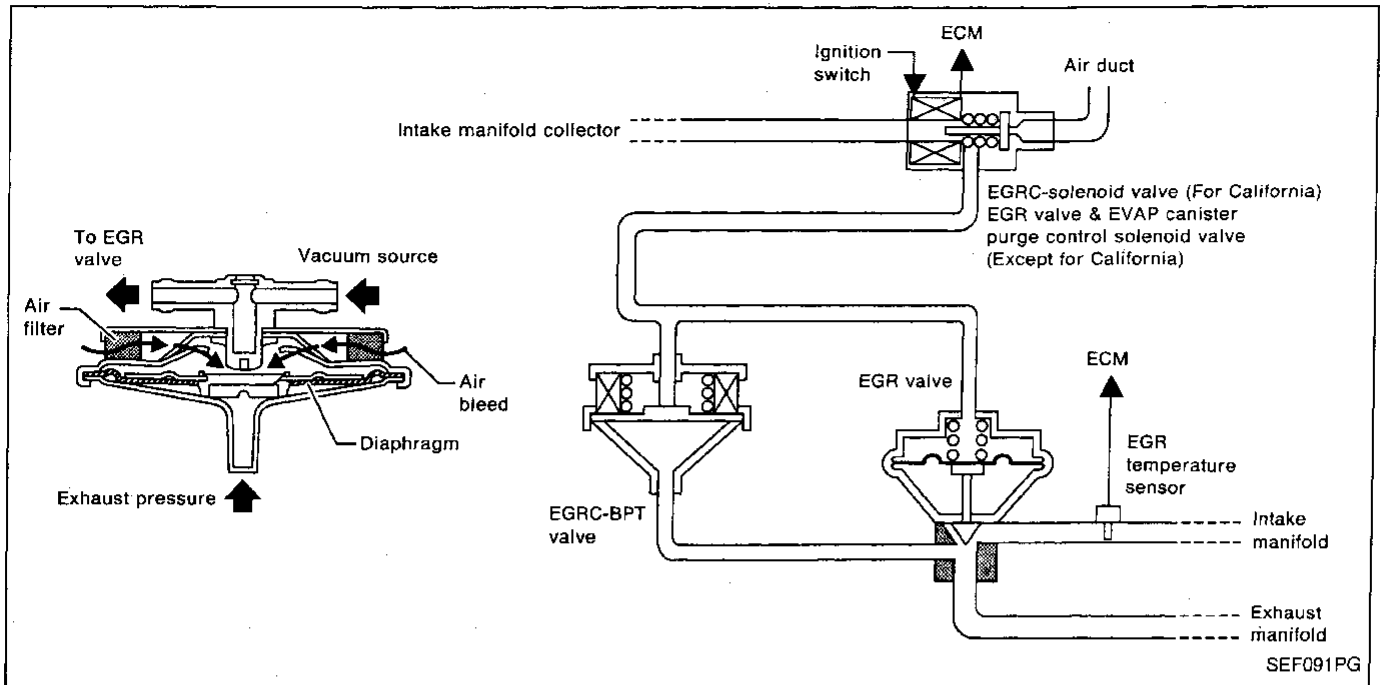

SYSTEM DESCRIPTION

The EGRC-BPT valve monitors exhaust pressure to activate the diaphragm, controlling throttle body vacuum applied to the EGR valve. In other words, recirculated exhaust gas is controlled in response to positioning of the EGR valve or to engine operation.

ON BOARD DIAGNOSIS LOGIC

If too much EGR flow exists due to an EGRC-BPT valve malfunction, off idle engine roughness will increase. If the roughness is excessive, then the vacuum to the EGR valve is interrupted through the EGR valve & EVAP canister purge control solenoid valve. If the engine roughness is reduced at that time, the EGRC-BPT valve malfunction is indicated.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0402 0306	<ul style="list-style-type: none"> The EGRC-BPT valve does not operate properly. 	<ul style="list-style-type: none"> EGRC-BPT valve EGR valve Loose or disconnected rubber tube Blocked rubber tube Camshaft position sensor Blocked exhaust system Orifice Mass air flow sensor EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California)

TROUBLE DIAGNOSIS FOR DTC P0402

EGRC-BPT Valve Function (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform the test at temperature of -10°C (14°F) or higher.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "EGRC-BPT/V P0402" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- 4) Start engine (TCS switch "OFF") and let it idle.
- 5) Touch "START".
- 6) Check the output voltage of "THRTL POS SEN" at closed throttle position.

- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen and the bar chart may increase. Maintain the conditions many times until "COMPLETED" appears.

Selector lever: Suitable position

CMPS-RPM (POS): 1,200 - 1,400 rpm

Vehicle speed: 30 - 56 km/h (19 - 35 MPH)

B/FUEL SCHDL: 2.3 - 3.2 ms

THRTL POS SEN: $(X + 0.04) - (X + 0.30)$ V

X = Voltage value measured at step 6)




- The bar chart on CONSULT screen indicates the status of this test. However, the test may be finished before the bar chart becomes full scale.
 - If the bar chart indication does not continue to progress, completely release accelerator pedal once and try to meet the conditions again.
 - If "TESTING" does not appear on CONSULT screen, retry from step 2).
- 8) If "OK" is displayed, carry out "OVERALL FUNCTION CHECK" below. If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-280.

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EGRC-BPT valve. During the check, a 1st trip DTC might not be confirmed.

- 1) Disconnect the vacuum hose to the fuel pressure regulator at the intake manifold collector.
- 2) Disconnect the vacuum hose to the EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (Except for California) at the EGRC-BPT valve.
- 3) Connect the intake manifold collector and the EGRC-BPT valve with a rubber tube that has 0.5 mm (0.020 in) dia. orifice. (The intake manifold vacuum will be directly applied to the EGRC-BPT valve.)
- 4) Start engine.

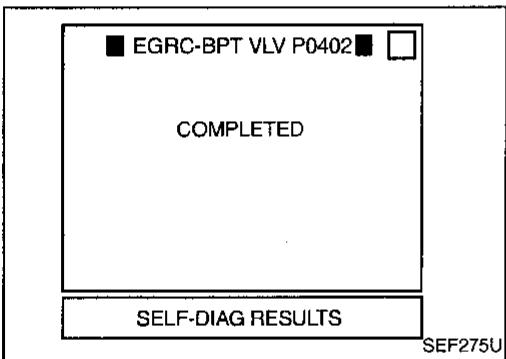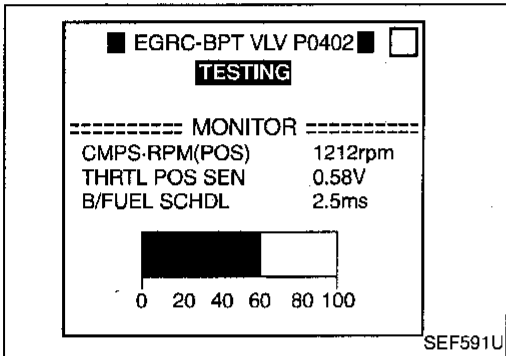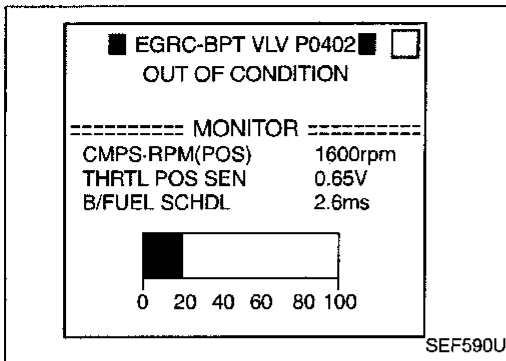

TROUBLE DIAGNOSIS FOR DTC P0402

EGRC-BPT Valve Function (Cont'd)


- 5) Check for the EGR valve lifting with engine at less than 1,500 rpm under no load.

EGR valve should remain closed or slightly lift up.

- 6) Keep engine speed at about 2,000 rpm, then check the EGR valve lifting when revving engine up to 4,000 rpm under no load.

EGR valve should lift up to the full position, and go down without sticking when the engine is returned to idle.

- 7) Check rubber tube between the EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve and intake manifold collector for misconnection, cracks or obstruction.

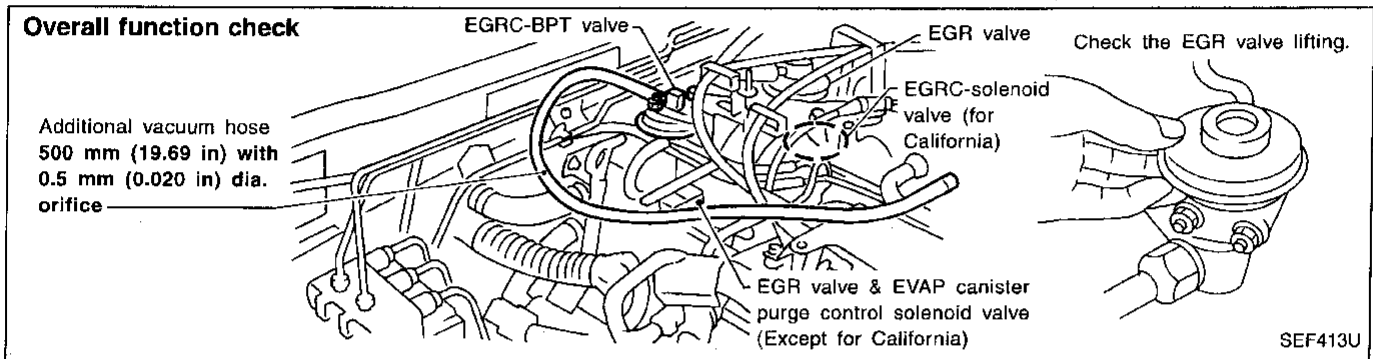

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0402

EGRC-BPT Valve Function (Cont'd) DIAGNOSTIC PROCEDURE

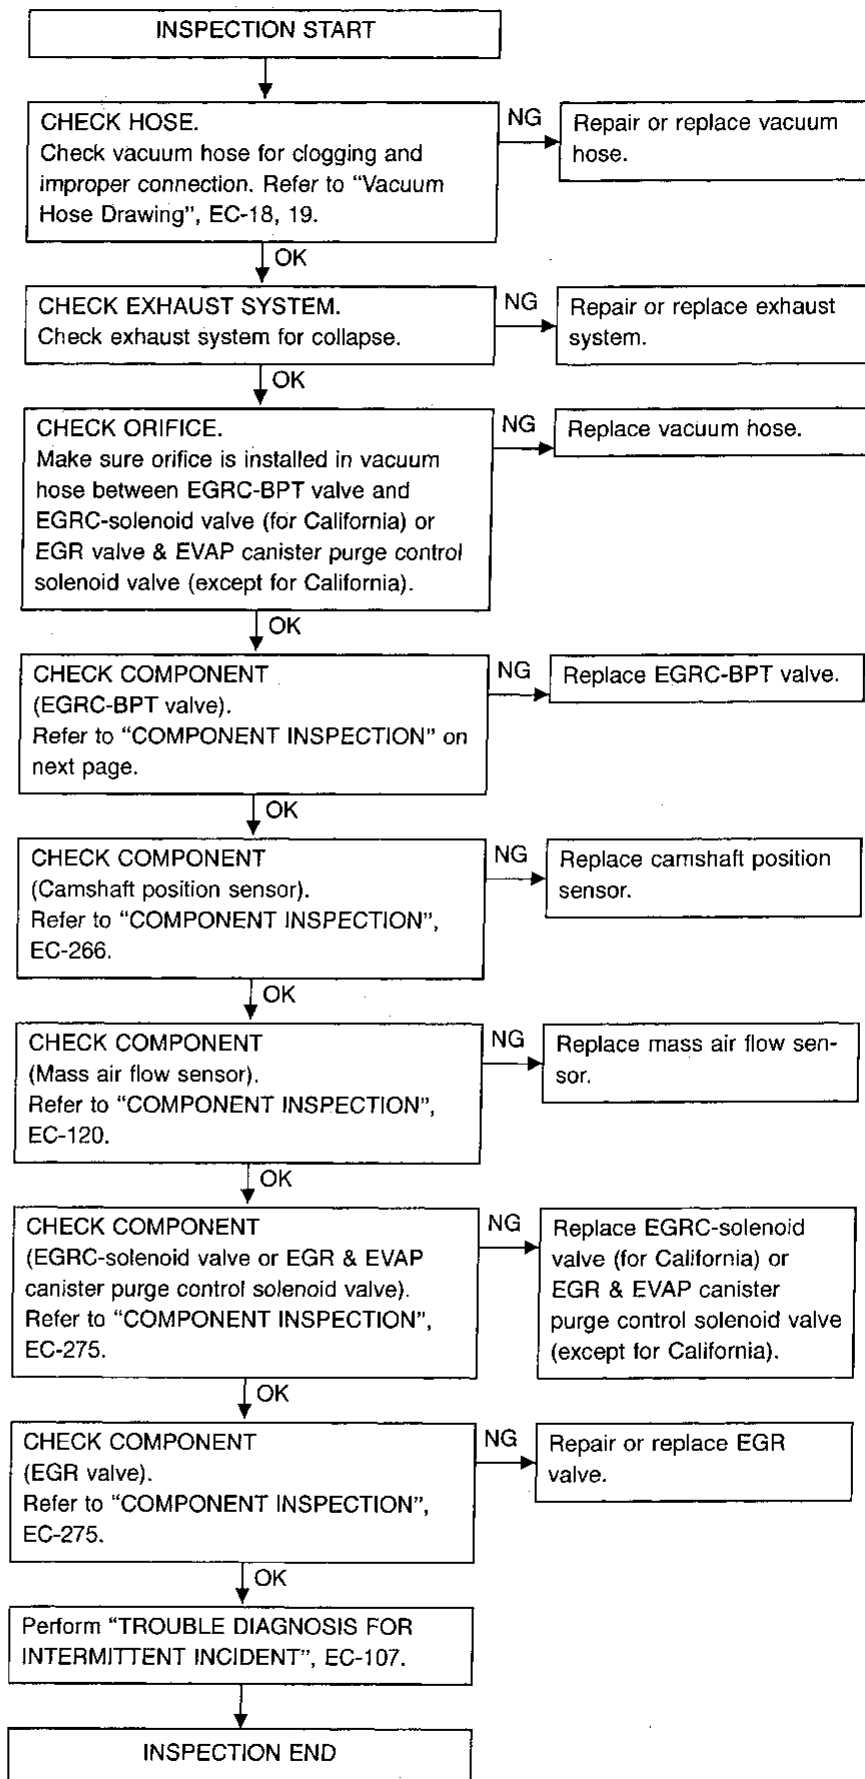


TROUBLE DIAGNOSIS FOR DTC P0402

EGRC-BPT Valve Function (Cont'd)

COMPONENT INSPECTION

EGRC-BPT valve

1. Plug one of two ports of EGRC-BPT valve.
2. Vacuum from the other port and check leakage without applying any pressure from under EGRC-BPT valve.
Leakage should exist.

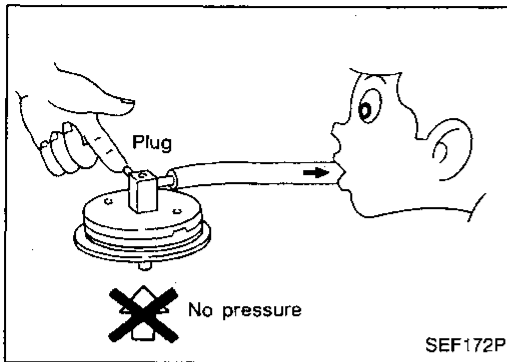

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0420 (-B1), P0430 (-B2)

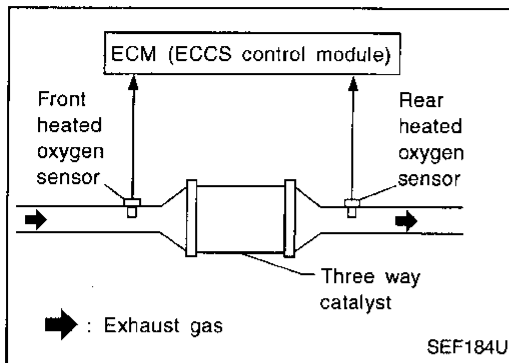

Three Way Catalyst Function (P0420: Left bank), (P0430: Right bank)



ON BOARD DIAGNOSIS LOGIC

ECM monitors the switching frequency ratio of front and rear heated oxygen sensors.

A three way catalyst with high oxygen storage capacity will indicate a low switching frequency of rear heated oxygen sensor. As oxygen storage capacity decreases, the rear heated oxygen sensor switching frequency will increase.

When the frequency ratio of front and rear heated oxygen sensors approaches a specified limit value, the three way catalyst malfunction is diagnosed.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0420 0702 (Left bank)	<ul style="list-style-type: none"> • Three way catalyst does not operate properly. • Three way catalyst does not have enough oxygen storage capacity. 	<ul style="list-style-type: none"> • Three way catalyst • Exhaust tube • Intake air leaks • Injectors • Injector leaks • Spark plug • Improper ignition timing
P0430 0703 (Right bank)		

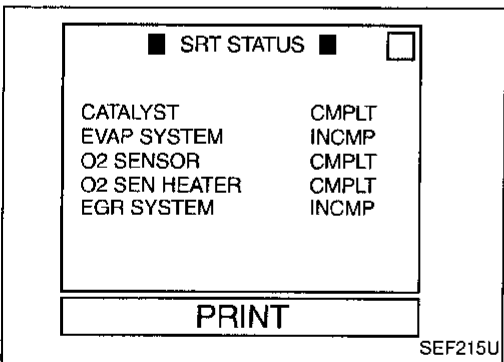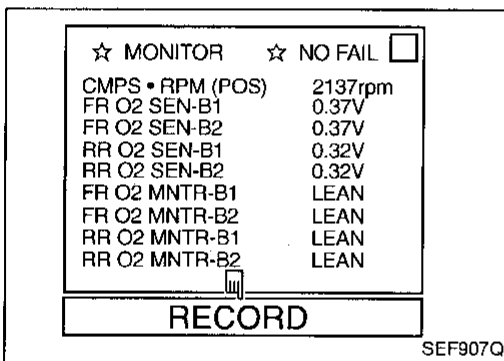

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set "MANU TRIG" and "HI SPEED", then select "FR O2 SEN-B1 (-B2)", "RR O2 SEN-B1 (-B2)", "FR O2 MNTR-B1 (-B2)", "RR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode with CONSULT.
- 3) Touch "RECORD" on CONSULT screen with engine speed held at 2,000 rpm constantly under no load.
- 4) Make sure that the switching frequency between "RICH" and "LEAN" of "RR O2 MNTR-B1 (-B2)" is much less than that of "FR O2 MNTR-B1 (-B2)" as shown below.

Switching frequency ratio =

Rear heated oxygen sensor switching frequency

Front heated oxygen sensor switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, the three way catalyst is not operating properly.

If the "FR O2 MNTR-B1 (-B2)" does not indicate "RICH" and "LEAN" periodically more than 5 times within 10 seconds at step 3), perform TROUBLE DIAGNOSES FOR DTC P0133 first.

If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-284.

If the result is OK, go to following step.

TROUBLE DIAGNOSIS FOR DTC P0420 (-B1), P0430 (-B2)

Three Way Catalyst Function (P0420: Left bank), (P0430: Right bank) (Cont'd)

- 5) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT.
- 6) Drive vehicle at a speed of approximately 84 to 96 km/h (52 to 60 MPH) with D position ("OD" ON) for at least 10 consecutive minutes.
(Drive the vehicle in an area where vehicle speed and accelerator pressure can be held steady and constant.)
If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-284.
- 7) Select "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT.
- 8) Verify that "CATALYST" is "CMPLT".
If not "CMPLT", repeat the test from step 2).

GI
MA
EM
LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

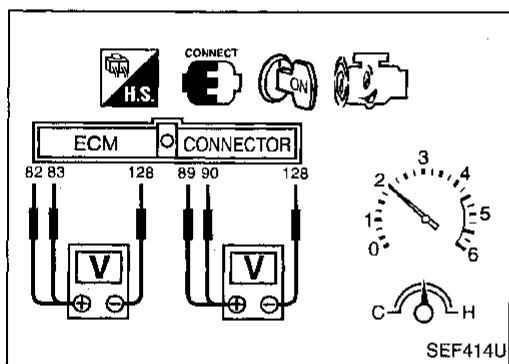

OR OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the three way catalyst.

During this check, a DTC might not be confirmed.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeters probes between ECM terminals 82 RH, 83 LH (sensor signal front) and 128 (ECM ground). 89 RH, 90 LH (sensor signal rear) and 128 (ECM ground).
- 3) Keep engine speed at 2,000 rpm constant under no load.
- 4) Make sure that the voltage switching frequency (high & low) between ECM terminals 89 and 128 is much less than that of ECM terminals 82 and 128 (right bank). Or 90 and 128 is much less than that of the terminals 83 and 128 (left bank).

Switching frequency ratio =

Rear heated oxygen sensor voltage switching frequency

Front heated oxygen sensor voltage switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, it means three way catalyst does not operate properly.





NOTE:

If the voltage at terminal 82 or 83 does not switch periodically more than 5 times within 10 seconds at step 3, perform TROUBLE DIAGNOSIS FOR DTC P0130 or P0150 first, EC-156.

TROUBLE DIAGNOSIS FOR DTC P0420 (-B1), P0430 (-B2)

Three Way Catalyst Function (P0420: Left bank), (P0430: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

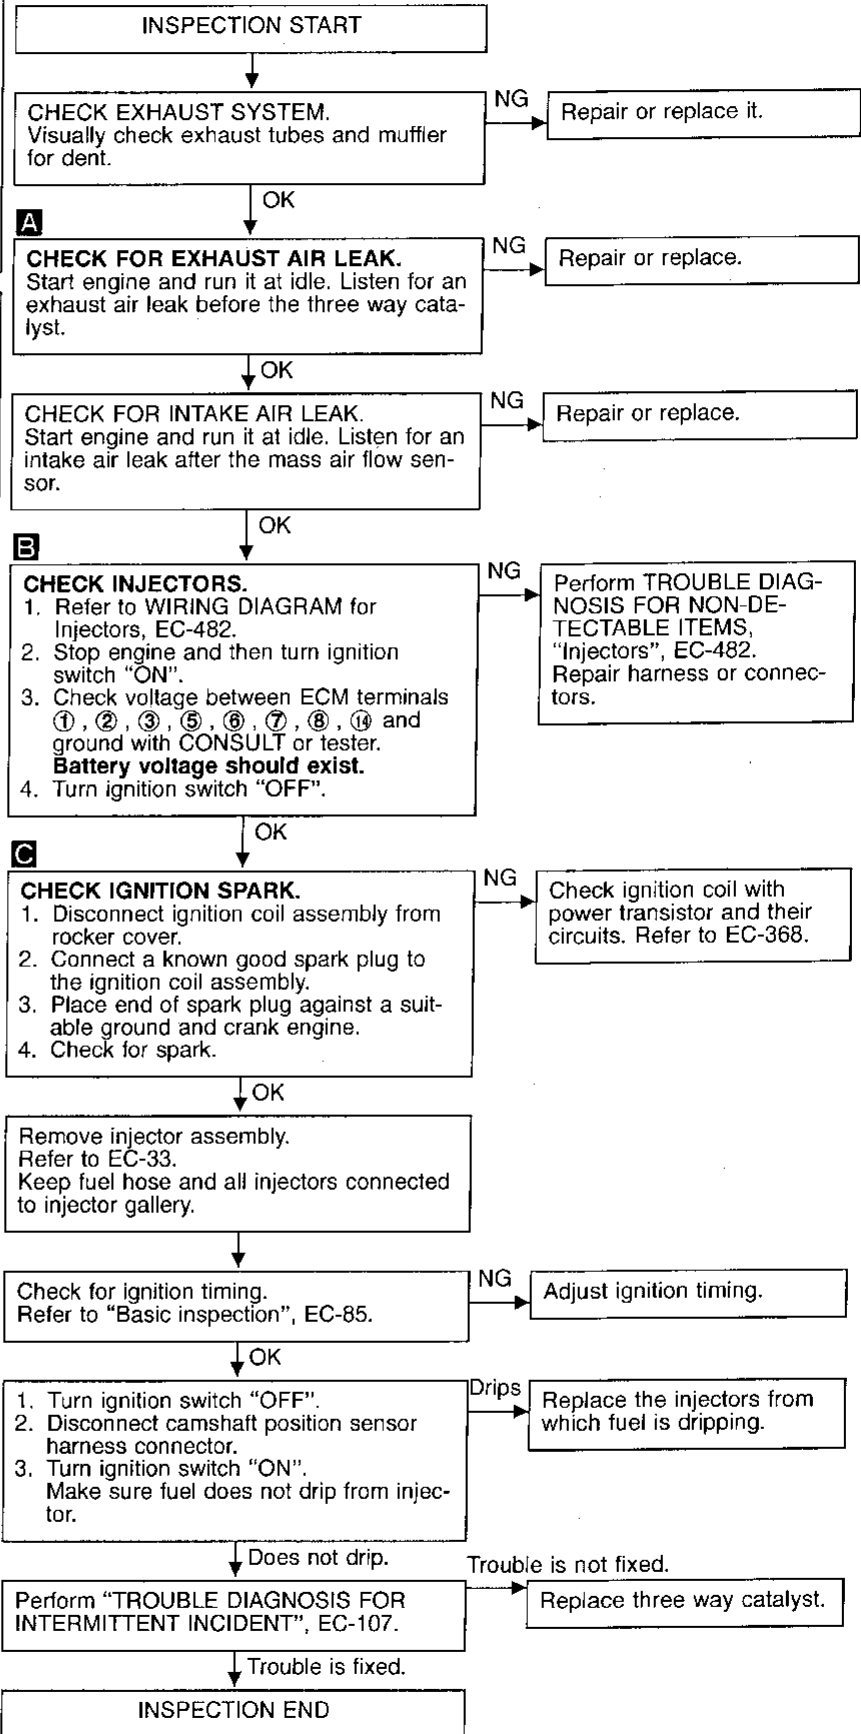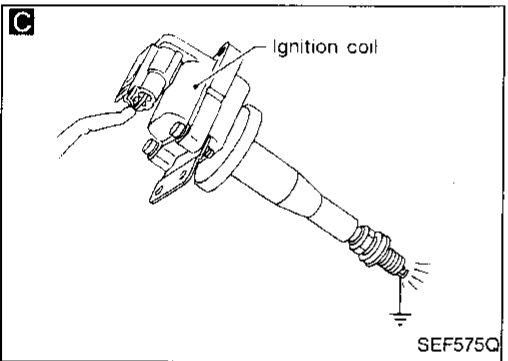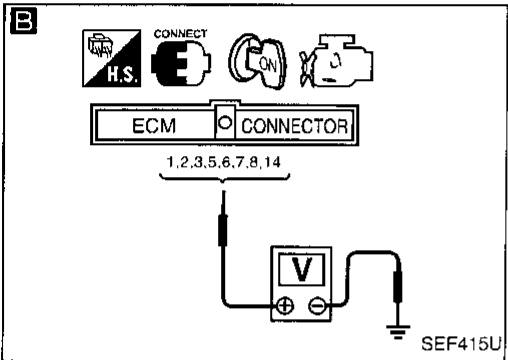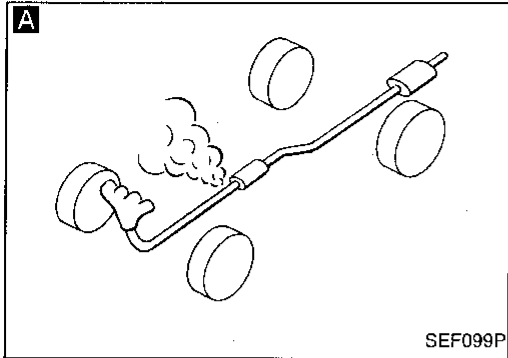


TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California)

Note: If both DTC P0440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first. (See EC-431.)

ON BOARD DIAGNOSIS LOGIC

This diagnosis detects leaks in the EVAP purge line using of engine intake manifold vacuum. If pressure does not increase, the ECM will check for leaks in the line between the fuel tank and EVAP canister purge control valve, under the following "Vacuum test" conditions. The vacuum cut valve bypass valve is opened to clear the line between the fuel tank and the EVAP canister purge control valve. The EVAP canister vent control valve will then be closed to shut the EVAP purge line off. The EVAP canister purge volume control valve and EVAP canister purge control valve are opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control valve and EVAP canister purge control valve will be closed.

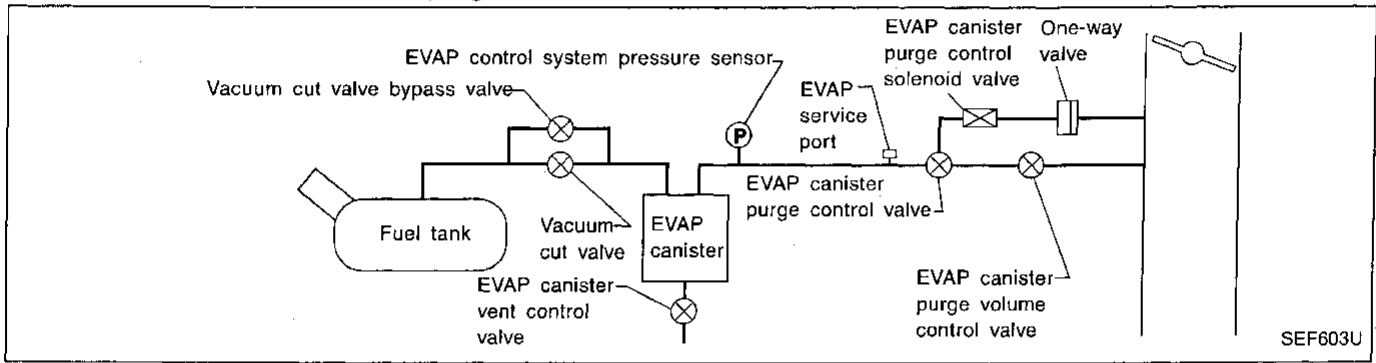

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0440 0705	<ul style="list-style-type: none"> ● EVAP control system has a leak. ● EVAP control system does not operate properly. 	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap. ● Leak is in line between intake manifold and EVAP canister purge control valve. ● Foreign matter caught in EVAP canister vent control valve. ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent. ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge control valve ● EVAP canister purge volume control valve and the circuit ● EVAP canister purge control solenoid valve ● Absolute pressure sensor ● Tank fuel temperature sensor ● MAP/BARO switch solenoid valve and the circuit ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister is saturated with water. ● EVAP control system pressure sensor

CAUTION:

- Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine rubber tube as a replacement.

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

- If both DTC P0440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first. (See EC-431.)
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Perform "DTC WORK SUPPORT" when the fuel level is less than 3/4 full and vehicle is placed on the flat level surface.
- It is better that fuel level is low.



- 1) Turn ignition switch "ON".
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 4) Check that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 5 - 60°C (41 - 140°F)
- 5) Select "EVAP SML LEAK P0440" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.

Follow the instruction displayed.

NOTE:

- If the CONSULT screen shown at left is displayed, stop the engine and stabilize the vehicle temperature at 25°C (77°F) or cooler. After "TANK F/TMP SE" becomes less than 30°C (86°F), retest. (Use a fan to reduce the stabilization time.)
- The engine idle portion of this test will take approximately 9 minutes.
- 6) Make sure that "OK" is displayed.
If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-288.

OR

NOTE:

- Be sure to read the explanation of "Driving pattern" on EC-48 before driving vehicle.
- It is better that the fuel level is low.



- 1) Start engine (TCS switch "OFF").
- 2) Drive vehicle according to "Driving pattern", EC-48.
- 3) Stop vehicle.
- 4) Select "MODE 1" with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch "OFF" and wait at least 5 seconds.
- 6) Start engine.

It is not necessary to cool engine down before the driving.

- 7) Drive vehicle again according to the "Driving pattern", EC-48.
- 8) Stop vehicle.

■ EVAP SML LEAK P0440 ■ □

1)PERFORM TEST AT A LOCATION OF 5-30C (41-86F)
2)OPEN ENGINE HOOD.
3)START ENGINE WITH VEHICLE STOPPED. IF ENG IS ON, STOP FOR 5 SEC. THEN RESTART.
4)TOUCH START.

EXIT START

SEF296U

■ EVAP SML LEAK P0440 ■ □

***** OK *****

END PRINT

SEF297U

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

- 9) Select "MODE 3" with GST.
 - If P1447 is displayed on the screen, go to "TROUBLE DIAGNOSIS FOR DTC P1447", EC-424. GI
 - If P0440 is displayed on the screen, go to "DIAGNOSTIC PROCEDURE", EC-288.
 - If P1440 is displayed on the screen, go to "TROUBLE DIAGNOSIS FOR DTC P1440", EC-401. MA
 - If P0440 and P1440 are not displayed on the screen, go to the following step. EM
- 10) Select "MODE 1" with GST.
 - If SRT of EVAP system is set, the result will be OK. LC
 - If SRT of EVAP system is not set, go to step 6).

OR

NOTE:

- Be sure to read the explanation of "Driving pattern" on EC-48 before driving vehicle. EC
- It is better that the fuel level is low. FE



- 1) Start engine (TCS switch "OFF").
- 2) Drive vehicle according to "Driving pattern", EC-48.
- 3) Stop vehicle. AT
- 4) Turn ignition switch "OFF" and wait at least 5 seconds.
- 5) Perform the step 1) to 4) again.
- 6) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM. PD

FA

RA

BR

ST

RS

BT

HA






EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

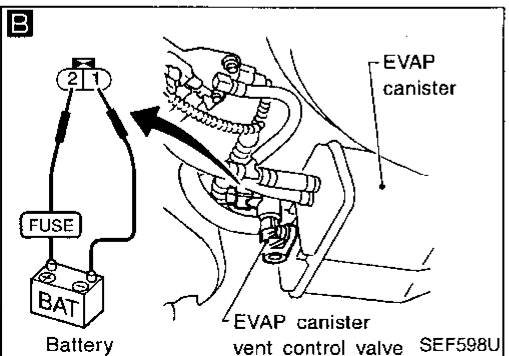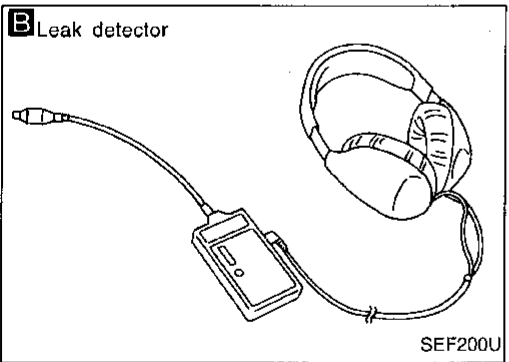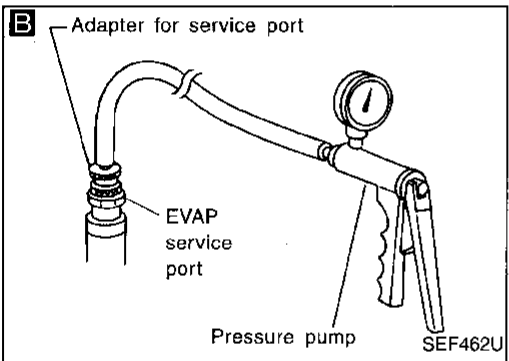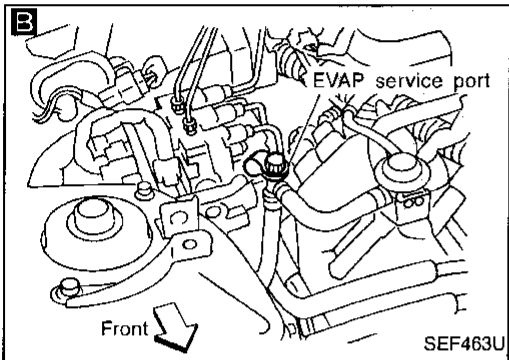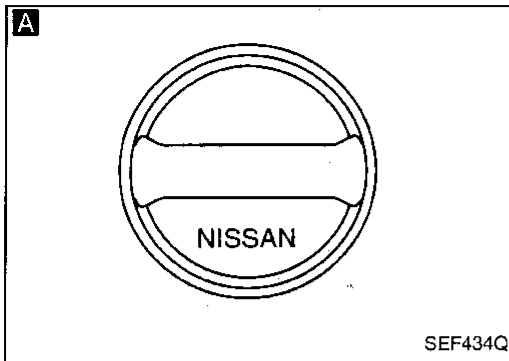

INSPECTION START

A

CHECK FUEL FILLER CAP.

1. Turn ignition switch "OFF".
2. Check for genuine fuel filler cap design.
3. Check for air releasing sound while opening the fuel filler cap.
4. Make sure there are no foreign objects around the fuel filler cap so that the cap can close properly.
5. Check fuel tank vacuum relief valve. Refer to "EVAPORATIVE EMISSION SYSTEM", EC-27.

NG

1. Open fuel filler cap, then clean cap and fuel filler neck threads using air blower and retighten until the ratcheting sound is heard.
2. Replace with genuine fuel filler cap.

OK

B

CHECK FOR EVAP LEAK.

To locate the EVAP leak, do the following.

1. Install the EVAP service port adapter and the pressure pump securely.
2. Turn ignition switch "ON". Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT.
3. Touch "START" and apply pressure to the EVAP line until the pressure indicator reaches the middle of the bar graph.
4. Using EVAP leak detector, locate the leak. Refer to the instruction manual for more details about the leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.

- Never use compressed air or a high pressure pump.
- Improper installation of adapter to the service port may cause a leak.

NG

Repair or replace.

OR

2. Turn ignition switch "OFF".
3. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
4. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)
5. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and service port adapter.
6. Locate the leak using a leak detector. Refer to the instruction manual for more details about the leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.






- Never use compressed air or a high pressure pump.
- Improper installation of adapter to the service port may cause a leak.

OK

(A)

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

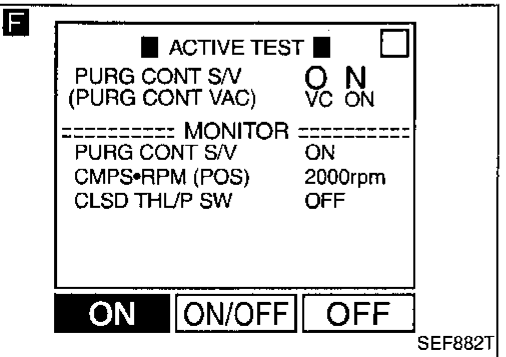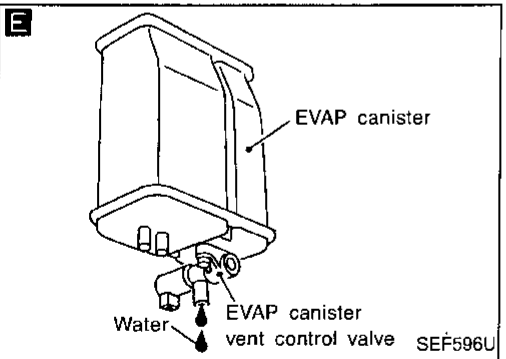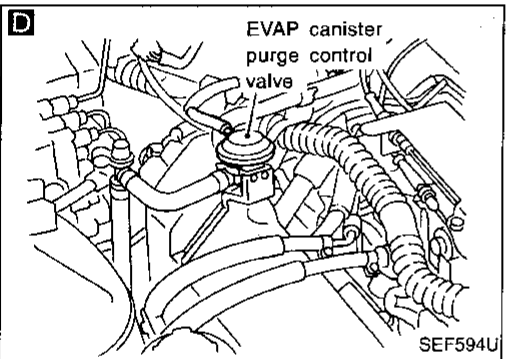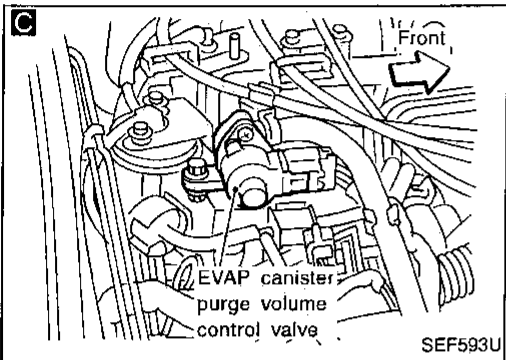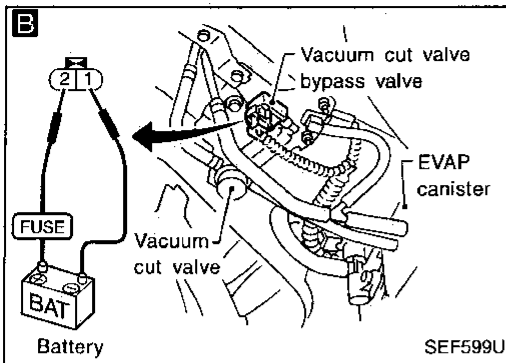

C CHECK COMPONENT (EVAP canister purge volume control valve). Refer to "COMPONENT INSPECTION", EC-291.

NG → Replace EVAP canister purge volume control valve.

OK →

D CHECK COMPONENT (EVAP canister purge control valve). Refer to "COMPONENT INSPECTION", EC-292.

NG → Replace EVAP canister purge control valve.

OK →

CHECK COMPONENT AND CIRCUIT (EVAP canister vent control valve, O-ring and water separator). Refer to "TROUBLE DIAGNOSIS FOR P0446" for circuit, EC-301 and "COMPONENT INSPECTION", EC-292.

NG → Repair or replace EVAP canister vent control valve and O-ring or harness/connectors.

OK →

E CHECK IF EVAP CANISTER IS SATURATED WITH WATER.

1. Remove EVAP canister with EVAP canister vent control valve attached.
2. Check if water will drain from the EVAP canister. If it will, weigh the EVAP canister with the vent control valve attached. If the weight is:
 More than 1.8 kg (4.0 lb) → NG
 Less than 1.8 kg (4.0 lb) → OK

NG → Check the following:
 1. Visually check the EVAP canister for damage.
 2. Check hose connection between EVAP canister and water separator for clogging and poor connection.
 3. Check water separator. Refer to "COMPONENT INSPECTION", EC-436.
 If NG, repair hose or replace EVAP canister or water separator.

OK →

F CHECK COMPONENT (EVAP canister purge control solenoid valve).

1. Disconnect vacuum hose to EVAP canister purge control solenoid valve.
2. Start engine.
3. Perform "PURG CONT S/V" in "ACTIVE TEST" mode.
4. Select "ON" on CONSULT screen to turn on "PURG CONT S/V".
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.
Vacuum should exist.

OR

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose to EVAP canister purge control solenoid valve.
4. Start engine and let it idle for at least 80 seconds.
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.
Vacuum should exist.

NG → Check the following.
 • EVAP canister purge control solenoid valve. Refer to "COMPONENTS INSPECTION", EC-292 and "P1492 EVAP canister purge control solenoid valve" for circuit, EC-292.
 • Vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-18.

OK →

B

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose to EVAP canister purge control solenoid valve.
4. Start engine and let it idle for at least 80 seconds.
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.
Vacuum should exist.

OK →

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT





HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

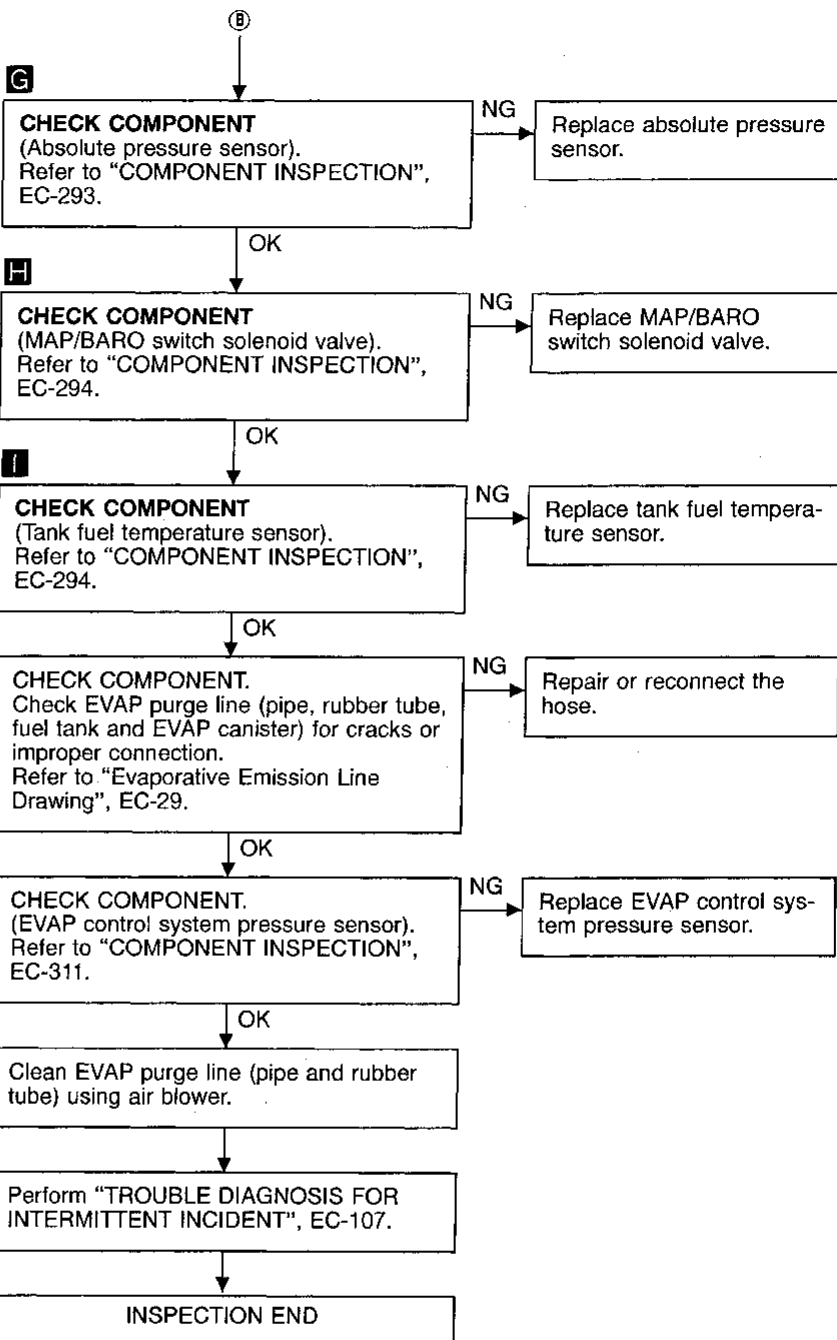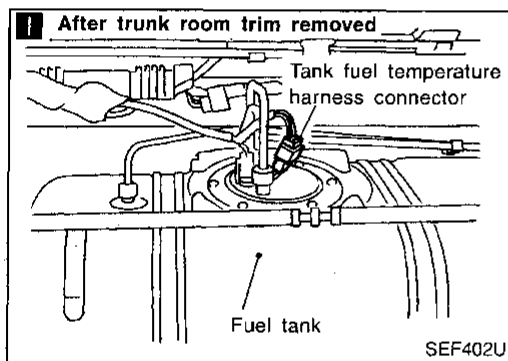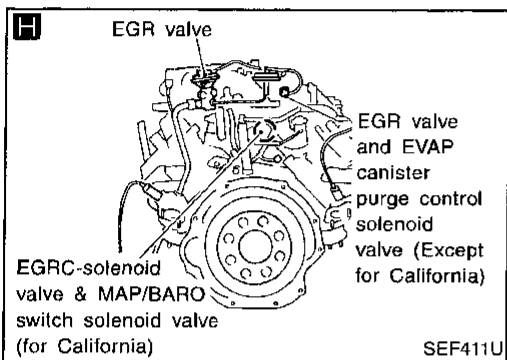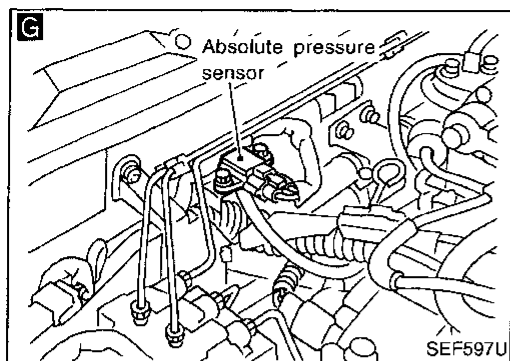

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

COMPONENT INSPECTION

EVAP canister purge volume control valve

1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥

Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]

3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON".
6. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EVAP canister purge volume control valve.


OR

1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥


Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]


3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON" and "OFF". Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EVAP canister purge volume control valve.

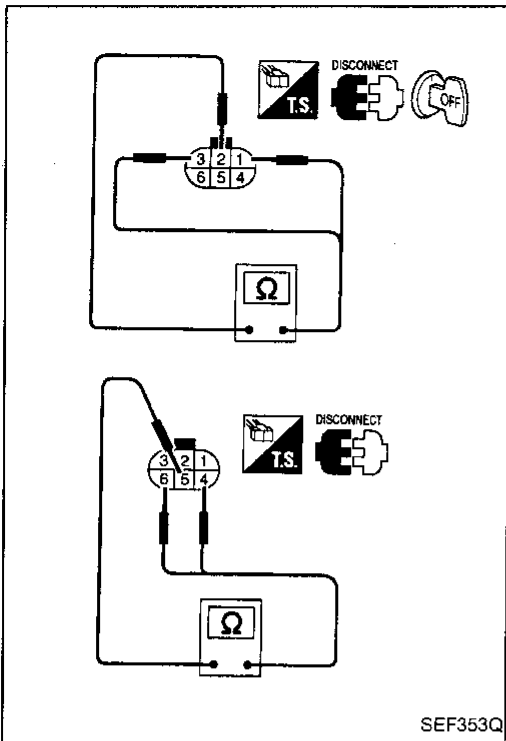


SEF353Q

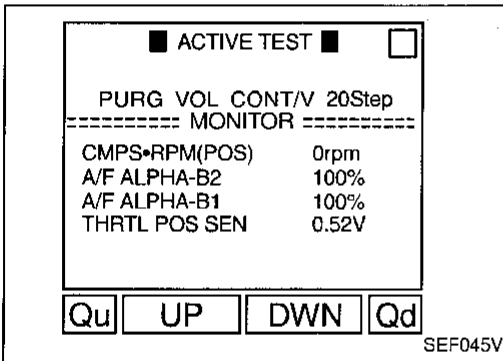

SEF045V

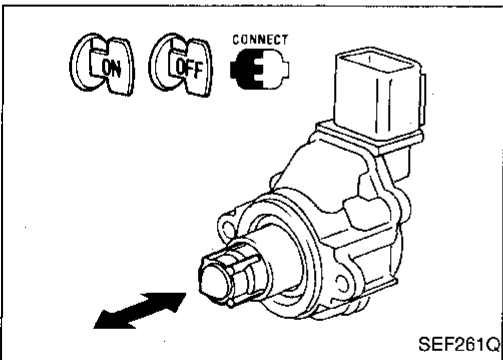

SEF261Q

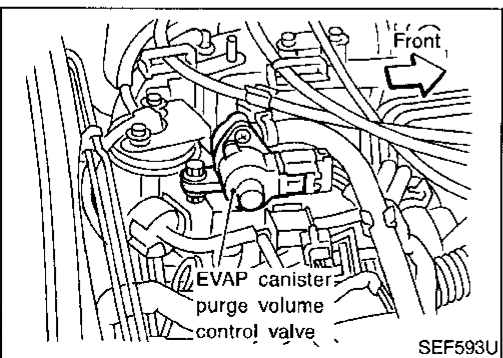

SEF593U

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)


EVAP canister purge control solenoid valve

Check air passage continuity.

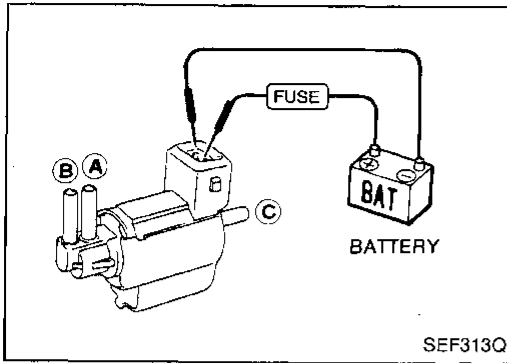

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes


If NG, replace solenoid valve.

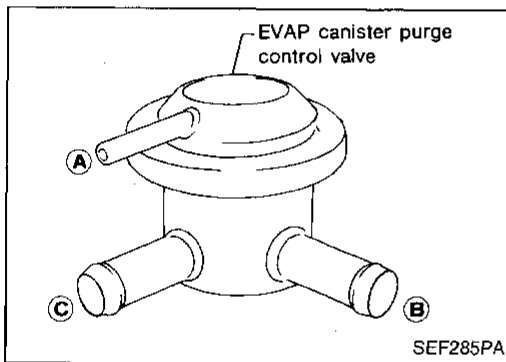

EVAP canister purge control valve

Check EVAP canister purge control valve as follows:

1. Blow air in port (A), (B) and (C), then ensure that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-100 to -150 mmHg, -3.94 to -5.91 inHg)]
Blow air in port (C) and ensure free flow out of port (B).

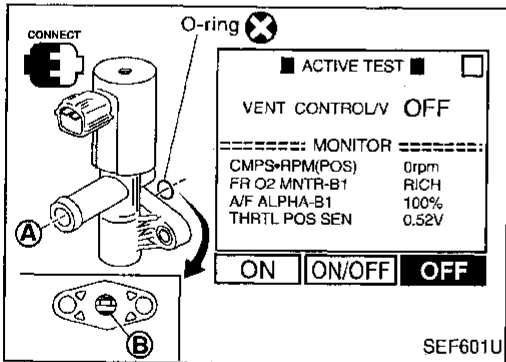


EVAP canister vent control valve

Check air passage continuity.

1. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR

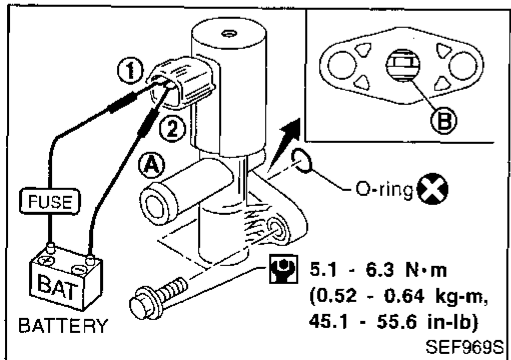


Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals ① and ②	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If the portion (B) is rusted, replace control valve.

Make sure new O-ring is installed properly.

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

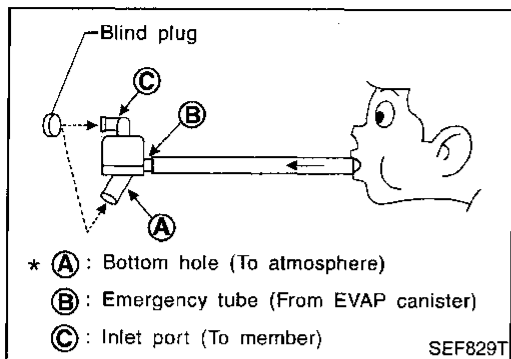

Water separator

1. Check visually for insect nests in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that **(A)** and **(C)** are not clogged by blowing air into **(B)** with **(A)**, and then **(C)** plugged.
5. In case of NG in items 2 - 4, replace the parts.

NOTE:

Do not disassemble water separator.

GI
MA
EM

LC

EC

FE

AT

PD

FA

RA

BR

ST




RS

BT

HA

EL

IDX

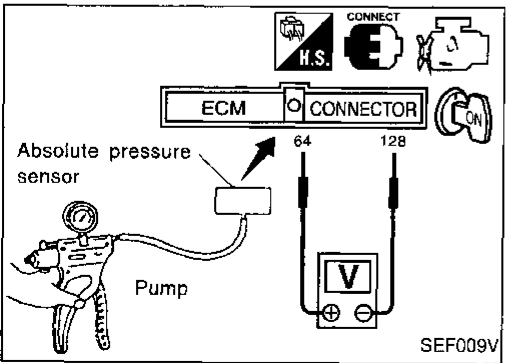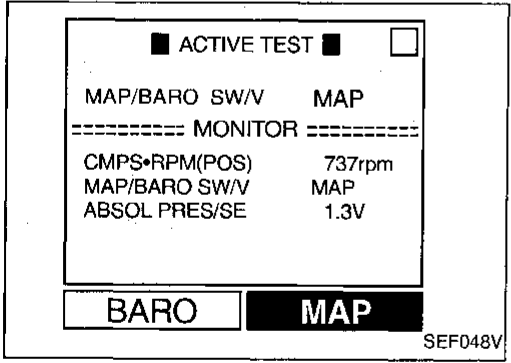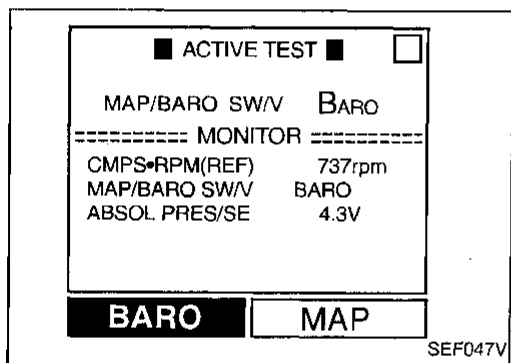

Absolute pressure sensor

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

MAP/BARO	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

OR

2. Turn ignition switch "ON" and check output voltage between ECM terminals **(64)** and **(128)** (ECM ground).
The voltage should be more than 2.6V.
3. Start engine and wait at least 5 seconds and check voltage between terminals **(64)** and **(128)**.
The voltage should be less than the voltage in step 2.





4. Turn ignition switch "OFF".
5. Remove absolute pressure sensor with its harness connector connected.
6. Remove hose from absolute pressure sensor.
7. Turn ignition switch "ON" and check output voltage between terminal **(64)** and **(128)** (ECM ground).
The voltage should be 3.2 to 4.8 V.
8. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.
The voltage should be 1.0 to 1.4 V lower than the value measured in step 7.

TROUBLE DIAGNOSIS FOR DTC P0440

Evaporative Emission (EVAP) Control System (Small Leak) (Negative Pressure) (For California) (Cont'd)

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure. Doing so will damage the absolute pressure sensor.
9. If NG, replace absolute pressure sensor.

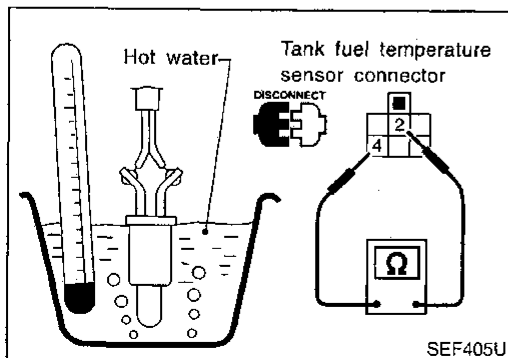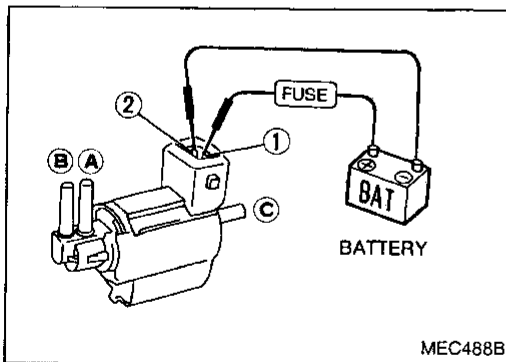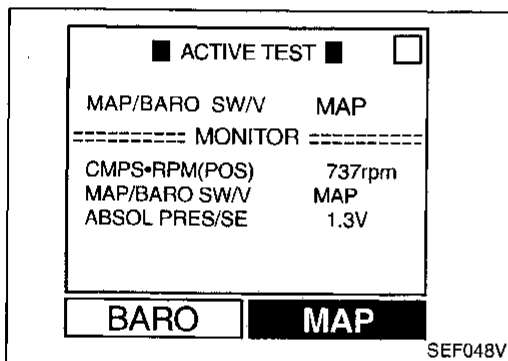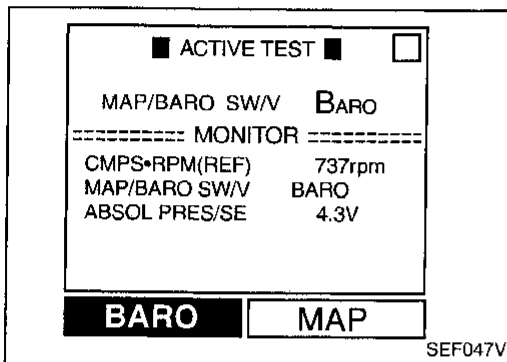

MAP/BARO switch solenoid valve

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load.
 - CONSULT display

MAP/BARO SW/V	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

- Time for voltage to change

MAP/BARO SW/V	Time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

4. If NG, replace solenoid valve.

OR

1. Remove MAP/BARO switch solenoid valve.
2. Check air passage continuity.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

3. If NG, replace solenoid valve.

Tank fuel temperature sensor


Check resistance by heating with hot water or heat gun as shown in the figure.

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90


If NG, replace tank fuel temperature sensor.

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California)

SYSTEM DESCRIPTION

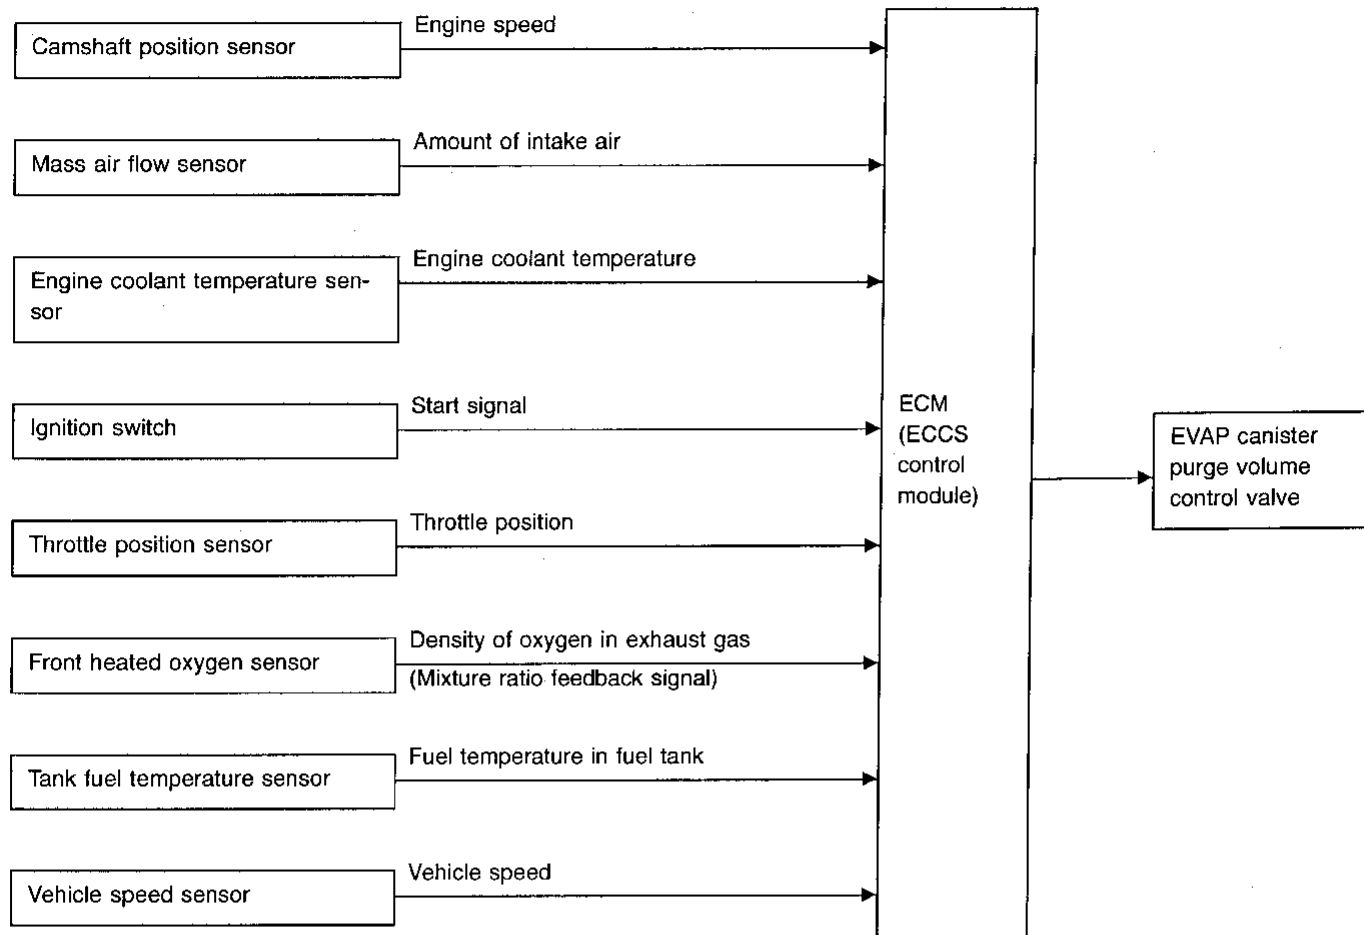

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

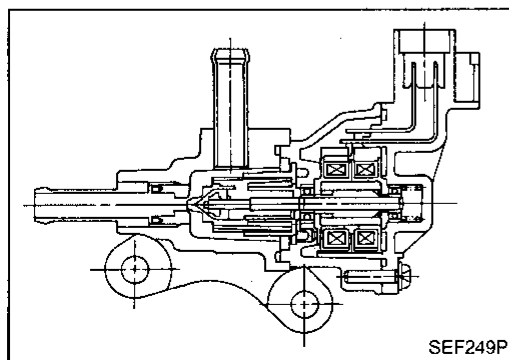

COMPONENT DESCRIPTION

The EVAP canister purge volume control valve uses a step motor to control the flow rate of fuel vapor from the EVAP canister. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

TROUBLE DIAGNOSIS FOR DTC P0443

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California) (Cont'd)

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	Idle	0 step
	Vehicle running (Shift lever "1")	—

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER- MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
124	W/B	ECCS relay (Self-shutoff)	Engine is running. Ignition switch "OFF" └ For a few seconds after turning ignition switch "OFF"	0 - 1V
			Ignition switch "OFF" └ A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
130 131	R/G	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
123	W/L	Current return	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
28 29	BR/Y G	EVAP canister purge vol- ume control valve	Engine is running. └ Idle speed	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)
35 36	G/OR L/B		Engine is running. └ Idle speed	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0443 1008	<ul style="list-style-type: none"> • An improper voltage signal is sent to ECM through the valve. 	<ul style="list-style-type: none"> • Harness or connectors (The valve circuit is open or shorted.) • EVAP canister purge volume control valve

TROUBLE DIAGNOSIS FOR DTC P0443

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California) (Cont'd)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	700rpm	
COOLAN TEMP/S	85°C	
PURG VOL C/V	0step	
RECORD		

SEF416U

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V.

- 1) Turn ignition switch "ON".
 - 2) Select "DATA MONITOR" mode with CONSULT.
 - 3) Wait at least 5 seconds.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
 - 2) Select "MODE 7" with GST.
- OR
- 1) Turn ignition switch "ON" and wait at least 5 seconds.
 - 2) Perform "Diagnostic Test Mode II (Self-diagnostic results) with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0443

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California) (Cont'd)





EC-PGC/V-01

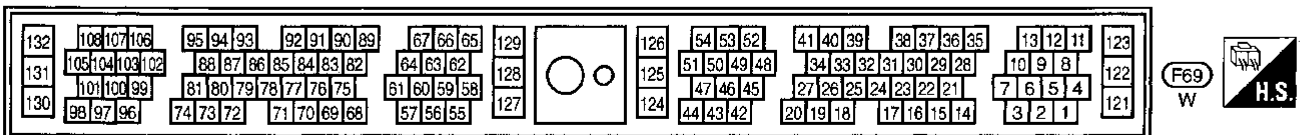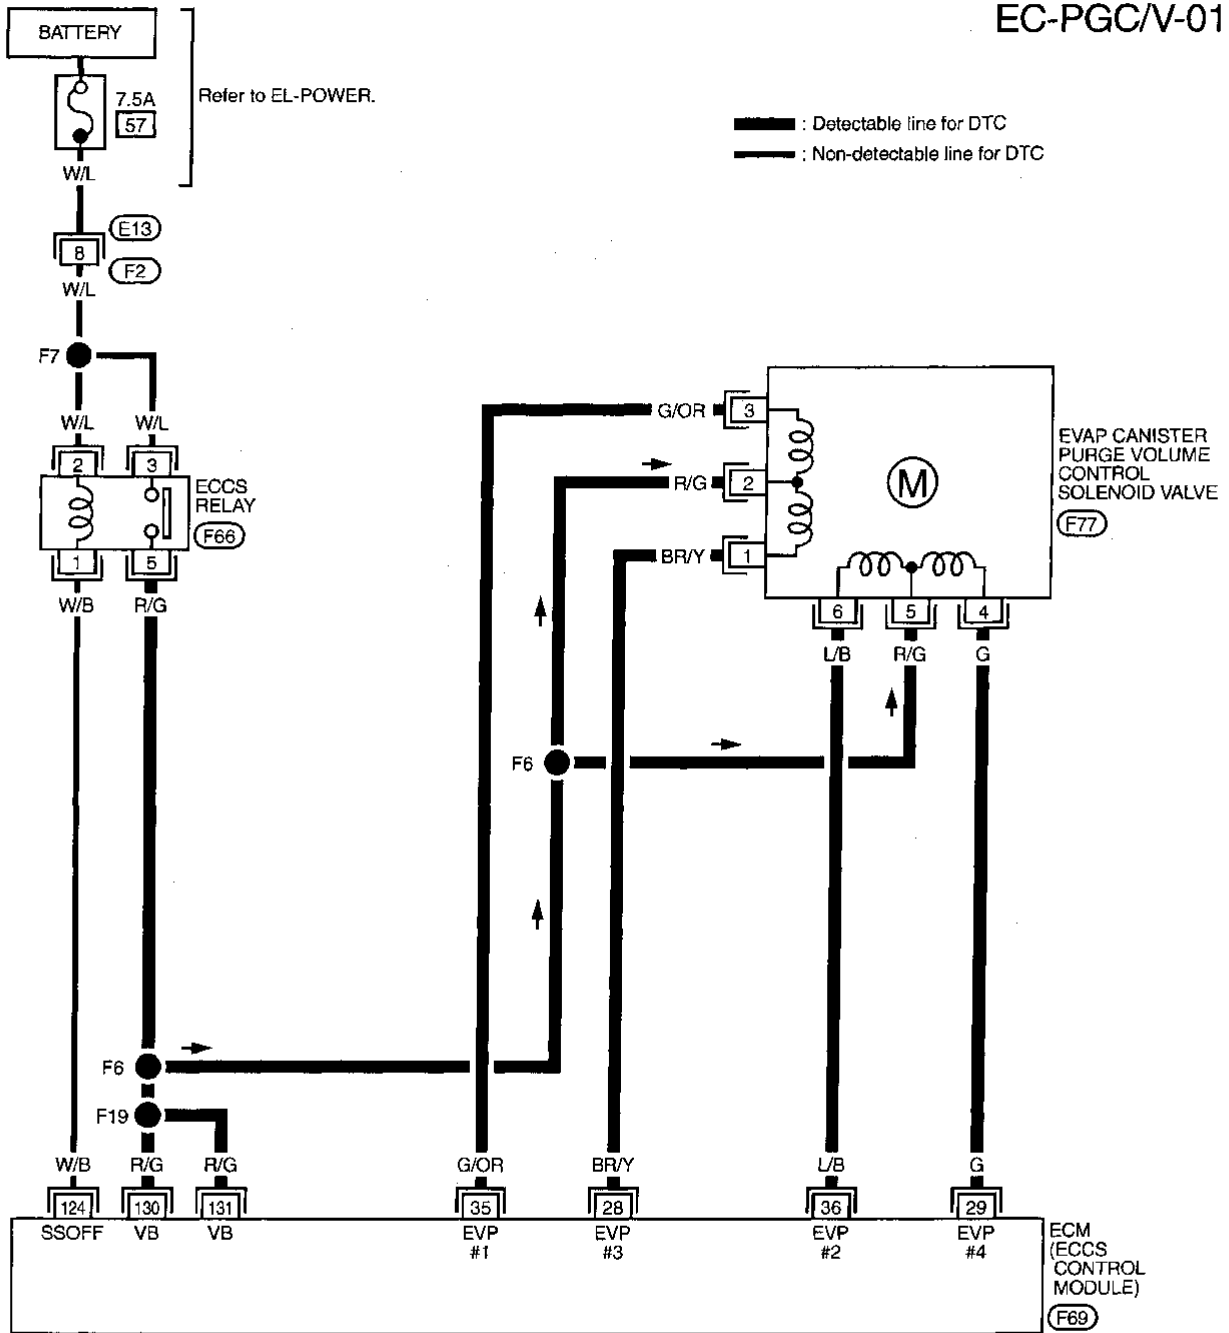

TROUBLE DIAGNOSIS FOR DTC P0443

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

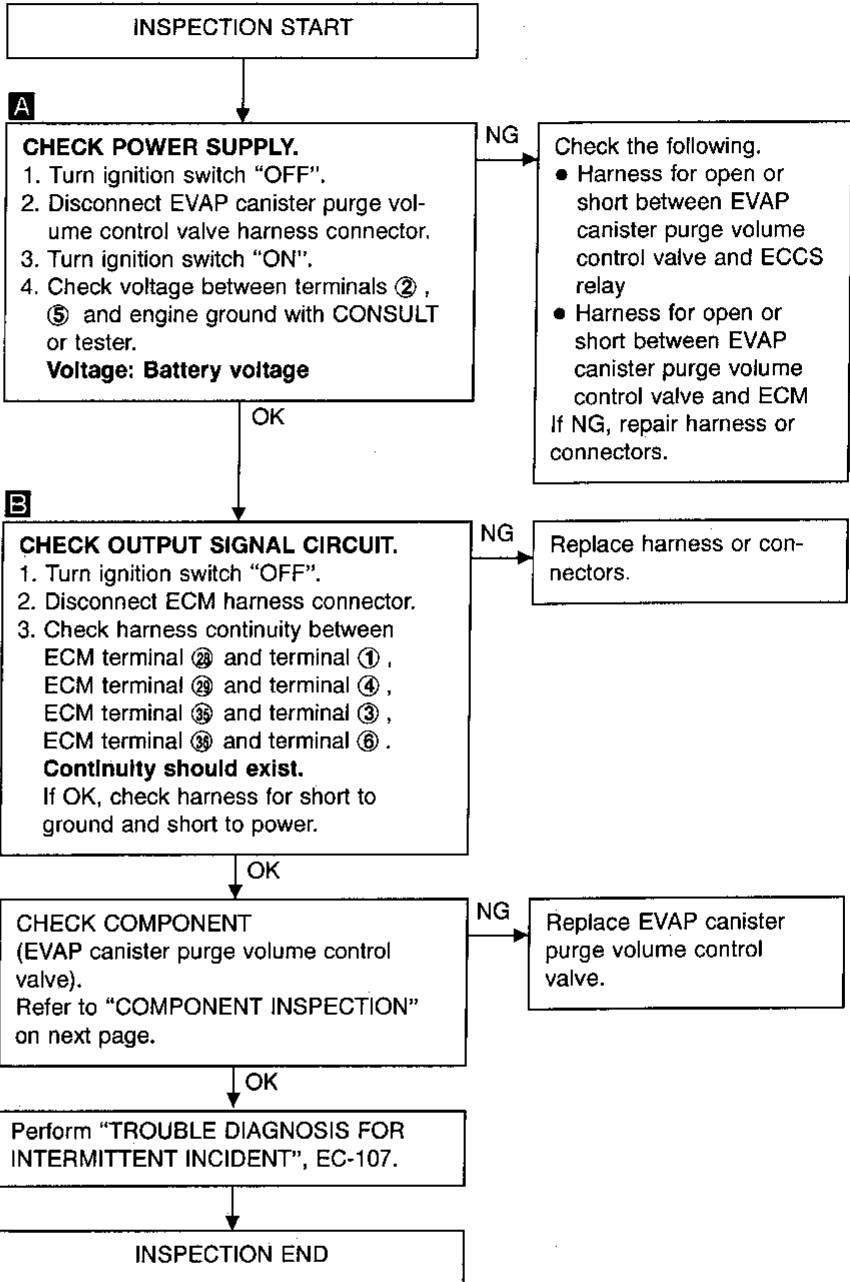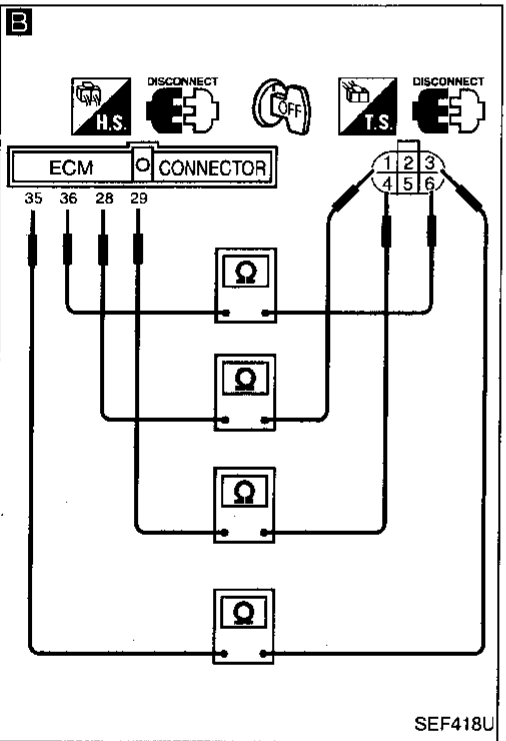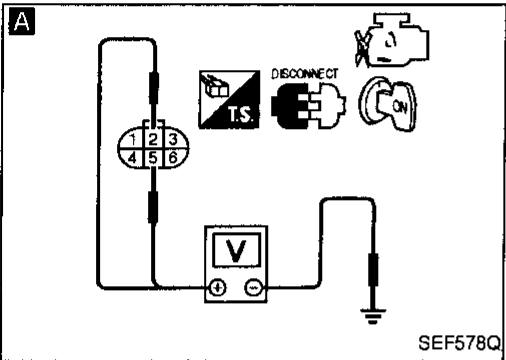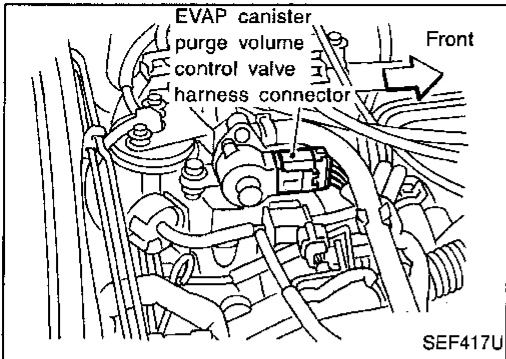

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0443

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (Circuit) (For California) (Cont'd)

COMPONENT INSPECTION

EVAP canister purge volume control valve

1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥

Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]

3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON".
6. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EVAP canister purge volume control valve.


OR

1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥


Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]


3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON" and "OFF". Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EVAP canister purge volume control valve.

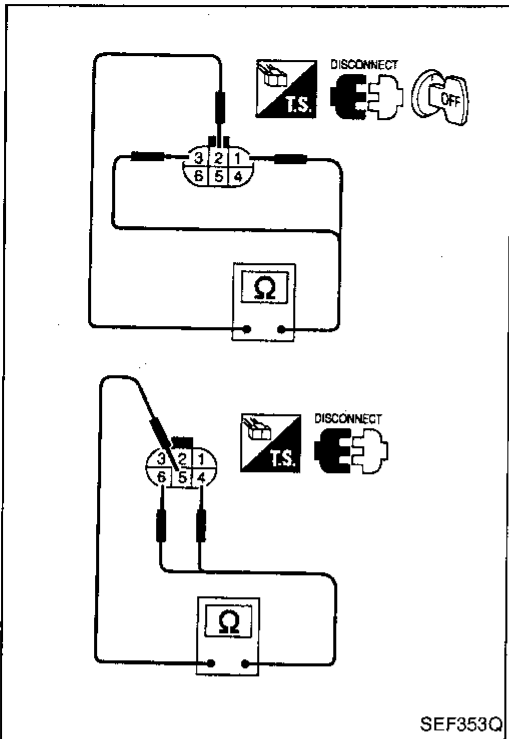


SEF353Q

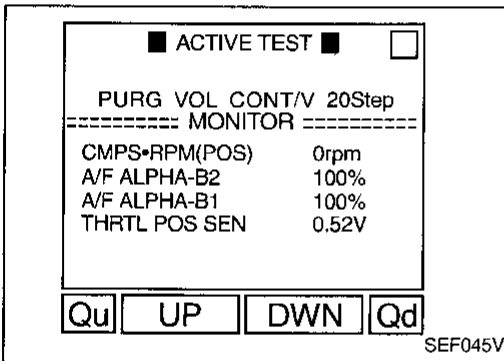

SEF045V


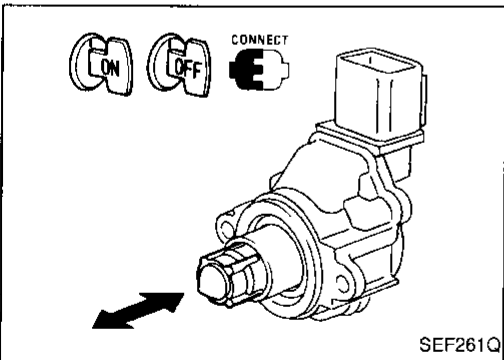


SEF261Q

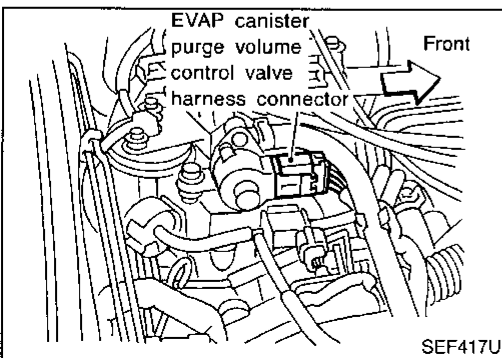

SEF417U

TROUBLE DIAGNOSIS FOR DTC P0446

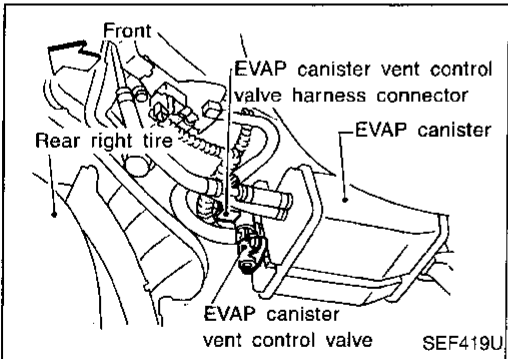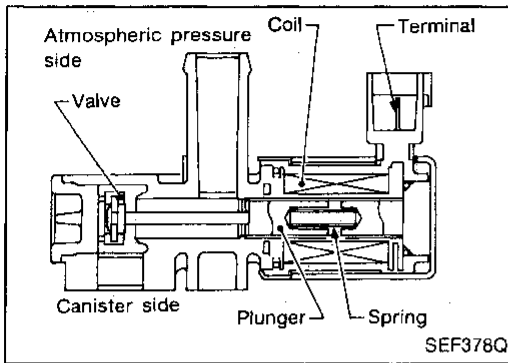

Evaporative Emission (EVAP) Canister Vent Control Valve (Circuit) (For California)

COMPONENT DESCRIPTION

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	• Ignition switch: ON	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
20	P/B	EVAP canister vent control valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0446 0903	<ul style="list-style-type: none"> An improper voltage signal is sent to ECM through EVAP canister vent control valve. 	<ul style="list-style-type: none"> Harness or connectors (EVAP canister vent control valve circuit is open or shorted.) EVAP canister vent control valve

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0446

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	750rpm	
RECORD		

SEF886T

Evaporative Emission (EVAP) Canister Vent Control Valve (Circuit) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has just been completed, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 8 seconds.

OR



- 1) Start engine and wait at least 8 seconds.
- 2) Select "MODE 7" with GST.

OR







- 1) Start engine and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 8 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0446

Evaporative Emission (EVAP) Canister Vent Control Valve (Circuit) (For California) (Cont'd)

EC-VENT/V-01

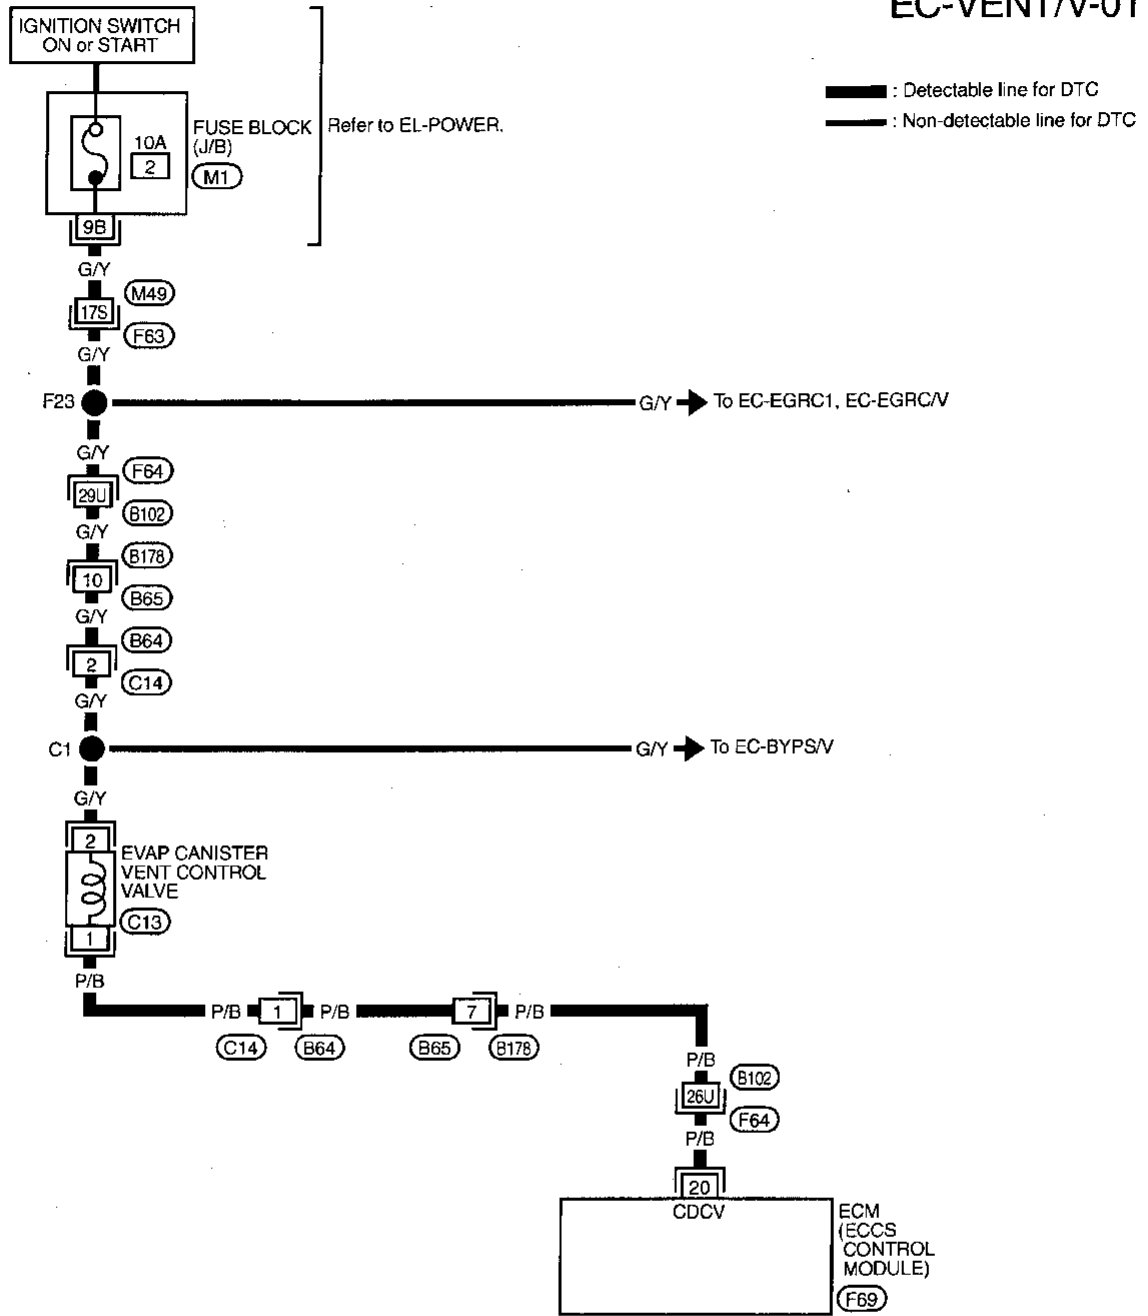


Refer to last page (Foldout page).

M49, F63

F64, B102

M1

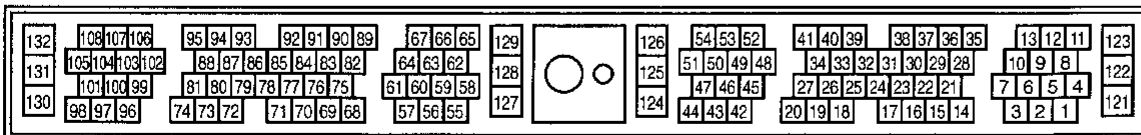

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT






HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0446

Evaporative Emission (EVAP) Canister Vent Control Valve (Circuit) (For California) (Cont'd) DIAGNOSTIC PROCEDURE

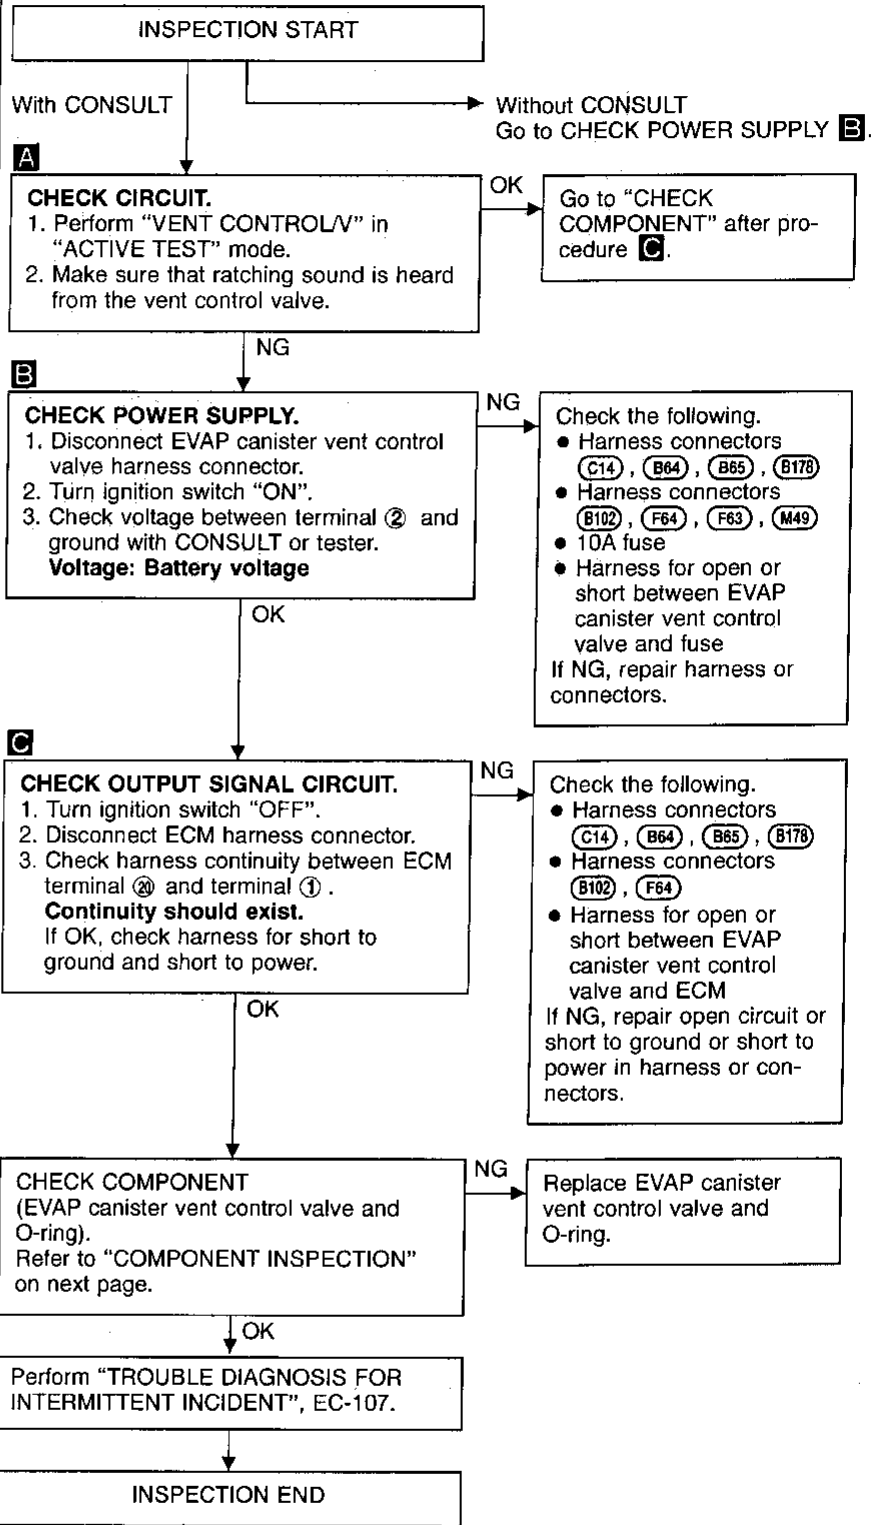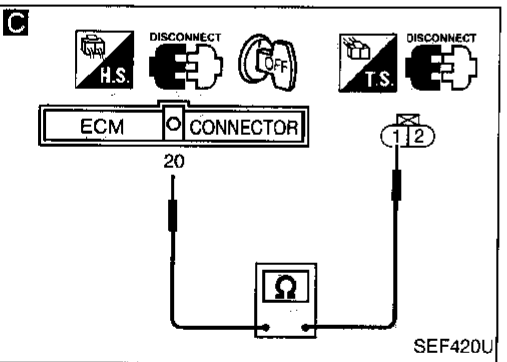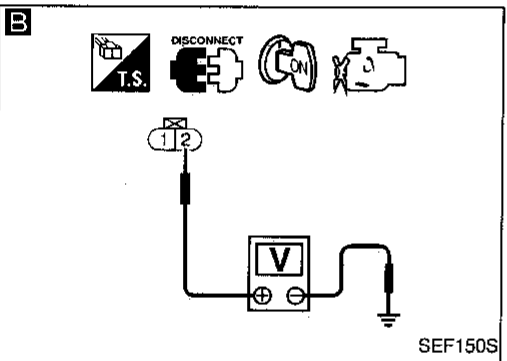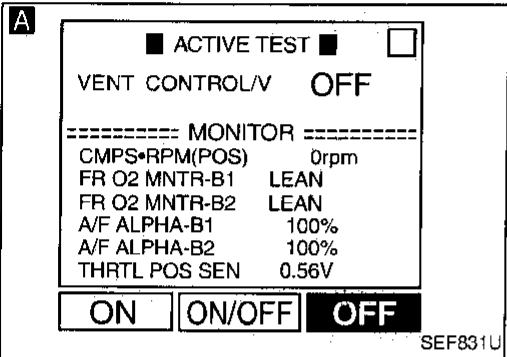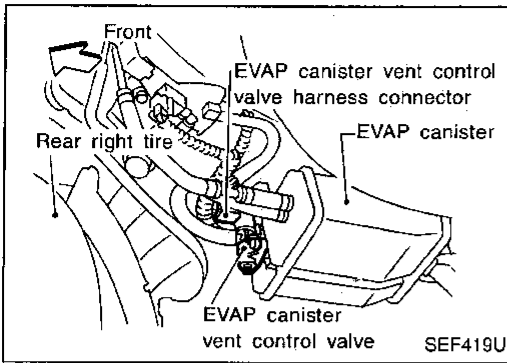



TROUBLE DIAGNOSIS FOR DTC P0446

Evaporative Emission (EVAP) Canister Vent Control Valve (Circuit) (For California) (Cont'd) COMPONENT INSPECTION

EVAP canister vent control valve

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

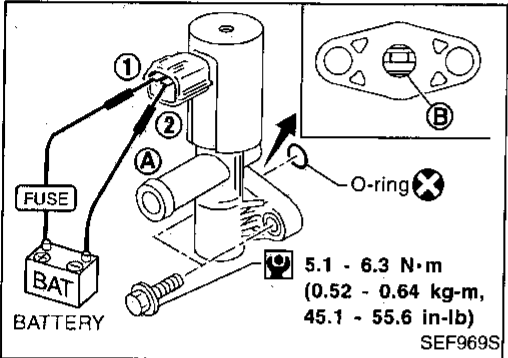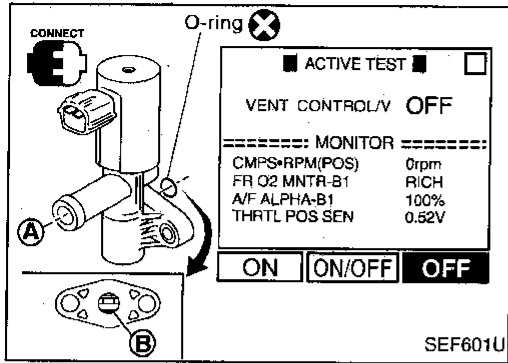

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR


Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals ① and ②	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If portion (B) is rusted, replace control valve.

Make sure new O-ring is installed properly.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSIS FOR DTC P0450

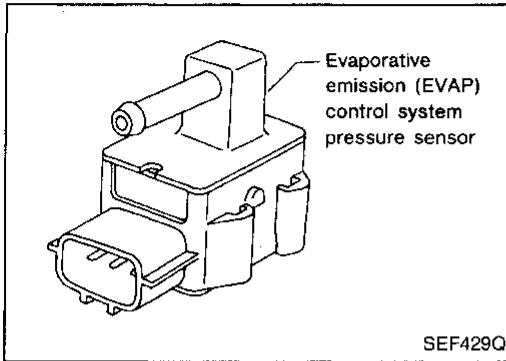

Evaporative Emission (EVAP) Control System Pressure Sensor (For California)

COMPONENT DESCRIPTION

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases. The EVAP control system pressure sensor is not used to control the engine system. It is used only for on board diagnosis.

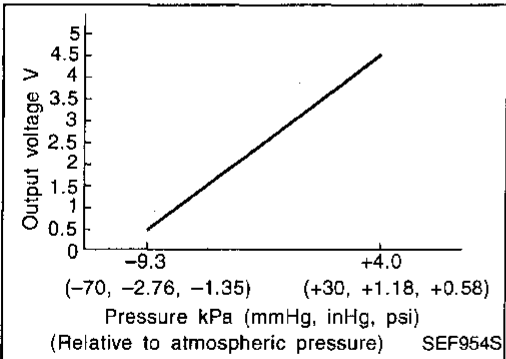

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EVAP SYS PRES	• Ignition switch: ON	Approx. 3.4V

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
98	BR/W	Sensors' power supply	Ignition switch "ON"	Approximately 5V
92	W/R	EVAP control system pressure sensor	Ignition switch "ON"	Approximately 3.4V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0450 0704	<ul style="list-style-type: none"> An improper voltage signal from EVAP control system pressure sensor is sent to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The EVAP control system pressure sensor circuit is open or shorted.) Rubber hose to EVAP control system pressure sensor is clogged, bent, kinked, disconnected or not corrected properly. EVAP control system pressure sensor EVAP canister vent control valve (The valve is stuck open.) EVAP canister purge volume control valve EVAP canister Rubber hose from EVAP canister vent control valve to water separator

TROUBLE DIAGNOSIS FOR DTC P0450

Evaporative Emission (EVAP) Control System Pressure Sensor (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS-RPM(POS)	750rpm	
COOLAN TEMP/S	85°C	
TANK F/TMP SE	29°C	
RECORD		

SEF835U



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT.
- 5) Make sure that "TANK F/TEMP SE" is more than 0°C (32°F).
- 6) Start engine and wait at least 20 seconds.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal ⑨ and ground is less than 4.2V.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine and wait at least 20 seconds.
- 5) Select "MODE 7" with GST.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal ⑨ and ground is less than 4.2V.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine and wait at least 20 seconds.
- 5) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0450



Evaporative Emission (EVAP) Control System Pressure Sensor (For California) (Cont'd)

EC-PRE/SE-01

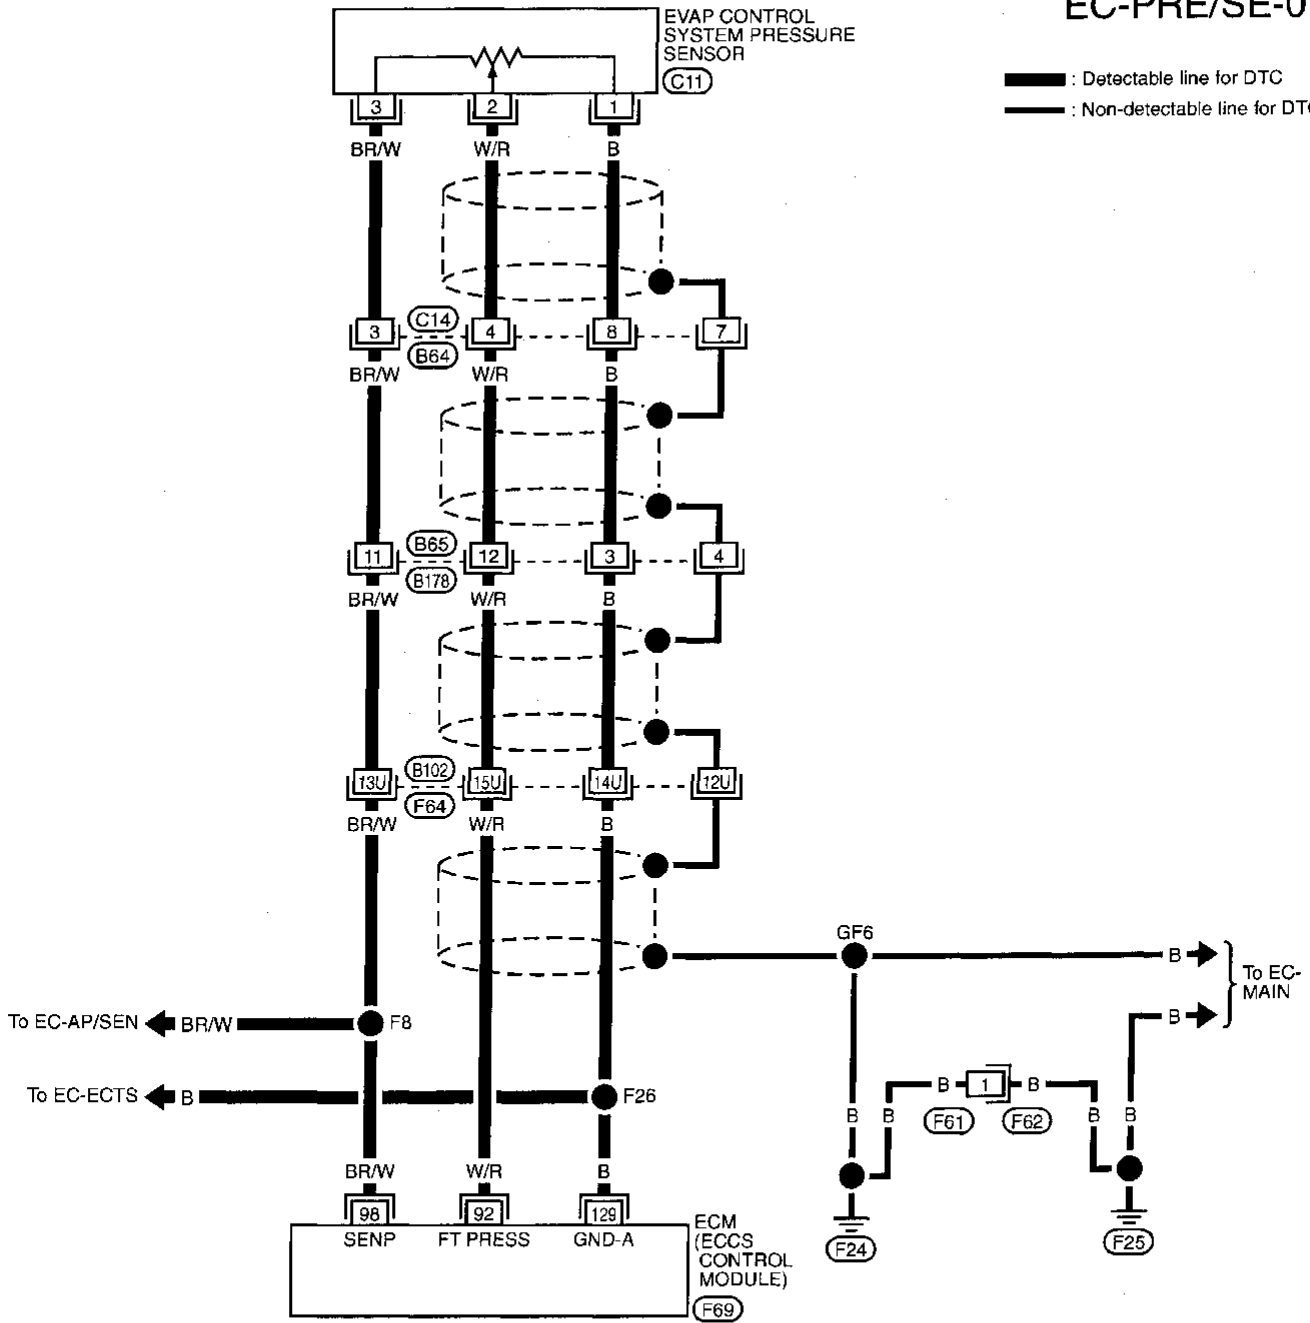

Refer to last page (Foldout page).






F64, B102
F69

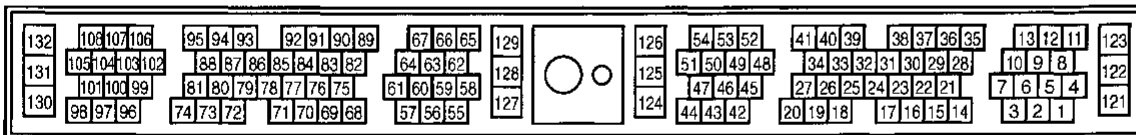

TROUBLE DIAGNOSIS FOR DTC P0450

Evaporative Emission (EVAP) Control System Pressure Sensor (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

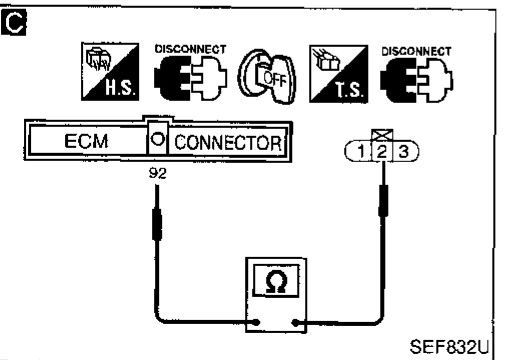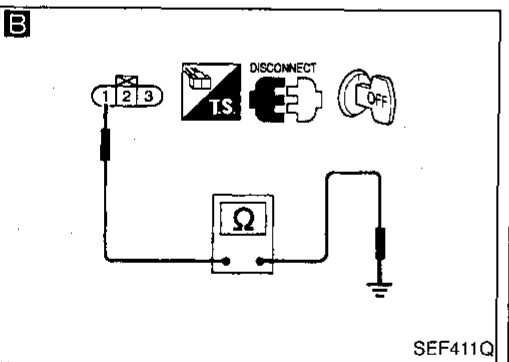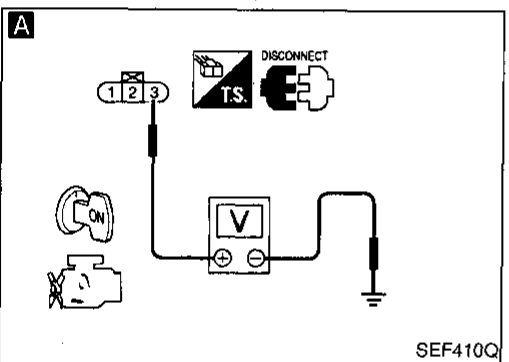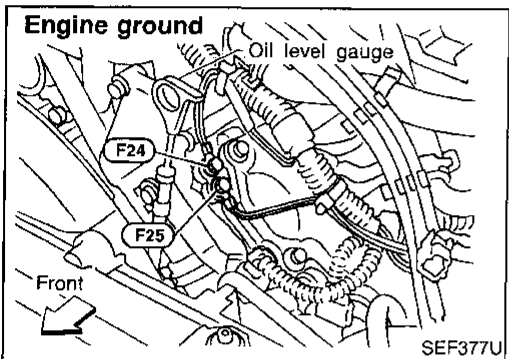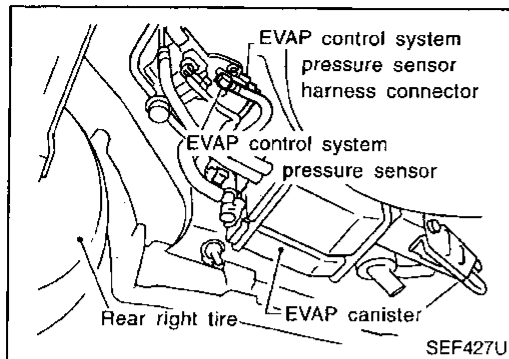

INSPECTION START

CHECK RUBBER TUBE CONNECTED TO THE SENSOR.
Check rubber tube for clogging, bending, kinking, disconnection or improper connection.

NG → Reconnect, repair or replace.

OK

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screw.

A
CHECK POWER SUPPLY.
1. Disconnect EVAP control system pressure sensor harness connector.
2. Check sensor harness connector for water.
Water should not exist. If OK, go to step 3. If NG, repair or replace harness or connectors.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and engine ground with CONSULT or tester.
Voltage: Approximately 5V

NG → Check the following.

- Harness or connectors (F64), (B102)
- Harness or connectors (B178), (B65)
- Harness connectors (B64), (C14)
- Harness for open or short between EVAP control system pressure sensor and ECM

 If NG, repair harness or connectors.

OK

B
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Check harness continuity between terminal ① and engine ground.
Continuity should exist. If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness or connectors (F64), (B102)
- Harness or connectors (B178), (B65)
- Harness connectors (B64), (C14)
- Harness for open or short between EVAP control system pressure sensor and ECM

 If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

C
CHECK INPUT SIGNAL CIRCUIT.
1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ⑨ and terminal ②.
Continuity should exist. If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors
- Harness or connectors (F64), (B102)
- Harness or connectors (B178), (B65)
- Harness connectors (B64), (C14)
- Harness for open or short between ECM and EVAP control system pressure sensor

 If NG, repair open circuit or short to ground or short to power in harness or connectors.



OK

Ⓐ

CI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0450

Evaporative Emission (EVAP) Control System Pressure Sensor (For California) (Cont'd)

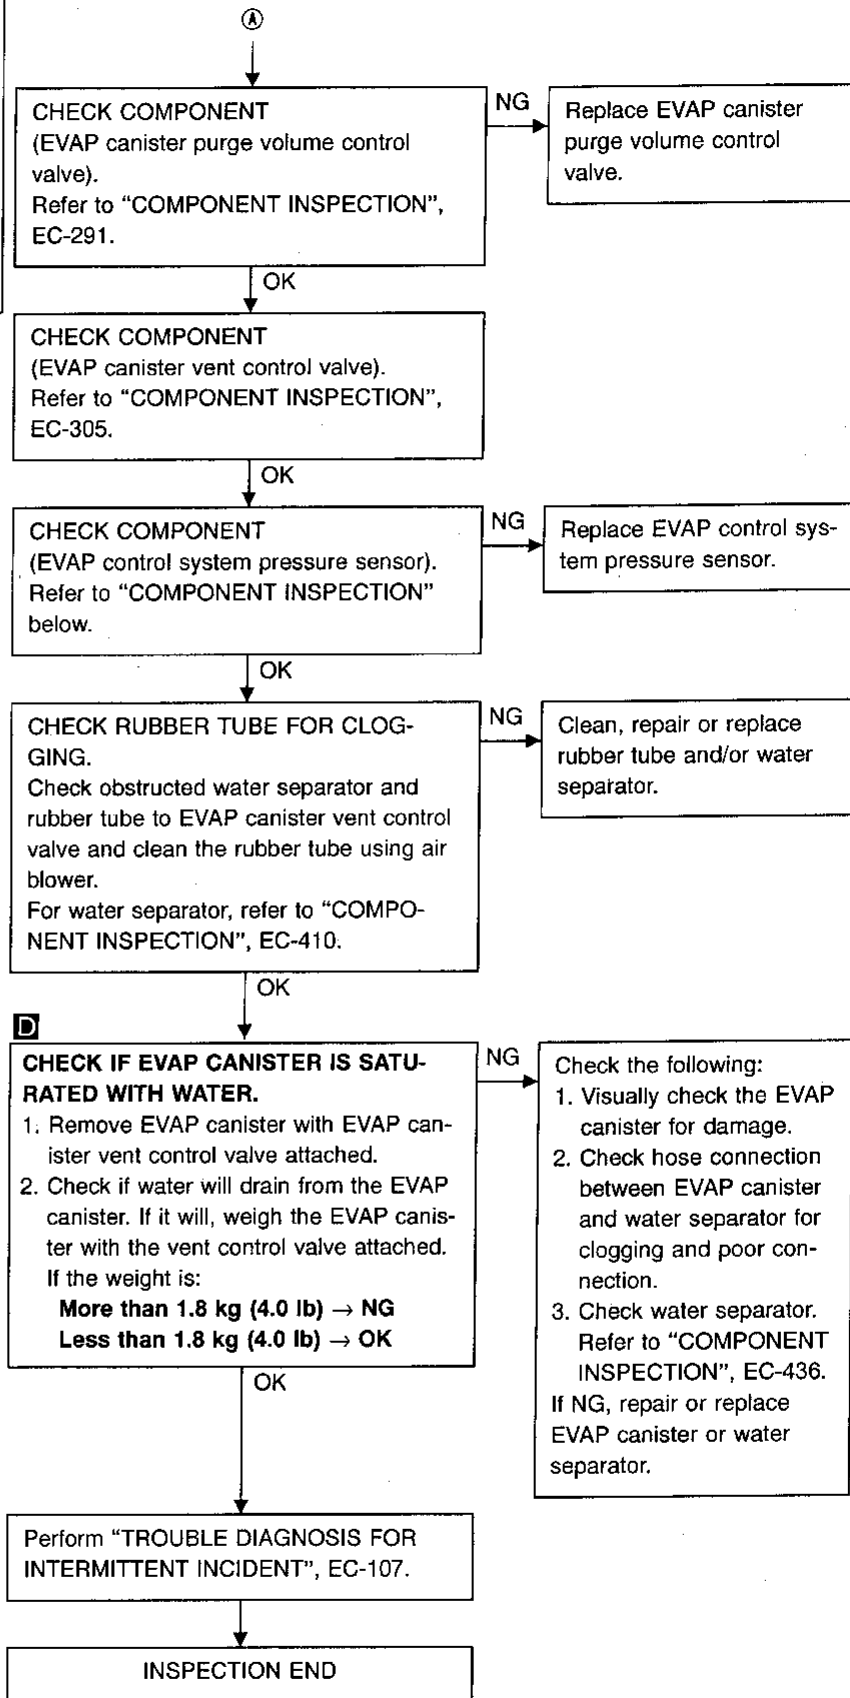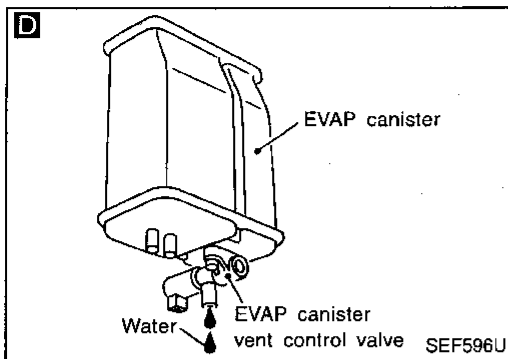


TROUBLE DIAGNOSIS FOR DTC P0450

Evaporative Emission (EVAP) Control System Pressure Sensor (For California) (Cont'd)

COMPONENT INSPECTION

EVAP control system pressure sensor

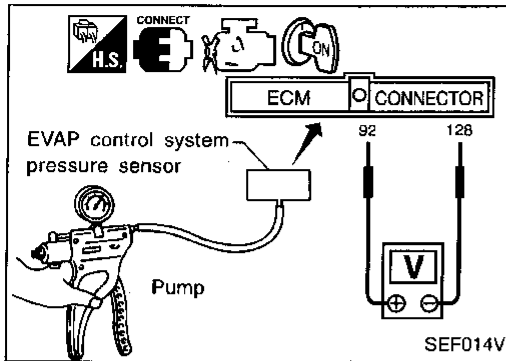

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 92 and 126 (ECM ground).

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.
5. If NG, replace EVAP control system pressure sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0500

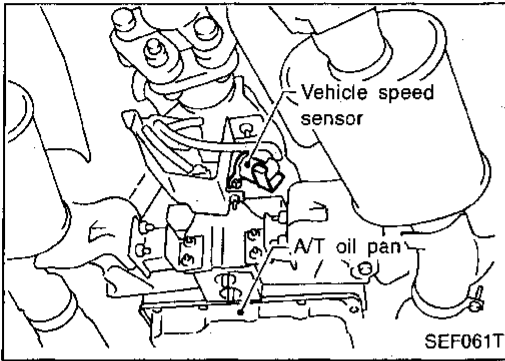

Vehicle Speed Sensor (VSS)

COMPONENT DESCRIPTION

The vehicle speed sensor is installed in the transmission. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
68	P/L	Vehicle speed sensor	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> Jack up drive wheels and run engine at idle in "D" position.	Approximately 5.2V <p style="text-align: right;">SEF542T</p>

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0500 0104	<ul style="list-style-type: none"> The almost 0 km/h (0 MPH) signal from the vehicle speed sensor is sent to ECM even when the vehicle is driving. 	<ul style="list-style-type: none"> Harness or connector (The vehicle speed sensor circuit is open or shorted.) Vehicle speed sensor

TROUBLE DIAGNOSIS FOR DTC P0500

Vehicle Speed Sensor (VSS) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Step 1 and 2 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.



- 1) Start engine.
- 2) Perform "VEHICLE SPEED SEN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR



- 1) Start engine.
- 2) Read vehicle speed sensor signal in "DATA MONITOR" mode with CONSULT. The vehicle speed on CONSULT should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position. If NG, go to "DIAGNOSTIC PROCEDURE", EC-315. If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT.
- 4) Warm engine up to normal operating temperature.
- 5) Maintain the following conditions for at least 10 consecutive seconds.


CMPS-RPM (POS): 1,600 - 2,250 rpm

COOLAN TEMP/S: More than 70°C (158°F)


B/FUEL SCHDL: 2.0 - 3.5 ms

Selector lever: Suitable position

PW/ST SIGNAL: OFF

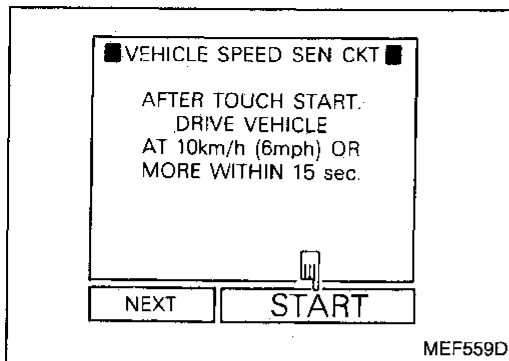


MEF559D

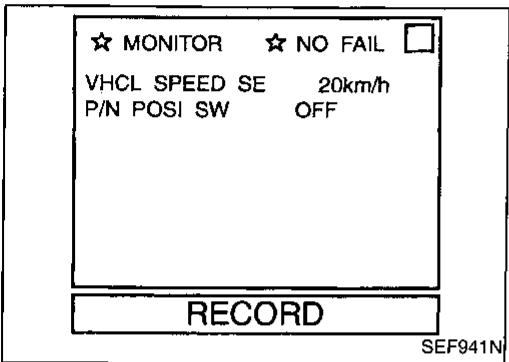

SEF941N

FUEL SYS #1	CLOSED
FUEL SYS #2	CLOSED
CALC LOAD	19%
COOLANT TEMP	93°C
SHORT FT #1	1%
LONG FT #1	0%
SHORT FT #2	3%
LONG FT #2	0%
ENGINE SPD	2037RPM
VEHICLE SPD	12MPH
IGN ADVANCE	38.0°
INTAKE AIR	43°C

SEF568P

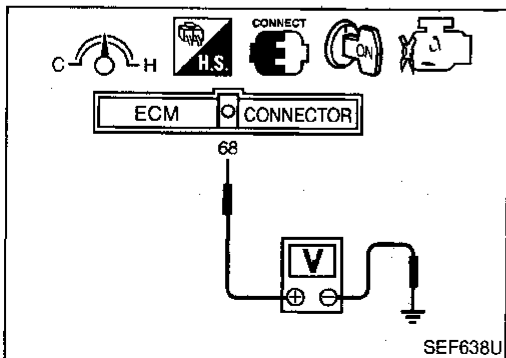

SEF638U

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the vehicle speed sensor circuit. During this check, a DTC might not be confirmed.



- 1) Jack up drive wheels.
- 2) Start engine (TCS switch "OFF").
- 3) Read vehicle speed sensor signal in "MODE 1" with GST.

The vehicle speed sensor on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

OR





- 1) Jack up drive wheels.
- 2) Start engine (TCS switch "OFF").
- 3) Read the voltage signal between ECM terminal 68 (Vehicle speed sensor signal) and ground with oscilloscope.
- 4) Verify that the oscilloscope screen shows the signal wave as shown at "ECM TERMINALS AND REFERENCE VALUE" on previous page.

TROUBLE DIAGNOSIS FOR DTC P0500


Vehicle Speed Sensor (VSS) (Cont'd)

EC-VSS-01

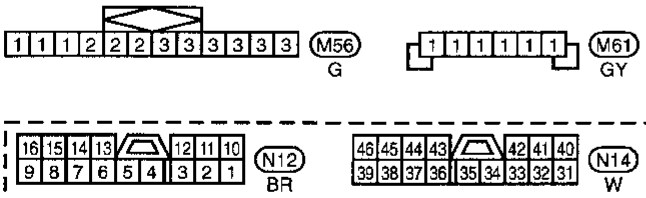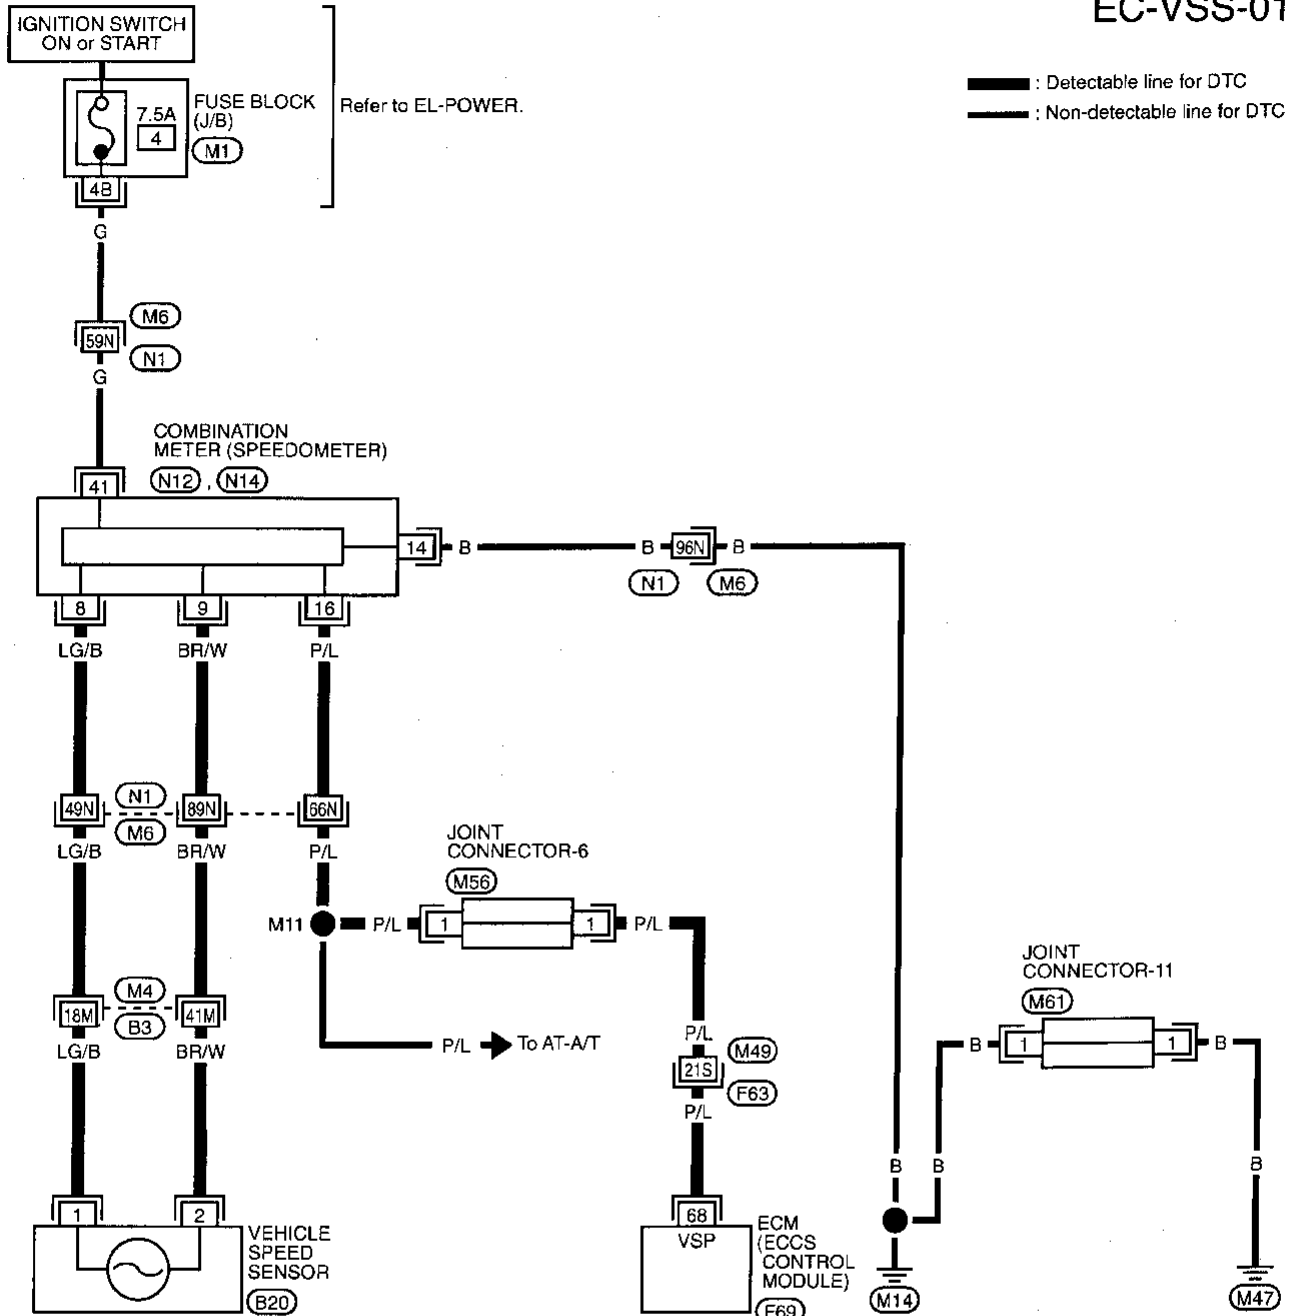

Refer to last page (Foldout page).



- (M4, B3)
- (M6, N1)
- (M49, F63)
- (M1)

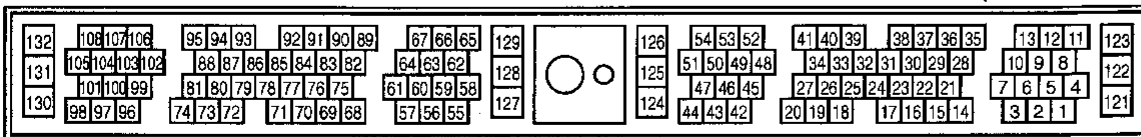

TROUBLE DIAGNOSIS FOR DTC P0500

Vehicle Speed Sensor (VSS) (Cont'd)

DIAGNOSTIC PROCEDURE

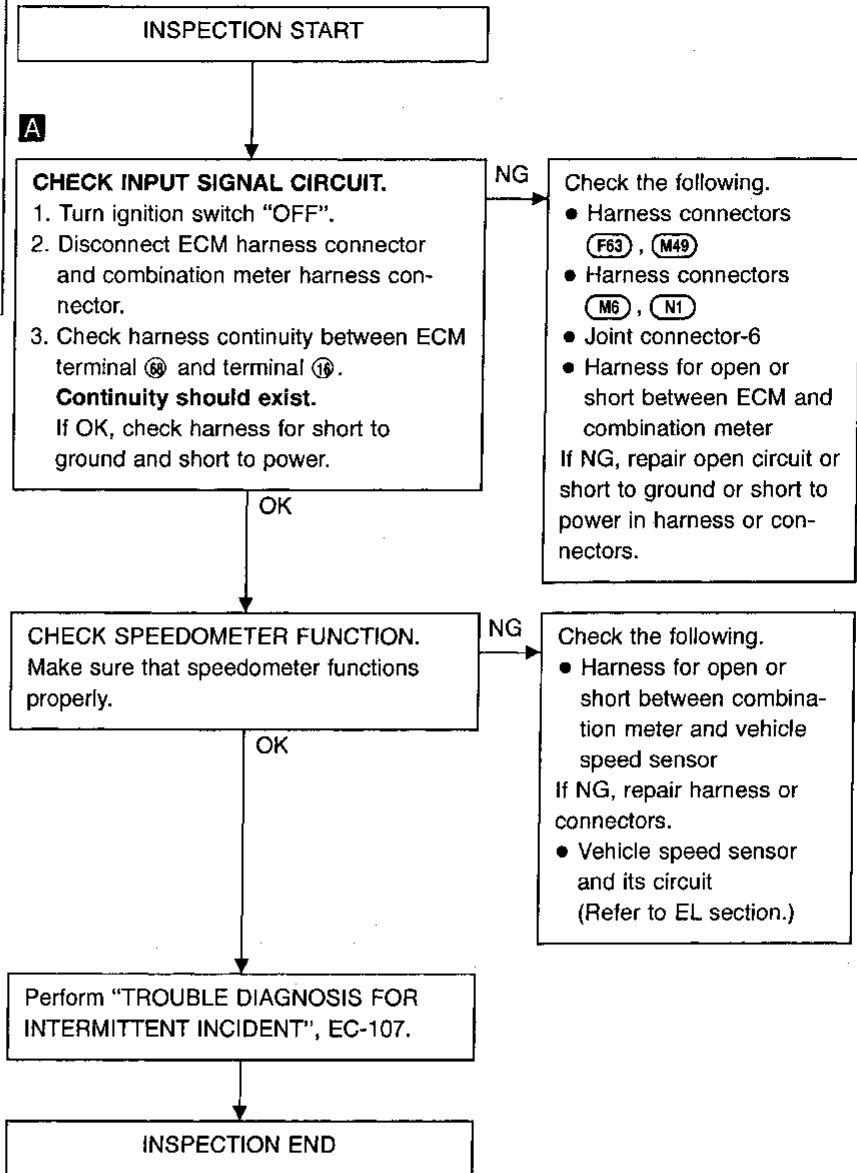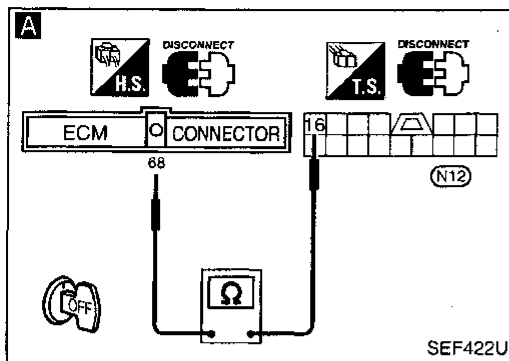

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve

SYSTEM DESCRIPTION

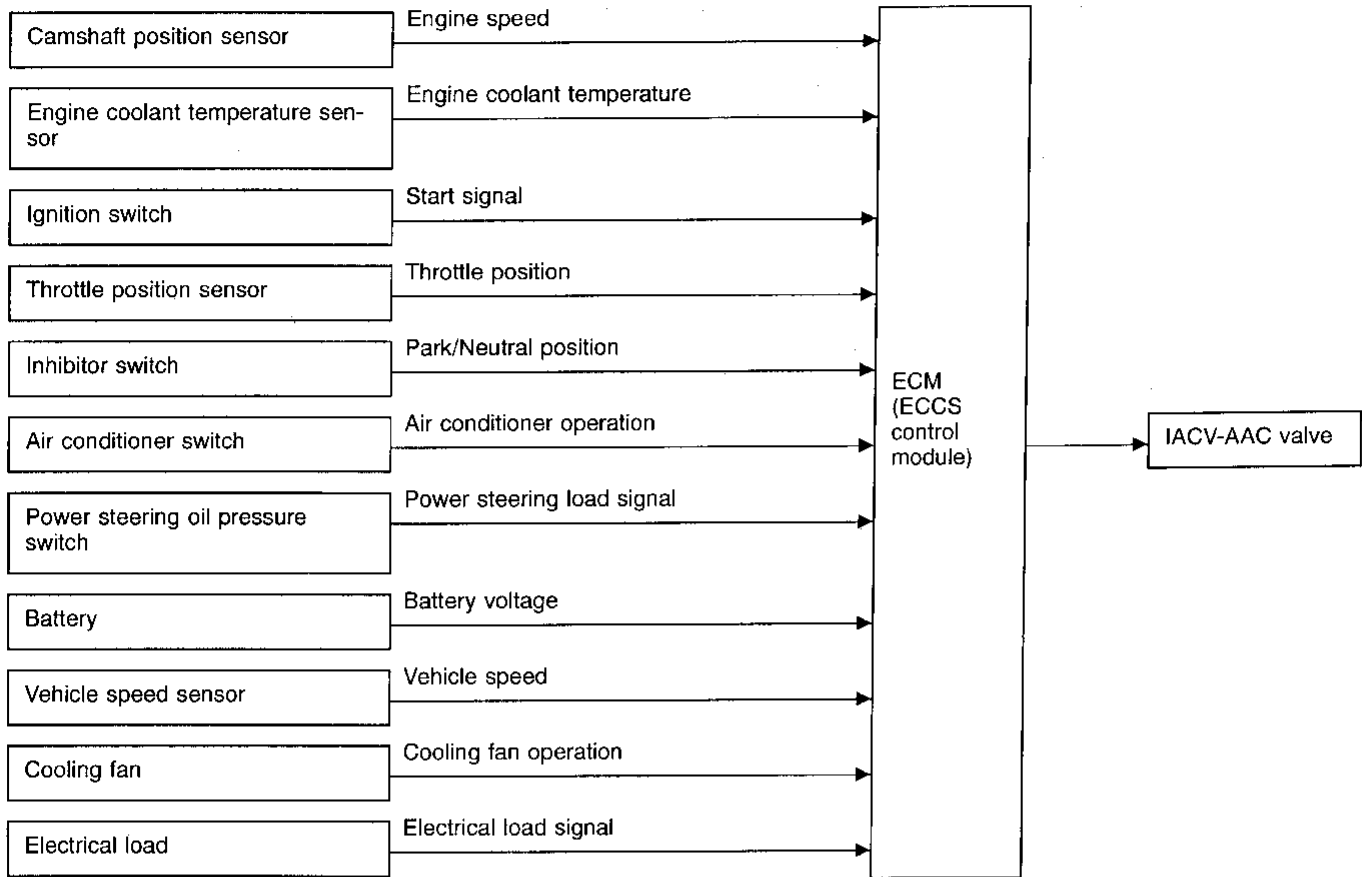

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The camshaft position sensor detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

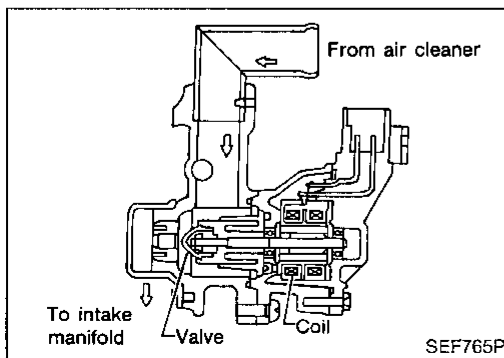

COMPONENT DESCRIPTION

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

TROUBLE DIAGNOSIS FOR DTC P0505

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
		20 - 10 step
		—


ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
13	Y	IACV-AAC valve	Engine is running.	0.1 - 14V
8	GY/L		└ Idle speed	
11	PU	IACV-AAC valve	Engine is running.	0.1 - 14V
12	G/Y		└ Idle speed	

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0505 0205	A) The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open.) ● IACV-AAC valve
	B) The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is shorted.) ● IACV-AAC valve

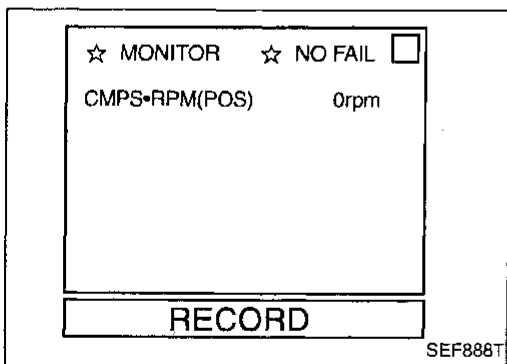

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- Perform "Procedure for malfunction A" first. If a 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B".

Procedure for malfunction A

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and let it idle.
- 4) Keep engine speed at 2,500 rpm for 3 seconds, then let it idle for 3 seconds.
Do not rev engine up to speeds more than 3,000 rpm.
- 5) Perform step 4 once more.

OR

- 1) Start engine and let it idle.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0505


Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

- 2) Keep engine speed at 2,500 rpm for 3 seconds, then let it idle for 3 seconds.
Do not rev engine up to speeds more than 3,000 rpm.
- 3) Perform step 2 once more.
- 4) Select "MODE 7" with GST.

OR



- 1) Start engine and let it idle.
- 2) Keep engine speed at 2,500 rpm for 3 seconds, then let it idle for 3 seconds.
Do not rev engine up to speeds more than 3,000 rpm.
- 3) Perform step 2 once more.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

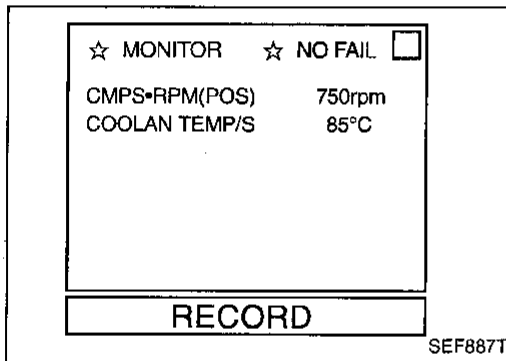

Procedure for malfunction B

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V.



- 1) Open engine hood.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT.
- 5) Start engine and run it for at least 1 minute at idle speed. (Headlamp switch, rear defogger switch: OFF)

OR



- 1) Open engine hood.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine again and run it for at least 1 minute at idle speed. (Headlamp switch, rear defogger switch: OFF)
- 5) Select "MODE 7" with GST.

OR






- 1) Open engine hood.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine again and run it for at least 1 minute at idle speed. (Headlamp switch, rear defogger switch: OFF)
- 5) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0505

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

EC-AAC/V-01


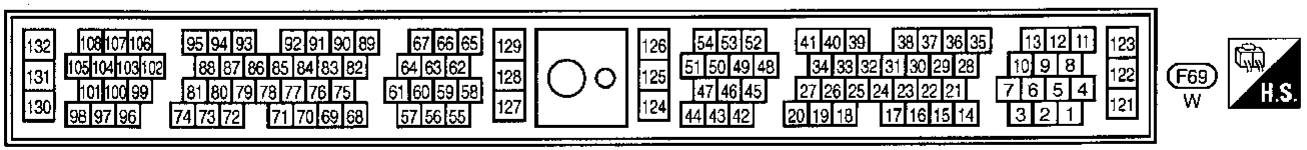

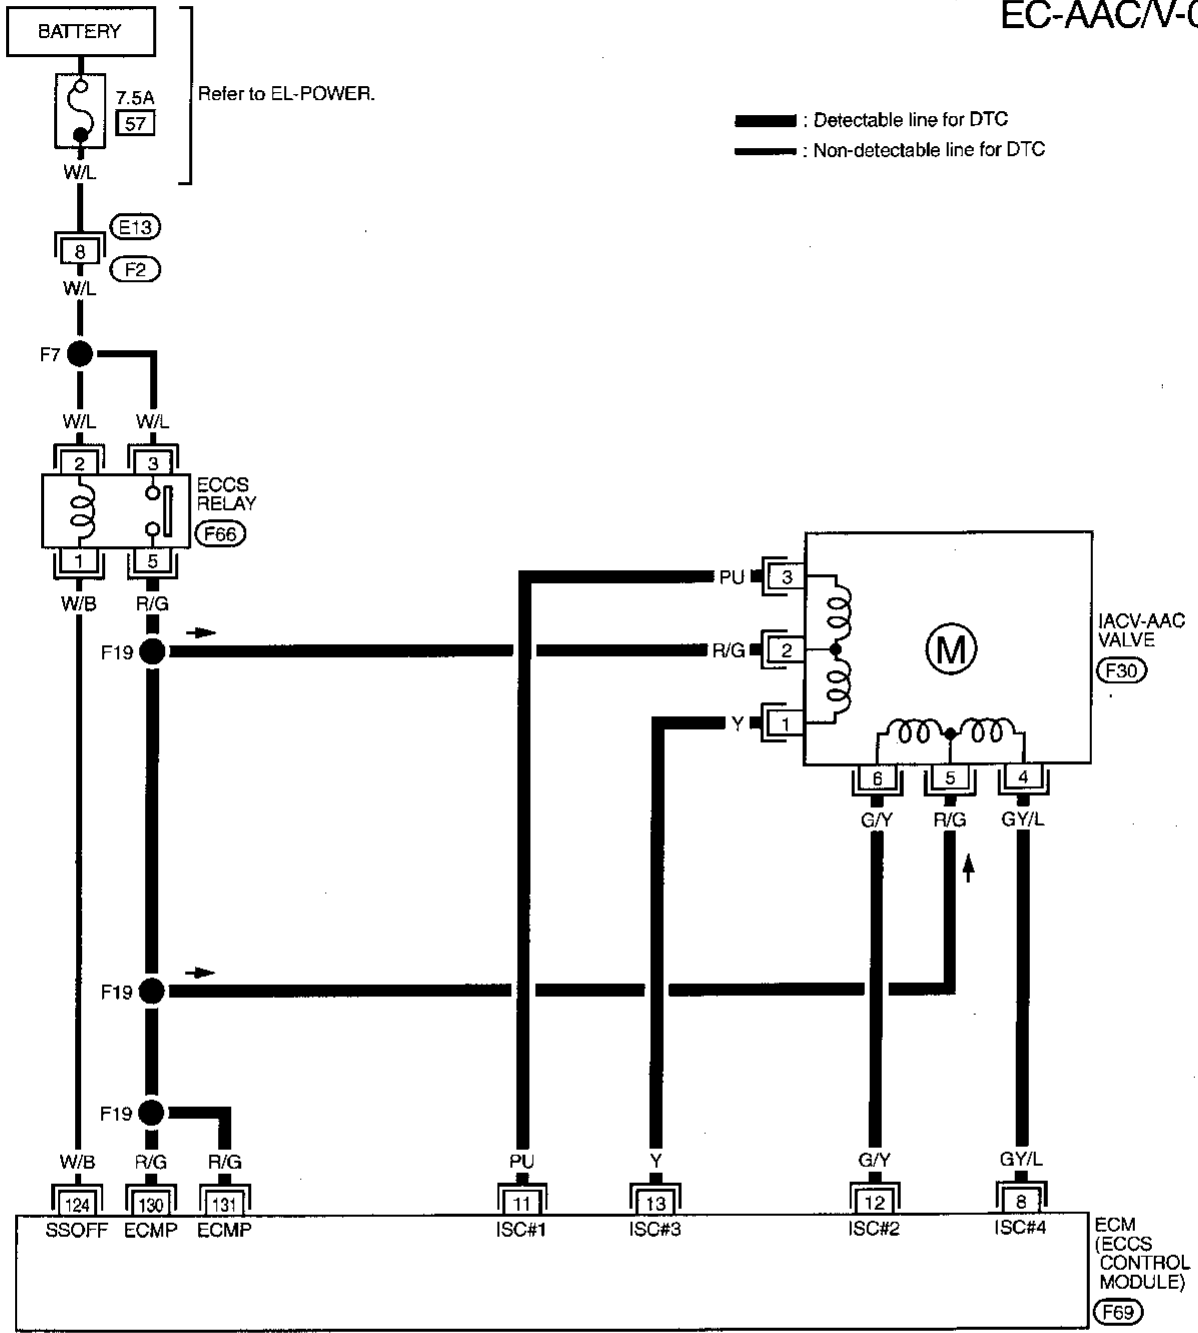


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0505

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)

DIAGNOSTIC PROCEDURE

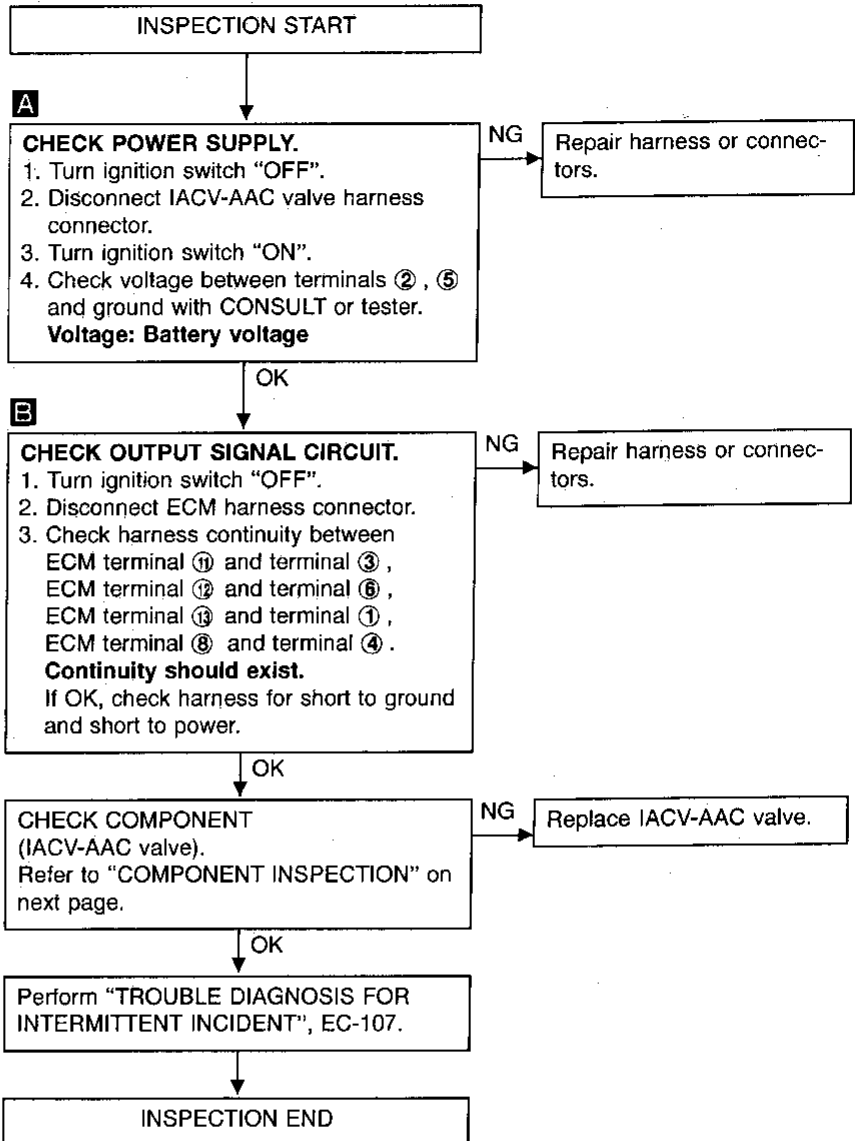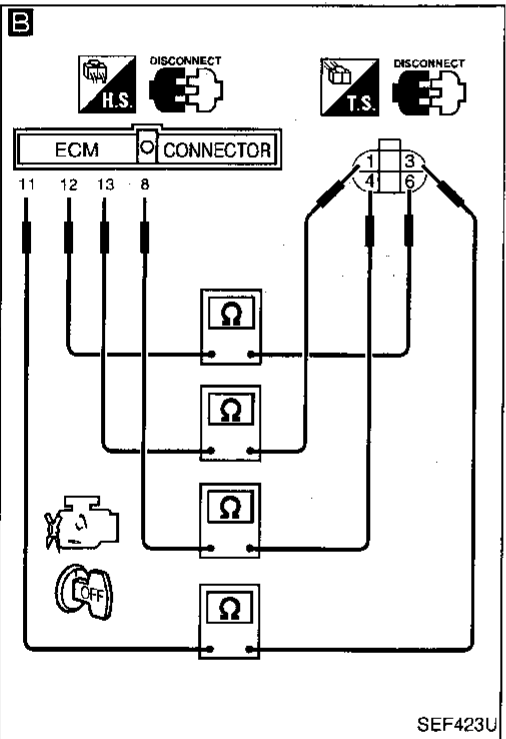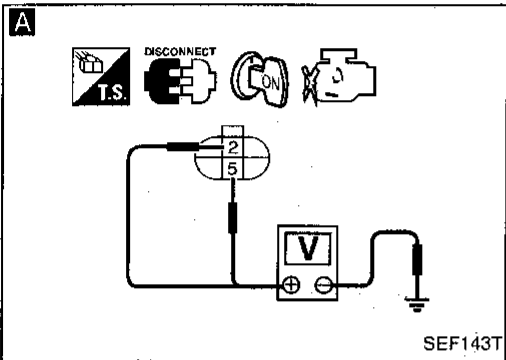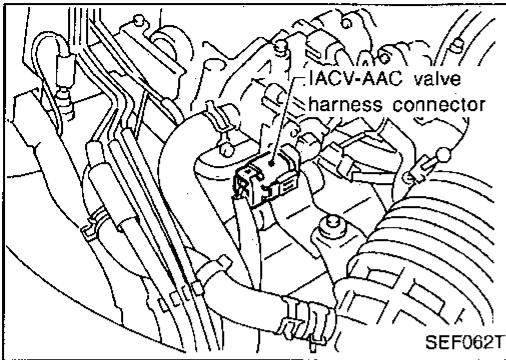

TROUBLE DIAGNOSIS FOR DTC P0505

Idle Air Control Valve (IACV) — Auxiliary Air Control (AAC) Valve (Cont'd)



COMPONENT INSPECTION

IACV-AAC valve

1. Disconnect IACV-AAC valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥

Resistance:

Approximately 30Ω [at 20°C (68°F)]

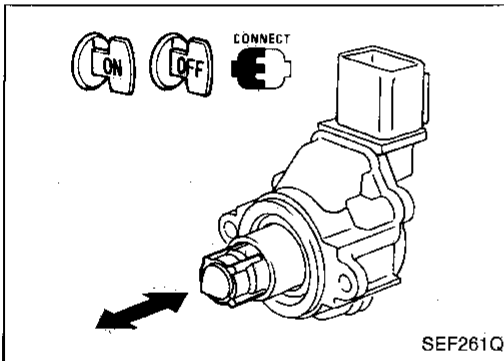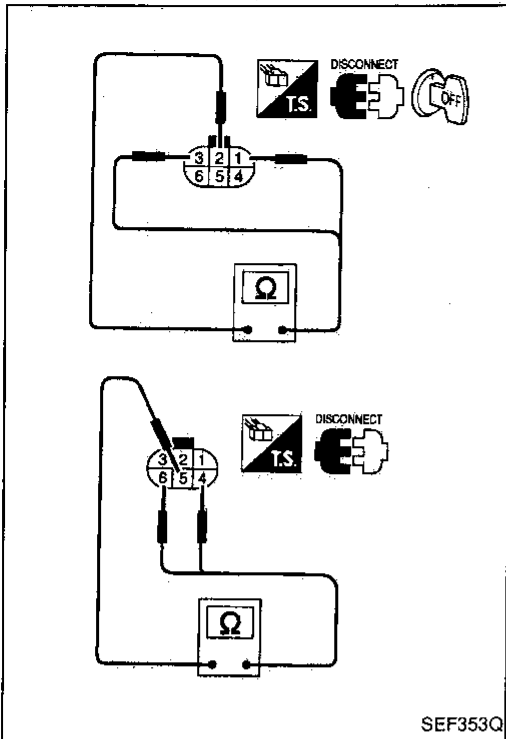

3. Reconnect IACV-AAC valve harness connector.
4. Remove idle air adjusting unit assembly (IACV-AAC valve is built-in) from engine.
(The IACV-AAC valve harness connector should remain connected.)
5. Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve shaft smoothly moves forward and backward, according to the ignition switch position.
If NG, replace the IACV-AAC valve.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0510

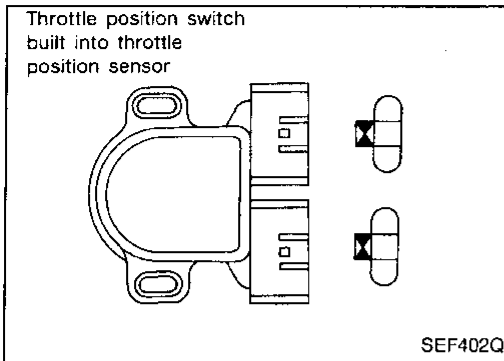

Closed Throttle Position Switch (For California)

COMPONENT DESCRIPTION

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control.

When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge control valve when the throttle position sensor is malfunctioning.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
CLSD THL/P SW	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) 	Throttle valve: Idle position	ON
		Throttle valve: Slightly open	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (12B) (ECCS ground).



TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
74	GY/L	Throttle position switch (Closed position)	Ignition switch "ON" (Warm-up condition) └ Accelerator pedal fully released	BATTERY VOLTAGE (11 - 14V)
			Ignition switch "ON" └ Accelerator pedal fully depressed	Approximately 0V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P0510 0203	<ul style="list-style-type: none"> Battery voltage from the closed throttle position switch is sent to ECM with the throttle valve opened. 	<ul style="list-style-type: none"> Harness or connectors (The closed throttle position switch circuit is shorted.) Closed throttle position switch

TROUBLE DIAGNOSIS FOR DTC P0510

Closed Throttle Position Switch (For California) (Cont'd)

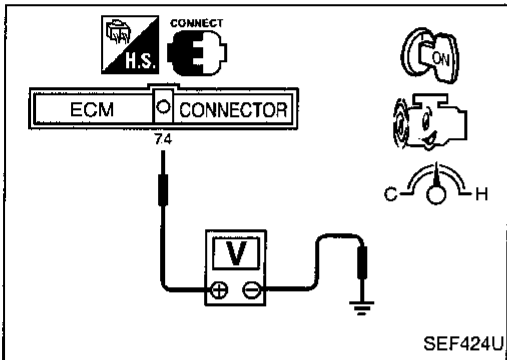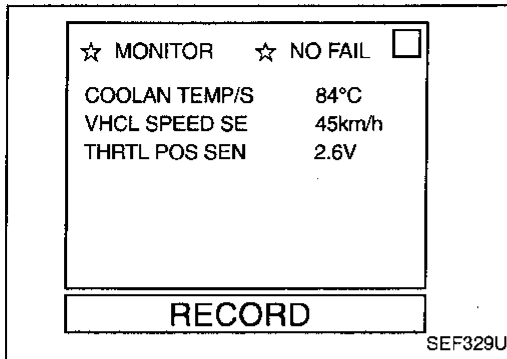

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Check voltage between ECM terminal 74 and ground under the following conditions.

At idle: Battery voltage

At 2,000 rpm: 0 - 1V

If the check result is NG, go to "DIAGNOSTIC PROCEDURE", EC-325.

If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT at the start of the test.
- 4) Drive the vehicle for at least 5 consecutive seconds under the following condition.

THRTL POS SEN: More than 2.5V

VHCL SPEED SE: More than 4 km/h (2 MPH)

Selector lever: Suitable position

Driving pattern: Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the closed throttle position switch circuit. During this check, a 1st trip DTC might not be confirmed.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 74 and ground under the following conditions.

At idle: Battery voltage

At 2,000 rpm: Approximately 0V

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX



TROUBLE DIAGNOSIS FOR DTC P0510

Closed Throttle Position Switch (For California) (Cont'd)

EC-TP/SW-01

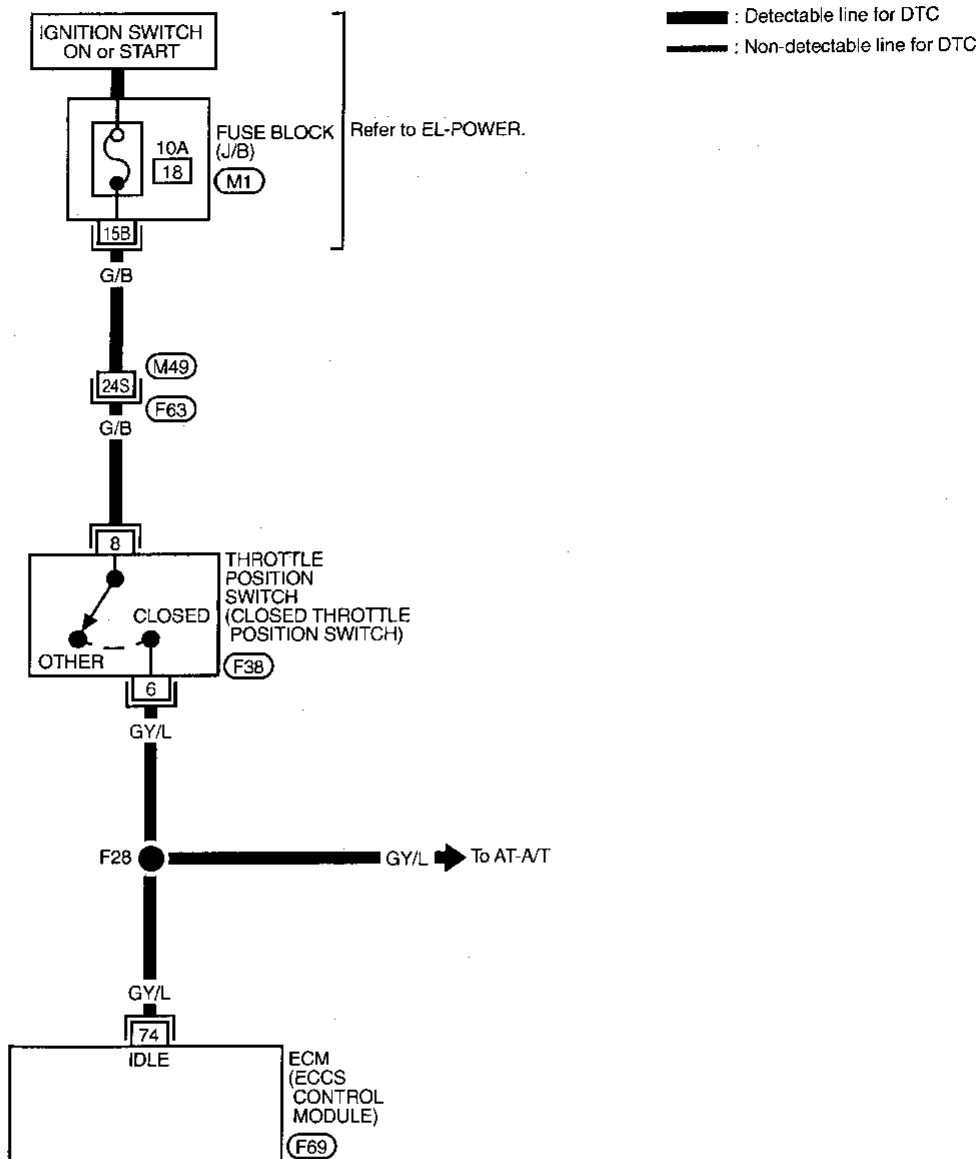




Refer to last page (Foldout page).

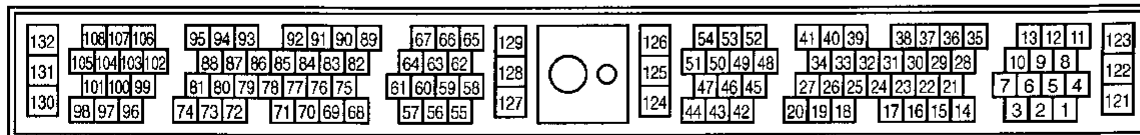

TROUBLE DIAGNOSIS FOR DTC P0510

Closed Throttle Position Switch (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

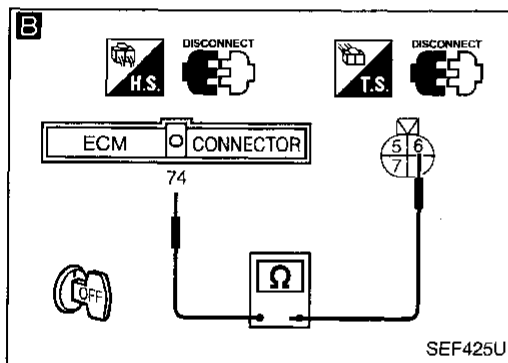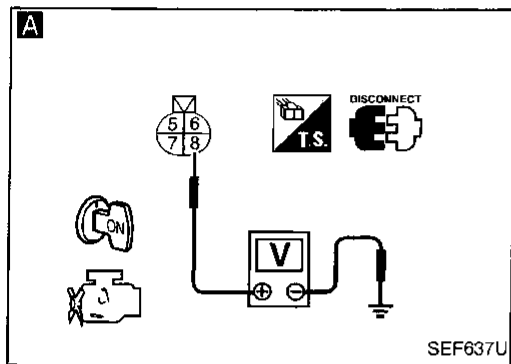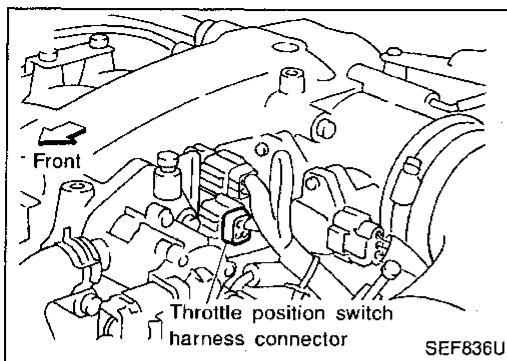

INSPECTION START

A
CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect throttle position switch harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ⑤ and engine ground with CONSULT or tester.
Voltage: Battery voltage

NG
Check the following.
• Harness connectors
 (F63, M49)
• 10A fuse
• Harness for open or short between throttle position switch and fuse
If NG, repair harness or connectors.

B
CHECK INPUT SIGNAL CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ⑭ and terminal ⑥.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG
Repair harness or connectors.

ADJUST THROTTLE POSITION SWITCH.
Perform BASIC INSPECTION, EC-85.

CHECK COMPONENT
(Closed throttle position switch).
Refer to "COMPONENT INSPECTION" on next page.

NG
Replace throttle position switch.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSIS FOR DTC P0510

Closed Throttle Position Switch (For California) (Cont'd)

COMPONENT INSPECTION

Closed throttle position switch

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Disconnect throttle position switch harness connector.
4. Check continuity between terminals ⑥ and ⑧ while opening throttle valve manually.

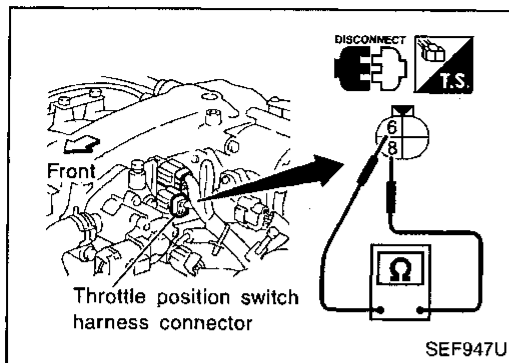

Throttle valve conditions	Continuity
Completely closed	Yes
Partially open or completely open	No

If NG, replace throttle position switch.

A/T Communication Line (P0600) and A/T Diagnostic Communication Line (P1605)

This circuit line (LAN) controls the smooth shifting up and down of A/T during the hard acceleration/deceleration. Pulse signals are exchanged between ECM and TCM (P0600).

This circuit line is also used to communicate malfunction information related to A/T (Automatic Transmission) is transferred through the line (LAN circuit) from TCM to ECM (P1605).

Be sure to erase the malfunction information such as DTC not only in TCM but also ECM after the A/T related repair.

GI

MA

EM

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0600 0504	<ul style="list-style-type: none"> ECM receives incorrect voltage from TCM continuously. 	<ul style="list-style-type: none"> Harness or connectors (The communication line circuit between ECM and TCM is open or shorted.) TCM Dead (Weak) battery
P1605 0804	<ul style="list-style-type: none"> Signal from TCM is not sent to ECM. 	

LC

EC

FE

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and let it idle for at least 2 seconds (P0600) and 40 seconds (P1605).

OR



- 1) Start engine and let it idle for at least 2 seconds (P0600) and 40 seconds (P1605).
- 2) Select "MODE 7" with GST.

OR



- 1) Start engine and let it idle for at least 2 seconds (0504) and 40 seconds (0804).
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

AT

PD

FA

RA

BR

ST

RS

BT

HA





EL

IDX

TROUBLE DIAGNOSIS FOR DTC P0600, P1605

A/T Communication Line (P0600) and A/T Diagnostic Communication Line (P1605) (Cont'd)

EC-AT/C-01

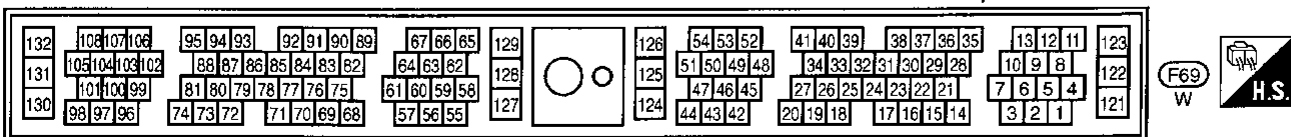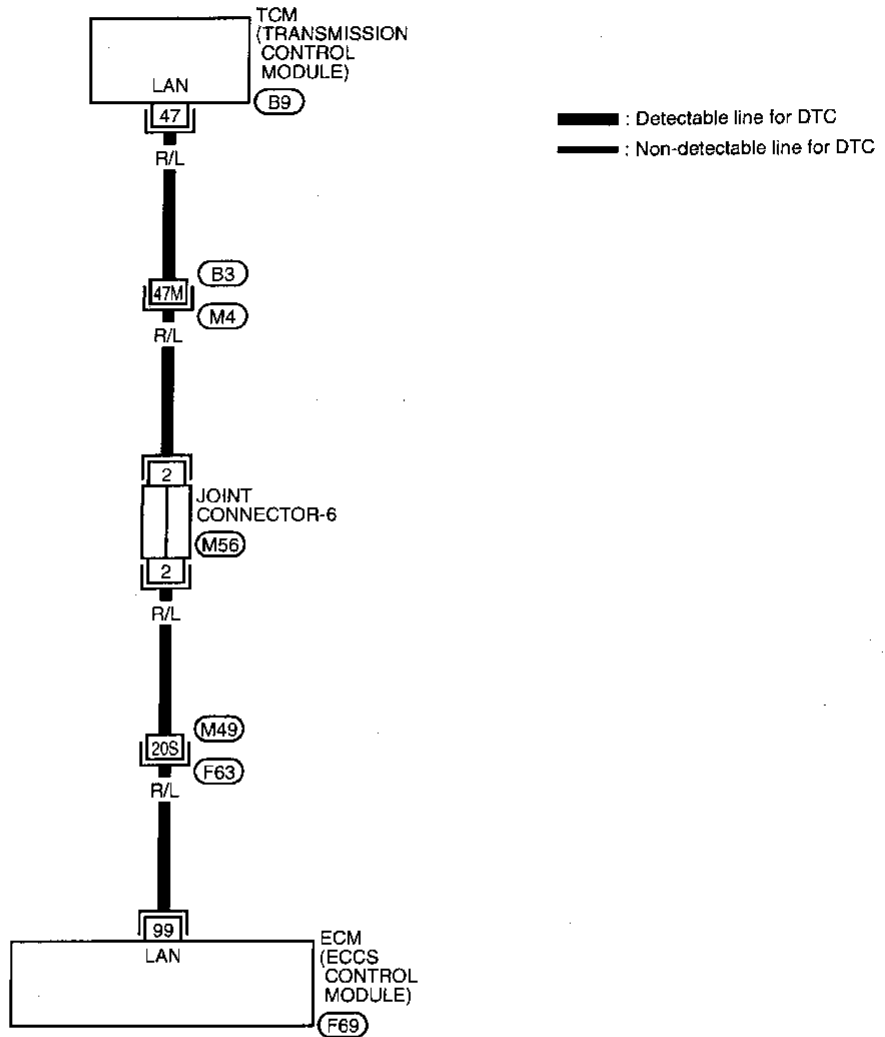

Refer to last page (Foldout page).




M4, B3

M49, F63

TROUBLE DIAGNOSIS FOR DTC P0600, P1605

A/T Communication Line (P0600) and A/T Diagnostic Communication Line (P1605) (Cont'd)

DIAGNOSTIC PROCEDURE

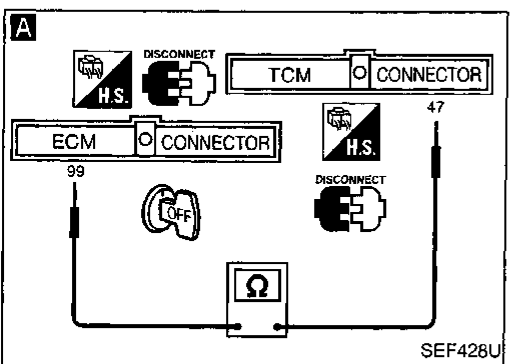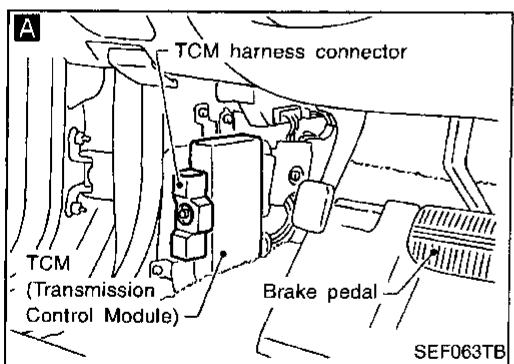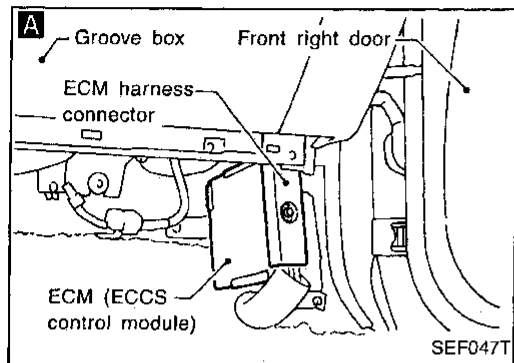

INSPECTION START

A
CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector and TCM harness connector.
3. Check harness continuity between ECM terminal 99 and terminal 47.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors M4, B3
- Harness connectors F63, M49
- Joint connector-6
- Check harness for open or short between ECM and TCM.


If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK → Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P0605

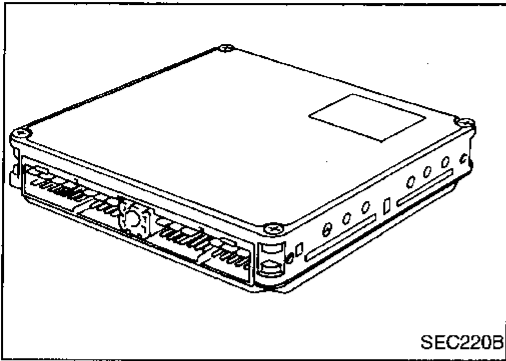


Engine Control Module (ECM)-ECCS Control Module

The ECM consists of a microcomputer, diagnostic test mode selector, and connectors for signal input and output and for power supply. The unit controls the engine.

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Item (Possible Cause)
P0605 0301	<ul style="list-style-type: none"> • ECM calculation function is malfunctioning. 	<ul style="list-style-type: none"> • ECM (ECCS control module)

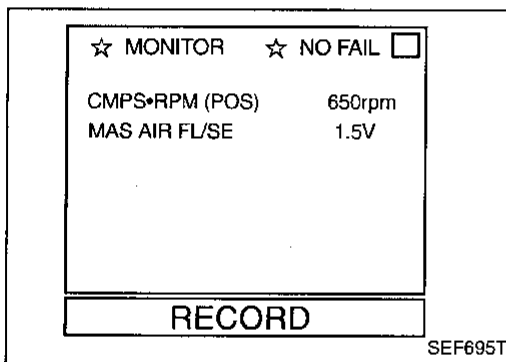

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and run it for at least 2 seconds at idle speed.

OR



- 1) Turn ignition switch "ON".
- 2) Select "Mode 7" with GST.
- 3) Start engine and run it for at least 2 seconds at idle speed.


OR



- 1) Turn ignition switch "ON".
- 2) Start engine and run it for at least 2 seconds at idle speed.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P0605

Engine Control Module (ECM)-ECSS Control Module (Cont'd)

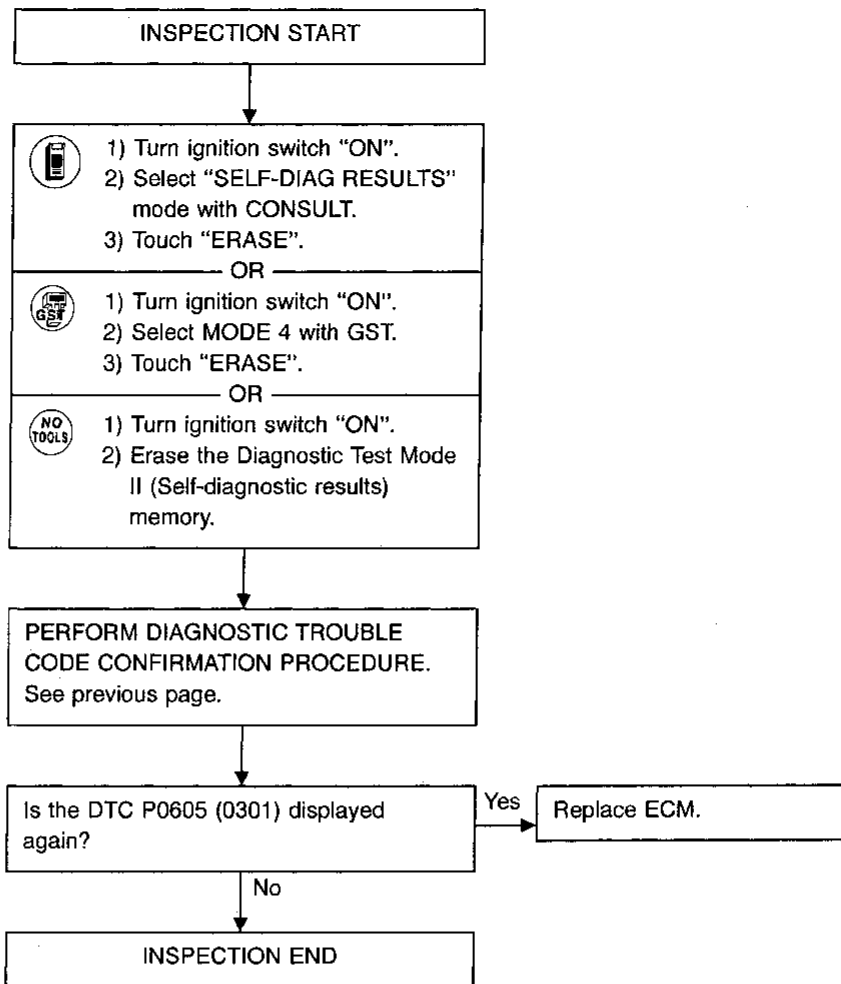

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California)

SYSTEM DESCRIPTION

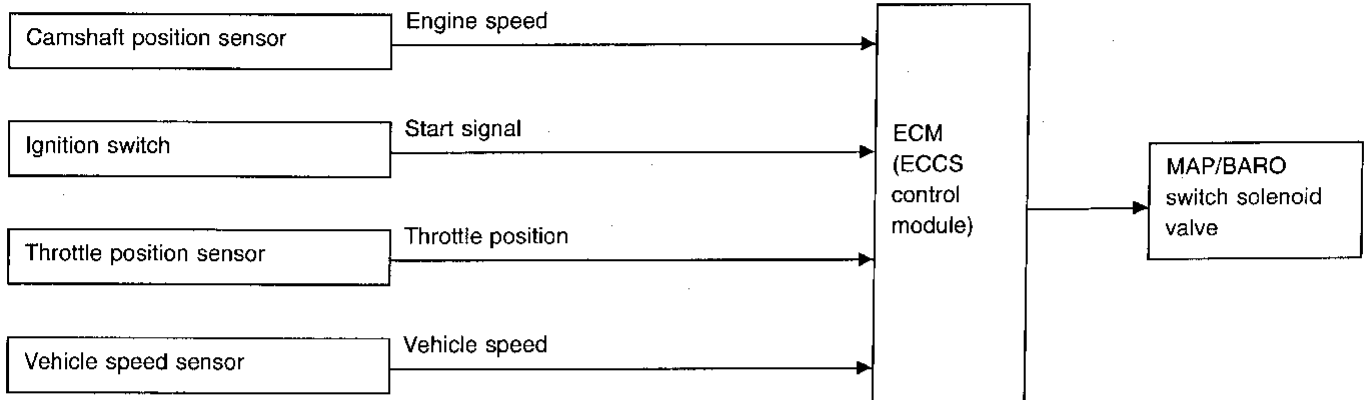

This system allows the absolute pressure sensor to monitor either ambient barometric pressure or intake manifold pressure. The MAP/BARO switch solenoid valve switches between two passages by ON-OFF pulse signals from the ECM. (One passage is from the intake air duct, the other is from the intake manifold.) Either ambient barometric pressure or intake manifold pressure is applied to the absolute pressure sensor.

Solenoid	Conditions
ON	<ul style="list-style-type: none"> • For 5 seconds after turning ignition switch "ON" <li style="text-align: center;">or • For 5 seconds after starting engine <li style="text-align: center;">or • More than 5 minutes after the solenoid valve shuts OFF. <li style="text-align: center;">and • Throttle valve is shut or almost fully shut for more than 5 seconds <li style="text-align: center;">and • Vehicle speed is less than 100 km/h (62 MPH).

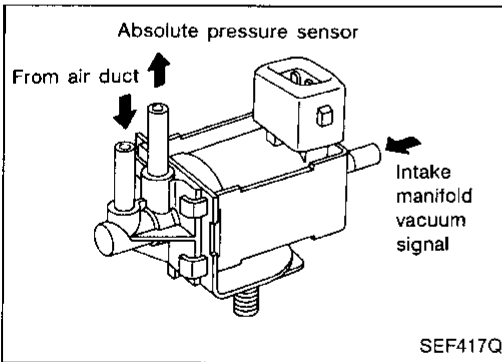

COMPONENT DESCRIPTION

The MAP/BARO switch solenoid valve switches its air flow passage according to the voltage signal sent from the ECM. When voltage is supplied from the ECM, the MAP/BARO switch solenoid turns "ON". Then, the absolute pressure sensor can monitor the ambient barometric pressure. When voltage is not supplied from the ECM, the MAP/BARO switch solenoid valve turns "OFF". Then, the sensor monitors intake manifold pressure.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAP/BARO SW/V	• For 5 seconds after starting engine	BARO
	• More than 5 seconds after starting engine	MAP

TROUBLE DIAGNOSIS FOR DTC P1105

Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California) (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
41	W	MAP/BARO switch solenoid valve	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON"	Approximately 0V
			Engine is running └ For 5 seconds after starting engine.	
			Engine is running └ More than 5 seconds after starting engine	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1105 1302	<ul style="list-style-type: none"> MAP/BARO switch solenoid valve receives the voltage supplied though ECM does not supply the voltage to the valve. There is little difference between MAP/BARO switch solenoid valve input voltage at ambient barometric pressure and voltage at intake manifold pressure. 	<ul style="list-style-type: none"> Harness or connectors (MAP/BARO switch solenoid valve circuit is open or shorted.) Hoses (Hoses are clogged, bent, kinked, disconnected, not connected properly.) Absolute pressure sensor MAP/BARO switch solenoid valve


DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:


If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:


Before performing the following procedure, confirm that battery voltage is more than 11V.

-  1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
2) Start engine and let it idle.
3) Wait at least 15 seconds.

OR

-  1) Start engine and let it idle.
2) Wait at least 15 seconds.
3) Select "MODE 7" with GST.

OR

-  1) Start engine and let it idle.
2) Wait at least 15 seconds.
3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

☆ MONITOR
☆ NO FAIL

CMPS=RPM(POS)	750rpm
COOLAN TEMP/S	85°C



RECORD

SEF887T

TROUBLE DIAGNOSIS FOR DTC P1105

Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California) (Cont'd)



EC-SW/V-01

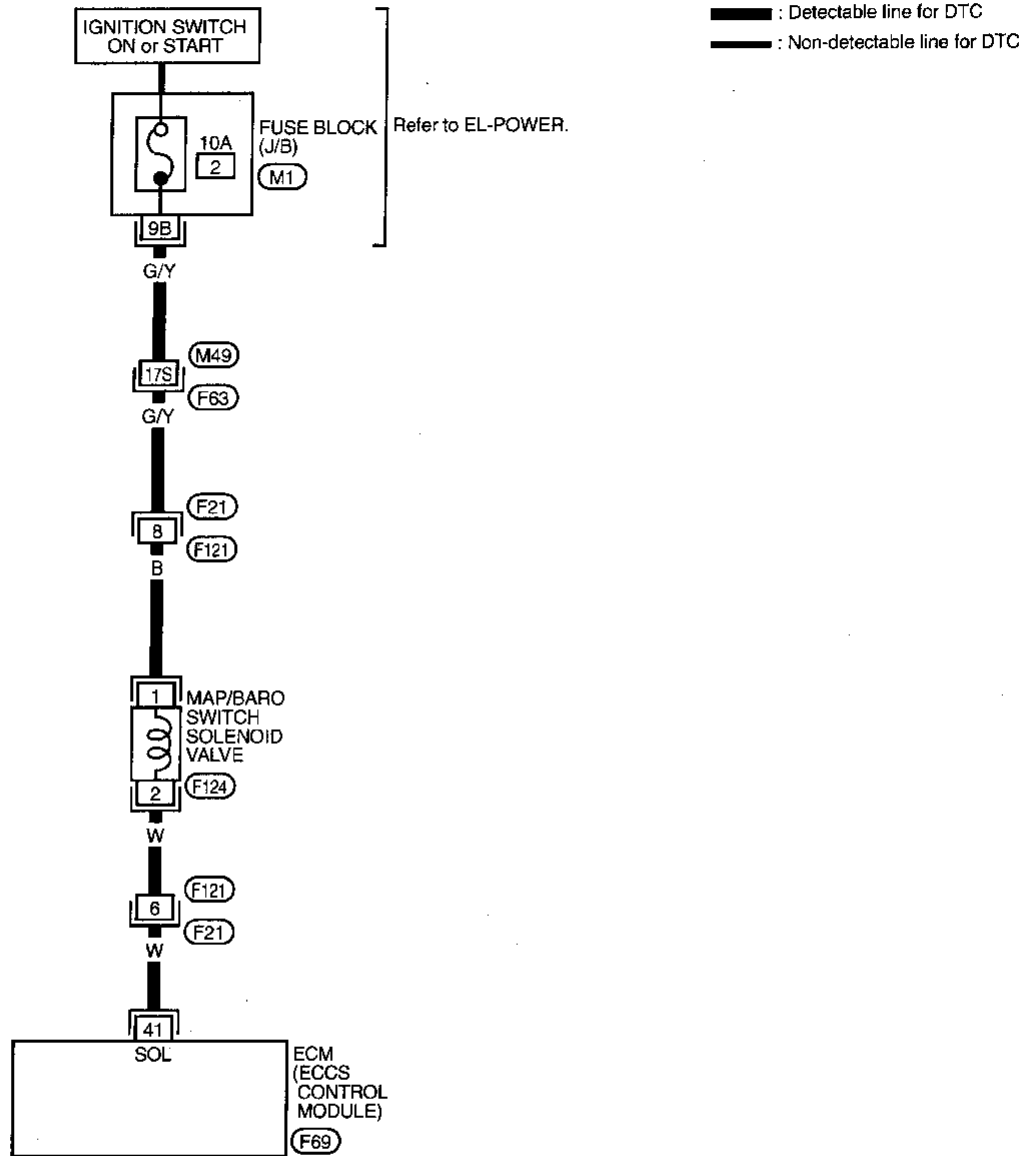

Refer to last page (Foldout page).

(M49), (F63)






(M1)

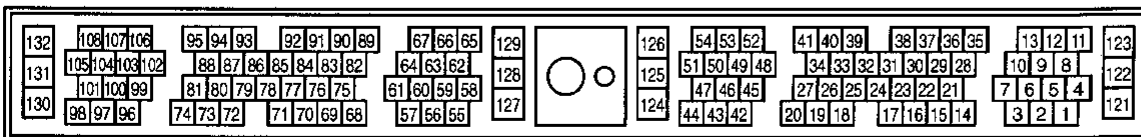

TROUBLE DIAGNOSIS FOR DTC P1105

Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

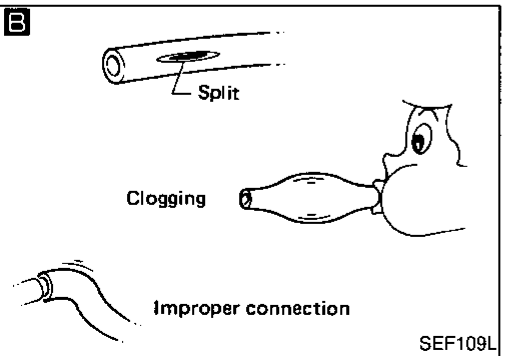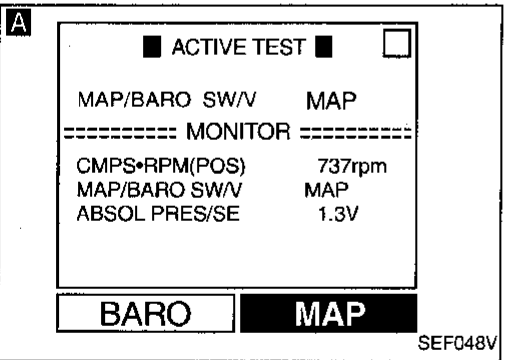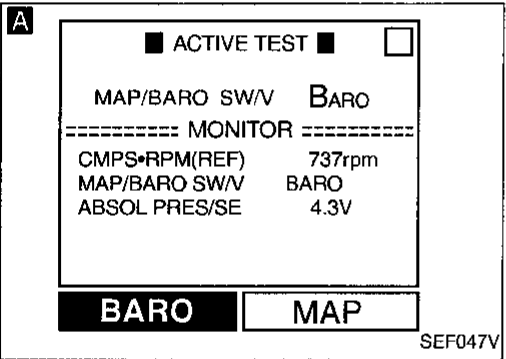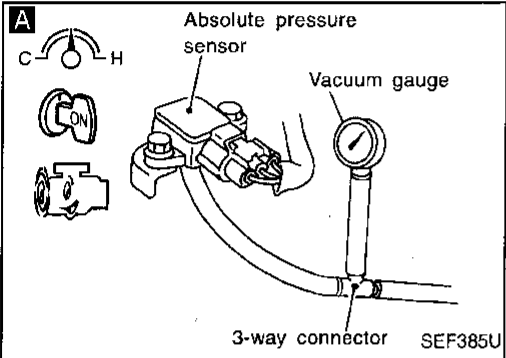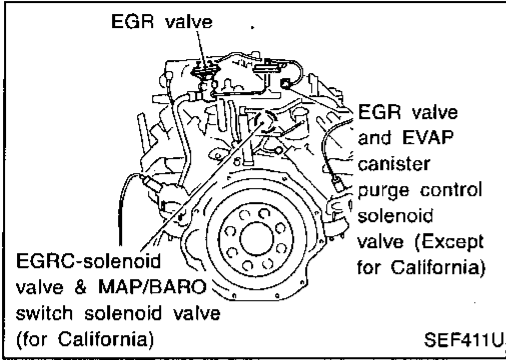

INSPECTION START

A

CHECK VACUUM SOURCE AND CIRCUIT TO MAP/BARO SWITCH SOLENOID VALVE.

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Connect the MAP/BARO switch solenoid valve and absolute pressure sensor with a rubber tube that has a vacuum gauge.
4. Turn ignition switch "ON".
5. Select "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
6. Touch "MAP" and "BARO" alternatively.
7. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

MAP/BARO SW/S	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO
• Time for voltage change	
MAP/BARO SW/V	Time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

OR

4. Turn ignition switch "ON".
5. Check vacuum gauge within 5 seconds after turning ignition switch "ON".
Vacuum should not exist.
6. Start engine and let it idle.
7. Check vacuum gauge.
Vacuum should exist.

B

CHECK HOSE.

1. Turn ignition switch "OFF".
2. Check hose for clogging, cracks, disconnection or improper connection.

OK

Go to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" in EC-107.

NG

Clean, repair or reconnect the hose.
If NG, check vacuum port for clogging.



OK

CHECK INTAKE SYSTEM.
Check the intake system for air leaks.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1105

Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California) (Cont'd)

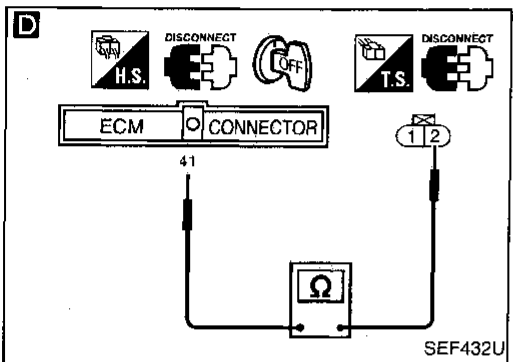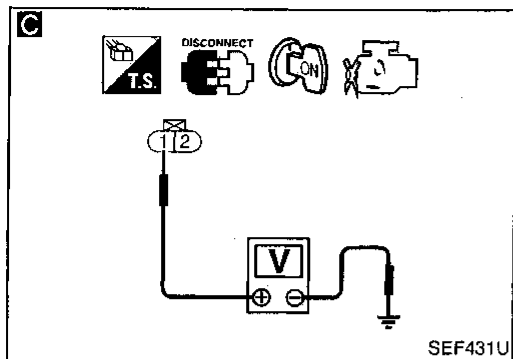

C

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect MAP/BARO switch solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and engine ground with CONSULT or tester.

Voltage: Battery voltage

NG → Check the following.

- Harness connectors (F121), (F21), (F63), (M49)
- 10A fuse
- Harness for open or short between MAP/BARO switch solenoid valve and fuse

If NG, repair harness or connectors.

OK →

D

CHECK OUTPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal ④ and terminal ② with CONSULT or tester.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors (F121), (F21)
- Harness for open or short between MAP/BARO switch solenoid valve and ECM

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK →

CHECK COMPONENT (Absolute pressure sensor).

1. Check for disconnection of vacuum hose connected to the sensor.
2. Disconnect sensor's connector and check sensor harness connectors for water.

Water should not exist.

Refer to "COMPONENT INSPECTION" of "TROUBLE DIAGNOSIS FOR DTC P0105", EC-121.

NG → Repair (disconnection) or replace harness connectors or replace absolute pressure sensor.

OK →

CHECK COMPONENT (MAP/BARO switch solenoid valve).

Refer to "COMPONENT INSPECTION" on next page.

NG → Replace MAP/BARO switch solenoid valve.

OK →

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END




TROUBLE DIAGNOSIS FOR DTC P1105

Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) Switch Solenoid Valve (For California) (Cont'd)

COMPONENT INSPECTION

MAP/BARO switch solenoid valve

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

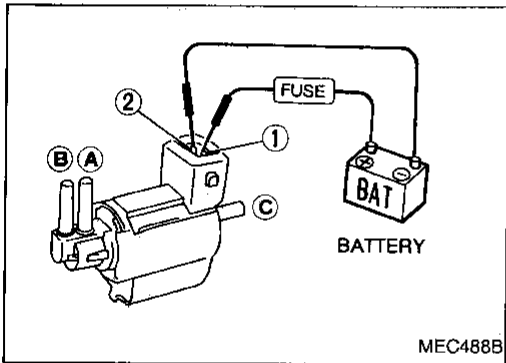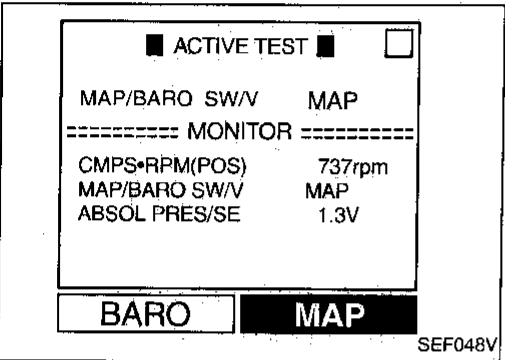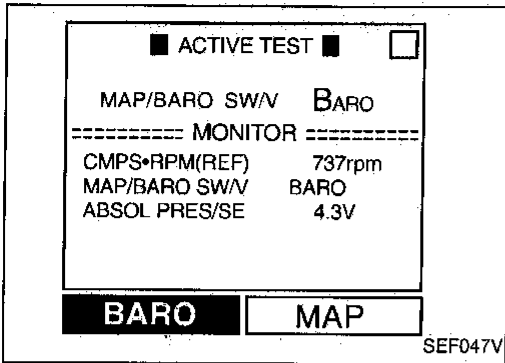

MAP/BARO SW/V	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

- Time for voltage to change

MAP/BARO SW/V	Time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

4. If NG, replace solenoid valve.

OR


1. Remove MAP/BARO switch solenoid valve.
2. Check air passage continuity.

Condition	Air passage continuity between ① and ②	Air passage continuity between ① and ③
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

3. If NG, replace solenoid valve.


Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank)

SYSTEM DESCRIPTION

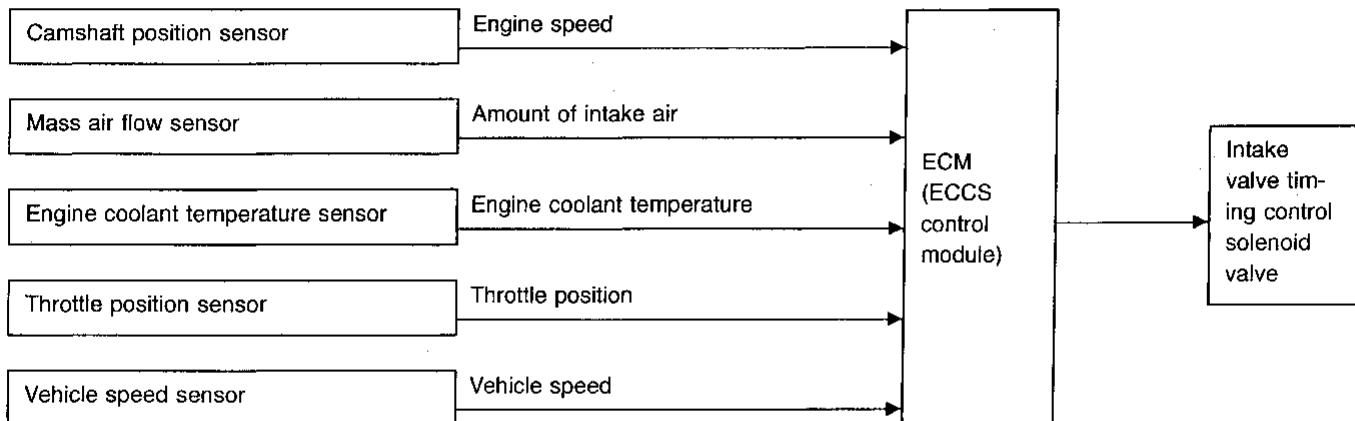

The intake valve timing control system is utilized to control intake valve opening and closing timing. Engine coolant temperature signals, engine speed, amount of intake air, vehicle speed and throttle position are used to determine intake valve timing. The intake camshaft sprocket position is regulated by oil pressure controlled by the intake valve timing control.

When ECM sends ON signal to intake valve timing control solenoid valve, oil pressure is transmitted to camshaft sprocket. Then, intake side camshaft is advanced.

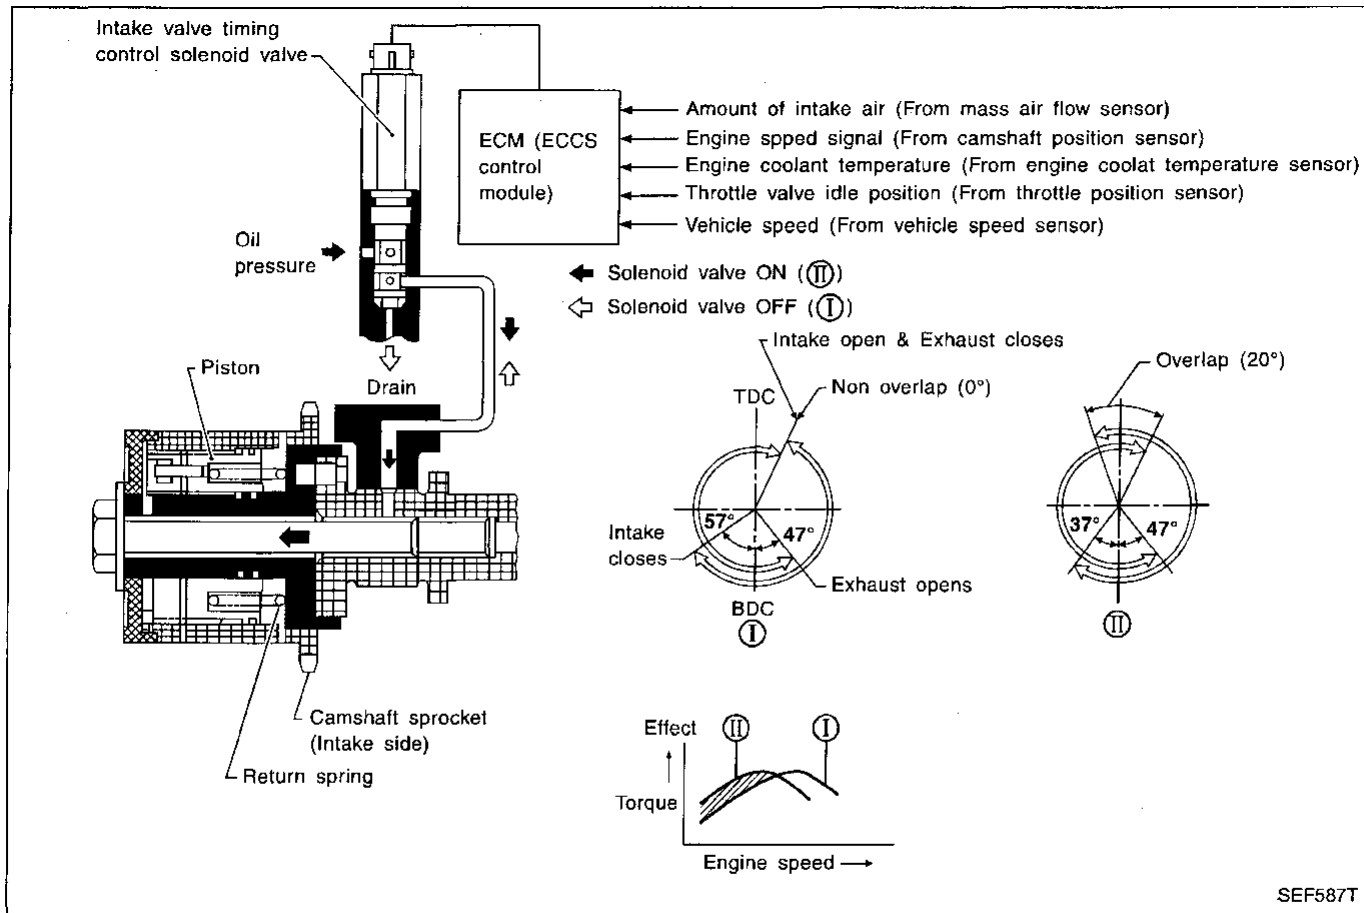

TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

OPERATION

Engine operating condition	Intake valve timing control solenoid valve	Intake valve opening and closing time	Valve overlap	Engine valve timing
<ul style="list-style-type: none"> Engine coolant temperature is between 15°C (59°F) to 110°C (230°F) and engine speed is between 1,100 rpm and 4,600 rpm. During high load condition Vehicle speed is more than 4 km/h (2 MPH) 	ON	Advance	Increased	①
Those other than above	OFF	Normal	Normal	①

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
INT/V SOL-B1 INT/V SOL-B2	<ul style="list-style-type: none"> Engine is in warm up condition. Engine speed is more than 2,000 rpm. Quickly depressed accelerator pedal Vehicle speed is more than 4 km/h (2 MPH). 	OFF → ON (Using "INT/V TIM-B1 (-B2)" in "DATA MONITOR", the difference of degree between "OFF" and "ON" is approximately 20 deg.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
24 (RH)	BR/Y	Intake valve timing control solenoid valves	Engine is running. └ Intake valve timing control solenoid is operating.	Approximately 0V
25 (LH)	BR		Engine is running. └ Intake valve timing control solenoid is not operating.	Battery voltage
70 (RH)	R/L	Intake valve timing control position sensors	Engine is running. └ Idle speed	Approximately 0V
71 (LH)	L/W		Engine is running. └ Engine speed is 2,000 rpm.	Approximately 0V

TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1110 0805 (Left bank)	Comparing the intake valve timing position when the intake valve timing solenoid is ON with that when the solenoid is OFF, the difference does not exceed a certain limit.	<ul style="list-style-type: none"> • Harness or connectors (The left bank intake valve timing control position sensor circuit is open.) • Intake valve timing control position sensor • Accumulation of debris to the signal pick-up portion of the camshaft
P1135 1301 (Right bank)		

☆ MONITOR ☆ NO FAIL

CMPS-RPM (POS)	1200rpm
MAS AIR/FL SE	1.9V
COOLANT TEMP/S	92°C
VHCL SPEED SE	24km/h
B/FUEL SCHDL	2.0msec
INT/V SOL-B1	OFF
INT/V TIM-B1	97deg

RECORD

SEF592T

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Warm up engine to normal operating temperature [more than 82°C (180°F)].
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 4) Restart engine and wait at least 30 seconds.
- 5) Turn TCS switch "OFF".
- 6) Shift A/T selector lever to "2nd" position.
- 7) Gradually raise engine speed and keep it between 1,100 rpm and 1,500 rpm for at least 20 seconds. (Test is completed when "INT/V SOL - B1" in "DATA MONITOR" with CONSULT remains "OFF". If indication is "ON", repeat 7.)
- 8) Quickly raise engine speed to more than 2,500 rpm and keep it there for at least 6 seconds. (Test is completed when "INT/V SOL - B1" in "DATA MONITOR" with CONSULT remains "ON". If indication is "OFF", repeat 8.)

OR



- 1) Warm up engine to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Restart engine and wait at least 30 second.
- 4) Turn TCS switch "OFF".
- 5) Shift A/T selector lever to "2nd" positions.
- 6) Gradually raise engine speed and keep it between 1,000 rpm and 1,500 rpm for at least 12 seconds.
- 7) Quickly raise engine speed to more than 2,500 rpm and keep it there for at least 6 seconds.
- 8) Select "MODE 7" with GST.

OR




- 1) Warm up engine to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Restart engine and wait at least 30 seconds.
- 4) Turn TCS switch "OFF".
- 5) Shift A/T selector lever to "D" position.
- 6) Gradually raise engine speed and keep it between 1,000 rpm and 1,500 rpm for at least 12 seconds.
- 7) Quickly raise engine speed to more than 2,500 rpm and keep it there for at least 6 seconds.
- 8) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 9) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

LEFT BANK

EC-IVC-L-01

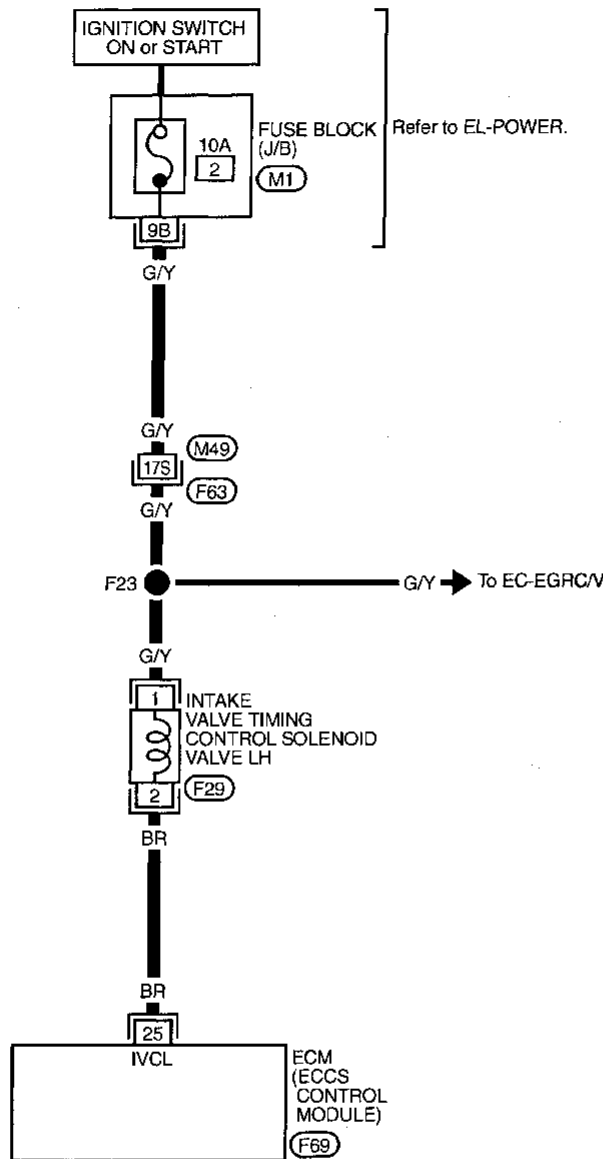

— : Detectable line for DTC
 — : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL


IDX



Refer to last page (Foldout page).

M49, F63

M1


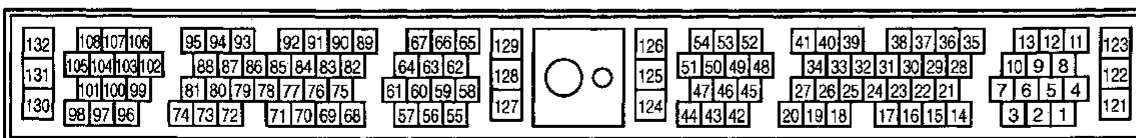


TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

RIGHT BANK


EC-IVC-R-01

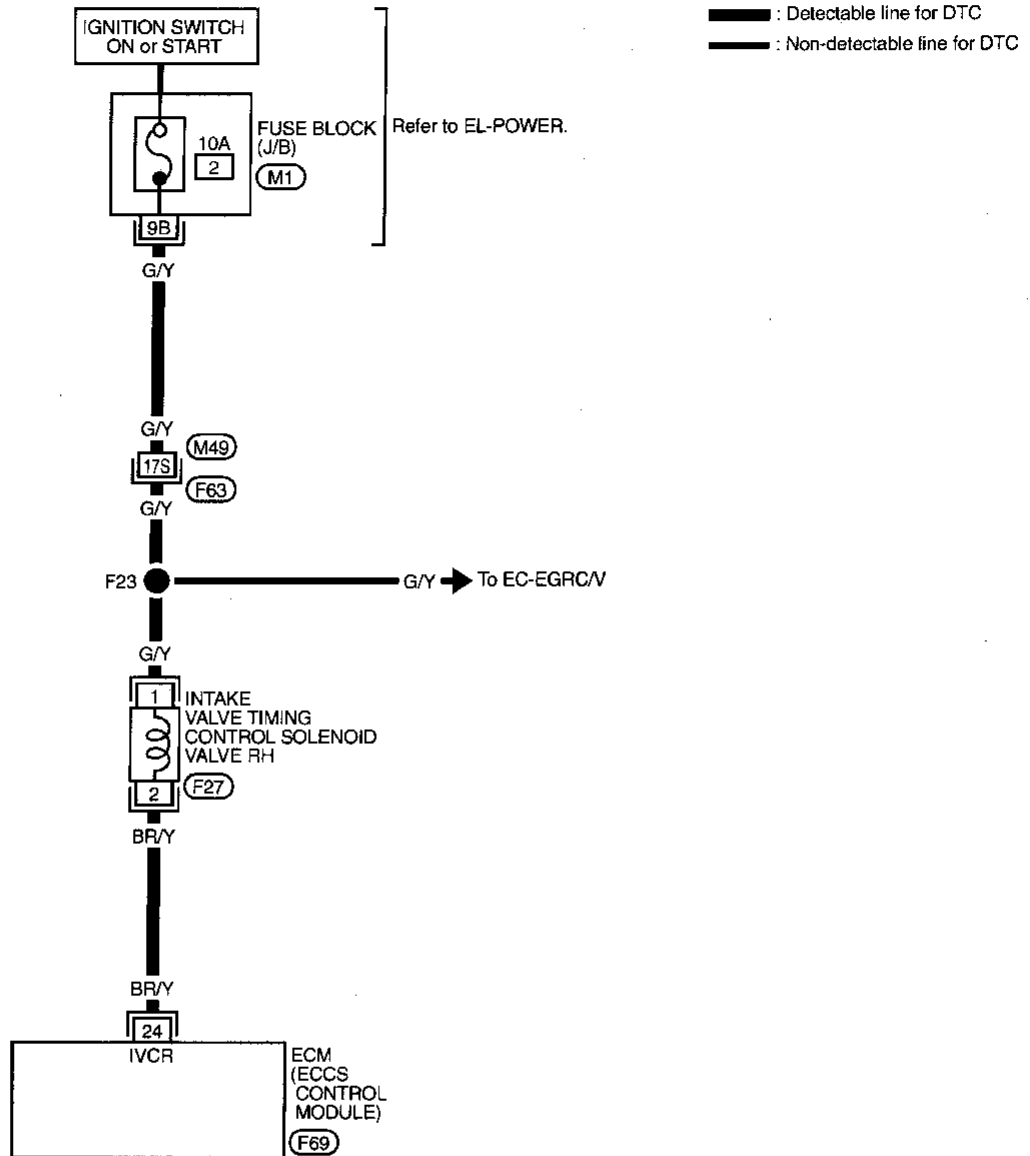

Refer to last page (Foldout page).

(M49), (F63)

(M1)

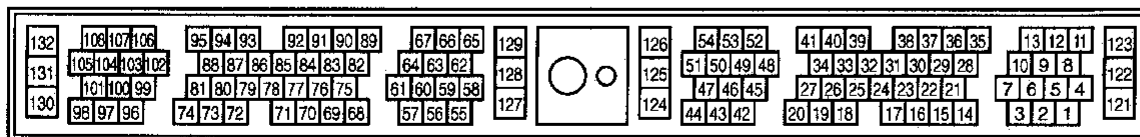





(F69)
W



TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

DIAGNOSTIC PROCEDURE

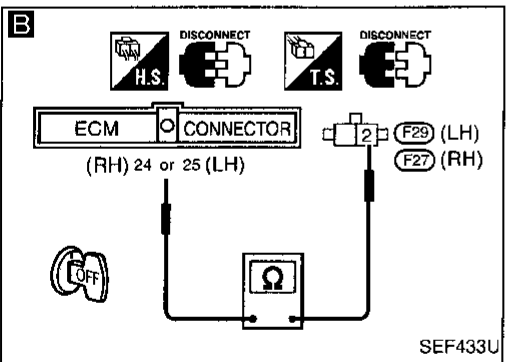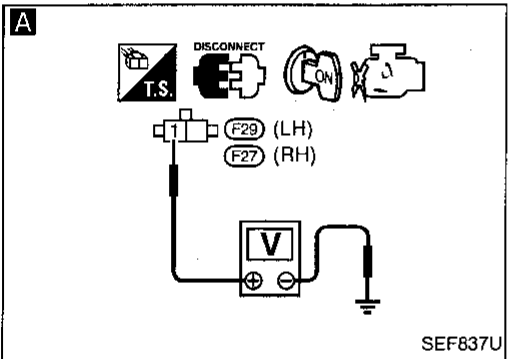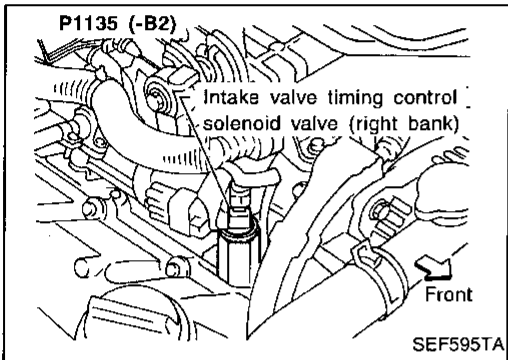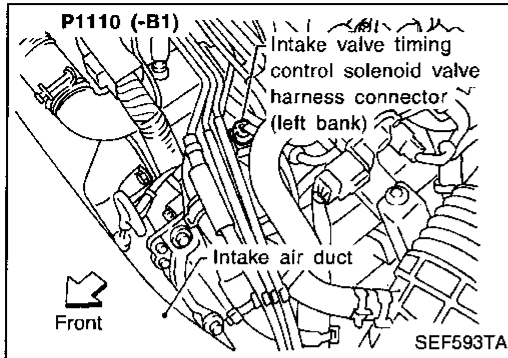

INSPECTION START

A

CHECK POWER SUPPLY.

1. Stop engine.
2. Disconnect intake valve timing control solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and ground.

Voltage: Battery voltage

NG → Check the following.
 ● Harness connectors
 ● Fuses (F63, M49)
 ● 10A fuse
 ● Harness for open or short between the intake valve timing control solenoid valve and fuse
 If NG, repair harness or connectors.

OK

B

CHECK OUTPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal RH ②④, ②⑤ LH and solenoid valve terminal ②.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

OK

CHECK ENGINE OIL PRESSURE.

Refer to LC section ("Oil Pressure Check", "ENGINE LUBRICATION SYSTEM").

NG → Repair lubrication system.

OK

CHECK INTAKE AIR SYSTEM.

Check intake air system for leaks.

NG → Repair intake air system.

OK

CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR.

Refer to DTC P1140, EC-351.

NG → Repair or replace.

OK



Ⓐ

(Go to next page.)

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1110 (-B1), P1135 (-B2)

Intake Valve Timing Control (P1110: Left bank), (P1135: Right bank) (Cont'd)

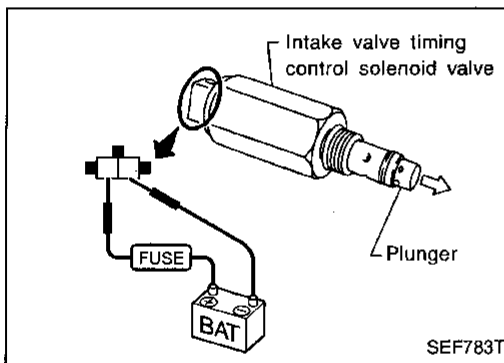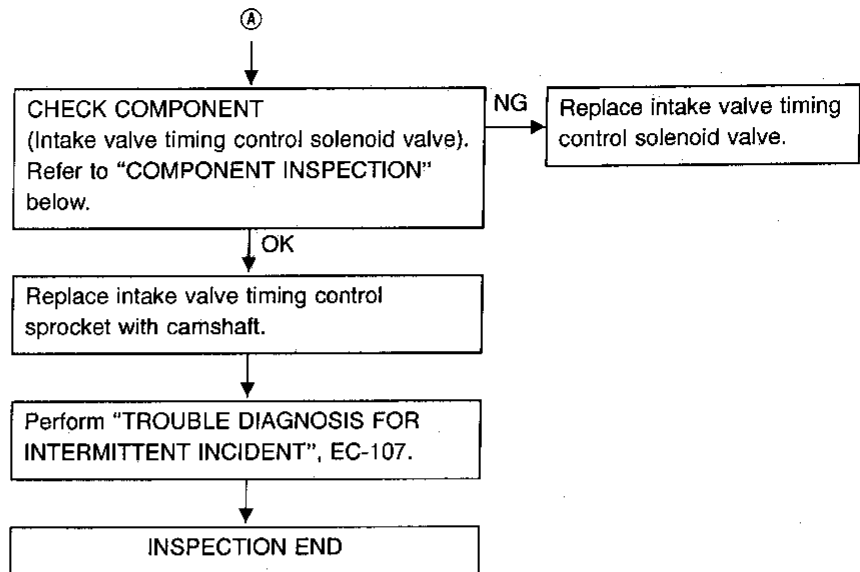


COMPONENT INSPECTION

Intake valve timing control solenoid valve

1. Check oil passage visually for any metal debris.
2. Supply intake valve timing control solenoid valve terminals with battery voltage.
3. Make sure that inside plunger protrudes.
If NG, replace intake valve timing control solenoid valve.

TROUBLE DIAGNOSIS FOR DTC P1120

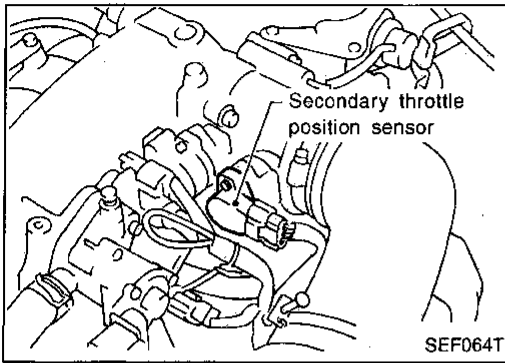


Secondary Throttle Position Sensor (STPS)

COMPONENT DESCRIPTION

The secondary throttle position sensor responds to the movement of the throttle motor which is controlled by the TAC module.

This sensor is a kind of potentiometer which transforms the secondary throttle position into output voltage, and emits the voltage signal to the TAC module. In addition, the sensor detects the opening and closing speed and position of the secondary throttle valve and feeds the voltage signal to the TAC module.

Another case is when the secondary throttle valve opening becomes smaller than the ordinary throttle valve opening due to TCS operation. In this case, the signal from the secondary throttle valve is used for engine control. This replaces the signal from the ordinary throttle position sensor. The signal of the secondary throttle valve first enters the TAC module, from where it is sent to the ECM.

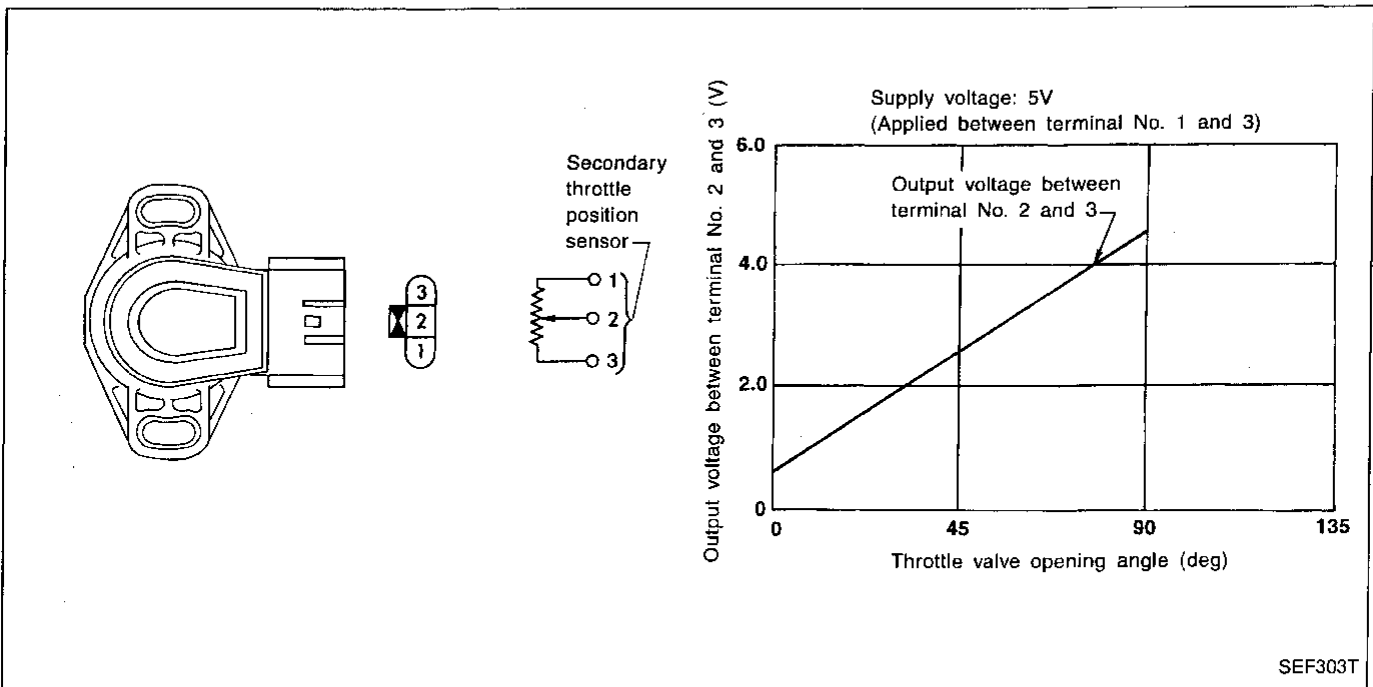

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL/P SEN2	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) 	Throttle valve: fully closed
		Throttle valve: fully open

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
66	L	Secondary throttle position sensor	Ignition switch "ON" └ Approximately 3 seconds after ignition switch "ON" and thereafter	Approximately 3.4V
			Ignition switch "ON" └ Disconnect throttle motor harness connector. └ Fully close secondary throttle valve by hand.	Approximately 0.4V

TROUBLE DIAGNOSIS FOR DTC P1120




Secondary Throttle Position Sensor (STPS) (Cont'd)

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the secondary throttle position sensor circuit. During this check, a DTC might not be confirmed.

WARNING:

Before touching the secondary throttle valve, be sure to disconnect the throttle motor harness connector. Failure to do so may cause injury due to accidental actuation of the valve.

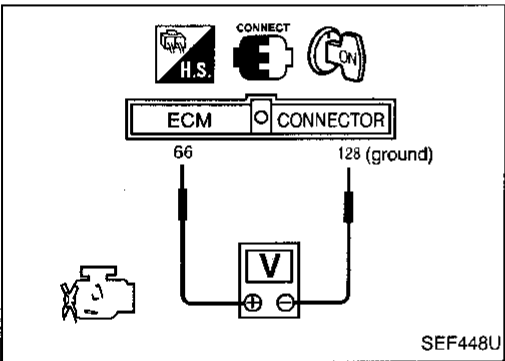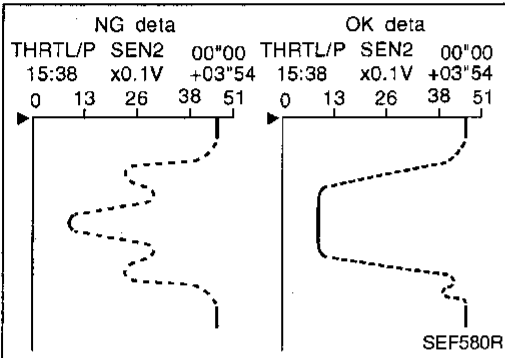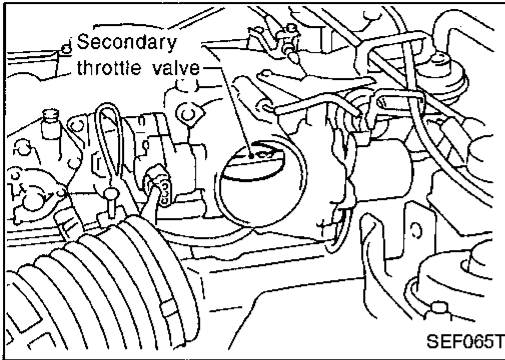

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and disconnect throttle motor harness connector.
- 3) Remove intake air duct.
- 4) Turn ignition switch "ON".
- 5) Select "MANUAL TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT.
- 6) Select "THRTL/P SEN2" in "DATA MONITOR" mode with CONSULT.
- 7) Press RECORD on CONSULT SCREEN at the same time close the secondary throttle valve by hand.
- 8) Print out the recorded data and check the following:
 - The voltage when secondary throttle valve is closed by hand is approximately 0.60 - 1.15V.
 - The voltage decrease is linear in response to secondary throttle valve closing.
 - The voltage when secondary throttle valve is fully opened is approximately 4.3 - 4.7V.


OR

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and disconnect throttle motor harness connector.
- 3) Remove intake air duct.
- 4) Turn ignition switch "ON".
- 5) Check the voltage between ECM terminals 66 and 128 (ground) and check the following:
 - The voltage when secondary throttle valve is closed by hand is approximately 0.4 - 0.86V.
 - The voltage decrease is linear in response to secondary throttle valve closing.
 - The voltage when secondary throttle valve is fully opened is approximately 3.3 - 3.5V.

TROUBLE DIAGNOSIS FOR DTC P1120

Secondary Throttle Position Sensor (STPS) (Cont'd)

EC-STPS-01

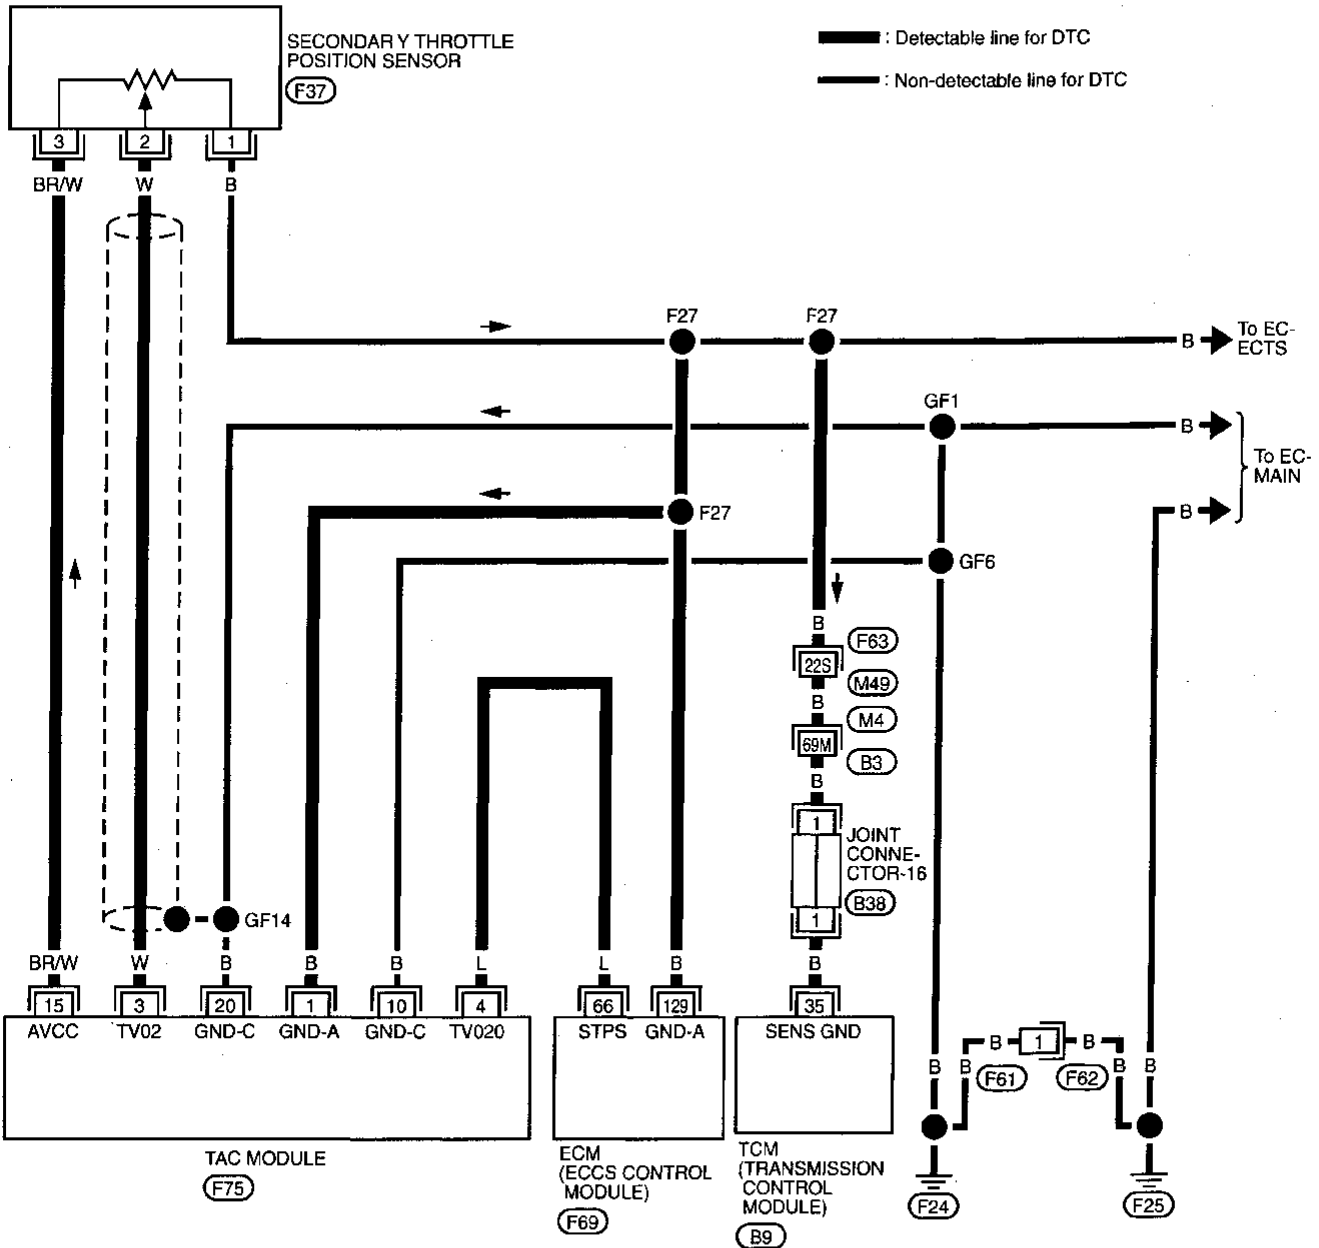

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX




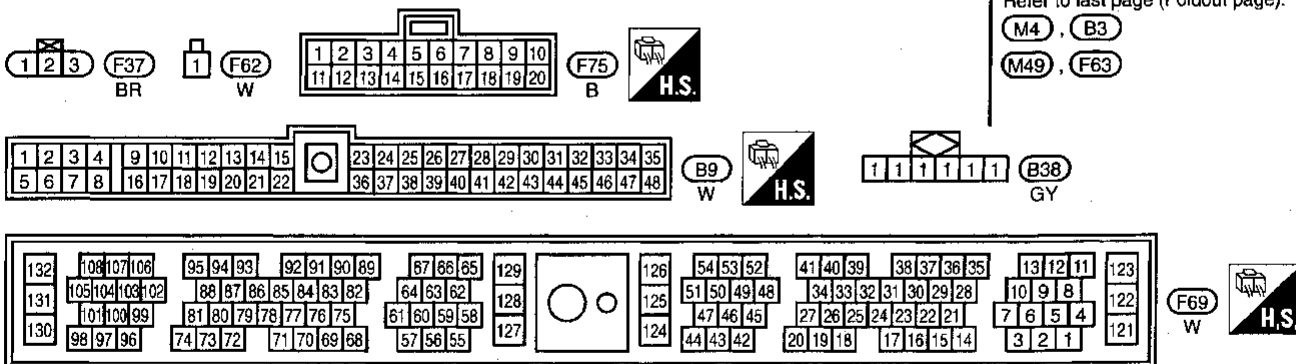


TEC284

TROUBLE DIAGNOSIS FOR DTC P1120

Secondary Throttle Position Sensor (STPS) (Cont'd)

DIAGNOSTIC PROCEDURE

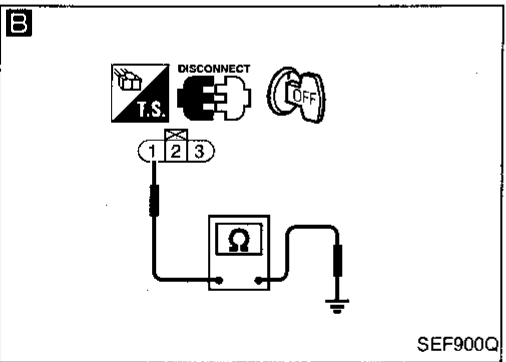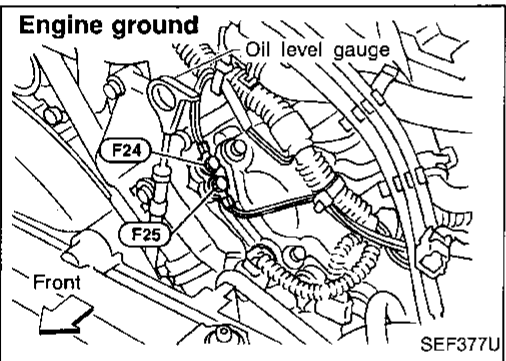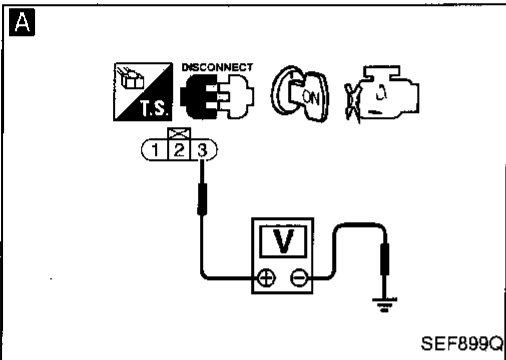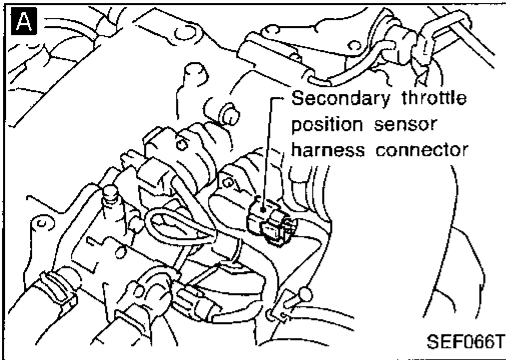

INSPECTION START

A

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect secondary throttle position sensor harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and ground with CONSULT or tester.

Voltage: Approximately 5V

NG → Repair harness or connectors.

B

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Loosen and retighten ground screw.
3. Check harness continuity between terminal ① and engine ground.

Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.



- Harness connectors (F63), (M49)
- Harness connectors (M4), (B3)
- Harness connectors (F62), (F61)
- Joint connector-16
- Harness for open or short between sensor and throttle actuator control (TAC) module
- Harness for open or short between secondary throttle position sensor and ECM
- Harness for open or short between secondary throttle position sensor and TCM (Transmission Control Module)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK → (Go to next page.)

TROUBLE DIAGNOSIS FOR DTC P1120

Secondary Throttle Position Sensor (STPS) (Cont'd)

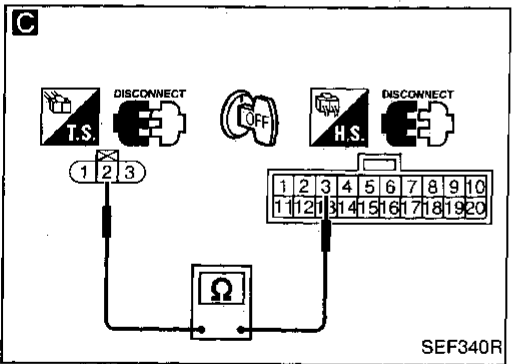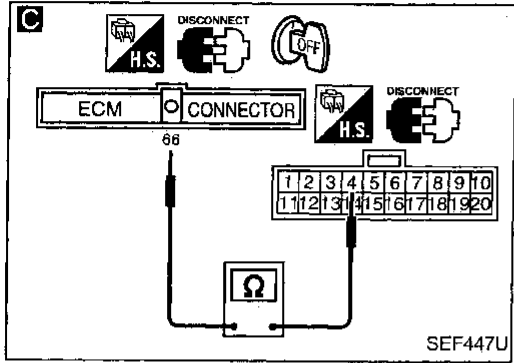

CHECK INPUT SIGNAL CIRCUIT.

1. Disconnect ECM harness connector and throttle actuator control module harness connector.
2. Check harness continuity between ECM terminal 66 and throttle actuator control module terminal 4, sensor terminal 2 and throttle actuator control module terminal 3.

Continuity should exist.
If NG, repair open circuit or short to ground or short to power in harness or connectors.


NG → Repair harness or connectors.

CHECK COMPONENT
(Secondary throttle position sensor). Refer to "COMPONENT INSPECTION" below.
Refer to BR section ("Adjustment for Secondary Throttle Position", "TRACTION CONTROL SYSTEM — TCS —") for adjustment.

NG → Replace secondary throttle position sensor. Refer to BR section.

OK → Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

OK → INSPECTION END

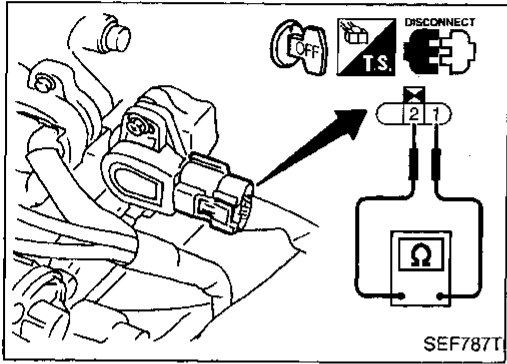

COMPONENT INSPECTION Secondary throttle position sensor

1. Turn ignition switch "OFF".
2. Disconnect secondary throttle position sensor harness connector.
3. Disconnect throttle motor harness connector.
4. Remove intake air duct.
5. Make sure that resistance between terminals 2 and 1 changes when opening secondary throttle valve manually.

Throttle valve conditions	Resistance at 25°C (77°F)
Completely closed	Approximately 0.6 kΩ
Partially open	0.6 - 4.0 kΩ
Completely open	Approximately 5 kΩ

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL

TROUBLE DIAGNOSIS FOR DTC P1125

Tandem Throttle Position Sensor

This diagnosis is for tandem throttles (main throttle and secondary throttle). The quantity of intake air is determined by these two throttle valves. A rationality check is then carried out by ECM after monitoring the signals of these two throttle position sensors.

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1125 1502	<ul style="list-style-type: none">• Rationally incorrect voltage is entered to ECM compared with the signals from mass air flow sensor, camshaft position sensor and IACV-AAC valve.	<ul style="list-style-type: none">• Harness or connectors (The sensor circuits are open or shorted.)• Throttle position sensor or secondary throttle position sensor• Throttle actuator control (TAC) module

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT.
- 5) Start engine and run it for 15 seconds.

OR



- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Start engine and run it for 15 seconds.
- 4) Select "MODE 7" with GST.

OR




- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Start engine and run it for 15 seconds.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

DIAGNOSTIC PROCEDURE

Refer to TROUBLE DIAGNOSIS FOR DTC P0120, EC-141 OR Refer to TROUBLE DIAGNOSIS FOR DTC P1120, EC-345.

TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

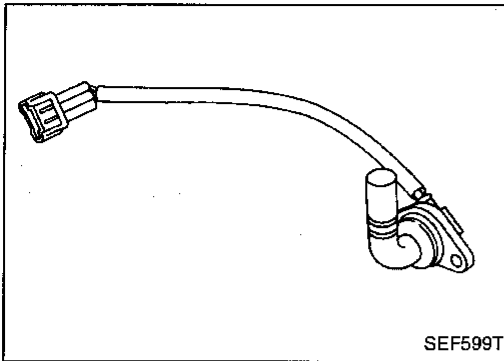

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank)

COMPONENT DESCRIPTION

The intake valve timing control position sensor is located rearmost of the left-bank cylinder head. This sensor detects a signal (intake valve position) generated by the cutout portion of camshaft and sends it to the ECM (ECCS control module). This sensor is not used to control the engine system. It is used only for the on board diagnosis of intake valve timing control.

GI
MA
EM
LC

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
INT/V TIM-B1 INT/V TIM-B2	<ul style="list-style-type: none"> Engine is running. 	Advanced angle (degree) of the intake camshaft should be displayed.

EC

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
70 (RH)	R/L	Intake valve timing control position sensors	Engine is running. Idle speed	Approximately 0V
71 (LH)	L/W		Engine is running. Engine speed is 2,000 rpm.	Approximately 0V

FE
AT
PD
FA
RA
BR
ST
RS
BT
HA

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1140 1303 (Left bank)	The proper pulse signal from the intake valve timing control position sensors is not sent to ECM while the engine is running at the specified engine speed.	<ul style="list-style-type: none"> Harness or connectors (The left bank intake valve timing control position sensor circuit is open.) Intake valve timing control position sensor Accumulation of debris to the signal pick-up portion of the camshaft
P1145 1304 (Right bank)		

EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS-RPM (POS)	2000rpm	
MAS AIR/FL SE	2.05V	
B/FUEL SCHDL	3.0msec	
INT/V SOL-B1	OFF	
INT/V TIM-B1	97deg	
RECORD		

SEF600T

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and keep the engine speed at 2,000 rpm and wait at least 15 seconds.

OR



- 1) Start engine and keep the engine speed at 2,000 rpm and wait at least 15 seconds.
- 2) Select "MODE 7" with GST.

OR



- 1) Start engine and keep the engine speed at 2,000 rpm and wait at least 15 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.




TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank) (Cont'd)

LEFT BANK

EC-IVCS-L-01

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

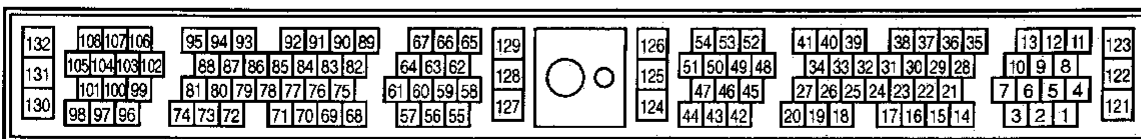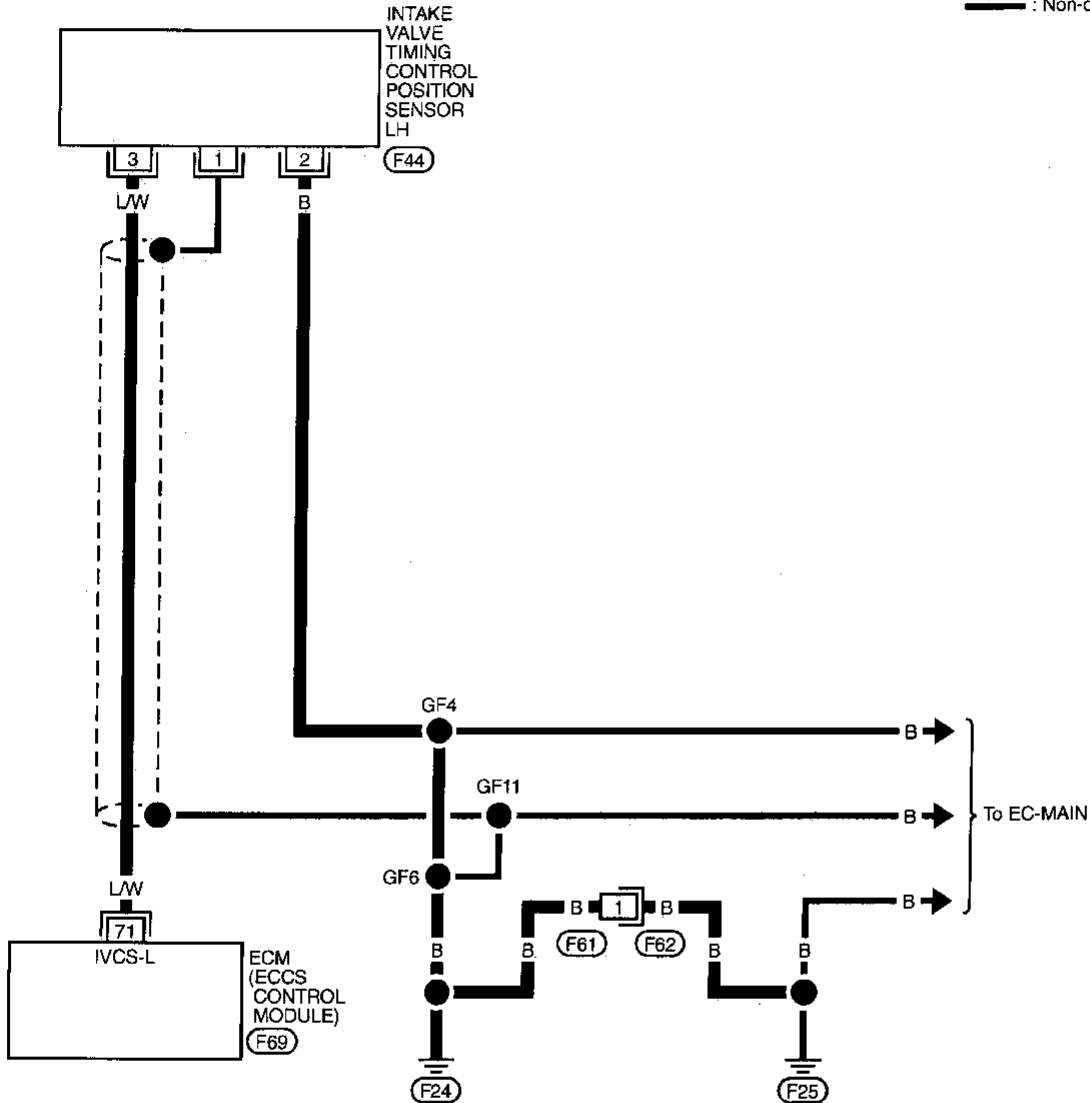

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX




TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank) (Cont'd)

RIGHT BANK





EC-IVCS-R-01

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

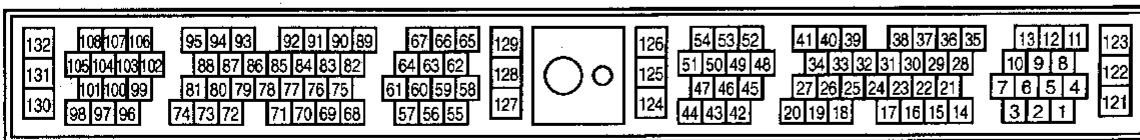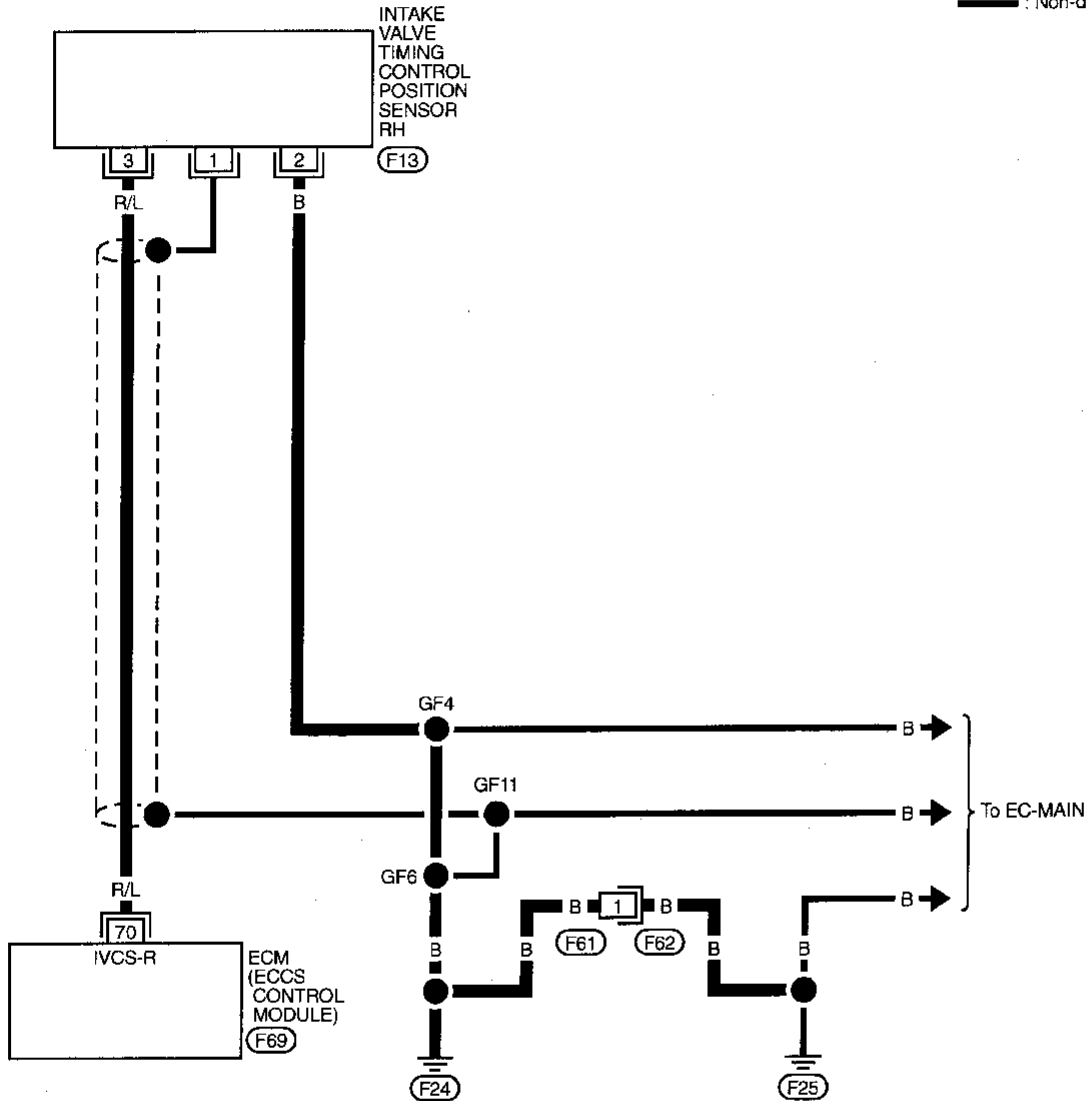

TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank) (Cont'd) DIAGNOSTIC PROCEDURE

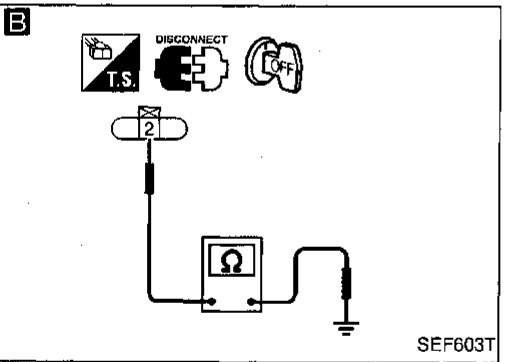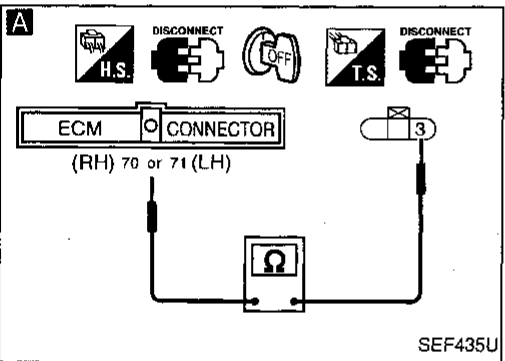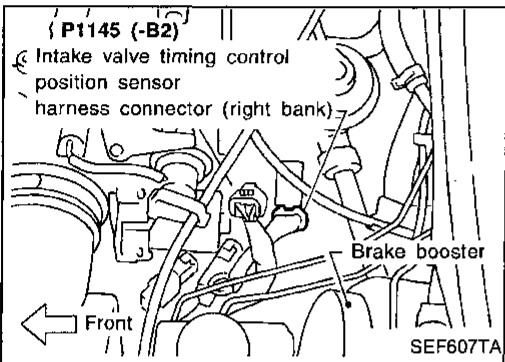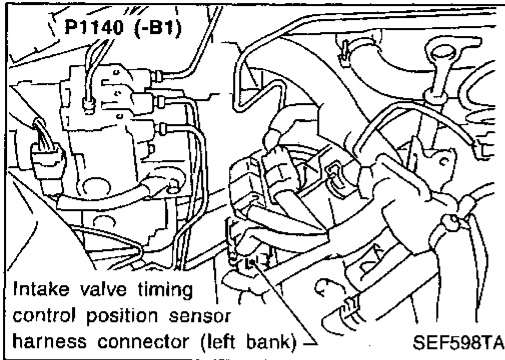

INSPECTION START

A
CHECK INPUT SIGNAL CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Disconnect intake valve timing control position sensor harness connector.
4. Check harness continuity between ECM terminal ⑦ LH, ⑦ RH and terminal ③.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

B
CHECK GROUND CIRCUIT.
1. Loosen and retighten engine ground screws.
2. Check harness continuity between sensor terminal ② and ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
• Harness connectors
 (F62), (F61)
If NG, repair open circuit or short to ground or short to power in harness or connectors.

CHECK CAMSHAFT.
Check accumulation of debris to the signal pick-up portion of the camshaft. Refer to EM section ("Timing Chain").

NG → Remove debris and clean the signal pick-up cutout of camshaft.

Replace intake valve timing control position sensor.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1140 (-B1), P1145 (-B2)

Intake Valve Timing Control Position Sensor (P1140: Left bank), (P1145: Right bank) (Cont'd)

COMPONENT INSPECTION



Intake valve timing control position sensor

1. Disconnect intake valve timing control position sensor harness connector.
2. Loosen fixing bolt of the sensor.
3. Visually check the sensor for chipping.
4. Check resistance between terminals ② and ③.

Resistance:

600 - 740 Ω [at 20°C (68°F)]

If NG, replace intake valve timing control position sensor.

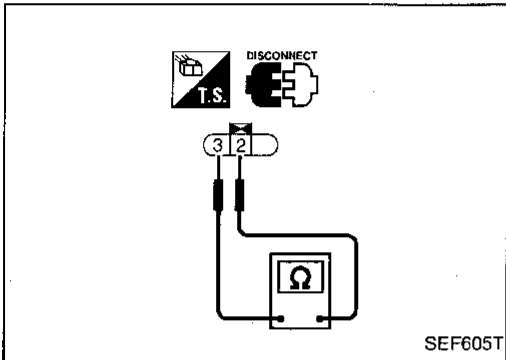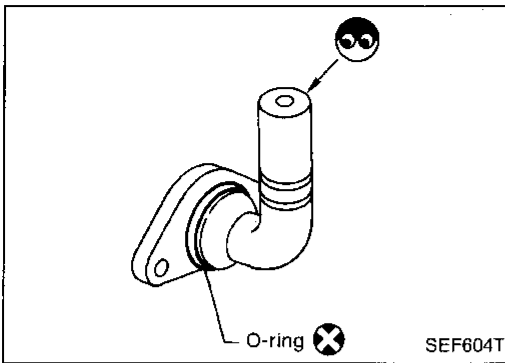

TROUBLE DIAGNOSIS FOR DTC P1148 (-B1), P1168 (-B2)

Closed Loop Control

★ The closed loop control has the one trip detection logic.

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1148 0307 (Left bank)	<ul style="list-style-type: none"> The closed loop control function for left bank does not operate even when vehicle is driving in the specified condition. 	<ul style="list-style-type: none"> The front heated oxygen sensor circuit is open or shorted. Front heated oxygen sensor Front heated oxygen sensor heater
P1168 0308 (Right bank)	<ul style="list-style-type: none"> The closed loop control function for right bank does not operate even when vehicle is driving in the specified condition. 	<ul style="list-style-type: none"> The front heated oxygen sensor circuit is open or shorted. Front heated oxygen sensor Front heated oxygen sensor heater

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM (POS)	2000rpm	
MAS AIR/FL SE	2.47V	
FR O2 SEN-B1	0.74V	
FR O2 SEN-B2	0.74V	
FR O2 MNTR-B1	RICH	
FR O2 MNTR-B2	RICH	
RECORD		

SEF701T

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Never raise engine speed above 3,200 rpm during the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". If the engine speed limit is exceeded, retry the procedure from step 2).

- Before performing the following procedure, confirm that battery voltage is more than 11V.



- Start engine and warm it up to normal operating temperature.
- Select "DATA MONITOR" mode with CONSULT.
- Hold engine speed at 2,000 rpm and check the following.
 - "FR O2 SENSOR" voltage should go above 0.61V at least once.

OR

- "FR O2 SENSOR" voltage should go below 0.23V at least once.
- If the check result is NG, perform "DIAGNOSIS PROCEDURE", EC-180.
If the check result is OK, perform the following step.
- Let engine idle at least 3 minutes.
 - Maintain the following condition at least 50 consecutive seconds.

B/FUEL SCHDL: 2.5 ms or more

CMPS-RPM (POS): 2,000 - 3,000 rpm

Selector lever: Suitable position

VHCL SPEED SE: More than 70 km/h (43 MPH)

TROUBLE DIAGNOSIS FOR DTC P1148 (-B1), P1168 (-B2)

Closed Loop Control (Cont'd)

OR

OVERALL FUNCTION CHECK


Use this procedure to check the overall function of the closed loop control. During this check, a 1st trip DTC might not be confirmed.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal LH, ② RH, ⑧③ (sensor) and ①②③ (ECM ground).
- 3) Check the following with engine speed held at 2,000 rpm constant under no-load.
 - The voltage should go above 0.61V at least once.

OR

- The voltage should go below 0.23V at least once.

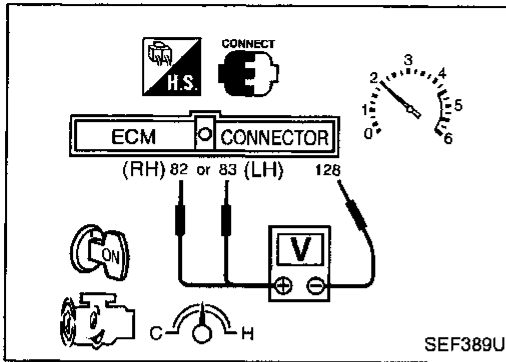

DIAGNOSTIC PROCEDURE

Refer to TROUBLE DIAGNOSIS FOR DTC P0133 (-B1), P0153 (-B2), EC-175.

TROUBLE DIAGNOSIS FOR DTC P1210

Traction Control System (TCS) Signal Circuit

The ECM uses this circuit line for checking the TCS operation. Voltage signals are sent and received between the ECM and the throttle actuator control module.

- ★ Freeze frame data is not stored in the ECM for the TCS signal circuit.
The MIL will not light for TCS signal circuit malfunction.

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1210 0106	<ul style="list-style-type: none"> ● An excessively low or high voltage from the throttle actuator control (TAC) module is sent to ECM. 	<ul style="list-style-type: none"> ● Harness or connectors (The circuit is open or shorted.) ● Throttle actuator control (TAC) module

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON" and TCS switch "ON", then start engine.
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Run engine for at least 3 seconds.

OR



- 1) Turn ignition switch "ON" and TCS switch "ON", then start engine.
- 2) Run engine for at least 3 seconds at idle speed.
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1210

Traction Control System (TCS) Signal Circuit (Cont'd)




EC-TCS/SW-01

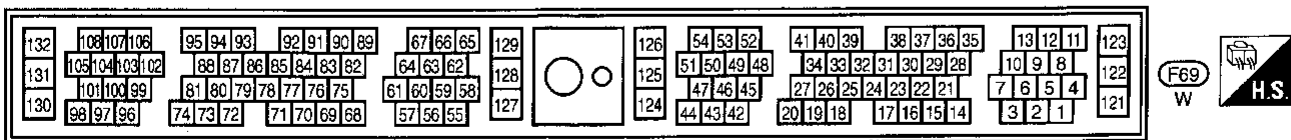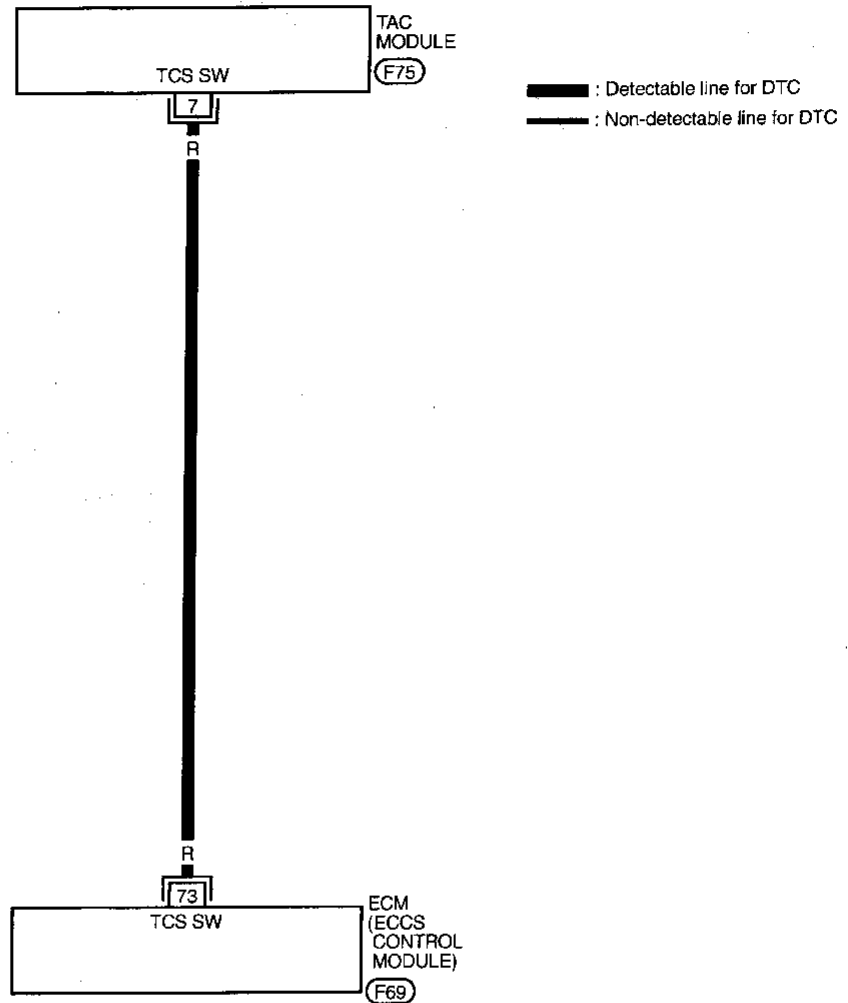

TROUBLE DIAGNOSIS FOR DTC P1210

Traction Control System (TCS) Signal Circuit (Cont'd)

DIAGNOSTIC PROCEDURE

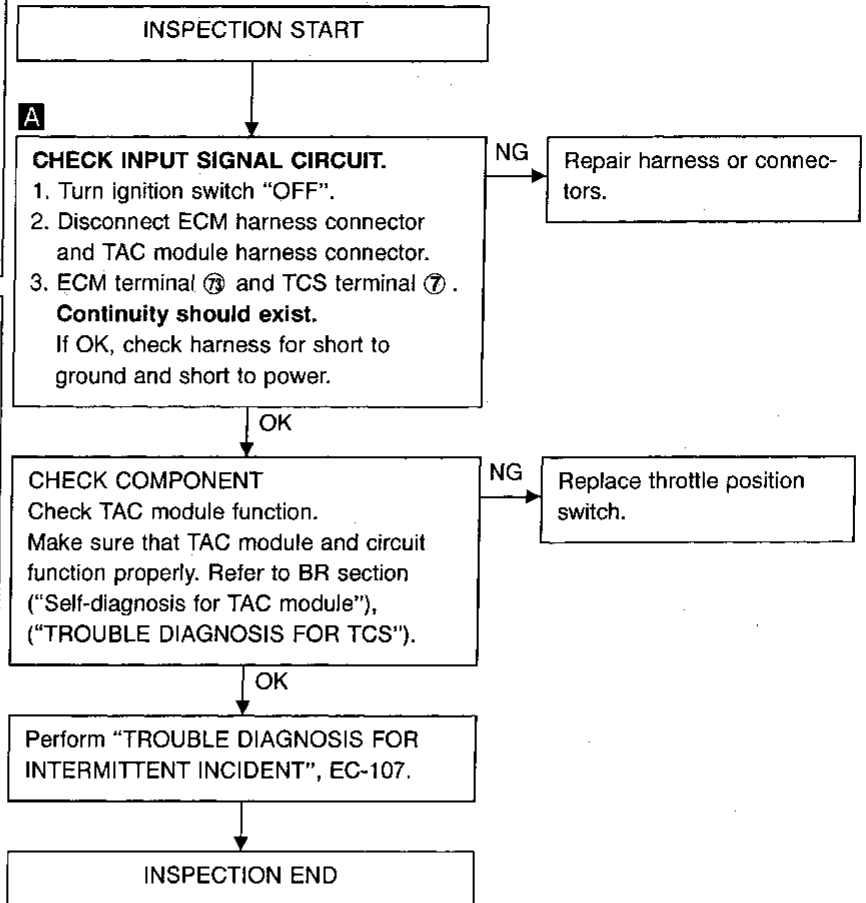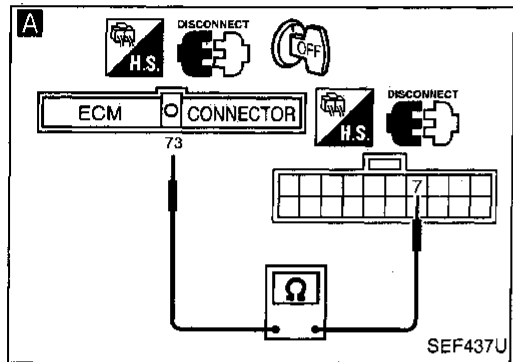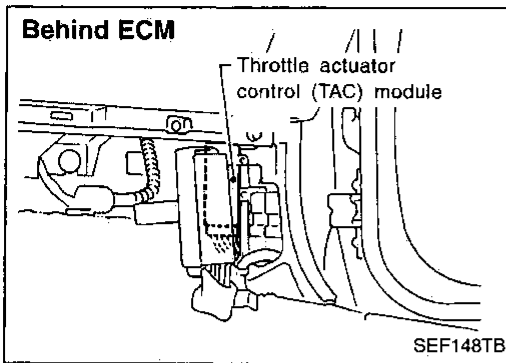

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


Fuel Pump Control Module (FPCM)

SYSTEM DESCRIPTION

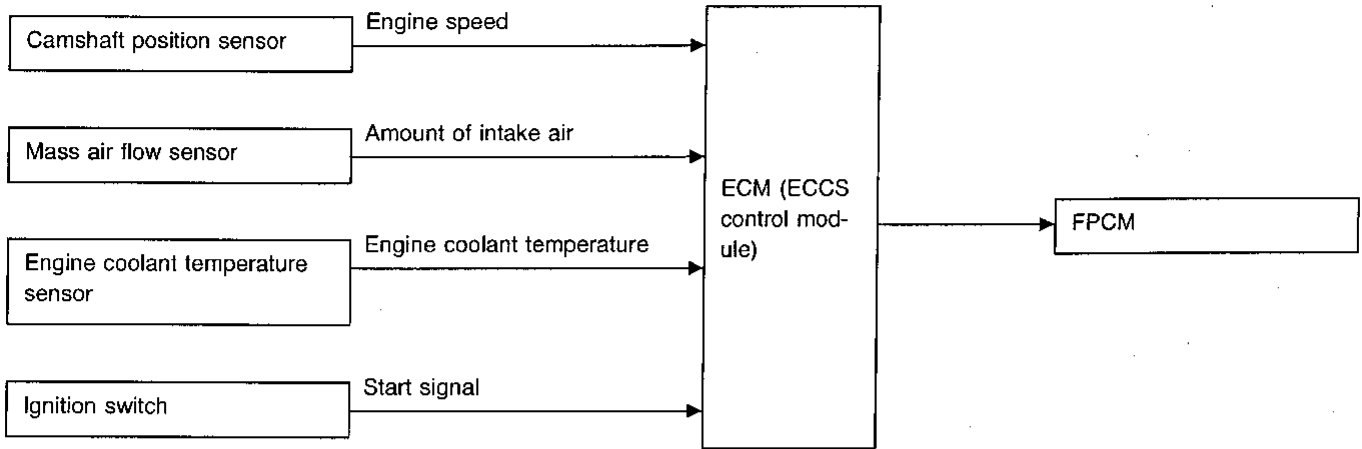

This system controls the fuel pump operation. The amount of fuel flow delivered from the fuel pump is altered between two flow rates by the FPCM operation. The FPCM determines the voltage supplied to the fuel pump (and therefore fuel flow) according to the following conditions.

Conditions	Amount of fuel flow	Supplied voltage
<ul style="list-style-type: none"> • Engine cranking • Within 16 seconds after starting engine [above 100°C (212°F)] • Engine is running under heavy load and high speed conditions 	high	Battery voltage (11 - 14V)
Except the above	low	Approximately 7V

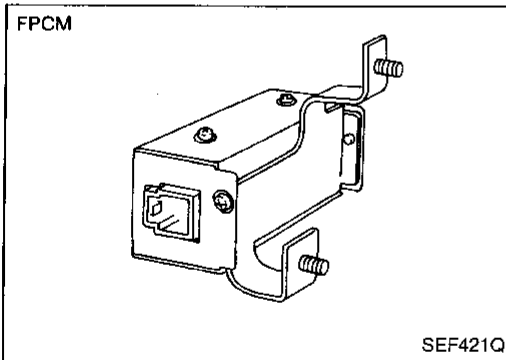

COMPONENT DESCRIPTION

The FPCM adjusts the voltage supplied to the fuel pump to control the amount of fuel flow. When the FPCM increases the voltage supplied to the fuel pump, the fuel flow is increased. When the FPCM decreases the voltage, the fuel flow is decreased.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FPCM	<ul style="list-style-type: none"> • Within 16 seconds after starting the engine, when engine coolant temperature is more than 100°C (212°F) 	HIGH → LOW
FPCM F/P VOLT	<ul style="list-style-type: none"> • Within 16 seconds after starting the engine, when engine coolant temperature is more than 100°C (212°F) 	Approx. 5.0V → Approx. 0.4V

TROUBLE DIAGNOSIS FOR DTC P1220

Fuel Pump Control Module (FPCM) (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
15	R/L	Fuel pump control module	Engine is cranking.	Approximately 0.4V	GI
			Engine is running. └ Idle speed	Approximately 10V	MA
93	G/R	Fuel pump control module (FPCM) check	When cranking the engine	Approximately 0V	EM
			After starting the engine	Approximately 5V	LC

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)	
P1220 1305	<ul style="list-style-type: none"> An improper voltage signal from the FPCM, which is supplied to a point between the fuel pump and the dropping resistor, is detected by ECM. 	<ul style="list-style-type: none"> Harness or connectors (FPCM circuit is open or shorted.) Dropping resistor FPCM 	EC FE AT

☆ MONITOR ☆ NO FAIL

CMPS•RPM (POS)	650rpm
MAS AIR/FL SE	1.19V
COOLANT TEMP/S	91°C
VHCL SPEED SE	4km/h
B/FUEL SCHDL	1.2msec
FPCM DR VOLT	4.4V
FPCM	LOW




RECORD

SEF613T

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:


If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

- | | | |
|---|--|----------------------------|
|  | <ol style="list-style-type: none"> 1) Lift up vehicle. 2) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT. 3) Start engine (TCS switch "OFF"). 4) Shift A/T selector lever to "D" position. 5) Hold vehicle speed at 70 to 100 km/h (43 to 62 MPH) for 12 seconds. | PD
FA
RA
BR
ST |
| OR | | |
|  | <ol style="list-style-type: none"> 1) Lift up vehicle. 2) Start engine (TCS switch "OFF"). 3) Shift A/T selector lever to "D" position. 4) Hold vehicle speed at 70 to 100 km/h (43 to 62 MPH) for 12 seconds. 5) Select "MODE 7" with GST. | RS
BT
HA |
| OR | | |
|  | <ol style="list-style-type: none"> 1) Lift up vehicle. 2) Start engine (TCS switch "OFF"). 3) Shift A/T selector lever to "D" position. 4) Hold vehicle speed at 70 to 100 km/h (43 to 62 MPH) for 12 seconds. 5) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON". 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM. | EL
IDX |



TROUBLE DIAGNOSIS FOR DTC P1220

Fuel Pump Control Module (FPCM) (Cont'd)

EC-FPCM-01

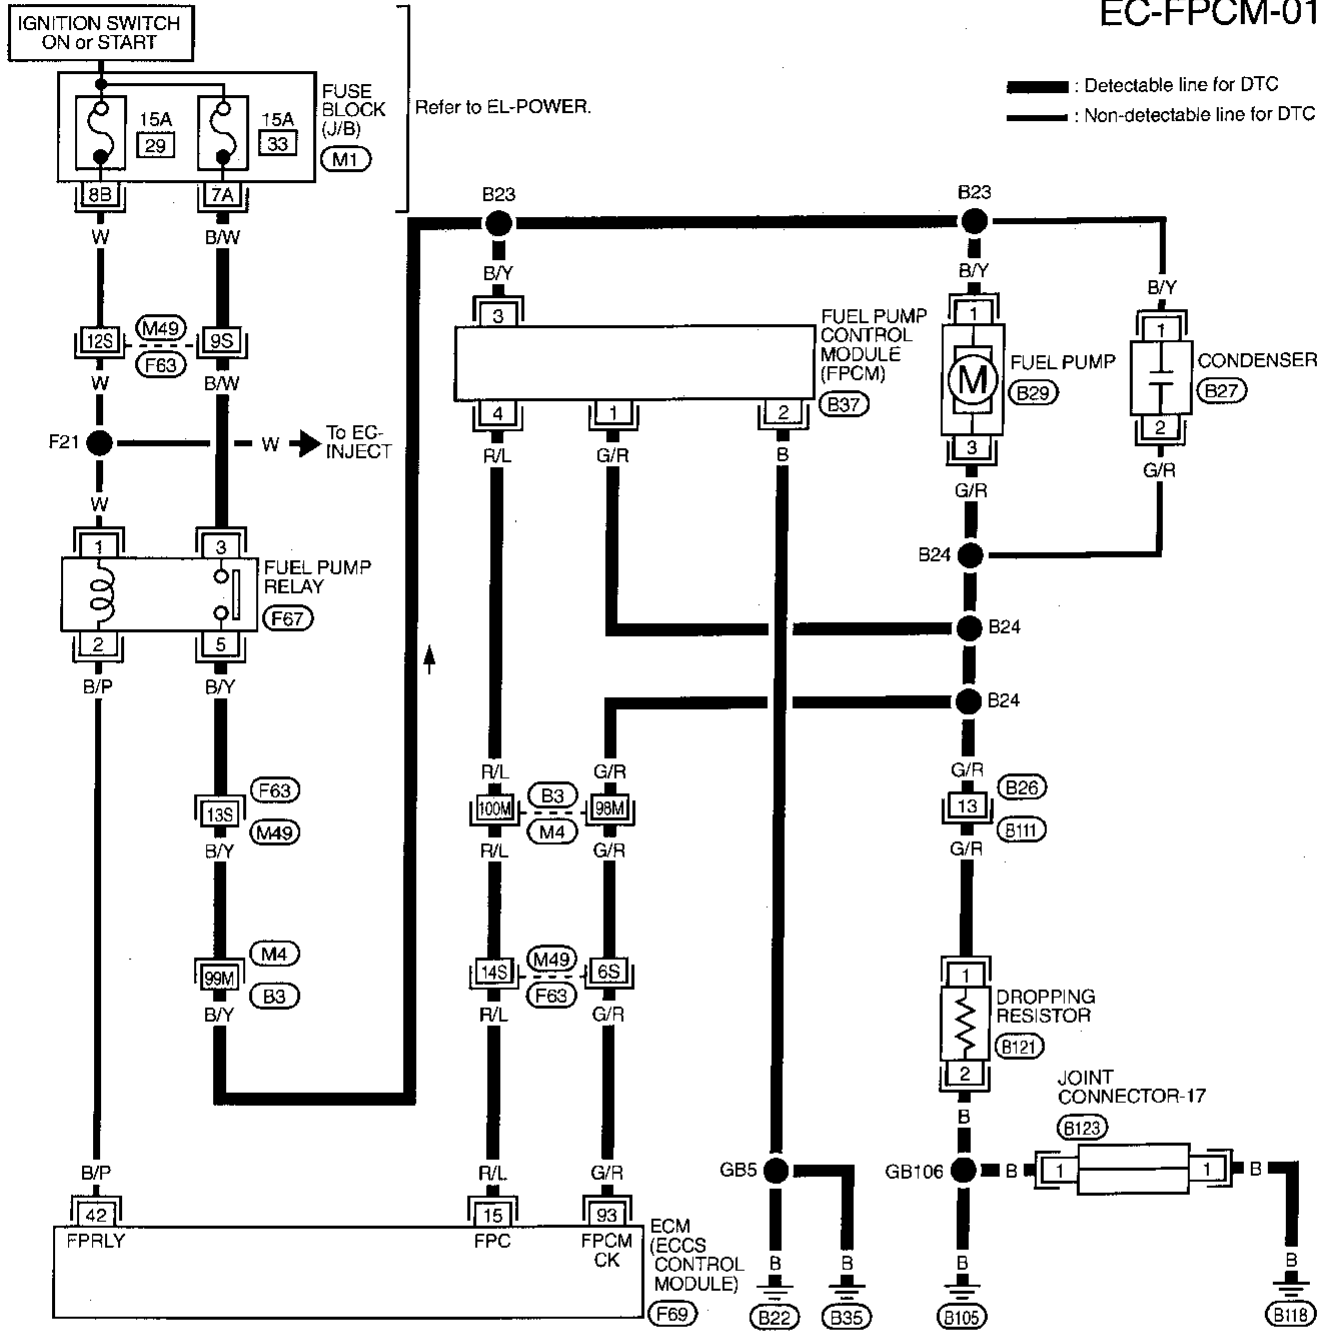





— : Detectable line for DTC
 — : Non-detectable line for DTC

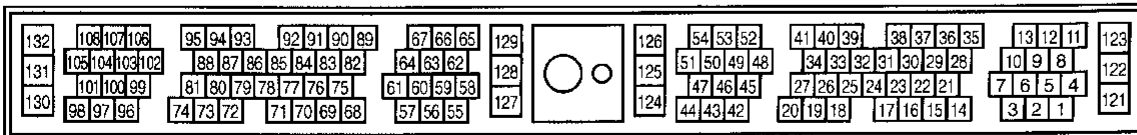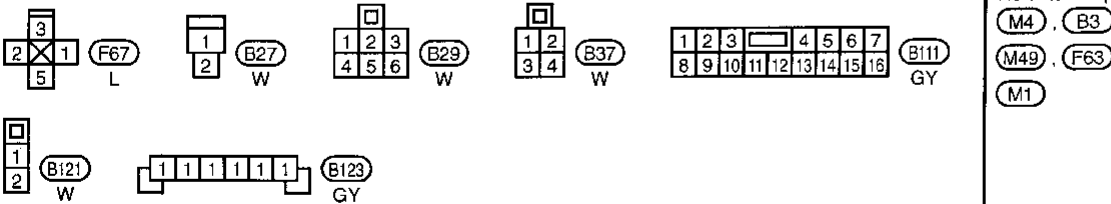

TROUBLE DIAGNOSIS FOR DTC P1220

Fuel Pump Control Module (FPCM) (Cont'd)

DIAGNOSTIC PROCEDURE

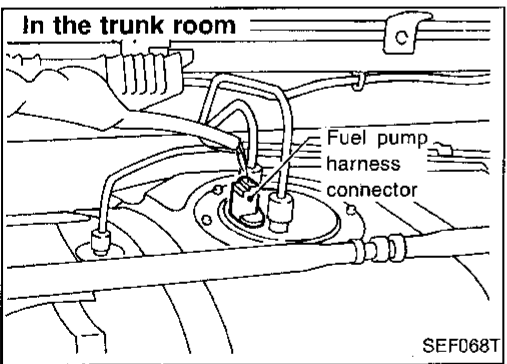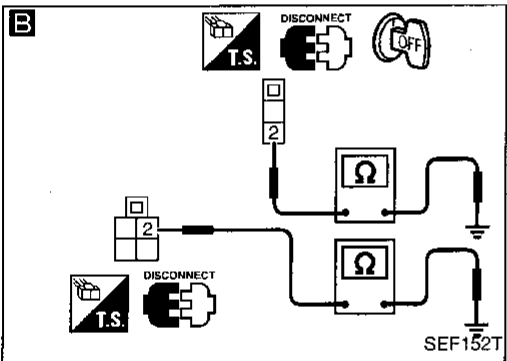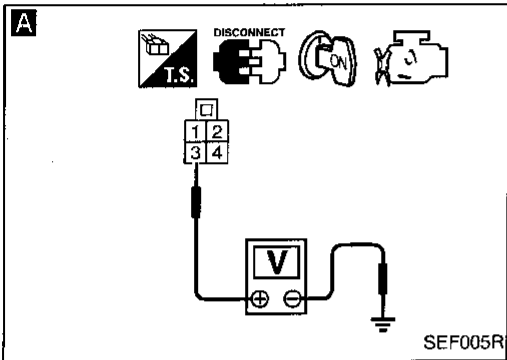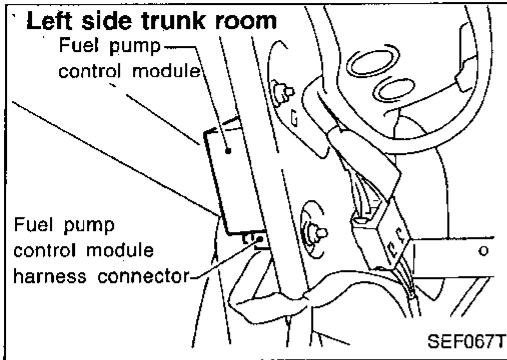

INSPECTION START

A

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect FPCM harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ③ and ground with CONSULT or tester.

Voltage: Battery voltage

NG

Check the following.

- Harness connectors (F63, M49)
- Harness for open or short between FPCM and fuel pump relay

If NG, repair harness or connectors.

B

CHECK GROUND CIRCUIT-I.

1. Turn ignition switch "OFF".
2. Disconnect dropping resistor harness connector.
3. Check harness continuity between FPCM and dropping resistor terminal ② and engine ground.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connector (B123)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

C

CHECK GROUND CIRCUIT-II.

1. Disconnect fuel pump harness connector.
2. Check harness continuity between fuel pump terminal ③ and dropping resistor terminal ①, resistor terminal ① and FPCM terminal ①.
3. Check harness continuity between FPCM terminal ① and engine ground, terminal ③ and engine ground.

Continuity should exist.

Continuity should not exist.

If OK, check harness for short to ground and short to power.

NG

Repair harness or connectors.

D

CHECK OUTPUT SIGNAL CIRCUIT.

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ⑫ and terminal ④.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG

Check the following.

- Harness connectors (F63, M49)
- Harness connectors (M4, B3)
- Harness for open or short between ECM and FPCM

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

A

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT





HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1220

Fuel Pump Control Module (FPCM) (Cont'd)

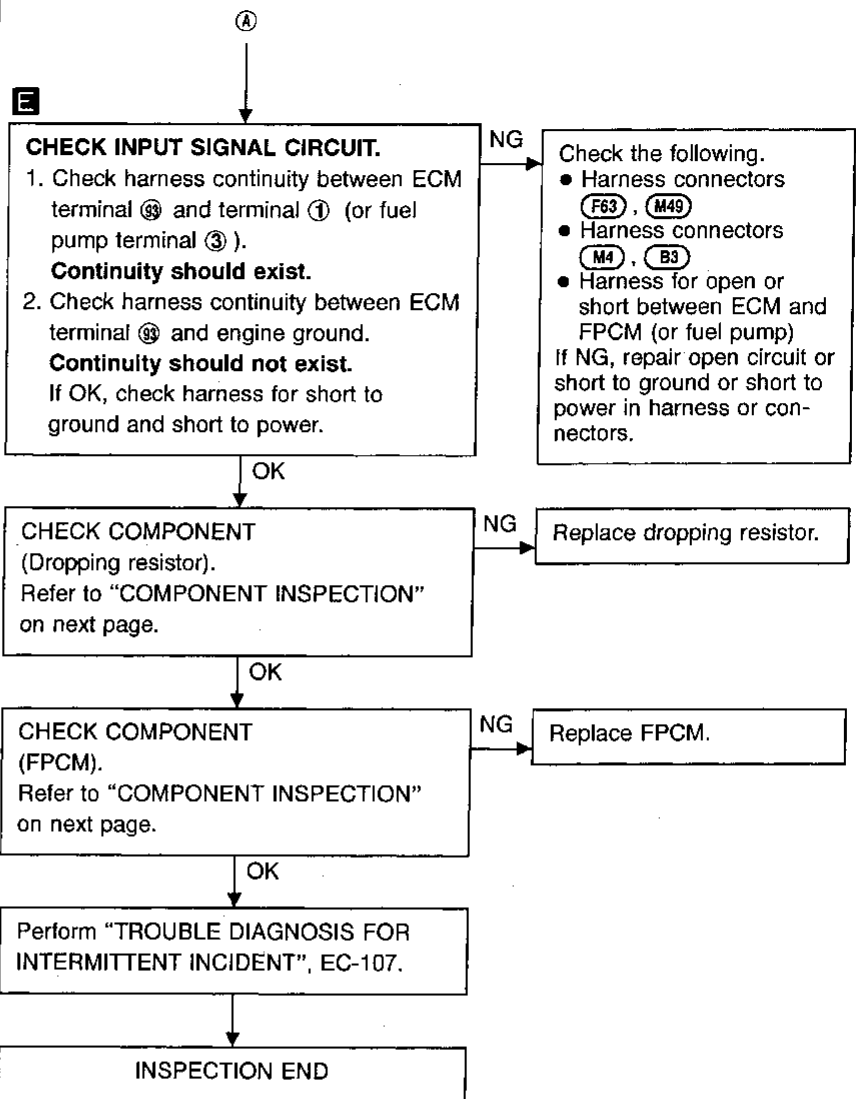
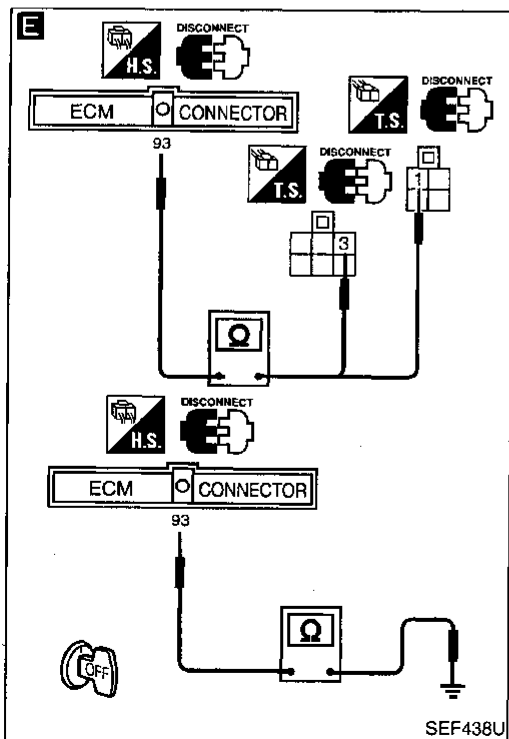
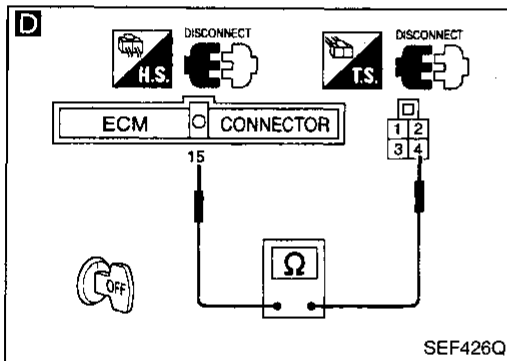
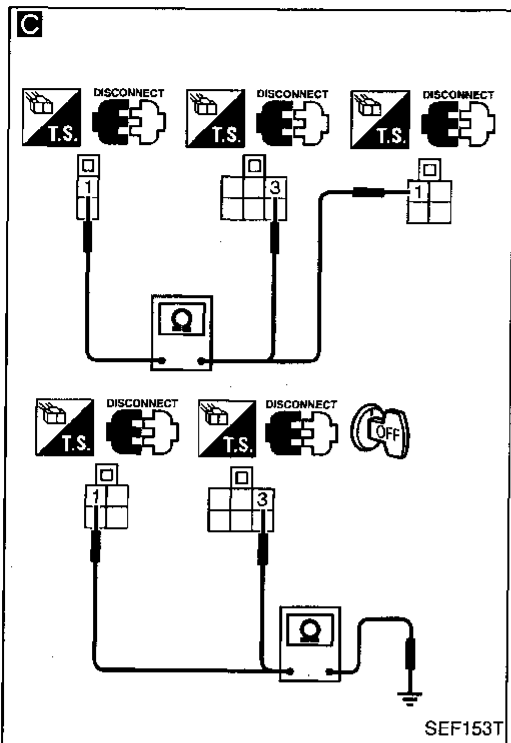


TROUBLE DIAGNOSIS FOR DTC P1220

Fuel Pump Control Module (FPCM) (Cont'd) COMPONENT INSPECTION

FPCM

1. Start engine and let it idle.
2. Perform "FPCM" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - When selecting "HI", "FPCM DR VOLT" indicates approximately 0V.
 - When selecting "LOW", "FPCM DR VOLT" indicates approximately 4.4V.
4. If NG, replace FPCM.

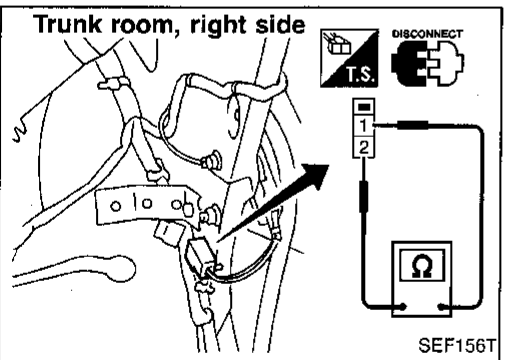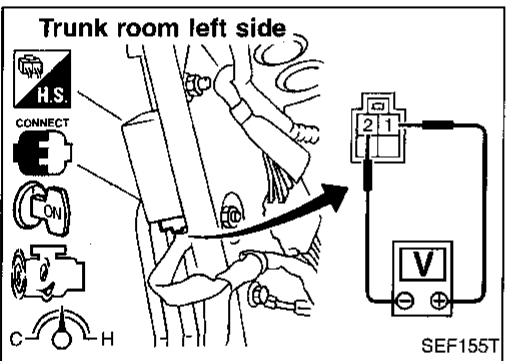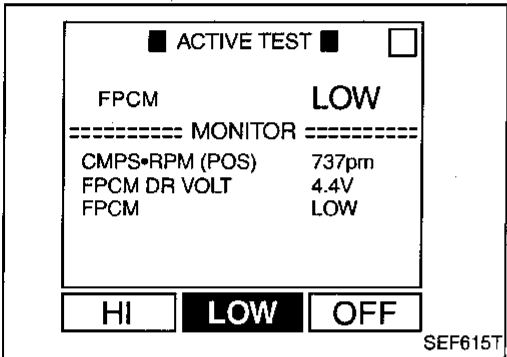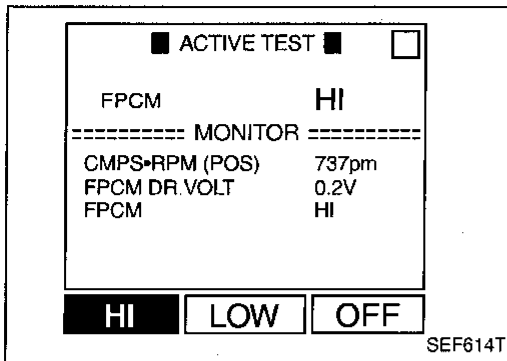

- OR
1. Start engine and warm it up to normal operating temperature.
 2. Turn ignition switch "OFF" and wait at least 5 seconds.
 3. Start engine and let it idle.
 4. Check voltage between terminals ① and ②.
 - Within 30 seconds of starting engine:**
Approximately 0V
 - More than 30 seconds after starting engine:**
Approximately 4.4V
 5. If NG, replace FPCM.

Dropping resistor

Check resistance between terminals ① and ②.
Resistance: Approximately 0.8Ω at 25°C (77°F)

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1320

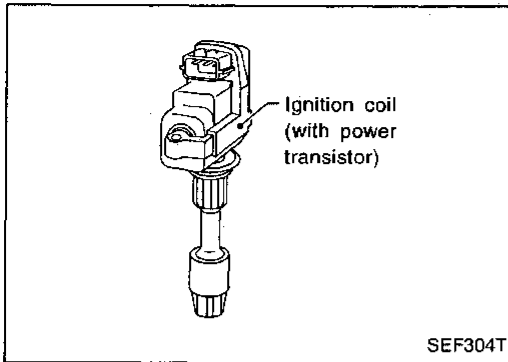

Ignition Signal

COMPONENT DESCRIPTION

Ignition coil & power transistor

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
IGN TIMING	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
		15° BTDC
		More than 25° BTDC





ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)	
43	Y/R	Ignition signal (No. 1)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 0.38V 	
44	G/R	Ignition signal (No. 8)			SEF538T
46	L/R	Ignition signal (No. 7)			
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition). └ Engine speed is 2,000 rpm.	Approximately 0.55V 	
				SEF539T	

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)

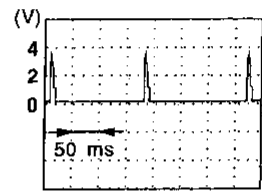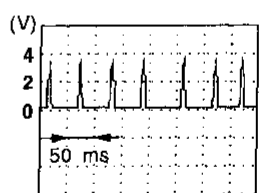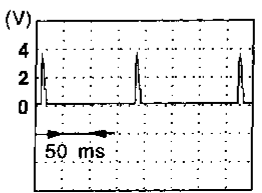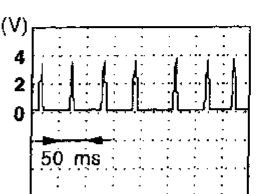TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
47 50 51	GY PU/W GY/R	Ignition signal (No. 3) Ignition signal (No. 6) Ignition signal (No. 5)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 0.38V  SEF538T
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm	Approximately 0.55V  SEF539T
53 54	W/R R/L	Ignition signal (No. 4) Ignition signal (No. 2)	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Idle speed	Approximately 0.38V  SEF538T
			<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine is running.</div> (Warm-up condition) └ Engine speed is 2,000 rpm.	Approximately 0.55V  SEF539T

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1320 0201	<ul style="list-style-type: none"> • The ignition signal in the primary circuit is not sent during engine cranking or running. 	<ul style="list-style-type: none"> • Harness or connectors (The ignition primary circuit is open or shorted.) • Power transistor unit built into ignition coil • Camshaft position sensor • Camshaft position sensor circuit

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- If both DTC P1320 (0201) and DTC P0340 (0101), P0335 (0802) or P1336 (0905) are displayed, perform TROUBLE DIAGNOSIS FOR DTC P0340, P0335 or P1336 first. (See EC-256, 261 or 376.)

☆ MONITOR	☆ NO FAIL <input type="checkbox"/>
CMPS-RPM (POS)	650rpm
MAS AIR FL/SE	1.5V
RECORD	

SEF695T



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 4 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)

OR



- 1) Turn ignition switch "ON".
- 2) Start engine and wait at least 4 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)
- 3) Select MODE 7 with GST.

OR





- 1) Turn ignition switch "ON".
- 2) Start engine and wait at least 4 seconds. (If engine does not run, turn ignition switch to "START" for at least 5 seconds.)
- 3) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 4) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)

EC-IGN/SG-01

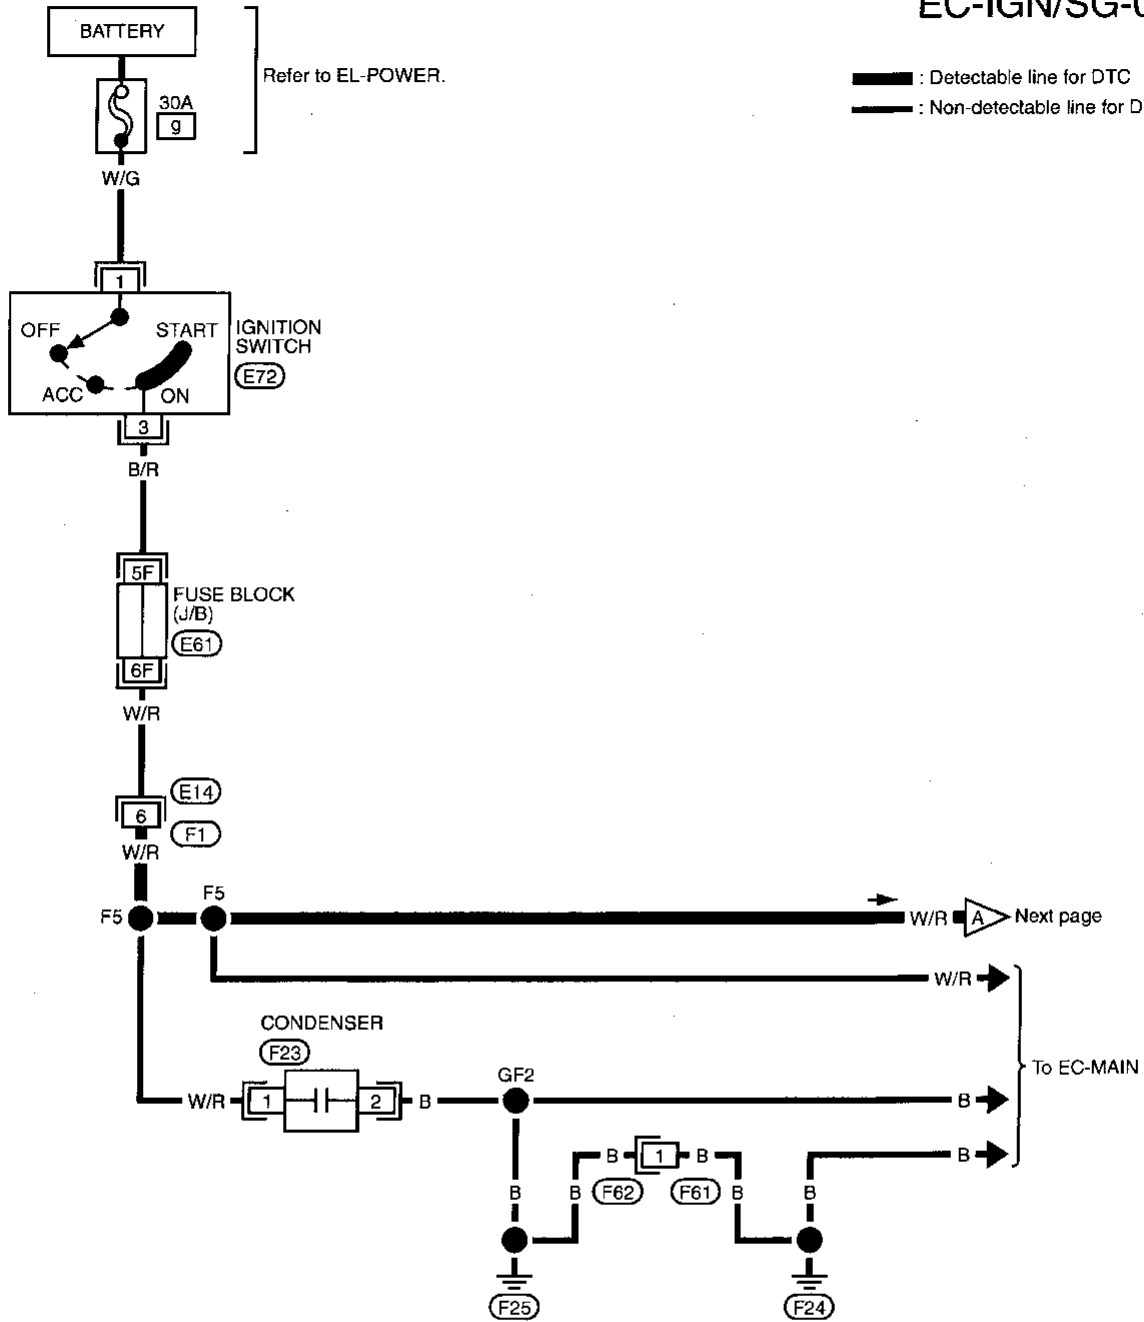




Refer to last page (Foldout page).
 (E61)

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)


EC-IGN/SG-02

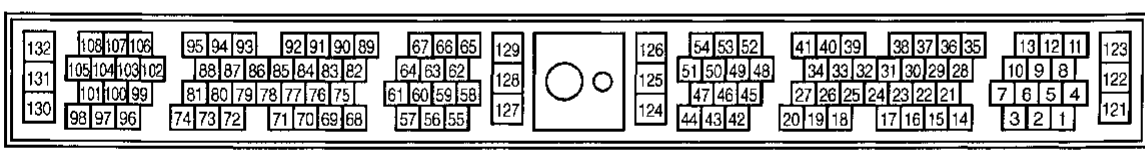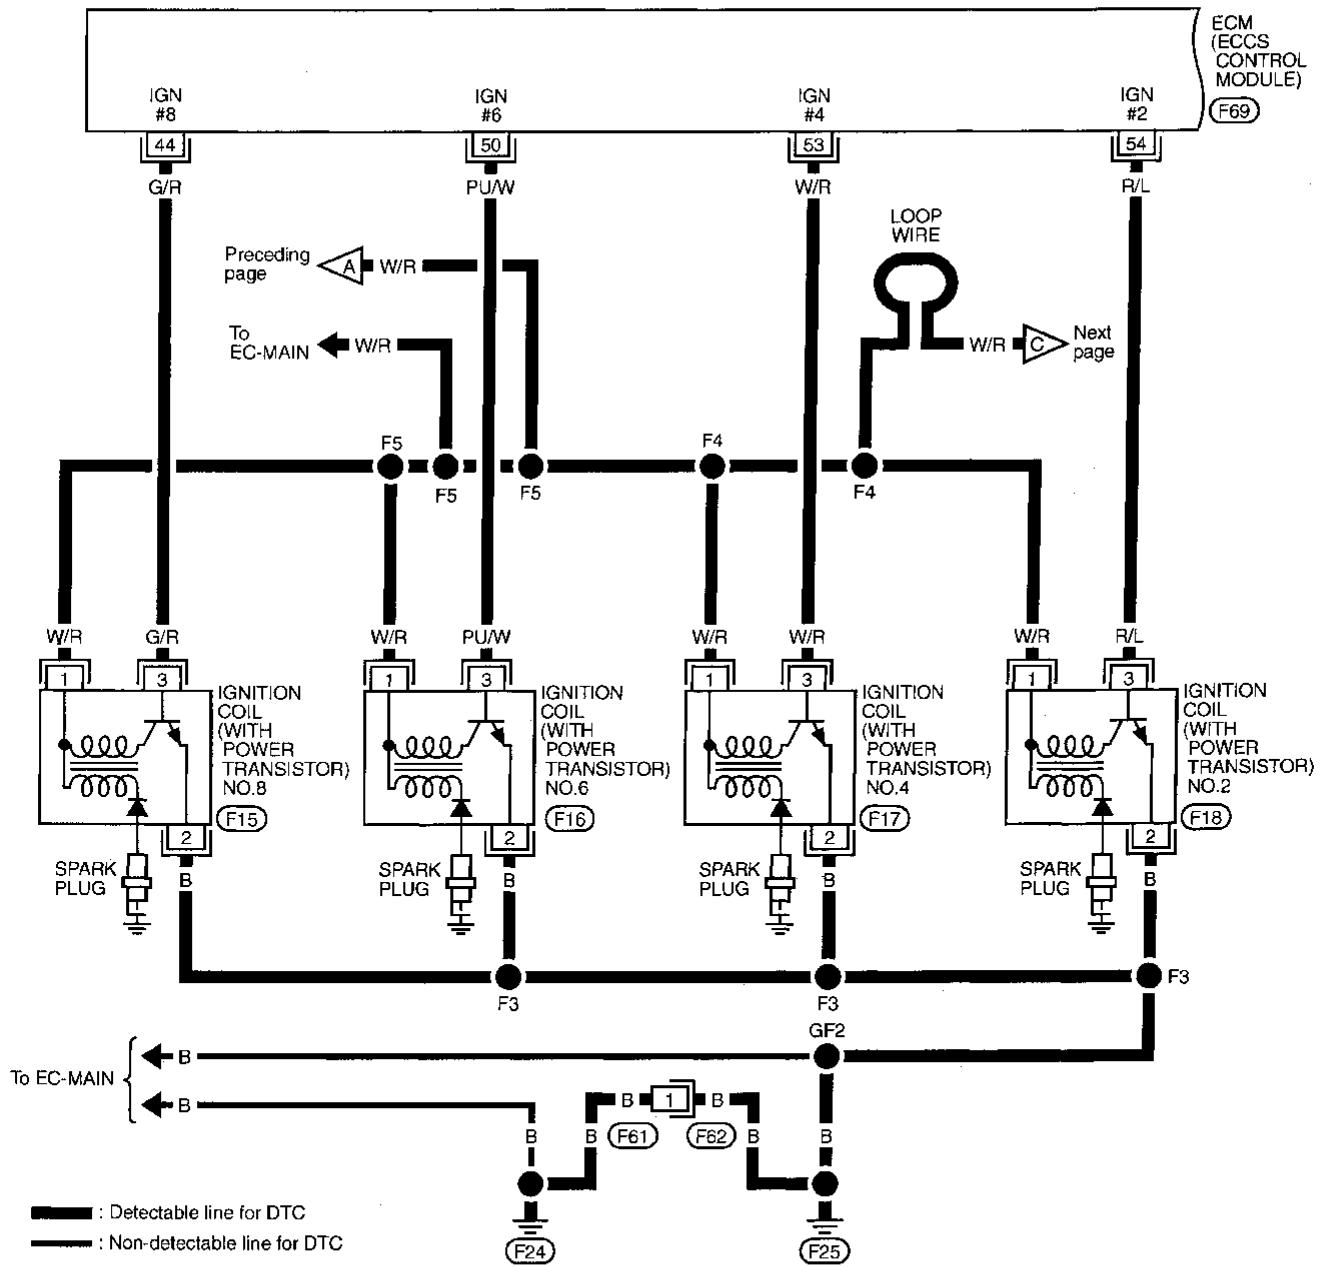



TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)

EC-IGN/SG-03

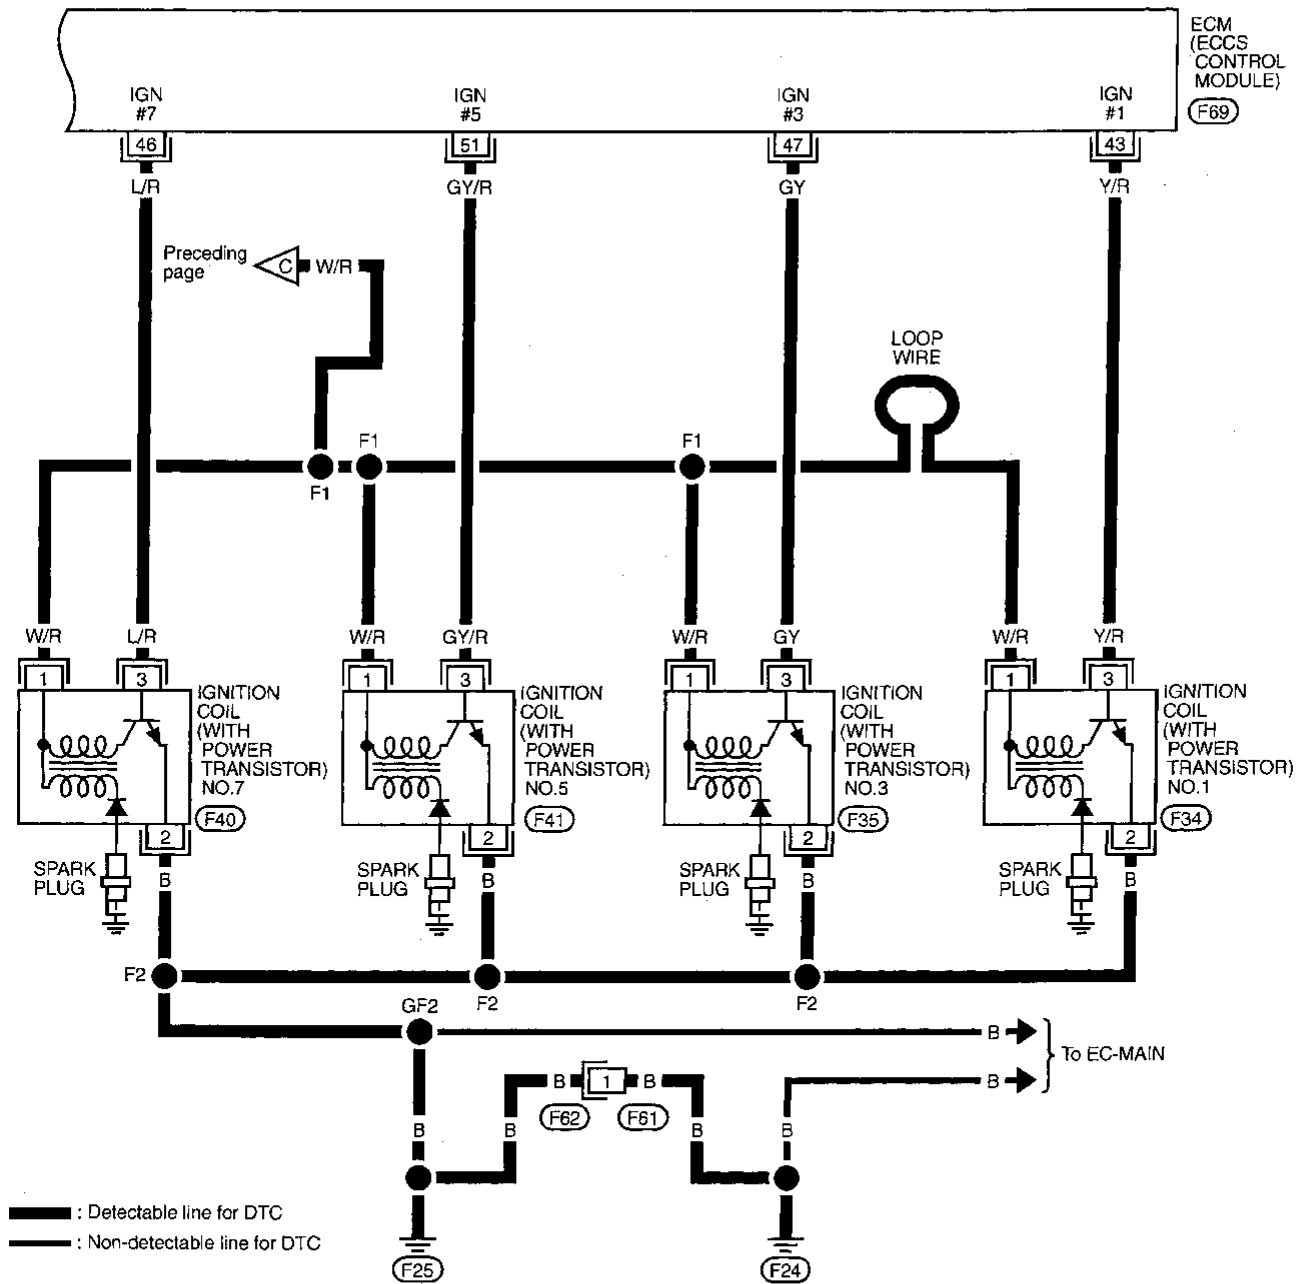






GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

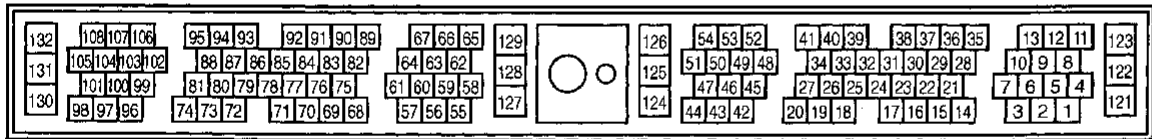

TEC276

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd) DIAGNOSTIC PROCEDURE

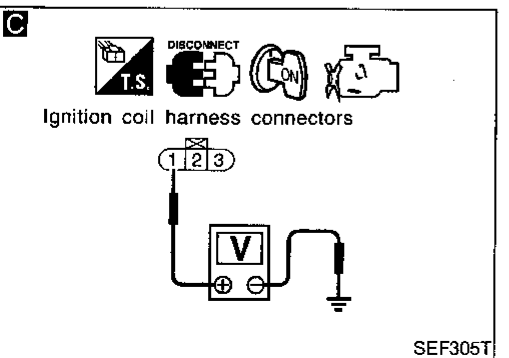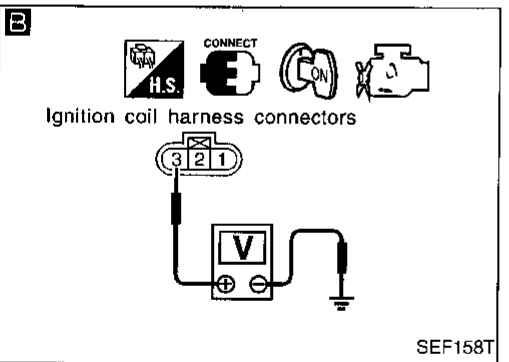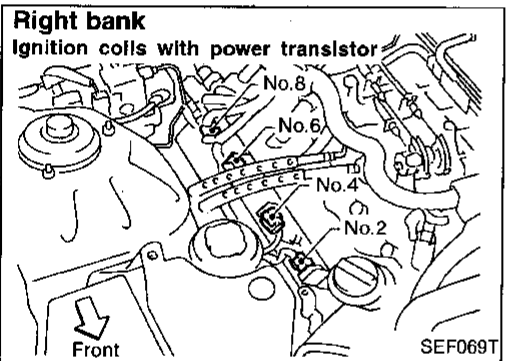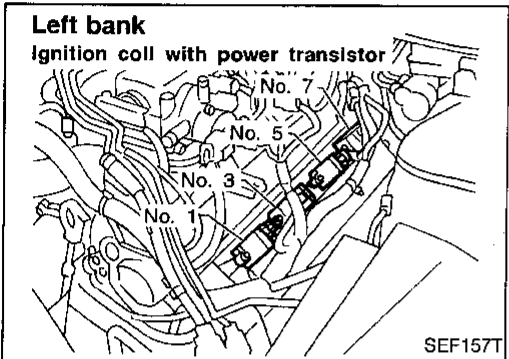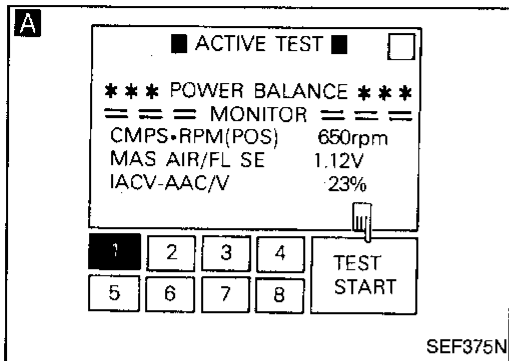

INSPECTION START

Does engine start?

No → []

Yes (with crossed-out battery icon) → []

B

SEARCH FOR MALFUNCTIONING CIRCUIT-2.

1. Turn ignition switch "ON".
2. Check voltage between ignition coil terminal ③ and ground.

Voltage:
Approx. 0.38V at DC range (Actual signal can be measured by oscilloscope.)

A

SEARCH FOR MALFUNCTIONING CIRCUIT-1.

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
3. Search for circuit which does not produce a momentary engine speed drop.

C

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect ignition coil harness connectors.
3. Turn ignition switch "ON".
4. Check voltage between each ignition coil harness connector terminal ① and ground.

Voltage: Battery voltage

NG →

Check the following.

- Harness connectors (F1, E14)
- Fuse block
- Harness for open or short between ignition switch and ignition coils

If NG, repair harness, connectors or component.

D

CHECK OUTPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect each ignition coil harness connector and ECM harness connector.
3. Check harness continuity between each ignition coil harness connector terminal ③ and each ECM harness connector terminal.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG →






If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK

Ⓐ

TROUBLE DIAGNOSIS FOR DTC P1320

Ignition Signal (Cont'd)

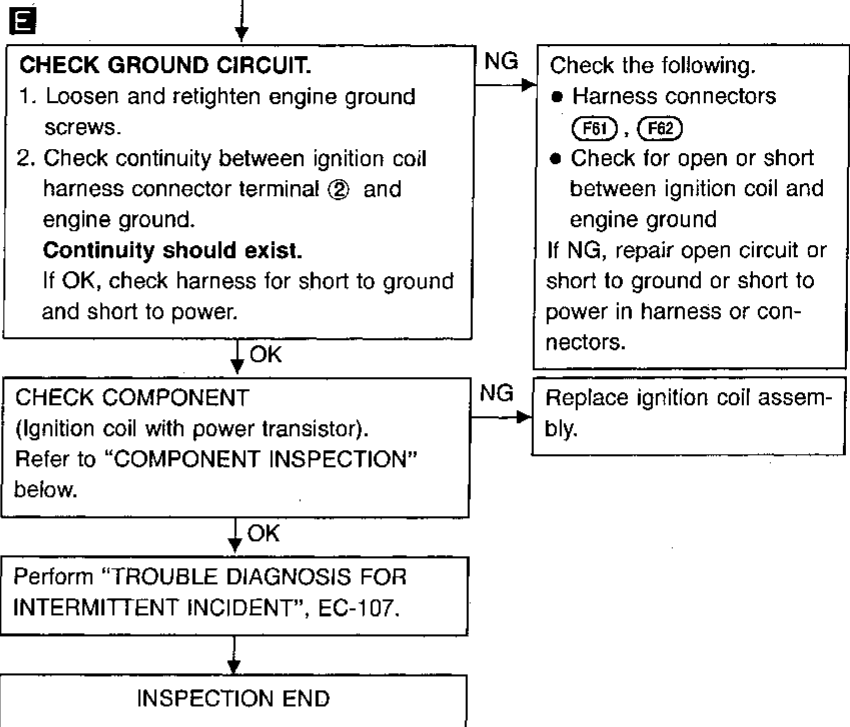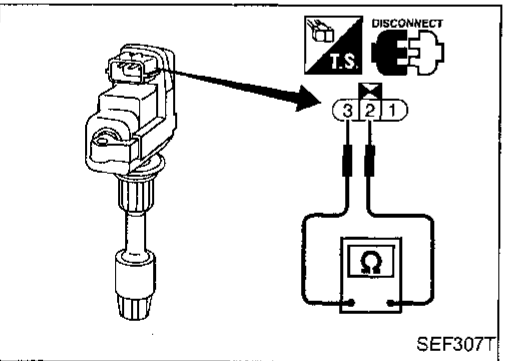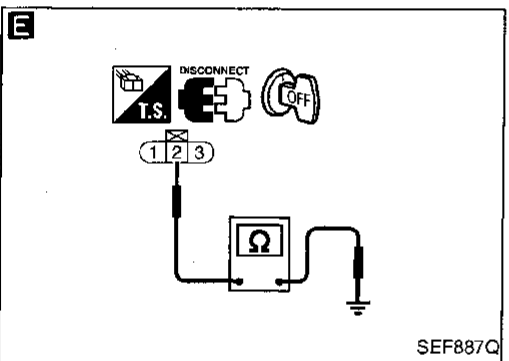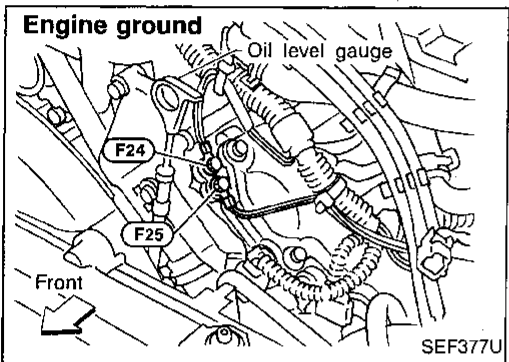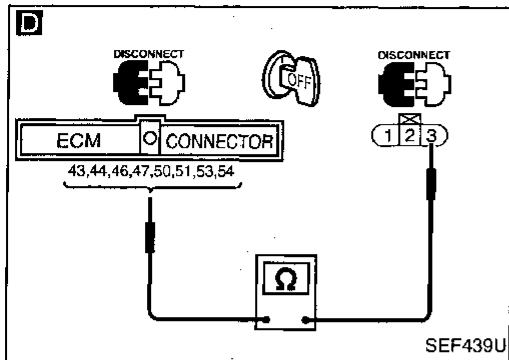

COMPONENT INSPECTION

Ignition coil with power transistor

1. Disconnect ignition coil with power transistor harness connector.
2. Check ignition coil with power transistor for resistance between terminals ③ and ②.

Terminals	Resistance	Result
③ and ②	Not 0Ω	OK
	0Ω	NG

If NG, replace ignition coil with power transistor assembly.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1336

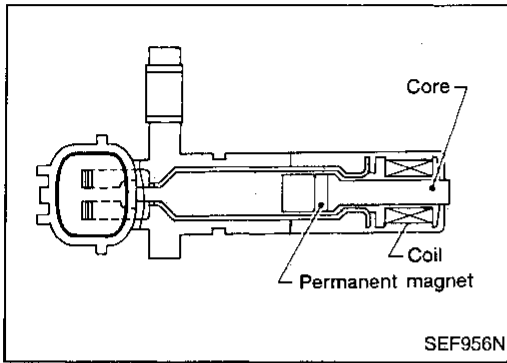

Crankshaft Position Sensor (CKPS) (OBD) (COG)

COMPONENT DESCRIPTION

The crankshaft position sensor (OBD) is located on the transmission housing facing the gear teeth (cogs) of the drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not directly used to control the engine system. It is used only for the on board diagnosis of misfire.

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
57	B/R	Crankshaft position sensor (OBD)	<div style="border: 1px solid black; display: inline-block; padding: 2px;">Engine is running.</div> (Warm-up condition) Idle speed	Approximately 1.7V
			<div style="border: 1px solid black; display: inline-block; padding: 2px;">Engine is running.</div> (Warm-up condition) Engine speed is 2,000 rpm.	Approximately 0V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1336 0905	<ul style="list-style-type: none"> Chipping of the signal plate (on drive plate) gear teeth (cogs) is detected by the ECM. 	<ul style="list-style-type: none"> Harness or connectors Crankshaft position sensor (POS) Signal plate (drive plate) Dead (Weak) battery

TROUBLE DIAGNOSIS FOR DTC P1336

Crankshaft Position Sensor (CKPS) (OBD) (COG) (Cont'd)


DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

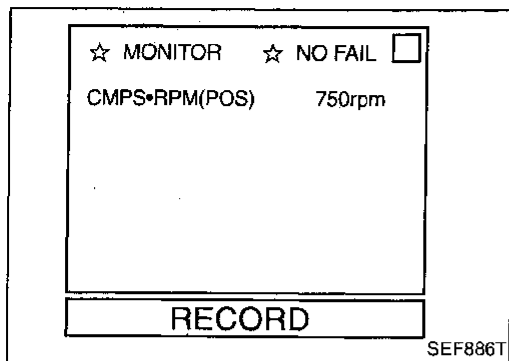

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT.
- 2) Start engine and run it for at least 3 minutes at idle speed.

OR



- 1) Start engine and run it for at least 3 minutes at idle speed.
- 2) Select "MODE 7" with GST.

OR



- 1) Start engine and run it for at least 3 minutes at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1336

Crankshaft Position Sensor (CKPS) (OBD) (COG) (Cont'd)


EC-CKPS-01

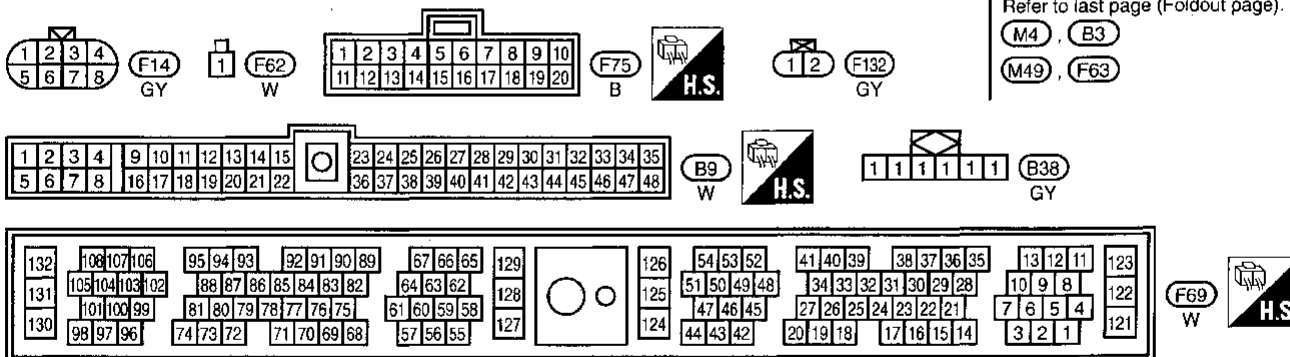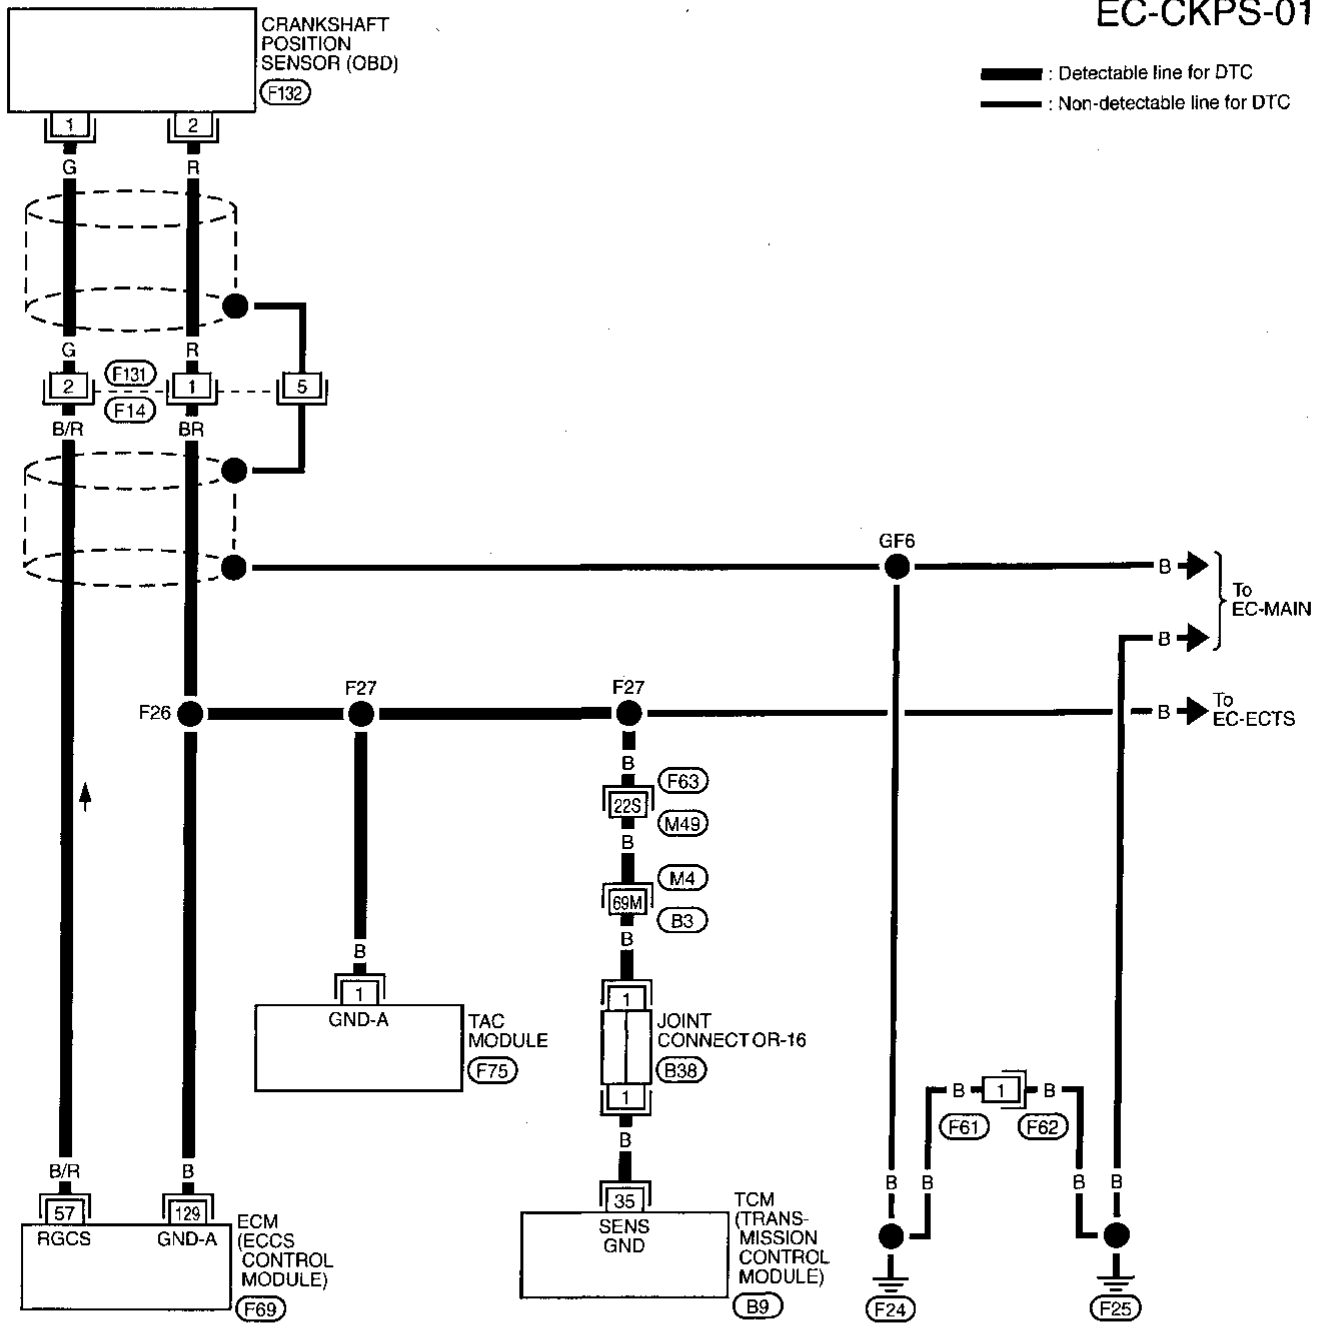

TROUBLE DIAGNOSIS FOR DTC P1336

Crankshaft Position Sensor (CKPS) (OBD) (COG) (Cont'd)

DIAGNOSTIC PROCEDURE

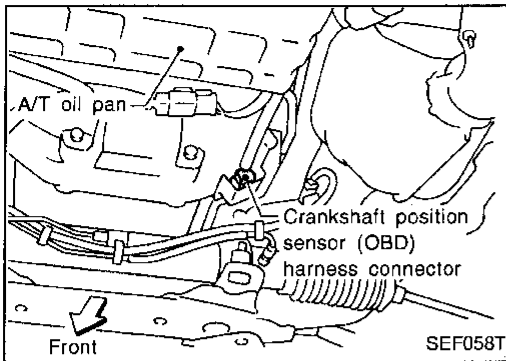

INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.


A

CHECK INPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect crankshaft position sensor (OBD) harness connector and ECM harness connector.
3. Check continuity between sensor terminal ① and ECM terminal ⑤ with CONSULT or tester.

Continuity should exist.
If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors (F14), (F131)
 - Harness for open or short between crankshaft position sensor (OBD) and ECM
- If NG, repair open circuit or short to ground or short to power in harness or connectors.

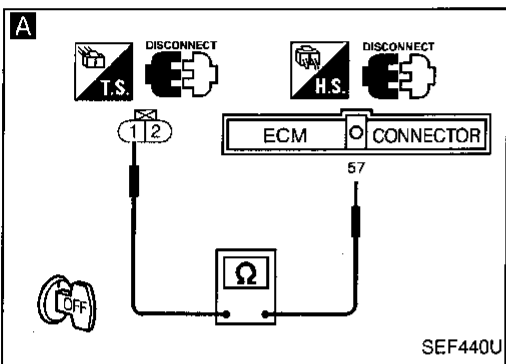



B

CHECK GROUND CIRCUIT.

1. Reconnect ECM harness connector.
2. Check harness continuity between terminal ② and engine ground.

Continuity should exist.
If OK, check harness for short to ground and short to power.

- NG
- Check the following.
- Harness connectors (F14), (F131)
 - Harness connectors (F63), (M69)
 - Harness connectors (M4), (B3)
 - Joint connector-16
 - Harness for open or short between crankshaft position sensor (OBD) harness connector and ECM
 - Harness for open or short between crankshaft position sensor (OBD) and throttle actuator control (TAC) module
 - Harness for open or short between crankshaft position sensor and TCM
- If NG, repair open circuit or short to ground or short to power in harness or connectors.

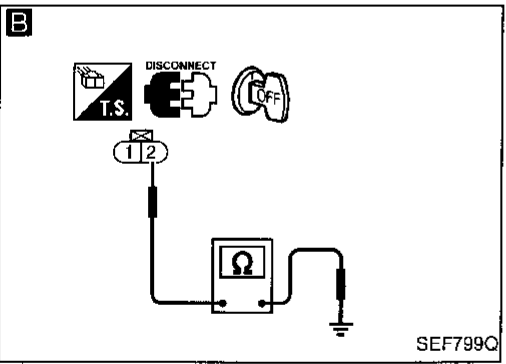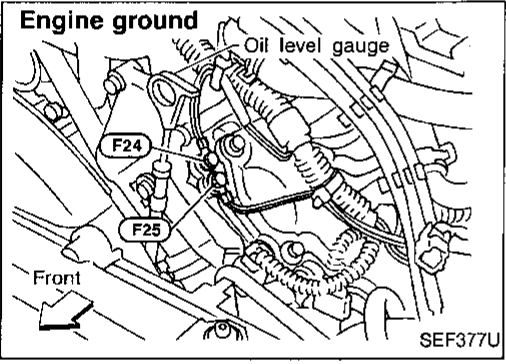

CHECK COMPONENT
[Crankshaft position sensor (OBD)].
Refer to "COMPONENT INSPECTION" on next page.

NG

Replace crankshaft position sensor (OBD).

OK



Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

Ⓐ

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1336


Crankshaft Position Sensor (CKPS) (OBD) (COG) (Cont'd)

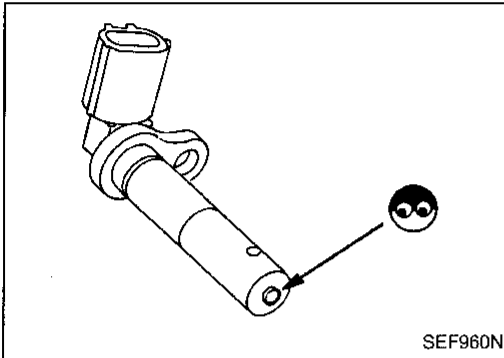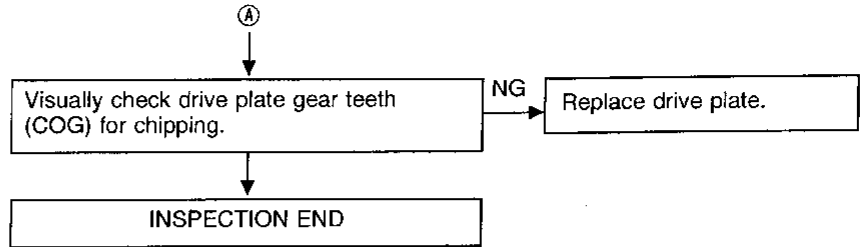

COMPONENT INSPECTION

Crankshaft position sensor (OBD)

1. Disconnect crankshaft position sensor (OBD) harness connector.
2. Loosen the fixing bolt of the sensor.
3. Remove the sensor.
4. Visually check the sensor for chipping.

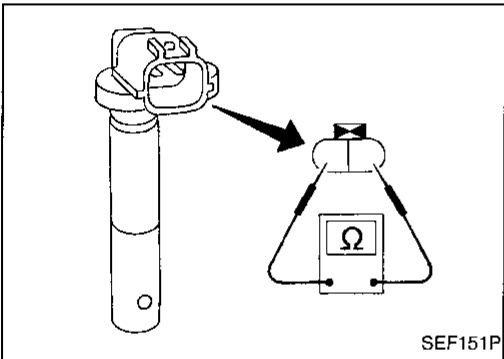


5. Check resistance as shown in the figure.

Resistance:

166.5 - 203.5Ω [at 20°C (68°F)]

TROUBLE DIAGNOSIS FOR DTC P1400

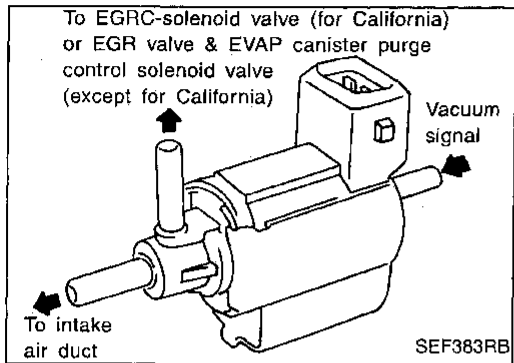

EGRC-solenoid Valve (For California) or EGR Valve and EVAP Canister Purge Control Solenoid Valve (Except for California)

COMPONENT DESCRIPTION

The EGRC-solenoid valve (for California) or (except for California) EGR valve and EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. A plunger will then move to flow the vacuum signal (from the intake manifold collector to the EGR valve.)

The vacuum signal passes through the solenoid valve. The signal then reaches the EVAP canister and the EGR valve. When the ECM sends an OFF signal, the plunger is returned by the spring and cut the vacuum signal.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGRC SOL/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "D" ● No-load 	Idle OFF
		Revving engine up from idle to 3,000 rpm ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
10	L/Y	EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Lift up drive wheels and rev engine up from idle to 3,000 rpm in "1st" position.	0 - 0.7V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1400 1005	<ul style="list-style-type: none"> ● The improper voltage signal is sent to ECM through EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California). 	<ul style="list-style-type: none"> ● Harness or connectors (The EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve circuit is open or shorted.) ● EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1400

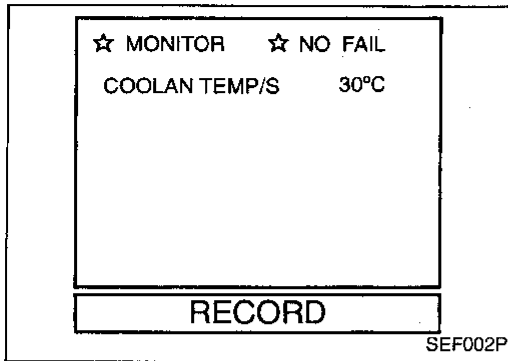

EGRC-solenoid Valve (For California) or EGR Valve and EVAP Canister Purge Control Solenoid Valve (Except for California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- Always perform the test at temperature of -10°C (14°F) or higher.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT and wait at least 5 seconds.

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EGR valve and EVAP canister purge control solenoid valve circuit.

During this check, a 1st trip DTC might not be confirmed.



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select "MODE 7" with GST.

OR




- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1400

EGRC-solenoid Valve (For California) or EGR Valve and EVAP Canister Purge Control Solenoid Valve (Except for California) (Cont'd)

EC-EGRC/V-01

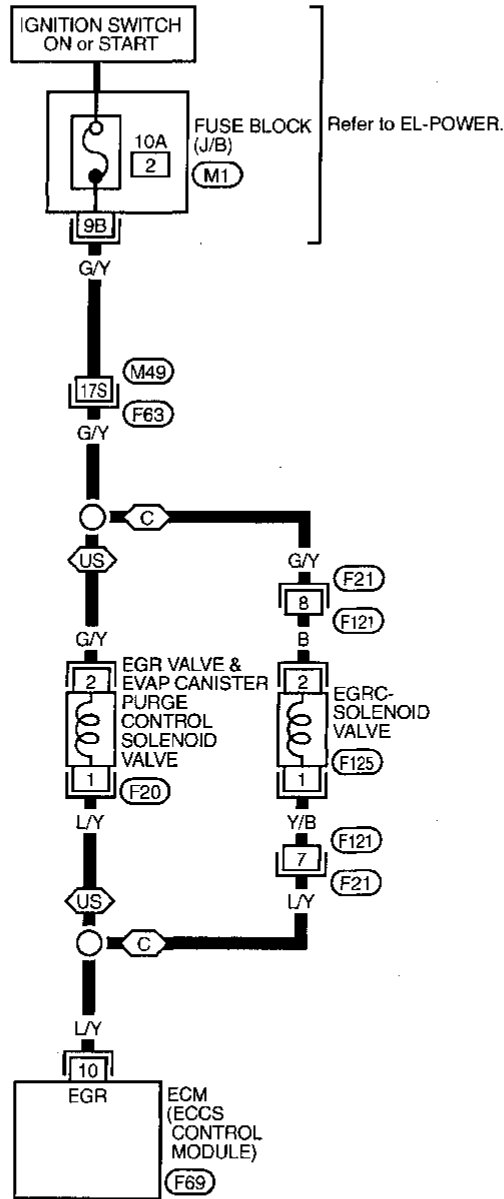

- : Detectable line for DTC
- : Non-detectable line for DTC
- : For California
- : Except for California

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL


IDX



Refer to last page (Foldout page).

(M49), (F63)


(M1)

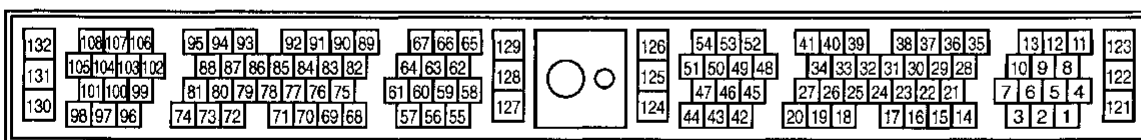

TROUBLE DIAGNOSIS FOR DTC P1400

EGRC-solenoid Valve (For California) or EGR Valve and EVAP Canister Purge Control Solenoid Valve (Except for California) (Cont'd)

DIAGNOSTIC PROCEDURE

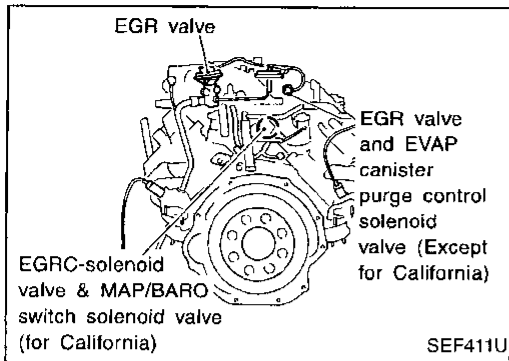

A

■ EGRC SOL/V CIRCUIT ■

DOES THE SOLENOID VALVE MAKE AN OPERATING SOUND EVERY 3 SECONDS?

NEXT NO YES

MEF957D

A

■ ACTIVE TEST ■


EGRC SOL/V (EGR) ON FLOW

MONITOR

CMPS•RPM (POS)	0rpm
THRTL POS SEN	0.58V
CLSD THL/P SW	ON

ON ON/OFF OFF

SEF633U

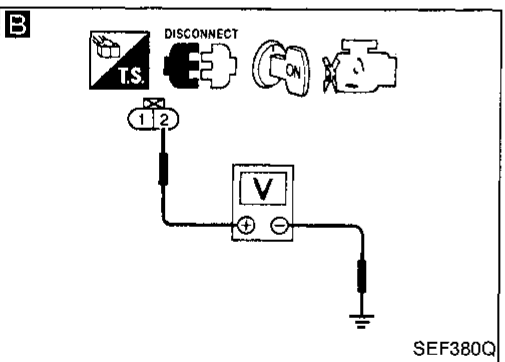

INSPECTION START

A

CHECK COMPONENT
(EGRC-solenoid valve for California or EGR valve & EVAP canister purge control solenoid valve except for California).

1. Turn ignition switch "ON".
2. Perform "EGRC SOL/V CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

NG

Repair or replace EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California) or repair circuit.

OR

1. Turn ignition switch "ON".
2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT and check operating sound.

OR

1. Turn ignition switch "OFF".
2. Lift up drive wheels.
3. Start engine (TCS switch "OFF") and shift to "1" position.
4. Rev up engine speed from idle up to 3,000 rpm.
5. When disconnecting and reconnecting the solenoid valve harness connector, make sure that the solenoid valve makes operating sound. (The DTC or the 1st trip DTC for the EGRC-solenoid or EGR valve and EVAP canister purge control solenoid valve will be displayed, but ignore it.)

OK

B

CHECK POWER SUPPLY.

1. Disconnect EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal ② and ground with CONSULT or tester.

Voltage: Battery voltage

NG

Check the following.



- Harness connectors (F63), (M49)
- 10A fuse
- Harness for open or short between EGRC-solenoid valve or EGR valve & EVAP canister purge control solenoid valve and fuse

If NG, repair harness or connectors.


Ⓐ

TROUBLE DIAGNOSIS FOR DTC P1400

EGRC-solenoid Valve (For California) or EGR Valve and EVAP Canister Purge Control Solenoid Valve (Except for California) (Cont'd)

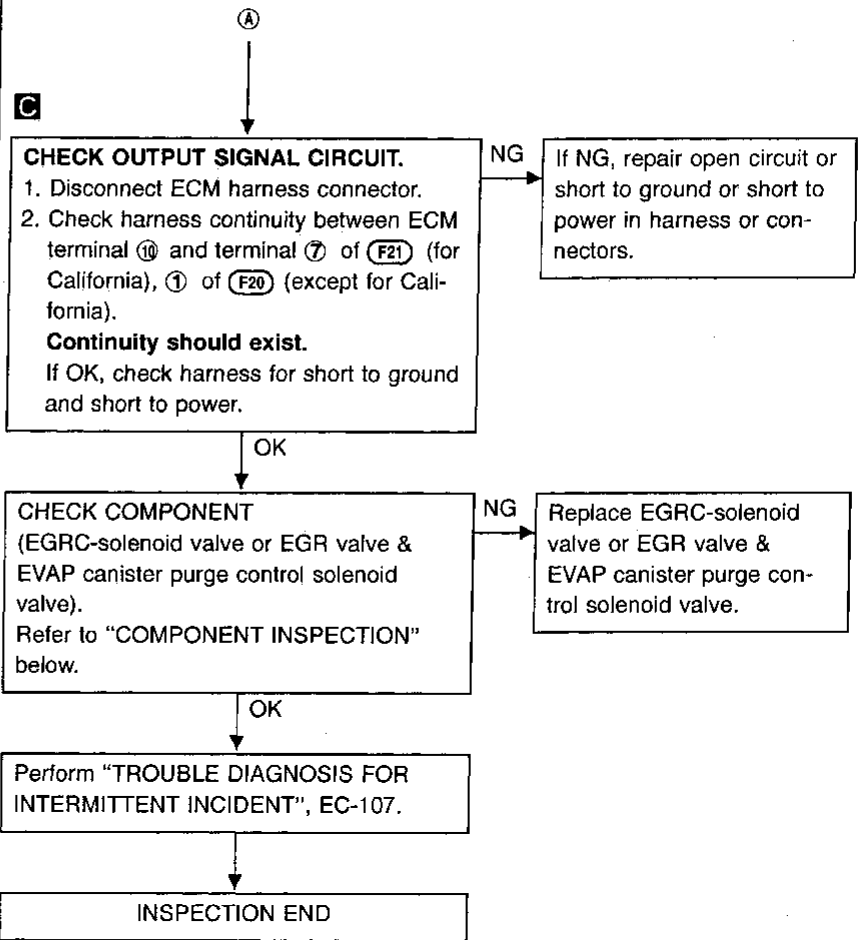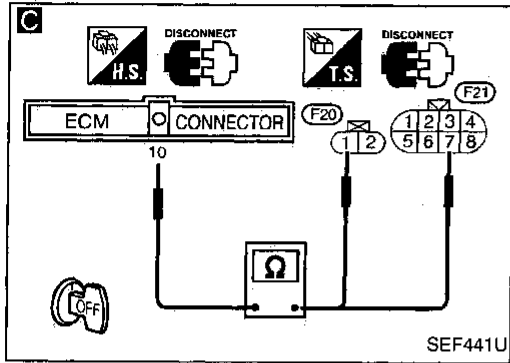

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

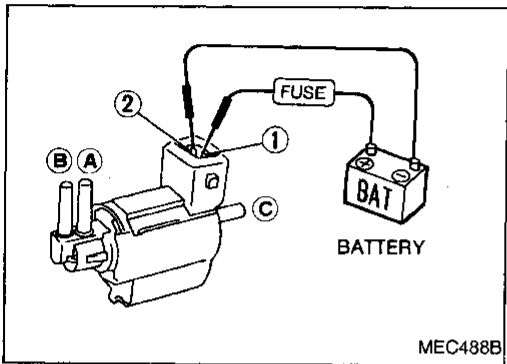

COMPONENT INSPECTION


EGRC-solenoid valve (For California) or EGR valve & EVAP canister purge control solenoid valve (Except for California)

Check air passage continuity.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

TROUBLE DIAGNOSIS FOR DTC P1401

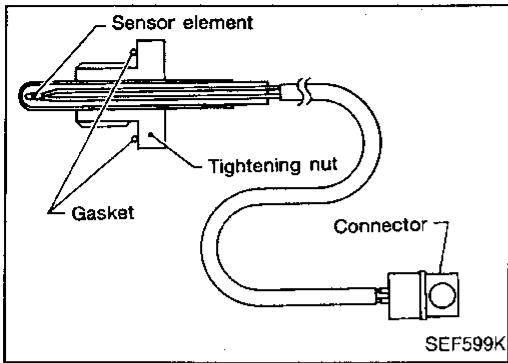


EGR Temperature Sensor

COMPONENT DESCRIPTION

The EGR temperature sensor detects temperature changes in the EGR passage way. When the EGR valve opens, hot exhaust gases flow, and the temperature in the passage way changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases.

This sensor is not directly used to control the engine system. It is used only for the on board diagnosis.

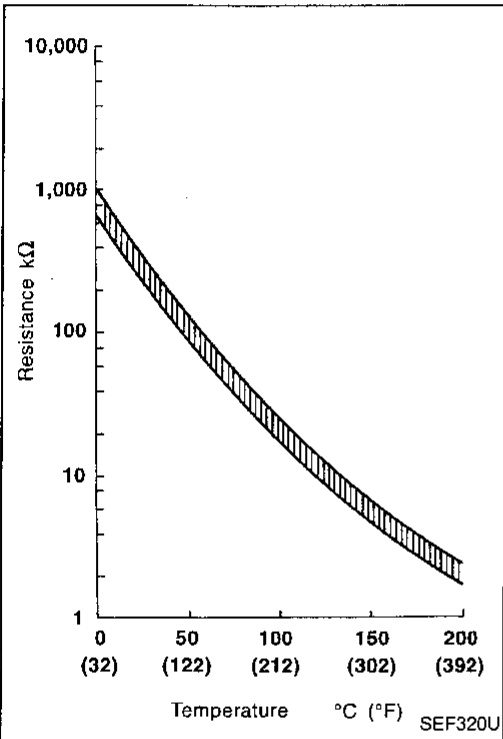

EGR temperature °C (°F)	Voltage* (V)	Resistance (MΩ)
0 (32)	4.61	0.68 - 1.11
50 (122)	2.53	0.092 - 0.12
100 (212)	0.87	0.017 - 0.024

*: These data are reference values and measured between ECM terminal 69 (EGR temperature sensor) and ECM terminal 128 (ECCS ground).
When EGR system is operating:
Voltage: 0 - 1.5V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1401 0305	A) An excessively low voltage from the EGR temperature sensor is sent to ECM, even when engine coolant temperature is low.	<ul style="list-style-type: none"> • Harness or connectors (The EGR temperature sensor circuit is shorted.) • EGR temperature sensor • Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California)
	B) An excessively high voltage from the EGR temperature sensor is sent to ECM, even when engine coolant temperature is high.	<ul style="list-style-type: none"> • Harness or connectors (The EGR temperature sensor circuit is open.) • EGR temperature sensor • Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California)

TROUBLE DIAGNOSIS FOR DTC P1401

EGR Temperature Sensor (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Perform "Procedure for malfunction A" first. If DTC cannot be confirmed, perform "Procedure for malfunction B".

Procedure for malfunction A

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Verify that engine coolant temperature is less than 40°C (104°F).

If the engine coolant temperature is above the range, cool the engine down.

- 4) Start engine and let it idle for at least 8 seconds.

OR



- 1) Turn ignition switch "ON".
- 2) Select "MODE 1" with GST.
- 3) Verify that engine coolant temperature is less than 40°C (104°F).

If the engine coolant temperature is above the range, cool the engine down.

- 4) Start engine and let it idle for at least 8 seconds.
- 5) Select "MODE 7" with GST.

OR



- 1) Turn ignition switch "ON".
- 2) Verify that voltage between ECM terminal ⑦ (engine coolant temperature) is more 1.5V.

If the voltage is below the range, cool the engine down.

- 3) Start engine and let it idle for at least 8 seconds.
- 4) Turn ignition switch "OFF" and wait at least 5 seconds.
- 5) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.

Procedure for malfunction B

CAUTION:

Always drive vehicle at a safe speed.

NOTE:




If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform the test at temperature of -10°C (14°F) or higher.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Run engine at idle for at least 2 minutes.
- 3) Confirm that EGR valve is not lifting.
If the check result is NG, go to "TROUBLE DIAGNOSES FOR DTC P0400, P0402 and P1402". (See pages EC-267, 277 and 392.)
- 4) Select "DATA MONITOR" mode with CONSULT.
- 5) Read "EGR TEMP SEN" at about 1,500 rpm while holding the EGR valve in full open position by hand.
Voltage should decrease to less than 1.0V.

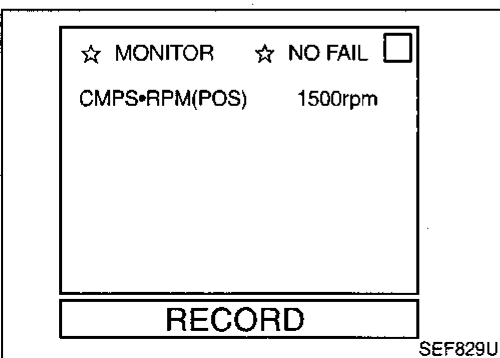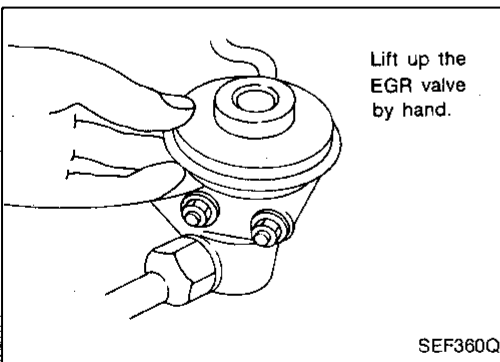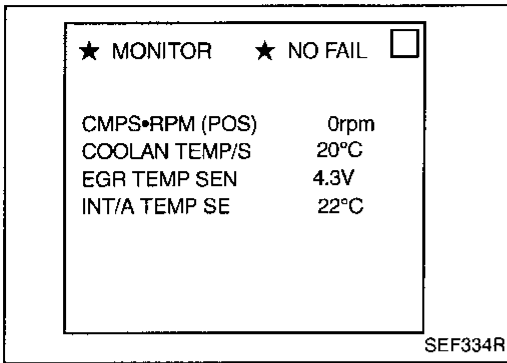

TROUBLE DIAGNOSIS FOR DTC P1401

EGR Temperature Sensor (Cont'd)

If the check result is NG, go to "DIAGNOSTIC PROCEDURE", EC-390.

If the check result is OK, go to following step.

- 6) Turn ignition switch "OFF" and wait at least 5 seconds.
- 7) Turn ignition switch "ON".
- 8) Check the output voltage of "THRTL POS SEN" at closed throttle position and note it.
- 9) Start engine (TCS switch "OFF").
- 10) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (POS): 1,200 - 2,200 rpm



VHCL SPEED SE: 10 km/h (6 MPH) or more

B/FUEL SCHDL: 2.2 - 3.2 ms

THRTL POS SEN: $(X + 0.34) - (X + 0.46)$ V

X = Voltage value measured at step 7)

Selector lever: Suitable position

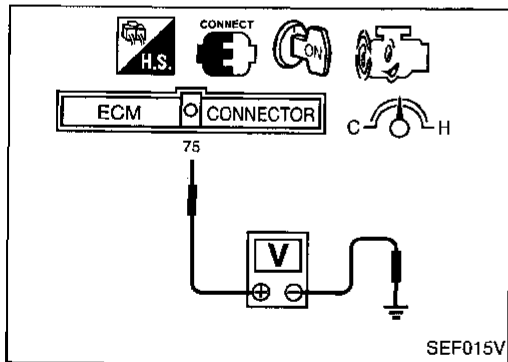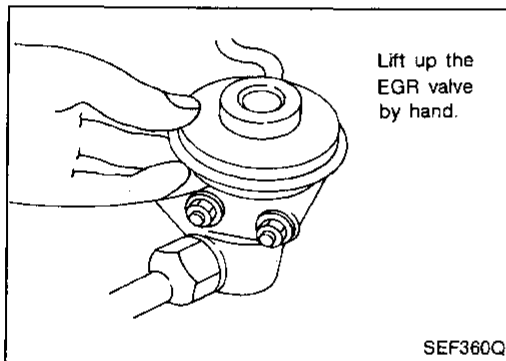

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EGR temperature sensor. During this check, a 1st trip DTC might not be confirmed.






- 1) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 2) Run engine at idle for at least 2 minutes.
- 3) Confirm that EGR valve is not lifting. If NG, go to TROUBLE DIAGNOSES FOR DTC P0400 and P0402, EC-267 and 277.
- 4) Check voltage between ECM terminal 75 and ground at about 1,500 rpm with EGR valve lifted up to the full position by hand.
Voltage should decrease to less than 1.0V.
- 5) If step 4 is OK, perform TROUBLE DIAGNOSES FOR DTC P0400, P0402 and P1402, EC-267, 277.

TROUBLE DIAGNOSIS FOR DTC P1401

EGR Temperature Sensor (Cont'd)

EC-EGR/TS-01

 : Detectable line for DTC
 : Non-detectable line for DTC

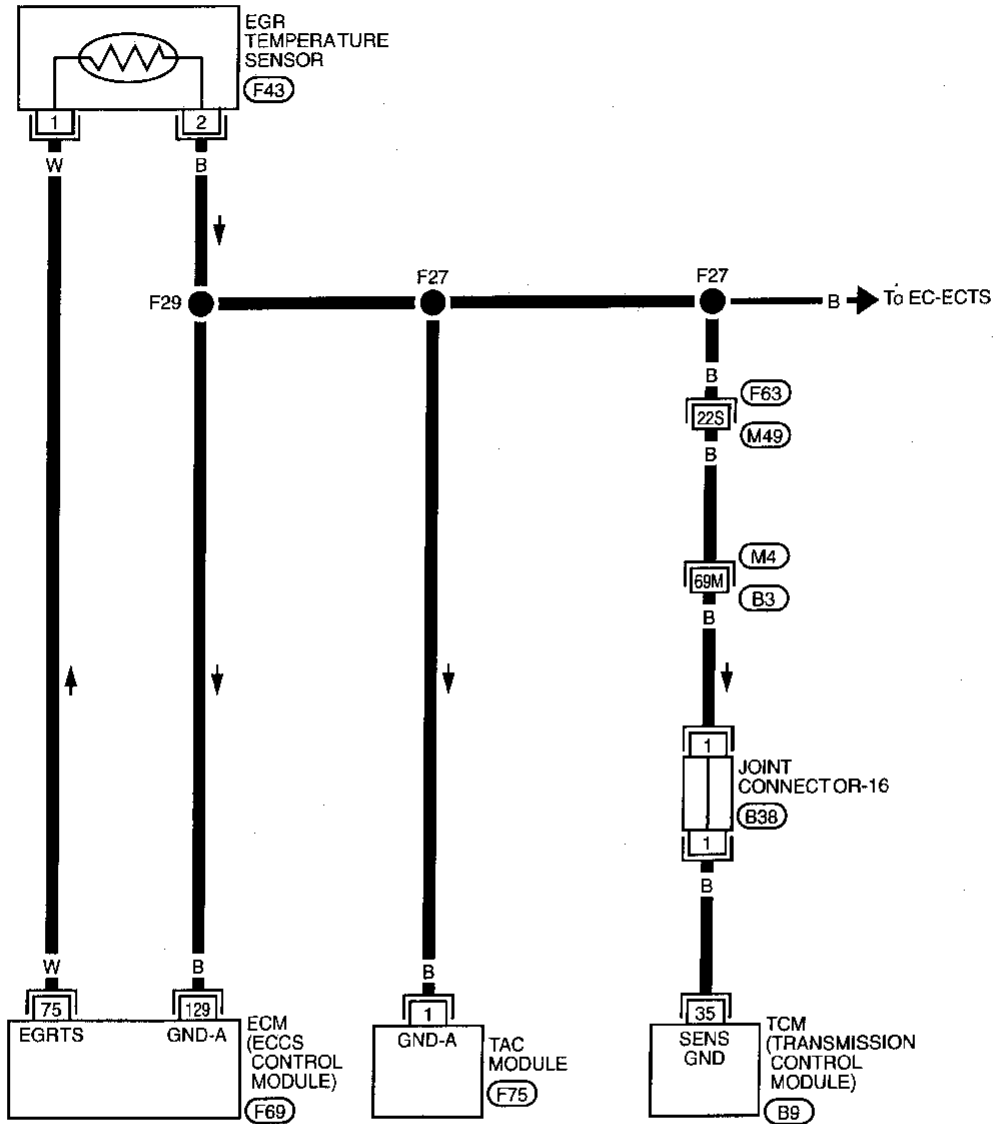

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

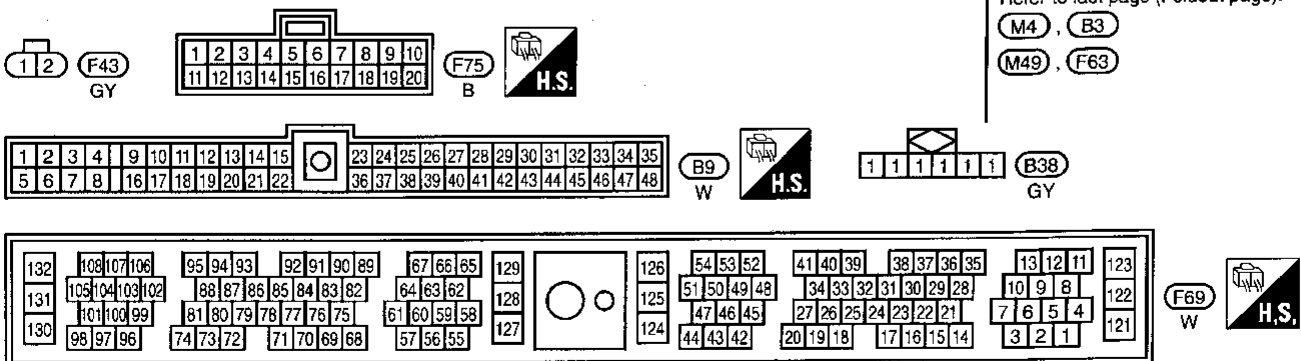


TEC279

TROUBLE DIAGNOSIS FOR DTC P1401

EGR Temperature Sensor (Cont'd)


DIAGNOSTIC PROCEDURE

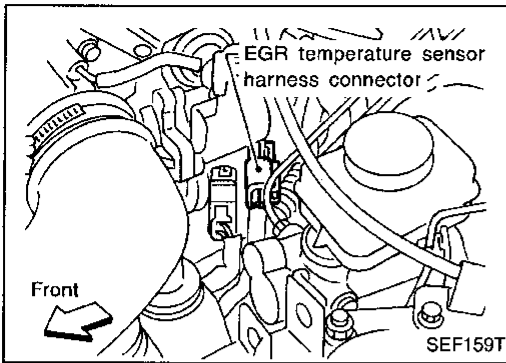

INSPECTION START


A
CHECK POWER SUPPLY.
 1. Disconnect EGR temperature sensor harness connector.
 2. Turn ignition switch "ON".
 3. Check voltage between terminal ① and ground with CONSULT or tester.
Voltage: Approximately 5V

NG → Repair harness or connectors.

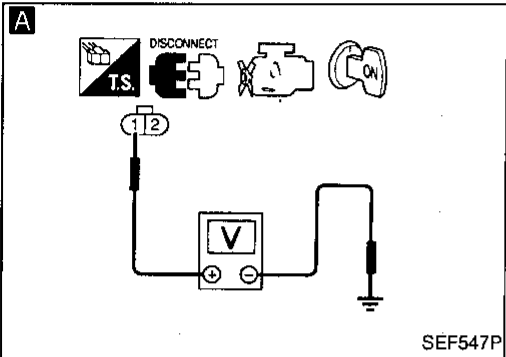

B
CHECK GROUND CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Check harness continuity between terminal ② and engine ground.
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Check the following.
 • Harness connectors (F63, M49)
 • Harness connectors (M4, B3)
 • Joint connector-16
 • Harness for open or short between ECM and EGR temperature sensor
 • Harness for open or short between EGR temperature sensor and throttle actuator control (TAC) module
 • Harness for open or short between TCM and EGR temperature sensor
 If NG, repair open circuit or short to ground or short to power in harness or connectors.

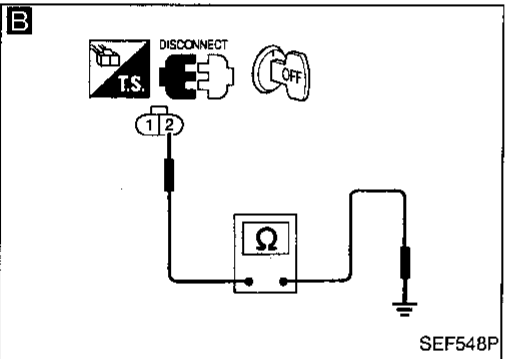

CHECK COMPONENT
 (EGR temperature sensor).
 Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EGR temperature sensor.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END



TROUBLE DIAGNOSIS FOR DTC P1401

EGR Temperature Sensor (Cont'd)

COMPONENT INSPECTION

EGR temperature sensor

Check resistance change and resistance value.

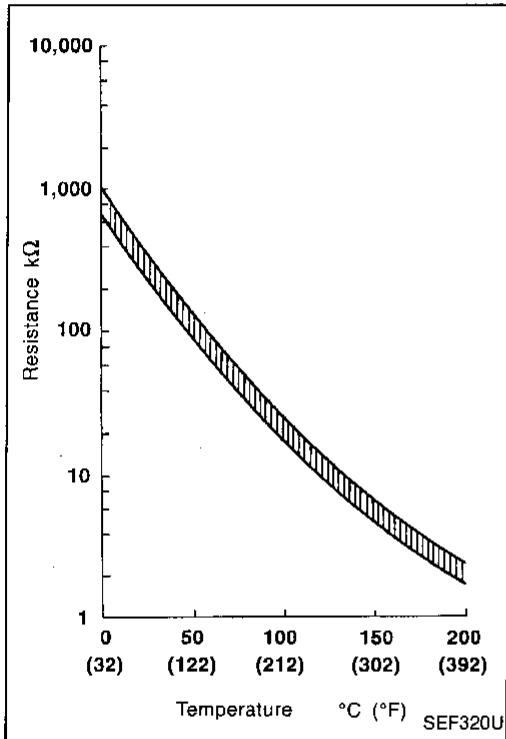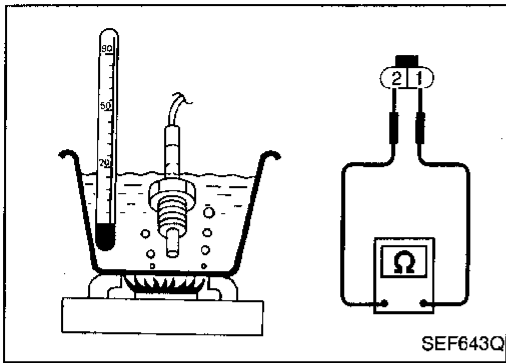

EGR temperature °C (°F)	Voltage* (V)	Resistance (MΩ)
0 (32)	4.61	0.68 - 1.11
50 (122)	2.53	0.092 - 0.12
100 (212)	0.87	0.017 - 0.024

If NG, replace EGR temperature sensor.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1402



EGR Function (Open)

SYSTEM DESCRIPTION

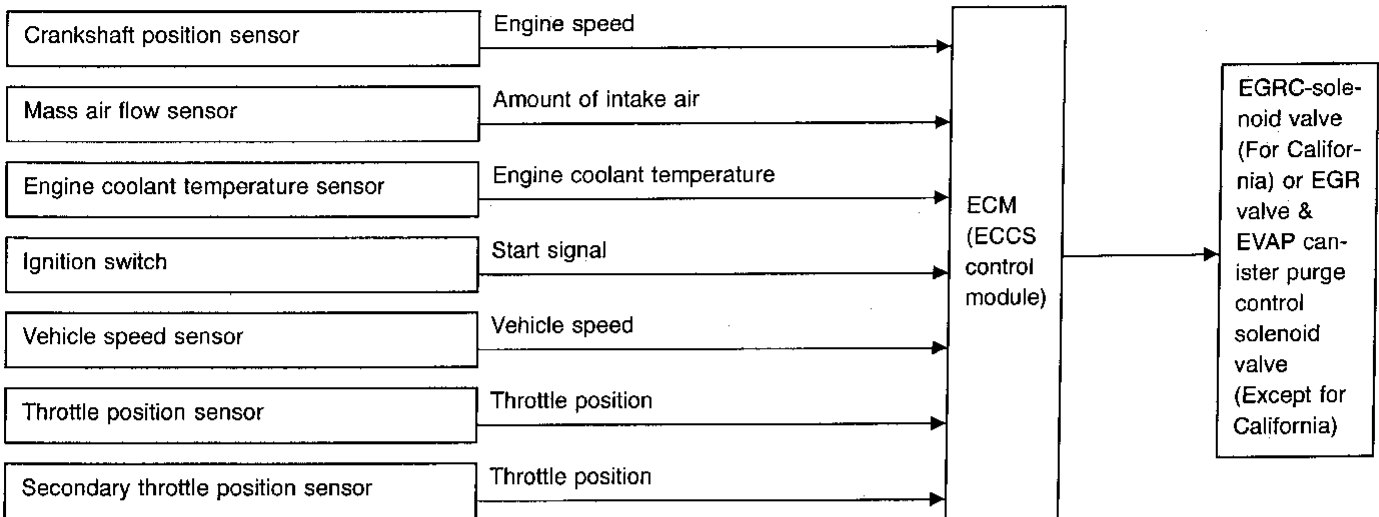

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California). When the ECM detects any of the following conditions, current flows through the solenoid valve. This causes the port vacuum to be discharged into the atmosphere. The EGR valve remain closed.

- Low engine coolant temperature
- Engine starting
- Engine stopped
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction
- Low vehicle speed
- TCS is operating

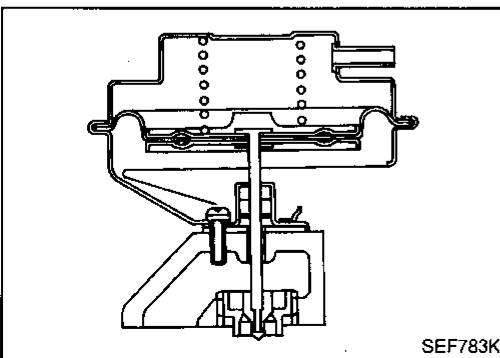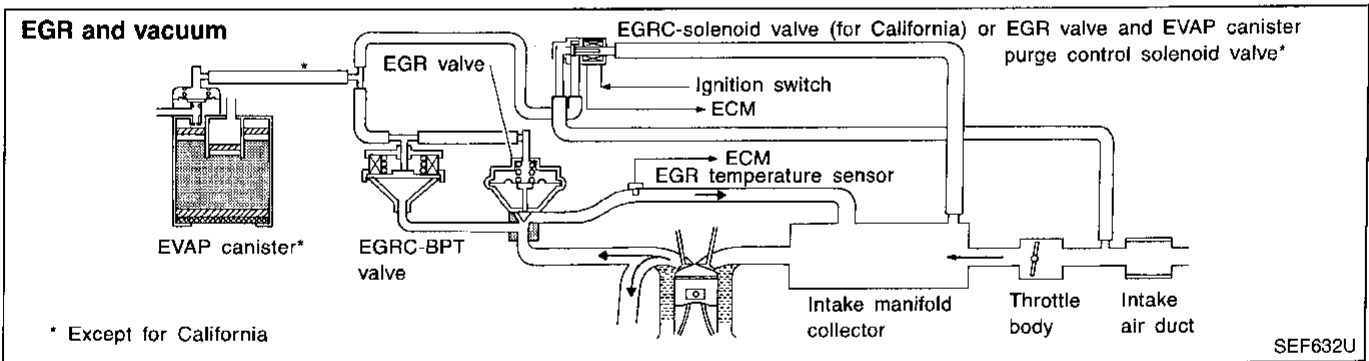

COMPONENT DESCRIPTION


Exhaust gas recirculation (EGR) valve

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

EGRC-solenoid valve (for California) or EGR valve and EVAP canister purge control solenoid valve (except for California)

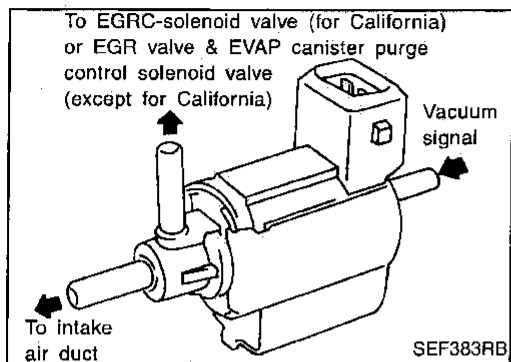

COMPONENT DESCRIPTION

The EGRC-solenoid valve (for California) or (except for California) EGR valve and EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. A plunger will then move to flow the vacuum signal (from the intake manifold collector to the EGR valve.)

The vacuum signal passes through the solenoid valve. The signal then reaches the EVAP canister and the EGR valve. When the ECM sends an OFF signal, the plunger is returned by the spring and cut the vacuum signal.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE


Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGR TEMP SEN	<ul style="list-style-type: none"> Engine: After warming up 	Less than 4.5V
EGRC SOL/V	<ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: "OFF" Shift lever: "N" No-load Idle	OFF
	Revsing engine up from idle to 3,000 rpm	ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
75	W	EGR temperature sensor	Engine is running. (Warm-up condition) └ Idle speed	Less than 4.5V
			Engine is running. (Warm-up condition) └ EGR system is operating.	0 - 1.0V
10	L/Y	EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California)	Engine is running. (Warm-up condition) └ Lift up drive wheels and rev engine up from idle to 3,000 rpm in "D" position.	0 - 0.7V
			Engine is running. (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V)

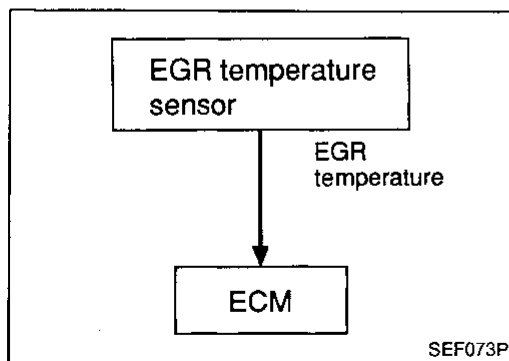

ON BOARD DIAGNOSIS LOGIC

If EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1402 0514	<ul style="list-style-type: none"> The exhaust gas recirculation (EGR) flow is excessively high during the specified driving condition. 	<ul style="list-style-type: none"> EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve EGR valve leaking or stuck open EGR temperature sensor EGRC-BPT valve

★ MONITOR ★ NO FAIL

CMPS•RPM (POS) 0rpm
 COOLAN TEMP/S 20°C
 EGR TEMP SEN 4.3V
 INT/A TEMP SE 22°C

SEF334R

■ EGR SYSTEM P1402 ■

OUT OF CONDITION

===== MONITOR =====

CMPS-RPM(POS) 0rpm
 THRTL POS SEN 0.40V
 B/FUEL SCHDL 1.9ms

SEF587U

■ EGR SYSTEM P1402 ■

TESTING

===== MONITOR =====

CMPS-RPM(POS) 737rpm
 THRTL POS SEN 0.50V
 B/FUEL SCHDL 3.0ms

SEF588U

■ EGR SYSTEM P1402 ■

COMPLETED

SELF-DIAG RESULTS

SEF272U

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Engine coolant temperature and EGR temperature must be verified in "DATA MONITOR" mode with CONSULT before starting DTC WORK SUPPORT test. If it is out of range below, the test cannot be conducted.

COOLAN TEMP/S: -10 to 40°C (14 to 104°F)

EGR TEMP SEN: Less than 4.8V

If the values are out of the ranges indicated above, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to reduce the coolant or EGR temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- Always perform the test at temperature of -10°C (14°F) or higher.




- Turn ignition switch "ON".
- Select "EGR SYSTEM P1402" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START".
- Start engine and let it idle until "TESTING" on CONSULT screen is turned to "COMPLETED". (It will take 70 seconds or more.)

If "TESTING" is not displayed after 5 minutes, turn ignition "OFF" and cool the engine coolant temperature to the range of -10 to 40°C (14 to 104°F). Retry from step 1).

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-397.

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

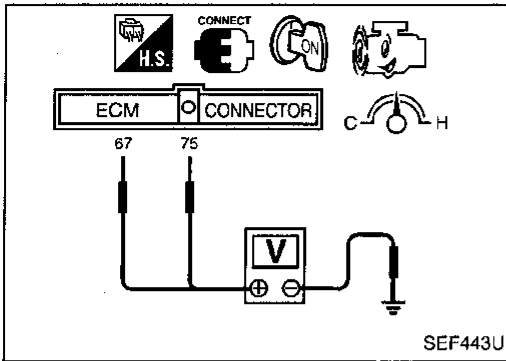

- OR
- 1) Turn ignition switch "ON" and select "MODE 1" with GST.
 - 2) Check that engine coolant temperature is within the range of -10 to 40°C (14 to 104°F).
 - 3) Check that voltage between ECM terminal 75 (EGR temperature) and ground is less than 4.8V.
 - 4) Start engine (TCS switch "OFF") and let it idle for at least 70 seconds.
 - 5) Stop engine.
 - 6) Perform the step 1) to 4) again.
 - 7) Select "MODE 3" with GST.

GI
MA
EM

- OR
- 1) Turn ignition switch "ON".
 - 2) Check the following voltages.
**ECM terminal 67 (Engine coolant temperature) and ground:
 1.5 - 4.4V**
**ECM terminal 75 (EGR temperature) and ground:
 Less than 4.8V**
 - 3) Start engine and let it idle for at least 70 seconds.
 - 4) Turn ignition "OFF" and wait at least 5 seconds.
 - 5) Perform "Diagnostic Test Mode II" (Self-diagnostic results) with ECM.



LC
EC
FE
AT

PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)


EC-EGRC1-01

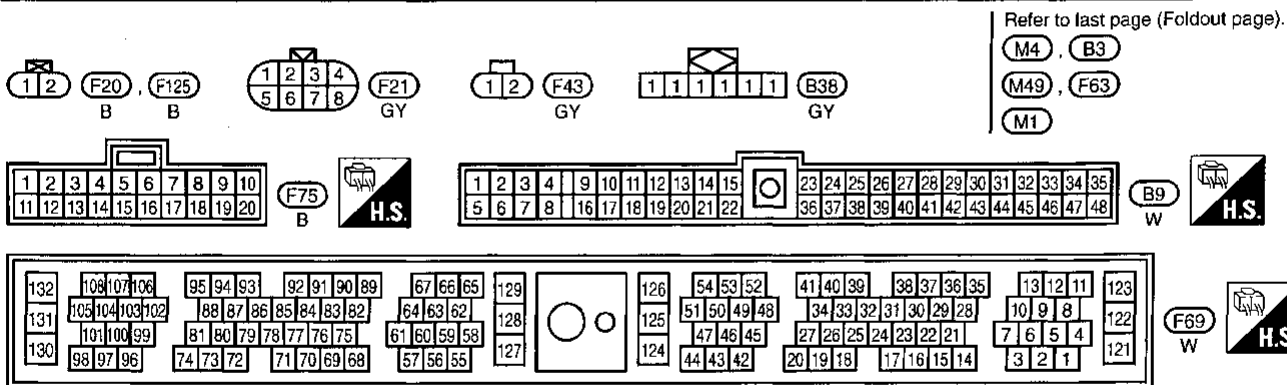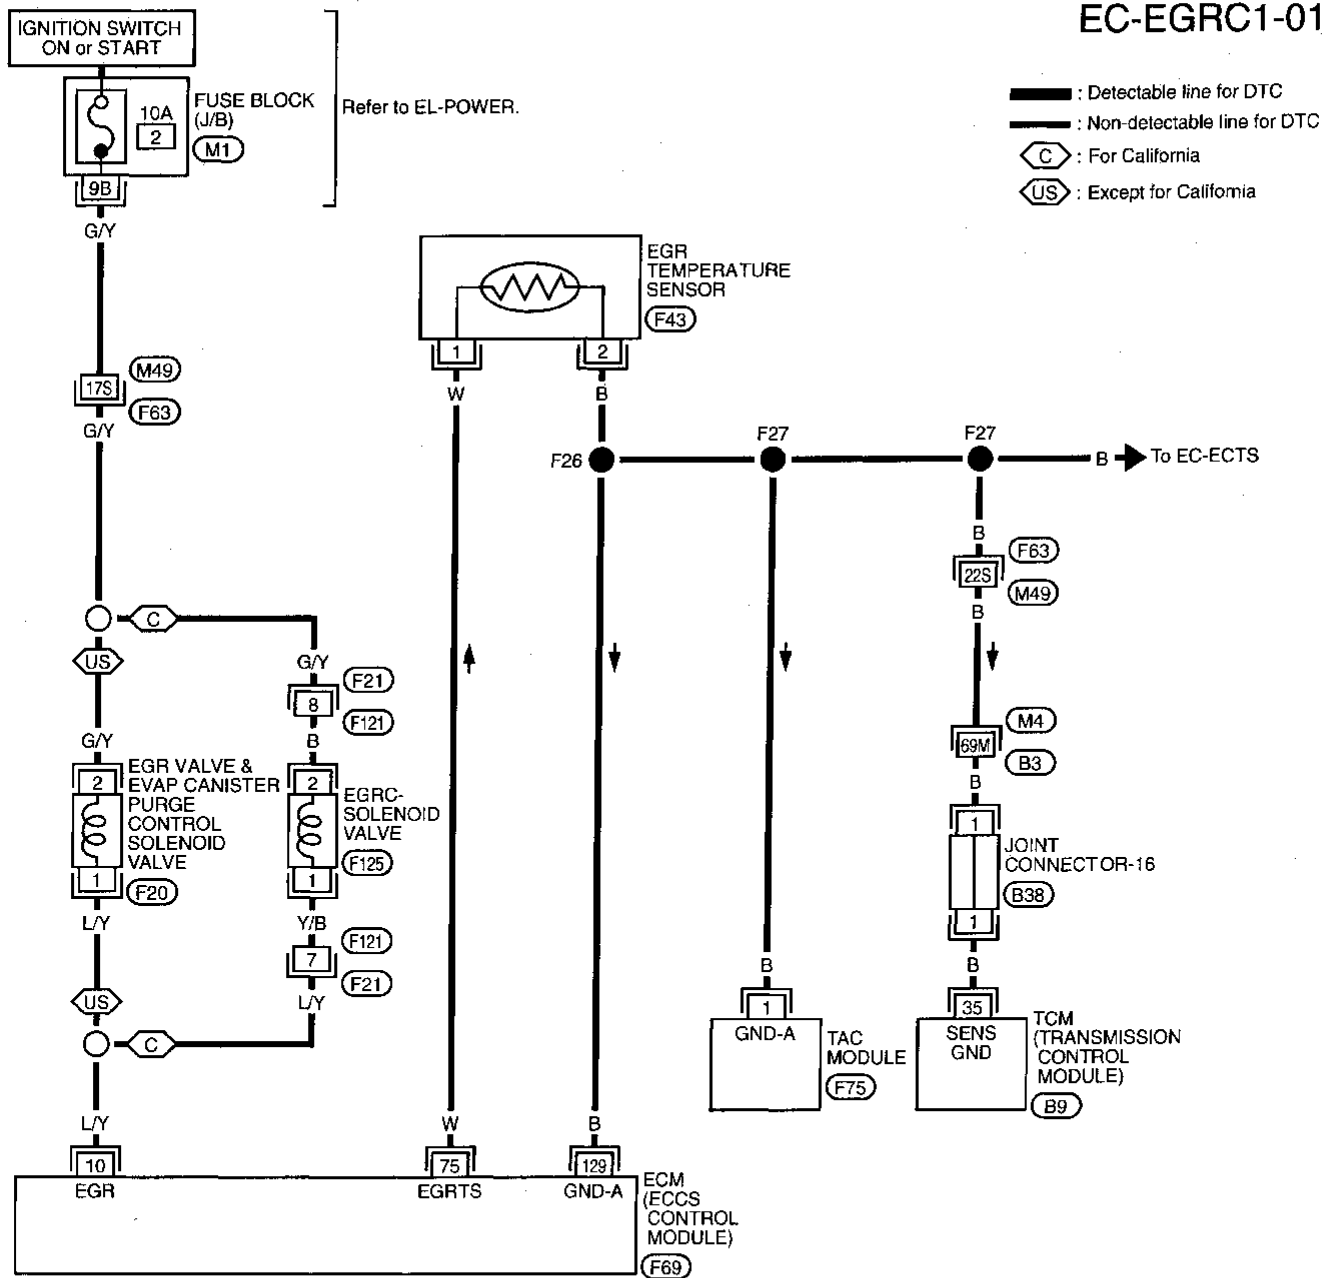

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

DIAGNOSTIC PROCEDURE

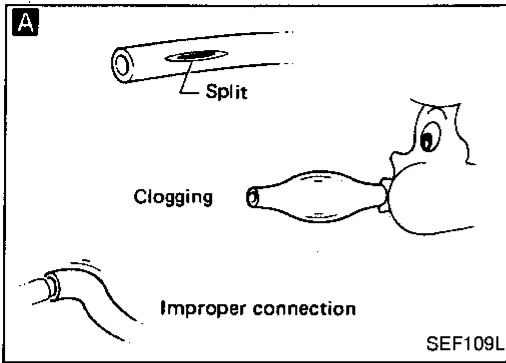

INSPECTION START

A
CHECK VACUUM HOSE.
 Check vacuum hose for clogging, cracks or improper connection or misconnecting. Refer to "Vacuum Hose Drawing", EC-18, 19.

NG → Repair it.

OK

B
■ EGRC SOL/V CIRCUIT ■
 DOES THE SOLENOID VALVE MAKE AN OPERATING SOUND EVERY 3 SECONDS?
 NEXT NO YES

MEF957D

B
CHECK COMPONENT
 (EGRC-solenoid valve for California or EGR valve & EVAP canister purge control solenoid valve except for California).
 1. Turn ignition switch "ON".
 2. Perform "EGRC SOL/V CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

NG → Repair or replace EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California) or repair circuit.

OR
 1. Turn ignition switch "ON".
 2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT and check operating sound.

B
■ ACTIVE TEST ■
 EGRC SOL/V (EGR) ON FLOW
 ::::::::::: MONITOR :::::::::::
 CMPS•RPM (POS) 0rpm
 THRTL POS SEN 0.58V
 CLSD THL/P SW ON
 ON ON/OFF OFF

SEF633U

OR
 1. Turn ignition switch "OFF".
 2. Lift up drive wheels.
 3. Start engine (TCS switch "OFF") and shift to "D" position.
 4. Keep revving engine up from idle to 3,000 rpm.
 5. When disconnecting and reconnecting the solenoid valve harness connector, make sure that the solenoid valve makes operating sound. (The DTC or the 1st trip DTC for the EGRC-solenoid or EGR valve and EVAP canister purge control solenoid valve will be displayed, but ignore it.)

OK

CHECK COMPONENT
 (EGRC-solenoid valve for California or EGR valve & EVAP canister purge control solenoid valve except for California). Refer to "COMPONENT INSPECTION", EC-399.

NG → Replace EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California).

OK

CHECK COMPONENT
 (EVAP canister). Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EVAP canister.


OK

Ⓐ

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

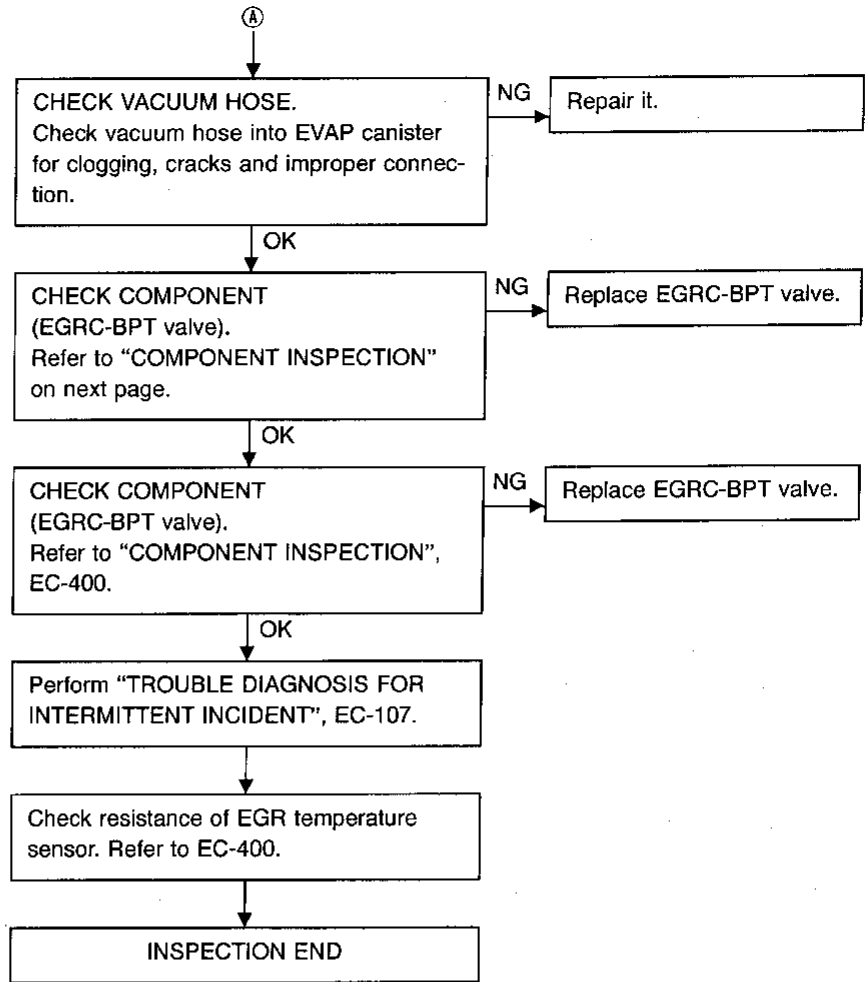

TROUBLE DIAGNOSIS FOR DTC P1402

EGR Function (Open) (Cont'd)

COMPONENT INSPECTION



EGR valve

- Apply vacuum to EGR valve vacuum port with a hand vacuum pump.

EGR valve spring should lift.

- Check for sticking.

If NG, repair or replace EGR valve.

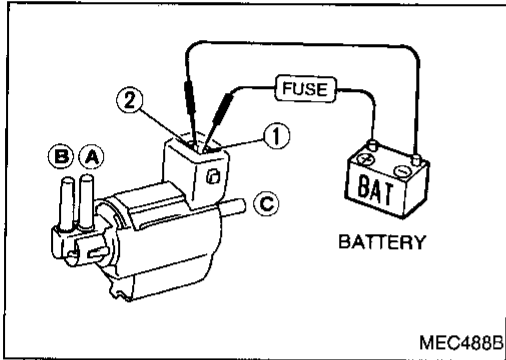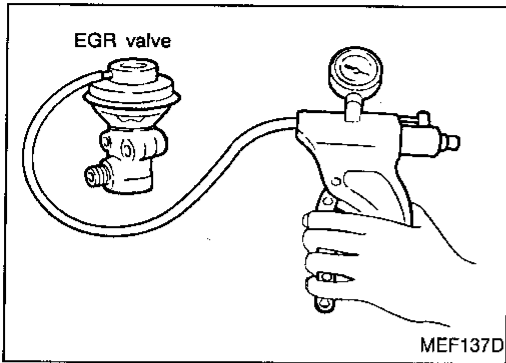


EGRC-solenoid valve (for California) or EGR valve & EVAP canister purge control solenoid valve (except for California)

Check solenoid valve, following the table as shown below:

Conditions	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

If NG, replace the solenoid valve.

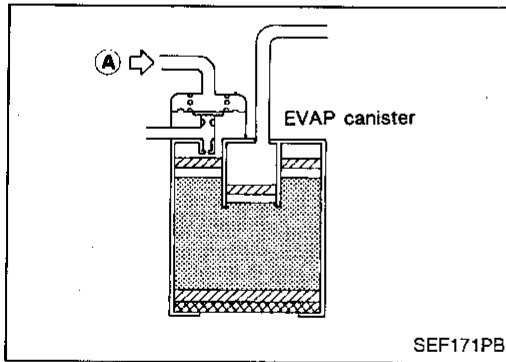

EVAP canister (except for California)

Gently blow air from (A).

No leakage should exist.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1402




EGR Function (Open) (Cont'd)

EGR temperature sensor

Check resistance change and resistance value.

EGR temperature °C (°F)	Voltage* (V)	Resistance (MΩ)
0 (32)	4.61	0.68 - 1.11
50 (122)	2.53	0.092 - 0.12
100 (212)	0.87	0.017 - 0.024

If NG, replace EGR temperature sensor.

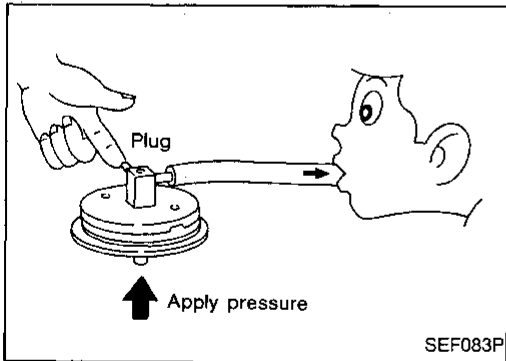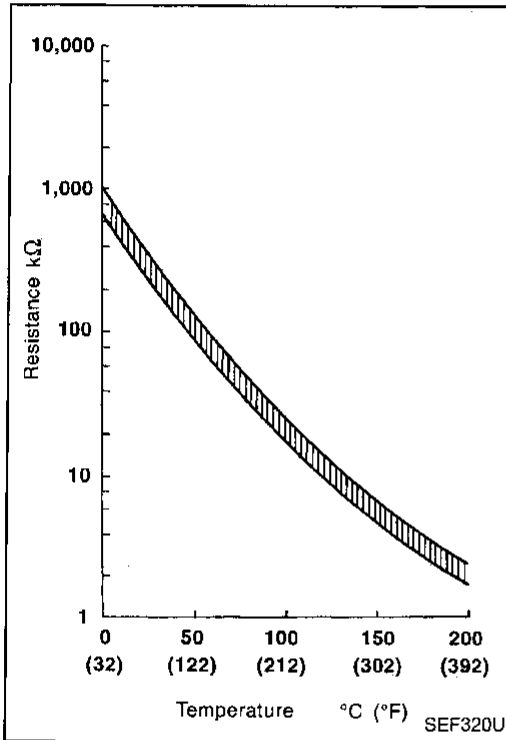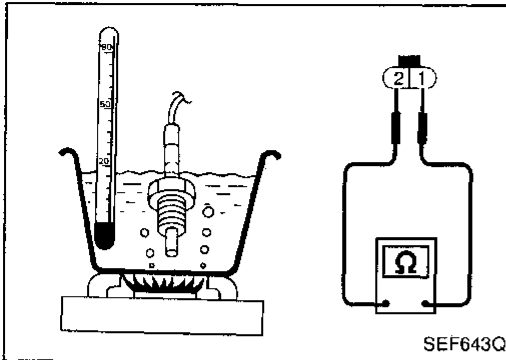

EGRC-BPT valve

1. Plug one of two ports of EGRC-BPT valve.
2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve.
3. If a leakage is noted, replace the valve.


TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California)

Note: If both DTC P1440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first. (See EC-431.)

ON BOARD DIAGNOSIS LOGIC

This diagnosis detects leaks in the EVAP purge line using of vapor pressure in the fuel tank. The EVAP canister vent control valve is closed to shut the EVAP purge line. The vacuum cut valve bypass valve will then be opened to clear the line between the fuel tank and the EVAP canister purge control valve. The EVAP control system pressure sensor can now monitor the pressure inside the fuel tank. If pressure increases, the ECM will check for leaks in the line between the vacuum cut valve and EVAP canister purge control valve.

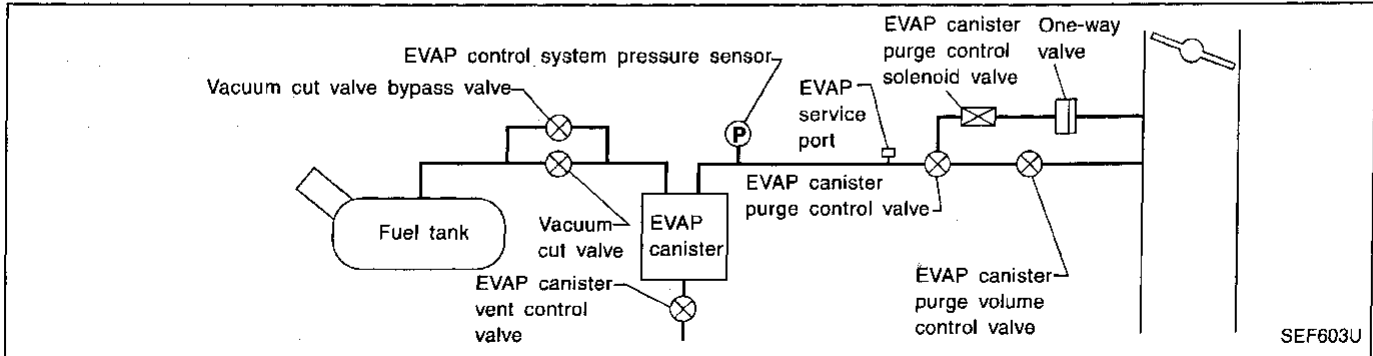

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1440 0213	<ul style="list-style-type: none"> ● EVAP control system has a leak. ● EVAP control system does not operate properly. 	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap. ● Leak is in line between intake manifold and EVAP canister purge control valve. ● Foreign matter caught in EVAP canister vent control valve. ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent. ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge control valve ● EVAP canister purge volume control valve ● EVAP canister purge control solenoid valve ● Absolute pressure sensor ● Tank fuel temperature sensor ● MAP/BARO switch solenoid valve ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister is saturated with water.

CAUTION:

- Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine rubber tube as a replacement.

GI
 MA
 EM
 LC
 EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)




DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Never use compressed air or high pressure pump. Otherwise, EVAP system may be damaged.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- Always remove service port adapter from service port when applying air up to 0.69 to 1.38 kPa (5.17 to 10.34 mmHg, 0.20 to 0.41 inHg).
- During the test, clamp the EVAP hose tightly as shown at left.
- When clamping the hose, do not clamp other than middle of the hose to prevent loose or damage of the hose.
- If both DTC P1440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first. (See EC-431.)

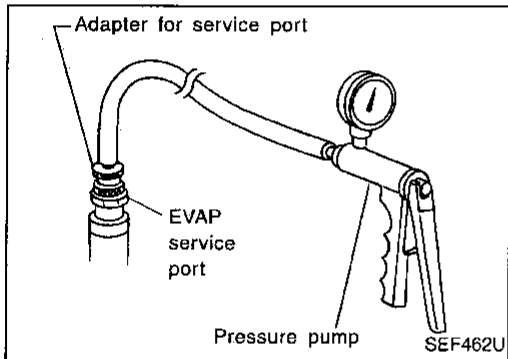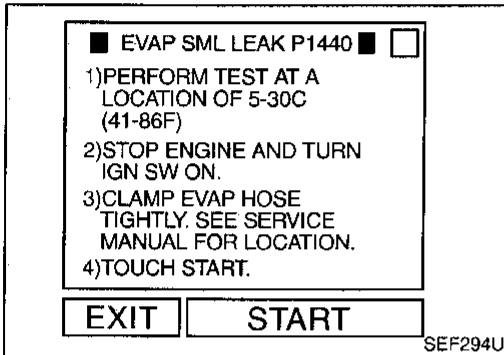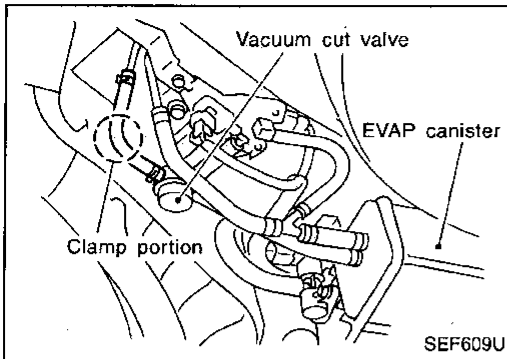

- 1) Turn ignition switch "OFF".
- 2) Clamp the EVAP hose as shown left.
- 3) Turn ignition switch "ON".
- 4) Select "EVAP SML LEAK P1440" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
Follow the instruction displayed.
- 5) Make sure that "OK" is displayed.
If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-404.

OR

- Be sure to read the explanation of "Driving pattern" on EC-48 before driving vehicle.
- It is better that the fuel level is low.



- 1) Turn ignition switch "OFF".
- 2) Clamp the EVAP hose as shown left.
- 3) Start engine.
- 4) Drive vehicle according to "Driving pattern", EC-48.
- 5) Stop vehicle.
- 6) Select "MODE 1" with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 7) Turn ignition switch "OFF" and wait at least 5 seconds.
- 8) Start engine.

It is not necessary to cool engine down before driving.

- 9) Drive vehicle again according to the "Driving pattern", EC-48.
- 10) Stop vehicle.
- 11) Select "MODE 3" with GST.
 - If P1447 is displayed on the screen, go to "TROUBLE DIAGNOSIS FOR DTC P1447", EC-424.
 - If P0440 is displayed on the screen, go to "DIAGNOSTIC PROCEDURE", EC-288.
 - If P1440 is displayed on the screen, go to "TROUBLE DIAGNOSIS FOR DTC P1440", EC-404.
 - If P0440 and P1440 are not displayed on the screen, go to the following step.

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

12) Select "MODE 1" with GST.

- If SRT of EVAP system is set, the result will be OK.
- If SRT of EVAP system is not set, go to step 6).

OR

- **Be sure to read the explanation of "Driving pattern" on EC-48 before driving vehicle.**
- **It is better that the fuel level is low.**



- 1) Turn ignition switch "OFF".
- 2) Clamp the EVAP hose as shown.
- 3) Start engine.
- 4) Drive vehicle according to "Driving pattern", EC-48.
- 5) Stop vehicle.
- 6) Turn ignition switch "OFF" and wait at least 5 seconds.
- 7) Perform the step 1) to 4) again.
- 8) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA






EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

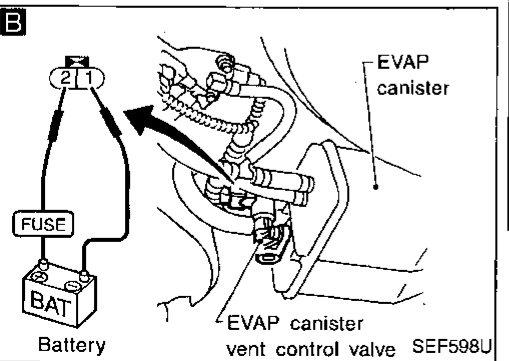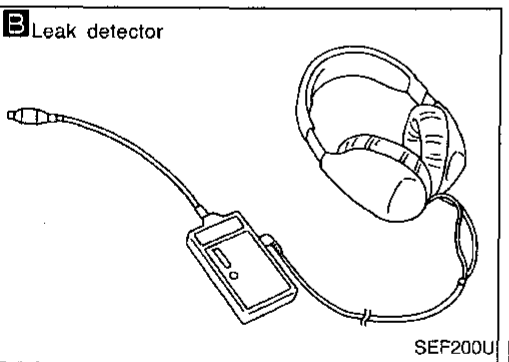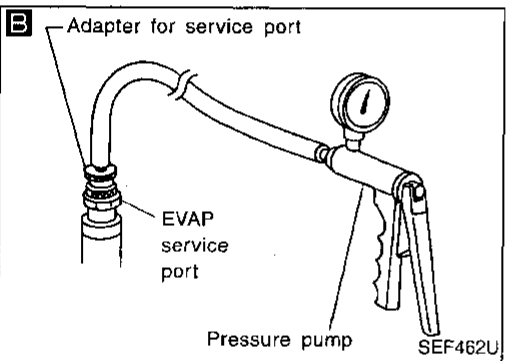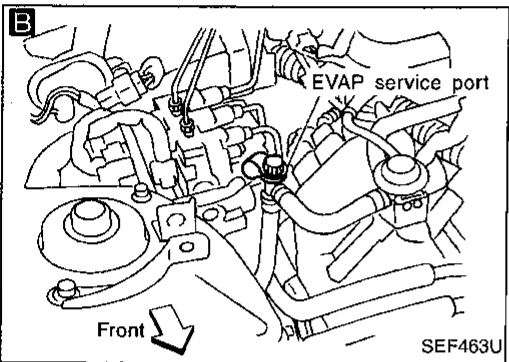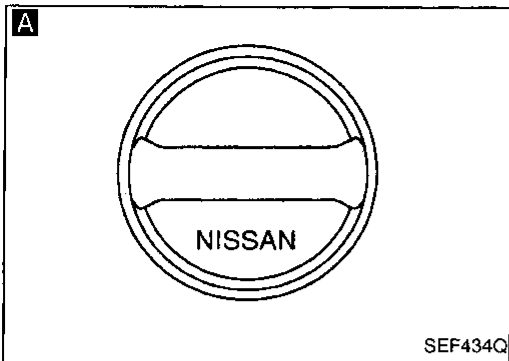

INSPECTION START

A
CHECK FUEL FILLER CAP.
 1. Turn ignition switch "OFF".
 2. Check for genuine fuel filler cap design.
 3. Check for air releasing sound while opening the fuel filler cap.
 4. Make sure there are no foreign objects around the fuel filler cap so that the cap can close properly.
 5. Check fuel tank vacuum relief valve. Refer to "EVAPORATIVE EMISSION SYSTEM", EC-27.

NG
 1. Open fuel filler cap, then clean cap and fuel filler neck threads using air blower and retighten until the ratcheting sound is heard.
 2. Replace with genuine fuel filler cap.

OK

B
CHECK FOR EVAP LEAK.
 To locate the EVAP leak, do the following.
 1. Install the EVAP service port adapter and the pressure pump securely.
 2. Turn ignition switch "ON". Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT.
 3. Touch "START" and apply positive pressure to the EVAP line.
 4. Using EVAP leak detector, locate the leak. Refer to the instruction manual for more details about the leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.
 • **Never use compressed air or a high pressure pump.**
 • **Improper installation of service port may cause a leak.**





NG
 Repair or replace.

OR
 2. Turn ignition switch "OFF".
 3. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
 4. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)
 5. Pressurize the EVAP line using pressure gauge with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and service port adapter.
 6. Locate the leak using a leak detector. Refer to the instruction manual for more details about the leak detector. Refer to "Evaporative Emission Line Drawing", EC-29.
 • **Never use compressed air or a high pressure pump.**
 • **Improper installation of service port may cause a leak.**

OK
 A

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

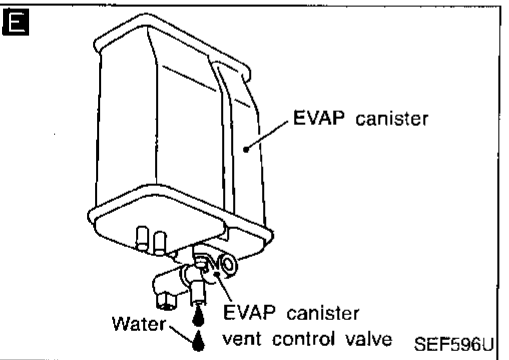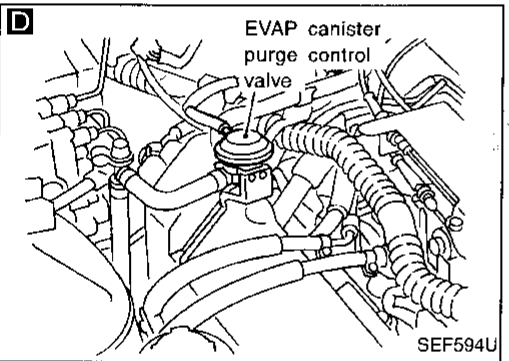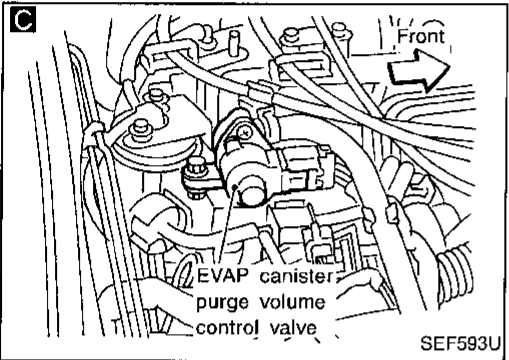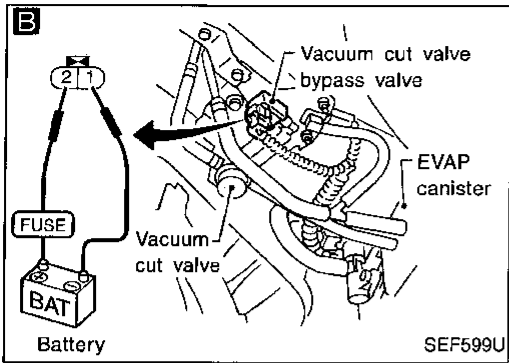

C

CHECK COMPONENT
(EVAP canister purge volume control valve).
Refer to "COMPONENT INSPECTION", EC-408.

NG → Replace EVAP canister purge volume control valve.

OK →

D

CHECK COMPONENT
(EVAP canister purge control valve).
Refer to "COMPONENT INSPECTION", EC-409.

NG → Replace EVAP canister purge control valve.

OK →

E

CHECK COMPONENT AND CIRCUIT
(EVAP canister vent control valve, O-ring and water separator).
Refer to "COMPONENT INSPECTION", EC-409 and "P0446 EVAP canister vent control valve for California", EC-301.

NG → Repair or replace EVAP canister vent control valve and O-ring or harness/connectors.

OK →

F

CHECK IF EVAP CANISTER SATURATED WITH WATER.

1. Remove EVAP canister with EVAP canister vent control valve attached.
2. Check if water will drain from the EVAP canister. If it will, weigh the EVAP canister with the vent control valve attached. If the weight is:
More than 1.8 kg (4.0 lb) → NG
Less than 1.8 kg (4.0 lb) → OK

NG → Check the following.

1. Visually check the EVAP canister for damage.
2. Check hose connection between EVAP canister and water separator for clogging and poor connection.
3. Check water separator. Refer to "COMPONENT INSPECTION", EC-422.







If NG, repair hose or replace EVAP canister or water separator.

OK →

ⓑ


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

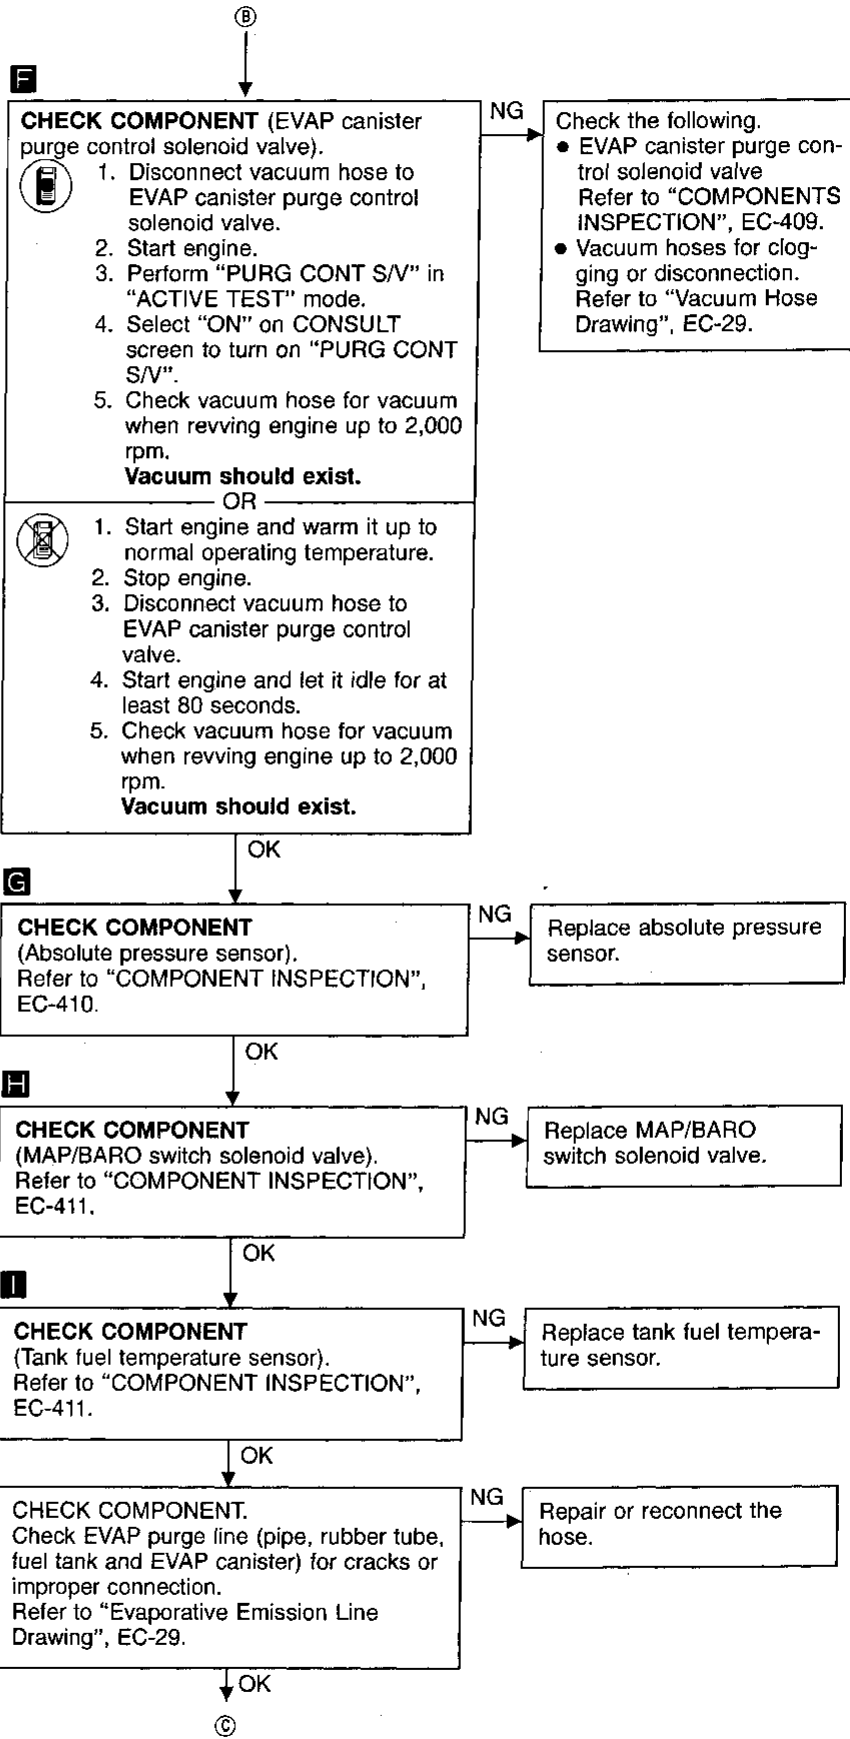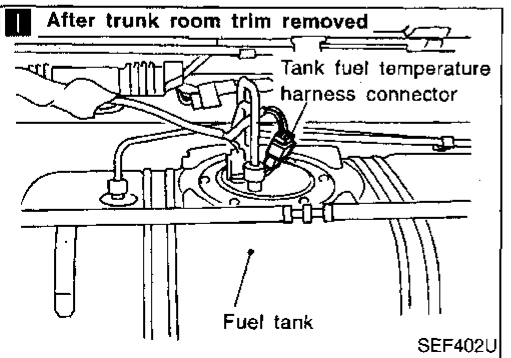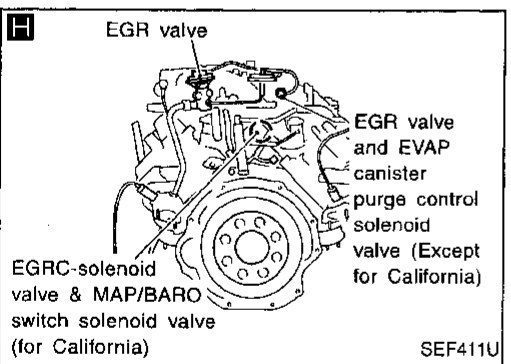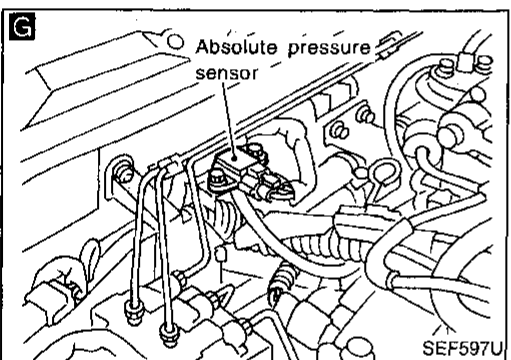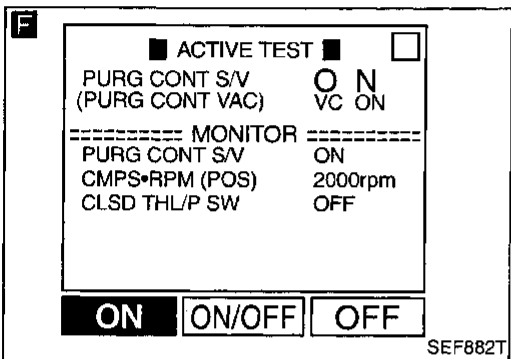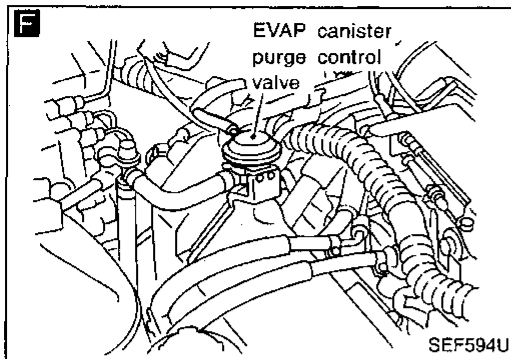

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

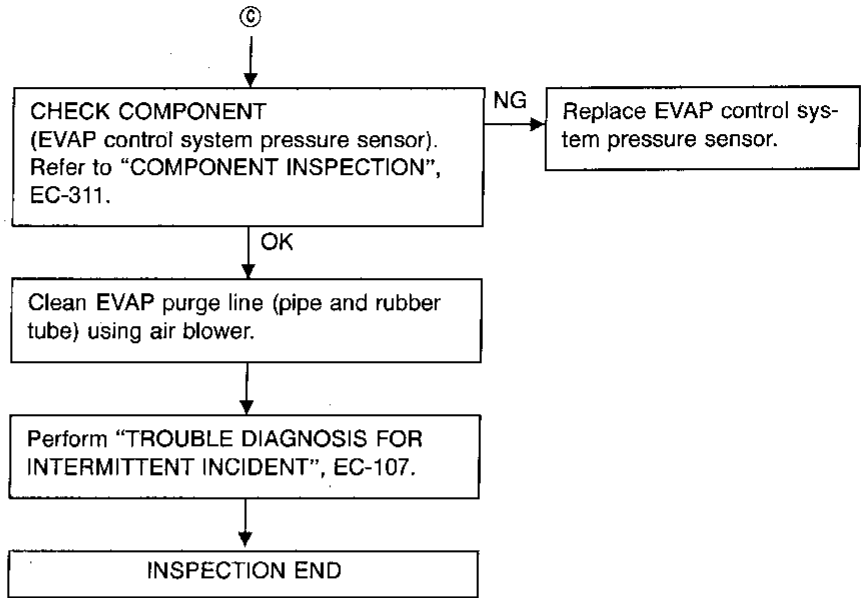

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

COMPONENT INSPECTION

EVAP canister purge volume control valve



1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥

Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]

3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON".
6. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the valve opening.
If NG, replace the EVAP canister purge volume control valve.

OR




1. Disconnect EVAP canister purge volume control valve harness connector.
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③
terminal ⑤ and terminals ④, ⑥


Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)]


3. Reconnect EVAP canister purge volume control valve harness connector.
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve.
(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.)
5. Turn ignition switch "ON" and "OFF". Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the ignition switch position.
If NG, replace the EVAP canister purge volume control valve.

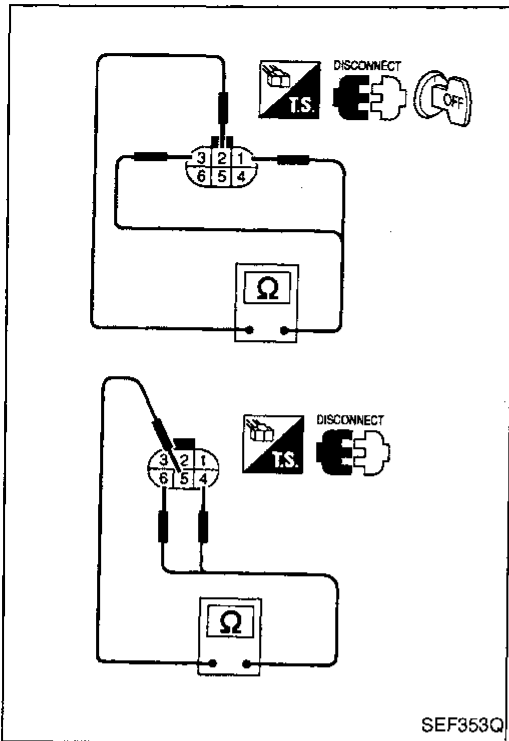


SEF353Q

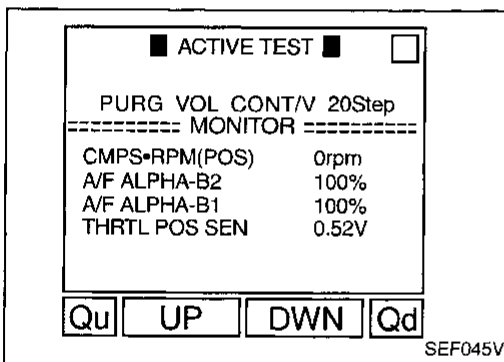

SEF045V

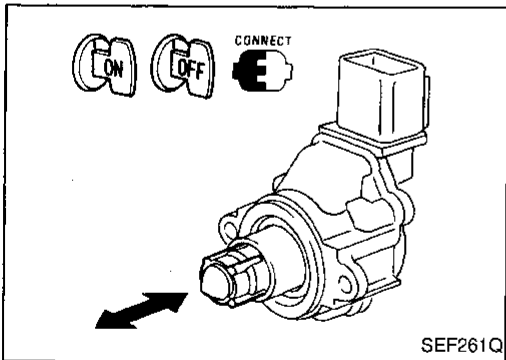

SEF261Q

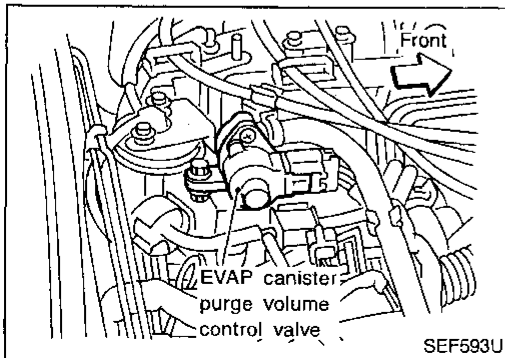


SEF593U

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)


EVAP canister purge control solenoid valve

Check air passage continuity.

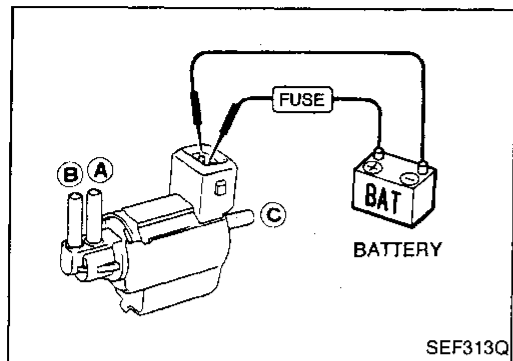

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes


If NG, replace solenoid valve.

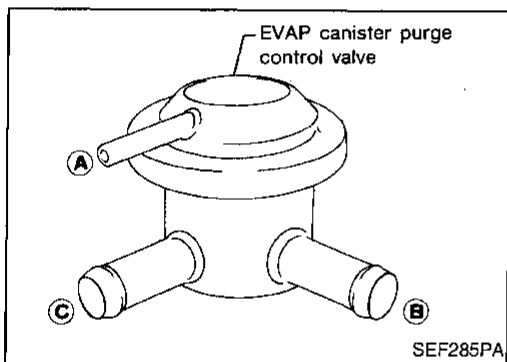

EVAP canister purge control valve

Check EVAP canister purge control valve as follows:

1. Blow air in port (A), (B) and (C), then ensure that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-100 to -150 mmHg, -3.94 to -5.91 inHg)]
Blow air in port (C) and ensure free flow out of port (B).

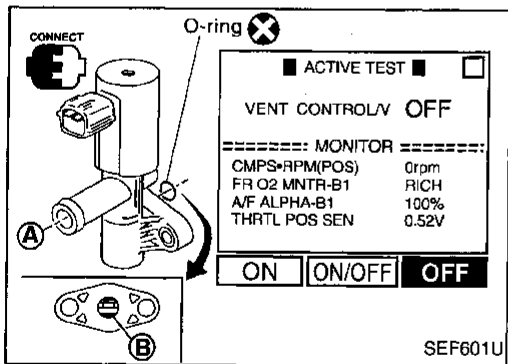


EVAP canister vent control valve

Check air passage continuity.

- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR

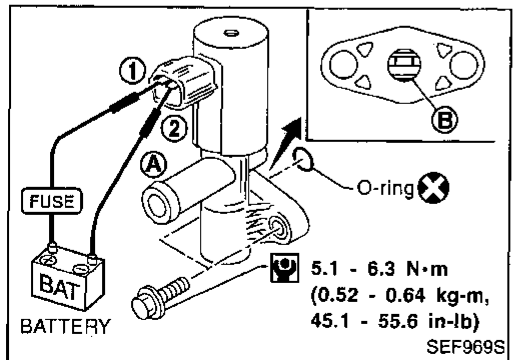

Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals (1) and (2)	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If the portion (B) is rusted, replace EVAP canister vent control valve.
Make sure new O-ring is installed properly.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

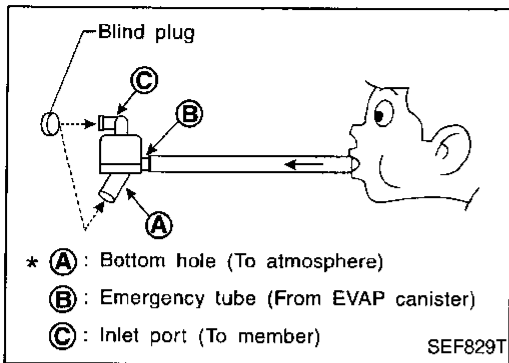


Water separator

1. Check visually for insect nests in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that (A) and (C) are not clogged by blowing air into (B) with (A), and then (C) plugged.
5. In case of NG in items 2 - 4, replace the parts.

NOTE:


Do not disassemble water separator.

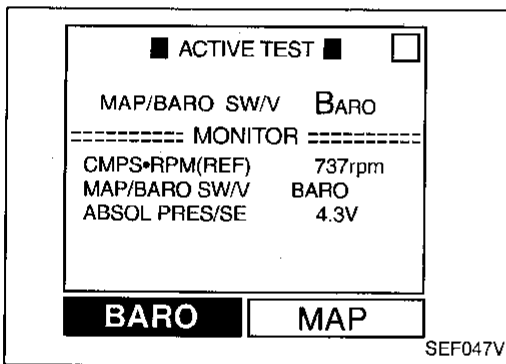

Absolute pressure sensor


1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

MAP/BARO	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

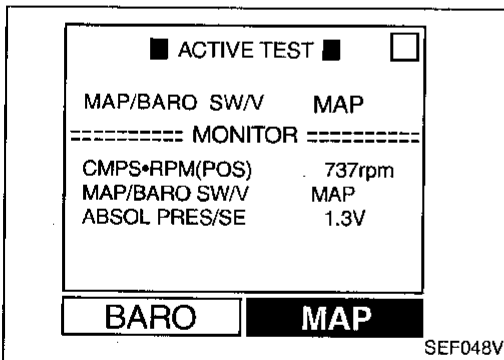

- OR
2. Turn ignition switch "ON" and check output voltage between ECM terminals (64) and (128) (ECM ground).
The voltage should be more than 2.6V.
 3. Start engine and wait at least 5 seconds and check voltage between terminals (64) and (128).
The voltage should be less than the voltage in step 2.

4. Turn ignition switch "OFF".
5. Remove absolute pressure sensor with its harness connector connected.
6. Remove hose from absolute pressure sensor.
7. Turn ignition switch "ON" and check output voltage between terminal (64) and (128) (ECM ground).
The voltage should be 3.2 to 4.8V.
8. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.
The voltage should be 1.0 to 1.4V lower than the value measured in step 7.




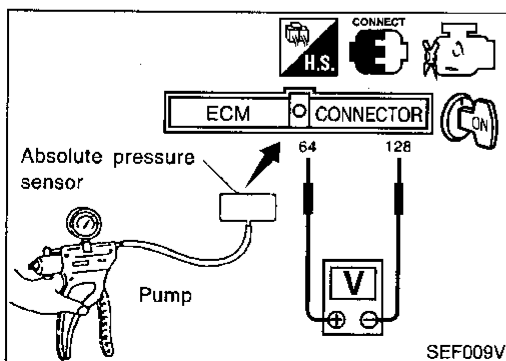


TROUBLE DIAGNOSIS FOR DTC P1440

Evaporative Emission (EVAP) Control System (Small Leak) (Positive Pressure) (For California) (Cont'd)

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -93.3 kPa (-700 mmHg , -27.56 inHg) or over 101.3 kPa (760 mmHg , 29.92 inHg) of pressure.
9. If NG, replace absolute pressure sensor.

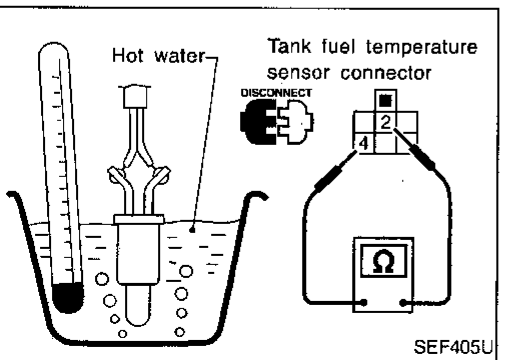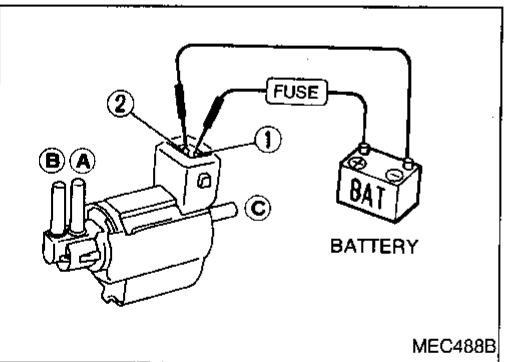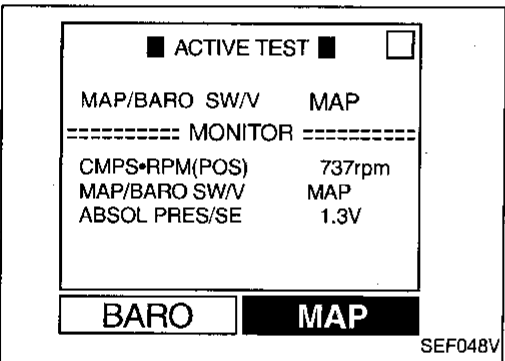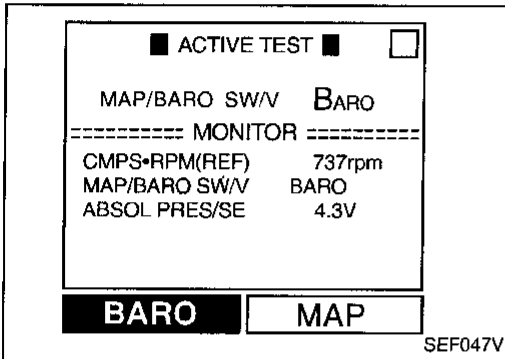

MAP/BARO switch solenoid valve

1. Start engine and warm it up sufficiently.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT display

MAP/BARO SW/V	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

- Time for voltage to change

MAP/BARO SW/V	Time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

4. If NG, replace solenoid valve.

OR

1. Remove MAP/BARO switch solenoid valve.
2. Check air passage continuity.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals ① and ②	Yes	No
No supply	No	Yes

3. If NG, replace solenoid valve.

Tank fuel temperature sensor


Check resistance by heating with hot water or heat gun as shown in the figure.

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90


If NG, replace tank fuel temperature sensor.

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California)

SYSTEM DESCRIPTION

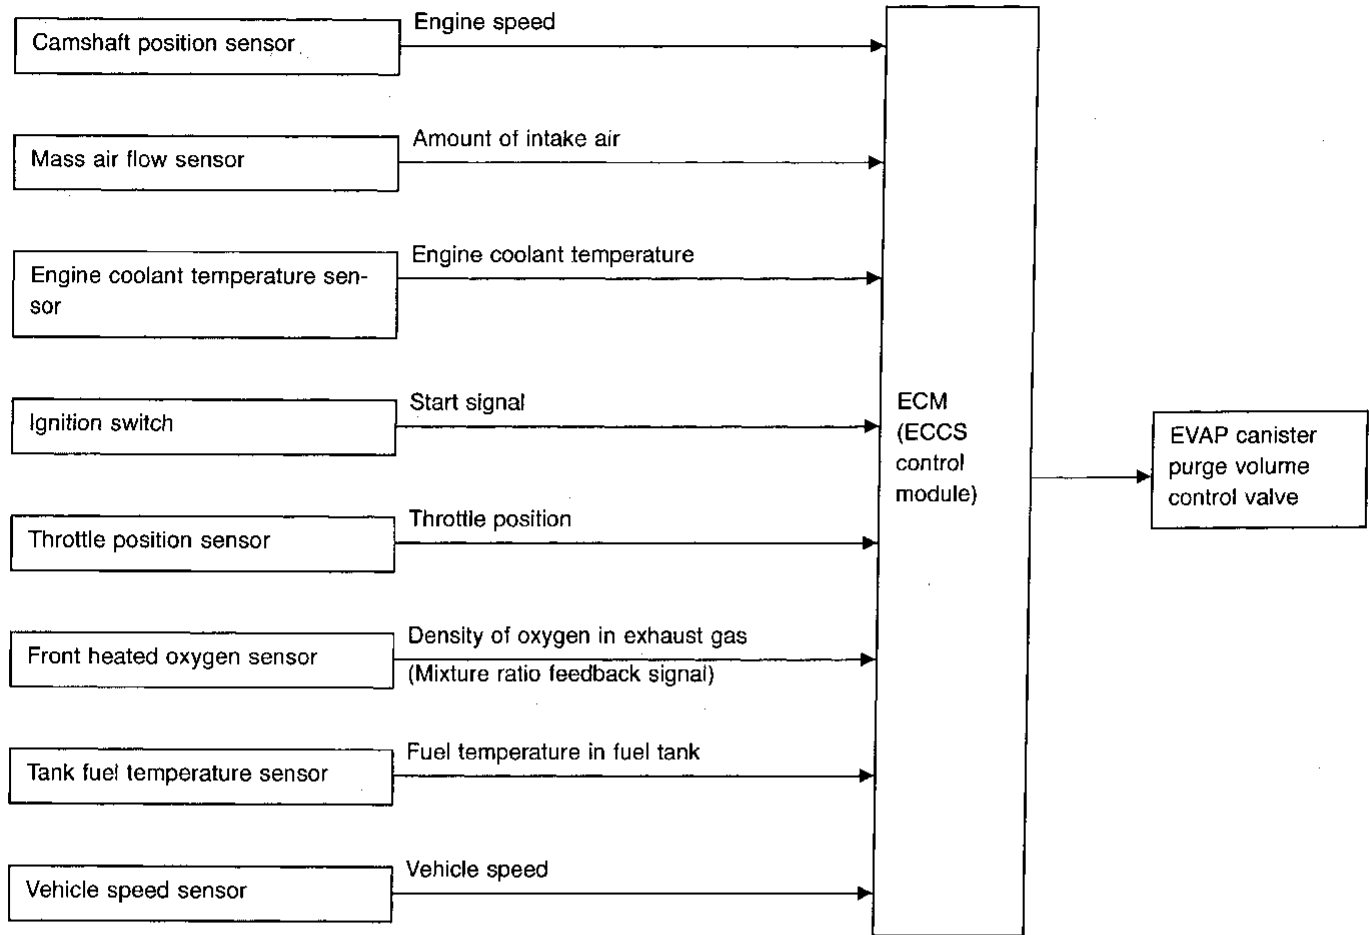

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control valve changes to control the flow rate. A built-in step motor moves the valve in steps corresponding to the ECM output pulses. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

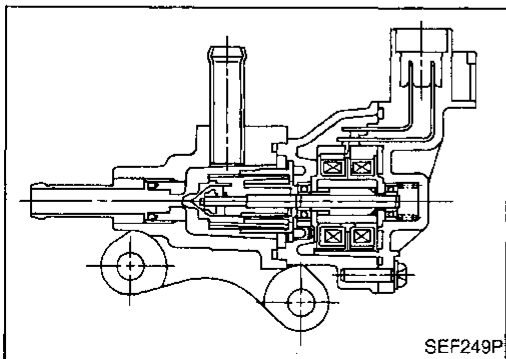

COMPONENT DESCRIPTION

The EVAP canister purge volume control valve uses a step motor to control the flow rate of fuel vapor from the EVAP canister. This motor has four winding phases. It operates according to the output pulse signal of the ECM. Two windings are turned ON and OFF in sequence. Each time an ON pulse is issued, the valve opens or closes, changing the flow rate. When no change in the flow rate is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

TROUBLE DIAGNOSIS FOR DTC P1444

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	Idle	0 step
	Vehicle running (Shift lever "1")	—

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (12B) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
124	W/B	ECCS relay (Self-shutoff)	Engine is running.	0 - 1V
			Ignition switch "OFF"	
			└ For a few seconds after turning ignition switch "OFF"	
			Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
			└ A few seconds passed after turning ignition switch "OFF"	
130	R/G	Power supply for ECM	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
131				
123	W/L	Current return	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
28	BR/Y	EVAP canister purge volume control valve	Engine is running.	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)
29	G		└ Idle speed	
35	G/OR	EVAP canister purge volume control valve	Engine is running.	0 - 0.4V or BATTERY VOLTAGE (11 - 14V)
36	L/B		└ Idle speed	

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1444 0214	<ul style="list-style-type: none"> The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control valve is completely closed. 	<ul style="list-style-type: none"> EVAP control system pressure sensor EVAP canister purge volume control valve (The valve is stuck open.) EVAP canister purge control valve Hoses (Hoses are connected incorrectly or clogged.) EVAP canister vent control valve

TROUBLE DIAGNOSIS FOR DTC P1444

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

TESTING CONDITION:

Always perform test at temperature of 5°C (41°F) or more.

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Turn ignition switch "OFF" and wait at least 5 seconds.
 - 3) Turn ignition switch "ON".
 - 4) Select "PURG CNV & S/V P1493" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
 - 5) Touch "START".
 - 6) Start engine (TCS switch "OFF") and let it idle for at least 90 seconds.
 - 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take for at least 30 seconds.)
Selector lever: Suitable position
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
CMPS-RPM (POS): 1,000 - 2,100 rpm
B/FUEL SCHDL: 2 - 4.8 ms
 - 8) Stop vehicle with engine running.
 - 9) Select "PURG VOL C/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
 - 10) Touch "START".
 If "COMPLETED" is displayed, go to step 12).
 - 11) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take for at least 20 seconds.)
Selector lever: Suitable position
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
CMPS-RPM (POS): 1,000 - 2,100 rpm
B/FUEL SCHDL: 2 - 4.8 ms
- If "TESTING" is not displayed after 5 minutes, retry from step 2).
- 12) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-416.

■ PURG CNV&S/V P1493 ■

THIS SUPPORT FUNCTION IS FOR DTC P1493. SEE THE SERVICE MANUAL ABOUT THE OPERATING CONDITION FOR THIS DIAGNOSIS.

EXIT START

SEF610U

■ PURG CNV&S/V P1493 ■

***** OK *****

■ SELF-DIAG RESULTS ■

**** NO FAILURE ****

END PRINT

SEF611U

■ PURG VOL CNV P1444 ■

THIS SUPPORT FUNCTION IS FOR DTC P1447. SEE THE SERVICE MANUAL ABOUT THE OPERATING CONDITION FOR THIS DIAGNOSIS.

EXIT START

SEF612U

■ PURG VOL CNV P1444 ■

***** OK *****

■ SELF-DIAG RESULTS ■

**** NO FAILURE ****

END PRINT

SEF613U

TROUBLE DIAGNOSIS FOR DTC P1444

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)


ENGINE SPD	825RPM
COOLANT TEMP	69°C
VEHICLE SPD	0MPH
IGN ADVANCE	8.0°
CALC LOAD	28.2%
MAP	36KPaA
MAF	5.20gm/s
THROTTLE POS	0.0%
INTAKE AIR	27°C
FUEL SYS #1	OLDRIVE
FUEL SYS #2	UNUSED
SHORT FT #1	0.8%
LONG FT #1	0.0%
O2S B1 S1	0.200V
O2FT B1 S1	0.8%
O2S B1 S2	0.010V

SEF519R

- OR
- 1) Lift up vehicle.
 - 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
 - 3) Select "MODE 1" with GST.
 - 4) Check coolant temperature.
Coolant temperature: 40 - 100°C (104 - 212°F)
 Be sure that water temperature does not exceed 100°C. If it becomes higher than 100°C, cool down the engine and perform the procedure again from the beginning.
 - 5) Turn ignition switch "OFF" and wait at least 5 seconds.
 - 6) Turn ignition switch "ON" and wait at least 15 seconds.
 - 7) Restart engine and let it idle for at least 80 seconds.
 - 8) Maintain the following conditions for at least 80 seconds.
Gear position: Suitable gear position
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
Engine speed: 1,000 - 2,100 rpm
Coolant temperature: 40 - 100°C (104 - 212°F)
 - 9) Select "MODE 7" with GST.

NOTE:

- Hold the accelerator pedal as steady as possible during driving in steps 8.
- If the driving conditions are not satisfied in steps 8, restart the procedure.
- It is better that the fuel level is low.

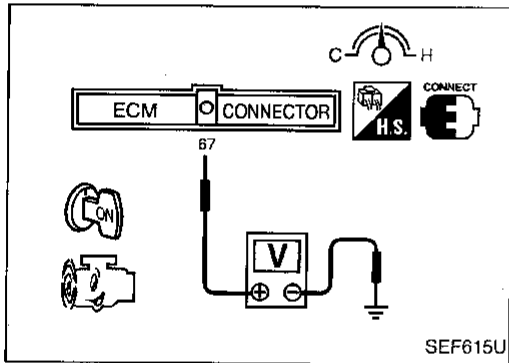

- OR
- 1) Lift up vehicle.
 - 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
 - 3) Check voltage between ECM terminal ⑥ and ground
Voltage: 0.8 - 1.5V
 Perform the following procedure before the voltage drops below 0.8V. If the voltage drops below 0.8V, cool down the engine and perform the entire procedure all over again.
 - 4) Turn ignition switch "OFF" and wait at least 5 seconds.
 - 5) Turn ignition switch "ON" and wait at least 15 seconds.
 - 6) Restart engine and let it idle for at least 80 seconds.
 - 7) Maintain the following conditions for at least 80 seconds.
Gear position: Suitable gear position
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
Engine speed: 1,000 - 2,100 rpm
Check voltage between ECM terminal ⑥ and ground: 0.8 - 1.5V
 - 8) Turn ignition switch "OFF", wait at least 5 seconds, and then turn "ON".
 - 9) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

NOTE:

- Hold the accelerator pedal as steady as possible during driving in steps 7.
- If the driving conditions are not satisfied in steps 7, restart the procedure.
- It is better that the fuel level is low.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT





HA

EL

IDX

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)

DIAGNOSTIC PROCEDURE

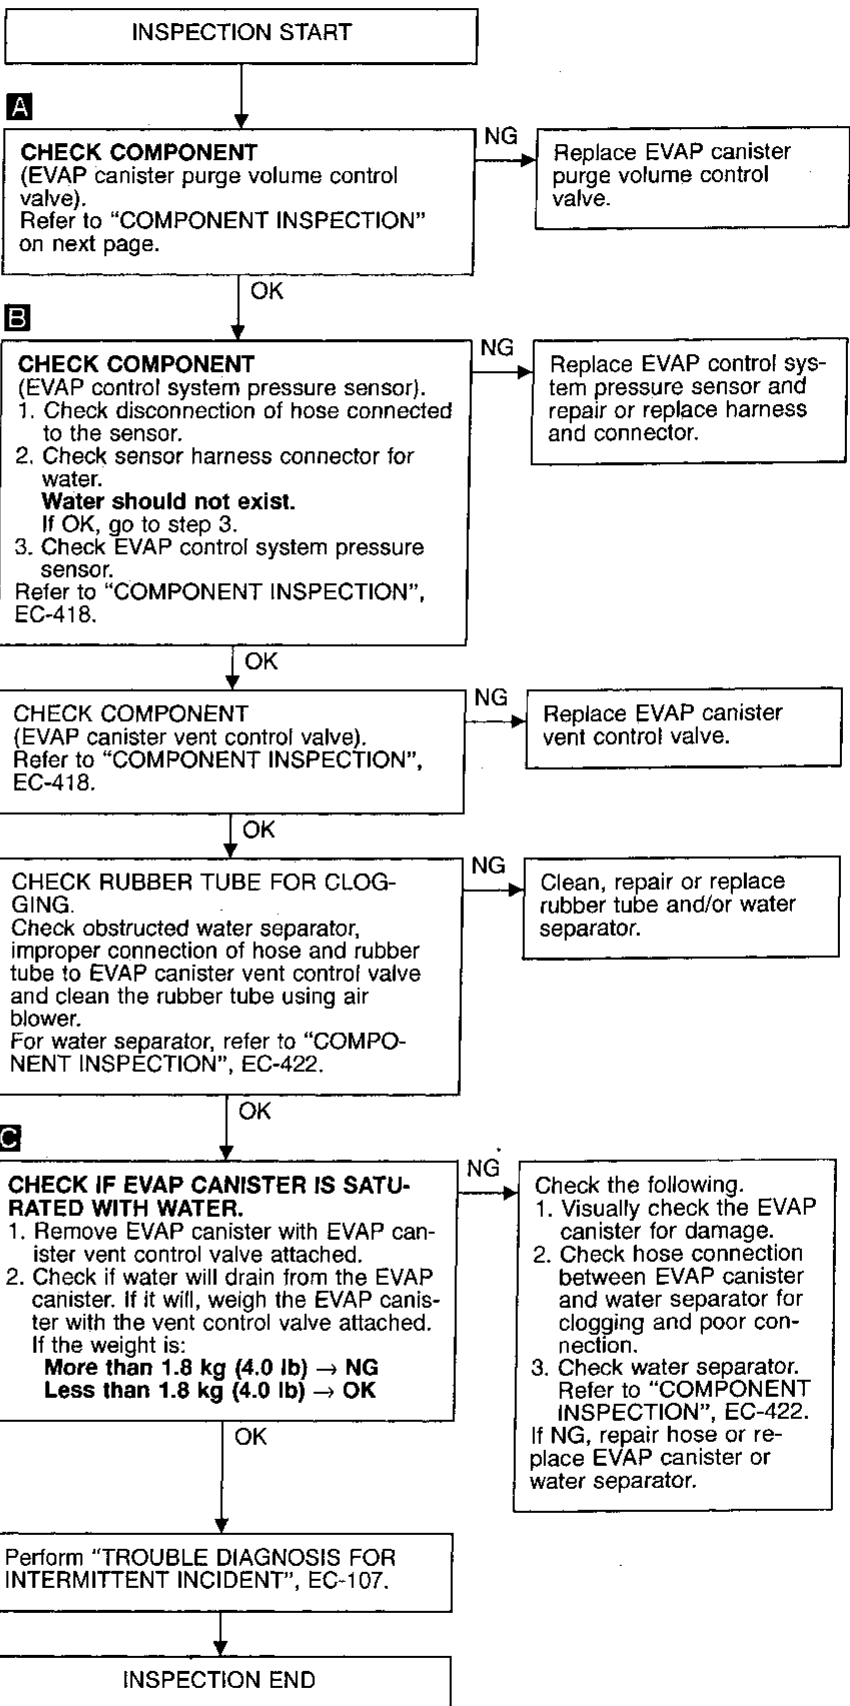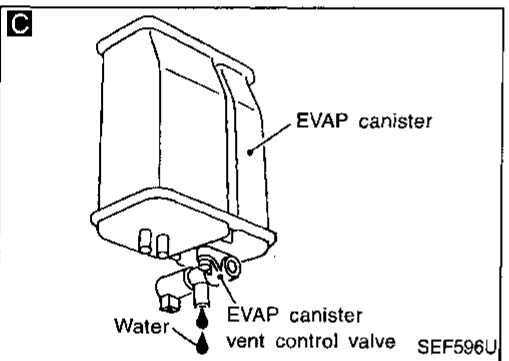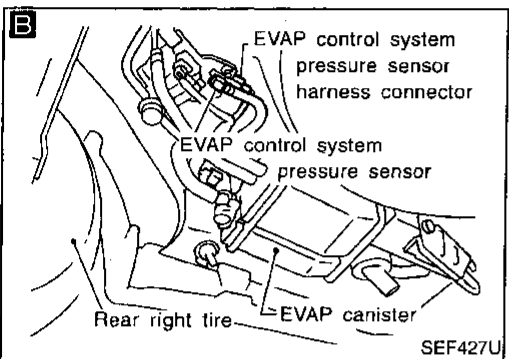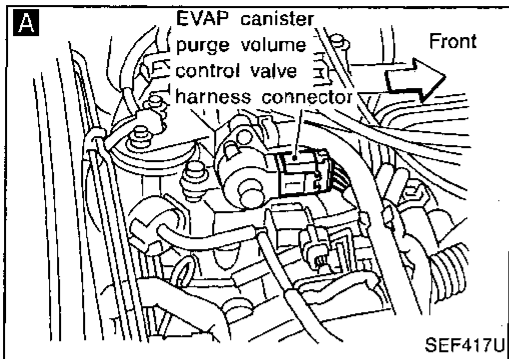


TROUBLE DIAGNOSIS FOR DTC P1444


Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)

COMPONENT INSPECTION


EVAP canister purge volume control valve

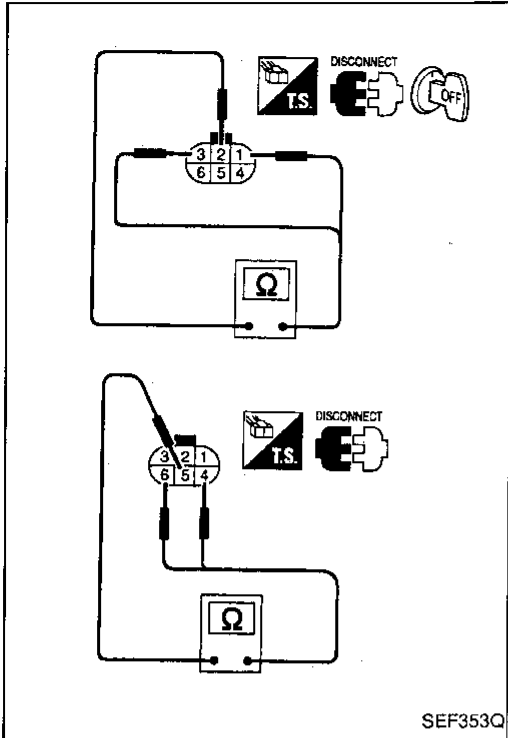


SEF353Q

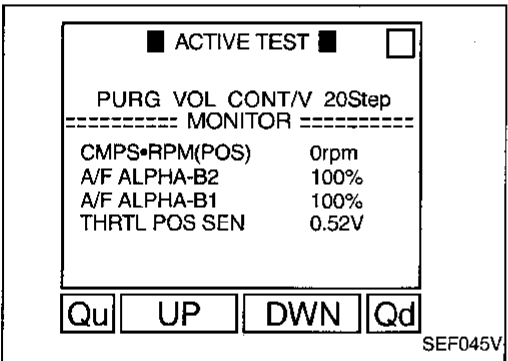

SEF045V

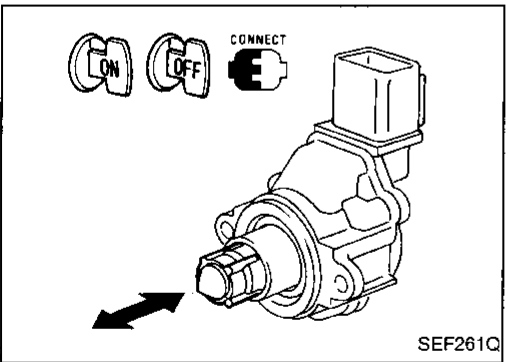

SEF261Q

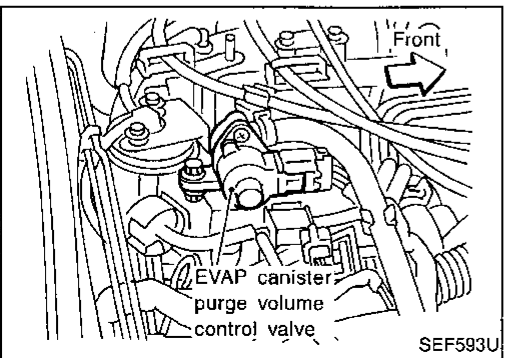

SEF593U



1. Disconnect EVAP canister purge volume control valve harness connector. GI
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③ MA
terminal ⑤ and terminals ④, ⑥ EM

Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)] EM

3. Reconnect EVAP canister purge volume control valve harness connector. LC
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve. LC

(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.) EC

5. Turn ignition switch "ON". FE
6. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the valve opening. AT

If NG, replace the EVAP canister purge volume control valve. PD

OR



1. Disconnect EVAP canister purge volume control valve harness connector. FA
2. Check resistance between the following terminals.
terminal ② and terminals ①, ③ RA
terminal ⑤ and terminals ④, ⑥ RA

Resistance:

Approximately 35 - 43Ω [At 25°C (77°F)] BR

3. Reconnect EVAP canister purge volume control valve harness connector. BR
4. Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve. ST

(Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.) RS

5. Turn ignition switch "ON" and "OFF". Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the ignition switch position. BT

If NG, replace the EVAP canister purge volume control valve. HA

EL


IDX

TROUBLE DIAGNOSIS FOR DTC P1444

Evaporative Emission (EVAP) Canister Purge Volume Control Valve (for California) (Cont'd)

COMPONENT INSPECTION

EVAP control system pressure sensor

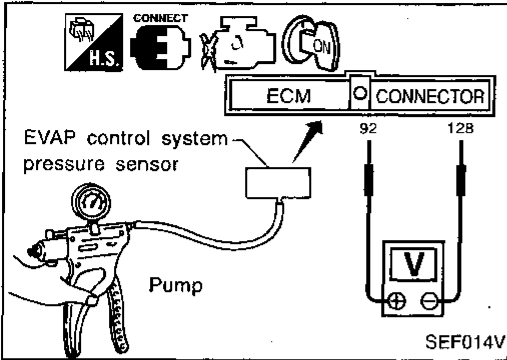


1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 92 and 128 (ECM ground).

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.
5. If NG, replace EVAP control system pressure sensor.

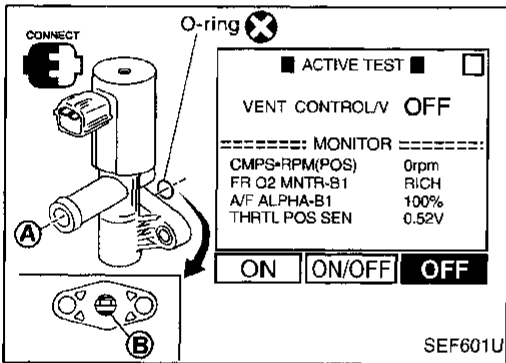


EVAP canister vent control valve

Check air passage continuity.

- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR

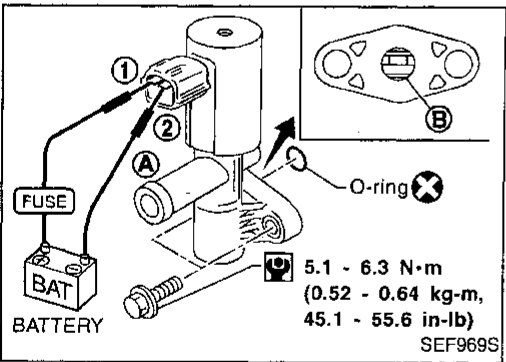


Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals ① and ②	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary. If the portion (B) is rusted, replace EVAP canister vent control valve.

Make sure new O-ring is installed properly.

TROUBLE DIAGNOSIS FOR DTC P1446

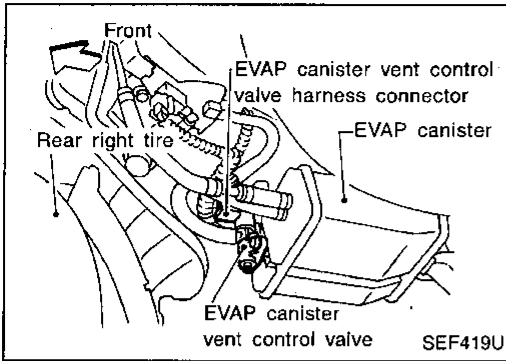

Evaporative Emission (EVAP) Canister Vent Control Valve (Close) (For California)

COMPONENT DESCRIPTION

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

GI

MA

EM

LC

EC

FE

AT

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

PD

FA

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
20	P/B	EVAP canister vent control valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

RA

BR

ST

RS

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1446 0215	● EVAP canister vent control valve remains closed under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor and the circuit ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water.

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1446

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	650rpm	
MAS AIR/FL SE	1.31V	
COOLAN TEMP/S	84°C	
VHCL SPEED SE	6km/h	
THRTL POS SEN	0.50V	
B/FUEL SCHDL	1.0msec	
RECORD		

SEF604U

Evaporative Emission (EVAP) Canister Vent Control Valve (Close) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine (TCS switch "OFF").
- 4) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for a maximum of 15 minutes.

NOTE:

If a malfunction exists, NG result may reveal soon.

OR



- 1) Start engine (TCS switch "OFF").
- 2) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for 15 minutes.
- 3) Select "MODE7" with GST.




OR



- 1) Start engine (TCS switch "OFF").
- 2) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for 15 minutes.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Turn ignition switch "ON" and perform "Diagnostic Test Mode (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1446

Evaporative Emission (EVAP) Canister Vent Control Valve (Close) (For California) (Cont'd) DIAGNOSTIC PROCEDURE

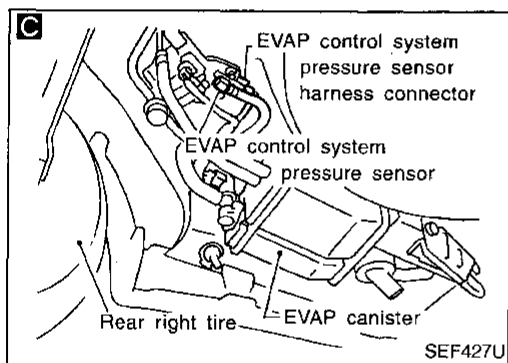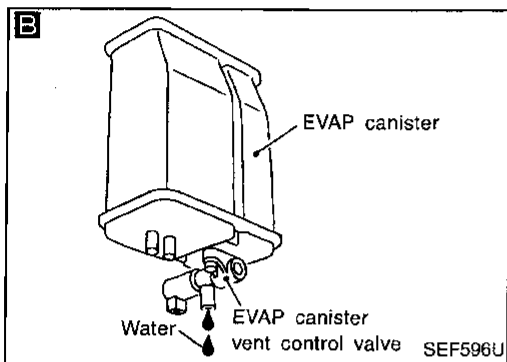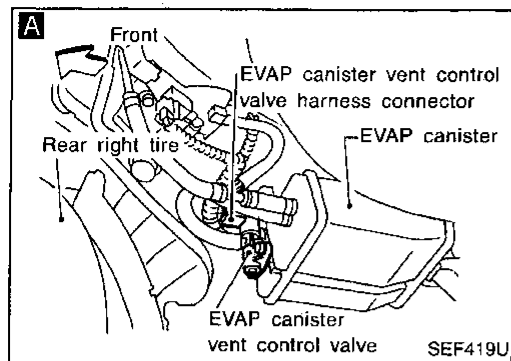

INSPECTION START

CHECK RUBBER TUBE FOR CLOGGING.
Check obstructed water separator and rubber tube to EVAP canister vent control valve and clean the rubber tube using air blower.
For water separator, refer to "COMPONENT INSPECTION" on next page.

NG → Clean, repair or replace rubber tube and/or water separator.

OK

CHECK COMPONENT (EVAP canister vent control valve and O-ring).
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EVAP canister vent control valve and O-ring.

OK

CHECK IF EVAP CANISTER IS SATURATED WITH WATER.
1. Remove EVAP canister with the vent control valve attached.
2. Check if water will drain from the EVAP canister.
If it will, weigh the EVAP canister with the vent control valve attached.
If the weight is:
More than 1.8 kg (4.0 lb) → NG
Less than 1.8 kg (4.0 lb) → OK

NG → Check the following.
1. Visually check the EVAP canister for damage.
2. Check hose connection between EVAP canister and water separator for clogging and poor connection.
3. Check water separator. Refer to "COMPONENT INSPECTION", EC-422.
If NG, repair hose or replace EVAP canister or water separator.

OK

CHECK COMPONENT (EVAP control system pressure sensor).
1. Check for disconnection of hose connected to the sensor.
2. Check sensors harness connector for water.
Water should not exist.
If OK, go to step 3.
3. Check EVAP control system pressure sensor.
Refer to "P0450 EVAP control system pressure sensor", EC-306.

NG → Replace EVAP control system pressure sensor and repair or replace harness and connector.

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1446



Evaporative Emission (EVAP) Canister Vent Control Valve (Close) (For California) (Cont'd)

COMPONENT INSPECTION

EVAP canister vent control valve

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

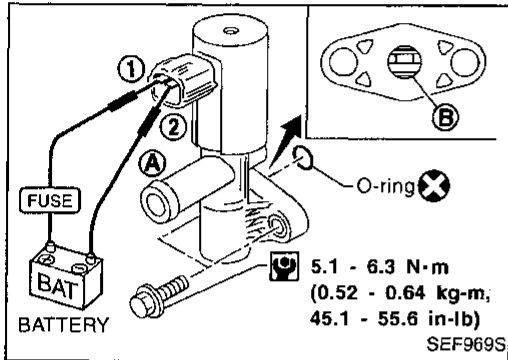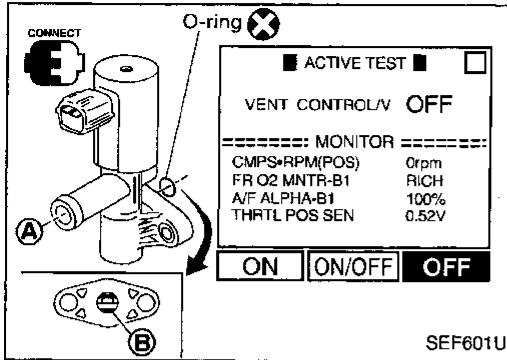


Condition VENT CONTROL/V	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

OR



Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals ① and ②	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If the portion (B) is rusted, replace EVAP canister vent control valve.
Make sure new O-ring is installed properly.

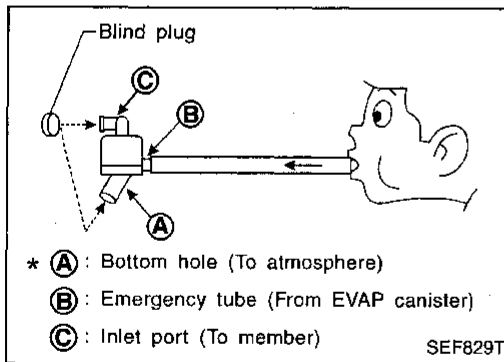

Water separator

1. Check visually for insect nests in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that (A) and (C) are not clogged by blowing air into (B) with (A), and then (C) plugged.
5. In case of NG in items 2 - 4, replace the parts.


NOTE:

Do not disassemble water separator.

TROUBLE DIAGNOSIS FOR DTC P1446

Evaporative Emission (EVAP) Canister Vent Control Valve (Close) (For California) (Cont'd)

EVAP control system pressure sensor

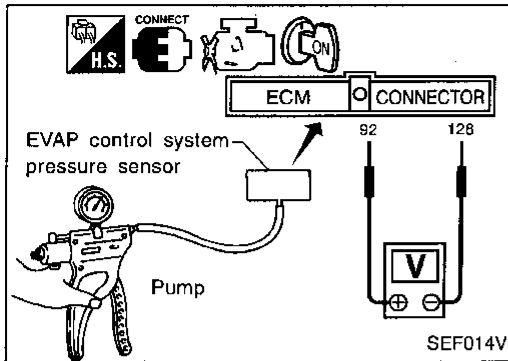

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor. CI
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 92 and 128 (ECM ground). MA

Pressure (Relative to atmospheric pressure)	Voltage (V)	EM
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6	
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6	LC

CAUTION:

- Always calibrate the vacuum pump gauge when using it. EC
 - Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.
5. If NG, replace EVAP control system pressure sensor. FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California)

NOTE: If both DTC P0510 and P1447 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P0510 first. (See EC-322.)

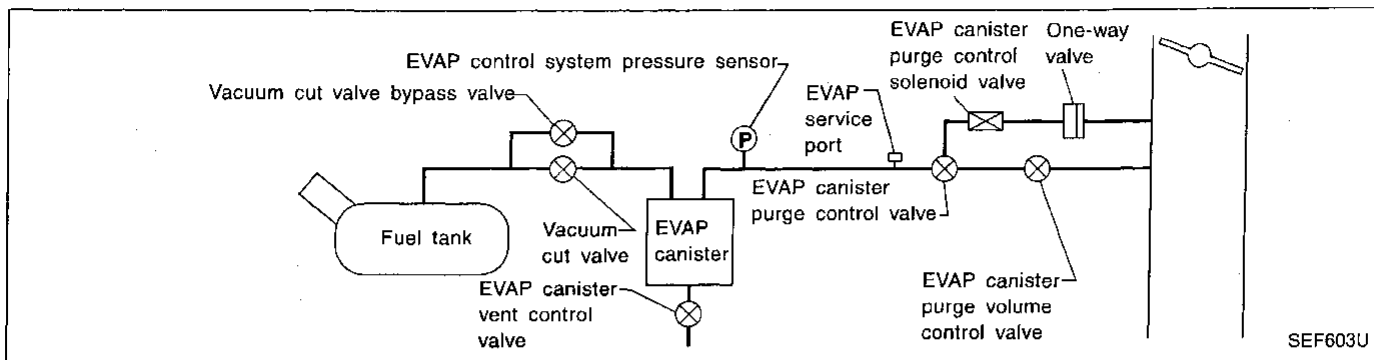

SYSTEM DESCRIPTION

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control valve and EVAP canister purge control valve are open. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

ON BOARD DIAGNOSIS LOGIC

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a fault is determined.

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1447 0111	<ul style="list-style-type: none"> ● EVAP control system does not operate properly. ● EVAP control system has a leak between intake manifold and EVAP control system pressure sensor. 	<ul style="list-style-type: none"> ● EVAP canister purge volume control valve stuck closed ● EVAP canister purge control valve stuck closed ● EVAP control system pressure sensor and the circuit ● Loose, disconnected or improper connection of rubber tube ● Blocked rubber tube ● EVAP canister purge control solenoid valve ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● Cracked EVAP canister ● EVAP canister purge volume control valve ● Closed throttle position switch ● Improper connection of one-way valve ● Blocked purge port ● EVAP canister vent control valve

TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.
- Always perform test at temperature of 5°C (41°F) or more.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine (TCS switch "OFF") and let it idle for at least 1 minute.
- 4) Select "PURG CN/V & S/V P1493" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- 5) Touch "START".
- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)
CMPS-RPM (POS): 1,000 - 2,100 rpm
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
B/FUEL SCHDL: 2 - 4.8 ms
Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-457.

- 8) Select "PURG VOL C/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.

- 9) Touch "START".

If "COMPLETED" is displayed, go to 11).

- 10) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 20 seconds.)
CMPS-RPM (POS): 1,000 - 2,100 rpm
Vehicle speed: 40 - 80 km/h (25 - 50 MPH)
B/FUEL SCHDL: 2 - 4.8 ms
Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 11) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE" of "TROUBLE DIAGNOSIS FOR DTC P1444", EC-416.

- 12) Select "PURG FLOW P1447" of "EVAPORATIVE SYSTEM" in "DTC CONFIRMATION" mode with CONSULT.

■ PURG CNV&S/V P1493 ■

THIS SUPPORT FUNCTION
IS FOR
DTC P1493.
SEE THE SERVICE MANUAL
ABOUT THE OPERATING
CONDITION FOR THIS
DIAGNOSIS.

EXIT
START

SEF610U

■ PURG CNV&S/V P1493 ■

***** OK *****

■ SELF-DIAG RESULTS ■

**** NO FAILURE ****

END
PRINT

SEF611U

■ PURG FLOW P1447 ■

OUT OF CONDITION

===== MONITOR =====

CMPS-RPM(POS)	1100rpm
THRTL POS SEN	0.64V
B/FUEL SCHDL	3.0ms

SEF616U

■ PURG FLOW P1447 ■

TESTING

===== MONITOR =====

CMPS-RPM(POS)	1637rpm
THRTL POS SEN	0.84V
B/FUEL SCHDL	3.5ms

SEF617U

■ PURG FLOW P1447 ■

COMPLETED

SELF-DIAG RESULTS

SEF618U

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California) (Cont'd)

- 13) Touch "START".
- 14) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

CMPS-RPM (POS): 1,000 - 2,100 rpm


Vehicle speed: 30 - 100 km/h (19 - 62 MPH)

Selector lever: Suitable position

Engine coolant temperature: 70 - 100°C (158 - 212°F)

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 15) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-427.

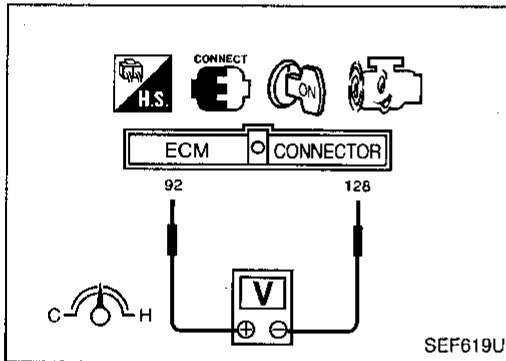

OR OVERALL FUNCTION CHECK

Use this procedure to check the overall monitoring function of the EVAP control system purge flow. During this check, a 1st trip DTC might not be confirmed.

- 1) Lift up drive wheels.
- 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF", wait at least 5 seconds.
- 4) Start engine and wait at least 70 seconds.
- 5) Set voltmeter probes to ECM terminals ⑨② (EVAP control system pressure sensor signal) and ⑫⑧ (ECM ground).
- 6) Check EVAP control system pressure sensor value at idle speed.
- 7) Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch: ON

Steering wheel: Fully turned

Headlamp switch: ON

Rear window defogger switch: ON

Engine speed: Approx. 3,000 rpm

Gear position:







Any position other than "P", "N" or "R"

Verify that EVAP control system pressure sensor value stays 0.1V less than the value at idle speed for at least 1 second.

TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California) (Cont'd)






DIAGNOSTIC PROCEDURE

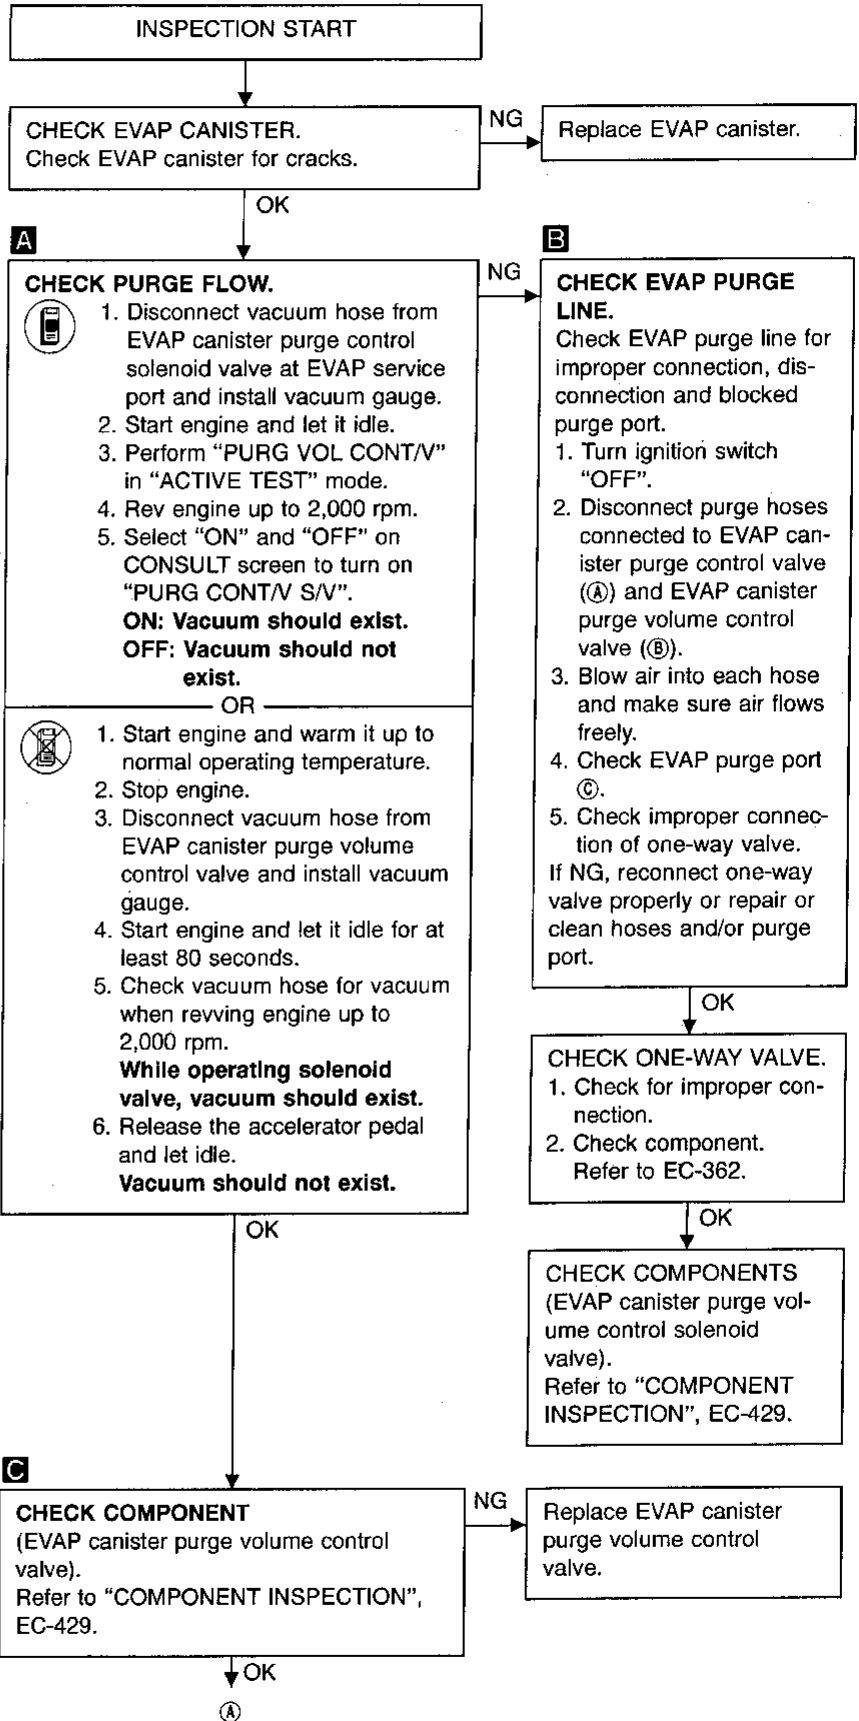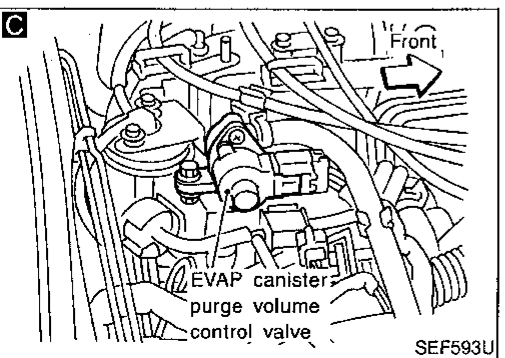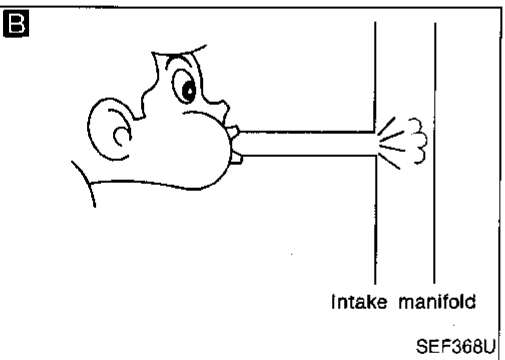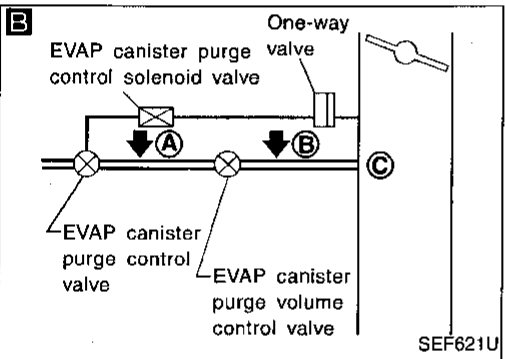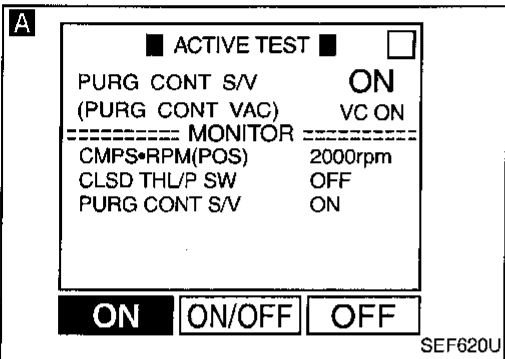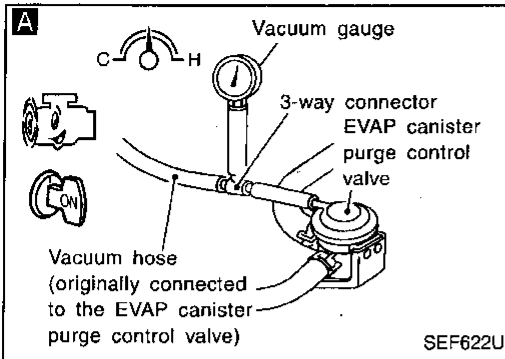

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California) (Cont'd)

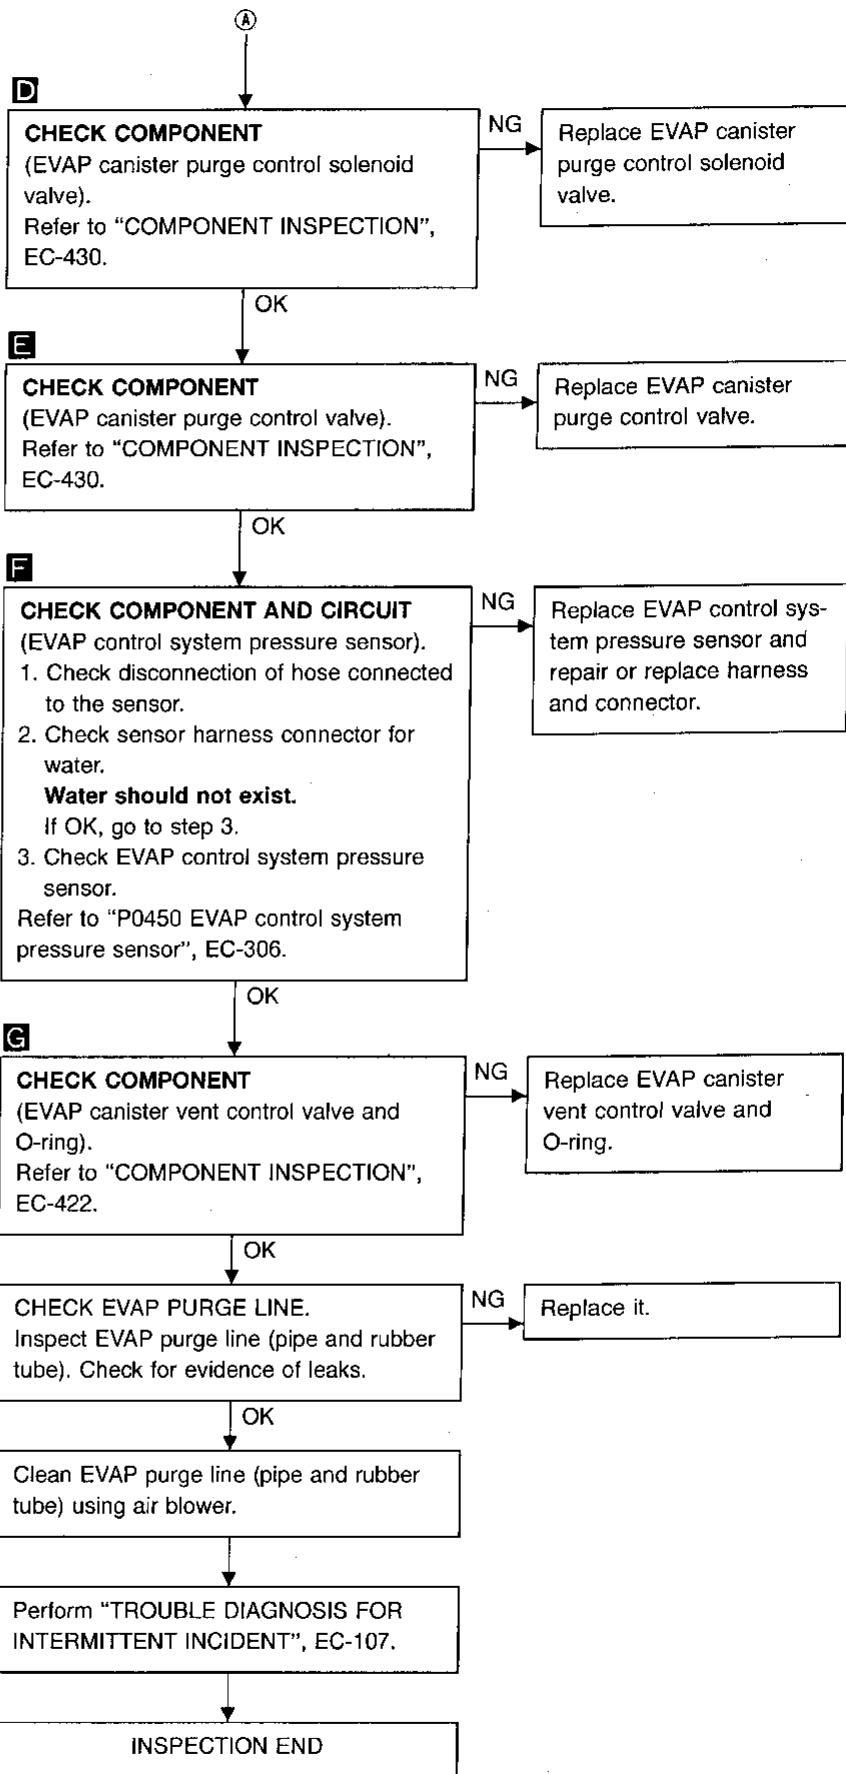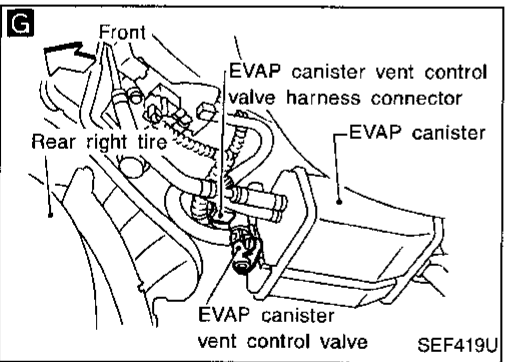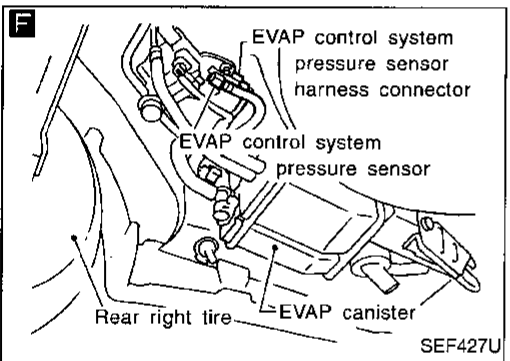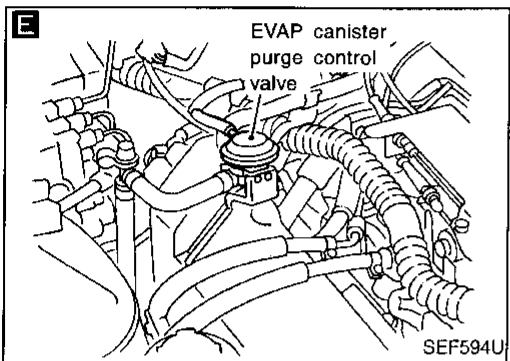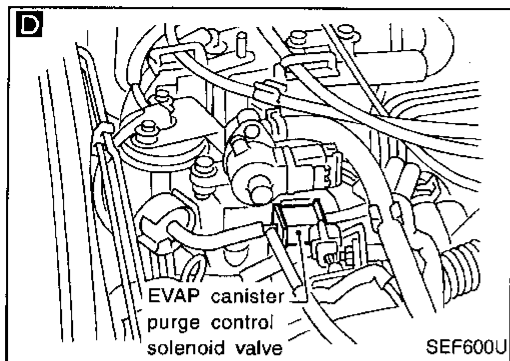


**Evaporative Emission (EVAP) Control System
Purge Flow Monitoring (For California) (Cont'd)
COMPONENT INSPECTION**


EVAP canister purge volume control valve

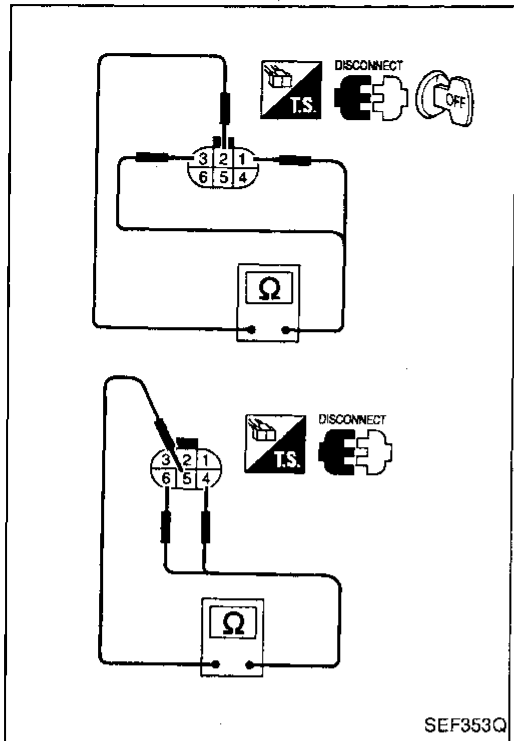


SEF353Q

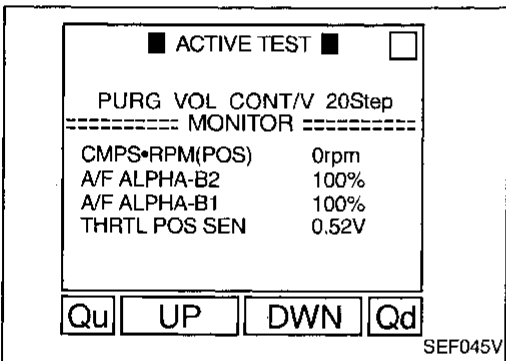

SEF045V

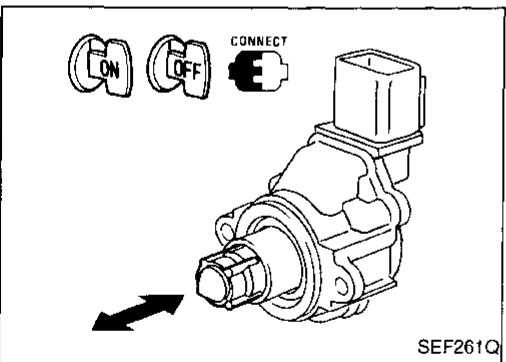

SEF261Q

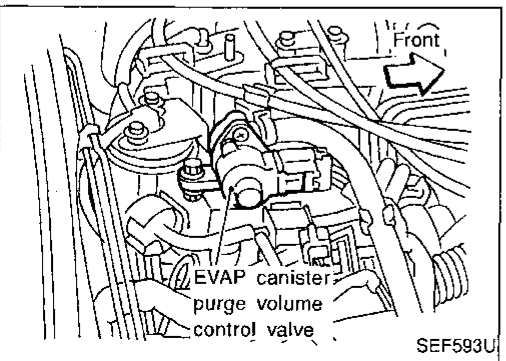

SEF593U

- 1) Disconnect EVAP canister purge volume control valve harness connector. GI
- 2) Check resistance between the following terminals. MA
 - terminal ② and terminals ①, ③
 - terminal ⑤ and terminals ④, ⑥
- Resistance:** EM
 - Approximately 35 - 43Ω [At 25°C (77°F)]**
- 3) Reconnect EVAP canister purge volume control valve harness connector.
- 4) Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve. LC
 - (Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.) EC
- 5) Turn ignition switch "ON". FE
- 6) Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the valve opening. AT
 - If NG, replace the EVAP canister purge volume control valve. PD

OR

- 1) Disconnect EVAP canister purge volume control valve harness connector. FA
- 2) Check resistance between the following terminals. RA
 - terminal ② and terminals ①, ③
 - terminal ⑤ and terminals ④, ⑥
- Resistance:** BR
 - Approximately 35 - 43Ω [At 25°C (77°F)]**
- 3) Reconnect EVAP canister purge volume control valve harness connector.
- 4) Remove EVAP canister purge volume control valve from intake manifold collector and disconnect hoses from the valve. ST
 - (Plug the purge hoses. The EVAP canister purge volume control valve harness connector should remain connected.) RS
- 5) Turn ignition switch "ON" and "OFF". Check that EVAP canister purge volume control valve shaft moves smoothly forward and backward according to the ignition switch position. BT
 - If NG, replace the EVAP canister purge volume control valve. HA

EL

IDX


TROUBLE DIAGNOSIS FOR DTC P1447

Evaporative Emission (EVAP) Control System Purge Flow Monitoring (For California) (Cont'd)

EVAP canister purge control valve


Check EVAP canister purge control valve as follows:

1. Blow air in port (A), (B) and (C), then ensure that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-100 to -150 mmHg, -3.94 to -5.91 inHg)]
Blow air in port (C) and ensure free flow out of port (B).

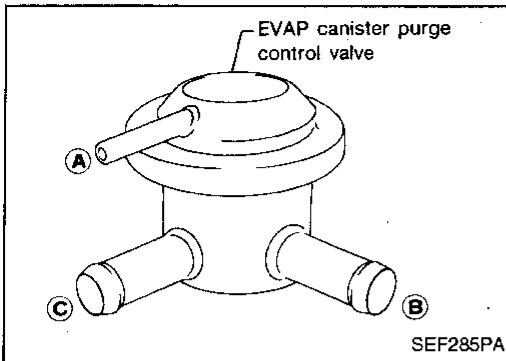


EVAP canister purge control solenoid valve

Check air passage continuity.

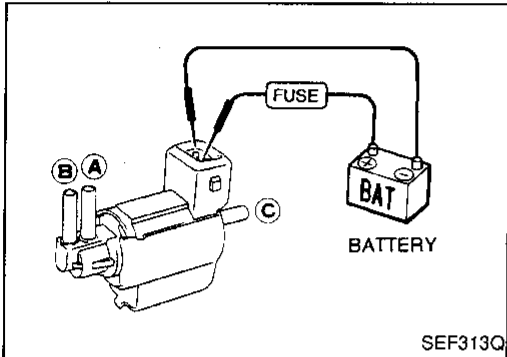

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.

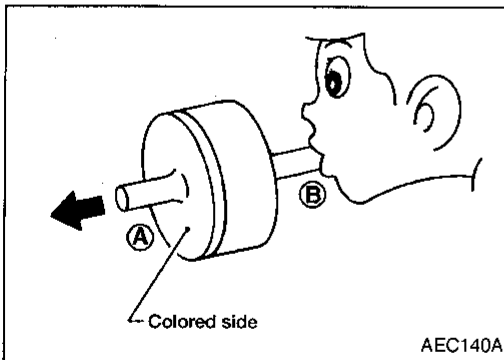


One-way valve

Check one-way valve air passage continuity.

Condition	Air passage continuity
Blow air into side B to A	Yes
Blow air into side A to B	No

If NG, replace one-way valve.

TROUBLE DIAGNOSIS FOR DTC P1448

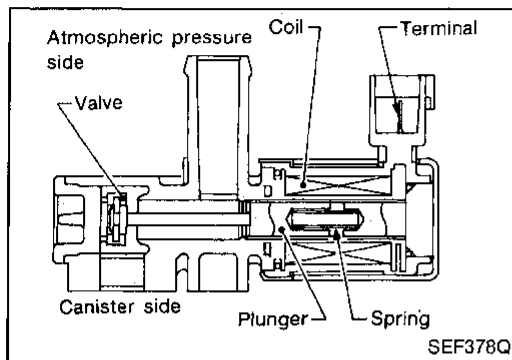

Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California)

COMPONENT DESCRIPTION

NOTE:

If both DTC P0440, P1440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first.

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.


This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

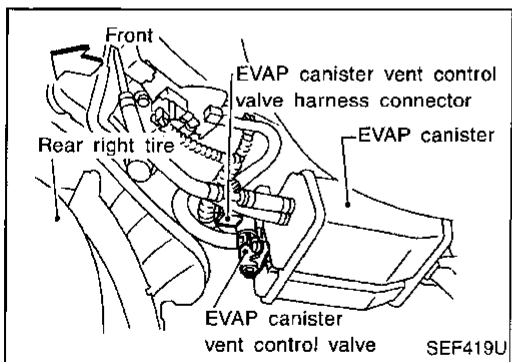

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
20	P/B	EVAP canister vent control valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1448 0309	● EVAP canister vent control valve remains opened under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water. ● Vacuum cut valve

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1448

Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

- If both DTC P0440 or P1440 and P1448 are displayed, perform TROUBLE DIAGNOSIS FOR DTC P1448 first.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Perform "DTC WORK SUPPORT" when the fuel level is less than 3/4 full. If not, inspect fuel filler cap and fuel tank separately. Refer to EC-27.
- Always perform test at temperature of 5 to 30°C (41 to 86°F).



- 1) Turn ignition switch "ON".
- 2) Select "EVAP SML LEAK P0440" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.

Follow the instruction displayed.

- 3) Make sure that "OK" is displayed.
If "NG" is displayed, go to following step.

If the CONSULT screen shown at left is displayed, stop the engine and stabilize the vehicle temperature at 25°C (77°F) or cooler. After "TANK F/TMP SE" becomes less than 30°C (86°F), retest.

(Use a fan to reduce the stabilization time.)




- 4) Disconnect hose from water separator.
- 5) Select "VENT CONTROL/V" of "ACTIVE TEST" mode with CONSULT.
- 6) Touch "ON" and "OFF" alternately.
- 7) Make sure the following.

Condition VENT CONTROL/V	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-434.

If the result is OK, go to "DIAGNOSTIC PROCEDURE" for "TROUBLE DIAGNOSIS FOR DTC P0440", EC-285.

It is better that fuel level is low.

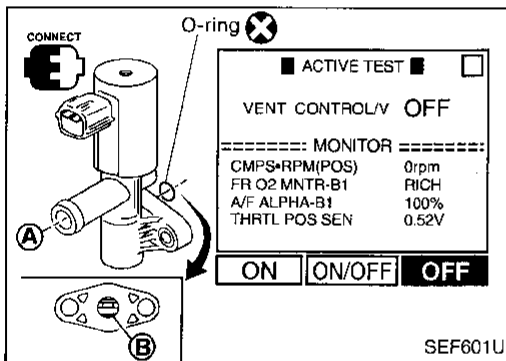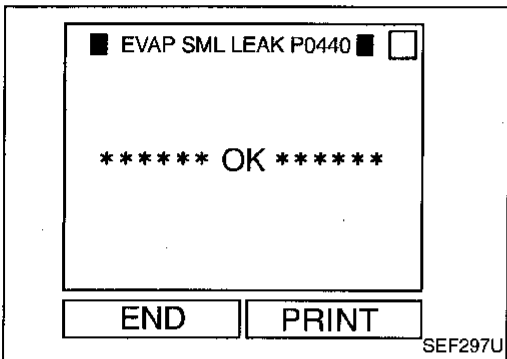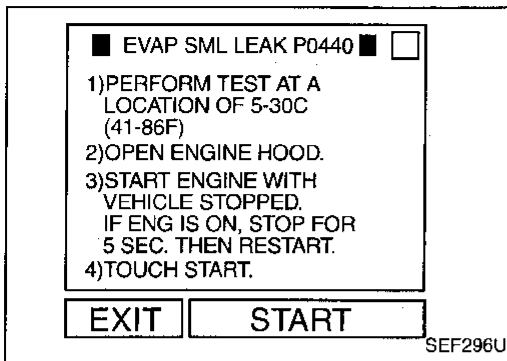

TROUBLE DIAGNOSIS FOR DTC P1448


Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California) (Cont'd)

OR

OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the EVAP canister vent control valve circuit. During this check, a DTC might not be confirmed.

- 1) Disconnect hose from water separator.
- 2) Disconnect EVAP canister vent control valve harness connector.
- 3) Verify the following.

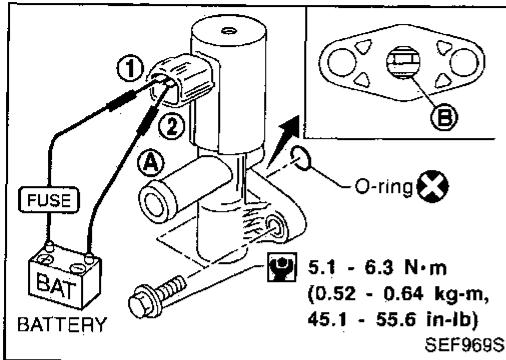

Condition	Air passage continuity
12V direct current supply between terminals ① and ②	No
No supply	Yes

If the result is NG, go to "DIAGNOSTIC PROCEDURE", EC-434.

If the result is OK, go to "TROUBLE DIAGNOSIS FOR DTC P0440", EC-285.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT





HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1448

Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California) (Cont'd) DIAGNOSTIC PROCEDURE

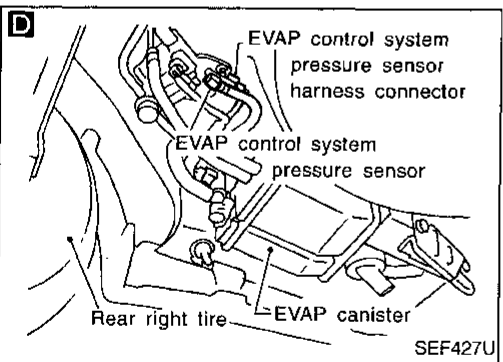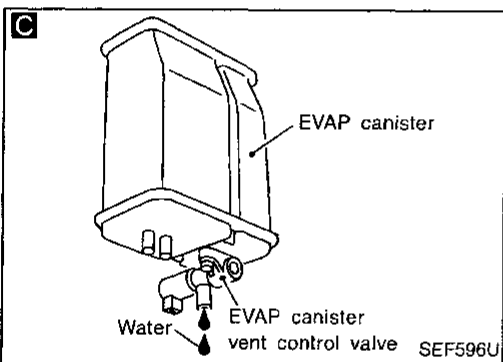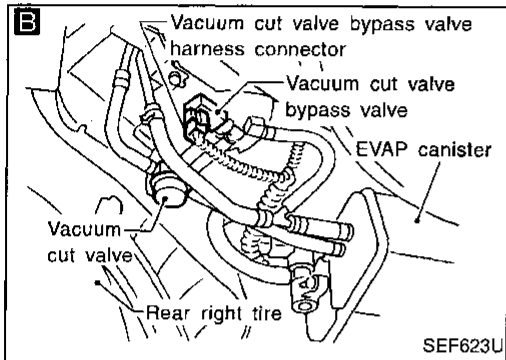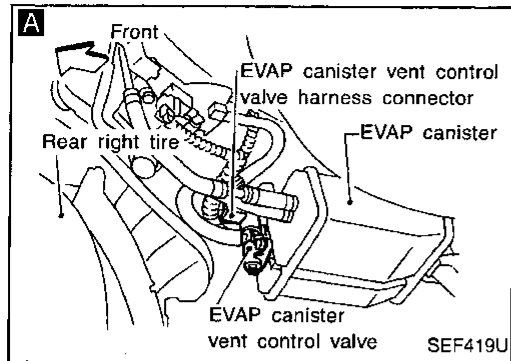

INSPECTION START

CHECK RUBBER TUBE FOR DISCONNECTION.
Check disconnection of rubber tube to EVAP canister vent control valve and clean the rubber hose and/or vent control valve then install properly.

NG → Repair or clean.

OK

A
CHECK COMPONENT
(EVAP canister vent control valve and O-ring).
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EVAP canister vent control valve and O-ring.

OK

B
CHECK COMPONENT
(Vacuum cut valve).
Refer to "COMPONENT INSPECTION", EC-441.

NG → Replace vacuum cut valve.

OK

C
CHECK IF EVAP CANISTER IS SATURATED WITH WATER.
1. Remove EVAP canister with the vent control valve attached.
2. Check if water will drain from the EVAP canister.
If it will, weigh the EVAP canister with the vent control valve attached.
If the weight is:
More than 1.8 kg (4.0 lb) → NG
Less than 1.8 kg (4.0 lb) → OK

NG → Check the following.
1. Visually check the EVAP canister for damage.
2. Check hose connection between EVAP canister and water separator for clogging and poor connection.
3. Check water separator.
Refer to "COMPONENT INSPECTION", EC-436.
If NG, repair hose or replace EVAP canister or water separator.

OK

D
CHECK COMPONENT
(EVAP control system pressure sensor).
1. Check for disconnection of hose connected to the sensor.
2. Check sensor harness connector for water.
Water should not exist.
3. Check EVAP control system pressure sensor.
Refer to "COMPONENT INSPECTION" on next page.

NG → Replace EVAP control system pressure sensor and repair or replace harness and connector.

OK

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P1448



Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California) (Cont'd)

COMPONENT INSPECTION

EVAP canister vent control valve

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

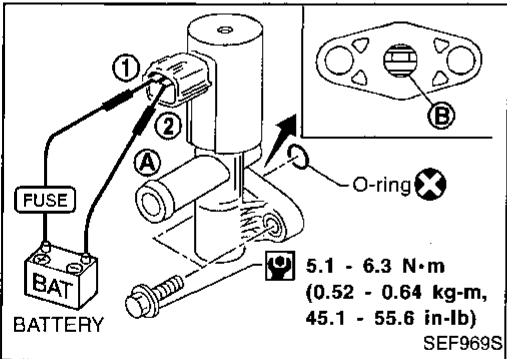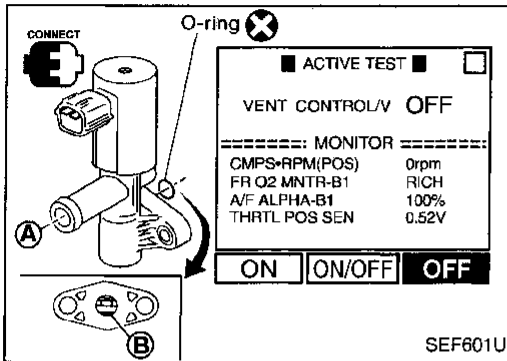


Condition	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

OR

Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals (1) and (2)	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary. If the portion (B) is rusted, replace EVAP canister vent control valve. **Make sure new O-ring is installed properly.**

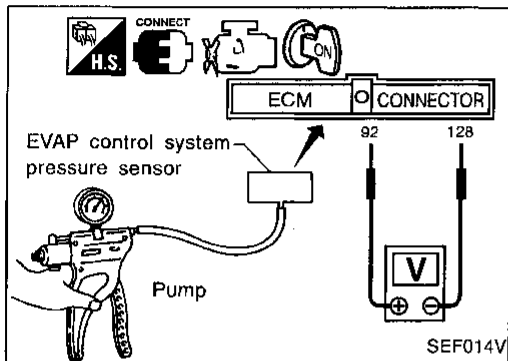

EVAP control system pressure sensor

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal (92) and (128) (ECM ground).

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.
5. If NG, replace EVAP control system pressure sensor.

TROUBLE DIAGNOSIS FOR DTC P1448


Evaporative Emission (EVAP) Canister Vent Control Valve (Open) (For California) (Cont'd)

Water separator


1. Check visually for insect nests in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that (A) and (C) are not clogged by blowing air into (B) with (A), and then (C) plugged.
5. In case of NG in items 2 - 4, replace the parts.

NOTE:

Do not disassemble water separator.

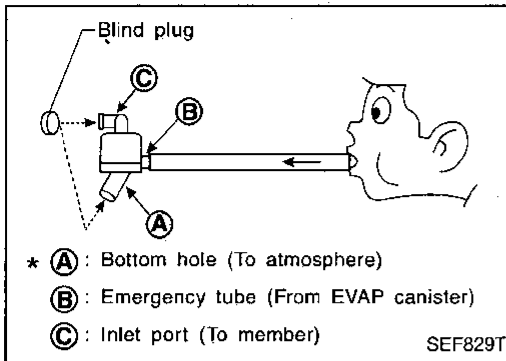

TROUBLE DIAGNOSIS FOR DTC P1490

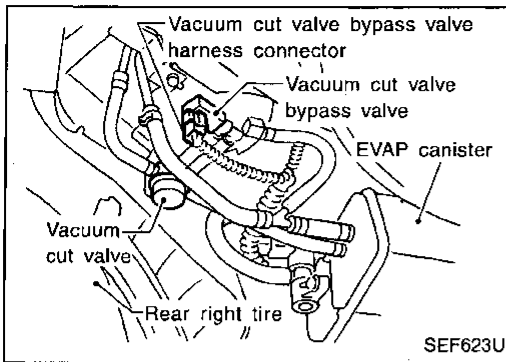

Vacuum Cut Valve Bypass Valve (Circuit) (For California)

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

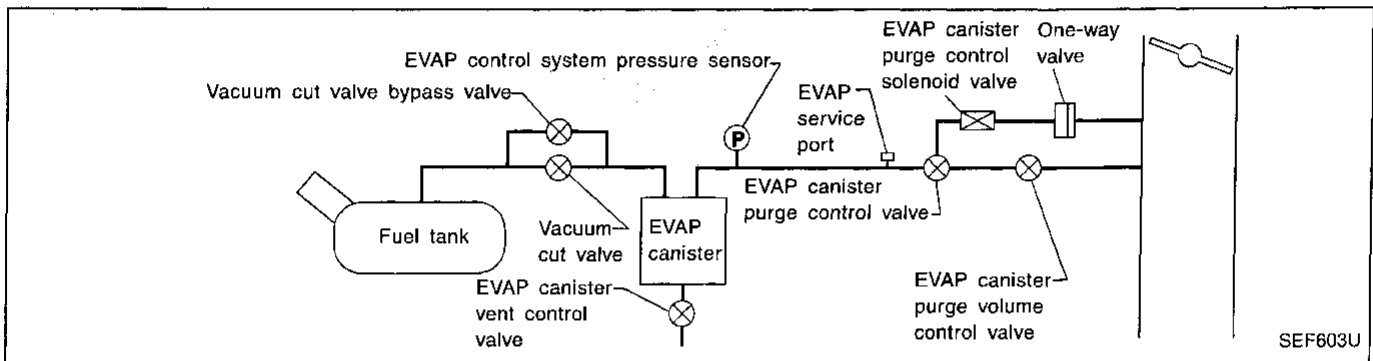

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
45	LG/B	Vacuum cut valve bypass valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1490 0801	<ul style="list-style-type: none"> An improper voltage signal is sent to ECM through vacuum cut valve bypass valve. 	<ul style="list-style-type: none"> Harness or connectors (The vacuum cut valve bypass valve circuit is open or shorted.) Vacuum cut valve bypass valve

TROUBLE DIAGNOSIS FOR DTC P1490

Vacuum Cut Valve Bypass Valve (Circuit) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	750rpm	
RECORD		

SEF886T



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and wait at least 5 seconds.

OR



- 1) Start engine and wait at least 5 seconds.
- 2) Select "MODE 7" with GST.

OR




- 1) Start engine and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1490

Vacuum Cut Valve Bypass Valve (Circuit) (For California) (Cont'd)

EC-BYPS/V-01

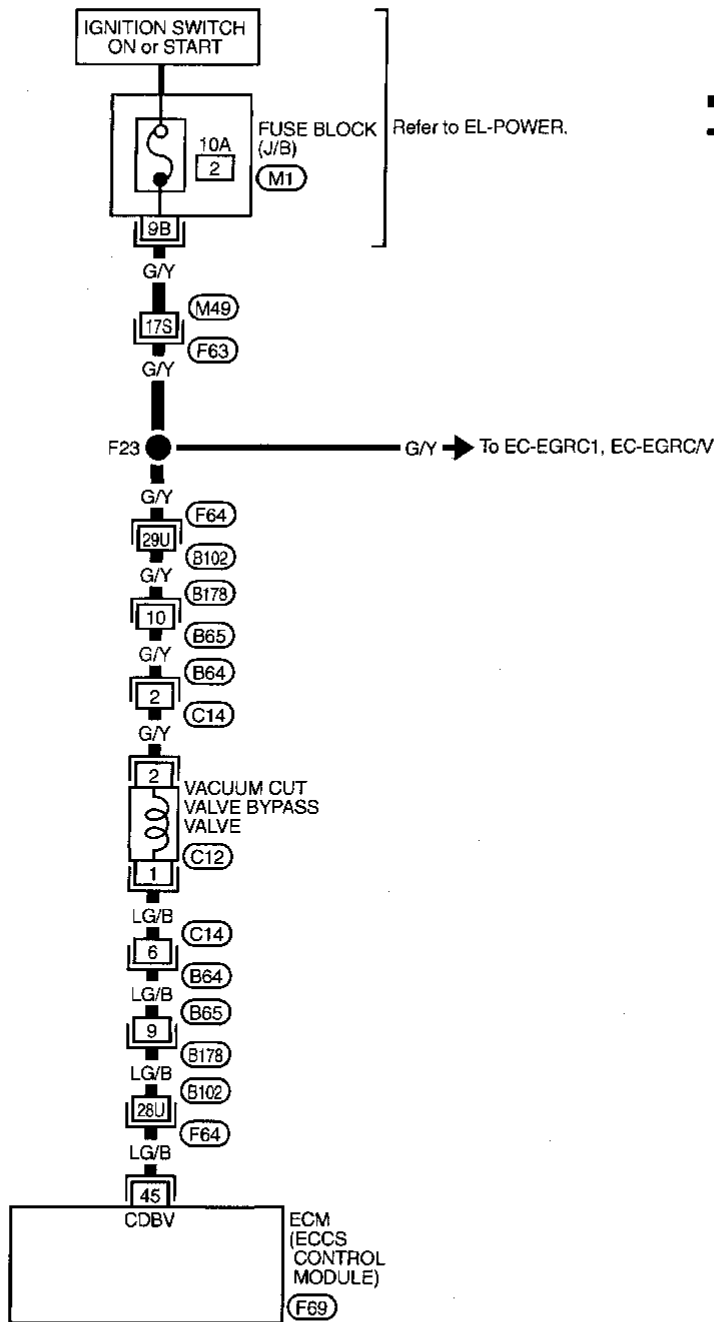

— : Detectable line for DTC
 — : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST



RS

BT

HA


EL

IDX







Refer to last page (Foldout page).

- (M49), (F63)
- (F64), (B102)
- (M1)

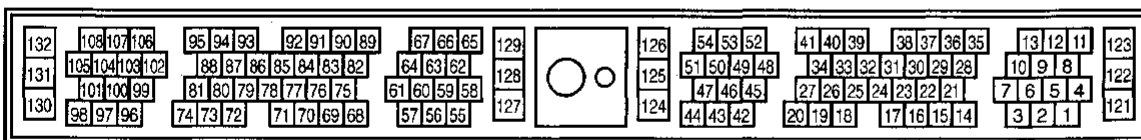

Vacuum Cut Valve Bypass Valve (Circuit) (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

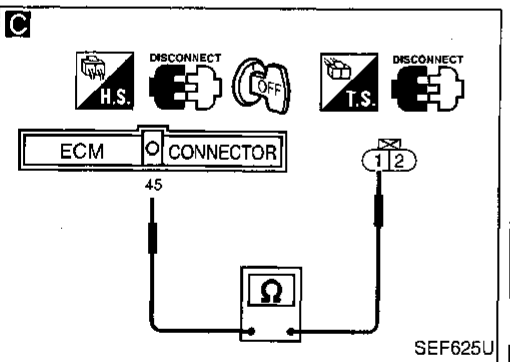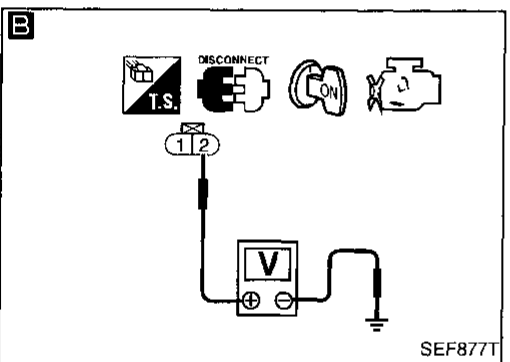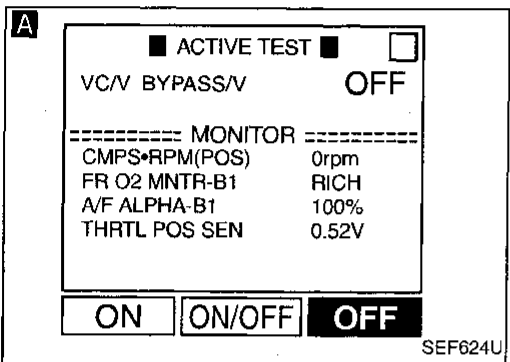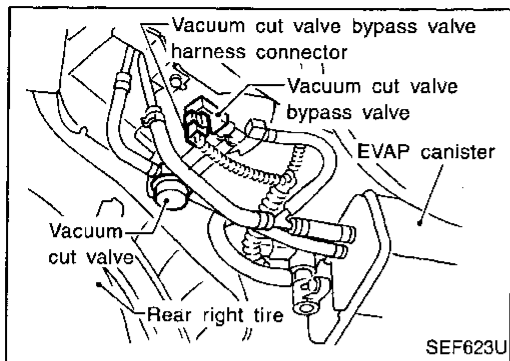

INSPECTION START



Go to CHECK POWER SUPPLY **B**.

A
CHECK CIRCUIT.
 1. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.
 2. Make sure that clicking sound is heard from the vacuum cut bypass valve.

OK → Go to "CHECK COMPONENT" after procedure **C**.

B
CHECK POWER SUPPLY.
 1. Turn ignition switch "OFF".
 2. Disconnect vacuum cut valve bypass valve harness connector.
 3. Turn ignition switch "ON".
 4. Check voltage between terminal ② and ground with CONSULT or tester.
Voltage: Battery voltage

NG → Check the following.
 • Harness connectors (C14, B64, B65, B178)
 • Harness connectors (B102, F64, F63, M49)
 • 10A fuse
 • Harness for open or short between vacuum cut valve bypass valve and fuse
 If NG, repair harness or connectors.

C
CHECK OUTPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect ECM harness connector.
 3. Check harness continuity between ECM terminal ④ and terminal ①.
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Check the following.
 • Harness connectors (F64, B102, B178, B65)
 • Harness or connectors (B64, C14)
 • Harness for open or short between vacuum cut valve bypass valve and ECM
 If NG, repair open circuit or short to ground or short to power in harness or connectors.

CHECK COMPONENT
 (Vacuum cut valve bypass valve).
 Refer to "COMPONENT INSPECTION" on next page.



NG → Replace vacuum cut valve bypass valve.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

TROUBLE DIAGNOSIS FOR DTC P1490

Vacuum Cut Valve Bypass Valve (Circuit) (For California) (Cont'd)

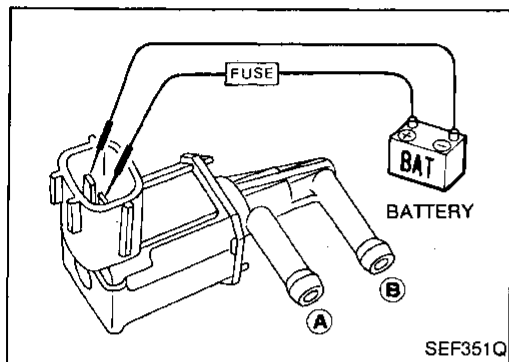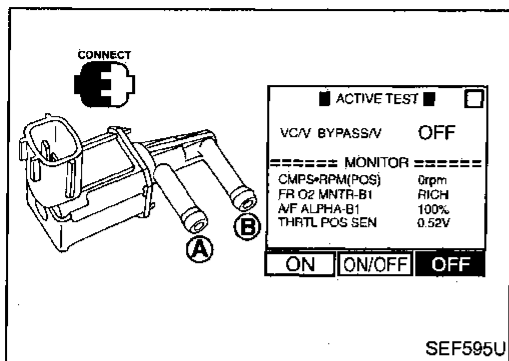

COMPONENT INSPECTION

Vacuum cut valve bypass valve

Check air passage continuity.



Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.

Condition VC/V BYPASS/V	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

OR



Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals	Yes
No supply	No

If NG, replace vacuum cut valve bypass valve.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1491

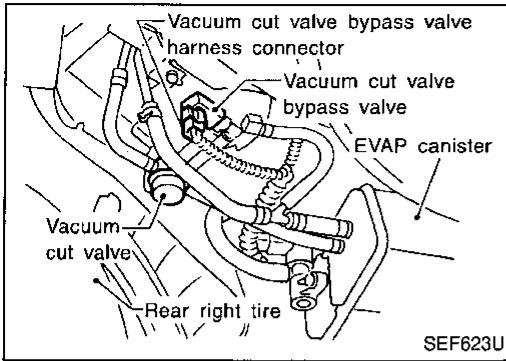

Vacuum Cut Valve Bypass Valve (For California)

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

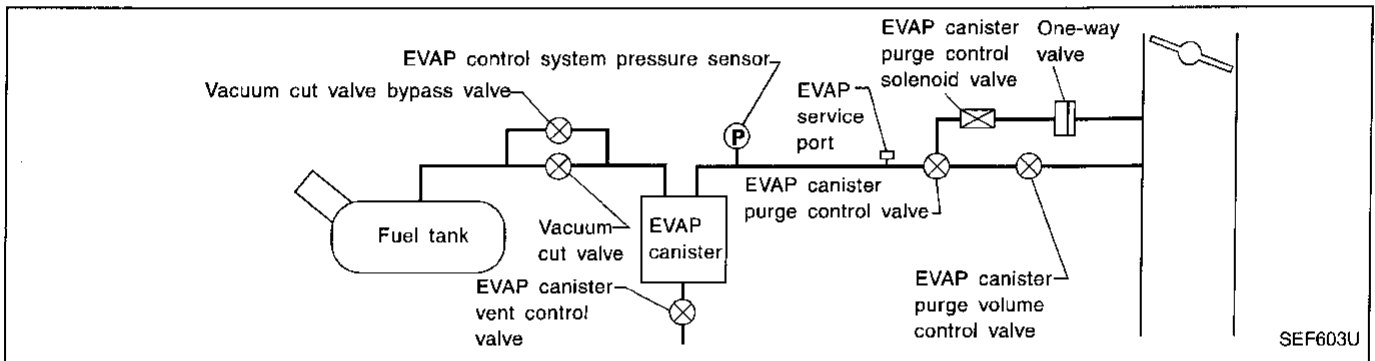

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).




TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
45	LG/B	Vacuum cut valve bypass valve	Ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1491 0311	● Vacuum cut valve bypass valve does not operate properly.	<ul style="list-style-type: none"> ● Vacuum cut valve bypass valve ● Vacuum cut valve ● Bypass hoses for clogging ● EVAP control system pressure sensor ● EVAP canister vent control valve ● Hose between fuel tank and vacuum cut valve clogged ● Hose between vacuum cut valve and EVAP canister clogged ● EVAP canister ● EVAP purge port of fuel tank for clogging

TROUBLE DIAGNOSIS FOR DTC P1491

Vacuum Cut Valve Bypass Valve (For California) (Cont'd)

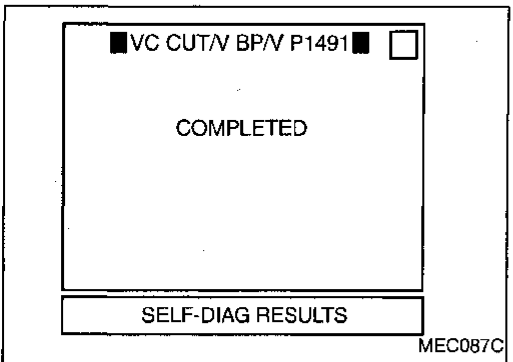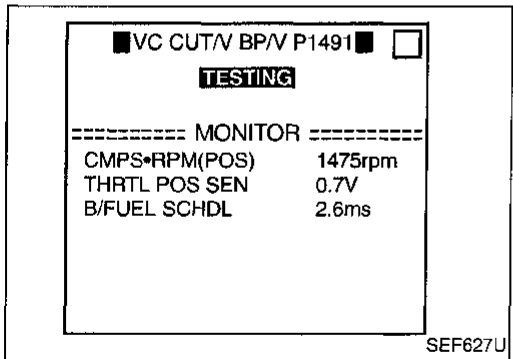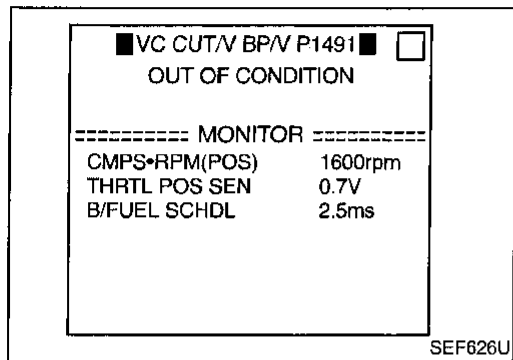

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.
- Always perform test at temperature of 5 to 30°C (41 to 86°F).



- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine (TCS switch "OFF") and let it idle for at least 1 minute.
- 5) Select "PURG CN/V & S/V P1493" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- 6) Touch "START".
- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)
CMPS-RPM (POS): 1,000 - 2,200 rpm
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
B/FUEL SCHDL: 2 - 4.8 ms
Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 3).

- 8) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "TROUBLE DIAGNOSIS FOR DTC P1493", EC-454.

- 9) Select "PURG VOL C/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.

- 10) Touch "START".
If "COMPLETED" does not appear on CONSULT screen, go to step 12).

- 11) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 20 seconds.)
CMPS-RPM (POS): 1,000 - 2,200 rpm
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
B/FUEL SCHDL: 2 - 4.8 ms
Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 3).

- 12) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "TROUBLE DIAGNOSIS FOR DTC P1444", EC-412.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1491

Vacuum Cut Valve Bypass Valve (For California) (Cont'd)

13) Select "VC CUT/V BP/V P1491" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.

14) Touch "START".

15) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)

CMPS-RPM (POS): 500 - 2,200 rpm


Vehicle speed: 40 - 100 km/h (25 - 62 MPH)

B/FUEL SCHDL: 0.5 - 4.8 ms

Selector lever: Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 3).

16) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-445.

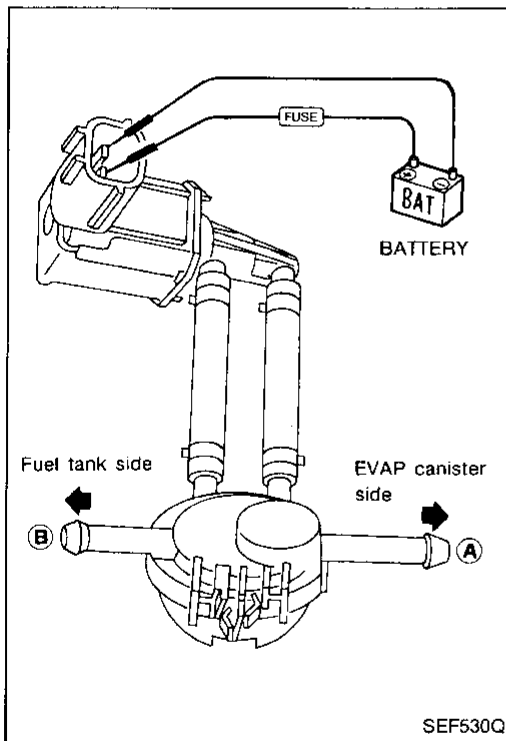

OR OVERALL FUNCTION CHECK








- 1) Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly.
- 2) Apply vacuum to port (A) and check that there is no suction from port (B).
- 3) Apply vacuum to port (B) and check that there is suction from port (A).
- 4) Blow air in port (B) and check that there is a resistance to flow out of port (A).
- 5) Supply battery voltage to the terminal.
- 6) Blow air in port (A) and check that air flows freely out of port (B).
- 7) Blow air in port (B) and check that air flows freely out of port (A).

TROUBLE DIAGNOSIS FOR DTC P1491

Vacuum Cut Valve Bypass Valve (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

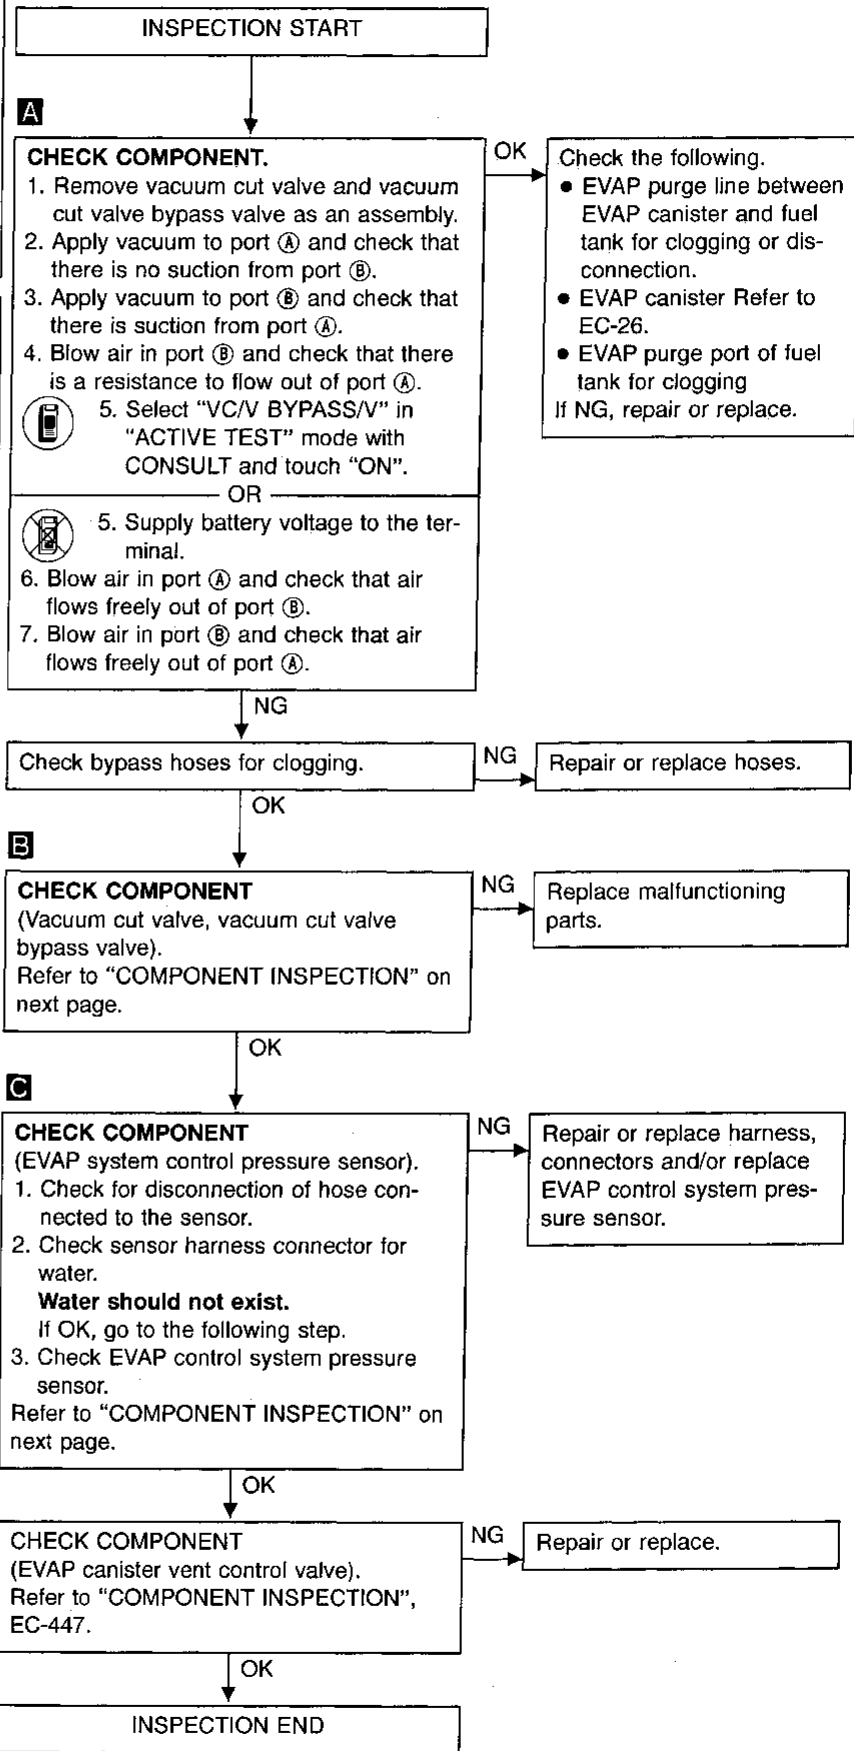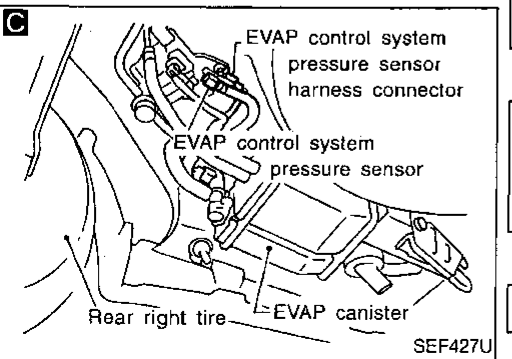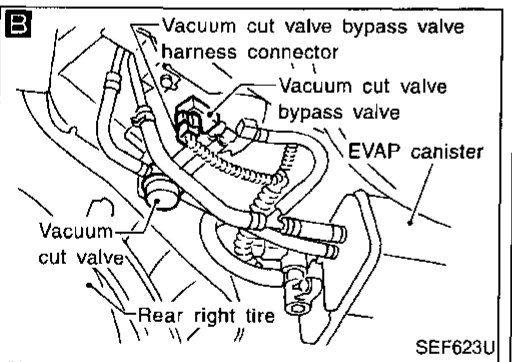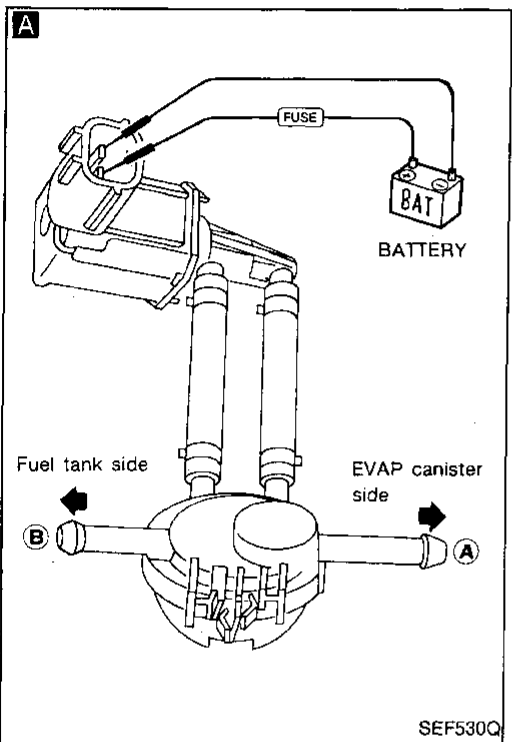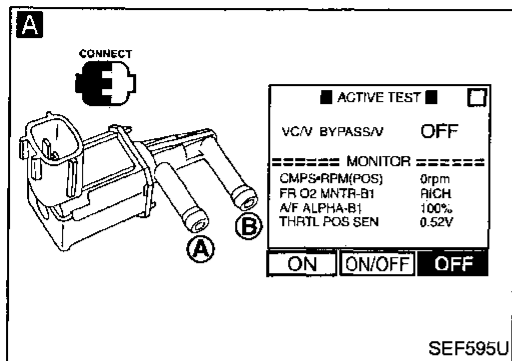

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSIS FOR DTC P1491


Vacuum Cut Valve Bypass Valve (For California) (Cont'd)

COMPONENT INSPECTION


Vacuum cut valve bypass valve

Check air passage continuity.

Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.

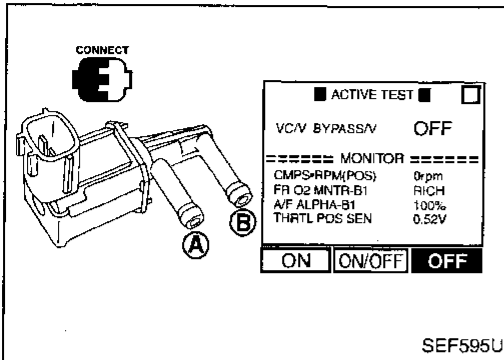

SEF596U

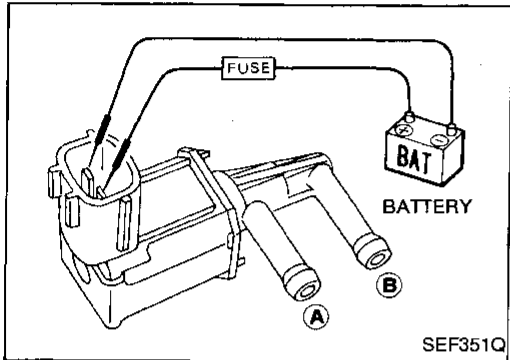

SEF351Q

Condition VC/V BYPASS/V	Air passage continuity between (A) and (B)
ON	Yes
OFF	No

OR




Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals	Yes
No supply	No

If NG, replace vacuum cut valve bypass valve.

Vacuum cut valve

Check vacuum cut valve as follows:


1. Plug port (C) and (D) with fingers.
2. Apply vacuum to port (A) and check that there is no suction from port (B).
3. Apply vacuum to port (B) and check that there is suction from port (A).
4. Blow air in port (B) and check that there is a resistance to flow out of port (A).
5. Open port (C) and (D).
6. Blow air in port (A) check that air flows freely out of port (C).
7. Blow air in port (B) check that air flows freely out of port (D).

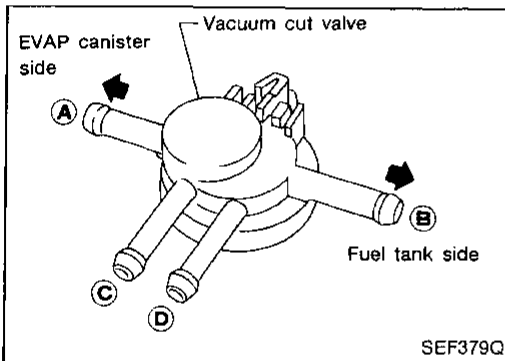

SEF379Q

EVAP control system pressure sensor

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal (95) and (128) (ECM ground).

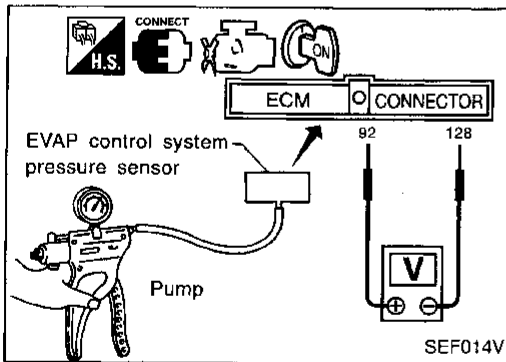

SEF014V

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.
5. If NG, replace EVAP control system pressure sensor.



TROUBLE DIAGNOSIS FOR DTC P1491

Vacuum Cut Valve Bypass Valve (For California) (Cont'd)

EVAP canister vent control valve


Check air passage continuity.

 Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

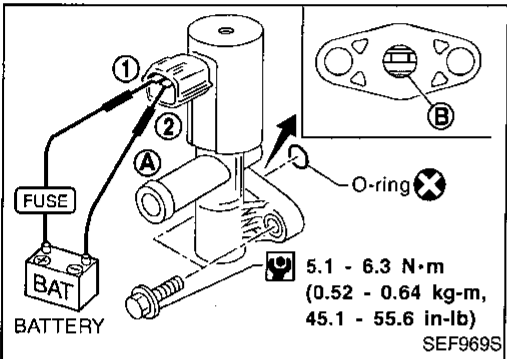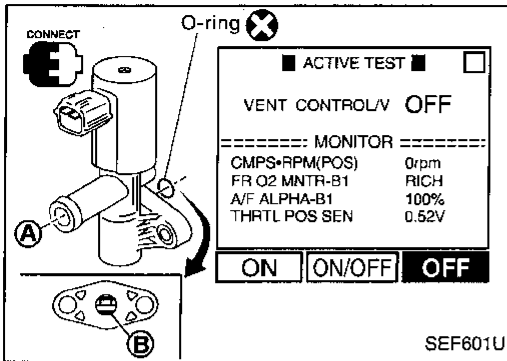

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR



Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals ① and ②	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If the portion (B) is rusted, replace EVAP canister vent control valve.
Make sure new O-ring is installed properly.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (Circuit) (For California)

SYSTEM DESCRIPTION

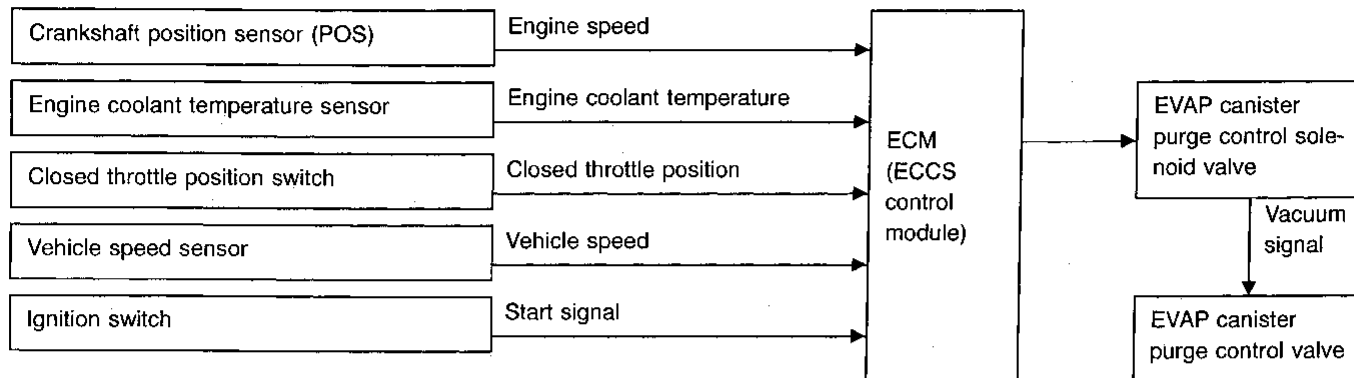

This system controls the vacuum signal applied to the EVAP canister purge control valve. When the ECM detects any of the following conditions, current does not flow through the EVAP canister purge control solenoid valve. The solenoid valve cuts the vacuum signal so that the EVAP canister purge control valve remains closed.


- Start switch "ON"
- Closed throttle position
- Low or high engine coolant temperature
- During deceleration
- Engine stopped

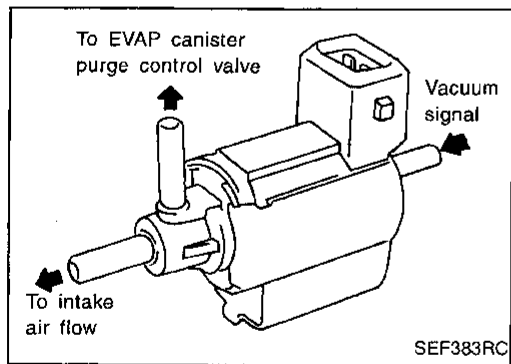

COMPONENT DESCRIPTION

EVAP canister purge control solenoid valve

The EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an OFF signal, the vacuum signal (from the intake manifold to the EVAP canister purge control valve) is cut. When the ECM sends an ON (ground) signal, the vacuum signal passes through the EVAP canister purge control solenoid valve. The signal then reaches the EVAP canister purge control valve.

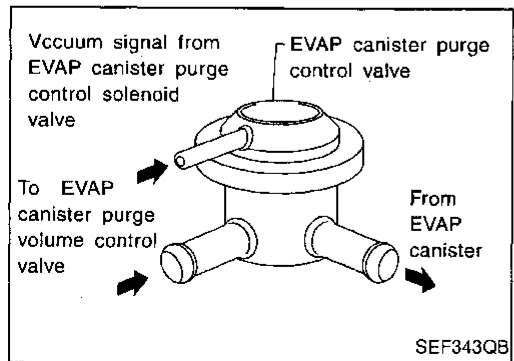


EVAP canister purge control valve

When the vacuum signal is cut by EVAP canister purge control solenoid valve, EVAP canister purge control valve shuts off the EVAP purge line.

TROUBLE DIAGNOSIS FOR DTC P1492

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (Circuit) (For California) (Cont'd)

EVAPORATIVE EMISSION SYSTEM DIAGRAM

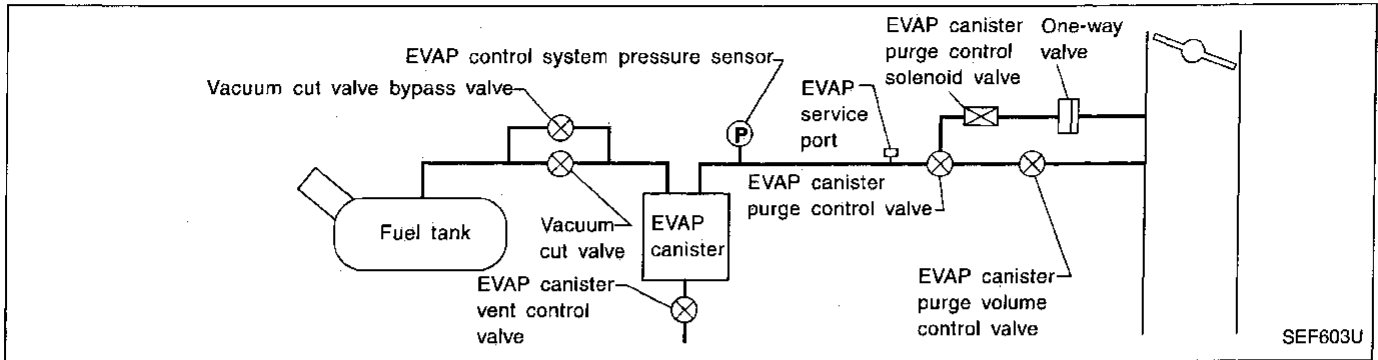

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG CONT S/V	• Engine: After warming up	Idle
		2,000 rpm
		OFF
		ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22	Y	EVAP canister purge control solenoid valve	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
			Engine is running. └ Engine speed is 2,000 rpm.	Approximately 0V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1492 0807	<ul style="list-style-type: none"> The improper voltage signal is sent to ECM through EVAP canister purge control solenoid valve. 	<ul style="list-style-type: none"> Harness or connectors (The EVAP canister purge control solenoid valve circuit is open or shorted.) EVAP canister purge control solenoid valve

TROUBLE DIAGNOSIS FOR DTC P1492

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (Circuit) (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
CMPS•RPM(POS)	0rpm	
RECORD		

SEF888T



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Wait at least 5 seconds.

OR



- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Select "MODE 7" with GST.

OR




- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

TROUBLE DIAGNOSIS FOR DTC P1492

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (Circuit) (For California) (Cont'd)

EC-CANI/V-01

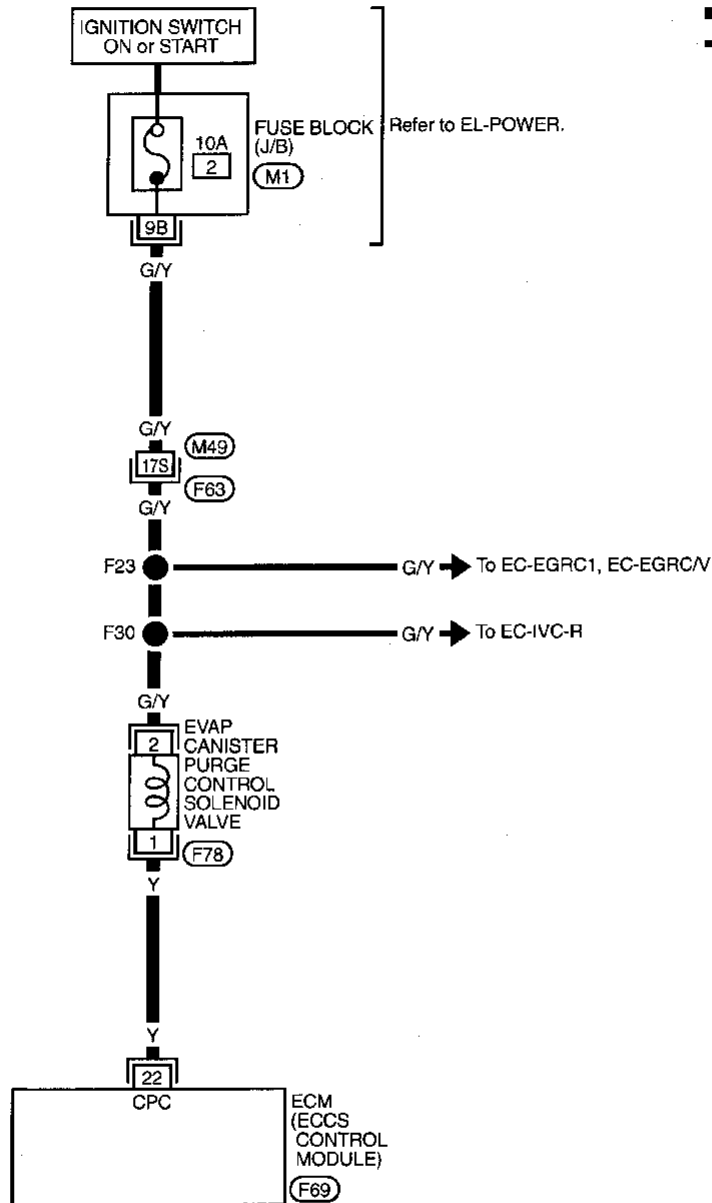

— : Detectable line for DTC
 — : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX



Refer to last page (Foldout page).

(M49) (F63)

(M1)

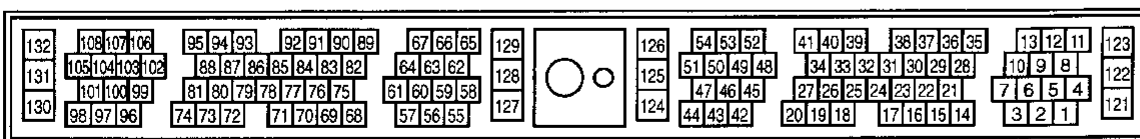


TROUBLE DIAGNOSIS FOR DTC P1492

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (Circuit) (For California) (Cont'd)


DIAGNOSTIC PROCEDURE

INSPECTION START

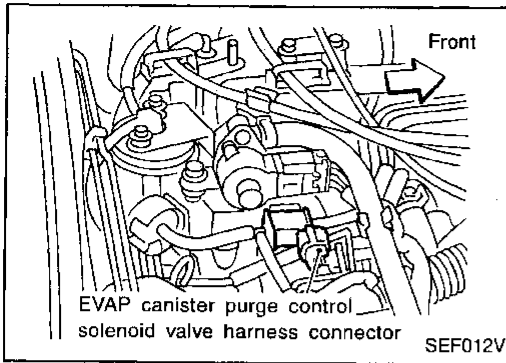


A
CHECK POWER SUPPLY.
 1. Disconnect EVAP canister purge control solenoid valve harness connector.
 2. Turn ignition switch "ON".
 3. Check voltage between terminal ② and ground with CONSULT or tester.
Voltage: Battery voltage

NG → Check the following.
 • Harness connector (M49, F63)
 • 10A fuse
 • Harness for open or short between EVAP canister purge control solenoid valve and fuse
 If NG, repair harness or connectors.

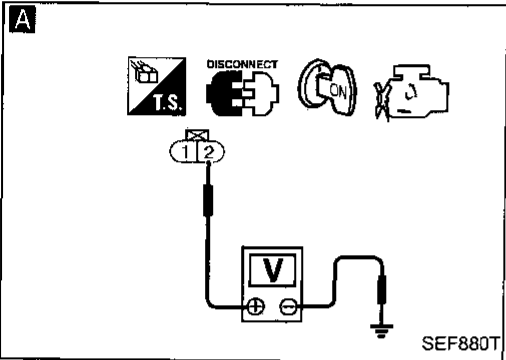

B
CHECK OUTPUT SIGNAL CIRCUIT.
 1. Turn ignition switch "OFF".
 2. Disconnect ECM harness connector.
 3. Check harness continuity between ECM terminal ② and terminal ①.
Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

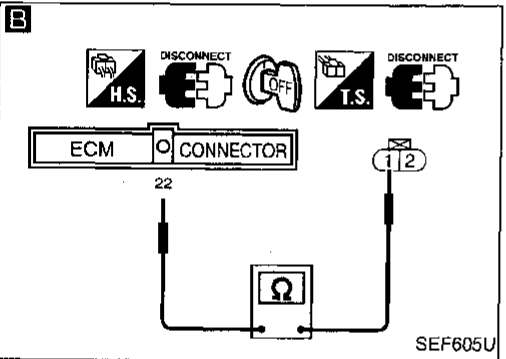

CHECK COMPONENT
 (EVAP canister purge control solenoid valve).
 Refer to "COMPONENT INSPECTION" below.

NG → Replace EVAP canister purge control solenoid valve.


Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

COMPONENT INSPECTION

EVAP canister purge control solenoid valve

Check air passage continuity.

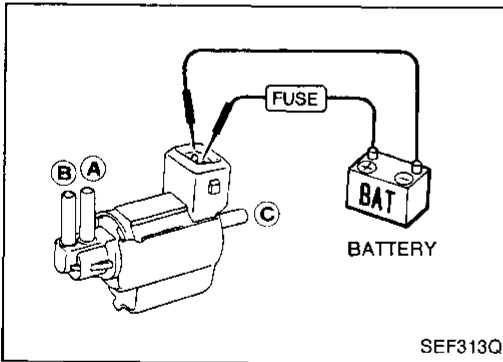


Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.



Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California)

SYSTEM DESCRIPTION

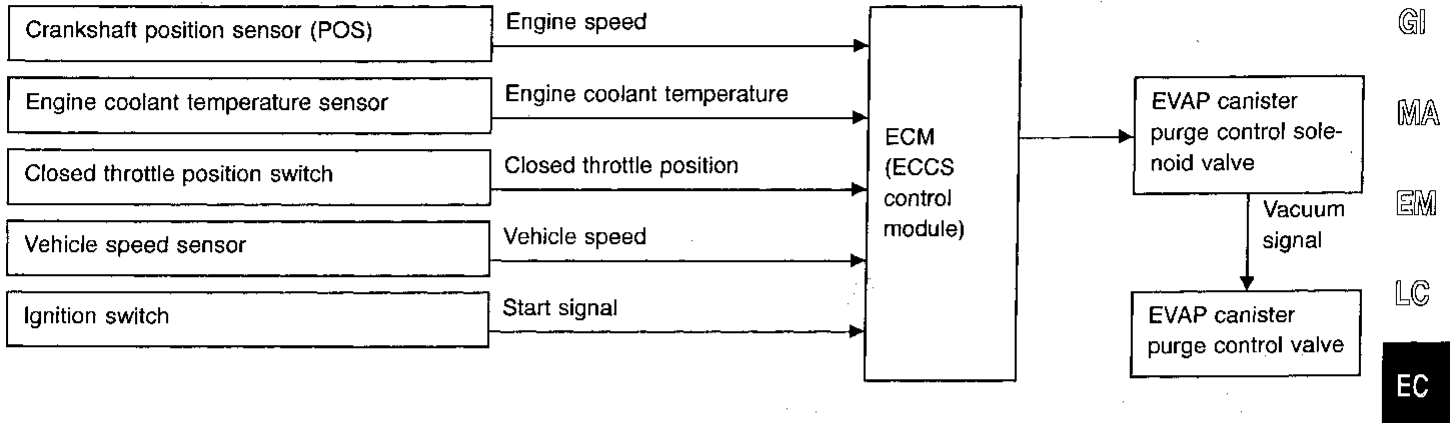

This system controls the vacuum signal applied to the EVAP canister purge control valve. When the ECM detects any of the following conditions, current does not flow through the EVAP canister purge control solenoid valve. The solenoid valve cuts the vacuum signal so that the EVAP canister purge control valve remains closed.

- Start switch "ON"
- Closed throttle position
- Low or high engine coolant temperature
- During deceleration
- Engine stopped

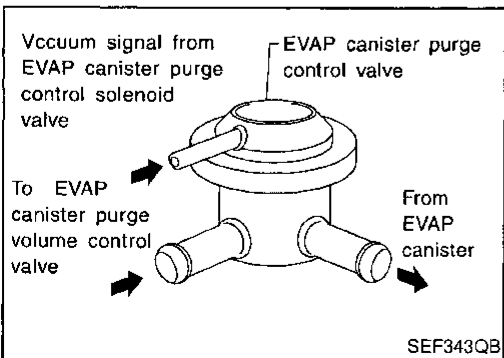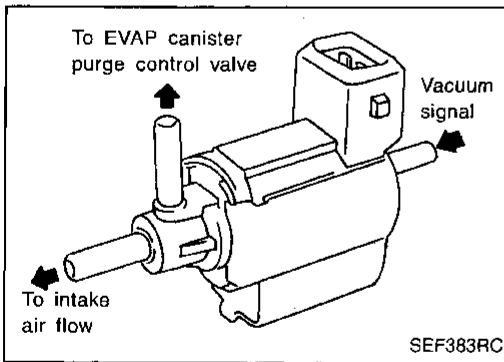

COMPONENT DESCRIPTION

EVAP canister purge control solenoid valve

The EVAP canister purge control solenoid valve responds to signals from the ECM. When the ECM sends an OFF signal, the vacuum signal (from the intake manifold to the EVAP canister purge control valve) is cut. When the ECM sends an ON (ground) signal, the vacuum signal passes through the EVAP canister purge control solenoid valve. The signal then reaches the EVAP canister purge control valve.


EVAP canister purge control valve

When the vacuum signal is cut by EVAP canister purge control solenoid valve, EVAP canister purge control valve shuts off the EVAP purge line.

TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

EVAPORATIVE EMISSION SYSTEM DIAGRAM

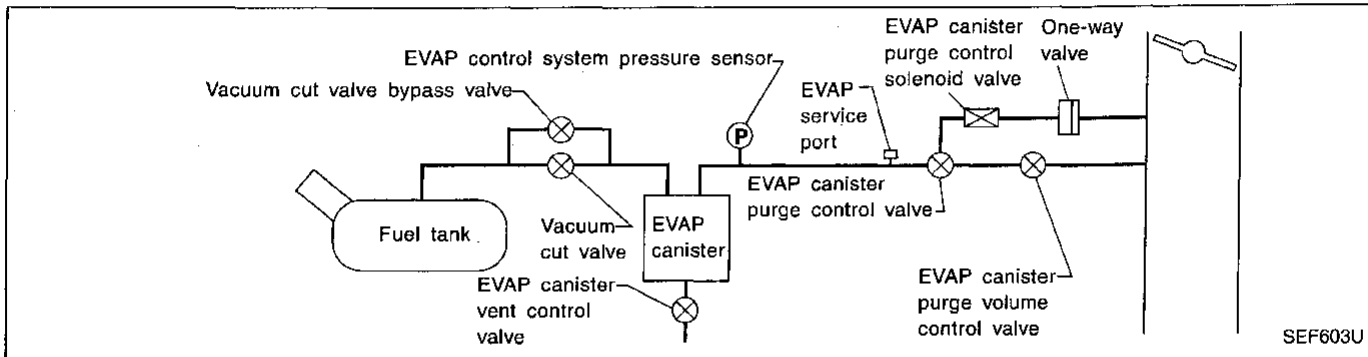

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG CONT S/V	• Engine: After warming up Idle	OFF
	2,000 rpm	ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22	Y	EVAP canister purge control solenoid valve	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
			Engine is running. └ Engine speed is 2,000 rpm.	Approximately 0V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1493 0312	• EVAP canister purge control valve does not operate properly (stuck open).	<ul style="list-style-type: none"> • EVAP canister purge control valve • EVAP canister purge control solenoid valve • Vacuum hoses for clogging or disconnection • EVAP control system pressure sensor • EVAP canister vent control valve • Water separator • EVAP canister saturated with water

TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If both DTC P1492 (0807) and P1493 (0312) are displayed, first perform "TROUBLE DIAGNOSIS FOR DTC P1492". Refer to EC-449.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.



- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "PURG CN/V & S/V P1493" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- 5) Touch "START".
- 6) Start engine (TCS switch "OFF") and let it idle for at least 90 seconds.
- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 30 seconds.)
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
CMPS-RPM (POS): 1,000 - 2,100 rpm
B/FUEL SCHDL: 2 - 4.8 ms
Selector lever: Suitable position
 If "TESTING" is not displayed after 5 minutes, retry from step 2).
- 8) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-457.

■ PURG CNV&S/V P1493 ■

THIS SUPPORT FUNCTION IS FOR DTC P1493. SEE THE SERVICE MANUAL ABOUT THE OPERATING CONDITION FOR THIS DIAGNOSIS.

EXIT START

SEF610U

■ PURG CNV&S/V P1493 ■

***** OK *****

■ SELF-DIAG RESULTS ■

***** NO FAILURE *****

END PRINT

SEF611U

ENGINE SPD	825RPM
COOLANT TEMP	69°C
VEHICLE SPD	0MPH
IGN ADVANCE	8.0°
CALC LOAD	28.2%
MAP	36KPa
MAF	5.20gm/s
THROTTLE POS	0.0%
INTAKE AIR	27°C
FUEL SYS #1	OLDRIVE
FUEL SYS #2	UNUSED
SHORT FT #1	0.8%
LONG FT #1	0.0%
O2S B1 S1	0.200V
O2FT B1 S1	0.8%
O2S B1 S2	0.010V

SEF519R



- OR
- 1) Lift up vehicle.
 - 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
 - 3) Select "MODE 1" with GST.
 - 4) Check coolant temperature.
Coolant temperature: 40 - 100°C (104 - 212°F)
 Be sure that water temperature does not exceed 100°C. If it becomes higher than 100°C, cool down the engine and perform the procedure again from the beginning.
 - 5) Turn ignition switch "OFF" and wait at least 5 seconds.
 - 6) Turn ignition switch "ON" and wait at least 15 seconds.

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL

IDX


TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

- 7) Restart engine and let it idle for at least 80 seconds.
- 8) Maintain the following conditions for at least 30 seconds.
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
Engine speed: 1,000 - 2,100 rpm
Gear position: Suitable gear position
Coolant temperature: 40 - 100°C (104 - 212°F)
- 9) Select "MODE 7" with GST.

NOTE:

- Hold the accelerator pedal as steady as possible during driving in steps 8.
- If the driving conditions are not satisfied in steps 8, restart the procedure.
- It is better that the fuel level is low.

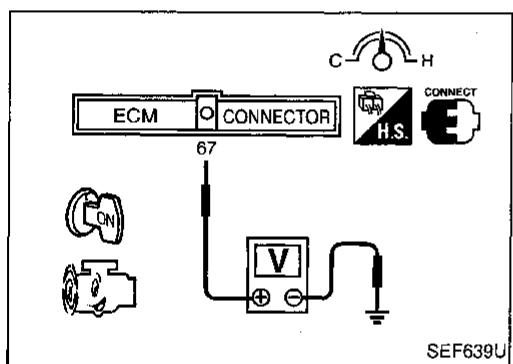

OR



- 1) Lift up vehicle.
- 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 3) Check voltage between ECM terminal 67 and ground
Voltage: 0.8 - 1.5V
Perform the following procedure before the voltage drops below 0.8V. If the voltage drops below 0.8V, cool down the engine and perform the entire procedure all over again.
- 4) Turn ignition switch "OFF" and wait at least 5 seconds.
- 5) Turn ignition switch "ON" and wait at least 15 seconds.
- 6) Restart engine and let it idle for at least 80 seconds.
- 7) Maintain the following conditions for at least 30 seconds.
Vehicle speed: 40 - 100 km/h (25 - 62 MPH)
Engine speed: 1,000 - 2,100 rpm
Gear position: Suitable gear position
Check voltage between ECM terminal 67 and ground: 0.8 - 1.5V
- 8) Stop the vehicle, turn ignition switch "OFF", wait at least 5 seconds, and then turn "ON".
- 9) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.





NOTE:

- Hold the accelerator pedal as steady as possible during driving in steps 7.
- If the driving conditions are not satisfied in steps 7, restart the procedure.
- It is better that the fuel level is low.

TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

DIAGNOSTIC PROCEDURE

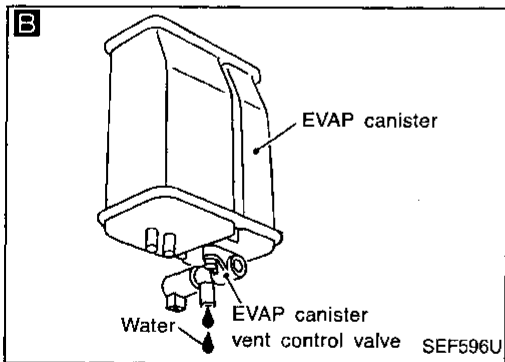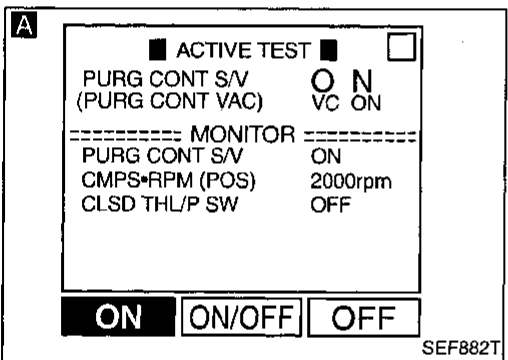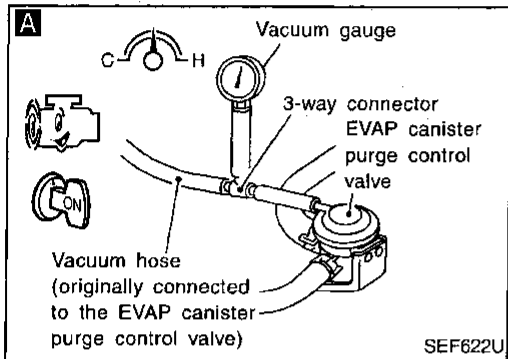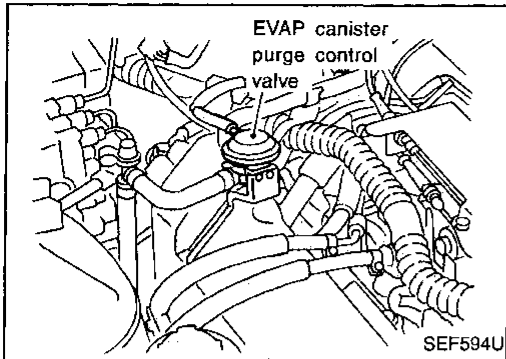

INSPECTION START

A
CHECK VACUUM SIGNAL.
 1. Disconnect vacuum hose to EVAP canister purge control valve and install vacuum gauge.
 2. Start engine.
 3. Perform "PURG CONT S/V" in "ACTIVE TEST" mode.
 4. Select "ON" and "OFF" on CONSULT screen to turn on "PURG CONT S/V".
 5. Check vacuum hose for vacuum while revving engine up to 2,000 rpm.
ON: Vacuum should exist.
OFF: Vacuum should not exist.

OR
 1. Start engine and warm it up sufficiently.
 2. Stop engine.
 3. Disconnect vacuum hose to EVAP canister purge control valve.
 4. Install vacuum gauge and start engine.
 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.
ON: Vacuum should exist.
OFF: Vacuum should not exist.

NG → **CHECK COMPONENTS** (EVAP canister purge control solenoid valve). Refer to "COMPONENTS INSPECTION" on next page.

OK → **Check vacuum hoses** for improper connection, clogging or disconnection. Refer to Vacuum Hose Drawing", EC-18.

OK → **CHECK COMPONENT** (EVAP canister vent control valve). Refer to "COMPONENTS INSPECTION", EC-459.

NG → **Replace EVAP canister vent control valve and/or water separator.**

B
CHECK IF EVAP CANISTER IS SATURATED WITH WATER.
 1. Remove EVAP canister with vent control valve attached.
 2. Check if water drains from the EVAP canister.
 If it will, weigh the EVAP canister with the vent control valve attached.
 If the weight is:
More than 1.8 kg (4.0 lb) → NG
Less than 1.8 kg (4.0 lb) → OK

NG → **Check the following.**
 1. Visually check the EVAP canister for damage.
 2. Check hose connection between EVAP canister and water separator for clogging and poor connection.
 3. Check water separator. Refer to "COMPONENT INSPECTION", EC-459.
 If NG, repair hose or replace EVAP canister or water separator.

OK → **CHECK COMPONENT** (EVAP canister purge control valve). Refer to "COMPONENT INSPECTION", EC-459.




NG → **Replace EVAP canister purge control valve.**

Ⓐ

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

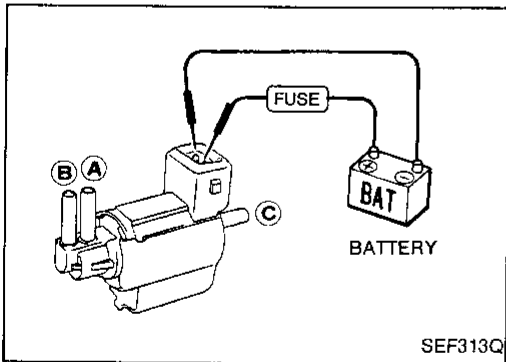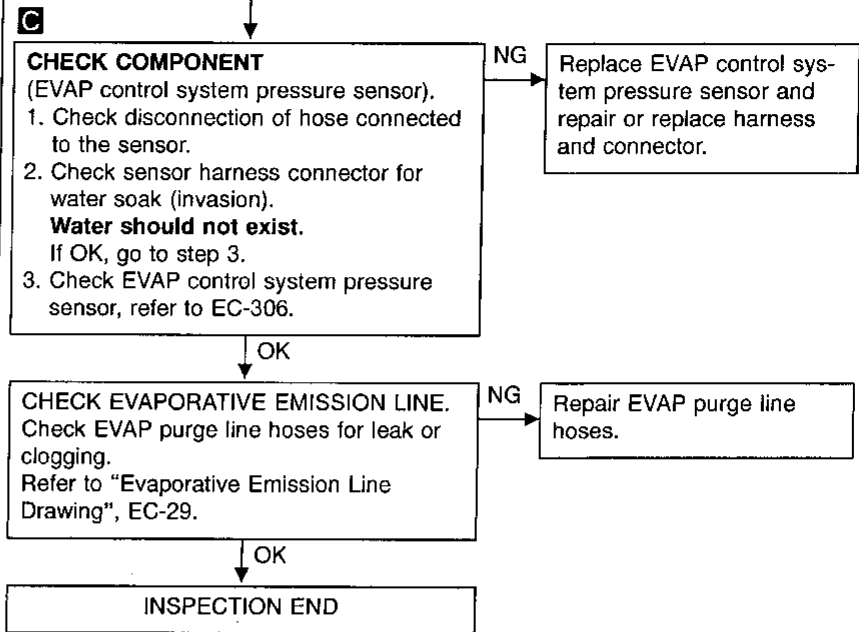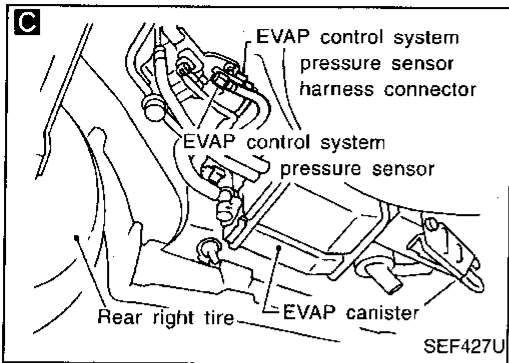

COMPONENT INSPECTION

EVAP canister purge control solenoid valve

Check air passage continuity.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12V direct current supply between terminals	Yes	No
No supply	No	Yes

If NG, replace solenoid valve.


TROUBLE DIAGNOSIS FOR DTC P1493

Evaporative Emission (EVAP) Canister Purge Control Valve/Solenoid Valve (For California) (Cont'd)

EVAP canister purge control valve

Check EVAP canister purge control valve as follows:


1. Blow air in port (A), (B) and (C), then ensure that there is no leakage.
2. Apply vacuum to port (A). [Approximately -13.3 to -20.0 kPa (-100 to -150 mmHg, -3.94 to -5.91 inHg)]
Blow air in port (C) and ensure free flow out of port (B).

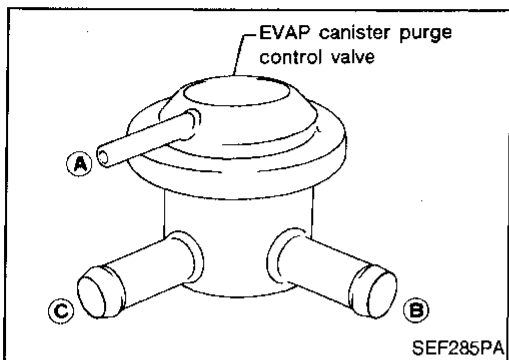

EVAP canister vent control valve


Check air passage continuity.

- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.

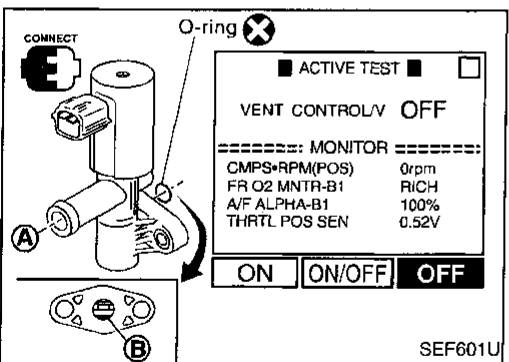

Condition	Air passage continuity between (A) and (B)
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

OR

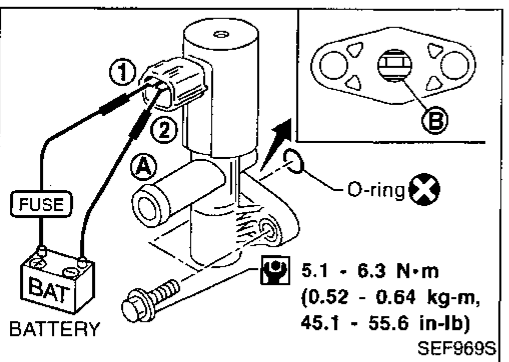

Condition	Air passage continuity between (A) and (B)
12V direct current supply between terminals (1) and (2)	No
No supply	Yes

If NG, clean valve using air blower or replace as necessary.
If the portion (B) is rusted, replace EVAP canister vent control valve.


Make sure new O-ring is installed properly.

Water separator


1. Check visually for insect's nest in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that (A) and (C) are not clogged by blowing air into (B) with (A), and then (C) plugged.
5. In case of NG in items 2 - 4, replace the parts.

NOTE:

Do not disassemble water separator.

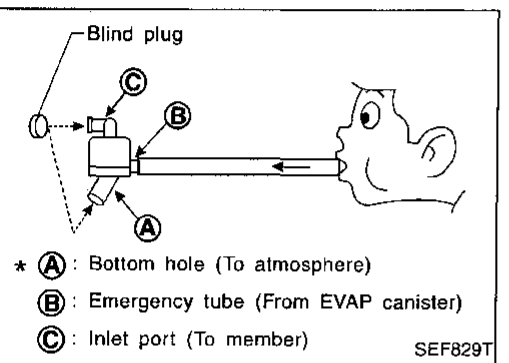

TROUBLE DIAGNOSIS FOR DTC P1706

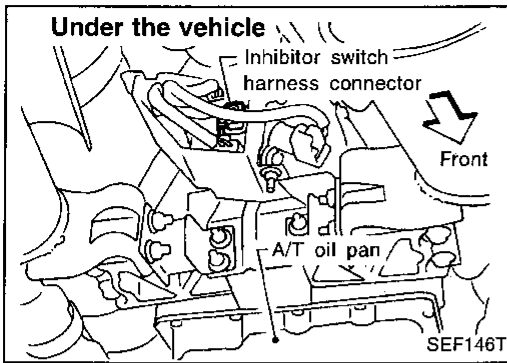

Park/Neutral Position Switch

COMPONENT DESCRIPTION

When the gear position is in "P" or "N", park/neutral position is "ON". ECM detects the position because the continuity of the line (the "ON" signal) exists.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
P/N POSI SW	● Ignition switch: ON	ON
	Except above	OFF

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
101	G/OR	Inhibitor switch	Ignition switch "ON" └ Gear position is "N" or "P".	Approximately 0V
			Ignition switch "ON" └ Except the above gear position	Approximately 5V

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
P1706 1003	<ul style="list-style-type: none"> The signal of the park/neutral position switch is not changed in the process of engine starting and driving. 	<ul style="list-style-type: none"> Harness or connectors (The inhibitor switch circuit is open or shorted.) Harness or connectors (The park/neutral position relay circuit is open or shorted.) Inhibitor switch Park/neutral position relay

TROUBLE DIAGNOSIS FOR DTC P1706

Park/Neutral Position Switch (Cont'd)

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.



- 1) Turn ignition switch "ON".
- 2) Perform "PARK/NEUT POSI SW CKT" in "FUNCTION TEST" mode with CONSULT.

OR

- 2) Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT. Then check the "P/N POSI SW" signal under the following conditions.

Position (Selector lever)	Known good signal
"N" and "P" positions	ON
Except the above position	OFF

If NG, go to "DIAGNOSTIC PROCEDURE", EC-463.
If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT.
- 4) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 5) Maintain the following conditions for at least 60 consecutive seconds.

CMPS-RPM (REF): 1,500 - 2,200 rpm

COOLAN TEMP/S: More than 70°C (158°F)

B/FUEL SCHDL: 1.4 - 5.8 ms

VHCL SPEED SE: 70 - 100 km/h (43 - 62 MPH)

Selector lever: Suitable position

OR


OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the park/neutral position switch circuit. During this check, a 1st trip DTC might not be confirmed.




- 1) Turn ignition switch "ON".
- 2) Check voltage between ECM terminal (101) and body ground under the following conditions.


Condition (Gear position)	Voltage (V) (Known good data)
"P" and "N" position	Approx. 0
Except the above position	Approx. 5

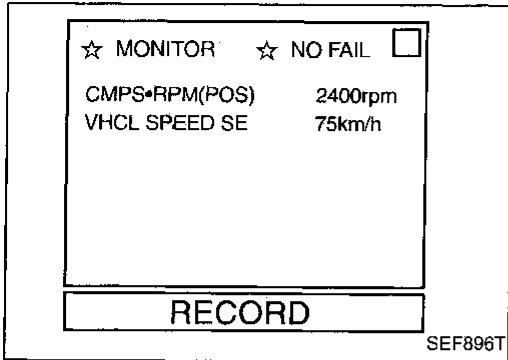


SEF896T

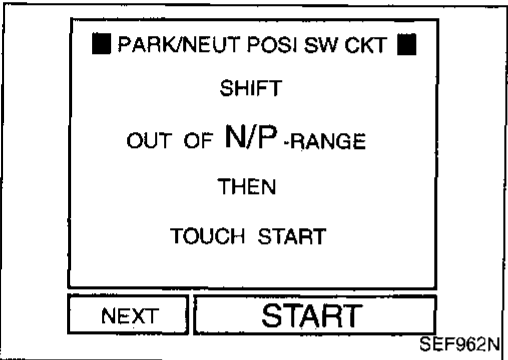

SEF962N

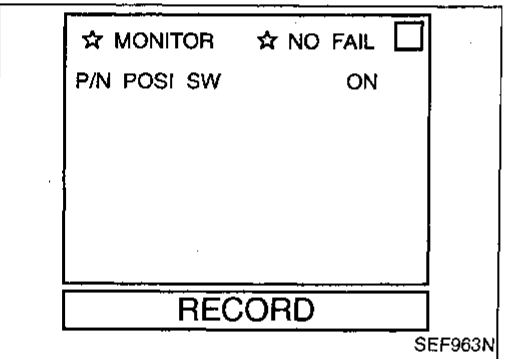

SEF963N

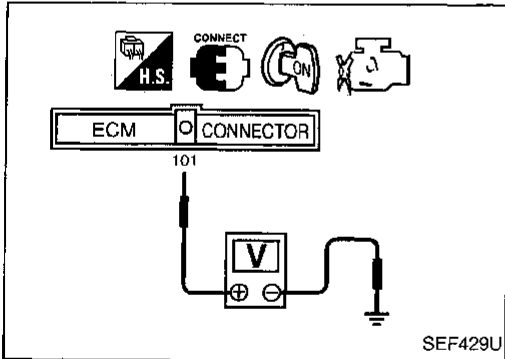

SEF429U

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


TROUBLE DIAGNOSIS FOR DTC P1706

Park/Neutral Position Switch (Cont'd)

EC-PNP/SW-01


— : Detectable line for DTC

— : Non-detectable line for DTC

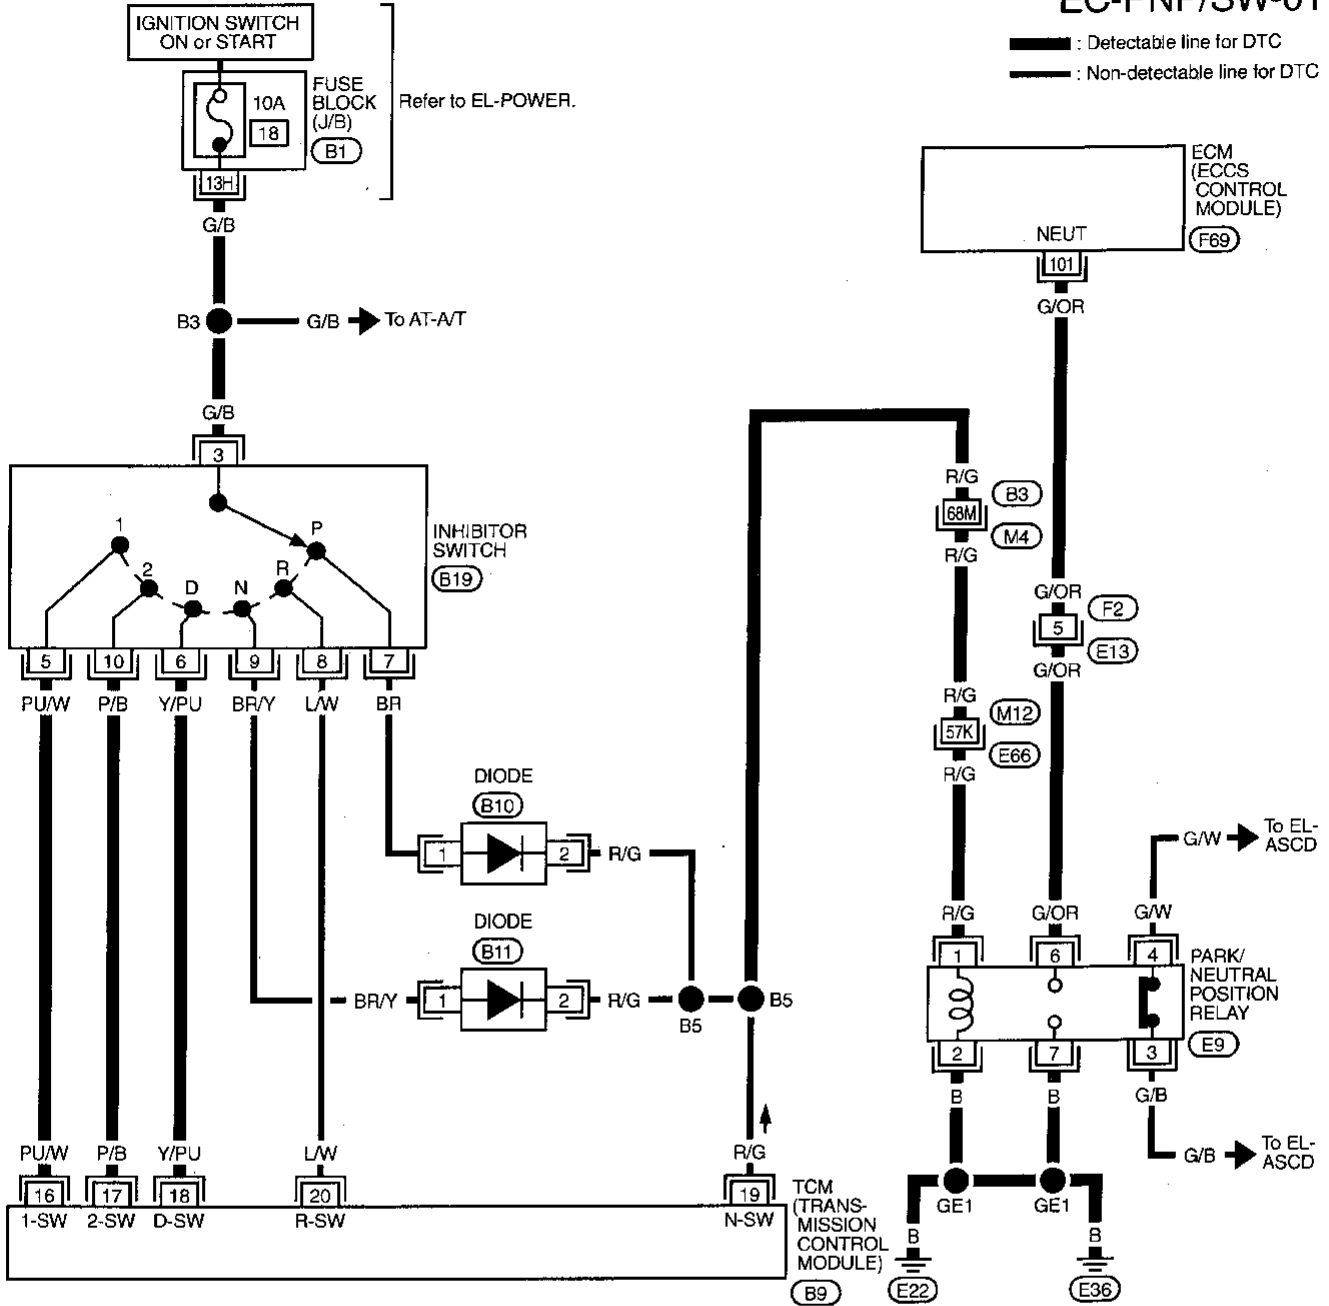

Refer to last page (Foldout page).






- (E66), (M12)
- (M4), (B3)
- (B1)

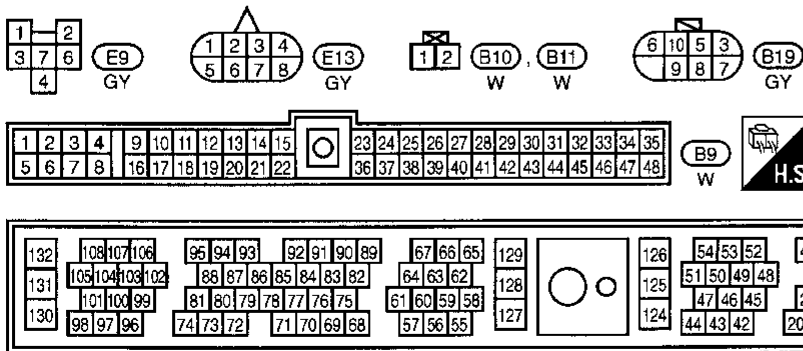

TROUBLE DIAGNOSIS FOR DTC P1706

Park/Neutral Position Switch (Cont'd)

DIAGNOSTIC PROCEDURE

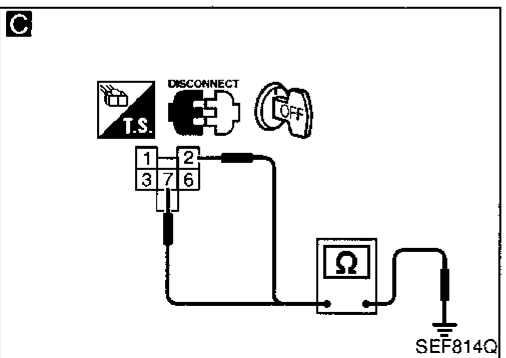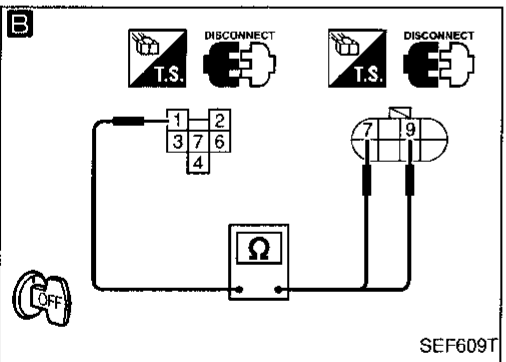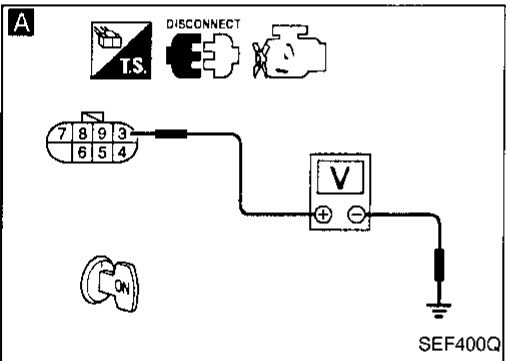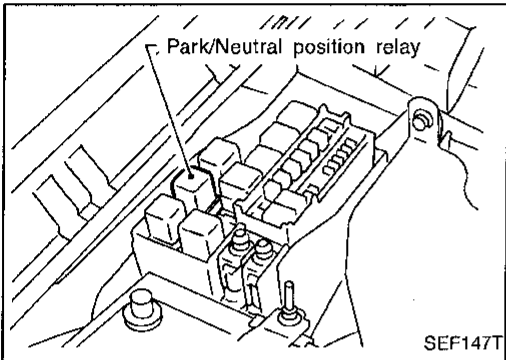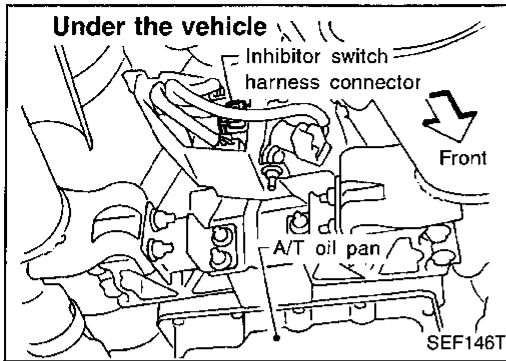

INSPECTION START

A
CHECK POWER SUPPLY.
1. Disconnect inhibitor switch harness connector.
2. Turn ignition switch "ON".
3. Check voltage between terminal ③ and ground with CONSULT or tester.
Voltage: Battery voltage

NG → Check the following.
• 10A fuse
• Harness for open or short between inhibitor switch and fuse
If NG, repair harness or connectors.

OK
B
CHECK OUTPUT SIGNAL CIRCUIT-I.
1. Turn ignition switch "OFF".
2. Disconnect park/neutral position relay harness connector.
3. Check harness continuity between relay terminal ① and inhibitor switch terminals ⑦, ⑨.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
• Harness connectors (E66), (M12)
• Harness connectors (M4), (B3)
• Harness connectors (diodes) (B10), (B11)
• Harness for open or short between inhibitor switch and relay
If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK
C
CHECK GROUND CIRCUIT.
1. Check harness continuity between relay terminals ②, ⑦ and engine ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Repair harness or connectors.

OK
D
CHECK OUTPUT SIGNAL CIRCUIT-II.
1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal (101) and relay terminal ⑥.
Continuity should exist.
If OK, check harness for short to ground and short to power.




NG → Check the following.
• Harness connectors (E13), (F2)
• Harness for open or short between ECM and relay
If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK
①


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR DTC P1706

Park/Neutral Position Switch (Cont'd)

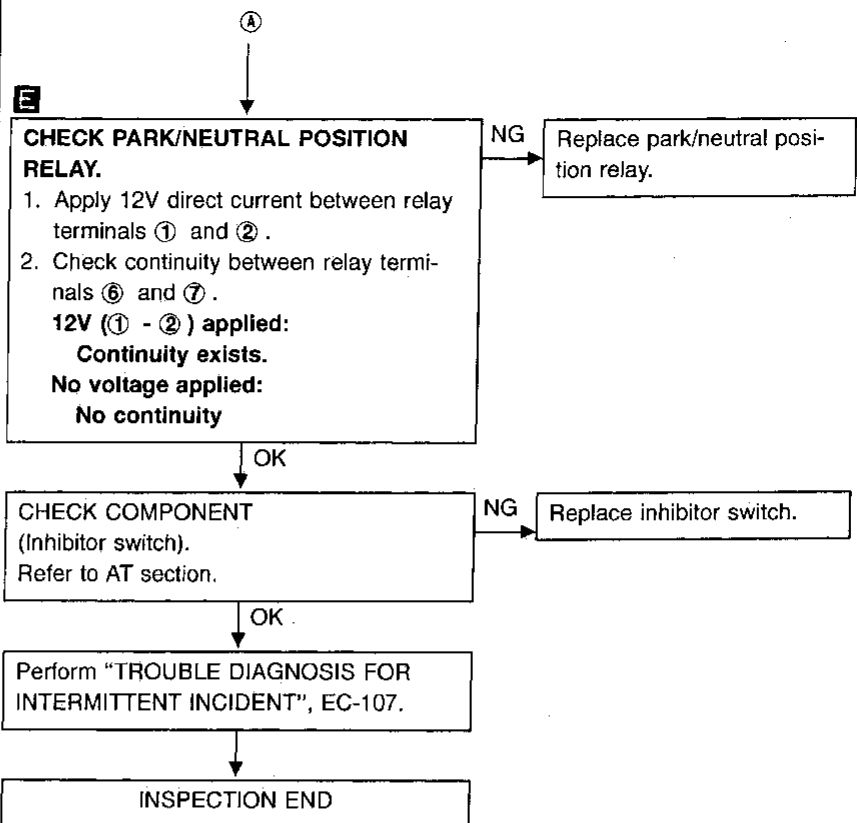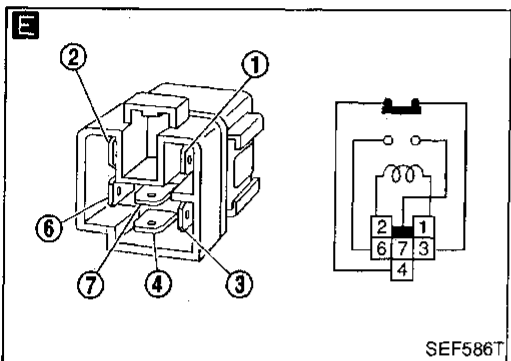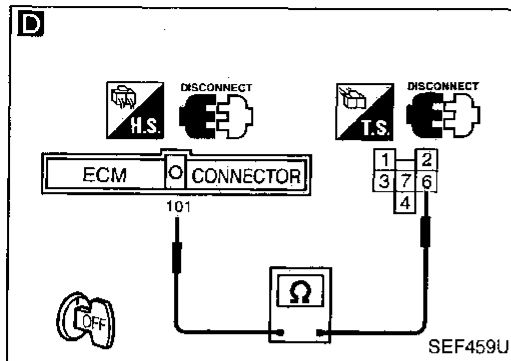

TROUBLE DIAGNOSIS FOR ABS/TCS C/U SIGNAL

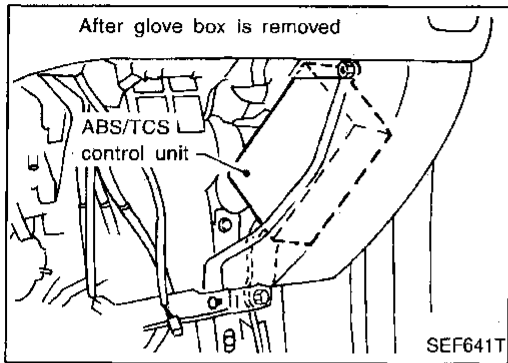

ABS/TCS Control Unit

The malfunction information related to ABS/TCS control unit is transferred through the line (LAN) from ABS/TCS control unit to ECM.

Be sure to erase the malfunction information such as DTC not only for ABS/TCS control unit but also for ECM after the ABS/TCS related repair.

GI
MA
EM

Freeze frame data is not stored in the ECM for the ABS/TCS control unit. The MIL will not light up for ABS/TCS control unit.

LC

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when	Check Items (Possible Cause)
—* 0107	<ul style="list-style-type: none"> ECM receives incorrect voltage from ABS/TCS control unit continuously. 	<ul style="list-style-type: none"> Harness or connectors (The circuit between ECM and ABS/TCS control unit is open or shorted.) ABS/TCS control unit

EC

FE

AT

*: SAE J2012 number is not applicable

PD

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

FA

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

RA

- ① 1) Turn ignition switch "ON".
2) Select "DATA MONITOR" mode with CONSULT.
3) Start engine and let it idle for at least 40 seconds.

BR

OR

- ⓧ 1) Start engine and let it idle for at least 40 seconds.
2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.

ST

RS

DTC erasing procedure for ABS/TCS related repair

Erase DTC code by following procedure:

- ① 1) Turn ignition switch "OFF" and then turn it "ON".
2) Connect CONSULT and select "ABS".
3) Insert UE950 card and install it.
4) Select "ABS" and touch "SELF-DIAG RESULTS".
5) Touch "ERASE".
6) Touch "BACK" then erase malfunction code which has been stored in the TCM or ECM.

BT

HA

EL

DIAGNOSTIC PROCEDURE

Refer to TROUBLE DIAGNOSIS FOR 0404, EC-466.

IDX

ABS/TCS Communication Line

This circuit line is used to control the smooth engine operation of ABS/TCS during the TCS operation. Pulse signals are exchanged between ECM and ABS/TCS control unit.

Be sure to erase the malfunction information such as DTC not only in ABS/TCS control unit but also ECM after the ABS/TCS related repair. Refer to BR section (Self-diagnosis for ABS/TCS control unit, "HOW TO ERASE SELF DIAGNOSTIC RESULTS")

Freeze frame data is not stored in the ECM for the ABS/TCS communication line. The MIL will not light up for the ABS /TCS communication line.

ON BOARD DIAGNOSIS LOGIC

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
—* 0404	<ul style="list-style-type: none"> ● ECM receives incorrect voltage from ABS/TCS control unit continuously. 	<ul style="list-style-type: none"> ● Harness or connectors (The communication line circuit between ECM and ABS/TCS control unit is open or shorted.) ● ABS/TCS control unit ● Dead (Weak) battery

*: SAE J2012 number is not applicable.

DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE

Before performing the following procedure, confirm that battery voltage is more than 10.5V.



- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT.
- 3) Start engine and let it idle for at least 3 seconds.

OR




- 1) Start engine and let it idle for at least 3 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.



TROUBLE DIAGNOSIS FOR ECM — ABS/TCS COMM NG

ABS/TCS Communication Line (Cont'd)

EC-TCS-01

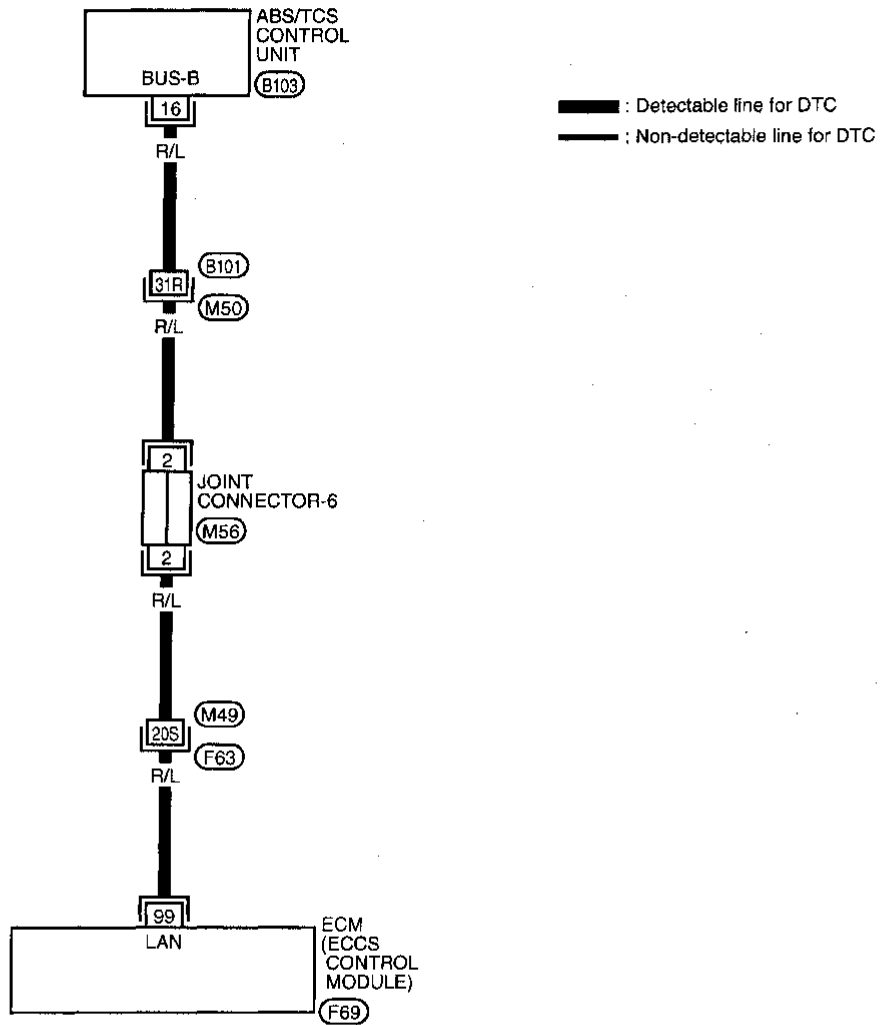


GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX



Refer to last page (Foldout page).




M49, F63
M50, B101

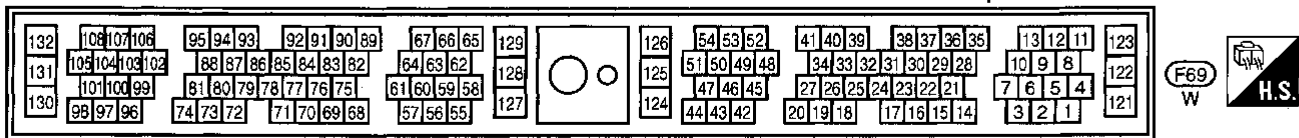

TEC281

TROUBLE DIAGNOSIS FOR ECM — ABS/TCS COMM NG

ABS/TCS Communication Line (Cont'd) DIAGNOSTIC PROCEDURE

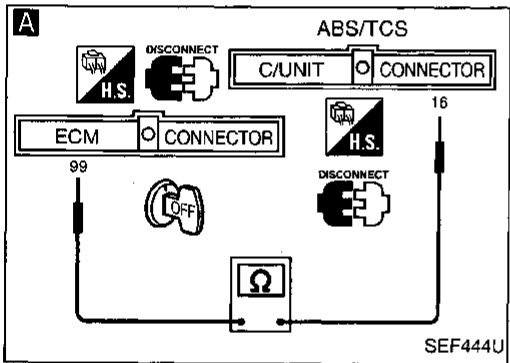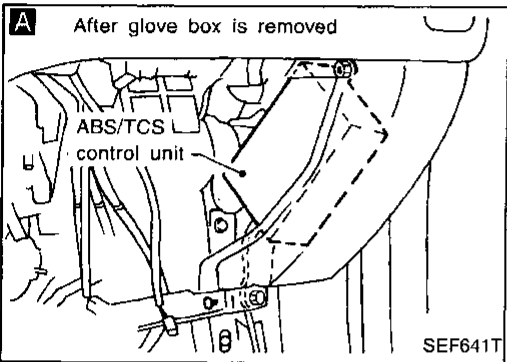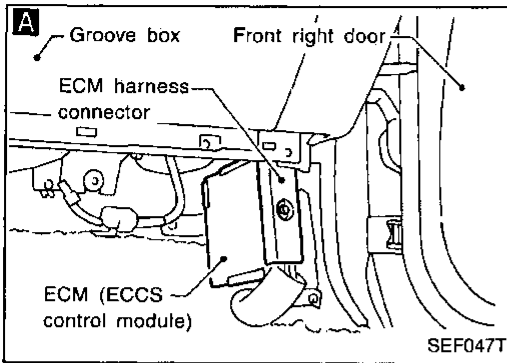

INSPECTION START

A
CHECK INPUT SIGNAL CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector and ABS/TCS control unit harness connector.
3. Check harness continuity between ECM terminal 99 and terminal 16.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.

- Harness connectors (M50, B101)
- Harness connectors (F83, M49)
- Joint connector-6
- Check harness for open or short between ECM and ABS/TCS control unit.

If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK → Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.


INSPECTION END

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat


SYSTEM DESCRIPTION

Input/output signal line

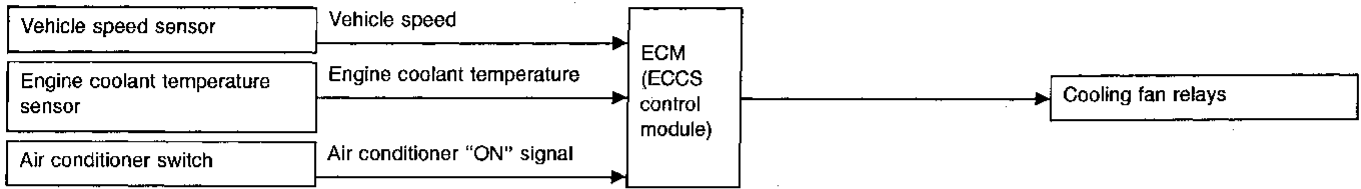

The ECM controls the cooling fan corresponding to vehicle speed, engine coolant temperature and air conditioner ON signal.

Operation

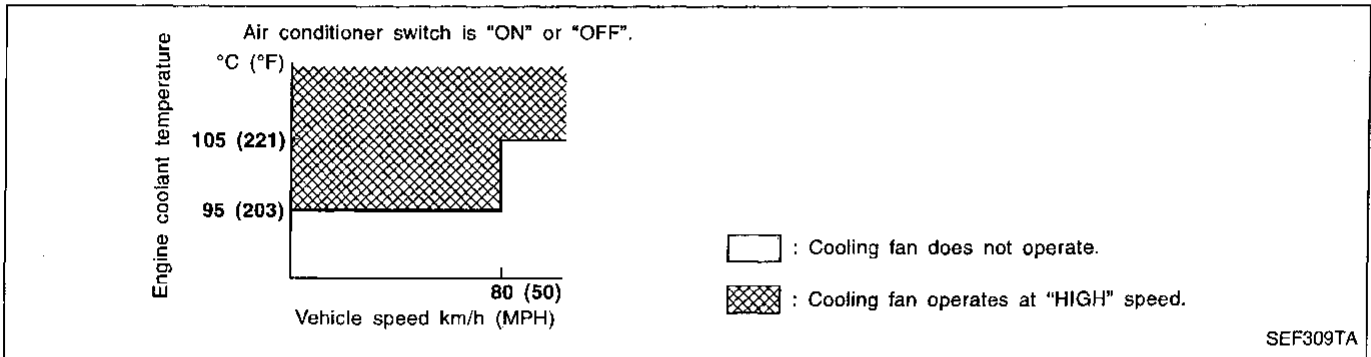

The cooling fan operates at HIGH if diagnostic test mode II (self-diagnostic results) for engine coolant temperature sensor is "NG" or when the ECM fail-safe is activating.

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
COOLING FAN	<ul style="list-style-type: none"> After warming up engine, idle the engine. Air conditioner switch: "OFF" 	Engine coolant temperature is 94°C (201°F) or less OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (219°F) at vehicle speeds less than 80 km/h HIGH
		Engine coolant temperature is 105°C (221°F) or more HIGH

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
27 34	LG LG/R	Cooling fan relay-1 (High) Cooling fan relay-2 (High)	Engine is running. └ Cooling fan is not operating.	BATTERY VOLTAGE (11 - 14V)
			Engine is running. └ Cooling fan is operating.	0 - 1V

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION	
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Air conditioner switch: "OFF"	OFF
		Air conditioner switch: "ON" (Compressor operates.)	ON
COOLING FAN	<ul style="list-style-type: none"> ● After warming up engine, idle the engine. ● Air conditioner switch: "OFF" 	Engine coolant temperature is 94°C (201°F) or less	OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (219°F) at vehicle speed less than 80 km/h	HIGH
		Engine coolant temperature is 105°C (221°F) or more	

ON BOARD DIAGNOSIS LOGIC

This diagnosis continuously monitors the engine coolant temperature.

If the cooling fan or another component in the cooling system malfunctions, the engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

Diagnostic trouble code No.	Malfunction is detected when ...	Check Items (Possible Cause)
OVERHEAT 0208	<ul style="list-style-type: none"> ● Engine coolant reaches an abnormally high temperature. 	<ul style="list-style-type: none"> ● Harness or connectors. (The cooling fan circuit is open or shorted.) ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", (EC-480).</p>

CAUTION:

When a malfunction is indicated, be sure to replace the coolant following the procedure in the MA section ("Changing Engine Coolant", "ENGINE MAINTENANCE"). Also, replace the engine oil.

- a. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to MA section ("Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS").
- b. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)


OVERALL FUNCTION CHECK

Use this procedure to check the overall function of the cooling fan. During this check, a 1st trip DTC might not be confirmed.


WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.


Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

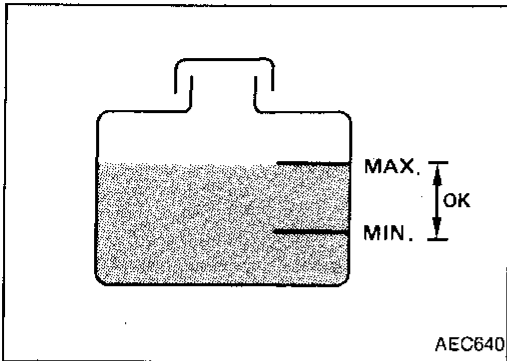

AEC640

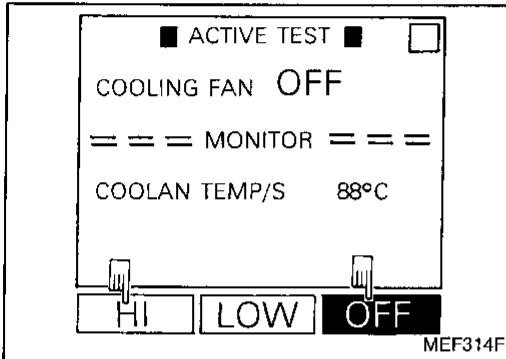

MEF314F

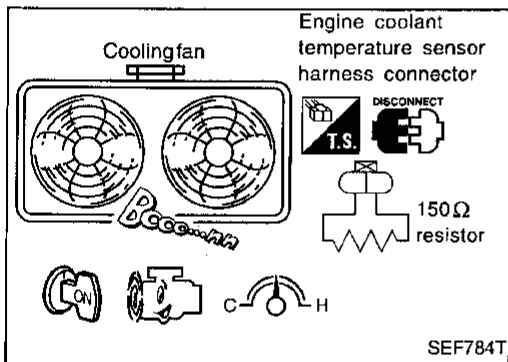

SEF784T

- 1) Check the coolant level in the reservoir tank and radiator. **Allow engine to cool before checking coolant level.** If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "DIAGNOSTIC PROCEDURE", EC-474.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "DIAGNOSTIC PROCEDURE", EC-474.

- 3) Turn ignition switch "ON".
- 4) Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

OR

- 3) Disconnect engine coolant temperature sensor harness connector.

- 4) Connect 150Ω resistor to engine coolant temperature sensor harness connector.
- 5) Start engine and make sure that cooling fan operates at higher speed than low speed. **Be careful not to overheat engine.**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX


TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

EC-COOL/F-01

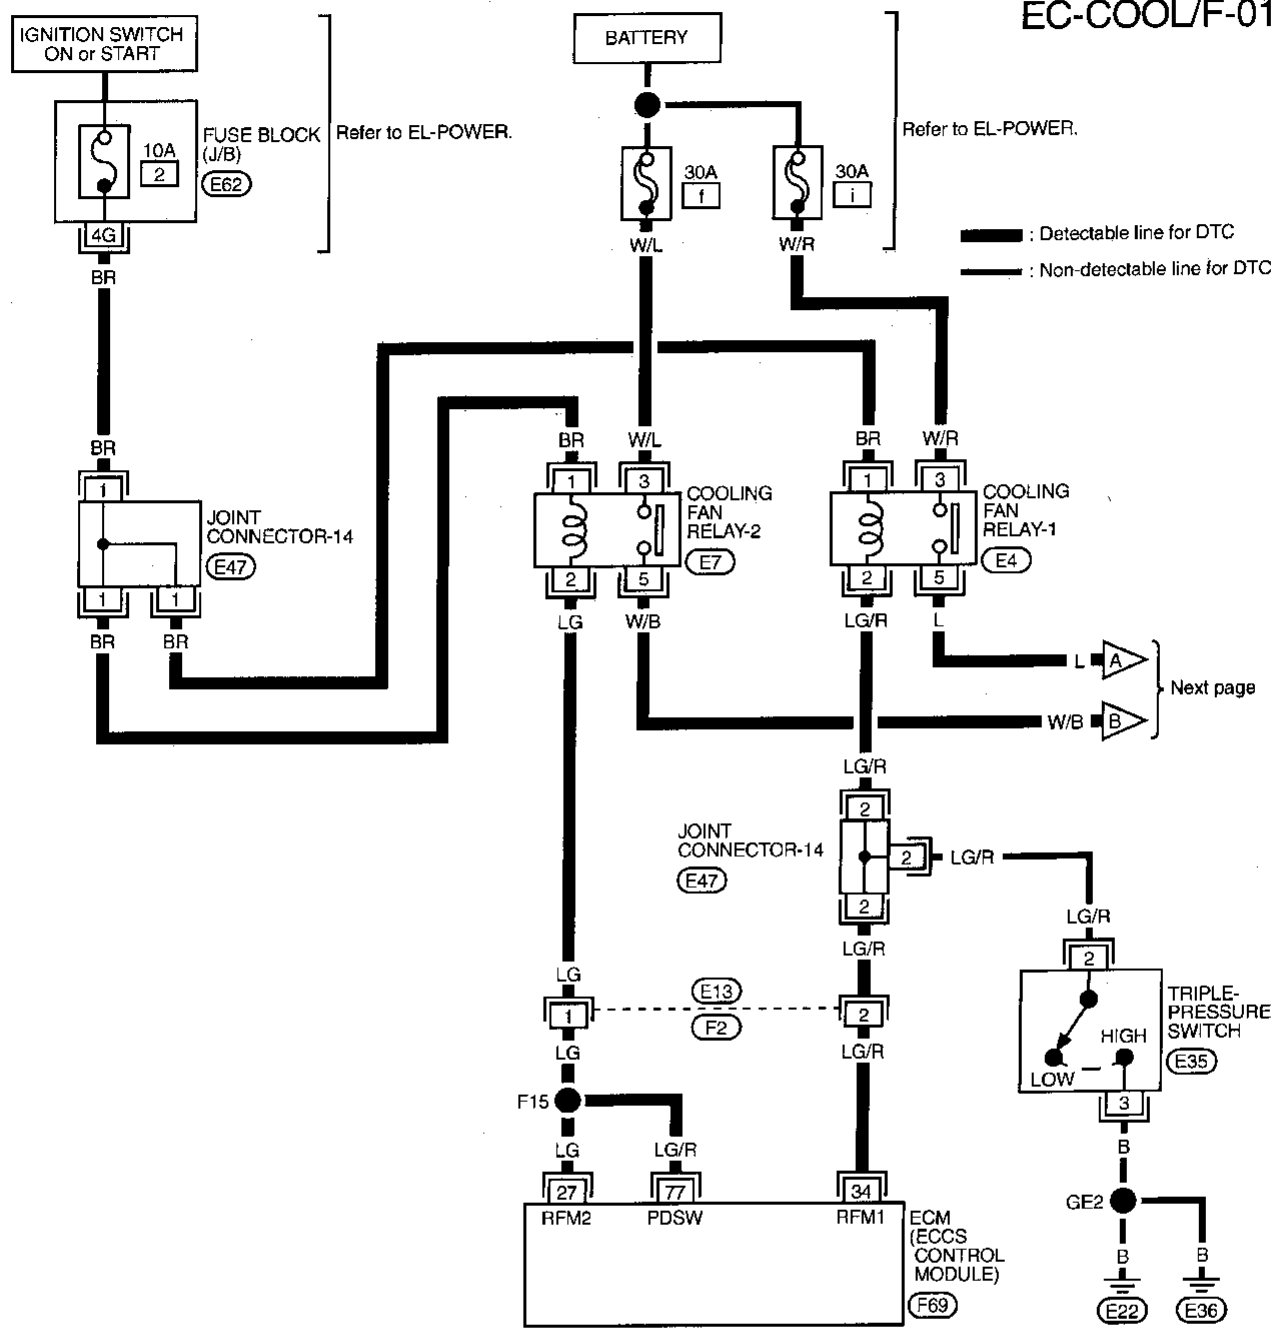


Refer to last page (Foldout page).
E62

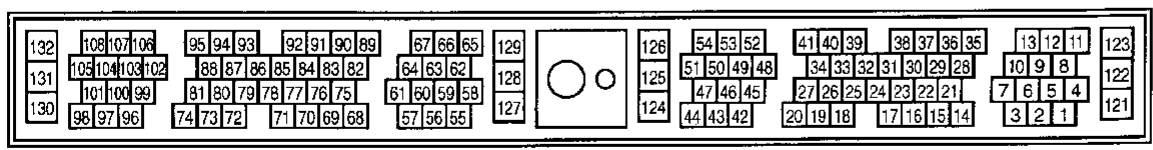


TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

EC-COOL/F-02




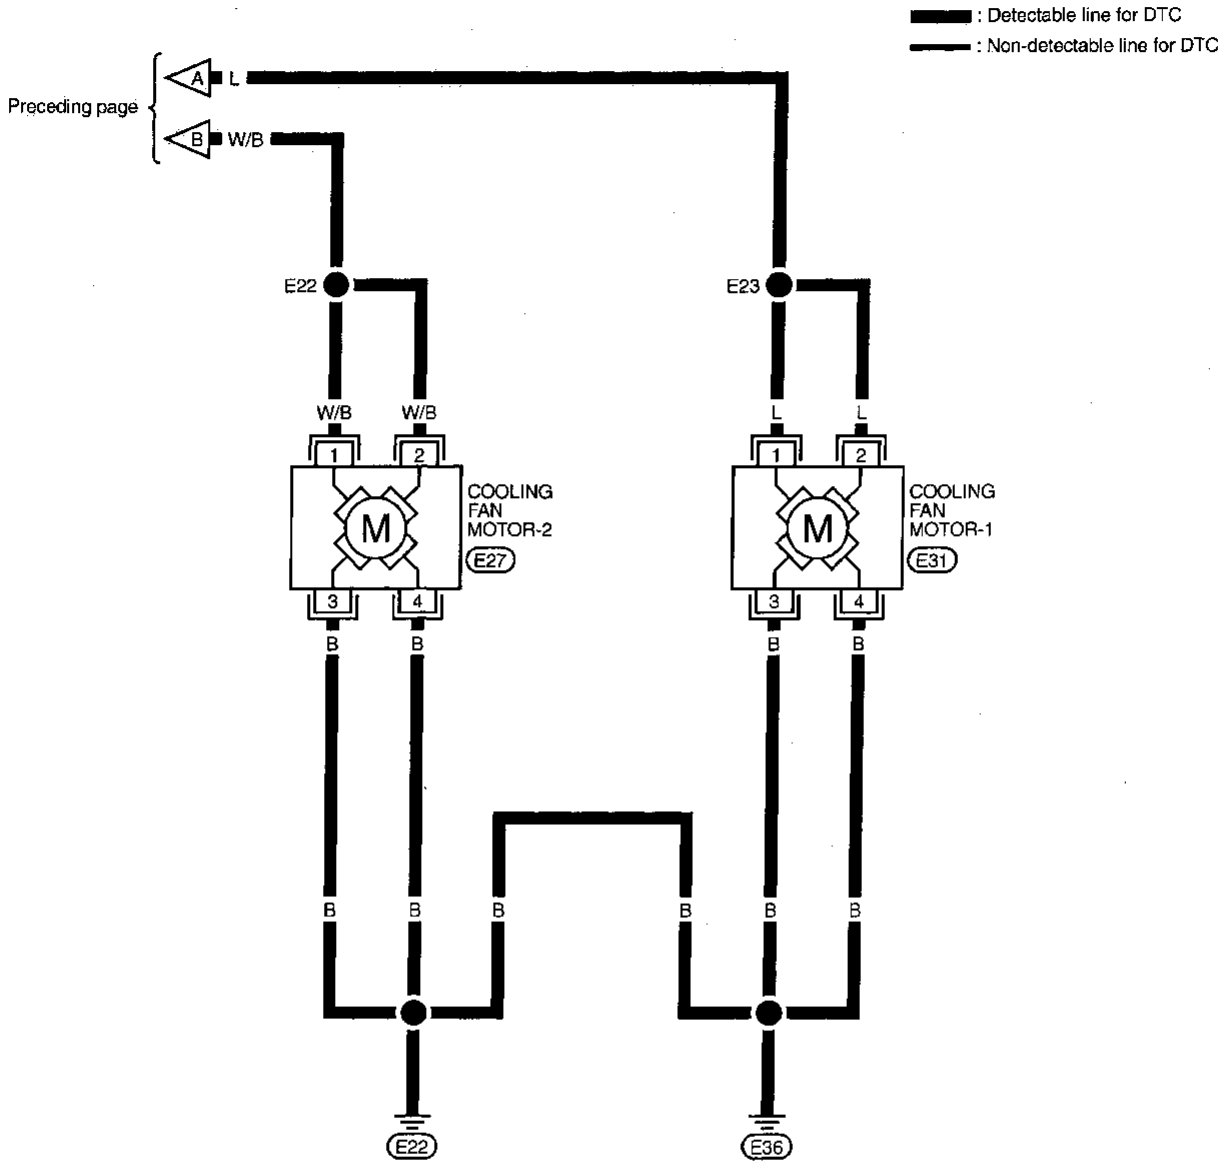


- GI
- MA
- EM
- LC
- EC
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX



TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd) DIAGNOSTIC PROCEDURE

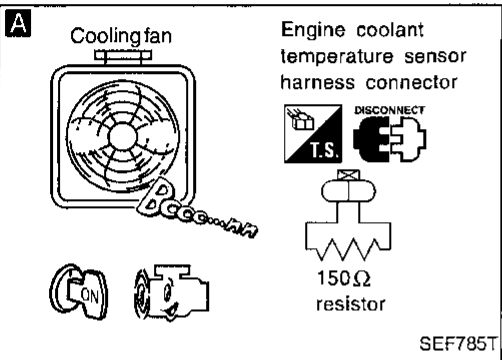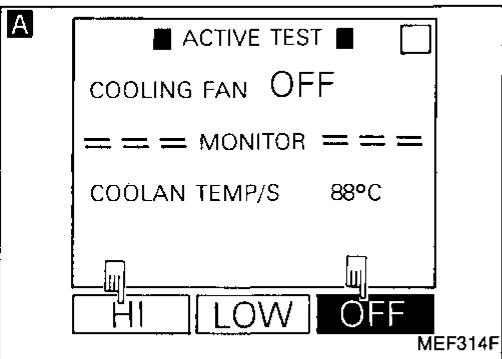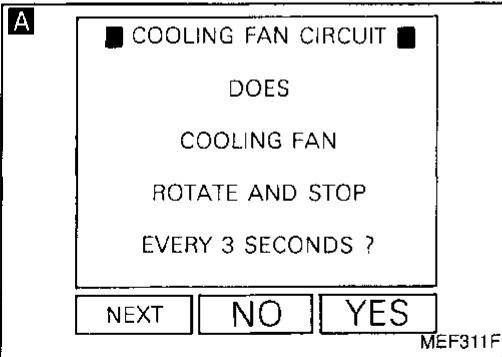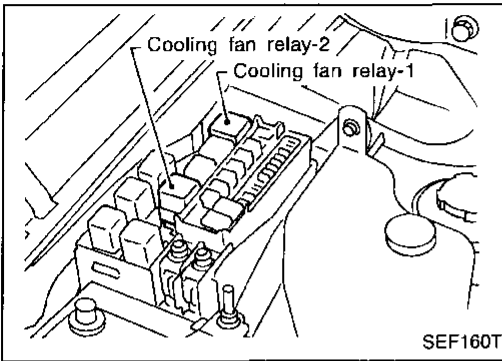

INSPECTION START

A

CHECK COOLING FAN MOTOR-1 OPERATION.

1. Disconnect cooling fan relay-2.
2. Turn ignition switch "ON".
3. Perform "COOLING FAN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

2. Turn ignition switch "ON".
3. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

OR

2. Disconnect engine coolant temperature sensor harness connector.
 3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
 4. Start engine.
 5. Make sure that cooling fan motor-1 operates.
- Be careful not to overheat engine.**

NG → Check cooling fan motor-1 speed control circuit. (Go to PROCEDURE A.)

OK
A

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

B

■ COOLING FAN CIRCUIT ■

DOES
COOLING FAN
ROTATE AND STOP
EVERY 3 SECONDS ?

NEXT NO YES

MEF311F

B

■ ACTIVE TEST ■

COOLING FAN OFF

== MONITOR ==

COOLANT TEMP/S 88°C

HI LOW OFF

MEF314F

B

Cooling fan

Engine coolant temperature sensor harness connector

DISCONNECT T.S. E

150Ω resistor

SEF785T

B

Ⓐ

CHECK COOLING FAN MOTOR-2 OPERATION.

1. Turn ignition switch "OFF".
2. Reconnect cooling fan relay-2.
3. Disconnect cooling fan relay-1.
4. Turn ignition switch "ON".
5. Perform "COOLING FAN CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

4. Turn ignition switch "ON".
5. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.

OR

4. Restart engine and make sure that cooling fan motor-2 operates.
Be careful not to overheat engine.

NG → Check cooling fan motor-2 control circuit.
(Go to **PROCEDURE B**.)

CHECK COMPONENT
(Triple-pressure switch).

Refer to HA section ("Electrical Components Inspection", "TROUBLE DIAGNOSES").

NG → Replace triple-pressure switch.


OK →

Ⓑ
(Go to EC-479.)

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

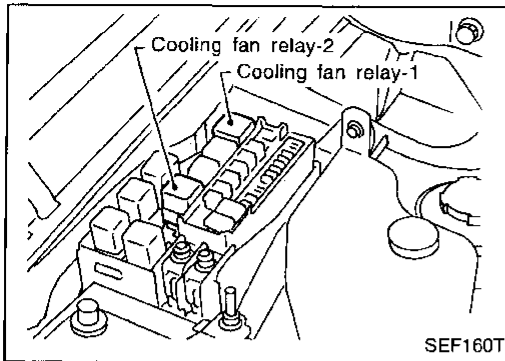

PROCEDURE A

INSPECTION START

C

CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
2. Disconnect cooling fan relay-1.
3. Turn ignition switch "ON".
4. Check voltage between terminals ①, ③ and ground with CONSULT or tester.


Voltage: Battery voltage

NG

Check the following.

- 10A fuse
 - 30A fusible links
 - Joint connector-14
 - Harness for open or short between cooling fan relay-1 and fuse
 - Harness for open or short between cooling fan relay-1 and battery
- If NG, repair harness or connectors.

OK

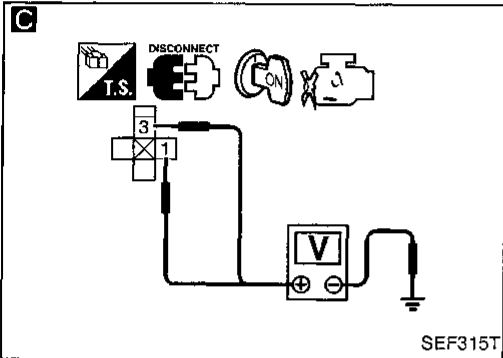

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect cooling fan motor harness connector.

NG

Repair harness or connectors.

- D** 3. Check harness continuity between relay terminal ⑤ and cooling fan motor terminals ① and ②.

Continuity should exist.


If OK, check harness for short.

- E** 4. Check harness continuity between motor-1 terminals ③, ④ and engine ground.

Continuity should exist.

If OK, check harness for short to ground and short to power.

OK

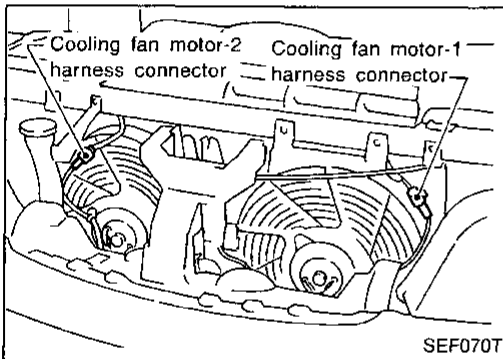

F

CHECK OUTPUT SIGNAL CIRCUIT.

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ③ and relay-1 terminal ②.

Continuity should exist.

If OK, check harness for short to ground and short to power.

NG



Check the following.

- Harness connectors (F2, E13)
- Joint connector-14
- Harness for open or short between cooling fan relay-1 and ECM

If NG, repair open circuit or short to ground or short to power in harness or connectors.



OK

Ⓐ

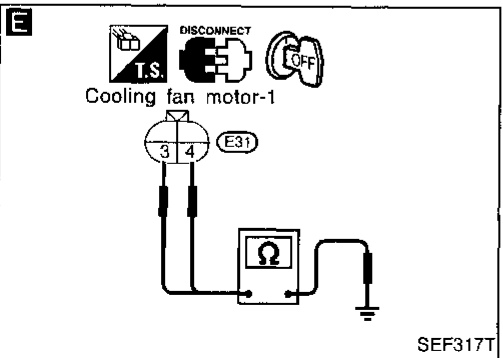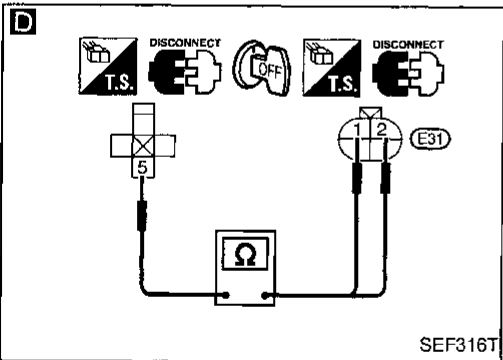

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

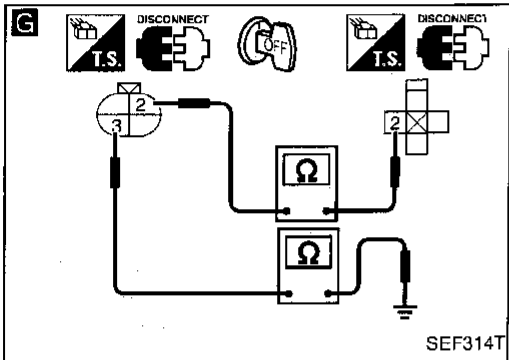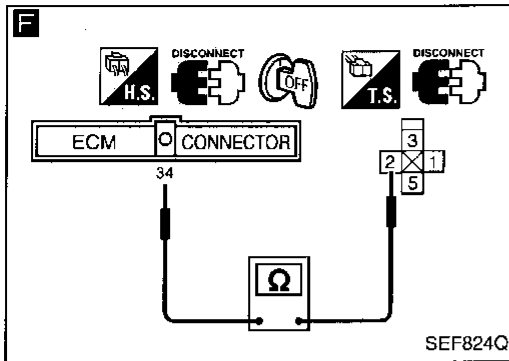

G CHECK HARNESS CONTINUITY BETWEEN COOLING FAN RELAY-1 AND GROUND.

1. Turn ignition switch "OFF".
 2. Disconnect cooling fan relay-1.
 3. Disconnect triple-pressure switch harness connector.
 4. Check harness continuity between relay-1 terminal ② and switch terminal ③, switch terminal ③ and engine ground.
- Continuity should exist.**
If OK, check harness for short to ground and short to power.

NG

Check the following.

- Joint connector-14
- Harness for open or short between triple-pressure switch and relay-1

If NG, repair open circuit or short to ground or short to power in harness or connectors.

CHECK COMPONENT (Cooling fan relay-1). Refer to "COMPONENT INSPECTION", EC-481.

NG Replace cooling fan relay.

CHECK COMPONENT (Cooling fan motors). Refer to "COMPONENT INSPECTION", EC-481.



NG Replace cooling fan motors.

Disconnect and reconnect harness connectors in the circuit. Then retest.

Trouble is not fixed.

Check ECM pin terminals for damage or the connection of ECM harness connector. Reconnect ECM harness connector and retest.

INSPECTION END

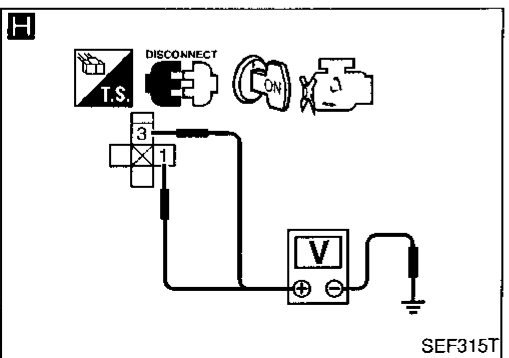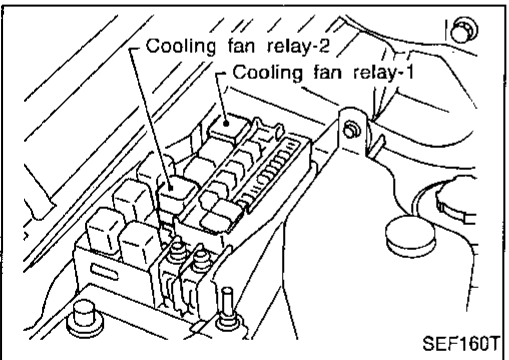

PROCEDURE B

INSPECTION START

H CHECK POWER SUPPLY.

1. Turn ignition switch "OFF".
 2. Disconnect cooling fan relay-2.
 3. Turn ignition switch "ON".
 4. Check voltage between cooling fan relay-2 terminals ①, ③ and ground with CONSULT or tester.
- Voltage: Battery voltage**

NG

Check the following.

- Joint connector-14
- 30A fusible links
- 10A fuse
- Harness continuity between cooling fan relay-2 and fuse
- Harness continuity between cooling fan relay-2 and battery

If NG, repair harness or connectors.

OK

B

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT






HA

EL

IDX


TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

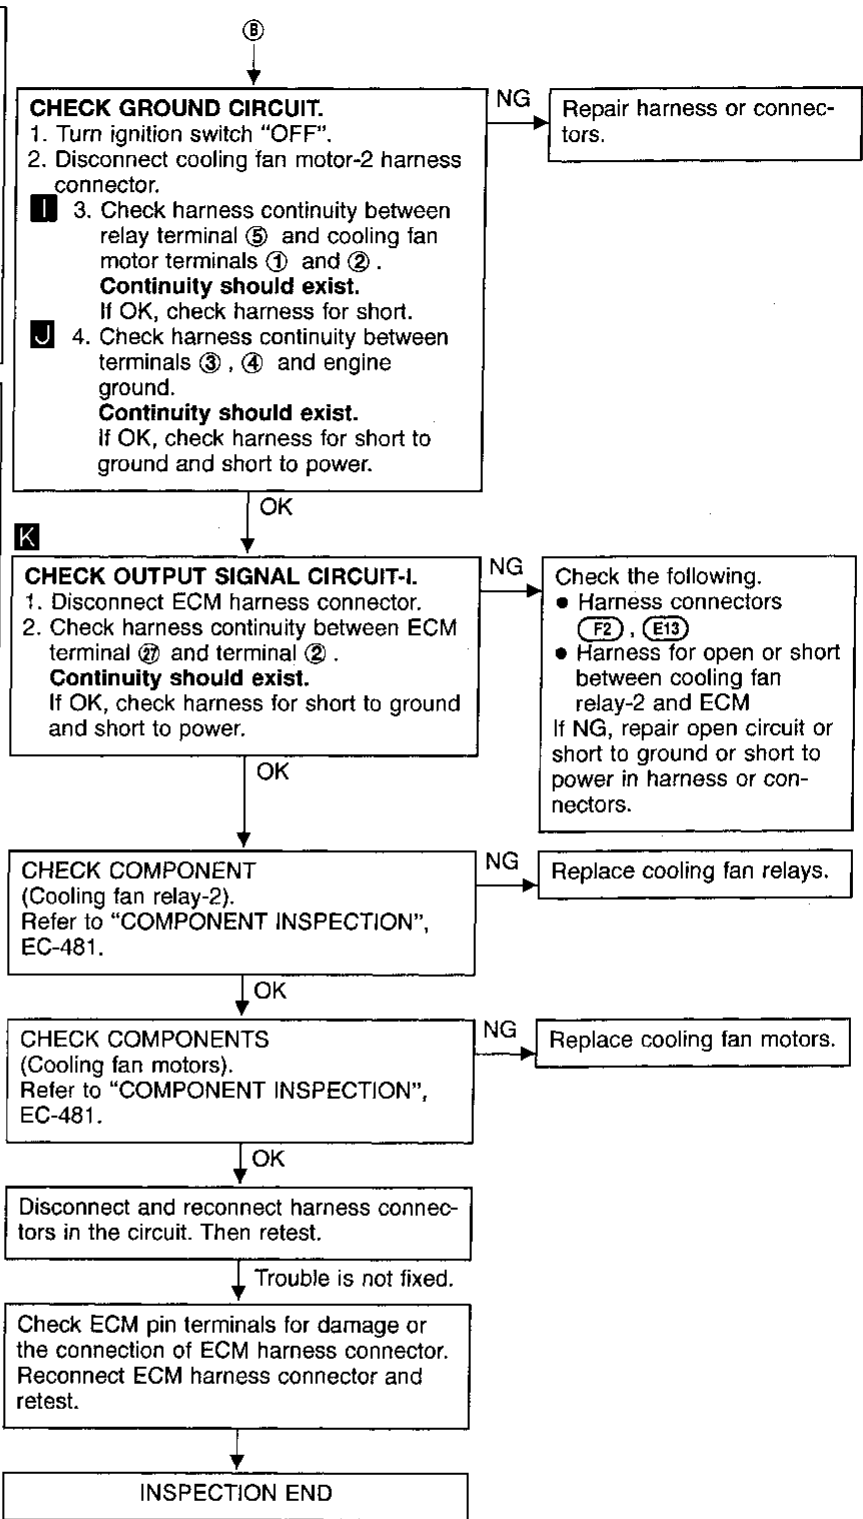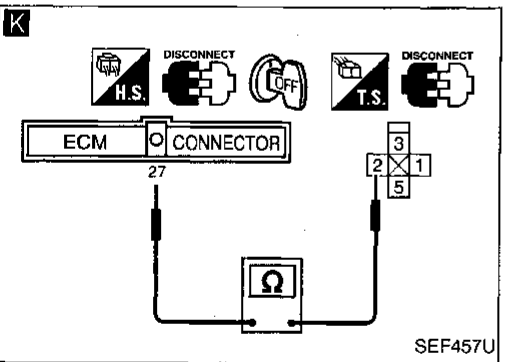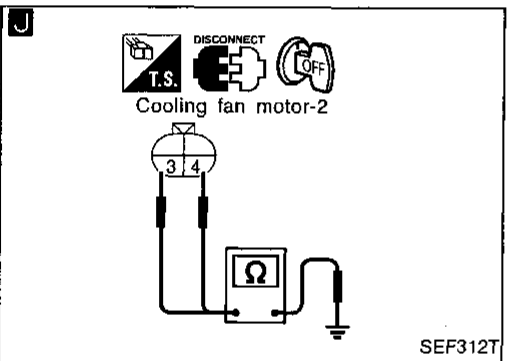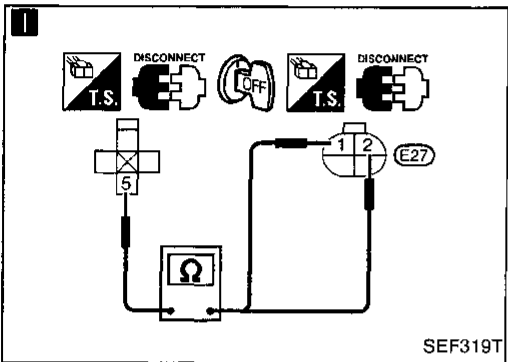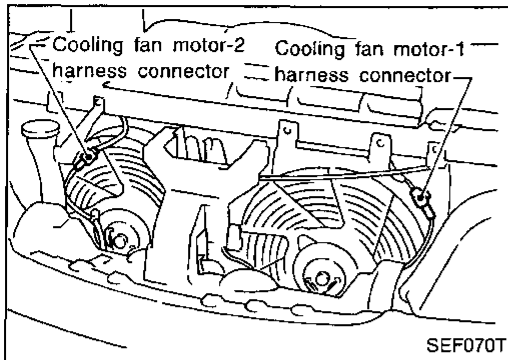

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

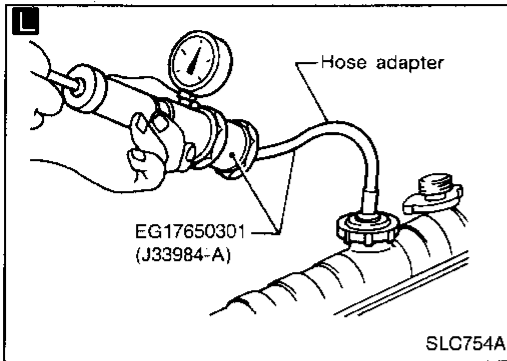


L

CHECK COOLING SYSTEM FOR LEAK.
Apply pressure to the cooling system with a tester, and check if the pressure drops.
Testing pressure:
157 kPa (1.6 kg/cm², 23 psi)
Pressure should not drop.
CAUTION:
Higher than the specified pressure may cause radiator damage.

NG → Check the following for leak.

- Hose
- Radiator
- Water pump


Refer to LC section ("Water Pump").

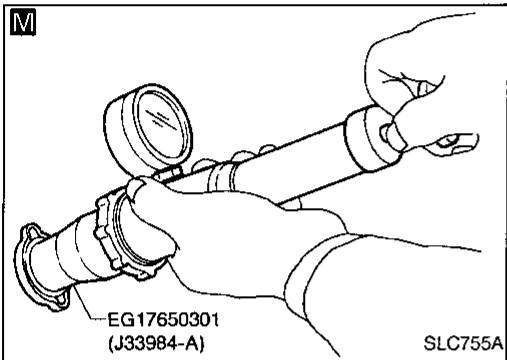

M

CHECK RADIATOR CAP.
Apply pressure to cap with a tester.
Radiator cap relief pressure:
Standard
78 - 98 kPa (0.8 - 1.0 kg/cm², 11 - 14 psi)
Limit
59 - 98 kPa (0.6 - 0.9 kg/cm², 9 - 13 psi)

NG → Replace radiator cap.

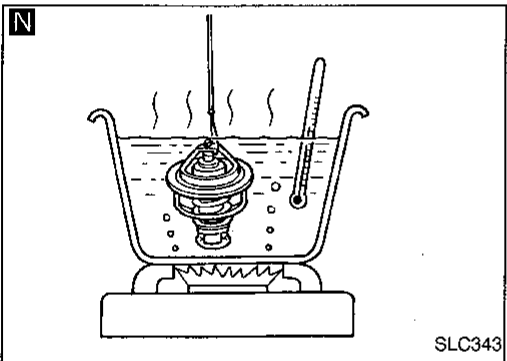

N

CHECK THERMOSTAT.

1. Check valve seating condition at normal room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.
Valve opening temperature:
82°C (180°F) [standard]
Maximum valve lift:
More than 8.6 mm/95°C (0.339 in/203°F)
3. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to LC section ("Thermostat").

NG → Replace thermostat.

OK → Check engine coolant temperature sensor. Refer to "COMPONENT INSPECTION", EC-140.

NG → Replace engine coolant temperature sensor.

OK → If the cause can not be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-480.

INSPECTION END

Perform FINAL CHECK by the following procedure after repair is completed.

1. Warm up engine. Run the vehicle for at least 20 minutes. Pay attention to engine coolant temperature gauge on the instrument panel. If the reading shows an abnormally high temperature, another part may be malfunctioning.
2. Stop vehicle and let engine idle. Check the intake and exhaust systems for leaks by listening for noise or visually inspecting the components.
3. Allow engine to cool and visually check for oil and coolant leaks. Then, perform "OVERALL FUNCTION CHECK".

TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

MAIN 12 CAUSES OF OVERHEATING

Engine	Step	Inspection Item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper 	<ul style="list-style-type: none"> ● Visual 	No blocking	—
	2	<ul style="list-style-type: none"> ● Coolant mixture 	<ul style="list-style-type: none"> ● Coolant tester 	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS" in MA section
	3	<ul style="list-style-type: none"> ● Coolant level 	<ul style="list-style-type: none"> ● Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section
	4	<ul style="list-style-type: none"> ● Radiator cap 	<ul style="list-style-type: none"> ● Pressure tester 	78 - 98 kPa (0.8 - 1.0 kg/cm ² , 11 - 14 psi) 59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See "System Check" "ENGINE COOLING SYSTEM" in LC section
ON*2	5	<ul style="list-style-type: none"> ● Coolant leaks 	<ul style="list-style-type: none"> ● Visual 	No leaks	See "System Check" "ENGINE COOLING SYSTEM" in LC section
ON*2	6	<ul style="list-style-type: none"> ● Thermostat 	<ul style="list-style-type: none"> ● Touch the upper and lower radiator hoses 	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM" in LC section
ON*1	7	<ul style="list-style-type: none"> ● Cooling fan 	<ul style="list-style-type: none"> ● CONSULT 	Operating	See "TROUBLE DIAGNOSIS FOR DTC P1900" (EC-469)
OFF	8	<ul style="list-style-type: none"> ● Combustion gas leak 	<ul style="list-style-type: none"> ● Color checker ● chemical tester ● 4 Gas analyzer 	Negative	—
ON*3	9	<ul style="list-style-type: none"> ● Coolant temperature gauge 	<ul style="list-style-type: none"> ● Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> ● Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> ● Visual 	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section
OFF*4	10	<ul style="list-style-type: none"> ● Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> ● Visual 	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE" in MA section
OFF	11	<ul style="list-style-type: none"> ● Cylinder head 	<ul style="list-style-type: none"> ● Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD" in EM section
	12	<ul style="list-style-type: none"> ● Cylinder block and pistons 	<ul style="list-style-type: none"> ● Visual 	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK" in EM section

*1: Turn the ignition switch ON.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to "OVERHEATING CAUSE ANALYSIS" in LC section.


TROUBLE DIAGNOSIS FOR OVERHEAT

Overheat (Cont'd)

COMPONENT INSPECTION

Cooling fan relays-1 and -2

Check continuity between terminals ③ and ⑤.

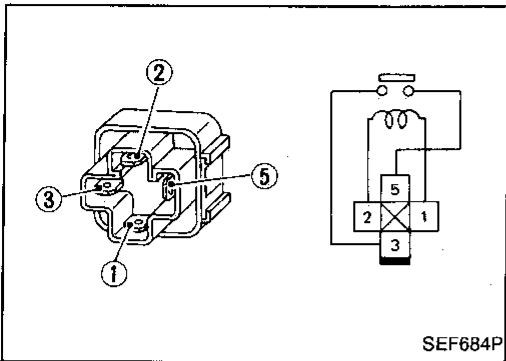

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No


GI

MA

EM

Cooling fan motor

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation as shown in the figure.

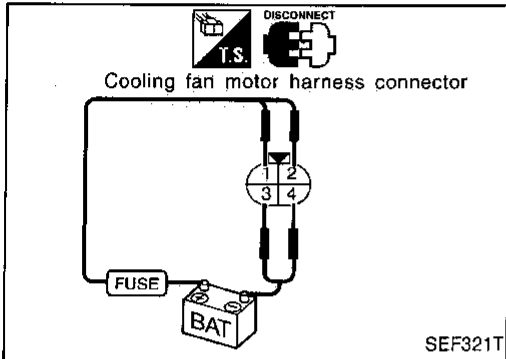

Conditions	Motor fan-1	Motor fan-2
12V direct current supply between terminal ① and ②	Cooling fan operates at low speed	Cooling fan operates at high speed

LC

EC

FE

AT

If NG, replace cooling fan motor.

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS


Injector

LEFT BANK

EC-INJECT-01

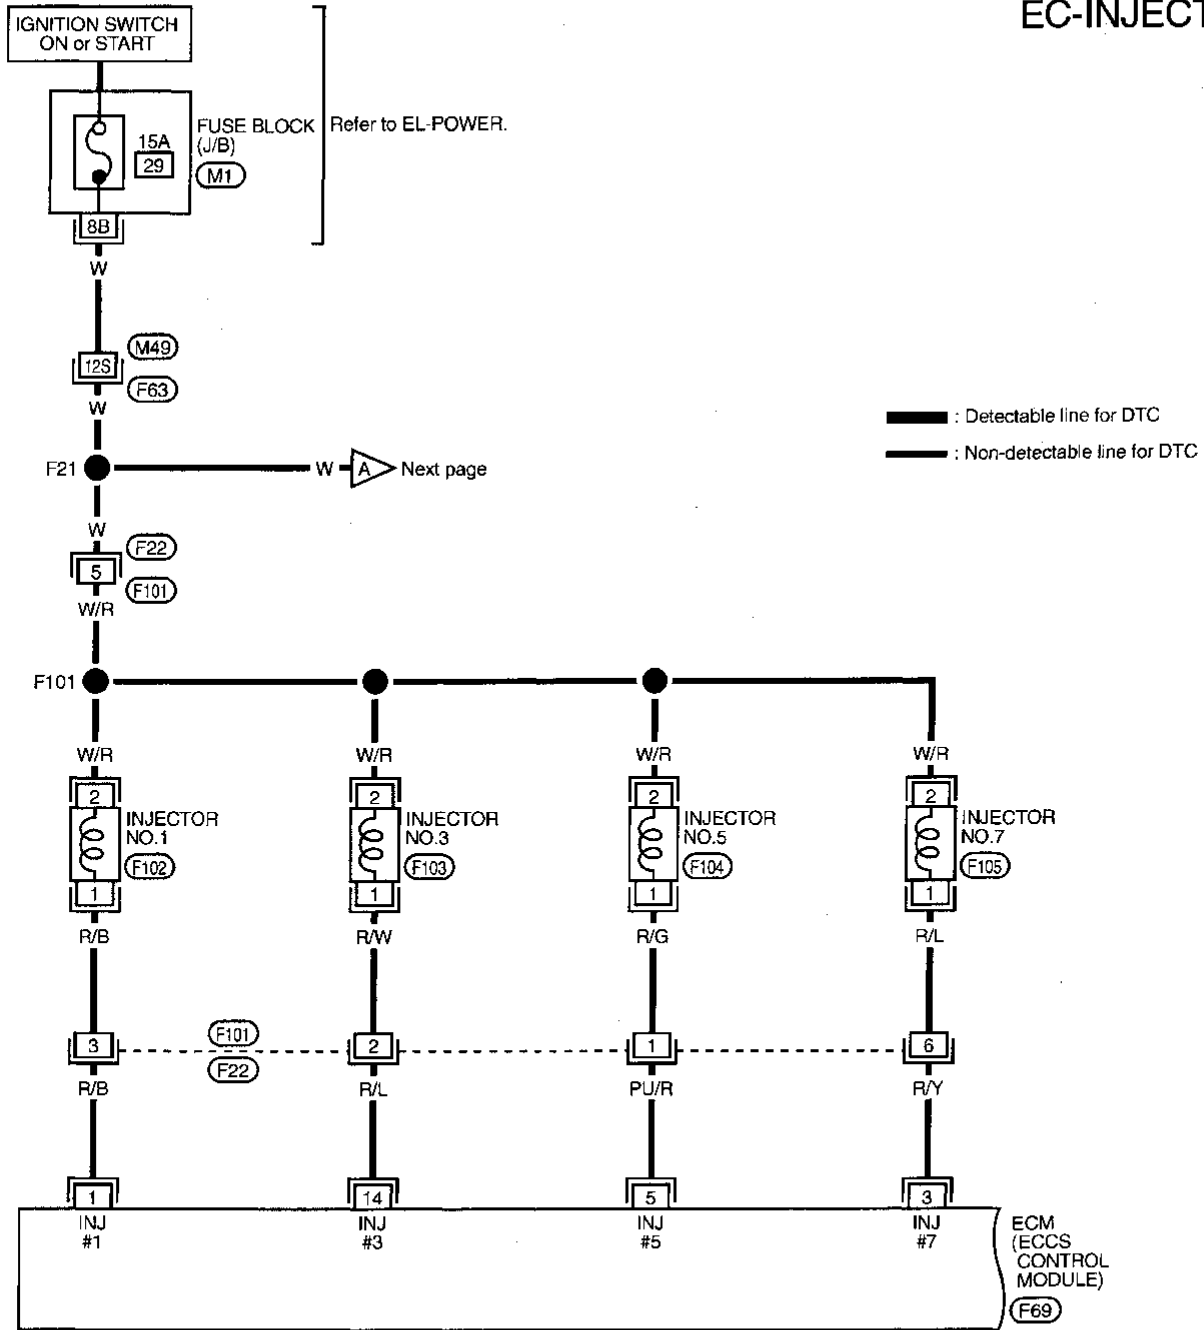


— : Detectable line for DTC
 — : Non-detectable line for DTC



Refer to last page (Foldout page).

(M49), (F63)
(M1)

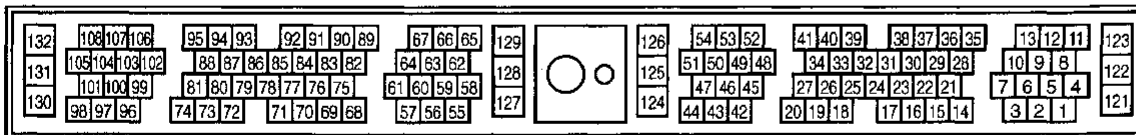


TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS



Injector (Cont'd)

RIGHT BANK

EC-INJECT-02

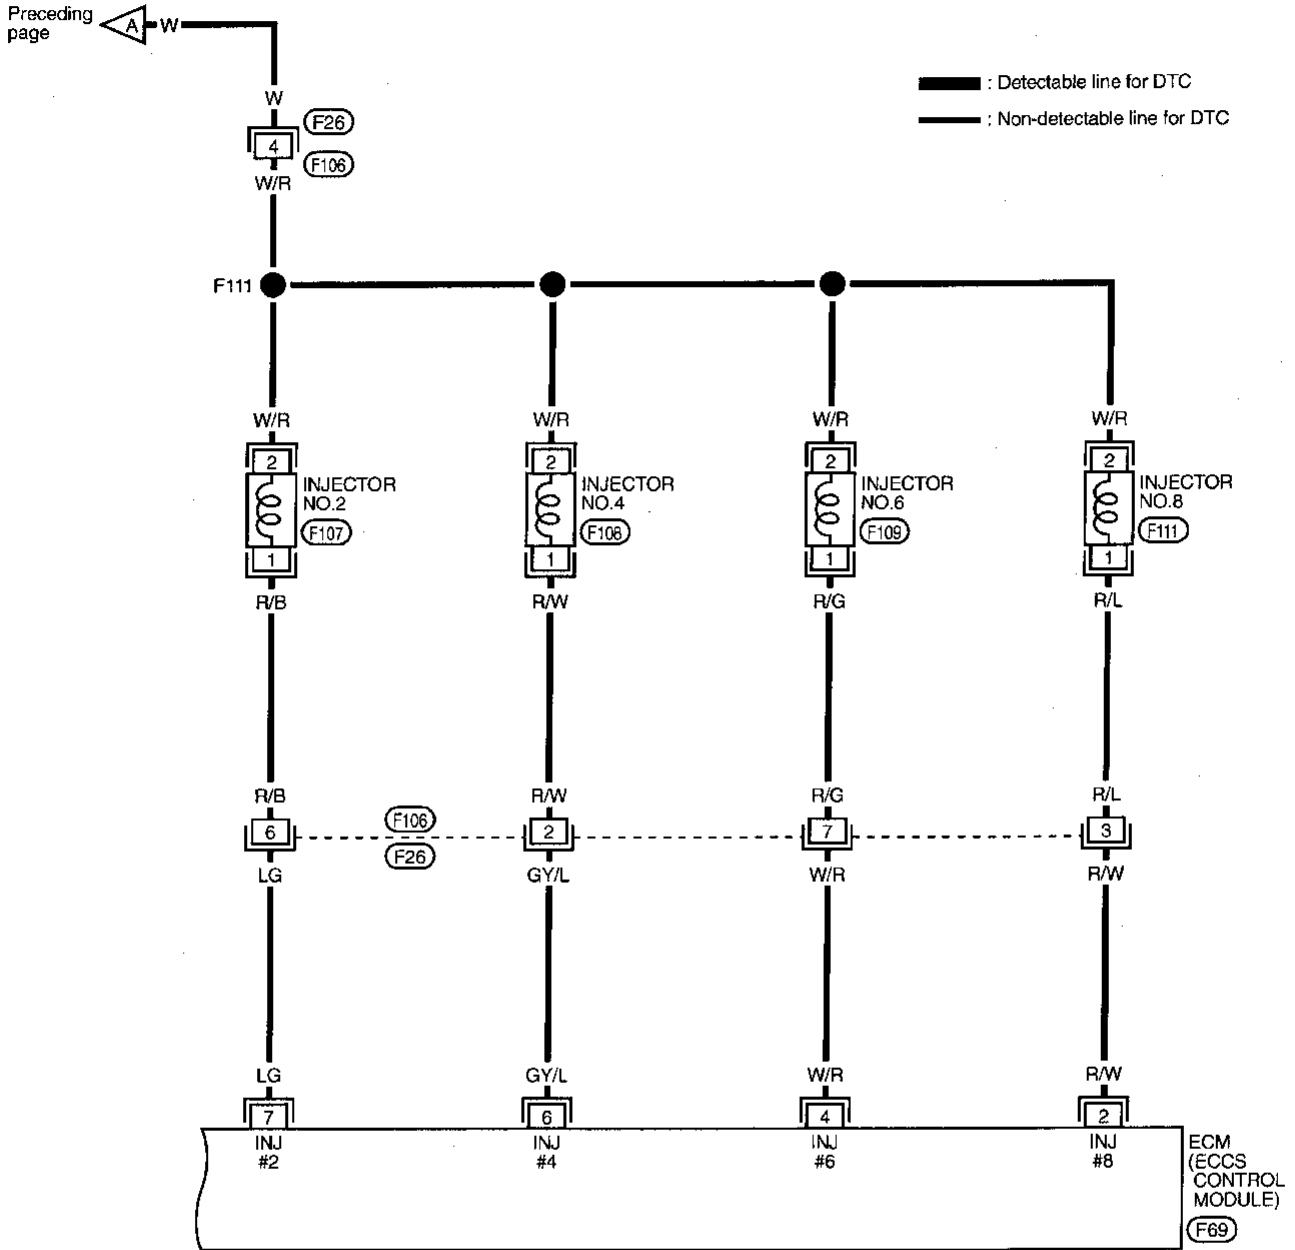

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

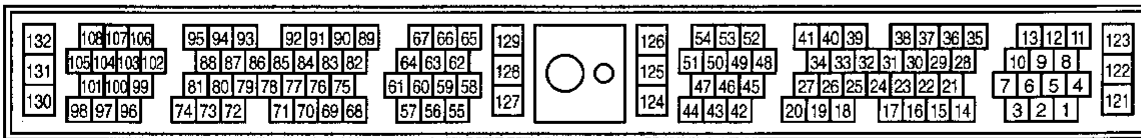


TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Injector (Cont'd)



COMPONENT DESCRIPTION

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

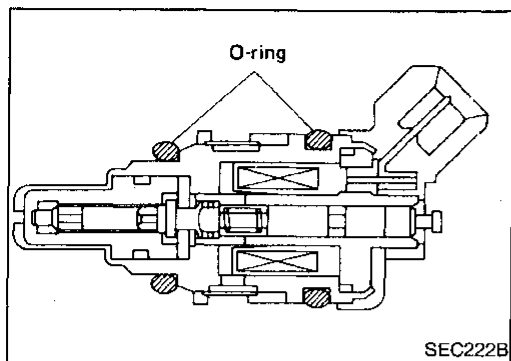

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).




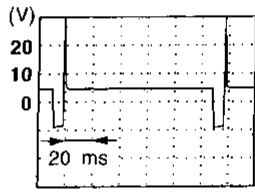
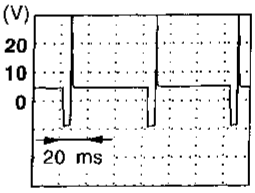
TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
1	R/B	Injector No. 1	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> (Warm-up condition) └ Idle speed	BATTERY VOLTAGE (11 - 14V) 
2	R/W	Injector No. 8		
3	R/Y	Injector No. 7		
14	R/L	Injector No. 3		
4	W/R	Injector No. 6	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> └ Engine speed is 2,000 rpm.	BATTERY VOLTAGE (11 - 14V) 
5	PU/R	Injector No. 5		
6	GY/L	Injector No. 4		
7	L/G	Injector No. 2		

SEF549T

SEF550T

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Injector (Cont'd) DIAGNOSTIC PROCEDURE

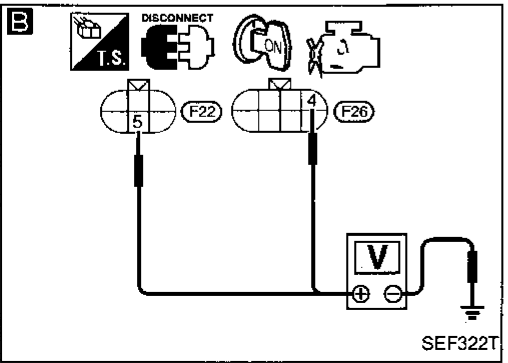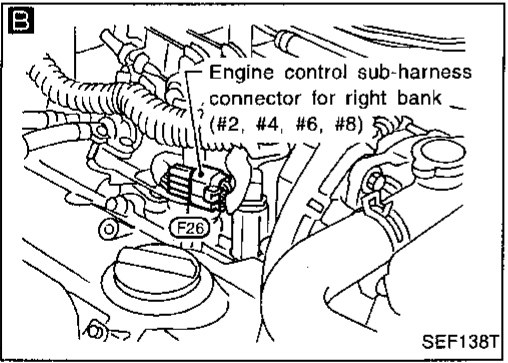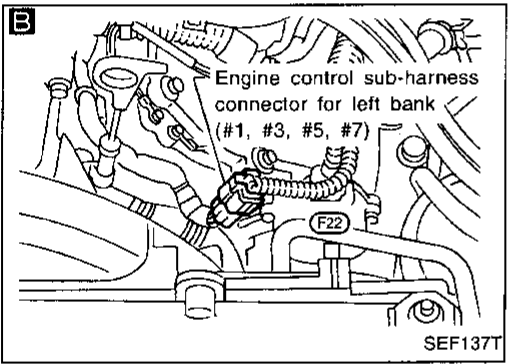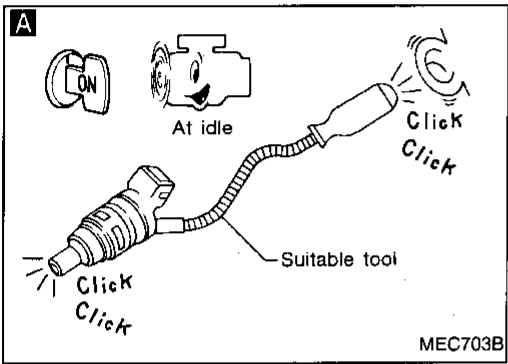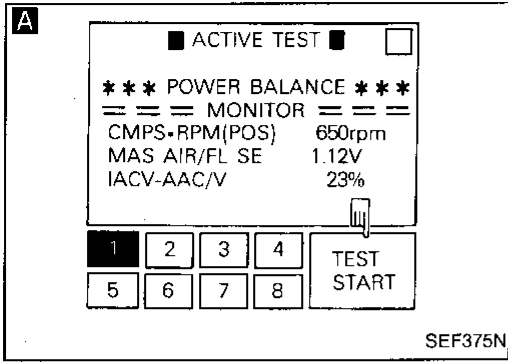

INSPECTION START

A

CHECK OVERALL FUNCTION.

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
3. Make sure that each circuit produces a momentary engine speed drop.

OR

2. Listen to each injector operating sound.
Clicking noise should be heard.

OK → INSPECTION END

B

CHECK POWER SUPPLY.

1. Stop engine.
2. Disconnect right bank injector sub-harness connectors (F22) and sub-harness connector (F26) (on the right bank).
3. Turn ignition switch "ON".
4. Check voltage between terminal ④ (right bank), ⑤ (left bank) and ground with CONSULT or tester.
Voltage: Battery voltage

NG →

Check the following.

- Harness connectors (F63), (M49)
- 15A fuse
- Check harness for open or short between harness connector (F22), (F26) and ignition switch.





If NG, repair harness or connectors.

OK → (A)

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Injector (Cont'd)

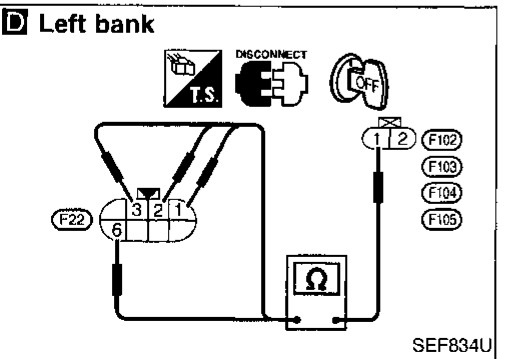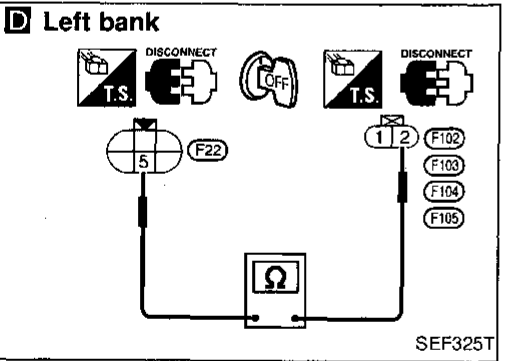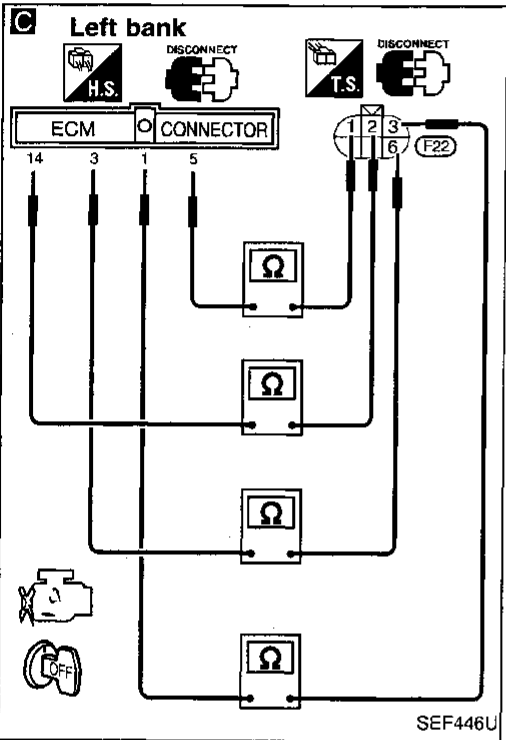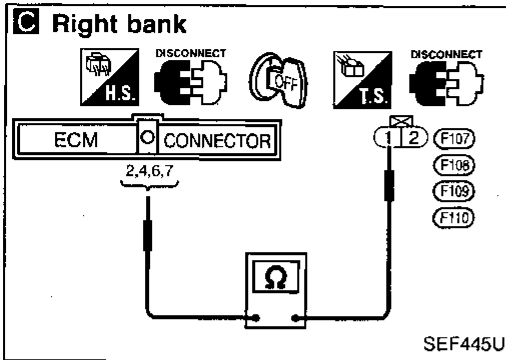

C

CHECK OUTPUT SIGNAL CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals and ECM terminals.

Right bank:
 ① and ②, ④, ⑥, ⑦

Left bank:
 ③ and ①,
 ② and ⑭,
 ① and ⑤,
 ⑥ and ③

Continuity should exist.
 If OK, check harness for short to ground and short to power.

NG

Check the following (Right bank).

- Harness or connectors (F26), (F106)

If NG, repair open circuit or short to ground or short to power in harness or connectors.

D

CHECK POWER SUPPLY CIRCUIT AND OUTPUT SIGNAL CIRCUIT (FOR LEFT BANK).

1. Remove intake manifold collector. (Refer to "TIMING CHAIN" in EM section.)
2. Disconnect injector sub-harness connector (F22).
3. Check harness continuity between terminal ⑤ and injector terminal ②. **Continuity should exist.** If OK, check harness for short to ground and short to power.
4. Check harness continuity between injector terminal ① and terminals ③, ②, ①, ⑥. **Continuity should exist.** If OK, check harness for short to ground and short to power.

NG

Repair harness or connectors.

CHECK COMPONENT (Injector).
 Refer to "COMPONENT INSPECTION" on next page.

NG

Replace injector.

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.


INSPECTION END

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Injector (Cont'd) COMPONENT INSPECTION

Injector

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.
Resistance: 10 - 14Ω at 25°C (77°F)
If NG, replace injector.

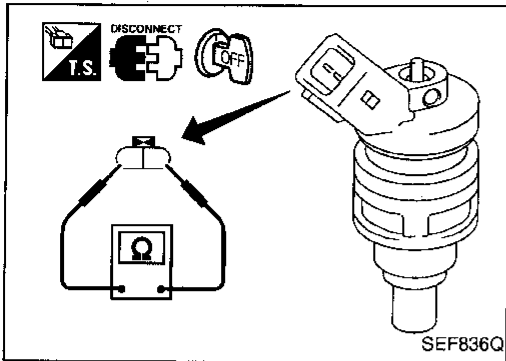

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Start Signal


EC-S/SIG-01

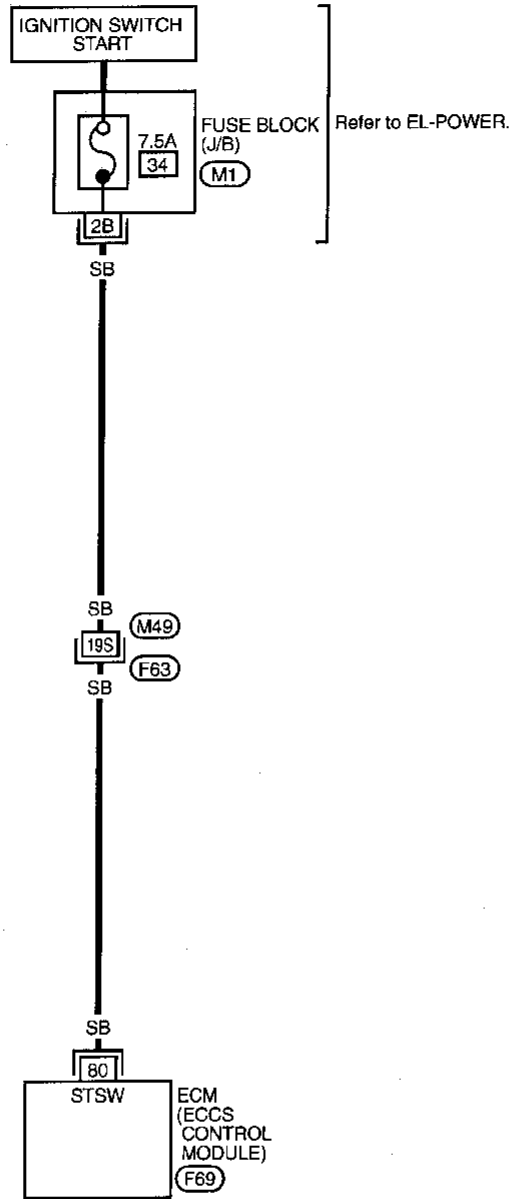

: Detectable line for DTC
 : Non-detectable line for DTC

Refer to last page (Foldout page).

M49, F63
M1

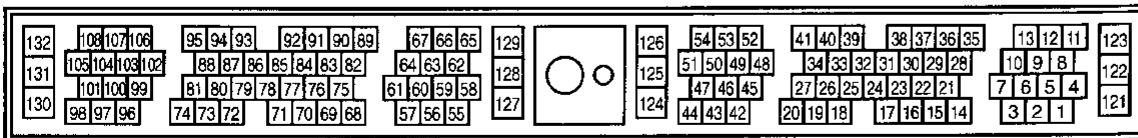

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Start Signal (Cont'd)

DIAGNOSTIC PROCEDURE

A

■ START SIGNAL CKT ■

1. CLOSE THROTTLE. SHIFT TO P OR N RANGE.
2. TOUCH START AND START ENGINE IMMEDIATELY.

NEXT START

SEF191L




A

☆ MONITOR ☆ NO FAIL

START SIGNAL	OFF
CLSD TH/P SW	ON
AIR COND SIG	OFF
P/N POSI SW	ON

RECORD

SEF111P

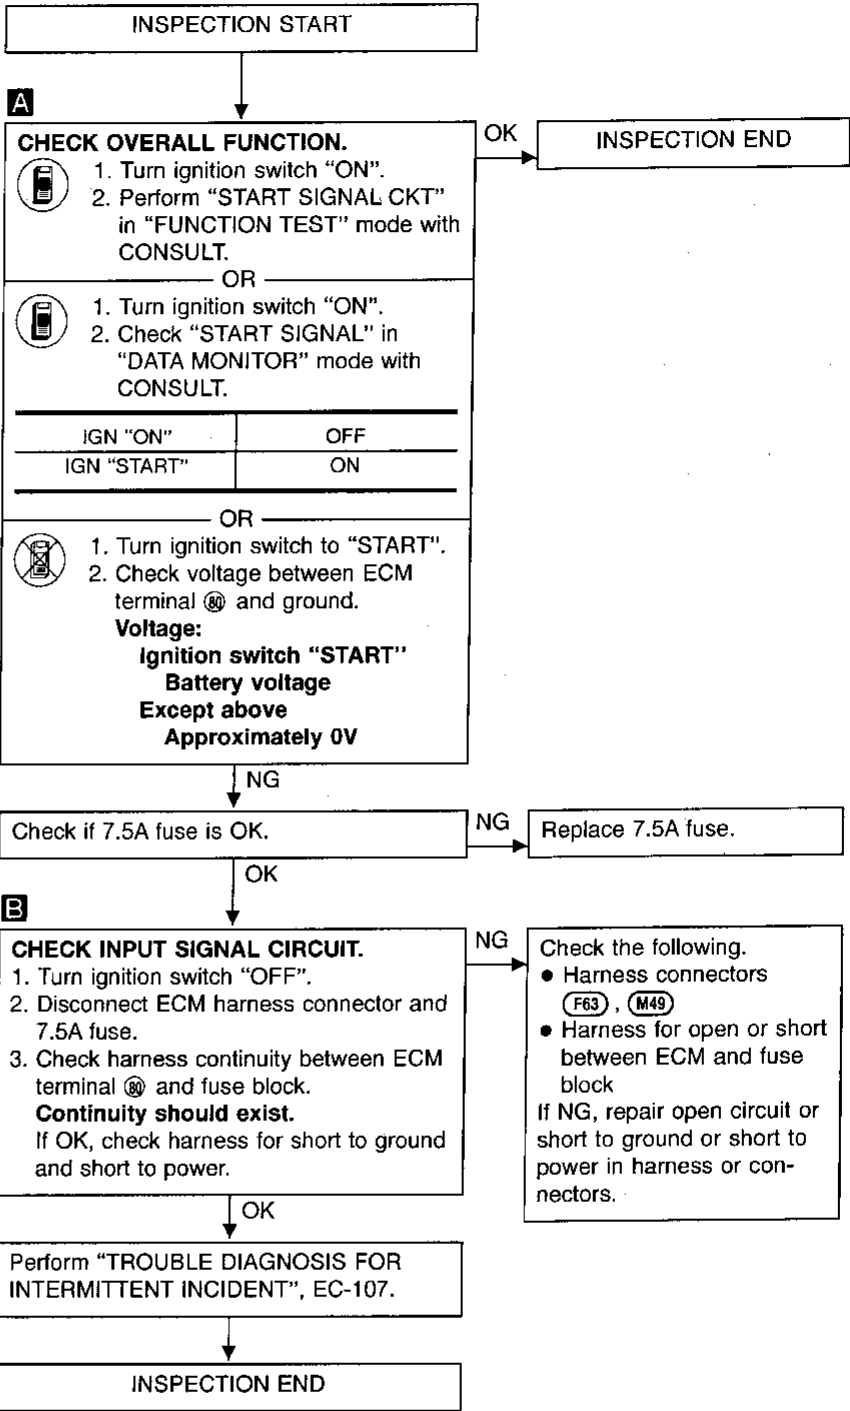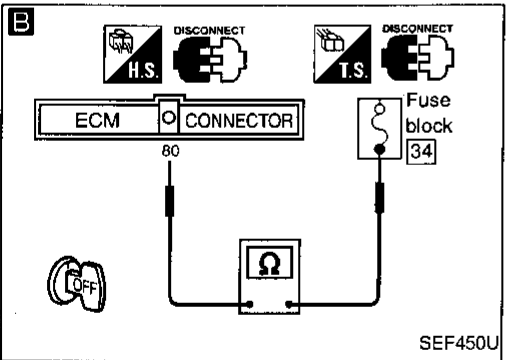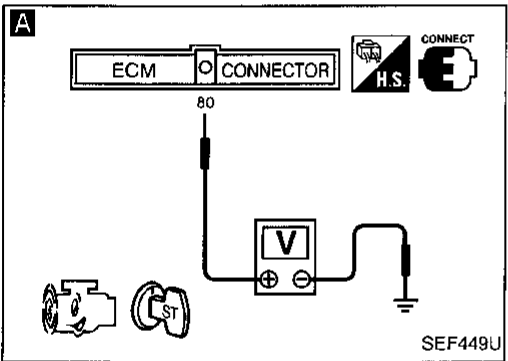

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Fuel Pump Control

SYSTEM DESCRIPTION

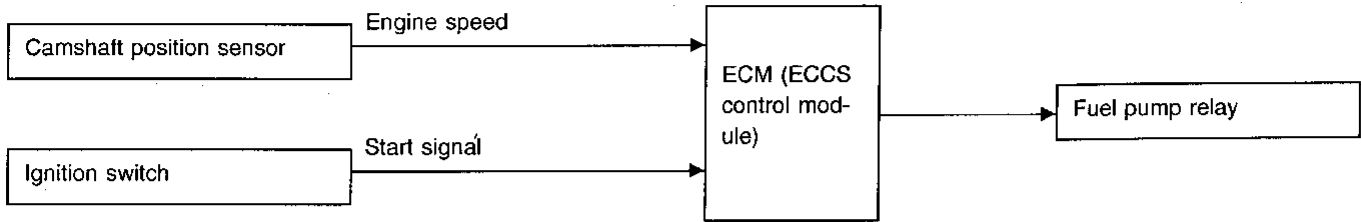

Fuel pump ON-OFF control

The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine start-up. If the ECM receives a 1° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to activate. If the 1° signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents the battery from discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds
Engine is running and cranking	Operates
When engine is stopped	Stops for 1.5 seconds
Except as shown above	Stops

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> Ignition switch is turned to ON (Operates for 1 second) Engine running and cranking 	ON
	Except as shown above	OFF

ECM TERMINALS AND REFERENCE VALUE




Specification data are reference values, and are measured between each terminal and (128) (ECSS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
11	PU	Fuel pump relay	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON" Engine is running.	0 - 1V
			Ignition switch "ON" └ 5 seconds after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Fuel Pump Control (Cont'd)






EC-F/PUMP-01

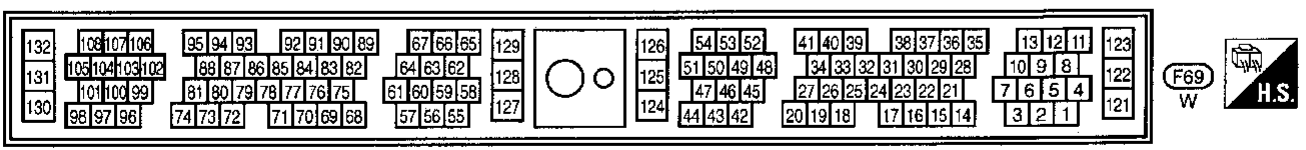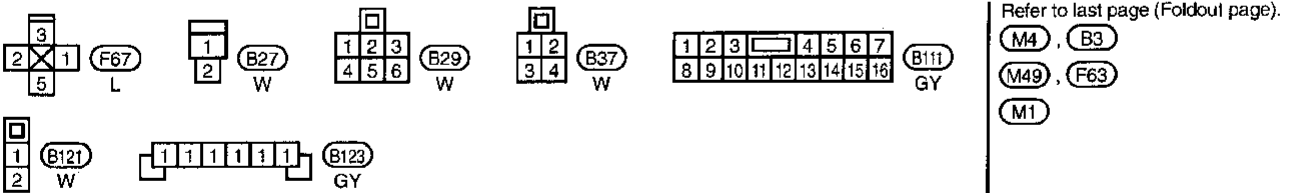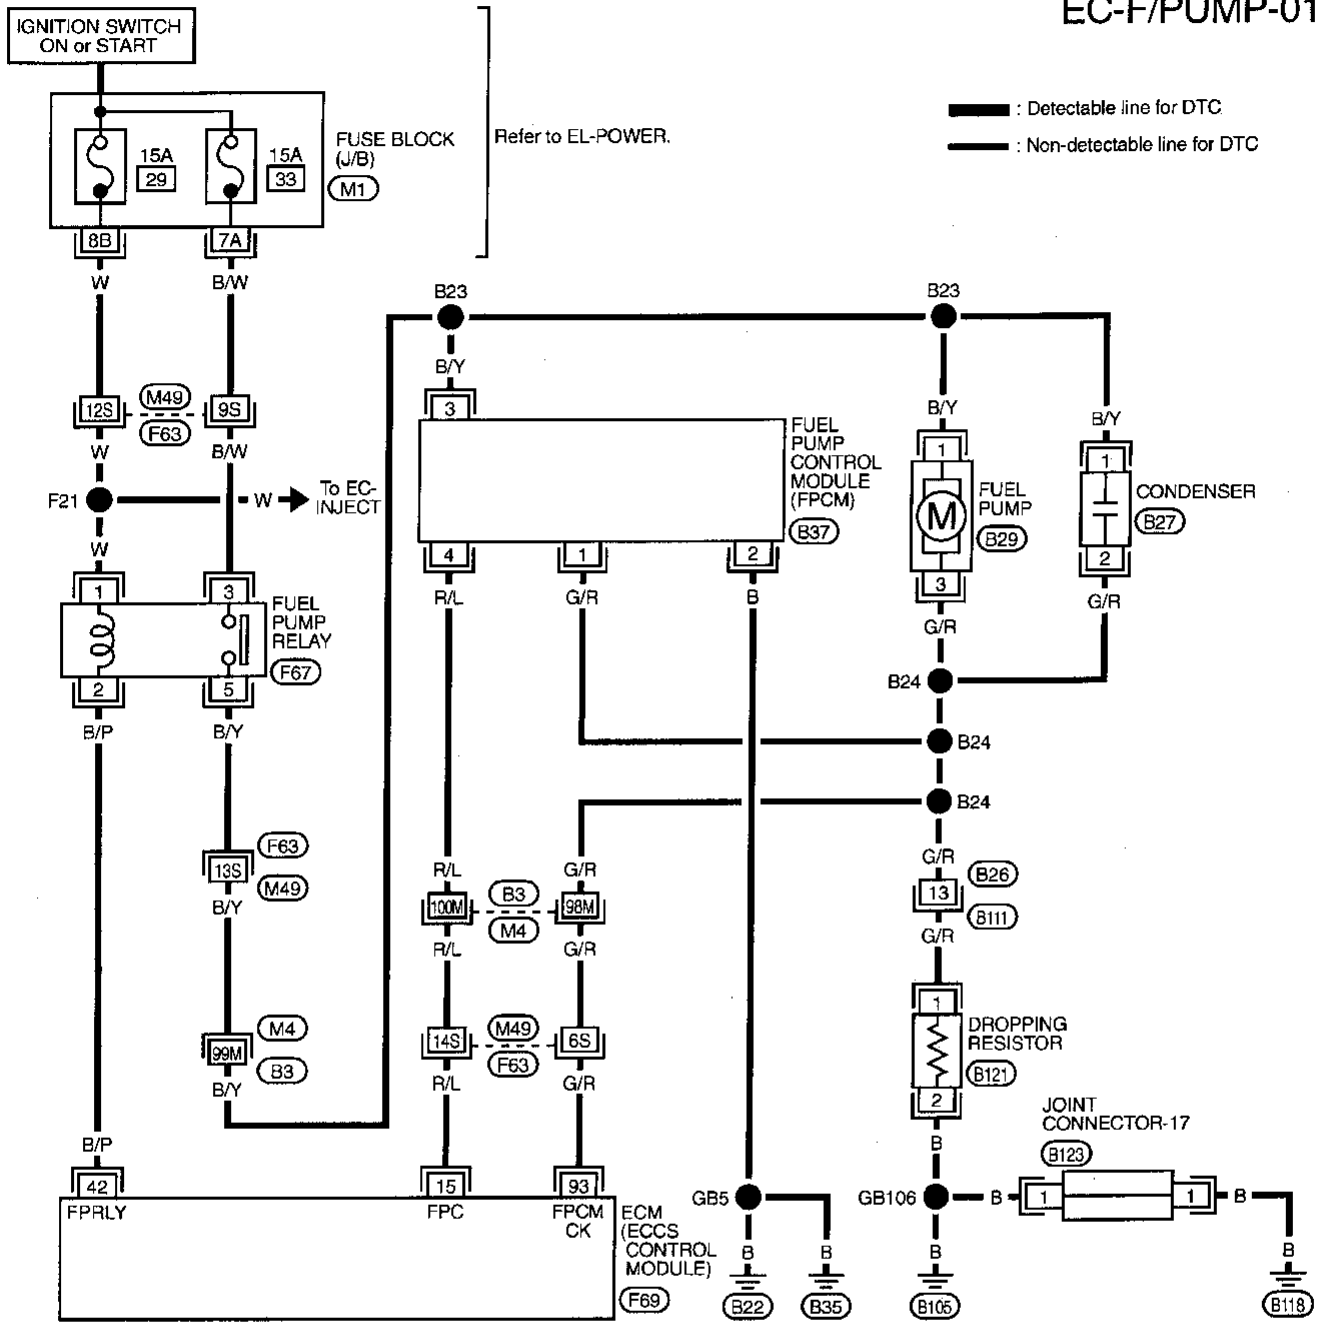

GI
 MA
 EM
 LC
EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Fuel Pump Control (Cont'd) DIAGNOSTIC PROCEDURE

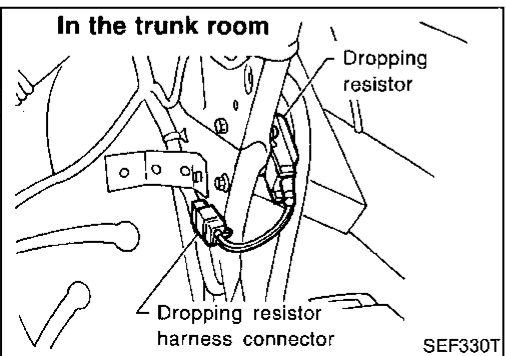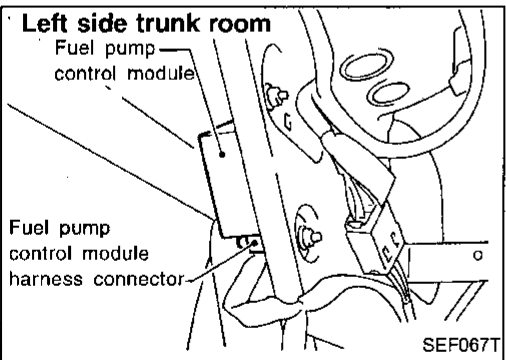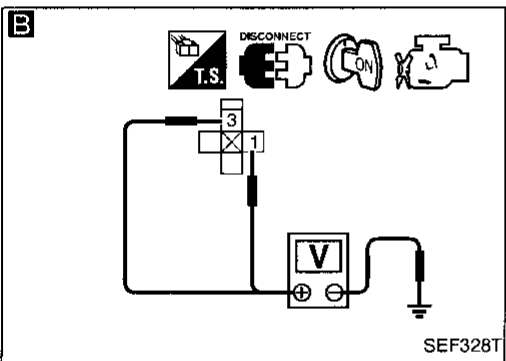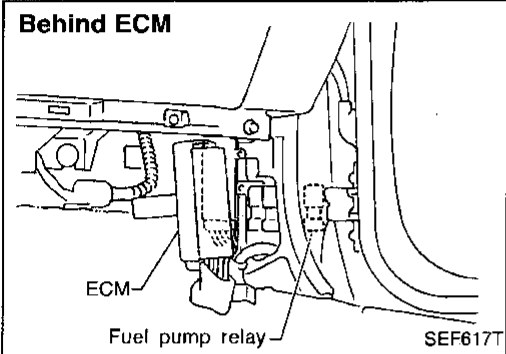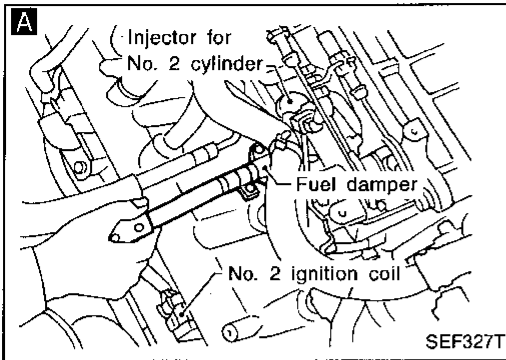

INSPECTION START

A
CHECK OVERALL FUNCTION.
1. Turn ignition switch "ON".
2. Pinch fuel feed hose with fingers.
Fuel pressure pulsation should be felt on the fuel feed hose for 5 seconds after ignition switch is turned "ON".

OK → INSPECTION END

NG
B
CHECK POWER SUPPLY.
1. Turn ignition switch "OFF".
2. Disconnect fuel pump relay.
3. Turn ignition switch "ON".
4. Check voltage between terminals ①, ③ and ground with CONSULT or tester.
Voltage: Battery voltage





NG → Check the following.
● Harness connectors (F63), (M49)
● 15A fuse
● Harness continuity between fuel pump relay and ignition switch
If NG, repair harness or connectors.

OK
C
CHECK GROUND CIRCUIT.
1. Turn ignition switch "OFF".
2. Disconnect fuel pump harness connector and dropping resistor harness connector.
3. Check harness continuity between relay terminal ⑤ and terminal ①, FPCM terminal ③ and terminal ①, terminal ② and body ground.
Continuity should exist.
If OK, check harness for short to ground and short to power.

NG → Check the following.
● Harness connectors (B3), (M4)
● Harness connectors (M49), (F63)
● Harness connectors (B11), (B26)
● Joint connector-17
● Harness for open or short between fuel pump relay and fuel pump
● Harness for open or short between fuel pump and dropping resistor
● Harness for open or short between dropping resistor and body ground
If NG, repair open circuit or short to ground or short to power in harness or connectors.

OK
↓
A

Fuel Pump Control (Cont'd)

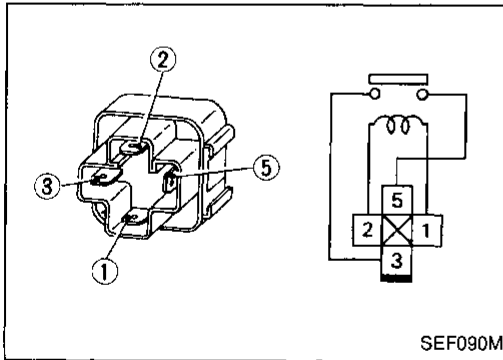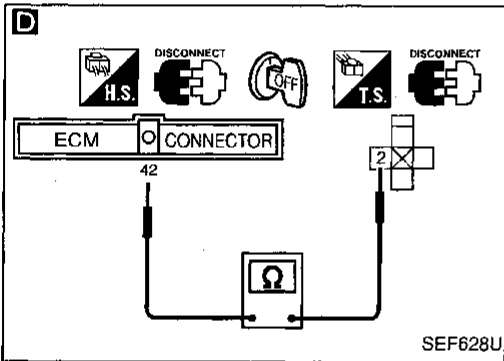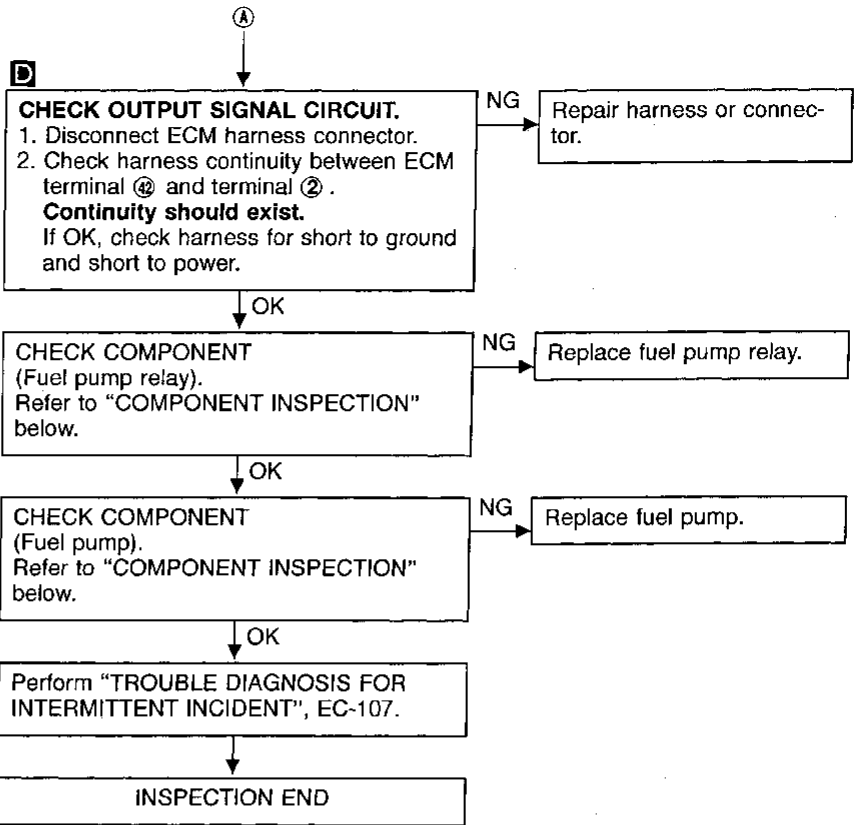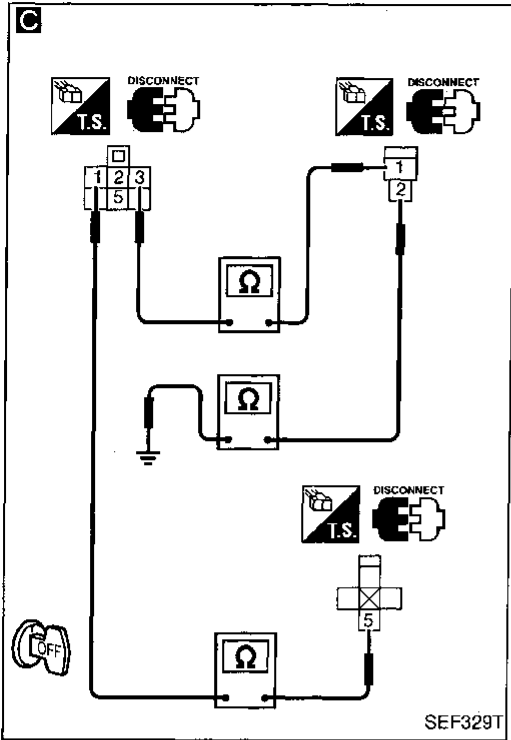

COMPONENT INSPECTION

Fuel pump relay


Check continuity between terminals ③ and ⑤.

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No

If NG, replace relay.

Fuel pump

1. Disconnect fuel pump harness connector.
2. Check resistance between terminals ① and ③.
Resistance: 0.2 - 5.0Ω at 25°C (77°F)
If NG, replace fuel pump.

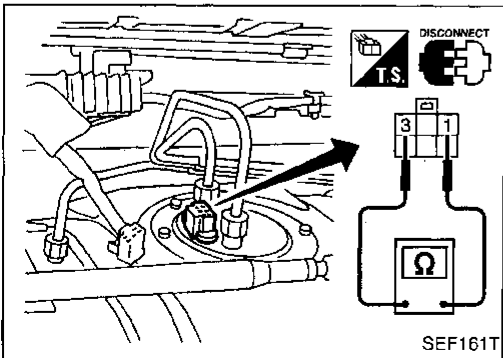

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS


Power Steering Oil Pressure Switch

EC-PST/SW-01

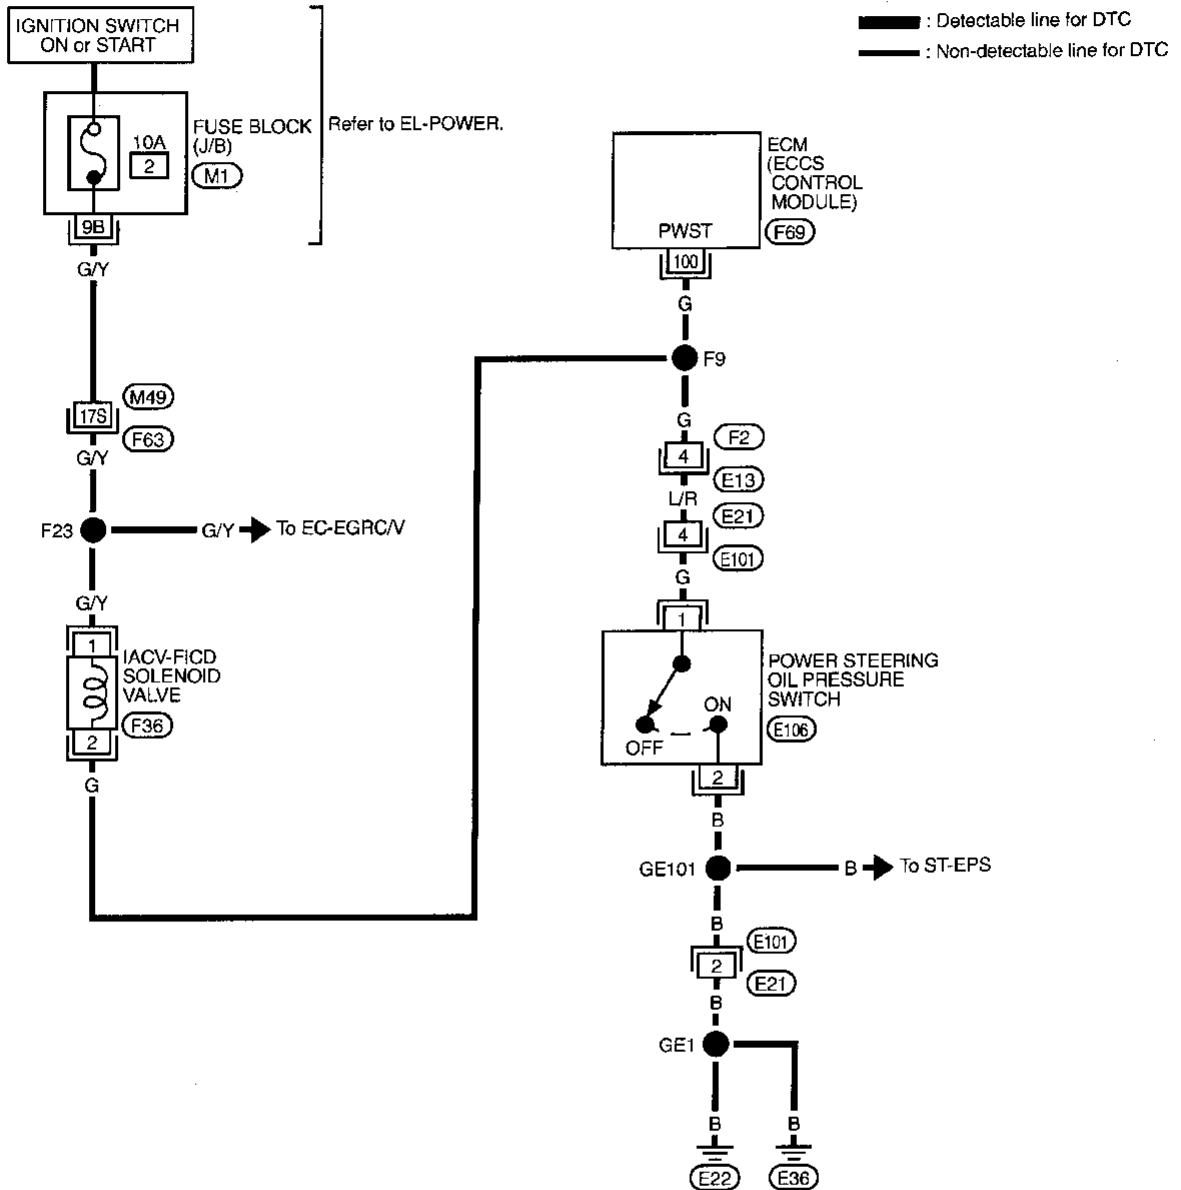

Refer to last page (Foldout page).

M49, F63
M1

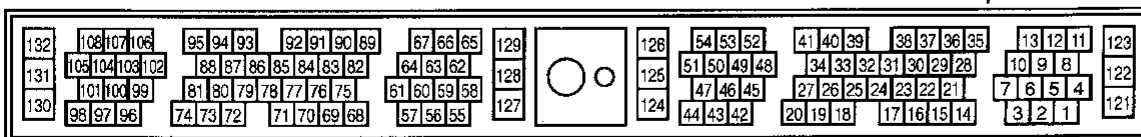


TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Power Steering Oil Pressure Switch (Cont'd)

COMPONENT DESCRIPTION

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-FICD solenoid valve to increase the idle speed and adjust for the increased load.

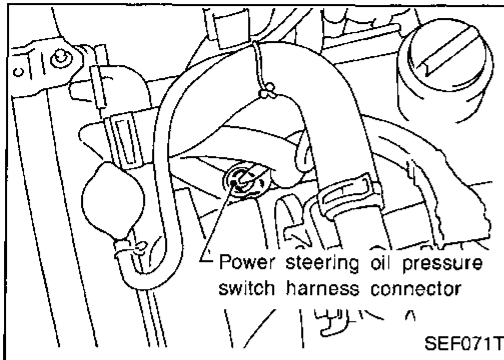

CONSULT REFERENCE VALUE IN DATA MONITOR MODE

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PW/ST SIGNAL	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is turned	ON

ECM TERMINALS AND REFERENCE VALUE

Specification data are reference values, and are measured between each terminal and (128) (ECCS ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC voltage)
100	G	Power steering oil pressure switch	<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> <ul style="list-style-type: none"> Steering wheel is being turned. 	0 - 1.5V
			<div style="border: 1px solid black; padding: 2px;">Engine is running.</div> <ul style="list-style-type: none"> Steering wheel is not being turned. 	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Power Steering Oil Pressure Switch (Cont'd)

DIAGNOSTIC PROCEDURE

A

■ PW/ST SIGNAL CIRCUIT ■

HOLD STEERING WHEEL
IN A FULL
LOCKED POSITION
THEN
TOUCH START

NEXT START

MEF023E




A

☆ MONITOR ☆ NO FAIL

PW/ST SIGNAL OFF

RECORD

SEF591I

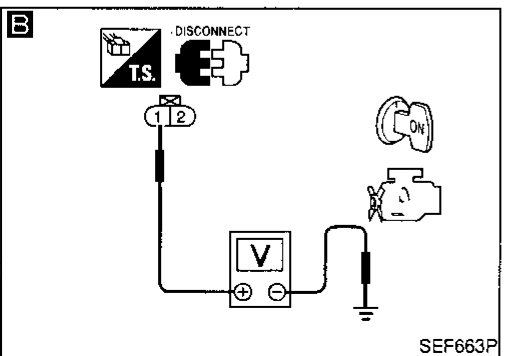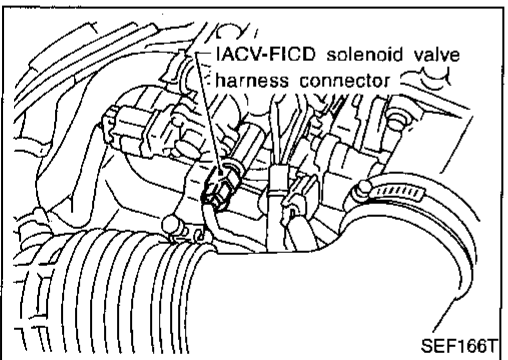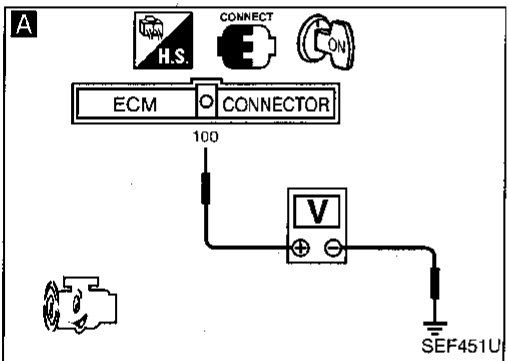

INSPECTION START

A

CHECK OVERALL FUNCTION.

1. Turn ignition switch "ON".
2. Perform "PW/ST SIGNAL CIRCUIT" in "FUNCTION TEST" mode with CONSULT.

OR

1. Start engine.
2. Check "PW/ST SIGNAL" in "DATA MONITOR" mode with CONSULT.

Steering is neutral position: OFF
Steering is turned: ON

OR

1. Start engine.
2. Check voltage between ECM terminal (100) and ground under the following conditions.

Voltage:
When steering wheel is turned quickly.
Approximately 0V
Except above Battery voltage

OK → INSPECTION END

NG ↓

B

CHECK POWER SUPPLY-I.

1. Stop engine.
2. Disconnect IACV-FICD solenoid valve harness connector.
3. Turn ignition switch "ON".
4. Check voltage between terminal ① and ground with CONSULT or tester.

Voltage: Battery voltage

NG → Check the following.
• Harness connectors (F63), (M49)
• 10A fuse
• Harness for open or short between IACV-FICD solenoid valve and fuse

OK ↓

C

CHECK POWER SUPPLY-II.

1. Turn ignition switch "OFF".
2. Disconnect power steering oil pressure switch harness connector.
3. Check voltage terminal ① (or ECM terminal (100) and ground.

Voltage: Battery voltage


NG → Repair harness or connectors.

OK ↓

A

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Power Steering Oil Pressure Switch (Cont'd)

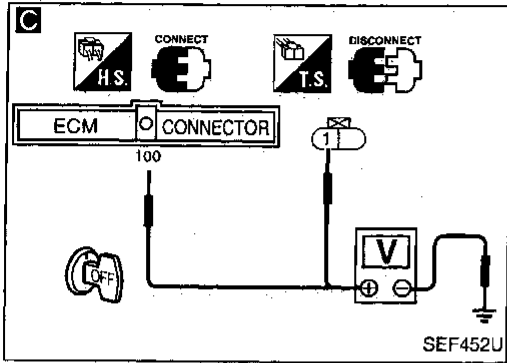

D

CHECK GROUND CIRCUIT.

1. Turn ignition switch "OFF".
2. Disconnect power steering oil pressure switch harness connector.
3. Check harness continuity between terminal ② and engine ground. **Continuity should exist.**

If OK, check harness for short to ground and short to power.


NG

Check the following.

- Harness connectors (E101), (E21)
- Harness for open or short between power steering pressure switch and ground

If NG, repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM

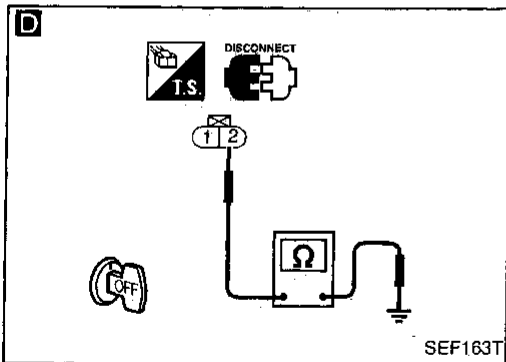

E

CHECK INPUT SIGNAL CIRCUIT.

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal ①② and terminal ①. **Continuity should exist.**

If OK, check harness for short to ground and short to power.

NG

Repair harness or connectors.


LC
EC

CHECK COMPONENTS
(Power steering oil pressure switch and IACV-FICD solenoid valve). Refer to "COMPONENT INSPECTION" on next page.

NG

Replace power steering oil pressure switch or IACV-FICD solenoid valve.

FE
AT
PD

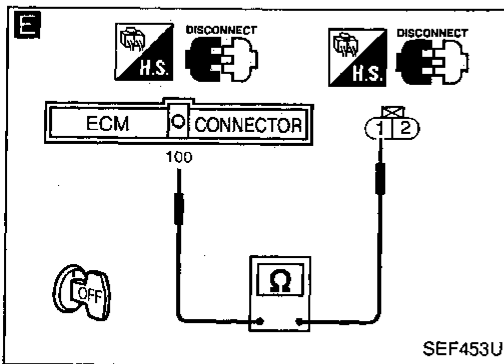

OK

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-107.

INSPECTION END

FA
RA
BR

ST
RS

BT
HA


EL
IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Power Steering Oil Pressure Switch (Cont'd) COMPONENT INSPECTION


Power steering oil pressure switch

1. Disconnect power steering oil pressure switch harness connector then start engine.
2. Check continuity between terminals ① and ②.

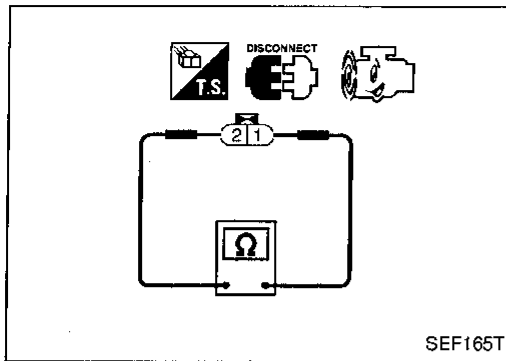

Conditions	Continuity
Steering wheel is being turned	Yes
Steering wheel is not being turned	No


If NG, replace power steering oil pressure switch.

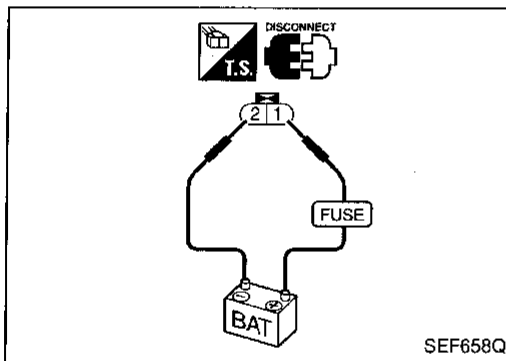

IACV-FICD solenoid valve

Disconnect IACV-FICD solenoid valve harness connector.

- Check for clicking sound when applying 12V direct current to terminals.

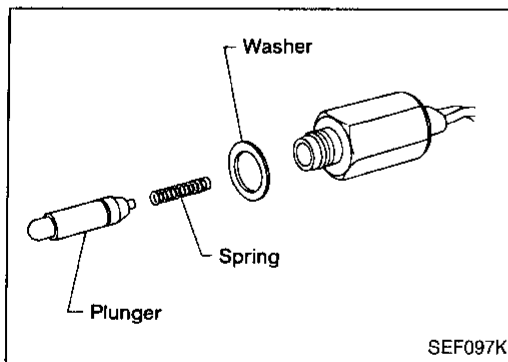


- Check plunger for seizing or sticking.
- Check for broken spring.



TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Electrical Load Signal

EC-LOAD-01

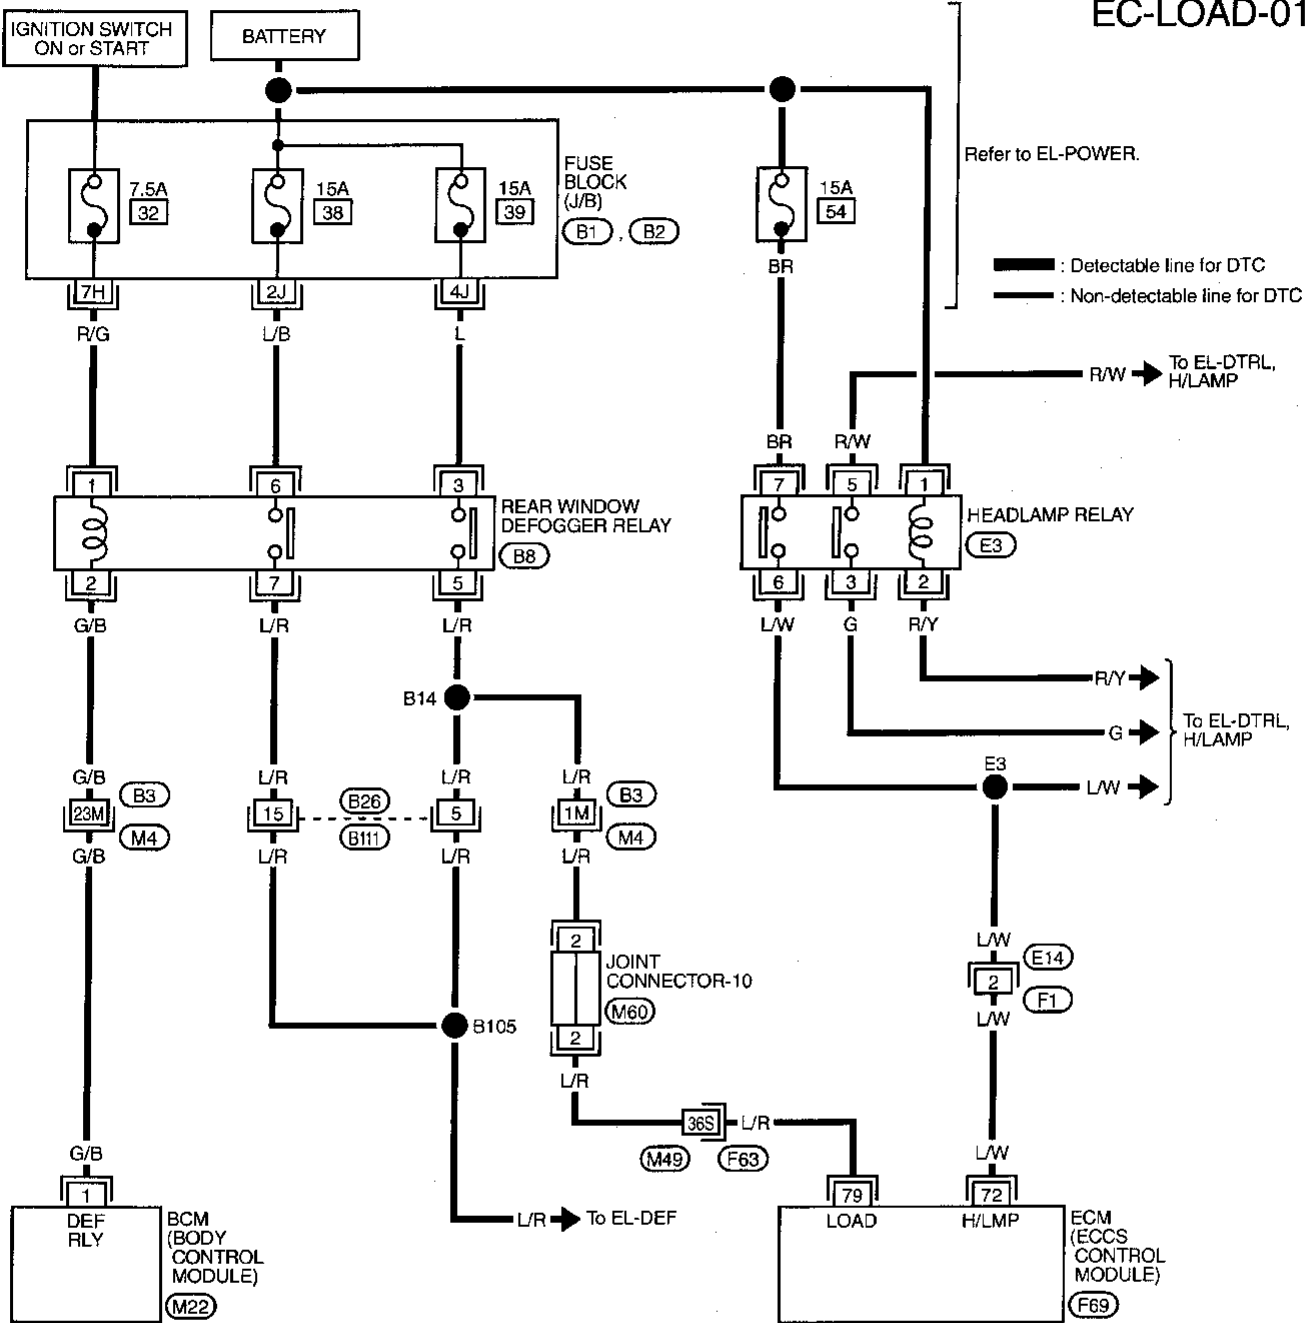




GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

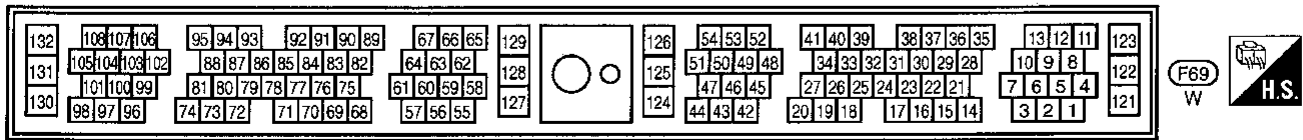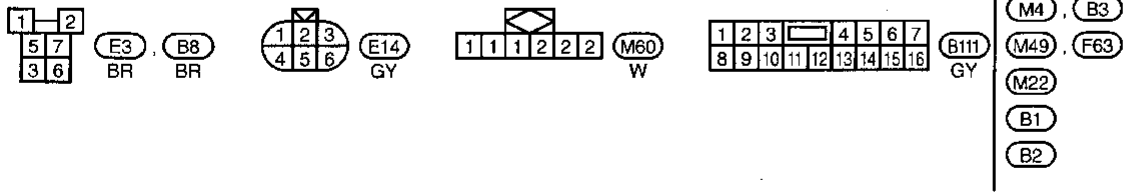

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS



Electrical Load Signal (Cont'd)

DIAGNOSTIC PROCEDURE

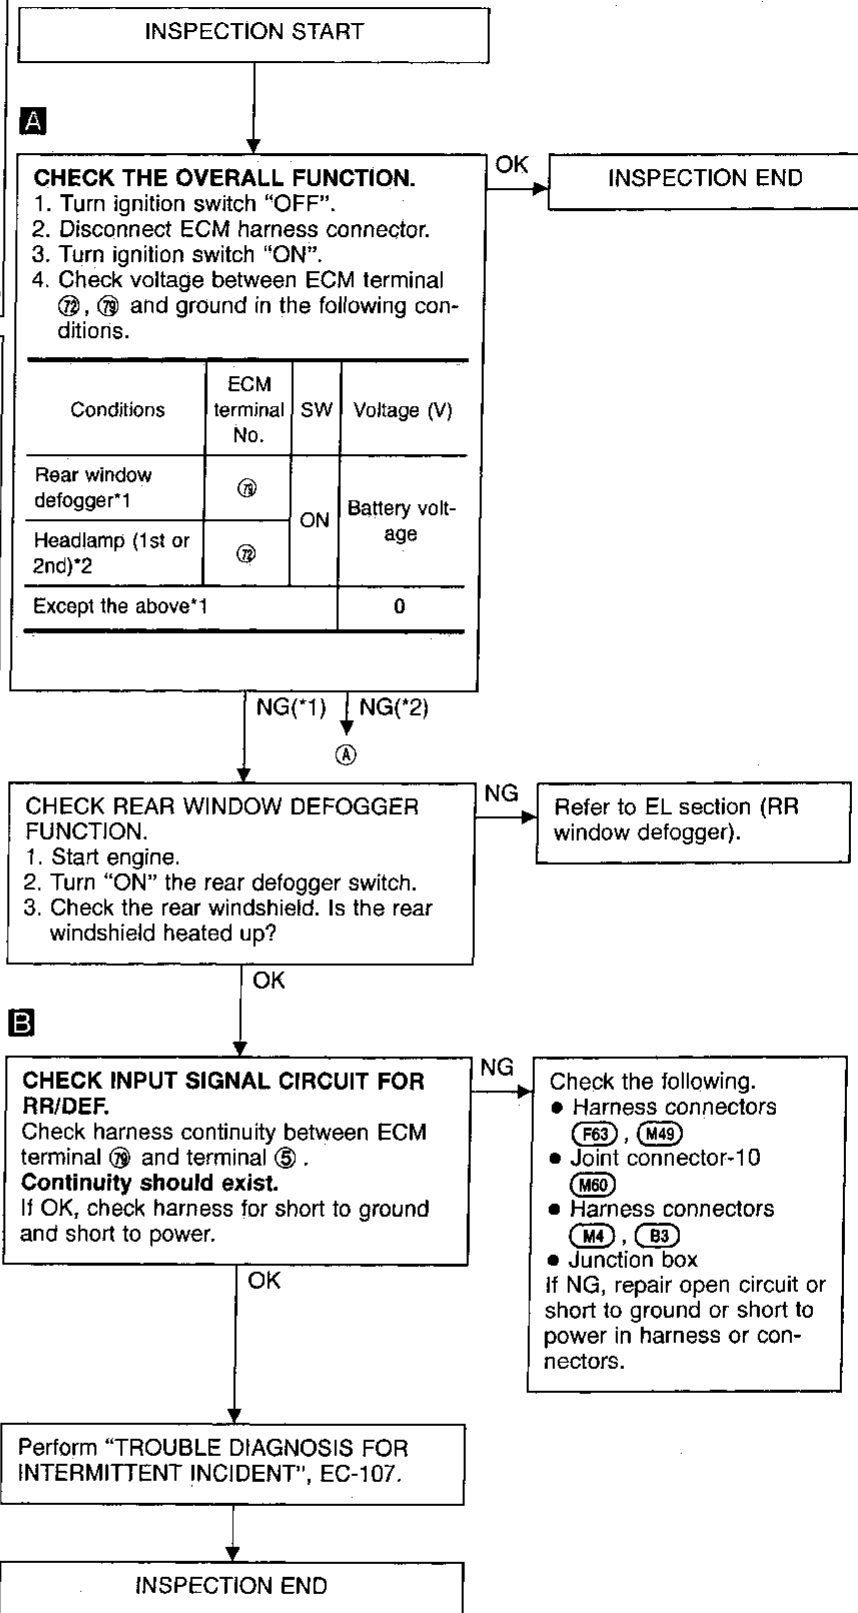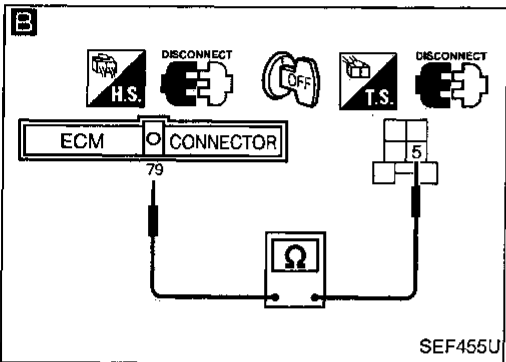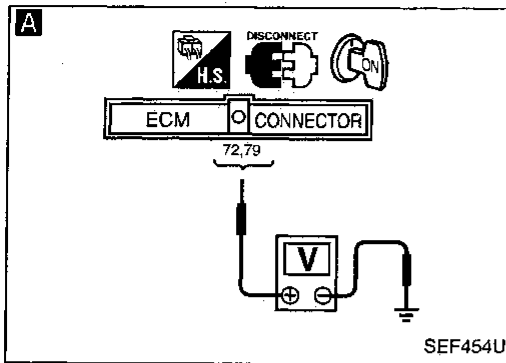

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

Electrical Load Signal (Cont'd)

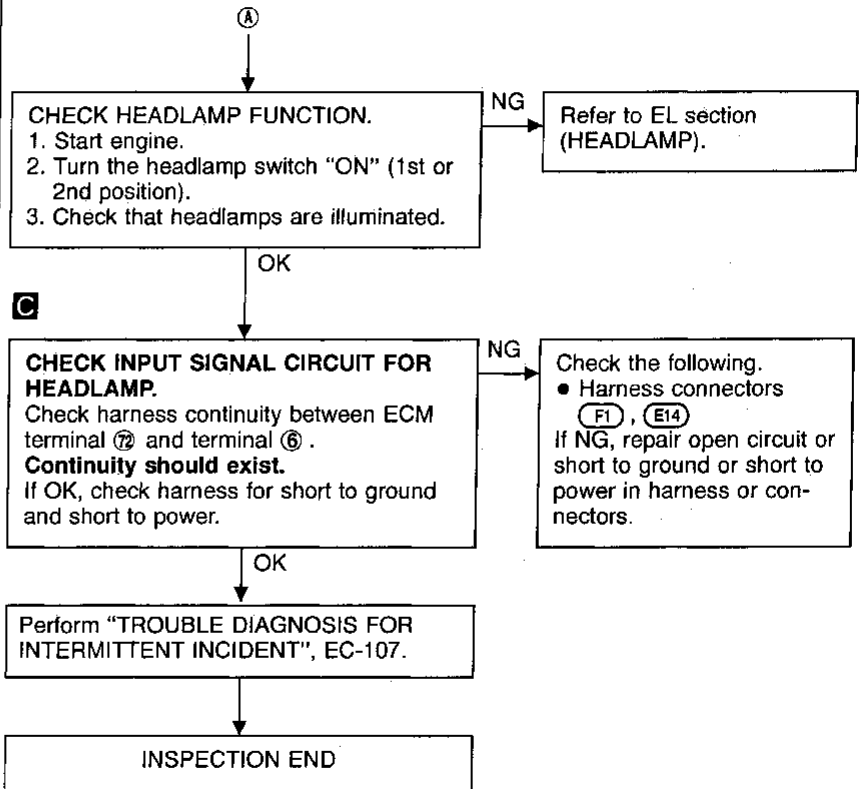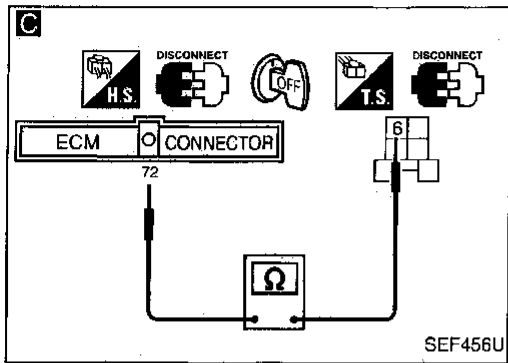

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

TROUBLE DIAGNOSIS FOR NON-DETECTABLE ITEMS

MIL & Data Link Connectors

EC-MIL/DL-01

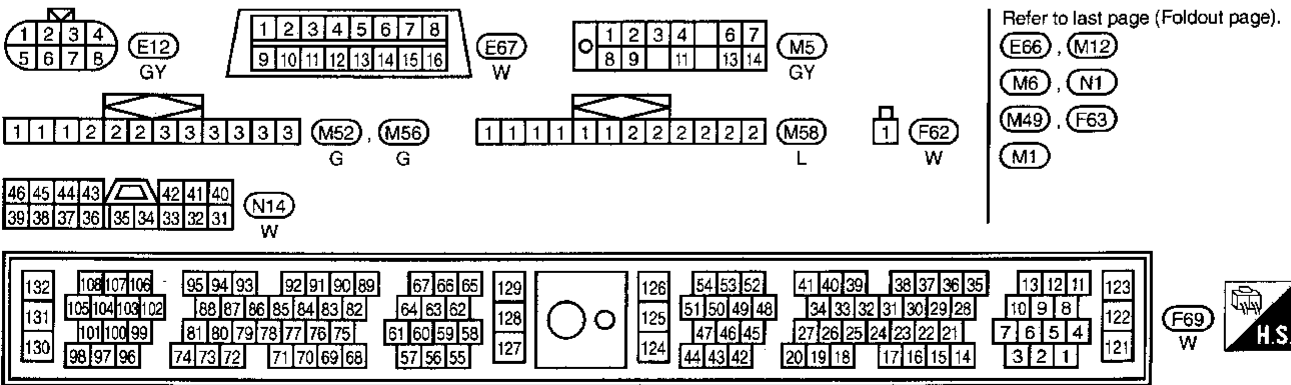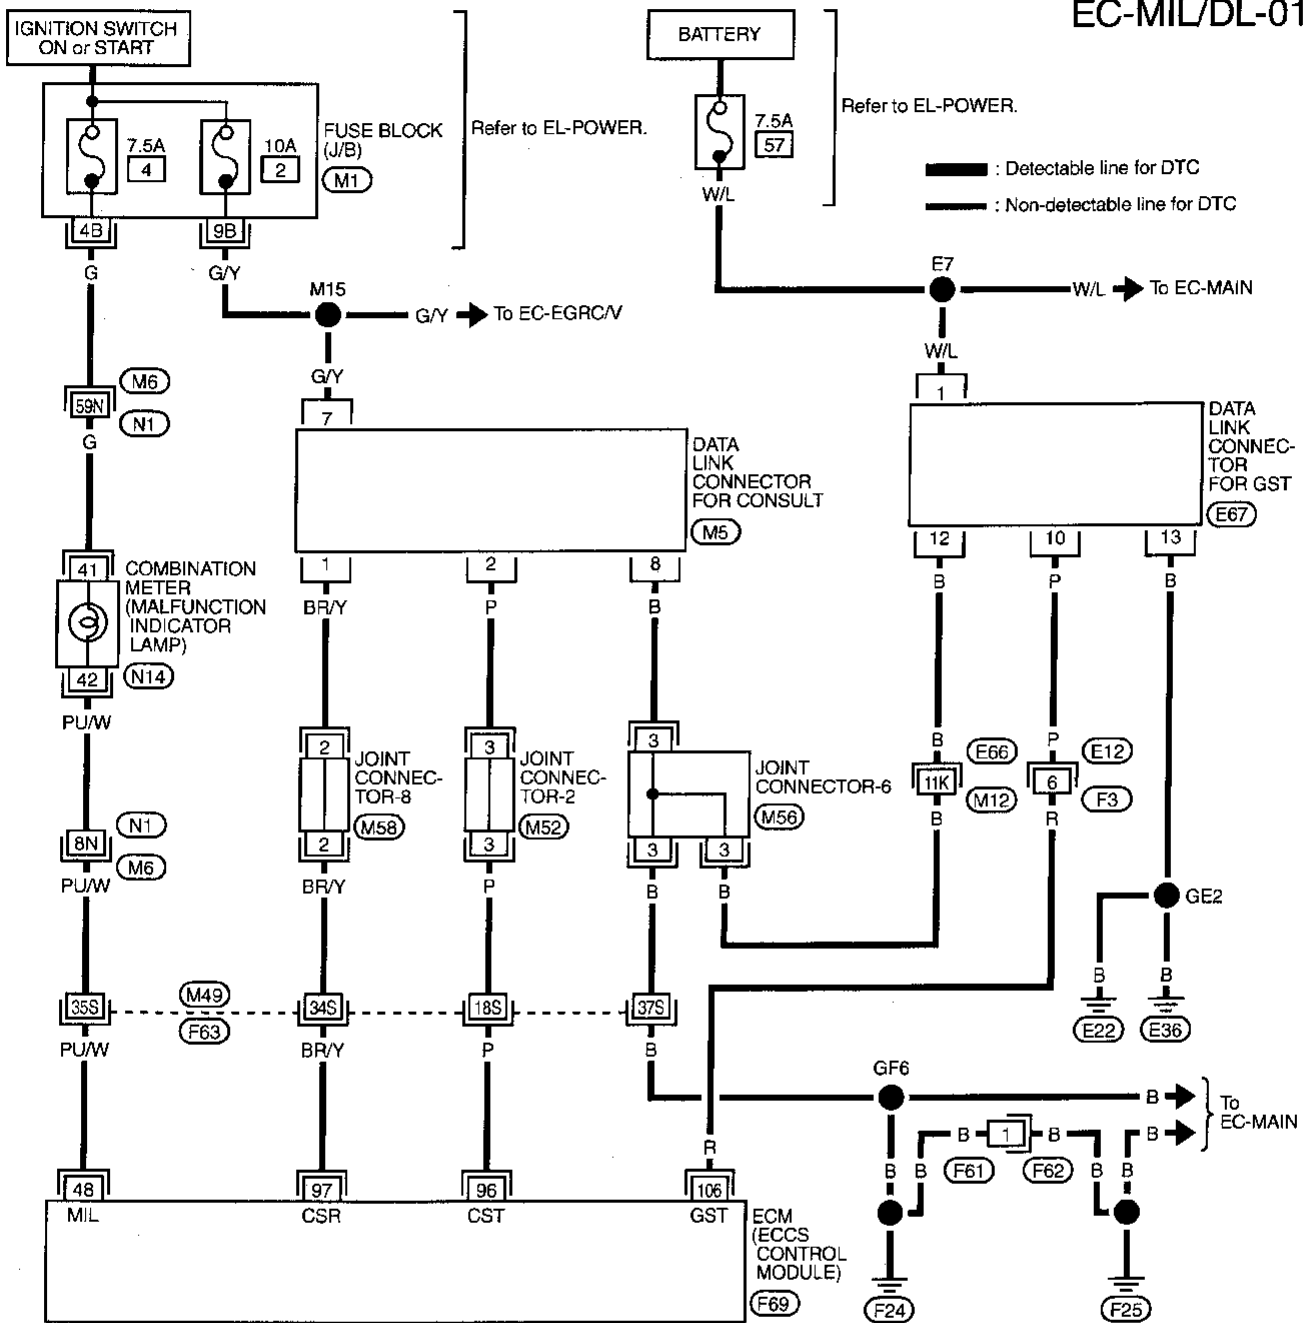

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

PRESSURE REGULATOR

Fuel pressure	kPa (kg/cm ² , psi)	
At idle		Approximately 235 (2.4, 34)
A few seconds after ignition switch is turned OFF to ON		Approximately 294 (3.0, 43)

Inspection and Adjustment

Idle speed*1	rpm	
No-load*2 (in "N" position)		650±50
Air conditioner: ON (in "N" position)		More than 700 rpm
Ignition timing		15°±2° BTDC

*1: Feedback controlled and needs no adjustments

*2: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater, fan & rear defogger)

MASS AIR FLOW SENSOR

Supply voltage	V	Battery voltage (11 - 14)
Output voltage	V	1.0 - 1.7 at idle* Approximately 2.1 at 2,500
Mass air flow (Using CONSULT or GST)	g-m/sec	3.0 - 6.0 at idle* 12.9 - 25.3 at 2,500 rpm*

*: Engine is warmed up sufficiently and idling under no-load.

ENGINE COOLANT TEMPERATURE SENSOR

Temperature °C (°F)	Resistance (kΩ)
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

EGR TEMPERATURE SENSOR

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.61	0.68 - 1.11
50 (122)	2.53	0.09 - 0.12
100 (212)	0.87	0.017 - 0.024

FRONT HEATED OXYGEN SENSOR HEATER

Resistance [at 25°C (77°F)]	Ω	2.3 - 4.3
-----------------------------	---	-----------

REAR HEATED OXYGEN SENSOR HEATER

Resistance [at 25°C (77°F)]	Ω	2.3 - 4.3
-----------------------------	---	-----------

FUEL PUMP

Resistance [at 25°C (77°F)]	Ω	0.2 - 5.0
-----------------------------	---	-----------

IACV-AAC VALVE (Step motor type)

Resistance [at 25°C (77°F)]	Ω	Approximately 30
-----------------------------	---	------------------

INJECTOR

Resistance [at 25°C (77°F)]	Ω	10 - 14
-----------------------------	---	---------

THROTTLE POSITION SENSOR

Accelerator pedal conditions	Resistance [at 25°C (77°F)]
Completely released	Approximately 0.5 kΩ
Partially released	0.5 - 4.0 kΩ
Completely depressed	Approximately 4.0 kΩ

CALCULATED LOAD VALUE

	Calculated load value % (Using CONSULT or GST)
At idle	13.0 - 32
At 2,500 rpm	13.0 - 25.5

INTAKE AIR TEMPERATURE SENSOR

Temperature °C (°F)	Resistance
20 (68)	2.1 - 2.9 kΩ
80 (176)	0.68 - 1.00 kΩ

DROPPING RESISTOR

Resistance [at 25°C (77°F)]	Ω	Approximately 0.8
-----------------------------	---	-------------------

SERVICE DATA AND SPECIFICATIONS (SDS)

Inspection and Adjustment (Cont'd)

EVAP CANISTER PURGE VOLUME CONTROL VALVE

Resistance [at 25°C (77°F)]	Ω	35 - 43
-----------------------------	---	---------

INTAKE VALVE TIMING CONTROL POSITION SENSOR

Resistance [at 25°C (77°F)]	Ω	600 - 740
-----------------------------	---	-----------

CRANKSHAFT POSITION SENSOR (OBD)

Resistance	Ω	166.5 - 203.5 [at 25°C (77°F)]
------------	---	--------------------------------